



EN

MOTOROLA **XT885**

LIFE.  POWERED.

CONGRATULATIONS

MOTOROLA XT885

Introducing your new MOTOROLA **XT885**, the slim, fast, and intelligent phone. It has tons of advanced features for everything you want to do—web browsing, multimedia, and more.

- A blistering fast dual-core 1.2 GHz processor lets your phone download web pages in under a second, and makes multi-tasking a snap.
- Use MotoCast to stream or download music, videos, and documents to your phone, and upload photos and files to your computer.
- Use your 8MP camera to capture life's moments in full 1080p HD video. Your phone's 4.3" qHD Super AMOLED Advanced display makes video playback crisper and more vivid than ever before.

Note: Certain apps and features may not be available in all countries.

Caution: Before assembling, charging, or using your phone for the first time, please read the important safety, regulatory and legal information provided with your product.

SAR

This product meets the applicable limit for exposure to radio waves (known as SAR) of 2.0 W/kg (ICNIRP). The limits and guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the regulatory information packaged with your product.

Note: When using the product while worn on your body, either use an approved accessory such as a holster or maintain a distance of 2.5 cm (1 inch) from the body to ensure compliance with SAR requirements. Note that the product may be transmitting even if you are not making a phone call.

MORE

- **Updates:** phone updates, computer software, user guides, and more at www.motorola.com/support.
- **Accessories:** Find accessories for your phone at www.motorola.com/products.
- **Social:** The latest news, tips & tricks, videos, and so much more—join us on:



YouTube™ www.youtube.com/motorola



Facebook™ www.facebook.com/motorola



Twitter www.twitter.com/motomobile

YOUR PHONE

the important keys & connectors



CONTENTS


LET'S GO	3
CONTROLS	5
HOME SCREEN	7
APPS & UPDATES	10
CALLS	12
CONTACTS	16
MESSAGING	19
TEXT ENTRY	20
SOCIAL NETWORKING	22
TIPS & TRICKS	23
DIGITAL LIVING	24
PHOTOS & VIDEOS	25
MUSIC	29
WEB	32
PERSONALIZE	34
LOCATION	36
WIRELESS	37
MEMORY CARD & FILE MANAGEMENT	41
TOOLS	42
MANAGEMENT	45
SECURITY	46
TROUBLESHOOTING	49
SAFETY, REGULATORY & LEGAL	50

Note: Your phone might look a little different.

LET'S GO

let's get you up and running

ASSEMBLE & CHARGE

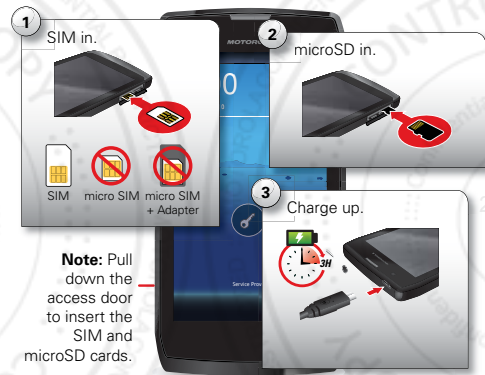

Tip: In the unlikely event that your device becomes unresponsive, try a forced reboot—press and hold both the Power key and the down volume key for up to 10 seconds.

Tip: To save battery life, see “**BATTERY TIPS**” on page 23.

Note: This product uses a non-removable battery. The battery should only be replaced by a Motorola-approved service facility. Any attempt to remove or replace your battery may damage the product and void your warranty.

SET UP & GO



Note: This phone supports apps and services that use a lot of data, so make sure your data plan meets your needs. Contact your service provider for details.

WI-FI CONNECT

To use a Wi-Fi network for even faster Internet access, touch the status bar at the top of the home screen and

drag it down. Touch the **Wi-Fi networks available** notification to select a network.

You can also touch Apps (☰) > **Settings** > **WLAN** > **SCAN** to search for and connect to wireless networks. There's more in "**WI-FI NETWORKS**" on page 38.

COOL CONTENT & MORE

Browse and download thousands of the coolest apps on the planet from Mobile Market™.

Download new apps with "**BROWSE & INSTALL APPS**" on page 11. You can install a microSD memory card in your phone, and load it up with photos, videos, and music from your computer (see "**MICROSD MEMORY CARD**" on page 41).


CONTROLS

a few essentials

TOUCH

It's all in the touch:

- **Touch:** Choose an icon or option.
- **Touch & Hold:** Move items in the home screen.
- **Drag or flick:** Scroll slowly (drag) or quickly (flick).
- **Pinch or double-touch:** Zoom in and out on websites, photos, and maps.

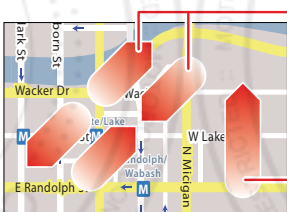


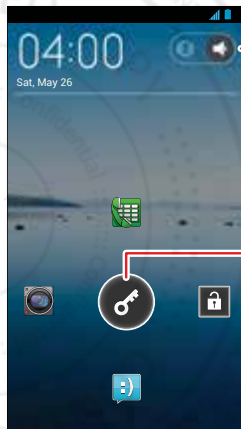
Slide two fingers
apart or together
to zoom in or out.

Drag or flick to scroll.

LOCK, UNLOCK, ON, & OFF

To lock the screen, press the Power key, or let the screen time out (don't press anything).

To unlock the screen, press the Power key, then touch  and flick to .




Touch and flick to
turn sound on/off.

Touch  and flick to:


 unlock.

 make a call.

 send a text.

 open the camera.

Your touchscreen is on when you need it and off when you don't.

- When you hold the phone to your ear during calls, your touchscreen sleeps to prevent accidental touches.
- To make your touchscreen sleep or wake up, just press the Power key.
- To change how long your phone waits before the screen goes to sleep automatically, touch Apps  > **Settings** > **Display** > **Sleep**.
- To make the screen lock when it goes to sleep, see “**SCREEN LOCK**” on page 47.

Note: Your touchscreen might stay dark if the sensor just above it is covered. Don't use covers or screen protectors (even clear ones) that cover this sensor.





ROTATE THE SCREEN


When you turn your phone, the touchscreen can rotate to stay right-side up:


Find it: Apps  > **Settings** > **Display** > **Auto-rotate screen**



PRESS

BACK, HOME, & RECENT APPS

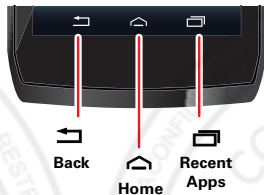Touch Home  to close any menu or app and return to the home screen. In the home screen, touch Recent Apps  to show the most recent apps used, then touch an app to open it.



Touch Back  to go back.

In some apps you can touch Menu  to open menu options, and touch Search  to start a search.

PHONE OPTIONS MENU

Press and hold the Power key to turn off your phone (**Power off**), turn off all wireless connections and put the phone into low-power **Sleep** mode, turn **Airplane mode** on and off, or change the sound setting.

ADJUST VOLUME

Press the volume keys to change ring volume (in the home screen) or earpiece volume (during a call).

When playing music or video files, press the volume keys to adjust media volume.



SCREEN CAPTURE


Sometimes a picture speaks louder than words. Share a screen capture of your favorite playlist, or your new high score. Forward a screen capture of a friend's contact information. If you can see it on your phone, you can share it with your friends.

To capture the screen image on your phone, press the Power key and down volume key. Follow the instructions to name and store the file.

HOME SCREEN

quick access to the things you need most

QUICK START: HOME SCREEN

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home  from a menu. It's basically like this:





Note: Your home screen might look a little different.


The home screen extends left and right to give you more room for adding shortcuts, widgets, and more.


USE & CHANGE YOUR HOME SCREEN


On your home screen, *shortcuts* are icons that open your favorite apps, web bookmarks, contacts, mail labels, playlists, and more. *Widgets* are live apps or tools that provide news, weather, messages, and other updates.

To see other panels of shortcuts and widgets, flick the home screen left or right.

- To **open** something, touch it. Touch Home  or Back  to return to the home screen.


Tip: When you open a widget, touch Menu  to see any options or settings. You can choose accounts for **Calendar**, **Email**, and widgets.


- To **resize** widgets, touch and hold a side until you feel a vibration, then drag.
- To **add shortcuts** to the home screen, touch Apps , touch and hold an app, then drag it to a spot on the home screen panels.

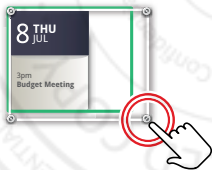

To create a **shortcut folder**, drag one shortcut on top of another to put them both in a folder. To add other


shortcuts, drag them onto the folder icon. To name the folder, touch it and enter a name at the bottom.


- To **add widgets**, touch Apps , touch **Widgets**, then touch and hold a widget (or flick left to see more widgets).
- To **move** widgets or shortcuts, touch and hold them, then drag to a new location.
- To **remove** shortcuts or widgets from the home screen, touch and hold them, then drag to **Remove** at the top.
- To **change wallpaper**, touch and hold a blank spot on the home screen.

Shortcuts in the *dock* at the bottom of the home screen appear in all panel views. To change dock shortcuts (except the Apps icon ) , touch and hold a shortcut, then drag it out of or into the dock.







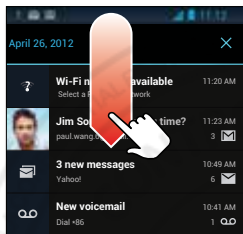





















PHONE STATUS & NOTIFICATIONS

Icons at the top of the screen notify you about messages and phone status. To see your notifications, touch the status bar and drag it down. Touch a notification to select it.

To remove a notification from the list, flick it left or right. To remove all notifications, touch .



STATUS BAR ICONS

	network (full signal)	3G	3G (fast data)
	network (roaming)	4G	4G (fastest data)
	network (no connection)		GPS active
	Wi-Fi in range		Wi-Fi connected
	Bluetooth™ on		Bluetooth connected
	USB connected		background data sync
	downloading		warning
	active call		missed call
	airplane mode		microSD card
	new text message		alarm set
	new email		calendar event reminder
	new voicemail		music player active
	vibrate		speakerphone on
	sound off		call muted
	battery (charging)		battery (full charge)

Tip: Blue connection icons (network, data, Wi-Fi) appear when your phone is connected to your Google™

account. White connection icons mean your phone is not communicating with the Google servers.

Note: Applications you download from Mobile Market™ may show other icons in the status bar to alert you to specific events.


APPS & UPDATES

get the app you want

QUICK START: APPS & UPDATES

Touch Apps (☰) in any home screen panel, then flick left or right to see all your apps.

In the app list, touch **All apps** to view or create app groups.

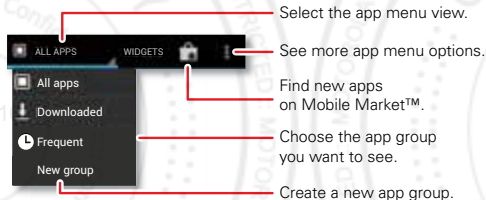

To add a shortcut to the home screen for an app group view, touch Menu ☰ > **Add group to home.**

To close the app list, touch Home ⏪ or Back ⏩.

RECENT APPS

Your phone remembers the apps that you used most recently. From the home screen, touch Recent Apps ☰

to show the most recent apps used. To remove a app from the list, flick it left or right.


BROWSE & INSTALL APPS

Get all the fun games and cool apps you want! Mobile Market™ provides direct access to apps, games, books, and movies that you can download and install on your phone.

Find it: Apps  >  **Mobile Market**


Scroll to and touch the app you want to install. Then, touch **Install** (if app is free) or **Buy**.

New apps that you install are added to the app list.

Tip: Choose your apps and updates carefully, from trusted sites like  **Mobile Market**, as some may impact your phone's performance—see “**CHOOSE CAREFULLY**” on page 11.

Note: When installing an app, make sure you read the alerts that tell you what information the app will access. If you don't want the app to have access to this information, cancel the installation.


MANAGE & RESTORE APPS

From the home screen, touch Apps  > **Settings** > **Apps**.

Touch an app in the list, then touch **Uninstall** (for apps you downloaded), **Clear cache**, or other options.

CHOOSE CAREFULLY

Apps are great. There's something for everyone. Play, communicate, work, or have fun. But remember, choose your apps carefully. Here are a few tips:

- To help prevent spyware, phishing, or viruses from affecting your phone or privacy, use apps from trusted sites, like  **Mobile Market**.
- In **Mobile Market**, check the apps' ratings and comments before installing.
- If you doubt the safety of an app, don't install it.
- Like all apps, downloaded apps will use up memory, data, battery, and processing power—some more than others. For example, a simple battery level widget will use less than a streaming music player app. After installing an app, if you're not happy with how much memory, data, battery or processing power it's using, uninstall it. You can always install it again later.

- Just like web browsing, you may want to monitor childrens' access to apps to help prevent exposure to inappropriate content.
- Certain apps may not provide completely accurate information. Take care, especially when it comes to personal health.

UPDATE MY PHONE

You can check, download, and install phone software updates using your phone, or using your computer:

- Using your phone:

You may get an automatic notification of an available update on your phone. Simply follow the instructions to download and install.

To manually check for updates, touch Apps (⋮) > **Settings** > **About phone** > **System updates**.

Your phone downloads any updates over your mobile network. Remember, these updates can be quite large (25MB or more) and may not be available in all countries. If you don't have an unlimited data plan, or mobile network updates are not available in your country, you can update using a computer.

- Using your computer:

On your computer, go to www.motorola.com/support and check the "Software" links. If an update is available, follow the installation instructions.

CALLS


it's good to talk

QUICK START: CALLS

DIALING OPTIONS


Find it: Apps (⋮) > Phone

Tip: If the screen is locked, touch (Ⓛ) and flick to (⏴).

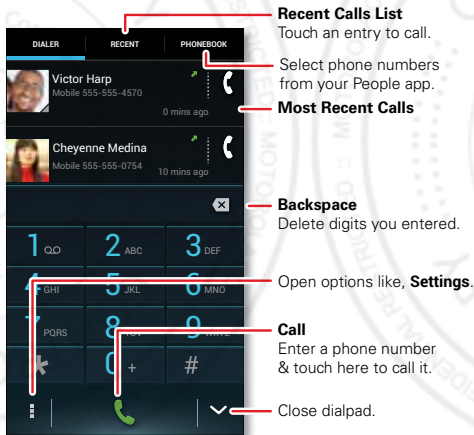



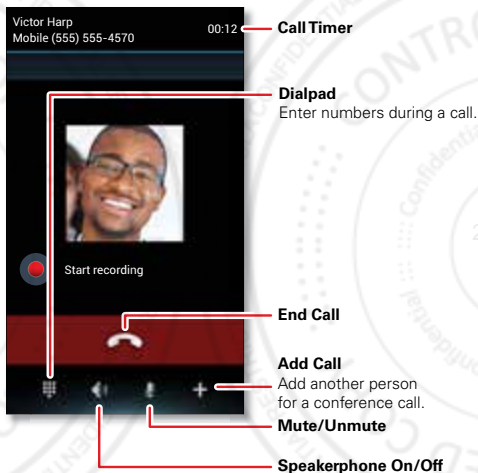

Tip: Search for contacts right from the dialpad! For example, to find **Jeff** in your contacts list, touch **5-3-3-3**. Matching contacts appear above the number field.

IN-CALL OPTIONS



To use a Bluetooth™ device, touch **Bluetooth**. (The device needs to be turned on and previously paired—see “**CONNECT NEW DEVICES**” on page 39.)



Tip: You can touch Home  or Back  to leave the active call display. To reopen it, touch Home  >  **Phone**.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.





Note: Recording of calls is subject to varying State and Federal laws regarding privacy and recording of conversations. Always obey the laws and regulations on the use of this feature.

MAKE & ANSWER CALLS

To make a call, touch  **Phone**, enter a number, then touch .


Tip: If the screen is locked, touch  and flick to  to make a call.

To answer a call, touch  and flick to .

To ignore a call, touch  and flick to . If you want to ignore an incoming call, but send a text message to the caller, touch  and flick to . Select a message and touch **Send** to send it.




Tip: To silence an incoming call alert, press the Power key or the volume keys.

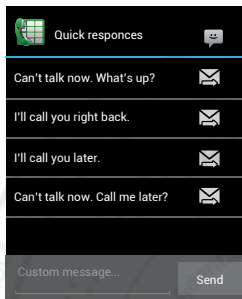Note: When you hold the phone to your ear, the display goes dark to prevent accidental touches. When you move the phone away from your ear, the display lights up again.




RECENT CALLS

Find it:  **Phone** > **Recent**


- To call a number, touch  next to the entry.
- To see call details, touch the entry.
- To send a text message, create a contact, view a contact, or other options, touch and hold the entry.
- To search the recent calls list, touch .
- To clear the list, Menu  > **Clear list**.

FREQUENT CALLS


Find it: Apps  >  **People** > **Favorites**

- To call, text, email, or view contact information, touch the contact.
- To edit, share, delete, or set a ringtone for a contact, touch the contact, then touch Menu .



CONFERENCE CALLS

To start a conference call, call the first number. After the call connects, touch . Dial the next number, or select it from contacts or favorites. When the next number answers, touch **Merge**.

YOUR PHONE NUMBER


Find it: Apps  **Settings** > **About phone** > **Status** > **My phone number**

SPEED DIAL

Your phone can store nine phone numbers that you can call with a single keypress. To **store** a speed dial number, touch  **Phone** > Menu  > **Speed dial setup**, and insert a number in an empty speed dial slot.

To **call** a speed dial number, touch and hold the single-digit speed dial number.





VOICEMAIL

When you have a new voicemail,  appears at the top of the screen. Drag down the status bar and touch the **New voicemail** notification to listen to your voicemail message.

If you need to change your voicemail number, in the home screen touch  **Phone** > Menu  > **Settings** > **Voicemail settings**

EMERGENCY CALLS

Note: Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Touch  **Phone** (if your phone is locked, touch  and flick to ).
- 2 Enter the emergency number.
- 3 Touch  to call the emergency number.

Note: Your phone can use location based services (GPS and AGPS) to help emergency services find you. See "**LOCATION SERVICES**" on page 55.

COOL DOWN


In very limited circumstances, such as where your phone has been exposed to extreme heat, you may see "Cool Down" messages. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in "Cool Down" mode, only emergency calls can be made.

CONTACTS

contacts like you've never had before

QUICK START: CONTACTS

Find it: Apps  >  People

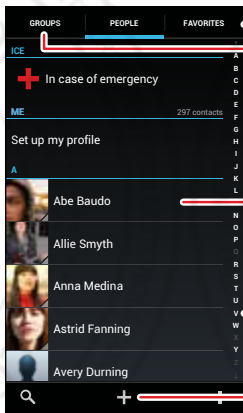

View your favorites.

Create & view groups of contacts.

Contacts List

Touch to view contact information, then you can call, send a text message, & more.

Touch a letter to jump to contact names that start with that letter.

Add contacts.

TRANSFER & SYNC CONTACTS

Get all your contacts, all in one place:


- Use Gmail™

All your Gmail contacts will automatically get synced to your phone. Various computer applications for mobile phones and email accounts allow you to export your contacts as a "CSV" file. You can then use Gmail to import the file. For more details, go to www.motorola.com/transfercontacts or log in to your Gmail account on your computer and select "Help".

- More


There are other methods and tools to help you at www.motorola.com/transfercontacts.

When you change one of your contacts, your phone automatically updates your other social networking accounts. When you change a social networking friend, your phone updates your contacts.

Tip: To search the list, touch  to open a touchscreen keypad, then type a name.

CREATE CONTACTS

Find it: Apps (☰) >  People > 

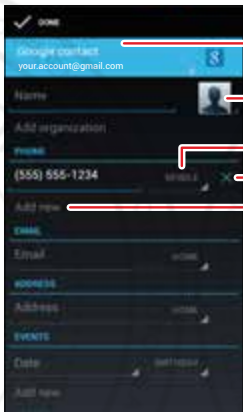

Set where contact is saved (Google, Local, or SIM).

Set a picture.

Set the number type.

Remove a number.

Add another number.

Touch any entry area to open the touchscreen keypad.

When you're finished, touch **Done**.

Where are contacts saved? Your phone gives you the option to save new contacts in its memory, on your SIM card, or your Google account. It also updates your social networking account.

EDIT OR DELETE CONTACTS

Keep your contacts up to date and add a photo.

Find it: Apps (☰) >  People > *contact* > Menu  > **Edit** or **Delete**





Add a photo: Touch *contact* > Menu  > **Edit** > .

Set a ringtone: Touch *contact* > Menu  > **Set ringtone**.

VIEW CONTACTS

When you set up a social networking account (see “**SOCIAL NETWORKING**” on page 22), you'll know what everybody's up to and when. Every time you pick up a call, check a message, or look up a friend's contact info, you'll see their name and number, but you can see their social network status and smiling face, too.




Find it: Apps (☰) >  People

- To find a contact, touch  and type a contact name. Touch a contact to open its details. While viewing details, you can start a call or message by touching the phone number, messaging icon , email address, or social network.
- To change which group of contacts is shown (like **All contacts** or contacts from your Gmail account) touch Menu  > **Contacts to display**.
- To change how you view the list of contacts, touch Menu  > **Settings** > **Display options**.


GROUPS

Find it: Apps  >  **People** > **GROUPS** > *group name*

You can put your contacts into groups (like “Friends” or “Family”). Then, you can find contacts faster by showing one group at a time.

To create a new group, touch Apps  >  **People** > **GROUPS** > .

FAVORITES

To add a contact to your favorites list, touch the contact to open it, then touch .



To see your favorites list:

Find it: Apps  >  **People** > **FAVORITES**

LINK CONTACTS

You might have two or more contacts for the same person, maybe a Gmail contact who is also stored on your phone, or one friend with two email addresses. To combine these contacts:


Find it: Apps  >  **People**

Touch a contact to open it, touch Menu  > **Edit** > Menu  > **Join**, then touch the second contact.

CALL, TEXT, OR EMAIL CONTACTS

Find it: Apps  >  **People**

Touch a contact to open it, then:

- To call touch, the contact’s number.
- To text message, touch  next to the number.
- To email touch the contact’s email address.



2012.03.16
FCC


MESSAGING

sometimes it's best to text, or IM, or email . . .

QUICK START: MESSAGING

Find it: Apps  >  **Messaging**

Tip: If the screen is locked, touch  and flick to .

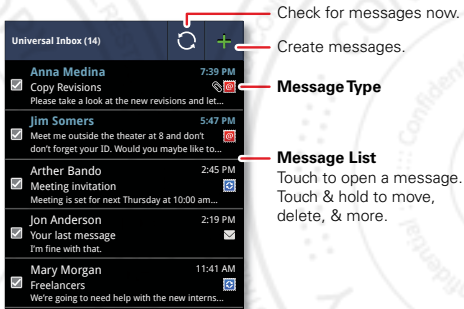



Tip: To see more messages, flick or drag up.

READ & REPLY TO MESSAGES


Find it: Apps  >  **Messaging**

- To **open** a text message and all of its replies, touch it.

- To **respond** to a text message, open it and enter your response in the text box at the bottom.
- To **delete** a message, touch and hold to select it, then drag it to the trash can .
- To **adjust** messaging options, touch Menu  > **Settings** in your message list.


CREATE MESSAGES

Find it:  >  **Messaging** > 

Enter the recipient and message. Touch Menu  to **Insert smiley**, **Add Cc**, or **Add subject**, then touch **Send**.

Tip: To add an attachment, touch .

SEND & RECEIVE ATTACHMENTS

To send a file in a message, touch .


When you receive a message with an attachment, open the message and touch the file name to download it. Then, touch the name again to open it. Some file formats can be converted to HTML for faster viewing, and your phone will show **Get HTML version**.

While viewing the attachment, touch it to save it, share it, and more.

Tip: To send and receive large attachments faster, use a Wi-Fi connection (see "**WI-FI NETWORKS**" on page 38).

EMAIL


You can set up and use multiple email accounts on your phone.

To add email accounts, touch Apps  > **Settings**
> **Accounts & sync** > **ADD ACCOUNT**.

- **Corporate** is for Exchange server work email accounts. Enter details from your IT administrator.

Tip: You might need to enter your domain name with your user name (like *domain/username*).


- **Email** is for most personal email accounts. For account details, contact the account provider.


To read and reply to messages on your email accounts, touch Apps  >  **Email**.

TEXT ENTRY

keys when you need them

TOUCHSCREEN KEYPAD

You can open a keypad on your screen by touching a text box. To close the keypad, touch Back .

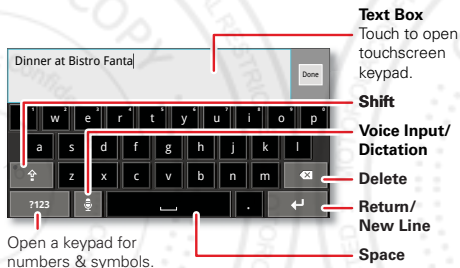

INPUT METHODS

To select a text input method, touch and hold the keypad space key to open the **Select input method** menu, then touch the method you want.