








EN

MOTOSMART™

LIFE.  POWERED.



## CONGRATULATIONS

### MOTOSMART™

Your **MOTOSMART** phone gives you music and the Internet in your pocket.

- **Music dashboard:** Easy access to all your favourite music, see "**MUSIC**" on page 35.
- **High-speed Internet:** Browse the web and pinch-to-zoom on the high resolution touch display in "**WEB**" on page 29.

**Note:** Certain apps and features may not be available in all countries.

**Caution:** Before assembling, charging or using your phone for the first time, please read the important safety, regulatory and legal information provided with your product.

### SAR

This product meets the applicable limit for exposure to radio waves (known as SAR) of 2.0 W/kg (ICNIRP). The limits and guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the regulatory information packaged with your product.

**Note:** When using the product while worn on your body, either use an approved accessory, such as a holster, or maintain a distance of 2.5 cm (1 inch) from the body to ensure compliance with SAR requirements. Note that the product may be transmitting even if you are not making a phone call.

## WANT MORE?

More help, more accessories, more free stuff. We're here to help.

- **Updates:** Smartphone updates, PC software, user guides, online help and more at [www.motorola.com/mymotosmart](http://www.motorola.com/mymotosmart).
- **Accessories:** Find more for your phone at [www.motorola.com/products](http://www.motorola.com/products).
- **Social:** The latest news, tips & tricks, videos and so much more—join us on:



**YouTube™** [www.youtube.com/motorola](http://www.youtube.com/motorola)



**Facebook™** [www.facebook.com/motorola](http://www.facebook.com/motorola)



**Twitter** [www.twitter.com/motomobile](http://www.twitter.com/motomobile)

## YOUR PHONE

*the important keys & connectors*






## CONTENTS

<b>CONTENTS</b> .....	<b>4</b>
<b>LET'S GO</b> .....	<b>5</b>
<b>TOUCHSCREEN &amp; KEYS</b> .....	<b>7</b>
<b>HOME SCREEN</b> .....	<b>10</b>
<b>APPS &amp; UPDATES</b> .....	<b>14</b>
<b>PERSONALISE</b> .....	<b>17</b>
<b>CALLS</b> .....	<b>19</b>
<b>CONTACTS</b> .....	<b>22</b>
<b>MESSAGING</b> .....	<b>24</b>
<b>TEXT ENTRY</b> .....	<b>27</b>
<b>WEB</b> .....	<b>29</b>
<b>LOCATION</b> .....	<b>31</b>
<b>PHOTOS &amp; VIDEOS</b> .....	<b>33</b>
<b>MUSIC</b> .....	<b>35</b>
<b>CONNECTIONS</b> .....	<b>39</b>
<b>SECURITY</b> .....	<b>43</b>
<b>TROUBLESHOOTING</b> .....	<b>45</b>
<b>SAFETY, REGULATORY &amp; LEGAL</b> .....	<b>46</b>

## LET'S GO


*let's get you up and running*

### ASSEMBLE & CHARGE

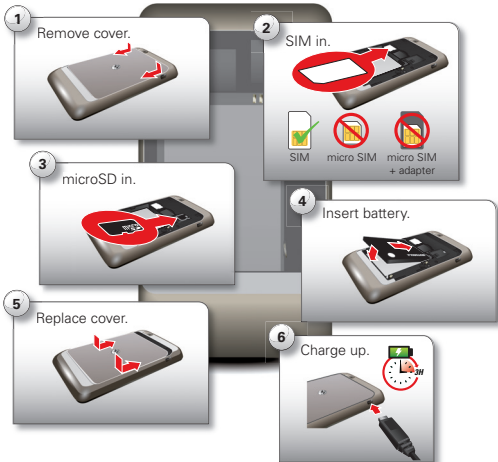

**Caution:** Please read "**BATTERY USE & SAFETY**" on page 46.

## SET UP & GO

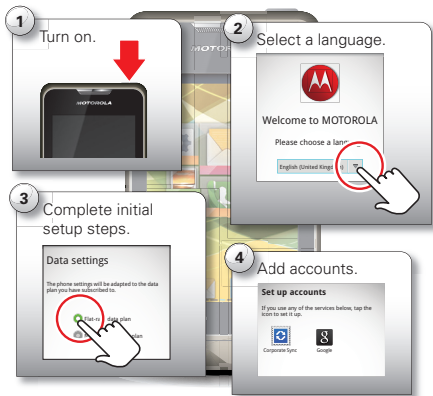

**Note:** This phone supports apps and services that use a lot of data, so make sure your data plan meets your needs. Contact your service provider for details.










## TOUCHSCREEN & KEYS

*a few essentials*

### SLEEP & WAKE UP

Your screen sleeps when you hold it to your ear during a call or when it is inactive. To change the sleep delay, touch Menu  > **Settings** > **Display** > **Screen timeout**.


To turn phone **sounds** on or off from a locked screen, flick the toggle switch .

To **unlock** the screen, press the Power/Lock key  then touch  and flick to .


## TOUCH TIPS

It's all in the touch:

- **Touch:** Choose an icon or option.
- **Touch & hold:** Show options.
- **Drag:** Scroll or move slowly.
- **Flick:** Scroll or move quickly.
- **Zoom:** Slide fingers apart or together to zoom in or out on Google Maps™, webpages and photos.

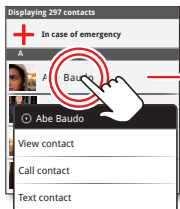

Touch & hold  
to show options.

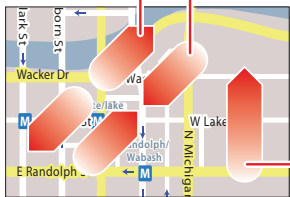




Slide two fingers  
apart or together  
to zoom in or out.


Drag or flick to scroll.

## KEY TIPS


### MENU, HOME, BACK & SEARCH

Touch Home  to close any menu or app and return to the home screen. On the home screen, touch and hold Home  to show the most recent apps used, then touch an app to open it.

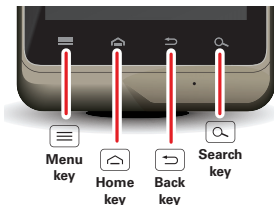


Touch Menu  to open menu options.

Touch Back  to go back.

Touch Search  for text search, or touch and hold for voice search.


### POWER KEY MENU

Press and hold  to turn your phone off (**Power off**), **Reboot** your phone or turn **Flight mode** or **Silent mode** on or off.

## HOME SCREEN


*quick access to the things you need most*

### QUICK START: HOME SCREEN

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home  from a menu. It's basically like this:





**Note:** Your home screen might look a little different.

The home screen extends left and right to give you more room for adding shortcuts, widgets and more. Flick the home screen left and right to see more panels or to add widgets or shortcuts. Or, touch Home  and touch a thumbnail to go to the panel.


## USE & CHANGE YOUR HOME SCREEN

On your home screen, *shortcuts* are icons that open your favourite apps, web bookmarks, contacts, mail labels or music playlists. *Widgets* show you news, weather, messages and other updates.


- To **open** something, touch it. Touch Home  to return to the home screen.


**Tip:** When you open a widget, touch Menu  to see any options or settings.


- To **resize** widgets, touch and hold a corner until you feel a vibration, then drag.
- To **add** something or change your wallpaper, touch and hold an empty spot until you see the **Add to Home** menu.

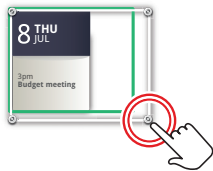


**Tip:** You can add a folder to organise your shortcuts.

- To **move** or **delete** something, touch and hold it until you feel a vibration, then drag it to another spot or panel, or to the rubbish bin  at the top of the screen.


Shortcuts in the *dock* at the bottom of the home screen appear in all panel views. You can change these (except the app shortcut ). Touch and hold a shortcut, then select the shortcut you want to replace it







To change your ringtone, display brightness and more, touch Menu  > **Settings** > **Audio profiles** or **Display**. For details, see "**PERSONALISE**" on page 17.



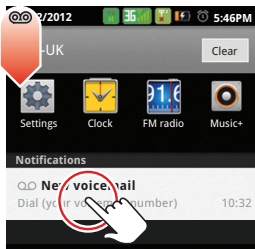





**Tip:** From the home screen, touch Menu  > **Themes** to design different home screens for **Work**, **Home** and the **Weekend**. Your changes are stored in each theme.

## PHONE STATUS & NOTIFICATIONS

In the status bar at the top of your screen, the right side shows phone status. The left side shows new messages or events (for details, flick the bar down).



	network strength		battery strength
	new voicemail		new text message
	Bluetooth™ on		Bluetooth connected

	Wi-Fi connected		flight mode
	USB connected		alarm set
	silent ringer		silent ringer, vibrate on
	mute call		speakerphone