



EN

MOTOROLA **XT626**

LIFE.  POWERED.



# CONGRATULATIONS

## MOTOROLA XT626

Stay connected, organize your life, and absolutely own the web with the MOTOROLA XT626.



- **Dual mode.** Never worry about network coverage. With GSM/UMTS and iDEN network support, you'll always be connected in your carrier's service area.
- **Push-to-talk calls.** Keep in touch with your family, friends, and colleagues with the touch of a button.
- **Organization.** Check your email, calendar, and contacts wherever you are.
- **Browsing.** Get more from the web with a huge screen. Search, browse, everything you want to do, all made easier.
- **Maps, entertainment, and more.** The latest technology and apps. Google Maps™ to find your way. YouTube™ to stay entertained. Easy access to Google™ and thousands of Android™ apps.

**Note:** Certain apps and features may not be available in all countries.

**Caution:** Before assembling, charging, or using your phone for the first time, please read the important legal and safety information packaged with your product.


**SAR** This product meets the applicable SAR limits of 1.6 W/kg (FCC & IC) and 2.0 W/kg (ICNIRP). The limits and guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the regulatory information packaged with your product.

## MORE

- **Answers:** Touch  >  **Help Center.**
- **Updates:** Smartphone updates, computer software, user guides, online help, and more at [www.motorola.com/myxt626](http://www.motorola.com/myxt626).
- **Accessories:** Find accessories for your smartphone at [www.motorola.com/products](http://www.motorola.com/products).

## YOUR PHONE

*the important keys & connectors*

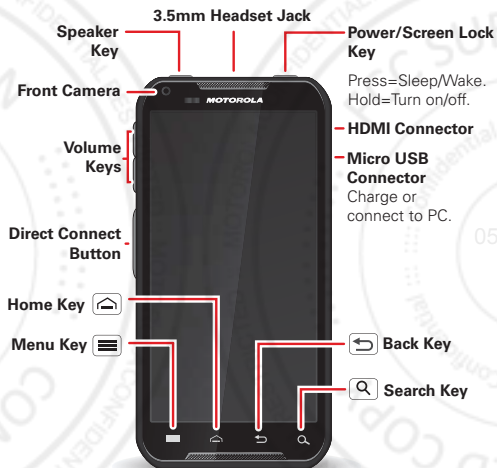

## CONTENTS

LET'S GO .....	3
TOUCHSCREEN & KEYS .....	4
HOME SCREEN & APPS .....	6
CALLS .....	9
PUSH-TO-TALK (PTT) .....	12
CONTACTS .....	16
MESSAGING .....	20
TEXT ENTRY .....	22
TIPS & TRICKS .....	24
PHOTOS & VIDEOS .....	25
MUSIC .....	30
SOCIAL NETWORKING .....	36
WEB .....	37
PERSONALIZE .....	39
LOCATION .....	41
APPS FOR ALL .....	43
BLUETOOTH™ WIRELESS .....	44
WI-FI .....	46
MEMORY CARD & FILE MANAGEMENT .....	48
TOOLS .....	51
MANAGEMENT .....	56
SECURITY .....	57
TROUBLESHOOTING .....	60
SAFETY, REGULATORY & LEGAL .....	61

**Note:** Your phone might look a little different.

# LET'S GO

let's get you up and running

## ASSEMBLE & CHARGE

**Tip:** To save battery life, see "BATTERY TIPS" on page 25.

## SET UP & GO

**Note:** This phone supports apps and services that use a lot of data, so make sure your data plan meets your needs. Contact your service provider for details.



**Caution:** Please read "BATTERY USE & SAFETY" on page 61.

**Note:** If you have a Gmail™ account, your contacts from that account are synced to your phone.

## WI-FI CONNECT

If you want to use a Wi-Fi network for even faster Internet access, touch Apps  >  **Settings** > **Wireless & networks** > **Wi-Fi settings**. Touch **Wi-Fi** to search for and connect to wireless networks. There's more in "**WI-FI**" on page 46.

## COOL CONTENT & MORE

Browse and download thousands of the coolest apps on the planet from Google Play™ Store. See "**BROWSE & INSTALL APPS**" on page 43.

Your phone can use a microSD memory card (sold separately)—you can load it up with photos, videos, and music from your computer (see "**MEMORY CARD**" on page 48).


## TOUCHSCREEN & KEYS

*a few essentials*

### TOUCH


It's all in the touch:



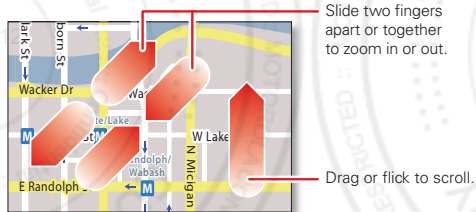

- **Touch:** Choose an icon or option.
- **Touch & Hold:** Move items in the home screen.
- **Drag or flick:** Scroll slowly (drag) or quickly (flick).
- **Pinch or double-touch:** Zoom in and out on websites, photos, and maps.



### TOUCHSCREEN ON/OFF

Your touchscreen is on when you need it and off when you don't.

- To make your touchscreen sleep or wake up, just press Power/Lock .


- When you hold the phone to your ear during calls, your touchscreen sleeps to prevent accidental touches.
- To change how long your phone waits before the screen goes to sleep, touch Apps  >  **Settings** > **Display** > **Screen timeout**.
- To make the screen lock when it goes to sleep, use “**SCREEN LOCK**” on page 58. To unlock the screen, press Power/Lock . Then, drag  to the right.


**Note:** Your touchscreen might stay dark if the sensor just above it is covered. Don't use covers or screen protectors (even clear ones) that cover this sensor.





## KEYS

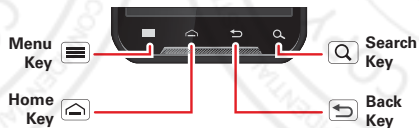

### MENU, HOME, BACK, & SEARCH



Touch Home  to close any menu or app and return to the home screen. In the home screen, touch and hold

Home  to show the last eight apps you used, then touch an app to open it.

Touch Search  for text search, or touch and hold for voice search.

Touch Menu  to open menu options, or touch Back  to go back.

### POWER KEY MENU

Press and hold Power/Lock  to turn off your phone (**Power off**), or turn **Airplane mode** or **Silent mode** on or off.

### VOLUME



Press the volume keys to change the ring volume (in the home screen) or the earpiece volume (during a call).

When playing music or video files, press the volume keys to adjust media volume.



### ROTATE THE SCREEN

In many apps, the touchscreen can rotate to stay right-side up when you turn your phone sideways:

**Find it:** Apps  >  **Settings** > **Display** > **Auto-rotate screen**

## HOME SCREEN & APPS

quick access to the things you need most

### QUICK START: HOME SCREEN

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home (🏠) from a menu. It's basically like this:

## USE & CHANGE YOUR HOME SCREEN


On your home screen, *shortcuts* are icons that open your favorite apps, bookmarks, contacts, mail labels, or music playlists. *Widgets* show you news, weather, messages, and other updates right on your homescreen without having to open a separate app or web page.

- To **open** something, touch it. Touch Home (🏠) to return to the home screen.

**Tip:** When you open a widget, touch Menu (☰) to see any options or settings (you can choose accounts for **Messages**, **Social Networking**, or **Calendar** widgets).

There's more about social networking widgets in "**YOUR SOCIAL NETWORKING ACCOUNT**" on page 36.

- To **resize** Motorola widgets, touch and hold a corner until you feel a vibration, then drag.
- To **add** something or change your wallpaper, touch and hold an empty spot until you see the **Add to Home screen** menu.

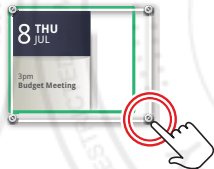

- **Tip:** You can add a folder to organize your shortcuts.
- To change the shortcuts in the dock at the bottom of the home screen (except Apps (📱)), touch and hold a


**Note:** Your home screen might look a little different.

SCREEN NOT YET AVAILABLE





shortcut, and select an app from the **Add to Dock** menu.

FPO  
SCREEN NOT YET AVAILABLE

- To **move** or **delete** something, touch and hold it until you feel a vibration, then drag it to another spot, another panel, or the trash  at the top of the screen.

## SEARCH

Touch Search , or use a Search widget on your home screen.












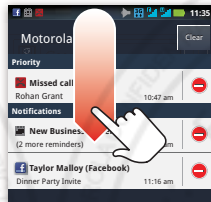













## PHONE STATUS & NOTIFICATIONS

The status bar at the top of the screen has icons that tell you about messages and phone status.

To view your notifications, touch the status bar and drag it down. Touch a notification to select it.


**Tip:** To see today's date, touch the status bar at the top of the screen.




	Bluetooth active		iDEN network
	GPS active		GSM/UMTS network
	Wi-Fi active		airplane mode
	downloading		sync active
	vibrate		alarm set
	silent		battery (charging)
	mute call		battery (full charge)
	PTT speaker active		Wi-Fi PTT offline
	PTT speaker off		Wi-Fi PTT on
	active PTT call		alert
	talkgroup call		missed phone call

## NOTIFICATION LIGHT

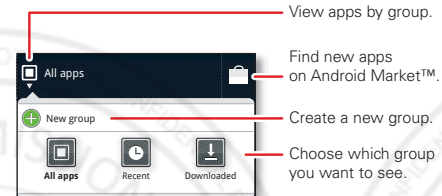

No need to wake your screen to see if you have a message. The notification light blinks when you have a new message, email, text message, an appointment, or your battery is low.





**Tip:** You can also open recent apps. Touch  > **Recent**.

## APPS

You can find all of your apps in one place. From the home screen, touch Apps .

To return to the home screen, touch Home  or Back .

## RECENT APPS


Touch and hold Home  to see the most recent apps you used. Touch an app to open it, or touch Home  to return to the home screen.

# CALLS

it's good to talk

## DIALING OPTIONS

From the home screen, touch  **Dialer**.

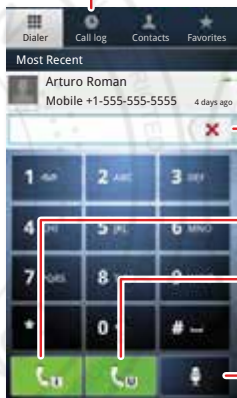

### Recent Calls List

Touch to open, then touch an entry to call.

### Return Call


Touch to delete digits you entered.

### Call using iDEN network

### Call using GSM/UMTS network

### Voice Call

## IN-CALL OPTIONS

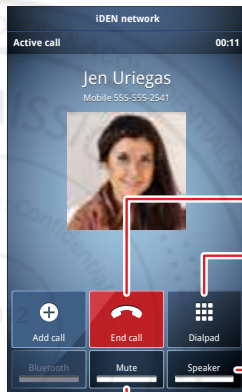

### Call Timer

### End Call

### Dialpad

Enter numbers during a call.

### Speakerphone

Turn the speakerphone on or off.


### Mute

Mute or unmute the call.



To use a Bluetooth™ device, touch **Bluetooth**. (Be sure the device is turned on and paired—see **"CONNECT NEW DEVICES"** on page 45.)

**Note:** Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.



**Tip:** You can touch Home  or Back  to leave the active call display. To reopen it, touch Home 

>  **Dialer**, or flick down the **Notifications** bar and touch the Current Call notification.



## MAKE & ANSWER CALLS

To make a call, touch  **Dialer**, enter a number, then touch  to make a call on the iDEN network, or  to make a call on the GSM/UMTS network.


**Tip:** If the screen is locked, drag  to the right.



To answer a call while the display is active, touch  **Answer**. When the display is not active, answer by dragging  to the right.

**Note:** When you hold the phone to your ear, the display goes dark to prevent accidental touches. When you move your phone away from your ear, the display lights up again.

To ignore a call, touch  **Ignore** when the display is active. Touch  if the display is not active.

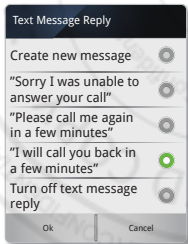If you ignore a call, your phone gives you the option to send a text message to the caller. Select a message and touch **Ok** to send it or touch **Cancel** to exit without sending a message.



You can enable or disable text message reply for ignored calls, touch Apps  >  **Settings**> **Call settings** > **Text message reply** and check or uncheck the check mark next to **Text message reply**.

To create or edit a preset text message reply, touch **Edit messages**.

## END CALLS



Touch  **End Call**.

## MISSED PHONE CALL

If you receive a phone call during a push-to-talk call, and don't answer it, you'll receive a missed call notification. To return the phone call, touch **End PTT Call**, and then **Return call** when prompted. To continue the push-to-talk call, touch **Dismiss**.

## RECENT CALLS


**Find it:**  **Dialer** > **Call log**

- To call a number, touch .
- To send a text message, create a contact, view a contact, or other options, touch and hold an entry.
- To clear the list, touch Menu  > **Clear list**.

**Tip:** If screen lock isn't turned on, you can get to the **Call log** by pressing the PTT Button twice.

## FREQUENT CALLS

**Find it:**  **Dialer** > **Favorites**

- To call a number, touch .
- To send a text message, view a contact, or other options, touch and hold an entry.
- To add a contact to **Favorites**, select the contact, and touch the star in the upper right corner. The star turns green.

## THREE WAY CALLS

To start a conference call, call the first number. After the call connects, touch **Add Call**. Dial the next number, or select it from contacts or favorites. When the next number answers, touch **Merge**.


## YOUR PHONE NUMBER

**Find it:** Apps  >  **Settings** > **About phone** > **Status** > **My Phone number**



## EMERGENCY CALLS

**Note:** Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot

be placed due to network, environmental, or interference issues.

**1** Touch  **Dialer** (if your phone is locked, touch **Emergency Call** at the bottom of the screen).

**2** Enter the emergency number.

**3** Touch  or  to call the emergency number.

**Note:** Your phone can use location based services (GPS and AGPS) to help emergency services find you. See “**LOCATION SERVICES**” on page 66.

## COOL DOWN

In very limited circumstances, such as where your phone has been exposed to extreme heat, you may see “Cool Down” messages. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in “Cool Down” mode, only emergency calls can be made.

# PUSH-TO-TALK (PTT)

*one or more, talk to them all*

## PTT CALLS

Push-to-talk calls are calls between two people.

## IDEN PTT

### MAKE AND ANSWER PUSH-TO-TALK CALLS

To **make** a push-to-talk call:

- Touch **Dialer**, and enter the recipient's PTT (push-to-talk) number.
- Touch **Dialer** > **Contacts, Call log** or **Favorites**, and select an entry that has a PTT number.



To **talk**, press and hold the PTT Button. To **listen**, release the PTT Button.

To **answer** a push-to-talk call, press the PTT Button after the caller has stopped talking.

To **add** a person to a call, touch **Add member**.

To **end** a push-to-talk call, touch **End**.

## RESUME PTT

You can extend the automatic timeout of a PTT call by about 30 seconds.

**Find it:** Apps > **Settings** > **Call settings** > **Push to Talk settings** > **Resume PTT**

## ONE TOUCH PTT

You can customize the PTT Button for quick access to push-to-talk functions.

**Find it:** Apps > **Settings** > **Call settings** > **Push to Talk** > **One Touch PTT**

**Tip:** If screen lock isn't turned on, you can initiate **One Touch PTT** functions from the lock screen by pressing and holding the PTT Button.


Options	
<b>Off</b>	Turn off <b>One Touch PTT</b> .
<b>Launch PTT Contacts list</b>	Open a list of push-to-talk contacts on your phone.
<b>Launch PTT Call log list</b>	Open the push-to-talk Call log list.
<b>PTT selected contact</b>	Start a push-to-talk call with the selected contact.

## Options

### PTT most recent number

Start a push-to-talk call with the most recent PTT number in the **Call log**.

**Tip:** To add a widget for **One Touch PTT**, touch and hold a blank spot on your home screen, then touch **Widgets > One Touch PTT**.



## ALERTS

Use alerts to tell someone you want to speak to them.

To **send** a call alert:

- Touch **Dialer**, enter a PTT number, and press Menu > **Send Alert**. When prompted, press the PTT Button.
- Touch **Dialer** > **Contacts**, **Call log**, or **Favorites**, and select a contact containing a PTT number. Touch **Dialer**, and press the PTT Button when prompted.

When you **receive** a call alert, you can:

- **Answer:** Press the PTT Button to begin a push-to-talk call with the sender.
- **Later:** Store the call alert to **Notifications**.
- **Dismiss:** Ignore the call alert.

**Note:** Alerts are moved to **Notifications** after a few minutes of inactivity. You won't be able to make phone calls or push-to-talk calls until the call alert is moved, or you've chosen an option.

## SWITCH FROM A PUSH-TO-TALK CALL TO A PHONE CALL

For longer calls, you can switch from a push-to-talk call to a phone call if the push-to-talk call recipient has a phone number stored in **Contacts**.

During a push-to-talk call, Touch **Call**.

## TALKGROUPS

**Note:** Availability of Talkgroups, and the maximum number of Talkgroup members, is dependent on your service provider. Contact your service provider to establish a Talkgroup.

### JOIN A TALKGROUP

Before you can make a Talkgroup call, you'll need to join the Talkgroup.


- 1 Touch **Dialer** > **Contacts** > > **Talkgroup**, and press Menu > **Enter Talkgroup**. Name the Talkgroup and enter the Talkgroup number. Press Menu > **Save**.

**Tip:** Talkgroup numbers begin with a #. For example #155.


- 2 Select the Talkgroup in your contacts.



### 3 Touch **Join**.


#### **MAKE A TALKGROUP CALL**

- Touch  **Dialer**, enter the Talkgroup number and press the PTT Button.

**Tip:** To add a widget for Talkgroups, touch and hold a blank spot on your home screen, then touch **Widgets > TalkGroupWidget**.



- Touch  **Dialer > Contacts > **, select the Talkgroup and touch **Push to Talk** (or press the PTT Button).

**Tip:** To silence incoming Talkgroup calls, press Menu  > **Settings > Call settings > Push to Talk Settings > Talkgroups > Silence Talkgroups**.

#### **IDEN MODE**

When you're out of iDEN network coverage, you can adjust how your phone operates in iDEN mode to conserve battery life.

**Find it:** Apps  >  **Settings > Dual SIM Settings**

Options	
<b>Normal</b>	Your phone connects quickly to the iDEN network.

Options	
<b>Save</b>	Reduces battery consumption, but takes longer to connect to the iDEN network.
<b>Off</b>	Turns off iDEN PTT.

**Tip:** To add a widget for iDEN Mode, touch and hold a blank spot on your home screen, then touch **Widgets > iDEN mode**.



#### **WI-FI PUSH-TO-TALK**

push-to-talk calls are calls between two people.


**Find it:** Apps  >  **Wi-Fi PTT**

#### **SETUP**

The first time you open Wi-Fi PTT, you'll be prompted to sign in to your account. Enter your user ID and password, and touch **Sign in**.



#### **WI-FI PTT CONTACTS**

Wi-Fi PTT will import all of your PTT contacts the first time you open it.

To create a contact, touch .

To view talkgroups, touch .






To add a talkgroup, touch  > .

To edit a contact, touch and hold it, and then touch **Edit contact**.

## MAKE AND ANSWER PUSH-TO-TALK CALLS

To **make** a push-to-talk call:

- Touch  **Wi-Fi PTT > Recent >  Dialer**, and enter the recipient's PTT number.
- Touch  **Wi-Fi PTT > Recent or Contacts**, and select an entry that



has a PTT number. To **talk**, press and hold the PTT Button. To **listen**, release the PTT Button.

To **answer** a push-to-talk call, press the PTT Button after the caller has stopped talking.



To **end** a push-to-talk call, touch **End Call**.



**Note:** Use of Wi-Fi PTT requires a Wi-Fi connection. See “**WI-FI SEARCH & CONNECT**” on page 46

## ALERTS

Use alerts to tell someone you want to speak to them.

To **send** a call alert:

- Touch  **Wi-Fi PTT > Recent >**, enter a PTT number, and press Menu  > **Alert**. When prompted, press the PTT Button.

- Touch  **Wi-Fi PTT > Recent or Contacts**, and select a contact containing a PTT number. Touch , and press the PTT Button when prompted.

**Tip:** You can also touch and hold a contact or recent call entry, and then touch **Wi-Fi Alert**.

When you **receive** a call alert, you can:

- **Answer:** Press the PTT Button to begin a push-to-talk call with the sender.
- **Later:** Store the call alert to **Notifications**.
- **Dismiss:** Dismiss the call alert.

**Note:** Alerts are moved to **Notifications** after a few minutes of inactivity. You won't be able to make phone calls or push-to-talk calls until the call alert is moved, or you've chosen an option.

## WI-FI TALKGROUPS

**Note:** Availability of Talkgroups, and the maximum number of Talkgroup members, is dependent on your service provider. Contact your service provider to establish a Talkgroup.

### JOIN A TALKGROUP



Before you can make a Talkgroup call, you'll need to join the Talkgroup.

- 1 Touch  **Wi-Fi PTT > Contacts >  > Talkgroup**, and press Menu  > **Enter Talkgroup**. Name the



Talkgroup and enter the Talkgroup number. Press Menu  > **Save**.

- 2 Select the Talkgroup in your contacts.
- 3 Touch **Join**.

### MAKE A TALKGROUP CALL

- Touch  **Wi-Fi PTT** > **Recent** >  **Dialer**, enter the Talkgroup number and press the PTT Button.


**Tip:** Talkgroup numbers begin with a #. For example #155.

- Touch  **Wi-Fi PTT** > **Contacts** > , select the Talkgroup and touch **Push to Talk** (or press the PTT Button).

### YOUR WI-FI PTT NUMBER

**Find it:** Apps  >  **Wi-Fi PTT** > Menu  > **My Info**

### SET PUSH-TO-TALK SPEAKER

You can listen to push-to-talk calls through your phone's speaker or earpiece. Press Speaker  to turn the speaker on or off.






## CONTACTS

*contacts like you've never had before*

### QUICK START: CONTACTS


**Find it:**  **Dialer** > **Contacts**

**Tip:** You can also get to Contacts by touching Apps  >  **Contacts**.

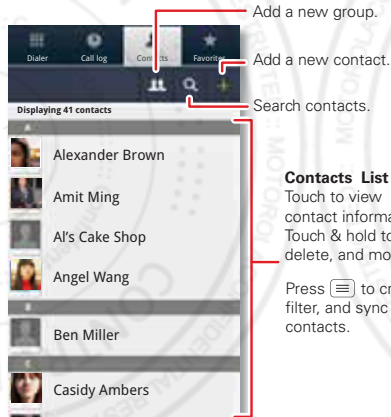

#### Contacts List

Touch to view contact information. Touch & hold to edit, delete, and more.

Press  to create, filter, and sync contacts.

## TRANSFER CONTACTS

Get all your contacts, all in one place. Here's a few helpful hints:

- **Use Gmail™**

All your Gmail contacts will automatically get synced to your phone. Various computer apps for mobile phones and email accounts allow you to export your contacts as a “.CSV” file. You can then use Gmail to import the file. For more details, go to [www.motorola.com/transfercontacts](http://www.motorola.com/transfercontacts) or log in to your Gmail account on your computer and select “Help”.

- **Use a microSD card**

You can transfer contacts from your old phone to your new Motorola phone using your microSD card.

- **Use a SIM card**

You can transfer contacts from your old phone to your new Motorola phone using your SIM card.



- **More**

There are other methods and tools to help you at [www.motorola.com/transfercontacts](http://www.motorola.com/transfercontacts).

## TRANSFER CONTACTS USING YOUR MICROSD CARD

- 1 On your old phone, copy all the contacts you want to transfer to your microSD card.



**Tip:** For Motorola Android™ phones, touch  **Dialer** > **Contacts** > Menu  > **Manage Contacts** > Export contacts to: **SD card**.



- 2 Insert your microSD card in your new phone, see “**ASSEMBLE & CHARGE**” on page 3.
- 3 Import the contacts from your microSD card, touch  **Dialer** > **Contacts** > Menu  > **Manage Contacts** > Import contacts from: **SD card**.

**Note:** You might have done this during “**SET UP & GO**” on page 3.

## TRANSFER CONTACTS USING YOUR SIM CARD

- 1 On your old phone, copy all the contacts you want to transfer to your SIM card.

**Tip:** For Motorola Android phones, touch  **Dialer** > **Contacts** > Menu  > **Manage Contacts** > Export contacts to: **SIM card**.

- 2 Insert your SIM card in your new phone, see “**ASSEMBLE & CHARGE**” on page 3.
- 3 Import the contacts from your SIM card, touch  **Dialer** > **Contacts** > Menu  > **Manage Contacts** > Import contacts from: **SIM card**.

**Note:** You might have done this during “**SET UP & GO**” on page 3.

## CALL OR EMAIL CONTACTS

**Find it:**  **Dialer > Contacts**

For **View contact**, **Call contact**, **Text contact**, or other options, touch and hold the contact.


## VIEW & USE CONTACTS

When you set up a social networking account, you'll know what everybody's up to and when (see "**SOCIAL NETWORKING**" on page 36). Every time you pick up a call, check a message, or look up a friend's contact info, sure, you'll see their name and number, but you can see their social network status and smiling face, too.

**Find it:**  **Dialer > Contacts**

Touch a contact to open its details. While viewing details, you can start a call or message by touching a phone number or other info.



## SORT CONTACTS


To sort contacts or set display options, touch Menu  > **Display options** and touch:

- **Filter by:** Choose which types of contacts you want to see. Select **All contacts**, **Contacts with PTT numbers**, or **Contacts with phone numbers**.
- **Sort list by:** Sort by first or last name.
- **View contact names as:** View contacts as first name or last name first.


- **Choose contacts to display:** Select which accounts will display contacts.


## CREATE CONTACTS

**Find it:**  **Dialer > Contacts > **

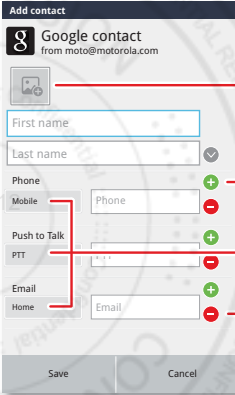




**Add contact**



 **Google contact**  
from moto@motorola.com



 Add a picture.



First name



Last name 



Phone  Add another entry. 

Mobile   Open label options.

Push to Talk  

PTT   Remove this entry.

Email  

Home  

Save Cancel

Touch any entry area to open the touchscreen keypad. When you're finished, touch **Save**.

**Where are contacts saved?** Your phone saves new contacts in its memory and on the Google™ Server. It also updates your social networking account.

## EDIT OR DELETE CONTACTS

**Find it:**  **Dialer** > **Contacts**

Touch the contact, then touch Menu  > **Edit contact** or **Delete contact**.

Contacts from social networks (like Facebook) will become hidden if you select **Delete contact**. To view these contacts, or delete them permanently, use the social network's app or Website.

## SYNCHRONIZE CONTACTS

When you change one of your contacts, your phone automatically updates your other social networking accounts. Likewise, if you change a social networking friend, your phone updates your contacts.

## GROUPS

**Find it:**  **Dialer** > **Contacts** >  > 


You can put your **Contacts** into a **Talkgroup** for push-to-talk calls, or a **Message Group** to easily send text messages to a group of people.

## EDIT GROUPS

Touch and hold a group to open the options menu. Touch **Edit group**.

To add a member, touch , and select a contact.

**Tip:** You can also add a member to a group during a group call. Touch **Add member**.

**Note:** Adding a new member during a group call creates a new group. To save this new group, touch Menu  > **Save**.

Touch  to delete a member.

## DELETE GROUPS


Touch and hold a group, then touch **Delete group**.

# MESSAGING

sometimes it's best to text, or IM, or email . . .

## QUICK START: MESSAGING

**Find it:** Apps  >  **Messaging** > **Universal Inbox**

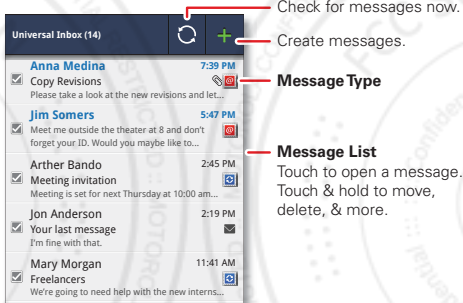


**Tip:** To see more messages, flick or drag up.

## READ & REPLY TO MESSAGES

**Find it:** Apps  >  **Messaging** > **Universal Inbox**


**Note:** **Universal Inbox** shows all of your messages together—text, email, and social networking messages.

To show only one type of message, touch a message type instead of **Universal Inbox**.


- To open a text message or social networking message and all of its replies, touch it.
  - To respond to a message, just open it and enter your response in the text box at the bottom.
- To forward a text message, touch and hold a message in the conversation, then touch **Forward message**.
- For email, touch  to choose a reply or forward option.
- To open options, touch and hold a message.

## CREATE MESSAGES

**Find it:** Apps  >  **Messaging** > 

Choose a message type, such as **Text Messaging** or **Facebook**. Then, enter the recipient and message. In text messages and emails, touch Menu  for options, like **Insert...** or **Attach Files**.

## SEND & RECEIVE ATTACHMENTS

To send a file in a message, open a new message and touch Menu  > **Insert**.



When you receive a message with an attachment, open the message and touch the file name to download it. Then, touch the name again to open it. Some file

formats can be converted to HTML for faster viewing, and your phone will show **Get HTML version**.

While viewing the attachment, touch it to save it, share it, and more.

**Tip:** To send and receive large attachments faster, use a Wi-Fi connection (see “**Wi-Fi**” on page 46).




## SET UP MESSAGING



To add email accounts, touch Apps  >  **Accounts** > **Add account**.

- **Corporate Sync** is for Exchange server work email accounts. Enter details from your IT administrator.

**Tip:** You might need to enter your domain name with your user name (like *domain/username*).

- **Email** is for most personal email accounts. For account details, contact the account provider.

**Note:** To add other email accounts to your **Messaging** widget and **Universal Inbox**, touch Apps  >  **Messaging**, then touch Menu  > **Manage accounts** > **Add account** > **Email**.

To change your settings, touch Apps  >  **Messaging** > Menu , then touch:

- **Manage accounts** to add or remove an account.
- **Edit Universal Inbox** to choose which accounts show messages in the **Universal Inbox**.


- **Messaging Settings** to set the notification for each account type and more.

## GMAIL™

### CREATE A NEW EMAIL

**Find it:** Apps  >  **Gmail** > Menu  > **Compose**

Enter the recipient email address and message, then touch **Send**.


**Tip:** Touch Menu  for options, like **Attach** or **Add Cc/Bcc**.

#### Features

##### search for email

Touch Search .

##### choose email notifications

Touch Menu  > **More** > **Settings** > *Gmail account* > **Email notifications**.


##### apply a label to a thread

Touch and hold a message, then touch **Change labels**.

## GOOGLE TALK™


Google Talk instant messaging lets you chat via instant message with other Google Talk users on phones or on the web.

**Find it:** Apps  >  **Talk**

Touch Menu  to send invitations, add new friends, and more.

**Tip:** You can also download an instant messaging app from the Google Play™ Store.

## VOICEMAIL

When you have a new voicemail,  appears at the top of your screen. Drag down the notification bar and touch the notification.

If you need to change your voicemail number, in the home screen touch Apps  >  **Settings** > **Call settings** > **Voicemail settings**.


## TEXT ENTRY

*keys when you need them*

## TOUCHSCREEN KEYPADS

### SWYPE KEYPAD

Swype™ lets you enter a word with one continuous motion. To enter a word, just drag your finger over the letters.

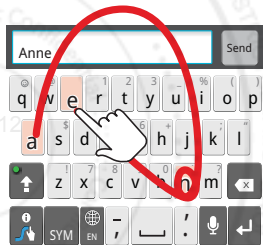

To enter a word, just trace a path through the letters.  
To capitalize, go above the keypad.  
For double letters, circle the letter.


- To enter the small number or symbol at the top of a key, touch and hold the key.
- To enter several symbols, touch **SYM**.
- To enter apostrophes in common words (like “l’ll”), drag through the apostrophe key.



- To correct a word, double-tap it. Swype shows a small menu of other word options. Swype might also show a menu if it can't guess your word.
- If Swype doesn't know a word, touch individual letters to enter it. Swype remembers, so next time you can just drag over the letters.

## MULTI-TOUCH KEYPAD

You can open a keypad on your screen by touching a text field, or touching and holding Menu (☰). To close the keypad, touch Back (⏪).

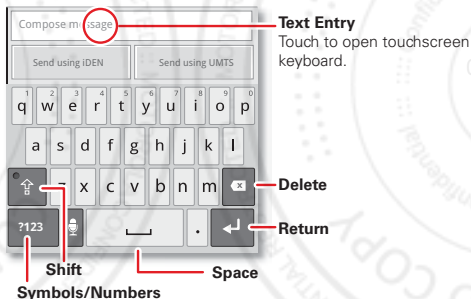

## MULTI-TOUCH TYPING TIPS

To...	
Enter <b>alternate</b> characters	From the number keypad, touch Alternate <b>ALT</b> . Touch again to return to numbers.
Enter <b>one capital</b> letter	Touch Shift <b>⇧</b> .
Enter <b>only capital</b> letters, until you touch Shift Lock <b>⇧</b> again	Touch Shift Lock <b>⇧</b> twice. Touch again to revert to lowercase.
<b>Select</b> text	Touch and hold text to select it.
<b>Cut</b> or <b>Copy</b> selected text	Touch and hold text, then touch <b>Cut</b> or <b>Copy</b> .
<b>Paste</b> cut or copied text	Touch and hold location to paste then touch <b>Paste</b> .
<b>Move</b> the cursor	Touch the location you want to go to.
<b>Delete</b> a character (hold to delete more)	Touch Delete <b>⌫</b> .

## TEXT INPUT SETTINGS









**Find it:** Apps  >  **Settings** > **Language & keyboard**



- To edit your dictionary, touch **User dictionary**.
- To change the language and the style for your touchscreen keypad, touch **Select locale**.
- To change input method and settings, touch **Swype**, **Multi-touch keyboard**, or **KOR/ENG keyboard**.

## TIPS & TRICKS

*a few handy hints*









### GENERAL TIPS

To...	
Return to <b>home screen</b>	Touch Home  .
See <b>recently dialed</b> numbers	Touch  <b>Dialer</b> > <b>Call log</b> .
<b>Sleep/wake</b> your phone	Press Power/Lock  .
Set <b>screen timeout</b>	Touch Apps  >  <b>Settings</b> > <b>Display</b> > <b>Screen timeout</b> .
<b>Search</b>	Touch Search  .
Use <b>voice search</b>	Touch and hold Search  .
See <b>recently opened</b> apps	Touch and hold Home  .

To...	
Choose apps for <b>Quick Launch Area</b>	Touch and hold an app icon in the Quick Launch Area. Then, select an app from the <b>Add to Dock</b> menu.
Turn <b>sound</b> on/off	Press and hold Power/Lock  > <b>Silent mode</b> .
Turn <b>airplane mode</b> on/off	Press and hold Power/Lock  > <b>Airplane mode</b> .

## BATTERY TIPS

Want to extend your battery life? Try these:

- To select a battery profile that suits your phone use, touch Apps  >  **Settings** > **Battery & data manager** > **Battery mode**.
- To turn off automatic applications sync, touch Apps  >  **Settings** > **Battery & data manager** > **Data Saver**.
- To turn off Bluetooth power, touch Apps  >  **Settings** > **Wireless & networks** > **Bluetooth**.
- To turn off Wi-Fi, touch Apps  >  **Settings** > **Wireless & networks** > **Wi-Fi**.

## PHOTOS & VIDEOS


*see it, capture it, share it!*

### PHOTOS

#### TAKE & SHARE PHOTOS

Take that family photo, and post it online for everyone to see.

**Find it:** Apps  >  **Camera**

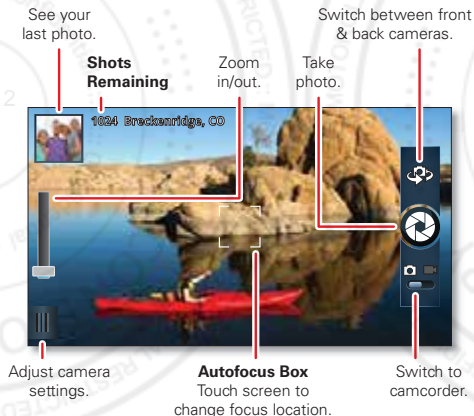

**Note:** To get the clearest photos, wipe the lens clean with a soft, dry cloth before you take a photo.


To take the photo, touch .

**Note:** Photos are stored on your phone's internal memory unless you switch it to a microSD memory card (sold separately). **Picture Resolution** is **Large** or **8MP**, unless you change it.

Open your gallery and touch and hold a photo to view options.

Options	
<b>Set as</b>	To <b>set</b> the photo as a wallpaper, contact photo, or social network photo.
<b>Add to album</b>	To <b>upload</b> the photo to an online photo album.
<b>Share</b>	To <b>send</b> the photo in a message or post it online. For more info on sharing your photos, see " <b>SHARE PHOTOS &amp; VIDEOS</b> " on page 29.
<b>Delete</b>	To <b>delete</b> the photo.

## CAMERA SETTINGS

You can make adjustments to optimize your shot. Touch Menu  to see these options.

Options	
<b>Settings</b>	Set <b>Picture Resolution</b> and <b>Geo-tag</b> setting.
<b>Effects</b>	Change photo look: <b>Normal</b> , <b>Black and White</b> , <b>Negative</b> , and more.
<b>Scenes</b>	Adjust in different environments: <b>Auto</b> , <b>Portrait</b> , <b>Landscape</b> , <b>Sport</b> , and more. Touch the screen when finished to return to the viewfinder.
<b>Modes</b>	Choose from <b>Single shot</b> , or <b>Panorama</b> to take multiple shots of wide scenes and join them together to make one large image. <b>Tip:</b> When using Panorama mode, use <b>Capture Direction</b> to specify how shots will be joined: <b>Move up</b> , <b>Move right</b> , <b>Move left</b> , <b>Move down</b> .

## Options


### Brightness

Set **Brightness**.

### Flash

Set **Flash On**, **Flash Off**, or **Auto Flash**.

### Switch to Camcorder

Click the switch below  to toggle between photo and camcorder.

## TAG PHOTOS

Tag your photos with location information.

Touch Menu  > **Settings** > **Geo-tag**.

## VIDEOS

### RECORD & SHARE VIDEOS

Find it: Apps  >  **Camcorder**

Watch your last video.

Switch between front & back cameras.



Time Remaining

Record video.

Adjust camcorder settings.

Zoom in/out.

Switch to camera.





**Note:** To get the clearest videos, wipe the lens clean with a soft, dry cloth before you record a video.

**To record** a video, touch . Touch  again to stop the recording.

**Note:** Videos are stored on your phone's internal memory unless you switch it to a microSD memory card


(sold separately). **Video Resolution** is **High Definition (720p)** unless you change it.


Open your gallery and touch and hold a video to view options.

Options	
<b>Play</b>	To <b>play</b> the video, touch  .
<b>Upload</b>	To <b>upload</b> the video to an online album, touch  .
<b>Share</b>	To <b>send</b> the video in a message or post it online, touch  . For more info on sharing your video, see " <b>SHARE PHOTOS &amp; VIDEOS</b> " on page 29.
<b>Delete</b>	To <b>delete</b> the video, touch Menu  > <b>Delete</b> .


## HD VIDEOS

You can capture HD-quality videos to watch on an HDTV or monitor.

To record an HD quality video, be sure to select the correct **Video resolution**. From the active camcorder viewfinder, touch Menu  > **Settings** > **Video resolution**, and make sure it's set to **High Definition (720p)**.

To enhance the video quality, touch Menu  > **Scenes** or **Effects**.


## VIDEO SETTINGS

You can make adjustments to optimize your video. Touch Menu  to see these options.

Options	
<b>Settings</b>	Set <b>Video Resolution</b> .
<b>Effects</b>	Change video look: <b>Normal</b> , <b>Black and White</b> , <b>Negative</b> , and more.
<b>Scenes</b>	Adjust for better audio capture in different environments: <b>Auto</b> and <b>Night</b> .
<b>Modes</b>	Choose from <b>Normal video</b> , <b>Video Message</b> , <b>Fast motion</b> , or <b>Slow motion</b> .
<b>Brightness</b>	Set <b>Brightness</b> .
<b>Light</b>	Turn a light on or off to adjust for the lighting where you are recording.


## Options

### Switch to Camera

Flick the switch below  to toggle between photo and camcorder.

## VIEW PHOTOS & VIDEOS

Find it: Apps  >  Gallery

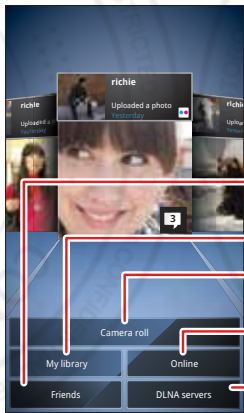

Backup your photos & videos.

Sort your photos & videos.


See your captured photos & videos.

See your online albums (like Picasa, Flickr, or Facebook).

Stream media from your computer with MotoCast.

## SHARE PHOTOS & VIDEOS



Find it: Apps  >  Gallery

- 1 Touch a photo or video, then touch .
- 2 Choose how you want to share—like **Bluetooth**, **Email**, **Text Messaging**, or an online album.

## MANAGE PHOTOS & VIDEOS

Find it: Apps  >  Gallery

Touch a thumbnail image from your camera roll or library, then:

- To delete the photo or video, touch Menu  > **Delete**.
- To set the photo as a contact picture, social network profile picture, or wallpaper, touch Menu  > **Set as**.

**Tip:** To copy photos to/from a computer, go to “**VIEW & TRANSFER FILES WITH MOTOROLA PHONE PORTAL**” on page 48.

## EDIT PHOTOS & VIDEOS

Find it: Apps  >  Gallery > **Camera roll**, select a picture, and touch Menu  > **Edit**

You can choose advanced editing features to resize, crop, or change the color.

## DLNA

Share your photos, videos, and songs with friends and family easily.

**Find it:** Apps  >  **DLNA**

**Note:** Connect to a Wi-Fi network or use your own Wi-Fi hotspot (see “**Wi-Fi**” on page 46). You’ll need to allow access to other devices to download media from your smartphone and to share your files. If you want to access media files on other devices, they must allow access.

- **Play media**—Select media for playback on another device in a Wi-Fi network.
- **Copy media to server**—Sync the media files on your smartphone with other devices.
- **Copy media to phone**—Copy a picture from one smartphone to another.
- **Share media**—Allow other devices to access media files on your smartphone. Without downloading any media from your smartphone, other people can view your pictures or videos, or play your songs, on their own devices.




## MUSIC

*when music is what you need...*

### QUICK START: MUSIC

**Find it:** Apps  >  **Music**

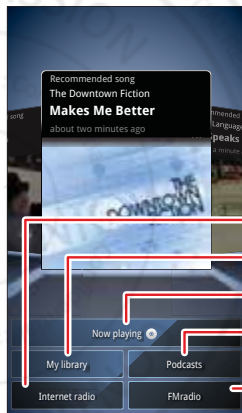



Listen to Internet radio.

Go to your music library.

Go to the current song.

Download & listen to podcasts.

Listen to FM radio.

Touch a category, then touch the song or playlist you want to play. Touch Menu  > **More** >  to randomly play all your songs, or touch **Search** to find a song.



**Tip:** When a song is playing, you can add it to a playlist by touching Menu (☰) > **Add to playlist**.

**Tip:** To listen to music during a flight, turn off all your network and wireless connections: Press and hold Power/Lock (⏻) then touch **Airplane mode**.

## SET UP MUSIC

### WHAT MUSIC TRANSFER TOOLS DO I NEED?

To put music on your computer and then load it on your phone, you need:

- Microsoft™ Windows™ computer or Apple™ Macintosh™.
- USB data cable (included with your phone).
- Optional microSD memory card (sold separately).

Your phone supports removable microSD memory cards up to 32GB capacity. To make sure your memory card is installed, go to “**ASSEMBLE & CHARGE**” on page 3.

**Tip:** To see the available memory on your memory card, touch Apps (⌂) > **Settings** > **Storage**.

### WHAT AUDIO FILE FORMATS CAN I PLAY?

Your phone can play many types of files: AAC, AMR, MP3, WAV, WMA, AAC+, and MIDI.

### WHAT HEADPHONES CAN I USE?

Your phone has a 3.5mm headset jack for wired stereo listening (required for FM radio). You can also go wireless with Bluetooth™ stereo headphones or speakers (see “**BLUETOOTH™ WIRELESS**” on page 44).

## GET MUSIC

Transfer music from your computer to your phone using a USB cable connection. Music files can be transferred to your phone by syncing with Windows Media® Player or using Motorola Media Link.

**Note:** Copyright—do you have the right? Always follow the rules. See “**CONTENT COPYRIGHT**” on page 69.


### SYNC WITH WINDOWS MEDIA PLAYER

- 1 Using a USB cable, connect your phone to an available USB port on your computer.
- 2 Flick the status bar down and touch **USB Connection** > **Windows Media Sync**.
- 3 Open Windows Media Player and drag and drop your music into the sync list.
- 4 Click on Start Sync.

### TRANSFER MUSIC WITH MOTOROLA MEDIA LINK

Motorola Media Link lets you transfer music files from Windows Media Player or iTunes®. Before you can

transfer music, you'll need to create playlists with the music you wish to transfer.

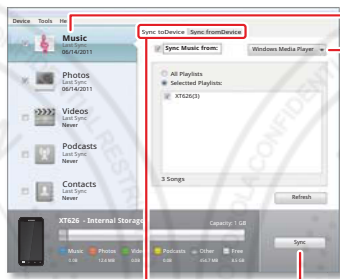

Select Music.

Choose music player to sync with.

Sync to or from your device.

Start the sync.

The first time you use the music player, you'll be prompted to install Media Link from your phone. You can also download Media link from [www.motorola.com/medialink](http://www.motorola.com/medialink).


To transfer music:

**1** Use a USB cable to connect your device to an available USB port on your computer. Once the correct Motorola Drivers have been installed on your computer, Media Link will start.

- 2** Make sure the Sync to Device tab is selected, and Music has a check mark next to it.
- 3** In the Sync to Device tab, make sure Sync Music from is selected, and select either Windows Media Player or iTunes from the drop down box to the right.
- 4** You can select to sync all playlists, or selected playlists. If you choose to sync selected playlists, choose the playlists from the list.
- 5** Click on Sync to transfer the music to your phone.

## PLAY MUSIC

Touch a song or playlist to start playing music.

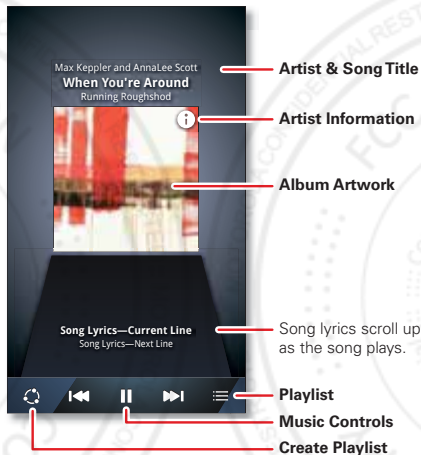

## MUSIC PLAYER CONTROLS

To...	
<b>Play/pause</b>	Touch ► /    .
<b>Select previous/next song</b>	Touch ◀◀ / ▶▶ .
<b>Fast forward/rewind</b>	Touch and hold ▶▶ / ◀◀ .
<b>Create playlist</b>	Touch 🔄 .
<b>View playlist</b>	Touch ☰ .
<b>Shuffle</b>	Touch ☰ > 🔄 .
<b>Repeat</b>	Touch ☰ > 🔄 .
<b>Adjust volume</b>	Press side volume keys.
<b>Add to playlist</b>	Touch Menu ☰ > <b>More</b> > <b>Add to playlist</b> .
<b>Set as ringtone</b>	Touch Menu ☰ > <b>More</b> > <b>Use as ringtone</b> .
<b>Delete</b>	Touch Menu ☰ > <b>More</b> > <b>Delete</b> .