

APPLICANT: MOTOROLA, INC.

FCC ID: IHDT6DV1

INSTRUCTION MANUAL

A preliminary draft copy of the Users Manual follows:

Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola wireless phone.



Note: Press in on the **5-Way Navigation Key** to select highlighted items.

Left Soft Key

Perform function in lower left display

5-Way Navigation Key

Scroll through & select menu items

Right Soft Key

Perform function in lower right display

Menu Key

Voice Key

Record voice names

Volume Keys

Power & End Key


Turn phone on/off, end calls, exit menu system

Send Key

Make & answer calls

Accessory Connector

Headset Jack

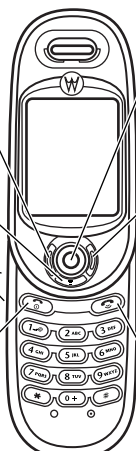

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196
1-800-331-6456 (United States)
1-888-390-6456 (TTY/TDD United States)
1-800-461-4575 (Canada)
www.motorola.com (United States)
www.motorola.ca (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office.

Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

All other product or service names are the property of their respective owners.

© Motorola, Inc., 2003.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: UGXXXX

Cover Number: UGCGXXXX

Contents

Safety and General Information	6
Getting Started	12
About This Guide	12
Installing the SIM Card	13
Battery Use	13
Installing the Battery	15
Charging the Battery	16
Turning Your Phone On	17
Adjusting Volume	17
Making a Call	18
Answering a Call	18
Viewing Your Phone Number	19
Highlight Features	20
Taking and Sending a Photo	20
Sending a Multimedia Message	23
Receiving a Multimedia Message	26
Playing Video Clips	26
Using Ring Lights	27
Using Event Lights	28
Learning to Use Your Phone	29
Using the Display	29
Using the 5-Way Navigation Key	34
Using Menus	34
Entering Text	37
Using the External Display	47
Changing a Code, PIN, or Password	48
Locking and Unlocking Your Phone	49
If You Forget a Code, PIN, or Password	50

Using the Phonebook	51
Setting Up Your Phone.	53
Storing Your Name and Phone Number	53
Setting the Time and Date	53
Setting a Ring Style	53
Setting Answer Options	54
Activating Rhythm Lights.	55
Setting a Wallpaper Image	56
Setting a Screen Saver Image	57
Setting Rotation Sound.	58
Setting Rotation Animation	59
Setting Display Brightness	59
Setting Display Color	59
Adjusting the Backlight	59
Setting Display Timeout	59
Calling Features	61
Changing the Active Line	61
Redialing a Number	61
Using Automatic Redial.	61
Using Caller ID	62
Canceling an Incoming Call	63
Turning Off a Call Alert	63
Calling an Emergency Number	63
Dialing International Numbers	64
Viewing Recent Calls	64
Returning an Unanswered Call	66
Using the Notepad	66
Attaching a Number	67
Calling With Speed Dial	67
Calling With 1-Touch Dial	68
Using Voicemail	68
Using Call Waiting.	69

Putting a Call On Hold.	70
Transferring a Call	70
Phone Features	72
Menu Map	72
Feature Quick Reference	74
Specific Absorption Rate Data	93
Product Registration	106
RF Energy Interference	106
Export Law Assurances	106
Wireless: The New Recyclable	107
Index.	108
Wireless Phone Safety Tips	117

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.
READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

External Antenna Care

Use only the supplied or Motorola-approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

Body-Worn Operation

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimeters) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimeters) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.Motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices may be found in the “Wireless Phone Safety Tips” at the end of this manual and at the Motorola website: www.Motorola.com/callsmart.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.






Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

Batteries

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

Getting Started



About This Guide

This guide describes the basic features of your Motorola wireless phone.

Note: A More Here reference guide is also available that describes your phone's features in more detail.

To obtain the More Here guide for your phone, or another copy of this guide, see the Motorola Web site at:

<http://motorola.com/consumer/manuals> (U.S.A.)

<http://motorola.ca/consumer> (Canada)

or contact the Motorola Customer Call Center at 1-800-331-6456 (U.S.A.) or 1-800-461-4575 (Canada).

Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories




This label identifies a feature that requires an optional Motorola Original™ accessory.


Installing the SIM Card

Your SIM (Subscriber Identity Module) card contains your phone number, service details, and phonebook/message memory.


Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

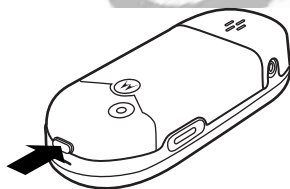


1

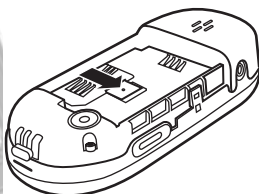

2

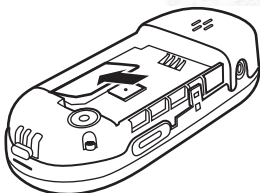

3

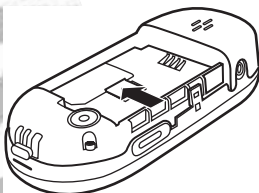

4

Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use;

items attached to your phone's accessory connector; and your voice, data, and other application usage patterns.

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery




type. Contact your local recycling center for proper disposal methods.

Warning: Never dispose of batteries in a fire because they may explode.

Installing the Battery



Your phone is designed to use only Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

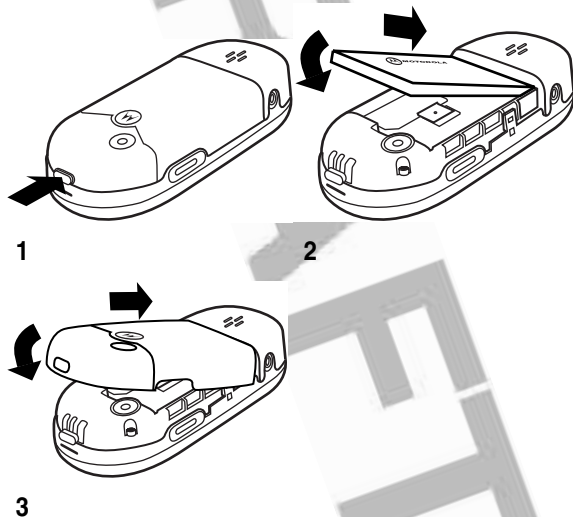


Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.



Action

- 1 Plug the travel charger into your phone with the release tab facing up.

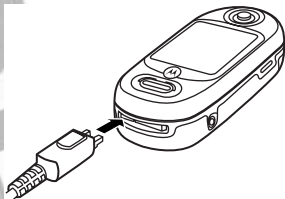


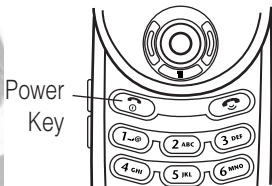
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates **Charge Complete**, press the release tab and remove the travel charger.


Tip: You can safely leave the travel charger connected to your phone after charging is complete. This will not damage the battery.

Turning Your Phone On


Action

- 1 Open your phone.
- 2 Press and hold  for 2 seconds to turn on the phone.



- 3 If necessary, enter your SIM card PIN code and press **OK** () to unlock the SIM card.


Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked.

- 4 If necessary, enter your 4-digit unlock code and press **OK** () to unlock the phone.

Adjusting Volume

Press the up or down volume keys to:

- increase or decrease earpiece volume during a call
- increase or decrease the ringer volume setting when the home screen is visible

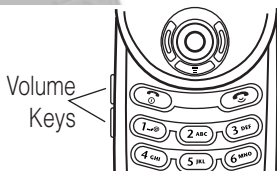

Tip: At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up





volume key to cycle back to vibrate alert, then ring alert.

- turn off an incoming call alert



Making a Call

Press	To
1 keypad keys	dial the phone number
2 	make the call
3 	end the call and “hang up” the phone when you are finished

Tip: You can also close the phone to end the call.




Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.



When **Open to Answer** is **On**, open the phone to answer the call.

To set **Open to Answer**, press  > **Settings** > **In-Call Setup** > **Answer Options** > **Open to Answer**.)

If **Open to Answer** is **Off**:

Press	To
1  or ANSWER ()	answer the call
2 	end the call and “hang up” the phone when you are finished

Viewing Your Phone Number

To view your phone number from the home screen, press  .

While you are on a call, press  > **My Tel. Numbers.**

Note: Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 53. If you do not know your phone number, contact your service provider.



Highlight Features



You can do much more with your phone than make and receive calls! This section describes some of your phone's highlight features.

Taking and Sending a Photo

Shortcut: When your phone is halfway closed, press the center button in the navkey (⊙) to take a picture.

To activate your phone's camera:

Find the Feature




> **Multimedia** > **Camera**

The active viewfinder image appears on your display.

Taking a Photo in the Portrait View

If your phone is all the way open or closed, it displays the portrait view:

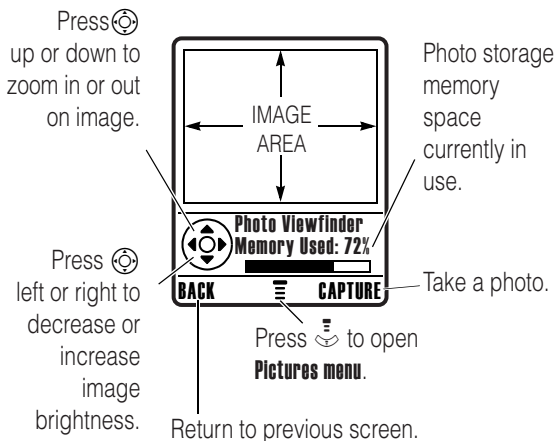

Tip: Your phone uses landscape view when it is halfway closed (see page 22).

Point the camera lens at the photo subject, then:

Press	To
1 CAPTURE	take a photo
2 STORE	view storage options If you choose to store the photo, continue to step 3.
or	
DISCARD	delete the photo and return to active viewfinder



Press	To
3 up or down	scroll to Send in Message, Store Only, Apply as Wallpaper Open, Apply as Wallpaper Closed, Apply as Screen Saver, Apply as Phonebook Entry, or Send to Blog*
4 SELECT	perform the storage option of your choice

* Optional network/subscription dependent feature. Not all features may be available on your phone.


Press to open the **Pictures Menu** when the camera is active. The **Pictures Menu** can include the following options:

Option	Description
Go To Pictures	View pictures and photos stored on your phone.
Auto-Timed Capture	Set a timer for the camera to take a photo.
Delete All	Delete all pictures.
Pictures Setup	Open the setup menu to adjust picture settings.
View Free Space	See how much memory remains for storing pictures.

Taking a Photo in the Landscape View

Your phone uses landscape view when it is halfway closed. To turn off this feature, see page 58:

Photo storage memory space currently in use.

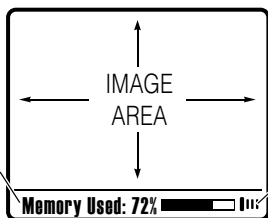

Press  to open Pictures Menu.



Note:

- Press the center of the 5-way Navigation key (⊙) to take a photo.
- Press ⊙ up or down to zoom in or out on viewfinder image. Press left or right to decrease or increase image brightness.
- The following icons can appear in **landscape view**. Press ⊙ to scroll to an icon, and press the center (⊙) to select the icon:

✓ = OK

🗑️ = Discard

📁 = Store

✉️ = Send

- In the landscape view, the home screen, status bar, shortcuts, event reminders, and battery save are not available.

Sending a Multimedia Message



A **Multimedia Messaging Service (MMS)** message contains one or more slides with text and embedded media objects (including photos, pictures, animations, sounds, voice records, and/












or video clips). You can send the multimedia message to other wireless phone users, and to email addresses.



Find the Feature



> **Messages** > **Create Message**
> **New Multimedia Message**


Press	To
1 keypad keys	enter slide text
2 	open the MMS Menu
3  up or down	scroll to Insert
4 SELECT ()	display a list of items you can insert
5  up or down	scroll to Picture, Voice Record, Sound, Video, Quick Note, Contact Info, or New Page
6 SELECT ()	select the file type
7  up or down	highlight the file you want
8 INSERT ()	insert the file To add another slide to the message, continue. To send the message, go to step 14.
9 	open the MMS Menu to insert a new slide
10  up or down	scroll to Insert
11 SELECT ()	display a list of items you can insert
12  up or down	scroll to New Page


Press	To
13 SELECT (⏎)	insert a new slide after the current slide Repeat steps 1 to 8 to enter contents for the new slide.
14 OK (⏎)	store the message
15 ⏪ up or down	scroll to a Send To option: <ul style="list-style-type: none"> • Highlight [One Time Entry] to enter 1 or more phone numbers and/or email addresses. • Highlight [New Phonebook Entry] to enter a number/address and add it to the phonebook. • Or highlight an existing phonebook entry.
16 SELECT (⏎)	select [One Time Entry] or [New Phonebook Entry] and enter a number/address
17 DONE (⏎)	store the numbers/addresses
18 ⏪ up or down	scroll to Subject
19 ●	select Subject
20 keypad keys	enter the subject
21 OK (⏎)	store the subject
22 SEND (⏎)	send the message



Receiving a Multimedia Message






When you receive a multimedia message or letter, your phone displays the  (message waiting) indicator and a **New Message** notification, and sounds an alert.

Press	To
READ ()	open the message

Multimedia messages that you receive can contain different media objects:

- Photos, pictures, and animations are displayed as you read the message.
- A sound file or video clip begins playing when its slide is displayed. Use the volume keys to adjust the volume as the sound file or video clip plays.

Note: In a multimedia letter, you may have to highlight an indicator in the text to play a sound file or video clip.

- Attached files are appended to the message. To open the attachment, highlight the file indicator/filename and press **VIEW** () (image file type), **PLAY** () (sound file or video clip), or **OPEN** () (vObject such as phonebook or datebook entry, or unknown file type).

Playing Video Clips

You can download video clips with the micro-browser, and send and receive video clips in multimedia messages.

To play a video clip stored on your phone:

Find the Feature



> **Multimedia** > **Videos**

Press

To

1 up or down

scroll to the video clip


2 **PLAY**

start video clip playback

The video clip displays in the video clip playback screen.

Press up or down to pause or play the video clip.

Press left or right to rewind or fast forward through the video clip.

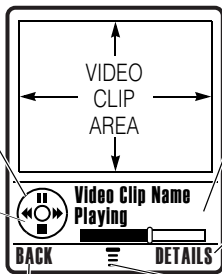

Timer indicates % played.

View video clip information.

Press to open **Videos Menu**.

Return to previous screen.

Using Ring Lights

Set up your phone to display a light pattern (in addition to or instead of a ring/vibrate alert) when you receive an incoming call. To select a light pattern:





Find the Feature



> **Settings** > **Ring Styles**
> **Ring Lights**

Press	To
1 up or down	scroll to the light pattern
2 SELECT	select the light pattern

The same light pattern displays for all incoming calls. You can use the light ID feature to display a distinctive light pattern when you receive calls from phonebook entries in a specific category. To set a light ID for a phonebook category, see page 78. The light ID is not displayed when ring lights are turned off.

Using Event Lights

When event lights are activated, your phone displays a light pattern to notify you of the following events: incoming calls from specific phonebook categories, incoming text and voicemail messages, alarms, power up, power down, battery charging, Bluetooth connect, Bluetooth activity, and Bluetooth disconnect.

To turn event lights on or off:

Find the Feature



> **Settings** > **Ring Styles**
> **Event Lights**

Press	To
1 up or down	scroll to On or Off
2 SELECT	select the option


Learning to Use Your Phone

See page 1 for a basic phone diagram.

Using the Display

The **home screen** is displayed when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.

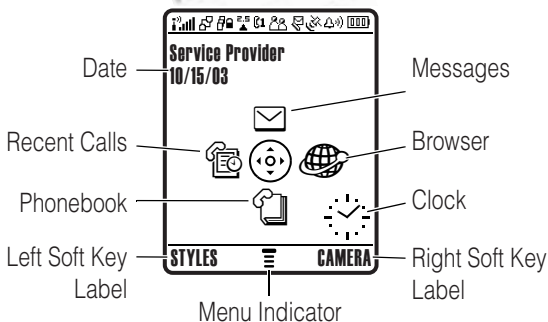

Note: Your phone display works differently when it is halfway closed. For details, see page 47.





Press the 5-way navigation key (⊙) left, right, up, or down to select one of the menu feature icons. If you select a menu icon by mistake, press (⏪) to return to the home screen.




Note: Your home screen may look different from the display shown above. For example, your service provider may hide the menu feature icons to allow a better view of the wallpaper image. You can still select the menu icons when they are hidden from view. To show or hide the menu icons, see page 81.

The  (menu) indicator indicates that you can press the menu key () to enter the main menu.



Labels at the bottom corners of the display show the current soft key functions. Press the left soft key () or right soft key () to perform the function indicated by the left or right soft key label.

Your phone can display an analog or digital clock in the home screen (see page 80).

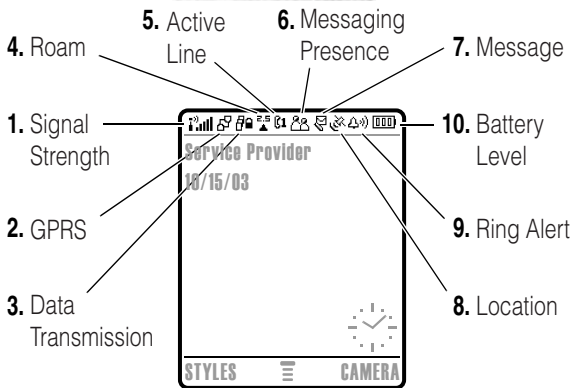The following status indicators can display:




1. Signal Strength Indicator


Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator or  (no transmit) indicator is displayed.

2. GPRS Indicator




Shows that your phone is using a high-speed General Packet Radio Service (GPRS) network connection. GPRS allows faster data transfer speeds. Indicators can include:


 = GPRS PDP context active


 = GPRS packet data available


3. Data Transmission Indicator


Shows connection and data transmission status. Indicators can include:

 = secure packet data transfer

 = unsecure packet data transfer

 = secure application connection

 = unsecure application connection

 = secure Circuit Switch Data (CSD) call

 = unsecure CSD call

4. Roam Indicator





Shows when your phone is seeking or using another network outside your home network. Indicators can include:

= 2.5G home

= 2.5G roam

= 2G home

= 2G roam

5. Active Line Indicator



Shows or to indicate the current active phone line. Other indicators can include:

= line 1 active, call forward on

= line 2 active, call forward on

= alarm activated

6. Messaging Presence Indicator



Shows when Instant Messaging (IM) is active. Indicators can include:

= IM active

= available for IM

= busy

= invisible to IM

= available for phone calls

= offline

When a Java application is active, a (Java midlet) indicator can display in this location.


7. Message Indicator



Displays when you receive a new message. Indicators can include:


 = text message

 = voicemail message

 = voicemail and text message

 = answering machine

 = IM message

 = active chat session

When you enter a message, a number in this location shows the number of characters left on the current page (text message), or the message size (multimedia message or letter).

8. Location Indicator



Your phone may be able to send location information to the network during an emergency call. Indicators show when your phone is sending location information:

 = location on

 = location off

9. Ring Style Indicator

Shows the ring style setting.



△ = loud ring

⊞ = vibrate

△ = silent

△ = soft ring

⊞ = vibrate and ring

10. Battery Level Indicator


Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.



Using the 5-Way Navigation Key


Key


Use the 5-way navigation key (⊞) to scroll up, down, left, or right in the menu system. Press the center of the key (⊙) to select a highlighted menu item.

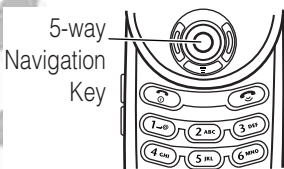





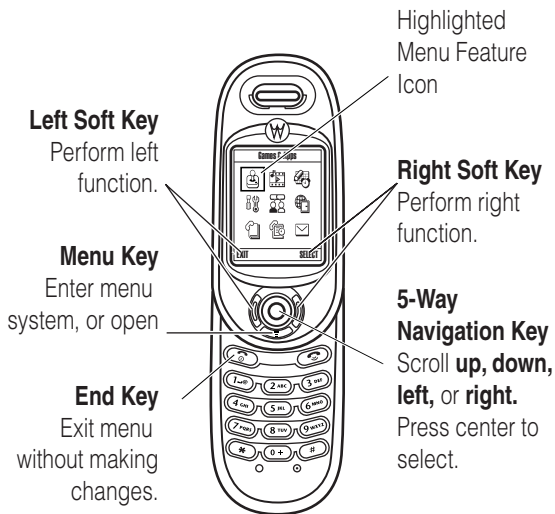





Using Menus

From the home screen, press  to enter the main menu.



Press  to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that may appear in the main menu, depending on your service provider and service subscription options.

Icon	Feature	Icon	Feature
	Games & Apps		Multimedia
	Office Tools		Settings
	IM		Web Access
	Phonebook		Recent Calls
	Messages		Chat






Selecting a Menu Feature

To select a menu feature, starting from the home screen:

Find the Feature





> **Recent Calls** > **Dialed Calls**

This example shows that from the home screen, you must press , scroll to and select  **Recent Calls** from the main menu, then scroll to and select **Dialed Calls**. Press  to scroll to and select items. Press the left/right soft keys to select the functions listed in the bottom left and right corners of the display.

Selecting a Feature Option


Some features require you to select an option from a list:

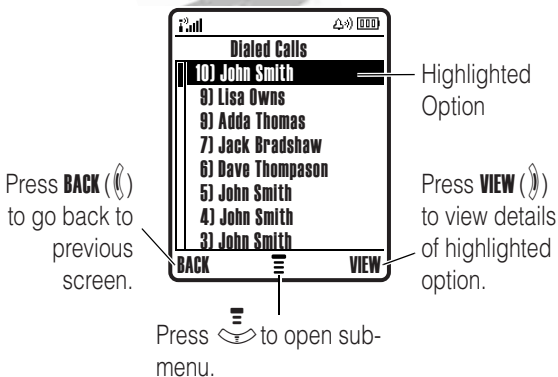

Press  to scroll up or down to highlight the option you want.

In a numbered list, press a number key to highlight the option.


In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.


When an option has a list of possible values, press  left or right to scroll through and select a value.


When an option has a list of possible numeric values, press a number key to set the value.

Entering Text


Some features require you to enter information.


Press  to scroll to and select options.

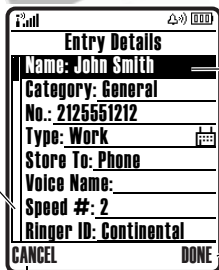

Entry Details	
Name: John Smith	
Category: General	
No.: 2125551212	
Type: Work	
Store To: Phone	
Voice Name:	
Speed #: 2	
Ringer ID: Continental	
CANCEL	DONE

Highlighted Option

Press **DONE** () to send or store the message.


Press **CANCEL** () to exit without making changes. **CANCEL** displays when you enter or edit information.


The message center lets you compose and send text messages.




For indicator descriptions, see following section.

Flashing cursor indicates insertion point.

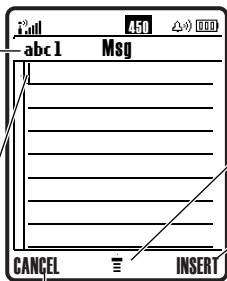


Press  to open sub-menu.

Press **INSERT** () to insert a quick note, picture, or sound.


Press **CANCEL** () to exit without making changes.

Choosing a Text Entry Method


Multiple text entry methods make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another method.

Press  in any text entry screen to select 1 of the following entry methods:

Primary	The primary text entry method (see below to set).
Numeric	Enter numbers only (see page 45).
Symbol	Enter symbols only (see page 45).
Secondary	The secondary text entry method (see below to set).


Alternatively, you can select a text entry method in any text entry screen by pressing  > **Entry Mode**.

Setting Up a Text Entry Method

Press  > **Entry Setup** from any text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

- | | |
|---------------------|--|
| ITAP | Let the phone predict each word as you press keys (see page 43). |
| Tap | Enter letters and numbers by pressing a key 1 or more times. |
| Tap Extended | Enter letters, numbers, and symbols by pressing a key 1 or more times. |
| None | Hide the Secondary setting (only available for Secondary Setup). |

Using Capitalization

Press  in any text entry screen to change text case. The following indicators show capitalization status:

abc = no capital letters

Abc = capitalize next letter only

ABC = all capital letters

Text Entry Method Indicators

When you select the **Primary** or **Secondary** text entry method, the following indicators identify the text entry setting:





Primary	Second.	
1	2	Tap, no capital letters
1†	2†	Tap, capitalize next letter only
1†	2†	Tap, all capital letters
Ⓜ	Ⓜ	iTAP, no capital letters
Ⓜ†	Ⓜ†	iTAP, capitalize next letter only
Ⓜ†	Ⓜ†	iTAP, all capital letters

The following indicators identify Numeric or Symbol entry method:

123 = numeric method Ⓜ = symbol method

Using Tap Method

This is the standard method for entering text on your phone.



Regular Tap method cycles through the letters and number of the key you press. Tap Extended method also cycles through additional symbols as shown in the chart on page 42.

Press	To
1 A keypad key 1 or more times	select a letter, number, or symbol


Press**To**

2 keypad keys


enter remaining characters.

Tip: Press  right to accept a word completion, or  to insert a space.3 **OK** 

store the text


In a text entry screen, you can press  to switch entry methods. If **Tap** or **Tap Extended** is not available as the **Primary** or **Secondary** entry method, see page 39.

When you enter text with **Tap** or **Tap Extended** method, the soft key functions change.

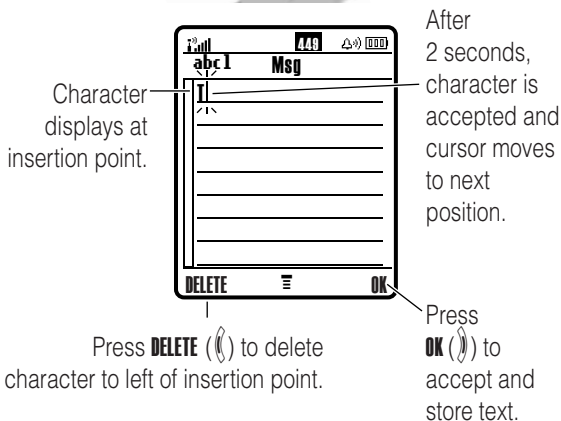

When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** you might see:

Character displays at insertion point.

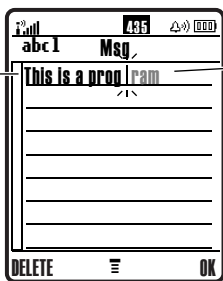



Press right to accept **PROGRAM**, or press to reject it and enter a space after **prog**.


If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.

Character Chart




Use this chart as a guide for entering characters with **Tap Extended** method.

	. 1 ? ! , @ _ & ~ : ; " ' () ' ¿ ¡ % £ \$ ¥ ¢ + x * / \ [] = > < # \$
	a b c 2 ä å á à â ã ç
	d e f 3 ë é è ê f
	g h i 4 ï î ï
	j k l 5
	m n o 6 ñ ö ø ó ò ô õ
	p q r s 7 ß
	t u v 8 ü ú û û
	w x y z 9
	change text case, for capital letters

-  enter a space (hold to enter a return)
-  change text entry method (hold for default)





Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.

Tap Method Text Entry Rules

- Press a keypad key repeatedly to cycle through its characters.
- Press  left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalized. If necessary, press  down to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press  to exit without saving.

Using iTAP™ Method


iTAP™ software provides a predictive text entry method that lets you enter a word using 1 keypress per letter. This can be faster than **Tap** method, because your phone combines the keypresses into common words.

For example, if you press     , letter combinations that match your keypresses display:





Press **DELETE** (⌫) to delete last letter.

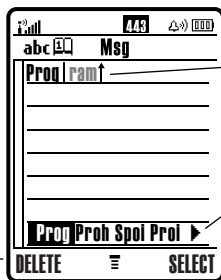

Press **SELECT** (⏎) to lock highlighted combination.

Press **⏪** up to accept **Program**.

Press **⏩** right to highlight another combination. Press **⏪** to enter **Prog** and a space.

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

Entering Words

In a text entry screen, you can press **#** to switch entry methods. An indicator tells you which method is active (see page 39). If **ITAP** method is not available as the **Primary** or **Secondary** entry method, see page 39.

Press	To
1 keypad keys (1 press per letter)	show possible letter combinations at the bottom of the display
2 ⏪ left or right	highlight the combination you want

Press

To

3 SELECT ()

lock a highlighted combination

You can press keypad keys to add more letters to the end of the combination.

or



enter the highlighted combination when it spells a word

A space is automatically inserted after the word.

If you enter a word your phone does not recognize, the phone stores it to use as 1 of your word options. When you fill memory space for unrecognized words, your phone deletes the oldest words to add new words.

Using Numeric Method

In a text entry screen, press (#) to switch entry methods until the 123 (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press (#) to switch to another entry method.

Using Symbol Method

In a text entry screen, press (@) to switch entry methods until the @ (symbol) indicator displays.









Press	To
1 keypad keys (1 press per symbol)	show possible symbol combinations at the bottom of the display
2 or right	highlight the combination you want
3 SELECT	lock a highlighted combination You can press keypad keys to add more symbols to the end of the combination.
or 	enter the highlighted combination

Symbol Chart

Use this chart as a guide for entering characters with symbol method.

	. ? ! , @ _ & ~ : ; " - () ' ` ¡ ¢ £ \$ ¥ ¤
	@ _ \
	/ : ;
	" & '
	() [] { }
	¡ ¢ ~
	< > =
	\$ £ ¥ ¤
	# % *

-  + - x * / = > < # §
-  enter a space (hold to enter a return)
-  change text entry method (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.

Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:



Action


Press **DELETE** () to delete 1 letter at a time.

Hold **DELETE** () to delete the entire message.

Using the External Display

When your phone is closed, you can still use it by pressing the keys on the outside. The closed display functions the same as the open display (see page 29).

Note: When your phone is closed, press and hold **UNLOCK** () , then press **OK** () to unlock your keys. You cannot make or receive calls when the phone is closed unless you attach a headset.

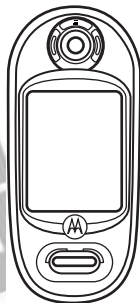



When you close your phone, it can stop halfway. If you leave it there, the camera viewfinder displays a landscape view. To take a picture, see page 20. To turn off landscape view, see page 58.

When you open your phone, it does not stop halfway.

Note: You cannot make or receive calls when your phone is halfway closed. In the landscape view, the home screen, status bar, shortcuts, event reminders, and battery save are not available.

Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password:

Find the Feature



> **Settings** > **Security**
> **New Passwords**

Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, but you must unlock it to answer.

You can make emergency calls on your phone even when it is locked (see page 62).



Locking Your Phone Manually

Find the Feature



> **Settings** > **Security**
> **Phone Lock** > **Lock Now**

Press	To
1 keypad keys	enter your unlock code
2 OK (⏏)	lock the phone

Unlocking Your Phone

Your phone's unlock code is originally set to 1234. Many service providers reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:

Press	To
1 keypad keys	enter your unlock code
2 OK (Ⓜ)	unlock your phone

Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature



> **Settings** > **Security**

> **Phone Lock**



> **Automatic Lock** > **On**

Press	To
1 keypad keys	enter your unlock code
2 OK (Ⓜ)	activate automatic lock

If You Forget a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Many service providers reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, at the **Enter Unlock Code** prompt:


Press	To
1 	display the unlock code bypass screen
2 keypad keys	enter your security code
3 OK ()	submit your security code

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.

Using the Phonebook



This section briefly describes basic phonebook operations. For more information about using the phonebook, see page 77.

Storing a Phone Number

Enter a phone number in the home screen, then press **STORE** () to create a phonebook entry with that number. Fill in the other fields to complete the entry.

Select **MORE** to store another number (for example, a work number) under the same Name.

Recording a Voice Name

When creating a phonebook entry, scroll to **Voice Name** and press  to record. Press and release the voice key and say the entry's name (within 2 seconds). When prompted, press and release the voice key and repeat the name. Press **DONE** () to store the voice name.



Note: This option is not available for entries stored on the SIM card.

Dialing a Number



Press  > **Phonebook** > entry to call.

Voice Dialing a Number

Press and release the voice key, and say the entry's name (within 2 seconds).





Sorting Phonebook Entries

Press  > **Phonebook**, press  > **Setup** > **Sort by**, then select whether you want to sort the phonebook list by **Name**, **Speed No.**, **Voice Name**, or **Email**.

When sorting by name, you can view **All** numbers or just the **Primary** number for each name. To set the primary number for a name, see page 79.

Viewing Entries By Category

Press  > **Phonebook**, press  > **Categories**, then select whether you want to view **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you created.

To set the category for a phonebook entry, see page 78.

Setting Picture ID View

Press  > **Phonebook**, press  > **Setup** > **View by** > **Picture**.

To assign a photo to a phonebook entry, see page 20.

Setting Up Your Phone

Storing Your Name and Phone Number





To store or edit your name and phone number information on your SIM card:

Find the Feature



> **Settings** > **Phone Status**
> **My Tel. Numbers**

Shortcut: Press   from the home screen to edit your name and phone number.

If you do not know your phone number, contact your service provider.

Setting the Time and Date

You must set the time and date to use the datebook.

Find the Feature



> **Settings** > **Initial Setup**
> **Time and Date**

Setting a Ring Style

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an **alert**.



You can select 1 of 5 different ring styles. The ring style indicator in the display shows the current ring style (see page 33).

To set a ring style:

Find the Feature



> **Settings** > **Ring Styles**
> **Style**

Press

To

1 up or down scroll to the ring style

2 **SELECT** () select the ring style

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press > **Settings** > **Ring Styles** > style **Detail**.

Setting Answer Options

You can use additional, alternative methods to answer an incoming call.

Multi-Key

answer by pressing any key

Open to Answer





answer by opening the phone

To activate or deactivate an answer option:

Find the Feature



> **Settings** > **In-Call Setup**
> **Answer Options**

Press	To
1  up or down	scroll to Multi-Key or Open to Answer
2 CHANGE 	select the option
3  up or down	scroll to On or Off
4 SELECT 	confirm the setting

Activating Rhythm Lights

Rhythm lights make your phone's display and keys flash in beat with music or noise around you. You can activate rhythm lights for up to 10 minutes.

Find the Feature



> **Settings** > **Personalize**

> **Rhythm Lights**




Setting	Description
Pattern	choose a light pattern to activate Rhythm Lights , or turn the lights Off
Timer	set how many minutes Rhythm Lights will stay active (up to 10 minutes)
Sensitivity	set how loud the music has to be before Rhythm Lights respond (1 to 7)

Notes:

- Rhythm Lights only work when your phone is idle and your battery is not low. Rhythm Lights pause if you press a key or receive a call or message.



- Your phone can also flash for incoming calls and messages. Some games might make your phone flash and vibrate.

Tip: To create a shortcut to the **Rhythm Lights** feature, press  > **Settings** > **Other Settings** > **Personalize**, scroll to **Rhythm Lights**, and hold the . Your phone prompts you to save the shortcut. To use a shortcut, press  > **Shortcuts** in the home screen.






Setting a Wallpaper Image

You can set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

You can set a **Wallpaper Open** image for when your phone is open, and a **Wallpaper Closed** image for when it is closed.

Find the Feature

 > **Settings** > **Personalize**
> **Wallpaper Open** or
Wallpaper Closed

Press	To
1  up or down	scroll to Picture
2 CHANGE ()	open the picture viewer
3  up or down	scroll to a picture/animation Scroll to (None) to turn off the wallpaper image.
4 SELECT ()	select the image
5  up or down	scroll to Layout

Press	To
6 CHANGE (🔄)	adjust the image layout
7 🔄 up or down	scroll to Center , Tile , or Fit-to-screen Center places the image in the center of the display. Tile fills the display with adjacent copies of the image. Fit-to-screen resizes the image, if necessary, to fit the display.
8 SELECT (👉)	confirm the layout setting
9 BACK (👈)	save wallpaper settings

Setting a Screen Saver Image

Set a photo, picture, or animation as a screen saver image.

The screen saver image displays when the phone is on and no activity is detected for a specified time period. The image shrinks to fill the display, if necessary. An animation repeats for 1 minute, then the first frame of the animation displays.

Turn off the screen saver to extend battery life.

Find the Feature



> **Settings** > **Personalize**
> **Screen Saver**





Press	To
1	scroll to Picture
2 CHANGE (open the picture viewer
3	scroll to a picture/animation Scroll to None to turn off the screen saver image.
4 SELECT (select the image
5	scroll to Delay
6 CHANGE (set the delay interval
7	scroll to the inactivity interval that triggers the screen saver
8 SELECT (confirm the delay setting
9 BACK (save screen saver settings

Setting Rotation Sound

Set a sound to play when you open or close your phone.

Find the Feature



> **Settings** > **Personalize**
> **Rotation Sound**

Press	To
1	scroll to a sound
2 SELECT (select the sound to play

Setting Rotation Animation

When you rotate your phone open or closed, an animation displays. You can turn this animation **Off**.

Find the Feature



> **Settings** > **Personalize**
> **Rotation Animation**

Setting Display Brightness

Find the Feature



> **Settings** > **Initial Setup**
> **Brightness**

Setting Display Color

Select the color palette that your phone uses to display indicators, highlights, and soft key labels.

Find the Feature



> **Settings** > **Personalize**
> **Color Style**

Adjusting the Backlight

Set the amount of time that the display and keypad backlights remain on.

Find the Feature



> **Settings** > **Initial Setup**
> **Backlight**

Setting Display Timeout

Set the display to turn itself off when no activity is detected for a specified time period.

Find the Feature



> **Settings** > **Initial Setup**
> **Display Timeout**



Calling Features

For basic instructions on how to make and answer calls, see page 18.

Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

Note: This feature is available only for dual-line-enabled SIM cards.

Find the Feature



> **Settings** > **Phone Status**
> **Active Line**

The active line indicator in the display shows the currently active phone line (see page 32).

Redialing a Number

Press	To
1	view the dialed calls list
2	scroll to the entry you want to call
3	redial the number

Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed, Number Busy**.



To redial the phone number:

Press

 or **RETRY** ()

To

activate automatic redial

Your phone automatically redials the number. When the call goes through, your phone rings or vibrates 1 time, displays **Redial Successful**, and then connects the call.

Using Caller ID

Incoming Calls



Calling line identification (Caller ID) displays the phone number for incoming calls in your phone's display.

The phone displays the caller's name (and picture, if available) when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive ringer ID and/or light ID for specific entries stored in your phonebook. For more information, see page 77.

Outgoing Calls



You can show or hide your phone number as an ID for the calls that you make.


Find the Feature



> **Settings** > **In-Call Setup**
> **My Caller ID**



You can override the default caller ID setting when you make a call. While dialing (with digits visible in the display):

Press	To
 > Hide ID/Show ID	hide or show your caller ID for the next call

Canceling an Incoming Call

While the phone is ringing or vibrating:

Press	To
IGNORE ()	cancel the incoming call



Depending on your phone settings and/or service subscription, the call may be forwarded to another number, or the caller may hear a busy signal.

Turning Off a Call Alert

You can turn off your phone's incoming call alert before answering the call.


Press	To
either volume key	turn off the alert

Calling an Emergency Number


Your service provider programs 1 or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.



Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.


Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number

Dialing International Numbers

Press and hold  to insert the local international access code (+) for the country from which you are calling.

Viewing Recent Calls



Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

Shortcut: Press  from the home screen to view the dialed calls list.






Find the Feature



> Recent Calls

Press	To
1  up or down	scroll to Received Calls or Dialed Calls
2 SELECT 	select the list



Press	To
3 	up or down scroll to an entry » means the call connected.
4 	call the entry's number
or	Press and hold  for 2 seconds to send the number as DTMF tones during a call.
VIEW 	view entry details
or	
	open the Last Calls Menu to perform various operations on the entry


The **Last Calls Menu** can include the following options:




Option	Description
Store	Create a phonebook entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.

Option	Description
Send Tones	Send the number to the network as DTMF tones. This option displays only during a call.
Talk then Fax	Talk and then send a fax in the same call (see page 86).

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the  (missed call) indicator
- **X Missed Calls**, where **X** is the number of missed calls

Press	To
1 VIEW 	see the received calls list
2  up or down	select a call to return
3 	make the call

Using the Notepad




The most recent set of digits entered on the keypad are stored in your phone's notepad memory. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature




> **Recent Calls** > **Notepad**



Press	To
	call the number
or	
	open the Dialing Menu to attach a number or insert a special character
or	
STORE ()	create a phonebook entry with the number in the No. field



Attaching a Number

While dialing (with digits visible in the display):

Press	To
 > Attach Number	attach a number from the phonebook or recent calls lists



Calling With Speed Dial

Each entry you store in your phonebook is assigned a unique speed dial number.

To see an entry's speed dial number, press  > **Phonebook**, scroll to the entry, press **VIEW** ()

To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the speed dial number for the entry you want to call

Press	To
2 	submit the number
3 	call the entry

Calling With 1-Touch Dial

To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for 1 second.

Tip: You must specify which phone number list you want to use with this feature: phone memory phonebook or SIM card phonebook (see page 79).

Using Voicemail

Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Your service provider may include additional information about using this feature.

Listening to Voicemail Messages


Find the Feature



> Messages > VoiceMail

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the  (voicemail message) indicator and a New VoiceMail notification.



Press	To
CALL (☎)	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature		> Messages
		> VoiceMail Setup

Press	To
1 keypad keys	enter your voicemail number
2 OK (☎)	store the number





You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail.

For more about these characters, see the **More Here** guide.

Using Call Waiting





When you are on a call, an alert tone sounds to indicate that you have received a second call.

Press	To
1 	answer the new call
2 SWITCH ()	switch between calls
or	
LINK ()	connect the 2 calls
or	
 > End Call On Hold	end the call on hold

You must turn on call waiting to use the feature. To turn call waiting on or off:

Find the Feature  > **Settings** > **In-Call Setup**
> **Call Waiting**

Putting a Call On Hold

Press	To
HOLD () (if available)	put the call on hold
or	
 > Hold	

Transferring a Call








You can announce that you are transferring an active call to another party, or you can directly transfer the call.




Announce the Call Transfer

Find the Feature  > **Hold**

Press	To
1 keypad keys	dial the number where you are transferring the call
2 	call the number and speak to the person who answers
3 	open the menu
4  up or down	scroll to Transfer
5 SELECT ()	select Transfer
6 OK ()	confirm the transfer

Do Not Announce the Call Transfer

Find the Feature  > **Transfer**

Press	To
1 keypad keys	dial the number where you are transferring the call
2 	transfer the call



Phone Features

Menu Map

Main Menu



Games & Apps



Multimedia

- Themes
- Camera
- Pictures
- Sounds
- MotoMixer
- Videos



Tools

- SIM Apps
- Calculator
- Datebook
- Shortcuts
- Voice Records
- Alarm Clock
- Dialing Services
 - Call Barring
 - Fixed Dial
 - Service Dial
 - Quick Dial



Settings

- (see next page)



IM

- Log In
- Offline Convs
- Offline Settings
- Help



Web Access

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Web Sessions
- Browser Setup



Phonebook

Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times
- Call Cost
- Data Times
- Data Volumes



Messages

- Create Message
- Voicemail
- Message Inbox
- Email Msgs
- Browser Msgs
- Info Services
- Quick Notes
- Outbox
- Drafts



Chat

This is the standard main menu layout. Menu organization and feature names may vary on your phone. Not all features may be available on your phone.



Settings Menu



Personalize

- Home Screen
- Rhythm Lights
- Main Menu
- Color Style
- Greeting
- Wallpaper Open
- Wallpaper Closed
- Rotation Sound
- Rotation Animation
- Screen Saver
- Quick Dial



Ring Styles

- Ring Style
- style Detail
- Event Lights
- My Tones



Connection

- Bluetooth Link
- Sync



Call Forward

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Forward Status



In-Call Setup

- In-Call Timer
- Call Cost Setup
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- Status Light
- TTY Setup
- Scroll
- Language
- Battery Save
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available
- Active Line
- Battery Meter
- Other Information



Headset

Car Settings

- Auto Answer
- Auto Handsfree
- Power Off Delay
- Charger Time



Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



Security

- Phone Lock
- Lock Application
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords











Java Settings

- Java App Loader
- Java System
- Java Debug
- Start TCK
- Remove All Midlets

Feature Quick Reference












This section helps you locate features on your phone that are not described in this guide. For more detailed information, see the **More Here** guide (described on page 12).

Calling Features











Feature	Description
Conference Call	During a call:  > Hold , dial next number, press  , press LINK () 
Call Forwarding	Set up or cancel call forwarding:  > Settings > Call Forward 
Call Barring	Restrict outgoing or incoming calls:  > Settings > Security > Call Barring 
TTY Calls	Set up your phone for use with an optional TTY device:  > Settings > Initial Setup > TTY Setup 



Messages







Feature	Description
Send Text Message	<p>Send a text message:</p> <p> > Messages</p> <p>> Create Message</p> <p>> New Short Message</p> 
Send Multimedia Message	<p>Send a multimedia message:</p> <p> > Messages</p> <p>> Create Message > New Multimedia Msg</p> 
Send Letter	<p>Send a multimedia letter:</p> <p> > Messages</p> <p>> Create Message > New Letter</p> 
Use MMS Template	<p>Open an MMS template with preloaded media:</p> <p> > Messages</p> <p>> Create Message > MMS Templates</p> 
Read Message	<p>Read a new text or multimedia message that you have received:</p> <p>Press READ (Ⓜ).</p> 
Store Message Objects	<p>Go to a multimedia message slide, or highlight an object in a letter, then:</p> <p> > Store</p> 

Instant Messaging




Feature	Description
Log In	<p>Log in to instant messaging:</p> <p> > IM > Log In</p> 
Find Others Online	<p>After you log in:</p> <p>Select Contact List to see a list of other users.</p> 
Start Conversation	<p>Start a conversation:</p> <p>From your Contact List, highlight a name in Online Contacts, press SEND IM ().</p> 
Open Active Conversation	<p>Open a conversation in progress:</p> <p>From your Contact List, highlight a name in Conversations, press VIEW ().</p> 
End Conversation	<p>From the conversation display:</p> <p> > End Conversation</p> 
Log Out	<p>Log out of instant messaging:</p> <p>Select Log Out from the IM Online menu.</p> 



Chat









Feature	Description
Start Chat	Start a new chat session:  > Chat  > New Chat 
Receive Chat Request	When you receive a chat request: Press ACCEPT (Ⓜ) or IGNORE (Ⓛ). 
End Chat	During a chat session:  > End Chat 

Email








Feature	Description
Send Email Message	Send an email message:  > Messages > Create Message > New Email 
Read Email Message	Read a new email message that you have received: Press READ (Ⓜ). 










Phonebook

Feature	Description
Create Entry	Create a new phonebook entry:  > Phonebook  > New > Phone Number or Email Address
Create Group Mailing List	Create a group mailing list as a phonebook entry:  > Phonebook  > New > Mailing List
Dial Number	Call a number stored in the phonebook:  > Phonebook , highlight the phonebook entry, press  to call
Voice Dial Number	Voice dial a number stored in the phonebook: Press and release the voice key, and say the entry's name (within 2 seconds).
Set Ringer ID for Entry	Assign a distinctive ringer alert to a phonebook entry:  > Phonebook > entry  > Edit > Ringer ID > ringer name Note: The Ringer ID option is not available for entries stored on the SIM card.










Feature	Description
Set Category for Entry	<p>Set the category for a phonebook entry:</p> <p> > Phonebook > entry</p> <p> > Edit > Category > category name</p> <p>Note: The Category option is not available for entries stored on the SIM card.</p>
Set Category View	<p>Set a phonebook category view:</p> <p> > Phonebook</p> <p> > Categories > category view</p>
Set Category Light ID	<p>Set a distinctive light pattern to be displayed when you receive calls from phonebook entries in a specific category:</p> <p> > Phonebook</p> <p> > Categories, scroll to entry, press  > Edit > Light ID</p> <p>Note: The Light ID option is not available for entries stored on the SIM card.</p>







Feature	Description
Set Picture Caller ID View	View phonebook entries as text list, or with picture caller ID photos:  > Phonebook  > Setup > View by > list view Note: The Picture option is not available for entries stored on the SIM card.
Sort Phonebook List	Set the order in which phonebook entries are listed:  > Phonebook  > Setup > Sort by > sort order
Set Primary Number	Set the primary number for a phonebook entry with multiple numbers:  > Phonebook , scroll to entry, press  > Set Primary > phone number
1-Touch Dial	Set 1-touch dial to call entries stored in your phone memory phonebook or the SIM card phonebook:  > Settings > Initial Setup > 1-Touch Dial



Personalizing Features

Feature	Description
Ring Style	Change the ring alert for an event:  > Settings > Ring Styles > style Detail > event name
Ringer IDs	Activate distinctive ring alerts assigned to phonebook entries:  > Settings > Ring Styles > style Detail > Ringer IDs
Ring Volume	Set ringer volume:  > Settings > Ring Styles > style Detail > Ring Volume
Keypad Volume	Set keypad keypress volume:  > Settings > Ring Styles > style Detail > Key Volume
Clock View	Display an analog clock or digital time readout in the home screen:  > Settings > Personalize > Home Screen > Clock
Menu View	Display the main menu as graphic icons or as a text-based list:  > Settings > Personalize > Main Menu > View
Main Menu	Reorder your phone's main menu:  > Settings > Personalize > Main Menu > Reorder





Feature	Description
Show or Hide Menu Icons	Show or hide menu feature icons in the home screen:  > Settings > Personalize > Home Screen > Home Keys > Icons
Change Soft Keys & Menu Icons	Change soft key labels and menu feature icons in the home screen  > Settings > Personalize > Home Screen > Home Keys
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold  . Select a shortcut:  > Office Tools > Shortcuts > shortcut name




Menu Features

Feature	Description
Language	Set menu language:  > Settings > Initial Setup > Language







Feature	Description
Master Reset	Reset all options except unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Reset
Master Clear	Reset all options except unlock code, security code, and lifetime timer, and clear all user settings and entries except SIM card information:  > Settings > Initial Setup > Master Clear


Dialing Features

Feature	Description
Fixed Dial	Turn fixed dialing on or off:  > Settings > Security > Fixed Dial Use the fixed dial list:  > Office Tools > Dialing Services > Fixed Dial
Service Dial	Dial service phone numbers:  > Office Tools > Dialing Services > Service Dial









Feature	Description
Quick Dial	Dial preprogrammed phone numbers:   > Office Tools > Dialing Services > Quick Dial
DTMF Tones	Activate DTMF tones:  > Settings > Initial Setup > DTMF Send DTMF tones during a call: Press number keys. Send stored numbers as DTMF tones during a call: Highlight a number in the phonebook or recent calls lists, then press  > Send Tones .

Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.






The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.











Feature	Description
Call Times	View call timers:  > Recent Calls > Call Times 
In-Call Timer	Display time or cost information during a call:  > Settings > In-Call Setup > In-Call Timer 
Call Cost	View call cost trackers:  > Recent Calls > Call Cost 

Handsfree Features






Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Feature	Description
Speakerphone	Activate a connected external speakerphone during a call: Press SPEAKER  (if available) or  > Spkrphone On 
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > Settings > Car Settings or Headset > Auto Answer 



Feature	Description
Voice Dial (headset)	Enable voice dial with headset send/end key:  > Settings > Headset > Voice Dial 
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected:  > Settings > Car Settings > Auto Handsfree 
Power-Off Delay (car kit)	Set the phone to stay on for a specified time after the ignition is switched off:  > Settings > Car Settings > Power-Off Delay 
Charger Time (car kit)	Charge the phone for a specified time after the ignition is switched off:  > Settings > Car Settings > Charger Time 



Data and Fax Calls

Feature	Description
Send Data or Fax	Connect your phone to the device, then place the call through the device application. 
Receive Data or Fax	Connect your phone to the device, then answer the call through the device application. 
Talk Then Fax	Connect your phone to the device, enter the number, press  > Dialing Menu > Talk Then Fax , then press  to make the call. 

Network Features






Feature	Description
Network Settings	View network information and adjust network settings:  > Settings > Network 



Personal Organizer Features



Feature	Description
Create Datebook Event	Create a new datebook event: ☰ > Office Tools > Datebook , highlight the day, press the center select button, press ☰ > New
View Datebook Event	View or edit event details: ☰ > Office Tools > Datebook , highlight the day, press the center select button, press VIEW (⏏)
Event Reminder	View event reminder: VIEW (⏏) Dismiss event reminder: EXIT (⏏)
Copy Datebook Event to Another Device	Copy a datebook event to another phone, computer, or device: ☰ > Office Tools > Datebook , highlight the day, press the center select button, highlight the event, press ☰ > Send > Bluetooth
Set Alarm	Set an alarm: ☰ > Office Tools > Alarm Clock
Turn Off Alarm	Turn off alarm: Press DISABLE (⏏) or ⏏. Set 8-minute delay: Press SNOOZE (⏏).








Feature	Description
Create Voice Record	Create a voice record: Press and hold voice key, speak into the phone, release voice key. Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.
Play Voice Record	Play back a voice record:  > Office Tools > Voice Records > voice record
Calculator	Calculate numbers:  > Office Tools > Calculator
Currency Converter	Convert currency:  > Office Tools > Calculator  > Exchange Rate Enter exchange rate, press OK (⏹), enter amount, press  > Convert Currency .




Security




Feature	Description
SIM PIN	Lock or unlock the SIM card:  > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked .
Lock Application	Lock phone applications:  > Settings > Security > Lock Application

News and Entertainment

Feature	Description
Launch Micro-Browser	Start a micro-browser session:  > Web Access > Browser 
Download Objects from Web Page	Download a picture, sound, or phone theme from a Web page: Highlight the file, press SELECT (⏏), press STORE (⏏). 
Web Sessions	Select or create a Web session:  > Web Access > Web Sessions 



Feature	Description
Apply Phone Theme	Apply a grouped set of image and sound files to your phone:  > Multimedia > Themes > theme 
Download Game or Application (Micro-Browser)	Download a Java game or application with the micro-browser:  > Web Access > Browser , highlight the application, press SELECT (Ⓜ), press DOWNLOAD (Ⓜ) 
Download Game or Application (Computer)	Download a Java game or application from a computer: Connect your phone to the computer, press  > Settings > Java Settings > Java App Loader . 
Launch Game or Application	Launch a Java game or application:  > Games & Apps , highlight the application, press SELECT (Ⓜ) 
Manage Pictures	Manage pictures and animations:  > Multimedia > Pictures 
Manage Sounds	Manage ring tones, sounds that you have composed or downloaded:  > Multimedia > Sounds

Feature	Description
Manage Video Clips	Manage video clips:  > Multimedia > Videos
Edit Sounds With MotoMixer	Edit MIDI-based sound files that you can use with your phone:  > Multimedia > MotoMixer > [New Mix] or mix file name
Create Ring Tones	Create ring tones that you can use with your phone:  > Multimedia > Sounds > [New iMelody]
Camera	Adjust light level and other settings for the integrated camera:  > Multimedia > Pictures  > Pictures Setup



Specific Absorption Rate Data

The model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.24 W/kg, and when worn on the body, as described in this user guide, is 0.54 W/kg. (Body-worn measurements differ

among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Consumer Information on Wireless Phones from FDA



The U.S. Food and Drug Administration (FDA) provides consumer information on wireless phones at: <http://www.fda.gov/cellphones/qa.html>. Following are safety-related questions and answers discussed at this web site.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products--and at this point we do not know that there is--it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna .

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly

precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hand-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products (“Accessories”) and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products (“Software”) to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or

modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.

Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones 1-800-331-6456 Pagers 1-800-548-9954 Two-Way Radios and Messaging Devices 1-800-353-2729
Canada	All Products 1-800-461-4575
TTY	1-888-390-6456
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

DRAFT

Product Registration

Online Product Registration:

<http://www.motorola.com/warranty>

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

RF Energy Interference

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this

product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Wireless: The New Recyclable

Your wireless phone can be recycled. Recycling your wireless phone reduces the amount of waste disposed in landfills and allows recycled materials to be incorporated into new products.

The Cellular Telecommunications Industry Association (CTIA) and its members encourage consumers to recycle their phones and have taken steps to promote the collection and environmentally sound recycling of end-of-life wireless devices.

As a wireless phone user, you have an important role in ensuring that this phone is recycled properly. When it comes time to give this phone up or trade it in for a new one, please remember that the phone, the charger, and many of its accessories can be recycled. It's easy. To learn more about CTIA's Recycling Program for Used Wireless Devices in the United States, including information on where to recycle wireless devices near you, please visit www.recyclewirelessphones.com.

Index

A

- accessories 12, 74
- accessory connector port 1
- active line indicator 32
- active line, changing 61
- alarm clock 88
- alert
 - creating 92
 - defined 53
 - setting 17, 53, 81
 - turning off 18, 63
- animation
 - downloading 90
 - screen saver 57
 - viewing 91
 - wallpaper 56
- answering a call 18, 54
- application, locking and
 - unlocking 90
- automatic redial 61

B

- backlight 59
- barring calls 74
- battery
 - charging 16
 - extending battery life 13, 59

- installing 15
- level indicator 34

- Bluetooth 88
- brightness, setting 59
- browser. *See* micro-browser

C

- calculator 89
- call
 - alert, turning off 18, 63
 - answer options 54
 - answering 18
 - barring 74
 - barring password,
 - changing 48
 - call waiting 69
 - costs 85
 - dialed calls list 64
 - dialing 18
 - emergency number 63
 - ending 18
 - forwarding 74
 - hold 70
 - international access code
 - 64
 - making 18
 - received calls list 64
 - receiving 18

- ring style 17, 53, 81
- speakerphone 85
- timers 85
- transferring 70
- unanswered call 66
- Call Failed, Number Busy message 61
- call waiting 69
- caller ID 22, 52, 62, 80
- calling line identification.
See caller ID
- camera
 - settings 92
 - taking a photo 20
- category
 - light ID 79
 - phonebook entry 79
 - view 79
- center select button 34
- character chart 42
- chat 77
- clock
 - selecting analog or digital 81
 - setting 53
- codes
 - changing 48
 - default 48, 50
 - forgetting 50
- color, setting 59
- conference call 74
- customizing the menu 81

D

- data call 87
- date, setting 53
- datebook 88
- dialed calls list 64
- dialing a number 18, 83, 84
- display
 - backlight 59
 - brightness 59
 - color 59
 - description 29
 - home screen 29
 - language 82
 - personalizing 82
 - timeout 59
- distinctive ringer alert 81
- DTMF tones
 - activating 84
 - sending 84

E

- earpiece volume 17
- email 77
- emergency number 63
- end key 1
- ending a call 18
- Enter Unlock Code message 49
- event lights 28
- external display 47

F

- fax call 87
- 5-way navigation key 1, 34
- fixed dial 83
- forwarding calls 74

G

- games 91
- GPRS indicator 31
- groove tunes 92

H

- headset jack 1
- hold a call 70
- home keys, personalizing 82
- home screen
 - defined 29
 - selecting clock view 81

I

- IM 76
- incoming call
 - answering 18
 - forwarding 74
- Incoming Call message 62
- indicators
 - active line 32
 - battery level 34
 - GPRS 31
 - Java midlet 32

- location 33
- message 33
- message waiting 26
- messaging presence 32
- missed call 66
- ring style 33
- roam 31
- signal strength 31
- text case 40
- text entry method 33, 40
- transmission 31
- voicemail message 33, 68

- instant messaging. *See* IM
- international access code 64
- iTAP software 43

J

- Java applications 91
- Java midlet indicator 32
- joystick 1

K

- key
 - center select button 34
 - end 1
 - 5-way navigation 1, 34
 - left soft key 1, 30, 82
 - menu 1
 - power 1
 - right soft key 1, 30, 82

- send 1
- voice 1
- volume control 1, 17

keypad

- answering calls 54
- volume, setting 81

L

- language, setting 82
- left soft key
 - functions 1, 30
 - personalizing 82
- lights, rhythm 55
- line, changing 61
- location indicator 33
- lock
 - application 90
 - phone 49
 - SIM card 90

Low Battery message 34

M

- making a call 18
- master clear 83
- master reset 83
- menu
 - entering text 37
 - icons, changing in home screen 82
 - icons, converting to text 81

- icons, showing or hiding 82
- language, setting 82
- personalizing 81
- rearranging features 81
- using 34
- view, changing 81

menu key 1

message

- chat 77
- MMS template 75
- MMS, defined 23
- multimedia letter 75
- multimedia message 75
- reading 75
- text 75

message indicator 33

message waiting indicator 26

messaging presence indicator 32

micro-browser

- browser setup 90
- Java applications 91
- using 90
- Web sessions 90

missed call indicator 66

MMS template 75

MMS. *See* message

More Here guide 12

MotoMixer 92

multimedia letter, sending 75
multimedia message
 receiving 26
 sending 23, 75
multimedia messaging
 service. *See*
 message
my telephone number 19,
53

N

network settings 87
notepad 66
number
 storing your number 53
 viewing your number 19
numbers, entering 45

O

1-touch dial
 setting preference 80
 using 68
open to answer 54
opening
 animation 59
 sound 58
optional accessory, defined 12
optional feature, defined 12

P

passwords. *See* codes
phone
 active line indicator 32
 active line, changing 61
 alert, turning off 18, 63
 answer options 54
 clear stored information 83
 codes 48
 date, setting 53
 keypad, answering calls 54
 language, setting 82
 locking 49
 network settings 87
 open to answer 18
 reset all options 83
 ring style 17, 53, 81
 security code 48
 time, setting 53
 turning on/off 17
 unlock code 48
 unlocking 17, 49
phone number
 active line indicator 32
 active line, changing 61
 attaching 2 numbers 67
 international access code 64
 redialing 61
 storing in phonebook 78

- storing your number 53
- viewing your number 19
- phone theme 91
- phonebook
 - attaching 2 numbers 67
 - category for entry 79
 - category light ID 79
 - category view 79
 - dialing a number 78
 - group mailing list 78
 - 1-touch dial 68
 - picture ID 22, 52, 62, 80
 - primary number, setting 80
 - ringer ID 78, 81
 - sorting entries 52, 80
 - speed dial number 67
 - storing an entry 78
 - voice dialing 78
- photo
 - downloading 90
 - picture ID 22, 52, 62, 80
 - sending 20
 - taking 20
- picture
 - downloading 90
 - screen saver 57
 - viewing 91
 - wallpaper 56
- picture ID 22, 52, 62, 80
- PIN code
 - changing 48

- entering 90
- PIN2 code, changing 48
- power key 1
- predictive text entry 43
- primary text entry method 38

Q

- quick dial 84

R

- received calls list 64
- recent calls 64
- redial
 - automatic redial 61
 - busy number 61
- reference guide 12
- rhythm lights 55
- right soft key
 - functions 1, 30
 - personalizing 82
- ring lights 27
- ring style indicators 33
- ring style, setting 17, 53, 81
- ring tone
 - creating 92
 - downloading 90
 - editing with MotoMixer 92
 - managing 91
- ringer ID
 - setting 78
 - turning on/off 81

ringer volume, setting 17,
81

roam indicator 31

rotation

animation 59

sound 58

S

Safety

introduction 6

use while driving 8

screen saver 57

secondary text entry

method 38

security code

changing 48

default 48

send key 1

service dial 83

shortcuts 82

signal strength indicator 31

silent alert, setting 17, 53,
81

SIM Blocked message 17,
90

SIM card

defined 13

installing 13

locking 90

PIN code entry 17

PIN code, changing 48

PIN2 code, changing 48

precautions 13

SIM Blocked message
17, 90

SIM PIN code

changing 48

entering 90

SIM PIN2 code, changing
48

soft keys

functions 30

illustration 1

personalizing 82

sound

creating 92

downloading 90

managing 91

speakerphone

activating 85

automatic answer 85

speed dial 67

standby time, increasing 59

symbol chart 46

symbols, entering 45

T

tap method text entry 40

telephone number

storing your number 53

viewing your number 19

text

capitalization, changing

39

- character chart 42
- entering 37
- entry method, selecting 38
- entry method, setup 39
- iTAP software predictive text entry 43
- numeric method 45
- symbol chart 46
- symbol method 45
- tap method 40
- text case indicator 40
- text entry method
 - selecting 38
 - setup 39
- text entry method indicator 33, 40
- theme 91
- time, setting 53
- timers 85
- transfer a call 70
- transmission indicator 31
- travel charger 16
- TTY device 74

U

- unlock
 - application 90
 - phone 49
- unlock code
 - bypassing 50
 - changing 48

- default 48, 50
- entering 17

V

- vibrate alert
 - setting 17, 53, 81
 - turning off 18, 63
- video clip
 - downloading 75
 - managing 92
 - playing 26
- vObject 26
- voice dial 78, 86
- voice key
 - dialing a number 78
 - illustration 1
- voice record 89
- voicemail 68
- voicemail message indicator 33, 68
- volume
 - earpiece 17
 - keypad 81
 - ringer 17, 81
- volume keys 1, 17

W

- wallpaper 56
- warranty 100
- Web pages 90
- Web sessions 90
- Welcome 1

DRAFT

DRAFT



MOTOROLA

Wireless Phone Safety Tips

Safety is Your Most Important Call!

Your Motorola Wireless telephone gives you the powerful ability to communicate by voice—almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

- 1 Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- 2 When available, use a handsfree device.** If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ handsfree accessories available today.
- 3 Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call

at an inconvenient time, if possible, let your voice mail answer it for you.

- 4 Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- 5 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.** Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 6 Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.
- 7 Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.
- 8 Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.¹
- 9 Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want to do for you.¹

10 Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.¹

For more information, please call 1-888-901-SAFE or visit the CTIA Web site at www.wow-com.comTM

1. Wherever wireless phone service is available.

