



Excellence in Compliance Testing

---

## **Certification Exhibit**

**FCC ID: P2SBELTCLIP  
IC: 4171B-BELTCLIP**

**FCC Rule Part: 15.249  
IC Radio Standards Specification: RSS-210**

**ACS Project Number: 13-0249**

**Manufacturer: Neptune Technology Group, Inc.  
Model: 13253-000**

## **Manual**



Pilot Release 3.0

# Neptune Handheld System User's Manual

Pilot Release

Pilot Release



# Neptune Handheld System User's Manual

## Proprietary Rights Notice

This manual is an unpublished work and contains the trade secrets and confidential information of Neptune Technology Group Inc., which are not to be divulged to third parties and may not be reproduced or transmitted in whole or part, in any form or by any means, electronic or mechanical for any purpose, without the express written permission of Neptune Technology Group Inc. All rights to designs or inventions disclosed herein, including the right to manufacture, are reserved to Neptune Technology Group Inc.

The information contained in this document is subject to change without notice. Neptune reserves the right to change the product specifications at any time without incurring any obligations.

## Trademarks Used in This Manual

R900 is a registered trademark of Neptune Technology Group Inc. N\_SIGHT R900 is a trademark of Neptune Technology Group Inc. R900 Belt Clip Receiver is a trademark of Neptune Technology Group Inc. MRX920 is a trademark of Neptune Technology Group Inc. ARB is a registered trademark of Neptune Technology Group Inc.

Trimble Nomads is a registered trademark of Trimble Navigation Limited.

CE Net Windows, Windows 6.1, and Windows Mobile Device Center are registered trademarks of Microsoft Corporation.

Other brands or product names are the trademarks or registered trademarks of their respective holders.

## FCC Conformity

### CE5320B Handheld Computer

**\*NOTE:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense."



**Warning:** Changes or modifications to this device not expressly approved by Neptune Technology Group Inc. could void the user's authority to operate the equipment.

## Trimble Nomad Handheld Computer

### U.S.A.

This device complies with Part 15 of the FCC Rules. It is tested to comply with FCC standards for home or office use. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### R900 Belt Clip Receiver

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Neptune HR2650i

"NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help."



**Warning: Changes or modifications to this device not expressly approved by Neptune Technology Group Inc., could void the user's authority to operate the equipment.**

## RF Exposure (Intentional Radiators Only)

This device has been tested and complies with FCC SAR (Specific Absorption Rate) RF exposure compliance requirements for body-worn operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment is in direct contact with the body of the user under normal operating conditions. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## Industry Canada

### CE5320B Handheld Computer

This Class A digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareillage numérique de la classe A répond à toutes les exigences de l'interférence canadienne causant des règlements d'équipement. L'opération est sujette aux deux conditions suivantes: (1) ce dispositif peut ne pas causer l'interférence nocive, et (2) ce dispositif doit accepter n'importe quelle interférence reçue, y compris l'interférence qui peut causer l'opération peu désirée.

### Trimble Nomad

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par le Ministère des Communications du Canada.

### R900 Belt Clip Receiver

This Class B digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareillage numérique de la classe B répond à toutes les exigences de l'interférence canadienne causant des règlements d'équipement. L'opération est sujette aux deux conditions suivantes: (1) ce dispositif peut ne pas causer l'interférence nocive, et (2) ce dispositif doit accepter n'importe quelle interférence reçue, y compris l'interférence qui peut causer l'opération peu désirée.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, cet émetteur radio ne peut fonctionner à l'aide d'une antenne d'un type et maximum (ou moins) Gain approuvé pour l'émetteur par Industrie Canada. Pour réduire le risque d'interférence avec d'autres utilisateurs, le type d'antenne et son gain doivent être choisis afin que la puissance isotrope rayonnée équivalente n'est pas plus que ce qui est nécessaire pour une communication réussie.

### Neptune HR2650i

This Class A digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareillage numérique de la classe A répond à toutes les exigences de l'interférence canadienne causant des règlements d'équipement. L'opération est sujette aux deux conditions suivantes: (1) ce dispositif peut ne pas causer l'interférence nocive, et (2) ce dispositif doit accepter n'importe quelle interférence reçue, y compris l'interférence qui peut causer l'opération peu désirée.



## CE Conformity

The CE5320B meets the 89/336/EEC directive intent for Electromagnetic Compatibility Compliance when used with appropriate accessories. These are Class B products. In a domestic environment, these products may cause radio interference, in which case, the user may be required to take adequate measures.

The compliance was demonstrated to the following specifications as listed in the official Journal of the European Communities:

EN 50081-2, Emissions

EN 55022: Radiated, Class B

EN 55022: Conducted, Class B

EN 50082-2, Immunity

EN 61000-4-2: Electrostatic discharge

EN 61000-4-3: RF radiated

EN 61000-4-4: Fast transients

EN 61000-4-6: RF conducted

Neptune Handheld System  
User's Manual

Literature No. UM Handheld System  
11.13

Part No. 11769-016

Neptune Technology Group Inc.

1600 Alabama Highway 229

Tallassee, AL 36078

Tel: (334) 283-6555

Fax: (334) 283-7293

Copyright © 2005-2013

Neptune Technology Group Inc.

All Rights Reserved.

# Contents

---

## 1 Introduction

Conventions Used in this Manual .....	1-1
Screen Shots Used in this Manual .....	1-2
Differences in Screen Appearances .....	1-2
Product Support within the United States .....	1-3
Finding the Software Version Number .....	1-3
When Not Logged In .....	1-4
When Logged On to N_SIGHT R900 .....	1-4
Contacting Customer Support .....	1-5
Finding Information within the Manual .....	1-7
Where to Start .....	1-7
Meter Readers .....	1-8
Operators .....	1-9

## 2 Overview of the Neptune Handheld System

Typical Meter Reading Process .....	2-1
Daily Use of the Neptune Handheld System .....	2-2
Meter Readers .....	2-3
Operators .....	2-3
Basic Features of the CE5320 .....	2-4
Operating Environment .....	2-7
Rain and Water Resistance .....	2-7
Electromagnetic Resistance .....	2-7
Shock Resistance .....	2-8

Use of the CE5320 . . . . .	2-8
Basic Features of the Nomad . . . . .	2-9
Operating Environment . . . . .	2-12
Rain and Water Resistance . . . . .	2-12
Electromagnetic Resistance . . . . .	2-13
Shock Resistance . . . . .	2-13
Use of the Nomad . . . . .	2-13
The Display on the Handhelds . . . . .	2-13
The Handheld Display . . . . .	2-14
Menu Screens . . . . .	2-15
Data-Entry Screens . . . . .	2-16
Message Screens . . . . .	2-17
Navigating Through Screens . . . . .	2-17
Icon Bar . . . . .	2-19

### **3 Using the CE5320 Handheld**

Determining the System Configuration . . . . .	3-1
Local and Remote Communications . . . . .	3-2
Unpacking and Inspecting Equipment . . . . .	3-2
Setting Up the CE5320 . . . . .	3-3
One CE5320 and a Communication Cradle . . . . .	3-3
The Router . . . . .	3-4
Connecting to the Host Computer and Power Supply . . . . .	3-5
Connecting the Router, CE Handheld Cradle, and Power Supplies . . . . .	3-5
Configuring the CE5320 Handheld . . . . .	3-9
On the Host Computer . . . . .	3-9
On the CE5320 Handheld . . . . .	3-9

The Display and Keyboard .....	3-11
Learning the Keyboard .....	3-11
Function Keys .....	3-13
Number Keys .....	3-14
Direction Keys .....	3-14
Letter/Character Keys .....	3-15
Information Keys .....	3-16
Quick Keys .....	3-19
Adjusting System Settings .....	3-20
Calibrating the Stylus .....	3-20
Changing the Handheld Properties .....	3-22
Working with the Properties Screen .....	3-22
Configuring RF/Serial Properties .....	3-24
Logging In and Out of the N_SIGHT R900 .....	3-26
Logging Into N_SIGHT R900 on the CE5320 .....	3-26
Logging Out of N_SIGHT R900 .....	3-30

## 4 Using the Nomad Handheld

Unpacking the Nomad .....	4-1
Setting Up the Nomad .....	4-3
One Nomad and a Communication Cradle .....	4-3
The Router .....	4-4
Connecting to the Host Computer and Power Supply .....	4-4
Connecting the Router, Nomad Handheld Cradle, and Power Supplies .....	4-5
Configuring the Nomad Handheld .....	4-7
On the Host Computer .....	4-7
On the Nomad Handheld .....	4-7

The Display and Keyboard . . . . .	4-9
Learning the Keyboard. . . . .	4-9
Buttons and Keys . . . . .	4-10
Buttons. . . . .	4-11
Direction Buttons. . . . .	4-12
Number Buttons . . . . .	4-12
Nomad Screen Keyboard . . . . .	4-13
Changing the Size of the Keys. . . . .	4-13
Large Keys. . . . .	4-14
Small Keys . . . . .	4-14
Lowercase Keys. . . . .	4-14
Uppercase Keys. . . . .	4-14
Numeric and Symbols Keys. . . . .	4-15
Information Keys . . . . .	4-15
Direction Keys . . . . .	4-18
Combination Keys . . . . .	4-19
Adjusting System Settings . . . . .	4-22
Calibrating the Stylus . . . . .	4-23
Changing the Handheld Properties. . . . .	4-26
Working with the Properties Screen. . . . .	4-26
Configuring RF/Serial Properties . . . . .	4-28
Turning On and Off the Nomad . . . . .	4-30
Turning the Nomad On . . . . .	4-30
Turning the Nomad Off . . . . .	4-30
Logging In and Out of the N_SIGHT R900. . . . .	4-31
Logging Into N_SIGHT R900 on the Nomad. . . . .	4-31
Logging Out of N_SIGHT R900 . . . . .	4-36

## 5 Setting Up the R900 Belt Clip Receiver

R900 Belt Clip Receiver .....	5-1
R900 Belt Clip Receiver Overview .....	5-1
Nomad Handheld and R900 Belt Clip Receiver .....	5-2
Unpacking and Inspecting Equipment .....	5-2
R900 Belt Clip Receiver Components .....	5-3
Using the R900 Belt Clip Receiver .....	5-4
Understanding the R900 Belt Clip Receiver Modes .....	5-4
Accessing the R900 Belt Clip Receiver Status Screen .....	5-7
Understanding the R900 Belt Clip Receiver LED Operating Modes .....	5-8
Understanding the External Battery Charger Status .....	5-10
Pairing the Trimble Nomad to the R900 Belt Clip Receiver through the Bluetooth .....	5-10
Pairing the Trimble Nomad .....	5-10
Using the R900 Belt Clip Receiver to Read a Route .....	5-11
R900 Belt Clip Receiver Status Screen in N_SIGHT R900 .....	5-11
RF Performance Modes .....	5-12
Selecting the R900 Belt Clip Receiver Reading Mode .....	5-13
Using the R900 Belt Clip Receiver RF Test Mode .....	5-13
From the Login Screen .....	5-13
From the Route Screen .....	5-14
R900 Belt Clip Receiver SD Card Functionality .....	5-14
Updating R900 Belt Clip Receiver Firmware .....	5-15
How the Firmware Update Works .....	5-16

## 6 Gathering Route Data

The Reading Entry Screen . . . . .	6-2
Manually Collecting Meter Readings . . . . .	6-3
Entering a Reading . . . . .	6-3
Entering a Skip Code . . . . .	6-5
Entering Comment Codes . . . . .	6-7
Adding Free-Form Notes . . . . .	6-9
Leaving a Reading Blank . . . . .	6-11
Collecting RR Readings . . . . .	6-12
Collecting an RF Reading . . . . .	6-13
Working with Accounts . . . . .	6-14
Changing the Route Direction, Forward or Reverse . . . . .	6-14
Tagging an Account . . . . .	6-15
Finding Information . . . . .	6-17
Validating Readings . . . . .	6-20
Hi/Low Fails . . . . .	6-20
Removing a Reading . . . . .	6-22
Clearing a Skip Code . . . . .	6-24
Clearing a Comment Code, Customer Note, or Trouble Code . . . . .	6-26
Adding a New Meter to a Route . . . . .	6-27
Correcting or Changing Meter Information . . . . .	6-29
Finding and Displaying Reading-Entry Screens . . . . .	6-31
Moving Through Reading Entry Screens . . . . .	6-32
Reviewing Additional Information for an Account . . . . .	6-32
Location or Hazard Codes . . . . .	6-32
Statistics for Loaded Routes . . . . .	6-34
Moving Around Routes . . . . .	6-35

Resequencing Routes . . . . .	6-37
Resequence an Order . . . . .	6-37
Resequence While Collecting Readings . . . . .	6-39
Confirming the Resequencing . . . . .	6-39

## 7 Communicating with the Host Computer

Exchanging Information. . . . .	7-1
Exiting the Software . . . . .	7-1
Sending and Receiving . . . . .	7-4

## 8 Using the Field Programmer

Connecting the Mouse. . . . .	8-1
Connecting the Mouse to the CE5320 . . . . .	8-2
Connecting the Mouse to the Nomad. . . . .	8-4
Verifying the Handheld Recognizes the Mouse . . . . .	8-6
Starting Field Programmer . . . . .	8-6
Changing Your Password. . . . .	8-8
Programming the ProRead . . . . .	8-9
Configuring the ProRead . . . . .	8-9
Querying the ProRead. . . . .	8-14
Reading the ProRead Register . . . . .	8-15
Viewing Software and Firmware Information . . . . .	8-17
Programming the R900G Endpoint . . . . .	8-18
Configuring Gas . . . . .	8-18
Collecting the Initial Reading . . . . .	8-19
Querying the R900G Endpoint . . . . .	8-21



Using Command Gas . . . . .	8-23
Reading the R900G Endpoint Register . . . . .	8-24
Viewing Software and Firmware Information . . . . .	8-25
Networking Two Registers . . . . .	8-26
Programming Registers . . . . .	8-26
Programming the Network Primary Register . . . . .	8-26
Programming the Network Secondary Register . . . . .	8-27
Network Wiring . . . . .	8-27
Wiring the Registers . . . . .	8-28
Managing Formats . . . . .	8-28
Managing Formats for ProRead Registers . . . . .	8-28
Selecting ProRead Preferences . . . . .	8-29
Selecting a ProRead Format . . . . .	8-31
Editing a ProRead Format . . . . .	8-32
Using the New ProRead Format . . . . .	8-34
Deleting a Format for ProRead Registers . . . . .	8-34
Creating a New ProRead Format . . . . .	8-35
Using the Custom Format Screens . . . . .	8-37
Saving the Custom ProRead Format . . . . .	8-39
Creating Formats for R900G Endpoints . . . . .	8-39
Configuring Gas . . . . .	8-40
Selecting a Gas Format . . . . .	8-41
Adding or Editing a Gas Format . . . . .	8-43
Using the Gas Format . . . . .	8-48
Deleting a Format for R900G Endpoints . . . . .	8-48

## 9 Maintaining and Repairing the Neptune Handheld System

Recommended Maintenance . . . . .	9-1
Maintaining the CE5320 . . . . .	9-1
Cleaning the CE5320 . . . . .	9-1
Storing the CE5320 . . . . .	9-2
Short-term Storage . . . . .	9-2
Long-term Storage . . . . .	9-2
Checking the Battery Status . . . . .	9-3
Transporting the CE5320 . . . . .	9-4
Repairing the CE5320 . . . . .	9-4
Recharging the Battery . . . . .	9-5
Calibrating the CE5320 Battery . . . . .	9-5
Replacing the Battery . . . . .	9-9
Removing or Replacing the Handstrap . . . . .	9-11
Equipment . . . . .	9-11
Removing . . . . .	9-11
Replacing . . . . .	9-13
Maintaining the Nomad . . . . .	9-14
Battery Life . . . . .	9-14
Tips for Extending the Battery Life . . . . .	9-14
Charging the Battery . . . . .	9-15
Checking the Battery Status . . . . .	9-15
Replacing the Battery . . . . .	9-16
Calibrating the Nomad Battery . . . . .	9-17
Notification LEDs . . . . .	9-18
Maintaining the R900 Belt Clip Receiver . . . . .	9-19
Recommended Maintenance . . . . .	9-19
Battery Life . . . . .	9-19
Tips for Extending the Battery Life . . . . .	9-20

Charging the Battery . . . . .	9-20
Using the USB Port . . . . .	9-20
Charging Considerations . . . . .	9-21
Using the Charger . . . . .	9-22
Replacing the R900 Belt Clip Receiver Battery . . . . .	9-23
Removing the Battery . . . . .	9-23
Replacing the Battery . . . . .	9-24
LED Status Indication . . . . .	9-25
Checking the Battery Status . . . . .	9-26
Recommended Spare Parts . . . . .	9-26
Ordering Parts . . . . .	9-26
CE5320 Spare Parts . . . . .	9-26
Nomad Spare Parts . . . . .	9-26
R900 Belt Clip Receiver Spare Parts . . . . .	9-27
Returning your Neptune Handheld System . . . . .	9-28

## 10 Troubleshooting

Troubleshooting the Handheld . . . . .	10-1
Basic Tasks for the CE5320B Handheld . . . . .	10-2
Basic Tasks for the Nomad Handheld . . . . .	10-4
Reading-Entry Tasks . . . . .	10-5
Communication Tasks . . . . .	10-6
Starting the N_SIGHT R900 Program . . . . .	10-6
Loading Data Initially . . . . .	10-6
Missing Route Files . . . . .	10-7
Resetting the CE5320B . . . . .	10-7
Rebooting the CE5320B . . . . .	10-9
Rebooting When Logged into a Route in N_SIGHT R900 . . . . .	10-9
Rebooting When Logged off N_SIGHT R900 . . . . .	10-11

## **Appendix A**      Changing Volume Settings 1

Adjusting Customized Sounds. . . . .	A-1
Changing the Volume Setting on the CE5320 . . . . .	A-1
Changing the Volume Setting on the Nomad . . . . .	A-5

## **Appendix B**      Tokens List for Custom Format Screen 1

## **Appendix C**      Pressure Configuration Factor Indexes 1

Available Formats . . . . .	C-1
-----------------------------	-----

Glossary

Index

Pilot Release

*Notes:*

Pilot Release

# Figures

---

Figure	Title	Page
1.1	Sample Screens on the Neptune Handheld System .....	1-3
1.2	Login Screens on the Neptune Handheld System .....	1-4
1.3	Screen Information .....	1-5
1.4	Customer Support .....	1-6
2.1	Typical Meter Reading Process .....	2-2
2.2	CE5320B Handheld Features .....	2-4
2.3	Back of CE5320 Handheld .....	2-6
2.4	Nomad Handheld Features .....	2-9
2.5	Back of Nomad Handheld .....	2-11
2.6	Menu and Data-Entry Screen .....	2-14
2.7	Message Screens .....	2-15
2.8	Meter Position within Route .....	2-16
2.9	Navigating Screens .....	2-18
2.10	Search Screen .....	2-20
2.11	GoTo Screen .....	2-21
3.1	Cradle and Charging Kit .....	3-3
3.2	Cradle, Router, and Cables Needed .....	3-4
3.3	Connecting RJ-45 Ethernet Cable to Router, Port 1 .....	3-6
3.4	Connecting the Power Cable to the Communications Cradle .....	3-6
3.5	Connecting the Ethernet RJ-45 Cable to the Cradle .....	3-7
3.6	Network Cable Connection .....	3-7
3.7	Connecting Multiple Handheld Cradles to Router .....	3-8
3.8	N_SIGHT R900 Main Menu .....	3-10
3.9	N_SIGHT R900 Admin Menu .....	3-10
3.10	Learning the Keyboard .....	3-12
3.11	N_SIGHT R900 Main Menu .....	3-21
3.12	N_SIGHT R900 Stylus Calibration Screen .....	3-21
3.13	Stylus at Another Location on Screen .....	3-22
3.14	Handheld Properties Screen .....	3-23
3.15	N_SIGHT R900 F1 Menu .....	3-25
3.16	N_SIGHT R900 System Menu .....	3-25

Figure	Title	Page
3.17	RF/Serial Properties Screen .....	3-26
3.18	N_SIGHT R900 Message Area .....	3-27
3.19	N_SIGHT R900 Clock Error Screen .....	3-27
3.20	N_SIGHT R900 Set Date / Time Screen .....	3-28
3.21	N_SIGHT R900 Handheld Login Screen .....	3-28
3.22	N_SIGHT R900 Select Route Screen .....	3-29
3.23	N_SIGHT R900 Initializing Message .....	3-29
3.24	N_SIGHT R900 Reading Entry Screen .....	3-30
4.1	Nomad and Cradle Charger .....	4-3
4.2	Connecting RJ-45 Ethernet Cable to Router, Port 1 .....	4-5
4.3	Nomad Communications Cradle Connections .....	4-6
4.4	Network Cable Connection .....	4-6
4.5	N_SIGHT R900 Main Menu .....	4-7
4.6	N_SIGHT R900 Admin Menu .....	4-8
4.7	Learning the Keyboard .....	4-10
4.8	Nomad Large Keyboard .....	4-14
4.9	Nomad Small Keyboard .....	4-14
4.10	Nomad Lowercase Keyboard .....	4-14
4.11	Nomad Uppercase Keyboard .....	4-15
4.12	Nomad Numeric and Symbols Keyboard .....	4-15
4.13	N_SIGHT R900 Main Menu .....	4-23
4.14	N_SIGHT R900 Stylus Calibration Screen .....	4-24
4.15	Stylus at Another Location on Screen .....	4-25
4.16	Handheld Properties Screen .....	4-26
4.17	N_SIGHT R900 F1 Menu .....	4-28
4.18	N_SIGHT R900 System Menu .....	4-29
4.19	RF/Serial Properties Screen .....	4-29
4.20	N_SIGHT R900 Message Area .....	4-32
4.21	N_SIGHT R900 Clock Error Screen .....	4-33
4.22	N_SIGHT R900 Set Date / Time Screen .....	4-33
4.23	N_SIGHT R900 Handheld Login Screen .....	4-34
4.24	N_SIGHT R900 Select Route Screen .....	4-35

Figure	Title	Page
4.25	N_SIGHT R900 Initializing Message .....	4-35
4.26	N_SIGHT R900 Reading Entry Screen .....	4-36
5.1	Meter Reading Cycle .....	5-2
5.2	R900 Belt Clip Receiver Components .....	5-3
5.3	R900 Belt Clip Receiver Status Screen .....	5-11
5.4	R900 Belt Clip Receiver RF Mode Screen .....	5-13
5.5	R900 BCR RF Mode Screen from Route .....	5-14
5.6	Tab within N_SIGHT R900 Utilities .....	5-15
5.7	R900 Belt Clip Receiver Firmware Tab with Update Options .....	5-16
6.1	N_SIGHT R900 Reading Entry Screen .....	6-2
6.2	N_SIGHT R900 Reading Entry Field .....	6-4
6.3	N_SIGHT R900 Skip Order Screen .....	6-5
6.4	N_SIGHT R900 Skip Order Reason Codes .....	6-6
6.5	N_SIGHT R900 Skipped Read .....	6-6
6.6	N_SIGHT R900 Coded Notes Screen .....	6-7
6.7	Drop-down Selection List of Coded Notes .....	6-8
6.8	N_SIGHT R900 Comment Code .....	6-8
6.9	Viewing Comment Codes .....	6-9
6.10	N_SIGHT R900 Free Form Notes Screen .....	6-10
6.11	Leaving a Meter Reading Blank .....	6-11
6.12	N_SIGHT R900 Manual Reading Screen .....	6-12
6.13	N_SIGHT R900 RF Reading Screen .....	6-13
6.14	Left to Right Route Direction Icon .....	6-14
6.15	Right to Left Route Direction Icon .....	6-15
6.16	Tag Account Icon .....	6-16
6.17	Tagged Account .....	6-16
6.18	N_SIGHT R900 Find Order Screen .....	6-17
6.19	Search Display Fields .....	6-18
6.20	Search Screen Enter Multiple Values .....	6-18
6.21	Search Screen Multiple Values to Match .....	6-19
6.22	Reading Outside High/Low Range .....	6-20
6.23	N_SIGHT R900 Hi / Lo / No / Inact Screen .....	6-21



Figure	Title	Page
6.24	Reading to be Cleared .....	6-22
6.25	N_SIGHT R900 Reset Order Screen .....	6-23
6.26	Reset Reading .....	6-23
6.27	Reading to be Unskipped .....	6-24
6.28	N_SIGHT R900 Undo Skipped Order Screen .....	6-25
6.29	Reading Field after Unskipped .....	6-25
6.30	Screen Showing Code Attached .....	6-26
6.31	Screen Where Code Was Entered .....	6-27
6.32	N_SIGHT R900 Meter Process Menu .....	6-28
6.33	N_SIGHT R900 New Meter Screen .....	6-28
6.34	Meter Information to Change .....	6-29
6.35	N_SIGHT R900 Meter Process Menu .....	6-30
6.36	N_SIGHT R900 Change Meter Info Screen .....	6-30
6.37	Additional Meter Information to View .....	6-33
6.38	Location and Hazard Codes Screen .....	6-33
6.39	For Statistics for Loaded Routes .....	6-34
6.40	Statistics for Loaded Routes Screen .....	6-35
6.41	N_SIGHT R900 GoTo Screen .....	6-36
6.42	Account to Resequence .....	6-37
6.43	Resequence Screen .....	6-38
6.44	Inline Resequencing Screen .....	6-39
6.45	Confirm Resequencing Screen .....	6-40
7.1	Confirm Resequencing Screen .....	7-2
7.2	N_SIGHT R900 Handheld Logout Screen .....	7-3
7.3	Hold Routes Screen .....	7-3
7.4	N_SIGHT R900 Login Screen .....	7-4
7.5	Synchronize Button .....	7-5
8.1	Field Programmer Mouse for the CE5320 .....	8-2
8.2	Connecting Mouse to CE5320 .....	8-3
8.3	Field Programmer Mouse for the Nomad .....	8-4
8.4	Connecting Mouse to Nomad .....	8-5
8.5	Field Programmer Menu .....	8-7

Figure	Title	Page
8.6	Field Programmer Password Screen	8-7
8.7	Change Password Screen	8-8
8.8	ProRead Configuration Screen	8-10
8.9	Format Name Selection List	8-10
8.10	Otr Selection List	8-11
8.11	Program Result -- Pass Screen	8-12
8.12	ProRead Program Details Screen	8-13
8.13	ProRead Query Screen	8-14
8.14	ProRead Query Results	8-15
8.15	ProRead Read Screen	8-16
8.16	ProRead Reading Result Screen	8-16
8.17	ProRead Software and Firmware Information	8-17
8.18	Gas Meter Configuration Screen	8-18
8.19	Gas Program Screen	8-19
8.20	Format Name Selection List	8-19
8.21	Program Result – Sending Data	8-20
8.22	Program Result – Pass Screen	8-20
8.23	Gas Query Screen	8-21
8.24	Gas Query Results	8-22
8.25	Command Gas Screen	8-23
8.26	Gas Read Screen	8-24
8.27	Gas Reading Result Screen	8-25
8.28	Gas Software and Firmware Information	8-26
8.29	Field Programmer Menu	8-29
8.30	ProRead Preferences Screen	8-30
8.31	Select Formats Screen	8-31
8.32	ProRead New Format Screen	8-32
8.33	Default ProRead New Format Screen	8-35
8.34	New Button Available	8-36
8.35	Custom Format 1 Screen	8-37
8.36	Custom Format 2 Screen	8-38
8.37	Configure Gas Password Screen	8-40

Figure	Title	Page
8.38	Gas New Format Screen .....	8-41
8.39	Gas New Format Selection List .....	8-43
8.40	Gas Values Shown on New Format Screen .....	8-44
8.41	Gas New Format Screen – Blank .....	8-47
9.1	Battery Status Indicator on CE5320 .....	9-3
9.2	Handheld Battery Information .....	9-6
9.3	N_SIGHT R900 Main Menu .....	9-7
9.4	N_SIGHT R900 Admin Menu .....	9-7
9.5	N_SIGHT R900 Calibrate Battery Screen .....	9-8
9.6	Remove the Captive Screws .....	9-9
9.7	Inserting the Battery .....	9-10
9.8	Removing Screw From Back Panel .....	9-11
9.9	Removing the Captive Screws .....	9-12
9.10	Opening the Velcro Closure .....	9-13
9.11	Battery Status Indicator on Nomad .....	9-15
9.12	Changing the Nomad Battery .....	9-16
9.13	External Battery Charger .....	9-22
9.14	R900 Belt Clip Receiver Side View .....	9-23
9.15	Latch Direction to Open .....	9-23
9.16	Battery Inside Compartment .....	9-24
9.17	R900 Belt Clip Receiver Battery Inside Compartment .....	9-25
10.1	N_SIGHT R900 Login Screen .....	10-7
10.2	N_SIGHT R900 Main Menu .....	10-8
10.3	N_SIGHT R900 Admin Menu .....	10-8
10.4	Reset Warning Message .....	10-9
10.5	N_SIGHT R900 F1 Menu .....	10-10
10.6	N_SIGHT R900 Handheld Menu .....	10-10
10.7	Reboot Handheld Screen .....	10-11
A.1	N_SIGHT R900 Main Menu .....	A-1
A.2	N_SIGHT R900 Admin Menu .....	A-2
A.3	CE.Net Windows Explorer Screen .....	A-2
A.4	Windows CE Main Screen .....	A-3

Figure	Title	Page
A.5	Selecting Control Panel .....	A-3
A.6	Windows Control Panel Menu .....	A-3
A.7	Volume & Sounds Properties Screen .....	A-4
A.8	Nomad Volume Control .....	A-6
A.9	Nomad Scrollbar and Radio Buttons .....	A-6

Pilot Release

*Notes:*

Pilot Release

# Tables

---

Table	Title	Page
2.1	N_SIGHT R900 Display Icons .....	2-19
4.1	Nomad Functionality .....	4-20
5.1	R900 Belt Clip Receiver Power .....	5-4
5.2	R900 Belt Clip Receiver Modes .....	5-5
5.3	R900 Belt Clip Receiver Software Functions .....	5-7
5.4	R900 Belt Clip Receiver LED Operating Modes .....	5-8
5.5	External Battery Charger LED .....	5-10
7.6	Meter Input Drive Rotation .....	8-45
9.1	Calibration Error Messages .....	9-18
9.2	Calibration Error Messages .....	9-18
8.3	Charging Considerations .....	9-21
9.4	LED Status Indicators .....	9-25
8.5	CE5320 Part Numbers .....	9-26
9.6	Nomad Part Numbers .....	9-27
8.7	R900 Belt Clip Receiver Part Numbers .....	9-27
B.1	Custom Format Tokens .....	B-1
C.1	Pressure Configuration Factor Index Table .....	C-1

Pilot Release

***Notes:***

Pilot Release

# 1 Introduction

---

The *Neptune Handheld System User's Manual* describes how to use the following components of the Neptune handheld system to collect route data. It also explains how to exchange route and account data with the host computer for the N\_SIGHT™ R900® host software. Descriptions for the following devices and procedures for using them are included in this manual.

- CE5320 Handheld (CE5320)
- Trimble® Nomad® (Nomad)
- Neptune Field Programmer
- R900® Belt Clip Receiver (BCR)

This manual also describes how to maintain these devices, also referred to as the Neptune handheld system.

---

## Conventions Used in this Manual

This manual uses the following icons and typographic conventions to identify special information.



The Warning icon identifies actions that can injure the user or permanently damage the product.



The Caution icon identifies important information that is critical to successfully operating N\_SIGHT R900.





The Note icon identifies information that clarifies a point within the text.



The Setup icon identifies a part of the application program that needs only periodic adjustment.



The Meter Reader icon identifies tasks that are usually performed by a meter reader.



The Operator icon identifies tasks that are usually performed by a N\_SIGHT R900 operator.

Save data

Messages that appear in the display of the handheld are in *Courier* type.

Admin

Keyboard entries are in **Courier bold** type.

Save As

Menu titles and menu selections shown in the display of the handheld are in **bold** type.

enter

Keys that appear on the face of the handheld are in SMALL CAPS.

---

## Screen Shots Used in this Manual

In order to be consistent with the representation of all the screens in this manual, the screens used in this guide are captured on the Nomad. However, they appear very similarly on the other handheld device.



Except for the chapter dedicated to setting up and using the CE5320B, this manual uses the Nomad screens. However, the CE5320B screens are very similar.

## Differences in Screen Appearances

The most predominant differences in the appearances of the screens on both handheld devices are the following.

- CE5320 screens appear in a landscape or horizontal format.
- The Nomad screens appear in a portrait or vertical format.

Figure 1.1 demonstrates the differences in the screen appearances.

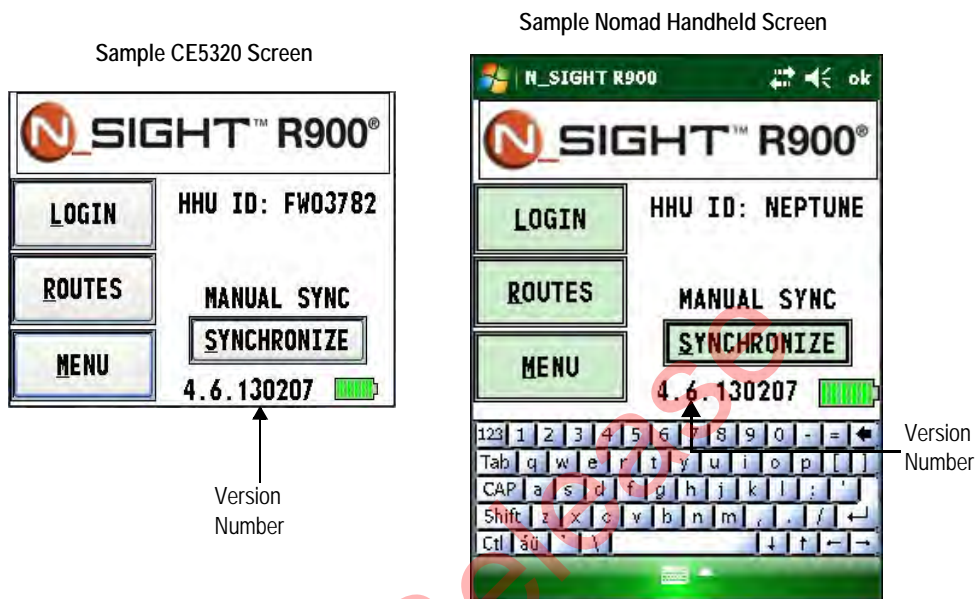


Figure 1.1 Sample Screens on the Neptune Handheld System

Although the style of the screens appear differently, the information on both the CE5320B and the Nomad screens is identical.

## Product Support within the United States

Neptune offers you different ways to obtain high-quality, responsive technical support. However, before contacting Neptune, it is important that you know the version number of the software that your handheld uses. This information is useful to the support technician who helps you.

### Finding the Software Version Number

The procedures for finding the software version number differ depending on whether or you have logged on to N\_SIGHT R900.

## When Not Logged In

If you have not yet logged on to N\_SIGHT R900, complete the following.

- 1 Turn **ON** the handheld.

The handheld initializes N\_SIGHT R900, and this process can take a few minutes.

- 2 Go to the Login screen.

The Login screen displays the version number at the bottom of the screen as shown in Figure 1.3.



Figure 1.2 Login Screens on the Neptune Handheld System

## When Logged On to N\_SIGHT R900

When you have logged on to N\_SIGHT R900, you can find the version number by completing the following from any screen.

- From any N\_SIGHT R900 screen, press **Ctrl + I**.

The Screen Information appears as shown in Figure 1.3.



Figure 1.3 Screen Information

- View the version number which appears directly below the handheld ID on this screen.

This screen contains all the vital information you need to know about the handheld.

---

## Contacting Customer Support

Within North America, Neptune Customer Support is available Monday through Friday, 8:00 AM to 7:00 PM Eastern Standard Time by telephone, email, or fax.

To contact Customer Support by phone, call (800) 647-4832. You will be directed to the appropriate team of specialists. These specialists are dedicated to assisting you until the issue is resolved to your satisfaction.

When placing a call, be prepared to give the following information:

- The exact wording of any message that appears on the screen of the computer or the handheld device
- A description of what happened and what you were doing when the problem occurred
- A description of how you tried to solve the problem
- Your utility's name

You will be directed according to the options shown in Figure 1.4.

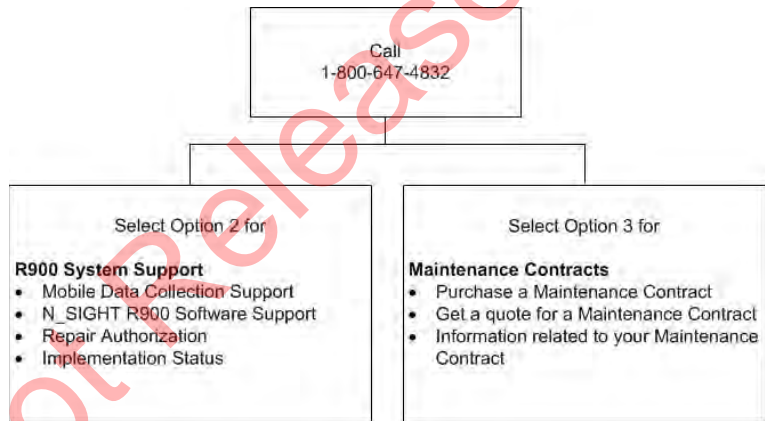


Figure 1.4 Customer Support




To contact Customer Support by fax, send a description of your problem to (334) 283-7497. Please include on the fax cover sheet the best time of day for a Customer Support Specialist to contact you.

To contact Customer Support by e-mail, send your information to [hhsupp@neptunetg.com](mailto:hhsupp@neptunetg.com).

---

## Finding Information within the Manual

This manual is written for two basic types of users: meter readers and operators. To help both types of users find the information they need, this manual uses the following symbols to identify different types of tasks:

- Tasks usually performed by meter readers are indicated by the **Meter Reader**  icon.
- Tasks usually performed by N\_SIGHT R900 operators are indicated by the **Operator**  icon.
- Tasks that are performed occasionally are indicated by the **Setup**  icon.

In addition to looking for these symbols, use the following sections to find information quickly:

- If you have a specific task or item in mind, look in the *Index*.
- Look through the *Contents* to find tasks and topics whose titles are not familiar to you.
- If you are unsure of a term, look it up in the *Glossary*.

---

## Where to Start

The best way for you to use this manual depends upon your responsibilities in your company's meter reading process and how familiar you are with using a handheld computer.

- **Meter readers** typically gather meter readings and other information about meters on a route. They most likely use the Neptune handheld system to gather meter readings and route data and to get route assignments.
- **Operators** typically manage the daily tasks of a meter reading process. They most likely use a one of the Neptune handheld devices to upload route data from it to their computer and to download billing and customer information from their computer to the handheld device.



## Meter Readers

If this is the first time that you have used the handheld, read one of the following chapters to get a general understanding of how the display and keys work.

You will probably find the following chapters of the manual most useful.

- Chapter 2, "Overview of the Neptune Handheld System" describes the basic features and functions of the handhelds; introduces you to the Nomad handheld computer; how the handheld is incorporated into the Neptune handheld system host software; and how it is used by both meter readers and operators.
- Chapter 3, "Using the CE5320 Handheld" provides help to set up and get started with your CE5320 handheld so that you can begin collecting information from the field and exchanging information with the host computer.
- Chapter 4, "Using the Nomad Handheld" provides help to set up and get started with your Nomad handheld so that you can begin collecting information from the field and exchanging information with the host computer.
- Chapter 5, "Setting Up the R900 Belt Clip Receiver" provides basic instructions for unpacking and inspecting the Belt Clip. It also gives instructions for setting it up and becoming familiar with the display, pairing it with the handheld, and usage.
- Chapter 6, "Gathering Route Data" provides instructions for using the handheld device to collect meter readings and route data.
- Chapter 7, "Communicating with the Host Computer" provides procedures for exchanging information with the host computer and exiting the software.
- Chapter 8, "Using the Field Programmer" provides fundamental instructions for operating the Field Programmer including how to connect the mouse, programming the device, and operating the Field Programmer.

- Chapter 10, "Troubleshooting" helps you solve any issues or problems that can occur when using the Neptune handheld system.
- Appendix A, "Changing Volume Settings" provides instructions for adjusting customized sounds and the volume control setting.
- Appendix B, "Tokens List for Custom Format Screen" provides a list of the tokens that are constants and special characters used with the Field Programmer as part of a ProRead™ format.
- Appendix C, "Pressure Configuration Factor Indexes" provides a list used for selecting gas formats available from American Meter, Sensus, and Actaris when using the Field Programmer.
- "Glossary" provides a list of terms used in this manual that can be useful when reading and learning how to use the handheld device and software.

 Operators

If this is the first time that you have used the CE5320, read Chapter 2, "Overview of the Neptune Handheld System" to get a general understanding of how the display and keys work. You will probably find the following chapters of the manual most useful.

- Chapter 3, "Using the CE5320 Handheld" provides help to set up and get started with your CE5320 handheld so that you can begin collecting information from the field and exchanging information with the host computer.
- Chapter 4, "Using the Nomad Handheld" provides help to set up and get started with your Nomad handheld so that you can begin collecting information from the field and exchanging information with the host computer.
- Chapter 5, "Setting Up the R900 Belt Clip Receiver" provides basic instructions for unpacking and inspecting the R900 BCR. It also gives instructions for setting it up and becoming familiar with the display, pairing it with the handheld, and usage.



- Chapter 7, "Communicating with the Host Computer" provides procedures for exchanging information with the host computer and exiting the software.
- Chapter 9, "Maintaining and Repairing the Neptune Handheld System" provides instructions for maintaining and repairing the CE5320, the Nomad, and the R900 BCR and includes recommended spare parts. It also gives instructions for packing and shipping a device to Neptune should you ever need to return any unit for repair.
- Chapter 10, "Troubleshooting" helps you to solve any issues or problems that can occur when using the Neptune handheld system.
- Appendix A, "Changing Volume Settings" provides instructions for adjusting customized sounds and the volume control setting.
- "Glossary" provides a list of terms used in this manual that can be useful when reading and learning how to use the handheld device and software.

Pilot Release

## 2 Overview of the Neptune Handheld System

---

This chapter is designed to introduce you to the Neptune handheld system handheld computer. It will explain how the handheld is incorporated into the N\_SIGHT R900 host software, and how it will be used by both meter readers and operators. It will also help you become familiar with the basic features and functions the handheld computer offers.

---

### Typical Meter Reading Process

By using the handheld computer in conjunction with N\_SIGHT R900 software, the meter reading process has an effective tool in collecting and distributing information that is critical to managing daily tasks.

Meter readers use the handheld to gather route information. Operators use N\_SIGHT R900 to collect route information from the handheld and to collect billing information from the billing computer. Once this information is stored on an operator's computer, called the host computer, operators use N\_SIGHT R900 to make route assignments and to send updated information to the handheld and to the billing computer.

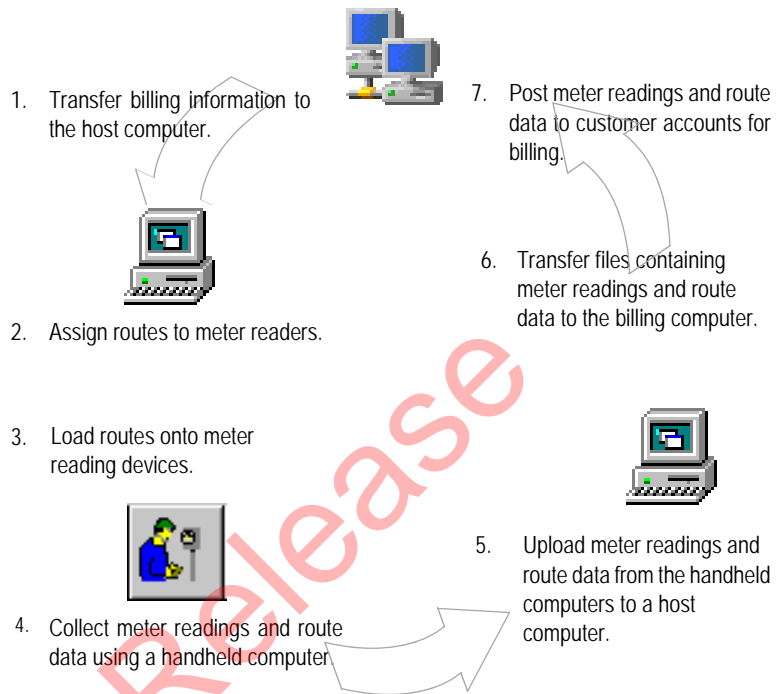


Figure 2.1 Typical Meter Reading Process

---

## Daily Use of the Neptune Handheld System

Because the Neptune handheld system helps users collect and pass on different types of information needed by a meter reading process, how you use it depends upon your responsibilities in your meter reading process. The following topics describe how meter readers and operators typically use the handheld to complete their work.



## Meter Readers

During a typical day, meter readers use the handheld to get route assignments and to gather route data. Meter readers pick up a handheld in the morning and review route assignments that were downloaded the previous afternoon by an operator. Then, they use it to gather meter readings and other data from the assigned routes. After they complete their routes, meter readers return the handheld to the office where an operator uploads the readings and route data onto the computer and then downloads route assignments and other data to it.



## Operators

Typically, operators connect the handheld so that it can communicate with their computer. Once the handheld is connected, operators set up the software so that it can exchange information with their computer, called the host computer.

During a typical day, operators make route assignments and collect billing information from the billing computer. Toward the end of the day, after meter readers complete their routes and return the handhelds to the office, operators exchange information with them. During a typical information exchange, route data is unloaded from the handheld at the same time that the next day's assignments and updated billing information are loaded to it.

The operator makes sure that the handheld is fully charged and ready for use by a meter reader.

## Basic Features of the CE5320

In addition to an environmental seal that protects the unit from dust, dirt, and water, the CE5320 includes the following features:

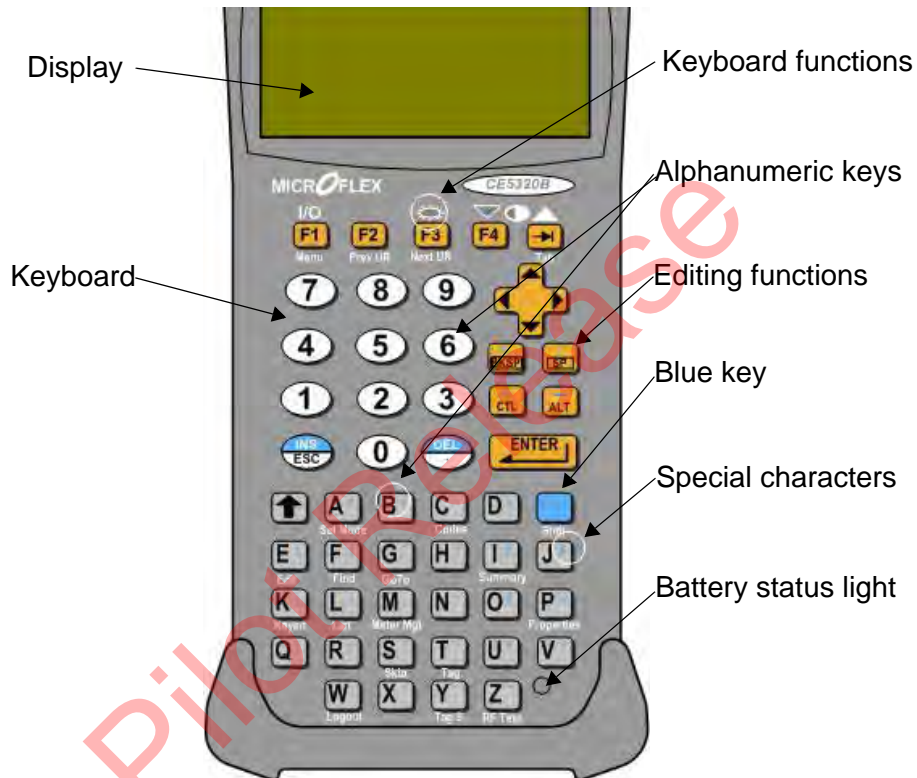


Figure 2.2 CE5320B Handheld Features

- **Display**—shows up to 33 lines of text and allows touch-screen entry. In addition, you have the option of backlighting the display so that information is visible in low light.
- **Keyboard**—uses 51 multifunctional keys that include letter, number, character, task, and menu keys. The tactile design of the keys and the tone that sounds when a key is pressed help to reduce errors. In addition, if you have the Keyboard Backlight option, the keys can be illuminated making them easy to read in low light.

- **Ethernet Communication Port**—an RJ-45 Ethernet connector on the cradle allows you to connect the CE5320 using an RJ-45 Ethernet cable to a variety of devices. This capability provides for route assignments and route data to be sent to the CE5320, and meter readings and route information to be retrieved from it.
- **Battery Status Light**—lets you know when the battery is fully charged. If the light is red, the battery needs recharging and if the light is green, the battery is charged and the handheld is operational.



Do not attempt to remove the back panel of the CE5320. Attempting to repair the unit on your own voids the warranty by breaking the warranty label which covers a screw on the back of the unit. If the CE5320 does not function, contact a Neptune support technician for assistance. For help in contacting Neptune, refer to the topic “Contacting Customer Support,” on page 1-5.

Pilot Release



Figure 2.3 Back of CE5320 Handheld

- **Handstrap**—makes it easy to carry the CE5320.
- **Stylus**—allows for ease of use for the touch screen on the CE5320.
- **Battery Compartment**—holds a lithium-ion battery pack that is rated for a usage up to 500 charge cycles or 2 years - whichever occurs first.
- **Battery Recharge Contacts**—recharges the battery when the CE5320 rests in a communication cradle.

The CE5320 also offers the following:

- **Suspend Mode**—puts the CE5320B into a low-power state.
- **Manual Off Feature**—allows operators to turn the CE5320 off immediately.
- **Automatic Return Feature**—shows the information that was last in the display after the handheld is turned off manually or automatically.
- **Customized Sounds**—can be used as warning signals or as a prompt.

## Operating Environment



Long exposure to temperatures below  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ) can damage the display. Prolonged exposure to temperatures above  $50^{\circ}\text{C}$  ( $122^{\circ}\text{F}$ ) will damage the battery and above  $60^{\circ}\text{C}$  ( $140^{\circ}\text{F}$ ) can permanently damage the unit.

The recommended temperature range for operating the CE5320 is from  $-20^{\circ}\text{C}$  to  $+50^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$  to  $+122^{\circ}\text{F}$ ). Short exposure to temperatures lower or higher than these can cause the display to turn very dark or very light until the unit returns to the recommended operating temperature range.

## Rain and Water Resistance



Water resistance can be impaired if the door of the battery compartment or top cover is improperly closed or if the gaskets have deteriorated.

The handheld withstands exposure to rain without allowing water to seep inside the unit. It is designed to endure occasional immersions, and the unit floats making it easy to retrieve if dropped in water.

## Electromagnetic Resistance

The CE5320 performs well in most common environments where electromagnetic fields are present. Examples of these environments include areas near power-transmission lines, electric motors, transformers, compressors, and low-power radio transmitters.

Performance can be degraded when using a communication cable, a peripheral, such as a printer, or a battery charger under these conditions.



## Shock Resistance

When the unit is operated within the specified temperature range, it can withstand occasional drops from up to two meters (six feet) onto a hard surface.

---

## Use of the CE5320

To set up and begin using your CE5320 handheld, go to “Using the CE5320 Handheld,” on page 3-1.

Pilot Release

## Basic Features of the Nomad

In addition to an environmental seal that protects the unit from dust, dirt, and water, the Nomad includes the following features.



Figure 2.4 Nomad Handheld Features

- **Display**—shows up to 33 lines of text and allows touch-screen entry. In addition, you have the option of backlighting the display so that information is visible in low light.
- **Keyboard**—uses 51 multifunctional keys that include letter, number, character, task, and menu keys. The tactile design of the keys and the tone that sounds when a key is pressed help to reduce

errors. In addition, if you have the Keyboard Backlight option, the keys can be illuminated making them easy to read in low light.

- **Ethernet Communication Port**—an RJ-45 Ethernet connector on the cradle allows you to connect the Nomad using an Ethernet cable to a variety of devices. This capability provides for route assignments and route data to be sent to the Nomad, and meter readings and route information to be retrieved from it.
- **Battery Status Light**—lets you know when the battery is fully charged. If the light is red, the battery needs recharging and if the light is green, the battery is charged and the handheld is operational.



Do not attempt to remove the back panel of the Nomad. Attempting to repair the unit on your own voids the warranty by breaking the warranty label which covers a screw on the back of the unit. If the Nomad does not function, contact a Neptune support technician for assistance. For help in contacting Neptune, refer to the topic “Contacting Customer Support,” on page 1-5.



Figure 2.5 Back of Nomad Handheld

- **Handstrap**—makes it easy to carry the Nomad.
- **Battery Compartment**—holds a lithium-ion battery pack that is rated for up to 500 charge cycles or 2 years - whichever occurs first.
- **Stylus**—makes it easy to use the touchscreen display. Can be calibrated for the user's own personal touch.

The Nomad also offers the following:

- **Suspend Mode**—puts the Nomad into a low-power state.
- **Manual Off Feature**—allows operators to turn the Nomad off immediately.
- **Automatic Return Feature**—shows the information that was last in the display after the handheld is turned off manually or automatically.
- **Customized Sounds**—can be used as warning signals or as a prompt.

## Operating Environment



The Trimble Nomad has gone through multiple tests and meets MIL-STD-810F military standards. Long exposure to temperatures below -20°C (-4°F) can damage the display. Prolonged exposure to temperatures above 50°C (122°F) will damage the battery and above 60°C (140°F) can permanently damage the unit.

The recommended temperature range for operating the Nomad is from -30C to 60C (-22F to 140F). Short exposure to temperatures lower or higher than these can cause the display to turn very dark or very light until the unit returns to the recommended operating temperature range.

## Rain and Water Resistance



Water resistance can be impaired if the door of the battery compartment or top cover is improperly closed or if the gaskets have deteriorated.

The handheld withstands exposure to rain without allowing water to seep inside the unit. It is designed to endure occasional immersions, and the unit floats making it easy to retrieve if dropped in water.

## Electromagnetic Resistance

The Nomad performs well in most common environments where electromagnetic fields are present. Examples of these environments include areas near power-transmission lines, electric motors, transformers, compressors, and low-power radio transmitters.

Performance can be degraded when using a communication cable, a peripheral, such as a printer, or a battery charger under these conditions.

## Shock Resistance

When the unit is operated within the specified temperature range, it can withstand occasional drops from up to 1.22 meters (4 feet) onto a hard surface.

---

## Use of the Nomad

To set up and begin using your Nomad handheld, go to “Using the Nomad Handheld,” on page 4-1.

---

## The Display on the Handhelds



Except for the chapter dedicated to setting up and using the CE5320B, this manual uses the Nomad screens. However, the CE5320B screens are very similar.

This section describes the display on the Neptune handheld system.

- The types of information that are shown in the display of the handheld.
- An overview of how to use the screens to access different types of information.

## The Handheld Display


Information in the display of the handheld is shown in three formats: menu screens, data-entry screens, and message screens.



Menu screens allow you to choose from the icon options.

Data-entry screens prompts you to select or enter data, such as the meter number.

Figure 2.6 Menu and Data-Entry Screen

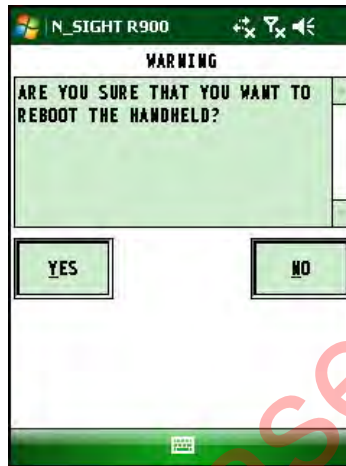

Message screens display information or prompt you to make a selection. They also can tell you how to exit the current screen or how to access other screens.

Figure 2.7 Message Screens

## Menu Screens

Menu screens typically display a list of options within a box and prompt you to select one. To select an option from a menu screen, do one of the following:

- From the keypad, press the key whose number corresponds to the item that you want to select. For example, if the menu displays a list of trouble codes and the code that you want to select is number 3 in the list, then press the THREE **3** key on the keyboard or keypad. Your selection appears in the display.
- Use the UP **↑** or DOWN **↓** key to move up or down the list until the item that you want is highlighted.

Then press the ENTER **ENTER** key on the CE5320 or the ENTER **←** key or **ok** on the Nomad. Your selection appears in the display. You can also use the TAB **→** or **Tab** to move forward, and the SHIFT **Shift** + TAB **Tab** to move backward.





A key that can be used to select an item from a list is called a hot key.

The procedures in this manual will instruct you to follow one or the other method. Use the method most comfortable for you.

### Data-Entry Screens

Typically, data-entry screens prompt you to enter information. Whenever a data-entry screen is displayed, the handheld automatically disables inappropriate keys. For example, when prompted to enter a meter reading, it allows you to enter numbers only. However, if you are prompted to enter a new trouble code, it enables the letter and number keys because codes can use letters and numbers.

On each of the reading-entry screens the meter reader can tell the position of the meter within the route. See Figure 2.8 on Page 2-16.

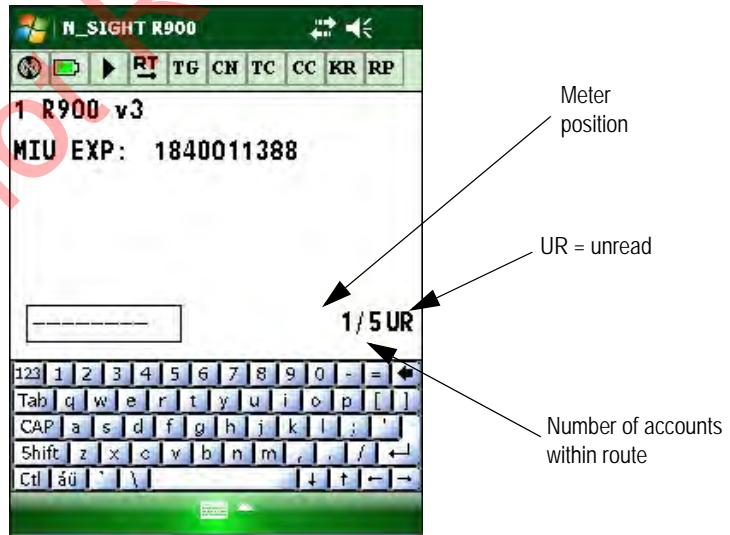


Figure 2.8 Meter Position within Route

In this example, the number 1/5 show us that the position of this meter is 1 out of 5 accounts contained on the route.

The reader can use ◀ and ▶ to navigate to other accounts on the route.

## Message Screens

Typically, message screens display messages as well as instructions for exiting the message screen. For example, when a message, such as Return handheld to office by 4pm to download routes, is displayed, the instruction Press ESC key is also shown to tell you how to exit the message screen. Sometimes you can be given options for accessing other screens that contain information related to the message shown in the display.

Some message screens only display information such as the number of the meter whose reading-entry screen is shown. Because the information displayed in message screens is linked to a particular meter or route, pressing any key from this screen always returns you to the reading-entry screen of the meter or route to which the message belongs.

## Navigating Through Screens

There are two primary screens meter readers and operators use that give them access to the screens they need: the **Reading-Entry** screen (a data-entry screen) and the **F1 Menu** (a menu screen).



Generally, meter-readers use the reading-entry screen to access information they need to perform their tasks.


Meter readers also use the  **Start** key or the **F1** menu to access information and functions they need to perform their tasks.

Figure 2.9 Navigating Screens

You can display a reading-entry screen after routes have been downloaded to the handheld by logging into the route. From the **F1** menu or the **Start** key menu, you can access other screens, configure probes, and check or change settings that control how the CE5320 and Nomad exchanges information with the host computer.

To display screens that allow you to view or change information about a meter or route, you must first


You can now make changes from the current meter you are on from the Reading Entry screen and make changes to the route as well.














## Icon Bar

The icon bar allows you to work with the Reading Entry screens. It appears at the top of the screen similar to the one shown in Table 2.1.

**Table 2.1 N\_SIGHT R900 Display Icons**

**Display Icons**



	Main menu
	Battery indicator
	Next unread account
	Route direction: points
	Tag account
	Customer notes
	Trouble codes
	Comment Code
	Cycles between one of these icon displays depending on the reading:
	→ Keyed Read (Manual)
	→ R900
	→ Probe
	Changes per type of account:
	→ Read parameters (manual accounts)
	→ Edit (radio and probe accounts)



If an icon appears as gray rather than black, it means that this icon is not available.

While you are on a reading entry screen, if you want to search to find a specific account, you must first press **F** or press **Start**, then **4 Route**, then **B Find Order** to display the Search screen.

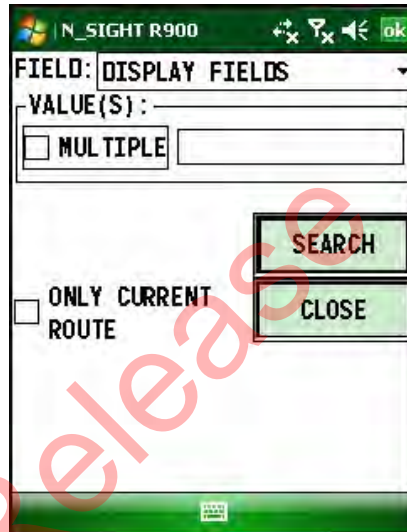


Figure 2.10 Search Screen

You can then select which field to search through, then enter the search criteria to locate a specific account or group of accounts.

Press **G** or click **Start**, then **9 Move**, then **7 GoTo** to quickly maneuver through a route, such as going to the beginning of a route or to the end of a route to display the **GoTo** screen. The handheld goes to that point.

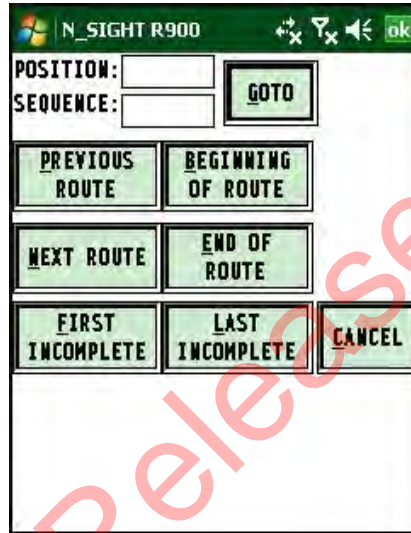


Figure 2.11 GoTo Screen

On this screen you can go to the following points on a route:

- Position of the meter within the route
- Sequence number of the meter
- Previous route
- Next route
- Beginning of the route
- End of the route
- First incomplete read
- Last incomplete read

*Notes*

Pilot Release

## 3 Using the CE5320 Handheld

---



If you want to set up and configure the Nomad handheld, see “Using the Nomad Handheld,” on page 4-1

This chapter provides basic instructions for unpacking and inspecting the CE5320 handheld. It also gives instructions for setting up the CE5320 handheld and becoming familiar with the keyboard and display. This chapter also provide help to get started with your CE5320 handheld so that you can begin collecting information from the field and exchanging information with the host computer.

In addition, this chapter gives procedures for changing the system settings, which affects how the handheld displays and accesses data. Although these settings are preset by Neptune to meet the needs of most meter reading processes, you can change some of the settings so that they better suit your needs.

---

### Determining the System Configuration

Although the handheld requires no installation, you do need to connect the unit to a power supply to charge its battery and to a host computer to allow it to communicate. How you make these connections depends upon how you have configured your meter reading system.

The CE5320 handheld has one basic system configuration that is used for local communications. A communication cradle is the most commonly used method to charge and exchange data with a handheld. See “Setting Up the CE5320,” on page 3-3. With this configuration,



whenever the handheld is placed in a communication cradle, its battery begins recharging, and it is ready to exchange data with the host computer.

## Local and Remote Communications

The configuration previously described is used for local operations, where the handheld and its communications equipment are directly connected to the host computer. The cradle can also be used for remote operations where the handheld and its communications equipment are in an office remote from the host computer. In this situation, the remote units are connected through the Internet to the host computer by an Ethernet cable. After the connection is established, only the software on the host computer and on the handheld need to be set up to manage a communications exchange.

---

## Unpacking and Inspecting Equipment

Besides using normal care, you need no special instructions to unpack the handheld or the equipment that you purchased with it.

Check that you have received all the items you need for the type of system configuration that you are using and inspect the items for shipping damage. If you detect any damage, return the damaged equipment to Neptune. Instructions for shipping the handheld to Neptune are given in “Returning your Neptune Handheld System,” on page 9-28 of this manual.



Save the packing box that was used to ship the handheld. Should you ever need to ship the handheld, you need to repack the unit in its original shipping box. The handling involved in land and air transport often subjects the handheld to impact beyond that which occurs during normal use. The packing box is designed to absorb shocks and protect the handheld during shipping.

---

## Setting Up the CE5320

The following section describes how to set up your CE5320 so that you can begin using it.

### One CE5320 and a Communication Cradle

If you are using a communication cradle to power and exchange information with one handheld at a time, check that you have received the following items.



Figure 3.1 Cradle and Charging Kit

- One CE5320 handheld computer.
- A cradle-charging kit, which is required for operation and is usually ordered with the unit. It includes an AC adapter/battery charger cable.



An Ethernet cable is required for communication; however, it is not included in the kit.

## The Router



It is important that the router you use has the capability to work as a switch.

If you are using a router to link cradles to exchange information with more than one CE5320 at a time, check that you have the following items.



Figure 3.2 Cradle, Router, and Cables Needed

- One or more CE5320 handheld computers.
- One communication cradle for each CE5320.
- One AC adapter/battery charger cable.
- One RJ45 Ethernet cable for each communication cradle.
- One RJ45 Ethernet cable to connect the router to the Personal Computer (PC).
- One AC power supply cable.



In order for the Communications function to work properly, a standard RJ45 Ethernet cable must be used.

## Connecting to the Host Computer and Power Supply



This configuration is for handhelds not connected to a system network. If you are connected to a system network, see the network specialist or your System Administrator for assistance.

The procedures in this chapter describe how to connect the CE5320 to the host computer so that it can exchange information with the host. The procedures also describe how to connect a power supply to the communications cradle so that you can recharge the battery. Complete the following procedures to connect the equipment you have.

### Connecting the Router, CE Handheld Cradle, and Power Supplies

You need no special tools to connect the devices that were shipped with your handheld. Follow this procedure to connect the router, communication cradles, and power supplies.



It is important that the router you use has the capability to work as a switch.

- 1 If you have not already done so, make sure that you have all of the equipment you need. If necessary, refer to the preceding section “Unpacking and Inspecting Equipment,” on page 3-2.
- 2 With the host computer OFF, connect the power supply to the router.

- 3 Leaving the far left port empty, connect one end of the RJ-45 Ethernet cable into one of the four slots in the router. See Figure 3.3.

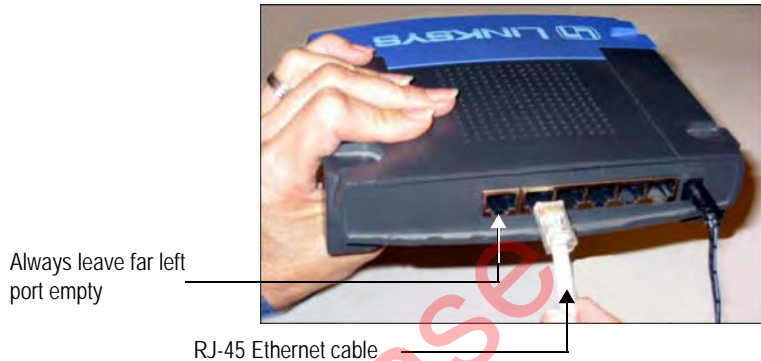


Figure 3.3 Connecting RJ-45 Ethernet Cable to Router, Port 1

- 4 Connect the other end of the Ethernet cable to the host computer.
- 5 Push the single-hole connector of the 110V AC adapter/battery charger onto the single-prong connector on the back of the communication cradle.

Secure the connector by turning its grooved lock-nut clockwise until you feel resistance. See Figure 3.4.



Figure 3.4 Connecting the Power Cable to the Communications Cradle


- 6 Connect the other end of the AC adapter/battery charger into a power source.

- 7 With an additional Ethernet cable, insert one of its connectors into the back of the cradle and the other the other end into the back of the router. See Figure 3.5.



Figure 3.5 Connecting the Ethernet RJ-45 Cable to the Cradle

- 8 Connect the network cable to the single router.

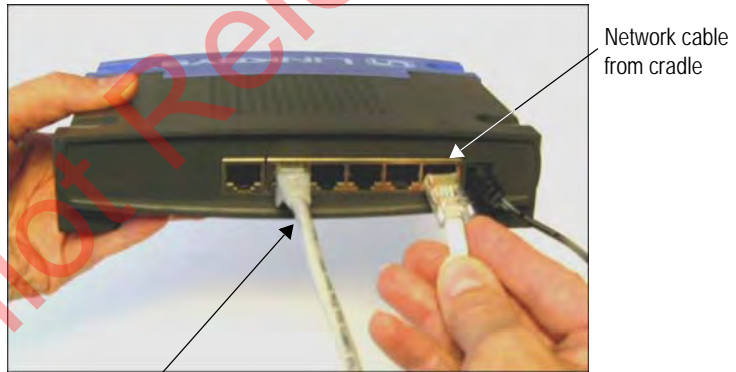


RJ-45 Ethernet cable to host computer

Network cable from cradle

Figure 3.6 Network Cable Connection

- 9 To connect additional cradles to a router, repeat steps 7 and 8, using the available ports on the router. See Figure 3.7.

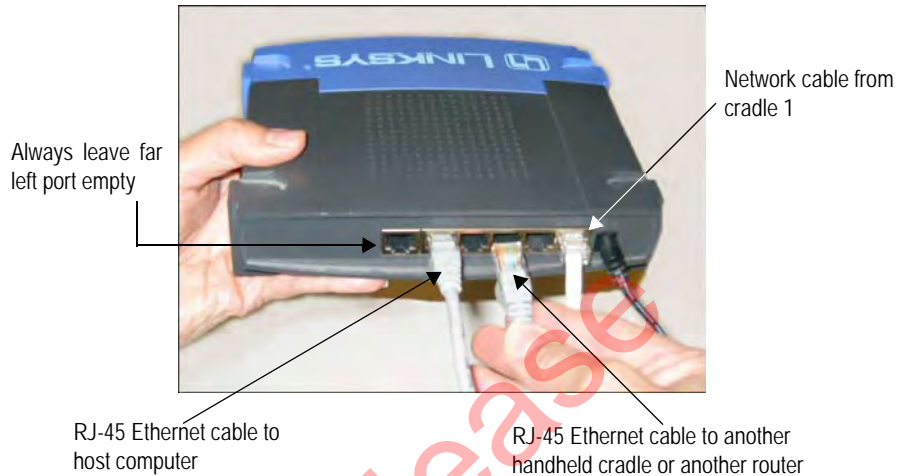

**Figure 3.7 Connecting Multiple Handheld Cradles to Router**



Port number 1 is always reserved for the network cable, and the port marked Internet is always kept empty.



You can connect another router to the main router you are using by connecting one end of an additional Ethernet cable into an open port on the main router and the other end to an open port on the additional router.

## Configuring the CE5320 Handheld

### On the Host Computer

- 1 On the Host Computer, right-click on **My Computer**.
- 2 Select **Properties**
- 3 Click **Computer Name**.
- 4 Record the computer name for the Host Computer here:

---

5 Click **Start**, then **Run**.

6 Type **CMD** and press **Enter**.


A DOS window appears.

7 Type **ipconfig** and press **Enter**.

8 Write the IP address here: \_\_\_\_\_

9 Type **exit** and press **Enter** to close the DOS window.

### On the CE5320 Handheld

 Before proceeding with this section, you must complete the information for the handhelds in two tables within the N\_SIGHT R900 host software: Handhelds and Reader ID. Refer to the *N\_SIGHT R900 Online HTML Help* for the steps to complete this information in these tables.

- 1 On the N\_SIGHT R900 Login screen, press **M** or touch **Menu**.



The N\_SIGHT R900 Main Menu screen appears.

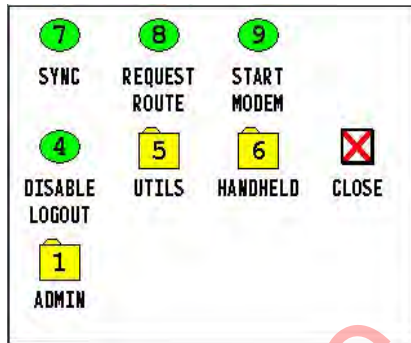


Figure 3.8 N\_SIGHT R900 Main Menu

- 2 Select **1, Admin**.

The Admin Menu appears as illustrated in Figure 3.9.

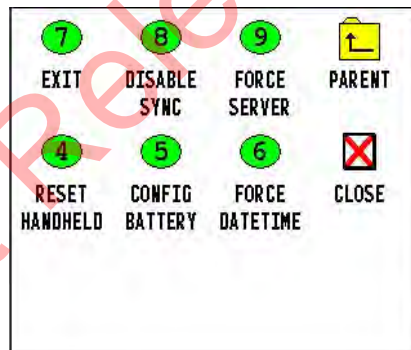


Figure 3.9 N\_SIGHT R900 Admin Menu

- 3 Select **4, Reset Handheld**.



Do not press Reset Handheld if the handheld is not in the communications cradle.

- 4 Click **Yes**.
- 5 Leave the password field blank, or if required, type **BUBBA**.
- 6 Click **OK**.

The Communications Configuration screen appears.

- 7 Tab to the **HHU ID** field, and type the ID of the handheld.



The HHU ID number is located on the back of the CE5320 handheld under the top part of the strap. It must also match exactly with what has been entered in the host software for that particular handheld.

- 8 Type the IP address in the **Server Name** field.
- 9 Be sure the **Port** is **25100**.
- 10 Touch **Connect** or **OK**.

The N\_SIGHT R900 Login screen appears.

---

## The Display and Keyboard

This section describes the display and keyboard on the CE5320.

- The types of information that are shown in the display of the handheld.
- An overview of how to use the keys to access different types of information.

### Learning the Keyboard

The CE5320 handheld uses 51 keys to give you access to all the stored information and to allow you to enter new data. Most keys perform more than one function.

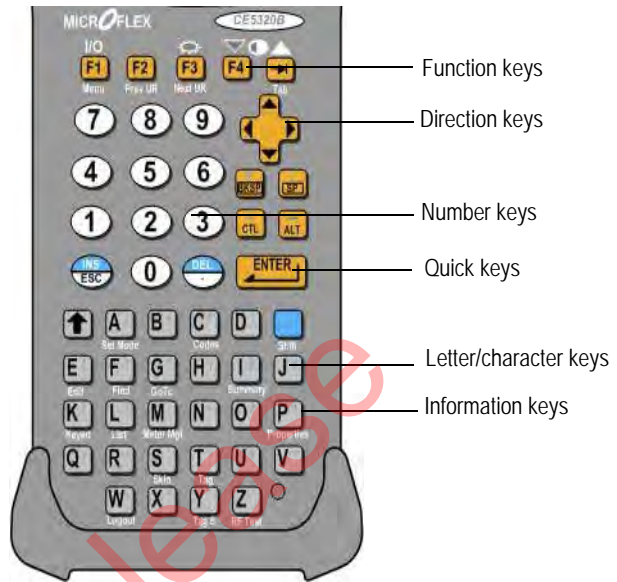



Figure 3.10 Learning the Keyboard

- **Function Keys or Hot Keys**—allow you to perform special tasks quickly.
- **Direction Keys**—allow you to move up or down a list of items and to move forward or backward in a data-entry space or through the meters of a route.
- **Number Keys**—allow you to enter a number in the display or to select an item from a list of items shown.
- **Quick Keys**—allow you to execute a task quickly by pressing certain keys at once or in a particular order.
- **Letter/Character Keys**—allow you to enter a letter or character in a screen or to select an item from a list of items shown.
- **Information Keys**—allow you to enter, change, or view information about a meter or a route.


To help you perform handheld tasks, the keyboard is color coded. For example, by using the BLUE  key in conjunction with keys that have blue characters printed on them, you can enter a character, such as “?” or “#”. Keys with black numbers or letters are single-entry keys. To enter the number or letter, simply press the key with the corresponding number or letter. Keys that have information printed in white above them allow you to enter or change specific information about a meter or route.

Because the CE5320 automatically disables inappropriate keys, the type of task that you can perform from the keyboard depends upon the type of menu that is displayed.

### **F1** Function Keys

The function keys on the CE5320 are the top row of yellow keys that are labeled with an **F** (for function) and a number. Function keys allow you to perform special tasks quickly.

**F1**


If the unit is powered off, pressing **F1** will power it on and pressing BLUE  **F1** while the unit is on, will turn it off. The Help feature is not yet supported.



In addition, **F1** allows you to access the Main Menu for N\_SIGHT R900, where you can access the functions available to you while using the CE5320 handheld.

**F2**

While reading a route, pressing **F2** accesses the previous incomplete reading.



While reading a route, pressing  accesses the next incomplete reading.

In addition, pressing   while the unit is on accesses the backlight.

### ③ Number Keys

The number keys on the handheld are used most often for entering readings. Because entering readings is the primary function of users, the number keys are larger than other keys and are placed near the top of the keypad. Number keys enable you to complete one of two tasks:

- Enter a number in the display, such as for a reading.
- Select an item by pressing the number key that corresponds to a numbered item in a list of items.

The type of task that you can perform using a number key depends upon the type of screen that is displayed.







- **Menu Screen**—select a numbered item from the list by pressing the key whose number corresponds to the item that you want to select. (When used this way, the number key is called a hotkey.)
- **Data-Entry Screen**—enter a number in the data-entry screen by pressing the key with the number that you want to appear in the field.



### Direction Keys



The direction keys on the handheld are used to move up or down through a list of items displayed in a menu screen and to move forward or backward within a data-entry space or through the meters of a route. Pressing the direction key up or down displays additional screens for the account, such as an account-specific hazard.

The type of task that you can perform using a number key depends upon the type of screen displayed.

- **Menu Screen**—highlights a numbered item in the list of items displayed by pressing the UP  or DOWN  key to move through the list of items. You can also use the BACKWARD  or FORWARD  keys to jump to the first or last item in the menu. As you reach an item, it becomes highlighted.
- **Data-Entry Screen**—moves forward or backward within a data-entry space by pressing the FORWARD  or BACKWARD  key to move forward or backward within the space.



Moving over existing letters or numbers will not erase them.


- **Reading-Entry Screen**—display the reading-entry screen of the next or previous meter by pressing the FORWARD  or BACKWARD  key.


### Letter/Character Keys

The letter/character keys on the handheld are the keys that are labeled with the letters of the alphabet and with special characters, which are printed in blue to the right of each letter. Letter/character keys enable you to complete one of three tasks:

- Enter a letter in a data-entry screen.
- Enter a character in a data-entry screen.
- Select an item by pressing the key whose letter corresponds to the item that you want to select.



Use the color coding to remember which keys to use with character keys: press the BLUE  key followed by a letter/character key (characters are shown in blue on these keys) to display the character in the screen.

- **Menu Screen**—select an item from the list by pressing the key whose letter corresponds to the item that you want to select. (When used this way, the letter/character key is called a hotkey.)
- **Data-Entry Screen**—enter a letter in the data-entry screen by pressing the key of the letter that you want to appear in the data-entry screen or by pressing the BLUE  key followed by the letter you want to appear in the display.
- **Reading-Entry Screen**—perform a function by pressing the key over which the name of the function is printed in white (detailed next).



## Information Keys



Information keys only work when logged into the handheld (Production Mode).

The information keys on the handheld are the letter/character keys that have information printed in white above them. You can enter, change, or view the following information about a meter or a route by pressing the appropriate key whenever a reading-entry screen is shown in the display.



Toggles between the Automatic Meter Reading (AMR) mode: R900 → Keyed → Advantage → R300.



Accesses the Codes menu allowing you to enter trouble codes or customer notes depending upon the type of import file you are using.



Allows you to turn the Edit mode ON. In edit mode, you can type information on screens that allow text entry.



Allows you to access the Search screen where you can select criteria to look for information you need:

- Coded note
- Route
- Meter number
- Name
- Meter type
- Account status
- Sequence number
- Skip code
- Instruction code
- Account number
- Constant
- Tag



Allows you to access the GoTo screen. On this screen, you can access the following information for a meter or a route:

- Position of the meter within the route
- Sequence number of the meter
- Previous route
- Next route
- Beginning of the route
- End of the route
- First incomplete read
- Last incomplete read



Allows you to view summary information about the route. When pressed with the CTL key, this key allows you to view screen information for the handheld, such as the version number, Internet Protocol (IP) Address, Random Access Memory (RAM), and storage.



Allows you to enter a reading manually.



Allow you enter List mode where the account addresses are presented in list form, a convenient way to browse through the accounts.





Allows you to access the Meter Menu where you can skip a reading, change meter information, and enter information for a found meter.



Allows you to view the Properties information for the handheld:

- Read direction
- Route dir
- Battery key clicks
- Date
- Time



Allows you to skip the reading for this account.



Allows you to tag the account, so that you can come back to it later.



Allows you to log out of N\_SIGHT R900 after completing the required information.






Allows you to search for the accounts already tagged.



Allows you to perform an RF test.

You can use these keys only when a reading-entry screen is displayed. For example, if the you need more information about this meter,


pressing the INFORMATION  or  keys while reading the account, will take you to additional information. Once you display the information you need, pressing these keys again returns you to meter's reading-entry screen.













## Quick Keys

By pressing specific keys at once, or in a particular order, you can execute a task quickly. Certain quick key tasks can be performed no matter what type of screen is shown. The following table summarizes tasks that you can perform using quick keys.



Use the color coding to remember which keys to use with quick keys that have two functions: to activate the function printed in blue, press the BLUE  key first, and then press the key with a function printed in blue.

Press 	To turn on the CE5320.
Press BLUE  , 	To turn off the CE5320.
Press 	To enter a reading or select an item from a menu screen.
Press 	To enter a decimal point. (This is typically required only by “floating point” meters.)
Press 	To return to the preceding screen.
Press 	To enter a space when entering a special message or other data.
Press 	To erase a letter, number, or character that you have entered. As you backspace over each letter, number, or character, each is erased.
Press  + 	To show meter information on the screen.

Press BLUE , 

To backlight the display and the keys, if your CE5320 Handheld has the keyboard backlight option. Pressing these keys again will turn off the backlight. These keys work as a toggle.

Press , , then 

To reboot the CE5320 Handheld.



Backlighting can drain the battery rapidly. To conserve the battery, use this feature only in low light.

If you do not press a key within 45 seconds of activating this feature, the CE5320 automatically deactivates the backlight to conserve battery power.

---

## Adjusting System Settings

System settings affect how the handheld displays and accesses data. Although these settings are factory-set to meet the needs of most meter reading processes, you can change some of the settings so that they better suit your needs. These settings are typically set once and never changed; however, you can adjust these settings any time.

## Calibrating the Stylus

The CE5320 handheld has a touchscreen display that uses a stylus for ease-of-use. Because each person's touch differs, it is important to calibrate the stylus to the touchscreen for the user's own personal touch.



All functions are available without the stylus by using keyboard.

To calibrate the stylus, complete the following procedure.

- 1 On the N\_SIGHT R900 Login screen, press **M** or touch **Menu**.

The N\_SIGHT R900 Main Menu screen appears.

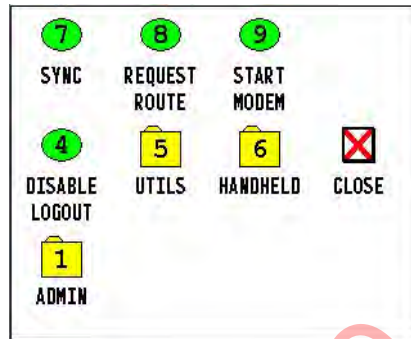


Figure 3.11 N\_SIGHT R900 Main Menu

- 2 Press **6** or touch item **6: Handheld**.
- 3 Press **9** or touch **9: Stylus**.

The Stylus Calibration screen appears like Figure 3.12.

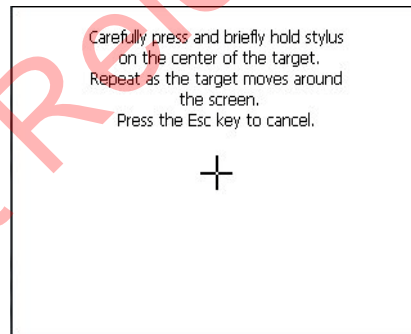


Figure 3.12 N\_SIGHT R900 Stylus Calibration Screen

Calibration is simply done by touching the center of the cross with the stylus for a couple of seconds. When the cross moves to another place, repeat the operation.

- 4 Hold your stylus on the cross until it moves.



Remember just to touch the screen; there is no need to press hard or to punch it.

The cross moves to another location on the screen similar to that illustrated in Figure 3.13.

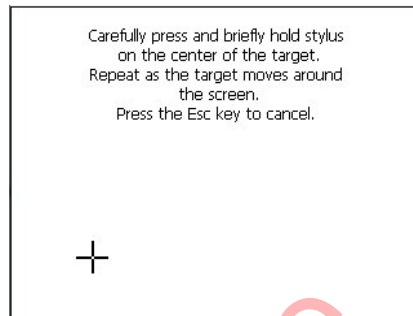



Figure 3.13 Stylus at Another Location on Screen

- 5 Repeat holding the stylus on the cross until it moves.
- 6 When finished, press .

The handheld returns to N\_SIGHT R900 Main Login screen.

## Changing the Handheld Properties

The section allows you to adjust or change the following properties for the handheld:

- Key clicks
- Reading entry direction
- Route direction

## Working with the Properties Screen

To access the Properties screen, complete these steps.

- 1 On any reading entry screen, press



The Properties screen appear as illustrated in Figure 3.14.

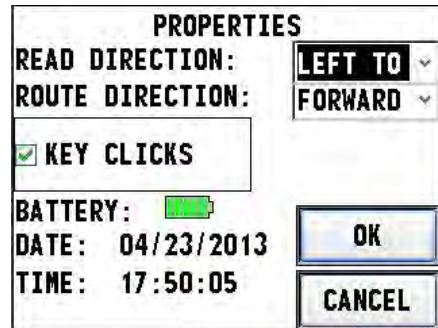


Figure 3.14 Handheld Properties Screen

- 2 Do one or both of the following:
  - Proceed to “Changing the Reading Entry Direction,” in the next section.
  - Change the “Changing the Route Read Direction,” on page 3-24.

### Changing the Reading Entry Direction

As you enter a reading in the handheld, each number can be displayed from right to left or from left to right.

- 3 In the **Read Dir** field, touch the down arrow and do one of the following:
  - Select **LEFT TO RIGHT** if you want the number to begin from the left.
  - Select **RIGHT TO LEFT** if you want the number to begin from the right.

These setting toggle between Left to Right or Right to Left according to the current setting.



This procedure affects only accounts whose directions have not been set by the host computer. If the reading-entry direction of an account has been set by the host computer, the host setting replaces your setting.

## Changing the Route Read Direction

The handheld typically displays meters of a route from the first meter to the last meter. However, you can change the order that meters are displayed so that they are shown from the last meter to the first meter.

- 4 In the **Route Dir** field, touch the down arrow and do one of the following:
  - Select **FORWARD** if you want the readings to advance to the next unread account in the route.
  - Select **BACKWARD** if you want to change the directions of the readings to go backward to the previous unread account in the route.

These settings toggles between Forward or Backward according to the current setting.

## Turning Key Clicks On and Off

The Key Clicks feature allows you to control how the handheld responds when you press a key. When this feature is ON, the handheld beeps whenever you press a key. Turning the Key Clicks feature on can help you reduce errors by making sure that you press each key fully. If you do not press a key fully, the handheld does not acknowledge your entry. You can turn the Key Clicks feature on or off at any time.

- 5 Do one of the following:
  - Select the checkbox to enable **Key Clicks**.
  - Leave the checkbox empty to disable the **Key Clicks**.

These settings toggles between on (checked) or off (unchecked) according to the current setting.

- 6 Touch **OK** to save your settings.

You return to the reading-entry screen or your previous screen.

## Configuring RF/Serial Properties

Depending on the type of accounts on your route, you may have to configure the RF antenna, the type of probe, or serial properties you are using. Follow this procedure to configure or change the RF antenna, the type of probe, or serial properties.

- 1 Press **F1**.

The **F1 Menu** appears as illustrated in Figure 3.15.

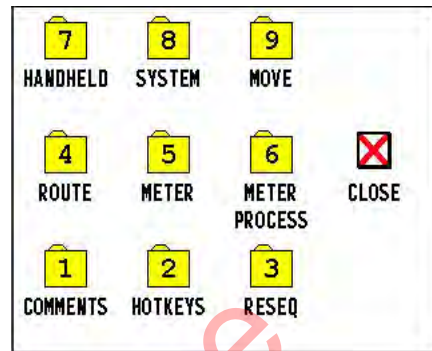


Figure 3.15 N\_SIGHT R900 F1 Menu

- 2 Touch **8**.

The **System Menu** appears as illustrated in Figure 3.16.

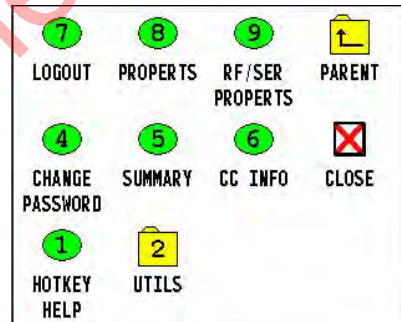


Figure 3.16 N\_SIGHT R900 System Menu

- 3 Touch **9**.



The **RF/Serial Properties** screen appears as illustrated in Figure 3.17.

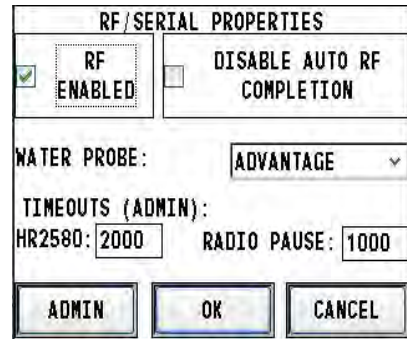


Figure 3.17 RF/Serial Properties Screen

## Logging In and Out of the N\_SIGHT R900

This section explains how to log into N\_SIGHT R900 on the handheld to access the screens needed to complete meter reading tasks.

### Logging Into N\_SIGHT R900 on the CE5320

After you have loaded a route, or after you have exchanged meter readings and route data with the host computer, you need to log into N\_SIGHT R900 on the handheld. Signing on gives you access to the screens you need to collect and exchange route and meter data.

Complete the following steps to log into N\_SIGHT R900 on the CE5320.

- 1 If you have not already done so, press **F1** turn on the CE5320.



If you see the message **Not Uploaded**, this means the handheld has been loaded but not yet been unloaded. This is normal if a new route was just loaded to the handheld.



Touch **S** or **Synchronize** to start Communications. For more information, refer to “Communicating with the Host Computer,” on page 7-1.

You can see a message like the one illustrated in Figure 3.18.

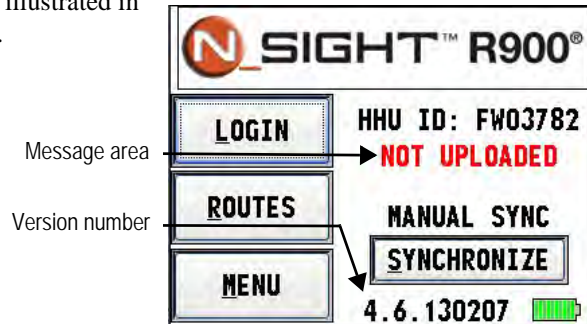


Figure 3.18 N\_SIGHT R900 Message Area

- 2 Click .



There may be times when the Clock Error screen appears when you are attempting to log in. When this screen appears, continue with the following steps.

A Clock Error screen appears, prompting you to log on to manually set the clock, as illustrated in Figure 3.19.

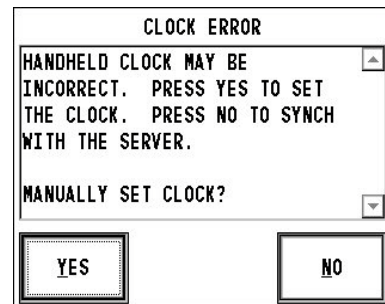


Figure 3.19 N\_SIGHT R900 Clock Error Screen

- 3 Click **Yes**.



If you answer **NO** to the clock error message, the Login screen appears again.

After you click **Yes**, the Set Date/Time screen appears as illustrated in Figure 3.20.

Figure 3.20 N\_SIGHT R900 Set Date / Time Screen

- 4 If applicable, make any changes to the date and time.

The correct date and time to use is the date and time that the handheld last synchronized.

- 5 When the date and time are accurate, click **OK**.

The Handheld Login screen appears as illustrated in Figure 3.22.

Figure 3.21 N\_SIGHT R900 Handheld Login Screen

The Reader ID field displays the information contained in the N\_SIGHT R900 software.

- 6 Complete the following information as applicable:
  - **Password** (Determined by N\_SIGHT R900 setup)
  - **Vehicle #** (Optional)
  - **Mileage** (Optional)

- 7 Click **LOGIN**.

The Select Route screen appears as illustrated in Figure 3.22.

ROUTE / GROUP	TYPE
comp-comp-0001-0000000001	READ

Figure 3.22 N\_SIGHT R900 Select Route Screen

- 8 Highlight the route you want, and click **OK**.

A message appears similar to the one illustrated in Figure 3.23.

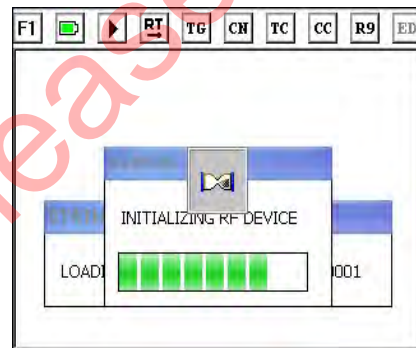


Figure 3.23 N\_SIGHT R900 Initializing Message

When the software has finished initializing, a Reading Entry screen indicating that the sign on process is complete and that the unit is ready for use in collecting readings. See Figure 3.24.

For assistance in using the CE5320 to collect meter readings, refer to “Gathering Route Data,” on page 6-1.

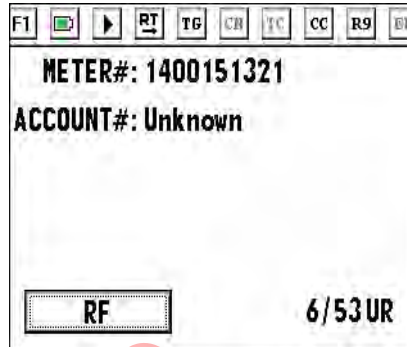


Figure 3.24 N\_SIGHT R900 Reading Entry Screen

### Logging Out of N\_SIGHT R900

The only time that you need to log out of N\_SIGHT R900 on the handheld is just before you begin exchanging information with the host computer. Logging out gives you access to the communication features of the handheld. Instructions for logging out on the handheld are included in the procedures that describe how to exchange information with the host computer. For more information, see “Exiting the Software,” on page 7-1.

If you allow the handheld to remain inactive for the factory-set delay of 45 seconds or for the delay time specified by the host computer, it turns off automatically. After this period of inactivity, the screen of the handheld goes blank and the unit turns off to conserve the battery.

## 4 Using the Nomad Handheld

---



If you want to set up and configure the CE5320 handheld, see “Using the CE5320 Handheld,” on page 3-1.

This chapter provides basic instructions for unpacking and inspecting the Nomad. It also gives instructions for setting up the Nomad and becoming familiar with the keyboard and display. This chapter also provides help to get started with your Nomad, so that you can begin collecting information from the field and exchange information with the host computer.

In addition, this chapter gives procedures for changing the system settings, which affects how the handheld displays and accesses data. Although these settings are preset by Neptune to meet the needs of most meter reading processes, you can change some of the settings so that they better suit your needs.

---

### Unpacking the Nomad

Besides using normal care, you need no special instructions to unpack the handheld or the equipment that you purchased with it.

Check that you have received all the items you need and inspect the items for shipping damage. If you detect any damage, return the damaged equipment to Neptune. Instructions for shipping the handheld to Neptune are given in “Returning your Neptune Handheld System,” on page 9-28 of this manual.

Inside the box with the Nomad is an Orientation Guide that exhibits the contents:

- Hand strap
- Battery
- Trimble Nomad getting started disk
- AC adapter
- USB cable
- Stylus
- Screen protectors
- 4GB SD card (also included in the box)

The Guide shows you how to do the following:

- Install the battery
- Attach the hand strap
- Insert the SD card

---

## Setting Up the Nomad

The following section describes how to set up your Nomad so that you can begin using it.

### One Nomad and a Communication Cradle

If you are using a communication cradle to power and exchange information with one handheld at a time, check that you have received the following items.



Figure 4.1 Nomad and Cradle Charger

- One Nomad handheld computer.
- The charger that is included with the Nomad can be used to power the Communications Cradle. If you want a separate charger, you can order it as an accessory.



## The Router



It is important that the router you use has the capability to work as a switch.

If you are using a router to link cradles to exchange information with more than one Nomad at a time, check that you have the following items:

- One or more Nomad handheld computers.
- One communication cradle for each Nomad.
- One AC adapter/battery charger cable for each cradle.
- One RJ45 Ethernet cable for each communication cradle.
- One RJ45 Ethernet cable to connect the router to the PC.
- One router/switch with one AC power supply cable.



In order for the Communications function to work properly, a standard RJ45 Ethernet cable must be used.

## Connecting to the Host Computer and Power Supply



This configuration is for handhelds not connected to a system network. If you are connected to a system network, see the network specialist or your system administrator for assistance.

The procedures in this chapter describe how to connect the Nomad to the host computer so that it can exchange information with the host. The procedures also describe how to connect a power supply to the communications cradle so that you can recharge the battery. Complete the following procedures to connect the equipment you have.

You need no special tools to connect the devices that were shipped with your handheld.

## Connecting the Router, Nomad Handheld Cradle, and Power Supplies

Follow this procedure to connect the router, communication cradles, and power supplies.



You need a network switch or it is important that the router you use has the capability to work as a switch.

- 1 If you have not already done so, make sure that you have all of the equipment you need. If necessary, refer to the preceding section “Unpacking the Nomad,” on page 4-1.
- 2 With the host computer OFF, connect the power supply to the router.
- 3 Leaving the far left port empty, connect one end of the RJ-45 Ethernet cable into one of the four slots in the router. See Figure 4.2.

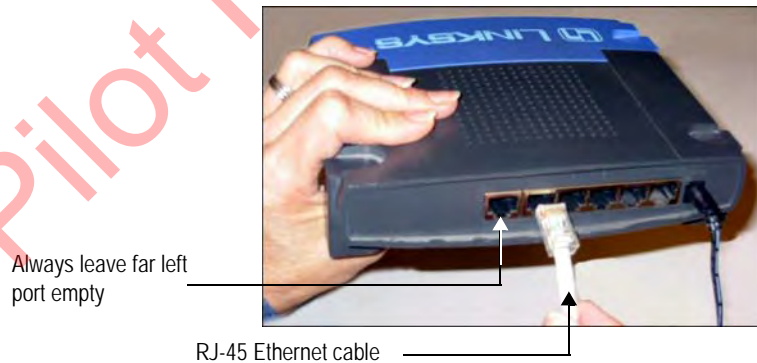


Figure 4.2 Connecting RJ-45 Ethernet Cable to Router, Port 1

- 4 Connect the other end of the Ethernet cable to the host computer.
- 5 Push the single-hole connector of the 110V AC adapter/battery charger onto the single-prong connector on the back of the communication cradle.


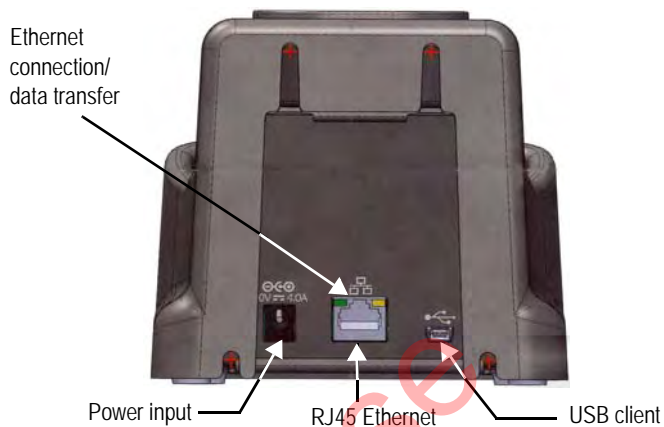


Figure 4.3 Nomad Communications Cradle Connections

- 6 Connect the other end of the AC adapter/battery charger into a power source. See Figure 4.3.
- 7 With an additional Ethernet cable, insert one of its connectors into the back of the cradle and the other into the back of the router. See Figure 4.3.
- 8 Connect the network cable to the single router.

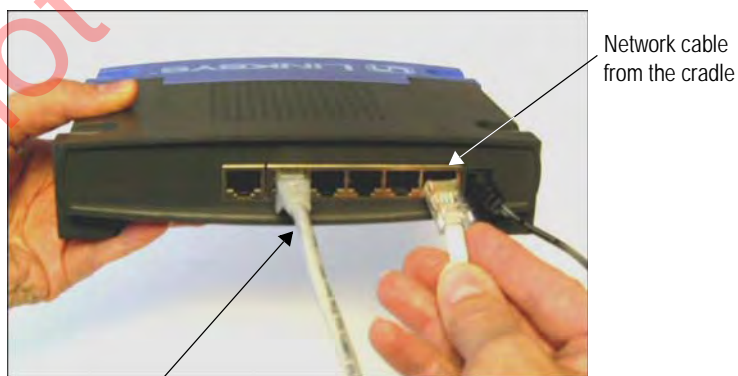

RJ-45 Ethernet cable to the host comput-

Figure 4.4 Network Cable Connection

## Configuring the Nomad Handheld


### On the Host Computer

- 1 On the host computer, click **Start**.
- 2 Type **CMD** and press **Enter**.  
A DOS window appears.
- 3 Type **ipconfig** and press **Enter**.
- 4 Write the IP address here: \_\_\_\_\_
- 5 Type **exit** and press Enter to close the DOS window.

### On the Nomad Handheld



Before proceeding with this section, you must complete the information for the handhelds in two tables within the N\_SIGHT R900 host software: Handhelds and Reader ID. Refer to the *N\_SIGHT R900 Online HTML Help* for the steps to complete this information in these tables.

- 1 On the N\_SIGHT R900 Login screen, press **M** or touch  .

The N\_SIGHT R900 Main Menu screen appears.

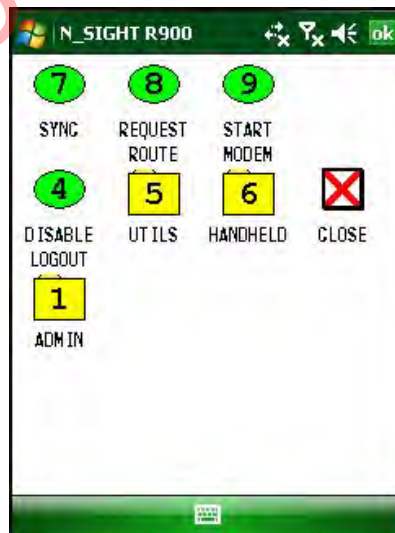



Figure 4.5 N\_SIGHT R900 Main Menu

- 2 Select , **Admin**.

The Admin Menu appears as illustrated in Figure 4.6.

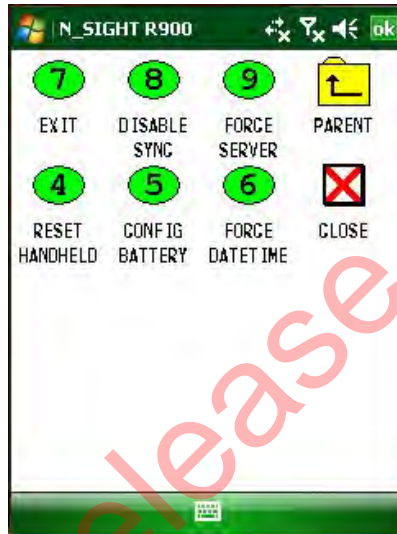


Figure 4.6 N\_SIGHT R900 Admin Menu

- 3 Select , **Reset Handheld**.



Do not press Reset Handheld if the handheld is not in the communications cradle.

- 4 Click **Yes**.
- 5 Leave the password field blank, or if required, type **BUBBA**.
- 6 Click **OK**.

The Communications Configuration screen appears.

- 7 Tab to the **HHU ID** field, and type the **ID** of the handheld.

The HHU ID for the Nomad can be found four ways:

- On the outside of the box in which the Nomad is packaged.
- In the battery compartment on the right side.
- Navigate to Windows Icon, Settings, System Tab at bottom of the screen, and then scroll to System Information and Info Tab at bottom of screen.
- Navigate to Windows Icon, Settings, System Tab at bottom of the screen and click **About** then **Device ID** at the bottom of the screen.



- 8 Type the IP address of the PC which you want the Nomad to synchronize within the **Server Name** field.
- 9 Be sure the **Port** is **25101**.
- 10 Click **OK**.

The handheld resets, and the N\_SIGHT R900 Login screen appears.

---

## The Display and Keyboard



If the message **DB Uninitialized** flashes on the screen press **Synchronize** once more to complete Database Synchronization

This section describes the display and keyboard on the Nomad.

- The types of information that are shown in the display of the handheld.
- An overview of how to use the keys to access different types of information.

### Learning the Keyboard

The Nomad handheld uses 51 keys to give you access to all the stored information and to allow you to enter new data. Most keys perform more than one function.

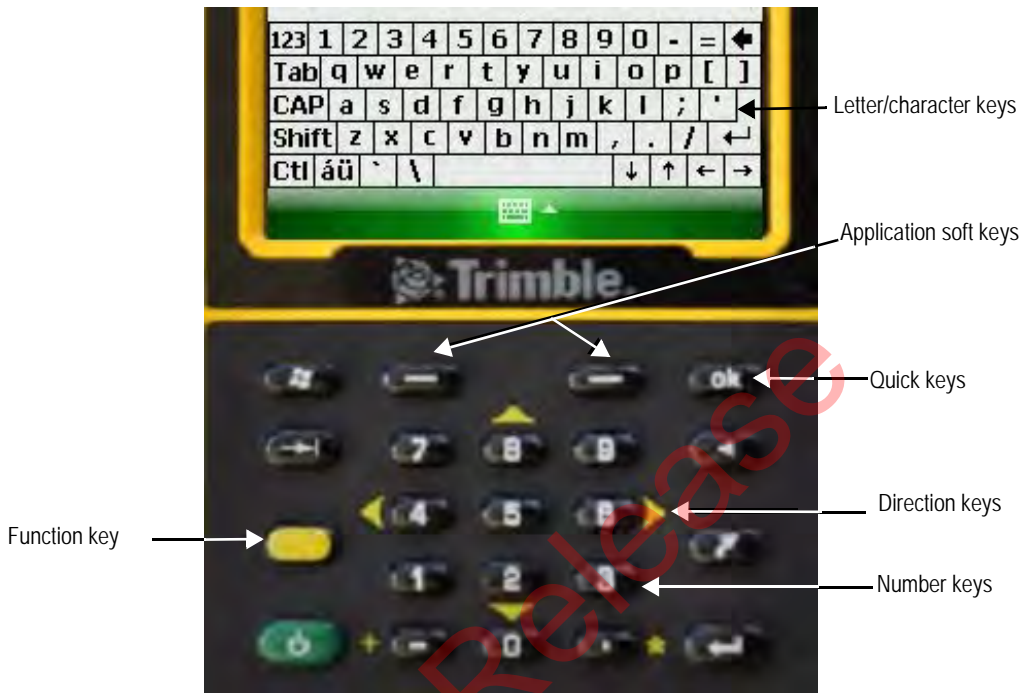


Figure 4.7 Learning the Keyboard


## Buttons and Keys

In addition to an environmental seal that protects the unit from dust, dirt, and water, the Nomad includes the following features.

- **Function Button**—allows you to perform special tasks quickly., such as navigate through a screen when you use the yellow arrow keys
- **Direction Buttons**—allow you to navigate and move up or down a list of items and to move forward or backward in a data-entry space or through the meters of a route.
- **Number Buttons**—allow you to access accounts while reading meters.


- **Letter/Character Keys**—allow you to enter a letter or character in a screen or to select an item from a list of items shown.
- **Application Soft Buttons**—allow you to enter, change, or view information about a meter or a route.
- **Combination Keys**—allow you to execute a task quickly by pressing certain keys at once or in a particular order.


## Buttons


To help you perform handheld tasks, the keyboard is color coded. For example, by using the yellow  function button in conjunction with keys that are marked in yellow, you can navigate around a screen. Buttons with white numbers or symbols are single-entry keys. To enter the number, simply press the button with the corresponding number or letter.


### Function Button

Because the Nomad automatically disables inappropriate buttons, the type of task that you can perform from the keyboard depends upon the type of menu that is displayed.

On the numeric keypad, the yellow  function button (clicky key sounds) accesses the tasks in yellow, including the navigation arrows. Several settings can be changed under Keyboard Options.


**Auto release:** Press and release  to access a yellow task for one use. It then goes back to the original key tasks.

**Manual release:** This is the default. Press  to toggle it on and off. Yellow tasks remain active until the function key is pressed again.



**Disabled:**  must be held down while pressing any other key to access the yellow task.

**Play Sticky Key Sounds:** To disable clicky key sounds, remove the check in the box.









## Direction Buttons





In conjunction with the yellow  function button, the yellow direction arrows are enabled by the number buttons closest to them. You can use these buttons on the handheld to move up or down through a list of items displayed in a menu screen, and to move forward or backward within a data-entry space or through the meters of a route. Using  and pressing the arrow/number button up or down displays additional screens for the account.

The type of task that you can perform using an arrow/number button depends upon the type of screen displayed.

- **Data-Entry Screen**—moves forward or backward within a data-entry space by pressing  + BACKWARD  **4** or  + FORWARD  **6** buttons.



Moving over existing letters or numbers will not erase them.

- **Reading-Entry Screen**—displays the reading-entry screen of the next or previous meter by pressing the  + FORWARD  **6** or  + BACKWARD  **4** buttons.

## Number Buttons


The number buttons on the handheld are used most often for entering readings. Because entering readings is the primary function of users, the number buttons are smaller than the other buttons and are placed in the center of the keypad. Number buttons enable you to complete one of two tasks:

- Enter a number in the display, such as for a reading.
- Select an item by pressing the number key that corresponds to a numbered item in a list of items.

The type of task that you can perform using a number key depends upon the type of screen that is displayed.

- **Menu Screen**—select a numbered item from the list by pressing the key whose number corresponds to the item that you want to select. (When used this way, the number key is called a hotkey.)
- **Data-Entry Screen**—enter a number in the data-entry screen by pressing the key with the number that you want to appear in the field.


## Nomad Screen Keyboard

When you tap the keyboard  icon located at the bottom of the screen, an on-screen keyboard appears with 60 keys to use. There are three views of this keyboard.



### Changing the Size of the Keys

There are two ways you can change the size of the keys that display on the screen keyboard.

#### Using the Windows Icon.

- 1 Click the  at the top left of the screen.
- 2 Click **Settings**, and then click **Input**.
- 3 Select **Large Keys**. (The default is Small Keys.)
- 4 Click **OK**.

#### Using the Keyboard Icon.

- 1 Click  at the bottom center of the screen.
- 2 Click  to the right of the Icon.
- 3 Click **Options**.
- 4 Select **Large** or **Small Keys**. See Figure 4.8 and Figure 4.9 on Page 4-14.
- 5 Click **OK**.

## Large Keys

The following figure illustrates the large keyboard.



Figure 4.8 Nomad Large Keyboard

## Small Keys

The following figure illustrates the small keyboard.

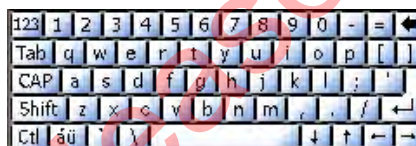


Figure 4.9 Nomad Small Keyboard

## Lowercase Keys

The following figure illustrates the lowercase QWERTY keyboard.



Figure 4.10 Nomad Lowercase Keyboard

## Uppercase Keys

The following figure illustrates the uppercase QWERTY keyboard.

To use the uppercase keys, tap **CAP** or **Shift**.



Figure 4.11 Nomad Uppercase Keyboard

## Numeric and Symbols Keys

The following figure illustrates the keyboard with numeric and symbols keys.

To use the numeric and symbols keys, tap **123**.



Figure 4.12 Nomad Numeric and Symbols Keyboard

## Information Keys



Information keys only work when logged into the handheld (Production Mode).

The information keys on the handheld screen are the letter/character keys that allow you to perform specific tasks while in N\_SIGHT R900. You can enter, change, or view the following information about a meter or a route by pressing the appropriate key whenever you are logged into a route and a reading-entry screen is shown in the display.



Toggles between the Automatic Meter Reading (AMR) mode: R900 → Keyed → Advantage → R300.



Accesses the Codes menu, allowing you to enter trouble codes or customer notes depending upon the type of import file you are using.



Allows you to turn the Edit mode ON. In edit mode, you can type information on screens that allow text entry.



Allows you to access the Search screen where you can select criteria to look for information you need:

- Coded note
- Route
- Meter number
- Name
- Meter type
- Account status
- Sequence number
- Skip code
- Instruction code
- Account number
- Constant
- Tag



Allows you to access the GoTo screen. On this screen, you can access the following information for a meter or a route:

- Position of the meter within the route
- Sequence number of the meter
- Previous route
- Next route
- Beginning of the route
- End of the route
- First incomplete read
- Last incomplete read



Allows you to view summary information about the route. When pressed with the CTL key, this key allows you to view screen information for the handheld, such as the version number, Internet Protocol (IP) Address, Random Access Memory (RAM), and storage.



Allows you to enter a reading manually.



Allows you enter List mode where the account addresses are presented in list form, a convenient way to browse through the accounts.



Allows you to access the Meter Menu where you can skip a reading, change meter information, and enter information for a found meter.



Allows you to view the Properties information for the handheld.

- Read direction
- Route dir
- Battery key clicks
- Date
- Time



Allows you to skip the reading for this account.



Allows you to tag the account so that you can come back to it later.



Allows you to log out of N\_SIGHT R900 after completing the required information.



Allows you to search for the accounts already tagged.



Allows you to perform an RF test.

You can use these keys when a reading-entry screen is displayed. For example, if you need to find more information about this meter, do the following:







Press UP  or DOWN  keys while reading the account.

This takes you to additional information. Once you display the information you need, pressing these keys again returns you to meter's reading-entry screen.

### Direction Keys

The direction keys on the handheld are used to move up or down through a list of items displayed in a menu screen and to move forward or backward within a data-entry space or through the meters of a route. Pressing the direction key up or down displays additional screens for the account, such as an account-specific hazard.

The type of task that you can perform using a number key depends upon the type of screen displayed.










- **Menu Screen**—highlights a numbered item in the list of items displayed by pressing the UP  or DOWN  keys to move through the list of items. You can also use the BACKWARD  or FORWARD  keys to jump to the first or last item in the menu. As you reach an item, it becomes highlighted.
- **Data-Entry Screen**—moves forward or backward within a data-entry space by pressing the FORWARD  or BACKWARD  keys to move forward or backward within the space.

## Combination Keys

By pressing specific keys at once, or in a particular order, you can execute a task quickly. Certain quick key tasks can be performed no matter what type of screen is shown. The following table summarizes tasks that you can perform using quick keys.



Use the color coding to remember which keys to use with quick keys that have two functions: to activate the function printed in yellow, press the **YELLOW** function button first and then press the key with a function printed in yellow.

Press  once.	To turn on the Nomad.
Press and hold  for five seconds, then release. Choose <b>Shut Down</b> .	To turn off the Nomad.
Press 	To enter a reading or select an item from a menu screen.
Press 	To enter a decimal point. (This is typically required only by "floating point" meters.)
Press 	To return to the preceding screen.
Press 	To enter a space when entering a special message or other data.
Press 	To erase a letter, number, or character that you have entered. As you backspace over each letter, number, or character, each is erased.
Press  + 	To show meter information on the screen.



Press , PROGRAMS,  
  
 SYSTEM TAB, **Backlight**

To minimize the amount of time the backlight stays on and dim it to only as bright as required to view the display.

Press , ,  
 then 






To perform a soft reboot of the Nomad handheld.






































Backlighting can drain the battery rapidly. To conserve the battery, use this feature only in low light.

If you do not press a key within 45 seconds of activating this feature, the Nomad automatically deactivates the backlight to conserve battery power.

**Table 4.1 Nomad Functionality**

Function	Explanation
Power ON	Press  once.
Power OFF	Press and hold  for five seconds, then release. Choose <b>Shut down</b> .
Turn screen OFF	Press  once.
Turn backlight ON/OFF	Press and hold  for two seconds
Reboot	Hold down  for five seconds, then release. Choose <b>Reset</b> .

Function	Explanation
Today	Press  to escape from any screen.
Tab	Press  to advance to the next field on the screen.
Next and previous account	Press  + FORWARD  or BACKWARD  .
Next unread	Press  .
Previous unread	Press  ,  , then  .
Resequence	Press  +  .
Reset order/ delete read	Press  ,  , then  .
Previous menu/ back	Press  .
Field Programmer	Do one of the following: <ul style="list-style-type: none"> <li>Logged into route: Tap , , , then .</li> <li>Not logged in route: Tap , , then .</li> </ul>

Function	Explanation
Data Logger	<p>Do one of the following:</p> <ul style="list-style-type: none"> <li>Logged into route: Tap , , , then .</li> <li>Not logged in route: Tap , , then .</li> </ul>
Bluetooth Pairing (with the R900 Belt Clip Receiver)	<p>Do the following:</p> <ol style="list-style-type: none"> <li>Power on the R900 BCR by pressing  for two seconds on the R900 Belt Clip Receiver.</li> <li>Tap , ,  on the Nomad.</li> <li>Click .</li> <li>Select the Belt Clip in the drop-down selection list.</li> <li>Click .</li> </ol>

## Adjusting System Settings

System settings affect how the handheld displays and accesses data. Although these settings are factory-set to meet the needs of most meter reading processes, you can change some of the settings so that they better suit your needs. These settings are typically set once and never changed; however, you can adjust these settings any time.


## Calibrating the Stylus

The Nomad handheld has a touchscreen display that uses a stylus for ease-of-use. Because each person's touch differs, it is important to calibrate the stylus to the touchscreen for the user's own personal touch.



All functions are available without the stylus by using keyboard.

To calibrate the stylus, complete the following procedure.

- 1 On the N\_SIGHT R900 Login screen, tap **M** or touch .

The N\_SIGHT R900 Main Menu screen appears.

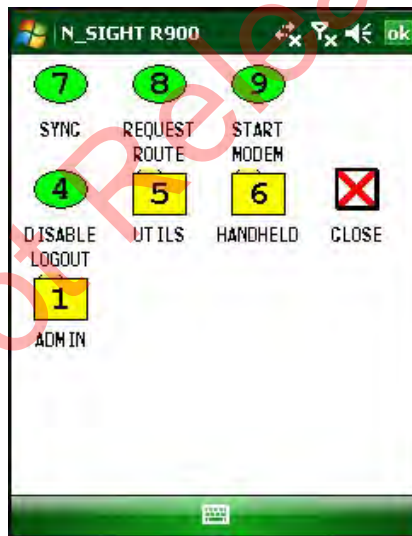




Figure 4.13 N\_SIGHT R900 Main Menu

- 2 Press **6** or touch item  **Handheld**.
- 3 Press **9** or touch  **Stylus**.

The Stylus Calibration screen appears like Figure 4.14.



Figure 4.14 N\_SIGHT R900 Stylus Calibration Screen

Calibration is simply done by touching the center of the target with the stylus for a couple of seconds and releasing. When the target moves to another place, repeat the operation.

- 4 Press the stylus on the center of the target until it moves, and then release.

Once released the target moves to the next corner of the screen.



Remember just to touch the screen; there is no need to press hard or to punch it.

The target moves to another location on the screen similar to that illustrated in Figure 4.15.

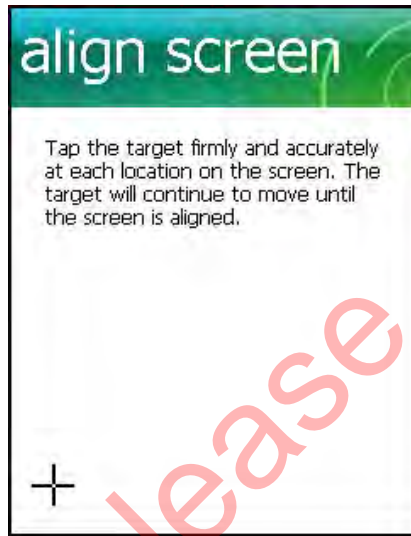



Figure 4.15 Stylus at Another Location on Screen

- 5 Repeat pressing the stylus on the center of the target until it moves, and then release.
- 6 When finished, press .

The handheld returns to N\_SIGHT R900 Main Login screen.

## Changing the Handheld Properties


The section allows you to adjust or change the following properties for the handheld:

- Key clicks
- Reading entry direction
- Route direction

### Working with the Properties Screen

To access the Properties screen, complete these steps:

- 1 On any reading entry screen, press

 on the expandable keypad.

The Properties screen appear as illustrated in Figure 4.16.



Figure 4.16 Handheld Properties Screen

## Changing the Reading Entry Direction

As you enter a reading in the handheld, each number can be displayed from right to left or from left to right.

- 2 In the **Read Dir** field, touch the down arrow and do one of the following:
  - Select **LEFT TO RIGHT** if you want the number to begin from the left.
  - Select **RIGHT TO LEFT** if you want the number to begin from the right.

These setting toggle between Left to Right or Right to Left according to the current setting.



This procedure affects only accounts whose directions have not been set by the host computer. If the reading-entry direction of an account has been set by the host computer, the host setting replaces your setting.

## Changing the Route Read Direction

The handheld typically displays meters of a route from the first meter to the last meter. However, you can change the order that meters are displayed so that they are shown from the last meter to the first meter.

- 3 In the **Route Dir** field, touch the down arrow and do one of the following:
  - Select **FORWARD** if you want the readings to advance to the next unread account in the route.
  - Select **BACKWARD** if you want to change the directions of the readings to go backward to the previous unread account in the route.

These settings toggles between Forward or Backward according to the current setting.

## Turning Key Clicks On and Off

The Key Clicks feature allows you to control how the handheld responds when you press a key. When this feature is ON, the handheld beeps whenever you press a key. Turning the Key Clicks feature on can



help you reduce errors by making sure that you press each key fully. If you do not press a key fully, the handheld does not acknowledge your entry. You can turn the Key Clicks feature on or off at any time.

4 Do one of the following:

- Select the check box to enable **Key Clicks**.
- Leave the check box empty to disable the **Key Clicks**.

These settings toggle between on (checked) or off (unchecked) according to the current setting.

5 Touch **OK** to save your settings.

You return to the reading-entry screen or your previous screen.

## Configuring RF/Serial Properties

Depending on the type of accounts on your route, you may have to configure the RF antenna, the type of probe, or serial properties you are using. Follow this procedure to configure or change the RF antenna, the type of probe, or serial properties.

1 Press .

The **System Menu** appears as illustrated in Figure 4.17.

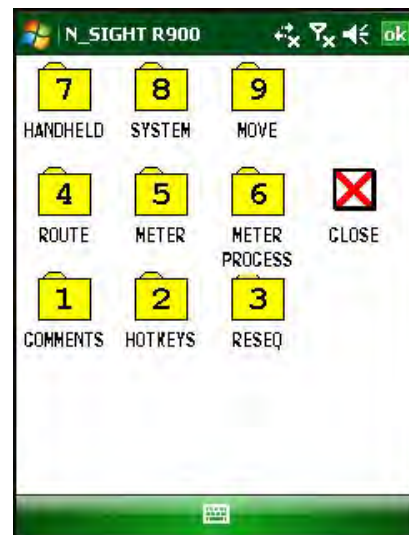


Figure 4.17 N\_SIGHT R900 F1 Menu

- 2 Touch .

The **System Menu** appears as illustrated in Figure 4.18.

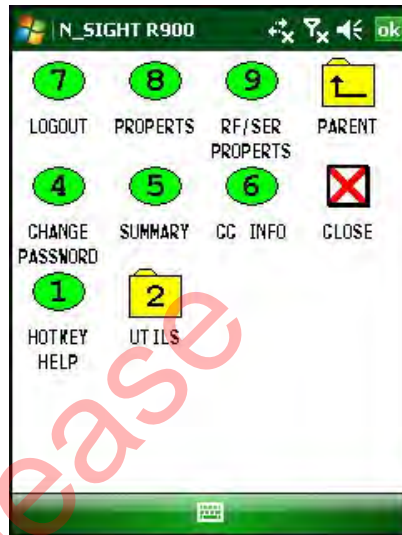



Figure 4.18 N\_SIGHT R900 System Menu

- 3 Touch .

The **RF/Serial Properties** screen appears as illustrated in Figure 4.19.

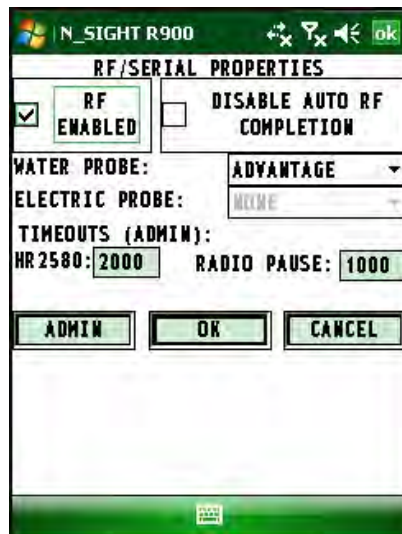


Figure 4.19 RF/Serial Properties Screen

---


## Turning On and Off the Nomad

This section explains how to turn the handheld on and off, and then how to sign on to access the screens needed to complete meter reading tasks.


Whenever the handheld is in a communication cradle, it is on. This is because, when connected properly, the cradle supplies power. However, once the handheld is taken out of the cradle, the unit runs on its battery. When powered by the battery, you can manually turn on the handheld and you can turn it off automatically or manually.

Use the following procedures to turn the handheld on or to turn it off manually.


### Turning the Nomad On

Turn on the Nomad Handheld by pressing and releasing the  button. The Nomad shows a menu, data-entry, or message screen depending upon the last activity performed with the unit.

One of the most convenient features is *suspend/resume*. There is no waiting for the unit to boot up every time it is turned on. (This does not occur the first time the unit is powered ON.)

 A message indicating low battery can appear on the battery LED located on right side of the unit. For a new Nomad, be sure to connect the plug to the power cord and attach to the power supply. The unit will be charged in about 4.5 hours. Neptune recommends that you fully charge the unit prior to your first use.

### Turning the Nomad Off

Manually turn off the handheld by pressing and holding down the  button for five seconds, then release. Choose Shut Down. The display goes blank indicating that the handheld is off.

If you allow the handheld to remain inactive for the factory-set delay of 45 seconds or for the delay time specified by the host computer, it turns off automatically. After this period of inactivity, the screen of the handheld goes blank and the unit turns off to conserve the battery. Just tap the screen to use the Nomad again.

---


## Logging In and Out of the N\_SIGHT R900

This section explains how to log into N\_SIGHT R900 on the handheld to access the screens needed to complete meter reading tasks.

### Logging Into N\_SIGHT R900 on the Nomad

After you have loaded a route, or after you have exchanged meter readings and route data with the host computer, you need to log into N\_SIGHT R900 on the handheld. Signing on gives you access to the screens you need to collect and exchange route and meter data.

Complete the following steps to log into N\_SIGHT R900 on the Nomad.

- 1 If you have not already done so, press  to turn on the Nomad.

If you see the message **Not Uploaded**, this means the handheld has been loaded but has not yet been uploaded. This is normal if a new route was just loaded to the handheld.

Touch  or **Synchronize** to start Communications. For more information, refer to "Communicating with the Host Computer," on page 7-1.

You can see a message like the one illustrated in Figure 4.20.

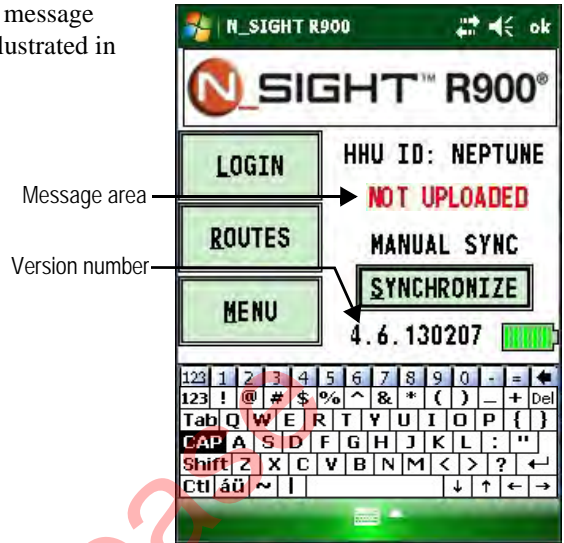


Figure 4.20 N\_SIGHT R900 Message Area

- 2 Click **LOGIN**.



There may be times that the Clock Error screen appears when you are attempting to log in. When this screen appears, continue with the following steps.

A Clock Error screen appears, prompting you to log on and manually set the clock, as illustrated in Figure 4.21.



Figure 4.21 N\_SIGHT R900 Clock Error Screen

### 3 Click **Yes**.



If you answer **NO** to the clock error message, the Login screen appears again.

After you click Yes, the Set Date/Time screen appears as illustrated in Figure 4.22.

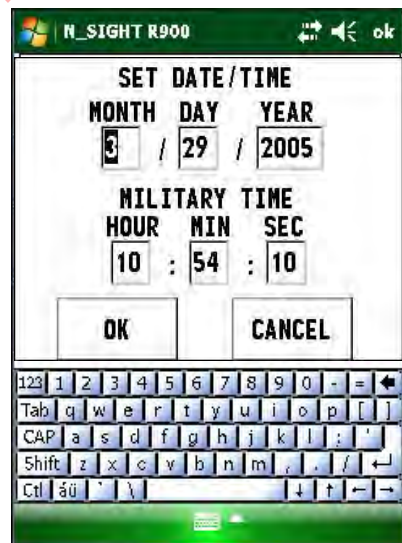


Figure 4.22 N\_SIGHT R900 Set Date / Time Screen

- 4 If applicable, make any changes to the date and time.

The correct date and time to use is the date and time that the handheld last synchronized.

- 5 When the date and time are accurate, click **OK**.

The Handheld Login screen appears as illustrated in Figure 4.24.

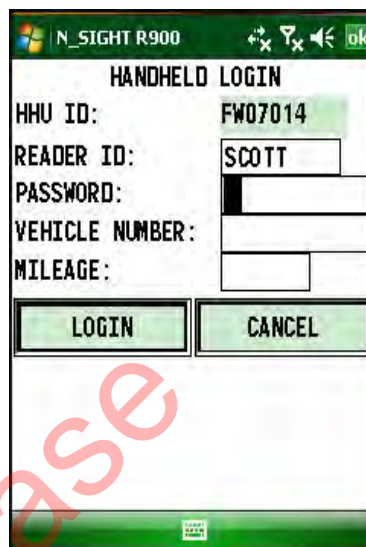


Figure 4.23 N\_SIGHT R900 Handheld Login Screen

The Reader ID field displays the information contained in the N\_SIGHT R900 system.

- 6 Complete the following information as applicable:
  - **Password** (Determined by N\_SIGHT R900 setup)
  - **Vehicle #** (Optional)
  - **Mileage** (Optional)

- 7 Click **LOGIN**.

The Select Route screen appears as illustrated in Figure 4.24.

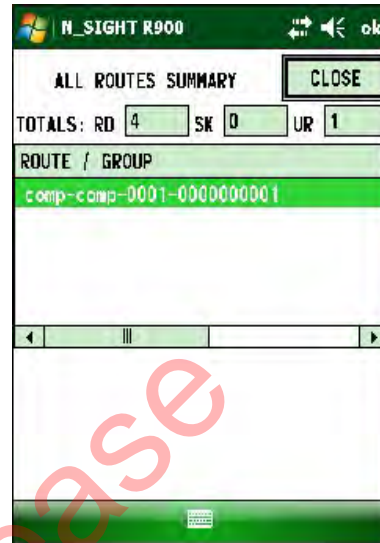


Figure 4.24 N\_SIGHT R900 Select Route Screen

- 8 Highlight the route you want, and click **OK**.

A message appears similar to the one illustrated in Figure 4.25.

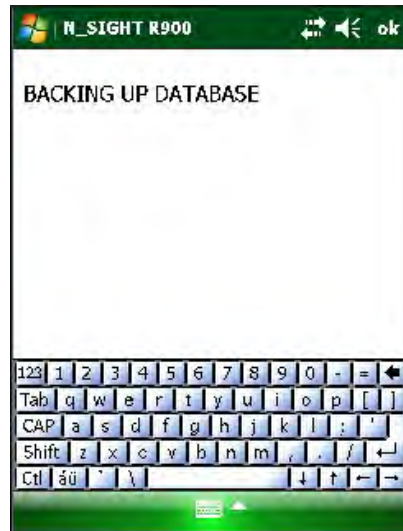


Figure 4.25 N\_SIGHT R900 Initializing Message



When the software has finished initializing a Reading Entry screen indicating that the sign on process is complete and that the unit is ready for use in collecting readings. See Figure 4.26.

For assistance in using the Nomad to collect meter readings, refer to Figure 6 on Page 6-1.



Figure 4.26 N\_SIGHT R900 Reading Entry Screen

## Logging Out of N\_SIGHT R900

The only time that you need to log out of N\_SIGHT R900 on the handheld is just before you begin exchanging information with the host computer. Logging out gives you access to the communication features of the handheld. Because logging out of N\_SIGHT R900, instructions for logging out on the handheld are included in the procedures that describe how to exchange information with the host computer. For more information, see “Exiting the Software,” on page 7-1.

If you allow the handheld to remain inactive for the factory-set delay of 45 seconds or for the delay time specified by the host computer, it turns off automatically. After this period of inactivity, the screen of the handheld goes blank and the unit turns off to conserve the battery.

## 5 Setting Up the R900 Belt Clip Receiver

---

### R900 Belt Clip Receiver

This section introduces you to the R900® Belt Clip Receiver (R900 BCR). It will explain how the R900 BCR is incorporated into the N\_SIGHT R900 host software, and how it will be used by both meter readers and operators. It will also help you become familiar with the basic features and functions the handheld computer offers.

This chapter provides basic instructions for unpacking and inspecting the R900 BCR. It also gives instructions for setting up the R900 BCR, becoming familiar with the display, pairing it with the handheld, and usage.

### R900 Belt Clip Receiver Overview

The R900 BCR is a software-defined receiver capable of simultaneously receiving R900, Advantage, and Pocket Pro Reader RF transmissions.

- ◆ The R900 BCR collects readings and then transfers these readings to the handheld through the Bluetooth connection. The R900 BCR also has the capability to receive and store R900 readings that can be imported into the billing system without the use of a handheld. Because the R900 BCR is software-defined, you can apply firmware updates in order to keep your R900 BCR current with new products introduced to the market.

---

## Nomad Handheld and R900 Belt Clip Receiver

The Trimble® Nomad® (Nomad) handheld utilizes Bluetooth connectivity to Neptune's R900 BCR to receive the meter readings.



Figure 5.1 Meter Reading Cycle

---

## Unpacking and Inspecting Equipment

Besides using normal care, you need no special instructions to unpack the handheld or the equipment that you purchased with it.

Check that you have received all the items you need for the type of system configuration that you are using and inspect the items for shipping damage. If you detect any damage, return the damaged equipment to Neptune. Instructions for shipping the handheld to Neptune are given in "Returning your R900 Belt Clip Receiver," on page 2-7 of this manual.



Save the packing box that was used to ship the handheld. Should you ever need to ship the handheld, you need to repack the unit in its original shipping box. The handling involved in land and air transport often subjects the handheld to impact beyond that which occurs during normal use. The packing box is designed to absorb shocks and protect the handheld device during shipping.

## R900 Belt Clip Receiver Components

Figure 5.2 shows the basic components of the R900 BCR.



Figure 5.2 R900 Belt Clip Receiver Components





## Using the R900 Belt Clip Receiver

The following section explains how to use the R900 BCR.





### Understanding the R900 Belt Clip Receiver Modes

The following tables describe the R900 BCR modes of operation. You change modes on the R900 BCR with a combination of the Mode and Enter buttons. To cycle through available modes, you press the Mode button. The Mode indicator will flash with the color for the mode to enter. To enter the Mode, you press the Enter button within two seconds of pressing the Mode button. If entered, the Mode indicator displays the newly-entered mode. If you do not press Enter within two seconds, the R900 BCR stays in the previous mode. This combination of Mode and the Enter button is done to prevent accidental mode changes during operation.

**Table 5.1 R900 Belt Clip Receiver Power**








Function	Explanation
Power ON	 Press  for two seconds. The backlight turns orange when the power is applied.  The unit takes approximately one minute to fully boot. The Mode and RF lights are white during most of boot-up. The unit is fully booted when the Mode and Enter light turn off and the Mode LED displays the previous mode of operation
Power OFF	 Press  for two seconds. The mode and RF lights blink until off.
Setting Date/Time	The R900 BCR synchronizes the time with the Nomad when the two are paired. The time on the R900 BCR defaults to the time from the last Nomad synchronization.

**Table 5.2 R900 Belt Clip Receiver Modes**

Function	LED Color	Explanation
<b>Reading Modes</b>		
<b>Normal</b>	<b>(Green)</b>	<p><i>Normal Mode</i> is used to connect through Bluetooth to a host device. Selection between Route (filtered) and RF Test (unfiltered) is made in the host device software.</p> <p>To enter this mode from other modes.</p> <p><b>MODE</b></p> <p>1 Press  until the Mode LED flashes green.</p> <p><b>ENT</b></p> <p>2 Press , and the Mode LED turns green.</p>
<b>Unattended</b>	<b>(Yellow)</b>	<p><i>Unfiltered Operations Mode</i> can operate using the battery or when connected to vehicle power.</p> <p>To enter this mode with battery power:</p> <p><b>MODE</b></p> <p>1 Press  until Mode LED is yellow.</p> <p><b>ENT</b></p> <p>2 Press .</p>

*continued on next page*











**Table 5.2 R900 Belt Clip Receiver Modes**

Function	LED Color	Explanation
		<p>To enter from when connected to vehicle power:</p> <p><b>MODE</b></p> <p>1 Press  until the Mode LED is yellow.</p>
		<p><b>ENT</b></p> <p>2 Press  and release.</p> <p><b>ENT</b></p> <p>3 Press  again and hold for five seconds, then release.</p> <p>The Mode LED is Magenta.</p> <p>4 Connect the USB.</p>
 <p>The USB charger must be capable of supplying 1A of current.</p>		
USB mass storage	(White)	The <i>SD card</i> appears as an external drive to the PC.
		<p>To enter this mode:</p> <p>1 Connect the <b>USB</b> to the R900 BCR and to the PC.</p>
 <p>The USB must be connected before the unit can enter the USB mass storage mode.</p>		
		<p><b>MODE</b></p> <p>2 Press  until Mode LED flashes white.</p> <p><b>ENT</b></p> <p>3 Press .</p> <p>The SD Card now shows as an external drive attached to the PC.</p>

## Accessing the R900 Belt Clip Receiver Status Screen

The R900 BCR must first be set to Normal Mode to access the R900 BCR Status screen. The following tables explains how to access the status screen on the handheld.

**Table 5.3 R900 Belt Clip Receiver Software Functions**


Accessing R900 Belt Clip Receiver Status Screen	
While in route	Neptune Key, System, UTILS, AMR Status =  ,  ,  , 
	<ol style="list-style-type: none"> <li>1 Select <b>Advanced Options</b>.</li> <li>2 Select the <b>check box</b>.</li> <li>3 Select <b>Belt Clip Status</b>.</li> </ol>
From the Synchronize screen	TAB twice, UTILS, Belt Clip Status = Click  ,  ,  .
	<ol style="list-style-type: none"> <li>1 Select  .</li> <li>2 Select  <b>Utils</b>.</li> <li>3 Select  <b>Belt Clip Status</b>.</li> </ol>



## Understanding the R900 Belt Clip Receiver LED Operating Modes

To help you better interpret the different colors for the flashing Mode LED, refer to the following table.


**Table 5.4 R900 Belt Clip Receiver LED Operating Modes**


State	LED Colors
Unit powered OFF	No color; LEDs off.
Power 	
On-Battery 100% – 31%	Green
On-Battery 30% – 16%	Yellow
On-Battery 15% – 6%	Red
On-Battery 5% – Critical	Flashes red
Battery – Charging	Flashes yellow

Mode	
Normal mode	Green
Unattended mode	Yellow
Installed mode	Magenta
Mass storage mode	White

*continued on next page*

**Table 5.4 R900 Belt Clip Receiver LED Operating Modes**

State	LED Colors
<b>RF Mode</b> 	
No reading being received	Off
Receive R900/ERT packet	Flashes green when receiving
Receive Advantage packet	Flashes cyan when receiving
No reading received in two + minutes	Solid red

<b>Bluetooth</b> 	
Not Connected	Off
Pairing	Flashes blue
Connected	Blue
<b>Error Codes</b>	
Temperature error	Bluetooth and Power LED flash red five times
Hardware error	Bluetooth and Power LED are solid red
Battery error	Power LED flashes red and yellow
Cannot power on - battery too low	Power LED flashes red three times
SD card error	Mode LED is solid red

## Understanding the External Battery Charger Status

Refer to the following table for a description of the external battery LED.

**Table 5.5 External Battery Charger LED**

LED	Indicates
Red, yellow, green or OFF	Startup initialization when applying power
OFF	No battery inserted
Yellow	Battery charging
Solid green	Battery charged successfully
Red	Error condition


## Pairing the Trimble Nomad to the R900 Belt Clip Receiver through the Bluetooth

Complete these steps only if you are pairing the Nomad to the R900 BCR for the first time.


### Pairing the Trimble Nomad

To pair the Nomad to the R900 BCR, complete the following steps.

- 1 Power **ON** the R900 BCR and set to Normal Node, if not already set. See “Understanding the R900 Belt Clip Receiver LED Operating Modes,” on page 5-8.

- 2 On the Nomad, click .

- 3 Click  – **UTILS.**

- 4 Click  – **Belt Clip Status.**

The AMR Connection screen appears. The R900 BCR is visible in the **Broadcasting Device** drop-down selection list.

- 5 Choose the device from the drop-down selection list and click **Bluetooth.**

The R900 Belt Clip Receiver Status screen now displays the device details.


- If you have previously paired a device, go to the **R900 BCR Status** screen and not the AMR Connection screen.
- If you want to **Change Devices**, you can click this option on the bottom of the R900 BCR Status screen.

You then see the AMR Connection screen and can choose the device from the drop-down selection list.

## Using the R900 Belt Clip Receiver to Read a Route

To begin reading a route using the R900 BCR, you first need to load a route to the Nomad. See “Loading and Unloading Data for Handhelds” in the *N\_SIGHT™ R900® Online Help*.



Click  to load a route when you are working in the N\_SIGHT R900 host software. Press F1 to see the instructions for loading a route to a handheld.

Once the route is loaded and the pairing is complete, you can log in and the unit can receive readings from the R900 BCR.

## R900 Belt Clip Receiver Status Screen in N\_SIGHT R900

While the Nomad and the R900 BCR are paired, you can access a screen showing the status of the R900 BCR. You can see a message like the one illustrated in Figure 5.3.

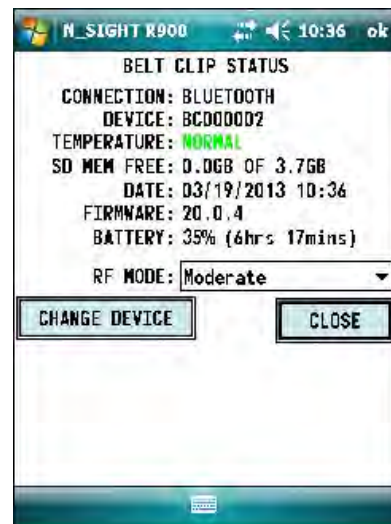


Figure 5.3 R900 Belt Clip Receiver Status Screen

The following information appears on this screen.

<b>Connection</b>	Displays the type of connection used to pair the R900 BCR, such as Bluetooth
<b>Device</b>	Displays the name of the R900 BCR
<b>Temperature</b>	Displays the temperature of the R900 BCR, such as normal.
<b>SD MEM Free</b>	Displays the amount of available memory for the SD card.
<b>Date</b>	Displays the date and time as follows: <ul style="list-style-type: none"><li>• Date: MM/DD/YYYY</li><li>• Time: HH:MM</li></ul>
<b>Firmware</b>	Displays the version of the firmware on the R900 BCR
<b>Battery</b>	Displays the available battery percentages
<b>RF Mode</b>	Allows you to change the reading mode for the R900 BCR by clicking the drop-down selection list. <ul style="list-style-type: none"><li>• <i>Efficiency</i> – reduced RF performance and best battery life</li><li>• <i>Moderate</i> – default RF performance</li><li>• <i>Performance</i> – best RF performance and decreased battery life</li></ul>

### RF Performance Modes




This Mode can be changed from the R900 BCR Status screen. The unit has three options for the RF performance during a reading:

- |                      |   |
|----------------------|---|
| <b>1 Efficiency</b>  | Reduces RF performance* and best battery life   |
| <b>2 Moderate</b>    | Default RF performance*                         |
| <b>2 Performance</b> | Best RF performance* and decreased battery life |

\*RF performance refers specifically to the throughput of the receiver which can impact the speed with which readings are processed in high density areas. Range is not impacted by these modes.

## Selecting the R900 Belt Clip Receiver Reading Mode

To choose the reading mode, complete the following steps.

- 1 On the Nomad, click .
- 2 Click  – **Utilities**.
- 3 Click  – **R900 Belt Clip Receiver Status**.

The R900 Belt Clip Receiver Status screen appears.




- 4 Tap the drop-down selection list for **RF Mode** and you can choose the reading mode. See the modes listed above.

## Using the R900 Belt Clip Receiver RF Test Mode

RF Test Mode allows the R900 BCR to go into a continuous receive mode and listens for any and all R900 transmissions.

### From the Login Screen

To access RF Test Mode from the Login screen, complete the following steps.

- 1 On the Nomad, click .
- 2 Click  – **Utilities**.
- 3 Click  – **RF Test**.

The RF Test Mode screen appears as illustrated in Figure 5.4.

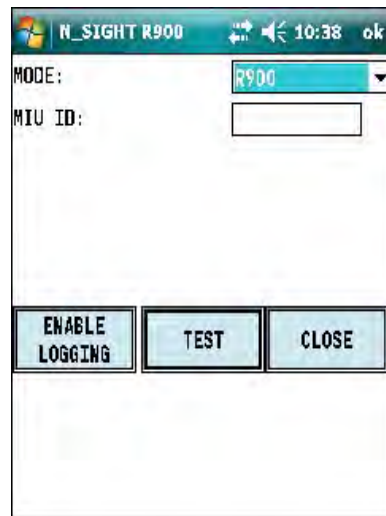






Figure 5.4 R900 Belt Clip Receiver RF Mode Screen

## From the Route Screen

To access RF Test Mode from the Route screen, complete the following steps.

- 1 In the route, click .
- 2 Click  – **System**.
- 3 Click  – **Utilities**.
- 4 Click  – **RF Test**.

The RF Test Mode screen appears as illustrated in Figure 5.4.



Figure 5.5 R900 BCR RF Mode Screen from Route

## R900 Belt Clip Receiver SD Card Functionality

Any data that is read by the R900 BCR and sent to the handheld is stored on its internal SD card.

The SD card also handles the firmware updates explained in “Using the R900 Belt Clip Receiver,” on page 5-4.

---

## Updating R900 Belt Clip Receiver Firmware



You cannot update multiple R900 BCRs at once; they must be updated individually.

When there is an update to the R900 BCR firmware, it is available from Neptune through the web updates in the N\_SIGHT R900 software, or it can be obtained from Neptune Customer Support through email or direct upload to an FTP site.

With either choice for receiving the firmware update; the firmware is updated in the N\_SIGHT R900 database and then sent to the R900 BCR through the USB transfer cable or saved to the SD card and installed on the R900 BCR.



To update the R900 BCR firmware update with the USB cable, the R900 BCR must first be connected to the PC and be in Mass Storage Mode. To update through the SD Card, the Firmware Update File can be transferred to the SD card by using an SD Card Reader

To update the R900 BCR firmware, complete the following steps.

- 1 Connect the R900 BCR to the PC and place in **Mass Storage Mode**.
- 2 In the N\_SIGHT R900 host software, select **Utilities**.
- 3 Select the **Beltclip Firmware** tab.

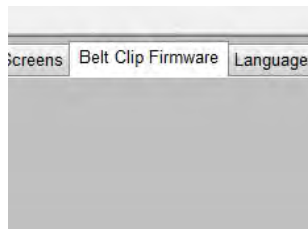


Figure 5.6 Tab within N\_SIGHT R900 Utilities



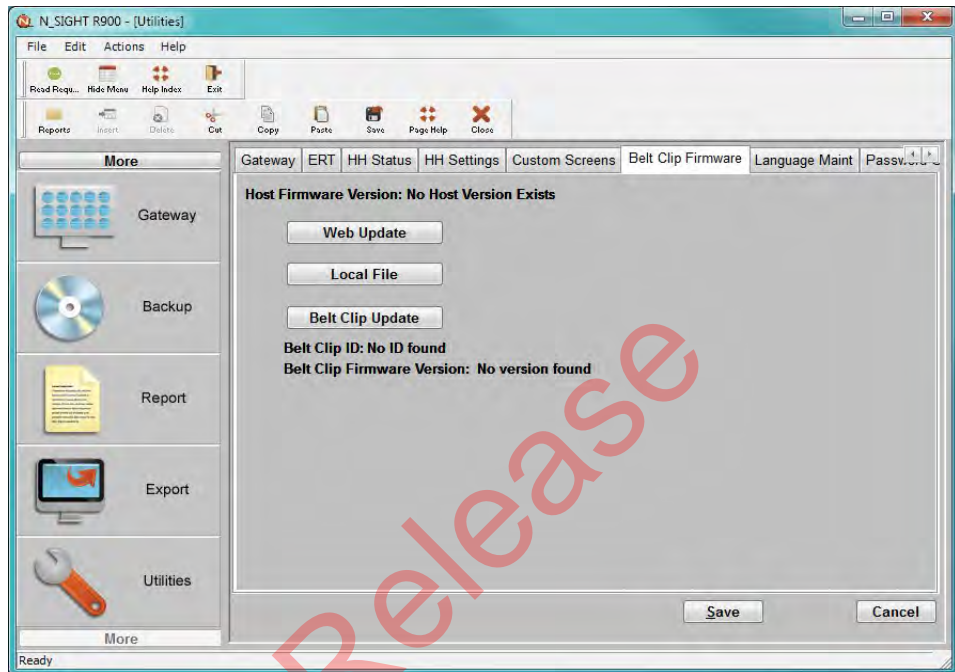


Figure 5.7 R900 Belt Clip Receiver Firmware Tab with Update Options



The Web Update and Local File buttons perform the same task of updating the database with the updated firmware version depending on where the updated firmware file is located.

## How the Firmware Update Works

The following explains how the firmware update works.

**Web Update**—looks to the Neptune servers for an updated version of R900 BCR firmware and downloads it to the database

**Local File**—allows you to import updated firmware from a thumb drive, network drive, or FTP site into the database

**Belt Clip Update**—locates the updated firmware file after the updated firmware has been downloaded and sends it to the R900 BCR through the USB transfer cable

## 6 Gathering Route Data

---

This chapter provides instructions for using the handheld to collect meter readings and route data. The procedures in this chapter assume that route assignments have already been loaded onto the handheld.

When using this chapter, keep in mind that a sample reading-entry screen is shown throughout the manual. The reading-entry screen of your handheld may not resemble the one shown here. This inconsistency is caused when the N\_SIGHT R900 operator customizes the screen so that it better suits the needs of your company.

Pilot Release

## The Reading Entry Screen

The following illustration shows the N\_SIGHT R900 Reading Entry screen.

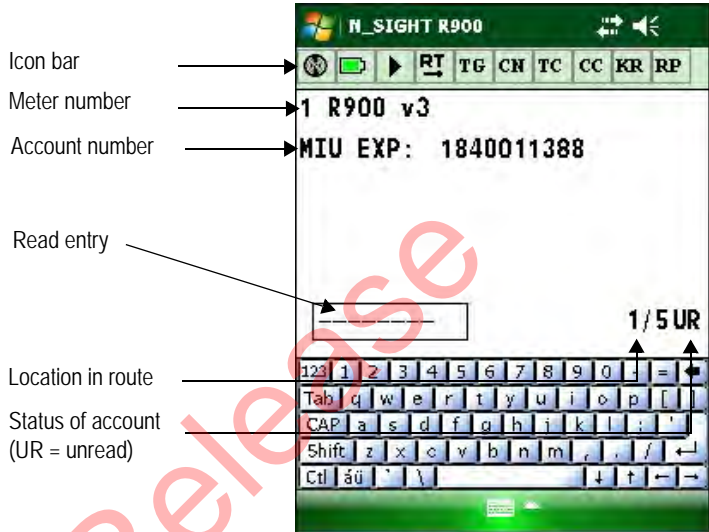


Figure 6.1 N\_SIGHT R900 Reading Entry Screen



## Manually Collecting Meter Readings

When using the CE5320 to collect meter readings, typically you need to enter only the reading for each meter. However, sometimes you may need to also enter a trouble code or comment concerning conditions at the account. Additionally, you may “skip” an account by inserting a “skip code” and indicating why you skipped the account. The procedures in this topic give you the information you need to manually collect or skip readings:

- “Entering a Reading,” which follows
- “Entering a Skip Code” on page 5
- “Entering Comment Codes” on page 7
- “Adding Free-Form Notes” on page 9

### Entering a Reading

Follow this procedure to enter a meter reading in the handheld.

If this is the first time that you have accessed a route, the reading-entry screen of the first meter in the route appears in the display. If the read direction is set for , “Left to Right,” then after the reading for the first meter is taken the screen advances to the second meter in the route. By clicking this icon, you can change the read direction to , “Right to Left.” The read direction toggles between these two read directions.

- 1 If you have not already done so, first log into N\_SIGHT R900 on the handheld, so that a reading-entry screen is appears in the display. See Figure 6.1 on Page 6-2.

For help with this task, refer to “Logging Into N\_SIGHT R900 on the CE5320,” on page 3-26 or “Logging Into N\_SIGHT R900 on the Nomad,” on page 4-31.

- 2 Using the number keys, enter the reading in the space provided.





Figure 6.2 N\_SIGHT R900 Reading Entry Field



The number of hyphens in the reading entry field indicate the number of reading digits required.

- 3 Touch **ok** or press .

The N\_SIGHT R900 software displays the next meter in the route, according to the route direction  or . Touching this icon and temporarily change the direction for the route. However, to change it for future uses, refer to the procedure for “Changing the Route Direction, Forward or Reverse,” on page 6-14.

- 4 Continue entering readings for each meter until you have completed all routes assigned to you.

As you complete each route, a message appears in the display to let you know that you have completed the route and are moving to a new one. Follow the instructions shown in the display to access the reading-entry screen of the next route.

## Entering a Skip Code

In some cases, you may be unable to collect a reading. If you are unable to collect a reading, you can enter a skip code, giving the reason that the reading could not be obtained.



In the V4 file format, screens can appear differently depending on the file format you are using. For example, you could have either Coded Notes or Comment Codes.

Follow this procedure to enter a skip code instead of a reading.

- 1 From the reading-entry screen of the meter for which you want to enter a skip code, press **5** on the CE5320 keypad or the Nomad screen keypad.

A screen appears prompting you to enter a skip code in place of the reading. See Figure 6.3.

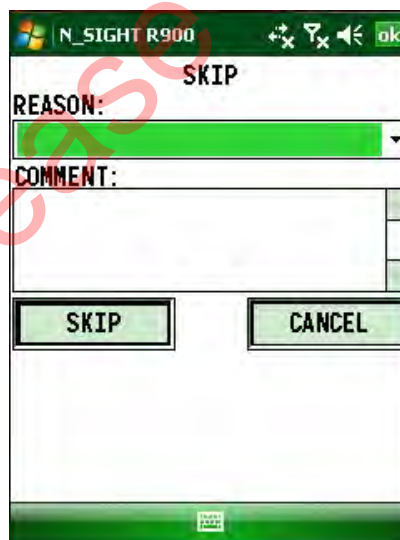


Figure 6.3 N\_SIGHT R900 Skip Order Screen

- 2 Click the drop-down selection list as illustrated in Figure 6.4 to choose the appropriate reason code.

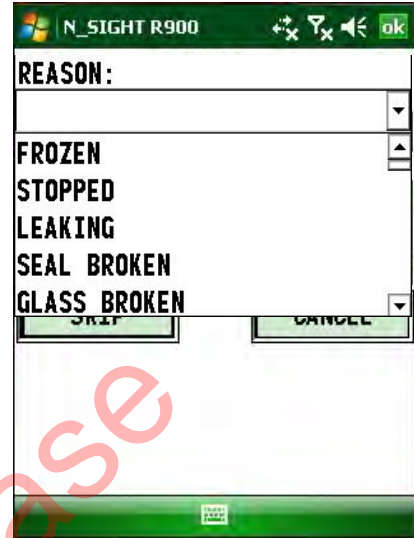


Figure 6.4 N\_SIGHT R900 Skip Order Reason Codes

The actual codes that are available to you are determined by the host operator.

- 3 In **Comment**, type any notes for this account.
- 4 Click **Skip**.

The account is marked as skipped, as illustrated in Figure 6.5. The N\_SIGHT R900 software displays the next meter in the route.



Figure 6.5 N\_SIGHT R900 Skipped Read


- 5 Continue entering readings within this route.

## Entering Comment Codes



In the V4 file format, screens can appear differently depending on the file format you are using. For example, you could have either Coded Notes or Comment Codes.

In some cases, you may need to enter a comment code (a coded note) for trouble or another reason for a meter. For example, if the glass is broken or the seal is broken, the meter is leaking or frozen, or has a bad dial. If you notice trouble while collecting a reading, you can enter a trouble code. Follow this procedure to enter a trouble code.

- 1 From the reading-entry screen of the meter for which you want to enter a trouble code, touch .

A Coded Notes screen appears prompting you to enter coded notes. See Figure 6.6.

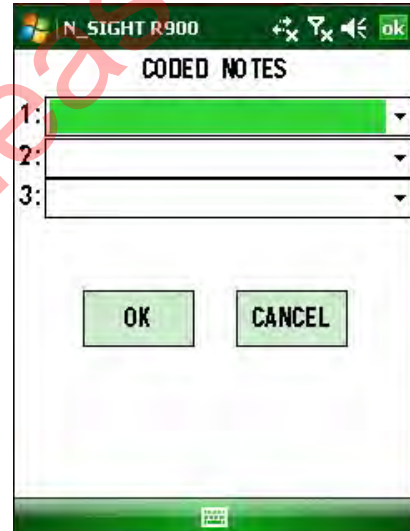



Figure 6.6 N\_SIGHT R900 Coded Notes Screen



- 2 Touch the DOWN  arrow to view the list of codes, as illustrated in Figure 6.7.
- 3 Select the appropriate code for the trouble found.
- 4 Select one or two additional codes, if applicable.

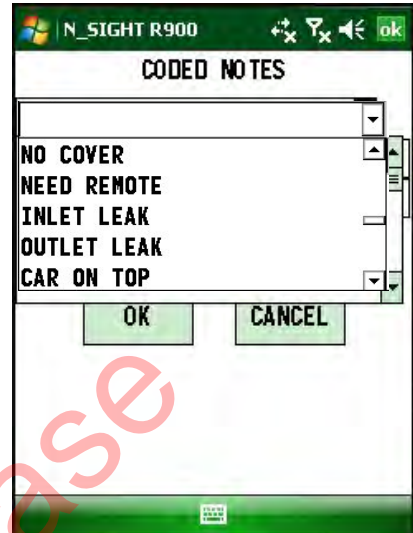




Figure 6.7 Drop-down Selection List of Coded Notes

1. Touch  to save the trouble codes associated with the meter.

The icon changes to , as illustrated in Figure 6.8 to show that there is a comment code attached to this account. This works as a toggle.


Marked Comment Code 



Figure 6.8 N\_SIGHT R900 Comment Code

- 5 To view the trouble codes entered for this account, click the red icon.
- 6 Click **ok** to return to the Route.
- 7 Continue entering readings within this route.

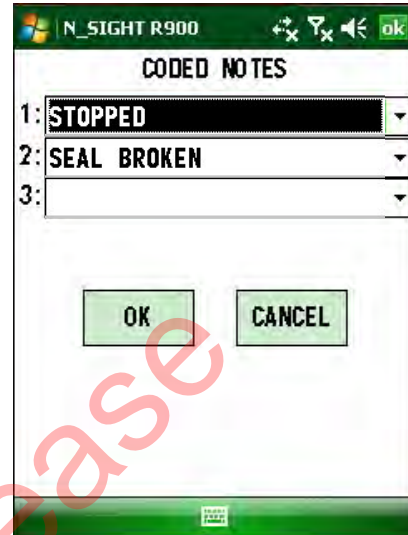


Figure 6.9 Viewing Comment Codes

## Adding Free-Form Notes



Note to Pat! After you load the V2 format, this changes to Customer Notes and the appearance also change.

In some cases, you might want to add some free-form notes to inform your office about a change to an account. When the N\_SIGHT R900 operator uploads data from your handheld, your message is sent to the N\_SIGHT R900 host software and may also be sent to your company's billing computer. You can also use this feature to create reminders for yourself. For example, you might use this feature to specify the exact location of a meter. Follow this procedure to enter a special message.

- 1 From the reading entry screen of the meter for which you want to enter free-form notes, press



- 2 Touch **B**.

A screen appears prompting you to enter a free-form notes. See Figure 6.10.

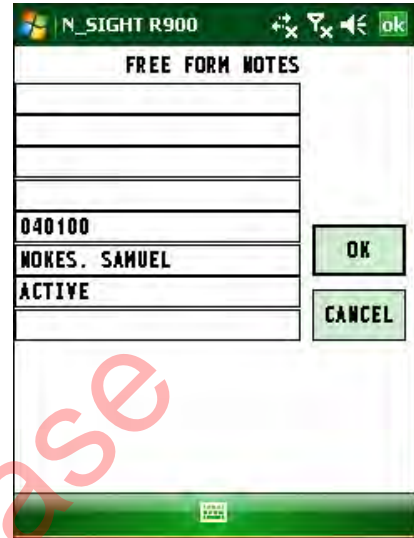


Figure 6.10 N\_SIGHT R900 Free Form Notes Screen

- 3 Begin typing your note in the first blank line.
- 4 At the end of the line, tab to the second line to continue.
- 5 When you've completed your notes, touch **ok**.

## Leaving a Reading Blank

In some cases, you need to leave a reading blank. For example, if a meter's reading is to be estimated by your company's billing computer. Follow this procedure to skip over a meter without entering a reading or a skip code.

- 1 Access the reading entry screen of the meter you want to skip.

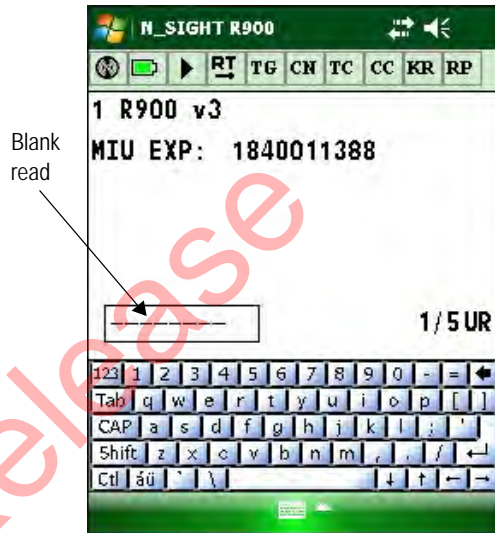




Figure 6.11 Leaving a Meter Reading Blank

- 2 Using the direction keys, press the FORWARD  or BACKWARD  key to display the next meter in the route without entering a reading.



Your ability to use this feature can be restricted by your company. In such cases, the handheld will inform you that you must enter either a reading or a skip code.

The next meter in the route appears in the display.

## Collecting RR Readings

When you receive your Neptune handheld, it is factory-set to collect readings manually using the keyboard. When you begin readings manually, the handheld screen appears similar to the one illustrated in Figure 6.12.

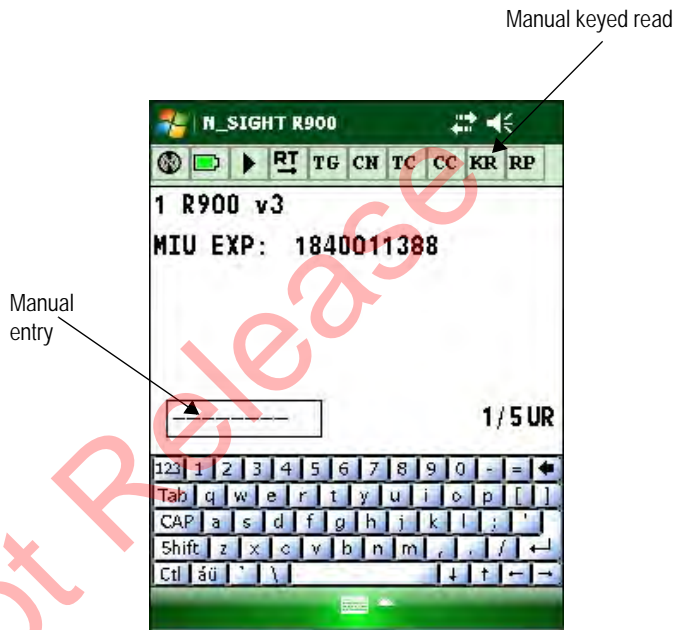


Figure 6.12 N\_SIGHT R900 Manual Reading Screen



While on a keyed account or an R900 account the handheld reads R900s within range, holds these reads in a buffer, and distributes them to the correct accounts in the route once an R900 account appears on the display.

## Collecting an RF Reading

When you approach an RF account while collecting meter readings on a route, the screen similar to the one illustrated in Figure 6.13 appears.

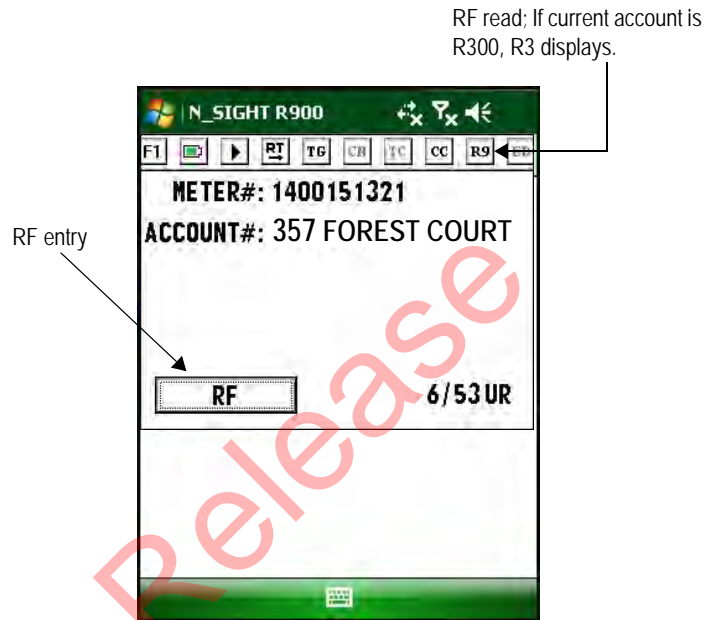


Figure 6.13 N\_SIGHT R900 RF Reading Screen



While on a Keyed account or an R900 account, the handheld collects R900 meter readings in the background.

If the account you are reading is an R900 account, the reading icon **R9** at the top right of the screen displays as R9. If the account is an R300 account, the reading icon displays as R3. See Figure 6.13.

At an RF account, the unit is ready to receive a reading transmitted from an RF transmitter, like an R900. If the account is set up properly and the RF transmitter is transmitting properly, you should receive a reading for the account once you are in range of the transmitter.

---

## Working with Accounts

While you are reading meters and when you are working with accounts, there are certain tasks that you need to perform to help you with your data collection.

### Changing the Route Direction, Forward or Reverse

This icon is used for changing the Route Direction from a Forward direction (advancing from account 1 to account 2) to reverse direction (advancing from account 2 to account 1) as readings are being recording in the handheld.

On the Reading  
Entry screen, click



Right route direction icon



Figure 6.14 Left to Right Route Direction Icon


The icon changes to , as illustrated in Figure 6.15. This works as a toggle between the two read directions, forward and reverse.



Figure 6.15 Right to Left Route Direction Icon

## Tagging an Account

While you are reading meters, there may be a need to tag an account and come back to it later. Follow this procedure to tag or untag accounts within the route for which you want to complete the readings later on.




- 1 On the Reading Entry screen, do one of the following:

- Click **TG**.
- or
- Press **T**.

Tag account icon →




Figure 6.16 Tag Account Icon

The icon changes to , as illustrated in Figure 6.17. This works as a toggle between tagged and untagged accounts.

Tag icon →



Figure 6.17 Tagged Account

- 2 Continue entering readings within this route.
- 3 To search the tagged accounts so that you can complete the readings for them, press .

## Finding Information

When you are reading meters and need to find an account, an address, a meter number, or some other information, you can easily do so by using the N\_SIGHT R900 Find function. If you already know specific information about a meter, such as its meter number, you can quickly display that meter by using the search function. When you use the search feature, the handheld searches for the specific information that you enter. When the software finds a meter whose data matches the information you entered, that meter appears in the display. Follow this procedure to find the information you need.

- 1 On the Reading Entry screen, press .

The **Find Order** screen appears as illustrated in Figure 6.18.

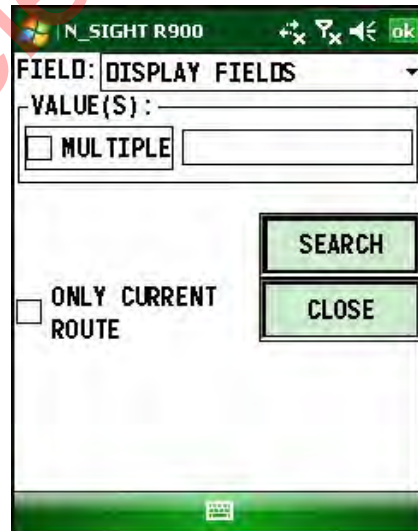


Figure 6.18 N\_SIGHT R900 Find Order Screen

- 2 Touch .

The list of fields displays for you to select the type of information you want to find. See Figure 6.19.

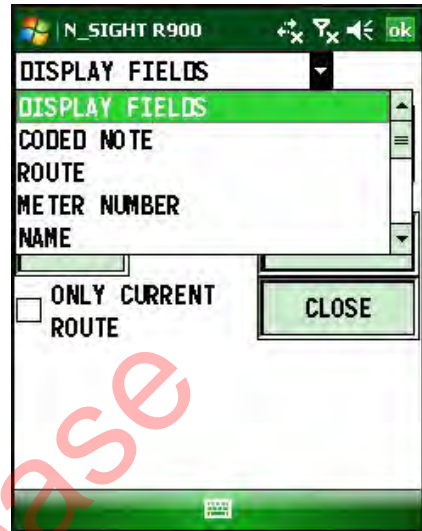


Figure 6.19 Search Display Fields

- 3 Select **Multiple** to enter more than one value for the search. See Figure 6.20.

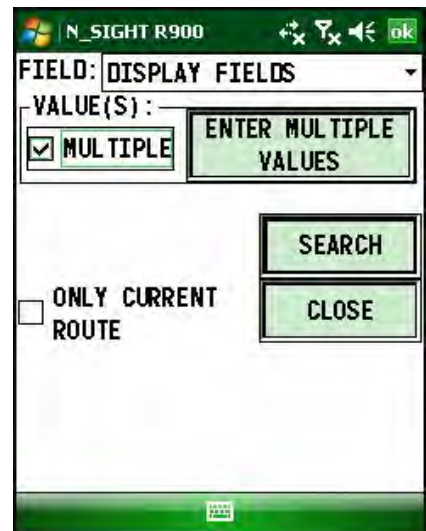



Figure 6.20 Search Screen Enter Multiple Values

Figure 6.21 Search Screen Multiple Values to Match

- 4 Touch the field for the information you want to find.  
Your selection appears in the field.
- 5 Type a value for the information you want to find in the **Value** field, if applicable.

 You can find information within only the current route, or within any of the routes you selected when you logged into N\_SIGHT R900. The field named Display Fields are typically where your address information is located. Use Display Fields as your address search field.

- 6 If you selected more than one route when you logged into N\_SIGHT R900, do one of the following:
  - Touch **Only Current Route** if you only want to search within the current route to find the information.
  - Leave the **Only Current Route** checkbox empty if you want to search within all the routes you selected when you logged into N\_SIGHT R900.

- 7 Touch one of the following to begin your search.
  - **Search>** if you want to search forward in the route
  - **<Search** if you want to search backward in the route

If only one exact match to your entered search criteria is found, it is displayed. If multiple accounts match your entered criteria, they will appear in a list form. You should browse the list and select the desired account.

## Validating Readings

If the audit feature has been set on the host computer, the handheld validates each reading you enter against the high/low range selected for the audit feature.

### Hi/Low Fails

If the reading falls within the high/low range, the handheld accepts the reading and advances to the next meter in the route. If the reading is outside the high/low range, the handheld does not accept the reading and the Hi/Lo/No/Inact Check screen appears. Use this procedure to complete a reading that falls outside the high/low range.

- 1 On the reading entry screen, enter the reading that falls outside the high/low range. See Figure 6.22.



Figure 6.22 Reading Outside High/Low Range

The handheld sounds and the Hi/Lo/No/Inact Check screen appears as illustrated in Figure 6.23.

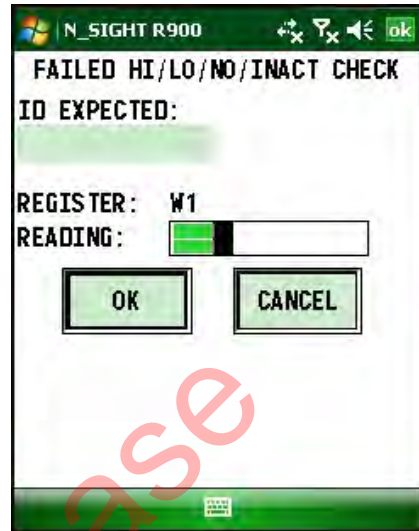


Figure 6.23 N\_SIGHT R900 Hi / Lo / No / Inact Screen

N\_SIGHT R900 wants you to be sure that you entered the number correctly.

- 2 If you are sure this is the correct reading, then enter the numbers again on the Hi/Lo/No/Inact Check screen.

You must enter the same digits in the reading to pass the high/low audit during the second attempt. If a different reading is entered during the second attempt, the system will fail the audit. This failure mode will continue until you enter the same reading twice.

- 3 Touch **ok**.

The reading is accepted as the next account appears.

## Removing a Reading

In some cases, you may need to clear or delete a reading. For example, if you make a mistake entering a reading and need to enter it again. Follow this procedure to clear an existing reading from the handheld.

- 1 Display the reading entry screen of the meter whose reading you want to clear. See Figure 6.24.



Figure 6.24 Reading to be Cleared



You can only clear or reset readings for the same day. If you completed readings for a previous day, you cannot reset the readings.

- 2 Press . Then touch , and touch .

The Reset Order screen appears as illustrated in Figure 6.25.

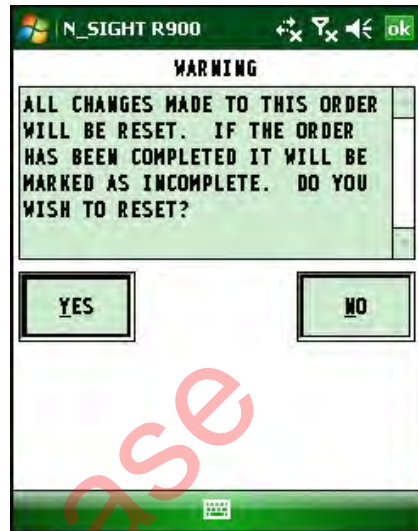


Figure 6.25 N\_SIGHT R900 Reset Order Screen

- 3 Press **Y** or touch **Yes** to reset the reading.



Figure 6.26 Reset Reading

The reading is then reset back to UR (unread).



You can now enter a new reading or skip code, or leave the reading blank and display the reading entry screen of the next meter on the route.



If you reset a created found meter account, the found meter account is cleared in its entirety.

---

## Clearing a Skip Code

In some cases, you may need to clear a skip code. For example, if you can now revisit the account you skipped and enter the reading. Follow this procedure to unskip a skip code from the handheld.

- 1 Display the reading entry screen of the meter whose reading you skipped. See Figure 6.27.

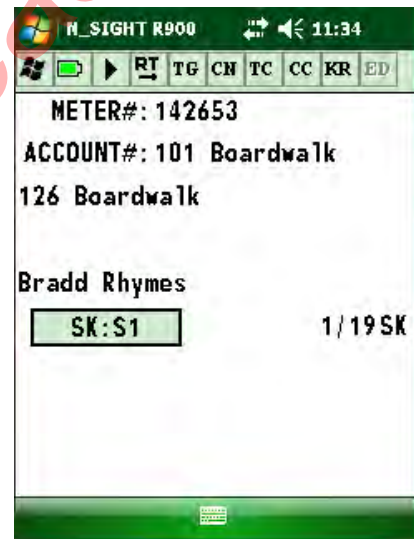


Figure 6.27 Reading to be Unskipped

- 2 Touch **Unskip**.

The Undo Skipped Order screen appears as illustrated in Figure 6.28.

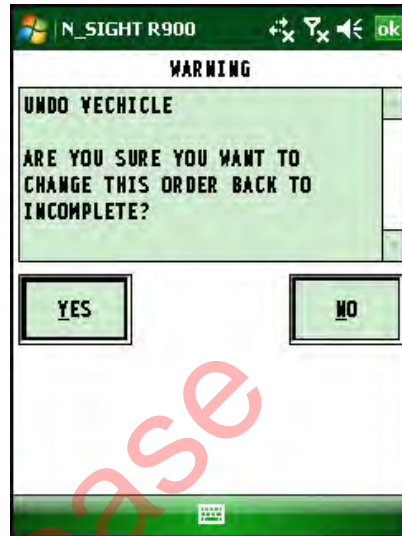


Figure 6.28 N\_SIGHT R900 Undo Skipped Order Screen

- 3 Press **Y** or touch **Yes** to unskip the reading.

The reading is then reset back to UR (unread) as illustrated in Figure 6.29.

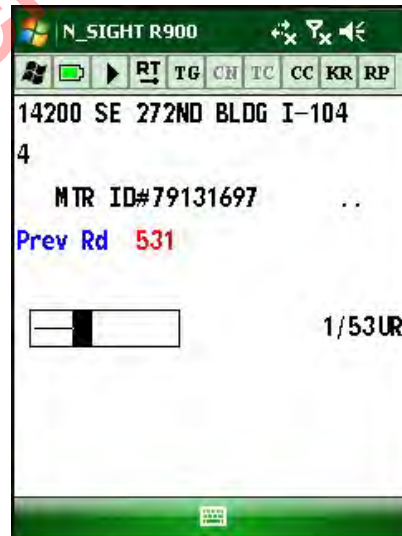


Figure 6.29 Reading Field after Unskipped

You can now continue with a new reading, or leave the reading blank and display the reading entry screen of the next meter on the route.

---

## Clearing a Comment Code, Customer Note, or Trouble Code

In some cases, you may need to clear a code that you've entered for a comment code, customer note, or a trouble code. Follow this procedure to clear the code you entered on the handheld.

- 1 Identify the account that has the code or note you want to clear.



The  icon, as illustrated in Figure 6.30, shows that there is a code or note attached to this account.



Figure 6.30 Screen Showing Code Attached

- 2 Go to the screen where you entered the code or note. See Figure 6.31.
- 3 Press  .  
The code or note is then cleared from this account.

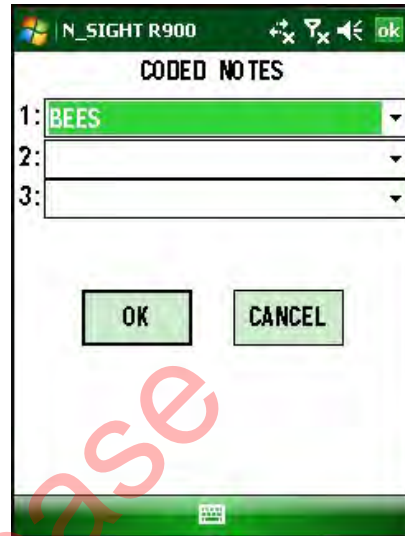


Figure 6.31 Screen Where Code Was Entered

---

## Adding a New Meter to a Route

If you find a meter on your route that has not yet been loaded on the handheld, you can add the new meter and information about it to the current route. Follow this procedure to add a new meter to an existing route.

- 1 Press **M**.

The **Meter Process Menu** appears as illustrated in Figure 6.32.

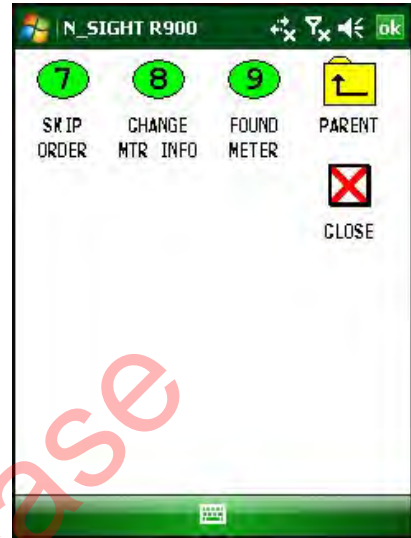


Figure 6.32 N\_SIGHT R900 Meter Process Menu

- 2 Touch **9**.

The **New Meter** screen appears as illustrated in Figure 6.33.

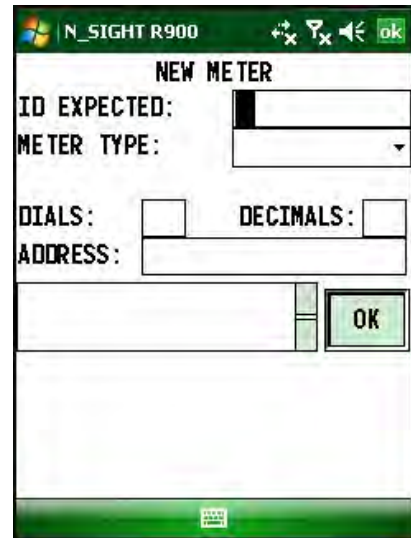


Figure 6.33 N\_SIGHT R900 New Meter Screen

- 3 Using the letter and number keys, type the meter number for the new meter in the **ID EXP** field.

- 4 In the **MTR TYPE** field, touch the DOWN ▼ arrow and select the type of meter just found.
- 5 Touch the **DIALS** field, and enter the number of dials that the new meter uses.
- 6 Touch the **DECIMALS** field, and enter the number of decimals that the meter uses.
- 7 Touch the **ADDRESS** field, and type the address for the account.
- 8 Touch the notes field and type any notes, if applicable.
- 9 Touch **ok** to add the found meter.

The found meter is now added to the route.

## Correcting or Changing Meter Information

Depending upon the options selected by the host operator, you can correct or change some information that was loaded from the host computer. Follow this procedure to access the **Change Meter Info** screen so that you can change information about a meter.

Follow this procedure to correct meter information.

- 1 Make sure that the meter whose data you want to change is shown in the display.



Figure 6.34 Meter Information to Change

- 2 Press **M**.

The **Meter Process Menu** appears as illustrated in Figure 6.35.

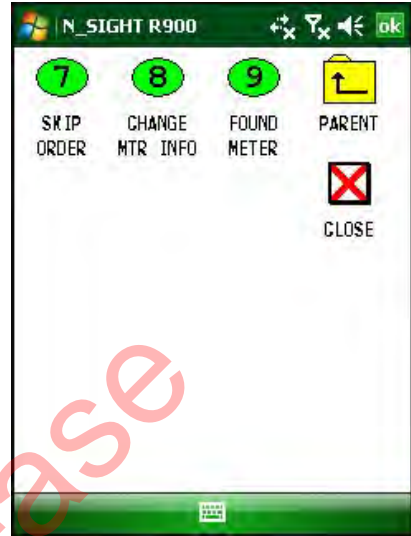


Figure 6.35 N\_SIGHT R900 Meter Process Menu

- 3 Touch **B**.

The **Change Meter Info** screen appears as illustrated in Figure 6.36.

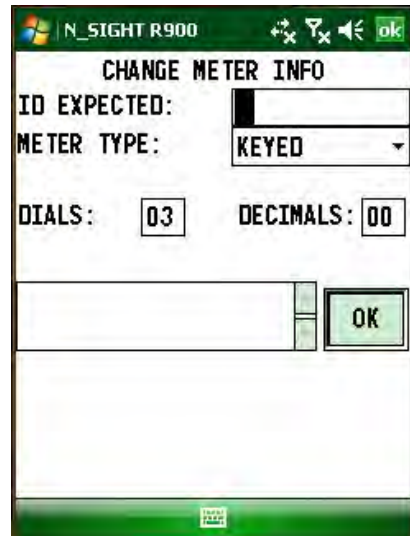




Figure 6.36 N\_SIGHT R900 Change Meter Info Screen

- 4 Correct any of the following information.
  - Using the letter and number keys, correct the meter number in the **ID EXP** field, if applicable.
  - In the **MTR TYPE** field, touch the  arrow, and select the type of meter just found, if applicable.
  - Touch the **DIALS** field, and enter the number of dials that the new meter uses, if applicable.
  - Touch the **DECIMALS** field, and enter the number of decimals that the meter uses, if applicable.
  - Touch the notes field and type any notes, if applicable.
- 5 Touch  to accept the changes you made to the meter.

The changes made to the meter is reflected in the current route with which you are working.



You will need to print these changes in a standard report. Usually, when the information is transferred from N\_SIGHT R900 to the billing system, this information is not updated by the billing system.

---

## Finding and Displaying Reading-Entry Screens




The procedures in this section explain how to move within a single route, change routes, search for specific meters, and use the bookmark feature. The following tasks are explained in this section.

- “Moving Through Reading Entry Screens,” on page 6-32
- “Moving Around Routes,” on page 6-35





## Moving Through Reading Entry Screens

The handheld moves from one reading-entry screen to the next in one of two ways:

- When reading meters, the N\_SIGHT R900 software automatically advances to next meter in the route after you enter a reading or a skip code for the current meter on the route. See “Entering a Reading,” on page 6-3.
- you can move FORWARD  or BACKWARD  when you are on the reading entry screen to display the next meter or previous meter in the route without entering a reading. The key that you press depends upon the route direction icon  that you establish. Refer to “Entering a Reading,” on page 6-3.

## Reviewing Additional Information for an Account

Each reading entry screen has two additional screens you can view by simply pressing the  or  arrow keys. These screens contain location and hazard codes, and the statistics for the loaded routes.



Continually pressing the up or down arrow keys while on an account cycles between the three available screens, the Main Reading screen, the Hazard screen and the Route Statistics screen.

## Location or Hazard Codes

To view location or hazard codes, follow this procedure.

- 1 Make sure that the meter for which you want to view additional information is shown in the display.

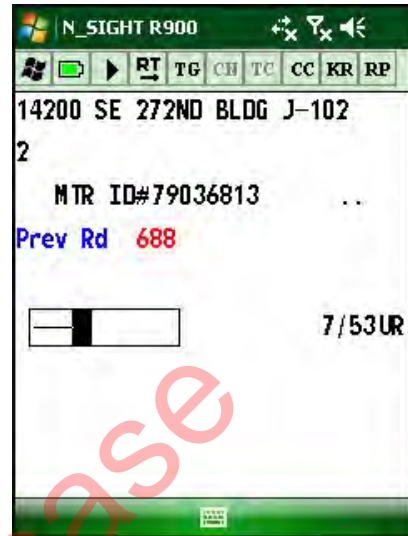


Figure 6.37 Additional Meter Information to View



- 2 Press  twice.  
The Location and Hazard Codes screen appears as illustrated in Figure 6.38.



Figure 6.38 Location and Hazard Codes Screen

You can view two location codes and two hazard codes for each account.

- 3 When finished viewing these codes, do one of the following.
  - Press **Esc** to return to the Reading Entry screen.
  - Press  to view the Statistics for Loaded Routes screen.

### Statistics for Loaded Routes

To view statistics for loaded routes, follow this procedure.

- 1 Make sure that the meter for which you want to view statistics for loaded routes is shown in the display.

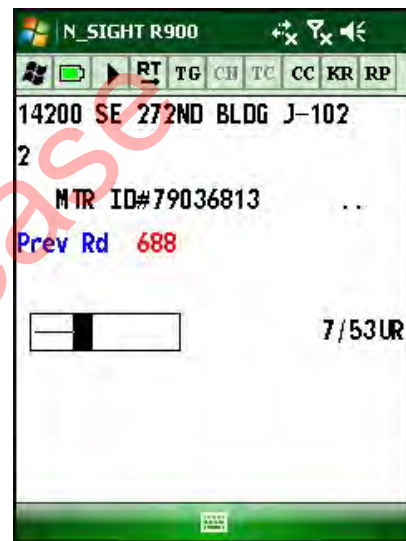


Figure 6.39 For Statistics for Loaded Routes

- 2 Press .

The Statistics for Loaded Routes screen appears as illustrated in Figure 6.40.

CURRENT ROUTE:			
04			
HHU ID: FW07014			
LOADED ROUTES:			
ROUTE / GROUP	UR	SK	RD
04	51	1	1

Figure 6.40 Statistics for Loaded Routes Screen

You can view the number of unread accounts, skipped accounts, and read accounts for each of the loaded routes.

- 3 When finished viewing these statistics, do one of the following.
- Press **Esc** to return to the Reading Entry screen.
  - Press  again to view the Location and Hazard Codes screen.

## Moving Around Routes

While reading meters, you can move around within the current route, or another route if you selected it at the time you logged in. The GoTo feature allows you to go to the:

- Previous or next route, if selected at login
- Beginning or end of the current route
- First or last incomplete account in the route

Use the following procedure to move around within a route as well as to move from one route to another.

- 1 Press **G**.

The **GoTo** screen appears as illustrated in Figure 6.41.

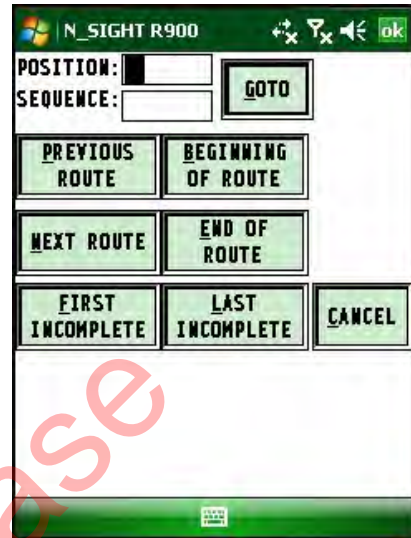


Figure 6.41 N\_SIGHT R900 GoTo Screen

- 2 On this screen, do one of the following to move to where you want to go.
  - Press **F** or touch **Prev Route** to go to the previous route.
  - Press **N** or touch **Next Route** to go to the next route.
  - Press **B** or touch **Beg of Route** to go to the beginning of the current route.
  - Press **E** or touch **End of Route** to go to the end of the current route.
  - Press **F** or **First Incompl** to go to the first incomplete within the route.
  - Press **L** or **Last Incompl** to go to the last incomplete within the route.
- 3 Depending upon your selection, N\_SIGHT R900 moves to the account you chose.

## Resequencing Routes



Before selecting to resequence a route, you should confirm with your Utility Office Manager that your billing system can accept the route in a resequenced order.

Resequencing allows you to sort meters by the sequence numbers or by the timestamp of when readings were collected. Whenever you exit the N\_SIGHT R900 software, you are given the option to resequence. However, you can resequence while you are reading meters on your route. Complete the following procedures to resequence your route.




### Resequence an Order

Follow this procedure to resequence an order.

- 1 Display the reading entry screen that you want to resequence. See Figure 6.42.



Figure 6.42 Account to Resequence

- 2 Press .
- 3 Then touch , and touch .

The Resequence screen appears as illustrated in Figure 6.43.

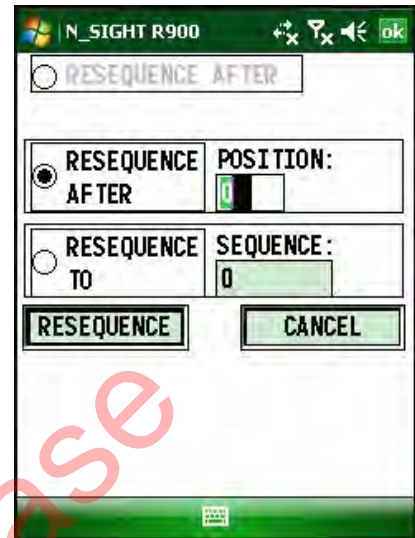





Figure 6.43 Resequence Screen

- 4 Make your selections for the following.
  - **Resequence After** – if you want the account to resequence after the current account
  - **Reseq After** – if you want to specify a certain position in the route.
  - **Resequence To** – if you want to resequence all account to a certain position in the route.
- 5 Press **Resequence** after you make your selection.

The resequencing is completed for you.

## Resequence While Collecting Readings

Follow this procedure to turn on or off resequencing while collecting readings.

- 1 Press .
- 2 Then touch , and touch .

The Resequencing screen appears as illustrated in Figure 6.44.

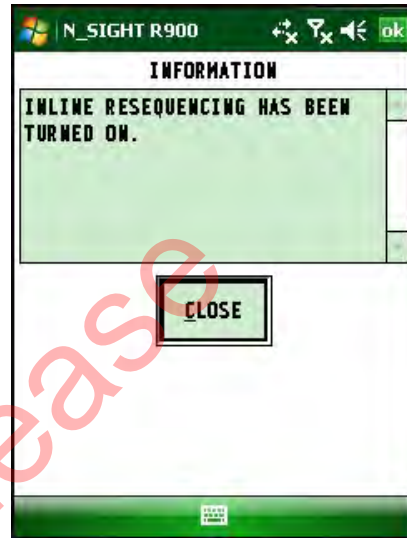


Figure 6.44 Inline Resequencing Screen

This function works as a toggle either on or off. Use this screen to turn it on or off, when applicable.


## Confirming the Resequencing

When you exit the N\_SIGHT R900 software you must first confirm the resequencing for the routes you have just read. Three options are available to you.

- Timestamp resequencing
- Accept resequencing
- Reject resequencing



Follow this procedure to confirm resequencing.

- 1 When you press  to exit the N\_SIGHT R900 software, the Confirm Resequencing screen appears as illustrated in Figure 6.45.

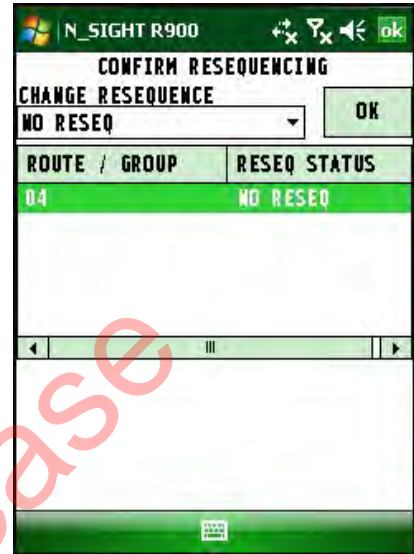



Figure 6.45 Confirm Resequencing Screen

- 2 Touch the  to select one of the following options.
  - Timestamp Reseq
  - Accept Reseq
  - Reject Reseq

## 7 Communicating with the Host Computer

---

Once the software for the Neptune handheld system is set up and the hardware is connected as described in either “Setting Up the CE5320,” on page 3-3 or “Setting Up the Nomad,” on page 4-3, use the procedures of this chapter to exchange information with the host computer. During a typical information exchange, assignments and other route data, such as code tables, are sent to the handheld, and meter readings and route information are sent to the host.

---

### Exchanging Information

There are several methods you can use to exchange information with the host computer. The method for exchanging information is called *synchronize*.

**Synchronize**—initiates a two-way communication between the handheld and the host computer in which the handheld sends information to the host computer and also receives information from the host computer.

### Exiting the Software

When you have completed all the reads in your routes, you exit the software, and upload the route information to the N\_SIGHT R900 host software. To exit the software, complete the following procedure.

- 1 Exit N\_SIGHT R900 by pressing .

The Confirm Resequencing screen appears as illustrated in Figure 7.1.

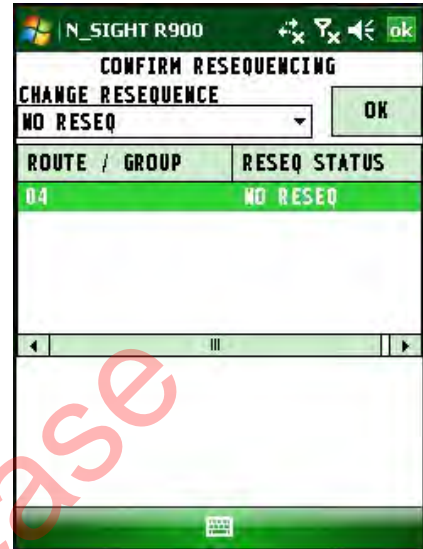



Figure 7.1 Confirm Resequencing Screen

- 2 Touch the  in the Change Reseq Status to select one of the following options, if applicable:
  - Timestamp Reseq
  - Accept Reseq
  - Reject Reseq



If you have more than one route, select the next route, and repeat step 2.

- 3 Touch **ok** to confirm your resequencing choice.

The Handheld Logout screen appears as illustrated in Figure 7.2.

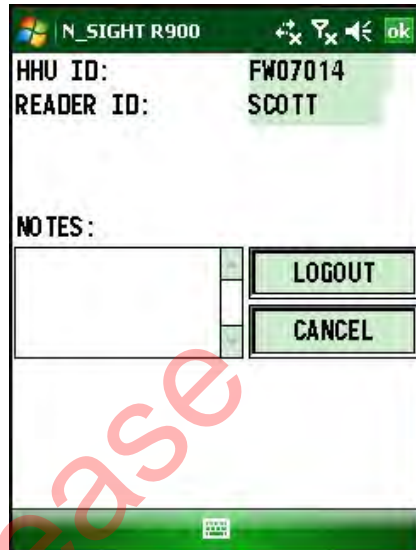


Figure 7.2 N\_SIGHT R900 Handheld Logout Screen

- 4 Type any notes, if applicable.
- 5 Touch **Logout**.

The Hold Routes screen appears as illustrated in Figure 7.3.

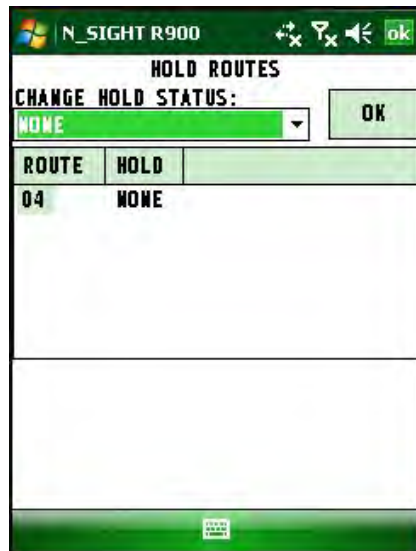


Figure 7.3 Hold Routes Screen

- 6 Touch the  in **Change Hold Status** to select one of the following options, if applicable.

None                      Hold none of the accounts in the handheld.

Unread/Skipped        Hold all unread accounts and all skipped accounts in the handheld.

Unread                    Hold only the unread accounts in the handheld.

All of these hold functions determine which accounts are left in the handheld after the route is uploaded.

- 7 Select the route to hold, if applicable.

- 8 Touch .

The N\_SIGHT R900 Login screen appears as illustrated in Figure 7.4.



Figure 7.4 N\_SIGHT R900 Login Screen

## Sending and Receiving

When ready to communicate or synchronize with the host computer, use this procedure to send and receive information. Follow this procedure for each handheld that you are using.

- 1 Do one of the following.
  - Place the CE5320B handheld in the cradle by sliding it bottom first into the cradle.
  - Place the Nomad handheld into the Charging/Communications Cradle or connect the Nomad to the PC with the USB Cable.
- 2 On the N\_SIGHT R900 Login screen,
 

press **S** or touch **Synchronize**.



Touch **Synchronize** to start communications. An X appears until Network Connection is established

Figure 7.5 Synchronize Button

If your handheld system is set to AutoSync, the handheld will indicate with the audible message "Connected" when it is starting the communications process.

When the handheld is removed from the Cradle, it will indicate with the audible message "Disconnected" (regardless of sync mode).

The hour glass appears on the screen to show that the communications process is underway.

*Notes:*

Pilot Release

## 8 Using the Field Programmer

---

This chapter provides fundamental instructions for operating the Field Programmer including how to connect the mouse to the CE5320 and the Nomad handheld devices, programming the device, and more. This chapter contains basic features of the Field Programmer and it also gives instructions for setting it up, so that it can be used to collect information from the field.

---

### Connecting the Mouse

The Field Programmer mouse, when connected to the CE5320 or the Nomad handhelds, allows you to query or program a ProRead register by using one of the following methods.

- Touch-read
- Use of the alligator clip to connect red, green, and black wires.

It also allows you to program an R900G endpoint through an infrared programming LED.



## Connecting the Mouse to the CE5320

The following illustration displays some of the features of the mouse that connects to the CE5320.

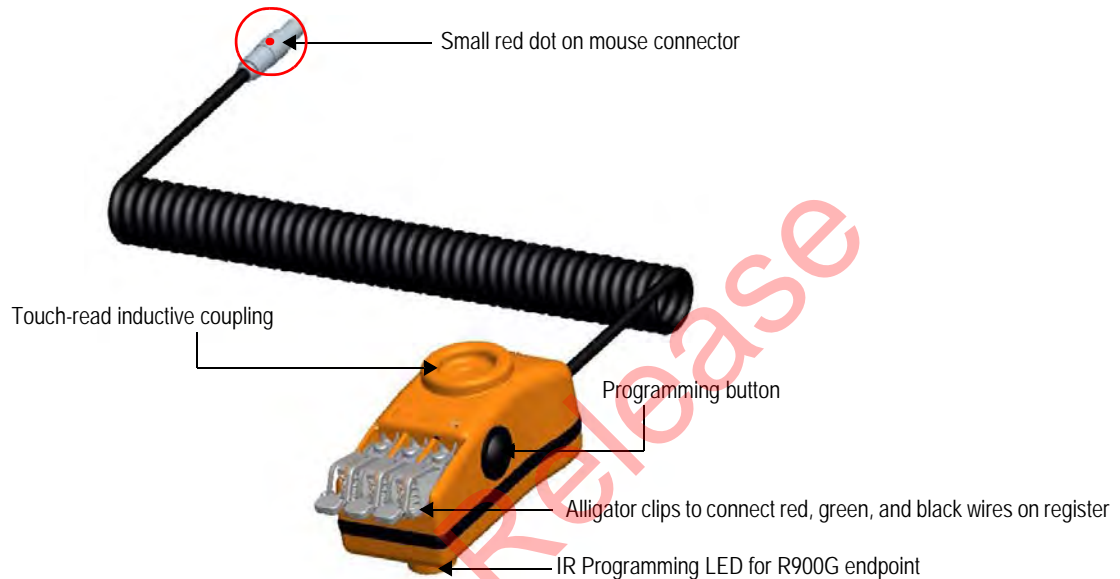


Figure 8.1 Field Programmer Mouse for the CE5320

To connect the mouse to the CE5320, complete the following steps.

- 1 Locate the small red dot at the end of the mouse connector cable. See Figure 8.1.
- 2 Locate the small red mark on the port at the right of the display on the Field Programmer. See Figure 8.2 on page 8-3.
- 3 Push the mouse connector into the lemo port, lining up the red marks.



Figure 8.2 Connecting Mouse to CE5320

## Connecting the Mouse to the Nomad

The following illustration displays some of the features of the mouse



Figure 8.3 Field Programmer Mouse for the Nomad

To connect the mouse to the Nomad Field Programmer, complete the following steps.

1. Locate the USB connector at the end of the mouse cable. See Figure 8.3.
2. Locate the USB port on the bottom of the Nomad. See Figure 8.4 on page 8-5.
3. Push the USB connector into the USB port.



Figure 8.4 Connecting Mouse to Nomad

## Verifying the Handheld Recognizes the Mouse

If the handheld does not recognize the mouse, complete the following steps.

- 1 Exit the **NHPSProSys** software. See “Exiting the Software,” on page 7-1.
- 2 Verify that the mouse and/or receiver are connected to the handheld device.
- 3 Run **InstallEngine\_HH.exe** and wait for it to finish.
- 4 Restart the handheld using the **Software Reset** located in **Options** in the CE window.
- 5 When the handheld is running, select **NHPSProSys.exe**.
- 6 Verify that the program recognizes the mouse or receiver.



This can take some time for the handheld to check for the mouse. Wait at least 30 seconds for the handheld to recognize the mouse.

---

## Starting Field Programmer

To start the Field Programmer, complete the following steps.

1 From the N\_SIGHT R900 Login screen, touch **Menu**.

2 Touch **5**.

3 Select **4**,  
Field Programmer.

The Field Programmer Menu appears.

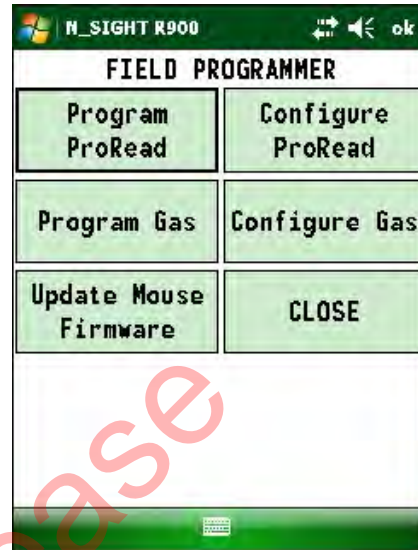


Figure 8.5 Field Programmer Menu

4 Touch the option you want to use.

- Program Pro Read
- Configure ProRead
- Program Gas
- Configure Gas

The Field Programmer Password screen appears.

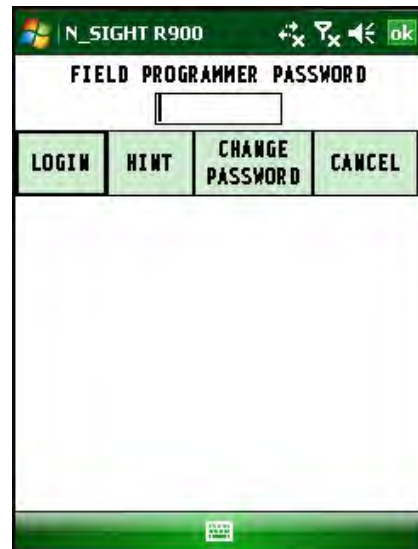



Figure 8.6 Field Programmer Password Screen

- 5 Type your password.



If you cannot remember your password, you can touch or click  to display a clue.

On this screen, you can also change your password as described in “Changing Your Password,” on page 8-8 or you can cancel logging in to the system

- 6 Click .

## Changing Your Password

Complete the following steps to change your password.

- 1 On the Field Programmer Password screen, touch



The Change Password screen appears. See Figure 8.7.


Figure 8.7 Change Password Screen

- 2 In **Old Password**, type the old password.
- 3 In **New Password**, type your new password.

- 4 In **Confirm**, type your new password again.



What you enter in **New Password** and **Confirm** must match in order for you to change the password. If they do not, you will receive an error message.

- 5 Touch .

Your password is now changed.

---

## Programming the ProRead

The first time you use the Field Programmer software after the installation, you need to configure both the ProRead and the gas functionality.

### Configuring the ProRead

To program the ProRead, use the Neptune Field Programmer and complete the following steps.



- 1 Select **Program ProRead** from the **Field Programmer** Menu. See “Starting Field Programmer,” on page 8-6.

The ProRead Programming screen appears. See Figure 8.8.

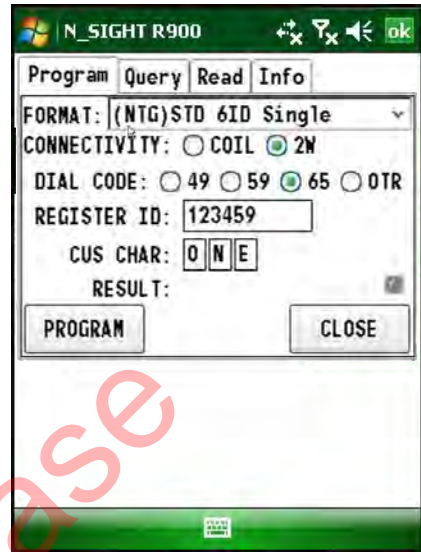


Figure 8.8 ProRead Configuration Screen

- 2 Touch  for **Format Name**.

A selection list similar to Figure 8.9 appears.




Figure 8.9 Format Name Selection List

- 3 Touch or click the format you want, and double click or press **Enter**.

- 4 For **Connectivity**, touch one of the following.
  - **Coil** – if you are using the touchpad
  - **2W** – (2-wire) if you are using the alligator clip
- 5 For **Dial Code**, touch one of the following to adjust the number of meter reading digits returned from the register to a reading device:
  - **49**
  - **59**
  - **65**
  - **otr** – to choose another value from a selection list. See Figure 8.10. (To return to the screen from this list, select **None**.)

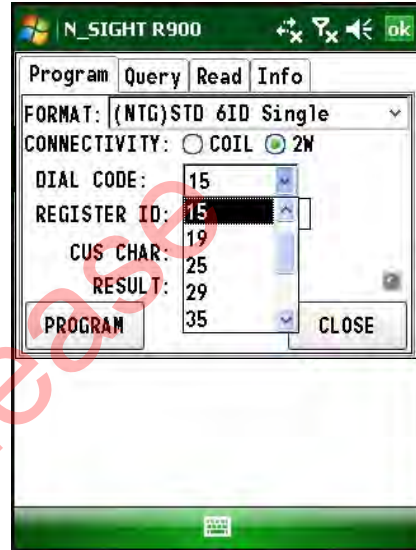


Figure 8.10 Otr Selection List




The water utility often requires modification so that a reading matches its standard billing units, such as 1000s of gallons.

- 6 In **Register ID**, type the ID or serial number of the register.
- 7 For **Cus Char**, enter the additional information you want to have for that meter, such as size or location.
  - **M N L** (upper case, alphanumeric)
  - **1 2 S** (numeric digits.)

8 Connect in one of the following ways.

- For coil, align the mouse coil with the receptacle, then proceed to step 9.
- For alligator clips, attach the clips to the corresponding wire color, then proceed to step 9.

9 Start Programming in one of the following ways.

- Touch or click .

(This button can only be used for programming; it cannot be used for Read or Query.)

- Press the program button on the mouse.
- Press **Enter**.

An audible tone signals the **Program Result**.

- PASS
- FAIL

See Figure 8.11.



Figure 8.11 Program Result -- Pass Screen

10 If you want to view detailed information, touch or click **Details**.

Details display the data in raw format. See Figure 8.12.

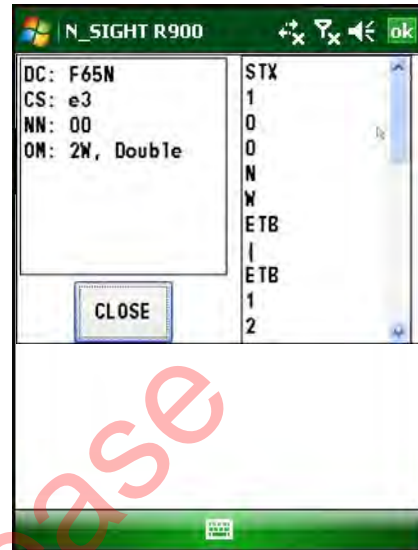





Figure 8.12 ProRead Program Details Screen

- 11 Touch or click  to return to the ProRead Configuration screen.
- 12 You can program a similar register that can automatically generate a new ID number by pressing  again.
- 13 You can program a different type of register by repeating steps 1 through 10.
- 14 When finished programming, choose one of the following.
  - Touch or click **Read** to take a reading.
  - Touch or click **Query** to query the register.
  - Touch or click  to return to the main screen.

---

## Querying the ProRead

Use the query function to determine the current programming configuration of a ProRead register. You can determine the format type, Dial Code setting, Network Numbers, ID number, and other important settings from the query results. This information is especially critical when using the Field Programmer to read registers, because the programmer must first be configured with the proper settings before it can read successfully.

To query a register, place the appropriate adapter on the register or receptacle, and complete the following steps.

- 1 Select **Program ProRead** from the **Field Programmer** menu.

- 2 Select the **Query** tab.

The ProRead Query screen appears. See Figure 8.13.

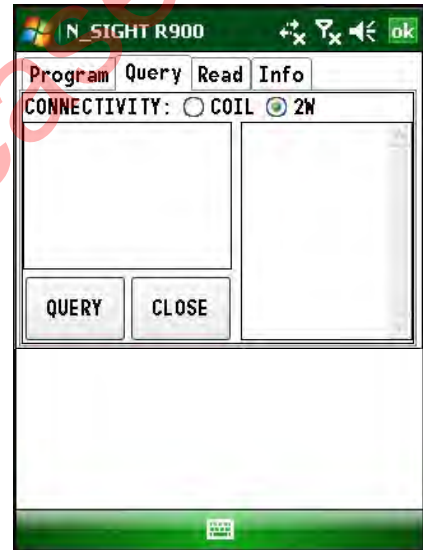



Figure 8.13 ProRead Query Screen

- 3 Touch or click  to perform a query.

The query results appear similar to that of Figure 8.14.

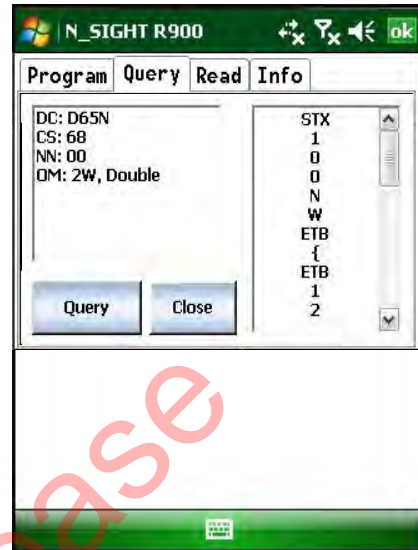



Figure 8.14 ProRead Query Results

The query results should confirm that the ProRead register is programmed correctly.

- 4 Repeat steps 1 through 3 to query another register or choose one of the following.
  - Touch or click **Read** to take a reading.
  - Touch or click **Program** to program the register.
  - Touch or click  to return to the main screen.

## Reading the ProRead Register

The Field Programmer is designed to be used as a programming and troubleshooting tool rather than a reading device. However, the Field Programmer is capable of collecting readings.

To read a ProRead register, complete the following steps:

- 1 Select **ProRead** from the Field Programmer menu.
- 2 Select the **Read** tab.

The ProRead Read screen appears. See Figure 8.15

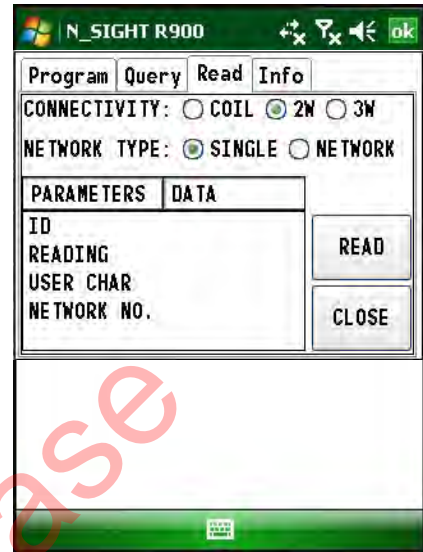



Figure 8.15 ProRead Read Screen

- 3 Select Network Type.
- 4 Select the **Connectivity**.

- Align the mouse with the register. Touch or click **Coil** to collect a reading.
- Select **2W** to use without receptacle.
- Select **3W** for programmed registers.

- 5 Touch or click  to collect the reading. See Figure 8.16.


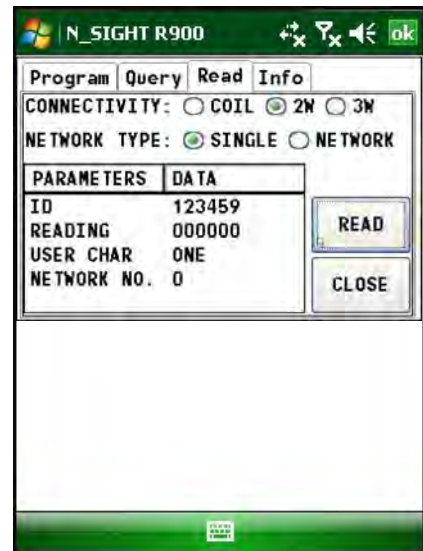


Figure 8.16 ProRead Reading Result Screen



If an error message appears during a read attempt, it is most likely due to improper format information.

- 6 Repeat steps 1 through 5 to read another register, or choose one of the following.
  - Touch or click **Program** to program the register.
  - Touch or click **Query** to query the register.
  - Touch or click  to return to the main screen.

## Viewing Software and Firmware Information

It is important to know which version of the Field Programmer software you are using when you contact Neptune Customer Support. To identify the version of Field Programmer software or the firmware version of the Field Programmer mouse you are using, complete the following steps.

- 1 Select **Program Pro-Read** from the **Field Programmer** menu.
- 2 Select the **Info** tab.

The software and firmware information appears. See Figure 8.17.


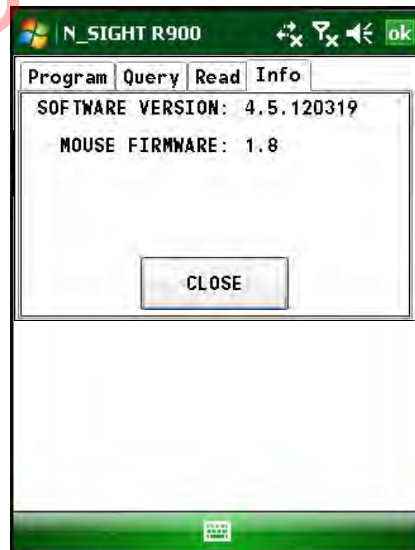


Figure 8.17 ProRead Software and Firmware Information

- 3 Touch or click  to return to the Field Programmer Menu.



## Programming the R900G Endpoint

You need to configure the gas functionality in the Field Programmer software after the installation.

### Configuring Gas

To program the R900G endpoint, use Neptune's N\_SIGHT R900 and complete the following steps.

- 1 Select **Configure Gas** from the **Field Programmer Menu**. See "Starting Field Programmer," on page 8-6.

- 2 When prompted, enter your password. See Figure 8.6 on page 8-7.

The Gas Preferences screen appears as illustrated in Figure 8.18.

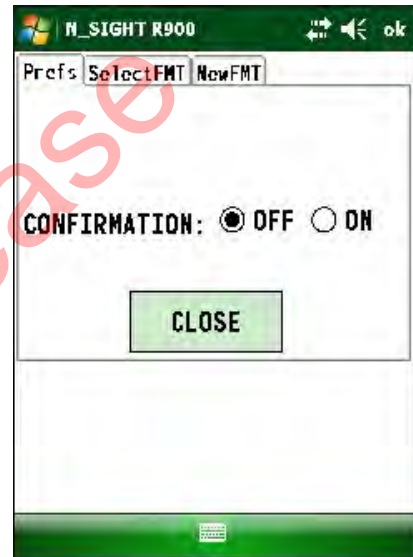



Figure 8.18 Gas Meter Configuration Screen

- 3 Select one of the following for receiving a confirmation.
  - **OFF** – to turn off some confirmation dialogs for actions.
  - **ON** – to allow all confirmation dialogs for actions.
- 4 Touch  to return to the Field Programmer Menu.

### Collecting the Initial Reading

To use the Field Programmer for R900G endpoints, complete the following steps.

- 1 Select **Program Gas** from the **Field Programmer** Menu.

The Program Gas screen appears as illustrated in Figure 8.19.

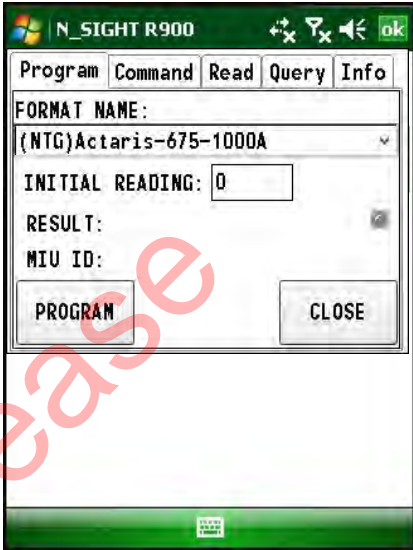


Figure 8.19 Gas Program Screen

- 2 Touch  for **Format Name**.

A selection list similar to Figure 8.20 appears.

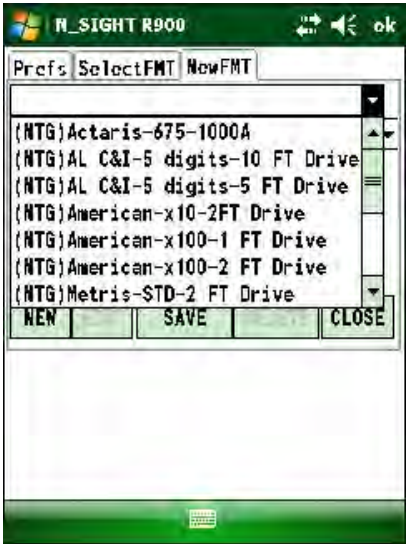



Figure 8.20 Format Name Selection List

- 3 Touch or click the format you want and press **Enter**.
- 4 For **Initial Reading**, type a value.
- 5 Align the IR LED to Gas Programming post, and do one of the following to program gas:
  - Press the program button on the mouse
  - Press **Enter**.
  - Touch or click  .  
(This button can only be used for programming; it cannot be used for Read or Query.)

The Program Result area of the screen displays that it is Confirming Data, and a progress bar at the bottom of the screen shows you the progress. See Figure 8.21.

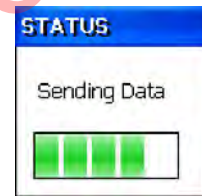


Figure 8.21 Program Result – Sending Data

An audible tone signals the **Program Result**.

- PASS
- FAIL

The MIU ID displays the ID or serial number of the MIU. See Figure 8.22.

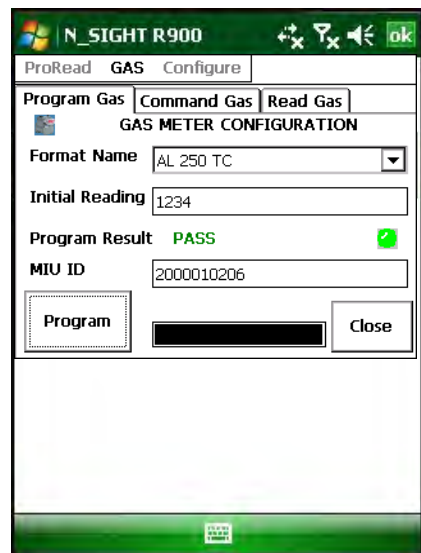



Figure 8.22 Program Result – Pass Screen

- 6 You can program another gas register by repeating steps 1 through 5, or touch  to return to the main screen.

## Querying the R900G Endpoint

Use the query function to check the current configuration of the R900G. Perform a query after you program the endpoint, or anytime you want to verify that the correct parameters are programmed in the unit.

To query an R900G endpoint, place the mouse on the R900G endpoint and complete the following steps.

- 1 Select **Program Gas** from the **Field Programmer** Menu.

- 2 Select the **Query** tab.

The Gas Query screen appears. See Figure 8.23.



Figure 8.23 Gas Query Screen


- 3 Touch  .

The query results appear similar to that of Figure 8.24.



Figure 8.24 Gas Query Results

The query results should confirm that the R900G endpoint is programmed correctly.

- 4 Repeat steps 1 through 3 to query another endpoint or choose one of the following:.
- Touch or click **Read** to take a reading.
  - Touch or click **Program** to program the register.
  - Touch or click **Command** to do the following:
    - Place the R900G endpoint in **Sleep** mode.
    - **Refresh** the data for the R900G endpoint.
    - **Wake up** the R900G endpoint from sleep mode.
- 5 Touch or click  to close the Gas Query tab return to the main screen.

## Using Command Gas

The Command Gas tab allows you to perform the following functions at any time you are using the Field Programmer for gas functionality.

- **Refresh** the data for the R900G endpoint.
- Place the R900G endpoint in **Sleep** mode.
- **Wake up** the R900G endpoint from sleep mode.
- **Close** the Program Gas screen and return to the start screen.



In order to perform these commands, align the mouse with the unit.

To use Command Gas, complete the following instructions.

- 1 Start the Neptune Field Programmer software; refer to “Starting Field Programmer,” on page 8-6.
- 2 Select **Program Gas** from the **Field Programmer** Menu.
- 3 Select **Command**.

The Command Gas screen appears as illustrated in Figure 8.25.

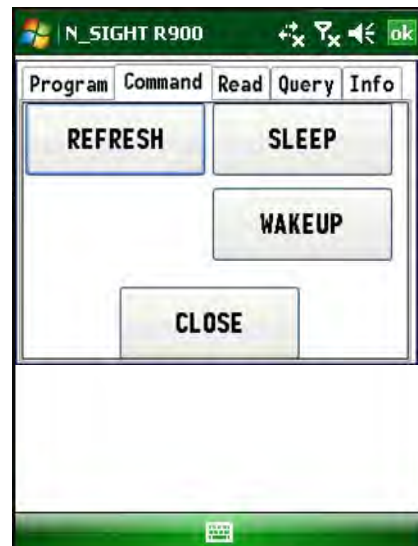


Figure 8.25 Command Gas Screen

- 4 Do one of the following:
  - Touch or click **Refresh** to force the R900G to transmit the most current reading.
  - Touch or click **Sleep** to place the R900G endpoint in sleep mode to be used for shipping.
  - Touch or click **Wakeup** to activate the R900G endpoint from sleep mode.
  - Click **Close** to exit the Program Gas screen and return to the start screen.



Any time you are using the Field Programmer gas program you can use the functions on the Command Gas screen.

## Reading the R900G Endpoint Register

The Field Programmer is designed to be used as a programming and troubleshooting tool rather than a reading device. However, the Field Programmer is capable of collecting readings.

To read a gas register, complete the following steps.

- 1 Select **GAS** from the Neptune Programmer System start screen.
- 2 Select the **Read Gas** tab.

The Gas Read screen appears. See Figure 8.26.

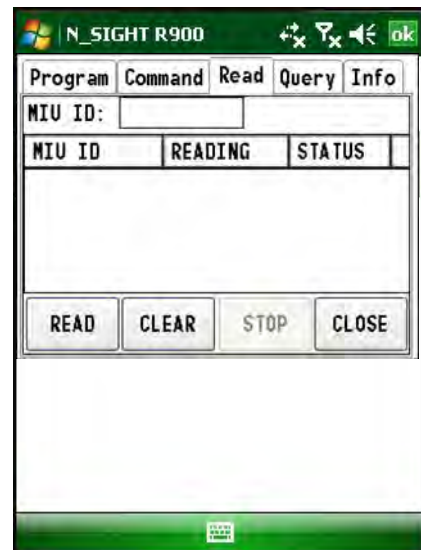


Figure 8.26 Gas Read Screen

- 3 Enter the **MIU ID** to read a specific unit.

Leaving the MIU ID blank allows you to received all readings in a range.

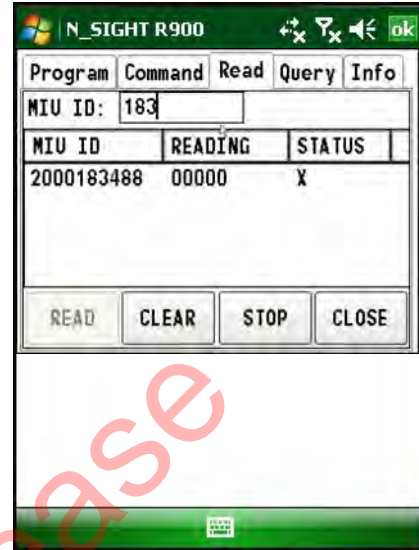



Figure 8.27 Gas Reading Result Screen

- 4 Touch or click  on the Field Programmer to collect a reading.



If an error message appears during a read attempt, it is most likely due to improper format information.

- 5 Press **Clear** to clear the reading and repeat steps 1 through 4 to read another MIU.

## Viewing Software and Firmware Information

It is important to know which version of the Field Programmer software you are using when you contact Neptune Customer Support. To identify the version of Field Programmer software or the firmware version of the Field Programmer mouse you are using, complete the following steps.



- 1 Select **Program Gas** from the **Field Programmer** menu.

- 2 Select the **Info** tab.

The software and firmware information appears. See Figure 8.28.

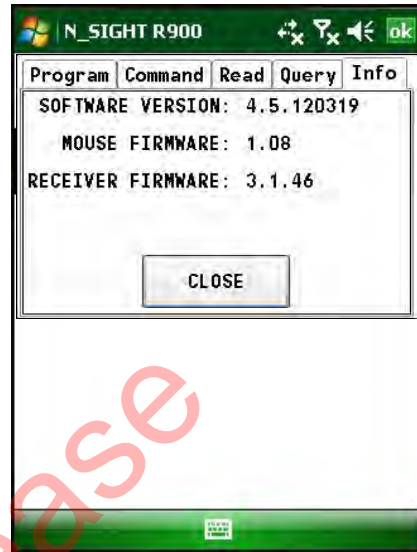



Figure 8.28 Gas Software and Firmware Information

- 3 Touch or click  to return to the Field Programmer menu.

---

## Networking Two Registers

The term *Networking* is used to refer to the process of connecting multiple registers to a single receptacle.



You cannot program ProRead registers while connected together in a network. You must program each register separately prior to making the network connections.

## Programming Registers

To network two registers, you must first program a *primary* register and a *secondary* register.

### Programming the Network Primary Register

To program the network primary register, complete the following steps.

- 1 Select the appropriate High Side programming format, such as,  
STD 8ID HIGH
- 2 Enter the following information.
  - Dial Code
  - User Characters
  - ID Number
- 3 When you have properly entered all information, press **PROG** to program the primary register.

### Programming the Network Secondary Register

To program the network secondary register, complete the following steps.

- 1 Select the appropriate Low Side programming format such as:  
STD 8ID LOW
- 2 Enter the following information.
  - Dial Code
  - User Characters
  - ID Number
- 3 When you have properly entered all information, press **PROG** to program the secondary register.
- 4 Repeat for any additional secondary registers.

### Network Wiring

After you properly program the registers for networking, they can then be connected to the receptacle. Be sure to use weatherproof crimp connectors for all wiring splices in order to prevent corrosion and other moisture-related problems. Also, observe proper polarity when wiring the registers, so that you interconnect all red terminals and interconnect all black terminals.

## Wiring the Registers

Refer to the following Neptune guides for complete instructions on wiring the registers.

- E-Coder Quick Install Guide, Part Number 12563-001
- Encoder Quick Install Guide, Part Number 12572-001

---

## Managing Formats

The Neptune Field Programmer allows you to manage formats for programming ProRead registers and R900G endpoints.

### Managing Formats for ProRead Registers

When you program a ProRead register, you can work with the format you need. You can do the following:

- Set your preferences for the programming process.
- Select formats from the list of available formats supplied by Neptune.
- Edit or create a new format that is added to the list of available formats.

## Selecting ProRead Preferences

To select preferences for programming a ProRead register, complete the following steps.

- 1 On the **Field Programmer** Menu, touch or click **Configure ProRead**. See Figure 8.29.

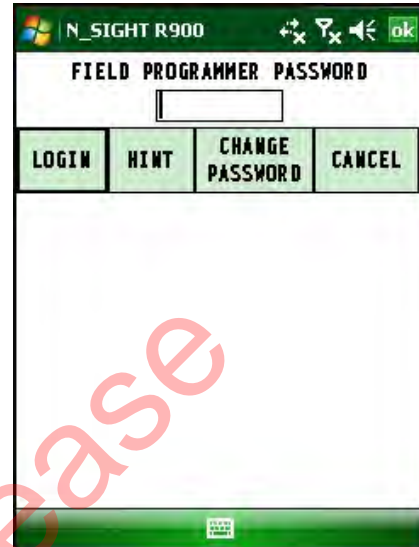


Figure 8.29 Field Programmer Menu

- 2 When the Field Programmer Password screen appears, type your password and do one of the following.
  - Touch **LOGIN**.
  - Click **ok**.
  - Press **Enter**.



If you cannot remember your password, you can touch or click **Hint** to display a clue.

On this screen, you can also change your password as described in “Changing Your Password,” on page 8-8 or you can cancel logging in to the system.

After entering your password, the **Preferences** screen appears as illustrated in Figure 8.30.

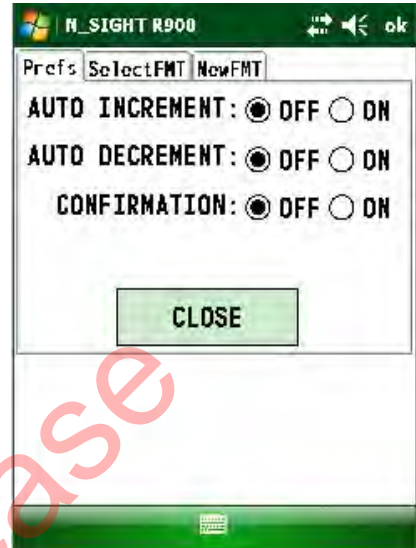


Figure 8.30 ProRead Preferences Screen

On this screen, select one for each of the following.

- |                       |   |
|-----------------------|---|
| <b>Auto Increment</b> | Allows the system to automatically increment the ID numbering by one digit. |
| <b>Auto Decrement</b> | Allows the system to automatically decrement the ID numbering by one digit. |
| <b>Confirmation</b>   | Allows additional dialog to confirm the action to be performed.             |

- 3 Do one of the following.
  - Touch or click **SelectFMT** to select a format that is already available for the Field Programmer.
  - Touch or click **NewFMT** to create a new format and add it to the list of available formats.
  - Touch or click **Close** to close the ProRead configuration and return to the previous screen.

## Selecting a ProRead Format

Selecting formats allows you to see a list of only the formats used by your utility. This eliminates unused formats which makes it easier to select formats and reduce errors.

To select the formats for programming a ProRead register, complete the following steps.

- 1 Touch or click **SelectFMT** to view the available formats used for programming ProRead registers. See Figure 8.31.

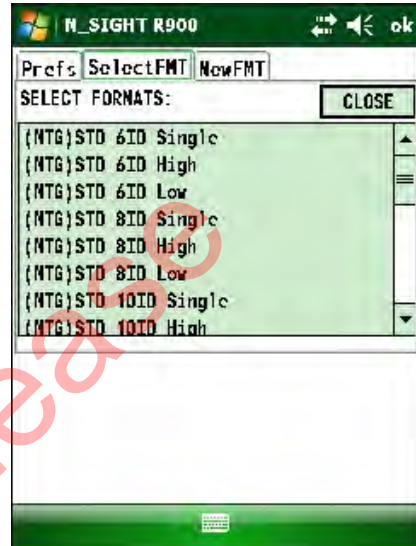


Figure 8.31 Select Formats Screen



Most user-created formats are simple modifications to the Neptune standard formats.

## Editing a ProRead Format

To make changes to an existing format, complete the following steps.

- 1 On the **Field Programmer** Menu, touch or click **Configure Pro-Read**.
- 2 Select **NewFMT**.

The New Format screen appears as illustrated in Figure 8.32.

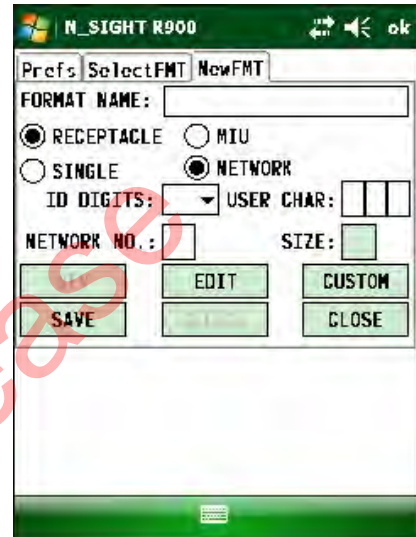


Figure 8.32 ProRead New Format Screen

The following information appears.

- **Available Formats** display at the top of the screen (both standard and custom).
- **User Selected** shows the formats already selected.


- 3 On this screen, do any the following:

Add	Allows you to select from the <b>Available Formats</b> , and touch or click Add to place it in the <b>User Selected</b> list.
Remove	Allows you to select a format from the <b>User Selected</b> list and touch or click <b>Remove</b> to remove it.



Although you can remove a format from the User Selected list, it remains in the Available Formats list.

Close	Allows you to close the ProRead Configuration and return to the previous screen.
NewFMT	Allows you to edit or create a ProRead Format.

- 4 Touch **EDIT**.
- 5 Touch or click  to select the format to edit from the list of available in **Format Name**.
- 6 Make any necessary changes on this screen, if applicable.
  - Touch **CUSTOM** to make changes to Stop Bits, Clock Divisor, or Tokens. See “Creating a New ProRead Format,” on page 8-35. (These changes are rarely needed.)
  - From the Custom screen, touch **<<BACK** twice to return to the NewFMT screen.
- 7 Touch **CLOSE** to save the changes for the new format created.
 

A confirmation dialog appears asking you if you want to save the changes to the present format.
- 8 Touch or click **Yes** to save the format or **No** to cancel.
- 9 If you selected a standard format and made changes to it, you must save it as a new format. Touch **Save As**.
 

A dialog appears asking you to enter a different name for the format.
- 10 Touch **Close**, and then type the name of the new format in **Format Name**.



## Using the New ProRead Format

To use the newly created format to program ProRead registers, complete the following steps.

- 1 Select the **SelectFMT** tab.
- 2 Complete the steps outlined in “Selecting a ProRead Format,” on page 8-31.
- 3 Refer to “Programming the ProRead,” on page 8-9 to program, query, or read the ProRead register using the newly created format.

## Deleting a Format for ProRead Registers


To delete a user-defined format used for programming ProRead registers, complete the following steps.

- 1 Log in to the Field Programmer by completing steps 1 through 3 in “Selecting ProRead Preferences,” beginning on page 8-29.

- 2 Select **NewFMT**.

The New Format screen appears as illustrated in Figure 8.32 on page 8-32.

- 3 Touch  since the NewFMT screen now defaults to **New**, then shift the numbers to compensate.

- 4 Touch or click  to delete the format from the list of available formats.

A confirmation dialog similar to the following appears asking if you are sure you want to delete this file format.

- 5 Touch or click **Yes** to save the format or **No** to cancel.

The format is no longer available for selection on the Field Programmer.



You cannot delete a standard format from the list of available formats.

## Creating a New ProRead Format



There are very few cases where a new format is required. Creating a new format requires detailed knowledge of the ProRead register and Neptune data collectors. You should first see if you can edit an existing format before creating a new format from scratch.

To create a new format and have it appear in the Available Formats list, complete the following steps.

- 1 On the **Field Programmer** Menu, touch or click **Configure Pro-Read**.
- 2 Select **NewFMT**.

The New Format screen appears as illustrated in Figure 8.33.

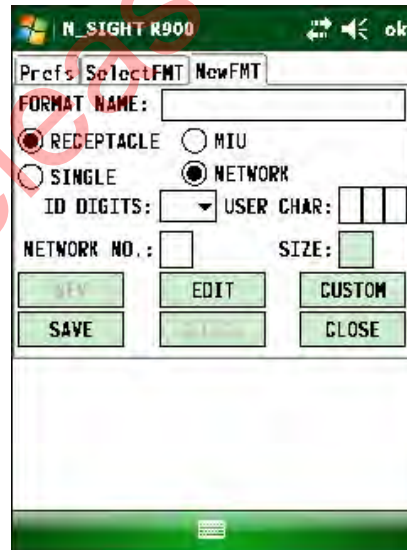




Figure 8.33 Default ProRead New Format Screen

- 3 Touch  since the NewFMT screen now defaults to it.

- 4 Touch  to select the format to edit from the list of available in **Format Name**.
- 5 Touch . See Figure 8.34.

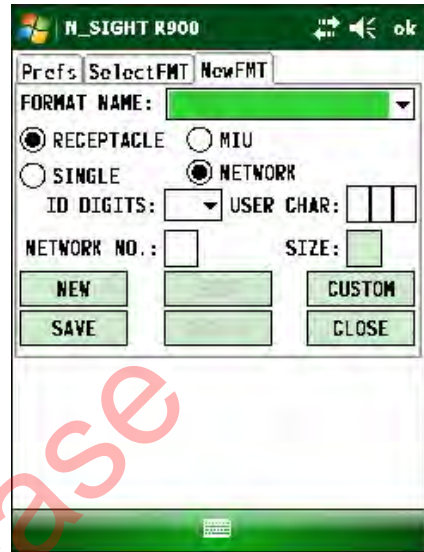



Figure 8.34 New Button Available



Touch  to view a format from the list of available formats. The screen then displays all the values associated with that format. You can select to copy this format by clicking or touching **Edit**. To save the copied format as a new format, touch or click **Save As** and give the format a new name.

- 6 Type a name that identifies the type of format you are creating in **Format Name**. See “Editing a ProRead Format,” on page 8-32. Select one of the following:
  - Receptacle
  - MIU
- 7 Select one of the following:
  - Single
  - Network



If **Network** is selected, you can enter the **Network No.** and **Size**. If the network number is less than 99, the network size defaults to 0 and cannot be edited. You can only configure the network size when the network number is 99.

- 8 Touch  to select from the list of available values of 1 to 10 for **ID Digits**.
- 9 Type three alphanumeric character for **User Char**.
- 10 Type the number for the **Network No.**
- 11 Enter the size, if applicable.
- 12 On the **NewFMT** screen, select **CUSTOM**.

The **Cus\_FMT1** screen appears as illustrated in Figure 8.35.

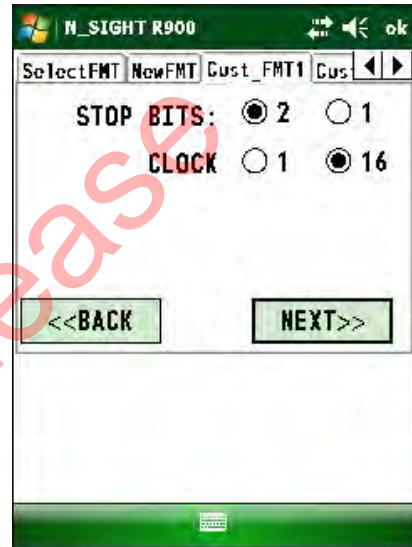


Figure 8.35 Custom Format 1 Screen

## Using the Custom Format Screens

Complete the following steps to use the custom format screens.

- 1 Select **2** or **1** for **Stop Bits**.
- 2 Select **1** or **16** for **Clock Divisor**.
- 3 Touch **NEXT>>** or the **Cus\_FMT2** tab.

The Cus\_FMT2 screen appears as illustrated in Figure 8.36.

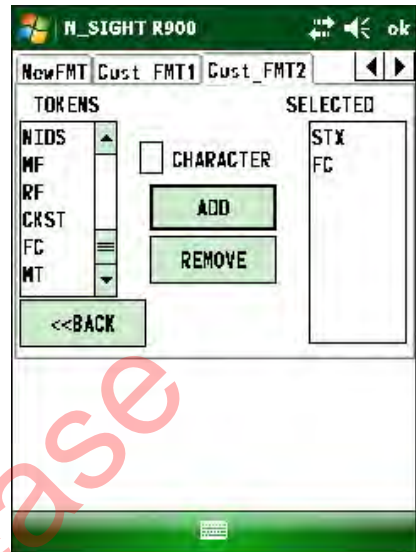


Figure 8.36 Custom Format 2 Screen

- 4 Type an alphanumeric character in **Character**, if applicable.
- 5 From the selection list of **Tokens**, touch the token you want to add to the custom format.

For a list of tokens and their explanations, refer to Appendix B, Chapter , "Tokens List for Custom Format Screen" on page -1.

- 6 Touch **ADD** .


The token you selected now appears in the **User Selected** list.

- 7 Repeat steps 5 and 6 to add more characters and tokens.
- 8 If there is a character or token in the User Selected list that you no longer need, touch **REMOVE** .

The item is removed from the User Selected list.

- 9 Touch **<<BACK** twice to return to the NewFMT screen.

## Saving the Custom ProRead Format

- 1 Touch or click  to save the changes to the new format created.

A confirmation dialog appears asking you to confirm the changes to the present format.

- 2 Click **Yes** to save the format, or **No** to cancel.

## Creating Formats for R900G Endpoints

When you program an R900G endpoint, you have the flexibility to work with the format you need by doing the following:

- Set your preferences for the type of endpoint you will be programming.
- Select a format from the list of available formats supplied by Neptune.
- Create a new format that is added to the list of available formats.

To select preferences for programming an R900G endpoint, complete the following steps.

## Configuring Gas

To select preferences for programming a gas endpoint, complete the following steps.

- 1 On the **Field Programmer** Menu, touch or click **Configure Gas**. See Figure 8.5 on page 8-7.

The Field Programmer Password screen appears as shown in Figure 8.37.

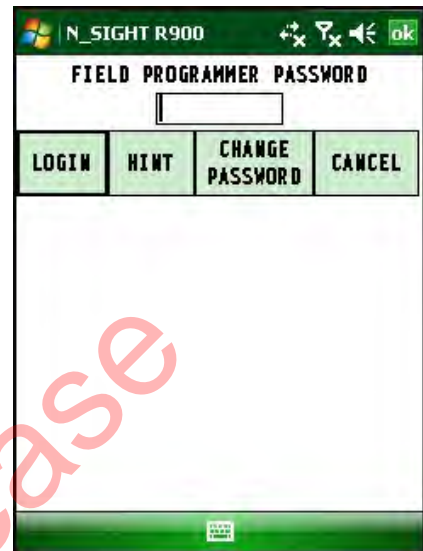


Figure 8.37 Configure Gas Password Screen

- 2 On the **Field Programmer Password** screen, type your password and do one of the following:
  - Touch **LOGIN**.
  - Click **ok**.
  - Press **Enter**.



If you cannot remember your password, you can touch or click **Hint** to display a clue.

On this screen, you can also change your password as described in “Changing Your Password,” on page 8-8 or you can cancel logging in to the system

After entering your password, the **Preferences** screen appears as illustrated in Figure 8.30.

- 3 Select your preferences as described in “Configuring Gas,” on page 8-18.

- 4 Do one of the following:
  - Touch **Close** to close the gas configuration screen and return to the previous screen.
  - Touch **SelectFMT** to select a format that is already available for the Field Programmer.
  - Touch **NewFMT** to create a new format and add it to the list of available formats.

### Selecting a Gas Format

This feature allows an administrator to select formats that will be available to field personnel for programming, as described in “Programming the R900G Endpoint,” on page 8-18

To select a format for programming an R900G endpoint, complete the following steps.


- 1 Select **Configure Gas** from the **Field Programmer** Menu. See “Starting Field Programmer,” on page 7-4.
- 2 When prompted, type your password and press **Enter**. See Figure 8.37

The Gas Preferences screen appears as illustrated in Figure 7.15.


- 3 Touch **NewFMT**.

The New Format screen appears as illustrated in Figure 8.38.

Figure 8.38 Gas New Format Screen

- 4 Touch .



- 5 Touch  to select a format from the list of available in **Format Name**.



The formats preceded by (NTG) are standard ProRead formats from Neptune. The formats without (NTG) are custom formats defined by the user.

The following information appears:

- **Available Formats** display at the top of the screen.
  - **User Selected** shows the formats already selected.
- 6 On this screen, do any the following by selecting the corresponding button or tab.

**Add** Allows you to select from the **Available Formats**, and touch or click **Add** to place it in the **User Selected** list.

**Remove** Allows you to select a format from the **User Selected** list and touch or click **Remove** to remove it from the **User Selected** list.



Although you can remove a format from the User Selected list, it remains in the Available Formats list.

**Close** Allows you to close the Gas Configuration screen and return to the previous screen.

**NewFMT** Allows you to add a new format for Gas Configuration.

## Adding or Editing a Gas Format

To add a new format and have it appear in the Available Formats list, you can either edit an existing format, or add a new format.

### Editing an Existing Gas Format

To edit an existing gas format, complete the following steps.

- 1 Touch **NewFMT**.

The New Format screen appears as illustrated in Figure 8.38 on page 8-41.

- 2 Touch .
- 3 Touch  in **Format Name** to select a format from the available gas formats.

A selection list similar to Figure 8.39 appears.

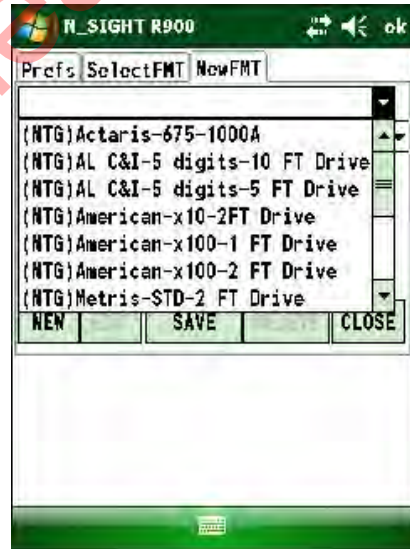


Figure 8.39 Gas New Format Selection List

- 4 Select the format you want from the available gas formats.

After you select a format, all the values associated with it appear as shown in Figure 8.40.

You can then make any necessary changes.

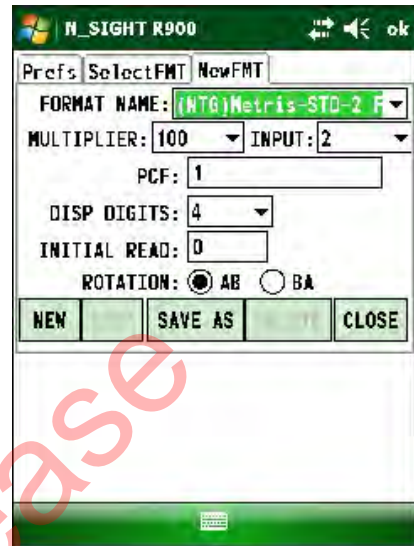


Figure 8.40 Gas Values Shown on New Format Screen

- 5 Touch or click  in **MULTIPLIER** to select the correct value from 0.01 to 1000 to be use for the format.
- 6 Type a value for **INPUT** to enter the input rate. This is controlled by the index.
- 7 Type the 9-digit number for the Pressure Configuration Factor index in **PCF**.

Refer to the listing of PCF indexes, refer to “Pressure Configuration Factor Indexes,” in Appendix C. These are examples only. This list does not include every index a utility has in its system. If there are any questions about the correct pressure configuration factor, contact the meter manufacturer.

- 8 Touch  in **DispDigits** to select one of the following:
  - 4 = Initial Reading will be in range of 0000 - 9999
  - 5 = Initial Reading will be in range of 00000 - 99999
  - 6 = Initial Reading will be in range of 000000 - 999999

- 9 Type the actual meter reading in **Initial Reading**.
- 10 Select **AB** for clockwise rotation or **BA** for counter-clockwise rotation. Use the table on “Meter Input Drive Rotation,” on page 8-45.

**Table 7.6 Meter Input Drive Rotation**

Meter		Rotation
American 250-630	12759-000	BA
Sensus R275 - #415	12821-XXX	AB
Actaris Metris, 250, 400A	12861-000	AB
American AL800 - AL5000	12882-000	BA
Sensus #750 - #10000	12882-200	AB
Actaris 675A - 1000A	12882-100	BA
Dresser AMR adapter kit for American		BA
Instrument Drive - CW		AB
Instrument Drive CCW		BA

### Saving the Format

To save the format and add it to the list of available formats, complete the following steps.

- 1 Complete the steps for “Editing an Existing Gas Format,” on page 8-43.
- 2 Touch **SAVE AS**.

A dialog appears asking you to enter a different name for the format.

3 Touch or click **Yes** to save the changes to the new format or **No** to cancel.

4 Type the name of the new format in **Format Name**.

If you selected a standard format, and made changes to it, you must type a new name for the format.

A dialog appears asking you to enter a different name for the format.

5 Touch or click  , and type the name of the new format in **Format Name**.

6 Touch or click  .

The new format is saved to the list of available gas formats.

### Adding a New Gas Format

To add a new gas format, complete the following steps.

- 1 Select **Configure Gas** from the **Field Programmer** Menu. See Figure 8.5 on page 8-7.
- 2 When prompted, enter your password. See “Starting Field Programmer,” on page 8-6.

3 Touch **NewFMT**.

The New Format screen appears as illustrated in Figure 8.38 on page 8-41.

4 Touch **EDIT** since the NewFMT screen now defaults to **New** to select an existing format name. See Figure 8.39 on page 8-43.5 Touch **NEW**.

The New Format screen appears with the fields and selections empty.

Figure 8.41 Gas New Format Screen – Blank

6 Type the name of the new format in **Format Name**.

## 7 Complete information for the following items, where applicable.

- Multiplier
- Input
- PCF See “Pressure Configuration Factor Indexes,” on page C-1. Contact the meter manufacturer if you have any questions.
- DispDigits
- Initial Reading
- Rotation (see Table 7.6 on page 8-45.)

8 Touch **CLOSE**.

A dialog appears asking you to enter a different name for the format.

9 Touch or click **Yes** to save the changes to the new format or **No** to cancel.10 Type the name of the new format in **Format Name**.

## Using the Gas Format

To use the newly created gas format to program gas registers, complete the following steps.

- 1 Select **Configure Gas** from the **Field Programmer** Menu. See Figure 8.5 on page 8-7.
- 2 When prompted, enter your password. See “Starting Field Programmer,” on page 8-6.
- 3 Select the **SelectFMT** tab.
- 4 Complete the steps outlined in “Selecting a Gas Format,” on page 8-41.
- 5 Refer to “Programming the R900G Endpoint,” on page 8-18 to program or read the R900G endpoint using the newly created format.

## Deleting a Format for R900G Endpoints

To delete a gas format used for programming R900G endpoints, complete the following steps.

- 1 Select **Configure Gas** from the **Field Programmer** Menu. See Figure 8.5 on page 8-7.
- 2 When prompted, enter your password. See “Starting Field Programmer,” on page 8-6.
- 3 Select **NewFMT**.

The New Format screen appears as illustrated in Figure 8.39 on page 8-43.

- 4 Touch  since the NewFMT screen now defaults to **New**, then shift the numbers to compensate.
- 5 Touch  to delete the format from the list of available format.

A confirmation dialog asking you to confirm the deletion.

- 6 Touch or click **Yes** to save the format or **No** to cancel.

The format is no longer available for selection on the Field Programmer.



You cannot delete a standard format from the list of available formats. You can only delete user defined formats.

Pilot Release



*Notes:*

Pilot Release

## 9 Maintaining and Repairing the Neptune Handheld System

---

This chapter provides instructions for maintaining and repairing the CE5320, the Nomad, and the R900 Belt Clip Receiver, and includes recommended spare parts. This chapter also gives instructions for packing and shipping the Neptune handheld system to Neptune should you ever need to return any unit for repair.

---

### Recommended Maintenance

The CE5320 and the Nomad require little maintenance. Only occasional cleaning of these handhelds or replacement of their batteries and handstrap are required. If you store the CE5320 for one week or more, there are some precautions you need to take to keep it in good working order. Also, when carrying or shipping either handheld, follow the precautions given in this chapter.

---

### Maintaining the CE5320

#### Cleaning the CE5320



Before cleaning the handheld, make sure that the top cover door and battery compartment are correctly closed. Otherwise, water can seep into those compartments and damage the unit.

If you do not want the handstrap to become wet during cleaning, remove the strap. Or, if you want to clean the strap, leave it on. Clean the CE5320 and its handstrap, using a soft cloth and mild soap. Do not use abrasives which can damage the finish and scratch the display making it hard to see the information shown.

## Storing the CE5320

If you intend to store the CE5320 for more than one week, there are precautions you need to take to ensure that the unit functions properly when you are ready to use it:



- If you are storing the CE5320 for one to three weeks, refer to “Short-term Storage,” on this page.
- If you are storing the CE5320 for longer than three weeks, refer to “Long-term Storage,” on this page.



To clean the display, Neptune recommends using pre-moistened lens cloths typically used for cleaning lenses and computer screens. These lens cloths can be found at any store that carries eyeglasses or computer supplies.

### Short-term Storage

Follow these steps to store the CE5320 for one to three weeks.

- 1 Fully recharge the CE5320. For help with this task, refer to the procedure “Recharging the Battery,” on page 9-5.
- 2 After the CE5320 is fully charged, turn it off by pressing the BLUE  key followed by the I/O  key.
- 3 Store the CE5320 at a temperature of 3°C to 25°C (55°F to 77°F).



When not in use, put the CE5320 in the cradle to charge at least one 24-hour period out of each week.

### Long-term Storage

To store the CE5320 for longer than three weeks, keep both the CE5320 and the battery at a temperature of 13°C to 25°C (55°F to 77°F).

To prepare the CE5320 for use after long-term storage, use one of the following methods:

- **Typical method**—to ensure that the battery is fully charged, allow the CE5320 to recharge at least 24 hours.
- **Quick method**—if your company routinely recharges the CE5320 each business day, allow the CE5320 to recharge for 12 hours.

## Checking the Battery Status

To check the status of the battery, place the CE5320 in a communication cradle. Then, check the battery indicator in the bottom-right corner of the unit, shown in Figure 9.1, and refer to the following list.

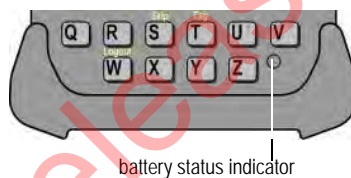


Figure 9.1 Battery Status Indicator on CE5320

- **Red**—the battery is low and is charging.
- **Green**—the battery is fully charged.
- **Yellow**—the temperature of the battery is too high or too low to be recharged. When this occurs, the charging system is disabled. The battery can be recharged when it reaches a temperature of 0°C to 45°C (32°F to 113°F).
- **No color**—the charging device (communication cradle) is not receiving power.

## Transporting the CE5320

When transporting the CE5320, keep the following precautions in mind:

- The recommended temperature range for operating the CE5320 is from -30°C to +50°C (-22°F to 122°F). Short exposure to temperatures lower or higher than these can cause the display to turn very dark or very light until the unit returns to the recommended operating temperature range. This usually occurs if the CE5320 is left in a vehicle during a hot or cold day.
- The CE5320 can withstand occasional drops from up to two meters (six feet) onto a hard surface when the unit is operated within the specified temperature range.
- The CE5320 withstands exposure to rain without allowing water to seep inside the unit. It is designed to endure occasional immersions. The unit floats making it easy to retrieve if dropped in water.
- The CE5320 performs well in most environments where electromagnetic fields are present. Examples of these environments include areas near power-transmission lines, electric motors, transformers, compressors, and low-power radio transmitters. Performance can be degraded when using a communication cable; a peripheral, such as a printer; or a battery charger under these conditions.

---

## Repairing the CE5320



Do not attempt to remove the back panel of the CE5320. Attempting to repair the unit on your own voids the warranty by breaking the warranty label which covers a screw on the back panel of the unit.

Refer to the following procedures to repair the CE5320. Do not attempt to perform repairs other than those described in this chapter. Opening the back panel of the CE5320 voids your warranty.

## Recharging the Battery

The CE5320 uses a high-quality, lithium ion battery. It can be recharged more than 500 times. When used under normal conditions, the battery should last about 24 months, although its life is reduced by repeated or prolonged total discharges.

Follow this procedure to recharge the battery.



Do not attempt to recharge the battery if the CE5320 is not within a temperature of 0°C to 45°C (32°F to 113°F). Doing so can damage the battery.

- 1 Make sure that the communication cradle, router, or Ethernet cables are connected as described in Chapter 3.
- 2 Place the CE5320 in a communication cradle.
- 3 Check the battery indicator in the bottom right corner of the CE5320 to see if the unit is charged. Refer to the following list to recharge the battery.
  - **Red**—the battery is low. Recharge the battery by allowing the CE5320 to remain in the cradle until the indicator turns green. If the CE5320 has been used under normal conditions, recharging usually takes about three hours.
  - **Green**—the battery is fully charged. Remove the CE5320 from the cradle.
  - **Yellow**—the temperature of the battery is too high or too low to be recharged. When this occurs, the charging system is disabled. Wait for the battery of the CE5320 to reach a temperature of 0°C to 45°C (32°F to 113°F). Then, place the CE5320 in the cradle. The battery indicator should now turn red.

## Calibrating the CE5320 Battery



When the handheld first arrives from the factory, the battery must be fully charged before use. The battery in the CE5320 has been calibrated at the factory; however, you may want to periodically calibrate the battery to maintain the accuracy of battery status indicators. Neptune recommends calibrating the battery if the battery is deeply discharged, if it is replaced with a new battery, or once every three months.



The battery status indicator, located at the bottom right of the handheld keyboard as shown in Figure 9.1 on Page 9-3, changes color to notify the meter reader of the battery charge status. A red light indicates that the battery is low while a green light indicates that the battery is fully charged.



This procedure could take up to 16 hours to complete. Be sure the handheld can be available for that amount of time before beginning the calibration.

Follow this procedure to display the Battery Management function.

- 1 With the handheld out of the cradle, turn it ON.
- 2 Go to the N\_SIGHT R900 Login screen.

The N\_SIGHT R900 Login screen appears with the **Battery Manager** status information on the display, as illustrated in Figure 9.2.

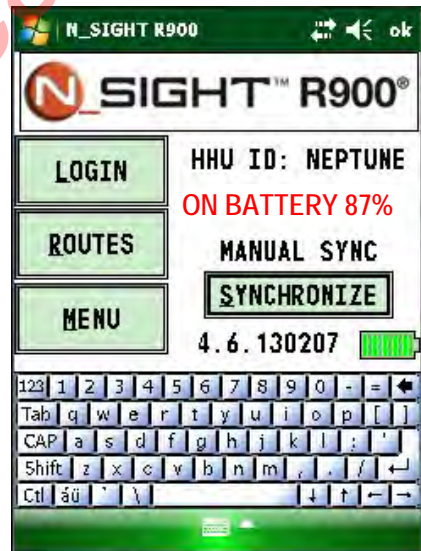


Figure 9.2 Handheld Battery Information

- 3 Place the handheld in the cradle.
- 4 On the N\_SIGHT R900 Login screen, press **M** or touch **Menu**.

The N\_SIGHT R900 Main Menu screen appears.

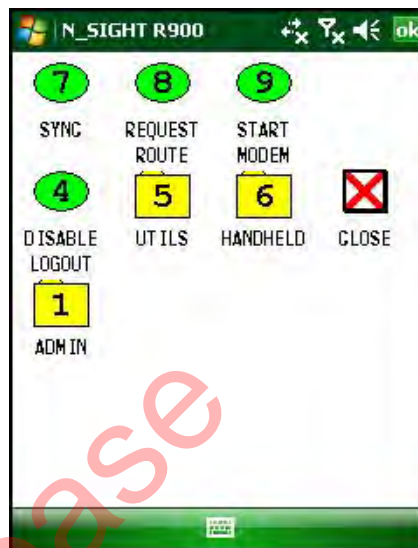


Figure 9.3 N\_SIGHT R900 Main Menu

- 5 Press **1** or touch **Admin**.

The Admin Menu appears.

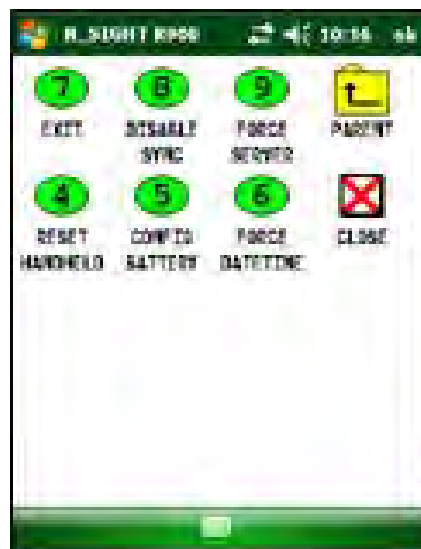


Figure 9.4 N\_SIGHT R900 Admin Menu



- 6 Press **5** or touch **Config Battery**.

The Calibrate Battery screen appears.

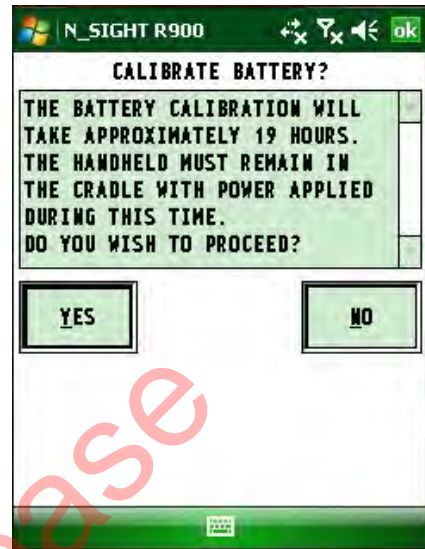


Figure 9.5 N\_SIGHT R900 Calibrate Battery Screen

- 7 Press **Y** or touch **Yes**.
- 8 Type your password when prompted.

The battery calibration begins and will take approximately 24 hours to complete.



Neptune recommends calibrating the battery if the battery is deeply discharged, if it is replaced with a new battery, or once every three months.

After the battery has been calibrated, the battery status indicator blinks a red light when the battery level is depleted to 10% of its full capacity. This means that if a battery lasts for 15 hours on full charge, the indicator light begins blinking 90 minutes before Low Battery Warning appears and the handheld runs out of battery power.

This feature can be used by meter readers in the field to warn them ahead of the final message that appears on the display.

## Replacing the Battery

If you find that the battery does not last for eight hours after having been recharged, you need to replace it.

To replace the battery, you need the following equipment:

- One small, flat-blade screwdriver
- One lithium-ion replacement battery, part number 8136-015

Follow this procedure to remove the battery from the CE5320 and replace it with a new one.



Do not attempt to remove the battery while the CE5320 is turned on. Otherwise, data can be lost.



- 1 Turn the CE5320 off by pressing the BLUE , .
- 2 Using a small, flat-blade screwdriver, turn each of the four captive screws that secure the door of the battery compartment counter-clockwise to loosen them. See Figure 9.6.



Figure 9.6 Remove the Captive Screws

- 3 Lift the door from the back panel.



Because the CE5320 uses captive screws, you cannot remove the screws, but can only loosen them until they detach from the back panel.

To install a new battery, use the following procedure.

- 1 Fold the foam flap back and remove the old battery.
- 2 Position the new battery over the compartment so that the label of the battery faces down and the arrow (▶) on the top of the battery points to the right.
- 3 Lower the left side of the battery — the side that is across from the arrow (▶) — into the battery compartment.
- 4 Then, lower the rest of the battery into the compartment, pushing firmly until the battery is fully seated as shown in Figure 9.7.



Figure 9.7 Inserting the Battery

- 5 Fold the protective foam flap over the battery and replace the door of the battery compartment.
- 6 Secure the door of the battery compartment to the back panel of the CE5320 by turning each of the four captive screws clockwise until you feel some resistance.

## Removing or Replacing the Handstrap

Follow this procedure to remove the handstrap for cleaning or to install a new handstrap.

### Equipment

To remove or replace the handstrap, you need the following equipment:

- One small, flat-blade screwdriver
- If you are replacing the handstrap, one replacement handstrap (package of 4), part no. 12249-012

### Removing

Follow this procedure to remove the handstrap from the CE5320 for cleaning or replacement.

- 1 Using a small, flat-bladed screwdriver, turn the single screw that secures the handstrap to the top of the back panel counterclockwise to remove it. See Figure 9.8.



Figure 9.8 Removing Screw From Back Panel

- 2 Remove the plastic washer.
- 3 Keep the screw and washer. You can use them later to install the new handstrap.

- Using a small, flat-blade screwdriver, turn each of the four captive screws that secure the door of the battery compartment counter-clockwise to loosen them. See Figure 9.9.



Figure 9.9 Removing the Captive Screws

- Lift the door from the back panel.



Because the CE5320 uses captive screws, you cannot remove the screws, but can only loosen them until they detach from the back panel.

- Remove the handstrap from the door of the battery compartment by removing the small metal pin that holds the handstrap in place. You can find it easier to perform this operation by opening the handstrap's Velcro™ closure, shown in Figure 9.10, and pushing a portion of the handstrap through the two holes in the door of the battery compartment, loosening the metal pin. See Figure 9.10 on Page 9-13.



Figure 9.10 Opening the Velcro Closure

## Replacing

To replace the existing strap or to install a new one, use the following procedure.

- 1 Fold the slotted end of the handstrap back to form a hinge and loosely secure the Velcro closure.
- 2 Hold the door of the battery compartment so that the screws face you. Then, push the slotted ends of the handstrap through the two holes on the door.
- 3 Turn the door over so that the inside of the door is facing you, and slide the small metal pin that you removed earlier through the slots of the handstrap. If you have difficulty inserting the pin, try loosening the Velcro tab and pushing more of the handstrap through the holes on the door.
- 4 Fold the protective foam flap over the battery and replace the door of the battery compartment.
- 5 Secure the door of the battery compartment to the back panel of the CE5320 by turning each of the four captive screws clockwise until you feel some resistance.

- 6 Align the hole in the other end of the handstrap with the screw hole on the back panel of the CE5320. Then, replace the plastic washer and screw that you removed earlier.
- 7 Tighten the screw by turning it clockwise until you feel some resistance.
- 8 Secure the Velcro closure, adjusting its tightness to your preference.

---

## Maintaining the Nomad

### Battery Life

The lithium-ion battery life is dependent upon the usage and operating environment.

#### Tips for Extending the Battery Life

- **Keypad backlight:** The default is OFF. Using this backlight could reduce your battery life by up to 25%. **Display backlight:** Tap **Start | Settings | System | Backlight** to minimize the amount of time the backlight stays on, and dim it to only as bright as required to view the display.
- **WiFi, Bluetooth, camera, or barcode scanner:** If your unit comes with any of these options installed, use ONLY when necessary. Turn off when not needed. Minimize the Flash intensity and the use of the flashlight.
- **Cold temperatures:** Keep the unit as warm as possible. If feasible, keep it inside your coat or a vehicle when not in use.
- **GPS:** Ensure that the GPS-aware applications that communicate with the GPS are closed when not in use.
- **Expansion ports:** Select low-power consumption CF and SD cards and use them only when necessary.
- **Auto features:** Tap **Start | Settings | System | Power | Advanced**. To conserve battery power, specify your unit to turn off in a short time if not in use.

Other factors that may have some impact on battery life include heavy usage of the Bluetooth radio and heavy processing by the CPU, but these factors are typically less significant.

## Charging the Battery

You can charge the battery in the unit or apart from the unit with an external battery charger (sold separately as an accessory). Connect the power adapter for your country to the power cord and attach to the power supply. Plug into an electrical outlet and plug the barrel end of the power supply into the unit. The unit will be charged in about 4.5 hours.

A full charge is indicated by the battery LED (right side of the unit) turning green. The recommended temperature range for charging is between +32 °F and +113 °F (0 °C and +45 °C). If the battery temperature is outside of this range, the battery will not charge.



Be sure to only use the power supply included with your unit. Use of other adapters may void the product warranty.

## Checking the Battery Status

To check the status of the battery, place the Nomad in a communication cradle. Then, check the battery indicator in the upper right portion of the unit, shown in Figure 9.11.



Figure 9.11 Battery Status Indicator on Nomad



## Replacing the Battery

The unit was designed to be able to replace the battery quickly without resetting it. The unit saves enough power (in Replace Battery mode) that if you swap the battery within approximately one minute, it will not trigger a reset.



If the saved power runs out before the new battery is installed, the unit will reset. This will not impact saved data, programs, or configuration, however unsaved data will be lost and the time settings will need to be reset.

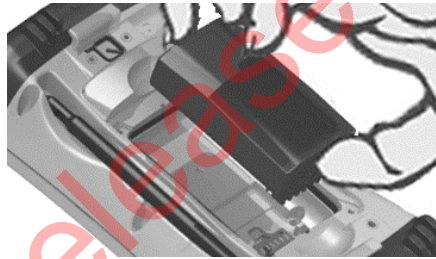


Figure 9.12 Changing the Nomad Battery

To replace a battery, perform the following steps.

- 1 Close open applications and save data in case the battery exchange takes too long.
- 2 Remove the hand strap from the unit.
- 3 Enter the **Replace Battery** mode.

This ensures that alarms will not wake up the unit while changing the battery.

- 4 Press and hold the Power key until you see the five-second prompt then release. The menu appears and allows you to tap **Replace Battery**.
- 5 Use the supplied stylus or a small #1 Philips head screwdriver to loosen the four screws in the battery door.
- 6 Remove the battery from the unit.
- 7 Quickly insert the replacement battery into the unit.

- 8 Place the battery door over the battery, with the flat side of the battery door at the top of the unit. Use the stylus or screwdriver to finger-tighten the four screws.
- 9 Replace the hand strap.
- 10 Power on the unit to resume operation.

## Calibrating the Nomad Battery



Neptune recommends calibrating the battery if the battery is deeply discharged, if it is replaced with a new battery, or once every three months.

The battery has an internal gauge that provides an estimate of the amount of energy in the battery as it charges and discharges. If your battery is showing inaccuracy in the power gauge or large jumps in capacity (such as the power is reading 50% and goes dead shortly thereafter), it may need calibration.

Tap **Start | Settings | System | Power | Calibration** to see if the message reads Calibration recommended or Calibration not necessary. If calibration is recommended or the battery is reporting inaccurately, perform the following steps.

1. Use the plug to connect the power supply, or place the handheld in the cradle.



The unit must remain connected to the power during the calibration or you may need to restart the process.

2. Ensure the temperature is between +32 °F and +113 °F (0 °C and +45 °C) while charging.
3. Tap **Start Calibration**.

During the calibration process, the Power key is disabled temporarily and the backlight is turned up to 100%.



It takes up to 24 hours to complete the calibration. When finished, a notification message states that the calibration is complete. Neptune recommends not using your unit during the calibration process.

4. To stop the calibration process, tap **Start | Settings | System | Power | Calibration | Stop Calibration**.

Refer to Table 9.1 for possible error messages that can occur during calibration.

**Table 9.1 Calibration Error Messages**

Error Message	Part Solution
Battery is not charging, aborting	Battery temperature may be out of range. Wait until battery temperature settles and try again.
Discharge became invalid, restarting	Calibration will restart itself.
AC power is in an unknown or uncontrolled state; aborting	Plug in unit and restart calibration. Try a different power supply and restart calibration. If it continues to fail, have the unit serviced.

## Notification LEDs

At the top of the Nomad are two LEDs that provide status information. The LED states are shown in the following table.

**Table 9.2 Calibration Error Messages**

Right LED	Function
Off	On battery power
Solid yellow	Charging on power supply
Solid green	Fully charged on power supply

**Table 9.2 Calibration Error Messages**

Blinking yellow	Battery problem during charging (temperature out of range, defective or missing battery)
-----------------	--

Left LED	Function
Off	No notifications and phone off
Blinking yellow	Microsoft notifications



If the left LED is blinking green, the battery power is being consumed due to the cellular modem being turned on, even when the device is suspended.

## Maintaining the R900 Belt Clip Receiver

### Recommended Maintenance

To ensure a watertight seal occasionally inspect the battery door gasket and bottom plug door to make sure they are free from dust and debris. These can be cleaned by wiping with a damp cloth. If any wear or tear is observed please contact Neptune Customer Support for repair. Refer to “Contacting Customer Support,” on page 1-5.

### Battery Life

The lithium ion battery life is dependent upon the usage and operating environment. Under normal operating conditions, the battery should be replaced every two years.

## Tips for Extending the Battery Life

Neptune suggests the following tips for the lithium ion battery in your R900 BCR.

- **Room temperature:** Try to store the battery at room temperature at all times.
- **Cold temperatures:** Keep the unit as warm as possible. If feasible, keep it inside your coat or a vehicle when not in use.
- **Keeping a charge:** Try to maintain at least a 40% charge on the battery to extend battery life.

## Charging the Battery

You can charge the battery in the unit or apart from the unit with an external battery charger (sold separately as an accessory). Connect the power adapter for your country to the power cord and attach to the power supply. Plug into an electrical outlet and plug the barrel end of the power supply into the unit. The unit will be charged in about 4.5 hours.

You can charge the battery for the unit R900 BCR in one of two ways:

- Through the USB port
- Using the external battery charger, (sold separately as an accessory PN: 13148-001).

## Using the USB Port

To charge the battery using the USB port, complete the following steps.

- 1 Using the supplied USB cable, connect the R900 BCR to a USB wall or car charger.



The charger must be capable of supplying at least 500 mA to charge the battery while OFF, and 1A to charge the battery while running. For instructions on using the standalone charger see the manual included with it.

- 2 Connect the power adapter for your country to the power cord and attach to the power supply.
- 3 Plug the power adapter into an electrical outlet.
- 4 Plug the micro USB into the R900 BCR.

The unit is charged in about eight hours.



Be sure to only use the power supply included with your unit. Use of other adapters may void the product warranty.

### Charging Considerations

Refer to the following table for charging considerations.

**Table 8.3 Charging Considerations**

Consideration	Description
Green LED	Full charge
Temperature range	Recommended between +32 °F and +113 °F (0 °C and +45 °C)
Outside range	Battery will not charge

## Using the Charger

The supported lithium ion battery charger is designed to charge the Neptune 3.7VDC 5000mAh Li-Ion battery P/N 13143-001. The following illustration shows the supported external battery charger, sold separately as an accessory PN: 13148-001.

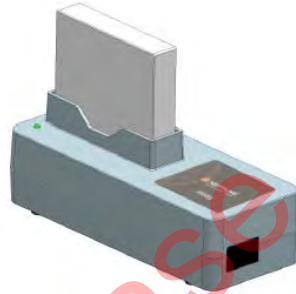


Figure 9.13 External Battery Charger



Do not try to charge any other battery with this device.

To charge the battery using the external battery charger, complete the following steps.

- 1 Place the charger on a flat and stable surface.
- 2 Connect the charger to an AC wall plug using the AC cable delivered together with the device.

The three colors of the LED flash for about 1 second each (red – yellow – green). After that, the LED sequence flashes, and the charger is ready for use.

- 3 Remove the charger from the wall plug if it will not be used for long period time.



If an error is identified, the LED turns red. Immediately remove the battery from the charger.

## Replacing the R900 Belt Clip Receiver Battery

The following section explains how to replace the battery for the R900 BCR.



Be sure the battery is free of dust and debris, and only replace the battery in a dry environment.

### Removing the Battery

To remove the battery from the R900 BCR, complete the following steps.

- 1 Hold the R900 BCR firmly with left side facing up. See Figure 9.14.

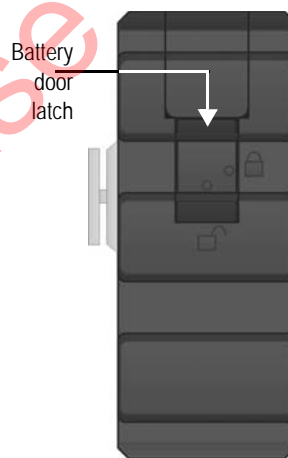


Figure 9.14 R900 Belt Clip Receiver Side View



Figure 9.15 Latch Direction to Open

- 2 Push the lock latch down toward the unlock symbol. See Figure 9.15.
- 3 Once the latch is in place, push the latch button inward to open the battery compartment door.



- 4 Pull the door toward you to access the battery.
- 5 Hold the R900 BCR vertically, right side facing up, with one hand over the open compartment.

The battery is located on the right side. See Figure 9.16.

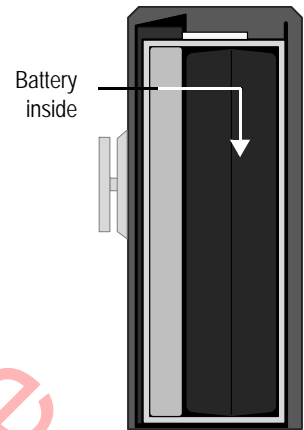


Figure 9.16 Battery Inside Compartment

- 6 Vigorously tap the top of the R900 BCR until the battery loosens for removal



The battery can be difficult to remove when fully charged.

### Replacing the Battery

To replace the battery in its compartment, complete the following steps.

- 1 Open the battery door of the R900 BCR. See Steps 1 through 4 of “Removing the Battery,” on page 9-23.
- 2 Have the front view of the R900 BCR facing up.
- 3 Hold the battery horizontally with the label facing down.

- Inset the battery into the R900 BCR until the battery snaps in place.

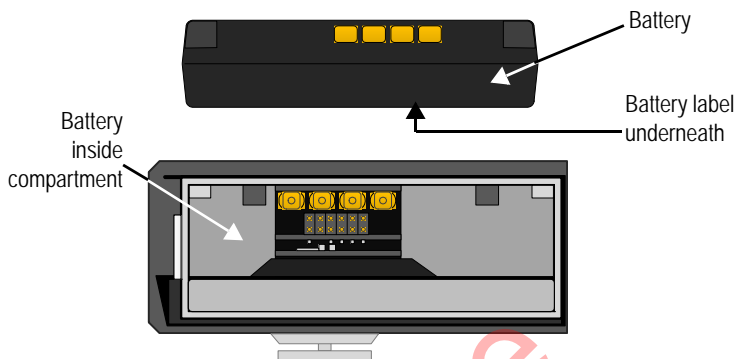


Figure 9.17 R900 Belt Clip Receiver Battery Inside Compartment

- Close the battery door, and lock it.



The battery should be replaced every two years.

## LED Status Indication

The battery charging starts immediately after inserting a battery pack into the charging cradle. The LED color indicates the status of the charger and charge process. The LED states are shown in the following table.

Table 9.4 LED Status Indicators

LED	Indicates
Red, yellow, green, or OFF	Startup initialization when applying power
OFF	No battery inserted
Yellow	Battery charging
Solid green	Battery charged successfully
Red	Error condition

## Checking the Battery Status

The battery indicator is one of the four visible on the front of the R900 BCR. The battery percentage can also be seen on the status screen for the R900 BCR.

---

## Recommended Spare Parts

### Ordering Parts

To order new parts for one of the Neptune handheld system devices, refer to the following tables to find the part number that you need. Then, place an order for the parts by contacting your local Neptune Distributor. You may also contact Neptune Customer Service at (800) 645-1892. Business hours are Monday through Friday, 7:30 a.m. to 4:30 p.m. Central time.

### CE5320 Spare Parts

Neptune recommends that you keep the following spare parts on hand for each CE5320 that you have. Use Table 8.5 to find the part number of the item that you need.

**Table 8.5 CE5320 Part Numbers**

Description	Part Number
Lithium ion battery	12249-047
Spare hand straps (package of 4)	13245-008
Spare shoulder strap	12249-014

### Nomad Spare Parts

Neptune recommends that you keep the following spare parts on hand for each Nomad that you have. Use Table 9.6 on Page 9-27 to find the part number of the item that you need.

**Table 9.6 Nomad Part Numbers**

Description	Part Number
Lithium ion battery 	13245-002
Spare hand straps (package of 4) 	13245-008

To obtain a replacement stylus, Neptune recommends that you purchase one from a local electronics store. A Belkin model P45470 for the HP iPAQ 2200 fits into the stylus slot of the handheld.

### R900 Belt Clip Receiver Spare Parts




Neptune recommends that you keep the following spare parts on hand for each R900 BCR that you have. Use Table 8.7 to find the part number of the item that you need.

**Table 8.7 R900 Belt Clip Receiver Part Numbers**

Description	Part Number
R900 BCR spare battery charger	13148-001
R900 BCR replacement battery	13143-001

## Returning your Neptune Handheld System

Use the following procedure to pack the Neptune handheld system so that it can be shipped without damage to Neptune.

- 1 Contact a Neptune Customer Support Specialist to confirm whether or not the handheld should be shipped. Contact Customer Support at (800) 647-4832 to request a Return Material Authorization (RMA) number. The RMA number must be legibly printed on the outside of the box.
- 2 Turn the handheld off by doing the following:
  - Pressing BLUE , **F1**  on the CE5320 handheld
  - Pressing and holding the I/O  key on the Nomad handheld until the five-second message appears then release. Now press power on the menu and then select **Yes** to confirm.



Use the original packing box that you received from Neptune. The handling involved in land and air transport often subjects the handheld to impact beyond that which occurs during normal use. The original packing box is designed to reduce the vibrations and shocks caused during shipping. If the handheld is not properly packaged, it can be damaged during shipping.

- 3 Repack the handheld in the original packing box that you received from Neptune, making certain to use plenty of packing material to absorb shocks and vibrations caused during shipping.
- 4 Send the package to the address of the repair facility as directed by Neptune.

## 10 Troubleshooting

---

Use the information in this chapter to solve any problems. If you still cannot solve the problem, contact a Neptune Customer Support Specialist. For help in contacting Neptune, refer to the topic “Contacting Customer Support,” on page 1-5.




---

### Troubleshooting the Handheld

This section contains questions and answers for troubleshooting the Neptune handheld system. It is in the format of questions that can arise if a problem occurs. Answers represent possible solutions to these problems.

Pilot Release

## Basic Tasks for the CE5320B Handheld

Question	Answer
<p>The display is empty, and the CE5320B does not beep when I press a key.</p>	<p>The CE5320B can be turned off. Press the <math>\nu/o</math>  key to turn the unit on.</p>
<p>When I press the <math>\nu/o</math>  key, the CE5320B does not turn on.</p>	<p>The battery can be too low. Place the CE5320B handheld in a communication cradle. Then, check the color of the battery indicator in the bottom right corner of the CE5320B handheld. The indicator turns red if the battery is low.</p>
<p>The CE5320B does not refresh when I place it in a communication cradle.</p>	<p>WARNING: On Battery ___ % (indicating a very low battery life remaining).</p> <p>If this message appears, place the CE5320B Handheld in the cradle and allow it to remain until the indicator turns green, indicating that the battery is fully charged. Recharging the battery can take from three to six hours.</p>
<p>When trying to log in, I receive the error "DB Uninitialized."</p>	<p>If the battery indicator is not red, make sure that the communication cradle is connected to a proper electrical outlet.</p> <p>Check that all cables are secure.</p>
<p>The CE5320B handheld locks and does not respond when I press keys.</p>	<p>Check that a route is loaded to the handheld and the Reader ID is set up in the N_SIGHT R900 host software.</p> <p>Reload the handheld.</p> <p>Add a bullet stating Press Synchronize to communicate with the database.</p>
<p>The CE5320B handheld locks and does not respond when I press keys.</p>	<p>Press .</p> <p>Reset the unit. For help with this task, refer to the procedure "Resetting the CE5320B," on page 10-7.</p>

**Question**

**Answer**

The display contrast is weak or the display background is very dark.

Press  and  to brighten the display.

The CE5320B handheld has been exposed to temperatures outside the range of -30°C to +50°C (-22°F to 122°F). Short exposure to temperatures lower or higher than these can cause the display to turn very dark or very light until the unit returns to the recommended operating temperature.

The CE5320B handheld does not turn off automatically or manually.

The CE5320B handheld is in a communication cradle, in which case the CE5320B handheld remains on until you remove it from the cradle and then turn it off.

When I try to communicate with the host computer, I receive the error "Last Sync Failed."

Make sure that you have set up the communications peripheral you are using according to the directions provided in "Connecting to the Host Computer and Power Supply," on page 3-5 or "Connecting to the Host Computer and Power Supply," on page 4-4.

I am unable to load or unload data to or from the host computer.




Check that all the cables are correctly attached and secure.


At the Synchronize screen (N\_SIGHT R900 Login screen), confirm that the server name is correct.

Pilot Release




## Basic Tasks for the Nomad Handheld

Question	Answer
<p>The display is empty and the Nomad does not beep when I press a key.</p>	<p>The Nomad can be turned off. Press the I/O  key to turn the unit on.</p>
<p><i>When I press the I/O  key, the Nomad does not turn on.</i></p>	<p>The battery can be too low. Connect the Nomad to its power. Then, check the color of the battery indicator in the bottom right corner of the Nomad. The indicator turns red if the battery is low.</p> <p>WARNING: On Battery ___ % (indicating a very low battery life remaining).</p> <p>If this message appears, place the Nomad in the cradle, and allow it to remain until the indicator turns green, indicating that the battery is fully charged. Recharging the battery can take from three to six hours.</p>
<p>The Nomad does not refresh when I place it in a communication cradle.</p>	<p>If the battery indicator is not red, make sure that the communication cradle is connected to a proper electrical outlet. Check that all cables are secure.</p>
<p>When trying to log in, I receive the error "DB Uninitialized."</p>	<p>Check that the Reader ID is set up in the N_SIGHT R900 host software.</p> <p>Reload the handheld.</p> <p>Press Synchronize to communicate with the DB.</p>
<p>The Nomad Handheld locks and does not respond when I press keys.</p>	<p>Press .</p> <p>Reset the unit. For help with this task, refer to the procedure "Resetting the CE5320B," on page 10-7.</p>

Question	Answer
<p>The display contrast is weak or the display background is very dark.</p>	<p>Click  in the upper left corner.</p> <ul style="list-style-type: none"> <li>- Click <b>Settings</b>.</li> <li>- Click the <b>System</b> tab at the bottom of the screen.</li> <li>- Click <b>Backlight</b> at top center.</li> <li>- Click the <b>Brightness</b> tab at the bottom of the screen.</li> <li>- Adjust with the slider bar.</li> </ul>
<p>The Nomad does not turn off automatically or manually.</p>	<p>The Nomad handheld has been exposed to temperatures outside the range of -30°C to +50°C (-22°F to 122°F). Short exposure to temperatures lower or higher than these can cause the display to turn very dark or very light until the unit returns to the recommended operating temperature.</p> <p>Check the screen timeout in the <b>Settings  System  Backlight</b>.</p> <ul style="list-style-type: none"> <li>- Select "<b>Turn off backlight if device is not used for.</b>"</li> <li>- Select a time from the drop down.</li> </ul> <p>The Nomad is in a communication cradle in which case the Nomad remains on until you remove it from the cradle and then turn it off.</p>
<p>When I try to communicate with the host computer, I receive the error "Last Sync Failed."</p>	<p>Make sure that you have set up the communications peripheral you are using according to the directions provided in "Connecting to the Host Computer and Power Supply," on page 3-5 or "Connecting to the Host Computer and Power Supply," on page 4-4.</p>
<p>I am unable to load or unload data to or from the host computer.</p>	<p>Check that all the cables are correctly attached and secure.</p> <p>At the Synchronize screen (N_SIGHT R900 Login screen), confirm that the server name is correct.</p>

## Reading-Entry Tasks

Question	Answer
<p>When I try to tag an account, the tag indicator  does not appear on the display.</p>	<p>If your display does not show the tag indicator after you tag an account, the tag option is not selected on the host computer. For help in selecting this option, the host operator should refer to the <i>N_SIGHT R900 Online HTML Help</i>.</p>

## Communication Tasks

Question	Answer
I cannot get routes to load or readings to unload.	<p>The problem can be hardware or software based. Try the following solutions.</p> <p><b>Hardware</b></p> <p>Make certain that your system is set up as described in Chapter 3.</p> <p>Check that cables and connectors are secure.</p> <p><b>Software</b></p> <p>Make certain that the software is set up as described in Chapter 3.</p> <p>Check with the operator of the host computer to make sure that the Communications Manager function or SQL Anywhere service is running.</p> <p>Check that routes are properly assigned.</p>

### Starting the N\_SIGHT R900 Program

If you quit the N\_SIGHT R900 application program by clicking OK in the upper right corner of the screen, the handheld automatically returns to the N\_SIGHT R900 Login screen.

### Loading Data Initially

When your handheld arrives, it should contain the file to load N\_SIGHT R900 and necessary data files to support that executable with those data files already in their proper locations.



These files do not include your route data that is downloaded from the host system during the communications process.

If any of these files are missing when you receive the handheld, or if any are subsequently erased, several scenarios are possible.

## Missing Route Files

If a complete system is loaded but there are no route data files present, the **DB Uninitialized** message appears when N\_SIGHT R900 is executed. Check the Reader ID in the N\_SIGHT R900 host software. Then, reload the handheld.

## Resetting the CE5320B



Never reset the CE5320B without first checking with your supervisor. Under certain circumstances, resetting the CE5320B will cause you to lose data.

Follow these steps to reset the CE5320B.

- 1 From the N\_SIGHT R900 Login screen, touch **Menu** or press **M**. See Figure 10.1.



Figure 10.1 N\_SIGHT R900 Login Screen

The N\_SIGHT R900 Main Menu appears, as illustrated in Figure 10.2.

- 2 Touch ONE **1** for ADMIN.

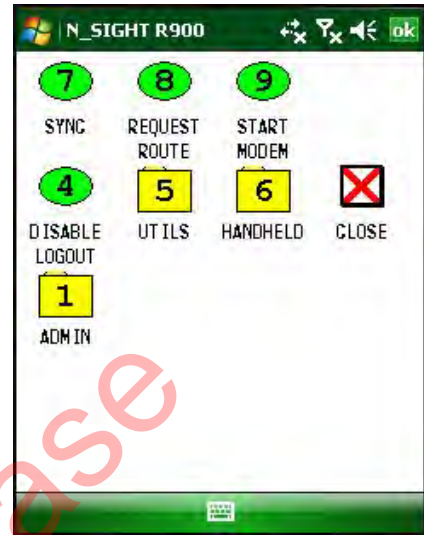


Figure 10.2 N\_SIGHT R900 Main Menu

The Handheld Menu appears as illustrated in Figure 10.3.

- 3 Touch FOUR **4** for RESET HANDHELD.

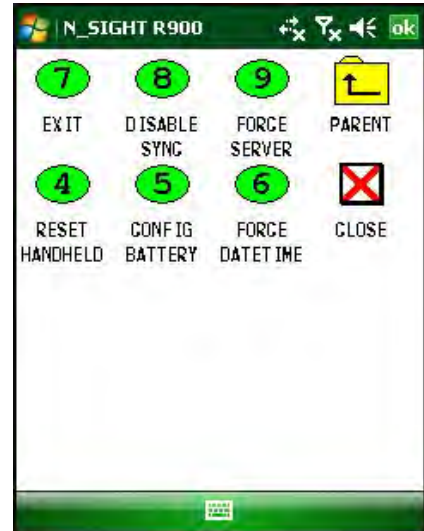


Figure 10.3 N\_SIGHT R900 Admin Menu

A warning message appears as illustrated in Figure 10.4.

- 4 Touch **YES** to proceed.

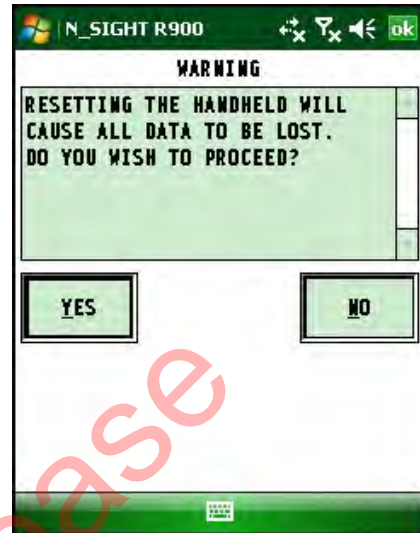


Figure 10.4 Reset Warning Message

- 5 Select **YES** to proceed.

This action clears all routes from the handheld.

## Rebooting the CE5320B




Rebooting the handheld differs from resetting the handheld because it does not delete the routes off the handheld. Only resetting deletes routes from the handheld.

### Rebooting When Logged into a Route in N\_SIGHT R900

Follow these steps to reboot the CE5320B when logged on to N\_SIGHT R900.

- 1 Press I/o **F1** or .

The N\_SIGHT R900 F1 Menu appears, as illustrated in Figure 10.5.

- 2 Touch **SEVEN**  for **HANDHELD**.

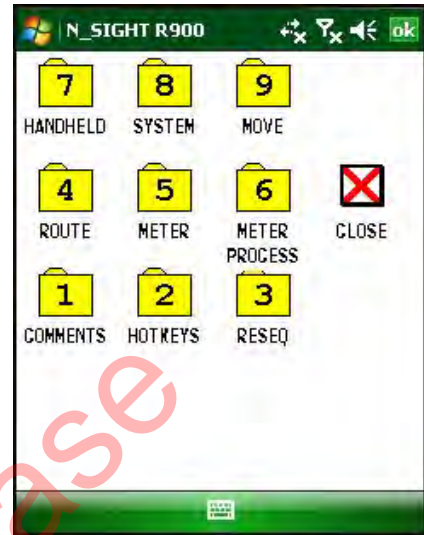



Figure 10.5 N\_SIGHT R900 F1 Menu

The Handheld Menu appears, as illustrated in Figure 10.6.

- 3 Touch **SEVEN**  to **REBOOT**.

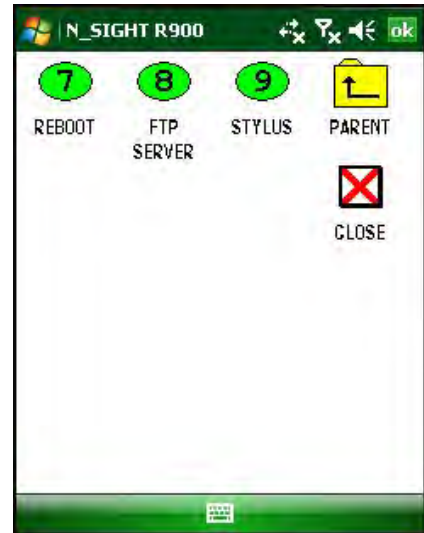


Figure 10.6 N\_SIGHT R900 Handheld Menu

A warning message appears as illustrated in Figure 10.7.

- 4 Touch **YES** to proceed.

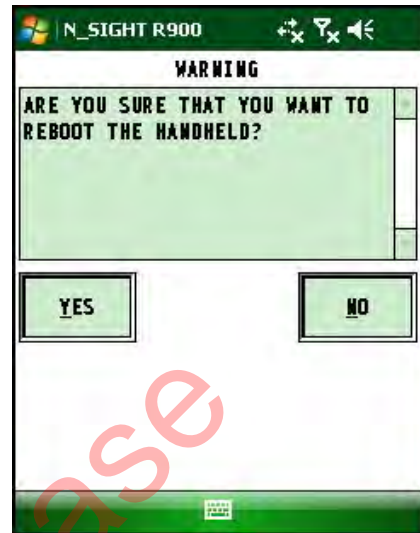




Figure 10.7 Reboot Handheld Screen

A beep sounds and the N\_SIGHT R900 Login screen appears as illustrated in Figure 10.1 on Page 10-7.

### Rebooting When Logged off N\_SIGHT R900

Follow these steps to reboot the CE5320B when logged off N\_SIGHT R900.

- 1 From the N\_SIGHT R900 Login screen, touch **Menu** or press **M**. See Figure 10.1 on Page 10-7.
- 2 The N\_SIGHT R900 Main Menu appears as illustrated in Figure 10.2 on Page 10-8.
- 3 Touch SIX  for **HANDHELD**.
- 4 Touch FOUR  for **REBOOT**.

A beep sounds and the N\_SIGHT R900 Login screen appears as illustrated in Figure 10.1 on Page 10-7.



Pilot Release

## Appendix A Changing Volume Settings

---

### Adjusting Customized Sounds

The volume of the CE5320 is actually controlled through N\_SIGHT host software and the handheld-specific settings. If you changes the volume on the handheld, it reverts to the default setting the next time that the unit synchronizes. The volume on the Nomad is controlled by a scroll bar.

### Changing the Volume Setting on the CE5320



The following instructions are for the CE5320 handheld only. To adjust the volume on the Nomad, see "Changing the Volume Setting on the Nomad," on page A-5.

To adjust the volume control setting on the CE5320, complete the following steps.



- 1 On the N\_SIGHT R900 Login screen, press **M** or touch **Menu**.

The N\_SIGHT R900 Main Menu screen appears.

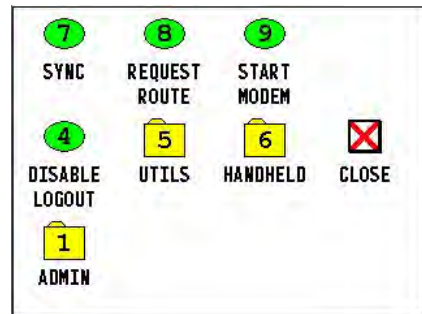


Figure A.1 N\_SIGHT R900 Main Menu

2. Select , **Admin.**

The Admin Menu appears as illustrated in Figure A.2.

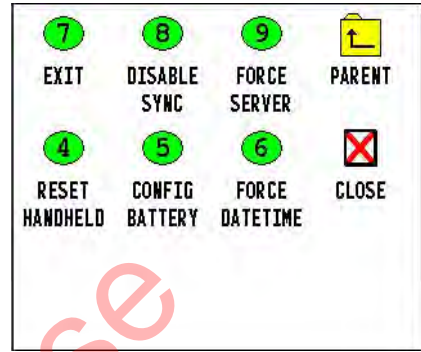


Figure A.2 N\_SIGHT R900 Admin Menu

3. Select , **Exit.**

The **CE.Net Windows Explorer** screen appears.


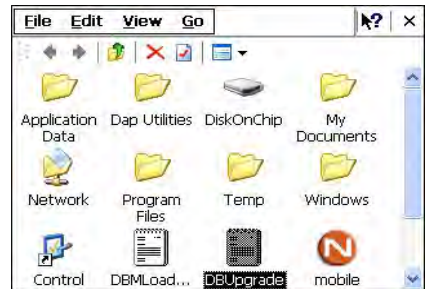


Figure A.3 CE.Net Windows Explorer Screen



- 4 Click the  in the upper right corner of the screen.


The Windows C. main screen appears as illustrated in Figure A.4.



Figure A.4 Windows CE Main Screen



On the CE5320, if the screen backlight goes off, turn it on by pressing  + .

- 5 Touch .
- 6 Select **Settings**, and **Control Panel**, as illustrated in Figure A.5.

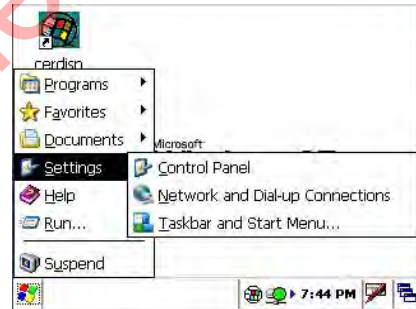


Figure A.5 Selecting Control Panel

The Control Panel menu appears as illustrated in Figure A.6.



Figure A.6 Windows Control Panel Menu

- 7 Scroll to  and touch this icon.

The Volume & Sounds Properties screen appears as illustrated in Figure A.7.



Figure A.7 Volume & Sounds Properties Screen

- 8 On the **Volume tab**, enable sounds for the following:

- Events (warnings, system events)
- Applications
- Notifications (alarms, reminders)
- Key clicks: (then select soft or loud)
  - Soft
  - Loud
- Screen taps: (then select soft or loud)
  - Soft
  - Loud





On this screen you are enabling the volume level of the key clicks and screen taps to be loud or soft. To turn key clicks on or off in N\_SIGHT R900, refer to "Turning Key Clicks On and Off," on page A-24 or "Turning Key Clicks On and Off," on page A-27.

- 9 Move the scroll bar to the appropriate volume level, soft or loud.

As you move the scroll bar, you can hear the volume level you select.

- 10 Touch **OK**.

- 11 The Windows Control Panel screen appears.
- 12 Touch  , to return to the Windows menu.
- 13 Touch .
- 14 Select **Programs | Windows Explorer**.



- 15 Touch *mobile* to start N\_SIGHT R900.

## Changing the Volume Setting on the Nomad



The following instructions are for the Nomad handheld only. To adjust the volume on the CE5320, see "Changing the Volume Setting on the CE5320," on page A-1.

To adjust the volume control setting on the Nomad, complete the following steps.



- 1 On any screen in N\_SIGHT R900, click the volume icon at the top of the screen. The following drop-down scrollbar appears. See Figure A.8.

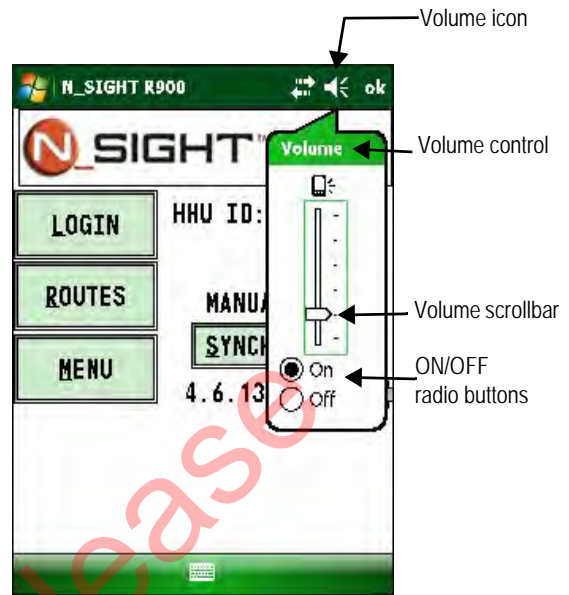


Figure A.8 Nomad Volume Control

- 2 Referring to Figure A.9, do one of the following.
  - Move the scrollbar up or down to adjust the level of sound.
  - Click one of the radio buttons to turn the sound on or off.

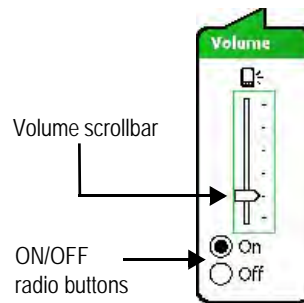


Figure A.9 Nomad Scrollbar and Radio Buttons

- 3 Click **OK**.

## Appendix B Tokens List for Custom Format Screen

---

With the Field Programmer, tokens are constants and special characters used as part of a ProRead format to do the following:

- Indicate a constant value
- Indicate where an inserted value, such as reading or check sum, goes.

The following table describes tokens used on the Custom Format screen.

**Table B.1 Custom Format Tokens**

Token	Explanation
STX	Starting character (0x02)
ETB	End of text block constant (0x17)
CKS	Check Sum (programming byte checksum after eliminating tokens)
ETX	End of programming frame
MRT	Meter reading token (0x7B)
ID	Register ID based on the selection of ID digits on NewFMT tab (1-10 digits)
NULL	Null (0x00)



**Table B.1 Custom Format Tokens**

<b>Token</b>	<b>Explanation</b>
USR	USR User characters (USR1, USR2, USR3)
CR	Carriage returns (0x0D)
LF	Line Feed (0x0A)
SP	Space Character (0x20)
MID	Meter ID (0x4E ('N'))
FT	Flow Token (0xA0)
NIDS	Network ID Size (Two nibbles of values 00 to 99 that provide network number)
NN	Network Number (Net ID constant. Upper digit of network ID sent to reading equipment, Net ID constant. Lower digit of network ID sent to reading equipment. Primary register usually has size of network in these digits)
MR	Mode Flag
RF	Read Flag (dial code)
CKST	Check sum token (0xFC)
FC	Format Constant (0x31 '1')
MT	Meter type (0x57)
Printable character	Any printable ASCII value can be entered in the character box and it can be added to the list

## Appendix C Pressure Configuration Factor Indexes

### Available Formats

The following table is used for selecting gas formats available from American Meter, Sensus, and Actaris when using the Field Programmer.

**Table C.1 Pressure Configuration Factor Index Table**

Index Part Number	Drive	Gauge Pressure	Atmospheric Pressure	Base Pressure	Actual Gear Ratio	Pressure Compensation Factor
<b>American Meter - AL/AR/AC/AM/AT 175/210/250/350/425/630</b>						<b>R900G: 12750-000</b>
52180G066	1 ft <sup>3</sup>	2 psig	14.40	14.73	900	1.111111
28538G151	1 ft <sup>3</sup>	2 psig	14.73	14.73	883.333333	1.132075
52180G067	2 ft <sup>3</sup>	2 psig	14.40	14.73	450	1.111111
04972G116	2 ft <sup>3</sup>	2 psig	14.73	14.91	443.055556	1.128527
04972G122	2 ft <sup>3</sup>	2 psig	14.40	14.65	445.454545	1.122449
04972G118	2 ft <sup>3</sup>	2 psig	14.73	14.73	442.000000	1.131222
04972G124	2 ft <sup>3</sup>	2 psig	14.55	14.73	443.055556	1.128527
04972G120	2 ft <sup>3</sup>	5 psig	14.40	14.73	381.944444	1.309091
04972G117	2 ft <sup>3</sup>	5 psig	14.73	14.91	376.125000	1.329345
04972G119	2 ft <sup>3</sup>	5 psig	14.73	14.73	374.305556	1.335807
04972G127	2 ft <sup>3</sup>	5 psig	14.40	14.65	376.125000	1.329345
04972G121	2 ft <sup>3</sup>	10 psig	14.40	14.73	303.333333	1.648352
<b>Sensus/Equimeter - R-275 / R-315:</b>						<b>R900G: 12821-000</b>
001-63-537-48	2 ft <sup>3</sup>	2 psig	14.40	14.73	445.867	1.121411
001-63-537-41	2 ft <sup>3</sup>	5 psig	14.40	14.73	379.911	1.316098
001-63-537-49	2 ft <sup>3</sup>	10 psig	14.40	14.73	300.781	1.662339
<b>Sensus/Equimeter - # 415:</b>						<b>R900G: 12821-100</b>
001-41-537-48	2 ft <sup>3</sup>	2 psig	14.40	14.73	445.867	1.121411
001-41-537-41	2 ft <sup>3</sup>	5 psig	14.40	14.73	379.911	1.316098
001-41-537-49	2 ft <sup>3</sup>	10 psig	14.40	14.73	300.781	1.662339

Appendix C: Pressure Configuration Factor Indexes

Index Part Number	Drive	Gauge Pressure	Atmospheric Pressure	Base Pressure	Actual Gear Ratio	Pressure Compensation Factor
<b>Sensus/Equimeter - S-275:</b>					<b>R900G: 12821-200</b>	
Propane	1 ft <sup>3</sup>				36.3025	2.7546296
<b>Sprague/Schlumberger/Actaris - 175/240/250/Metris/400A</b>					<b>R900G: 12861-000</b>	
017289	2 ft <sup>3</sup>	2 psig			447.619050	1.1170213
018207	2 ft <sup>3</sup>	14" W.C			491.666700	1.0169491
017228	2 ft <sup>3</sup>	5 psig			375.000000	1.3333333
017308	2 ft <sup>3</sup>	2 psig			447.916700	1.1162790
135543	2 ft <sup>3</sup>	2 psig			447.619050	1.1170213
017308	2 ft <sup>3</sup>	2 psig			447.916700	1.1162790
037223	2 ft <sup>3</sup>	10 psig			293.333300	1.7045456
037234	5 ft <sup>3</sup>	2 psig			178.800000	1.1185682
037237	5 ft <sup>3</sup>	10 psig			120.000000	1.6666667
017317	2 ft <sup>3</sup>	2 psig			447.619050	1.1170213
017318	2 ft <sup>3</sup>	14" W.C			491.666700	1.0169491
017366	2 ft <sup>3</sup>	2 psig			447.619050	1.1170213
017367	2 ft <sup>3</sup>	14" W.C			491.666700	1.0169491
091238	2 ft <sup>3</sup>	2 psig			447.619050	1.1170213
091240	2 ft <sup>3</sup>	14" W.C			491.666700	1.0169491
135547	2 ft <sup>3</sup>	2 psig			447.619050	1.1170213

Pilot Release

# Glossary

---

alphanumeric	Having or using both alphabetical and numerical symbols. For example, an alphanumeric password contains both letters and numbers.
application program	Usually referred to as an <i>application</i> , rather than an <i>application program</i> , it is a type of software program that performs a specific task useful to the user. Examples include database management applications, such as N_SIGHT R900, or word processing applications, such as Microsoft® Word®.
bit	Short for <i>binary digit</i> , the smallest unit of information on a machine. A single bit can hold only one of two values: 0 or 1. More meaningful information is obtained by combining consecutive bits into larger units.
blank route	A route made up entirely of meters for which readings have not been attempted. Compare with <i>skip route</i> .
broadcast message	A statement that is sent from the HOST COMPUTER along with an assigned route to all handhelds of a specific office. The statement appears on the displays of each handheld when each meter reader completes the initial daily LOGIN procedure. Compare with <i>route message</i> and <i>survey message</i> .
central-processing unit	Often abbreviated as CPU, the CPU is the brains of the computer. Sometimes referred to simply as the processor or central processor, the CPU is where most calculations take place. In terms of computing power, the CPU is the most important element of a computer system.
code table	A group of codes that are classified according to the type of information they capture. For example, a skip code table contains all of the skip codes used by a company. Codes allow you to pass on detailed information about a customer, meter, or route in an abbreviated form. For example the SKIP CODE "s1" might indicate that a meter was skipped because the glass of the meter was fogged and the meter reader could not see the reading.

<b>communication cradle</b>	A device used to charge and exchange data with a handheld. Whenever a handheld is placed in a communication cradle, the battery of the handheld begins recharging, and it is ready to exchange data with the HOST COMPUTER.
<b>company code</b>	In the N_SIGHT R900 APPLICATION PROGRAM, company codes are used to indicate which company a field office belongs to or to indicate the employees of an company. Company codes can be two digits, two letters, or a digit and a letter.
<b>constant</b>	A multiplier used to determine the customer's final bill.
<b>cycle</b>	A group of routes that is always processed together. Most utility companies process 21 cycles each month.
<b>data-entry screen</b>	A type of SCREEN used by the handheld. Whenever a data-entry screen is displayed, the handheld enables the appropriate keys so that you can enter data in the handheld.
<b>default setting</b>	A computer term that is similar in meaning to factory setting. The default setting is one that the handheld automatically applies to an item. For example, the default setting for the direction that routes are read is "top to bottom." Routes are always displayed in this order unless a meter reader or N_SIGHT R900 operator changes the setting.
<b>direction key</b>	A special key on the handheld keyboard that allows you to move up or down a list of items and left or right in a data-entry space or through the meters of a route. This is actually a single key shaped like a cross with arrowheads printed on it indicating the direction of movement.
<b>display</b>	The area at the top of the handheld where information about routes and meters are shown.
<b>download</b>	The process of sending readings and route information from the HOST COMPUTER to the handheld.
<b>export</b>	A function of the N_SIGHT R900 APPLICATION PROGRAM or the HOST COMPUTER. The export function creates a file containing readings and route information that is UPLOADED from the handheld. The export file is then sent to your company's billing computer.
<b>function key</b>	Special keys on the CE5320B keyboard that allow you to perform tasks quickly. Function keys are the top row of yellow keys labeled F1 to F5.

---

GB	An abbreviation for gigabyte. One gigabyte is equal to 1,024 megabytes.
highlighted	Describes an item that is selected. When you select an item in a menu, the handheld lets you know that it has been selected by accenting the item with a black band. See also <i>select</i> .
host computer	A computer that is accessed by a user working on another PC or WORKSTATION, for example, the N_SIGHT R900 host computer contains all N_SIGHT R900 data to which the billing computer and other PC operators can connect.
hot key	A type of key that allows you to select an item from a list of items by pressing a single key. The key that you should press is shown next to each item on the list.
information keys	A type of handheld key that allows you to get information about a meter or a route. Information keys are the letter/character keys that have information printed in white above them.
LAN	See <i>local-area network</i> .
letter/character keys	Keys on the keypad of the handheld that allow you to enter a letter or a character in the handheld display. Letter/character keys are the small, rectangular keys on the bottom portion of the keypad.
local-area network	<p>A computer network that spans a relatively small area. Most local-area networks (LANs) are confined to a single building or group of buildings. However, one LAN can be connected to other LANs over any distance via telephone lines and radio waves. A system of LANs connected in this way is called a wide-area network (WAN).</p> <p>Most LANs connect WORKSTATIONS and PERSONAL COMPUTERS. Each node (individual computer) in a LAN has its own central processing unit with which it carries out programs, but it is also able to access data and devices anywhere on the LAN. This means that many users can share expensive devices, such as laser printers, as well as data. Users can also use the LAN to communicate with each other by sending e-mail.</p>
location code	An arrangement of up to four numbers, letters, or both numbers and letters that tell where a meter is located. For example, a code of "carp" might be used to indicate that a meter is located in the carport of a home. See also <i>code tables</i> .
menu screen	A type of SCREEN that contains a list of items from which to choose.
message screen	A type of SCREEN that displays a message.


<b>meter number</b>	The number by which a utility identifies a meter.
<b>MHz</b>	Abbreviation for megahertz. One MHz represents one million cycles per second. The speed of MICROPROCESSORS, called the clock speed, is measured in megahertz.
<b>microprocessor</b>	A chip that contains a central processing unit. At the heart of all personal computers and most workstations sits a microprocessor. Microprocessors also control the logic of almost all digital devices from clock radios to fuel-injection systems for automobiles.
<b>MIU ID</b>	An abbreviation for <i>meter interface unit identifier</i> , which is a discrete number used to identify a specific meter interface unit.
<b>modem</b>	A device that allows two computers to communicate via telephone lines by modulating and demodulating the signals from each. The name modem is a contraction of the words <i>modulate</i> and <i>demodulate</i> .
<b>MS-DOS</b>	<p>An abbreviation for <i>Microsoft Disk Operating System</i>. Originally developed by Microsoft for IBM, MS-DOS was the standard operating system for IBM-compatible PERSONAL COMPUTERS.</p> <p>The initial versions of DOS were very simple. However, MS-DOS is still a 16-BIT operating system and does not support multiple users or MULTITASKING as do newer OPERATING SYSTEMS such as WINDOWS 95 or WINDOWS NT.</p>
<b>multiple-route assignment</b>	A type of assignment in which more than one route is assigned to one meter reader.
<b>multitasking</b>	The ability to carry out more than one task at the same time, a task being an APPLICATION PROGRAM.
<b>N_SIGHT R900 database server</b>	A type of software that receives, stores, and passes on information. Because handheld computers cannot send information directly to your company's billing computer (and the system cannot send information directly to each handheld computer), the server is needed to translate information from one source to another.
<b>number keys</b>	Keys that allow you to enter a number in the display of the handheld. Number keys are the large, white oval keys in upper portion of the keypad.
<b>office code</b>	In the N_SIGHT R900 APPLICATION PROGRAM, office codes are used to indicate the office to which a meter belongs or to indicate the employees of an office. Office codes can be two digits, two letters, or a digit and a letter.

operating system	The most important program that runs on a computer. Every general-purpose computer must have an operating system to run other programs. Operating systems perform basic tasks, such as recognizing input from the keyboard, sending output to the display screen, keeping track of files and directories on the disk, and controlling peripheral devices, such as disk drives and printers. Usually, users interact with the operating system through a set of commands. For example, graphical user interfaces, such as WINDOWS 95 and WINDOWS NT, allow you to enter commands by pointing and clicking at objects that appear on the screen. The MS-DOS operating system contains commands such as COPY and RENAME for copying files and changing the names of files, respectively.
order	A meter reading, service order, or similar transaction that takes place on the handheld.
PC	An abbreviation for PERSONAL COMPUTER.
pop-up	A special message that appears (pops up) automatically just before the reading entry screen that is associated with the message. You can control whether the special message appears as a pop-up message or does not appear.
prompt	A symbol, such as "C:\>" that appears on a display, indicating that the computer is waiting for the operator to enter information. Once the computer has displayed a prompt, it waits for you to enter some information. Generally, it will wait forever, but some programs have built-in time-outs that cause the program to continue after it has waited a specified amount of time.
quick keys	Keys that allow you to execute a task quickly by pressing specific keys at once or in a particular order.
reading-entry screen	A specific type of DATA-ENTRY SCREEN used by the handheld. The reading-entry screen is used to enter readings.
read-type code	An arrangement of up to four numbers, letters, or both numbers and letters that explain how the reading is obtained. For example, a code of "r0" might be used to indicate that the reading is entered manually. See also <i>code tables</i> .
region code	In the N_SIGHT R900 APPLICATION PROGRAM, region codes are used to indicate the regional headquarters for a field office or to indicate the employees of a regional headquarters. Region codes can be two digits, two letters, or a digit and a letter.



route message	A free-form statement sent from N_SIGHT R900 operators to the handheld computers of meter readers assigned to a specific route. A route message can contain as many as 80 characters. Compare with <i>broadcast message</i> and <i>survey message</i> .
router	One of the most commonly used devices to connect several handheld at a time. The router device allows you to connect as many communication cradles to the HOST COMPUTER. Because the router provides communication connections for the cradles, whenever a handheld is placed in a communication cradle, it is ready to exchange data with the HOST COMPUTER.
screens	The graphic portion of a display. N_SIGHT R900 uses three different types of screens to present the information shown in the display: a MENU SCREEN, a DATA-ENTRY SCREEN, and a MESSAGE SCREEN.
select	To choose an item by using the arrow keys or by using a HOTKEY. N_SIGHT R900 indicates that an item is selected by highlighting the item. See also <i>highlighted</i> .
sequence number	A number assigned to each meter indicating the location of the meter in relation to other meters in the route. For example, a sequence number of 000003 indicates that the meter is the third meter of a route. The meter reader may change the sequence number on the handheld computer, indicating a preferred placement of that meter within the route.
sign off	The act of exiting the meter reading portion of the handheld APPLICATION PROGRAM. By exiting the meter reading portion, you can access the communication function and send information to or receive information from the HOST COMPUTER.
sign on	The act of accessing the meter reading portion of the handheld so that you can obtain route assignments or collect readings.
skip code	An arrangement of up to four numbers, letters, or both numbers and letters that explain why a reading was skipped. For example, a code of "s1" might be used to indicate that a reading was skipped because the glass of the meter was fogged and the meter reader could not see the usage display. See also <i>code tables</i>
skip route	A route made up entirely of meters for which readings were attempted but could not be obtained. For example, the glass on the meter may have been fogged and the meter reader could not see the usage display. Compare with <i>blank route</i> .

---

survey message	A free-form question sent along with assigned routes to the handheld of a specific CYCLE. A survey message can contain up to 40 characters. Compare with <i>broadcast message</i> and <i>route message</i> .
synchronize	The process of communications to send readings and route data to and from the handheld and the HOST COMPUTER.
tag	A handheld feature that allows you to tag one or more meters in a route and then have the handheld display only the tagged meters.
tag indicator	An icon  that appears in the display of the handheld to indicate that the meter is tagged. When this symbol appears, the <b>TG</b> is hidden.
trouble code	An arrangement of up to four numbers, letters, or both numbers and letters that explain why there is trouble with a meter. For example, a code of "t10" might be used to indicate that the battery of a meter is low. See also <i>code tables</i> .
upload	The process of sending readings and route data from the handheld to the HOST COMPUTER.
user ID	An identifier that is assigned to each user of the handheld. Entering a user ID number when you LOG IN ensures that only someone with a user ID can use the handheld. A user ID can contain up to ten digits, ten characters, or a combination of ten digits and characters. There can be no spaces in a user ID.
Windows	Microsoft Windows OPERATING SYSTEM. Windows supports 32-BIT and 64-BIT applications, which means that application programs written specifically for these operating systems run much faster.
workstation	<p>A type of computer used for engineering applications, desktop publishing, software development, and other types of applications that require a moderate amount of computing power and relatively high quality graphics capabilities. Like personal computers, most workstations are single-user computers. However, workstations are typically linked together to form a LOCAL-AREA NETWORK, although they can also be used as stand-alone systems.</p> <p>In networking, workstation refers to any computer connected to a local-area network. It could be a workstation or a PERSONAL COMPUTER.</p>

*Notes:*

Pilot Release

# Index

---

## A

- A key 3-16, 4-16
- access
  - reading mode 5-13
  - RF test mode 5-13
- access Codes menu 3-16, 4-16
- actual gear ratio A-1
- add, gas format 8-44, 8-47
- adding
  - meters to routes 6-29
- adding meters to routes 6-28 to 6-29
- alphanumerics
  - defined G-1
- AMR mode key 3-16, 4-16
- application programs
  - defined G-1
- atmospheric pressure A-1
- audit failed error message 6-21
- auto increment 8-31
- automatic off
  - described 2-7, 2-12
- automatic return
  - described 2-7, 2-12

## B

- B key 3-16, 4-16
- backward keys
  - illustrated 3-15, 4-12, 4-18
- base pressure A-1
- batteries
  - calibrating 9-5, 9-8
  - charging 9-3
  - checking status of 9-3, 9-15
  - compartment (illus.) 9-9, 9-10
  - conserving 3-20, 4-20
  - described 2-6, 2-11
  - life of 9-5
  - low charge warning 4-30
  - ordering replacement 9-18, 9-21, 9-25 to 9-27
  - recharging 9-5
  - replacing 9-9 to 9-10
  - status indicator (illus.) 9-3, 9-15
  - using 4-30

## battery

- charger 9-4
  - for CE5320 charger 3-6
  - Nomad cable 4-6
- battery error 5-9
- battery recharge contacts 2-6, 2-11
- battery status indicators
  - color of 9-3
  - described 2-5, 2-10
  - illustrated 9-3
  - location (illus.) 2-5, 2-10
  - using 9-3, 9-15
- beepers, described 2-7, 2-12
- bits, defined G-1
- BKSP key 3-19, 4-19
- blank readings, entering 6-11
- blank routes
  - See also* skip routes
  - defined G-1
- blue keys
  - function 3-19, 3-20, 4-19 to 4-20
  - using 3-13
- bluetooth, LED 5-9
- bookmarks, problems with 10-5
- broadcast messages 3-27, 4-32, 5-11
  - See also* route messages, survey messages
  - defined G-1
- browse key 3-17, 4-17
- button, mouse 8-20

## C

- C key 3-16, 4-16
- cable 4-6
  - charger 4-4
    - for Bulverde charger 3-4
- cable, USB transfer 5-17
- calibrating, battery 9-5, 9-8
- CE5320
  - features 2-4, 2-8, 2-13
  - illustrated 2-4
  - keyboard 2-4
- CE5320, charger 3-3, 3-4, 3-6
- central processing units, defined G-1
- change modes, R900 BCR 5-4

- changing
    - keyboard click setting 3-24, 4-27
    - keyin direction 6-14
    - meter information 6-30 to 6-32
    - route direction 3-24, 4-27
  - character keys
    - defined G-3
    - described 3-15
  - characters, entering 3-13, 3-15 to 3-16
  - charger
    - battery 9-4
    - cable 4-4
    - CE5320 3-3, 3-4, 3-6
    - CE5320 cable 3-4
    - Nomad 4-3
    - Nomad battery 4-5, 4-6
    - Nomad illus. 4-3
    - Nomad 4-4, 4-5, 4-6
  - charger, CE5320 battery 3-6
  - checklist 8-27
  - clearing readings and skip codes 6-22, 6-24, 6-26, 6-39, 6-41
  - code tables, defined G-1
  - codes, see specific code
  - Codes key 3-16, 4-16
  - Codes menu, key 3-16, 4-16
  - collecting meter readings 6-3
  - color-coding, on keyboard 3-15, 3-19, 4-19
  - colors, of battery status indicator 9-3
  - command gas 8-24
  - communication cradles
    - as part of system 3-2
    - defined G-2
    - with cradle-charging kit 3-3, 4-3
  - communication methods 7-1, 8-29, 8-40
  - company codes, defined G-2
  - components, R900 BCR 5-3
  - confirmation, off/Level1 8-31
  - connect to receptacle 8-29
  - connect, wiring 8-29
  - connecting
    - communication cable (illus.) 3-7
    - multiple devices 3-8
    - power cable to device (illus.) 3-6, 4-6
    - power supply 3-5, 4-4
    - router 3-5, 3-8, 4-5
  - constants, defined G-2
  - conventions, used in the manual 1-1 to 1-2
  - correcting
    - See also changing
    - meter information 6-30, 6-32
  - CPUs, see central processing units G-1
  - cradle and charging kits
    - illustrated 3-3 to 3-4, 4-3 to 4-4, 9-15
    - with communication cradle (illus.) 3-4, 4-4
  - create format 8-36
  - custom formats 8-29
  - customer support 1-5
  - cycles, defined G-2
- ## D
- damage
    - inspecting for 3-2, 4-1
    - repairing instructions 9-4
  - damage, inspecting for 5-2
  - data-entry screens
    - defined G-2
    - described 2-14, 2-16
    - example (illus.) 2-14
  - decimal
    - entering points 3-19, 4-19
    - using key 3-19, 4-19
  - default settings, defined G-2
  - delete
    - gas format 8-50
    - ProRead format 8-35
  - description of
    - automatic off 2-7, 2-12
    - automatic return 2-7, 2-12
    - batteries 2-6, 2-11
    - battery status indicators 2-5, 2-10
    - character keys 3-15
    - communication ports 2-5, 2-10
    - data-entry screens 2-14, 2-16
    - direction keys 3-15, 4-12, 4-18
    - displays 2-14
    - function keys 3-13
    - handstraps 2-6
    - hot keys 3-14, 4-13
    - information keys 3-16 to 3-18, 4-16 to 4-18
    - keyboard backlights 2-4, 2-10

- description of (*continued*)
  - keyboards 2-4, 2-9
  - letter keys 3-15
  - main screens 2-14 to 2-15
  - menu screens 2-14, 2-15
  - message screens 2-17
  - meter reader tasks 2-3
  - meter readers 1-7
  - number keys 3-14, 4-12
  - operator tasks 2-3
  - operators 1-7
  - quick keys 3-19, 4-19
- devices
  - connecting 3-5, 4-5
  - defined G-6
- direction keys
  - defined G-2
  - described 3-15, 4-12, 4-18
- displaying
  - bookmarked meters 3-19, 4-19
  - meter information 2-18, 3-19, 4-19
  - meters 3-15, 4-12, 4-18
  - meters of a route 2-18, 3-15, 4-12
  - reading-entry screens 2-17, 2-19, 3-15, 4-12, 6-33
  - route information 2-18
  - screens 2-17 to 2-21
- displays
  - defined G-2
  - described 2-14
  - problems with 10-2, 10-3 to 10-4, 10-5
- down keys, illustrated 2-15, 3-15, 4-18
- downloading
  - defined G-2
  - problems with 10-6
- downloading information
  - See sending and receiving information
- drive A-1
- E**
- edit
  - gas format 8-44
  - ProRead format 8-32
- Edit key 3-16, 4-16
- efficiency 5-14
- efficiency, performance 5-12
- electromagnetic resistance 2-7, 2-13
- e-mail, customer support 1-6
- ENTER key 3-19, 4-19
- entering
  - blank readings 6-11
  - characters 3-15 to 3-16
  - decimals 3-19, 4-19
  - letters 3-15 to 3-16
  - skip codes 6-5 to 6-6
- entry key 3-17, 4-17
- error codes, LEDs 5-9
- error messages, *see also* troubleshooting
- ethernet ports, described 2-5, 2-10
- exchanging information
  - methods of 8-40
- exchanging information, *see also* sending and receiving information
- exchanging information, methods of 7-1, 8-29, 8-40
- export, defined G-2
- exposure, to temperatures 2-7
- F**
- F key 3-17, 4-16
- F1 key 3-13
- F2 key 3-13
- F3 key 3-13
- F4 key 3-13
- F5 key 3-13
- fax, customer support 1-6
- features
  - automatic off 2-7, 2-12
  - automatic return 2-7, 2-12
  - battery 2-6
  - battery recharge contacts 2-6
  - battery status indicator 2-5, 2-10
  - beeper 2-7, 2-12
  - CE5320B 2-4, 2-8, 2-13
  - display 2-4, 2-9
  - handstrap 2-6
  - keyboard 3-11, 4-9
  - keyboard backlight 2-4, 2-9
  - LEMO communication port 2-5, 2-10
  - manual off 2-7, 2-12
  - optical-infrared port 2-6, 2-11
- Find key 3-17, 4-16

- firmware
  - update 5-17
  - web update 5-16
- firmware updates, R900 BCE 5-1
- firmware, update 5-15
- format
  - add gas 8-44, 8-47
  - create 8-36
  - custom 8-29
  - delete gas 8-50
  - delete ProRead 8-35
  - edit gas 8-44
  - edit ProRead 8-32
  - gas 8-46
  - manage 8-29
  - name 8-37
  - save ProRead 8-40
  - select gas 8-42
  - select ProRead 8-35
  - standard 8-34
- forward keys
  - illustrated 3-15, 4-12, 4-18
- found meters
- found meters, *see also* adding meters to routes
- function keys
  - defined G-2
  - described 3-13
- G**
- G key 3-17, 4-16
- Gas
  - preferences 8-41
- gas
  - command 8-24
  - preferences 8-40
  - program 8-18
  - program register 8-40
  - readings 8-26
- gauge pressure A-1
- GBs, defined G-3
- gear ratio, actual A-1
- GoTo key 3-17, 4-16
- H**
- handhelds
  - dropping 2-8, 2-13
  - durability 2-7, 2-12
  - illustrated 2-4, 2-9, 4-10
  - inspecting 3-2, 4-1, 5-2
  - shipping to Neptune 3-2, 5-2, 9-28
  - use with RouteMAPS 2-1
  - using 2-1
- handstraps
  - described 2-6
  - on handheld (illus.) 9-11 to 9-13
  - replacing 9-11 to 9-14
- highlighting
  - See also* selecting
  - defined G-3
- host computers
  - connecting equipment to 3-5, 4-4
  - defined G-3
  - exchanging information with 7-1
  - host computers, exchanging information with 8-29, 8-40
- hot keys
  - defined G-3
  - described 3-14, 4-13
- I**
- I/O key 3-19, 4-19
- index part number A-1
- information exchange 7-1
- information key 3-17, 4-17
- information keys
  - defined G-3
  - described 3-16, 3-18, 4-16, 4-18
- INS/ESC key 3-19, 4-19
- inspecting, equipment 3-2, 4-1, 5-2
- installing
  - battery 9-10
  - battery, CE5320B 9-10
  - handstrap 9-11, 9-14
  - LEMO cable 3-8
  - power supply 3-5, 4-4
  - router 3-5, 4-5
- interconnect wires, networking 8-29

## J

J key 3-17, 4-17

## K

## key

browse 3-17, 4-17  
 edit 3-16, 4-16  
 entry, manual 3-17, 4-17  
 for screen information 3-17, 4-17  
 for Search 3-17, 4-16  
 GoTo 3-17, 4-16  
 information 3-17, 4-17  
 list 3-17, 4-17  
 Logout 3-18, 4-17  
 manual entry 3-17, 4-17  
 Meter 3-18, 4-17  
 Properties 3-18, 4-17  
 RF test 3-18, 4-17  
 Skip 3-18, 4-17  
 Tag 3-18, 4-17  
 Tag search 3-18, 4-17  
 to exit 3-18, 4-17  
 W, to logout 3-18, 4-17  
 key AMR mode 3-16, 4-16  
 key, Find 3-17, 4-16  
 keyboard backlights, described 2-10  
 keyboard click, selecting 3-24, 4-28  
 keyboards  
   backlight 2-4, 2-10  
   backlights described 2-4  
   CE5320B (illus.) 2-4  
   character keys 3-15 to 3-16  
   character keys (illus.) 3-12, 4-10  
   color coding 3-13, 3-15, 4-11  
   described 2-4, 2-9  
   direction keys 3-14 to 3-15, 4-12, 4-18  
   direction keys (illus.) 3-12, 4-10  
   enabling Keyboard Click 3-24, 4-27  
   function keys 3-13  
   function keys (illus.) 3-12, 4-10  
   illustrated 3-12, 4-11  
   information keys 3-16 to 3-18, 4-15, 4-18  
   information keys (illus.) 3-12  
   letter keys 3-15 to 3-16  
   letter keys (illus.) 3-12, 4-11

number keys 3-14, 4-12

number keys (illus.) 3-12

quick keys 3-19, 4-19

quick keys (illus.) 3-12, 4-10, 4-11

selecting Keyboard Click 3-24, 4-27 to 4-28

Trimble Nomad (illus.) 2-9

keyin direction, selecting 3-23, 4-27

keys, color-coding 3-15, 3-19, 4-19

## L

L key 3-18, 4-17

LANs, see local area networks

LED operating modes 5-8

## LEDs

  bluetooth 5-9

  error codes 5-9

  explained 5-8

  mode 5-8

  power 5-8

  RF mode 5-9

LEMO connectors, as part of system 3-2

## letter keys

  defined G-3

  described 3-15

  illustrated 3-12, 4-11

letter, entering 3-15

list key 3-17, 4-17

local area networks, defined G-3

location codes, defined G-3

login screen 8-30, 8-41

Logout key 3-18, 4-17

long-term storage, preparing the unit for 9-2

low-power state 2-7, 2-12

## M

M key 3-18, 4-17

Main Menu screen, illustrated 6-8, 6-16, 6-26, 6-37

## main screens

  described 2-14 to 2-15

  illustrated 2-14 to 2-15

## maintenance

  frequency of 9-1

  proper storage 9-2 to 9-3

  recommended 9-1

manage formats 8-29



- manual entry key 3-17, 4-17
  - manual OFF, described 2-7, 2-12
  - menu screens 2-15
    - defined G-3
    - described 2-14, 2-15
    - example (illus.) 2-14
    - example of (illus.) 2-14
  - menus
    - Main 6-37
    - Utility 3-25, 4-28
  - message screens
    - defined G-3
    - described 2-17
    - example (illus.) 2-15
  - messages
    - e-mail 1-6
    - See route messages, survey messages, error messages, broadcast messages
  - Meter 2-1
  - meter information, displaying screens with 2-18
  - Meter key 3-18, 4-17
  - meter numbers, defined G-4
  - meter reader tasks
    - defined 1-7
    - described 2-3
  - meter readers
    - described 1-7
    - responsibilities 1-8
  - meter reading cycle, illustrated 5-2
  - meter readings
    - See also readings
    - collecting manually 6-3
  - meters
    - changing information about 2-21, 6-30 to 6-32
    - displaying information 3-19, 4-19
  - MHz, defined G-4
  - microprocessors
    - See also central processing units
    - defined G-4
  - MIU IDs, defined G-4
  - mode LED 5-8
  - mode, suspend 2-7, 2-12
  - modems, defined G-4
  - moderate performance 5-12, 5-14
  - modes
    - access RF test mode 5-13
    - bluetooth 5-9
    - error codes LEDs 5-9
    - LED 5-8
    - LED operating 5-8
    - normal filtered reading 5-5
    - RF 5-9
    - RF performance 5-11
    - RF test 5-13
    - SD card error, LED 5-9
    - unattended 5-5
    - unfiltered reading 5-5
  - mouse, button 8-20
  - moving
    - in a data-entry space 3-15, 4-12, 4-18
    - through screens 2-17
    - within a route 6-33, 6-35
  - MS-DOS
    - See also Windows 95, Windows NT, operating systems
    - defined G-4
  - MTR INFO key 3-18, 4-17
  - multiple-route assignments, defined G-4
  - multiplier, gas 8-45
  - multitasking, defined G-4
- ## N
- N\_SIGHT R900 database server, defined G-4
  - N\_SIGHT R900 status screen 5-7, 5-11
  - navigating screens 2-17
  - Neptune key, illustrated 5-7
  - networking 8-28
  - new meters
    - adding 6-28 to 6-29
  - NEW MTR key 3-18, 4-17
  - Nomad
    - charger 4-3, 4-4, 4-5, 4-6
    - charger illus. 4-3
    - display 2-9
  - Nomad, basic features 2-9, 2-12
  - normal filtered reading mode 5-5
  - number keys
    - defined G-4
    - described 3-14, 4-12
    - illustrated 3-12, 4-10

**O**

office codes, defined G-4  
operating mode, LED 5-8  
operating systems  
  *See also* Windows 95, Windows NT, MS-DOS  
  defined G-5  
operating temperatures 2-7, 2-12  
operator tasks  
  defined 1-7  
  described 2-3  
operators  
  described 1-7  
  responsibilities 1-9  
options, Customer Support 1-6  
order  
  defined G-5  
ordering parts 9-26  
overview, R900 BCR 5-1

**P**

P key 3-18, 4-17  
packing the handheld 9-28  
pair, R900 BCE 5-10  
parts  
  list of replaceable 9-26  
  ordering 9-26  
  recommended spare 9-26  
password  
  Gas login (Field Programmer) 8-41  
  ProRead login 8-30, 8-41

PCF 8-45

PCs

*See also* personal computers  
  defined G-5

performance RF 5-14

performance, best 5-12, 5-14

pop-ups, defined G-5

power supply, connecting 3-5, 4-4

preferences

  Gas 8-41

  preferences, ProRead 8-30

pressure

  atmospheric A-1

  base A-1

  gauge A-1

  pressure compensation factors, table of A-1

  Pressure Configuration Factor 8-45

problems

*See also* troubleshooting

  solving 10-1 to 10-6

program

  gas 8-18

  gas register 8-40

  network secondary register 8-28

  R900G 8-18

program result, gas 8-20

prompts

  defined G-5

Properties key 3-18, 4-17

ProRead

  preferences 8-30

  query 8-14

  read 8-15

  select format 8-32

**Q**

Q key 3-18, 4-17

query ProRead 8-14

query, results 8-15

quick keys

  defined G-5

  described 3-19, 4-19

  illustrated 3-12, 4-11

**R**

R key 3-18, 4-17

R900 BCR

  change modes 5-4

  components 5-3

  firmware updates 5-1

  overview 5-1

  pair bluetooth 5-10

  read route 5-11

  SD card 5-14

  status screen 5-11

  update firmware 5-15

  USB transfer cable 5-17

R900 BCR firmware 5-15

R900 BCR modes

  explanation 5-5

- LED operating 5-8
  - operation 5-4, 5-7
  - summary 5-4, 5-7
  - R900 Belt Clip Receiver
    - overview 5-1
    - USB transfer cable 5-17
  - R900G, program 8-18
  - ratio A-1
  - read
    - gas 8-26
    - ProRead 8-15
  - reading a route 5-11
  - reading mode
    - access 5-13
  - reading-entry screens
    - defined G-5
    - displaying 2-17, 2-19
    - example (illus.) 2-18
    - sample used in manual 6-1
  - readings
    - bypassing 6-3
    - clearing 6-22, 6-24, 6-26, 6-39, 6-41
    - collecting 6-3
    - entering into the handheld 6-3 to 6-4
    - entering skip code 6-5
    - leaving blank 6-11
    - problems with uploading 10-6
    - validating 6-20
  - readings, store 5-1
  - readings, validate 6-20
  - read-type codes, defined G-5
  - reboot
    - handheld 10-9
    - logged off 10-11
    - logged on 10-9
  - receiving information from host 7-4 to 7-5
  - recharging the battery 9-5
  - refresh, R900G 8-24
  - region codes, defined G-5
  - register, program secondary 8-28
  - registers, network 8-28
  - removing
    - battery 9-9 to 9-10
    - handstrap 9-11 to 9-12
  - replacing
    - battery 9-9 to 9-10
    - handstrap 9-11, 9-13 to 9-14
  - reset handheld 10-7, 10-9
  - resistance
    - electromagnetic 2-7, 2-13
    - shock 2-8, 2-13
    - water 2-7, 2-12
  - returning CE5320B 9-28
  - RF mode 5-9
  - RF performance 5-14
  - RF test
    - mode 5-13
  - RF Test key 3-18, 4-17
  - RF test mode
    - access 5-13
  - rotation, clockwise or counter-clockwise 8-46
  - route directions, changing 3-24, 4-27
  - route information, displaying screens with 2-18
  - route messages
    - See also* broadcast messages, survey messages
    - defined G-6
  - router, connecting 3-5, 3-8, 4-5
  - routes, problems with downloading 10-6
- S**
- save
    - gas format 8-46
    - ProRead format 8-40
  - screens
    - Beeper Menu (illus.) A-2
    - data-entry 2-16
    - data-entry example (illus.) 2-14
    - defined G-6
    - entering information in 2-17
    - GoTo 6-37
    - Main Menu (illus.) 6-37
    - menu 2-15
    - menu example (illus.) 2-14
    - message 2-17
    - message example (illus.) 2-15
    - navigating through 2-17
    - overview 2-14, 2-17
    - reading-entry example 2-18
    - types 2-14, 2-17

- screens (*continued*)
    - Utility Menu (illus.) 3-25, 4-28
    - with meter or route information 2-18
  - SD card 5-6, 5-14
  - SD card error 5-9
  - search, Y key for Tag search 3-18, 4-17
  - select format
    - gas 8-42
    - ProRead 8-32, 8-35
  - select preferences
    - gas 8-40, 8-41
    - ProRead 8-30
  - selecting
    - See also* highlighting
    - defined G-6
    - items from menu screens 3-14, 3-15, 3-16, 4-13, 4-18
    - Keyboard Click 3-24, 4-27 to 4-28
    - keyin direction 3-23, 4-27, 6-14
    - menu items 3-14, 4-12
    - search feature 6-17
  - selection list
    - gas 8-19
    - gas formats 8-44
    - ProRead 8-10
    - tokens 8-39
  - sending and receiving information
    - described 7-1
    - with device 7-4
  - sequence numbers, defined G-6
  - setting up, hardware for communication 3-5, 3-8, 4-4
  - shipping
    - damage 3-2, 4-1, 5-2
    - instructions for 9-28
    - packing required for 9-28
    - packing requirements 3-2, 5-2
    - to Neptune 9-28
  - shock resistance 2-8, 2-13
  - short-term storage
    - preparing for 9-2
  - signing off
    - defined G-6
    - how to 3-30, 4-36
  - signing on 3-26, 4-31
    - defined G-6
  - skip code 6-24
  - skip codes
    - clearing 6-22, 6-24, 6-26, 6-39, 6-41
    - defined G-6
    - entering 6-5
  - Skip key 3-18, 4-17
  - skip routes
    - See also* blank routes
    - defined G-6
  - sleep mode, gas 8-24
  - software
    - finding version number 1-3
    - resetting 10-7, 10-9
    - starting from MS-DOS 10-6
  - SP key 3-19, 4-19
  - standard format 8-34
  - status screen, N\_SIGHT R900 5-7, 5-11
  - store R900 readings 5-1
  - storing
    - long-term 9-2
    - short-term 9-2
  - support, customer 1-5
  - survey messages
    - See also* broadcast messages, route messages
    - defined G-7
  - suspend mode 2-7, 2-12
  - symbols, used in manual 1-1
  - synchronize screen 5-7
  - synchronize, defined G-7
  - system configuration
    - communication cradle 3-2
    - determining 3-1
    - equipment needed 3-3, 4-3
    - LEMO connector 3-2
  - system settings
    - adjustment options 3-20, 4-22
    - overview 3-20, 4-22
- ## T
- tag
    - defined G-7
    - indicators, defined G-7
  - Tag key 3-18, 4-17
  - Tag search key 3-18, 4-17
  - temperatures, operating 2-7, 2-12
  - test hand, gas 8-45

- tokens, custom format 8-39
  - TOTAL key 3-17, 4-16
  - transporting the PC9800 9-4
  - Trimble Nomad
    - keyboard 2-9
  - trouble codes, defined G-7
  - troubleshooting
    - Audit Failed error message 6-20
    - bookmark feature 10-5
    - display 10-2, 10-3, 10-4, 10-5
    - non-responsive unit 10-2, 10-4
    - unit won't turn off 10-3, 10-5
    - upload/download unsuccessful 10-6
  - turning off
    - automatic return 2-7, 2-12
    - automatically 3-30, 4-31, 4-36
    - handheld 4-31
    - keyboard backlight 3-20, 4-20
    - manually 3-19, 4-19
    - problems with 10-3, 10-5
  - turning on
    - automatic return 2-7, 2-12
    - handheld 3-19, 4-19, 4-30
    - keyboard backlight 3-20, 4-20
  - U**
    - unattended mode 5-5
    - unfiltered reading mode 5-5
    - unloading information, *see* sending and receiving information
    - unpacking, equipment 3-2, 4-1, 5-2
  - up key, illustrated 3-15, 4-18
  - uploading
    - defined G-7
    - overview 2-1
    - problems with 10-6
  - USB mass storage 5-6
  - USB transfer cable 5-17
  - user IDs, defined G-7
  - Utility Menu screen, illustrated 3-25, 4-28
- V**
- validate readings 6-20
  - validating readings 6-20
  - version number 3-17, 4-17
  - volume control
    - CE5320 A-1
    - Nomad A-5
- W**
- W key, to exit 3-18, 4-17
  - wake up, gas 8-24
  - warranty, voiding 2-5, 2-10
  - water resistance 2-7, 2-12
  - Windows
    - CE.Net screen, illustrated A-2
  - Windows, defined G-7
  - workstations, defined G-7
- Y**
- yellow keys, using 4-11

Pilot Release

Pilot Release

Neptune Technology Group Inc.  
1600 Alabama Highway 229  
Tallassee, AL 36078  
USA  
Tel: (800) 633-8754  
Fax: (334) 283-7293

Neptune Technology Group (Canada) Ltd.  
7275 West Credit Avenue  
Mississauga, Ontario  
L5N 5M9  
Canada  
Tel: (905) 858-4211  
Fax: (905) 858-0428

Neptune Technology Group Inc.  
Ejército Nacional No. 418  
Piso 12, Desp. 1201-1202  
Col. Chapultepec Morales  
Delegación Miguel Hidalgo  
11570 México, Distrito Federal  
Tel: (525) 55203 5294 / (525) 55203 5708  
Fax: (525) 55203 6503



**NEPTUNE**  
TECHNOLOGY GROUP

**TAKE CONTROL**  
[neptunetg.com](http://neptunetg.com)