

Videotron 3G39W-V



USER GUIDE

Copyright

Copyright©2011 NetComm Limited. All rights reserved.

The information contained herein is proprietary to NetComm Limited. No part of this document may be translated, transcribed, reproduced, in any form, or by any means without prior written consent of NetComm Limited.



Please note: This document is subject to change without notice.

Save Our Environment

When this equipment has reached the end of its useful life, it must be taken to a recycling centre and processed separately from domestic waste.

The cardboard box, the plastic contained in the packaging, and the parts that make up this device can be recycled in accordance with regionally established regulations. Never dispose of this electronic equipment along with your household waste. You may be subject to penalties or sanctions under the law. Instead, ask for disposal instructions from your municipal government.

Please be responsible and protect our environment.

This manual covers the following products:

NetComm 3G39W-V

DOCUMENT VERSION	DATE
1.0 - Initial document release	09/09/2011

Table 1 - Document Revision History

Table of Contents

Overview	4
Introduction	4
Target Users.....	4
Prerequisites.....	4
Notation	4
Product Introduction	5
Product Overview	5
Package Contents	5
Product Features	5
Physical Dimensions and Indicators	6
LED Indicators.....	6
Integrated Interfaces	6
Physical Dimensions	7
3G39W-V Default Settings	7
Safety and Product Care	8
Transport and Handling	8
Installation and Configuration of the 3G39W-V	9
Placement of your 3G39W-V.....	9
Hardware installation.....	10
Connecting via a cable.....	10
Connecting wirelessly	10
First Time Simple Configuration Wizard.....	11
Management Console Login Procedure.....	13
Management Console.....	14
Advanced Features.....	16
Technical Data	41
Electrical Specifications.....	41
Environmental Specifications / Tolerances	41
FAQ	42
Appendix A: Tables	43
Legal & Regulatory Information	44
Contact	46

Overview

Introduction

This manual provides information related to the installation, operation, and utilisation of the 3G39W-V.

Target Users

The individual reading this manual is presumed to have a basic understanding of telecommunications terminology and concepts.

Prerequisites

Before continuing with the installation of your 3G39W-V, please confirm that you comply with the minimum system requirements below.

- An activated 3G SIM card.
- Computer with Windows, Macintosh, or Linux-based operating systems with a working Ethernet adapter with TCP/IP Protocol installed.
- A Web Browser such as Internet Explorer, Netscape Navigator, Mozilla Firefox, Opera, Safari etc.
- Wireless Computer System Requirements:
 - Computer with a working 802.11b, 802.11g or 802.11n wireless adapter.

Notation

The following symbols are utilised in this user manual:



- The following note requires attention



- The following note provides a warning



- The following note provides relevant information

Product Introduction

Product Overview

- Multi-mode cellular modem for 3G/2G mobile broadband connectivity supporting HSPA/EDGE/GPRS
- Quad-band 3G/WCDMA network support: 850/AWS/1900/2100 MHz
- Quad-band 2G/GSM network support: 850/900/1800/1900 MHz
- Downloads up to 7.2 Mbps¹ - HSDPA category 8
- Uploads up to 5.76 Mbps¹ - HSUPA category 6
- EDGE Multi Slot Class 12 – up to 236 Mbps¹
- 1 x LAN Ethernet 10/100 port
- 1x LAN/WAN Ethernet 10/100 port for alternate Internet connection (ADSL/Cable/Satellite)
- Wireless LAN access point IEEE 802.11n (backwards compatible with IEEE 802.11b/g devices)
- Support for auto Internet fallback to 3G
- 2 x Internal Wi-Fi antennas
- Detachable cellular antenna (SMA)
- Wi-Fi Protected Setup (WPS) for wireless connectivity
- Browser based interface for configuration and management
- Advanced Firewall and wireless security - WEP, WPA, WPA2

1. Speeds are dependent on network coverage. See your 3G provider coverage maps for more details. The total number of Wi-Fi users can also affect data speeds. Maximum wireless signal rate and coverage values are derived from IEEE Standard 802.11g and 802.11n specifications. Actual wireless speed and coverage are dependent on network and environmental conditions included but not limited to volume of network traffic, building materials and construction/layout.

Package Contents

The 3G39W-V package consists of:

- 3G39W-V – Videotron 3G Wi-Fi Router
- 12VDC~1.5A Power Adapter
- RJ-45 LAN Cable
- Quick Setup Guide
- Wireless Security Card

If any of these items are missing or damaged, please contact NetComm Support immediately by visiting the NetComm Support website at: <http://www.netcomm.com.au/contact-us/technical-support>

Product Features

The 3G39W-V creates a secure Wi-Fi network, providing Internet access using a 3G network. With a quick and easy setup, simply insert an active 3G SIM card into the slot on the rear panel and get instant access to a 3G Internet connection within seconds.

The 3G39W incorporates a Wireless LAN 802.11b/g/n access point, two Ethernet 10/100Mbps ports. It features the latest security options such as WPA and WPA2 data encryption, SPI (Stateful Packet Inspection) Firewall and VPN pass through.

Physical Dimensions and Indicators

LED Indicators

The 3G39W-V has been designed to be placed on a desktop. All of the cables exit from the rear for better organization. The display is visible on the front of the 3G39W-V to provide you with information about network activity and the device status. See below for an explanation of each of the indicator lights.



LED INDICATOR	ICON	DEFINITION
Wi-Fi		Solid blue light when WLAN is enabled. Blinks on traffic (data transfer)
WAN/LAN		LAN mode: Solid blue light when the router is connected via the LAN Ethernet Port
		WAN mode: Lights up when the router is connected to the internet via a fixed line WAN connection
LAN		Solid blue light when specific LAN connection is established. Blinks on LAN port traffic
3G		Solid blue light when the 3G39W-V is connected via 3G, blinks on traffic
Power		Solid amber light when device is powered on. Blinking during device start up.

Table 2 - LED Indicators



Integrated Interfaces

The following integrated interfaces are available on the 3G39W-V:

INTERFACE	FUNCTION
SIM Slot	Insert your SIM card here (until you hear a click). Please be careful to insert the SIM in the correct orientation by viewing the printed icon.
3G Antenna	Attach in the 3G Antenna here in a clockwise direction.
LAN/WAN	Switchable LAN/ WAN Ethernet port for Fixed Line (ADSL/Cable/Satellite) connection or wired Ethernet clients (Computers, Laptops, etc)
LAN	LAN Port for wired Ethernet clients (Computers, Laptops, etc)
Reset/WPS	Hold this button down for over 10 seconds to reset to factory defaults. Hold and release this button for less than 10 seconds to enable the WPS push-button-connect function.
Power	Power connector, connects to a DC 12V 1.5A Power Adapter

Table 3 - Rear Panel Ports

Physical Dimensions

The following page lists the physical dimensions of the 3G39W-V.

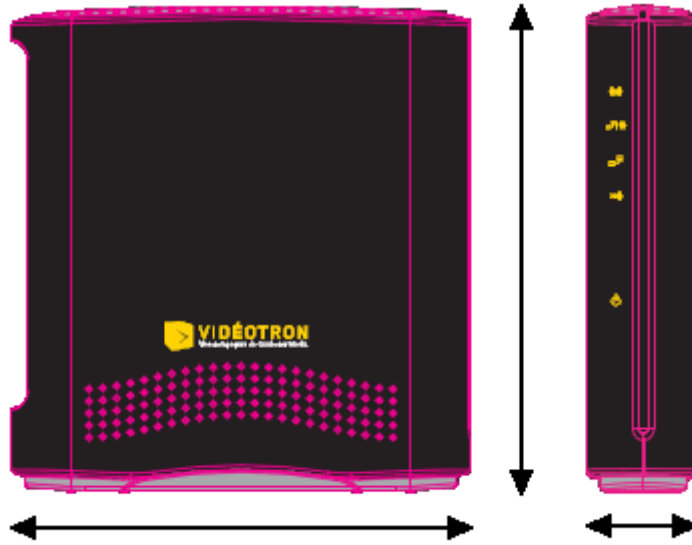


Figure 1 - 3G39W-V Dimensions

3G39W-V	
Length	133 mm
Height	137 mm
Width	34 mm
Weight	250 grams

Table 4 - Device Dimensions

3G39W-V Default Settings

The following tables list the default settings for the 3G39W-V.

LAN (MANAGEMENT)	
Static IP Address:	192.168.20.1
Subnet Mask:	255.255.255.0
Default Gateway:	192.168.20.1

Table 5 - LAN Management Default Settings

WAN (INTERNET)	
WAN mode:	DHCP

Table 6 - WAN Port Default Settings

WIRELESS (WI-FI)	
SSID:	(Refer to the included wireless security card)
Security:	WPA2-PSK
Security Key:	(Refer to the included wireless security card)

Table 7 - Wi-Fi Default Settings

For security purpose, each 3G39W-V comes with a unique SSID that varies by a 4 digit number at the end. e.g. SSID: "VIDEOTRON1234."

3G39W-V WEB INTERFACE ACCESS	
Username:	admin
Password:	No Password Set

Table 8 - Web Interface Default Settings

Safety and Product Care

With reference to unpacking, installation, use and maintenance of your electronic device, the following basic guidelines are recommended:

- Do not use or install this product near water to avoid fire or shock hazard. For example, near a bathtub, kitchen sink, laundry tub, or near a swimming pool. Also, do not expose the equipment to rain or damp areas (e.g. a wet basement).
- Do not connect the power supply cord on elevated surfaces. Allow it to lie freely. There should be no obstructions in its path and no heavy items should be placed on the cord. In addition, do not walk on, step on or mistreat the cord.
- To safeguard the equipment against overheating, make sure that all openings in the unit that offer exposure to air are unobstructed.



WARNING

Disconnect the power line from the device before servicing.

Transport and Handling

When transporting the 3G39W-V, it is recommended to return the product in the original packaging. This ensures the product will not be damaged.



In the event the product needs to be returned, ensure it is securely packaged with appropriate padding to prevent damage during courier transport.

Installation and Configuration of the 3G39W-V

Placement of your 3G39W-V

Just like your mobile phone, the 3G39W-V's location will affect its signal strength to the 3G Base Station (Cell Tower). The data speed achievable from the 3G39W-V is relative to this signal strength, which is affected by many environmental factors. Please keep in mind that the 3G39W-V will need adequate signal strength in order to provide Internet connectivity whilst choosing a location to place your 3G39W-V.

Similarly, the wireless connection between your 3G39W-V and your Wi-Fi devices will be stronger the closer your connected devices are to your 3G39W-V. Your wireless connection and performance will degrade as the distance between your 3G39W-V and connected devices increases. This may or may not be directly noticeable, and is greatly affected by the individual installation environment.

If you have concerns about your network's performance that might be related to range or obstruction factors, try moving the computer to a position between three to five meters from the 3G39W-V in order to see if distance is the problem.



Please note: While some of the items listed below can affect network performance, they will not prohibit your wireless network from functioning; if you are concerned that your network is not operating at its maximum effectiveness, this checklist may help. Please ensure that your 3G39W-V's 3G external antenna is positioned vertically (toward the ceiling).

If you experience difficulties connecting wirelessly between your Wi-Fi Devices and your 3G39W-V, please try the following steps:

- In multi-storey homes, place the 3G39W-V on a floor that is as close to the centre of the home as possible. This may mean placing the 3G39W-V on an upper floor.
- Try not to place the 3G39W-V near a cordless telephone that operates at the same radio frequency as the 3G39W-V (2.4GHz).

Avoid obstacles and interference

Avoid placing your 3G39W-V near devices that may emit radio "noise," such as microwave ovens. Dense objects that can inhibit wireless communication include:

- Refrigerators
- Washers and/or dryers
- Metal cabinets
- Large aquariums
- Metallic-based, UV-tinted windows
- If your wireless signal seems weak in some spots, make sure that objects such as those listed above are not blocking the signal's path (between your devices and the 3G39W-V).

Cordless Phones

If the performance of your wireless network is impaired after considering the above issues, and you have a cordless phone:

- Try moving cordless phones away from your 3G39W-V and your wireless-enabled computers.
- Unplug and remove the battery from any cordless phone that operates on the 2.4GHz band (check manufacturer's information). If this fixes the problem, your phone may be interfering with the 3G39W-V.
- If your phone supports channel selection, change the channel on the phone to the farthest channel from your wireless network. For example, change the phone to channel 1 and move your 3G39W-V to channel 11. See your phone's user manual for detailed instructions.
- If necessary, consider switching to a 900MHz or 5GHz cordless phone.

Choose the "Quietest" Channel for your Wireless Network

In locations where homes or offices are close together, such as apartment buildings or office complexes, there may be wireless networks nearby that can conflict with your wireless network. Use the Site Survey capabilities found in the Wireless Utility of your wireless adapter to locate any other wireless networks that are available (see your wireless adapter's user manual), and switch your Router and computers to a channel as far away from other networks as possible.

Experiment with more than one of the available channels, in order to find the clearest connection and avoid interference from neighbouring cordless phones or other wireless devices.

Hardware installation

1. Attach the supplied antenna to the port marked 3G Antenna. [This should be attached in a clockwise direction.]
2. Insert your SIM card (until you hear a click) into the SIM slot.
3. Connect the power adapter to the Power socket on the back of the 3G39W-V.
4. Plug the power adapter into the wall socket and switch on the power.
5. Wait approximately 60 seconds for the 3G39W-V to power up.

Connecting via a cable

1. Connect the yellow Ethernet cable provided to the port marked LAN at the back of the 3G39W-V.
2. Connect the other end of the yellow Ethernet cable to your computer.
3. Wait approximately 30 seconds for the connection to establish.
4. Open your Web browser, <http://my.router> or <http://192.168.20.1> into the address bar and press enter.
5. Follow the steps to set up your 3G39W-V.

Connecting wirelessly

1. Ensure Wi-Fi is enabled on your device (computer/laptop/Smartphone).
2. Scan for wireless networks in your area and connect to the network name that matches the Wireless network name found on the Wireless Security Card (included in the box).



Figure 2 - Included Security Card



Please note: For security purposes, each 3G39W-V has a unique SSID (such as VIDEOTRON6444) and Wireless Security Key. The included Wireless Security Card lists these instead of the xxxxx's shown in the screenshot above.

3. When prompted for your wireless security settings, enter the Wireless security key listed on your Wireless Security Card.
4. Wait approximately 30 seconds for the connection to establish.
5. Open your Web browser, type <http://my.router> or <http://192.168.20.1> into the address bar and press enter.
6. Follow the steps to set up your 3G39W-V.

First Time Simple Configuration Wizard

Once you have logged in to your 3G39W-V for the first time, you will be presented with the option of running the 3G39W-V “Set-up Wizard”. Clicking the “Yes, lets get started with the Wizard” button will then display the first setup step as shown in the screenshot below. This wizard can be skipped by clicking on the “No thanks, take me to the Basic Interface” button. You can re-run the Setup Wizard later by selecting the “Startup Wizard” option under “Administration” tab in the Advanced View of the management console.



Please note: The system language defaults to utilising French. To change the system language to English, please see the Management section detailed on page 36.



Figure 3 - Startup Wizard - Language and Time Zone Settings

Select your Language Preference and Time Zone then click “Next”;



Figure 4 - Startup Wizard - Web Configuration Username and Password Settings

This page allows you to customize the username and password required to administer your 3G39W-V. It is recommended that you choose a unique password for added security. Please enter a user name and password that you wish to use, or leave these fields unchanged to use the default username of admin with no password set. Click “Next” to continue.



Figure 5 - Startup Wizard - Wi-Fi Settings

The next page allows you to configure basic Wi-Fi settings.

Wireless (Wi-Fi):

Wi-Fi is set to "On" by default. Changing this option to "Off" will turn off the wireless feature and you will not be able to connect to your 3G39W-V via Wi-Fi.

SSID Broadcast:

Select 'Disable' to hide the SSID of your 3G39W-V. If disabled, other people will not be able scan and detect your 3G39W-V's SSID.

SSID Broadcast Name (Max 32 Characters):

The SSID (Service Set Identifier) is the name of your wireless network. Use a unique name to identify your wireless network so that you can easily connect from your wireless clients. This field is case sensitive and can be up to 32 characters. You should change the default SSID for added security.



Figure 6 - Startup Wizard - Wi-Fi Security Settings

This page allows you to configure Wi-Fi security settings for your 3G39W-V. Setting a strong wireless security level (such as WPA2-PSK - AES) can prevent unauthorized access to your wireless network. Please enter the Security Key that you wish to use, or leave this field unchanged to use the default Security Key. Click "Next" to continue.



Figure 7 - Startup Wizard - Review your settings

Review your settings then click “Finish” to save configuration. Click “Back” if you want to make changes.

After clicking Finish, the 3G39W-V will save your configuration and reboot itself. Please wait as this process takes about 2 minutes. You will be guided back to the management console once the process is complete.

Management Console Login Procedure

After first time setup, the management console will be password protected to prevent unauthorized access to the configuration settings of your 3G39W-V.

To log in to the management console and view the status and make changes to your 3G39W-V, please follow the steps below:

1. Open your web browser (e.g. Internet Explorer/Firefox/Safari) and navigate to <http://192.168.20.1> or <http://my.router>
2. Enter the username and password configured during the first time setup and click submit. The default username admin with a blank password if the details haven't been customized. Click Login to continue.



Please Note: If you forget the username and password you selected during the 3G39W-V set-up process, holding the reset button for over 10 seconds will restart the unit with the original settings (username: admin / no password).

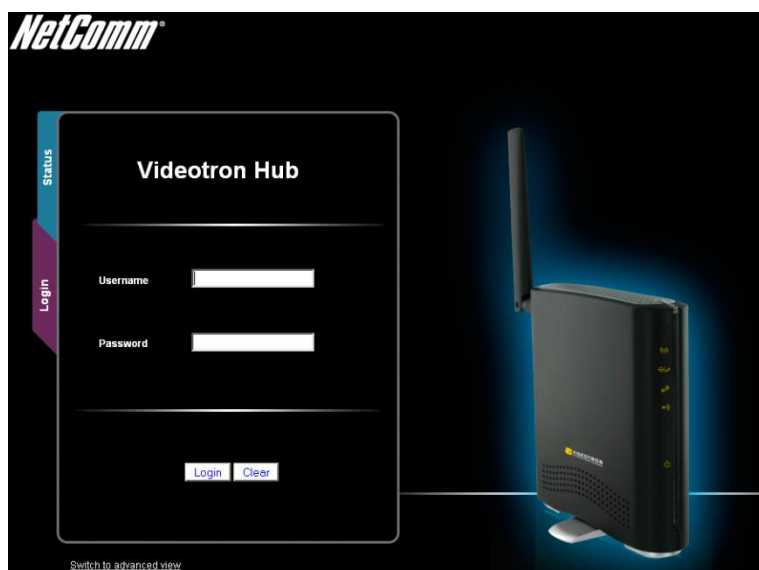


Figure 8 - Management Console Login

Management Console

Basic Status Overview

The basic status page provides basic system related information. It is shown after logging in to the 3G39W-V, and can also be accessed by selecting Basic Status from the menu.



Figure 9 - Basic View – Status

The status page shows the 3G connection status, Signal Strength (dBm) and SIM Status.

Internet



Figure 10 - Basic View - Internet

The 3G Operation Mode can be configured on this page. This allows for automatic failover to be configured if desired. Please see the table below for options allowed for the 3G operation mode:

OPTION	DEFINITION
'Always ON'	Enables the 3G internet connection and, does not disconnect, even if idle.
'OFF'	The 3G39W-V will not connect to the Internet
'Automatic 3G Backup'	The Automatic 3G Backup feature of the 3G39W-V is designed to provide a backup 3G Internet connection when you use the WAN connection as your primary, when the primary fails. The Internet connection will automatically switch back to your WAN connection once your WAN Internet connection is back online. To use this feature, you will need both an Ethernet WAN connection (from an xDSL modem/ISDN/Satellite etc) and a 3G connection. To configure your WAN settings according to your network environment, please switch to advanced view "Internet Settings" then select "WAN".

Table 9 - Basic View - Internet Settings

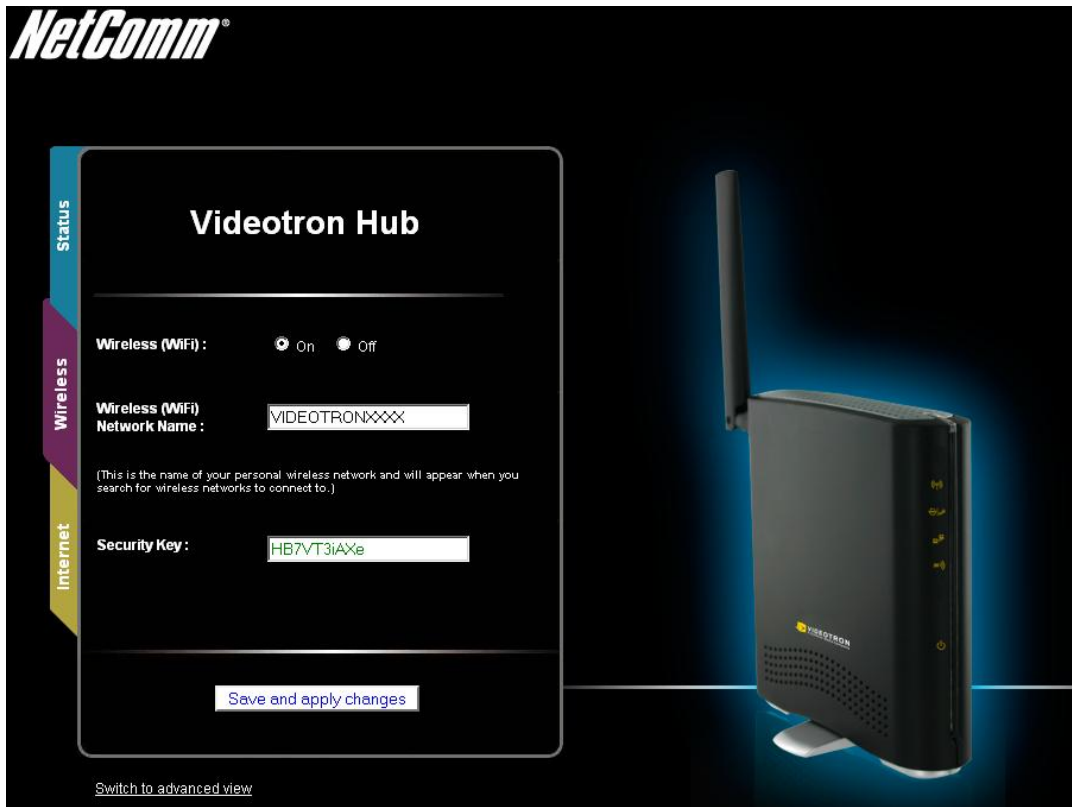


Figure 11 - Basic View - Wireless

This page allows you to configure basic Wi-Fi settings for this device such as enabling/disabling the Wi-Fi functionality, changing the Wireless Network Name (SSID) or the Wireless Security key.

OPTION	DEFINITION
Wireless (WiFi) ON/ OFF:	Changing this option to Off will turn off the WiFi feature on the 3G39W-V and you will not be able to connect to your 3G39W-V wirelessly.
SSID Broadcast Name (SSID):	The SSID (Service Set Identifier) is the name of your wireless network. Use a unique name to identify your wireless device so that you can easily connect to it from your wireless clients. This field is case sensitive and can be up to 32 characters.
SSID Broadcast:	Select 'Disabled' to hide the SSID of your 3G39W-V. If disabled, other people will not be able to easily see your 3G39W-V's SSID. To add wireless clients with broadcast disabled, the SSID will need to be manually configured on each wireless client.
Security key:	Enter your chosen Wireless Security key here. The default WPA-PSK key is printed on the wireless security card and on the Product ID on the bottom of the 3G39W-V. Please note that whilst the key can be customized on this page, the key will revert to the default if the 3G39W-V is reset to factory default.

Table 10 - Basic View - Wi-Fi Settings

Advanced Features

The basic configuration interface is intended to provide access to all the settings that most people will want to use on their 3G39W-V. There are advanced settings available if desired which are accessible by viewing the advanced settings pages. Click “Switch to Advanced View” for configuring the advanced features of your 3G39W-V.

Status

The status page provides system related information and is displayed when you login to the 3G39W-V management console and switch to Advanced View. By default, the status page will show System Info, Local Network, WWAN, Connection Status and Ethernet Status.

To view either WAN, PPPoE or PPTP status individually, click on their relevant buttons below the green menu bar. To view them all, click on the All Status button.

The screenshot shows the 'Status' page of the 3G39W-V management console. At the top, there is a green navigation bar with the following menu items: Status, Internet Settings, Wireless settings, Firewall, and Administration. Below this bar, there are four buttons: All Status (selected), WAN, PPPoE, and PPTP. The main content area is organized into several sections, each with a blue icon and a title:

- System Information:**

Firmware Version	1.1.71.0 (Sep 8 2011)
System Up Time	00 : 31 : 23
Operation Mode	Gateway Mode
- Local Network:**

Local IP Address	192.168.20.1
Local Netmask	255.255.255.0
MAC address	00:0C:43:30:52:77
- WWAN (WAN/3G):**

WWAN Operation Mode	Always on
Connection Up Time	00 : 00 : 00

Interface	Status	APN	Local	Remote
3G	Connecting			
- Connection Status:**

Module Name	EM820U
Provider	Vidéotron
Service Type	UMTS
IMEI	357945020127408
Signal Strength (dBm)	-57 dBm (strong)
SIM Status	SIM OK
- Ethernet Port Status:**

The Ethernet Port on the router can be configured as either a WAN or a LAN port. The status of the port is shown here. The port can be changed by selecting an option from the drop-down list.

Current LAN means that the Ethernet port is currently operating as a LAN port. At this time, a computer connected via an Ethernet Cable can access the Internet(if connected), access connected WiFi devices, and access the router itself for configuration.
Current WAN means that the Ethernet port is currently operating as a WAN port. Connect your DSL or cable modem to obtain an Internet connection.

At the bottom of this section, there are two status indicators: a green square labeled 'Full' and a white square labeled 'WAN / LAN'. To the right is a dropdown menu currently set to 'CURRENT WAN'.

Figure 12 - Advanced View – Status

Internet Settings

WWAN

This page allows you to setup your WWAN (Wireless Wide Area Network) connection.

Status ▶ Internet Settings ▶ Wireless settings ▶ Firewall ▶ Administration

[Internet Settings](#) > [3G internet settings](#)

WWAN (3G) Settings

This page allows you to setup your WWAN (Wireless Wide Area Network) connection. Enter the relevant settings as provided by your 3G provider.

Profile Name	<input type="text" value="ISFF"/>
APN	<input type="text" value="isf.videotron"/>
3G NAT	<input type="text" value="Enabled"/>
Interface Metric	<input type="text" value="20"/>
Operation Mode	<input type="text" value="Always on"/>
	Redial Period <input type="text" value="20"/> seconds

Roaming Setting

Data Roaming	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
--------------	---

SIM Security Settings

SIM Status	SIM OK
PIN	<input type="text"/>
Confirm PIN	<input type="text"/>
Remember PIN: Disabled	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
PIN Protection: Disabled	<input type="text" value="Disable PIN"/>

Figure 13 - Advanced View – WWAN Settings

OPTION	DEFINITION
Profile Name	Description for the profile
APN	Please enter the APN name you wish to connect to in this field. Please don't edit this unless you are aware of what effect it will have.
3G NAT	Enabled by Default, this option allows you to switch NAT (Network Address Translation) on or off.
Interface Metric	This field allows you to customize the metric of the 3G interface. This setting will have no effect for most users, but may be required for advanced routing configurations (Static Routes, RIP, VPN, etc)
Operation Mode; There are 3 Options:	
'Always ON'	Keeps the Internet connection alive, does not disconnect
'OFF'	Does not connect to the Internet
'Automatic 3G Backup'	The Automatic 3G Backup feature of the 3G39W-V is designed to provide a backup 3G Internet connection when you use the WAN connection as your primary, when the primary fails. The Internet connection will automatically switch back to your WAN connection once your WAN Internet connection is back online. To use this feature, you will need both an Ethernet WAN connection (from an xDSL modem/ISDN/Satellite etc) and a 3G connection.
Data Roaming	Select to enable or disable data roaming on your 3G connection
PIN	Enter the PIN for your SIM card here (if required)
Confirm PIN	Re-enter the PIN for your SIM card here (if required)
Remember PIN	Set the 3G39W-V to remember the SIM PIN. This prevents it needing to be entered each time the 3G39W-V starts up.
PIN Protection	Select to enable or disable PIN protection on your SIM card

Table 11 - Advanced View - Internet Settings

WAN

The WAN page allows you to configure the optional WAN Ethernet port. Select the WAN connection type suitable for your environment and configure parameters according to the selected connection type.

STATIC (fixed IP)

If your WAN connection uses a static IP address, please select “STATIC (fixed IP)” and fill in the required information in the fields provided.

Figure 14 - Advanced View - WAN - Static IP Settings

NAME	DESCRIPTION
IP Address:	Type in the IP address assigned by your Internet Service Provider
Netmask:	Type in the Subnet mask assigned by your Internet Service Provider
Gateway:	Type in the WAN Gateway assigned by your Internet Service Provider
Primary/ Secondary DNS:	Type in the DNS address assigned by your Internet Service Provider
MAC Clone:	Please input the MAC address of your computer here if your service provider only permits computers with a certain MAC address to access the Internet. If you are using the computer which used to connect to the Internet via a cable modem, you can simply press the 'Default' button to fill the MAC address field with the MAC address of your computer.
NAT Configuration	Enable or disable Network Address Translation for this connection type

Table 12 - Advanced View - WAN Settings - Static IP



Please refer to the **WAN Failover Backup** section on page 22 for information on configuring the WAN failover feature.

Click 'Apply' to save the settings.

DHCP

This connection will get the IP address from the Internet service provider. Leave everything as default unless instructed by your Internet Service Provider.

Status > Internet Settings > Wireless settings > Firewall > Administration

Internet Settings > WAN

Wide Area Network (WAN) Settings

This page allows you to setup your WAN Connection. First select the WAN connection type <STATIC (fixed IP)>, <DHCP (Auto config)>, <PPPoE>, then enter the relevant settings as provided by your ISP.

WAN Connection Type

DHCP Mode

Hostname

MAC Clone

Enabled

NAT Configuration

WAN Failover Backup

Automatic 3G backup

Figure 15 - Advanced View - WAN - DHCP Settings

NAME	DESCRIPTION
Host Name	Please input the host name of your computer. This is optional, and only required if your service provider asks you to do so.
Mac Clone	Please input the MAC address of your computer here if your service provider only permits computers with a certain MAC address to access the Internet. If you are using a computer which used to connect to Internet via a cable modem, you can simply press the 'Default' button to fill the MAC address field with the MAC address of your computer.
NAT Configuration	Enable or disable Network Address Translation for this connection type

Table 13 - Advanced View - WAN Settings - DHCP



Please refer to the **WAN Failover Backup** section on page 22 for information on configuring the WAN failover feature.

Click 'Apply' to save the settings.

PPPoE (ADSL)

Most ADSL/ADSL2+ services use the PPP over Ethernet protocol. Use this if you are utilising a fixed line broadband service.

Status ▶ Internet Settings ▶ Wireless settings ▶ Firewall ▶ Administration

[Internet Settings > WAN](#)

Wide Area Network (WAN) Settings

This page allows you to setup your WAN Connection. First select the WAN connection type <STATIC (fixed IP)>, <DHCP (Auto config)>, <PPPoE>, then enter the relevant settings as provided by your ISP.

WAN Connection Type PPPoE ▼

PPPoE Mode

User Name

Password

Verify Password

Operation Mode Always on ▼

Keep Alive Mode: Redial Period seconds

On demand Mode:
Idle Time minutes

MAC Clone

Enabled Disable ▼

NAT Configuration Disable ▼

WAN Failover Backup

Automatic 3G backup Disable ▼

Figure 16 - Advanced View - WAN - PPPoE Settings

NAME	DESCRIPTION
Username/Password	Type in your PPPoE account username and password.
Operation Mode; There are 3 options:	
'Always on'	Keeps the Internet connection alive, does not disconnect.
'On Demand'	Only connects to the Internet when there's a connect attempt
'OFF'	Only connects to the Internet when the 'Connect' button on this page is pressed, and disconnects when the 'Disconnect' button is pressed.
MAC Clone	Please input the MAC address of your computer here if your service provider only permits computers with a certain MAC address to access the Internet. If you are using the computer which used to connect to the Internet via cable modem, you can simply press the 'Default' button to fill the MAC address field with the MAC address of your computer.
NAT Configuration	Enable or disable Network Address Translation for this connection type

Table 14 - Advanced View - WAN Settings - PPPoE



Please refer to the **WAN Failover Backup** section on page 22 for information on configuring the WAN failover feature.

Click 'Apply' to save the settings.

PPTP

This connection type enables the 3G39W-V to connect to a VPN server via a bridged WAN device. Any device connected to the 3G39W-V can then access the VPN based resources available.

[Status](#) ▶ [Internet Settings](#) ▶ [Wireless settings](#) ▶ [Firewall](#) ▶ [Administration](#)

[Internet Settings > WAN](#)

Wide Area Network (WAN) Settings

This page allows you to setup your WAN Connection. First select the WAN connection type <STATIC (fixed IP)>, <DHCP (Auto config)>, <PPPoE>, then enter the relevant settings as provided by your ISP.

WAN Connection Type

PPTP Mode

Server IP

User Name

Password

Address Mode

IP Address

Subnet Mask

Default Gateway

Operation Mode

Keep Alive Mode: Redial Period seconds

On demand Mode: Idle Time minutes

MAC Clone

Enabled

NAT Configuration

WAN Failover Backup

Automatic 3G backup

Figure 17 - Advanced View - WAN - PPTP Settings

NAME	DESCRIPTION
Server IP	Type in the server IP address assigned by your Internet Service Provider.
User Name/Password	Type in the username and password assigned by your provider.
Address Mode	Select Dynamic if your service uses a DHCP server, or select Static and type in the IP address, Subnet Mask and Default Gateway assigned by your Internet Service Provider.
Operation Mode; There are 3 options:	
'Always On'	Keeps the Internet connection alive, does not disconnect.
'On Demand'	Only connects to Internet when there's a connection attempt
'OFF'	Only connects to the Internet when the 'Connect' button on this page is pressed, and disconnects when the 'Disconnect' button is pressed.
Mac Clone	Please input the MAC address of your computer here if your service provider only permits computers with a certain MAC address to access the Internet. If you are using a computer which used to connect to the Internet via a cable modem, you can simply press the 'Default' button to fill the MAC address field with the MAC address of your computer.
NAT Configuration	Enable or disable Network Address Translation for this connection type

Table 15 - Advanced View - WAN Settings - PPTP



Please refer to the **WAN Failover Backup** section on page 22 for information on configuring the WAN failover feature.

Click 'Apply' to save the settings.

WAN Failover Backup

The WAN Failover Backup feature of the 3G39W-V is designed to provide a backup 3G Internet connection in case your primary connection should fail. To use this feature, you will need both an Ethernet WAN connection (from an xDSL modem/ISDN/Satellite etc) and a 3G WAN connection.

To set up WAN failover on your 3G39W-V, first tick “Enable automatic 3G backup”, then fill in the fields that appear.

WAN Failover Backup	
Automatic 3G backup	<input type="button" value="Enable"/>
Profile Name	<input type="text" value="ISFF"/>
APN	<input type="text" value="isf.videotron"/>
3G NAT	<input type="button" value="Enable"/>
Interface Metric	<input type="text" value="20"/>
Internet Host	<input type="text" value="www.netcomm.com.au"/>
Second Address	<input type="text"/>
Periodic PING Timer	<input type="text" value="3"/> (0=disable, 1-65535) secs
Periodic PING Accelerated Timer	<input type="text" value="2"/> (0=disable, 1-65535) secs
Fail Count	<input type="text" value="1"/> 1-65535 times
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

Figure 18 - Advanced View - WAN Failover Settings

NAME	DESCRIPTION
Automatic 3G Backup	Default setting is “Disable”. Set it to “Enable” if you intend to turn on the Automatic 3G Backup function.
3G NAT	Enable NAT on the 3G connection
Interface Metric	The default value is 20; please enter the valid value from 1 to 9999 suitable for your network environment
Internet Host	Enter an Internet address here to check the Internet Connection. The default value is www.netcomm.com.au.
Second Address	Enter an Internet address here to check the Internet Connection. This should be a high availability address. For example: www.google.com

Table 16 - Advanced View - WAN Failover Settings

Click ‘Apply’ to save the settings.

LAN

LAN functionality of the 3G39W-V can be configured from this page. Using this page, a user can change the LAN Subnet, gateway IP address, DHCP settings, Static DHCP Lease settings, and many others.

The screenshot shows the 'Local Area Network (LAN) Settings' page. At the top, there is a navigation bar with 'Status', 'Internet Settings', 'Wireless settings', 'Firewall', and 'Administration'. Below this, the page title is 'Internet Settings > LAN'. The main heading is 'Local Area Network (LAN) Settings'. A sub-heading states: 'This page allows you to configure the LAN IP address, subnet mask and DHCP settings of your 3G Router.' The form contains the following fields:

- LAN Setup**
 - IP Address: 192.168.20.1
 - Netmask: 255.255.255.0
 - 3G IP Forwarding (Transparent Bridging): Disable
 - LAN 2: Enable Disable
 - LAN2 IP Address: [Empty]
 - LAN2 Subnet Mask: [Empty]
 - MAC address: 00:0C:43:30:52:77
 - DHCP Type: Server
 - Start IP Address: 192.168.20.100
 - End IP Address: 192.168.20.199
 - Netmask: 255.255.255.0
 - Primary DNS Server: 192.168.20.1
 - Secondary DNS Server: 192.168.20.1
 - Gateway: 192.168.20.1
 - Lease Time: 06:400
 - Statically Assigned (3 entries): Each with MAC, IP, and [Empty] fields.
- 802.1d Spanning Tree: Disable
- LLTD: Disable
- IGMP Proxy: Disable
- UPnP: Enable
- Router Advertisement: Disable
- PPPoE Relay: Disable
- DNS Proxy: Enable

At the bottom of the form are 'Apply' and 'Cancel' buttons.

Figure 19 - Advanced View - LAN Settings

NAME	DESCRIPTION
IP Address	The local IP address of 3G39W-V
Netmask	The subnet mask for the local network.
LAN 2	Used to configure a secondary LAN IP Address (optional)
LAN 2 IP Address	The local IP address of the secondary LAN IP Address
LAN2 Subnet Mask	The subnet mask of the secondary IP Address
DHCP Type	Please leave this set to "Server" unless you have another DHCP server on the same network.
Start IP Address	The Start IP address of your DHCP IP Pool.
End IP Address	The End IP address of your DHCP IP Pool.
Netmask	The subnet mask of the IP Address
Primary DNS Server/ Secondary DNS Server	This Feature allows you to manually assign DNS Servers
Gateway	The default is the IP of your 3G39W-V
Lease Time	DHCP Lease time of the DHCP Client of your 3G39W-V
Statically Assigned	This feature allows you to statically assign IP addresses to the MAC Addresses. The Format of MAC address is XX:XX:XX:XX:XX
802.11d Spanning Tree	The default is "Disable", select "Enable" to enable this feature.
LLTD	Link Layer Topology Discovery (LLTD). The default is "Disable", select "Enable" to enable this feature.
IGMP Proxy	Internet Group Management Protocol (IGMP), The default is "Disable", select "Enable" to enable this feature.
UPnP	Universal Plug and Play (UPnP), The default is "Enabled", select "Disable" to disable this feature.
Router Advertisement	The default is "Disable", select "Enable" to enable it.
PPPoE relay	The default is "Disable", select "Enable" to enable it.
DNS Proxy	The default is "Enable", select "Disable" to disable it.

Table 17 - Advanced View - LAN Settings

Click 'Apply' to save the settings.

Advanced Routing

This page allows you to configure static and dynamic routing rules for your 3G39W-V.

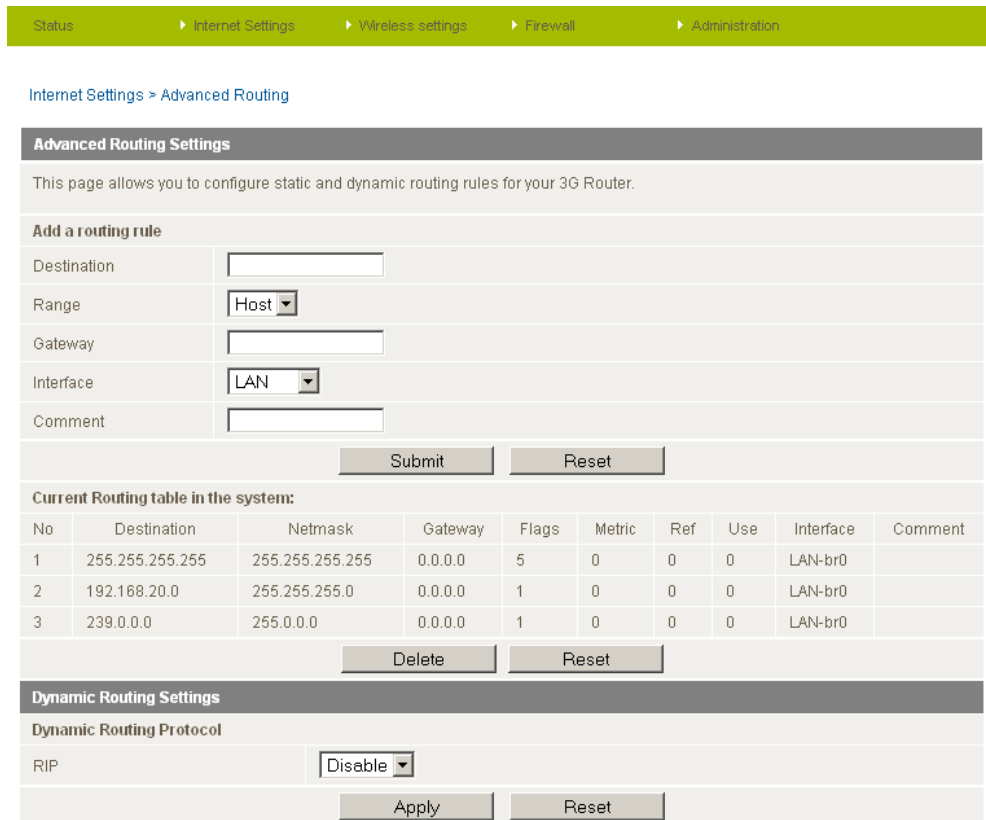


Figure 20 - Advanced View - Advanced Routing Settings

Advanced Routing – Static

Static Routing allows computers that are connected to your 3G39W-V to communicate with computers on another LAN segment which are connected to it via another router. To set a rule, you need to specify the following:

- Destination
- Range – Select from Host (255.255.255.255) or Net (and then enter the appropriate subnet mask)
- Gateway
- Interface
- Comment to identify the route entered (optional)

Advanced Routing – Dynamic

Dynamic Routing uses the RIP protocol to allow the 3G39W-V to adapt to changes in the network. RIP enables the device to determine the best route for each packet based on the “hop count” or number of hops between Source and Destination. To enable Dynamic Routing, select Enable from the drop box and click Apply.

DHCP Client List

This page allows you to view the current DHCP clients that have obtained IP leases from your 3G39W-V. The MAC address, assigned IP address and the expiry period is shown for all computers who have automatically obtained addresses from the 3G39W-V. Please note that this list is stored in the device’s volatile memory, and is therefore cleared if the device is reset or if any changes are applied to configuration.

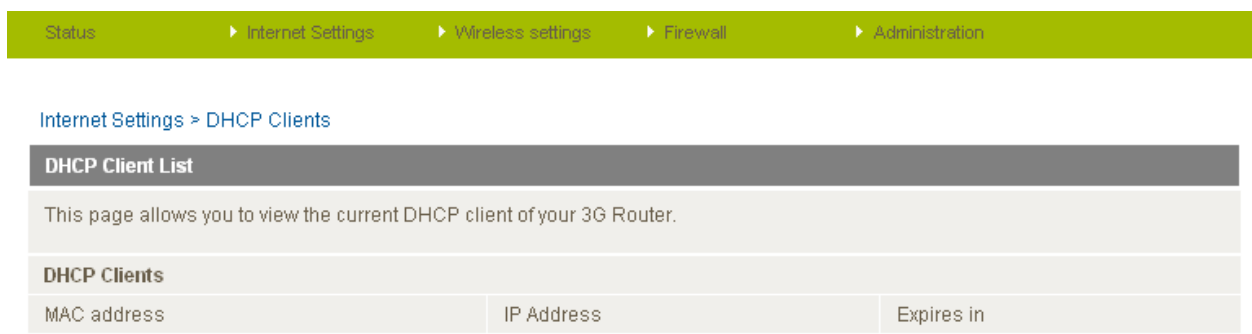


Figure 21 – Advanced View – DHCP Client List

Wireless Settings

Basic

This page allows you to define the basic wireless settings for the 3G39W-V.

Figure 22 – Advanced View – Wi-Fi Settings

Radio On/Off:

Wi-Fi is turned on by default. Changing this option to OFF will turn OFF the wireless functionality on the 3G39W-V and you will not be able to connect to your 3G39W-V wirelessly.

OPTION	DEFINITION
Network Mode; There are 5 modes to select from:	
11b/g mixed mode:	Both 802.11b and 802.11g wireless devices are allowed to connect to your 3G39W-V.
11b only:	Select this if all of your wireless clients are 802.11b.
11g only:	Select this if all of your wireless clients are 802.11g.
11n only:	Select this if all of your wireless clients are 802.11n.
11b/g/n Mixed mode:	Select this if 802.11b and 802.11g and 802.11n wireless devices are in your network.
Network Name (SSID):	The SSID (Service Set Identifier) is the name of your wireless network. Use a unique name to identify your wireless device so that you can easily connect to it from your wireless clients. This field is case sensitive and can be up to 32 characters. You should change the default SSID for added security.
Frequency (Channel):	This setting configures the frequency that the Wireless Radio uses for wireless connectivity. Select one channel that you wish to use from the drop down list.
WDS Mode:	WDS (Wireless Distribution System) is a system that enables the wireless interconnection of access points, and allows a wireless network to be expanded using multiple access points without a wired backbone to link them. Each WDS Access Point needs to be set with the same channel and encryption type.

Table 18 - Advanced View - Wi-Fi Settings

Click 'Apply' to save the settings.

Advanced

This page allows you to modify the advanced wireless settings for your 3G39W-V. These settings should not be changed unless you are aware of what effect they will have.

Figure 23 - Advanced View - Advanced Wi-Fi Settings

OPTION	DEFINITION
Beacon Interval:	Interval of time in which the wireless router broadcasts a beacon which is used to synchronize the wireless network.
Data Beacon Rate (DTIM):	Enter a value between 1 and 255 for the Delivery Traffic Indication Message (DTIM). A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages
Fragment Threshold:	This specifies the maximum size of a packet during the fragmentation of data to be transmitted. If you set this value too low, it will result in bad performance.
RTS Threshold:	When the packet size is smaller than the RTS threshold, the wireless router will not use the RTS/CTS mechanism to send this packet.
AP Isolation:	This feature allows you to isolate clients on your wireless network. To enable communication between the wireless clients connected to your 3G39W-V, select Disabled. To terminate the communication between the wireless clients, please choose Enabled.
TX Power:	This determines the output power of the antenna
WMM Capable:	WMM (WiFi MultiMedia) if enabled, supports QoS for experiencing better audio, video and voice in applications
WMM Parameters:	Click on the WMM Configuration button to configure the WMM parameters
Broadcast Network Name (SSID):	Select 'Disabled' to hide the SSID of your 3G39W-V. If disabled, other people will not be able scan and detect this product's SSID.

Table 19 - Advanced View - Advanced Wi-Fi Settings

Click Apply to save the settings.

Security

This page allows you to configure the wireless security for your 3G39W-V. Setting up sufficient wireless security can prevent unauthorized access to your wireless network.

Status
▶ Internet Settings
▶ Wireless settings
▶ Firewall
▶ Administration

[Wireless settings](#) > Security

Wireless Security Settings

This page allows you to configure the wireless security for your 3G Router. Setting up sufficient wireless security can prevent unauthorised access to your wireless network.

Select SSID

SSID choice:

Security Mode:

WPA

WPA Algorithms: TKIP AES TKIP AES

Pass Phrase:

Key Renewal Interval: seconds (60 - 9999)

Access Policy

Policy:

Add a MAC address to the allow/block list: : : : : :

Figure 24 - Advanced View - Wi-Fi Security Settings

OPTION	DEFINITION
SSID Choice:	Select the SSID that you wish to configure the security settings of.
Security Mode:	Select the security mode for the wireless network. See below for more information
Access Policy:	This feature allows MAC Address Control, which prevents unauthorized clients from accessing your wireless network. Select whether to allow/block users on the policy list, and add their MAC addresses to the list on the format XX:XX:XX:XX:XX:XX

Table 20 - Advanced View - Wi-Fi Security Settings

Security Mode

You may choose from the following wireless security options:

- Disabled
- Open
- Shared
- WEP AUTO
- WPA
- WPA-PSK
- WPA2
- WPA2- PSK
- WPA-PSK-WPA2-PSK
- WPA1-WPA2
- 802.1x.

WEP

WEP (Wired Equivalent Privacy) helps prevent against unwanted wireless users accessing your 3G39W-V. It offers a lower level of security in comparison to WPA-PSK and WPA2-PSK. Enter the Security Key you would like to use in the WEP Key 1 field.

Click Apply to save the settings.

The screenshot shows the 'Wireless Security Settings' page. At the top, there is a navigation bar with 'Status', 'Internet Settings', 'Wireless settings', 'Firewall', and 'Administration'. Below this, the breadcrumb 'Wireless settings > Security' is visible. The main heading is 'Wireless Security Settings', followed by a descriptive paragraph. The 'Select SSID' section has 'SSID choice' set to 'VIDEOTRONXXXX' and 'Security Mode' set to 'WEP-AUTO'. Under 'Wired Equivalent Privacy (WEP)', the 'Default Key' is 'Key 1'. The 'WEP Keys' section contains four rows: 'WEP Key 1' with the value 'a1b2c3d4e5' and a '64 bit' indicator, and 'WEP Key 2', 'WEP Key 3', and 'WEP Key 4' which are empty. Each key field has a 'Hex' dropdown menu. The 'Access Policy' section has 'Policy' set to 'Disable' and an empty 'Add a MAC address to the allow/block list' field. At the bottom are 'Apply' and 'Cancel' buttons.

Figure 25 - Advanced View - Wi-Fi Security Settings - WEP

WPA1/WPA2

WPA (Wi-Fi Protected Access) authentication is suitable for enterprise applications. It must be used in conjunction with an authentication server such as RADIUS to provide centralized access control and management. It provides a stronger encryption and authentication solution.

The screenshot shows the 'Wireless Security Settings' page for WPA1/WPA2 configuration. The navigation and breadcrumb are the same as in Figure 25. The 'Select SSID' section has 'SSID choice' set to 'VIDEOTRONXXXX' and 'Security Mode' set to 'WPA1-WPA2'. Under 'WPA', 'WPA Algorithms' has 'TKIP' selected with radio buttons, and 'Key Renewal Interval' is set to '60' seconds. The 'Radius Server' section includes fields for 'IP Address', 'Port' (1812), 'Shared Secret', 'Session Timeout' (0), and 'Idle Timeout'. The 'Access Policy' section has 'Policy' set to 'Disable' and an empty 'Add a MAC address to the allow/block list' field. At the bottom are 'Apply' and 'Cancel' buttons.

Figure 26 - Advanced View - Wi-Fi Security Settings - WPA1/WPA2

WPA-PSK/WPA2-PSK

A newer type of security is WPA-PSK (TKIP) and WPA2-PSK (AES). This type of security gives a more secure network compare to WEP. Use TKIP Encryption Type for WPA-PSK and AES for WPA2-PSK. After that, please enter the key in the Passphrase field. The key needs to be more than 8 characters and less than 63 characters and it can be any combination of letters and numbers.

Please note that the configuration for WPA-PSK and WPA2-PSK is identical.

The screenshot shows the 'Wireless Security Settings' page. At the top, there is a navigation bar with 'Status', 'Internet Settings', 'Wireless settings', 'Firewall', and 'Administration'. Below this, the breadcrumb 'Wireless settings > Security' is visible. The main heading is 'Wireless Security Settings'. A sub-heading explains that this page allows configuring wireless security for the 3G Router. The form includes:

- Select SSID:** SSID choice dropdown set to 'VIDEOTRONXXXX'.
- Security Mode:** WPA-PSK dropdown.
- WPA:** WPA Algorithms section with radio buttons for TKIP (selected), AES, and TKIP AES.
- Pass Phrase:** Text input field containing 'HB7VT3iAXe'.
- Key Renewal Interval:** Text input field set to '60' seconds (range 60-9999).
- Access Policy:** Policy dropdown set to 'Disable'.
- Add a MAC address to the allow/block list:** Six empty input fields for MAC address components.

 At the bottom are 'Apply' and 'Cancel' buttons.

Figure 27 - Advanced View - Wi-Fi Security Settings - WPA-PSK/WPA2-PSK

Your 3G39W-V uses WPA2-PSK by default. Check your Wireless Security Card or the device label on the bottom of the 3G39W-V for your default SSID and Security key to begin connecting your wireless devices.

802.1x

In order to use 802.1X security, you need to have a RADIUS server on your network that will act as the authentication server. Please type in the details for your RADIUS server in the fields required.

The screenshot shows the 'Wireless Security Settings' page for 802.1x. The navigation and breadcrumb are the same as in Figure 27. The main heading is 'Wireless Security Settings'. The form includes:

- Select SSID:** SSID choice dropdown set to 'VIDEOTRONXXXX'.
- Security Mode:** 802.1X dropdown.
- 802.1x WEP:** WEP section with radio buttons for Disable (selected) and Enable.
- RADIUS Server:**
 - IP Address: Empty text input field.
 - Port: Text input field set to '1812'.
 - Shared Secret: Empty text input field.
 - Session Timeout: Text input field set to '0'.
 - Idle Timeout: Empty text input field.
- Access Policy:** Policy dropdown set to 'Disable'.
- Add a MAC address to the allow/block list:** Six empty input fields for MAC address components.

 At the bottom are 'Apply' and 'Cancel' buttons.

Figure 28 - Advanced View - Wi-Fi Security Settings - 802.1x

Please note: After configuring wireless security, you also need to configure your wireless adapter to use the same security settings before you can connect wirelessly. Not all wireless adapters support WPA-PSK/WPA2-PSK/WPA/WPA2 security;

Please refer to your wireless adapter user guide for more details. It is strongly recommended to set up a simple wireless security such as WPA-PSK (when the wireless client supports WPA-PSK) in order to secure your network.

Most wireless adapters in computers and laptops support at least WEP and WPA.

WPS

WPS is the simplest way to establish a connection between wireless clients and your 3G39W-V. This method removes the need to manually select the encryption mode and fill in the passphrase. You only need to press a button on both wireless client and the 3G39W-V, and the WPS will do the rest for you. The 3G39W-V supports two types of WPS:

OPTION	DEFINITION
WPS via Push Button	you have to push a specific button on the wireless client or in your wireless client utility to start the WPS mode. Then switch the 3G39W-V to WPS mode. You can simply push the WPS button of the wireless router, or click the 'Apply' button in the web configuration interface.
WPS via PIN code	you have to know the PIN code of the wireless client and switch it to WPS mode, then input the wireless client PIN to the 3G39W-V web interface.

Table 21 - Advanced View - Enable or Disable WPS

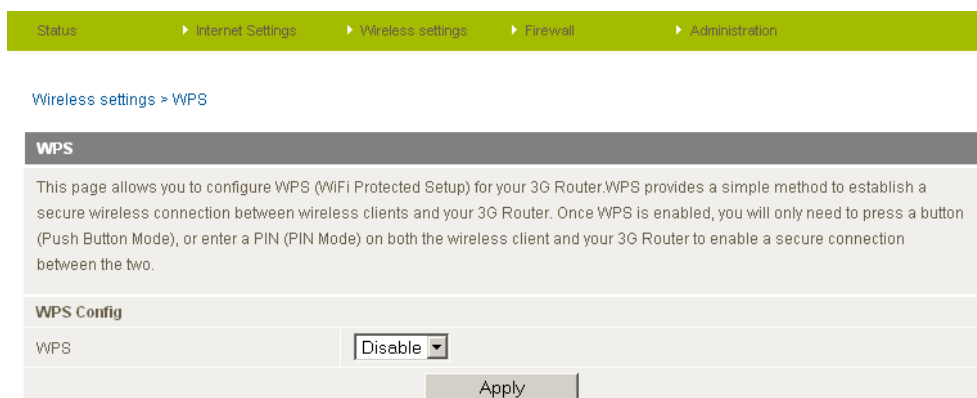


Figure 29 - Advanced View - WPS Settings - Disabled

Use the drop box to either enable or disable the WPS function.

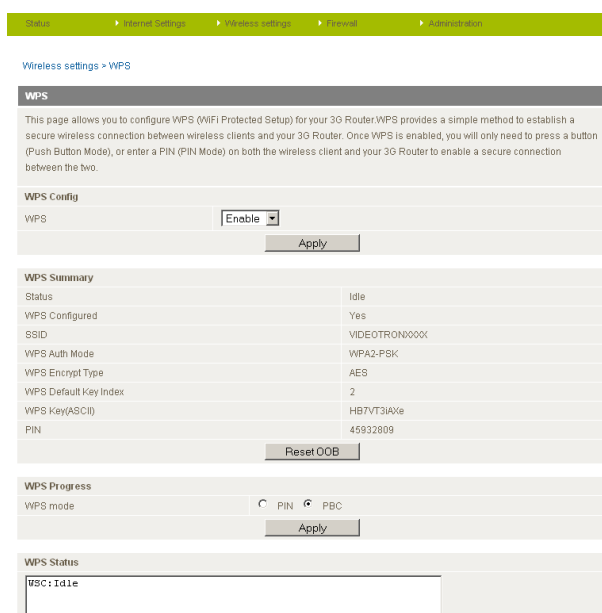


Figure 30 - Advanced View - WPS Settings - Enabled

OPTION	DEFINITION
Status:	If the wireless security (encryption) function of this wireless router is properly set, you will see a 'Success' message here. Otherwise, you will see 'Idle'.
SSID:	This is the network broadcast name (SSID) of the router.
WPS Auth Mode:	It shows the active authentication mode for the wireless connection.
WPS PIN:	This is the WPS PIN code of the wireless router. You may need this information when connecting to other WPS-enabled wireless devices.
WPS Mode:	Select either PIN mode or PBC (which is the WPA via Push Button).

Table 22 - Advanced View - WPS Settings

Station List

The Station List shows the wireless clients currently associated with your 3G39W-V.

Status > Internet Settings > Wireless settings > Firewall > Administration

Wireless settings > Station List

Station List

This page allows you to view a list of the wireless clients that are currently associated with your 3G Router.

Wireless Network

MAC address	IP Address	SSID	RSSI	PSM	BW	Connected Time
-------------	------------	------	------	-----	----	----------------

Figure 31 - Advanced View - Wi-Fi Station List

Firewall

Mac/IP/Port Filtering

This page allows you to setup MAC, IP and port filtering rules to protect your network from malicious activity. The filtering rules can be used to either allow or block certain users and/or ports from accessing the Internet.

Figure 32 - Advanced View - Port Filtering Settings

Basic Settings

MAC/IP/Port Filtering: Select Enable to enable MAC/IP/Port Filtering

Default Policy: Select whether packets that do not match any rules are accepted or dropped

MAC/IP/Port Filtering Settings

OPTION	DEFINITION
MAC Address:	MAC address of a local computer
Dest IP Address:	Destination IP Address for the filter rule
Source IP Address:	Source IP Address for the filter rule
Protocol:	Select the port number protocol type (TCP, UDP or both). If you are unsure, then leave it to the default "TCP&UDP" setting
Dest Port Range:	Destination Port Range of the filter rule
Source Port Range:	Source Port Range of the filter rule
Action:	Either accept or drop the packet that matches the rule
Comment:	Add a comment to identify the rule (optional)

Table 23 - Advanced View - Port Filtering Settings

Click 'Apply' to save the settings.

Port Forwarding

This page allows you to configure port forwarding rules to allow remote users to access services such as Web (HTTP) or FTP on your local computers. This allows you to redirect a particular port number (from the Internet/WAN port) to a particular LAN IP address.

Status
▶ Internet Settings
▶ Wireless settings
▶ Firewall
▶ Administration

[Firewall > Port Forwarding](#)

Virtual Server Settings

This page allows you to configure port forwarding rules to allow remote users to access services such as Web or FTP on your local computers. This allows you to redirect a particular port number (from the Internet/WAN port) to a particular LAN IP address.

Virtual Server Setting	Disable ▾
IP Address	<input type="text"/>
Port Range	<input type="text"/> - <input type="text"/>
Protocol	TCP&UDP ▾
Comment	<input type="text"/>

(The maximum rule count is 32.)

Current Virtual Servers in system

No	IP Address	Port Range	Protocol	Comment
<input type="button" value="Delete Selected"/> <input type="button" value="Reset"/>				

Figure 33 - Advanced View - Port Forwarding Settings

OPTION	DEFINITION
Virtual Server Settings:	Enable/Disable port forwarding.
IP Address:	The LAN IP address that the public port number packet will be sent to.
Port Range:	The public port numbers to be sent to the specific LAN IP address.
Protocol:	Select the port number protocol type (TCP, UDP or both). If you are unsure, then leave it as the default "TCP&UDP" setting
Comment:	Add a comment to identify the rule (optional)

Table 24 - Advanced View - Port Forwarding Settings

Click 'Apply' to save the settings.

DMZ

If you have a client PC that cannot run an Internet application (e.g. Games) properly from behind the NAT firewall, then you can open up the firewall restrictions to allow unrestricted two-way Internet access by defining a DMZ Host.

The DMZ function allows you to re-direct all packets going to your WAN port IP address, to a particular IP address in your LAN. The difference between the virtual server and the DMZ function is that the virtual server re-directs a particular service/Internet application (e.g. FTP, websites) to a particular LAN client/server, whereas DMZ re-directs all packets (regardless of services) going to your WAN IP address to a particular LAN client/server.

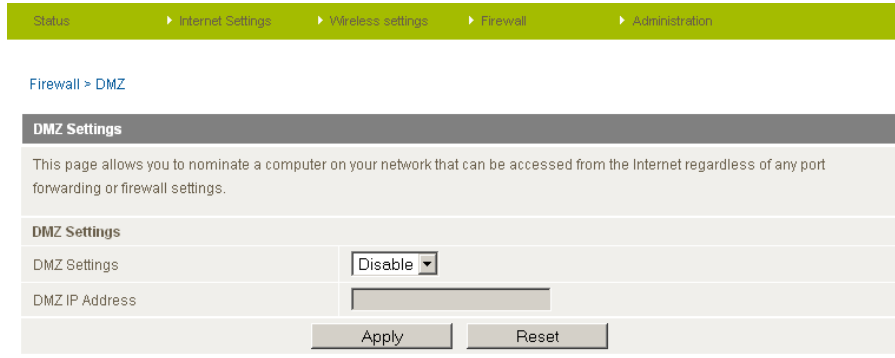


Figure 34 - Advanced View - DMZ Settings

OPTION	DEFINITION
DMZ Settings:	Enable/disable DMZ.
DMZ IP Address:	Fill in the IP address of a particular host in your LAN Network that will receive all the packets originally going to the WAN port/Public IP address of your 3G39W-V.

Table 25 - Advanced View - DMZ Settings

Click 'Apply' to save the above configurations.

System Security

This page allows you to improve the security of your 3G39W-V through the SPI (Stateful Packet Inspection) firewall and remote access settings.

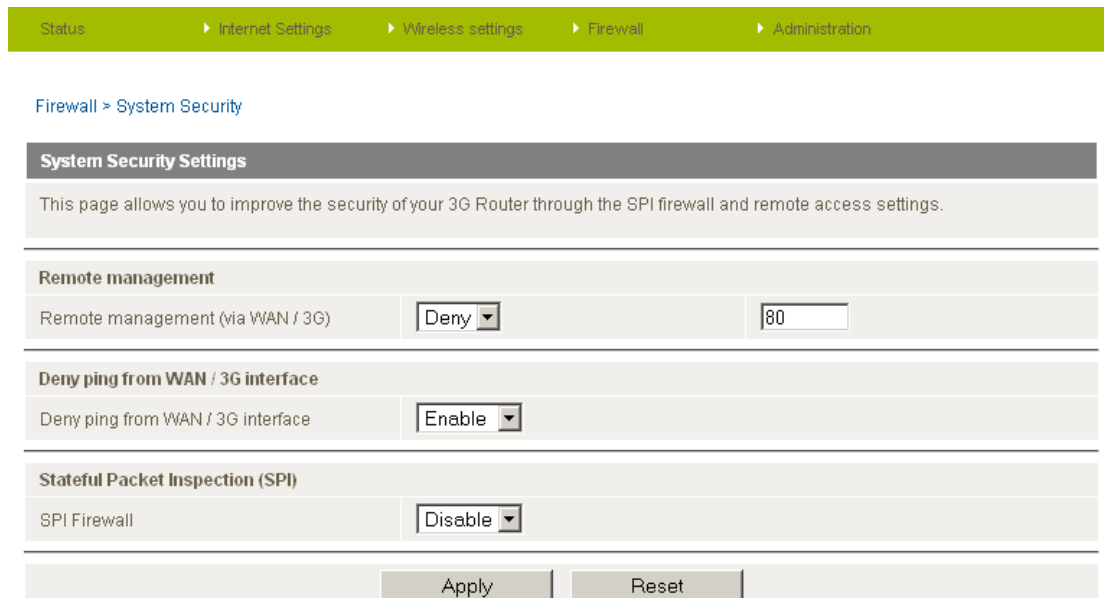


Figure 35 - Advanced View - System Security Settings

OPTION	DEFINITION
Remote Management (via WAN / 3G):	Enable/Disable remote management on the WAN interface.
Deny ping from WAN / 3G interface:	Select Enable to deny ICMP packets received on the WAN interface. Otherwise, select "Disable" to allow ICMP packets received on the WAN interface.
SPI Firewall	Enable/Disable the SPI (Stateful Packet Inspection) firewall to improve the security of your 3G39W-V.

Table 26 - Advanced View - System Security Settings

Click 'Apply' to save the settings.

Content Filtering

This page allows you to configure content, URL and host filters to restrict improper content access from LAN computers

The screenshot shows the 'Content Filter Settings' page in the NetComm router's web interface. At the top, there is a navigation bar with links for Status, Internet Settings, Wireless settings, Firewall, and Administration. Below this, the breadcrumb 'Firewall > Content Filtering' is visible. The main content area is divided into several sections:

- Content Filter Settings:** A header section with a sub-header 'Content Filter Settings'. Below it, a text box explains the page's purpose. A dropdown menu is set to 'Both 3G and Ethernet WAN Connections', with an 'Apply' button below it.
- Web Content Filter:** A section with a sub-header 'Web Content Filter'. It contains three checkboxes: 'Proxy', 'Java', and 'ActiveX', all of which are currently unchecked. 'Apply' and 'Reset' buttons are located below the checkboxes.
- Web URL Filter Settings:** A section with a sub-header 'Web URL Filter Settings'. It includes a 'Current Web URL Filters:' section showing 'No' filters. Below this are 'Delete' and 'Reset' buttons. An 'Add a URL filter:' section has an empty text input field and 'Add' and 'Reset' buttons.
- Web Host Filter Settings:** A section with a sub-header 'Web Host Filter Settings'. It includes a 'Current Website Host Filters:' section showing 'No' filters. Below this are 'Delete' and 'Reset' buttons. An 'Add a Host(keyword) Filter:' section has a text input field for a 'Keyword' and 'Add' and 'Reset' buttons.

Figure 36 – Advanced View – Content Filtering Settings

OPTION	DEFINITION
Content Filter Settings	Select which connection type the content filtering applies to.
Web Content Filter:	Tick the boxes to enable Proxy, Java or ActiveX content filtering. Click "Apply" to save the settings.
URL Filter:	Block access to a website by entering its full URL address and clicking Add. Rules can be deleted at any time via this page.
Host Filter:	Block access to certain websites by entering a keyword. Rules can be deleted at any time via this page.

Table 27 - Advanced View - Content Filtering Settings

Administration

Start Wizard

If you wish to re-run the initial setup wizard, you can do so by moving the mouse over Administration, and clicking on “Start Wizard”.

Management

This page allows you to configure administrator system settings including the system language, administrator username and password, NTP settings, and DDNS settings.

The screenshot shows the 'Management' settings page. At the top, there is a navigation bar with 'Administration' selected. Below it, the breadcrumb 'Administration > Management' is visible. The main content area is titled 'System Management' and includes an introductory paragraph. It is divided into several sections:

- Language Settings:** A dropdown menu is set to 'EN-English'.
- Administrator Settings:** The 'Account' field contains 'admin'.
- NTP Settings:** 'Current Time' is 'Sat Jan 1 18:01:51 GMT 2000', 'Time Zone' is '(GMT-05:00) Eastern Time', 'Daylight Savings' is 'Enabled', and 'NTP Server' is '0.netcomm.pool.ntp.org'.
- Green AP:** A table with 4 rows, each with a 'Duration' field (all set to 00:00) and an 'Action' dropdown menu (all set to 'Disable').
- DDNS Settings:** 'Dynamic DNS Provider' is 'Custom DDNS server', and 'Custom DDNS server' is 'Custom DDNS server'.

 Each section has 'Apply' and 'Cancel' buttons at the bottom.

Figure 37 - Advanced View - Management Settings

OPTION	DEFINITION
Language Settings	Select which language you would like the management console to utilise
Administrator Settings (account/password):	Configure a new administrator username and password.
NTP Settings:	The NTP (Network Time Protocol) settings allow your router to synchronize its internal clock with the global Internet Time. These settings will affect functions such as System Log entries and Firewall settings.
Green AP:	To provide optional reduction in power usage, you can assign a particular time to reduce the WiFi power output. Please note that a reduction in the WiFi power output can potentially reduce coverage, data throughput speeds, and stability. If you are having problems with your WiFi coverage, stability, or throughput speed, please disable the Green AP functionality.
DDNS Settings:	DDNS (Dynamic Domain Name Service) allows you to map a static domain name to a dynamic IP address. To use this features, you must sign up for an account from a DDNS service provider. This router supports DynDNS, FreeDNS, and other common DDNS service providers. Enter the account details provided by your Dynamic DNS service provider and click Apply.

Table 28 - Advanced View - Management Settings

Click 'Apply' to save the settings.

Status
▶ Internet Settings
▶ Wireless settings
▶ Firewall
▶ Administration

[Administration](#) > [System Monitor](#)

Periodic PING Settings

The periodic PING function will regularly check the internet connection. If the failure count is exceeded, the device will reset the 3G connection. You also can choose Periodic Reboot to reboot the router from this page.

Destination Address	<input type="text"/>
Second Address	<input type="text"/>
Periodic PING Timer	<input type="text"/> (0=disable, 300-65535) secs
Periodic PING Accelerated Timer	<input type="text"/> (0=disable, 60-65535) secs
Fail Count	<input type="text"/> (0=disable, 1-65535) times

Periodic Reboot

Force reboot every	<input type="text"/> (5-65535) mins
--------------------	-------------------------------------

Figure 38 - Advanced View - System Monitor Settings

The Periodic Ping Reset Monitor configures the 3G39W-V to transmit controlled ping packets to user specified IP addresses. If the router does not receive a response to the pings the router will reboot. The purpose of this feature is to ensure recovery of the device if the internet connection disconnects and does not reconnect for some reason.

This feature works as follows:-

- Every "Periodic Ping Timer" value in seconds, the 3G39W-V sends 3 consecutive pings to the "Destination Address".
- If all 3 pings fail the 3G39W-V sends 3 consecutive pings to the "Second Address".
- The 3G39W-V then sends 3 consecutive pings to the "Destination Address" and 3 consecutive pings to the "Second Address" every "Periodic Ping Accelerated Timer" seconds.
- If all accelerated pings in step D fail, the 3G39W-V reboots after waiting the amount of time entered in the "Fail Count" times.
- If any of the pings succeed, the 3G39W-V returns to step A and does not reboot.



Please note: The "Periodic Ping Timer" should never be set to a value less than 60 seconds; this is to allow the 3G39W-V time to reconnect to the cellular network following a reboot.

To disable the Periodic Ping Reset Monitor simply set to "Fail Count" 0

The 3G39W-V can be configured to automatically reboot on a periodic interval specified in minutes. While this is not necessary, it does ensure that in the case of remote installations it will reboot the 3G39W-V if some anomaly occurs.

The default value is 0 which disables the Periodic Reset Timer.

The maximum value is 65535 minutes.

Settings Manager

This page allows you to import/export the system settings, reset your 3G39W-V to factory defaults, or reboot your 3G39W-V.

The screenshot shows a navigation bar with 'Administration' selected. Below it, the 'Settings Management' section contains a description and four main functional areas: 'Export Settings' with an 'Encryption' checkbox and a 'Password' field; 'Import Settings' with a 'Settings file location' field and a 'Browse...' button; 'Load Factory Defaults' with a 'Load Default' button; and 'Reboot Router' with a 'Reboot' button.

Figure 39 - Advanced View - Settings Manager Settings

OPTION	DEFINITION
Export Settings	Select to export the current configuration of the 3G39W-V. You can also encrypt the export settings file by selecting 'Encryption' and then entering a password.
Import Settings	Select the file to import the configuration from.
Load Factory Defaults	Reset the 3G39W-V to factory defaults.
Reboot Router	Reboot the 3G39W-V.

Statistics

This page allows you to view the LAN, WAN and wireless statistics of your 3G39W-V.

Station Statistics	
This page allows you to view the LAN, WAN and wireless statistics of your 3G Router.	
Memory	
Memory total:	29228 kB
Memory left:	1408 kB
WAN/LAN	
WAN Rx packets:	0
WAN Rx bytes:	0
WAN Tx packets:	8164
WAN Tx bytes:	4845844
LAN Rx packets:	11381
LAN Rx bytes:	1145242
LAN Tx packets:	46815
LAN Tx bytes:	20926938
All interfaces	
Name	lo
Rx Packet	6945
Rx Byte	211285
Tx Packet	6945
Tx Byte	211285
Name	gre0
Rx Packet	0
Rx Byte	0
Tx Packet	0
Tx Byte	0
Name	sif0
Rx Packet	0
Rx Byte	0
Tx Packet	0
Tx Byte	0
Name	hso0
Rx Packet	0
Rx Byte	0
Tx Packet	0
Tx Byte	0
Name	eth2
Rx Packet	11391
Rx Byte	1350760
Tx Packet	54969
Tx Byte	25960646
Name	ra0
Rx Packet	3302891
Rx Byte	460879111
Tx Packet	36925
Tx Byte	0
Name	wds0
Rx Packet	0
Rx Byte	0
Tx Packet	-1
Tx Byte	-1
Name	wds1
Rx Packet	0
Rx Byte	0
Tx Packet	-1
Tx Byte	-1
Name	wds2
Rx Packet	0
Rx Byte	0
Tx Packet	-1
Tx Byte	-1
Name	wds3
Rx Packet	0
Rx Byte	0
Tx Packet	-1
Tx Byte	-1
Name	apcli0
Rx Packet	0
Rx Byte	0
Tx Packet	-1
Tx Byte	-1
Name	eth2.1
Rx Packet	11390
Rx Byte	1191234
Tx Packet	46794
Tx Byte	21105934
Name	eth2.2
Rx Packet	0
Rx Byte	0
Tx Packet	8164
Tx Byte	4845844
Name	br0
Rx Packet	11381
Rx Byte	1145242
Tx Packet	46815
Tx Byte	20926938

Figure 40 - Advanced View - System Statistics

System Log

All important system events are logged. You can use this page to check the log of your 3G39W-V for troubleshooting and diagnostic purposes.

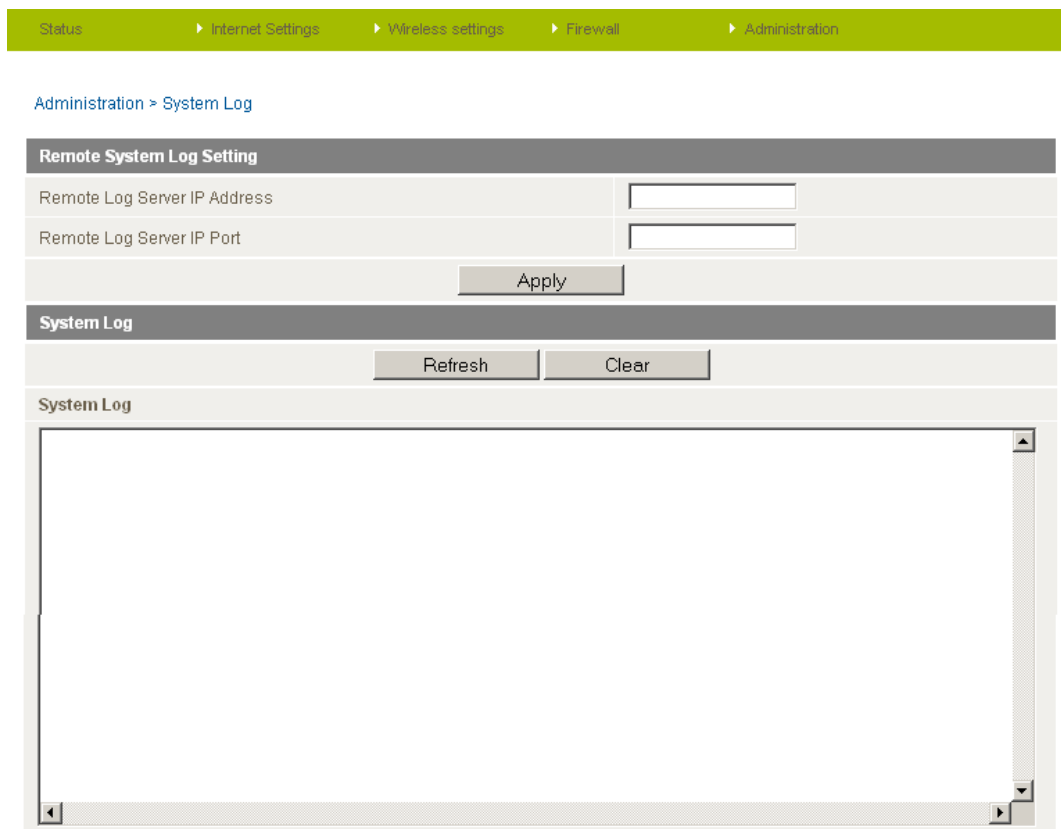


Figure 41 - Advanced View - System Log Settings

OPTION	DEFINITION
Remote Log Server IP Address	Enter the address of a remote syslog server. The syslog contents will be forwarded to this address.
Remote Log Server IP Port	Enter the port the remote syslog server is running on.
System Log	The current contents of the 3G39W-V system log.

Technical Data

The following table lists the hardware specifications of the 3G39W-V.

MODEL	3G39W-V
CPU	Ralink RT3052F
Modem Chipset/Module	EM820U
UMTS bands	Quad-band HSPA+/HSUPA/HSDPA/WCDMA (850/AWS/1900/2100MHz)
GSM bands	Quad-band GSM/GPRS (850/900/1800/1900MHz)
Maximum Data Throughput / 3G Radio Interface	Up to 7.2 Mbps downlink (HSDPA Cat 8) Up to 5.76 Mbps uplink (HSUPA Cat 6) EDGE Multi Slot Class 12 – up to 236 Mbps
Connectivity	3G WWAN x 1, 10/100 Ethernet LAN x 1, 10/100 Ethernet WAN/LAN x 1, WLAN
Antenna connector	SMA (female connector)
LED Indicators	Power, 3G, Wi-Fi, Internet/WAN, LAN
Operating Temperature	0 ~ 50 degrees Celsius (operating temperature)
Power input	12VDC – 1.5A
Dimensions & Weight	133 mm (L) x 137 mm (H) x 34 mm (W) 250 grams
Regulatory Compliance	PTCRB FCC IC ROHS

Table 29 - Technical Specifications for the 3G39W-V

Electrical Specifications

A suitable power supply is available on request or via direct purchase from the NetComm Online shop. It is recommended that the 3G39W-V be powered using the 12VDC/1.5A power supply which is included with the device.

Environmental Specifications / Tolerances

The 3G39W-V makes it able to operate over a wide variety of temperatures from 0°C ~ 50°C (ambient).

FAQ

1. I cannot seem to access the web page interface

The default IP address of the unit is 192.168.20.1, so first try to open a web browser to this address. Also check that your laptop/ PC is on the same subnet as the router's Ethernet port.

2. The router was connected but cannot get back online

You may need to enable the periodic ping timer using the System Monitor Link from the Management Console. This ensures that if the connection drops (i.e outage on the network) that the router will reboot after so many failed pings and then force a re-connect. Set the timer to around 15 mins should be sufficient.



Please note: The traffic generated by the periodic ping feature is counted as chargeable usage, please keep this in mind when selecting how often to ping.

3. Router is rebooting frequently

Check the Modem Link on the web page and see if the Periodic Reset timeout is set to something other than 0. If it is set to 1 this means the unit will reboot every minute regardless of what happens. Reset it to 0 if you don't want this feature or something quite large if you don't want the router to reboot so often.

4. Router has connection but cannot access the internet

Check that DNS Masquerade is enabled by clicking on the LAN link on the configuration interface. Make sure that DHCP DNS server address 1 IP address is set to the same address as that of the Ethernet port.

5. I cannot seem to get a 3G WAN connection

Click on the 3G Internet Settings link on the webpage interface and check that the correct APN settings are entered.

- Also check that the username and password credentials are correct if the APN in use requires these.
- Make sure that Auto Connect is enabled on the PPP Profile Connect section on the Data Connection page.
- Check you have suitable 3G signal strength and that your SIM is active and does not require a PIN code to be entered.

6. The SIM status indicates that the SIM is “not installed or reboot required” on the home page

If a SIM is installed correctly this may indicate that the SIM has been removed or inserted whilst the unit is powered up. In this case you must reboot the unit. The Reset button on the home page will reboot the router.

Appendix A: Tables

Table 1 - Document Revision History	2
Table 2 - LED Indicators.....	6
Table 3 - Rear Panel Ports	6
Table 4 - Device Dimensions.....	7
Table 5 - LAN Management Default Settings	7
Table 6 - WAN Port Default Settings.....	7
Table 7 - Wi-Fi Default Settings	7
Table 8 - Web Interface Default Settings.....	7
Table 9 - Basic View - Internet Settings	14
Table 10 - Basic View - Wi-Fi Settings.....	15
Table 11 - Advanced View - Internet Settings	17
Table 12 - Advanced View - WAN Settings - Static IP	18
Table 13 - Advanced View - WAN Settings - DHCP	19
Table 14 - Advanced View - WAN Settings - PPPoE.....	20
Table 15 - Advanced View - WAN Settings - PPTP	21
Table 16 - Advanced View - WAN Failover Settings	22
Table 17 - Advanced View - LAN Settings.....	23
Table 18 - Advanced View - Wi-Fi Settings	25
Table 19 - Advanced View - Advanced Wi-Fi Settings.....	26
Table 20 - Advanced View - Wi-Fi Security Settings.....	27
Table 21 - Advanced View - Enable or Disable WPS	30
Table 22 - Advanced View - WPS Settings.....	30
Table 23 - Advanced View - Port Filtering Settings.....	32
Table 24 - Advanced View - Port Forwarding Settings	33
Table 25 - Advanced View - DMZ Settings.....	34
Table 26 - Advanced View - System Security Settings.....	34
Table 27 - Advanced View - Content Filtering Settings	35
Table 28 - Advanced View - Management Settings	36
Table 29 - Technical Specifications for the 3G39W-V.....	41

Legal & Regulatory Information

1. Intellectual Property Rights

All intellectual property rights (including copyright and trade mark rights) subsisting in, relating to or arising out of this Manual are owned by and vest in NetComm Limited (ACN 002490486) (**NetComm**) (or its licensors). This Manual does not transfer any right, title or interest in NetComm's (or its licensors') intellectual property rights to you.

You are permitted to use this Manual for the sole purpose of using the NetComm product to which it relates. Otherwise no part of this Manual may be reproduced, stored in a retrieval system or transmitted in any form, by any means, be it electronic, mechanical, recording or otherwise, without the prior written permission of NetComm.

NetComm is a trademark of NetComm. All other trademarks are acknowledged to be the property of their respective owners.

FCC Regulations:

●This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

●This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

●The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

▶ RF Exposure Information

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

●This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

IC Regulations:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

IMPORTANT NOTE:

IC Radiation Exposure Statement:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

The County Code Selection feature is disabled for products marketed in the US/Canada.

For product available in the USA/ Canada markets, only channel 1~11 can be operated. Selection of other channels is not possible.

Contact

Address: NETCOMM LIMITED Head Office
PO Box 1200, Lane Cove NSW 2066 Australia
P: +61(0)2 9424 2070 F: +61(0)2 9424 2010
E: sales@netcomm.com.au
W: www.netcomm.com.au