



OWNER'S MANUAL

Please read and understand all precautions prior to use.

Thank you for choosing a premium New Bright product.

Section 1:	Table of Contents
Section 2:	Component Checklist
Section 3:	Watercraft Features & Functions
Section 4:	Charging the Watercraft
Section 5:	Transmitter Battery Installation
Section 6:	Transmitter Features & Functions
Section 7:	Operating and Caring
Section 8:	Proper Use Precautions & Care
Section 9:	Trouble Shooting
Section 10:	Cautions
Section 11:	Warranty Information


- **(1) Watercraft**
- **(1) Transmitter**
- **(1) USB Charging Cord**
- **(2) AA Batteries**

Features and Functions




ON/OFF Switch

Charging Port

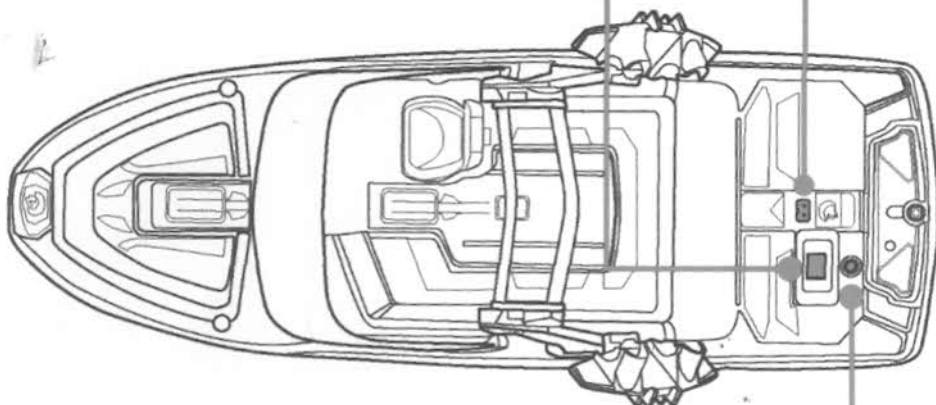

Charge Status Light

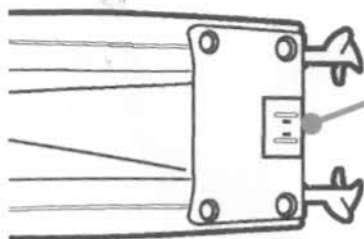

Water Sensor

On the underside of the watercraft there is a water sensor.


This is a safety feature that prevents the propeller from running unless the watercraft is in water.

Watercraft

4

Charging the Watercraft

This Watercraft is equipped with an internal Lithium-Ion battery that is recharged via USB. ON/OFF Switch must be in the OFF position prior to charging.

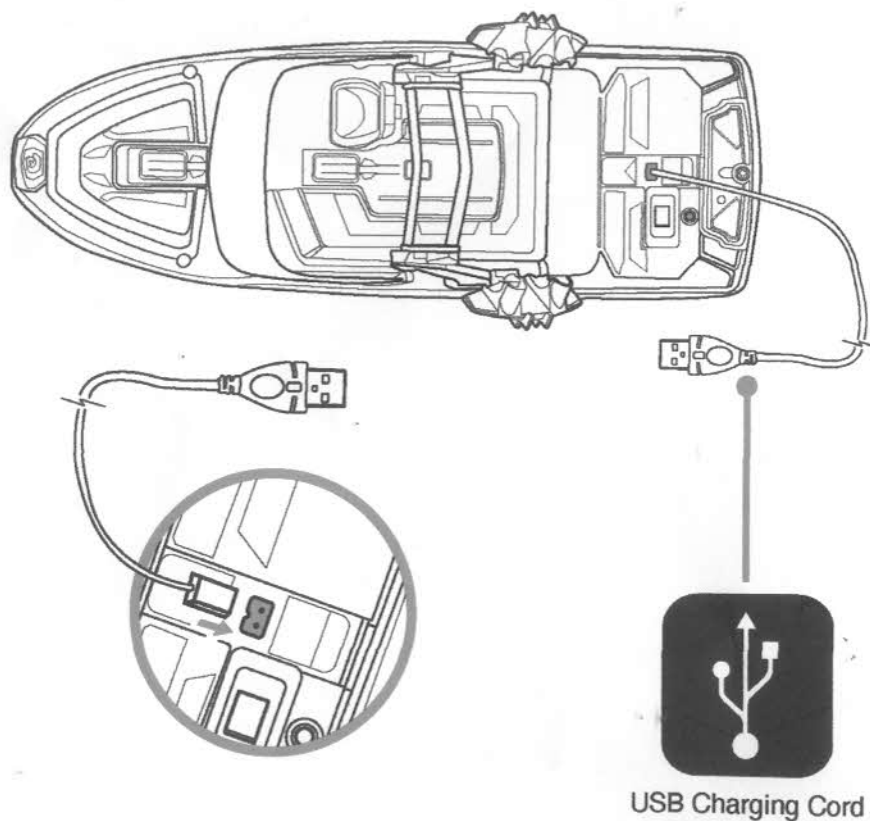

1. Turn Watercraft ON/OFF switch to the OFF position, plug the USB Charging cord into the Watercraft charging via the charging Port.
2. Insert the USB end in to any powered 5V DC USB port.
3. A red charging status light will turn on while charging. The light will turn off when charging is complete. Full charge takes approximately 1 Hour.
4. Unplug cord and store in a safe place when charging is completed.

Transmitter

5


Battery Installation



1. To open battery compartment cover on transmitter, remove the 4 small screws and set aside.




2. Insert 2 "AA" batteries. Make sure the positive (+) and negative (-) markings on the batteries match up to the ones inside the Battery Compartment.

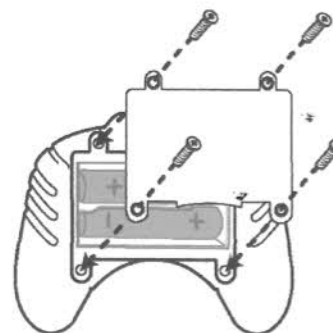

3. Replace and tighten the 4 small screws to secure the battery compartment cover.

Note: When replacing batteries:
Use only Alkaline batteries.
Do not mix old and new batteries.
Do not mix alkaline, standard or rechargeable batteries.

Features and Functions

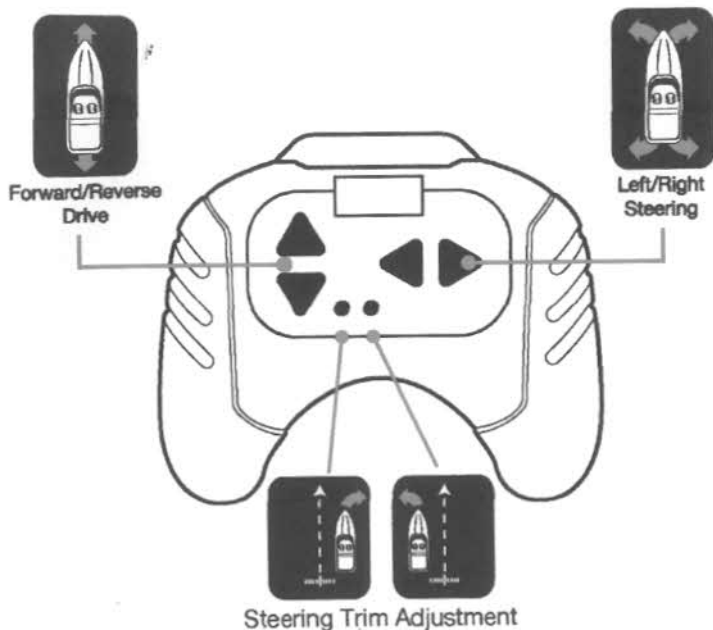

Adjust trim for straight line driving.

To correct watercraft pulling to the RIGHT, press the Left Trim Adjustment button.

To correct watercraft pulling to the LEFT, press the Right Trim Adjustment button.

Correction may require multiple presses.

This transmitter is equipped with 2.4GHz technology which allows up to 6 watercrafts to be raced at the same time.

Before first use and after any time the batteries are replaced, the transmitter must be paired to the watercraft.

To sync transmitter and watercraft, follow the steps below:

1. Correctly install batteries in the transmitter.
2. Make sure watercraft is fully charged.
3. Turn Watercraft ON/OFF switch to the ON position then place in water. The Watercraft is only in sync mode for 30 seconds.
4. Immediately press and hold the Forward/Reverse button on the transmitter. Keep holding until watercraft move (up to 30 sec).

FCC CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Operating and Caring

Radio waves control and drive the watercraft. Any of the following conditions may interfere with the behavior and function. The Transmitter signals can easily be interrupted. Caring for your Transmitter and watercraft is illustrated on these pages.


THIS BOAT IS ENGINEERED TO RUN ON THE WATER'S SURFACE. FULLY SUBMERGING BENEATH WATER WILL DAMAGE INTERNAL ELECTRONICS AND MECHANICAL PARTS.

- Do not operate watercraft where there are water plants, rubbish or other obstacles in the pond. This could damage or impair propeller.
- Do not play where there is strong water current or when there is strong wind blowing.
- Do not play outdoors during thunderstorms.
- Do not touch propeller while it is spinning. This is extremely dangerous.
- When lifting watercraft, be sure to hold the body securely.
- Be sure to bring the watercraft back to shore (out of water) before the battery power runs out.
- Wipe clean with towel after playing.

Caution: Never use chemicals (including benzene, alcohol or thinner to clean).

CAUTION:

The rotating propeller is very dangerous. Never put your fingers close to the propeller when the watercraft is turned ON.

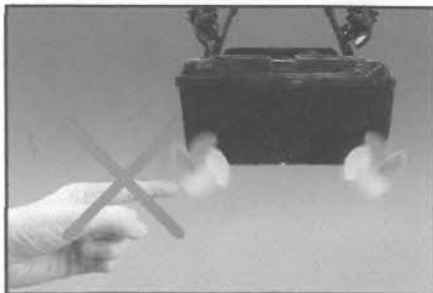

This Radio Control watercraft needs periodic fresh water cleaning and maintenance.

Precautions and Care

Always switch watercraft off when not in use to save battery life.



Brush areas where dirt and dust get trapped.



Wipe body off with a soft rag or cloth.



Do not clean watercraft with chemicals.

KEEP USB CONNECTOR COMPARTMENT DRY

It is possible that water can enter the inside of your watercraft during play. Periodically remove any trapped water from the compartment. This should also be done at the end of each play session.

Drain watercraft periodically and before storing. To drain watercraft, bring watercraft to a dry place, turn watercraft upside down until all water is drained from the hull. Dry watercraft well before putting it away.

After play, always turn watercraft off. Remove 2 "AA" batteries from transmitter when not in use or when storing. Leakage may occur and cause damage if left for a long period of time.

Trouble Shooting

90% of all difficulties experienced with radio controlled watercrafts are due to either weak batteries or batteries that have been installed incorrectly. When batteries become weak, the watercraft may not necessarily stop completely. However, watercraft may exhibit slow response, slow speed or erratic behavior.

Problem - Watercraft does not move, moves slowly or moves sporadically.

- Make certain the water sensor is making contact with water.
- Make certain there are fresh alkaline batteries in the Transmitter and that they have been installed in the correct position. You may need to re-sync the transmitter and watercraft, refer to sync instructions in section 6.
- Are the (+) and (-) markings on the alkaline batteries in the same position as the (+) and (-) markings in the Transmitter Battery Compartment?
- Has the internal battery in the boat been charged?
- Are the metal contact tabs touching, rusty or dirty in the transmitter?
- Make certain that the watercraft ON/OFF switch is in the "ON" position.

Problem- Watercraft exhibits reduced range from the transmitter.

- Make certain there is no outside radio interference in your area. The best way to test this is to take the watercraft as far away from radio towers, electrical lines or tall buildings as possible. If the watercraft operates correctly in the new area, radio interference was the problem.

Cautions

- Do not recharge the Internal Battery if it appears to be damaged or leaking.
- Do not use included USB Cord for anything other than the intended purpose.
- Do not attempt jumps or tricks with this watercraft.
- Always remove Batteries from transmitter when not in use.
- Do not dispose batteries in fire. Leakage, explosion and personal injury may occur.
- Do not attempt to remove internal battery.
- Adult supervision recommended.

F.C.C. CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warranty Information

USA & Canada
30-Day Limited Warranty

New Bright Industries warrants to the original purchaser that this product will be free of defects in materials and workmanship for thirty (30) days from the date of purchase. In the event of such defect within the warranty period, New Bright will repair or replace the product at our sole discretion. This warranty does not cover damage resulting from unauthorized modifications, accident, misuse or abuse.

Should your item have a defect covered under this warranty, first call the toll free number listed below. Most problems can be resolved in this manner. If necessary, you will be issued a Return Authorization number (RA) and instructions on how to obtain a Product Return Form. The Product Return Form is to be used when returning a product to us (postage pre-paid and insured by the consumer).

When returning a defective product, please package the product, the Product Return Form and a copy of the dated sales receipt as proof of purchase. Be sure to mark the RA number on the Product Return Form. If the product is returned without a dated sales receipt, it will be excluded from coverage under this warranty. Please allow 4 to 6 weeks for delivery of repaired or replacement vehicles (depending on your location).

New Bright Industries' liability for defects in materials and workmanship under this warranty shall be limited to repair or replacement at our sole discretion. In no event shall we be responsible for incidental, consequential or contingent damages (except in those states that do not allow this exclusion or limitation).

Valid only in the USA & Canada.

Contact New Bright Industries Customer Service Toll Free at:

1-877-NBI-TOYS

(1-877-624-8697)

Monday through Friday, 8:00 AM to 5:00 PM Eastern Time

U.S. Toy Sales and Marketing Co. Inc.

30260 Oak Creek Drive - 2nd Floor

Wixom MI 48393

1-877-624-8697

<http://www.newbright.com/>