


# JLDP.15.005.501 UserManual

## 1. Electrical configuration diagram:

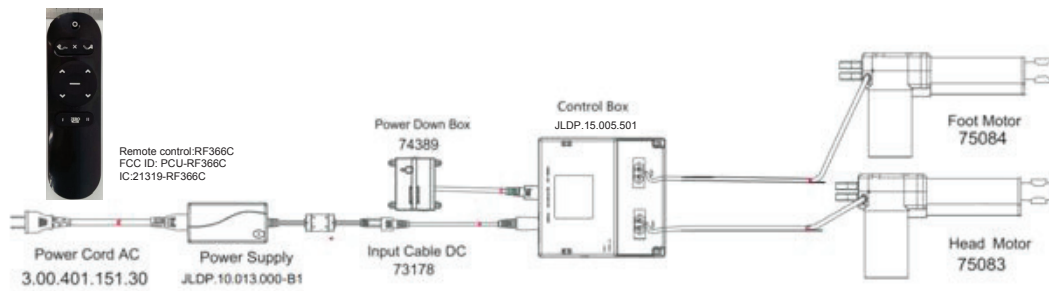

## 2. Function Picture



## 3. Process of test

### 3.1. HEAD port

Connect to head actuator, control by remote single:

Click head up button on the remote, head actuator moves out, stop when released;

Click head down button, head actuator moves in, stop when released;

This function takes effect only by pressing the corresponding button on the remote.

### 3.2. FOOT port

Connect to foot actuator, control by remote single:

Click foot up button, foot actuator moves out, stop when released;

Click foot down button, foot actuator moves in, stop when released;

This function takes effect only by pressing the corresponding button on the remote.


### 3.3. FOOT VIBRATION

Connect to foot massage, control by remote:

Click foot massage + button, foot massage strengthens by one level;

Click foot massage - button, foot massage weakens by one level;

This function takes effect only by pressing the corresponding button on the remote.

 <p><b>OKIN REFINED</b> A Phoenix Mecano Company</p>	Issue department: Bedding Division	Date:	2017-05-03
	<b>ProductFunction instruction</b>	Author:	Kyle
		<b>No:</b>	
	<b>JLDP.15.005.501</b>	Version:	1.1
Page 2 of 4			

### 3.4. HEAD VIBRATION

Connect to head massage, control by remote:

Click head massage + button, head massage strengthens by one level;

Click head massage - button, head massage weakens by one level;

This function takes effect only by pressing the corresponding button on the remote.

### 3.5. MULTIFUNCTION port

Connect with the same other Control box or Other accessories;

### 3.6. Power LED & PAIRING LED

Power supply for control box, PAIRING LED of control box flashes for 4 times, and then turns off, POWER LED turns on.

### 3.7. Power

Connect to the 29V DC;

### 3.8. RESET button

Press and hold the RESET button, the Head, Foot and Lumber actuators will move to lower position.


### 3.9. Pair Function

Double click RESET button, pairing LED turns on, the control box enters into mode of code pairing;

Press and hold the pairing LED of Remote, the backlight of pairing LED flashes, the backlight of remote flashes, the remote enters into mode of code pairing;

The backlight of pairing LED of remote stops flashing, and the pairing LED of control box turns off, it indicates that the code pairing is successful;

If fails, repeat all the processes above;

 <p><b>OKIN REFINED</b> A Phoenix Mecano Company</p>	Issue department: Bedding Division	Date:	2017-05-03
	<b>ProductFunction instruction</b>	Author:	Kyle
		<b>No:</b>	
	<b>JLDP.15.005.501</b>	Version:	1.1
		Page 3 of 4	

### 3.10. Test for underbed light

Click button of underbed light, turns on( or turns off ) the underbed light, switch the status once when click once; This function takes effect only by pressing the corresponding button on the remote.

### 3.11. FLAT function

Press and release the FLAT button on remote, the head and foot actuators moves to lower position(when the actuator is free, can turn off the vibration motor and turn off the indicator light when press once ), stop when press any button;

This function takes effect only by pressing the corresponding button on the remote.

### 3.12. ZERO G position function

Press and release ZERO G button on remote, the head and foot actuator moves to preset memory position, stop when press any button;

This function takes effect only by pressing the corresponding button on the remote.

### 3.13. LOUNGE position function

Press and release LOUNGE on remote, the head and foot actuator moves to preset memory position, stop when press any button;

This function takes effect only by pressing the corresponding button on the remote.

### 3.14. TV position function

Press and release TV on remote, the head and foot actuator moves to preset memory position, stop when press any button;


This function takes effect only by pressing the corresponding button on the remote.

#### FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

	Issue department: Bedding Division	Date:	2017-05-03
	<b>ProductFunction instruction</b>	Author:	Kyle
		<b>No:</b>	
	<b>JLDP.15.005.501</b>	Version:	1.1
Page 4 of 4			

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**ISED RSS Warning:**

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**ISED RF exposure statement:**

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Le rayonnement de la classe b respecte ISED fixaient un environnement non contrôlés. Lanceurs ou ne peuvent pas coexister cette antenne ou capteurs avec d'autres.