Viewing Call Logs

Redial

Outgoing Call Logs

→ Phone Book → Call Log
 → Outgoing Call Logs

Incoming Call Logs



Records appear.



Redial

View Missed Calls

- >Main Menu ► Phone Book ► Call Log ► Incoming Call Logs
 ► Missed Calls
- Unknown Calls appears in Call Log for unchecked calls.

Note

- Newest record appears at top of list. Names appear if saved in Phone Book
- Call Log records remain even if 941P is turned off.
- When the maximum number of records are saved, oldest is deleted first.
- Incoming Call Logs can also be opened from Main Menu
 - ▶ Phone Book ▶ Call Log ▶ Incoming Call Logs ▶ All Calls
- Missed Calls records can be viewed with handset closed (2 P.1-23).

Making Calls from Call Log

- 1 Open Call Logs (☐FLeft)
 - Voice Calls

 Highlight a phone number or name →

 ✓

Video Calls

Highlight a phone number or name → **[V. Call]**

International Calls

Select a phone number or name → [32] [Menu] → Int'l dial assist → Select a country/region →



Functions Available from Call Log

Highlight a call record and press [Menu].

• Available functions vary by selected log/record.

	, ,
Item	Operation/Description
Notify caller ID	Notify or withhold your Caller ID (☐P.2-3)
Prefix	Add a prefix to phone number before dialing
numbers	> Select an entry → <a>
Int'l dial	Add international dialing prefix
assist	> Select a country/region → <a>
Character size	Toggle font size
Add to	Save number to Phone Book (Ľ₹P.4-5)
Phone Book	
Ring time 1	Show ring time (missed calls)
Add shortcut	Create a shortcut (☐ P.1-22)
icon	
Compose	Create S! Mail
S! Mail	(C≢From Step 4 on P.13-4)
Compose	Create SMS
SMS ²	(Ľ ∍ From Step 4 on P.13-7)
Received	Show Received/Sent address log
address/	
Sent address	
Delete this/	> Delete record(s) in selected list
Delete	
selected/ Delete all	
Delete all	

¹ Available only for Incoming Call Logs

Answer Phone

Record up to five voice messages for Voice Calls or up to two for Video Calls (up to 20 seconds per message) on 941P.

- When Answer Phone is active, □ (Voice Call) or □ (Video Call) appears in Standby.
- Unavailable when: handset is off or in Emission OFF Mode; 圏外 appears.
 Use Voice Mail (ピア2-18).

Activating/Canceling Answer Phone

<Default> OFF

- 1 Press and hold 💯
 - To cancel: Press and hold @@@ again



Redirect a Call to Answer Phone

> [Ans. Ph] or **▼**

Note

- Alternatively, activate/cancel from Main Menu ► Tools
 - **▶** Sound Recorders **▶** Answer Phone Setting **▶** ON or OFF
- When full, new messages cannot be recorded even if Answer Phone is activated. Delete old messages.
- While Manner Mode (set for User Mode) is active, Answer Phone setting for User Mode (☐P.18-7) is prioritized.

² Message can be sent to SoftBank handsets only

Playing Messages

When a new message is recorded, Event Indicator appears (☐P.1-21) in Standby.



- Select indicator
- Select a message Playback starts. After playback ends, indicator disappears.

Note

- Alternatively, press in Standby (for Voice Call messages) or Main Menu ➤ Tools ➤ Sound Recorders ➤ Voice Call Data or Video Call Data ➤ Select a recording
- Play Recorded Caller's Voice/Video
- > Main Menu ► Tools ► Sound Recorders ► Voice Call Data or Video Call Data ► Call Data

Answer Phone Functions

From ► Main Menu ► Tools ► Sound Recorders

Select Outgoing Message/Set Ring Time

- > Answer Phone Setting → ON → Select a message → Enter ring time
- When Answer Phone and Optional Service (Voice Mail or Call Forwarding) are both active, function with shorter ring time takes priority.
 For example, if Answer Phone ring time is 18 seconds and Optional Service is 20 seconds, Answer Phone responds first (Priority may change due to signal conditions.).

Delete Recorded Call Data

- > Voice Call Data or Video Call Data → (Highlight an item) →

 [Y] [Menu] → Erase this, Erase rec. msg., Erase Call Data* or

 Erase all → YES
- * Video Call Data only

Optional Services

Overview

• For details, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp).

Call Forwarding (⊈Right)	Forward unanswerable calls to a preset number when handset is off, out-of-range, etc.
Voice Mail (⊈P.2-18)	Unanswered calls are forwarded to Voice Mai Center as set or when handset is off, out-of- range, engaged, etc. • Missed Call Notification (\$\sigma_P\$.2-19)
Call Waiting* (⊈P.2-20)	Place the current call on hold and answer a second, or alternate between calls.
Call Barring (₾P.2-20)	Restrict calls by condition. While Call Forwarding or Voice Mail Service is active, <i>Bar All Outgoing</i> and <i>Bar All Incoming</i> are not available (Call Forwarding or Voice Mail Service is prioritized.).
Caller ID (⊈P.2-21)	Show or hide your number when calling.

^{*} Separate subscription required.

Call Forwarding

- Call Forwarding and Voice Mail cannot be set simultaneously.
- When forwarding Video Calls, set a destination phone that supports 3G-324M standard video calls. If not, Video Calls are not forwarded.

Activating Call Forwarding

Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding ► Call Forwarding ON

- Select a type
- **7** Enter a destination phone number
 - 🔲 to select number from Phone Book.
- 3 Select an item (See below)

Item	Operation/Description	
Ringer ON	Forward missed calls	
	> Select a ring time → YES	
Ringer OFF	Forward all calls without ringing/vibrating	
	> YES	

Check Call Forwarding Status

> Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding
► Get Status

> Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding
► Deactivate All ► YFS

Note

- Toll free numbers and international call numbers cannot be saved as a destination number
- When using Call Forwarding together with Answer Phone, the function with shorter ring time takes priority (Priority may change due to signal conditions.).
- When *Ringer ON* is set, following operations are available while 941P is ringing (within ring time):
 - · To answer call:
 - · To forward call: [\$\forall Porwarding] → Call Forwarding

Voice Mail

- Calls are forwarded to Voice Mail Center via Call Forwarding function;
 Call Forwarding and Voice Mail cannot be set simultaneously.
- Voice Mail is not available for Video Calls.

Activating Voice Mail

Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding ► Voice Mail ON

1 Select an item (See below)

Item	Operation/Description		
Ringer ON	Forward missed calls > Select a ring time → YES		
Ringer OFF	Forward all calls without ringing/vibrating > YES		

Check Voice Mail Status

- > Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding ► Get Status
- Cancel Voice Mail
- > Main Menu ▶ Settings ▶ Call Settings ▶ Voice Mail/Call Fwding
 ▶ Deactivate All ▶ YFS

Call

Note

- When using Voice Mail together with Answer Phone, the function with shorter ring time takes priority (Priority may change due to signal conditions.).
- When Ringer ON is set, following operations are available while 941P is ringing (within ring time):
 - · To answer call:
 - · To forward call: [Y/][Menu] → Call Forwarding

Checking Voice Mail Messages

Event Indicator (P.1-21) and appear in Standby when new messages are recorded.

↑ Select indicator → YES

Follow voice guidance.

Indicator and disappear after messages are checked.



View Details

View callers' phone numbers and date/time Voice Mail messages were left before playing messages.

- Activate *Missed Call Notification* beforehand.
- > D → Voice Mail Notif. → D [中1416]
- Delete 🛱 Indicator
- > Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding
 - ► Delete Voice Mail Icon ► YES

Note

- Alternatively, follow these steps to check Voice Mail:
 Main Menu ➤ Settings ➤ Call Settings
 - ► Voice Mail/Call Fwding ► Listen to Voice Mail ► YES

Missed Call Notification

When Missed Call Notification function is active, Event Indicator appears for calls missed while 941P was off, out-of range, engaged etc.

• Available only when Voice Mail is active.

Main Menu ► Settings ► Call Settings ► Missed Call Notifi.

1 YES

941P connects to the Network.

• Follow voice guidance.

When Calls are Received while Missed Call Notification is Active...

Event Indicator appears for missed calls when 941P is turned on or comes into range. Select indicator to view Missed Calls.

 Voice mail indicator appears when Voice Mail messages are recorded (☐FLeft).



Call Waiting

Activating/Canceling Call Waiting

Main Menu ▶ Settings ▶ Call Settings ▶ Call Waiting

1 Activate or Deactivate → YES

Current status appears.

Check Call Waiting Status

> Main Menu ► Settings ► Call Settings ► Call Waiting
► Get Status

Answering Second Call

- 1 When tone sounds,
 - To alternate between calls.
 - to disconnect active call.
 - When the party hangs up, active call ends.
 - To re-engage the party on hold.
 - When a second call comes in while first call is on hold, hold status is canceled and first call resumes.

Reject Second Call

> When tone sounds, [∑r][Menu] → Call Rejection

Note

- When Voice Mail or Call Forwarding is set to *Ringer ON* while Call
 Waiting is active, unanswered calls are transferred to Voice Mail Center
 or the forwarding number.
- When Voice Mail or Call Forwarding is set to Ringer OFF, Call Waiting is disabled

Call Barring

• Security Code is required (⊈P.1-28).

Activating/Deactivating Call Barring

Main Menu ► Settings ► Call Settings ► Call Barring

1 Select an item (See below)

Item	Operation/Description		
Bar All Outgoing	Restrict all non-emergency calls		
Bar All Int'l	Allow only domestic calls		
Bar Int'l	Restrict all international calls except to Japan		
Bar All Incoming	Reject all calls		
Bar All Roaming	Reject calls when outside Japan		

- Activate or Deactivate → YES
- **3** Enter Security Code

Check Call Barring Status

> After Step 1, Get Status

Cancel All Call Barring

> In Step 1, *Cancel All Barring* → Enter Security Code

Change Security Code

>In Step 1, Set Security Code → Enter current Security Code → Enter new Security Code → Reenter Security Code

Note

- Emergency numbers (110, 119, 118) are dialable even while Call Barring for outgoing calls is active.
- If call is attempted when Call Barring is active, warning message appears. It may take longer to appear in some areas. Check Call Barring settings if the message does not appear.

Caller ID

<Default> Network Set


Main Menu ➤ Settings ➤ Call Settings ➤ Show My Number ➤ Activate

- **1** ON, OFF or Network Set
 - Network Set Caller ID setting varies by subscription.
- Check Caller ID Status
- > Main Menu \blacktriangleright Settings \blacktriangleright Call Settings \blacktriangleright Show My Number
 - Check Setting

Note

 Alternatively, enter these numbers/symbols before the phone number to show or hide Caller ID:

Show: 1 8 6 or * 3 1 # Hide: 1 8 4 or # 3 1 #





3

Text Entry

Text Entry	3-2
Entering Text	
Entering Characters	3-3
Pictographs & Symbols	3-4
Templates	3-5
Additional Features	
Conversion Methods (Japanese)	3-6
Predictive Conversion	
Converting Hiragana to Katakana/Alphanumerics	3-7
Conversion	3-8
Editing Text	3-9
Deleting & Replacing	
Copy/Cut/Paste	3-9
User's Dictionary	
Saving User's Dictionary Entries	
Download Dictionary	
Activating Downloaded Dictionaries	

Text Entry

Enter alphanumerics, hiragana, kanji, katakana, symbols and pictographs.

• Three types of character input methods are available: Mode 1 (5-touch), Mode 2 (2-touch), Mode 3 (NIKO-touch) In this guide, examples are described in Mode 1 (5-touch).

Mode 2 (2-touch)/Mode 3 (NIKO-touch)


Press two numeric keys to enter a character.

• List of Key Assignments (2 P.19-15 to 17)

Help

Help describes text entry operations.

> In text entry window, [Y][Menu] → Help → Select an item

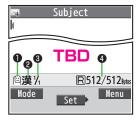

	-
Character Input Methods	Operations
2: Mode 2 (2-touch)	Press and hold
🕮: Mode 3 (NIKO-touch)	[Mode]
No icon appears for Mode 1 (5-touch).	
② Input Modes*	Operations
abc: Alphanumerics	☑[Mode]
123: Numbers	
漢: Kanji (hiragana)	
カナ: Katakana	
Double-byte/Single-byte*	Operations
1/1: Double-byte	[Menu] →
1/2: Single-byte	2bytes character
	(1byte character)
Remaining/Maximum Bytes in Message	

^{*} Operations in Mode 3 (NIKO-touch): 2 P.19-17

Entering Text

Entering Characters

Example: Enter 鈴木

In alphanumerics mode, ☑ twice to switch to kanji (hiragana) mode



ਰ: (3) three times

 \vec{g} : $\mathbf{Q}^* \rightarrow \mathbf{3}$ three times $\rightarrow \mathbf{X}$

き: (2) twice

* When the next character is on the same key, press of first to move cursor.

- (a) to enter Predictive Candidates List
 - To change word before converting, press
 - There are four types of word suggestion lists: **Predictive Candidates**, Conversion Candidates. Context Forecast and abc/123/Kana Candidates (**⊈** P.3-6)



to select 鈴木

Other Input Functions

Enter katakana/	Press [Mode] several times to select	
alphanumerics	an input mode → Enter characters	
Enter small kana (つ, ッ, etc.)	Enter a character → to convert to small character • Alternatively, press a key repeatedly to enter an assigned small kana.	
Enter upper case characters	Enter a character → Alternatively, press a key repeatedly to enter an assigned upper case character.	
Add *or *	Enter a character to add "or " → ※ for "or ※ twice for " In single-byte katakana mode, "and " are entered as a single-byte character.	
Insert line break	Press [Line FD] to insert line breaks in text	
Insert space at end of text		
Insert space within text	Press # repeatedly until single-byte space appears*, or ☑/[Menu] → Pictograms/symbols → Space to enter a space (Double-byte (single-byte) space is entered in 2 bytes (1 byte) input mode.)	
Toggle characters in reverse order	(a) [Rev] Example: From c, press to toggle as follows: $c \rightarrow b \rightarrow a \rightarrow 2$	
Move cursor to beginning/ end of sentence	© [Menu] → Jump → To beginning or To end	
Undo	[[Undo]	

^{*} Space cannot be entered within text in number mode by following the steps above. Use symbol list.

Pictographs & Symbols

 Pictographs do not appear in messages sent to incompatible SoftBank handsets or e-mail.

Pictographs

In kanji (hiragana)/katakana/alphanumerics mode, **SoftBank pictograph list appears.

Symbols

Press and hold #
Single-byte symbol list appears.

2 to select a pictograph or symbol

● Symbol List: 🗁 P. 19-18

Note

• List Log may appear first.

Entering Cross-carrier Pictographs

Press or o to toggle lists (Universal pictograph list, Log, Full pictograph list and My Pictograms).

Functions Available in Pictograph/Symbol List

Tunctions Available in Tictograph/3ymbol List			
Enter same pictograph or symbol again	⊠[Cont.]		
Toggle pictograph/symbol list	[Yz][Pict./Symbol]		
Jump to previous/next page	A/V		
Toggle full screen/standard screen			
Toggle double/single-byte symbol and log [symbol list only]	[1byte/2bytes/Log]		
Toggle pictograph lists [pictograph list only]	© [Univrsl. ¹/Full/My Pict. ²/ NxtMyPic ²/Log] • ★ to toggle in reverse		
Close list	(UPIO)		

¹ In S! Mail Subject/Text/Signature field or Subject field for Auto-sort Setting only

² In S! Mail Text field only

Templates

Insert templates (greetings, URLs, emoticons) or edit preinstalled templates.

Inserting Templates

- In text entry window, press and hold *
 - Not available in number mode.
- Select a category → Select a template

Note

 Alternatively, in a text entry window, ∑? [Menu] → Input assistance → Templates to enter a template

Editing Templates

Main Menu ► Tools ► Templates/Users Dic. ► Templates

- Select a category
- Highlight a template $\rightarrow (\boxtimes)[Edit] \rightarrow Edit$ template
- Reset Edited Templates
- > After Step 1, (highlight a template →) [Y7] [Menu] → Reset this or **Reset all** (→ For **Reset all**, enter Phone Password) → **YES**

Manage Template Folders

- > In Step 1, highlight a category → [Menu] → Edit folder name → Edit folder name
- To reset folder name, Y/ [Menu] → Reset name → YES

Additional Features

- In text entry window, [Y] [Menu] \rightarrow Input assistance
- Select an item (See below)

Item	Operation/Description		
Kuten Code	Enter a character code (☐ P.19-19) ➤ Enter a character code (4 digits)		
Input date/ time	Select a style to enter date/time > Select a display style → Enter date/time		
Quote phone book	Quote Phone Book entry detail > Select an entry → Check item(s) to quote → [Finish]		
Quote accnt detls	Quote Account Details >Enter Phone Password → Check item(s) to quote → [Finish]		
Bar code reader	Activate Bar Code Reader to insert scanned result (13-P.12-11)		

Conversion Methods (Japanese)

Predictive Conversion

The following suggestion lists appear while entering text or after a word is fixed.

While Entering Text	Predictive Candidates	Lists likely conversions (Predictive Candidates) and matching conversions (Conversion Candidates) Predictive Candidates わ → 私, わたし, etc. Conversion Candidates わ → 和, 輪, etc.	
	Conversion Candidates		
	abc/123/ Kana Candidates	Lists alphanumerics/katakana assigned to key (19.3-7)	
After a Word is Fixed	Context Forecast	Suggests words likely to follow Example: 私 is fixed → です, の, は, etc.	

- Predictions change with each letter entered.
- Press [Pred.]/[Conv.] to toggle Predictive Candidates List and Conversion Candidates List.

Note

• 941P learns entered characters and suggests them for future conversions (△→P.3-8).

Example: Enter 私の鼻

- 1 In kanji (hiragana) mode, ○

 ⇒ is entered and Predictive Candidates List appears.



- 3 \bigcirc to move to Context Forecast List \rightarrow \bigcirc to select \bigcirc
 - \mathcal{O} is entered and Context Forecast List appears.
- 4 6 → 5 はな is entered and Predictive Candidates List appears.
- 5 🖾 [Conv.]

Conversion Candidates List appears.



to move to Conversion Candidates List $\rightarrow \bigcirc$ to select



If the Word is Not Listed

Press return to hiragana, and segment hiragana to convert separately.

Example: Segment はるか into はる and か, then convert to 春香

- ① Move cursor to る, then convert はる to 春 → ●
- ② Convert か to 香 → ●

Using Previously Entered Words

Enter the first one or two hiragana to access previously entered words in the list.

Converting Hiragana to Katakana/ **Alphanumerics**

Enter katakana and alphanumerics in kanji (hiragana) mode. Date and time can be entered quickly.

Example 1: Enter OK

Step	1	2	3	4
Key	(3 times)	(twice)	🛂 [a1Kana]	
Display	ßı	ふに	abc/123/Kana Candidates	ОК

• Press (•) after highlighting **OK**.

Example 2: Enter 10:30 or 10/30

Step	1	2	3
Key	1030	🛂 [a1Kana]	X
Display	あわさわ	abc/123/Kana Candidates	10:30 or 10/30

• Press • after highlighting 10:30 or 10/30.

Conversion

Viewing Learned Words

- 1 In text entry window, [Menu] → Text entry setting → Learned words
- **?** Select a row → Select a log
- Delete Learned Words
- > In Step 2, (highlight a log →) [[Menu] → Delete this or Delete all (→ For Delete all, enter Phone Password) → YES



- Set Learning Feature Off for Secret Mode/Secret Data Only
- Delete All Learned Words (ピーア.18-10)

Activating/Canceling Prediction List

<Default> ON

- 1 In text entry window, **∑** [Menu] → Text entry setting
- Select an item (See below)

Item	Operation/Description	
Predict	Activate/cancel Predictive Candidates and Context Forecast lists.	
Candidate display	Activate/cancel Context Forecast list.	
2/NIKO-touch guide	Activate/cancel Conversion Candidates guidance for 2/NIKO-touch input method.	

3 ON or OFF

Fixing Entered Characters Automatically

<Default> OFF

Fix character in Mode 1 (5-touch) automatically after specified time elapses.

- 1 In text entry window, **∑** [Menu] → Text entry setting
- **Character set time** → Select a speed

Editing Text

Deleting & Replacing

1 Delete Characters within Lines

Place cursor before a character → @U7/IB

A character after cursor is deleted.

• Press and hold we to delete all characters after cursor.

Delete Characters from the End of Text

Place cursor at the end of text → @UP/B

A character before cursor is deleted.

- Press and hold @ to delete all characters before cursor.
- **2** Enter another character

Copy/Cut/Paste

Copy/cut text (up to 5000 double-byte/10000 single-byte) and paste to another place.

- 1 In text entry window, [Y] [Menu] \rightarrow Copy or Cut
- 2 Select Text to Copy/Cut
 Place cursor before (or after) text to select →

[Start] → Place cursor after (or before) text →

[End]

Select All

 \mathbf{Y} [All] $\rightarrow \mathbf{O}$ [End]

Place cursor at target location → [Y] [Menu] → Paste

User's Dictionary

Save frequently used words/phrases (up to 100 entries). Saved words/phrases appear among word suggestions.

Saving User's Dictionary Entries

- 1 In text entry window, ∑?[Menu] →

 Text entry setting → User's Dictionary
- 2 <New>
- **3** Enter a word → Enter reading
- Edit User's Dictionary Entries
- > After Step 1, highlight a word → [Edit] → Edit word → Edit reading
- Delete User's Dictionary Entries
- > After Step 1, **[Menu]** → **Delete** → **Delete this** or **Delete all**. (→ For **Delete all**. enter Phone Password) → **YES**

Note

- Alternatively, Main Menu ► Tools ► Templates/Users Dic.
 - User's Dictionary

Download Dictionary

Download dictionaries from P-egg, a download site for 941P users (see below). Activate downloaded dictionaries to add character conversions to conversion suggestions (Japanese).

● P-egg (as of May 2009) Yahoo! Keitai top page → メニューリスト → 辞書・ツール → ケータイメーカー → P-egg

Activating Downloaded Dictionaries

Main Menu ► Tools ► Templates/Users Dic.

Download Dictionary

- Select a dictionary
 - ★ appears next to active dictionary.
 - To cancel: follow the same step
- Change Title
- > In Step 1, highlight a dictionary → [Y] [Menu] → Edit title → Edit
- View Details
- > In Step 1, highlight a dictionary → [Yz][Menu] → Dictionary info
- Delete Dictionaries
- >In Step 1, (highlight a dictionary) → [Menu] → Delete this or Delete all (→ For Delete all, enter Phone Password) → YES

Phone Book

Overview	
Saving to Phone Book	4-3
Phone Book Entry Items	
Create New Entry	4-3
Other Ways to Add New Entries	
Setting Groups	4-6
Searching/Using Phone Book	4-6
Making Calls from Phone Book	
Using Phone Book	4-7
Managing Phone Book	4-9
Editing Phone Book Entries	
Deleting Phone Book Entries	4-9
Copying/Deleting Phone Book Data	4-9
Phone Book Memory Status	4-10
S! Addressbook Back-up	4-10
Manual Synchronization	
Auto Synchronization	4-12
Viewing Sync Log	4-12
Account Details	4-13
Editing Account Details	4-13
Account Details Functions	4-13
Voice Dial	4-14
Adding Entries to Voice Dial	4-14
Searching Entries by Voice Dial	4-14


4


Overview

Save frequently used phone numbers and mail addresses to Phone Book.

Supplement phone numbers and mail addresses with birthday, street address, an image or notes.



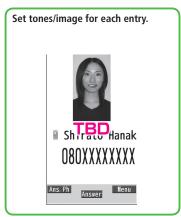

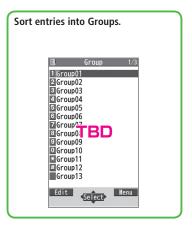

Note

• Back-up Important Information

Keep a separate copy of Phone Book entry information. When battery is exhausted or removed for extended periods, entries may be lost. Handset damage may also affect data recovery. SoftBank is not liable for damages from lost/altered entries.

Tip

- ●Phone Book Memory Status (ピラP.4-10)
- ●Backing up to microSD Card (ピラP.9-19)

Saving to Phone Book

Phone Book Entry Items

Save up to 1000 entries in Phone Book. Save phone numbers or mail addresses etc. in USIM Card Phone Book.

• Up to 50 entries can be saved to USIM Card Phone Book.

	Phone Book Entry Items	941P	USIM Card	
Bas	Name (Reading)	0	0	
Basic item	Group	19	10	
em	Phone number	4	2	
	Mail address	3	1	
	Address	0	_	
	Location information	0	_	
	Birthday	0	_	
	Memo	0	_	
	Image	100	_	
	Memory number	000 - 999	_	
Inco	Ringtone			
ĬĬ.	Vibrator			
Incoming Settings	Notification Light			
ett.	Screen			
ngs	Msg Ringtone		_	
	Msg Vibrator			
	Msg Notif. Light			
	Answer message			

○: Can be saved —: Cannot be saved

 Phone Book entries in USIM Card can also be used in another SoftBank handset.

Create New Entry

Save new entries to 941P or USIM Card Phone Book.

- When saving to USIM Card Phone Book, set Save Settings to USIM or Ask Every Time beforehand (€ 18-11).
- 1 Press and hold 🔎
- 2 Enter Last name →
 Enter First name
 - For 941P Phone Book, to switch Basic item and Incoming Settings tabs.



941P Phone Book

3 Select an item (See below)

Item	Operation/Description
Name	Save first and last names separately. For USIM Card, enter
(First/Last)	both names together
	> Enter name
Reading	Save first and last name readings separately. For USIM
(First/Last)	Card, enter both readings together
	> Enter reading
Group	> Select a group
Phone number	> Enter phone number (→ For 941P, select an icon)
Mail address	> Enter mail address (→ For 941P, select an icon)
	 Save only phone number if mail address is "phone
	number@softbank.ne.jp".
Address	> Enter zip code → Enter address
Location	Identify handset location and save information. Also, save
information	location record selected from location logs
	> Select an item
	 By position loc. → YES → Check information →
	[Set]
	(To show information while positioning: When [Use]
	appears at lower right of display, press [Y][OK]. To
	retry positioning: [Retry]
	 From loc. history → Select a location record to
	save
Birthday	> Enter birthday
Memo	> Enter memo
	- Enter memo

Item	Operation/Description
Image	Save a still image to appear for incoming calls > Select an item • Select image → Select a folder → Select a file • Shoot image → Frame subject → • [Record]/ • (•) → • [Save]/ • (•) • Saved still image appears for an incoming call only when Phone Book Image (♣ P.18-7) is ON. If there is an image saved for Screen, the image preferentially appears.
Memory number	> Enter memory number
Ring tone	> Ring Tones → Select a type → Select a folder → Select a ringtone
Vibrator	> Select vibrator → Select a pattern
Notification Light	> Select illumination → Select a pattern
Screen*	> SEL picture → Select a screen type → Select a folder → Select an image • Still image saved for Screen appears for an incoming call whether Phone Book Image is ON or OFF. Phone Book Image setting applies only when still image is saved for Image.
Msg Ringtone	> Ring Tones → Select a type → Select a folder → Select a ringtone
Msg Vibrator	> Select vibrator → Select a pattern
Msg Notif. Light	> Select illumination → Select a pattern
Answer message	> Select answer message → Select a message

^{*} To cancel: Select *RLS picture*

Other Ways to Add New Entries

Save currently displayed phone numbers, mail addresses, still images or location information to Phone Book. Example: Saving Numbers from Incoming Call Logs

- \triangleright \rightarrow Highlight a record \rightarrow \bigcirc [Menu] \rightarrow Add to Phone Book
- **New Entry New** → Enter details (☐From Step 3 on P.4-4)

Add to Existing Entry

Add → Select entry → Enter other details (**⊈**Step 3 on P.4-4)

- When saving to USIM Card, *Overwrite* appears instead of *Add*.
- When complete, \square [Finish] \rightarrow YES

Note

- Press [Y] [Menu] from a function. If *Add to Phone Book* appears, the information is savable to Phone Book. From a text message window, select *Add Address* to save entries; from still image list/still image, select **Set display** → **Phone Book** to save entries.
- When adding still images or location information, entries are saved to handset regardless of Save Settings.
- When saving new entries in Secret Mode or Secret Data Only, entries are saved to handset regardless of Save Settings.

Setting Groups

Sort entries by Group. Custom set ringtones/vibrators/ notifications per group.

Main Menu ▶ Phone Book ▶ Group

- appears for USIM Card Group.
- Highlight a group $\rightarrow \square$ [Edit] \rightarrow Select an item \rightarrow Set item
 - Enter group name for " Group name."
 - For other item operations: 2 P.4-4 Custom settings unavailable for USIM Card Groups.
- When complete, ☑ [Finish]
- Check Settings
- > Select a group entry, or [Yr] [Menu] → Check setting
- Settings cannot be checked in USIM Card Group Phone Book.
- Reset Group Setting
- > Highlight a group → [Yr][Menu] → Reset group → YES

Searching/Using Phone Book

Making Calls from Phone Book

<Default> A-KA-SA-TA-NA

- Search Phone Book (See below)
 - To change search method: → Select a search method (See helow)

(see per	JVV)
Search Method	Operation/Description
A-KA-SA-TA-	Search entries by katakana syllabary. Names saved in
NA	Roman characters are saved under the 英 tab.
Reading	> Enter partial reading → □
Group	> Select a group
Memory	Enter memory (entry) number to search for an entry
Number*	> Enter a memory number
Name	> Enter partial name → 🔟
Phone	> Enter partial phone number → □
Number	· · · —
Mail Address	> Enter partial mail address → □
2-touch Dial*	Show entries with memory (entry) numbers 000 - 009

^{* 941}P Phone Book only

- Select an entry

Highlight a phone number → <a>

Video Calls

Highlight a phone number $\rightarrow \square$ [V. Call]

Note

- To scroll through entries, enter nothing and press (not available in Group or 2-touch Dial).
- If no matches are found in *Reading* or *Memory Number* method, entries closest to condition appear.
- Once a method is selected, same method retains.

Additional Search/Dialing Methods

Open Tab Assigned to Key from Standby	Press and hold ① – ⑨ Open search window assigned to key.
Enter Partial Number from Standby or during Call	Enter partial number → 🔟
By Memory Number	
By Single-digit Memory Number (2-touch Dial)	Enter last digit (\bigcirc – \bigcirc) of memory number 000-009 \rightarrow Voice Call: \bigcirc / Video Call: \bigcirc [V. Call]

Using Phone Book

Use Phone Book Entries

(See below)

Item	Operation/Description
New	Add a new entry (☐From Step 2 on P.4-3)
Sort	Change display order > Select an order ■ Available only when search method (△→P.4-6) is Name, Phone Number or Mail Address.
Send Ir data*	(Ľ ℱ P.10-3)
IC transmission*	(⊆ F.10-5)
Send to Bluetooth*	(□ P.10-9)
Copy to microSD*	Copy an entry to microSD Card > YES
	 To display copied data: ☐ P.9-18
Delete phone book	> Select an item → Follow steps for selected option ((全)P.4-9)
Character size	Switch character size to large/standard
Set secret mode/ Release secret*	Set/cancel Secret Mode for selected entry ■ Entries saved as secret data appear only when Secret Mode or Secret Data Only is active (⑤P.11-9).

^{*} Not available in USIM Card Phone Book

■ Use Entry Details $> \square$ → Select an entry → \bigcirc [Menu] → Select an item (See below)

>	an entry → [Menu] → Select an Item (See below)
Item	Operation/Description
Notify caller ID	Show/hide caller ID (⊈P.2-3)
Prefix numbers	Make a call using a prefix number (☐ P.2-3)
Int'l dial assist	Set International dial assist (☐FP.2-10)
Restrictions*	Activate restrictions on specified entry (13-11-10)
Edit Phone Book	Edit entry (☐From Step 3 on P.4-4)
Delete phone book	> Phone number or Delete this → YES • Item names vary by selected item: Mail address/Address/Location info/Birthday/ Memo/Image
Add shortcut icon	Create a shortcut (1 P.1-22)
Compose S! Mail	Create a message to mail address of selected entry (☐From Step 4 on P.13-4)
Compose SMS	Create an SMS message to phone number of selected entry (From Step 4 on P.13-7) Message can be sent to SoftBank handsets only.
Send Ir data*	(□ F.10-3)
IC transmission*	(/ →P.10-5)
Send to Bluetooth*	(□ P.10-9)

Item	Operation/Description
Copy to	Copy an entry to microSD Card
microSD*	> YES
	 To display copied data:
Copy names	Copy a name
Copy phone	Copy an item
numbers	 Item names vary by selected item.
	Copy mail add. Copy address Copy location info
	Copy birthday/Copy memo
Character	Switch character size to large/standard
size	-
Set secret	Set/cancel Secret Mode for selected entry
mode/	 Entries saved as secret data appear only when
Release	Secret Mode or Secret Data Only is active
secret*	(□ F.11-9).
Copy to USIM/	Copy an entry to USIM Card
Copy from	> YES
USIM	

^{*} Not available in USIM Card Phone Book

Note

Managing Phone Book

Editing Phone Book Entries

- 2 Edit (☐From Step 3 on P.4-4) → YES

Deleting Phone Book Entries

- Select an item (See below)

Item	Operation/Description
Delete this	> YES
Delete select	 Check entries to delete → ☑ [Finish] → YES ☑ [Menu] → Select all in tab*, Select all, Release all in tab* or Release all to check/uncheck all entries at a time
Delete all in tab*	> YES
Delete all	Delete all entries (941P/USIM Card Phone Book) including Secret Mode entries > Enter Phone Password → YES → YES

Copying/Deleting Phone Book Data

Main Menu ▶ Phone Book ▶ Memory Manager

- 1 Enter Phone Password
- Select an item (See below)

Item	Operation/Description
Сору	Copy data between 941P/USIM Card Phone Book > Copy to USIM or Copy from USIM
Delete	Delete data in 941P/USIM Card Phone Book > Phone or USIM

- **?** *Phone Book* → Select an entry*
 - * To clear, repeat operation.
- \checkmark [Finish] → YES

Phone Book Memory Status

Main Menu ▶ Phone Book ▶ Memory Status

View 941P/USIM Card Phone Book memory status.

S! Addressbook Back-up

Back up Phone Book entries to S! Addressbook (network server); synchronize 941P Phone Book with S! Addressbook; restore Phone Book after accidental loss/alteration.

Separate subscription is required for this service.

Notes

- Fully charge battery beforehand (appears).
- Transmission fees apply to synchronization, backup and restoration.
- Restoration cancels these Phone Book settings: Ringtone, Vibrator, Notification Light, Picture, Answer message.
- Subscription to the service activates Auto Sync Settings during network information retrieval to back up edited Phone Book entries. Note that initiating network information retrieval activates Auto Sync Settings even when Auto Sync Settings are *OFF*. When contract is terminated, check if Auto Sync Settings are *OFF* (2)-2.12).
- S! Addressbook is deleted upon contract termination.
- Addresses saved in Address field on 941P Phone Book are saved to building name field in S! Addressbook.
- When number of characters saved in S! Addressbook exceeds maximum number of characters savable on 941P Phone Book, excess characters do not appear on 941P Phone Book.

Synchronization/Back-up/Restoration

- Be careful of back-up/restoration timing or selecting a synchronization direction.
- When no 941P Phone Book entries exist, selecting Synchronize, Sync from Phone or Backup to Server deletes S! Addressbook.
- When no S! Addressbook entries exist, selecting Synchronize, Sync from Server or Restore from Server deletes all 941P Phone Book entries.

Capacity Disparities

 When the number of savable items varies between 941P Phone Book and S! Addressbook, synchronization reflects lower limit.

Transfer to New Handsets

- S! Addressbook Back-up-compatible 3G Handsets: Data remains.
- Other 3G Handsets: Service subscription and data remains, but data is not accessible via handset (accessible via PCs).
- V3/V4/V5/V6/V8 Series: Service subscription is terminated and data is deleted.

Manual Synchronization

Main Menu ► Phone Book ► S! Addressbook BkUp ► Start Sync

- 1 YES → Enter Phone Password
- Select an item (See below)

Item	Operation/Description	
Synchronize	Synchronize 941P Phone Book with S! Addressbook	
Sync from	Send edited data to S! Addressbook	
Phone		
Sync from	Receive edited data from S! Addressbook	
Server		
Backup to	Back up 941P Phone Book to S! Addressbook	
Server		
Restore from	Restore S! Addressbook to 941P Phone Book	
Server		

3 YES → OK

Auto Synchronization

Main Menu ► Phone Book ► S! Addressbook BkUp ► Auto Sync Settings ► ON/OFF

- 1 Enter Phone Password → *ON*
 - To cancel, select *OFF*
- 2 Select an item (See below)

Item	Operation/Description	
Every week	Synchronize weekly at specified time of the day Select a day → Set start time → Select a sync type	
Every month	Synchronize monthly at specified time of the date > Enter a date → Set start time → Select a sync type	
After Editing PB	Synchronize ten minutes after entries are edited > Select a sync type	

3 YES

- View Auto Sync Settings
- >Main Menu ▶ Phone Book ▶ S! Addressbook BkUp
 - ► Auto Sync Settings ► Confirm Settings

Viewing Sync Log

View synchronization/back-up/restoration logs.

Main Menu ▶ Phone Book ▶ S! Addressbook BkUp ▶ Sync Log

- 1 Select a log
- Delete Sync Log
- > In Step 1, (highlight a log →) **②[Menu]** → *Delete this* or *Delete all* (→ For *Delete all*, enter Phone Password) → *YES*

Account Details

Save phone number, mail address, street address, etc. in **Account Details.**

Editing Account Details

- **→** ①
- **□**[Edit]
- Enter Phone Password \rightarrow Edit $\rightarrow \square$ [Finish]
 - Your subscribing phone number cannot be edited or deleted.

Account Details Functions

In Account Details, press [97] [Menu] for following operations.

Item	Operation/Description
Edit*	Edit Account Details (From Step 3 above)
Character size	Switch character size to large/standard
Display all data*	View all saved items such as phone numbers and mail addresses
Copy names	Copy a name
Copy phone numbers	Copy an item ■ Item names vary by selected item. Copy mail add./Copy address/Copy birthday/ Copy notepad

Item	Operation/Description
Send Ir data	Send details via Infrared (△P.10-3) • Alternatively, while Account Details is open, press • [Ir].
IC transmission	Send details via IC transmission (△P.10-5) ■ Alternatively, while Account Details is open, press [ICtrans].
Copy to microSD	Copy details to microSD Card > YES ■ To display copied data: □ P.9-18 ■ Account Details is saved as a Phone Book entry.
Erase phone number*	> Select an item → YES ■ Delete items saved in Account Details ■ Item names vary by selected item. Erase mail add./Erase address/Erase birthday/ Erase memorandums/Delete image
Reset*	Reset all Account Details except your subscribing phone number > YES

^{*} Enter Phone Password if required.

Note

• Quote a content from Account Details to a message (P.3-5).

Voice Dial

Make a call by saying a voice dial name.

Note

- Keep microphone about 10 cm away from your mouth, and pronounce a Voice Dial name clearly. If microphone is too distant, your voice may not be recognized.
- Avoid making sounds unrelated to Voice Dial names (clearing your throat, clicking your tongue, heavy breathing, etc.).
- Say Voice Dial names in quiet places.
- Avoid pressing or brushing keys, or covering microphone with fingers when pronouncing a Voice Dial name.

Adding Entries to Voice Dial

Main Menu ▶ Phone Book ▶ Settings ▶ Voice Dial

- 1 <New> → Select a Phone Book entry
 Entries with ★ are already saved in Voice Dial list.
- **7** Enter a Voice Dial name
 - Only katakana entry is available for Voice Dial names.

Edit Voice Dial Names

> In Step 1, highlight a Voice Dial name → [□][Edit] → Edit name → YES

Delete Voice Dial Entries

> In Step 1, (highlight a Voice Dial name →) [\$\overline{\pi}\$] [Menu] → Delete this or Delete all → YES

Searching Entries by Voice Dial

- Press and hold → Say a Voice Dial name Say the name within four seconds after voice recognition tone sounds. Once Voice Dial is recognized, result appears.
- **7** \square [**Detail**] \rightarrow \square to show phone number
- Woice Calls
 Highlight phone number → ✓

Video Calls
Highlight phone number → ☑[V. Call]



●Activate Voice Dial Automatically ●Activate Voice Dial via Earphone or Bluetooth® Device (プア.18-11)

Digital TV

Basics	5-2
Initial Setup	5-4
Channel Settings	
Watching TV	5-5
Indicators	
Operations while Viewing TV	5-7
Program List (Japanese)	
Data Broadcast (Japanese)	
Functions while Viewing TV	
TV Links (Japanese)	
Saving TV Links	
Opening TV Links	5-11
Functions Available in TV Link List	5-11
Recording/Playing Programs	5-12
Recording Current Program	
Capturing Screenshots	
Playing Recorded Programs	
Viewing Captured Screenshots	5-14
Timer	

Basics

941P supports One Seg terrestrial digital TV broadcasting.

One Seg

One Seg is a digital TV broadcasting service for mobile phones. For more information, visit The Association for Promotion of Digital Broadcasting Website:

[PC] http://www.dpa.or.jp/ [Handset] http://www.dpa.or.jp/1seg/k/ (Japanese only)

Features

Watch TV Programs (△→P.5-5)	Watch One Seg Digital TV on handset.
View Data Broadcast (⊈P.5-7)	Access a variety of program-related information.
Record TV Programs (∠ P.5-12)	Record program/capture still image while watching the program.
Set Timer (⊈P.5-14)	Use Timer to view/record programs. You can easily set Timer by using Program List (☐FP.5-7).

Mobile W-Speed

Frame rate of Digital TV images are automatically enhanced. Enjoy smooth image flow (\$\subseteq P.18-14).

- Mobile W-Speed is set to **ON** by default.
- When this function is set to ON, full effect of Image Quality may not be achieved.
- Depending on broadcasting condition, full effect of this function may not be achieved.
- \bullet Disabled during ECO Mode ($\ref{eq:P.18-14}$) or AV output ($\ref{eq:P.10-13}$).
- Disabled for playing back videos recorded with Mobile W-Speed set to ON

Precautions

- Digital TV is available only in Japan.
- Incoming calls/messages may affect TV image or audio quality while TV is activated.
- Digital TV may be disabled if USIM Card is not installed or SoftBank subscription is terminated.
- SoftBank is not liable for damages from accidental loss/alteration of handset/microSD Card information.
 - Data saved to handset (TV Links, Channel List, etc.) cannot be restored after repairs or handset replacement. Back up important information.

Signal Reception Areas

TV signal reception may be poor in the following conditions:

- Too far from or close to broadcasting stations.
- Mountain areas or near tall buildings.
- In moving vehicles, underground, in tunnels, etc.
- Near high-voltage wires, neon lights, wireless base stations, railroad tracks or highways.
- Areas with numerous signal obstructions or areas where signal reception is blocked.

When Battery is Running Out

- Warning tone sounds and warning message appears if Digital TV is activated with low battery.
- When battery runs low while programs are on or being recorded, handset operates as follows:
 - · While Viewing

Warning tone sounds, and confirmation appears.

 While Recording Response differs depending on *Rec. When Low Battery* (→P.18-14) setting.

Continue Recording ... Warning tone does not sound and confirmation does not appear.

Stop Recording... Warning tone sounds and confirmation appears.

- Watching TV while charging may shorten battery life.
- If recording ends due to low battery, recorded portion is automatically saved.

Incoming Transmissions

TV pauses for incoming calls. Resume TV after call ends.

• Incoming calls do not interfere with recording.



●Use Other Functions while Viewing TV (P.5-8)

5-3

Initial Setup

Set channels for your area.

• Up to ten Channel Lists can be saved.

Main Menu ► TV ► Channel Setting ► Select Area

1 Select a region → Select a prefecture

) YES

Note

- If manual setup fails, try automatic channel setup (Below).
- 941P detects a change in reception area after moving to a different area. Set Channel List for that area.

Channel Settings

Automatic Channel Setup

Main Menu ► TV ► Channel Setting ► Automatic

- 1 YES
- **7** After channel search, **YES** → Enter title
 - If title is not entered, date (year/month/day/hour/minute) is automatically saved as title.

Using Channel List

From ► Main Menu ► TV ► Channel List

- Set Channels
- > Select a Channel List
- Channel List is set, and available channels appear.
- Select a channel to access the station.
- Delete Channel List
- > Highlight a Channel List → (Y)[Menu] → Delete → YES
- Selected Channel List cannot be deleted.
- Delete Channels from Channel List
- > Highlight a Channel List → ☑[Detail] → Highlight a channel → ☑[Menu] → Delete → YES
- Channels in selected Channel List cannot be deleted.
- Edit Title
- > Highlight a Channel List → [Yr][Menu] → Edit title → Edit
- Reassign a Remote Control Number (Keypad) to a Channel
- > Highlight a Channel List → ☑[**Detail**] → **∑**[**Menu**] → **Remote control** # → Select a channel → Select a new remote control number → ☑[**Finish**] → **YES**

Watching TV

- Set channels beforehand (△→P.5-4).
- Horizontal Open Position (☐ P.1-7, P.1-8)



Viewer

Select a channel

Direct Channel Access	1 - 9 (*)(Channel 10) (*)(Channel 11) (#)(Channel 12)
Previous/ Next Channel	
Channel Search	Press and hold To stop: [Cancel] / To stop: To

To end TV, \frown \rightarrow *End TV*


Note


- Alternatively, Main Menu ► TV ► Watch TV
- Closing handset while viewing TV shows still image in External Display (not video image and data broadcasting). When TV Sound While Closed is **ON**, sound is heard but operations except volume adjustment are unavailable.

●Display Digital TV Images on a TV (P.10-13) ●Use Bluetooth® Device for Wireless Playback (P.10-10)

Digital TV

Indicators

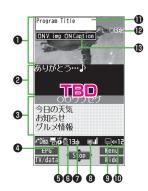

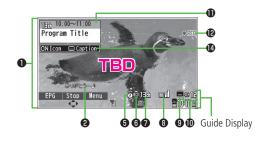

	Item	Description
0	Image	-
0	Captions	-
8	Data Broadcast	(⊈ P.5-7)
4	Data Broadcast Mode	☐ Data Broadcast Mode off
		■ Data Broadcast Mode on
6	Off timer	(⊈ P.5-10)
6	ECO Mode	(□ F.18-14)
0	Channel	(௴P.5-4) ■ When multiple programs are available in the same broadcasting station, "service number/total numbers" appears.
8	Signal Strength Level	Strong Weak Out of range
9	Receiving Captions	-
0	Volume	-
0	Program Title	-
Ø	Recorder Status	OREC Recording OREC Timer Set
®	Display/Caption	Display: ON/OFF/Large Caption: ON/OFF
Ø	Indicator/Caption	Indicators: ON/OFF Caption: Upper position/Lower position/OFF

Operations while Viewing TV

Volume	1/A ▼	
Mute/Cancel Mute 1	909/0	
Program List	⊠[EPG]	
Program Info	Press and hold ☑ To return to Viewer:	
Program Title	 ◆ Alternatively, in Landscape View (Normal Open Position), press , (in Horizontal Open Position) 	
Display/Caption View ²	While Program Title appears: <a> ✓ Each key press toggles display and caption views 	
Indicator/ Caption View ³	While Program Title appears: Each key press toggles indicators (icons) on/ off and caption view (in Landscape View).	
Display View	 Each key press toggles display direction (Broadcast Mode off). Each key press toggles full/normal display (Broadcast Mode on). Not available in Horizontal Open Position 	
Record Programs ¹	 [Record] (
Capture Still Images 1	Press and hold (☐FP.5-12)	
Data Broadcast Mode On/Off ²	[TV/data]	

¹ Available when Data Broadcast Mode is off

Program List (Japanese)

Check program schedules and set timer to view/record TV programs.

Main Menu ► TV ► Program List

- Confirmation appears when using Program List for first time. Follow onscreen instructions.
- See Program List Help menu for usage information.

Data Broadcast (Japanese)

Access a variety of program-related information such as still images and videos.

- 1 Activate TV (Data Broadcast Mode off) →

[TV/data]

appears.

- 🔲 to select information
- To deactivate Data Broadcast Mode: (1717/data)

Note

 Viewing Data Broadcast information requires no fees: however, accessing websites will incur connection fees.

² Available only in Portrait View

³ Available only in Landscape View

Functions while Viewing TV

Sound Settings

> While TV is active, [\$\overline{\chi_0}\) [Menu] → Settings → Sound → Sound Effect → Select an item (See below)

Select an Item (See Delow)	
Item	Operation/Description
Auto Volume	Automatically increase to optimum volume
	>ON or OFF
Remaster	Adjust sound quality to reproduce original sound > ON or OFF
Listening	Adjust to natural sound when using earphone or Bluetooth® device > Select an item • Surround: Reproduce natural and stereophonic sound
	 Natur 1 or Natur 2: Complement sound specific to earphone to reproduce natural sound OFF: Turn off Listening setting
Equalizer	Change sound quality when using earphone or Bluetooth® device > Select an item • Normal: Reproduce normal sound • H. BASS1: Enhance low-pitched sound • H. BASS2: Enhance low-pitched sound even more • Voice: Make voice clear • Train: Minimize sound leakage

Other Functions

> While TV is active, follow the steps below.

Item	Operation/Description
Access	> Press and hold 📵
Internet via	• To return to viewer: While Yahoo! Keitai is active, press
Yahoo! Keitai	and hold 🕎
Access	> [(MULTI) → Open Menu → Yahoo! Keitai →
Internet via	PC Site Browser
PC Site	 Follow onscreen instructions
Browser	
Make a Voice	> [(MULTI) → Stand-by display → Enter a number →
Call/Video	(For Video Call, [☑[V. Call])
Call	 Interrupt TV during call. After call, TV resumes.
	 Recording will not be interrupted.
Use	> [(MULTI) → Stand-by display → 🖂
Messaging	–

■ Functions Available while Viewing TV
> While TV is active, [▼][Menu] → Select an item (See below)

Item	Operation/Description
Program info	View current program information
Program list	View Program List
Disp.Ch./ operation	> Select an item • Channel info: View channel details. Select a channel to watch that Station • Channel List: View Channel List (┌雺 P.5-4) • Channel Setting: Set channels for your area (ඌ P.5-4) • Add to ch. list: Add current station to Channel List. Assign current station to lowest available number key. • Tune service: Select a program when multiple
	programs are available from the same broadcasting company

Item	Operation/Description
Data	> Select an item
Broadcasting ¹	 Back to data BC: End Data Broadcast site and return to Data Broadcast window Reload contents: Reload page (Data Broadcast link) Certificate: View owner, author, validity period and serial number of certificate used in SSL communication Images ²: Show/hide images on Data Broadcast sites Sound Effect ²: Turn on/off sounds from Data Broadcast/sites Reset Settings ²: Show confirmation on Data Broadcast
TV link list 1	Show TV Link details
Compose S! Mail	Create S! Mail while listening to sound (2) From Step 2 on P.13-4)

Item	Operation/Description
Settings	> Select an item
Settings	· <i>Display/operation</i> → <i>Switch display</i> ¹: Switch
	view (switch image size/image off)
	· Display/operation → Switch TV/data BC ¹:
	In Portrait View, toggle Data Broadcast Mode on/off
	(1 P.5-7)
	 Display/operation → Icons ²: Set Guide Display
	in Landscape View
	 Display/operation → AV output: View a Digital
	TV image on a TV set or other devices (☐F.10-13)
	· <i>Video</i> → <i>Brightness</i> : Set Back Light brightness
	· <i>Video</i> → <i>Mobile W-Speed</i> ² : Enhance frame rate
	of TV images automatically
	 Video → Image Quality ²: Select an image quality
	· Video → LCD AI: Activate image compensation
	according to Back Light
	· Sound → Sound Effect ² (C→P.5-8)
	· Sound → Main/sub sound : Set main/sub sound
	· Sound → Switch audio data : Available only
	when multiple audio data are supported
	· Sound → TV Sound W/ Closed 2: Set whether to
	keep speaker on when closing 941P while viewing
	TV
	• ECO Mode ² : Set power saving mode (☐FP.18-14)
	• <i>Off timer</i> : When set time passes, confirmation
	appears asking whether to end viewing/recording
	TV

Item	Operation/Description
Key guide	View key operation guide while watching TV

- Available only in Portrait View
 Available from User Settings even while TV is not active (₱.18-14).

TV Links (Japanese)

Saving TV Links

- Following function is not available in Landscape View.
- 1 Switch Data Broadcast Mode on → Select a link
- 2 **YES**Follow onscreen instructions to save link.

Opening TV Links

Main Menu ► TV ► TV Link

- 1 Select a TV Link
 - Confirmation appears when Internet access is required. Select YES to proceed.
 - If TV Link is expired, confirmation appears asking whether to delete link.

Functions Available in TV Link List

Main Menu ► TV ► TV Link

1 Y? [**Menu**] → Select an item (See below)

Item	Operation/Description
Display detail	Show TV Link title, URL, summary, content type, expiration
	date
No. of TVlink	Show number of saved TV Links
Delete	> Select an item
	· Delete this → YES
	 Delete selected → Check TV link(s) to delete →
	[Finish] → YES
	 Delete all → Enter Phone Password → YES

Recording/Playing Programs

Recording Current Program

Save programs as videos or still images. Recordings are saved to microSD Card.

- microSD Card: ⊈P.9-16
- Save up to 2GB of data at a time.

Recording Time (total)* Approx. 640 minutes

Savable Files 99 files

- * Average recordable time per 2GB of data
- Recording is unavailable when signal strength drops to
- **2** [Stop] to stop recording Program is saved to microSD Card.

Note

- In the following cases, recording ends and recorded portion is automatically saved:
 - · File size is over 2GB
 - · microSD Card memory is full
- Recorded files are not saved to handset.
- Do not remove microSD Card while recording.
- Recording continues even if signal strength level is ; however, images and audio are not saved.
- Data Broadcast information cannot be recorded.
- Recording is disabled during AV output.

Capturing Screenshots

Captured screenshots are saved to handset.

- This feature is unavailable when signal strength is a or Data Broadcast Mode is on.
- 1 Activate TV (Data Broadcast Mode off) → press and hold (not be press and hold (not be press)

Note

- Captions cannot be captured.
- Capturing is disabled during AV output.

Playing Recorded Programs

Main Menu ▶ Data Folder ▶ TV ▶ Video

1 Select a file Playback starts.





Play FUNC Info

2 (2)7/19 to stop playback

Example: Video Folder

Note

 Closing handset while watching TV shows landscape view in External Display.

Playback Operations

Volume	_ /A v
Mute/Cancel Mute	¥7[
Fast Forward	(Press once: 10x; Press twice: 30x)
Fast Rewind	(Press once: 10x; Press twice: 30x)
Pause/Resume	○[Ⅲ/▶]
Play Frame by Frame	Pause playback → ☑[Frame] • Play back frame by frame.
Skip Rewind 1	Press and hold p/*
Skip Forward ²	Press and hold <a>O /#
Toggle Playback Speed	© [► / D / m / e (Summary View)] • Summary View adjusts playback speed according to audio.
View Title	● In Landscape View, indicator/caption setting display appears.
Toggle Caption	Display title → In Landscape View, each key press toggles indicators (icons) and captions on/off.
Portrait/Landscape View ^{3 4}	■ Each key press switches view.

- ¹ Unavailable if file is under 10 seconds long
- ² Unavailable if file is under 30 seconds long
- ³ Close handset to return to Portrait View.
- ⁴ Disabled in Horizontal Open Position

Viewing Captured Screenshots

Main Menu ▶ Data Folder ▶ TV ▶ Image

Select an image

Timer

• Set up to 100 timer entries to watch or record programs.

Main Menu ► TV

- Timer Watching or Timer Recording
- \square [New] \rightarrow Select an item (See below)

Item	Operation/Description
Start date setting	Set date and time to start and end viewing/recording a program
End date setting ¹	 Select an item Enter date → Enter a date and time Choose date → Select a date → Enter date and time
Channel	> Select a channel
Edit title	> Enter a program name
Repeat	> Select a repetition → For <i>Select day</i> , select a day (days) → ☑[Finish]
Alarm (Alarm notice) ²	> ON or ON/Set time → For ON/Set time, select an alarm time

Item	Operation/Description
Alarm tone ²	> Select an alarm type → Select a folder → Select an alarm
Alarms (Alarm on/off) 1	> ON or OFF
Alarms (Alarm volume)	➤ o adjust volumeFor <i>Timer Recording</i>, Escalating Tone cannot be set.
Activate TV w/ alarm ²	 ON or OFF When ON is set, Digital TV activates from alarm notification window.
Priority ¹	Set handset response when Timer Recording starts > Recording or Operation • When Recording is set, active function suspends/ends, and recording starts. • When Operation is set, confirmation appears. To suspend/end active function, select YES and • to start recording.

¹ Timer Recording only

[Finish] → For *Timer Recording*, select *YES* or YES (confirm once)

² Timer Watching only

Note

- Select timer entries to check details; [[Edit] to edit details.
- Timer Recording does not start if Internet and two other functions are active simultaneously.
- Alarm does not sound for Timer Watching/Timer Recording in following functions. For Timer Recording, complete followings (in parentheses) one minute before timer starts; otherwise, recording does not start.
 - · While handset is off (Turn on handset)
 - · While Privacy Key Lock is active (Cancel lock)
 - · While Personal Data Lock is active (Cancel/change lock)
 - · During data transfer (Complete transfer)
 - During Infrared transmission, IC transmission or Bluetooth® transmission (Complete transmission)
 - · During software update (Complete update)

Other Timer Operations

Main Menu ► TV

- **Timer Watching** or **Timer Recording**
- **7 Y**/**[Menu]** → Select an item (See below)

Item	Operation/Description
New	Set a timer entry to watch/record a program (☐FP.5-14)
Edit	Edit entry details (13 P.5-14)
Sort	Sort timer entries > Select an order
Delete this	> YES
Delete past	Timer entries with start/end time set prior to current date/ time are deleted > YES
Delete selected	> Check timer entries to delete → [Finish] → YES
Delete all	> Enter Phone Password → YES
Memory Status*	Show memory status

^{*} Timer Recording only

Checking Timer Recording Results

Main Menu ► TV

- **1** Recording Result → Select a result
 - Details appear.

Camera

Before Using Camera	6-2
Image File Formats	6-2
Notes	
Inside & Outside Camera	6-3
Camera Display Indicators	6-4
Pictures/Videos	6-6
Capturing Still Images (Camera Mode)	6-6
Recording Videos (Video Camera Mode)	6-7
Functions Available while Shooting	6-7
Focus Functions (Outside Camera)	6-12
Changing Focus Settings	
Auto Focus Lock	6-12
Viewing Saved Images	6-13

6

Before Using Camera

941P features approximately 8.1 Mega Pixel CMOS Auto-focus Camera capable of capturing still images and videos.

Image File Formats

Still images/videos are saved to Data Folder.

Image Type	File Format	Save Location
Still images	JPEG (.jpg)	Camera folder in Pictures folder
Videos	MPEG-4 (.3gp), ASF (.asf)	Camera folder in Videos folder

• To save to microSD Card (Storage setting: ☐ P.6-11)

Notes

- Remove dust/debris from lens cover with a soft cloth.
- Handset movement may blur images especially in dark places; hold handset firmly.
- Capturing/saving images immediately after handset has been left in a hot place may affect image quality.
- Exposing lens to direct sunlight may affect image quality.
- While Camera is active, Photo light illuminates/flashes. When Inside Camera is used, Notification Light/Charging Indicator flashes.
 Illuminating/flashing cannot be turned off.

Shutter Click


Shutter click sounds at fixed volume even in Manner Mode.

• To change shutter click sound: ☐ P.6-11

Inside & Outside Camera

Use Inside or Outside Camera. Still images can also be captured with handset closed (\$\sigma_P.6-7\$). With Outside Camera, auto focus (\$\sigma_P.6-13\$) and image stabilizer (\$\sigma_P.6-11\$) are available.

Change settings by using either function menus or key operations.

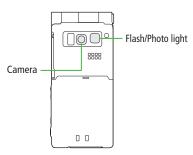

Note


- Camera is not available when battery is low.
- Incoming calls, Alarm and low battery cancel Camera. Captured images/ recorded videos are retained. Save data when Camera restarts.
- When left in Viewfinder for three minutes, Camera is canceled and previous window returns.


6


Camera


Camera Display Indicators

- Images shown below are for reference only.
- Picture Viewfinder

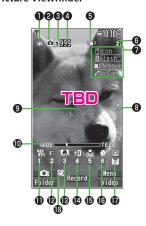

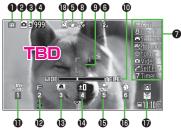

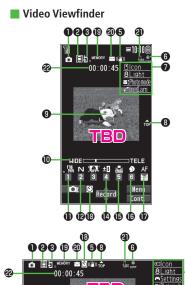

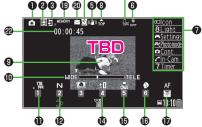

	Item	Description	Operation
0	Photo mode (ぱ P.6-10)	☐ Intelligent Auto ☐ Normal ☐ Scene ☐ My original set. For Scene/My original set., indicators may vary depending on setting.	Press and hold [☐ [☐ ☐] → Select a mode (→ For Scene/My original set., select an item)
2	CHG Camera-mode	Camera mode ☐ Video Camera mode ☐ / ☐ / ☐ Action mode (Auto/Auto bracket/Manual) (Cont. shooting set.: ☐ P.6-8)	[Video/Cont./Camera]Toggle Action mode (☐P.6-11)
8	Storage setting	☐ Phone ☐ microSD Card	9
4	No. of frames	Show number of remaining frames	_
6	Img. stabilizer	Correct camera shake	(□ P.6-11)
6	Flash setting (Still image)	🕰 Auto 💈 Forced ON 🚟 Always light ON 🔞 Forced OFF	8
	Photo light setting (Action/Video)	MON OFF	
0	Key Guidance	Show key operation guidance	_
8	Top indicator	Indicate vertical direction	_
9	Focus Guide	Adjust focus automatically	_
O	Zoom bar	Indicate zoom level (ぱずP.6-9)	② zoom in/ ≥ zoom out ■ Long press: continuous zoom
0	Image size*	Show image size (2 P.6-9)	→ Select a size
ø	Image quality*	N Normal F Fine SF Super fine	② → Select a mode
®	High sensitiv.*	ON A OFF	3 → Select ON/OFF
1	Brightness*	Adjust brightness (Level -3 to +3)	4 → Select a level
Ð	White balance*	Auto 🗱 Fine 📤 Cloudy 🕏 Light bulb 🔘 Fluorescent light	Select a mode
(Scene*	▶ Portrait ℜ Sports ♠ Food ♣ Scenery № Night mode Љ Backlight ♠ Character ♣ Snow ► Sunset → Pet	6 → Select a scene
Ð	Focus* (⊈₹P.6-13)	Face Detection AF Auto Close-up Landscape	○ → Select a mode
ø	Auto timer	(□ P.6-8)	7 → Toggle ON/OFF
ø	Memory capacity bar	Indicate memory status (appears in red when memory is full)	
a	File size setting	☐ Mail restrict'n(S) 🚨 Long time	(r ⊋P.6-11)
a	Movie type set	Record video with/without audio	(□ FP.6-11)
2	Recordable time	Indicate recordable time	_

^{*} Alternatively, \square [\square to highlight an item \rightarrow \square to select a setting

Pictures/Videos

- Confirm battery strength (△P.1-11) and memory (△P.6-11) before recording. When battery is low, video cannot be recorded.
- Captured images and videos are automatically saved to Data Folder. To select save location each time, turn Auto save set to OFF (C)P.6-11).

Note

- When using Inside Camera, mirror image appears on Viewfinder. Captured images appear correctly.
- For activating Camera/capturing images by (a), press firmly.

Capturing Still Images (Camera Mode)

- 1 Press or press and hold (a) to activate Camera
- 2 Frame subject
 - To toggle Inside/Outside Camera:

Shutter click sounds at fixed volume. Image is automatically saved.

 When Focus is set to Auto or Face Detection, Outside Camera automatically focuses on subject before capturing image.



Picture Viewfinder

1 👝 to exit

Return to Standby.

Continuous Shooting

Capture a succession of up to 20 still images automatically with a single press.

- 1 In Picture Viewfinder, \bigcirc [Video] \rightarrow \bigcirc [Cont.]
 - appears (Indicators vary by Action mode).
 - To set Continuous Shooting: ☐ P.6-11
- 2 Frame subject → [Record], or (♠)
 Images are automatically saved.
 - When Focus is set to Auto, Outside Camera automatically focuses on subject before capturing image.
 - To stop shooting halfway:

Recording Videos (Video Camera Mode)

- 1 Press and hold **a** to activate Video Camera
- 2 Frame subject
 - To toggle Inside/Outside Camera:

Tone sounds.

 When Focus is set to Auto, Outside Camera automatically focuses on subject before recording begins. During recording, auto focus functions regardless of Focus setting.



Video Viewfinder

4 • [Stop], O or (a) to end recording

Tone sounds.

Video is automatically saved.

- Recording stops automatically at maximum recording time.
- 5 **to exit**Return to Standby.

Note

● Alternatively, 🖎 → 🖎 [Video] to activate Video Camera

Functions Available while Shooting

From Camera mode:

Action mode:

Video camera mode: Press and hold

Camera mode: ○

Camera

Auto Timer

- > \boxed{M} [Menu] \rightarrow *Auto timer* \rightarrow *ON* \rightarrow Enter time (seconds) \rightarrow \boxed{M} [Stop], \boxed{M} or \boxed{M} or \boxed{M}
- Auto timer tone sounds. After set period of time, shutter is released and recording starts.
- When Auto timer is active, [all Quit] or meturn to Viewfinder without canceling Auto timer.
- Auto timer is not available when *Cont. shooting set.* is set to *Manual*.

Zoom

- > (zoom in) or (zoom out) to adjust zoom → (Record),
- Press and hold of for continuous zoom.
- Zoom is available during video recording.
- \bullet Zoom is disabled when $\emph{Image size}$ is set as follows:
 - · Inside Camera: VGA, HVGA Wide or QVGA (individual mode)
- Zoom may change image quality.

Maximum zoom levels for individual image size are as follows.
 Maximum zoom levels in Horizontal Open Position are indicated in () if different from those in Normal Position.

Camera mode	Size	Zoom level	Max. level (approx.)
Outside Camera			
Camera	M8 M	21 levels	2.6 times
(High	淵 6M Wide	21 levels	2.6 times
sensitiv.:	5M	21 levels	2.6 times
OFF)	.語: 3M	21 levels	2.6 times
	2M Wide	21 levels	2.6 times
	.⊞ii 2M	21 levels	2.6 times
	Stand-by	21 levels	2.6 times
	× FIII VGA	21 levels	2.6 times
	、點 QVGA	31 levels	5.1 times
	"Щ QCIF	31 levels	8.5 times
	、	31 levels	12.8 times
Camera	.⊞ii 2M	21 levels	2.6 times
(High	X Stand-by	21 levels	2.6 times
sensitiv.: ON)	× HIII VOA	21 levels	2.6 times
	、點 QVGA	31 levels	5.1 times
	、 \text{\tiny{\text{\tin}\text{\tetx{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\ti}}\\ \text{\texi}}}\text{\text{\text{\texi}\text{\text{\text{\text{\text{\text{\text{\texi}\tilit{\text{\texi}\text{\text{\text{\text{\text{\text{\text{\texi}\text{\text{\texi	31 levels	8.5 times
	、福 Sub-QCIF	31 levels	12.8 times
Continuous	՝ ∰ VGA	21 levels	2.6 times
shooting	₩ QVGA	31 levels	5.1 times
	↓ ¦¦¦ QCIF	31 levels	8.5 times
	、	31 levels	12.8 times

Camera mode	Size	Zoom level	Max. level (approx.)
Video camera		21 levels	1.9 times
(Img.	HVGA Wide	21 levels	1.9 times
stabilizer:	ౣౣౙౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣౣ	31 levels	2.9 (3.8) times
Auto)	, ™ QCIF	31 levels	5.2 (6.4) times
	、唱 Sub-QCIF	31 levels	7.2 (9.6) times
Video camera	、喘 VGA	21 levels	2.6 times
(Img.	. 群 HVGA Wide	21 levels	2.6 times
stabilizer:	、	31 levels	3.8 (5.1) times
OFF)	、讯 QCIF	31 levels	7.0 (8.5) times
	、唱 Sub-QCIF	31 levels	9.6 (12.8) times
Inside Camera			
Camera/	, ∰ VGA	1 level	1.0 time
Continuous	, 쐚 QVGA	1 level	1.0 time
shooting	、喘 QCIF	6 levels	1.6 times
	、	21 levels	2.1 times
Video camera		1 level	1.0 time
	,	1 level	1.0 time
	, 풺 QVGA	1 level	1.0 time
	、	6 levels	1.9 (1.6) times
	, 嗤 Sub-QCIF	21 levels	2.8 (2.1) times

Use Flash/Photo Light

Select a Flash/Photo Light setting for Outside Camera.

> In Picture Viewfinder, [☑][Menu] → Flash setting → Select an item (See below)

Item	Operation/Description
Auto	Flash goes off automatically in low-light situations.
Forced ON	Flash always goes off when capturing images.
Always light ON	Photo Light illuminates.
Forced OFF	Flash/Photo Light is disabled.

> In Continuous Shooting/Video Viewfinder, ∑ [Menu] → Photo light set. → ON or OFF

- Flash/Photo light is not available when battery is low.
- When Camera is ended or changed to Inside Camera while a setting other than *Forced OFF* is set, Flash setting is changed to *Auto* next time Camera activates or Outside Camera is used. When *Forced OFF* is set, setting remains.
- Even if Forced OFF (Flash setting) or OFF (Photo light set.) is set, Photo light illuminates or flashes when Camera is active or during shooting.
- When Photo mode is set to *Intelligent Auto*, Forced ON cannot be set.
- When using flash, maintain an appropriate distance from subject of 40 to 100 cm.
- When image is captured at close range, image may turn white as a result of poor exposure.

Set Photo Mode According to Scene

> [Menu] → *Photo mode* → Select an item (See below)

Item	Operation/Description	
Intelligent Auto	Automatically switch Photo mode according to occasion (in Camera mode) Indicator is animated when mode changes (Example: Close-up). Mode does not change after Auto Focus Lock. Cancel Auto Focus Lock.	
Normal	Capture an image in normal mode	
Scene	Adjust brightness and color tone according to scene Select an item	
My original set.	(□ P.6-12)	

Functions Available in Viewfinder

- Change settings before initiating image capture. Some functions are changeable with simple key operations (₾P.6-5).
- Some operations are not available depending on Photo mode, image size or Photo mode.
- > [**Y**/] [**Menu**] → Select an item (See below)

Item	Operation/Description
Inside camera/	
Outside camera	
CHG camera- mode	> Camera mode, Video camera mode, Action mode or Bar code reader
Folder jump	Open storage folder
Photo mode	(C≇Above)
Image size	> Select a size
File size	Select <i>Mail restrict'n(S)</i> for S! Mail attachments or
setting	Long time for long-time recording

Item	Operation/Description
Image quality	> Select an item
	 In Video camera mode, this function is available only
	when <i>File size setting</i> is set to <i>Long time</i> .
Camera	> Select an item
settings	· Brightness → 🎮
_	 White balance: Adjust color tone
	 Color mode set: Select a color mode
	· <i>Focus</i> : ⊈ P.6-13
	· Img. stabilizer: Minimize camera shake
	automatically
	• Shoot with frame: Add frame to image
	 Shutter sound: Select a shutter click sound
	· Flicker correction: Minimize flicker while shooting
	near fluorescent light
Storage	> Select an item
setting	· Store in → Phone or microSD
	· Auto save set → ON or OFF
High sensitiv.	>ON or OFF
Flash setting/	Set whether to use Flash/Photo light (☐P.6-10)
Photo light	<i>y</i> . , , , , , , , , , , , , , , , , , ,
set.	
Auto timer	(□ P.6-8)

Item	Operation/Description
Cont.	> Select an item
shooting set.	 Action mode: Manual captures one picture at a time. Auto bracket captures nine different still images automatically. Shot interval: Select an interval when Action mode is set to Auto. Shot number: Set number of images to be captured when Action mode is set to Auto or Manual. Details are as follows: VGA (480×640): 4 QVGA (240×320): 5 to 10 QCIF (144×176): 5 to 20
	Sub-QCIF (96×128): 5 to 20
Movie type set	> Normal or Video
Display size	Select Viewfinder size
	> Actual size or Fit in display
Attach S!Mail	> YES or NO
mode	 Image size, File size setting and Image quality are set as follows (respectively): QCIF, Mail restrict'n(S), Normal
Icon	Show/hide display indicators > ON or OFF
Memory Status	View memory information

Save as Original Setting

> Press and hold ☑ → *Photo mode MyOriginal* → Follow the steps (See below)

Item	Operation/Description
Save setting	> Highlight a setting → \textcircled{m} [Save] (→ YES) → Edit title
Open setting	> Select a setting
Edit title	> Highlight a setting → [Edit] → Edit title
View detail	> Highlight a setting → [Detail]
Delete setting	> Highlight a setting → □ [Delete] → YES

Functions Available after Shooting

- Available only when *Auto save set* (☐ P.6-11) is *OFF*
- Some operations are not available depending on camera mode or image size.
- > [Menu] → Select an item (See below)

/ Infiniting	r select all item (see below)
Item	Operation/Description
Play	Play back recorded video
Save	Save still image/video
Store all/ animat'n	> Save or Mirror save → <new></new>
Mirror save	Save mirror image
Attach to	Send file via S! Mail
S! Mail	> Create a message (☐From Step 2 on P.13-4)
Set display	Set as wallpaper, Phone Book image, etc.
	> Select an item
Change frame*	> Select a frame → ● [Set] → ● [Save]
Store in	>Phone or microSD
Mirror display/ Normal display	Switch Mirror/Normal display
Display size	Set image size in Viewfinder > Actual size or Fit in display
Icon	Show/hide display indicators > ON or OFF
Cancel	Discard image to return to Viewfinder

^{*} Available only when shooting with frame

Focus Functions (Outside Camera)

Changing Focus Settings

<Default> Camera mode: Face Detection Video camera/Action mode: Auto

Select a focus setting according to occasion. Focus on Individual scenes automatically.

- Face Detection (Camera mode only): For portraits
- Auto: Auto detection
- Close-up: For nearby objects
- Landscape: For distant landscapes
- 1 In Picture/Video Viewfinder, 👅

Face Detection

- Detect up to five faces within 2.5 meters.
- Show yellow Focus Guide when a face is detected.
- Automatically focus on one face when more than one is detected (Focus guide turns yellow once focus is on the face.).
- Faces may not be detected in following conditions:
 - · Face is tilted.
 - · A part of face is covered by glasses, hat, mask or shadow.
 - · Face is too small, big or dark for screen.
 - · Face is at edge of screen.
- Shoot with Auto focus if detection fails.

Auto Focus Lock

Bring focus on subject at center of display automatically. Lock focus on subject, and recompose your picture.

- In Picture/Video Viewfinder, Q, ★ or (♠) halfway
 - ① When in focus, handset sounds.
 - ② Focus Guide turns green, and focus is locked.
 - When out of focus, Focus Guide turns red.
 - To cancel focus locked by ② or ※:
 - To cancel focus locked by (a): Release finger from (a)
- Determine composition
- 3 Capture image in selected camera mode (Camera mode: ☐P.6-6/Action mode: ☐P.6-7/Video camera mode: ☐P.6-8)

Viewing Saved Images

Main Menu ▶ Camera

1 Open Pictures Pictures

Open Videos

Videos

- 2 Select a folder
- **3** Select a file



Example: Pictures

- Open Pictures Saved on microSD Card
- > After selecting *Pictures* in Step 1, **(ImicroSD)** → Select a folder
- Open Videos Saved on microSD Card
- > After selecting *Videos* in Step 1, **(im)[microSD]** → Select a folder
- Check Still Images in Picture Viewfinder
- > In Picture Viewfinder, ([Folder]
- To return to Picture Viewfinder: "
- Tip
- ●Editing Still Images (ݣョP.9-12)



Entertainment

Mobile Widget (Japanese)	7-2
Pasting Widgets to Standby	
Using Widgets	7-2
Downloading Widgets	
Arranging Widgets in Standby	7-3
S! Quick News (Japanese)	
Registering S! Quick News Items	
Opening New Information	
S! Information Channel/Weather (Japanese)	
Registering/Canceling	
Using S! Information Channel	7-6
Using Weather Indicator	7-7
Option Menu Items	
E-Books (Japanese)	

Mobile Widget (Japanese)

Paste widgets to Standby to access information or tools from Standby.

Network Widget

Some widgets may periodically connect to network, incurring packet transmission fees.

- During transmission, other functions (e.g. Video Calls) may be disabled.
- View Mobile Widget Overview
- > Main Menu ▶ Entertainment ▶ Mobile Widget ▶ Information
- Show/Hide Widget
- > Main Menu ▶ Entertainment ▶ Mobile Widget ▶ Information
- > In Standby,

Pasting Widgets to Standby

Paste up to five widgets per sheet. Select from four sheets and organize sheets by theme.

- 1 Widget List appears.
- 2 Select a widget → [Y/2][Menu] → Paste on Stand-by → Select a sheet
- \mathbf{g} to move to target location $\rightarrow \mathbf{o}$

Toggle Sheets

> In Standby, \bigcirc \rightarrow \bigcirc [Back] or \bigcirc [Forward]

Note

- Alternatively, Main Menu ➤ Entertainment ➤ Mobile Widget
 ➤ Widget Contents or Main Menu ➤ Data Folder ➤ Widget to select widgets
- When saving widgets from microSD to Standby, do not remove microSD Card.

Using Widgets

Selecting Widgets in Standby

1 In Standby, 👅

Pointer (\cap{Q}) appears.

- To disable pointer: 🔿 or 🕬

Follow onscreen instructions.



Selecting Widgets from Widget List

- Widget List appears.
- Select a widget



Widget List

Move Widgets in List

 $> (M) \rightarrow Highlight a widget \rightarrow (Y)[Move] \rightarrow (Q) to determine a target$ location → [OK]



Settings ● Mobile Widget (🗲 P.18-15)

Downloading Widgets

Main Menu ► Entertainment ► Mobile Widget ▶ Widget Contents

Download Widget → YES

941P connects to the Network, and download site appears. Follow onscreen instructions.

Installing Widgets

Some widgets may require you install them manually; follow steps below:

- > In download completion window, [\$\sqrt{1}\$] [Menu] → Install
- Once installation is completed, widgets appear in Widget List. Widget folder in Data Folder includes widgets that are not yet installed.

Note

- Alternatively, Main Menu ➤ Data Folder ➤ Widget
 - ▶ Download Widget ▶ YES to download

Arranging Widgets in Standby

- In Standby, \bigcirc \rightarrow \bigcirc to move pointer \rightarrow Highlight a widget $\rightarrow \square$ [Operate]
- Select an item (See below)

Item	Operation/Description
Move	> ∑ to move to a target location → ●
Delete frm Standby	> YES
Forward	Move overlapping widget to foreground
Rear	Move overlapping widget to background
Reload	Update widget