


## Quick start



Thanks for buying **Philips AJ3915 CD clock radio**.  
Our **Quick Start** guides you through just some of the features on the set.  
Please read our instruction booklet to really rise & shine!

# PHILIPS

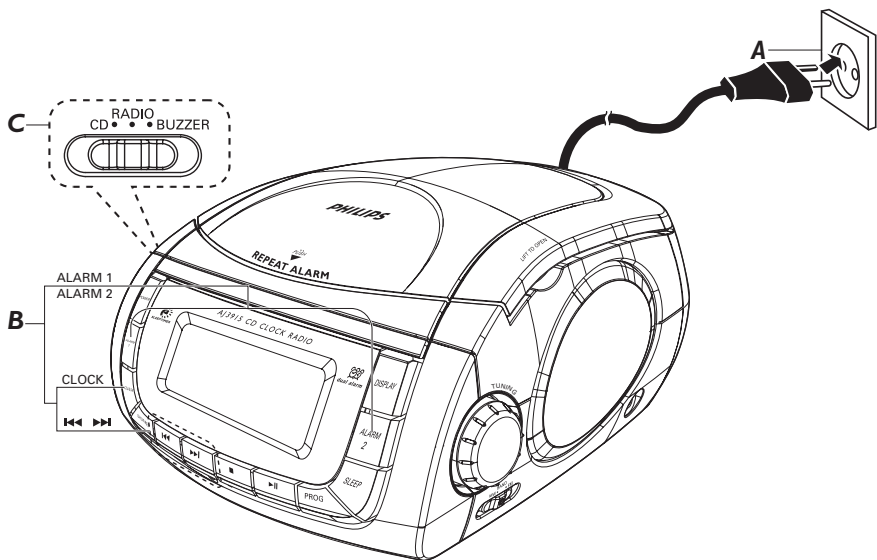

## English

### Quick start as easy as ABC!

#### Step A

- Plug to the wall outlet.

#### Step B

##### Setting the Clock/Alarm time

1. Press and hold **CLOCK** or **ALARM 1/ALARM 2** until clock digit for hour flashes.
2. Press repeatedly, or hold down **◀/▶** to adjust the hours.
3. Press **CLOCK** or corresponding **ALARM 1/ALARM 2** to confirm the hour setting, and the clock digits for minute flashes.
4. Press repeatedly, or hold down **◀/▶** to adjust the minutes.
5. Press **CLOCK** or corresponding **ALARM 1/ALARM 2** to confirm the minute setting.
  - Corresponding ALM1 or ALM2 is displayed, when alarm time is set to activate.

#### Step C

##### Selecting the Alarm mode

1. Press **POWER** to switch to standby.
2. Select your choice of alarm mode: either CD, radio, or buzzer by using the **CD•RADIO•BUZZER** slider.
  - At the set alarm time, the CD or radio or buzzer will switch on automatically.

### **3 ways to switch off the alarm**

- Press once corresponding **ALARM 1** or **ALARM 2**, or press **POWER** (ALM1 or ALM2 is still displayed).
- Press **REPEAT ALARM** (ALM1 or ALM2 is still displayed, yet flashing).
- Press repeatedly corresponding **ALARM 1** or **ALARM 2** until ALM1 or ALM2 disappears.

### **CD playback feature:**

This CD clock radio can play only audio discs including CD-R (CD-recordable), CD-RW (CD-rewritable).

- 1.** Press **POWER** to switch on from standby.
- 2.** Select CD source by pushing **CD•RADIO•BUZZER** to CD.
- 3.** Lift the CD door to open.
- 4.** Insert a CD with printed side facing up, and close the CD door.
- 5.** Press **▶** to start playback.
- 6.** To stop playback, press **■**.

