



Pro1 Technologies

P.O. Box 3377  
Springfield, MO 65808-3377  
Toll Free: 888-776-1427  
Web: www.pro1iaq.com  
Hours of Operation: M-F 9AM - 6PM Eastern

# T755WH

## Thermostat Application Guide

| Description                             |     |
|---|-----|
| Gas or Oil Heat                         | Yes |
| Electric Furnace                        | Yes |
| Heat Pump (No Aux. or Emergency Heat)   | Yes |
| Heat Pump (With Aux. or Emergency Heat) | Yes |
| Multi-Stage Systems                     | Yes |
| Heat Only Systems                       | Yes |
| Cool Only Systems                       | Yes |
| Millivolt                               | No  |
| Humidity                                | Yes |
| Dual Fuel                               | Yes |

| Table of Contents            | Page  |
|------------------------------|-------|
| Wireless Type Selection      | 2     |
| Installation Tips            | 3-8   |
| Thermostat Quick Reference   | 9-10  |
| Private Label Badge          | 11    |
| Wireless Communication Tips  | 12    |
| Reestablishing Communication | 13    |
| Wiring                       | 14-18 |
| Technician Setup Menu        | 19-28 |
| Setting the Humidity         | 29    |
| Programming                  | 30-38 |
| Specifications               | 39    |

## Power Type


Battery Power\*  
Hardwire (Common Wire)  
Hardwire (Common Wire) with  
Battery Backup

**A trained, experienced technician must install this product.**

Carefully read these instructions. You could damage this product or cause a hazardous condition if you fail to follow these instructions.

Una version en español de este manual se puede descargar en la pagina web de la compañía.

\* If you are using remote sensors the thermostat must be hardwired.

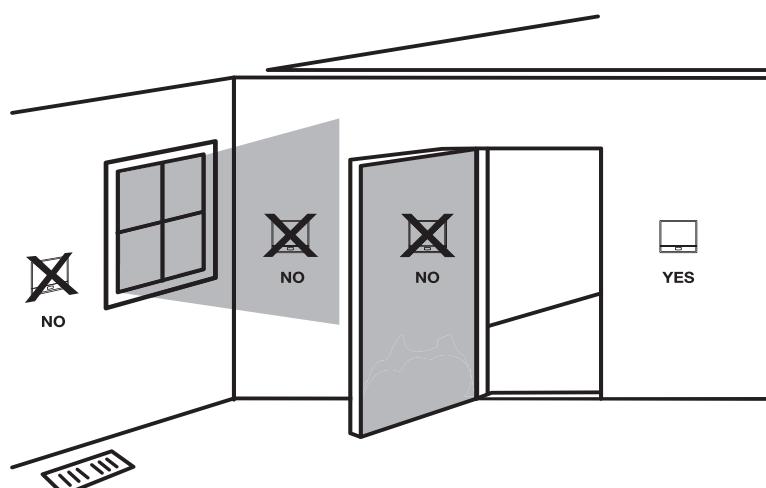

### Do not install thermostat in these locations:

- Close to hot or cold air ducts
- That are in direct sunlight
- With an outside wall behind the thermostat
- In areas that do not require conditioning
- Where there are dead spots or drafts (in corners or behind doors)
- Where there might be concealed chimneys or pipes



### Installation Tip

Pick an installation location that is easy for the user to access. The temperature of the location should be representative of the building.


1 ®U.S. Registered Trademark. Patents pending  
Copyright © 2022 All Rights Reserved.

Rev. 2203

2

## Installation Tips

### Thermostat Subbase Installation

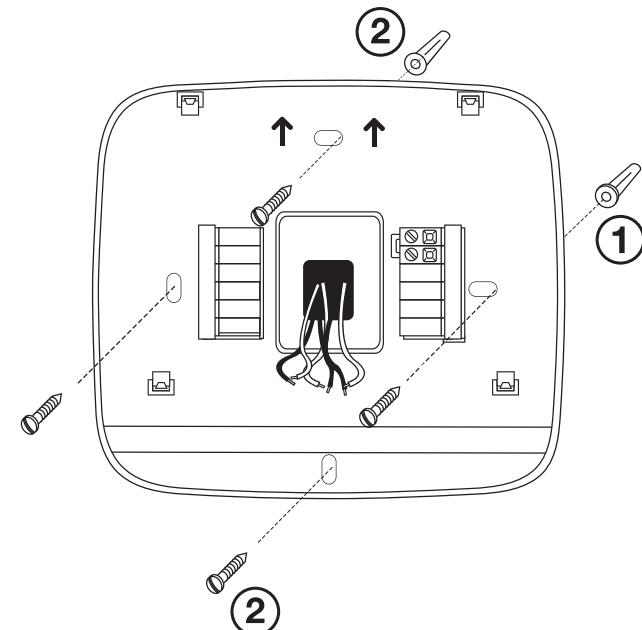

**1** Horizontal Mount

For horizontal mount put one screw on the left and one screw on the right.

**2** Vertical Mount

For vertical mount put one screw on the top and one screw on the bottom.

### Installation Tip: Electrical Hazard


Failure to disconnect the power before beginning to install this product can cause electrical shock or equipment damage.

### Mercury Notice

All of our products are mercury free. However, if the product you are replacing contains mercury, dispose of it properly. Your local waste management authority can give you instructions on recycling and proper disposal.

### Installation Tips

#### Base Module Subbase Installation



**1** Horizontal Mount

For horizontal mount put one screw on the left and one screw on the right.

**2** Vertical Mount

For vertical mount put one screw on the top and one screw on the bottom.

### Wiring Note

Wire the base module's subbase the same way you would wire a hardwired thermostat subbase.


### Note:

To connect the base module to the master thermostat, refer to the directions on page 13 of this manual.

### Note:

The base module must be hardwired (C and R terminals connected to 24V power.)

## Mount Thermostat and Base Module

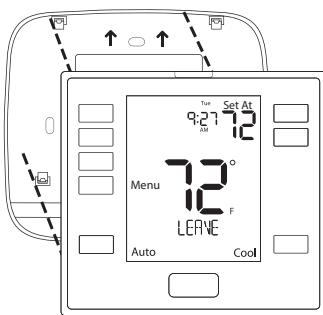


Align the 4 tabs on the subbase with corresponding slots on the back of the thermostat/base module, then push gently until it snaps in place.

**Note:** To ensure a solid fit between the thermostat/base module and the subbase:

1. Mount subbase to a flat wall
2. Use screws provided
3. Drywall anchors should be flush with the wall
4. Wires should be pushed into the wall

## Battery Installation

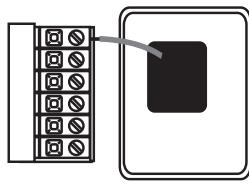


Battery installation is optional if there are no remotes connected to the Master Thermostat (C terminal connected). **If you connect an outdoor remote and/or indoor remote sensors it is required the thermostat be hardwired.**

**Important:** High quality alkaline batteries are recommended. Rechargeable batteries or low quality batteries do not guarantee a 1-year life span.

Insert 2 AA Alkaline batteries (included). High quality alkaline batteries are recommended.

On the back of the thermostat insert 2 AA Alkaline batteries (included).

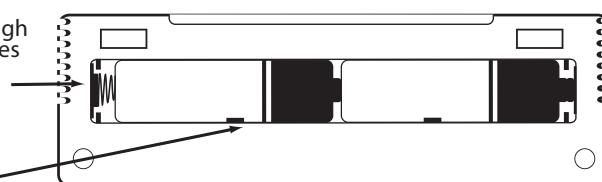


5

6

## Thermostat Quick Reference


## Getting to know your thermostat

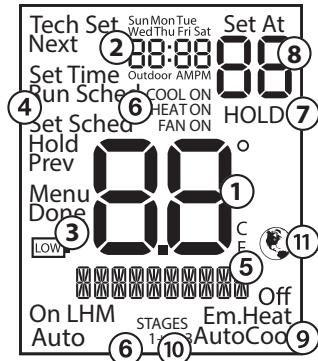

- 1 Indicates the current room temperature
- 2 Time and day of the week
- 3 Low Battery Indicator: Replace batteries when this indicator is shown.
- 4 Menu Options: Shows different options.
- 5 Program Time Periods: This thermostat has 4 programmable time periods per day.
- 6 System Operation Indicators: The COOL ON , HEAT ON or icon will display when the COOL, HEAT, or (fan) is on. **The compressor delay feature is active if these are flashing.**
- 7 Hold is displayed when the thermostat program is permanently overridden.
- 8 Setpoint: Displays the selected setpoint temperature.
- 9 System: Indicates current mode of operation.
- 10 Stages: +1 will appear in the display when second stage of heat or cool is on. +2 will appear for third stage of heat.
- 11 Globe: Globe is displayed if an energy efficient temperature has been selected.

## Thermostat Quick Reference

## Getting to know your thermostat

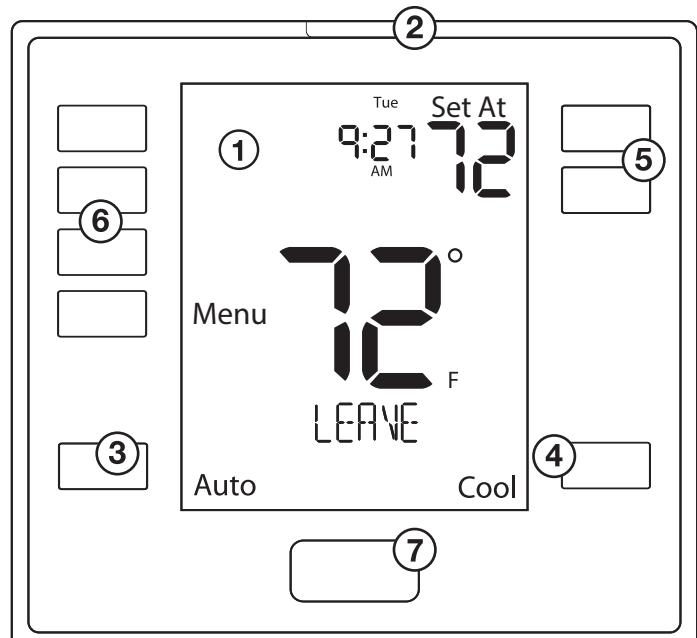

- 1 LCD Display
- 2 Glow in the dark light button
- 3 Fan Button
- 4 System Button
- 5 Temperature Setpoint Buttons
- 6 User Buttons
- 7 Private Label Badge

**Important**


The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the screen will only show the low battery indicator but maintain all functionality. If the user fails to replace the batteries after an additional 21 days (days 22-42 since first "low battery" display) the setpoints will change to 55°F (Heating) and 85°F (Cooling). If the user adjusts the setpoint away from either of these, it will hold for 4 hours then return to either 55°F or 85°F. After day 63 the batteries must be replaced immediately to avoid freezing or overheating because the thermostat will shut the unit off until the batteries are changed.

9

10

## Installation Tips

When performing an attic installation, instead of placing the base module in the attic, locate the closet nearest to the air conditioning unit. Then mount the base module high on the wall inside the closet or on the ceiling of the closet. This location will insure the base module is below the 150°F maximum ambient temperature specification.

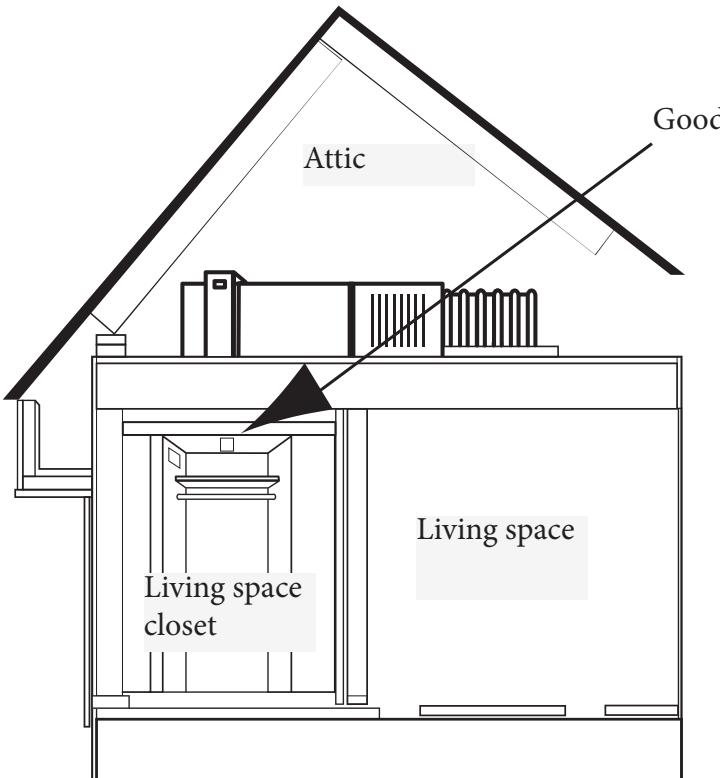

## Installation Tips

### Do not install the base module in locations:

- That are behind a chimney
- Where temperature could exceed 150°F
- Where rain or snow or extreme hot or cold is possible


**Note: This base module is NOT weatherproof.**

7

## Private Label Badge

### About The Badge

All of our thermostats use the same universal magnetic badge. Visit the company website to learn more about our free private label program.

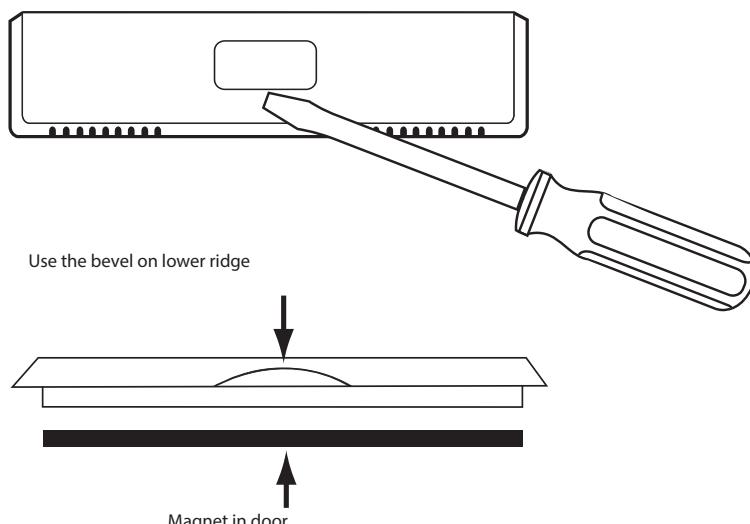


Gently slide a screwdriver into the bottom edge of the badge. Gently turn the screwdriver counter clockwise. The badge is held on by a magnet in the well of the battery door. The badge should pry off easily. **DO NOT USE FORCE.**

## Installation Tips

### Base Module - Basement Location

#### Wireless Range

Range between the thermostat and the base module is up to 100 feet with no obstructions and approximately 50 feet in standard residential construction. To extend the range try replacing the base unit higher if in a basement or further away from large metal objects.

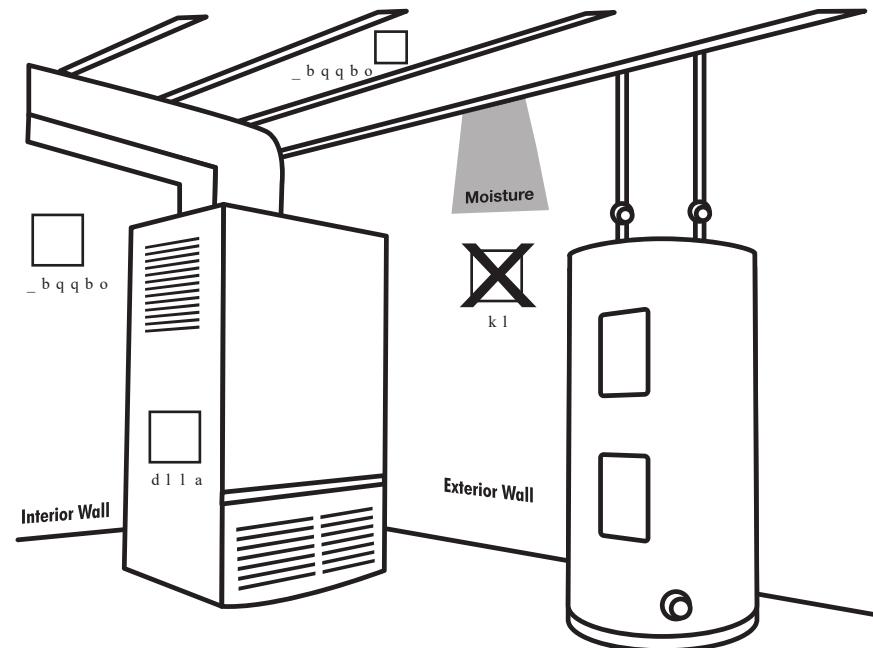

## Installation Tips

Do not install the base module in locations:

- That are behind a chimney
- Where temperature could exceed 150°F
- Where rain or snow or extreme hot or cold is possible

**Note: This base module is NOT weatherproof.**

8

## Wireless Communication Tips



**Follow these steps for a simple wireless communication setup.**


- 1 Locate all components in area near equipment.
- 2 Wire base module with 8ft pigtail and temporarily mount.

If you are not able to establish communication, this will allow you to relocate the module to an area with less obstruction, without having to rewire.

- 3 Install batteries in all devices you wish to use.

Thermostat, indoor/outdoor sensors.

- 4 A. Press the menu button on thermostat  
B. Press & hold tech set up button  
C. Configure the set up for your application  
D. Establish communication between devices

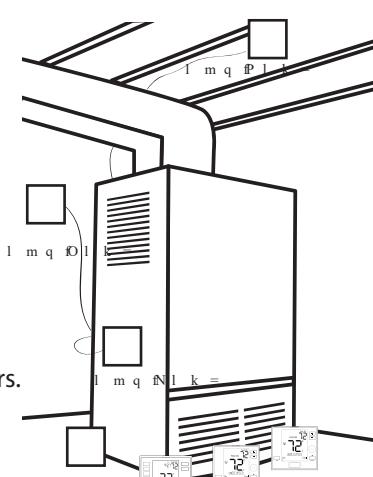

- 5 Install thermostat in final location.

Note: You must hardwire the thermostat when using remotes.

- 6 Turn on fan from thermostat to ensure communication.

Once communication is established, permanently mount module.

### Troubleshooting

If there is no communication between the thermostat and base module devices that are less than 50ft. apart, utilize an 8ft. pigtail to relocate and reduce interference. If there is not communication and devices are over 50ft. apart, add a W150W - Wireless Repeater.

## Reestablishing Communication

### Establishing communication between master thermostat and the base module

The thermostat and base module come factory linked out of the box. If however, communication is lost, follow this easy- two step process to re-establish the communication link.

1. Press and hold the base module button for 3 seconds. The Blue LED will flash when ready to receive initial signal from the thermostat. (Base module must be powered by 24V. Blue LED will be continuously on when 24V power is present.)


2. Hold the light key (shown here) of the thermostat for 10 seconds, the Blue LED on the base module will stop flashing after communication has been established between base module and the thermostat.

**Note:** The blue LED on the base module will be on when power is present. The blue LED will flash 3 times everytime it receives a signal from the thermostat. When a relay is on the corresponding LED relay indicator will be on.


**Note:** If the base module does not receive a signal from the thermostat for 15 minutes it will turn off all relays until communication is reestablished. The blue LED base module will also turn off to show communication has been lost.

**Note:** If communication has been lost for 1 hour and if freeze protection is enabled, heat and emergency heat relays will be turned on. The heat and emergency relays will turn on for 10 minutes every hour if there has been a call for heat in the last 24 hours.

#### Step 1. LED Relay Indicators

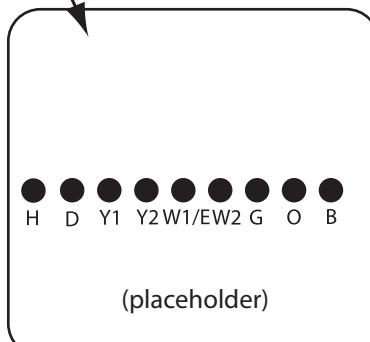

#### Step 2. Light key

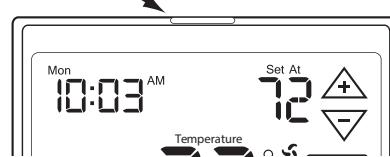

**Important:** DO NOT hold the light button on the thermostat for more than 10 seconds after step 2 above has been completed. Holding the light button down will break the communication link and the base module button will need to be pressed again to reestablish communication.

## Wiring



### Caution: Electrical Hazard

Failure to disconnect the power before beginning to install this product can cause electrical shock or equipment damage.



### Warning:

All components of the control system and the thermostat installation must conform to Class II circuits per the NEC Code.

### Wiring

- If you are replacing a thermostat, make note of the terminal connections on the thermostat that is being replaced. In some cases the wiring connections will not be color coded. For example, the green wire may not be connected to the **G** terminal.
- Loosen the terminal block screws. Insert wires then retighten the terminal block screws.
- Place nonflammable insulation into the wall opening to prevent drafts.



### Installation Tip

Do not overtighten terminal block screws, as this can damage the terminal block. A damaged terminal block can keep the thermostat from fitting on the subbase correctly or cause system operation issues.

**Max Torque = 6in-lbs.**

### Wiring Tips

#### C Terminal

The C (common wire) terminal does not have to be connected when the thermostat is powered by batteries.

#### Wire Specifications

Use shielded or non-shielded 18-22 gauge thermostat wire.

#### Note:

In many heat pump systems with no emergency heat relay, a jumper can be installed between **E** and **W2** to turn thermostat into a single stage control for Emergency Heat Operation.

## Wiring




**Note:** This thermostat is hardwired when the 24V transformer is connected to the Common and **RC** terminals of the thermostat.




**Note:** In many systems with no emergency heat relay a jumper can be used between **E** and **W2**.


### Typical Cool-Only System With Fan

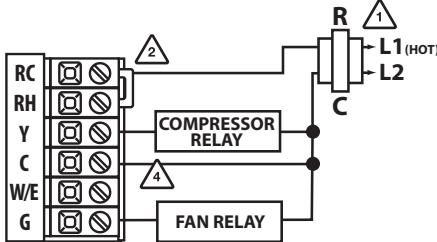


### Typical 2H/2C System: 2 Transformer

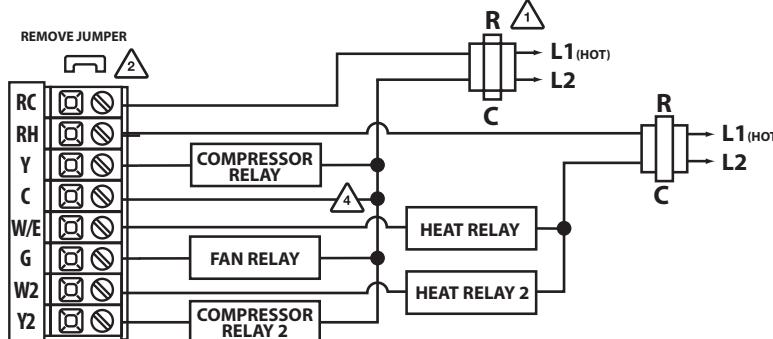

### Typical Heat Only System With Fan

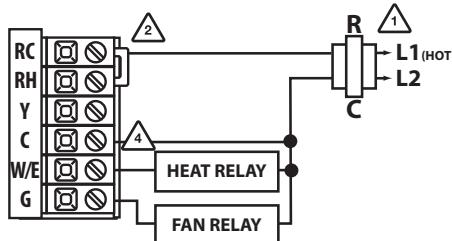

### Typical 2H/1C Heat Pump System

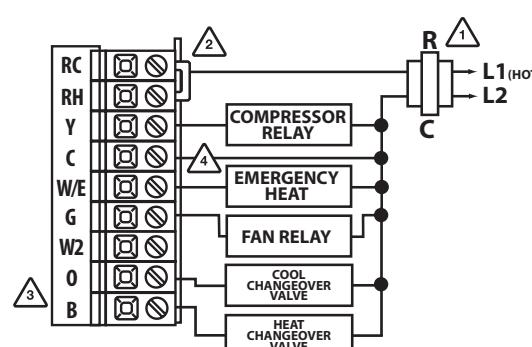

## Wiring

### Terminal Designations on the Base Module

This thermostat is shipped from the factory to operate a conventional heating and cooling system. This thermostat may also be configured for a heat pump system. See the "heat pump" configuration step on page 23 of this manual to configure the thermostat for heat pump applications.

| Terminal | 2 Heat 2 Cool Conventional System | 2 Heat 2 Cool Heat Pump System                  | 4 Heat 2 Cool Heat Pump System                  |
|----------|-----------------------------------|---|---|
| RC       | Transformer power (cooling)       | Transformer power (cooling)                     | Transformer power (cooling)                     |
| RH       | Transformer power (heating)       | Transformer power (heating)                     | Transformer power (heating)                     |
| C        | Transformer common                | Transformer common                              | Transformer common                              |
| B        | Energized in heating              | Heat pump changeover valve energized in heating | Heat pump changeover valve energized in heating |
| O        | Energized in cooling              | Heat pump changeover valve energized in cooling | Heat pump changeover valve energized in cooling |
| G        | Fan relay                         | Fan relay                                       | Fan relay                                       |
| W/E      | First stage of heat               | First stage of emergency heat                   | First stage of emergency heat                   |
| Y        | First stage of cool               | First stage of heat & cool                      | First stage of heat & cool                      |
| Y2       | Second stage of cool              | Second stage of cool                            | Second stage of cool & second stage of heat     |
| W2       | Second stage of heat              | Auxiliary heat relay, second stage of heat      | Auxiliary heat relay, third stage of heat       |
| H        | Humidify                          | Humidify  | Humidify  |
| D        | Dehumidify                        | Dehumidify                                      | Dehumidify                                      |

### Terminal Designations on the Master Thermostat

| Terminal | 2 Heat 2 Cool Conventional System | 2 Heat 2 Cool Heat Pump System | 4 Heat 2 Cool Heat Pump System |
|----------|-----------------------------------|--------------------------------|--------------------------------|
| R        | 24 VAC transformer power          | 24 VAC transformer power       | 24 VAC transformer power       |
| C        | transformer common                | transformer common             | transformer common             |

### Powering the Master Thermostat

If you add indoor or outdoor remote sensors to this wireless system you must hardwire the master thermostat.

15

## Technician Setup

This thermostat has a technician setup menu for easy installer configuration. To set up the thermostat for your particular application:

1. Press the **MENU** button.
2. Press and hold the technician setup button for 3 seconds. This 3 second delay is designed so that homeowners do not accidentally access the installer settings.
3. Configure the installer options as desired using the table below.

Use the **-** or **+** keys to change settings and the next step or previous step key to move from one step to another. **Note:** Only press the **DONE** key when you want to exit the Technician Setup options.

4. Press the **DONE** key to exit.

| Tech Setup Steps             | LCD Will Show  | Adjustment Options | Default   |     |
|------------------------------|--|--------------------|---|-----|
| Filter Change Reminder       | This feature will flash a reminder after the elapsed run time to remind the user to change the filter. A setting of "OFF" will disable this feature.   | OFF<br>FILTER 0000 | You can adjust the filter change reminder from "OFF" to 2000 hours of fan runtime in 50 hour increments.<br>OFF   | OFF |
| Room Temperature Calibration | This feature allows the installer to change the calibration of the room temperature display. For example, if the thermostat reads 70° and you would like it to read 72° then select +2.  | 0<br>CAL 1b RATE   | You can adjust the room temperature display to read up to 4° above or below the factory calibrated reading.<br>0°F  | 0°F |
| Minimum Compressor On Time   | This feature allows the installer to select the minimum run time for the compressor. For example, a setting of 4 will force the compressor to run for at least 4 minutes every time the compressor turns on, regardless of the room temperature. | OFF ON<br>AN       | You can set the minimum compressor run time to "OFF", "3", "4", or "5" minutes. If 3, 4 or 5 is selected, the compressor will run for at least the selected time before turning off.<br>OFF | OFF |

**Keypad Lockout Note:** The selected keypad lockout functionality must be activated after exiting tech setup. If you do not perform this procedure, all keys will function freely. To lock the keypad hold down the **+** and **-** keys for 3 seconds. You will see a lock in the display. To unlock the display hold down the **+** and **-** keys for 3 seconds.

## Wiring

### Wiring Tips

#### C Terminal

The C (common wire) terminal does not have to be connected when the thermostat is powered by batteries.


#### Wire Specifications

Use shielded or non-shielded 18-22 gauge thermostat wire.

**Installation Tip:** Do not overtighten terminal block screws, as this can damage the terminal block. A damaged terminal block can keep the thermostat from fitting on the subbase correctly or cause system operation issues. **Max Torque = 6in-lbs.**

- 1 Power supply
- 2 Factory - installed jumper. Remove only when installing on a 2 transformer systems.
- 3 Use either O or B terminals for changeover valve.
- 4 Optional 24 VAC common connection when thermostat is used in battery power mode.

#### Typical 2H/2C System: 1 Transformer

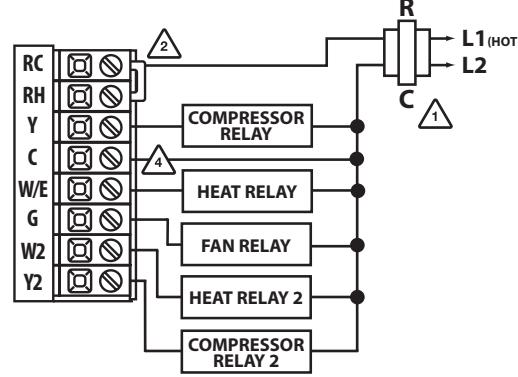

#### Note:

In many systems with no emergency heat relay a jumper can be installed between W/E and W2.

16

## Technician Setup

| Tech Setup Steps             | LCD Will Show                 | Adjustment Options  | Default  |      |
|------------------------------|-------------------------------|---|--|------|
| Compressor Short Cycle Delay | ON OFF<br>CO                  | The compressor short cycle delay protects the compressor from "short cycling". This feature will not allow the compressor to be turned on for 5 minutes after it was last turned off.                     | Selecting "ON" will not allow the compressor to be turned on for 5 minutes after the last time the compressor was on. Select "OFF" to remove this delay.   | ON   |
| Cooling Swing                | 0.5 dF<br>CO                  | The swing setting often called "cycle rate", "differential" or "anticipation" is adjustable. A smaller swing setting will cause more frequent cycles and a larger swing setting will cause fewer cycles.  | The cooling swing setting is adjustable from 0.2° to 2°. For example: A swing setting of 0.5° will turn the cooling on at approximately 0.5° above the setpoint and turn the cooling off at approximately 0.5° below the setpoint. | 0.5° |
| Heating Swing                | 0.5 dF<br>HE                  | The swing setting often called "cycle rate", "differential", or "anticipation" is adjustable. A smaller swing setting will cause more frequent cycles and a larger swing setting will cause fewer cycles. | The heating swing setting is adjustable from 0.2° to 2°. For example: A swing setting of 0.5° will turn the heating on at approximately 0.5° below the setpoint and turn the heating off at 0.5° above the setpoint.               | 0.4° |
| Keypad Lockout               | PA<br>See Keypad Lockout Note | Keypad lockout allows you to configure the thermostat so that some or all of the keys don't function.   | PA=partial keypad lockout, which locks all the keys except the <b>+</b> or <b>-</b> keys.<br>FU=full keypad lockout, which locks out all the keys.   | PA   |

#### Swing Setting Tip

The second stage will turn on at 2x the swing setting. The second stage will turn off when 1x the swing is reached. For example, if the swing setting is .5 degrees for heating and the thermostat is set at 70°F, the first stage will turn on at approximately 69.5°F. The second stage will turn on at 69°F. The second stage will turn off at 69.5°F and the first will turn off at 70.5°F. If the third stage is used, it will turn on at 68.5°F and turn off at approximately 69°F.

## Technician Setup

| Tech Setup Steps                   |  | LCD Will Show          | Adjustment Options   | Default       | Tech Setup Steps       |  | LCD Will Show                | Adjustment Options   | Default |
|------------------------------------|--|------------------------|--|---------------|------------------------|--|------------------------------|--|---------|
| Heating Temperature Setpoint Limit | This feature allows you to set a maximum heating setpoint limit. The setpoint temperature cannot be raised above this value.   | 90<br><b>HE</b>        | Use the $\Delta$ or $\nabla$ key to select the maximum heat setpoint.                                      | 90°F          | Pre-Occupancy Fan      | The pre-occupancy fan settings will energize the fan before the occupied time to provide ventilation prior to scheduled occupancy. This feature only shows if the technician setup step for time periods is set to 2C or 4C. | OFF<br><b>PRE OCCUPY FAN</b> | You can select the pre-occupancy fan from OFF, 1, 2, or 3 hours.   | OFF     |
| Cooling Temperature Setpoint Limit | This feature allows you to set a minimum cooling setpoint limit. The setpoint temperature cannot be lowered below this value.  | 44<br><b>CO</b>        | Use the $\Delta$ or $\nabla$ key to select the minimum cool setpoint.                                      | 44°F          | Display Light          | The display light can be configured to stay on all the time or come on when any key is pressed. NOTE: HARDWIRE ONLY Keeping the display light continually "ON" will greatly reduce battery life.                             | ON<br><b>DL</b>              | Use the $\leftarrow$ or $\rightarrow$ key to turn on or off. OFF configures the display light to come on when the light key or any button is pressed. ON configures the display light to stay on.  | OFF     |
| °F or °C                           | This feature allows you to display temperatures in either Fahrenheit or Celsius.   | OF<br>74° <sub>F</sub> | °F for Fahrenheit<br>°C for Celsius  | °F            | Contractor Call Number | Allows you to put your phone number in the display. You can choose ON or OFF.  | OFF                          | If selected ON, you will see the input screen after pressing <b>NEXT STEP</b> . Use the $\Delta$ or $\nabla$ key to select the desired number and the $\leftarrow$ or $\rightarrow$ key to move from one character to another. See note below for operation. | OFF     |
| 12 or 24 Hour Clock                | You can select either a 12 or 24 hour clock setting.   | 12H                    | Use the $\leftarrow$ or $\rightarrow$ key to select 12 or 24 hour clock.                                   | 12 HOUR CLOCK | Beep                   | When any key is pressed an audible beep will sound. You can choose ON or OFF.  | ON<br><b>b</b>               | If ON is selected the beep will sound. If OFF is selected there is no sound.   | ON      |
| Morning Recovery                   | This feature will start heating early to bring the building temperature to its programmed setpoint by the beginning of the WAKE, OCCUPIED time period.   | ON                     | Use the $\leftarrow$ or $\rightarrow$ key to turn on or off.   | ON            |                        |  |                              |  |         |
| Program Options                    | You can configure this thermostat to have a 7 day program, a 5+1+1 program or as nonprogrammable.  | 5d                     | Use the $\leftarrow$ or $\rightarrow$ key to select 7d for 7 day, 5d for 5+1+1, or 0d for nonprogrammable. | 5d            |                        |  |                              |  |         |
| Time Periods                       | You can configure this thermostat to have 2 or 4 programmable time periods per day. 4 time periods are Wake, Leave, Return & Sleep. 2C time periods are Occupied & Unoccupied. 4C time periods are Occupied 1, Unoccupied 1, Occupied 2, & Unoccupied 2. | 4                      | Use the $\leftarrow$ or $\rightarrow$ key to select 4, 2c, or 4c time periods per day.                     | 4             |                        |  |                              |  |         |

### Contractor Call Number Note

If contractor call number is selected ON, the phone number entered will show in the display if there has been a continuous call for heating or cooling for 24 hours or if the light button is held down for 3 seconds. To remove the phone number from the display, hold the light button down for 3 seconds.

21

## Technician Setup

| Tech Setup Steps        |  | LCD Will Show                      | Adjustment Options  | Default  | Tech Setup Steps     |  | LCD Will Show                 | Adjustment Options  | Default |
|-------------------------|--|------------------------------------|---|----------|----------------------|--|-------------------------------|---|---------|
| Stages of Heat          | You can configure the thermostat to operate a 3 stage heat pump system.<br>2H 2C = 2 heat, 2 cool<br>3H 2C = 3 heat, 2 cool<br>This feature is shown only if the HEAT PUMP technician setup step is ON.  | 2H2C<br><b>STAGE</b>               | Use the $\leftarrow$ or $\rightarrow$ key to change between 2 or 3 stages of heat. 2 heat will use Y1 as first stage and W2 as auxiliary.<br>3 heat will use Y1 as the first stage, Y2 as the second stage and W2 as the auxiliary. | 2 STAGES | Humidify             | This feature adds humidity when SYSTEM key is in heat.   | OFF<br><b>HUM ID ITY</b>      | Use the $\leftarrow$ or $\rightarrow$ key to turn on or off.<br>If ON is selected the humidity will be displayed on the main screen and HUM terminal will energize when humidity setpoint is above ambient humidity in Heat mode. | OFF     |
| Requires Outdoor Sensor | <b>An outdoor temperature ABOVE</b> this setting will LOCKOUT the auxiliary heat terminal (W2), and <b>ONLY ALLOW</b> the heat pump/compressor terminals (Y's) to energize.<br><br><b>An outdoor temperature BELOW</b> this setting can perform 2 different ways, depending on the previous <i>Gas Aux/Dual Fuel setting</i> .<br><br>1. If Gas Aux/Dual Fuel is set <b>OFF</b> (Default-typical Electric Aux setting) This will allow both heat pump (Y's) and auxiliary heat (W2) to run together.<br>2. If Gas Aux/Dual Fuel is set <b>ON</b> (typical Gas Auxiliary/Dual Fuel setting) This will LOCKOUT the heat pump (Y's) and <b>ONLY ALLOW</b> the auxiliary heat (W2) to energize | YES 50<br><b>BALANCE</b><br>PO INT | Use the $\leftarrow$ or $\rightarrow$ to select YES or NO.<br><br>If set to YES then use $\Delta$ or $\nabla$ to select Balance point Temperature of 10, 20, 30, 35, 40, 45 or 50 degrees.  | NO       | Dehumidify           | This feature removes humidity when SYSTEM key is in cool.  | OFF<br><b>DEHUM ID IFY</b>    | Use the $\leftarrow$ or $\rightarrow$ key to turn on or off.<br>If ON is selected the humidity will be displayed on the main screen and DHM terminal will energize when humidity setpoint is below ambient humidity in Cool mode. | OFF     |
| Balance Point Temp      | Only shows if Heat Pump is turned ON and Remote Sensor is set to 2.<br><br><b>Requires Outdoor Sensor</b>  | <b>YES</b><br><b>BALANCE</b>       |   |          | Humidity Calibration | This feature allows the installer to change the calibration of the ambient humidity displayed.   | 0<br><b>HUM CAL IBRATE</b>    | Use the $\leftarrow$ or $\rightarrow$ key to adjust the calibration +/-3.<br>1= approx. 5%  | 0       |
| Balance Point Run Time  | Balance point run time will allow the W2 auxiliary terminal to energize even if outdoor temperature is above the selected balance point temperature. If enabled, auxiliary will energize for the current cycle after the balance point run time has expired.   | NO<br><b>BALANCE RUN TIME</b>      | YES<br>15, 30, 45, 60, 75, 90 continuous run time minutes.  | NO       | Dehumidify with AC   | This feature forces the A/C to run longer to remove humidity when needed. The A/C will "over cool" the room a few degrees until the humidity reaches the desired setpoint. | NO<br><b>d HUM ID IFY AC</b>  | Use the $\leftarrow$ or $\rightarrow$ key to select YES or NO.<br>If selected Yes, allows over cooling to be used to control humidity in cool mode. If NO is selected the system will not use over cooling.                       | NO      |
|                         |  |                                    |   |          | Over Cool Limit      | The amount of over cooling allowed when using A/C to remove humidity. This screen is only shown when ON is selected in the "Dehumidify with AC" tech setup step.           | 3<br><b>OVER COOL L IM IT</b> | Use the $\leftarrow$ or $\rightarrow$ key to select the maximum number of degrees of over cool.<br>Options are: 2, 3, 4, 5 Degrees.   | 3       |
|                         |  |                                    |   |          | HUM Terminal         | Options for how the HUM terminal energizes.  | 1<br><b>HUM TERM INFL</b>     | Use the $\leftarrow$ or $\rightarrow$ key to select the one of the four options.<br><br>View the HUM terminal chart below for an explanation of these options.  | 1       |

22

## Technician Setup

25

26

## Technician Setup

| Tech Setup Steps                  |   | LCD Will Show | Adjustment Options  | Default       | Tech Setup Steps  |   | LCD Will Show | Adjustment Options  | Default |
|-----------------------------------|---|---------------|---|---------------|-------------------|---|---------------|---|---------|
| Heat Pump                         | When turned on the thermostat will operate a heat pump.<br>1. EM. Heat will show as an option in the system switch.<br>2. Y will be first stage of heat & cool, W/E will be emergency heat relay & W2 will be auxiliary heat relay.                               | OFF           | OFF configures the thermostat for non heat pump systems.<br>ON configures the thermostat for heat pump systems.   | OFF           | Outdoor Sensor    | Enables the use of an outdoor sensor. Connecting an outdoor sensor allows for a balance point setting. Selecting YES requires the master thermostat to be powered with 24V on C and R terminals. See the outdoor sensor guide for more information. | NO            | When NO is selected the thermostat is unable to connect to an outdoor remote sensor. When YES is selected the thermostat is able to connect to an outdoor remote sensor. Press and hold connect button on outdoor sensor until the master thermostat says FOUND OUTDOOR on display. | NO      |
| System Set                        | You can configure the system switch for the particular application.<br>Heat - Off - Cool, Heat - Off, Cool - Off, Heat - Off - Cool - Auto<br>Note: EM. Heat will show if in heat pump mode.  | SYSTEM SET    | Use the < or > key until the desired application is flashing.<br>AUTO - Auto Changeover   | HEAT OFF COOL | Remote Sensor     | Enables the use of up to four indoor sensors. Selecting YES requires the master thermostat to be powered with 24V on C and R terminals.   | NO            | When NO is selected the thermostat is unable to connect to an indoor remote sensor. When YES is selected the thermostat is able to connect to up to four indoor remote sensors. Go to the next step FINDING SENSOR to connect remote sensors.                                       | NO      |
| Fan Operation                     | Select GAS for systems that control the fan during a call for heat.<br>Select ELEC to have the thermostat control the fan during a call for heat. Will not appear if Heat Pump is "ON".   | GAS           | GAS or ELEC   | GAS           | Finding Sensor    | This step connects the indoor sensor with the master thermostat. The previous step remote sensor must be set to YES in order to connect an indoor sensor.   | 1             | The number shown represents the zone. Use < or > to select the zone you wish to connect. The zone setting on the master and the indoor sensors must be the same to connect. See indoor sensors user guide for detailed connection information. See note below for more information. | 1       |
| Dual Fuel Auxiliary for Heat Pump | For Dual Fuel applications (Gas/Fossil fuel Auxiliary Heat), turn this setting ON to LOCKOUT the Heat Pump (Y) when Auxiliary Heat (W2) is on. If desired - This can also be used with Electric Auxiliary.<br>Will only appear if Heat pump setting is turned ON. | OFF           | OFF Will allow Y(1st stage of Heat) and W2 (Aux Heat) to run together if called for.<br>ON Will de-energize Y terminal 45 seconds after a call for Auxiliary Heat (W2). | OFF           | Local Temp Sensor | Disable the sensor on the master. At least one indoor remote sensor must be connected to disable the local sensor.  | YES           | YES enables local sensor.<br>NO disables local sensor.  | YES     |
| Cooling Fan Delay                 | The cooling fan delay setting will delay the fan from coming on in cool mode and keep it running after the compressor shuts off for a short time to save energy in some systems.  | OFF           | COOL FAN DELAY  | OFF           | Freeze Protection | Turns on the heat for 10 minutes each hour if unable to communicate with the master thermostat if there has been a call for heat in the last 24 hours.  | NO            | YES enables freeze protection.<br>NO disables freeze protection.  | YES     |

23

## Technician Setup

| Tech Setup Steps |  | LCD Will Show | Adjustment Options  | Default |
|------------------|--|---------------|---|---------|
| DHM Terminal     | Option for how DHM terminal energizes.<br>Note: Set as option 1 if DEHUM with AC is set to YES.  | 3             | Use the < or > key to select the one of the four options.<br>DEHM TERM IN AL              | 1       |
| Dehumidify Relay | You can configure the D Terminal as normally-open or normally closed.<br>NO= Normally Open<br>NC= Normally Closed<br>See Note Below          | NO            | Use the < or > key to select NO or NC.<br>DEHUM ID IFY DELAY                              | NO      |
| Satisfy Setpoint | This feature allows the thermostat to keep multiple stages of heat or cool energized until setpoint is satisfied.                            | OFF           | Use the < or > key to turn on or off.<br>SS STAG ING                                      | OFF     |
| Staging Delay    | This feature allows a delay to occur when a second and third stage is needed. This allows the previous stage extra time to satisfy setpoint. | OFF           | Use the < or > key to select the number of minutes to delay each stage.<br>STAG ING DELAY | OFF     |

**Note:** When the dehumidify terminal is configured as normally-closed, the base module D terminal LED indicator will be lit when the relay is closed. When the thermostat calls for dehumidification, the D terminal LED indicator will turn off.

### HUM Terminal

| OPTIONS | HUM terminal energizes when the ambient humidity is...                                 |
|---------|--|
| 1       | Below the humidity setpoint and heat or fan is energized.                              |
| 2       | Below the humidity setpoint and heat is energized.                                     |
| 3       | Below the humidity setpoint. It will also energize the fan during a call for humidity. |
| 4       | Below the humidity setpoint.   |

### DHM Terminal

| OPTIONS | DHM terminal energizes when the ambient humidity is...   |
|---------|--|
| 1       | Above the humidity setpoint and cool or fan is energized.                                      |
| 2       | Above the humidity setpoint. It will also energize the fan during a call for dehumidification. |
| 3       | Above the humidity setpoint.   |
| 4       | Above the humidity setpoint and the compressor is not running.                                 |

## Technician Setup

| Tech Setup Steps  |   | LCD Will Show | Adjustment Options  | Default |
|-------------------|---|---------------|---|---------|
| Outdoor Sensor    | Enables the use of an outdoor sensor. Connecting an outdoor sensor allows for a balance point setting. Selecting YES requires the master thermostat to be powered with 24V on C and R terminals. See the outdoor sensor guide for more information. | NO            | When NO is selected the thermostat is unable to connect to an outdoor remote sensor. When YES is selected the thermostat is able to connect to an outdoor remote sensor. Press and hold connect button on outdoor sensor until the master thermostat says FOUND OUTDOOR on display. | NO      |
| Remote Sensor     | Enables the use of up to four indoor sensors. Selecting YES requires the master thermostat to be powered with 24V on C and R terminals.   | NO            | When NO is selected the thermostat is unable to connect to an indoor remote sensor. When YES is selected the thermostat is able to connect to up to four indoor remote sensors. Go to the next step FINDING SENSOR to connect remote sensors.                                       | NO      |
| Finding Sensor    | This step connects the indoor sensor with the master thermostat. The previous step remote sensor must be set to YES in order to connect an indoor sensor.   | 1             | The number shown represents the zone. Use < or > to select the zone you wish to connect. The zone setting on the master and the indoor sensors must be the same to connect. See indoor sensors user guide for detailed connection information. See note below for more information. | 1       |
| Local Temp Sensor | Disable the sensor on the master. At least one indoor remote sensor must be connected to disable the local sensor.  | YES           | YES enables local sensor.<br>NO disables local sensor.  | YES     |
| Freeze Protection | Turns on the heat for 10 minutes each hour if unable to communicate with the master thermostat if there has been a call for heat in the last 24 hours.  | NO            | YES enables freeze protection.<br>NO disables freeze protection.  | YES     |

24

## Technician Setup

### Note:

Up to four indoor temperature sensors can be connected to one thermostat. This allows for 5 sensing points (zones). For example: the local (thermostat) plus four indoor sensors enables 5 sensing points. To connect an indoor sensor to a thermostat, select 1 on the FINDING SENSOR technician setup step. Then hold down the light button on the indoor sensor until it beeps, while in ZONE technician setup step on the indoor sensor. To connect a second indoor sensor change the thermostat to read 2 and change the indoor sensor to zone 2. The zone setting must match between the thermostat and the indoor sensor to connect. When the connection is established the thermostat will show FOUND + NAME of the indoor sensor in the system information area of display.

### Balance Point:

The system operates differently when a balance point is used. On a dual fuel system, the balance point outdoor temperature setting will be the outdoor temperature at which the thermostat chooses either the heat pump or gas furnace. For example: A balance point setting of 30°F will turn on only the heat pump above 30°F and only the gas furnace below 30°F. Y1 will be stage one above 30°F and W2 will be stage one below 30°F. A heat pump with electric auxiliary will energize the heat pump above and below balance point. The electric auxiliary will only energize below balance point. For Example: A balance point setting of 40°F, will turn on the heat pump above 40°F and turn on the heat pump and electric auxiliary below 40°F.

### Reminders

Once a reminder has been turned on and set, the elapsed time can be checked by navigating to its tech setup step. The elapsed time will then appear in the text field. It can also be reset at that time by holding down the set CLEAN button for 3 seconds. Resetting an expired reminder can be done without entering tech setup, by holding down the set CLEAN button for 3 seconds from the home screen.

27

28

## Setting The Humidity

### Setting The Humidity

Follow the steps below to change your target humidity setpoint.



Press the humidity button. Use the **+** or **-** button to select the target humidity setpoint. Press **DONE** when completed.

**Note:**

The target humidity setpoint is not programmable. Unlike temperature, humidity does not change quickly and should not be programmed.

**Note:**



Humidity is only energized during heat. Dehumidify is only energized during cool. Heat and cool each have their own target setpoints.

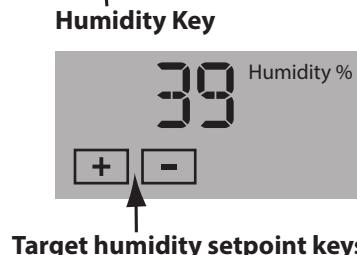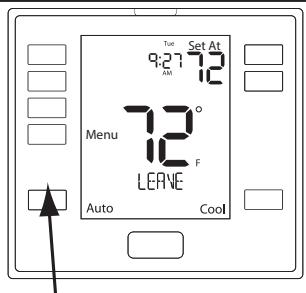

Target humidity setpoint keys

### Ambient Humidity Display

Ambient humidity will flash opposite the day and time, if the optional outdoor temperature sensor is installed the ambient outdoor temperature will also cycle in the display.

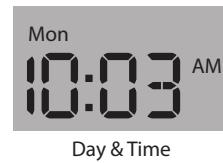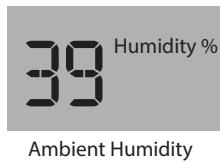

### Increasing Humidity

The table on the right shows recommended indoor humidity levels in relation to outdoor temperatures during heating (adding humidity).

Consult your professional HVAC technician for recommended settings for your climate.

| Outside Temperature (0°) | Recommended Relative Humidity |
|--------------------------|-------------------------------|
| +20° and above           | 35% to 40%                    |
| +10°                     | 30%                           |
| 0°                       | 25%                           |
| -10°                     | 20%                           |
| -20°                     | 15%                           |

## Programming

| Custom Program  |              |      |                             |                             |
|-----------------|--------------|------|-----------------------------|-----------------------------|
| Day of the Week | Events       | Time | Setpoint Temperature (HEAT) | Setpoint Temperature (COOL) |
| Weekday         | Wake/OCC1    |      |                             |                             |
|                 | Leave/UNOCC1 |      |                             |                             |
|                 | Return/OCC2  |      |                             |                             |
|                 | Sleep/UNOCC2 |      |                             |                             |
|                 | Occupied     |      |                             |                             |
|                 | Unoccupied   |      |                             |                             |
| Saturday        | Wake/OCC1    |      |                             |                             |
|                 | Leave/UNOCC1 |      |                             |                             |
|                 | Return/OCC2  |      |                             |                             |
|                 | Sleep/UNOCC2 |      |                             |                             |
|                 | Occupied     |      |                             |                             |
|                 | Unoccupied   |      |                             |                             |
| Sunday          | Wake/OCC1    |      |                             |                             |
|                 | Leave/UNOCC1 |      |                             |                             |
|                 | Return/OCC2  |      |                             |                             |
|                 | Sleep/UNOCC2 |      |                             |                             |
|                 | Occupied     |      |                             |                             |
|                 | Unoccupied   |      |                             |                             |

## Programming

### Set Time (If using programming)

Follow the steps below to set the day of the week and current time:

1. Press the **MENU** button.
2. Press **Set Time**.
3. Day of the week is flashing. Use the **+** or **-** key to select the current day of the week.
4. Press **Next Step**.
5. The current hour is flashing. Use the **+** or **-** key to select the current hour. When using 12-hour time, make sure the correct a.m. or p.m. choice is selected.
6. Press **Next Step**.
7. Minutes are now flashing. Use the **+** or **-** key to select current minutes.
8. Press **DONE** when completed.

### Programming

All our programmable thermostats are shipped with an energy saving default program. You can customize this default program by following the instructions in the **set program schedule section** starting on page 34.

Your thermostat can be programmed to have each day of the week programmed uniquely (7 days), all the weekdays the same with a separate program for Saturday and a separate program for Sunday (5+1+1), or non-programmable. For the 7-day and 5+1+1 programming modes, there are three time period options.

1. "4" Residential (**WAKE, LEAVE, RETURN, SLEEP**)

2. "2C" Commercial (**OCCUPIED, UNOCCUPIED**)

3. "4C" Commercial (**OCCUPIED 1, UNOCCUPIED 1, OCCUPIED 2, UNOCCUPIED 2**)

This thermostat has a programmable fan feature, which allows you to run the fan continually during any time period.

## Programming

### Set Program Schedule For Two Time Periods (OCCUPIED, UNOCCUPIED)

To customize your 5+1+1 Program schedule, follow these steps:

**Weekday:**

1. Select **HEAT** or **COOL** with the **SYSTEM** key. **Note:** You have to program heat and cool each separately.
2. Press the **MENU** button (If menu does not appear first, press **RUN SCHED**).
3. Press **SET SCHED**. **Note:** Monday-Friday is displayed and the **OCCUPIED** text is shown. You are now programming the **OCCUPIED** time period for the weekday setting.
4. Use the **+** or **-** key to make your time selection for the weekday **OCCUPIED** time period. **Note:** If you want the fan to run continuously during this time period, select **ON** with the **FAN** key.
5. Then use the **+** or **-** key to make your setpoint selection for the weekday **OCCUPIED** period.
6. Press **Next Step**.
7. Repeat steps 4 through 6 for the weekday **UNOCCUPIED** time period.

**Saturday:**

Repeat steps 4 through 6 for the Saturday **OCCUPIED** time period and for the Saturday **UNOCCUPIED** time period.

**Sunday:**

Repeat steps 4 through 6 for the Sunday **OCCUPIED** time period, and for the Sunday **UNOCCUPIED** time period.

## Programming

### Default Programming

| Factory Default Program |              |       |                             |                             |
|-------------------------|--------------|-------|-----------------------------|-----------------------------|
| Day of the Week         | Events       | Time  | Setpoint Temperature (HEAT) | Setpoint Temperature (COOL) |
| Weekday                 | Wake/OCC1    | 6 AM  | 70°F (21°C)                 | 75°F (24°C)                 |
|                         | Leave/UNOCC1 | 8 AM  | 62°F (17°C)                 | 83°F (28°C)                 |
|                         | Return/OCC2  | 6 PM  | 70°F (21°C)                 | 75°F (24°C)                 |
|                         | Sleep/UNOCC2 | 10 PM | 62°F (17°C)                 | 78°F (26°C)                 |
| Saturday                | Wake/OCC1    | 6 AM  | 70°F (21°C)                 | 75°F (24°C)                 |
|                         | Leave/UNOCC1 | 8 AM  | 62°F (17°C)                 | 83°F (28°C)                 |
|                         | Return/OCC2  | 6 PM  | 70°F (21°C)                 | 75°F (24°C)                 |
|                         | Sleep/UNOCC2 | 10 PM | 62°F (17°C)                 | 78°F (26°C)                 |
| Sunday                  | Wake/OCC1    | 6 AM  | 70°F (21°C)                 | 75°F (24°C)                 |
|                         | Leave/UNOCC1 | 8 AM  | 62°F (17°C)                 | 83°F (28°C)                 |
|                         | Return/OCC2  | 6 PM  | 70°F (21°C)                 | 75°F (24°C)                 |
|                         | Sleep/UNOCC2 | 10 PM | 62°F (17°C)                 | 78°F (26°C)                 |

## Programming

### Default Programming

| Factory Default Program for 2 Time Periods |            |      |                             |                             |
|--|------------|------|-----------------------------|-----------------------------|
| Day of the Week                            | Events     | Time | Setpoint Temperature (HEAT) | Setpoint Temperature (COOL) |
| Weekday                                    | OCCUPIED   | 8 AM | 70°F (21°C)                 | 72°F (22°C)                 |
|  | UNOCCUPIED | 6 PM | 64°F (18°C)                 | 80°F (27°C)                 |
| Saturday                                   | OCCUPIED   | 8 AM | 70°F (21°C)                 | 72°F (22°C)                 |
|  | UNOCCUPIED | 6 PM | 64°F (18°C)                 | 80°F (27°C)                 |
| Sunday                                     | OCCUPIED   | 8 AM | 70°F (21°C)                 | 72°F (22°C)                 |
|  | UNOCCUPIED | 6 PM | 64°F (18°C)                 | 80°F (27°C)                 |

You can use the table on the next page to plan your customized program schedule if using 5+1+1.

31

## Programming

### To customize your 7 day program schedule, follow these steps:

#### Monday:

1. Select **HEAT** or **COOL** with the **SYSTEM** key.  
**Note:** You have to program heat and cool each separately.
2. Press the **MENU** button (If menu does not appear first press **RUN SCHED**).
3. Press **SET SCHED**. **Note:** Monday is displayed and the **OCCUPIED** text is shown. You are now programming the **OCCUPIED** time period for that day.
4. Use the **[+]** or **[-]** key to make your time selection for the **OCCUPIED** time period. **Note:** If you want the fan to run continuously during this time period, select **ON** with the **FAN** key.
5. Then use the **[+]** or **[-]** key to make your setpoint selection for that day's **OCCUPIED** period.
6. Press **NEXT**.
7. Repeat steps 4 through 6 for that day's **UNOCCUPIED** time period.

Repeat steps 4 through 6 for the remaining days of the week.

#### A Note About Programmable Fan:

The programmable fan feature will run the fan continuously during any time period it is programmed to be on. This is the best way to keep the air circulated and to eliminate hot and cold spots in your building.

32

## Programming

### Set Program Schedule For Four Time Periods

(WAKE, LEAVE, RETURN, SLEEP or OCCUPIED 1, UNOCCUPIED1, OCCUPIED 2, UNOCCUPIED 2)

### To customize your 5+1+1 Program schedule, follow these steps:

#### Weekday:

1. Select **HEAT** or **COOL** with the system key.  
**Note:** You have to program heat and cool each separately.
2. Press the **MENU** button (If menu does not appear first press **RUN SCHED**).
3. Press **SET SCHEDULE**. **Note:** Monday-Friday is displayed and the **WAKE/OCC1** icon is shown. You are now programming the **WAKE/OCC1** time period for the weekday setting.
4. Use the **[+]** or **[-]** key to make your time selection for the weekday **WAKE/OCC1** time period.  
**Note:** If you want the fan to run continuously during this time period, select **ON** with the **FAN** key.
5. Then use the **[+]** or **[-]** key to make your setpoint selection for the weekday **WAKE/OCC1** period.
6. Press **Next Step**.
7. Repeat steps 4 through 6 for the weekday **LEAVE/UNOCC1** time period, for the weekday **RETURN/OCC2** time period, and for the weekday **SLEEP/UNOCC2** time period.

#### Saturday:

Repeat steps 4 through 6 for the Saturday **WAKE/OCC1** time period, **LEAVE/UNOCC1** time period, **RETURN/OCC2** time period, and for the Saturday **SLEEP/UNOCC2** time period.

#### Sunday:

Repeat steps 4 through 6 for the Sunday **WAKE/OCC1** time period, **LEAVE/UNOCC1** time period, **RETURN/OCC2** time period, and for the Sunday **SLEEP/UNOCC2** time period.

35

36

## Programming

To customize your 7 day Program schedule, follow these steps:

### Monday:

1. Select **HEAT** or **COOL** with the **SYSTEM** key.  
**Note:** You have to program heat and cool each separately.
2. Press the **MENU** button (If menu does not appear first, press **RUN SCHED**).
3. Press **SET SCHED**. **Note:** Monday is displayed and the **WAKE/OCC1** icon is shown. You are now programming the **WAKE/OCC1** time period for that day.
4. Use the **[+]** or **[-]** key to make your time selection for that day's **WAKE/OCC1** time period.  
**Note:** If you want the fan to run continuously during this time period, select **ON** with the **FAN** key.
5. Then use the **[+]** or **[-]** key to make your setpoint selection for that day's **WAKE/OCC1** period.
6. Press **Next Step**.
7. Repeat steps 4 through 6 for that day's **LEAVE/UNOCC1** time period, for that day's **RETURN/OCC2** time period, and for that day's **SLEEP/UNOCC2** time period.

**Repeat steps 4 through 6 for the remaining days of the week.**

### A Note About Auto Changeover:

In Auto you have the ability to switch between Auto Heat or Auto Cool by pressing the system key. This can be done once the current mode has reached its setpoint. For example: if in Auto Heat, the heat setpoint must be satisfied before the thermostat will allow you to switch to Auto Cool. You can switch out of Auto by holding down the **SYSTEM** key. To get back into Auto, you must toggle the system key to Auto.

## Features

### Temporary & Permanent Hold Feature

**Temporary Hold:** The thermostat will display **HOLD** and **Run Schedule** on the bottom of the screen when you press the **[+]** or **[-]** key. If you do nothing, the temperature will remain at this setpoint temporarily for 4 hours. The program setpoint will then replace the temporary setpoint.

**Permanent Hold:** With a temporary hold set, If you press the **HOLD** key at the bottom of your screen, you will see **HOLD** appear next to the setpoint temperature in the display. The thermostat will now permanently stay at this setpoint and can be adjusted using the **[+]** or **[-]** keys.

**To Return To Program:** Press the **Run Schedule** key at the bottom of the screen to exit temporary and permanent holds.

### Filter Change Reminder

If your installing contractor has configured the thermostat to remind you when the air filter needs changed, you will see a reminder in the display when your air filter needs changed. the reminder will be shown in the display after your system has run long enough to require an air filter change.

**Resetting the filter change reminder:** When the reminder is displayed, you should change your air filter and reset the reminder by holding down the **"Clean"** key on the left side of the thermostat for 3 seconds.

37

## Specifications

### Specifications

|  |  |
|--|--|
| The display range of temperature ...     | 41°F to 95°F (5°C to 35°C)   |
| The control range of temperature....     | 44°F to 90°F (7°C to 32°C)   |
| Load Rating.....                         | 1 amp per terminal, 1.5 amp maximum all terminals combined   |
| Swing (cycle rate or differential) ..... | Heating is adjustable from 0.2° to 2.0°<br>Cooling is adjustable from 0.2° to 2.0°                 |
| Power source .....                       | 18 to 30 VAC, NEC Class II, 50/60 Hz<br>for hardwire<br>Battery power from 2 AA Alkaline batteries |
| Operating ambient .....                  | 32°F to +105°F (0°C to +41°C)  |
| Operating humidity .....                 | 90% non-condensing maximum   |
| Dimensions of thermostat .....           | 4.7"W x 4.3"H x 1.1"D  |
| Frequency .....                          | 916 MHz  |
| Base module                              |  |
| Load rating .....                        | 1 amp per terminal, 1.5 amp maximum all terminals combined   |
| Power source .....                       | 18 to 30 VAC, NEC class II, 50/60 Hz   |
| Operating ambient .....                  | 32°F to +150°F (0° to +65°C)   |
| Operating humidity .....                 | 90% non-condensing maximum   |

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC RF Exposure Statement

The device shall be used in such a manner that the potential for human contact normal operation is minimized. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

39

38

40