


PRO-FORM[®] XP

WHIRLWIND 280

Model No. 831.21822.1

Serial No. _____

Write the serial number in the space above for reference.

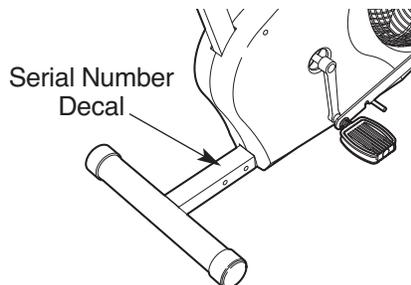

BIKE EXERCISER

User's Manual

- Assembly
- Operation
- Maintenance
- Part List and Drawing

Sears, Roebuck and Co.
Hoffman Estates, IL 60179

CAUTION

Read all precautions and instructions in this manual before using this equipment. Keep this manual for future reference.

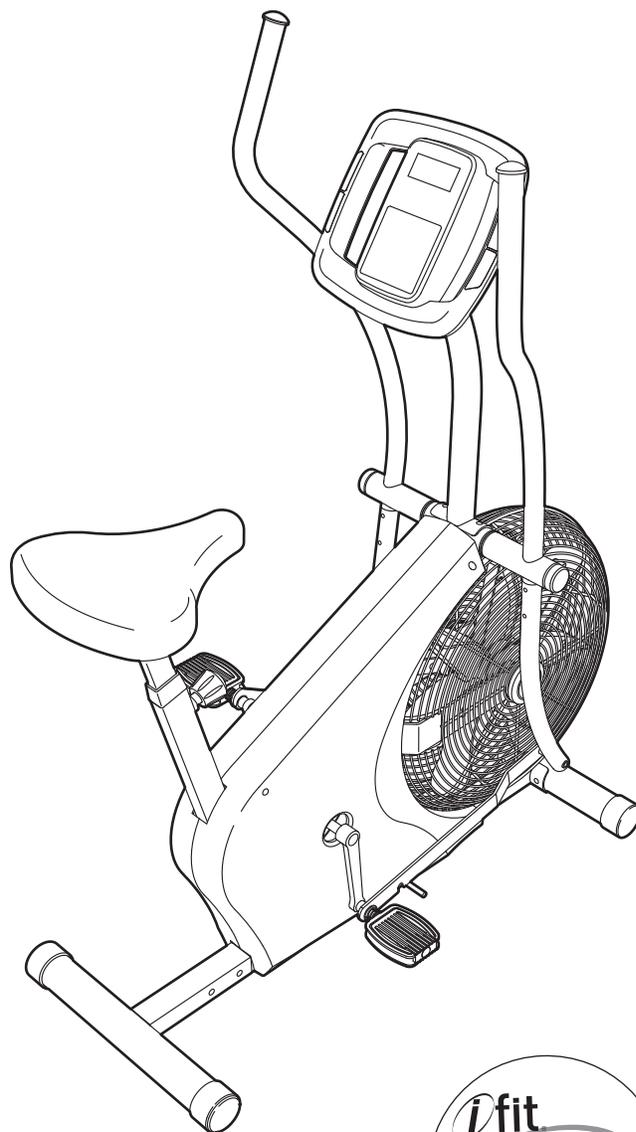


TABLE OF CONTENTS

WARNING DECAL PLACEMENT2

IMPORTANT PRECAUTIONS3

BEFORE YOU BEGIN4

ASSEMBLY5

HOW TO USE THE EXERCISE CYCLE11

MAINTENANCE AND TROUBLESHOOTING14

EXERCISE GUIDELINES16

PART LIST18

EXPLODED DRAWING19

ORDERING REPLACEMENT PARTSBack Cover

90 DAY FULL WARRANTYBack Cover


WARNING DECAL PLACEMENT

This drawing shows the location(s) of the warning decal(s). **If a decal is missing or illegible, call 1-888-533-1333 and request a free replacement decal. Apply the decal in the location shown.** Note: The decal(s) may not be shown at actual size.

WARNING

- Misuse of this machine may result in serious injury.
- Read user's manual prior to use and follow all warnings and instructions.
- Do not allow children on or around machine.
- Pedals continue to spin when you stop pedaling.
- Spinning pedals can cause injury.
- Reduce pedal speed in a controlled manner.
- User weight must not exceed 250 pounds.
- Replace label if damaged, illegible, or removed.



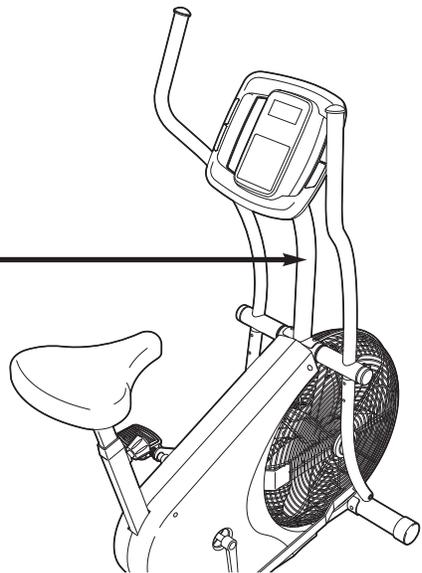

IMPORTANT PRECAUTIONS

⚠️ WARNING: To reduce the risk of serious injury, read all important precautions and instructions in this manual and all warnings on your exercise cycle before using your exercise cycle. Sears assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

1. Before beginning any exercise program, consult your physician. This is especially important for persons over age 35 or persons with pre-existing health problems.
2. It is the responsibility of the owner to ensure that all users of the exercise cycle are adequately informed of all precautions.
3. The exercise cycle is intended for home use only. Do not use the exercise cycle in a commercial, rental, or institutional setting.
4. Keep the exercise cycle indoors, away from moisture and dust. Place the exercise cycle on a level surface, with a mat beneath it to protect the floor or carpet. Make sure that there is at least 2 ft. (0.6 m) of clearance around the exercise cycle.
5. Inspect and properly tighten all parts regularly. Replace any worn parts immediately.
6. Keep children under age 12 and pets away from the exercise cycle at all times.
7. The exercise cycle should not be used by persons weighing more than 250 lbs. (113 kg).
8. Wear appropriate exercise clothes while exercising; do not wear loose clothes that could become caught on the exercise cycle. Always wear athletic shoes for foot protection while exercising.
9. When adjusting the seat, insert the adjustment knob into one of the holes in the seat post. Do not insert the seat pin under the seat post.
10. The pulse sensor is not a medical device. Various factors, including the user's movement, may affect the accuracy of heart rate readings. The pulse sensor is intended only as an exercise aid in determining heart rate trends in general.
11. Keep your back straight while using the exercise cycle; do not arch your back.
12. When you stop exercising, allow the pedals to slowly come to a stop.
13. Over exercising may result in serious injury or death. If you feel faint or if you experience pain while exercising, stop immediately and cool down.
14. Use the exercise cycle only as described in this manual.
15. When connecting the link arms to the pedals, make sure that the link arms are fully seated on the pedal bushings (see HANDLEBAR OPERATION on page 11). If the link arms are not on the pedal bushings, they may slip off during use, resulting in injury to the user.
16. When adjusting the height of the seat, make sure that the pin on the seat knob is inserted into one of the adjustment holes in the seat post (see HOW TO ADJUST THE SEAT on page 11). Do not rest the seat post on top of the pin on the seat knob.


BEFORE YOU BEGIN

Congratulations for selecting the new PROFORM® XP WHIRLWIND 280 exercise cycle. Cycling is one of the most effective exercises for increasing cardiovascular fitness, building endurance, and toning the entire body. The XP WHIRLWIND 280 exercise cycle offers an array of features designed to let you enjoy this healthful exercise in the comfort and privacy of your home.


For your benefit, read this manual carefully before you use the exercise cycle. If you have questions

after reading this manual, please see the back cover of this manual. To help us assist you, note the product model number and serial number before contacting us. The model number and the location of the serial number decal are shown on the front cover of this manual.


Before reading further, please familiarize yourself with the parts that are labeled in the drawing below.

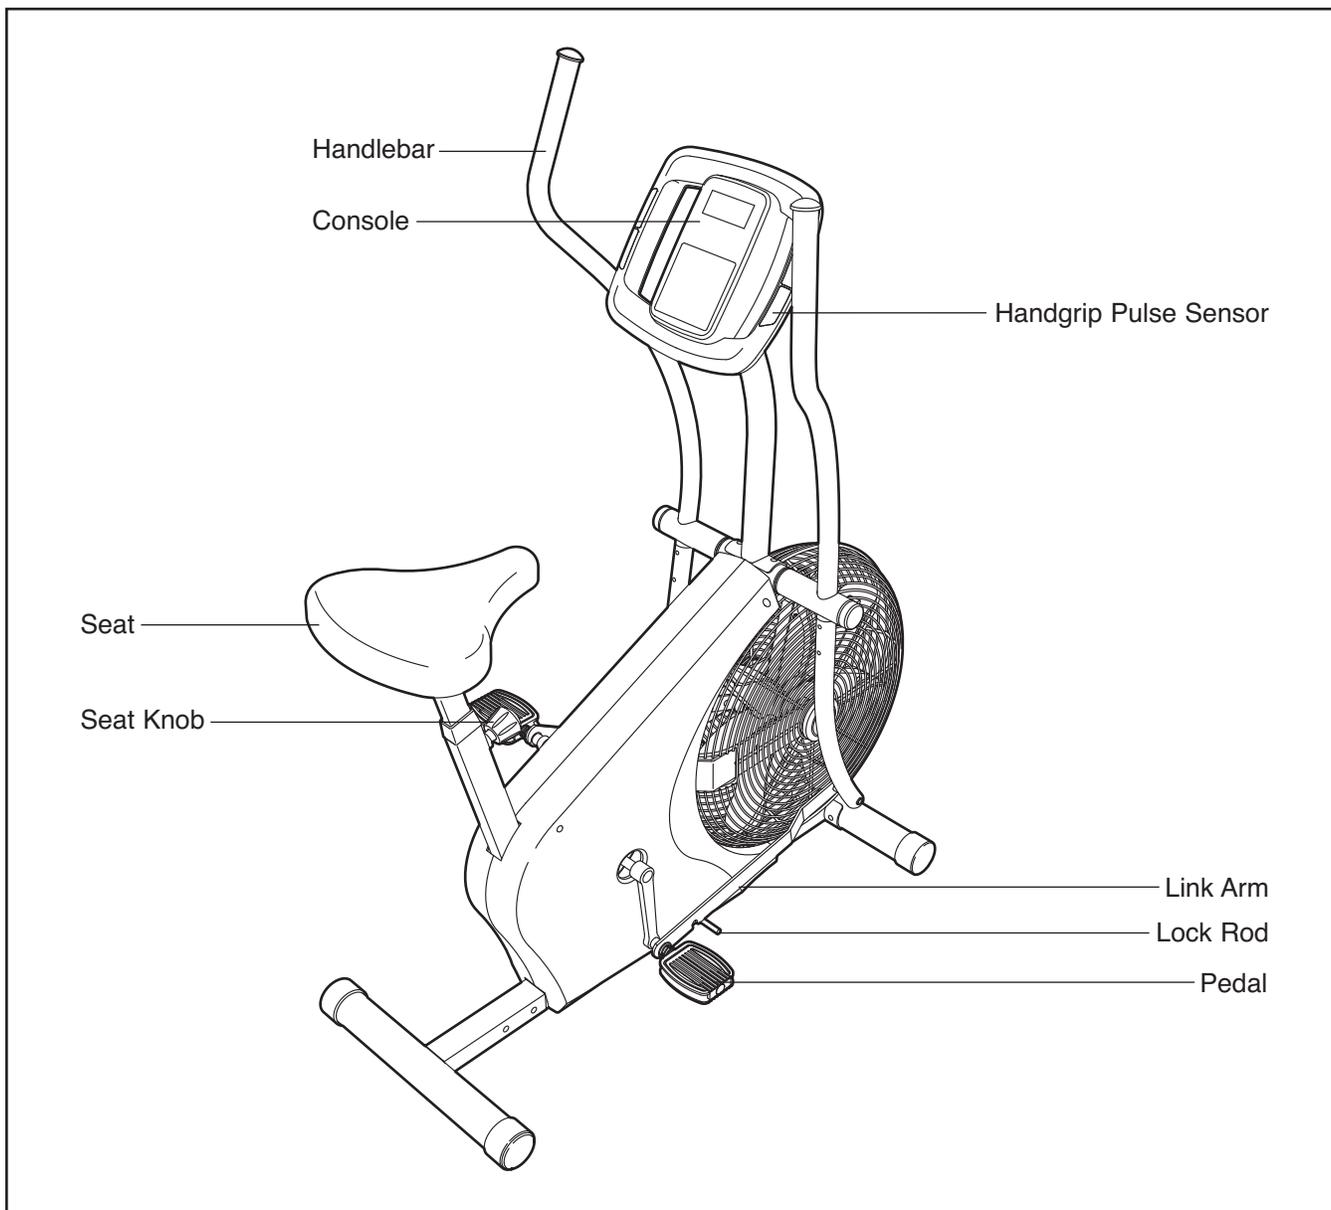

ASSEMBLY

Assembly requires two persons. Place all parts of the exercise cycle in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed. **Assembly requires the included tools and a rubber mallet** .


Use the part drawings below to identify the small parts used in assembly. The number in parentheses below each drawing refers to the key number of the part, from the PART LIST near the end of this manual. The number following the parentheses is the quantity needed for assembly. **Note: If a part is not in the hardware kit, check to see if it has been preassembled. If a part is missing, call 1-888-533-1333.**

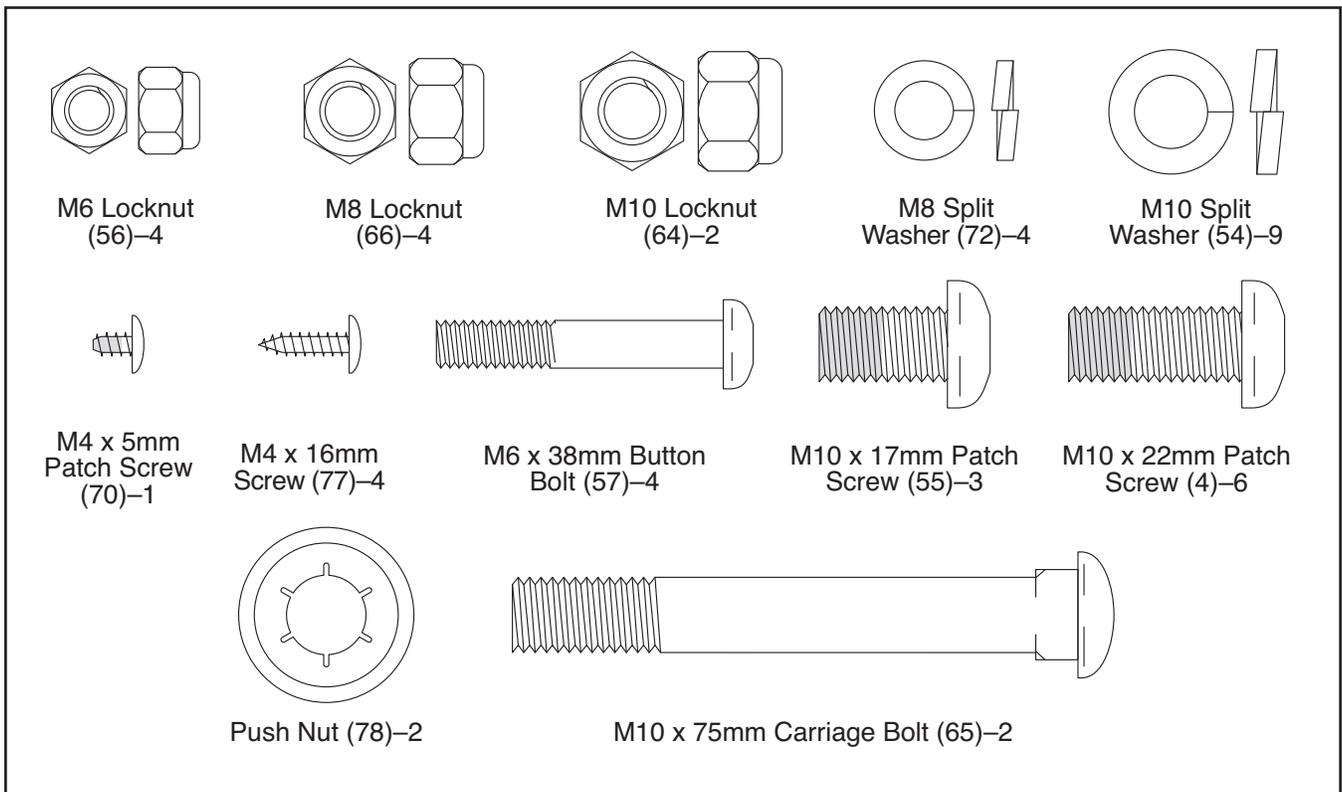


1.

To make assembly easier, read the information on page 5 before you begin assembling the exercise cycle.

Attach the Front Stabilizer (19) to the front of the Frame (1) with two M10 x 75mm Carriage Bolts (65) and two M10 Locknuts (64).

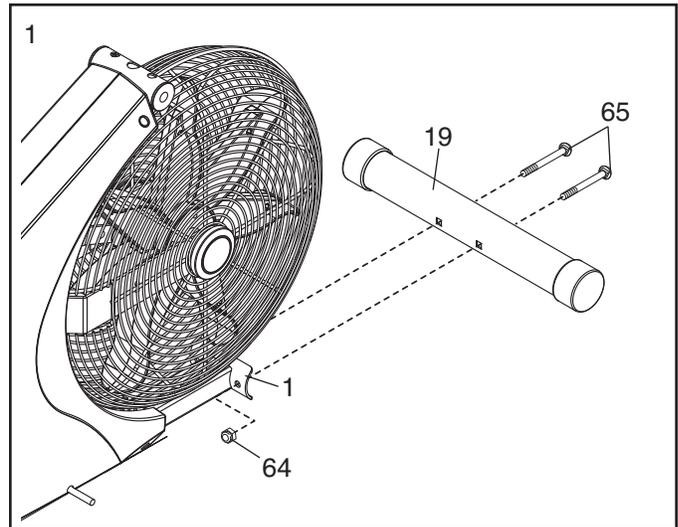


2. Attach the Rear Stabilizer (60) to the Frame (1) with six M10 x 22mm Patch Screws (4) and six M10 Split Washers (54).

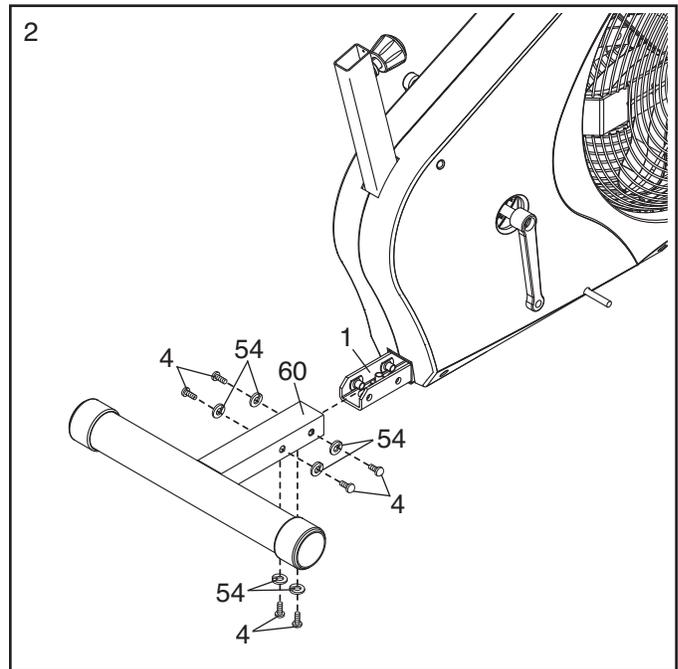


3. Loosen the Seat Knob (29) a few turns. Next, pull the Seat Knob outward, insert the Seat Post (6) into the Frame (1), and then release the Seat Knob. **Move the Seat Post upward and downward slightly to make sure that the pin on the Seat Knob is engaged in one of the adjustment holes in the Seat Post.**

Next, push the Seat Guide (46) into the top of the Frame (1). Attach the Seat Guide with an M4 x 5mm Patch Screw (70). Then, retighten the Seat Knob (29).

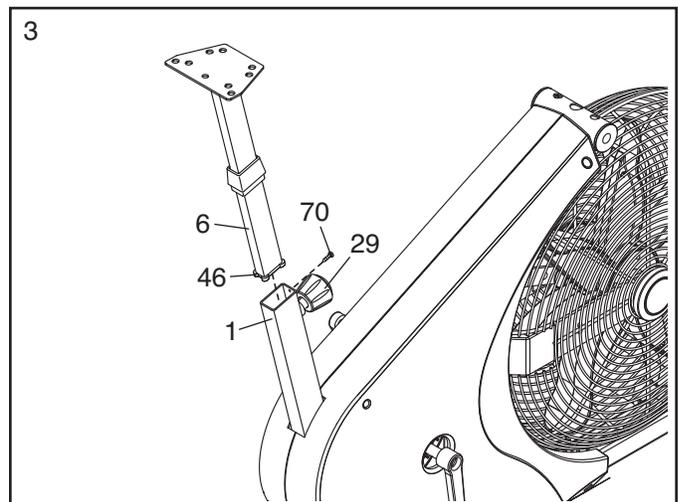


- Attach the Seat (20) to the Seat Post (6) with four M8 Locknuts (66) and four M8 Split Washers (72). **Note: The Locknuts and Split Washers may be preattached to the underside of the Seat.**

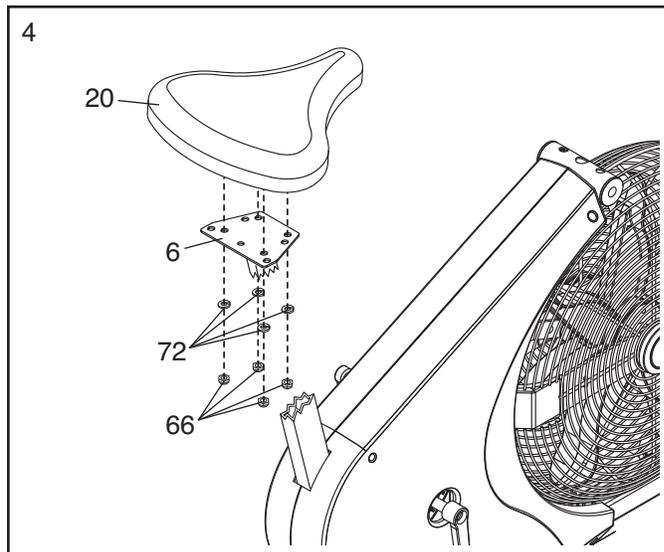


- Tip: To avoid pinching the Reed Switch Wire (31), position it as shown in the inset drawing.**

Apply a small amount of the included grease to the Handlebar Axle (33). Insert the Handlebar Axle into the Frame (1) and center it. **Note: It may be helpful to use a rubber mallet to insert the Handlebar Axle.**

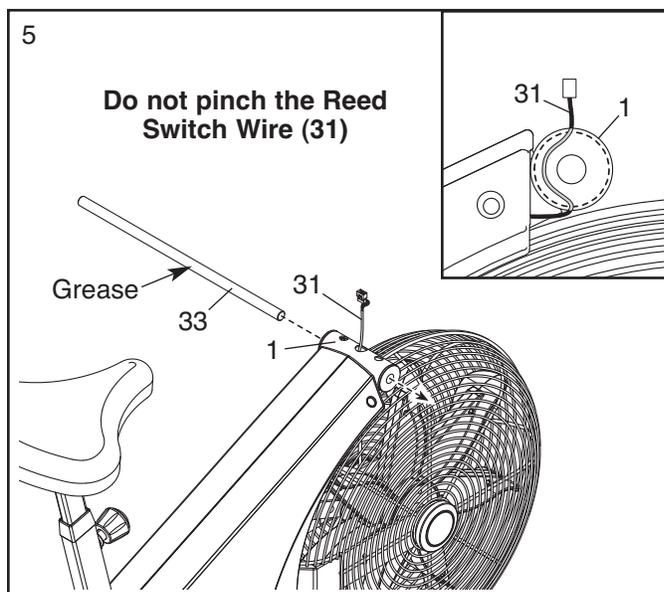


- While another person holds the Upright (2) near the Frame (1), connect the Reed Switch Wire (31) to the Extension Wire (39).

Tip: Do not pinch the Reed Switch Wire (31) or the Extension Wire (39). Set the Upright (2) on the Frame (1). Attach the Upright with three M10 x 17mm Patch Screws (55) and three M10 Split Washers (54).

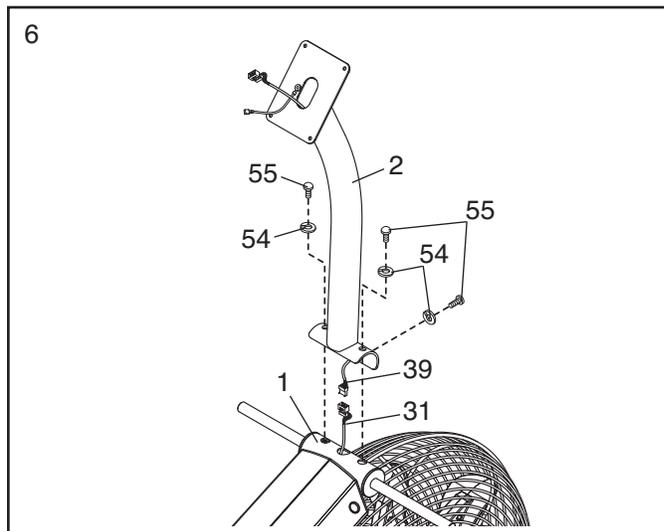


7. The Console (3) requires four “D” batteries (not included); alkaline batteries are recommended. **IMPORTANT: If the Console has been exposed to cold temperatures, allow it to warm to room temperature before inserting batteries. Otherwise, you may damage the console displays or other electronic components.** Remove the battery cover, insert the batteries into the battery compartment, and reattach the battery cover. **Make sure to orient the batteries as shown by the diagram inside the battery compartment.**

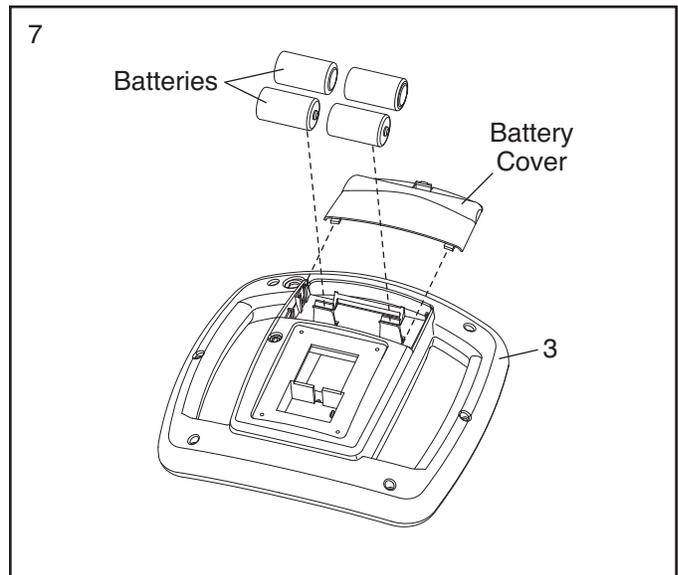

8. While another person holds the Console (3) near the Upright (2), connect the console wire to the Extension Wire (39). Then, connect the console ground wire to the Ground Wire (80). Insert the excess wire into the Upright.


Tip: Do not pinch the wires. Attach the Console (3) to the Upright (2) with four M4 x 16mm Screws (77).

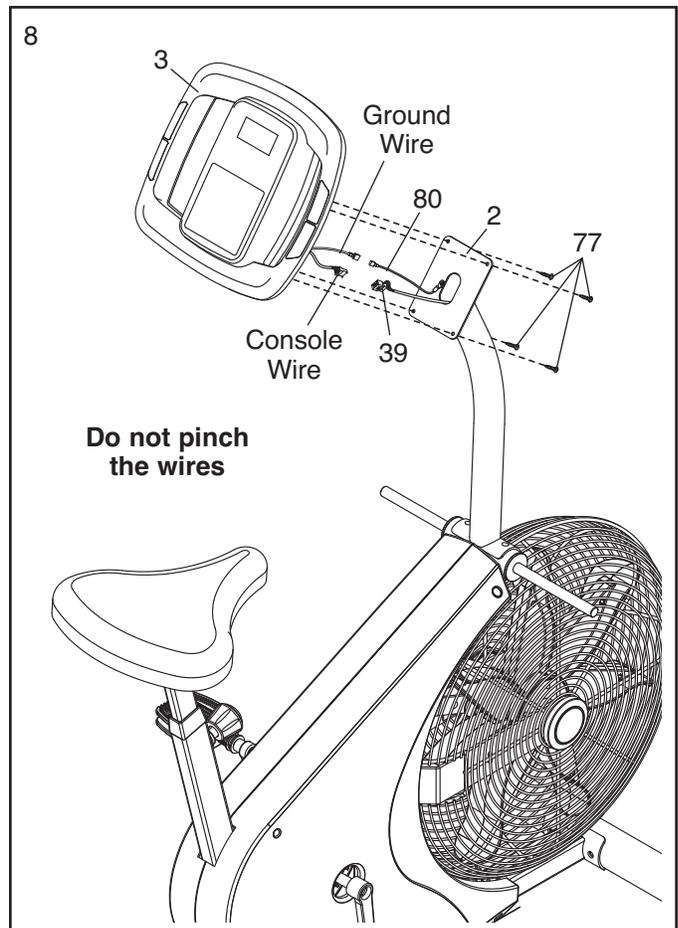

9. Identify the Right Handlebar (9) and the Right Handlebar Base (10), which are marked with "Right" stickers. **Orient these parts so that the wide side of the tube on the Right Handlebar and the Right Link Arm (16) are on the same side.**

Attach the Right Handlebar (9) to the Right Handlebar Base (10) with two M6 x 38mm Button Bolts (57) and two M6 Locknuts (56). **Make sure that the Locknuts are in the hexagonal holes.**

Attach the Left Handlebar (not shown) to the Left Handlebar Base (not shown) in the same way.

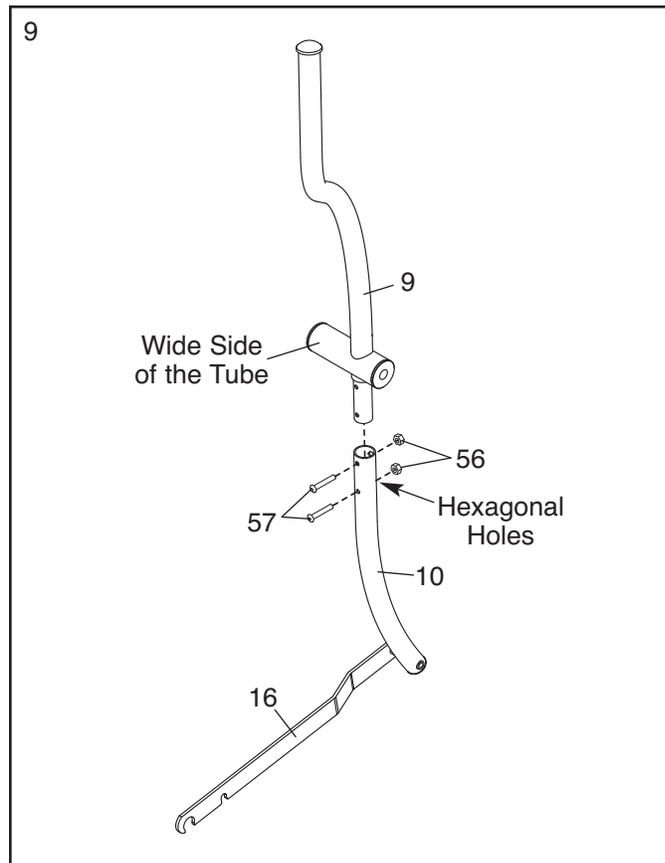


10. Slide the Left and Right Handlebars (7, 9) onto the Handlebar Axle (33). **Make sure that the Handlebars are on the correct sides.**

Using the included pedal tool, tap a Push Nut (78) onto each end of the Handlebar Axle (33). **Make sure that the Push Nuts are turned as shown in the inset drawing.**

Tip: It may be helpful to have another person hold a block of wood against one end of the Handlebar Axle (33) while you tap a Push Nut (78) onto the other end.


Then, tap a Large Axle Cap (49) onto each end of the Handlebar Axle (33).

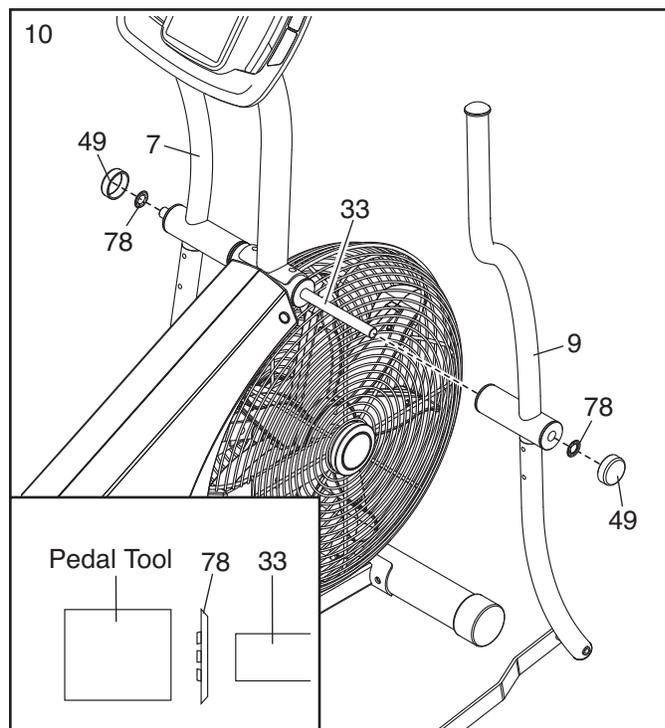

11. Remove the 1/2" Pedal Nut (68) from the shaft of one of the Pedals (23). **See the inset drawing.** Make sure that there is a Pedal Spring (42), a Blue Washer (71), a Pedal Bushing (43), a Black Pedal Washer (79), and a Pedal Spacer (44) on the shaft of the Pedal. In addition, make sure that the Pedal Bushing (43) is oriented as shown.

Firmly tighten the shaft of the Pedal (23) clockwise into the right Crank Arm (26). Then, tighten the 1/2" Pedal Nut (68) onto the shaft.

Attach the other Pedal (not shown) in the same way.

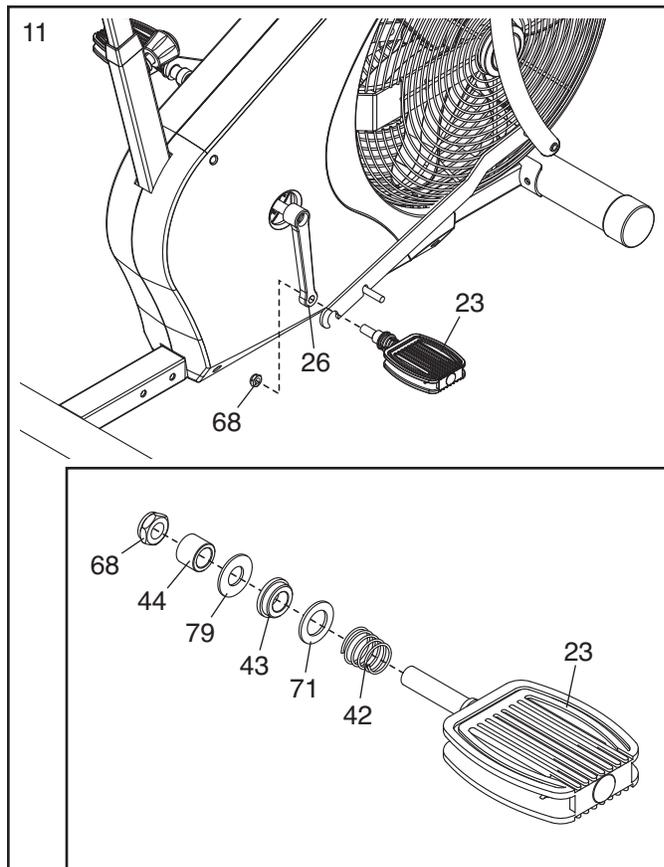

12. **Make sure that all parts are properly tightened before you use the exercise cycle.** Note: After assembly is completed, some extra parts may be left over. Place a mat beneath the exercise cycle to protect the floor.

HOW TO USE THE EXERCISE CYCLE


HANDLEBAR OPERATION

You can use the handlebars in the dual-action mode, for upper- and lower-body exercise, or in the stationary mode, for pedaling exercise only.


Dual-action Mode

To convert the handlebars to the dual-action mode, the link arms must be connected to the pedals.

First, lift the link arms off the lock rods.

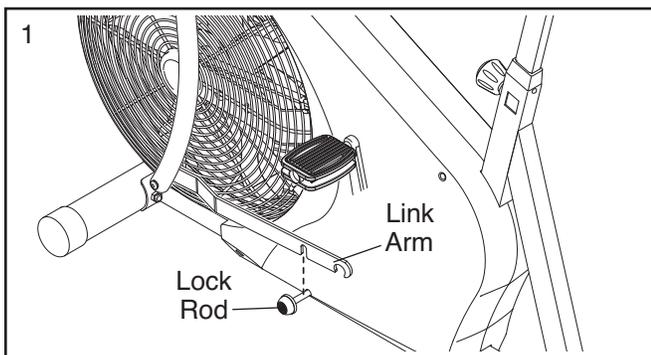

Next, pull the link arms outward against the tops of the blue washers, while pulling against the bottoms of the blue washers with your fingers as shown. **Be careful not to pinch your fingers.** Next, slide the link arms onto the pedal bushings. Move the link arms upward and downward slightly to make sure that they are fully seated on the pedal bushings. **CAUTION: Make sure that the link arms are fully seated on the pedal bushings. If the link arms are not on the pedal bushings, they may slip off during use, resulting in injury to the user.**

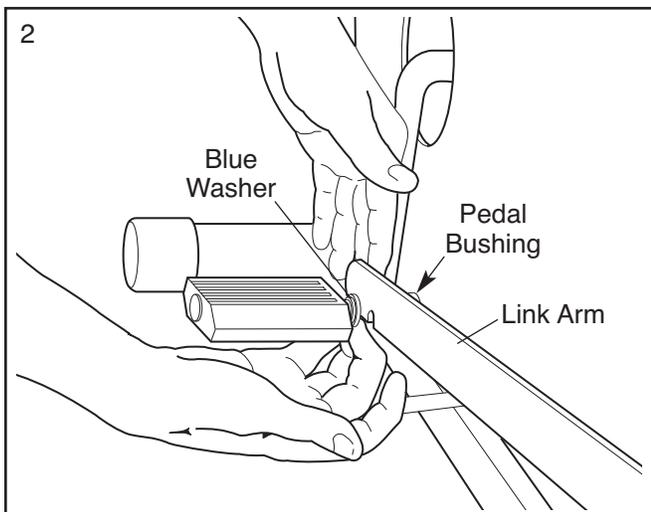


Stationary Mode

To convert the handlebars to the stationary mode, the link arms must be disconnected from the pedals. Pull the link arms outward against the blue washers until the link arms are free of the pedal bushings (see drawing 2 at the left). **Be careful not to pinch your fingers.** Next, lift the link arms off the pedals, and clip them onto the lock rods (see drawing 1 at the left).


HOW TO ADJUST THE SEAT

For effective exercise, the seat must be at the proper height. As you pedal, there should be a slight bend in your knees when the pedals are in the lowest position.

To adjust the seat, first turn the seat knob counterclockwise two or three turns to loosen it. Next, pull the seat knob, raise or lower the seat post, and then release the seat knob. **Move the seat post upward and downward slightly to make sure that the pin on the seat knob is engaged in one of the adjustment holes in the seat post.** Then, tighten the seat knob.

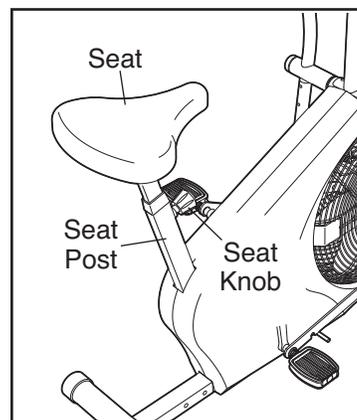

CAUTION: Make sure that the pin on the seat knob is inserted into one of the adjustment holes in the seat post. Do not rest the seat post on top of the pin on the seat knob.

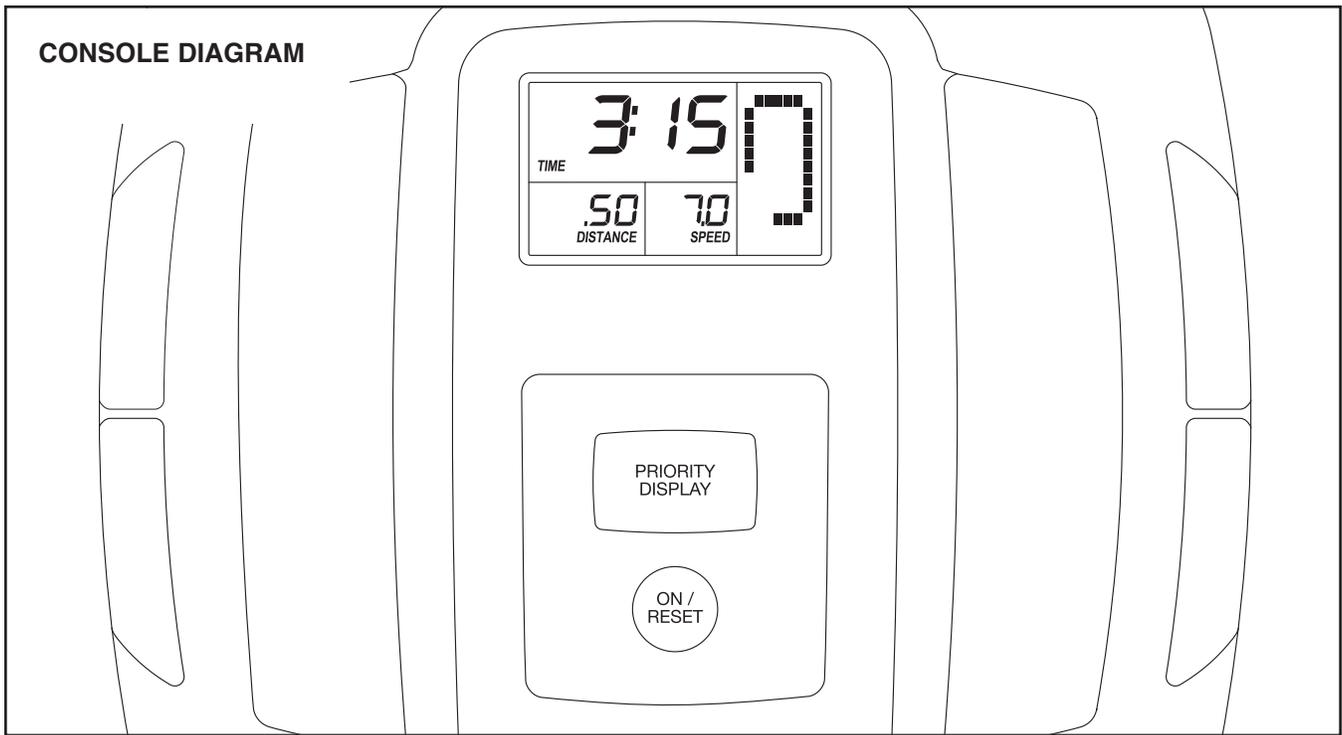


HOW TO USE THE CONSOLE

Before using the console, make sure that batteries are installed (see assembly step 7 on page 8). If there is a sheet of clear plastic on the display, remove the plastic.

Follow the steps below to operate the console.


1. Turn on the console.

To turn on the console, press the On/Reset button or begin pedaling. The entire display will light for a moment; the console will then be ready for use.

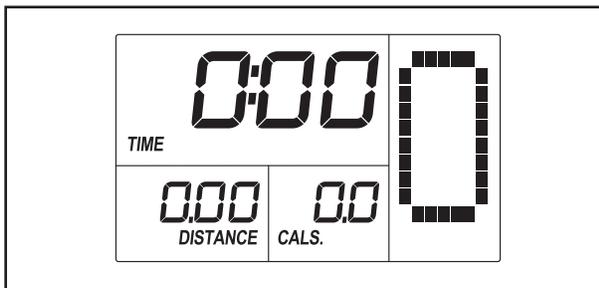


2. Follow your progress with the display.

The lower left display can show the elapsed time and the distance (in miles or kilometers) that you have pedaled.

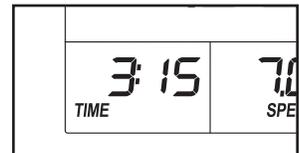

The lower right display can show your pedaling speed (in miles or kilometers per hour) and the approximate number of calories you have burned. When you use the handgrip pulse sensor, the lower right display will also show your heart rate (see step 3 on page 13).

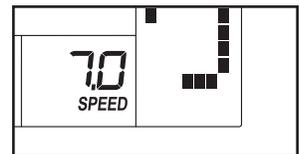


The upper display is the priority display.

The priority display can show the elapsed time, the distance that you have pedaled, your pedaling speed, or the approximate number of calories you have burned. Press the Priority Display button repeatedly until the priority display shows the information that you are most interested in viewing. Note: While information is shown in the priority display, the same information will not be shown in the lower left or lower right display.




The right display will show a track that represents 1/4 mile (400 meters). As you exercise, indicators will appear in succession around the track until the entire track appears. The track will then disappear and the indicators will again begin to appear in succession.

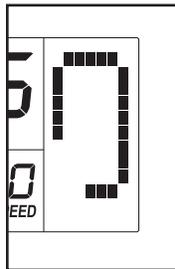

To reset the displays, press the On/Reset button. To pause the console, stop pedaling. When the console is paused, the time will flash in the display. To continue your workout, simply resume pedaling.


Note: The console can show speed and distance in either miles or kilometers.

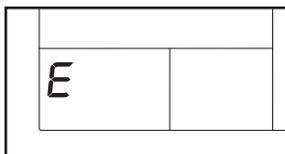


To select the unit of measurement, hold down the Priority Display button for several seconds. An "E" for English miles or an "M" for metric kilometers will appear in the lower left display. To change the unit of measurement, hold down the On/Reset button for several seconds until the desired unit of measurement appears in the display. Then, press the Priority Display button to save your selection.

3. Measure your heart rate if desired.

If there are sheets of clear plastic on the metal contacts on the handgrip pulse sensor, remove the plastic. In addition, make sure that your hands are clean. To measure your heart rate, hold the handgrip pulse sensor with your palms resting against the metal contacts. **Avoid moving your hands or gripping the contacts tightly.**

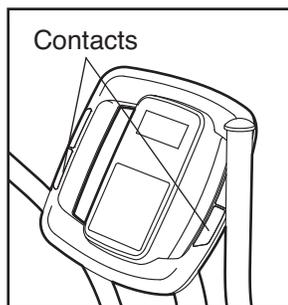

When your pulse is detected, the heart-shaped indicator in the lower right display will flash and one or two dashes will appear.

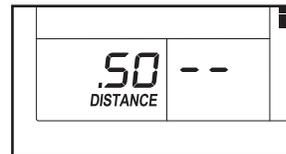

After a moment, your heart rate will be shown in the display. For the most accurate heart rate reading, continue to hold the contacts for about 15 seconds.

If your heart rate is not shown, make sure that your hands are positioned as described. Be careful not to move your hands excessively or to squeeze the metal contacts tightly. For optimal performance, clean the metal contacts using a soft cloth; **never use alcohol, abrasives, or chemicals to clean the contacts.**

4. When you are finished exercising, the console will turn off automatically.

If the pedals do not move for a few seconds, the time will flash in the display and the console will pause. If the pedals do not move for a few minutes, the console will turn off and the display will be reset.

MAINTENANCE AND TROUBLESHOOTING

Inspect and tighten all parts of the exercise cycle regularly. To clean the exercise cycle, use a damp cloth and a small amount of mild detergent; **never use abrasives or solvents to clean the exercise cycle. To avoid damaging the console, keep liquid away from the console.**


CONSOLE TROUBLESHOOTING

If the console does not function properly, the batteries should be replaced. See assembly step 7 on page 8 for battery installation instructions.


ADJUSTING THE BELT

The exercise cycle features a precision belt that must be kept properly adjusted. If the belt is too tight, the bearings may be damaged; if the belt is too loose, the fan may be damaged. If the belt causes excessive noise or slips as you pedal, follow the steps below.

Carefully remove the four Guard Clips (76), the left Guard Fastener (35), and the Left Guard (13). **See the inset drawing.** Press down on the Belt (22). **There should be no more than 3/4 in. (2 cm), and no less than 1/4 in. (0.6 cm), of vertical movement in the center of the Belt.**

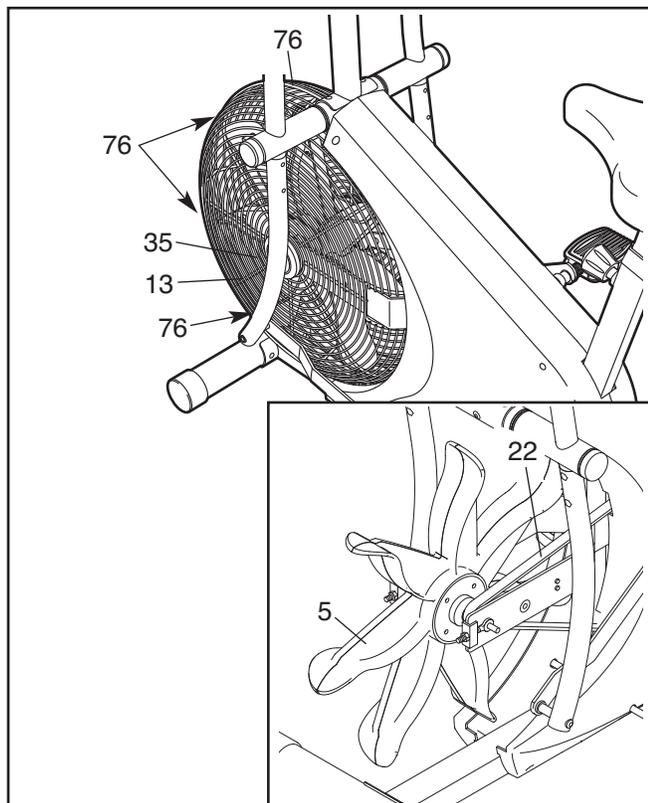


If the Belt (22) needs to be adjusted, first loosen the right Guard Fastener (not shown). To tighten the Belt, turn the M6 Nuts (53) clockwise; to loosen the Belt, turn the M6 Nuts counterclockwise.

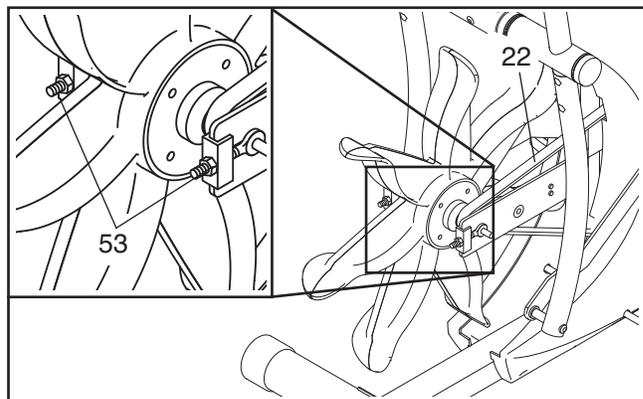

See the drawing at the left. Make sure that the Fan (5) is straight, and then reattach the Left Guard (13), tighten the Guard Fasteners (35), and reattach the Guard Clips (76).


ADJUSTING THE REED SWITCH

If the console does not display correct feedback, the reed switch should be adjusted. To adjust the reed switch, the Right Shield (18) must be moved. Remove the four M4 x 25mm Screws (69) from the Right Shield. Lift the Right Link Arm (16) off the pedal or the lock rod and move it clear of the Right Shield. Then, pull the top of the Right Shield away from the Left Shield (17).

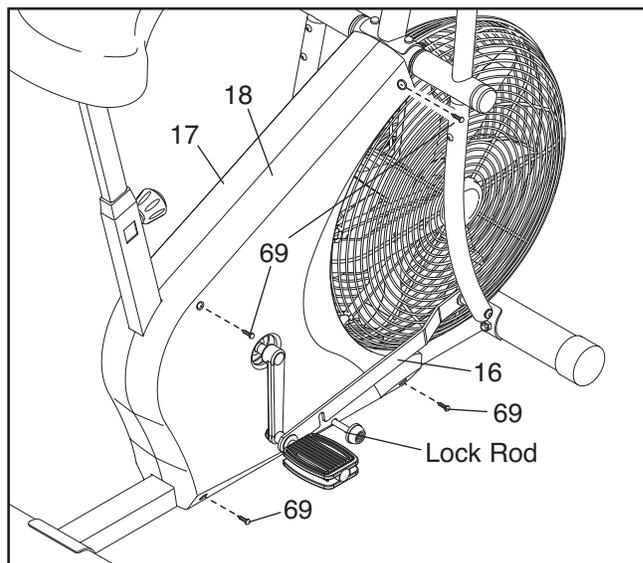

Next, locate the Reed Switch (31). Turn the Crank Arm (26) until the Magnet (48) is aligned with the Reed Switch. Loosen, but do not remove, the M4 x 16mm Screw (27). Then, slide the Reed Switch slightly closer to or away from the Magnet and retighten the Screw. Turn the Crank for a moment. Repeat until the console displays correct feedback.

When the Reed Switch (31) is correctly adjusted, reattach the Right Shield (not shown).

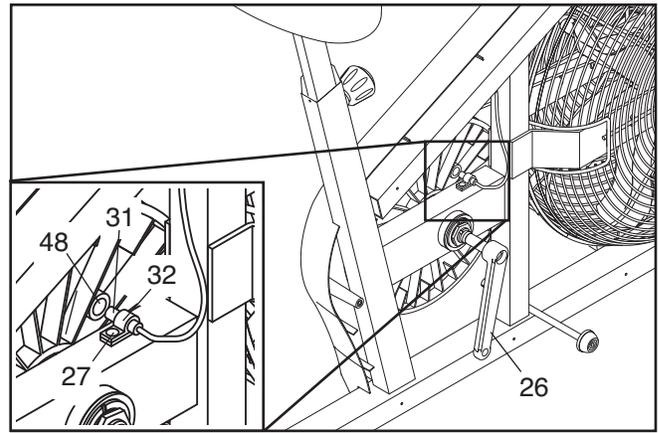

EXERCISE GUIDELINES

⚠ WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over age 35 or persons with pre-existing health problems.

The pulse sensor is not a medical device. Various factors may affect the accuracy of heart rate readings. The pulse sensor is intended only as an exercise aid in determining heart rate trends in general.

These guidelines will help you to plan your exercise program. For detailed exercise information, obtain a reputable book or consult your physician. Remember, proper nutrition and adequate rest are essential for successful results.

EXERCISE INTENSITY

Whether your goal is to burn fat or to strengthen your cardiovascular system, exercising at the proper intensity is the key to achieving results. You can use your heart rate as a guide to find the proper intensity level. The chart below shows recommended heart rates for fat burning and aerobic exercise.

165	155	145	140	130	125	115	♥♥
145	138	130	125	118	110	103	♥
125	120	115	110	105	95	90	♥
<hr/>							
20	30	40	50	60	70	80	

To find the proper intensity level, find your age at the bottom of the chart (ages are rounded off to the nearest ten years). The three numbers listed above your age define your “training zone.” The lowest number is the heart rate for fat burning, the middle number is the heart rate for maximum fat burning, and the highest number is the heart rate for aerobic exercise.

Burning Fat—To burn fat effectively, you must exercise at a low intensity level for a sustained period of time. During the first few minutes of exercise, your body uses *carbohydrate calories* for energy. Only after the first few minutes of exercise does your body begin to use stored *fat calories* for energy. If your goal is to burn fat, adjust the intensity of your exercise until your heart rate is near the lowest number in your training zone. For maximum fat burning, exercise with your heart rate near the middle number in your training zone.

Aerobic Exercise—If your goal is to strengthen your cardiovascular system, you must perform aerobic exercise, which is activity that requires large amounts of oxygen for prolonged periods of time. For aerobic exercise, adjust the intensity of your exercise until your heart rate is near the highest number in your training zone.

WORKOUT GUIDELINES

Warming Up—Start with 5 to 10 minutes of stretching and light exercise. A warm-up increases your body temperature, heart rate, and circulation in preparation for exercise.

Training Zone Exercise—Exercise for 20 to 30 minutes with your heart rate in your training zone. (During the first few weeks of your exercise program, do not keep your heart rate in your training zone for longer than 20 minutes.) Breathe regularly and deeply as you exercise—never hold your breath.

Cooling Down—Finish with 5 to 10 minutes of stretching. Stretching increases the flexibility of your muscles and helps to prevent post-exercise problems.

EXERCISE FREQUENCY

To maintain or improve your condition, complete three workouts each week, with at least one day of rest between workouts. After a few months of regular exercise, you may complete up to five workouts each week, if desired. Remember, the key to success is to make exercise a regular and enjoyable part of your everyday life.

SUGGESTED STRETCHES

The correct form for several basic stretches is shown at the right. Move slowly as you stretch—never bounce.

1. Toe Touch Stretch

Stand with your knees bent slightly and slowly bend forward from your hips. Allow your back and shoulders to relax as you reach down toward your toes as far as possible. Hold for 15 counts, then relax. Repeat 3 times. Stretches: Hamstrings, back of knees and back.

2. Hamstring Stretch

Sit with one leg extended. Bring the sole of the opposite foot toward you and rest it against the inner thigh of your extended leg. Reach toward your toes as far as possible. Hold for 15 counts, then relax. Repeat 3 times for each leg. Stretches: Hamstrings, lower back and groin.

3. Calf/Achilles Stretch


With one leg in front of the other, reach forward and place your hands against a wall. Keep your back leg straight and your back foot flat on the floor. Bend your front leg, lean forward and move your hips toward the wall. Hold for 15 counts, then relax. Repeat 3 times for each leg. To cause further stretching of the achilles tendons, bend your back leg as well. Stretches: Calves, achilles tendons and ankles.

4. Quadriceps Stretch

With one hand against a wall for balance, reach back and grasp one foot with your other hand. Bring your heel as close to your buttocks as possible. Hold for 15 counts, then relax. Repeat 3 times for each leg. Stretches: Quadriceps and hip muscles.

5. Inner Thigh Stretch

Sit with the soles of your feet together and your knees outward. Pull your feet toward your groin area as far as possible. Hold for 15 counts, then relax. Repeat 3 times. Stretches: Quadriceps and hip muscles.

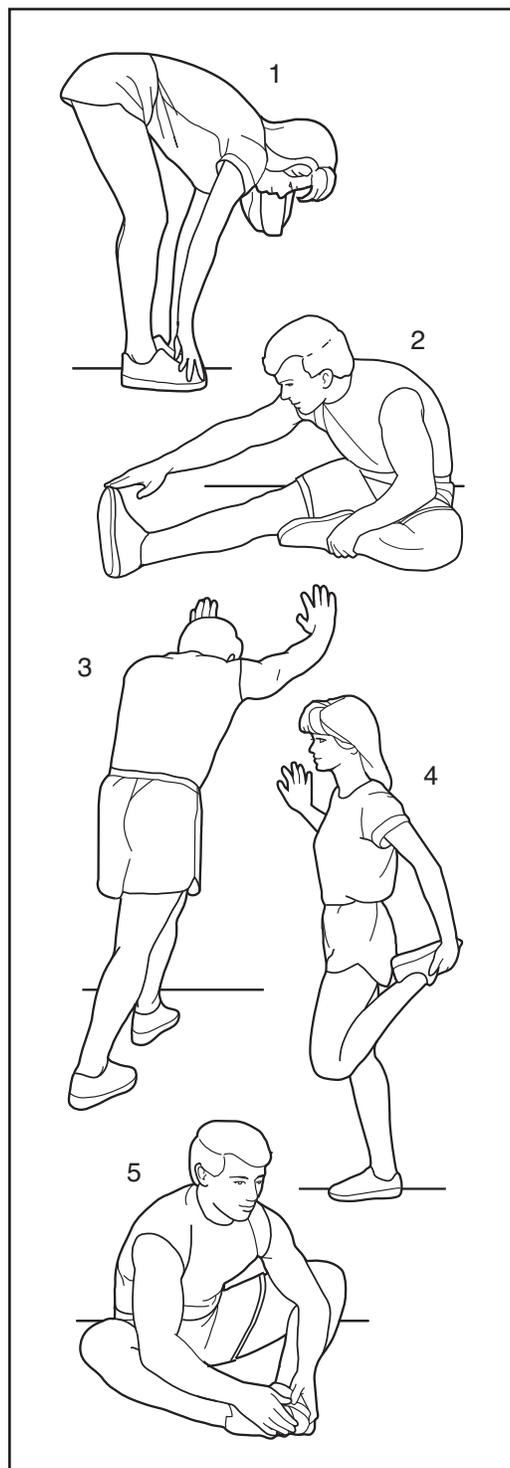

PART LIST—Model No. 831.21822.1

R1109A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Frame	44	2	Pedal Spacer
2	1	Upright	45	2	Link Arm Bushing
3	1	Console	46	1	Seat Guide
4	6	M10 x 22mm Patch Screw	47	1	Seat Post Bushing
5	1	Fan	48	2	Magnet
6	1	Seat Post	49	2	Large Axle Cap
7	1	Left Handlebar	50	2	Small Axle Cap
8	1	Left Handlebar Base	51	1	Fan Washer
9	1	Right Handlebar	52	2	Eyebolt
10	1	Right Handlebar Base	53	2	M6 Nut
11	2	Foam Grip	54	9	M10 Split Washer
12	2	Handlebar Cap	55	3	M10 x 17mm Patch Screw
13	1	Left Guard	56	4	M6 Locknut
14	1	Right Guard	57	4	M6 x 38mm Button Bolt
15	1	Left Link Arm	58	2	M8 x 74mm Button Bolt
16	1	Right Link Arm	59	1	M10 x 20mm Flat Head Bolt
17	1	Left Shield	60	1	Rear Stabilizer
18	1	Right Shield	61	1	M4 x 16mm Bright Screw
19	1	Front Stabilizer	62	4	M4 x 16mm Round Head Screw
20	1	Seat	63	1	Idler Arm Washer
21	4	Stabilizer Cap	64	3	M10 Locknut
22	1	Belt	65	2	M10 x 75mm Carriage Bolt
23	2	Pedal	66	10	M8 Locknut
24	2	Handlebar Base Cap	67	2	Flange Screw
25	1	Pulley	68	2	1/2" Pedal Nut
26	2	Crank Arm	69	9	M4 x 25mm Screw
27	1	M4 x 16mm Flange Head Screw	70	1	M4 x 5mm Patch Screw
28	1	Bearing Assembly	71	2	Blue Washer
29	1	Seat Knob	72	8	M8 Split Washer
30	2	Guard Bracket	73	4	M8 Flat Washer
31	1	Reed Switch/Wire	74	1	Fan Spacer
32	1	Clamp	75	1	Idler Spring
33	1	Handlebar Axle	76	4	Guard Clip
34	6	Handlebar Bushing	77	5	M4 x 16mm Screw
35	2	Guard Fastener	78	2	Push Nut
36	1	Fan Axle	79	2	Black Pedal Washer
37	2	Fan Bearing	80	1	Ground Wire
38	2	Adjustment Bracket	81	4	M8 x 20mm Button Bolt
39	1	Extension Wire	82	1	Crank
40	1	Idler Arm	83	2	Snap Ring
41	2	Crank Cover	*	—	Assembly Tool
42	2	Pedal Spring	*	—	User's Manual
43	2	Pedal Bushing			

Note: Specifications are subject to change without notice. For information about ordering replacement parts, see the back cover of this manual. *These parts are not illustrated. **If a part is missing, call 1-888-533-1333.**

Get it fixed, at your home or ours!

Your Home

For repair—**in your home**—of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories, and user's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME® (1-800-469-4663)

Call anytime, day or night (U.S.A. and Canada)

www.sears.com

www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call or go on-line for the location of your nearest **Sears Parts & Repair Center.**

1-800-488-1222 Call anytime, day or night (U.S.A. only)

www.sears.com

To purchase a protection agreement (U.S.A.) or maintenance agreement (Canada) on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGAR® (1-888-784-6427)



® Registered Trademark / ™ Trademark / ™ Service Mark of Sears Brands, LLC
© Marca Registrada / ™ Marca de Fábrica / ™ Marca de Servicio de Sears Brands, LLC

90 DAY FULL WARRANTY

If this Sears bike exerciser fails due to a defect in material or workmanship within 90 days of the date of purchase, call 1-800-4-MY-HOME® (1-800-469-4663) to arrange for free repair (or replacement if repair proves impossible). The frame is warranted for a period of 5 years from the date of purchase.

This warranty does not apply when the bike exerciser is used commercially or for rental purposes.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., Hoffman Estates, IL 60179