

AFFIX Elite Aquarius

User Manual

Model Name:

Aquarius

Brand Name: AFFIX

Contents

CONTENTS	2
1.UNDERSTANDING YOUR DEVICE	4
1.0 GENERAL INFO	4
1.1 DEVICE OVERVIEW	5
2. GETTING STARTED	6
2.1 INSTALLING CARDS & BATTERY	6
2.2 POWERING ON/OFF THE DEVICE	8
3.BASIC OPERATIONS	9
3.1 CALLING	9
3.2 MESSAGING	10
3.3 CONTACTS	11
3.4 EMAIL	12
3.5 BROWSER	12
4.HOME SCREEN	13
4.1 QUICK START: HOME SCREEN	13
4.2 STATUS BAR	14
4.3 APPLICATION TAB	14
4.4 CUSTOMIZING SCREEN	15
5.MULTIMEDIA	17
5.1 ES FILE EXPLORE	17
5.2 PLAY MUSIC	17
5.3 SOUND RECORDER	17
5.4 GALLERY	18
5.5 CAMERA	18
5.6 FM RADIO	18
6.NETWORK	19
6.1 Wi-Fi	19
6.2 3G	19

6.3 BLUETOOTH	19
7.SETTINGS	20
7.1 WIRELESS & NETWORKS	20
7.2 AUDIO PROFILES	20
7.3 DISPLAY	20
7.4 STORAGE	20
7.5 BATTERY	21
7.6 APPS	21
7.7 DUAL SIM SETTINGS	21
7.8 LOCATION	21
7.9 SECURITY	21
7.10 LANGUAGE & INPUT	22
7.11 BACKUP & RESET	22
7.12 TIMER SWITCH MACHINE	23
7.13 ACCOUNTS	23
7.14 DATE & TIME	23
7.15 ACCESSIBILITY	23
7.16 PRINTING	23
7.17 ABOUT PHONE	24
8.APPLICATIONS AND UTILITES	25
8.1 CALCULATOR	25
8.2 CLOCK	25
8.3 GMAIL	25
8.4 CALENDAR	25
8.5 PLAY STORE	26
9.SPECIFICATIONS	27

1.UNDERSTANDING YOUR DEVICE

1.0 GENERAL INFO

elite Aquarius is a multi SIM phone that encloses features, such as Android version 4.4, Wi-Fi, 1.3 GHz Quad-core Processor, 5 MP Camera, etc.

1.1 DEVICE OVERVIEW



Position of keys

1. Volume Keys

2. Earphone Jack

3. Receiver

4. Menu Key

5. Home Key

6. Back Key

7. Charge/USB Port

8. Power/Lock Key

9. Back Camera Lens

10. Flash

11. Speaker

2. GETTING STARTED

2.1 INSTALLING CARDS & BATTERY

Please switch off your device before inserting or removing the battery/ SIM card or memory card.

Installing SIM card and Battery

Your device is provided with one SIM slot for SIM card. In order to install battery and SIM card in the device, please follow the steps mentioned below:

- Remove the back cover of the device.
- Hold the device with the front facing downwards and pull the battery cover.
- Insert the SIM card in the device.




- Attach the battery.
- Push the battery cover until it clicks into place.

Installing Memory Card

Your device supports T-Flash card, which is a multimedia memory card used to multiply the memory of the device. The T-Flash card is small and should be pulled out and installed carefully and prudently in order to avoid any kind of damage. Please follow the steps mentioned below to install the memory card in the device:

- Switch off your device.
- Remove the battery cover.
- Slot the T-Flash memory card into the slot.
- Attach the battery.
- Fix the battery cover until it mounts properly into place.

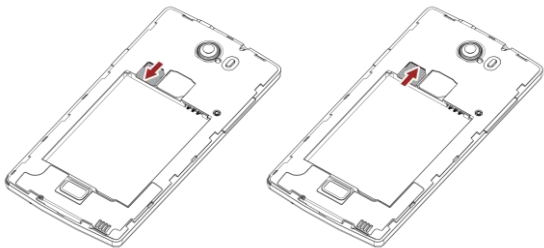



Charging the Battery

The device prompts a warning tone and message stating insufficient battery when the battery power is low.

Please follow the instructions mentioned below to charge your device:

- Plug the connector of the charger into the jack of the device.
- Plug the charger into a standard AC wall outlet.

Charging..... 

Fully Charged..... 

You should fully charge the battery before using the device for the first time. It is recommended to charge the battery for 5-6 hours before using the devices for the first time.

2.2 POWERING ON/OFF THE DEVICE

Turning On the Device

After installing the SIM cards and charging the battery, you are now ready to turn on your device.

- Long press and hold the Power Key to turn on the device.
- The first screen that appears is known as the home/idle Screen.
- Drag the lock icon side wards to unlock the screen.
- If the screen turns off, then short press the Power Key to turn on the display.


Turning Off the Device

- Press and hold the Power Key for 3 seconds.
- A pop-up window appears, select Power off.
- Select OK to confirm.




3. BASIC OPERATIONS

3.1 CALLING



To Make Calls

If the icon  appears on the screen, then you can make or receive calls.

To make a call, please follow the steps mentioned below:

- Enter the Main Menu, select Phone.
- Enter the phone number using the on-screen keyboard.
- Tap  to delete a wrong number. Tap and hold it to erase the entire number.
- After entering phone number, tap .
- To end the call, tap .

Answer/Reject an Incoming Call

When you receive an incoming call, a notification message appears on the screen. In order to accept the call, drag  towards right. If you wish to reject the call, drag  towards left.

Other Options during the call

To put a call on hold

If you are having a call conversation and there is another incoming call, select hold to put the first call on hold. To unhold the call, select unhold.

To set up conference calls



- If you are already having a call conversation, select Hold to put the call on hold.

- Select Add Call to make another call.
- After connecting to the second call, select merge call to set up the conference call.

3.2 MESSAGING

Your device features, sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service). Go to Main Menu and then select Message.

Creating a Message



- Tap  Compose new message.
- In To field; enter the recipient's phone number.
- Type message in the Type to compose field.
- Tap  to Send.

Receiving and Managing Messages

When you send and receive messages to or from a contact, these messages are grouped as a message thread. A message thread looks like an exchanged conversation.

MULTIMEDIA MESSAGE

A multimedia message or MMS can contain letters, an image, an audio or video file. To create and send a MMS ,please follow the steps mentioned below:


- Enter the main menu, select Messaging.
- Tap  Compose new message.
- In To field; enter the recipient's phone number the Subject.
- To insert a picture or video file, etc, tap .

3.3 CONTACTS

Contacts refer to the phonebook that lets you store names, phone numbers, e-mail addresses and other information. You can save information such as name, picture, phone numbers, e-mail addresses, etc for each contact listed in your Contacts menu.

To add a Contact

- Enter the Main Menu select People.
- Enter number > Tap Menu > Add to contacts > Create New contact.
- Select the storage
- You can enter contact information such as name, phone number, email address etc, if you select storage as “Phone”.
- Tap Done to save the contact.

Tip: Or enter the Main Menu and select Contacts, tap  create New contact.

To import contacts

- Enter the Main Menu select Contacts.
- Tap Menu > Import/export.
- Select to import contacts from Phone contact/ Phone storage/ SIM Card/ SD Card.
- Select a particular source to import the contacts from.
- Select Next.
- Select the destination, such as Phone to copy contacts to.
- Select Next.
- Select “Select All” to import all contacts or mark the required contacts.

- Select OK.

3.4 EMAIL

Your device allows you to compose, read and send emails.


3.5 BROWSER

Browser is a tool which enables you to access the Internet.

4.HOME SCREEN

4.1 QUICK START: HOME SCREEN

The Home screen gives you all your latest information in one place. It's what you see when you turn on the phone. It is the equivalent of the desktop on a computer. It's your gateway to the main features in your phone. You can customize your Home screen with shortcuts, widgets, folders, and wallpapers.

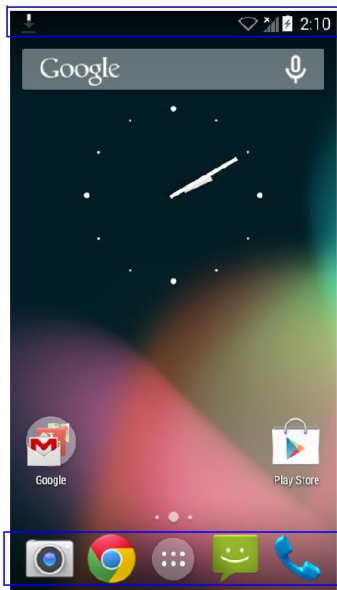

Phone status bar and notifications









**Camera
Browser
Launcher: Main menu
Messaging
Phone**

You need slide the Home screen left or right to view more content in other panels on the Home screen. You can add shortcuts, widgets, folders, etc. to Home screen.

- *Note: Your Home screen might look a little different.*

4.2 STATUS BAR

The Status bar icons indicate different types of information. The table below lists various icons that might appear of the device.

	Network intensity of SIM card
	Battery level of the device
	Wi-Fi is connected
	Airplane mode
	USB connected
	Missed call notification
	Bluetooth is activated
	GPRS network is in use

4.3 APPLICATION TAB

Tap Application Drawer to access applications and settings of the device. The Application tab enables you to access the Main Menu and choose among the various utilities/ features available in the device.

4.4 CUSTOMIZING SCREEN

The device features a touch screen with idle displays and access to utilities at just one-touch. So swipe right or left to navigate through various screens accessing your favorite features without entering the main menu. Each screen can be customized by adding various widgets, shortcuts and folders.

Shortcuts

In order to add a shortcut on the screen: Long press on the desired application to add on the screen.

Widgets

Save time with live updates right on Home screen and get all of your personalized updates at one place.

Setting the wallpaper

You can customize the wallpaper of your Home screen with default wallpaper or with pictures taken from your device.

- In the idle mode, tap Main Menu > Settings > Display > Wallpaper.
- Select your desired wallpaper from the various options:
 - ✧ ES File Explorer
 - ✧ Gallery
 - ✧ Live Wallpapers
 - ✧ Photos
 - ✧ Video Wallpapers
 - ✧ Wallpapers

Rotating Your Mobile Phone Screen

The orientation of most screens will change to landscape or portrait view when you rotate your phone sideways.

On the Home Screen, tap Main Menu > Settings > Display > Auto-rotate screen to disable this function.


5. MULTIMEDIA

5.1 ES FILE EXPLORE

You can browse, open and manage the data saved in the Device and Memory card by accessing the ES File Explore sub-menu. The device provides a certain space for users to manage files and supports the T-Flash card. You can use the file browser to conveniently manage various directories and files on the T-Flash card.

5.2 PLAY MUSIC


Use the Music Player to play music files. The songs saved in your SD card can be played using the Music Player of the device.

Tap  select Application tab > Play Music

The songs are categorized by Artists, Albums and Songs. You can make your favorite playlist by long pressing on a song and selecting Add to Playlist.

5.3 SOUND RECORDER

You can use the sound recorder to record sounds and also select to save the recordings in your phone.

Tap  select Application tab > Sound Recorder.

When in the sound recorder interface, press menu key to select recording mode.

5.4 GALLERY

You can view the captured images, records video clips, and downloaded images in the Gallery.

The picture folder and video folder will be displayed.

Select to view the camera pictures or camera videos.

The images or videos will be displayed in thumbnails.




5.5 CAMERA

Your device is equipped with camera and camcorder, which enables you to capture photos and videos.

The rear camera is 5 mega pixels.

5.6 FM RADIO


You can use your phone to listen to FM radio stations once the original Headset is plugged into the connector. Please press the side key to adjust music volume.

Tap  to exit FM radio function. Tap the ( ) to search the channels.

6.NETWORK

6.1 Wi-Fi

Connect to a wireless network to browse Internet.

- Enter Main Menu and tap Settings.
- Tap 'ON' to activate Wi-Fi.
- Tap  Wi-Fi > Network notification to start detecting networks. The available networks will then be listed.
- Tap Add Wi-Fi network to add a connection.

6.2 3G

The device supports WCDMA protocol. Please make sure that you device is turned off, then insert or remove the SIM card.

6.3 BLUETOOTH

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.


- Access Settings by entering the Main Menu.
- Check Bluetooth to turn on Bluetooth.
- To make your device discoverable, select Bluetooth settings and check discoverable.

7.SETTINGS

7.1 WIRELESS & NETWORKS

Access this sub-menu to change/view the Wi-Fi, Bluetooth, Mobile Networks, VPN settings, etc. please refer to network section for detailed information on Wi-Fi and Bluetooth.

7.2 AUDIO PROFILES

Your device provides four pre-defined user profiles that allow the operations of the device to best suit the environment you are in. the profiles are General, Silent, Meeting and Outdoor. The Touch  icon , select 'Add' to add a new profile; select 'Reset' to restore the default settings.

7.3 DISPLAY

With this function you can configure the display characteristics of the device including brightness, Auto-rotate screen, etc.

7.4 STORAGE

View and manage the data storage of your device:

Total Space and Available Space: Lists the amount of space on the microSD card installed in your device and the amount you have used to store photos, videos, music, and other files.

Un-mount SD Card: Un-mounts the microSD card from your device so that you can format the card or safely remove it when the device is on.

Available Space: The amount of internal phone storage used by

the operating system, its components, applications (including those you downloaded), and their permanent and temporary data.

7.5 BATTERY

You can check the battery status of the device by accessing this sub-menu.

7.6 APPS

This sub-menu enables you to manage all the installed, running and applications saved in the device memory and SD card. You can remove and manage installed applications, view and control running applications, allow installation of non we build in market applications.

7.7 DUAL SIM SETTINGS

Your device supports two SIM cards, which can be managed by accessing the SIM Management sub-menu. You can view/change the roaming settings of the cards using this menu.

7.8 LOCATION

Enable or disable Access to my location and Location sources.

7.9 SECURITY

You can protect your device from unauthorized users by setting the PIN code or entering a password.

Enable or Disable SIM card PIN

When PIN code is enabled, you are required to enter the PIN code

before making a call.

- Go to Application Drawer > Settings > Security.
- On the SIM card lock tab, select Set up SIM card lock.
- Select a SIM card.
- Tap Lock SIM card to use PIN. Check to enable, uncheck to disable.
- Enter the current PIN code.
- To change the PIN code, select Change PIN.
- Enter the old PIN code.
- Enter the new PIN code and confirm.

Setup Screen Lock

You can set up a lock for your screen in form of Pattern, PIN code or password.

- Go to Settings > Security
- Set up screen lock
- Select a desired form (Slide, Pattern, PIN code or password)

7.10 LANGUAGE & INPUT

Use the Language & input settings to select the language for the text on your device and for configuring the onscreen keyboard, including words that you've added to its dictionary.

7.11 BACKUP & RESET

You can use the Privacy settings to manage your personal information, such as back up my data, automatic restore and factory data reset.

7.12 TIMER SWITCH MACHINE

You can set the time for auto power on/off. Do turn the status on before using that function, and then the time.

7.13 ACCOUNTS

Use the Accounts to add, remove and manage your Google and other supported accounts.

You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules, and whether all applications can synchronize user data automatically.

7.14 DATE & TIME

You can select to set date, time and time zone using this sub-menu.

Use automatic unless you need to override the network values.

Use 24-hour format: Select to set 24-hour formats on or off.

Choose Date format: Select from a variety of formats.

7.15 ACCESSIBILITY

You can use the Accessibility settings to configure any accessibility plug-ins you have installed on your device.

7.16 PRINTING

Your device supports Cloud Print.

7.17 ABOUT PHONE

You can view system information Including System updates, Status, Legal information, Model number, Android version and so on.

8.APPLICATIONS AND UTILITES

8.1 CALCULATOR

Calculator helps you perform basic arithmetic functions, such as addition, subtraction, multiplication and division.

8.2 CLOCK

This function gives you an access to the alarm clock.

- Go to Main Menu > Clock.
- Tap  > tap  to add alarm.

8.3 GMAIL

Gmail is Google's web-based email service, Google Mail is configured when you first set up your device. Depending on your synchronization settings, Google Mail on your device is automatically synchronized with your Google Mail account on the web.

- Go to Main Menu > Gmail.
- Select Create or Existing your Google account.
- Follow the on screen instructions to login or create your Gmail username and password.

Once logged in, you can begin reading and sending emails from your Gmail account.

8.4 CALENDAR

Your phone has a calendar for managing your time schedule. You

can use the calendar to keep track of important events. After entering the calendar function menu, you can select year, month and date.

Go to Main Menu > Calendar.

8.5 PLAY STORE

Play store allows you to find and download applications and fun games for your device.

- Go to Main Menu > Play Store and setup your Google account.
- Select Create to create a new account or Existing to sign in your existing account.

Once you are signed in you can begin searching and downloading programs from the market. Tap Apps to view the list of applications available and tap Games to view the list of games available.

9.SPECIFICATIONS

Screen	5.0 inch TN (FWVGA)
Battery	1800mAh
Dimensions	144.3 ×72.2 ×9.75mm
Weight	163g
Network	GSM850/900/DCS1800/1900 WCDMA:850/1900MHz
Standby Time	Up to 220 hours*
Maximum Talk Time	Up to 10 hours*
Power Adapter	Input:100-240V/1000mA
Screen	5.0 inch TN (FWVGA)

*The standby time and maximum talk time depend upon the network signals and settings.

Notices

Location:

Adapter shall be installed near the equipment and shall be easily accessible.

Warnings on Battery:

- (a) Please use appointed battery in case of explosion risk.
- (b) Please dispose of lifeless battery under guidance.

Requirements for the Battery

When not in use, store the battery in a cool, well-ventilated place with sunshine.

If you will not be using the mobile phone for an extended period of time, charge the battery on a regular basis to avoid battery breakdown.

The phone battery wears out fast. If charging the battery does not improve its performance, it is time to replace the battery. Properly dispose of the battery according to local regulations. Do not throw it into a fire.

Caution:Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Requirements for the Charger and AC Adapter

Please confirm if the environment temperature is within the range of 0°C ~40°C while charging.

Please make sure the temperature for device will not be higher than 40°C

The device could be used with a separation distance of 1.5cm to the humanbody.

Complies with the essential requirements of Article 3 of the R&TTE 1999/5/EC Directive, if used for its intended use and that the following standards have been applied:

1.Health (Article 3.1(a) of the R&TTE Directive)

EN 50360:2001+ A1 :2012 /EN 62209-1:2006

EN62311 :2008/EN62209-2:2010

EN 62479 :2010

2.Safety (Article 3.1(a) of the R&TTE Directive)

Applied Standard(s):

EN 60950-1:2006+A11:2009+A1:2010+A12:2011

EN50332-1:2000

EN50332-2:2003

3.Electromagnetic compatibility (Article 3.1 (b) of the R&TTE Directive)

Applied Standard(s):

EN 301 489-1 V1.9.2/-3 V1.4.1/-7 V1.3.1/-17 V2.2.1/-24 V1.5.1

4.Radio frequency spectrum usage (Article 3.2 of the R&TTE Directive)

Applied Standard(s):

EN 301 511 V9.0.2

EN 301 908-1 /-2 V5.2.1

EN 300 328 V1.7.1

EN 300440-1 V1.6.1

EN 300440-2 V1.4.1

All the reports of the applied standards have the Positive Opinion of Notified Body:

PHOENIX TESTLAB, Königswinkel 10 D-32825 Blomberg, Germany







Identification mark: 0700 (Notified Body) CE









CE 0700



Precautions

	<p>Please carefully read and observe the terms below: Safe power on Do not use your mobile phone where it is forbidden to use or you might cause a disturbance or danger.</p>
	<p>Safe transportation first Please observe all related local laws and regulations. Do not use your mobile phone while driving. Safe transportation should be considered first when driving.</p>
	<p>Disturbance All mobile phone performances might be disturbed.</p>
	<p>Turn off when in the hospital Please follow related limitations. Please switch your mobile phone off when near a medical instrument.</p>
	<p>Turn off on an airplane Please follow related limitations. Do not use your mobile phone on an airplane.</p>
	<p>Turn off when at a gasoline station Do not use your mobile phone at a filling station or around fuels or chemicals.</p>

	<p>Turn off around exposure Area</p> <p>Please observe related limitations and do not use your mobile phone near an area where explosions can occur.</p>
	<p>Proper use</p> <p>As described in this manual, your mobile phone can be used only in the correct location.</p> <p>If possible, please do not touch the antenna area of your phone.</p>
	<p>Use qualified after sales service</p> <p>Only a qualified technician can install or repair your mobile phone. Please contact the authorized service center in case of phone failure.</p>
	<p>Accessories and batteries</p> <p>Only use the authorized accessories and batteries and do not connect to incompatible manufacturers or products.</p>
	<p>Waterproof</p> <p>Your mobile phone is not waterproof. Please keep it away from water.</p>
	<p>Backup</p> <p>Remember to make a backup or keep a written record of all important information saved in your mobile phone.</p>



Connect to other devices

Please read the user manual of the device to get more detailed security instructions before connecting to other devices and do not connect to an incompatible product.



SOS emergency calls

Make sure your mobile phone is switched on and in a service area. In idle mode, input the SOS number, then touch the Dial Key. Advise where you are and do not hang up without permission.

Frequently Asked Questions and Troubleshooting

Frequently Asked Questions	Cause and Solution
Fail to turn on	<p>Press the power on key for over 1 second.</p> <p>Check if the battery is properly connected. Please remove and install it again, retry to turn it on;</p> <p>Check if battery is appropriately charged.</p>
Fail to connect network	<p>Weak signal. Please try and move to a location with strong signal and try connecting to the network again;</p> <p>Please ensure that you are not beyond the network coverage of service providers;</p> <p>Please ensure you have a valid SIM card. Please contact your network provider for further information;</p>
Display information while turning on	<p>Check if the SIM card is installed correctly</p> <p>Handset lock password. If the handset lock is activated, you have to input handset password.</p> <p>Input PIN: Inputting PIN while turning on each time is activated, you have to input the PIN code.</p> <p>Input PUK code: When you've input wrong PIN code for 3 times will lock the SIM card. You need to input the PUK code provided by your network provider.</p>
Poor quality of calling	<p>Please check if the sound volume is tuned improperly</p> <p>In an area with poor receiving condition, example: basement, the signal might be weak. Try searching a location with stronger signal reception and call again.</p>

	While using the mobile phone in the peak period of communication, like commute time, you may be unable to call because of line congestion.
Standby duration shortened	The standby duration is relative to the system setting of network. While the mobile phone is in an area with poor signal strength and cannot receive the signal, the handset will continuously search for a base station. This will significantly reduce battery charge. It is recommended that you turn off your mobile in area with no signal reception to save battery. Need replacing the battery. Please change a new battery.
SIM Card Error	Dirt on the metal surface of an SIM card. Use clean cloth to wipe the metal touch point on an SIM card. The SIM card is not installed. The SIM card is damaged. Please contact your network service provider.
Fail to dial out	Please check if you touch the dial key after dialing. Please check if calling is forbidden because of defaulting. Please check if the SIM is valid. Please check if the call barring is set. Please check if the fixed dial function is set.
Callers cannot contact you	Please check if the mobile phone is on and connected with the network. Please check if the Call barring or call divert is activated. Please check if the SIM card is valid.
Fail to charge	Poor contact. Please check if the plug is connected well.

	<p>Please confirm if the environment temperature is within the range of 0°C ~40°C while charging.</p> <p>The battery or charger is damaged. You need to replace it.</p>
Fail to set some functions	<p>Wrong operation.</p> <p>The network provider does not support the function, or you have not applied for it.</p>

Note: If the instruction above cannot help you solve problems, please record,
 Mobile phone model and serial number,
 Specific content of warranty,
 Clear statement of problems,
 Then contact your local dealer or the authorized service center in your area.

Safety Information and Notices

Using the Mobile Phone and Charger

Danger:

Only use authorized battery and charger. Using other brands may cause battery leakage, overheating, explosion or even fire.

Caution:

Keep the phone away from dust, water and damp areas. Dust, water or other liquids may cause overheating, electrical leakage, and/or phone failure.

The phone, battery, charger and AC adapter are not waterproof. Keep them away from rain and liquid.

Warning:

Do not bump, shake or tamper with the phone or charger. This may cause battery leakage, overheating, explosion or even fire.

Do not place the battery, phone or charger near a microwave or high-voltage device. This may cause battery leakage, overheating, explosion or even fire; also prevent the phone and AC adapter from overheating, smoking or short circuiting.

Do not use the phone around volatile oil. This may cause fire, breakdown or damage.

To avoid any damage or breakdown, do not disassemble the phone, battery, charger or internal components by yourself.

Location:

The socket-outlet shall be installed near the equipment and shall be easily accessible.

Using the Mobile Phone

Warning:

Please confirm if the environment temperature is within the range of 0°C ~40°C while charging.

Do not use the phone while you are driving. Pull over and stop your automobile to dial or listen to a phone call.

Usage of mobile phones in aircrafts or hospitals is prohibited. Switch the phone off to prevent interference with electronic medical devices. Follow any rules or regulations in such places.

Do not use the phone at a gas station, near fuel or near chemicals.

Do not use the phone near electronic medical devices such as hearing aids, pacemakers and auto-control devices such as fire detectors and automatic doors.

If you have to use your mobile phone near an electronic medical device such as a pacemaker, please contact your manufacturer or dealer for information about preventing interference.

Caution:

Electronic systems in automobiles such as anti-lock brakes, speed control, or fuel spraying systems, are usually not influenced by wireless devices. Manufacturers of these systems will tell you whether they are provided with good screening functions. If you suspect that an automobile failure is caused by a wireless wave, please contact your automobile dealer.

Avoid using your phone in crowded places.

Do not store your mobile phone near or with a credit card, disk or other magnetic materials. This may effect information stored on your phone. Keep your phone away from pins. Pins can be absorbed by the phone's receiver magnet, which may cause harm.

If you intend not to use your mobile phone for a long period of time,

please remove the battery from the phone. Leaving the battery inside the mobile phone for a long period of time may cause moisture to the battery, and it can damage the mobile phone or the battery.

Using the Battery

Danger:

Do not dispose of the battery into a fire. Doing so may cause battery explosion or even fire.

If you have difficulties installing the battery, do not force the installation. This may cause battery leakage, overheating, explosion or even fire.

Keep metal objects away so they do not come in contact with the battery or its connectors as it may cause the battery to short circuit, overheat or explode.

Do not weld the polarities of the battery directly together. This may cause battery leakage, overheating, explosion or even fire.

Battery liquid is severely harmful for your eyes. If battery liquid gets in your eyes, do not rub them. Instead, wash your eyes with water first and then go directly to a doctor for help.

Do not use or store your phone in high temperature areas. This may cause battery leakage, overheating, explosion or even fire.

Warning:

Replace the battery when the normal usage time begins to decrease or if you notice the battery is overheated or has changed shape or color.

If battery liquid leaks onto your skin or clothes, immediately wash the affected parts with water.

If the battery begins to leak or emits a strange odor, properly dispose of the battery according to local regulations. Do not throw it into a fire.

Caution:

Do not leave the product or its battery inside a vehicle. This may damage the product, overheat the battery, or pose a risk to the vehicle.

Warnings on Battery:

- (c) Please use appointed battery in case of explosion risk.
- (d) Please dispose of lifeless battery under guidance.

Using the Charger

Danger:

Only use the charger that came with the phone. Using a different charger may cause the phone to breakdown or explode.

If the charger short circuits, a fire may occur.

Do not use a damaged, worn or broken charger. This may cause a fire.

Clean dust away from the power socket to avoid the possibility of a fire.

Do not store the charger near any liquids. If liquids spill onto the charger it may cause it to overheat or breakdown.

If liquid does spill onto the charger, immediately unplug the power cable to prevent overheating, fire or another type of breakdown.

Do not use the charger in places with high humidity like a bathroom. This may cause a fire or other breakdown.

Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.

Requirements for Mobile Phone

Avoid using your mobile phone in extremely high or low temperatures.

It is recommended that you do not use your mobile phone near a telephone, TV set, radio or other radio frequency sensitive devices.

Requirements for the Battery

When not in use, store the battery in a cool, well-ventilated place with sunshine.

If you will not be using the mobile phone for an extended period of time, charge the battery on a regular basis to avoid battery breakdown.

The phone battery wears out fast. If charging the battery does not improve its performance, it is time to replace the battery. Properly dispose of the battery according to local regulations. Do not throw it into a fire.

Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Requirements for the Charger and AC Adapter

Please confirm if the environment temperature is within the range of 0°C ~40°C while charging.

Cleaning and Maintenance

The mobile phone, the battery and the charger are not waterproof. Do not use them in places with high humidity like a bathroom and also avoid spilling any liquids on them.

Use a soft cloth to clean the mobile phone, the battery and the charger. Do not use alcohol, diluted liquid or benzene to clean the mobile phone. If dust gets in the sockets the phone can be damaged, short-circuit or even the lose the ability to be re-charged. Be sure to clean the socket regularly.

FCC

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over on one gram of tissue.

Device types: Aquarius (FCCID: 2AEEX-AQUARIUS) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.465 W/kg and when properly worn on the body is 1.229 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0 cm separation distance between the user's body and the back of the handset.

The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment

generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The user's manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.