# Aranet T-probe Datasheet

aranet

Measurements	Temperature		
Line of Sight Range	3 km/ 1.9mi	3 km/ 1.9mi	
Operating environment	Indoor and Outdoor use	Indoor and Outdoor use	
Transmitter power	14 dBm		
Frequency	Depends on gateway instruction	Depends on gateway instructions	
Measurement range	Temperature	-55°C to 105°C -67°F to +257°F	
Temperature measurement accuracy	85°C to 105°C / 185°F to 221°F	Up to 2°C / 3.6°F	
	-10°C to 85°C/ 14°F to 185°F	0,5°C/ 0.9°F	
	-55°C to -10°C/ -67°F to 14°F	Up to 2°C/3.6°F	
Data Transmission	Every 10 minutes		
Data Protection	Data encryption	Data encryption	
Power options	1 AA Alkaline battery (Zn/Mn02)	1 AA Alkaline battery (Zn/Mn02)	
	1 AA Lithium battery (Li/FeS2)	1 AA Lithium battery (Li/FeS2)	
Battery life @20°C / 68°F	Up to 7 years with Alkaline batte	Up to 7 years with Alkaline battery	
	Up to 10 years with Lithium batt	cery	
Operating temperature	-20°C to 55°C/ -4°F to 131°F wit	-20°C to 55°C/ -4°F to 131°F with Alkaline battery	
	-40°C to 60°C/ -40°F to 140°F with Lithium battery		
Operating humidity	0% to 100% non-condensing*	0% to 100% non-condensing*	
Dimensions	35mmØx120mm/ 1.4inØx4.7in		
Probe length	0,3/1/5/10m 0.9ft/3.2ft/16.4ft/32.8ft		
Weight	88g/3.1oz with Alkaline battery (	88g/3.1oz with Alkaline battery (1m/3.2ft probe)	
	79g/2.8oz with Lithium battery (	79g/2.8oz with Lithium battery (1m/3.2ft probe)	
Construction	ASA Plastic	ASA Plastic	
Protection class	IP68	IP68	
CE Marking	Yes	Yes	
Included	1 AA Alkaline battery, string		
Order information	TDSPTOU2.003 0.3m probe; TDSPTOU2.010 1m probe; TDSPTOU2.050 5m probe; TDSPTOU2.100 10m probe		

<sup>\*</sup> Recommended humidity operating range is 20% to 80% .RH (non-condensing) over -10 °C to 60 °C/ 14°F to 140°F. Prolonged operation beyond these ranges may result in a shift of sensor reading, with slow recovery time.

# **FCC Compliance statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- •Reorient or relocate the device.
- •Increase the separation between the equipment and receiver.
- •Connect the equipment into an outlet on a circuit different from the one the receiver is connected to.
- •Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## Importatnt Exposure to Radio Frequency Radiation.

20 cm distance has to be maintained between the antenna and user. Under such configuration, the FCC radiation exposure limits set forth for an population/uncontrolled environment can be satisfied.



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Aranet devices do not contain serviceable parts. Warranty will not be applicable in the event Aranet devices have been opened.

The information presented in this guide is the property of SAF Tehnika, JSC. No part of this document may be reproduced or transmitted without proper permission from SAF Tehnika, JSC.

The specifications or information contained in this document are subject to change without notice due to continuing introduction of design improvements. If there is any conflict between this document and compliance statements, the latter will supersede this document.

SAF Tehnika, JSC has no liability for typing errors in this document or damages of any kind that result from the use of this document.

To get up to date information about accessories and their availability, please contact sales representative.

Copyright Notice

Copyright © 2017 SAF Tehnika, JSC. All rights reserved.

# **Industry Canada Regulatory Statement**


This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## How to: Pair sensors to Aranet

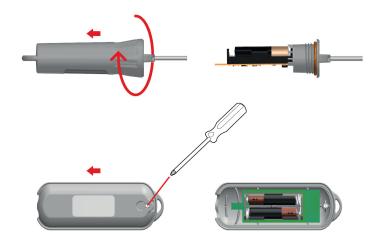

# 1. Pair sensors with Aranet PRO

Aranet PRO supports several types of sensors. In order to connect them to the system the same steps apply for all types of sensors.

- (1) You should physically be located within around 20 meters of Aranet PRO.
- (2) In order to open the sensor follow the individual sensor's instructions (see image above). Once it is opened the battery compartment will be exposed.
- (3) Go to Aranet PRO Settings screen.
- (4) Choose "Sensors" menu.
- (5) Click "Add sensor" button.
- (6) Insert sensor's battery/-ies.
- (7) Red LED light will flash on the sensor. Three short flashes followed by a long flash will signal a connection failure, the pause between flashes will be the same. In a successful pairing the long flash will follow immeadiately after a short flash. Looking at the LED light can save time while pairing sensors, however, Aranet PRO will also display a notification about a successful or unsuccessful pairing.
- (8) Close the sensor following respective sensor instructions.
- (9) Now you can rename the sensor, set thresholds for alarms, add it to favorites. After completing your tasks click save button.

# 2. Pair sensors with Aranet MINI

- (1) Tap, then choose Sensors menu and tap the Setup button.
- (2) Set up a sensor by following the instructions on the screen. After successfully setting up a sensor, the sensor ID and the name of the sensor will appear on the left side of the screen. Sensors are given name "SENS <number>" automatically. Tap the name of the sensor to give it a new name with length up to 8 symbols. In order to remove a sensor just press the sign next to it.
- (3) Set up other sensors in the same manner.
  - To add more than 6 sensors, press the page button on top.
  - $\cdot$  To change the order of the sensors, press and . Then press on the sensors you want to move and then where you want to move it to.
  - Tap the home button to return to the main menu.