

SHUOYING PA0906

Contents


Safety Precautions.....	2
Description of Appearance.....	3
Battery Charging	4
OTG Cable and USB Cable.....	5
Turning On/Off the Device	5
How to Use the Touch Screen	5
Unlocking the Screen.....	6
Introduction of Icons on Main Screen	7
Adding and Deleting Shortcuts on Main Screen.....	8
Wallpaper Setting.....	8
Connecting to PC Through USB.....	10
Applications and Widgets.....	11
Basic Settings	15
Troubleshooting	24

Safety Precautions

To protect you and others from hurt and avoid damaging the device, please read the following information carefully before using the device.

- Do not operate the device with wet hands.
- Do not place the device near fire or in extreme temperature environment.
- Do not use unauthorized power adaptor or USB cable.
- Do not try to open the device by yourself.
- Do not place or operate the device in a dusty environment.
- Do not expose the device under strong sunlight.
- Do not place or operate the device near high static electricity or magnetic fields.
- Do not place or operate the device near the microwave oven, toaster or heater.
- Keep the device dry and away from water.
- Keep the device away from the reach of children.

Description of Appearance

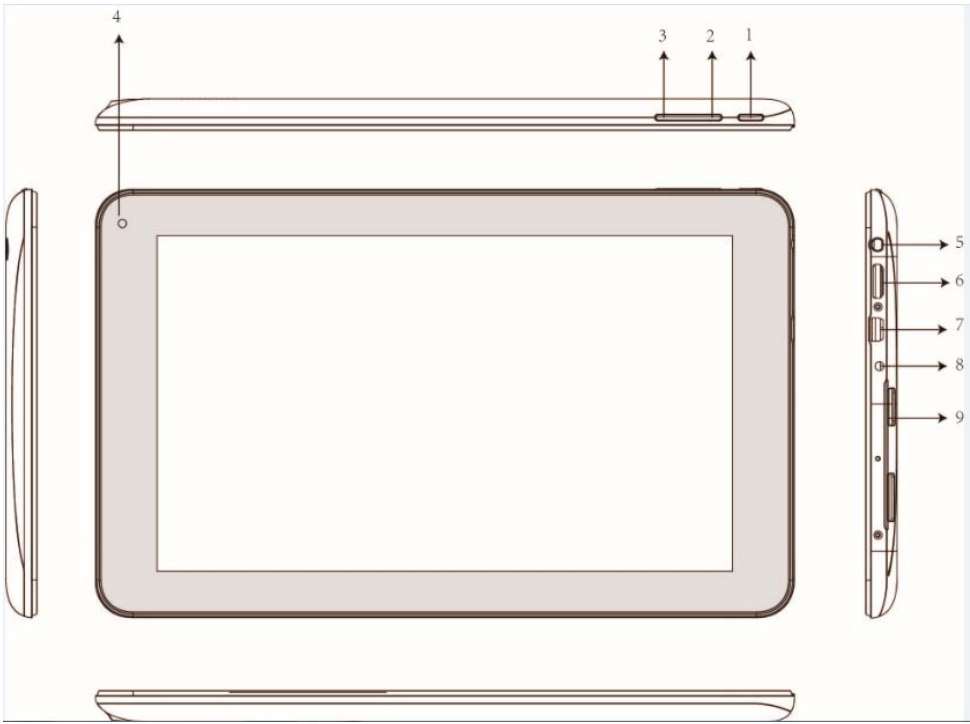

No.	Description
1	Power button
2	VOL+ button
3	VOL- button
4	Camera
5	3.5 mm earphone jack
6	HDMI port
7	USB port
8	DC port
9	microSD card slot (supports from 2GB to 32GB)

Battery Charging


This device is equipped with a built-in lithium battery. Please fully charge the battery before using the device for the first time. It is recommended to charge at least ten hours for the first time, and charge normally thereafter.


Only use approved charger (Input: AC110~240V 50/60Hz; Output: DC 5V/2.5A). The manufacturer or the dealer will not take the responsibility for any battery explosion or device damage caused by using unapproved charger.


To charge the battery, please connect the power adaptor to a power source and the the "DC 5V" port of the device.

NOTES:

- The built-in battery is not replaceable by the end user. Please contact the service provider for the information on battery replacement.
- You can charge the battery with the AC adaptor or USB cable.
- When the battery power is lower than 15%, the device will deliver an alert tone

and display the low battery message. The battery icon  also will turn

blank . If the battery drains, the device switches off automatically. Please charge the device.





- If the battery is fully drained, which the device can't be turned on, please connect the AC adaptor and charge the device for a while before you turn on the device.
- You can use the device while charging, but the charging time will be extended.
- While charging, the touch screen may be invalid because the battery voltage isn't stable. In this case, please disconnect the power adapter.
- It is normal that the temperature of the device rises while charging.
- When the battery is fully charged  (the battery icon stops scrolling and the LED goes off), please disconnect the power adapter.
- The charging requires about 6 hours when the devices is off.

OTG Cable and USB Cable

There are two cables included in the package which are OTG Cable and USB Cable. The usage of these cables are as following.

1. USB Cable: For the connection between the PC and for the AC adaptor.
2. OTG Cable: For the connection to external USB equipment such as computer mice, USB drive...etc.

Turning On/Off the Device

1. To turn on the device, please press the power button [] and hold it until the device is turned on.
2. To turn off the device, please long press the power button [] for at least 2 seconds.
3. To lock the screen, after the device is turned on, short press the power button [].
To unlock the the screen, please short press the power button [] again.

How to Use the Touch Screen



The followings are the ways to do the operation on the touch screen.


1. TAP: tap once to select or start a function, option or application.
2. TAP AND HOLD: tap and hold an item for at least two seconds.
3. TAP, DRAG AND DROP: tap and drag an item and drop at desired position
4. DOUBLE TAP: quickly tap on an item twice
5. SLIDE: slide up, down, left or right to browse list or screen

NOTES:


- a) Do not use sharp object to avoid scratching the touch screen.
- b) Do not contact other electronic devices with the touch screen, or else ESD may cause failure of the touch screen.
- c) This device is not waterproof. Please do not store or operate this device in a wet environment.
- d) The touch screen has a detection layer, which can detect the weak charge sent out by human body. To achieve the best results, please touch the screen with fingertip. Do not operate with stylus, pen or any sharp object.

Unlocking the Screen



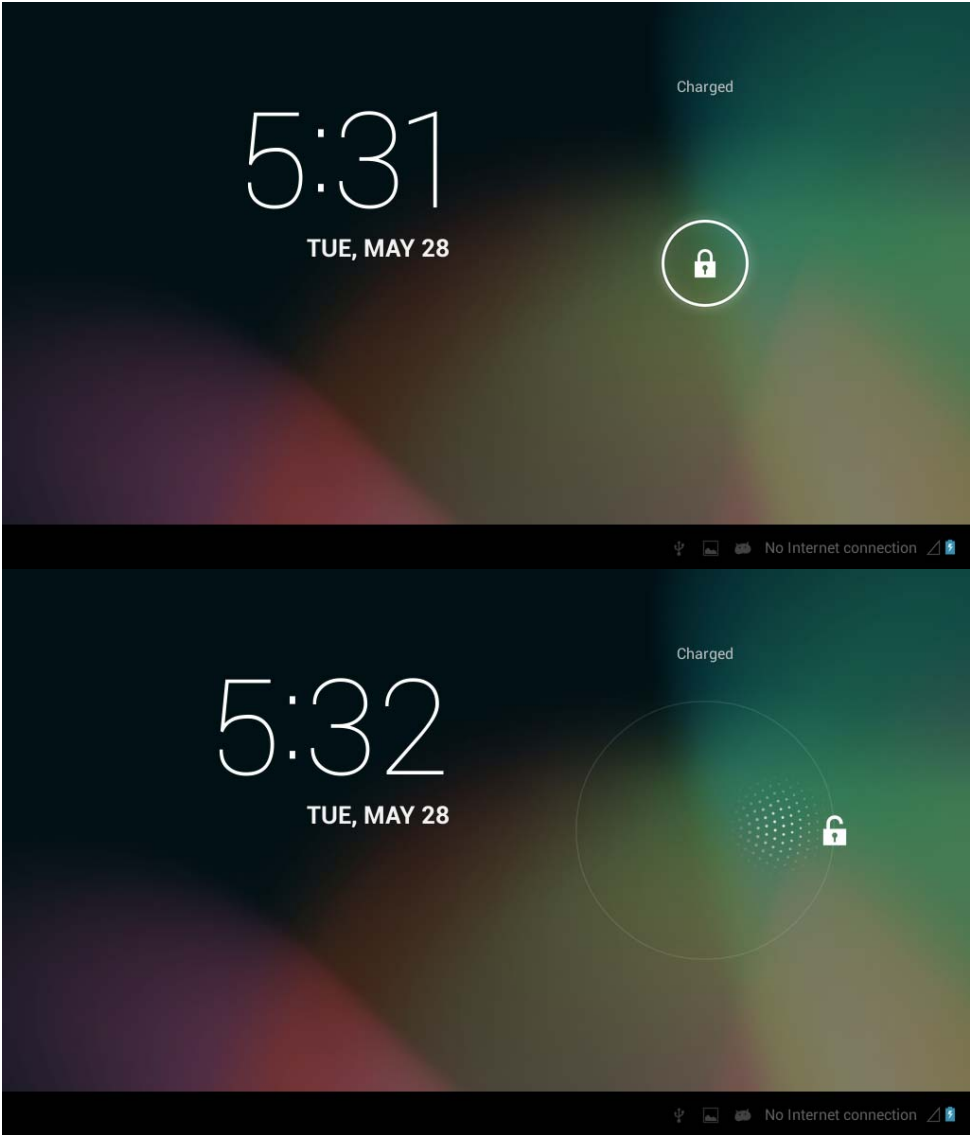




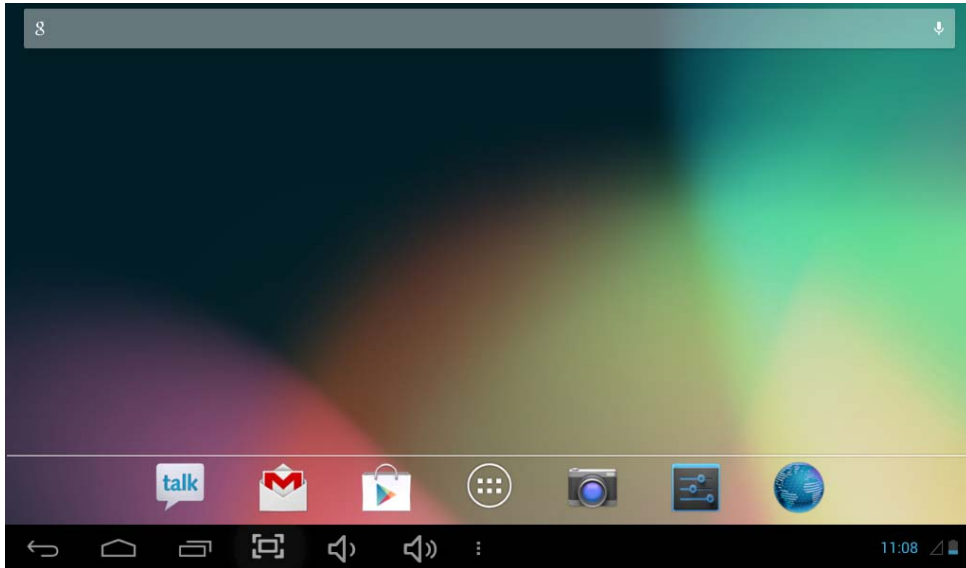

After the device is turned on, the device enters the unlocking interface. Please tap and hold  and drag it to  to unlock and enter the main screen.







Main Screen



Introduction of Icons on Main Screen

Icon	Function
	Use the voice search to search on the web
	Tap to enter APP interface for the the application list
	Tap to return to the previous interface
	Return to the main interface
	To show the the list of applications recently used
	Screen shot
	VOL-
	VOL+
	USB connected: Indicates that the device has been connected to PC through the USB cable


	USB debugging: This is for technical use only
	Time
	Battery status
	Tap to enter "Wallpaper", "Manage Applications" and "System settings"

Adding and Deleting Shortcuts on Main Screen

1. Add shortcuts to applications: Tap and hold an application icon in the list, drag and drop it to desired position on the main screen. The shortcut icon of this application will be added to the main screen.
2. Add shortcuts to widgets: Tap and hold a widget in the list, drag and drop it to desired position on the main screen. The shortcut icon of this application will be added to the main screen.
3. Delete items from the main screen:
Tap and hold an item to be removed and the "X" will appear on the top side of the screen. Drag and drop the icon to the "X". When the "X" turns red, let go of the application icon.


Wallpaper Setting

Tap on the screen and hold until the following dialog box appears. Choose "Wallpapers" to set the wallpaper.

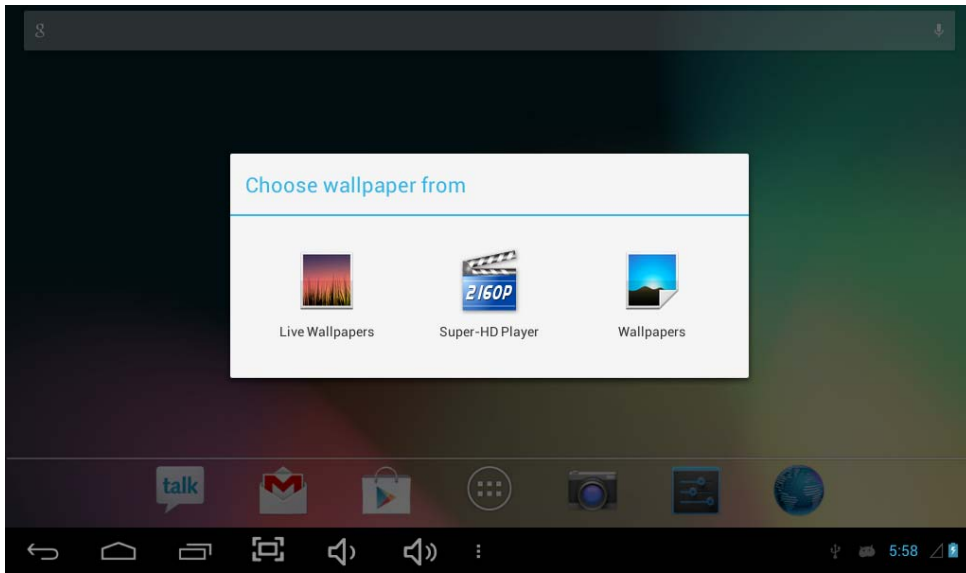


Connecting to PC Through USB


Connect the device to the PC through the USB cable and the “USB connected” icon will appear on the screen. Tap on the icon to enter the USB Mass Storage window then tap on “Turn on USB storage” for the connection to PC.

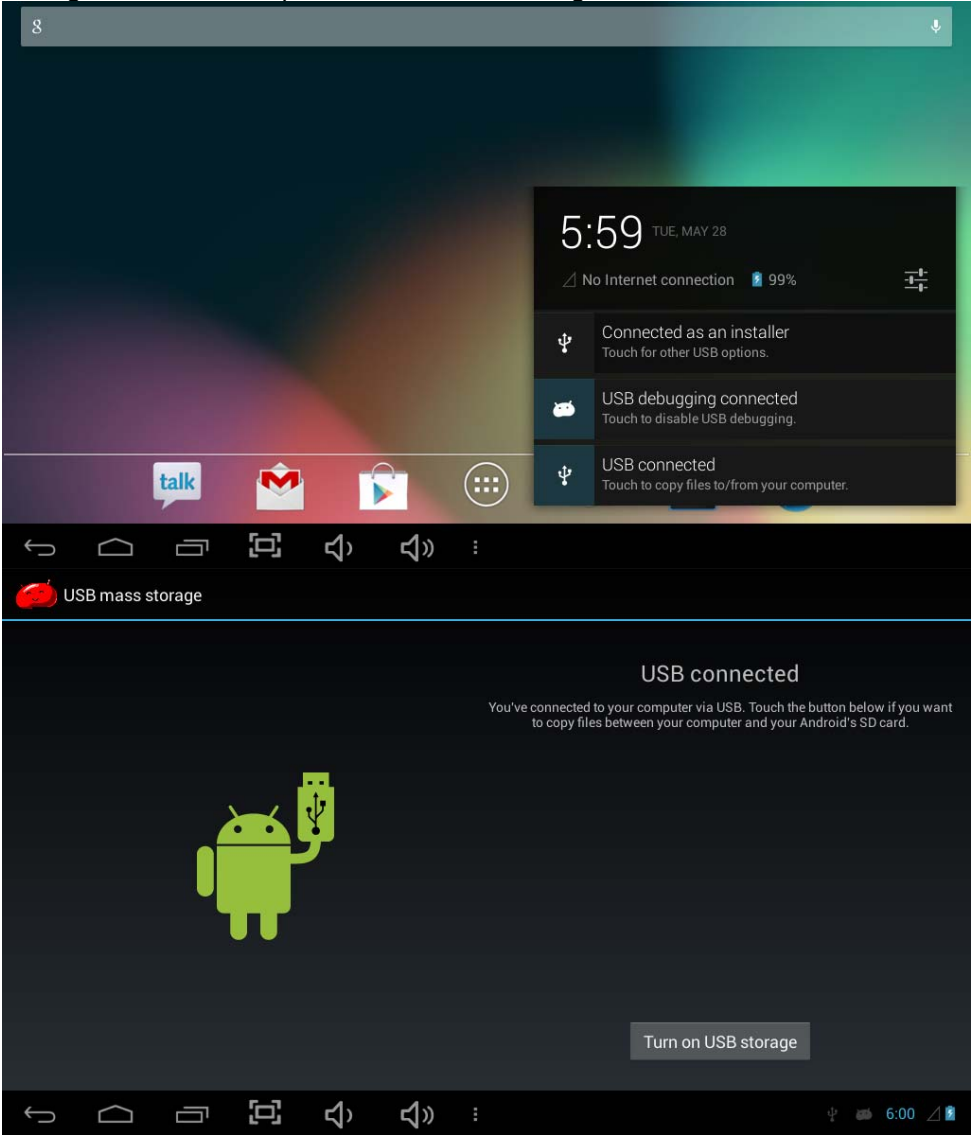

Applications and Widgets




Tap  on the main screen to enter the Application interface.

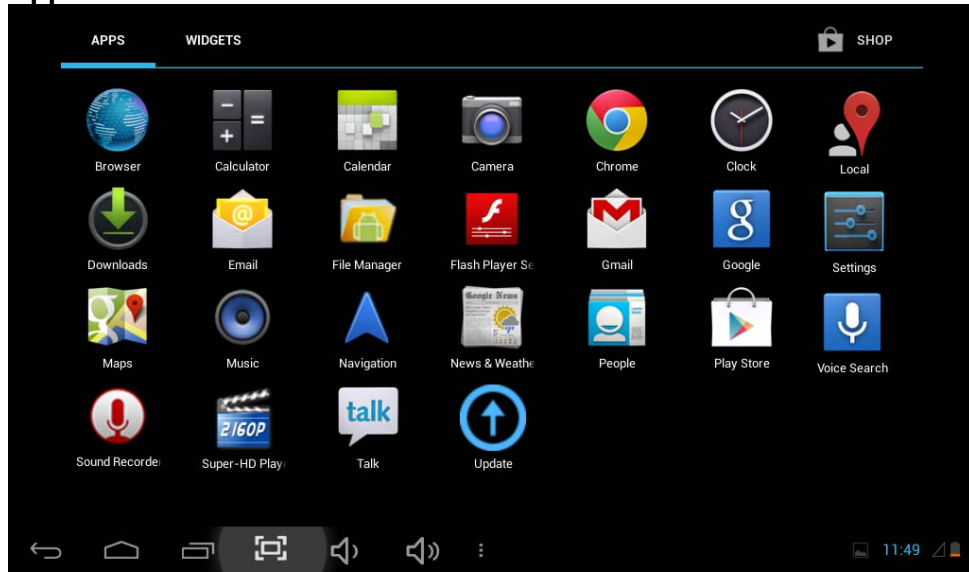















Applications Interface









Introduction of Applications

The following table shows the available applications. The sequence may be different depending on the software version and the application list may vary with different models.



Icon	Function
	Browser
	Calculator
	Calendar - To manage daily, weekly and monthly events and set alarm clock for important events. GOOGLE account is required when it is used for the first time.

	Camera
	Clock - To set the alarm clock and show the time.
	Download - To manage resources downloaded from internet.
	E-mail
	File Manager - To access to all pictures, videos, music files, audio files, etc.
	Music player
	Voice Search - Tap to access GOOGLE search bar directly and could speak what you need to then search your requirements from your mouth
	Settings - To view device information and customized settings
	Sound recorder
	Super-HD Player - To play pictures and videos
	Google Chrome
	Flash Palyer Settings---need to connect the internet
	Gmail
	Google
	Local—To search your location when connecting with WIFI
	Maps



	<p>Navigation</p>
	<p>News and weather on Google</p>
	<p>People—To save the telephone number.</p>
	<p>Play store</p>
	<p>Talk—To chat with other people online</p>
	<p>Update the new version</p>

Widget Interface

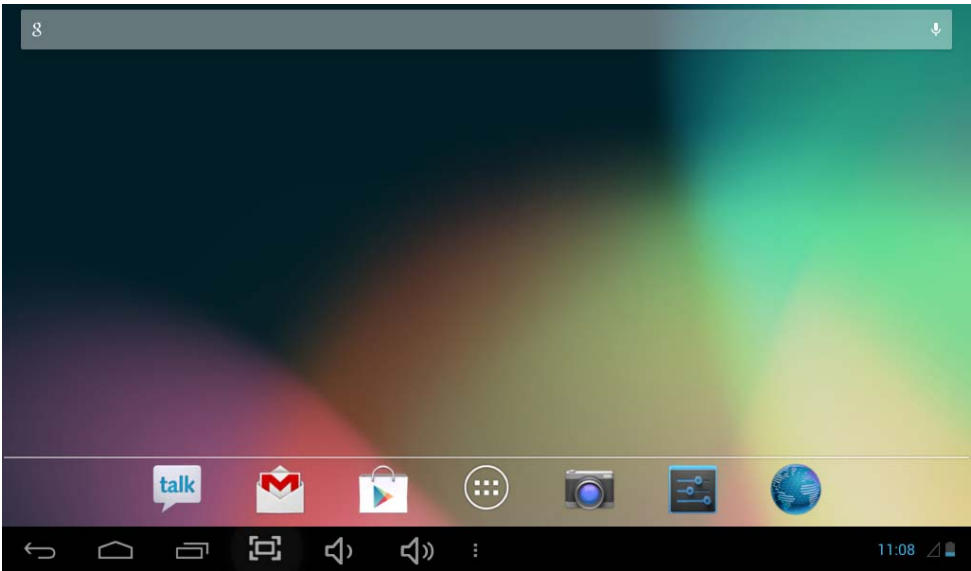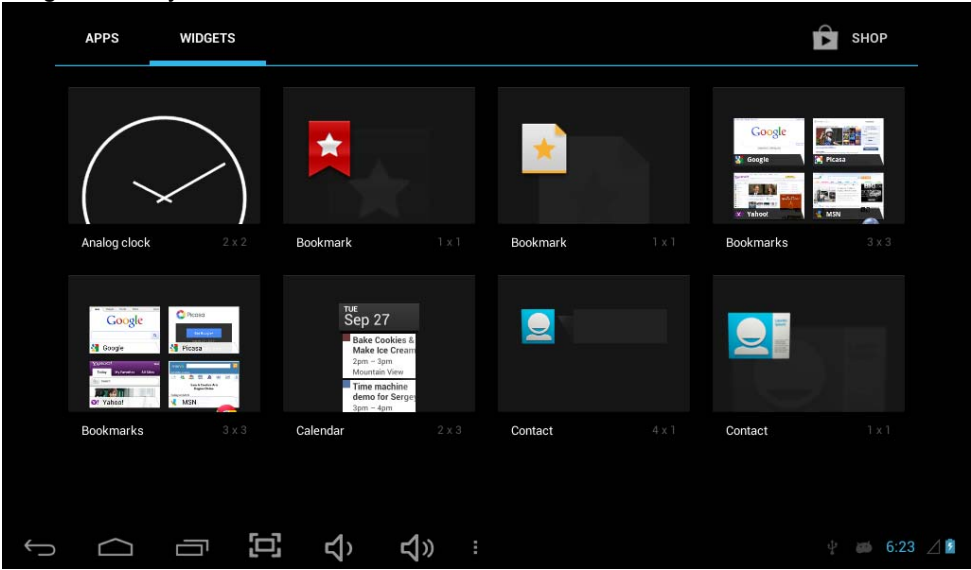To use the widgets, long press on the widget icon until it switches to the main screen. When it switches to the main screen, let go of the widget icon and the widget is ready to be used.



Basic Settings


Tap  on the main screen to enter the Application interface and tap  to enter the settings.

1. Wireless & networks: connect and manage WIFI and other networks.

1.1 Slide the Wi-Fi at the “ON” status and the the device will scan for available


AP. You can also tap on , and then tap  to scan for

available AP manually or tag on  to add a new AP. Tapping on


 can enter the advanced settings.




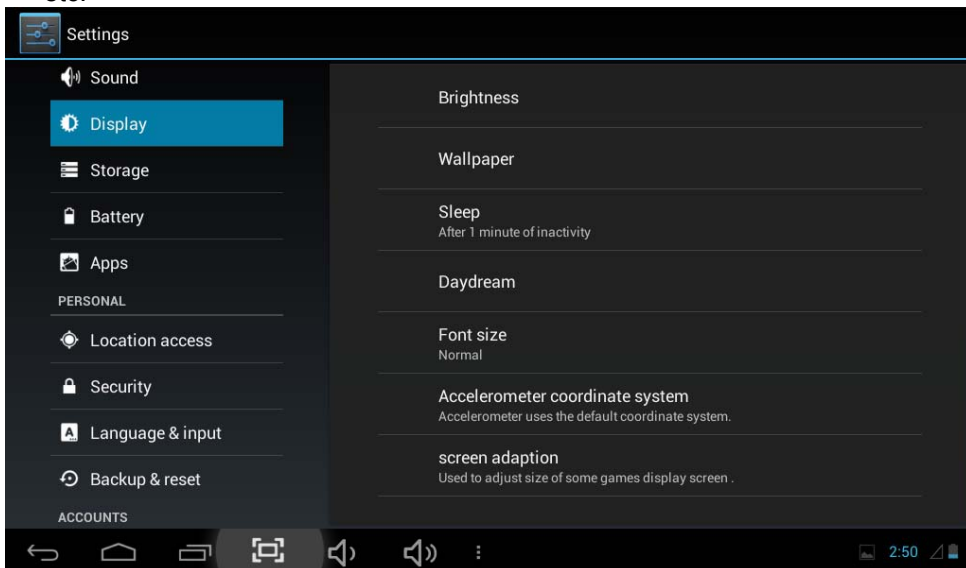
1.2 The device will list out all the available AP's after the scanning. Tap on the desired AP name and tag on “Connect” for connection. If this AP is connected successfully it will show “Connected” and the Wi-Fi icon will show in the lower right corner of the LCD screen.


2. Data usage : To view the data flow of wireless network, and set up the flow setting.


3. Sound : To adjust the sound volume, modify ringtone, notifications, etc.

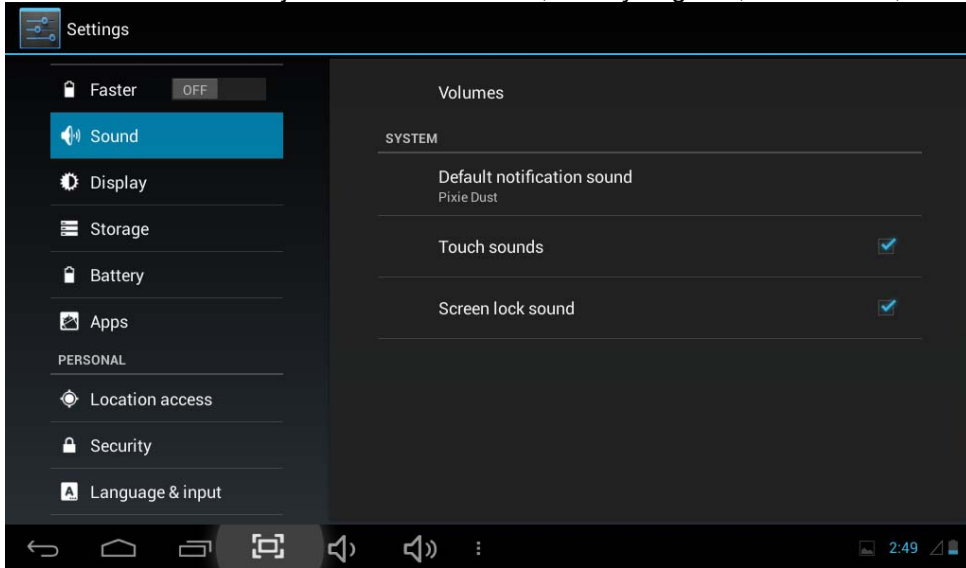


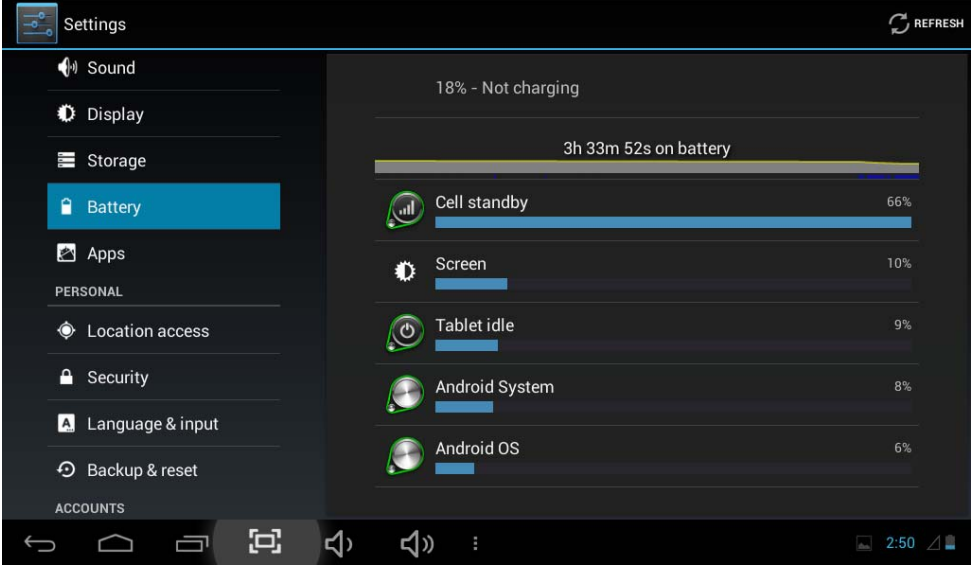
4. Display : To set up the brightness, wallpaper, auto-rotate screen, font size, etc.




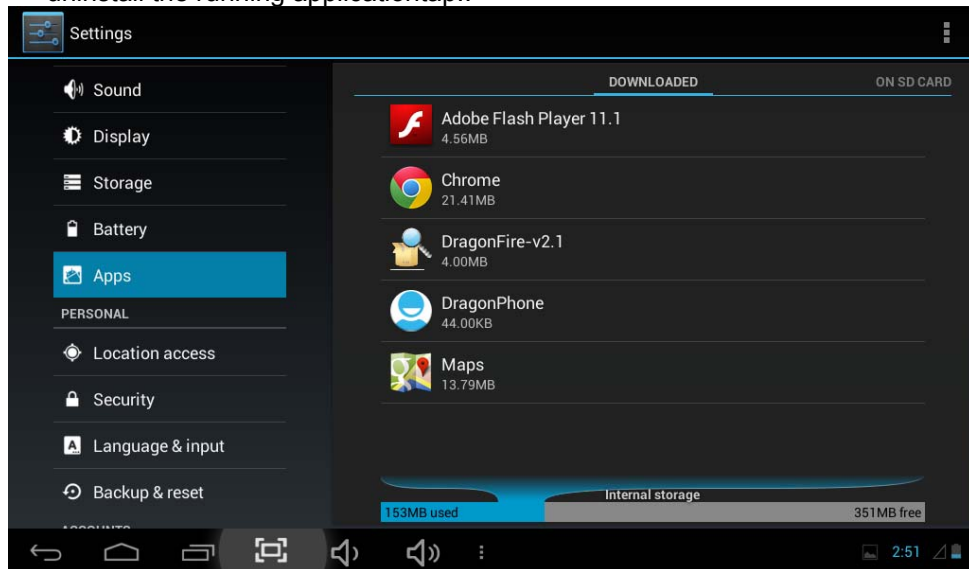
5. Storage : To manage the internal memory storage and external memory storage.

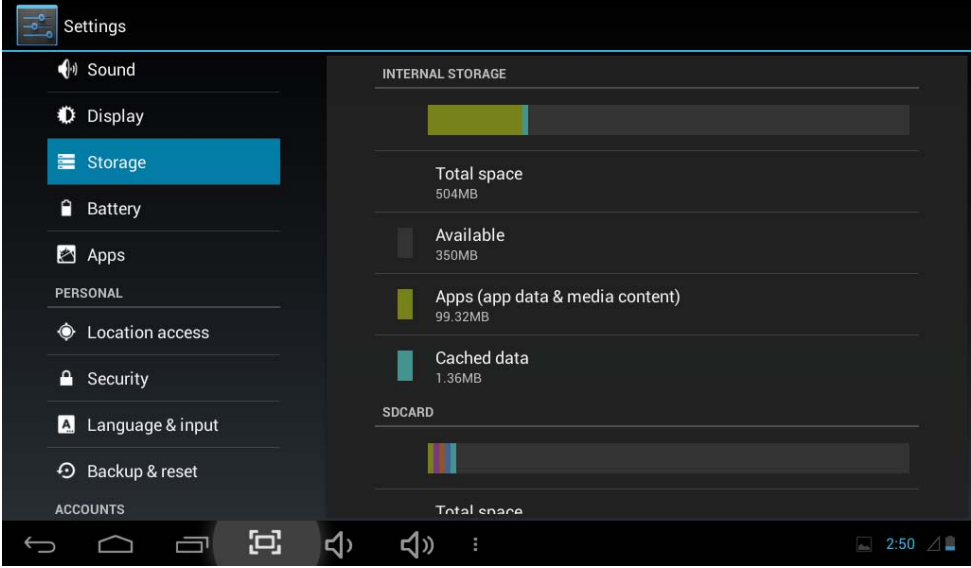


6. Battery : To check the battery power status.




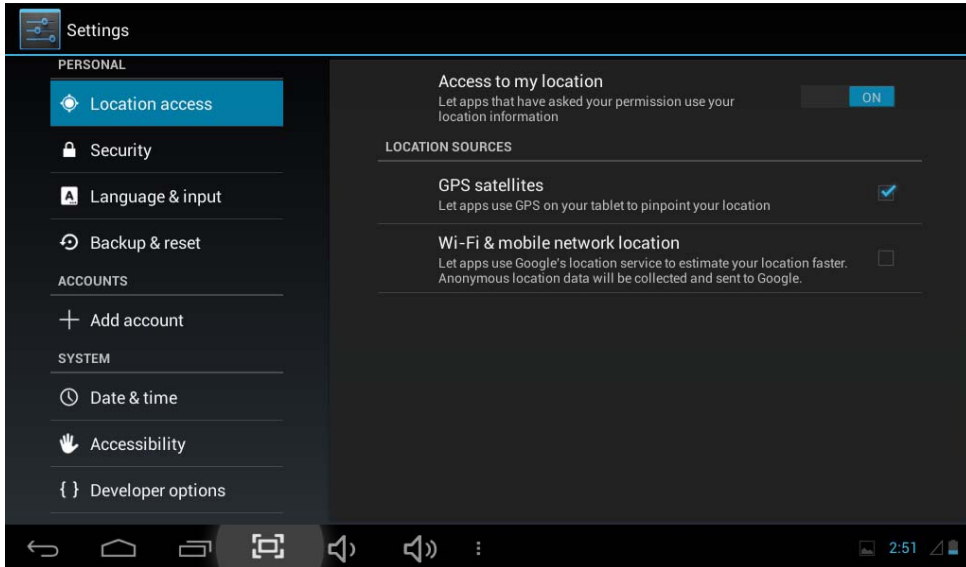
7. Apps : To check all and running applications. To tap on the App can uninstall the running application tap..




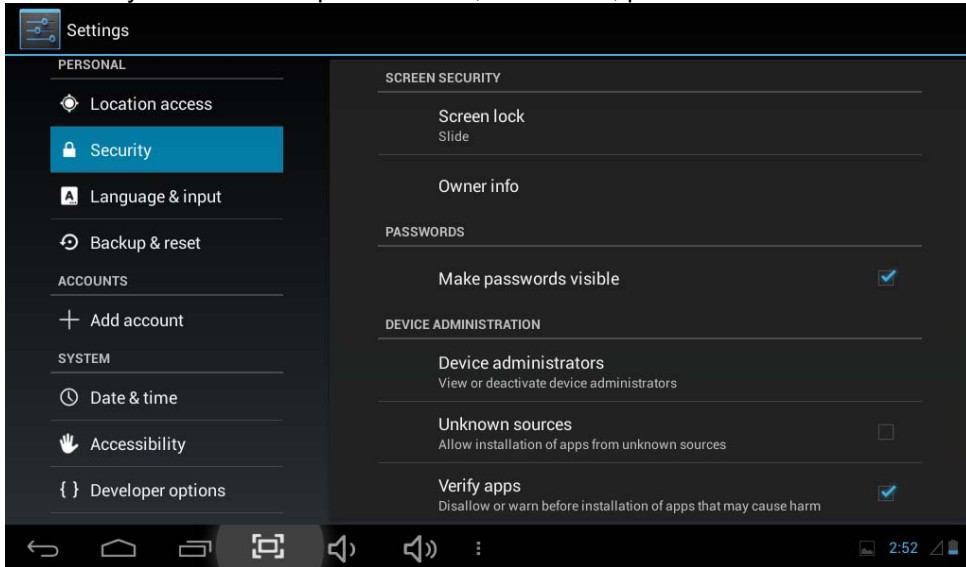
Tap an application in DOWNLOADED to uninstall or stop it (the default/pre-installed applications cannot be uninstalled).

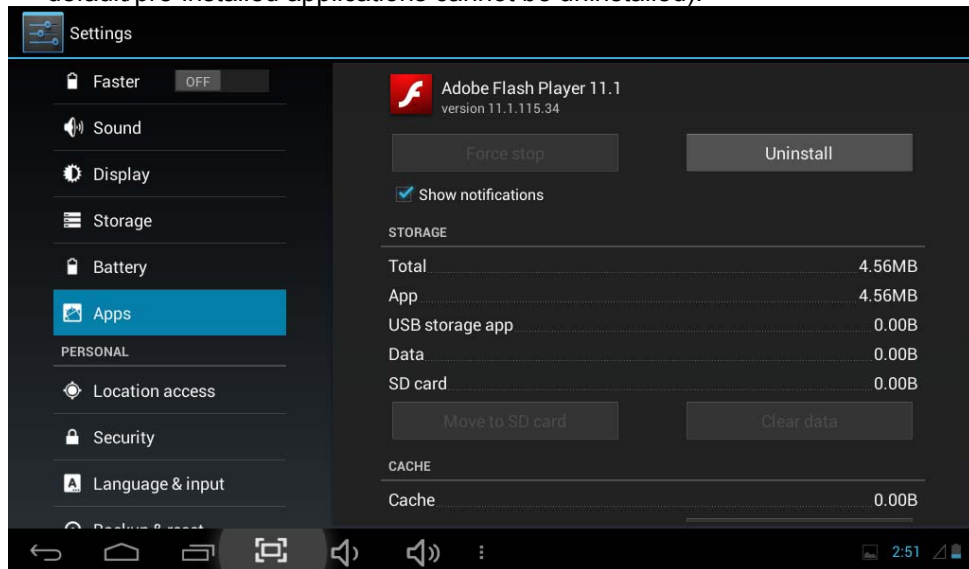


8. Location services : To confirm if you agree to reveal your current location thru Wi-Fi.





9. Security : To set up screen lock, owner info, passwords...etc.





10. Language & input : To set up language, input method and keyboard


language...etc.

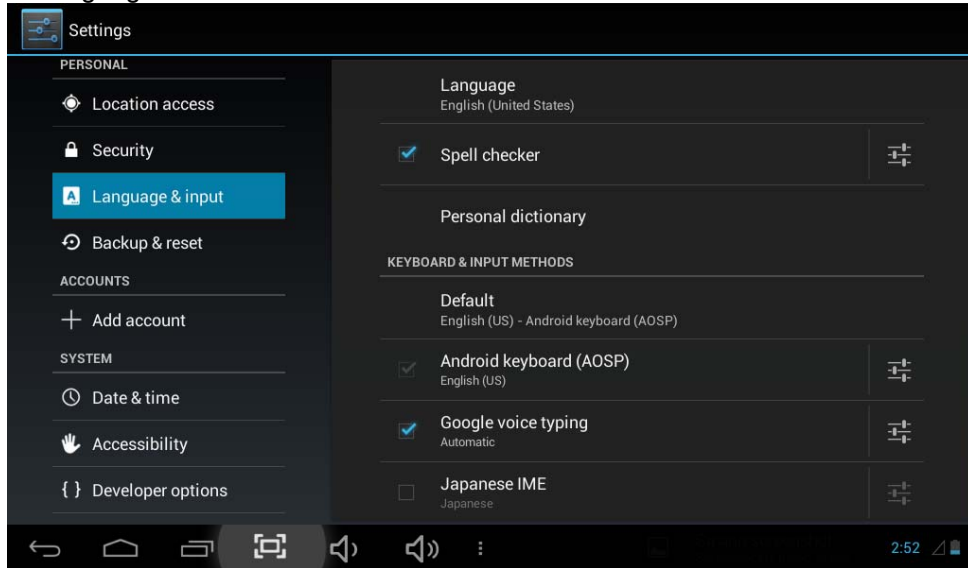


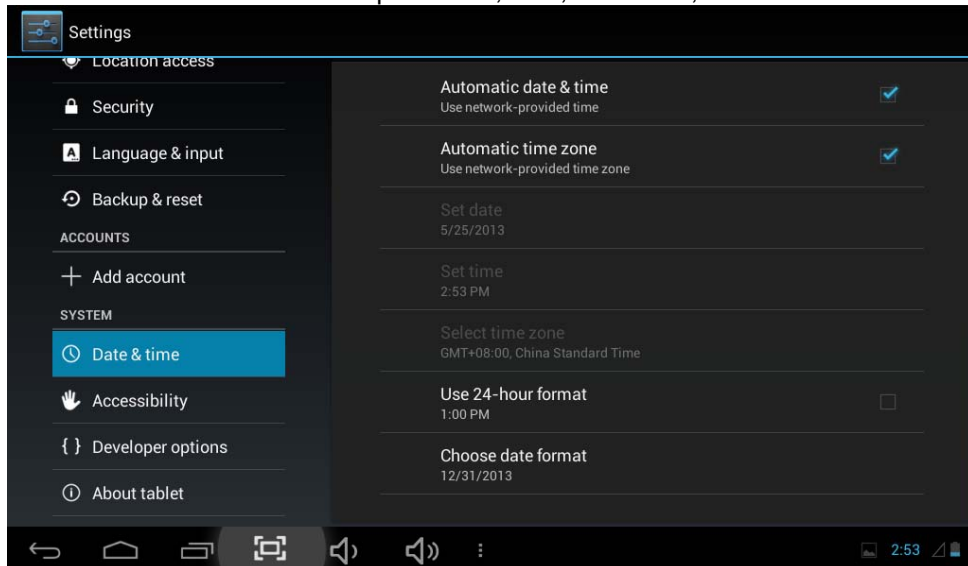
11. Backup & reset : To back up the data and restore to factory default settings. (Note: this operation will clear up all personal information and downloaded applications.)

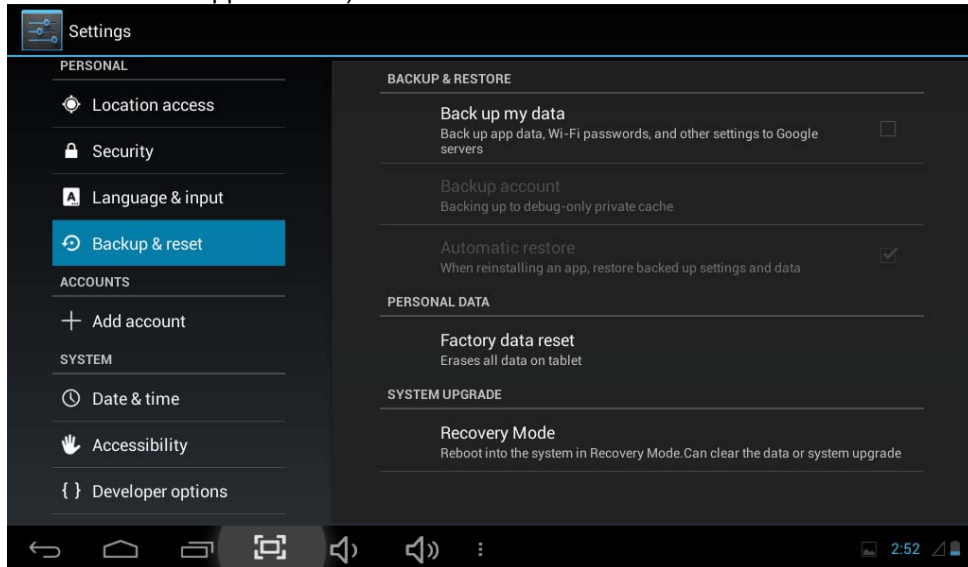



12. Accounts & sync : Tapping on **ADD ACCOUNT** on the up right corner on the screen to add a new account.

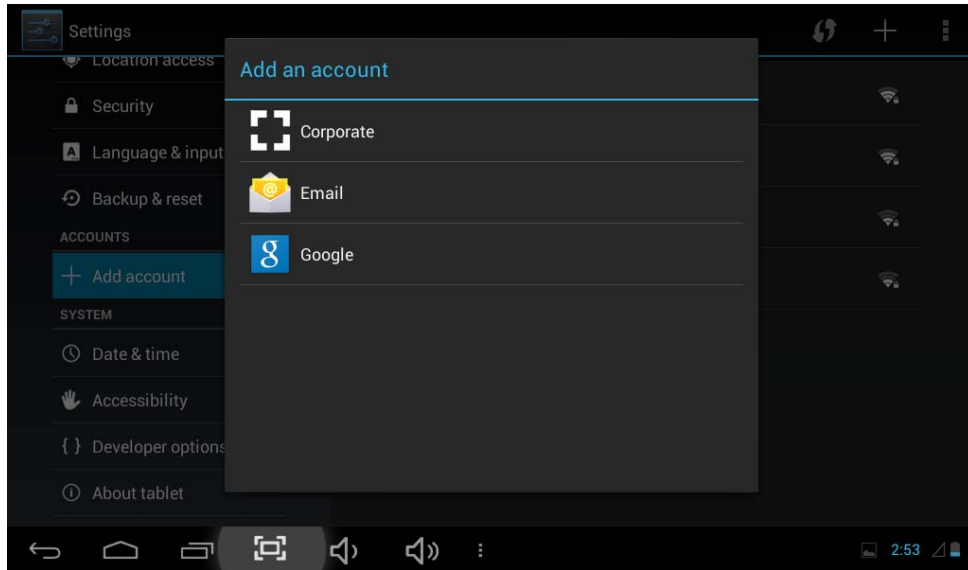


13. Date & time : To set up the date, time, time zone, and date format.




14. Accessibility : To set up the font size, touch & hold delay....etc.

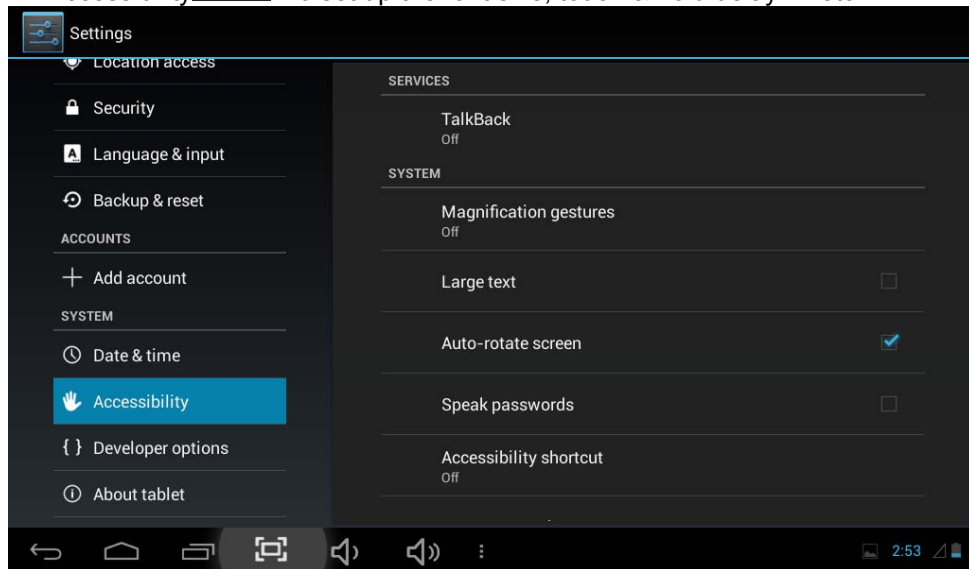


15. Developer options: This item is for technical use and not for the consumer.

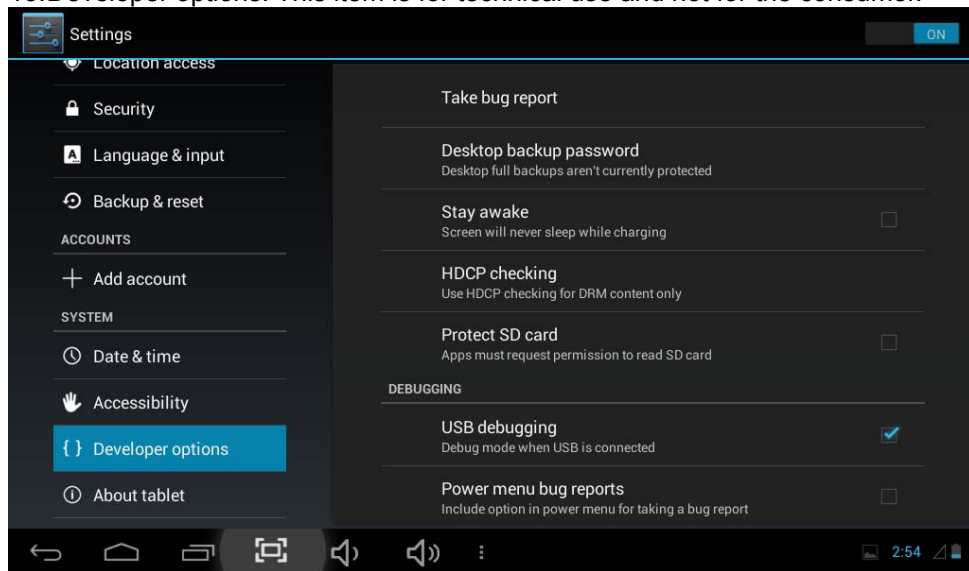

16. About tablet : To check the software version, status...etc.

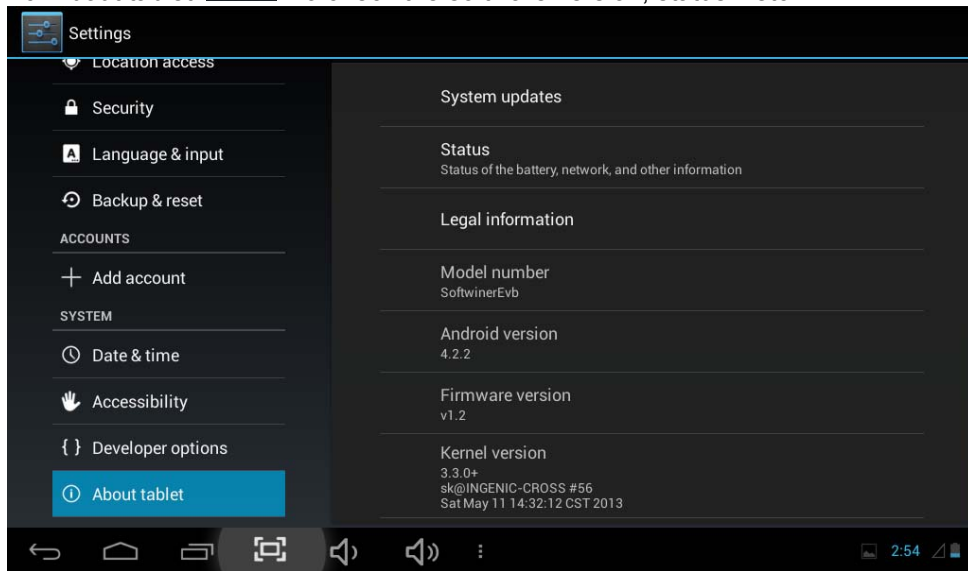

Troubleshooting

Description	Resolution
Network or service error	If the signal is weak or signal receiving is poor, the data reception may be lost. Please move to other places and try again.
Slow or incorrect response of touch screen	<ul style="list-style-type: none"> • Remove the screen protective film. It is not recommended to have protective film on the touch screen. • Make sure that your fingers are dry and clean when tap the touch screen. • Restart the device to clear the software error. • If the touch screen is scratched or damaged, please contact local service provider.
Device is frozen or severe error	<p>If the device is frozen or suspended, you may need to turn off the application or reset the device. If the device is frozen or responds slowly, Long press the power button  for 8~10 seconds to restart the device.</p> <p>If the problem still exists, please restore to the factory default setting which the process is: Open the applications list on the main screen, select Settings → Backup & reset → Factory data reset → Reset tablet PC.</p>
The device sends alert tone and the battery icon flashes	The battery is going to drain. Please charge the device.
The temperature of the devices rises	It is normal tha the temperature of the device rises when the high power comsumptive appliations are being used for a long time.
Error when camera is activated	<ul style="list-style-type: none"> • The memory has no or insufficient memory space for the photo or video recording. Please move the stored photos/videos to the PC to yield the memory capacity for the new files. • The battery power may not be suffient. Please charge the device.

Error when music player is activated	<p>There are various reasons that the error occurs.</p> <ul style="list-style-type: none"> • The memory has no or insufficient memory space to play the music. Please move the stored files to the PC to yield the memory capacity. • The music file is by the file format that the device does not support.
Connection failure between the device and the PC	<ul style="list-style-type: none"> • Make sure to use the USB cable supplied. • Make sure the USB cable is firmly connected to the device and the PC.



EC Declaration of Conformity

The product complies with the protective requirements of European Directives 2004/108/EC.

The conformity declaration for this product is available under www.jay-tech.de.



Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE)

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses

and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment..

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.