

9 " Digital Mobile Internet Device

PX0880 User's Manual

Version-01-20130408

1. Appearance	2
2. Power Switch.....	2
3. Touch Screen.....	2
4. Using SD Card	3
5. Getting Started.....	3
6. Desktop	4
7. Lock Screen	5
8. Reinstalled applications	5
9. Desktop Menu.....	7
10. Managing Applications	8
11. Clock.....	9
12. Installing Software Online	10
13. Browser	11
14. Calendar	11
15. Camera	12
16. Calculator	13
17. Sound Recorder.....	13
18. Email.....	14
19. File Manager	16
20. Music.....	17
21. HD Video Player	18
22. Settings.....	18
FAQ.....	21
Battery management	23
Important safety instruction	23

1. Appearance



2. Power Switch

Switch on: press and hold the power switch for 3 seconds and wait for startup.

Switch off: press and hold the power switch for 3 seconds → click Power off → click OK.

Lock/unlock screen: briefly press the power switch to lock/unlock the screen.

Forced shut down: if the device has no response, press and hold the power switch for 7 seconds to switch off the device by force.

Warning: forced shut down may cause unexpected errors of the system!

3. Touch Screen

The touch screen is easy and convenient to use.

You can use the touch screen in the following methods:

Single click: briefly touch the screen with the finger and then move away.

Click and hold: click the screen with the finger and hold for about 2 seconds.

Drag: click a certain icon in the screen and hold, then move the finger, the icon will move accordingly.

☆ To avoid damage the screen, never put anything on the it.

4. Using SD Card

☆ The device supports up to 32GB storage card.

Insert the card into the card slot, and push it in with your finger until a “click” is heard. Now the card is ready for use.

Removing SD card

Close all programs or files on the card first. Click Settings → Storage → Remove SD card → OK.

Then press the card with your finger, and simply remove it when it is ejected.

☆ Do not insert and remove the card repeatedly in a short time, this may cause damage to the card.

☆ We suggest you use the card of famous brand to ensure compatibility.



5. Getting Started

Charging the device

☆ It is not recommended to charge the device via USB cable.

☆ You may operate the device while charging it, but this may prolong the charging time.

Connect one end of the AC adaptor to the mains supply and the other end to the power jack on the device to charge it (it may take about 5 hours to fully charge the device).

The battery icon  will roll during charging, and when it is full  (it will stop rolling), please disconnect the AC adaptor.

Starting the device

Press and hold the power switch for 3 seconds and wait for system startup.

Wi-Fi setting

We suggest you configure your Wi-Fi network before using, as many functions require for it to work normally.


1. Click **Settings** → **Wireless and Network**
2. Switch the **Wi-Fi** on.

The device will search and list all available **Wi-Fi** network. If an icon  is displayed, you need to enter a password to connect to such Wi-Fi network.

3. Click the desired **Wi-Fi** network → Enter the password (if any) → Click **Connect**.
4. Click Return to return to desktop.

☆ The *Wi-Fi* set as hidden will not be searched automatically. In this case you need to click **Add Wi-Fi Network** and enter necessary information to add your *Wi-Fi*.

6. Desktop

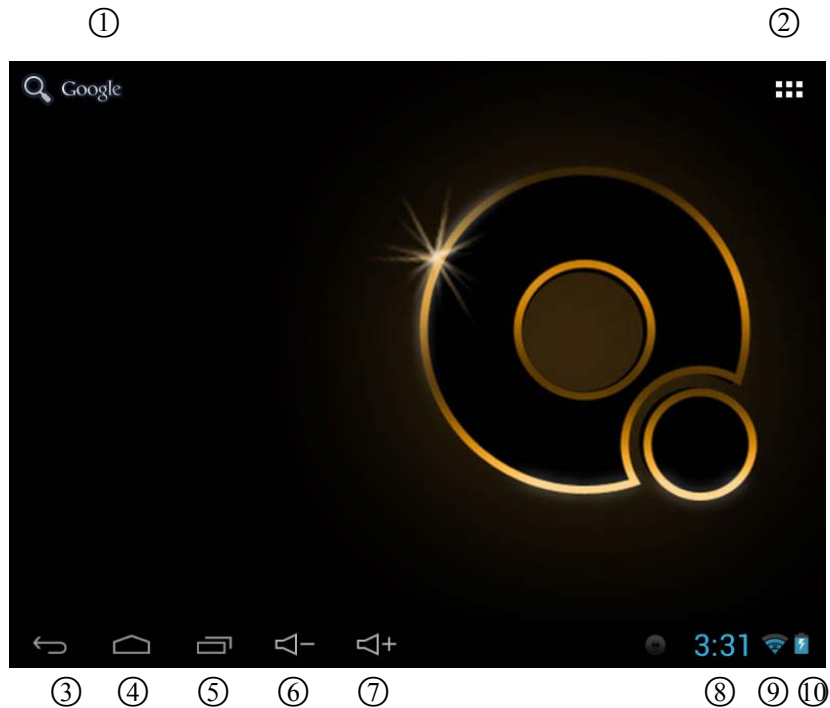

- ① Search
- ② Click to view all applications
- ③ Return
- ④ Return to desktop directly
- ⑤ Task
- ⑥ Volume –
- ⑦ Volume +
- ⑧ Current time
- ⑨ WIFI signal
- ⑩ Battery status


☆ Click any icon to run it.

☆ Click and drag the icon to move it to another place on the screen.





☆ Click and drag the icon to  to delete it from the desktop.

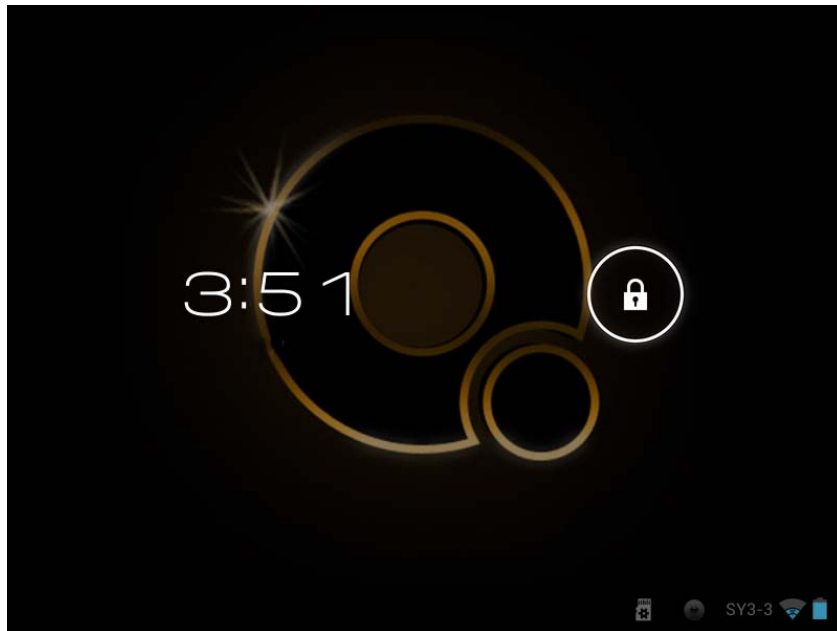







7. Lock Screen

You can set auto lock screen or lock screen manually by pressing the power switch. The lock screen interface is as follow. Slide at the right to unlock the screen.





8. Reinstalled applications

	Play Store	Download applications conveniently.
	Photo album	View pictures.
	Gmail	Send and receive emails via your email address
	HD video player	Play and manage videos.


	Calculator	Make four arithmetic operation.
	Browser	Connect to Internet.
	Sound recorder	Record and play recorded sound.
	Calendar	A calendar where you can set agendas.
	Settings	Make personalized settings.
	Clock	View current time and set alarm clock.
	Search	Google search tools
	File manager	View and manage files and applications. Install Android applications and backup files in SD card.
	Downloaded files	Records of downloaded files.
	Camera	Take photos.
	Music	Play and manage music files.

☆ Click and drag the icon to  to another place on the screen.

☆ Click and drag the icon to  to delete it from the desktop. In the application list, click and drag the icon to  to uninstall the application from the device.

9. Desktop Menu

On the desktop, click icon  to display menu functions.

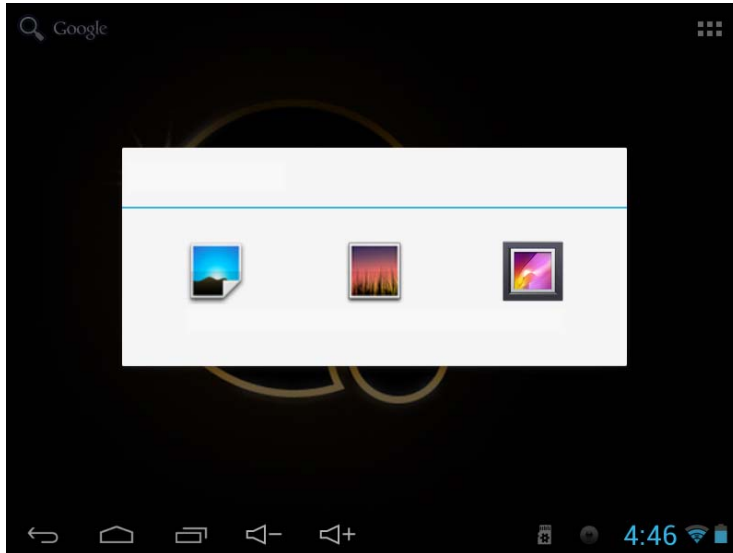

Wallpaper	Select wallpaper from photo album.
-----------	------------------------------------

10. Managing Applications

Installing

☆ You can find many interesting and free Android applications through the internet. Simply open the browser and search for “Android Applications” .



The purchased or downloaded Android applications through the File Manager



can be quickly and simply installed

1. Copy the **.apk** file you want to install to the SD card or USB disk → insert the card or connect the USB disk to the device.

2. Click  the File Manager icon

3. Click  or  and find the folders containing **.apk** files.

4. Select a **.apk** file → Install.


Now the application is installed and the icon of such application will display in the interface that displays all applications.

5. Click **Open** to run the application, or click **Complete** to return to **File Browser** interface.

Downloading applications from internet

You can directly download Android applications from the internet and install it into the device conveniently.



1. Click  Browser icon to connect to internet.

2. Enter the URL and click the link of the application you want to install.

3. After the application is downloaded, press and hold the downloaded file (in Downloaded Files interface) → Click to open → Install.

Uninstalling the application

You can conveniently uninstall the Android applications.

1. Click  → **Settings** → **Applications** → **Manage Applications**.

2. Click the application you want to uninstall → Uninstall.

3. Click OK to uninstall the application.




11. Clock


Click Clock icon  to view the current date and time.

Alarm clock

The device supports more than one clock at the same time.

☆ When the icon  appears in the status bar on the top of the screen, it means at least one alarm clock is activated.

Add alarm clock

1. Click Clock icon 
2. Double click Set alarm clock → + Add alarm clock.
3. Set your desired alarm clock.
4. Click Activate alarm clock.
5. Click Complete.

Stop the alarm clock

When the set time is reached, a window will pop up showing the name of the alarm clock.

If you want the clock to alarm again 10 minutes later, you can click Pause and repeat.

Click Cancel to stop the alarm clock.

Activate the alarm clock



If the alarm clock is repeated, then you want to stop the alarm temporarily but not delete it.


1. In the alarm clock interface, select the alarm clock you want to activate.
2. Click Reactivate.

Edit the alarm clock

1. Click Clock icon  → Click 
2. Click the alarm clock you want to edit → Edit the alarm clock.

Delete the alarm clock

1. Click Clock icon  → Click 
2. Click the alarm clock you want to delete.
3. Click to delete the alarm clock.

Click  to return to desktop.



12. Installing Software Online

There are many applications available in the Installing Software Online interface. You can easily and quickly download them into your device.

Download the application



1. Click the Installing Software Online icon .

☆ If this is the first time you use this function, the system will ask to register and login. If you don't have a registered account, you need to click Register to establish a Google account. If you already have a Google account, simply click Login and enter your account information, click Login again to login.

2. You can select application from the recommendation list, or otherwise the list of classification or ranking. You can also search for the application you want by entering a specific name.

3. Click an application → Download.

4. When downloading completes, click Install.

5. Click Open to run the application, or click Complete to return to Installing Software Online interface.

Record

When downloading completes, click Record to manage the installed application. You can submit your comments to the application or view other users' comments. You can also uninstall the applications.

Menu function

Click to display the menu function of the Installing Software Online.

Personal folder

Click to view personal information. You can change your password, change email address and save your password here. Click the Login out at the top right corner of the personal folder to logout your account.

About

Display the version and support information of Installing Software Online.




13. Browser

The user can connect to the internet through the browser.

Click the Browser icon




on the desktop to open the browser.

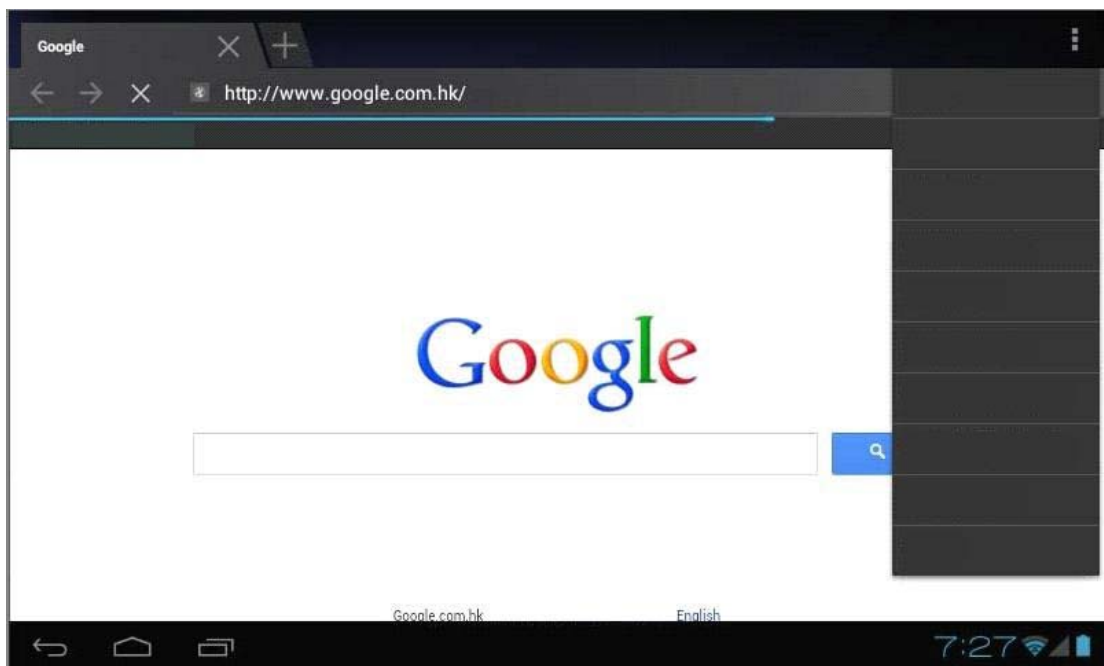

14. Calendar


Click the Calendar icon



If this is the first time you use this function, you need to open an Exchange account first. Enter your email address and password, click Next, and complete the configuration of the account following the instructions. Now you can use the Calendar.

New activity

1. In calendar interface, click the date you want to add an activity.

2. Select time of the activity → enter the details of the activity in the field.
3. Click Complete.
4. Click icon  to select your desired calendar interface.

☆ *The date with agenda is displayed in grey.*






15. Camera

Click  Camera icon.





Menu function



1. Press the Menu button to pop up the menu list, which includes: Switch to video / Switch to camera and My album/My video.
2. In camera interface, click My album to enter the album to view the taken photos.
3. In video recording interface, click My video to enter the video list.

Take a photo

1. In camera interface, click  to take a photo.
2. The photo will be saved automatically.
3. Click the thumbnail  to enter My album to view full size photos.
4. Click Return to return to camera.
5. Click  to exit camera and return to the desktop.


Record a video

1. Click  to switch to video, and you can record videos.
2. Click  to start recording, click  to stop.
3. The recorded video will be saved automatically.
4. Click the thumbnail  to play the video.
5. Click Return to return to camera.

6. Click  to switch back to camera interface.
7. Click  to exit camera and return to the desktop.







16. Calculator

1. Click  the Calculator icon .
2. Click the numbers and operators to make operations.
3. Click Clear to clear the entry one by one, or click and hold Clear to clear all entries.



17. Sound Recorder

1. Click the Sound Recorder icon .
2. Click the  icon to start recording.
3. When recording completes, click the  icon to stop recording.
4. Click the Play icon  to play the recorded sound.




18. Email

☆ Support POP3 and SMTP accounts.


New email account

You enter one or more email accounts that you want to use on the device.

1. Click the Email icon  .
2. In the Your account interface, click **Next**.
3. Click Email address option → Enter your email address.
4. In the Password option → Enter the password of your email.
5. Click complete.
6. Manual setting (optional): the server will select email provider (such as gmail.com) according to the email address you have entered automatically. However, if you need to change the server setting, you can click Manual setting and make necessary changes.
7. Click **Next**.
8. Optional: enter account name.
9. Enter the signature → Click **Complete**.

☆ When setting completes, if you cannot connect to a free email account, please confirm with your email provider whether there sever supports (POP) and (SMTP) protocols or not.





Inbox

1. Click the Email icon  .
2. If only one email account is set, such account will be opened directly. If more than one is set, all email accounts will be listed.
3. Click the email account that you want to open → Click Inbox.




Open an email

1. In Inbox interface, click an email to open it.
2. If there is attachment, click Open to activate the corresponding application to open it, or click Save to save it to SD card.
3. If you want to reply, click Reply or Reply all.
 - a. Enter the message you want to reply.
 - b. Click Send to send the email. If you save it as draft, the message will be saved but not sent; if you don't save it or sent it, it will be discarded.
4. Click Cancel to cancel an email immediately.

Compose an email



1. In Inbox interface, click  → Compose your email.
2. Click **Send to** option, then enter the address of the **Receiver**.
3. Or, if you want cc or bcc to others, click the icon  → Add cc and bcc, then enter the email address of the receiver.
4. In the title bar of the email, enter the subject of your email.
5. Click **Compose email** option to enter your message.
6. If necessary, click  → **Add attachment** to add attachment.
7. When composition completes, click  → **Send**.

Edit email account

1. Click the Email icon .
2. In Inbox interface, click  → **Account setting**.
3. Make your email account setting according to your needs.
4. Click  to return to Inbox interface.

Delete an email account

☆ *If you have more than one account, and you have deleted the default account, then the next account in the list will become default.*

1. Click the Email icon .
2. In Inbox interface, click  → **Account**.
3. Click and hold the account you want to delete.
4. In the pop up **Account option** window, click **Delete account**.
5. Click Ok to confirm to delete.

Set default email account


You should always have one default email account. If you have more than one account, you can select any one as default.


1. Click the Email icon .
2. In Inbox interface, click  → **Account setting**.
3. Click and select default account

If the default account is deleted, the next account in the list will become default.



19. File Manager



Click  File Browser icon to view the files in all storage mediums (*internal storage of the device, SD card, USB disk*), and you can quickly and easily install Android applications into the device. Functions of the icons in the screen are as follow:



Previous folder



View



Multi select



Send email



Previous folder

UDISK1 USB disk

SDCARD1 TF card



Copy files between PC and device

You can use the File Browser to copy files between PC and the external/internal storage mediums. To copy files into the device, you can firstly copy them to SD card or USB disk.


☆ The folder name of the internal storage medium is “Local”, the name of the storage card is “sdcard”, and the name of the USB disk is “udisk”.

☆ The following example is that you copy file into the device from SD card or USB disk. You can use the same way to copy the file from the device to the SD card or USB disk. Then connect your storage medium to your PC and copy the files into the desired folder.



1. Click  or  to display the files in the storage medium.

2. Click and hold the file or folder you want to copy → click **Copy**.

3. Click icon  to return to internal storage medium → click the folder you want to copy to → click **Paste**.

Delete a file



Select the file or folder you want to delete → click Delete → click **OK** to delete.




20. Music

☆ Support MP1, MP2, MP3, WMA, OGG, APE, FLAC, WAV, AC3, AAC, AMR, DTS, RA, M4A formats.

Play music

1. Click My music icon .
2. Select the track you want to play from All/Album/Artist/Album/Track/Play list/Now playing.
3. Click the track to play.
4. To return to previous interface while playing a track, click  to return to desktop.

Click the track in the list to enter Music Player. The interface is as follow:

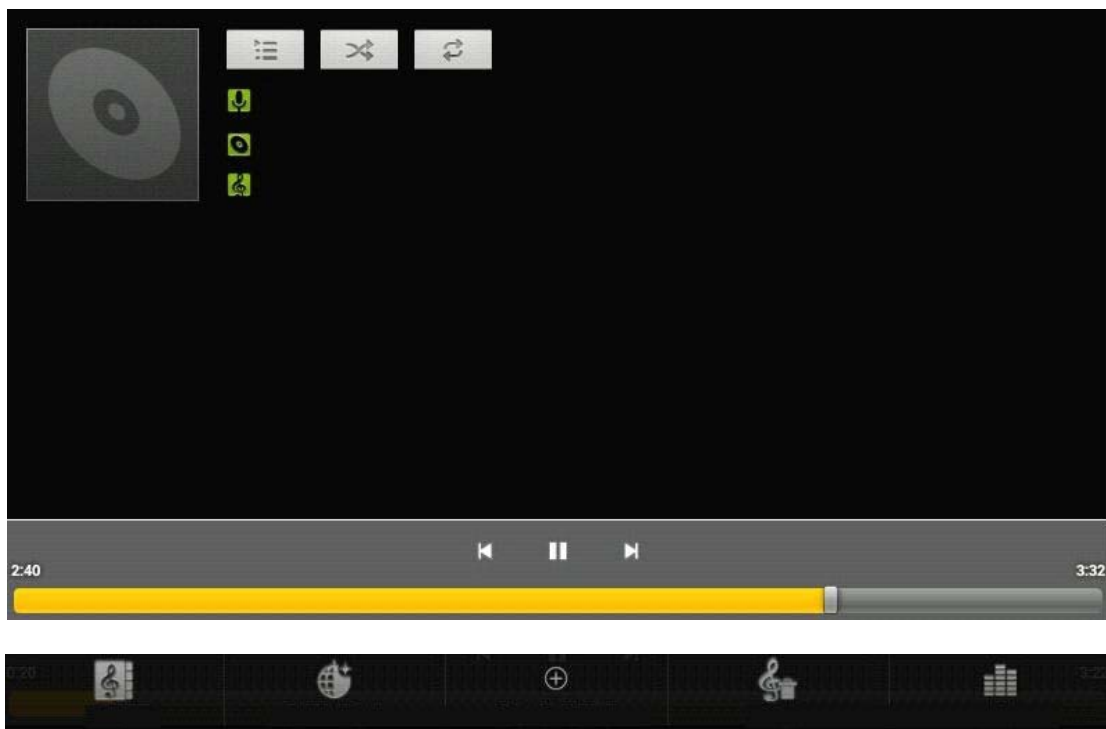

In this interface, you can use the operations such as Search, Play/Pause, Next track/Previous track, Repeat all and Random play.

Operate the track and play list

New play list

1. Click setting, and click Add to play list
2. Enter the name of the play list.

3. Click **OK**.

Rename or delete the play list

Click and hold the play lists → click **Rename** or **Delete**.

New track

1. Click and hold the track you want to add to play list, → click “Add to play list”.

Delete track

Click and hold the track you want to delete → click **Delete**.



21. HD Video Player

☆ Support RM, RMVB, MKV (H.264), MPEG (AVI), MOV, FLV, MPG, VOB, MPE, DAT formats. Support 2160P, 3840×2160.

☆ Supported picture format: JPG, JPEG, BMP and PNG.

1. Click the HD Video Player icon



2. Select the video or picture you want to play from All/Content/My favorite/Personal list

3. Click on the screen to adjust the video (including volume, pause/play, brightness, etc.).



4. Click the picture to preview or play in slide.


5. Click  to return to list.



22. Settings

Wireless and network	Wi-Fi	Enable Wi-Fi.
	Wi-Fi	Setting
	Mobile network	Set roaming, network, APN option.
Bluetooth	Bluetooth	Enable Bluetooth
	Bluetooth	Search for Bluetooth devices nearby, and when the device is paired, select the desired item.
	Mute mode	Mute except media and alarm clock.
	Volume	Adjust volume of media, alarm clock and notification.

Sound		Click and move the slider  , then click OK.
	Notification ringtone	Select desired notification ringtone.
	Operation tone	Tone played when selecting on screen.
	Screen lock promote tone	Tone played when locking/unlocking screen.
Display	Brightness	Click and move slider  to adjust brightness of the screen and click OK to confirm.
	Auto rotate screen	When it is selected, the screen will switch between Portrait and Landscape according to the direction of the device.
	G-sensor coordinate system	Use the different coordinate system mode, which is necessary under certain conditions.
	Animation	Whether or not to display in animation in the operation.
	Screen timeout	Adjust the time before screen lock.
Location and security	Use wireless network	Use wireless network to view location in applications (such as Google map) .
	Set screen lock	Use picture, PIN or password to lock screen.
	Visible password	The entered password is visible.
	Select device manager	Add or delete device manager.
	Use security credential	Allow application to access to security credentials and other credentials.
	Install from TF card	Install encrypted certificate from SD card.
	Set password	Set or change credential password.
	Clear storage	Clear all credentials and rest the password.
Applications	Unknown source	Allow installing applications supplied by electronic market.
	Manage application	Manage and delete installed applications.
	Service in process	View and control the services in process.
	Storage status	View the space occupation of the application.
	Development	Set application development options.
Account and synchronization	Background data	Set whether or not the applications will synchronize, send and receiver data from time to time.
	Auto synchronization	Auto data synchronization of the application.
	Back up my data	Back up the application data, wifi password and other settings to Google server.
	Auto recovery	When an application is reinstalled, the system will recover the back up setting or other data.
	Restore factory setting	Click to clear all data on the device. Click Reset the

Privacy		<p>device will be reset, or click  to cancel and return to previous screen.</p> <p>Warning: the following data will be deleted from the device:</p> <ul style="list-style-type: none"> ~ Google account. ~ Data and settings of the system and applications. ~ All downloaded applications. <p>The following data will not be deleted:</p> <ul style="list-style-type: none"> ~ System software and preinstalled applications. ~ Files in SD card, such as music and photos.
Storage	Total capacity, free space	Display when a TF card or USB disk is inserted.
	Remove SD card/USB disk	When a TF card or USB disk is inserted, click Remove SD card/USB disk to remove them.
	Format SD card/USB disk	Format (clear) TF card/USB disk.
Language and input/output	Select language	Select language according to your location.
	Personal dictionary	Add words to the user dictionary.
	Android keypad	Screen keypad setting.
	Listening example	Play short voice examples.
	Preferred engine	Set the voice combination engine for switching between text and voice.
	Voice speed	Play speed after the texts are converted into voice.
	Pico TTS	Pico TTS setting.
Date and time	Auto	Use the network value, i.e. to synchronize with the network time.
	Set date	Set date.
	Set time	Set time.
	Select time zone	Select time zone.
	Use 24-hour time system	Select 24-hour time system or 12-hour time system.
	Select date format	Select date format.
About the device		View status, battery status, legal information, model, Android version, kernel version and version number.

FAQ

Android

Q: What is the Android version?

A: 4.1.1

Basic function of the device

Q: Do I need to charge the device before use?

A: You need to charge the battery for at least 4 hours, but you can operate the device while charging.
When charging, always use a AC adaptor.

Email

Q: May I use my own email address to send and receive emails?

A: The device support POP3and SMTP accounts. The device may not support some free email accounts. Please consult the email provider for details.

Storage card

Q: What storage card does the device support?

A: mini SD card.

Music

Q: What audio formats does the device support?

A: MP2, MP3, WAV, AAC, WMA

Q: How can I add music into the device?

A: You can copy the audio files from PC to SD card or USB disk, then copy them into the device through File Browser.

Picture

Q: What picture formats does the device support?

A: JPG, JPEG, BMP and PNG.

Q: How can I add pictures into the device?

A: You can copy the picture files from PC to SD card or USB disk, then copy them into the device through File Browser.

Video

Q: What video formats does the device support?

A: MPEG1/2/4, MJPG, H263, H264. H264 supports 720×480, other formats support 1280×720.

Q: Are videos in YouTube playable by the device?

A: Yes. You can click YouTube icon to play videos.

Q: How can I add videos into the device?

A: You can copy the video files from PC to SD card or USB disk, then copy them into the device through File Browser.

Wi-Fi

Q: Do I need an external Wi-Fi device to connect to internet?

A: No. The device has built in Wi-Fi function.

The actual product you receive may differ.

Battery management

The battery is not fully charged when leaving the factory, so we suggest you charge the battery for at least 4 hours before using.

The useful life of the battery is usually counted by charging times. However, you can try the following dos to prolong its useful life:

- Use the device at least once every week.
- Regularly fully charge the battery.
- Never keep the battery empty for a long time.
- Keep the device and the battery away from heat.

Charging the battery

Connect one end of the AC adaptor to the mains supply and the other end to the power jack on the device (it takes about 5 hours to fully charge).

When the battery is full, the battery icon will display



It takes about 5 hours to fully charge an empty battery. You can operate the device while charging.

Important safety instruction

Please follow the following safety instructions while using the device to avoid risk of fire, electric shock or injury:

- Keep the product away from rain and humidity.
- Keep the product away from direct sunlight and heat.
- Protect the power core. When connecting the power core, do not trample on it or place anything on it. Use care to protect the connectors of the power core.
- Please only use the approved AC adaptor for charging. Using other adaptors may cause damage.
- Never disassemble or try to repair the device.

Clean the device

Clean the screen tenderly. To clean the fingerprints or dust on the screen, we suggest you use the soft cloth used on camera lens, but don't use any rough cloth.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device,

pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.