

Introduction



Thank you for purchasing the SoftBank 707SC.

- Read this guide thoroughly before using 707SC to ensure proper usage.
- After reading this guide, keep it for later reference.
- Should you lose or damage this guide, contact Customer Service (P.25-25).
- Accessible services may be limited by contract conditions or service area.

707SC is compatible with both 3G and GSM network technologies.

Note

- Unauthorized copying of any part of this guide is prohibited.
- Contents are subject to change without prior notice.
- Not all functions and services described in this user guide are available in Japan.
- Steps have been taken to ensure the accuracy of descriptions in this guide. If you find inaccurate or missing information, contact Customer Service (P.25-25).
- If there are any missing/misplaced pages in this manual, SoftBank will replace it.




707SC(E).book i ページ 2006年10月26日 木曜日 午前11時19分

Accessories


Make sure the following accessories are included in the package with handset. These accessories are also sold separately. For details on accessories or optional items, contact Customer Service (☎P.25-25).

Battery


AC Charger


**Utility Software
(CD-ROM)**


**Stereo Earphone
Microphone**


USB Cable


Microphone Cable


Contents

Accessories	i	Power Off	1-18
Contents	ii	Time & Date	1-18
About This Guide	xiii	Time & Date	1-18
Safety Precautions	xv	Time Zone Updating	1-19
General Notes	xxviii	Changing Home Time Zone	1-20
SAR Certification Information	xxxv	707SC Menus	1-20
1 Getting Started		Main Menu	1-20
USIM Card	1-2	Shortcuts	1-22
General Information & Precautions	1-2	Switch Bar	1-22
Inserting & Removing USIM Card	1-3	Options	1-23
USIM PINs	1-5	Security Codes	1-23
Handset Parts & Functions	1-6	Phone Password	1-23
Handset	1-6	Center Access Code	1-23
Display Indicators	1-8	Network Password	1-24
Sub Display	1-10	2 Basic Handset Operations	
Battery & Charger	1-10	Initiating a Call	2-2
Before Using Battery or Charger	1-10	Receiving a Call	2-3
Inserting & Removing Battery	1-12	Reject Incoming Call	2-4
AC Charger	1-14	Answer Machine	2-5
In-Car Charger (Optional)	1-16	Activating & Canceling	2-5
Power On/Off	1-17	Ringing Duration	2-6
Power On	1-17		

Sound Language	2-6
Checking Recordings	2-6
Engaged Call Operations	2-7
Earpiece Volume	2-7
Hold	2-7
Speaker Phone	2-7
Voice Recording	2-7
Engaged Call Options	2-8
Call Log Records	2-9
Viewing Call Log Records	2-9
Calling from Call Log Records	2-9
Deleting Call Log Records	2-10
Call Log Options	2-10
Call Manager	2-11
Data Counter, Call Costs, & Call Times	2-11
Edit Cost Limit	2-12
Display Call Cost during a Call	2-12
International Roaming	2-13
Changing Network Mode	2-13
Network Setup	2-13
Calling from Outside Japan	2-14
Emergency Calls	2-15

3 Manner Profile

Minding Mobile Manners	3-2
------------------------------	-----

Manner Related Functions	3-2
Manner Profile	3-3
Changing Profile	3-3
Offline Mode	3-4

4 Entering Text

Text Entry	4-2
Text Entry Window	4-2
Changing Text Entry Mode	4-2
Key Assignments	4-3
Entering Characters	4-5
Hiragana/Kanji	4-5
Katakana	4-7
Alphanumerics	4-8
Numbers	4-9
Symbols, Pictograms, & Emoticons	4-10
Line Breaks	4-11
Quoting Saved Text	4-11
Hangul	4-12
Editing Text	4-12
Deleting	4-12
Copy/Cut, Paste, & Undo	4-13
Jump	4-14
Prediction On/Off (Japanese Only)	4-14

Learning On/Off (Japanese Only)	4-14
Font Size	4-15
User Dictionary (Japanese Only)	4-15
Saving to User Dictionary	4-16
SMS Templates	4-16

5 Phonebook

Saving to Phonebook	5-2
Phonebook Entry Items	5-2
Adding Entry Items	5-4
Saving from Call Log Records	5-6
Category Settings	5-7
New Category (USIM Card)	5-7
Edit Category	5-7
Add Member	5-8
Using Phonebook	5-9
Calling from Phonebook	5-9
Speed Dialing	5-12
Phonebook Options	5-13
Editing Phonebook Entries	5-14
Edit	5-14
Default Number	5-14
Copy to USIM/Copy to Phone	5-15
Deleting Entries	5-15

iv

My Phonebook Details	5-16
----------------------------	------

6 Video Call

Before Using Video Calls	6-2
Initiating a Video Call	6-2
Receiving a Video Call	6-2
Engaged Video Call Operations	6-3
Engaged Video Call Options	6-5
Video Call Settings	6-5
Sending Your Image	6-5
Selecting a Substitute Image	6-6
Retry Settings	6-6
Voice Mute	6-7

7 Mobile Camera

Before Using Mobile Camera	7-2
Mobile Camera Precautions	7-2
707SC Camera	7-2
Using Display as Viewfinder	7-3
Capturing a Still Image	7-4
Camera Mode	7-4
Capturing Still Images	7-5
Capturing Video	7-10
Video Mode	7-10

707SC (E).book v ページ 2006年10月26日 木曜日 午前11時19分	
Capturing Video	7-11
Mobile Camera Settings	7-13
Camera Settings	7-13
Video Settings	7-14
Viewing Images	7-15
Viewing Still Images	7-15
Viewing Videos	7-15
Editing Still Images	7-15
Editing Videos	7-17
Create Flash®	7-19
Attaching Images to a Message	7-20
8 Display Settings	
Standby Display Settings	8-2
Wallpaper	8-2
Clock Display	8-4
Operator Name	8-5
Menu Display	8-5
Menu Style	8-5
Popup Menu	8-6
List Font Size	8-6
Zoom List	8-7
Backlight Brightness & Duration	8-7
Adjusting Display Brightness	8-7
Backlight Duration	8-7
Sub LCD Light	8-8
Dialing Display	8-8
Greeting Messages	8-9
Display Language	8-10
9 Sound Settings	
Changing Profile Settings	9-2
10 Media Player	
Before Using Media Player	10-2
Playing Music	10-3
Playing Melodies Using a Playlist	10-6
Changing Music Player Settings	10-7
Repeat Mode	10-7
Tone Volume	10-7
Audio Skin	10-7
Visualization Mode	10-8
Playing Video	10-9
Player Settings	10-11
Repeat Mode	10-11
Tone Volume	10-12
Resolution	10-12

11 Managing Files (Data Folder)

Data Folder	11-2
Default Folders	11-2
Saved Files	11-3
Opening Files	11-3
Using File Viewer	11-5
Viewing Graphics/Animation with the SVG-T/Flash® Viewer	11-8
Sorting Files	11-9
Using Files	11-10
Wallpaper	11-10
Setting Sound File as Ringtone	11-11
Setting Video File as Ringtone	11-11
Setting Flash® file as Wallpaper	11-12
Saving a vFile	11-12
Data Folder Options	11-13
Managing Files/Folders	11-15
Create Folder	11-15
Changing a File Name/Folder Name	11-15
Moving a File/Folder	11-15
Copying Files/Folders	11-16
Deleting a File/Folder	11-17
Deleting a Content Key	11-19

vi

12 External Connections

External Connections	12-2
Bluetooth®	12-2
Before Using Bluetooth® Communications	12-2
Sending & Receiving Data	12-4
Connecting Handsfree	12-9
Changing Bluetooth® Settings	12-10
USB Connection	12-11
Connecting to a PC	12-12
Connecting to a Printer	12-12

13 Security

Change Phone Password	13-2
PIN	13-2
Changing PIN/PIN2	13-2
PIN Lock	13-3
Resetting PIN Lock	13-3
USIM Lock	13-4
Handset Security	13-5
Phone Lock	13-5
Password Lock	13-5
Privacy Lock	13-6
Activate Secret Mode	13-6
Mobile Tracker	13-7

Rejecting Incoming Calls	13-8
Reject Withheld	13-8
Reject Unavailable	13-8
Black List	13-9
Restoring Defaults	13-10
Clear Memory	13-10
Master Reset	13-11

14 Tools

Alarms	14-2
Wake-up Alarm/Alarms	14-2
Auto Power On	14-4
Calendar	14-5
Displaying Calendar	14-5
Saving New Entries to Calendar	14-7
Viewing Saved Calendar Entries	14-12
Editing Calendar Entries	14-12
Deleting Calendar Entries	14-13
Calendar Options	14-14
Voice Recorder	14-15
Voice Recorder Window	14-15
Recording Voice	14-16
Playing Voice	14-16
Changing Voice Recorder Settings	14-17
World Clock	14-18

Viewing World Clock	14-18
Selecting Areas	14-18
Using Calculator	14-19
Converting Currencies or Units	14-19
Converting Currencies	14-20
Converting Units	14-21
Stopwatch	14-22
Dictionary	14-22
Interpreter	14-23

15 Advanced Functions

Calling Functions	15-2
Auto Redial	15-2
International Dial	15-2
Earphone call	15-3
Handling Incoming Calls	15-5
Anykey Answer	15-5
Acoustic Shock	15-5
Active Folder	15-6
Side Key Silence/Reject	15-6
Side Key Lock	15-6
Simple Search Setting	15-7
Idle Shortcuts	15-7
Memory Status	15-8

16 Optional Services

Optional Services	16-2
Call Forwarding	16-3
Activating Call Forwarding	16-3
Cancel All	16-4
Check Status	16-4
Voice Mail	16-5
Activating Voice Mail	16-5
Canceling Voice Mail	16-6
Checking Settings	16-6
Listening to Messages	16-6
Incoming Call Notification	16-7
Call Waiting*	16-8
Activating or Canceling	16-8
Receiving a Second Call	16-8
Conference Call*	16-9
New Call	16-9
Engaged Conference Call Operations	16-10
Join	16-10
Call Barring	16-11
Restrict Outgoing/Incoming Calls	16-12
Cancel All	16-12
Changing Network Password	16-13
Caller ID	16-13

viii

Show My Number	16-13
Adding 186 or 184	16-14

17 Receiving & Sending Messages

Getting Started	17-2
Checking for New Messages	17-2
Retrieving Complete Messages	17-4
Using Received Messages	17-5
Creating Messages	17-6
Procedures	17-7
Address	17-8
Subject	17-11
Message	17-11
Sending a Message	17-12
Slide Show	17-12
Changing the Style of Message Field	17-13
Templates	17-14
Attaching/Inserting Files	17-15
Attaching/Inserting a File from Data Folder, etc. into Message Field	17-15
Creating & Inserting a File	17-18
Saving Created Messages	17-20
Save to Drafts	17-20
Save as a Template	17-20

18 Messaging Folders

Viewing Messages	18-2
Message Lists	18-2
Message Window Operations	18-5
Replying to a Message	18-7
Forwarding a Message	18-8
Sending from Drafts	18-8
Sending from Unsent Messages	18-9
Deleting a Message	18-9
Deleting Specified Message(s)	18-9
Designating & Deleting a Mailbox	18-10
Deleting All Messages from a Mailbox	18-11
Linked Information	18-11
Saving to Phonebook	18-12
Saving as a Bookmark	18-12
Initiating a Call, Sending a Message, or Accessing the Web	18-12
Using an Attachment	18-13
Viewing an Attachment	18-13
Saving Attachments to Data Folder	18-14
Managing Folders	18-15
Create Folder	18-15
Edit Folder	18-15
Security ON/OFF	18-15

Moving Messages	18-16
Delete Folder	18-16
From Message List	18-16
Saving to Phonebook	18-16
Sorting Messages	18-17
Move to Phone/Move to USIM	18-18
Saving an S! Mail Template	18-19
Message List Options	18-20

19 Server Mail

Message List	19-2
Acquire Mail List	19-2
Download	19-2
Delete	19-3
Remote Forward	19-4

20 Other Message Settings

Customizing Handset Address	20-2
S! Mail Settings	20-2
Sending Settings	20-2
Receiving Settings	20-3
Message Size	20-4
Default Style	20-4
SMS Settings	20-5

7075C (E).book x ページ 2006年10月26日 木曜日 午前11時19分

3D Pictogram Settings20-5

Reply with text20-6

21 Mobile Internet

Getting Started.21-2

Getting Online21-3

Yahoo! Keitai Main Menu21-3

Enter URL21-3

Page Window Operations21-4

Using Linked Info.21-6

22 Mobile Internet Files

Using Image Files22-2

Saving Images to Data Folder.22-2

Wallpaper22-3

Using Sound Files22-4

Playing Sound22-4

Saving Sound Files to Data Folder22-4

Using Video Files22-6

Playing a Video22-6

Saving Videos to Data Folder22-6

Streaming22-7

Saving Pages.22-8

Saving a Page22-8

Opening a Saved Page22-8

Change Title22-8

Deleting a Saved Page22-9

Saving Bookmarks.22-9

Saving an Address as a Bookmark.22-9

Opening a Bookmark22-10

Editing Bookmarks22-10

Deleting a Bookmark22-11

History22-11

Display Settings22-12

Rendering.22-12

Search Text.22-13

Copy Text22-13

Reload22-13

Page Details.22-14

Send URL22-14

Server Certificate22-14

Returning to Default Page.22-15

Encoding22-15

Information Window Options22-15

x

23 Other Web Settings

Preferences	23-2
Security	23-2
Cookie Options	23-2
Activating/Deactivating Java Script	23-3
Text Size	23-3
Manufacture Number	23-3
Browser Information	23-3
Certificates	23-4
Refresh Browser	23-4
Empty Cache/Empty Cookies	23-4

24 S! Appli

Getting Started	24-2
S! Appli	24-2
Network S! Appli	24-2
Downloading S! Appli	24-2
Starting S! Appli	24-3
Exit, Pause, & Resume	24-3
Exiting or Pausing S! Appli	24-3
Restarting a Paused S! Appli	24-4
Managing S! Appli	24-4
Details	24-4

Lock/Unlock	24-4
Delete	24-5

mPet 24-5

Selecting Pet	24-5
mPet Operations	24-7
Other Operations	24-9

Comic Surfing 24-11

Browsing Electronic Comic	24-11
---------------------------	-------

Security 24-12

S! Appli Settings 24-13

Backlight	24-13
Application Volume	24-13
Vibration	24-14
S! Appli Sort	24-14
Reset S! Appli Settings	24-14

25 Appendix

Functions 25-2

Troubleshooting 25-4

Software Update 25-10

Symbols & Pictograms 25-12

Symbols	25-12
Pictograms	25-14

Memory List 25-15



707SC (E).book xii ページ 2006年10月26日 木曜日 午前11時19分

Specifications	25-15
INDEX	25-17
Warranty & After Sales Service	25-24
Customer Service	25-25

xii



A schematic diagram of a four-terminal device. It consists of a central circle with a smaller concentric circle inside. Four green lines extend from the outer circle to terminals labeled 'u' (top), 'd' (bottom), 'l' (left), and 'r' (right). Inside the central circle, there are four small green circles, each containing a black dot. These dots are positioned at the top, bottom, left, and right of the inner circle, corresponding to the terminals. The top and bottom dots are connected to the 'u' and 'd' terminals respectively, and the left and right dots are connected to the 'l' and 'r' terminals respectively.



a : Press u , d , l , or r



Safety Precautions

- Read these safety precautions before using handset.
- Observe all precautions to avoid injury to yourself and others, or damage to property.
- SoftBank is not liable for any damages resulting from use of this product.







Before Using Handset

● Symbols

Make sure you thoroughly understand these symbols before reading on. Symbols and their meanings are described below:

 Danger	Great risk of death or serious injury from improper use
 Warning	Risk of death or serious injury from improper use
 Caution	Risk of injury or damage to property from improper use
	Prohibited Actions
	Compulsory Actions
	Attention Required



**Use only specified battery and
Charger (ⓈP.i).**

Keep metal objects away from the Charger Port. Keep handset away from jewelry. Battery may leak, overheat, burst, or ignite causing injury. Use a case to carry handset.

If battery fluid gets into your eyes, do not rub them. Rinse with clean water and consult a doctor immediately.

Prevent injury from battery leakage, breakage, or fire.

- Heat or dispose of battery in a fire.
- Disassemble, modify, or break battery.
- Damage or solder on to battery.
- Use a damaged or deformed battery.
- Use a non-specified charger.
- Force battery into handset.

Handset, Battery, & Charger

Do not place metal or flammable objects in handset or Charger. This may cause fire or electric shock. Keep handset out of the reach of children.

Fire or electric shock may occur.


☐

Keep handset and Charger away from chemicals/liquids. Fire or electric shock may result.

⊗

To prevent fire or explosion, do not use handset in the presence of gas or fine particles (Coal, dust, metal, etc.).

Battery or handset may leak, burst, overheat, or ignite.

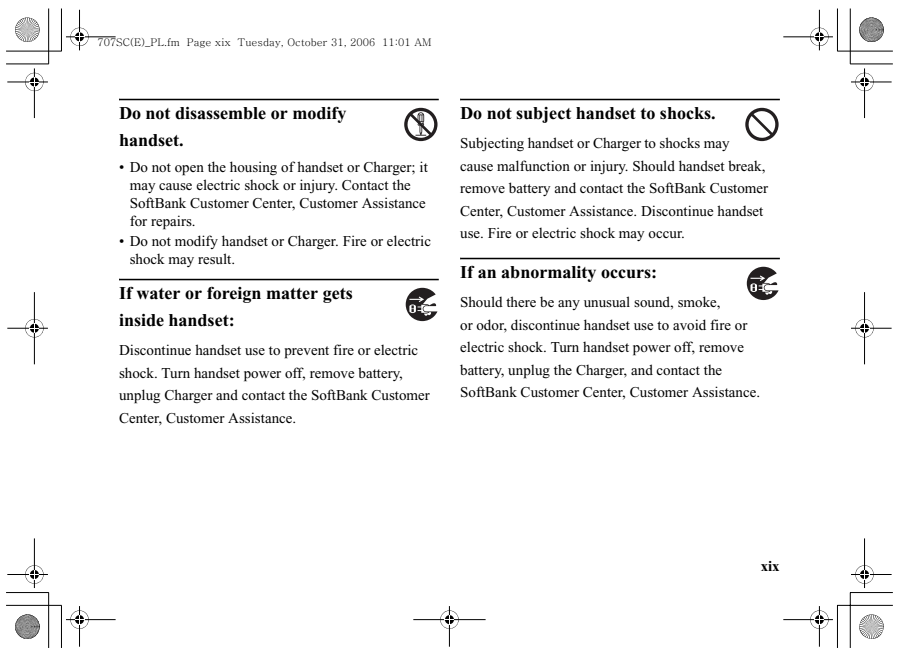

Do not disassemble or modify handset.



- Do not open the housing of handset or Charger; it may cause electric shock or injury. Contact the SoftBank Customer Center, Customer Assistance for repairs.
- Do not modify handset or Charger. Fire or electric shock may result.

If water or foreign matter gets inside handset:



Discontinue handset use to prevent fire or electric shock. Turn handset power off, remove battery, unplug Charger and contact the SoftBank Customer Center, Customer Assistance.

Do not subject handset to shocks.



Subjecting handset or Charger to shocks may cause malfunction or injury. Should handset break, remove battery and contact the SoftBank Customer Center, Customer Assistance. Discontinue handset use. Fire or electric shock may occur.

If an abnormality occurs:



Should there be any unusual sound, smoke, or odor, discontinue handset use to avoid fire or electric shock. Turn handset power off, remove battery, unplug the Charger, and contact the SoftBank Customer Center, Customer Assistance.

Handset Use & Electronic Medical Equipment

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).

People with implanted pacemakers/defibrillators should keep handset more than 22 cm away. !

Implanted pacemakers/defibrillators may malfunction due to radio waves.

Turn handset power off in crowded places such as trains. People with implanted pacemakers/defibrillators may be near. !

Implanted pacemakers/defibrillators may malfunction due to radio waves.

Observe these rules inside medical facilities: !

- Do not take handset into operating rooms or Intensive or Coronary Care Units.
- Keep handset off in hospitals.
- Keep handset off in hospital lobbies. Electronic equipment may be near.
- Obey rules regarding mobile phone use in medical facilities.

Consult the manufacturer of other electronic medical equipment about radio wave effects. !

- Place 7075C on stable surfaces to avoid malfunction or injury.
- Keep 7075C away from oily smoke or steam. Fire or accidents may result.
- Cold air from air conditioners may condense, resulting in leakage, or burnout.
- Keep 7075C away from direct sunlight (Inside vehicles, etc.) or heat sources. Distortion, discoloration, or fire may occur. Battery shape may be affected.
- Keep 7075C out of extremely cold places to avoid malfunction or accidents.
- Keep 7075C away from fire sources to avoid malfunction or accidents.

xxiv

- Excessive dust may prevent heat release and cause burnout or fire.
- Avoid using 707SC on the beach. Sand may cause malfunction or accidents.
- Keep 707SC away from credit cards, phone cards, etc. to avoid data loss.

Avoid leaving 707SC in extreme heat (Inside vehicles, etc.).

Handset may heat up and lead to burns.

Keep handset volume moderate.
Excessive volume may cause damage to your hearing.

Headphones

- Do not unplug by pulling the cord; may damage the cord.
- Keep the plug clean to avoid noise or malfunction.

Inside vehicles:

Handset use may cause other electronic equipment to malfunction.

Should skin irritation occur, discontinue handset use and consult a doctor.

Skin irritation, rashes, or itchiness may result depending on your physical condition.

Parts	Materials & Finishing
Housing	PC/UV coating
Keypad	Mixture material
Charger & External Device Port Cover	Mixture material/ UV coating

Parts	Materials & Finishing
Battery Cover	PC/UV coating
Side keys	Mixture material/ UV coating
Rotate Camera	PC/UV coating
Camera Ornament	PC/UV coating
Hinge Cap	Zinc Alloy/ Nickel coating

Charger

Charger & In-Car Charger

- Grasp the plug (not the cord) to disconnect Charger. Otherwise, fire or electric shock may result.
- Keep the cord away from heaters. Exposed wire may cause fire or electric shock.
- Stop use if the plug is hot or improperly connected. Fire or electric shock may result.
- Keep In-Car Charger socket clean. If might overheat and cause injury.

707SC(E)_PL.fm Page xxvi Tuesday, October 31, 2006 11:01 AM

If a child is using handset, explain all these instructions and supervise handset's usage.



If there is any abnormal odor or excessive heat, stop using battery and call the SoftBank Customer Center, Customer Assistance.



Do not leave battery uncharged. Charge at least once every six months.



General Notes

General Use

- SoftBank is not liable for any damages resulting from accidental loss/alteration of any data on handset. Please keep separate records of Phonebook entries, etc.
- Handset transmissions may be disrupted inside buildings, tunnels, or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- **Beware of eavesdropping.** Because this service is completely digital, the possibility of signal interception is

greatly reduced. However, some transmissions may be overheard.

Eavesdropping

Deliberate/accidental interception of communications constitutes eavesdropping.

Inside Vehicles

- Never use handset while driving.
- Do not park illegally to use handset.
- Handset use may affect a vehicle's electronic equipment.

Aboard Aircraft

Never use handset aboard aircraft (Keep the power off).

Handset use may impair aircraft operation.

Function Restrictions


- After changing phone models or canceling 707SC contract, following functions become unavailable:
 - ∞ Camera
 - ∞ Media Player
 - ∞ S! Appli
- If 707SC is left unused, above functions may become unavailable.

Handset Care


- If handset is left with no battery or an exhausted one, data may be altered/lost. SoftBank is not liable for any resulting damages.
- Use handset between 5°C - 40°C.
- Avoid extreme temperatures/direct sunlight.

- Exposing the lens to direct sunlight may damage the color filter and affect image color.
- Do not drop or subject handset to shocks.
- Clean handset with a dry, soft cloth. Using alcohol, thinner, etc. may damage it.
- Do not expose handset to rain, snow, or high humidity.
- Never disassemble or modify handset.
- Avoid scratching Display.
- When closing handset, keep straps, etc. outside to avoid damaging Display.
- When using headphones, moderate the volume to avoid sound bleed.
- Handset is not water-proof. Avoid exposure to liquids and high humidity.
 - ∞ Keep handset away from precipitation.
 - ∞ Cold air from air conditioning, etc. may condense causing corrosion.

xxx



- ∞ Avoid placing handset in damp places (Restrooms, bath/shower rooms, etc.).
- ∞ On the beach, keep handset away from water and direct sunlight.
- ∞ Perspiration may get inside handset causing malfunction.
- Heavy objects or excessive pressure should be avoided. This may cause malfunction or injury.
- ∞ Do not sit down with handset in a back pocket.
- ∞ Do not place heavy objects on handset in a bag.
- Insert only specified devices into Headphone Port. Malfunction or damage may result.
- Always turn power off before removing battery. If battery is removed while saving data or sending mail, data may be lost, changed or destroyed.





Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials for copyright holders. Duplicated material is limited to private use only.

Use of materials beyond this limit or without permission of copyright holders may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images captured with handset camera.

The software contained in 707SC is copyrighted material; copyright, moral right, and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile, or reverse-engineer the software, and do not separate it from hardware in whole or part.



Trademarks


- Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations:

4,901,307 5,490,165 5,056,109
5,504,773 5,101,501 5,506,865
5,109,390 5,511,073 5,228,054
5,535,239 5,267,261 5,544,196
5,267,262 5,568,483 5,337,338
5,600,754 5,414,796 5,657,420
5,416,797 5,659,569 5,710,784
5,778,338

- S! Appli and Mail Art are trademarks or registered trademarks of SOFTBANK MOBILE Corp.
- "SOFTBANK," SOFTBANK's equivalent in Japanese, and the

SOFTBANK logo are trademarks or registered trademarks of SOFTBANK CORP. in Japan and in other countries.



- Yahoo! and the "Yahoo!" or "Y!" logos are trademarks or registered trademarks of Yahoo! Inc.
- This product contains ACCESS Co., Ltd.'s NetFront Internet browser software. NetFront is a trademark or registered trademark of ACCESS Co., Ltd. in Japan and in other countries. **ACCESS NetFront**
- Part of the software in this product incorporates a module developed by the Independent JPEG Group.
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR





THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL

USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM).

- Contains Macromedia® Flash® Flash Lite™ technology by Adobe Systems Incorporated.
- Copyright© 1995-2005 Adobe Systems Incorporated. All rights reserved.
- Macromedia, Flash, Macromedia Flash, and Macromedia Flash Lite are trademarks or registered trademarks of Adobe Systems Incorporated in the United States and other countries.
- JBlend™ is incorporated in this product. JBlend™ is a Java™ execution environment developed by Aplix Corporation for implementing





advanced performance and fast operation on small-memory systems.

- Powered by JBlend™ Technology.

JBlend and JBlend logos are registered trademarks of Aplix Corporation in Japan and other countries.





- Powered by JBlend™, ©1997-2006 Aplix Corporation. All rights reserved.

- JBlend and all JBlend-based trademarks and logos are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.

- Chaku-Uta® and Chaku-Uta Full® are registered trade marks of Sony Music Entertainment Corp.

- Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.





- Bluetooth is a trademark of the  Bluetooth SIG, Inc. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Samsung Electronics is under license. Other trademarks and trade names are those of their respective owners.

Bluetooth®

In the frequency band of the Bluetooth® functions of 707SC, Industrial, scientific or medical equipments such as microwave ovens or in-house radio stations such as the ones used in production lines or by amateur radio stations (Referred to as "other radio stations" hereafter) are used. In order to prevent radio interference with other radio equipments, follow the points listed below in using handset.

1. Before using Bluetooth® functions, confirm there are no "other radio stations" operating near you.



2. In case there is a radio interference with "other radio stations," move to some other place or stop the Bluetooth® functions (Stop emitting the radio waves) immediately.



3. If you have any questions or problems with Bluetooth® emissions, contact SoftBank as listed below:



Contact: SoftBank Customer Center

From a SoftBank handset, dial 157 (toll free) for General Information. See "Customer Service" (P.25-25) for landline numbers by service area.

707SC transmits on the 2.4 GHz band, employing frequency-hopping spread spectrum (FHSS) modulation, with resistance to radio frequency interference between 1.5 - 5 meters, depending on usage environment.

xxxvi







Health and Safety Information


Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of

the scientific literature related to the biological effects of RF energy. The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements. SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power



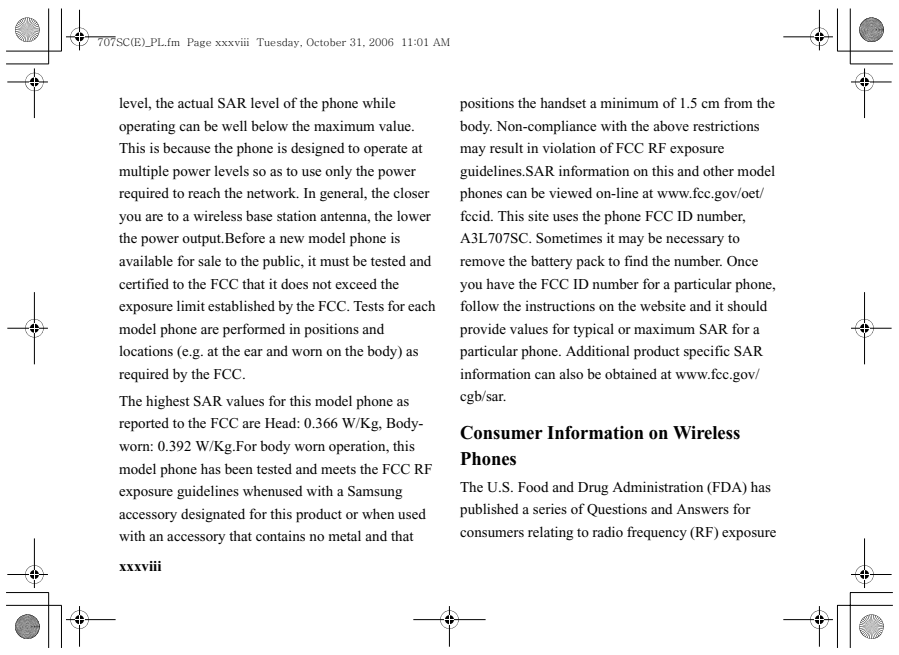

level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

The highest SAR values for this model phone as reported to the FCC are Head: 0.366 W/Kg, Body-worn: 0.392 W/Kg. For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with a Samsung accessory designated for this product or when used with an accessory that contains no metal and that

positions the handset a minimum of 1.5 cm from the body. Non-compliance with the above restrictions may result in violation of FCC RF exposure guidelines. SAR information on this and other model phones can be viewed on-line at www.fcc.gov/oet/fccid. This site uses the phone FCC ID number, A3L707SC. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure

from wireless phones. The FDA publication includes the following information:



What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called $\phi \times$ cell, $\phi \pm$ $\phi \times$ mobile, $\phi \pm$ or $\phi \times$ PCS $\phi \pm$ phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called $\phi \times$ cordless phones, $\phi \pm$ which have a base unit

connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been



confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?



Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists. Although the existing scientific data do not justify FDA regulatory actions, FDA has

urged the wireless phone industry to take a number of steps, including the following:.

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;.
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and.
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:.

- National Institute for Occupational Safety and Health.
- Environmental Protection Agency.
- Federal Communications Commission.
- Occupational Safety and Health Administration.



- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones,

so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using

wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF). FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to

do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much

exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure

to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and

xlvi

wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>



- National institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/emfpg.html>
- World health Organization (WHO):
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- National Radiation Protection Board (UK):
<http://www.nrp.org.uk>
- Updated 4/3/2002: US food and Drug Administration
<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic



or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.

5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.

6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.

8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire,



traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!


9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.

10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site www.wow-com.com Provided






by the Cellular Telecommunications & Internet Association

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Using Your Phone Near Other Electronic Devices



Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.




Pacemakers


Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.





- should use the car opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.


Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

1



Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.



Posted Facilities



Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded





of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone



for essential communications (medical emergencies, for example).


Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

- 1.If the phone is not on, switch it on.
- 2.Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
- 3.Press [Send]

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call.





Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.


Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice



- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful





interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.





-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Battery march Park, Quincy, MA 02269, Attn: Publication Sales Division..

Cautions



Changes or modifications made in the radio phone, not expressly approved by Samsung, will void the user's authority to operate the equipment.



Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information.

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in





the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.

- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.


Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

liv




Save FeatureIf your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.



Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance





For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended and over your shoulder.
- Try not to hold, bend or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or



use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.


Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.


Battery Precautions

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose. If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.





- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged.



lvi






Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).

- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance


Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty








obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.







- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes color. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest





qualified service facility. The personnel there will assist you, and if necessary, arrange for service.



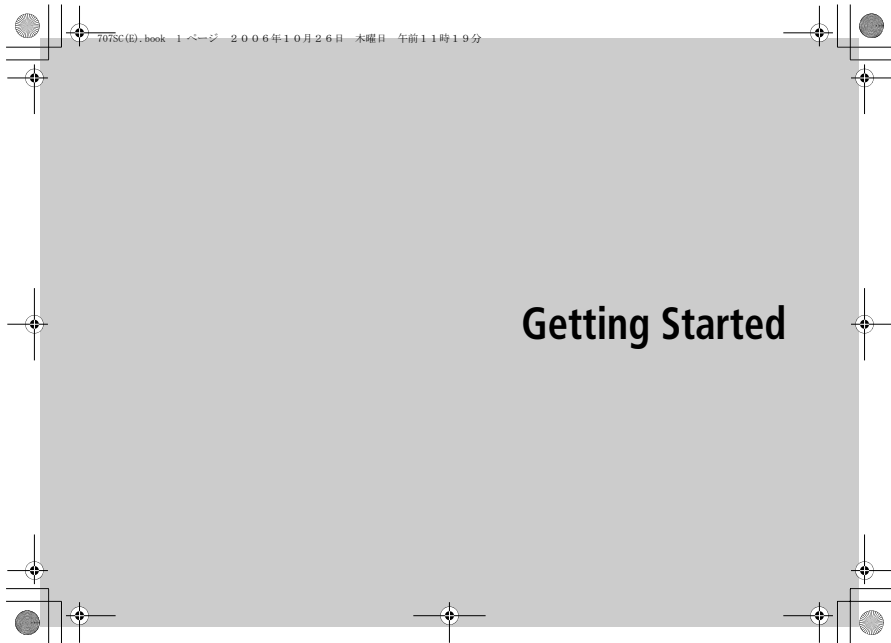

707SC (B).book 1 ページ 2006年10月26日 木曜日 午前11時19分

Getting Started

1

Getting Started

USIM Card

General Information & Precautions

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number and limited storage for Phonebook entries and SMS. Install USIM Card to use 707SC; turn 707SC power off to insert/remove USIM Card.



USIM Card

Insert USIM Card into another compatible handset to access SMS and Phonebook entries saved on USIM Card. Note the following precautions regarding USIM Card usage and care (see USIM Card User Guide for details):

- Avoid using excessive force when Inserting/removing USIM Card.

- SoftBank is not liable for damages resulting from inserting USIM Card into IC card readers or other third party devices.
- Always keep USIM Card IC chip clean.
- Clean USIM Card IC chip with a soft, dry cloth.
- Do not attach labels to USIM Card; malfunction may result.

1-2

Notes


- USIM Card is the property of SoftBank.
- If USIM Card is lost or damaged, you will be charged for reissuing it.
- Return USIM Card to SoftBank upon termination of subscription.
- Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice.
- If USIM Card or 707SC with USIM Card inserted is lost or stolen in Japan or abroad, immediately contact Customer Service (☎P.25-25) to suspend service.
- Handset/USIM Card repairs, replacement or upgrades may deactivate Chaku-Uta®, Chaku-Uta Full®, S! Appli, or video files on handset.
- Inserting another USIM Card (not the included one) into 707SC may deactivate preinstalled S! Appli or Comic Surfing files on handset.
- Back-up USIM Card files. SoftBank is not liable for lost files.

Inserting & Removing USIM Card

Always turn power off before opening 707SC to remove battery, or insert/remove USIM Card.

Inserting

- 1 Remove battery (☎P.1-13)
- 2 With IC chip down, insert USIM Card into card slot



1


Getting Started

1-3

1

Getting Started

3 Push in USIM Card until it stops and locks




Note

- Inserting USIM Card with excessive force may damage it or 707SC.
- Do not misplace a removed USIM Card.
- To prevent damaging it, avoid touching the IC chip when Inserting or removing USIM Card. Do not touch battery contacts.

Removing

1 Remove battery (P.1-13)

2 Press down on USIM Card and gently slide it out



1-4

707SC (E).book 5 ページ 2006年10月26日 木曜日 午前11時19分

USIM PINs

USIM Card features two (4- to 8-digit) security codes: PIN and PIN2.

PIN

Use PIN to prevent unauthorized use of 707SC by others.

- Modify PIN (P.13-2).
- When *PIN lock* is activated, PIN entry is required each time 707SC is turned on or whenever USIM Card is re-inserted (P.13-3).

PIN2

PIN2 is required for Reset Call Cost or Edit Cost Limit, etc.

- Modify PIN2 (P.13-2).

Canceling PIN Lock (PUK/PUK2 Code)

Incorrectly entering PIN or PIN2 three consecutive times activates PIN Lock and limits 707SC function access. Enter PUK (PIN Unlocking Key) Code to cancel PIN Lock. For more information, contact Customer Service (P.25-25).

Note

- Entering PUK or PUK2 incorrectly ten consecutive times locks USIM Card and deactivates 707SC. Write down PUK and PUK2.
- Unlocking a locked USIM Card requires a special procedure. Contact Customer Service (P.25-25).

1

Getting Started


1-5

1

Getting Started

Handset Parts & Functions

Handset

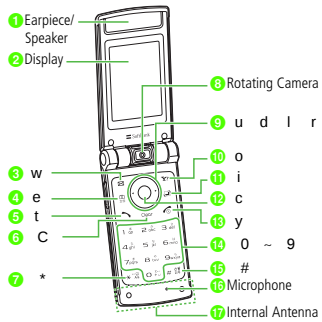

18 Sub Display

19 n

20 b

21 Charger/External Device Port

22 Battery Cover

1 Earpiece/Speaker

2 Display

3 Left Softkey/Mail Key

Open Messaging menu or execute Left Softkey command/function.


4 Camera/Character Key

Activate Camera or select text entry mode.

5 Start Key

Initiate and receive Voice Calls.

1-6

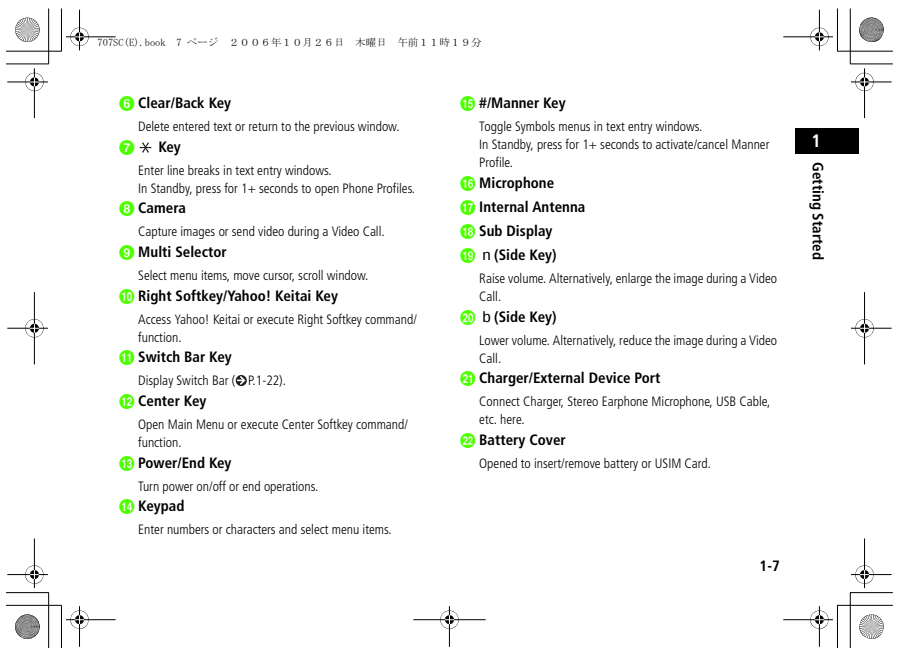

6 Clear/Back Key

Delete entered text or return to the previous window.

7 * Key

Enter line breaks in text entry windows.

In Standby, press for 1+ seconds to open Phone Profiles.

8 Camera

Capture images or send video during a Video Call.

9 Multi Selector

Select menu items, move cursor, scroll window.

10 Right Softkey/Yahoo! Keitai Key

Access Yahoo! Keitai or execute Right Softkey command/function.

11 Switch Bar Key

Display Switch Bar (P.1-22).

12 Center Key

Open Main Menu or execute Center Softkey command/function.

13 Power/End Key

Turn power on/off or end operations.

14 Keypad

Enter numbers or characters and select menu items.

15 #/Manner Key

Toggle Symbols menus in text entry windows.

In Standby, press for 1+ seconds to activate/cancel Manner Profile.

16 Microphone

17 Internal Antenna

18 Sub Display

19 n (Side Key)

Raise volume. Alternatively, enlarge the image during a Video Call.

20 b (Side Key)

Lower volume. Alternatively, reduce the image during a Video Call.

21 Charger/External Device Port

Connect Charger, Stereo Earphone Microphone, USB Cable, etc. here.

22 Battery Cover

Opened to insert/remove battery or USIM Card.

1

Getting Started

1-7

1


Getting Started

Tip

• Internal Antenna

7075C has no external antenna. 7075C transmits and receives signals via Internal Antenna. Do not cover or place stickers, etc. over the area containing Internal Antenna. Voice quality may vary by where/how 7075C is used.

Display Indicators

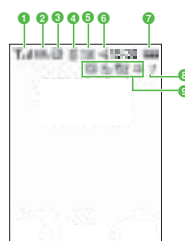

1 Signal Strength (more bars indicate stronger signal)

Out: Out-of-Range (outside service area or no signal when *Language* is set to *English* or 英語)

Out: Out-of-Range (When *Language* is set to 日本語)

2 3G (UMTS) network connected/roaming

GSM network connected/roaming

Web SSL connected

3 (Blue) Bluetooth® Active

(Flashing in Blue & Pink) Bluetooth® Transmission

Bluetooth® Packet Data transmission

Bluetooth®-compatible headset connected

(Blue) USB Connected

(Flashing in Orange & Yellow) USB Active

S! Appli Active

S! Appli Paused

Packet Data transmission

4 Voice Call in Progress

Video Call in Progress

5 New S! Mail

New SMS

New Voice Mail

Unheard Answer Machine Message

Software Update Required

6 Normal Profile

Manner Profile

Car Profile

Meeting Profile

Outdoor Profile

Offline Profile

7 Battery Strong

Battery Moderate

Battery Low

(Flashing) Battery Weak (Charge Now)

8 Sound settings: Other than Off for Voice Call in Ringtone volume Set; and On for Voice Call in Vibration Set

Sound settings: Other than Off for Voice Call in Ringtone volume Set; and Off for Voice Call in Vibration Set

Sound settings: Off for Voice Call in Ringtone volume Set; and On for Voice Call in Vibration Set

Sound settings: Off for Voice Call in Ringtone volume Set and Vibration Set

1

Getting Started

1-9

1

Getting Started

- 9 Roaming Active
- Voice Mail/Call Forwarding Active
- Answer Machine Active
- S! Mail Memory Full
- SMS Memory Full
- Voice Mail Memory Full
- Wake-up Alarm/Alarm Set

Tip

- When (Red) appears, only packet data transmission and S! Mail sending are available; Voice Call, received S! Mail notification, and SMS sending/receiving are disabled.

Sub Display



- 1 Signal Strength
(more bars indicate stronger signal)

1-10

- 2 Wake-up Alarm/Alarm Set
- 3 New Message
- 4 Manner Profile Set; and On for Voice Call in Vibration Set
- 5 Battery Strong
- Battery Moderate
- Battery Low
- Battery Weak (Charge Now)

Battery & Charger

Before Using Battery or Charger

Charge battery before first use of 707SC or after periods of disuse.

Charging Battery

- Long periods of disuse may affect battery's ability to hold a full charge.
- 707SC uses a lithium-ion battery; charge battery in any state without damaging its ability to hold a charge.
- Do not charge battery under the following conditions:
 - Where the ambient temperature is below 5°C or above 40°C
 - Where there are high levels of humidity, vibrations or dust
 - Near a radio receiver (May cause feedback)
- 707SC or Charger may warm while charging. This is normal, however, should they become very hot to the touch, stop charging and contact Customer Service (☎P.25-25).
- Charge battery at least once every six months while not in use. Otherwise, battery may become unusable.
- Battery is a consumable; replace it if operating time shortens noticeably.

Note

- Use specified Charger only.
- Battery must be inside 707SC to charge it.
- When not in use, unplug Charger from outlet or cigarette lighter socket.

Battery Life

Battery time/life may be reduced by any of the following:

- Environmental Factors
 - Storing/using 707SC in places with ambient temperature or above 5°C below 40°C
 - Using 707SC in when signal is poor/leaving it on out-of-range
 - Allowing debris to collect on 707SC, battery or Charger Port
- Operational Factors
 - Active S! Appli
 - Camera use
 - Media Player use

1

Getting Started

- Excessive Keypad use (e.g. for gaming or messaging, etc.)
- Bluetooth® transmissions
- Frequently opening and closing 707SC
- Settings
 - Using Slide Show
 - Setting Brightness higher or Backlight Time longer
 - Using Media Player with Backlight set to *Always on*

Battery Disposal

Do not dispose of exhausted batteries with ordinary refuse. Tape over battery terminals before disposal or take to a SoftBank shop. Follow any and all local regulations regarding battery disposal.

Lithium-ion batteries are recyclable.


When Battery Runs Out

When battery is weak, a warning appears and 707SC beeps. Charge or replace battery; otherwise 707SC will automatically turn off.


Inserting & Removing Battery

Inserting


- 1 Press Battery Cover and slide as shown




2 Fully remove Battery Cover as shown



3 Align Battery Slots and 707SC Tabs to insert battery as shown

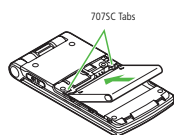

4 Insert Battery Cover Tabs into 707SC Slots to attach Battery Cover as shown

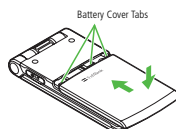

Note

- Remove battery cover with care; stress on tabs may damage them.
- Gently insert battery to avoid damaging 707SC tabs.


Removing

Always turn 707SC off before removing battery. Never remove battery while AC Charger or In-Car Charger is connected.


1

Getting Started


1 Press Battery Cover and slide as shown



2 Fully remove Battery Cover as shown




3 Lift battery up and remove as shown




AC Charger

Use specified Charger only.


1 Open Port Cover and insert Charger Connector into the port

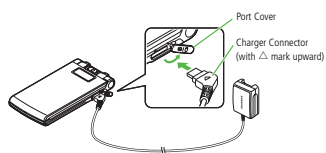

2 Plug Charger into an AC 100V outlet

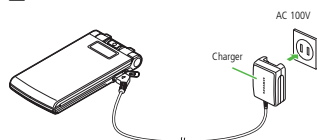

3 When battery is charged, unplug Charger from outlet, then from 707SC

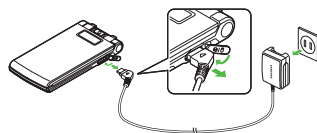

Tip

• Battery Charged Confirmation

When 707SC is on while Charger is connected, battery indicators flash when battery is fully charged.

While charging, battery indicators change as follows:

☐ → ☐ → ☐ → ☐

If 707SC is off while Charger is connected, battery indicator and graphic appear full on Sub Display & *Battery full* appears above graphic on Display when battery is fully charged. Otherwise, *Charging...* appears above animation on Display.

• Charging Time

An empty battery requires 120 minutes (approx.) to charge when power on and Display off (no operation). Longer when Display on. Charging time may vary by ambient temperature.

Charging via PC USB Port

Battery will charge when 707SC is connected to a PC via included USB cable.

- ① Open Port Cover and insert USB Cable Connector
- ② Insert USB Connector into a PC USB port
- ③ When battery is charged, remove Connector from 707SC and replace Port Cover, then remove USB Connector from the PC USB port

1

Getting Started


1

Getting Started


Charging via USB takes more time; charging time will vary by PC. A weak battery may not charge via a PC USB port.

In-Car Charger (Optional)


- 1 Open Port Cover and insert Connector Plug

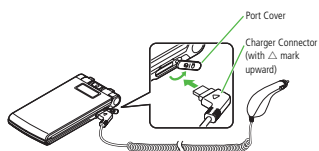

- 2 Insert Charger Connector into lighter socket

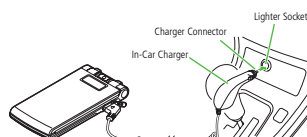

- 3 Start the car's engine
- 4 When battery is charged, remove In-Car Charger Connector, replace Port Cover, then remove Charger Connector from lighter socket

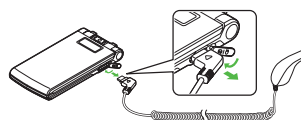

707SC (E).book 17 ページ 2006年10月26日 木曜日 午前11時19分

Tip

- **Battery Charged Confirmation** (P.1-15)
- **Charging Time** (P.1-15)
- **When using In-Car Charger**
See In-Car Charger manual. For safety, use In-Car Holder together with In-Car Charger.

Note

- Do not charge battery in ambient temperatures over 40°C (e.g. inside a closed automobile in direct sunlight, etc.).
- Use In-Car Charger in cars with minus-earth only (DC 12/24V).

Power On/Off

Power On

1 Open 707SC

2 Press y for 1+ seconds

Tip

- **To confirm handset phone number**
In Standby, press c → 0 ; save or edit your information in My Phonebook Details including name and mail address (P.5-16).
- **When PIN lock is activated**
PIN entry is required each time 707SC is turned on.
- **When 707SC is left open without operations**
Display automatically shuts down to conserve power.

Note

- Use both hands to open and close 707SC; avoid using excessive force which could damage handset or lead to malfunctions.


SoftBank

→

Standby

1 Getting Started

1-17

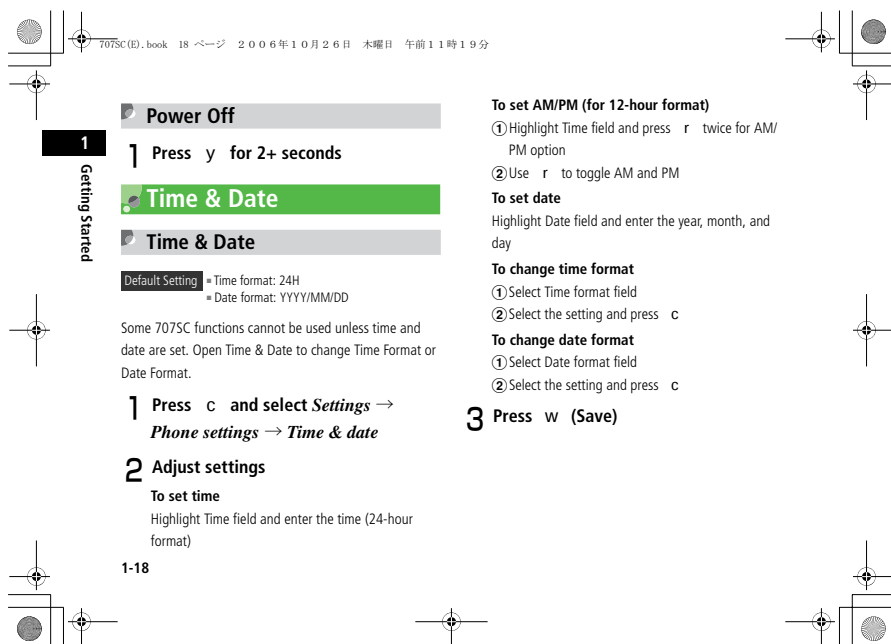

707SC (E).book 19 ページ 2006年10月26日 木曜日 午前11時19分

1

Press **c** and select **Settings** →
Phone settings → **Time & Date**

2

Select **Time zone updating** and
perform operations to set

3

Press **w** (**Save**)

Time Zone Updating

Default Setting

- Prompt first

Automatically update 707SC Date & Time using server's
time zone information.

Tip

• The contents of *Time zone updating* are:

Manual only: Automatic update unavailable.

Prompt first: When moving to the country/district with
different time zone, update Time & Date according to the
current time zone.

Automatic: After set to this setting, 707SC turns the power
off and on automatically; and update Time & Date
according to the server's time zone information (Home time
zone, Date, Time, etc.). Note that the information
availability varies by network. If no information are
available, use one of above settings.

1

Getting Started

1-19

707SC (E).book 20 ページ 2006年10月26日 木曜日 午前11時19分

1

Getting Started

Changing Home Time Zone

Default Setting

• Home zone: GMT+9h
• Daylight saving: Unchecked

Change time zone to the place you use handset. Daylight saving time can also be set.

1 Press **c** and select *Settings* →
Phone settings → *Time & date*

2 Select Home zone field

3 Perform operations to set

To set home time zone

① Use **s** to specify a target area

② Press **c**

To set daylight saving time

① Check *Daylight saving*

② Press **w** (OK)

4 Press **w** (Save)

707SC Menus

Main Menu

1 In Standby, press **c**



Main Menu

2 Highlight an item and press **c** (Select)

1-20

3 Repeat Step 2 to open/activate the target function

<Example> Select *Display settings* → *Wallpaper*



Select Settings



Select Display settings



Wallpaper Setup Window appears



Select Wallpaper Pictures

Tip

- **To end an operation**

Press **y**. Operation ends and 707SC returns to Standby. When multiple functions are active, the next active operation window appears.

- **To cancel/escape an operation**

Press **y**. Operation/function is canceled and 707SC returns to Standby or the previous window appears. For some menus, a confirmation appears.

- **Menu operations (P.xiv)**

- **When Popup Menu (P.8-6) is On**

Display is different (Step 2), however operations remain the same.

- **Selecting items with Keypad**

When numbered items appear in menus, etc., use keypad to select them.

1

Getting Started

7075C(E).book 22 ページ 2006年10月26日 木曜日 午前11時19分

1

Getting Started

Shortcuts

In Standby, press a key to open the assigned shortcut.

Key	Corresponding Menu/Function
w	Messaging
o	Yahoo! Keitai Main Menu
o (1+ seconds)	Yahoo! Keitai Menu
e	Mobile Camera (last used function)
i	Switch Bar
u	Idle shortcut*
d	Phonebook list
l	Call Log (Received)
r	Call Log (Dialled)
t	Call Log (Current Contacts)
* (1+ seconds)	Phone Profiles
# (1+ seconds)	Activate/Cancel Manner Profile

* Create shortcuts for frequently used functions in Idle shortcut (P.15-7).

Switch Bar

Initiate *Call*, *Messaging*, *Yahoo! Keitai*, or *Media Player*; use multiple functions concurrently (e.g., create a message while listening to music, or browse the Mobile Internet while talking on the phone).



1 In Standby or an active function window, press i

2 Use s to highlight a function and press c (Select)

To exit an active function

From the window of the function to exit, press y

To exit all active functions

1-22

707SC (E).book 23 ページ 2006年10月26日 木曜日 午前11時19分

① Press **i**

② Use **s** to highlight *End all?* and press **c** (Yes)

Tip

- **When exiting all active functions**
Even if during message creation or mobile Internet site access via Yahoo! Keitai, all active functions ends at once without confirmation messages. Press **y** once for each function to exit after confirmation. Exiting all active functions during message creation or voice/video recording, also deletes created/recorded data.

Options

When *Options* appears at bottom-right of Display, press **o** to open *Options*. To execute an option, highlight the item and press **c** (Select).

Tip

- See "Options" (P.xiv)

Security Codes

Phone Password, Center Access Code and Network Password are required to use 707SC.

Phone Password

"9999" is set by default; required to use/change some 707SC functions.

- Entered digits are represented with*
- If incorrect, an error message appears; try again.
- Change Phone Password as required

Center Access Code

The 4-digit number specified at subscription; required for Optional Services or to subscribe to fee-based Web information services.
For details, contact Customer Service (P.25-25).

1

Getting Started

1-23

1

Getting Started


Network Password

"9999" is set by default; required to restrict handset services. Entering Network Password incorrectly three consecutive times locks Call Barring settings. To resolve, Network Password and Center Access Code must be changed. For details, contact Customer Service (P.25-25).

- Network Password can be changed on 707SC (P.16-13).

Note

- Write down Phone Password, Center Access Code, or Network Password. If you forget any of these codes contact Customer Service (P.25-25).
- Do not reveal Phone Password, Center Access Code, or Network Password to others. SoftBank is not liable for damages caused by misuse of these codes by others.

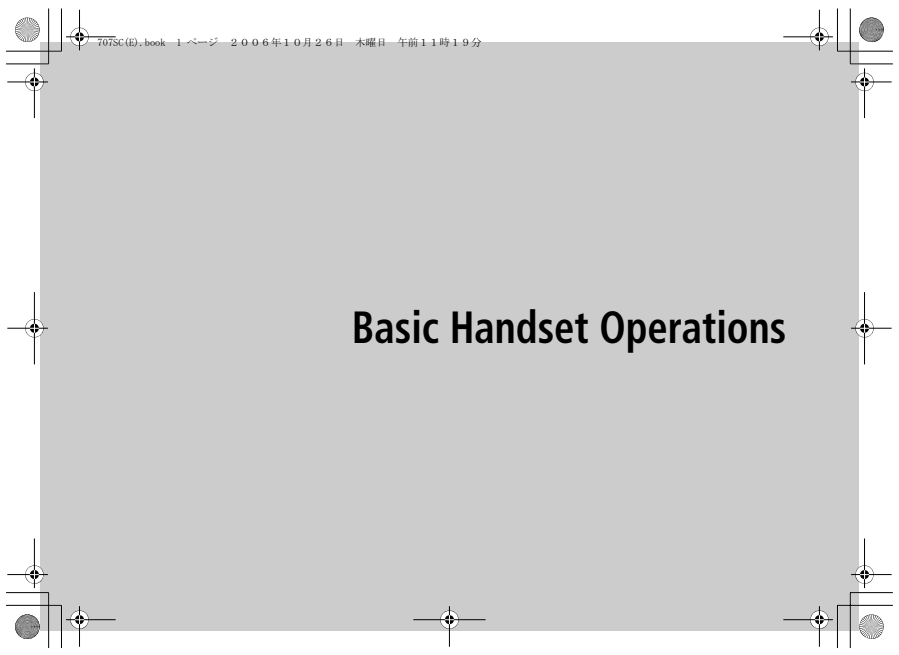

707SC (B).book 1 ページ 2006年10月26日 木曜日 午前11時19分

Basic Handset Operations

Initiating a Call

See P.5-9 to call from a Phonebook entry or P.6-2 for Video Calls.

1 Enter a phone number

When Phonebook list appears (P.5-11)

To use Speed Dialing (P.5-12)

2 Confirm the number and press **t**

3 Press **y** to end the call

Tip

- **To correct entered digits**

Press **C** to delete the last digit. Press **C** for 1+ seconds to delete all.

- **When the line is busy**

Press **y** to end the call and try again later. If Auto Redial is active, number is automatically redialed. Press **o** (Cancel) or **y** to cancel.

- **When Stereo Earphone Microphone is connected**

Enter a number and press Stereo Earphone Microphone switch for 1+ seconds to initiate a call. When *Earphone call* is set to *On*, press switch for 1+ seconds to call specified number. Press switch for 1+ seconds to end a call.

- **Engaged Call Operations (P.2-7)**

Placing international calls from Japan

A separate subscription is required for international calls.

- ① Enter a phone number
- ② Select *Options* → *International dial*
- ③ Select country or *Enter Code* for direct entry
- ④ Select *Japan*
- ⑤ Confirm the number and press **t**

Using a SoftBank handset overseas

Enter handset phone number; country code is not required.

Calling from overseas (P.2-14)

707SC (E).book 3 ページ 2006年10月26日 木曜日 午前11時19分

Options

Item	Description
Video call	Initiate a Video Call.
Add to Phonebook	Save a number to Phonebook or USIM Card Phonebook (P.5-6).
Create msg	Open a new message addressed to the number (P.17-6).
Phonebook	Open Phonebook Search window.
Call log	Open Call Log.
International dial	Add international code and country code to a number (P.2-2).
Hide/Show my ID	Initiate a Voice/Video Call with your number Shown/Hidden. Select <i>None</i> to follow Caller ID settings. Select <i>Show my ID</i> to show your number. Select <i>Hide my ID</i> to hide your number.

Receiving a Call

1 When 707SC rings/vibrates, press t or c (Accept)

2 Press y to end the call

Tip

- **When Anykey Answer is set to On**
Press any key except w , o , y , or Side Key n b to answer Voice Calls.
- **To mute 707SC ringer for an incoming call**
While 707SC rings/vibrates, press w (Mute); caller continues to hear ringback tone. To answer the call, press c (Accept).
- **To adjust ringer volume**
While 707SC rings/vibrates, press Side Key n or b .
- **When Stereo Earphone Microphone is connected**
When 707SC rings/vibrates, press Stereo Earphone Microphone switch for 1+ seconds to accept a call. Press again for 1+ seconds to end the call.
- **Engaged Call Operations (P.2-7)**

Basic Handset Operations

2-3

Specify ringtones for saved numbers by Phonebook entry or Category (P.5-4, 5-7). When no ringtone is set, 707SC rings according to Profile Settings (P.9-2).

Under following conditions, 707SC rings according to each Mode; Secret Mode is set to **Hide** and Phonebook(contains caller's number as an entry)'s Secret Mode is set to **On**.

If caller sends Caller ID, phone number appears; if saved in Phonebook, name appears. When an image is set in Phonebook or Category, image also appears (➡P.5-4, 5-7). If caller hides Caller ID, *Withheld* appears.

Under following conditions, no name/image appears; Secret Mode is set to *Hide* and Phonebook(contains caller's number as an entry)'s Secret Mode is set to *On*.

After an unanswered incoming call, Missed call window appears. Press **w** (View), to open Missed Call Log (P.2-9).

Use Call Forwarding/Voice Mail to forward incoming calls to a specified number automatically/to save messages at Voice Mail Center. When Call Forwarding or Voice Mail is set to *No reply*, press **0** (Busy) to forward an incoming call immediately (P 16-3, 16-5).

Use Answer Machine to record caller messages. Up to 3 messages (15 seconds per message) can be recorded in 707SC (P.2-5).

Proactively disconnect an incoming call without answering it. The rejected call is recorded in *Missed*.

1 While 707SC rings/vibrates, press **y**

707SC (E), book 5 ページ 2006年10月26日 木曜日 午前11時19分

Tip

- **When Side Key is set to *Reject***
Reject an incoming call by pressing Side Key **n** or **b** for 1+ seconds.
- **To reject call and send a busy message**
When neither Call Forwarding (P.16-2) nor Voice Mail (P.16-2) is active, press **o** (**Busy**) to proactively disconnect a call without answering it; "busy" message appears on the caller's handset before the call is disconnected. If the caller's handset is incompatible the call is simply disconnected.
- **To automatically reject a call (P.13-8)**

Answer Machine

Record caller messages on handset. Up to 3 messages (15 seconds per message) can be recorded.

Activating & Canceling

Default Setting = Off

1 Press **c** and select *Settings* → *Call settings* → *Answer machine* → *Setting*

2 Select the setting and press **c** (**Save**)

Note

- Answer Machine cannot be used when handset is off, out-of-range or in *Offline mode*. Use Voice Mail to record caller messages while incoming transmissions are blocked.
- If the free space of the shared memory (P.25-15) on 707SC is less than 600K bytes, you cannot use Answer Machine.

With Answer Machine set

In Standby, appears.

Basic Handset Operations

2-5

Default Setting = 10 seconds

Default Setting = 10 seconds

- ## Sound Language

Default Setting ■ 日本語

- 2-6

When Answer Machine records caller messages, appears in Display.

- Tip**

- **To delete messages**
Highlight the message to delete, press **w** (Delete) and select *Yes*.

707SC (E).book 7 ページ 2006年10月26日 木曜日 午前11時19分

Engaged Call Operations

Earpiece Volume

Adjust Earpiece or Earphone volume. Setting remains even after power off.

1 During a call, press Side Key n or b

Hold

When a call is put on hold, the party on hold hears a hold tone and neither party can hear the other's voice.
A subscription to Call Waiting (P.16-8) or Conference Call (P.16-9) is required before calls can be placed on hold.

1 During a call, press w (Hold)

2 Press w (Retrieve) to reconnect the call

Speaker Phone

1 During a call, press c () and select Yes

To cancel Speaker Phone
Press c ()

Voice Recording

Record voice of a maximum of 2 minutes during a call.

1 During a call, select Options → Record

2 Press c (Record)

Basic Handset Operations

2-7

3 Perform operations to stop/pause

To stop and save

Press **w** (Stop)

To pause and save

- ① Press **c** (Pause)
- ② Press **c** (Record) to restart recording; press **w** (Save) to end recording

Tip

- **Recorded voice**
Recorded voice files are saved to Sounds & Ringtones folder in Data Folder.
- **When another party calls during recording**
With Call Waiting subscription, stops ongoing recording and incoming call window appears.
- **When 707SC ends a call during recording**
707SC stops recording automatically and saves the voice files.

Engaged Call Options

Item	Description
Whisper on/off	With <i>On</i> , raise the volume of sent sounds even when lowering your voice.
Mute	Check <i>Voice or Key tone</i> and press w (OK) to cancel sending no sounds or key tones.
New call	Enter a number and press c (Call) to initiate another call; requires a subscription to Conference Call (P.16-9).
Phonebook	Open Phonebook Search window.
Add to Phonebook	Save number to Phonebook or USIM Card Phonebook (P.5-6).
Create msg	Open a new message addressed to the number (P.17-6).
Send DTMF	Enter digits then press c (Send) to send tones.
Record	Record caller's voice during a call (P.2-7).
Memo	Create and save text memos (P.14-10).
End call	Disconnect call.

Item	Description
Switch to headset/ Switch to phone	Appears when Bluetooth®-compatible headset is in use. Select headset or phone (handset).

Call Log Records

Viewing Call Log Records

Current contacts	All incoming and outgoing calls
Missed	All missed incoming calls
Received	All received incoming calls
Dialled	All outgoing calls

1 Press **r**

2 Use **s** to select a Call Log

To confirm the number and call duration for a record

Highlight an item and press **c** (View)

Call Log Record Indicators

-      : Voice Call to/from a number saved in Phonebook
-  : Call to/from a number saved in USIM Card Phonebook
-  : Voice Call to/from an unsaved number
-  : Video Call to/from a number saved in Phonebook
- Current Contacts (all incoming/outgoing calls)
- Indicators
-  : Received call  : Rejected incoming call
-  : Missed call  : Dialed call

Tip

- While Secret Mode is set to **Hide** Phonebook(contains a Call Log record's number as an entry)'s Secret Mode is set to **On**; the name of a Call Log record does not appear.

Calling from Call Log Records

1 Press **r**

2 Use **s** to select a Call Log

2

Basic Handset Operations

707SC (E).book 10 ページ 2006年10月26日 木曜日 午前11時19分

2

Basic Handset Operations

3 Highlight a record and press t

To initiate a Video Call

Select Options → Video call

Deleting Call Log Records

Deleting One Record

Delete one Call Log record.

1 Press r

2 Use s to select a Call Log

3 Highlight a record, select Options → Delete → Selected → Yes

Tip

To delete individual calls from records

① Perform Steps 1 and 2

② Highlight a record and press c (View)

③ Highlight a call, select Options → Delete → Selected → Yes

Deleting All Records

Delete all Call Log records at once.

1 Press r

Use s to select Current contacts

2 Select Options → Delete → All → Yes

3 Enter Phone Password and press c (Confirm)

Call Log Options

Item	Description
Voice call	Initiate a Voice Call to the current number.
Video call	Initiate a Video Call to the current number (P.2-9).
Add to Phonebook	Save number to Phonebook or USIM Card Phonebook (P.5-6).
Create msg	Open a new message addressed to the current number (P.17-6).

2-10

Item	Description
Delete	Delete the current Call Log record (P.2-10).
Add to black list	Add the number to Black List (P.13-9).
View phonebook details	Open Entry details for a number.
International dial	Add international code and country code to the number (P.2-2).
Hide/Show my ID	Initiate a Voice/Video Call with your number Shown/Hidden. Select <i>None</i> to follow Caller ID settings. Select <i>Show my ID</i> to show your number. Select <i>Hide my ID</i> to hide your number.

Call Manager

Data counter	Confirm/reset incoming/outgoing data volume.
Call costs	Confirm/reset Total Costs, Last Call Cost or Cost Limit; change Call Costs currency unit.
Call times	Confirm/reset incoming/outgoing Voice/Video Call Times.

Data Counter, Call Costs, & Call Times

1 Press **c** and select *Settings* → *Call settings* → *Call manager*

2 Select an item

To reset Data counter

- ① In Data counter, highlight item to reset, select *Options* → *Reset*
- ② Select *Yes*

To reset all Data counter

- ① In Data counter, highlight item to reset, select *Options* → *Reset all*
- ② Enter Phone Password and press **c** (Confirm), and select *Yes*

To reset Call Costs

- ① In Call Costs, select *Options* → *Reset call cost*
- ② Enter PIN2 and press **c** (Confirm)

2

Basic Handset Operations

707SC (E).book 12 ページ 2006年10月26日 木曜日 午前11時19分

2
Basic Handset Operations

To reset Call Times

① In Call Times, highlight item to reset, select
Options → Reset → Yes

To reset all Call Times

① In Call Times, highlight item to reset, select
Options → Reset all

② Enter Phone Password and press c (Confirm)
→ Yes

To change Call Costs currency unit

① In Call Costs, select Options → Setup currency

② Enter PIN2 and press c (Confirm)

③ Highlight Price field to enter a price in Yen

④ Highlight Currency field and enter the currency unit.

⑤ Press w (Save)

Edit Cost Limit

After reaching the call cost limit, only emergency calls (☎P.2-15) can be initiated; messaging, web connections (fee-based operations) are disabled.

1 Press c and select Settings → Call settings → Call manager

2 Select Call costs

3 Select Options → Edit cost limit

4 Enter PIN2 and press c (Confirm)

5 Enter limit

Display Call Cost during a Call

Default Setting = Off

- 1 Press **c** and select *Settings* → *Call settings* → *Call manager* → *Display call cost*

- 2 Select the setting and press **c** (Save)

International Roaming

A separate subscription is required for international calls. Contact Customer Service for more information about international roaming.

Changing Network Mode

Default Setting ▶ 3G

- 1 Press **c** and select *Settings* → *Connectivity* → *Network mode*
- 2 Select the setting

Tip

- The contents of *Network mode* are:
Automatic: Network is set automatically by location.
GSM 900/1800: Available overseas.
GSM 1900: Available overseas.
3G: Available domestically and overseas.

Network Setup

Selecting a Network

Default Setting = Automatic

Select a network (operator) by location or use automatic setting.

- 1 Press **c** and select *Settings* → *Connectivity* → *Network selection*
- 2 Select the setting
 To select automatically
 Select *Automatic*

2

Basic Handset Operations

707SC (E).book 14 ページ 2006年10月26日 木曜日 午前11時19分

Basic Handset Operations

2 Preferred Networks

Insert networks into Preferred Networks list or add them to the end. Select networks from Network List or create new network entries.

1 Press **c** and select *Settings* → *Connectivity* → *Preferred networks*

2 Edit Preferred Networks

To insert/add a network from Network List

① When inserting, highlight insert position

② Select *Options* → *Insert* or *Add* → *Network list*

③ Select a network and press **c** (Insert/Add)

To insert/add a new network

① When inserting, highlight insert position

② Select *Options* → *Insert* or *Add* → *New network*

③ Enter network settings and press **w** (Insert/Add)

To delete a network from Preferred Networks

Highlight network to delete, select *Options* → *Delete* → *Yes*

Tip

• New Network Settings

Country code	Up to 3 digits
Network code	Up to 3 digits
Network name	Up to 20 single-byte alphanumerics
Network type	GSM or 3G

1 Enter phone number including area code

To call an in-country landline or mobile phone

Proceed to Step 5

2-14

Press **0** for 1+ seconds to enter +, enter country code and phone number omitting the first 0 (except when calling landlines in Italy) and proceed to Step 5

-

- To change/add International code or country code (P.15-2)

Emergency Calls

Some emergency numbers (110 (Police), 119 (Fire), etc.) are available even when certain Call Barring settings are active. See details below.



707SC Status	Available Numbers
Offline mode (P.3-4) is active.	None
Call Cost limit exceeded (P.2-12).	110, 119, 118
707SC is locked (P.13-5).	None
Required PIN not entered (P.13-3).	None
USIM Card cannot be authenticated (P.13-4).	None
Outgoing Call Barring (P.16-11) is active.	110, 119, 118

- SoftBank can not guarantee connections in all countries and regions. Handset operations may vary by network, signal, or function settings.


Basic Handset Operations:




707SC(E).book 16 ページ 2006年10月26日 木曜日 午前11時19分



2-16



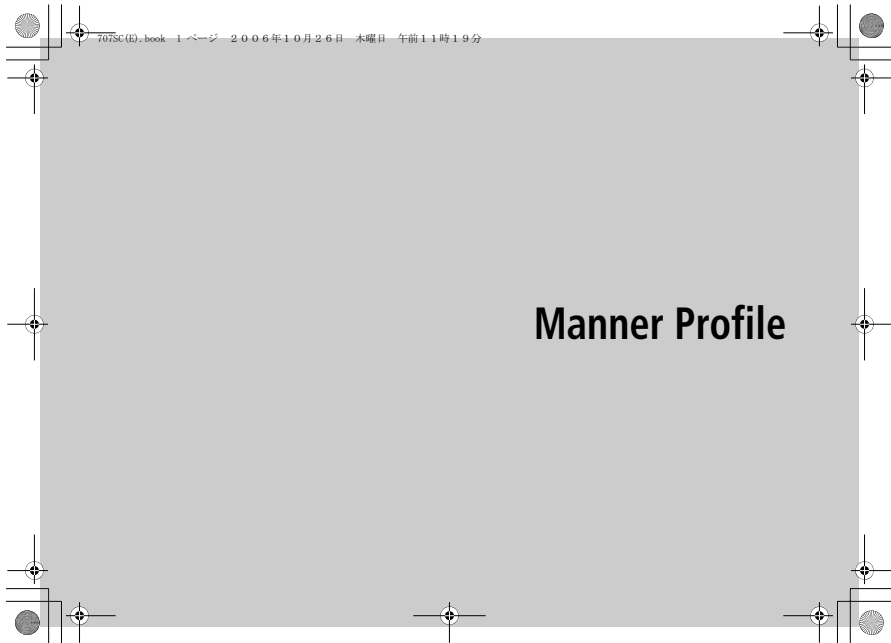

Minding Mobile Manners

Please take care not to disturb others when using your handset.

- Turn 707SC off in theaters, museums, and other places where silence is the norm.
- Keep 707SC off aboard airplanes, inside hospitals, or in other places where handset use is prohibited.
- Refrain from using 707SC in places such as restaurants, hotel lobbies, or elevators.
- Observe announcements or posted instructions regarding handset use aboard trains, etc.
- Refrain from handset use that interrupts the flow of pedestrian or vehicle traffic.

Manner Related Functions

707SC offers two manner-related profiles.

Manner Profile:
Silence 707SC sounds and activate Vibration for all alerts, tones, and alarms. Use Manner Key to activate or cancel Manner Profile.

Offline Profile:
Temporarily suspend 707SC transmissions; other 707SC functions may still be used while Offline Profile is active. Muting/vibrating 707SC can be selected respectively for alert tone, ringtone, or alarm in Sound settings other than Manner/Offline profile.

- Tip**

 - When Manner Profile is active  appears.
 - Even when Manner Profile is active, shutter click sounds for Camera.

1 In Standby, press *** 1+** for 1+ seconds

-

- To change 707SC Profile (➡P.9-2)

Select a Profile depending on usage and edit settings as required (➔ P.9-2).

3
Manner Profile

707SC (E).book 4 ページ 2006年10月26日 木曜日 午前11時19分

3

Manner Profile

Offline Mode

Default Setting ▶ Off

1 Press **c** and select *Settings* → *Call settings* → *Offline mode*


2 Select the setting and press **c** (Save)

Tip

- Turning 707SC Off with *Offline mode* active

When turning on again, a confirmation for use of *Offline mode* appears. Press **o** (No) to select Normal Profile.

3-4

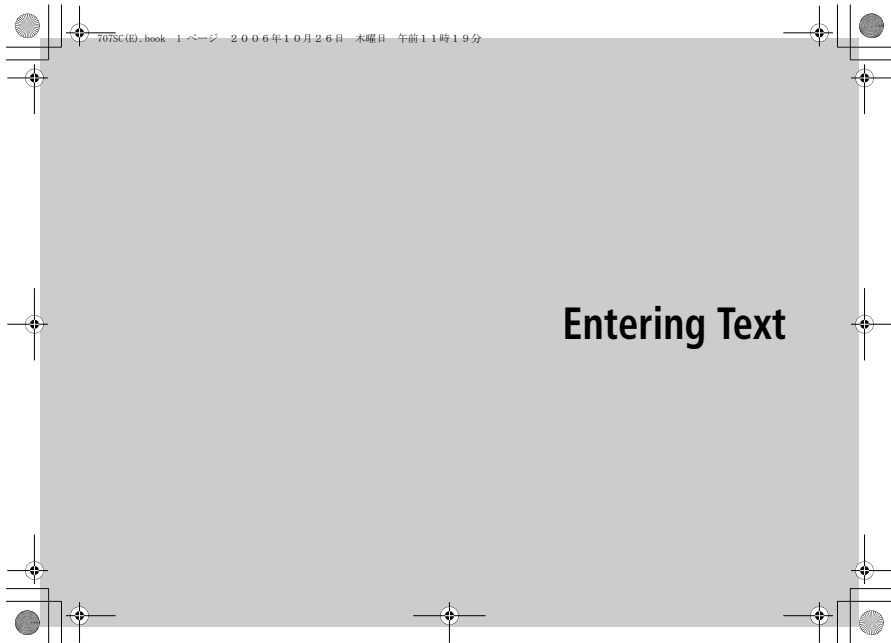

Entering Text


Text Entry

Enter kanji/hiragana/hangul, single- or double-byte katakana, alphanumerics, or symbols/pictograms/emoticons.

Text Entry Window

4

Entering Text

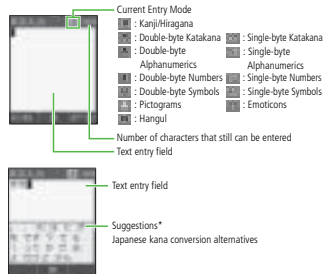

* Suggestions appear only in Kanji/Hiragana mode, when Prediction setting is *On*.

4-2

Number Only Text Entry Fields

Text entry windows do not appear for Phonebook Phone fields or Alarm Time fields; enter numbers directly into these fields.

Changing Text Entry Mode

Text Entry modes may be limited in some text entry fields or windows.

1 In a text entry window, press **e**



2 Highlight entry mode and press **c**

Tip


To toggle symbols

In text entry windows, press **#** to toggle Symbols, Pictograms, and Emoticons.


Key Assignments

Multiple characters are assigned to each key. Press a key repeatedly until the target character appears.
Press * to add ° or ¨ to kana or enter line breaks and # to toggle symbols.

Key	Kanji/Hiragana	Katakana	Alphanumerics	Numbers
1	あいう えおあいう えお 1	アイウエオアイウエオ 1	.@_ / ~ ^ 1	1
2	かきくけこ 2	カキクケコ 2	abcABC 2	2
3	さしすせそ 3	サシスセソ 3	defDEF 3	3
4	たちつてとっ 4	タチツテト ッ 4	ghiGHI 4	4
5	なにぬねの 5	ナニヌネノ 5	jklJKL 5	5
6	はひふへほ 6	ハヒフヘホ 6	mnoMNO 6	6
7	まみむめも 7	マミムメモ 7	pqrPQRS 7	7
8	やゆよやゆよ 8	ヤユヨヤユヨ 8	tuvTUV 8	8
9	らりるれろ 9	ラリルレロ 9	wxyzWXYZ 9	9
0	わをんわ、。ー・〜！？ (Space) 0	ワヲンワ、。ー・〜！？ (Space) 0	„_! ? (Space) 0	0
*	• Toggle between upper- and lower-case or add ° or ¨ to unfixed, convertible kana • Enter Line Break		• Toggle between upper- and lower-case • Enter Line Break	Enter Line Break



4-4



Entering Text

4



Key	Kanji/Hiragana	Katakana	Alphanumerics	Numbers
#	• Toggle Pictograms, Double-byte Symbols, Single-byte Symbols, Emoticons			
	• Reverse toggle characters assigned to the same key before finalizing character selection			
	Toggle Pictograms, Double-byte Symbols, Single-byte Symbols, Emoticons			


1 When double-byte, " " cannot be used ("~" appears on Display).

2 Single-byte " " (lower case) cannot be entered.



7075C (E).book 4 ~ 1/2

2006年10月26日 本曜日 午前1時19分



707SC (E).book 5 ページ 2006年10月26日 木曜日 午前11時19分

When calls/alarms interrupt text entry

Answer incoming calls without saving text first; disconnect call to return to text entry window. Similarly, close Alarm window to return to text entry window.

Entering Characters

Hiragana/Kanji

Enter hiragana/kanji with or without conversion predictions. When Prediction setting is *On*, Suggestions appear below text entry window.

1 Activate Kanji/Kana entry mode to enter hiragana



To add * or *

Enter a valid character and press *

To correct a misentry

Use C to delete the character then enter the correction

When key is pressed too many times

Press # to return to the previous character assigned to the same key

To enter consecutive characters assigned to the same key

Press r to move cursor to the right

To enter unconverted hiragana

Press c (Confirm)

4

Entering Text

4-5

2 Convert hiragana

To select a conversion from Suggestions

- ① Press **d** to move between Suggestions
- ② Highlight a conversion and press **c** (Confirm)



When the desired conversion does not appear

- ① Press **w** (Convert)
- ② Use **s** to change the conversion range
- ③ Press **d** to move to Suggestions
- ④ Highlight a conversion and press **c** (Confirm)
- ⑤ Repeat steps ② through ④ as required

Tip

- **When characters do not convert to the intended Kanji**

Try entering different readings of the Kanji. When multiple Kanji characters do not convert together, try to convert them separately.

- **To switch the contents in Suggestions between a predicted/conversion alternatives**


If you press **w** (Convert) while predicted alternatives are displayed, conversion alternative will be displayed, and if you press **w** (Predict) while conversion alternatives are displayed, predicted alternatives appear.

- **To set/release the prediction entry function (P.4-14)**

- **To convert easily by using User dictionary (P.4-15)**

- **To enter date/time**

- ① Press a key to enter a key to which numbers are assigned
- ② Press **o** (EngNum/数字)
- ③ Highlight a conversion alternative and press **c** (Confirm)



Resetting Text Entry History

As for predicted/conversion alternatives, character strings/kanji converted in the past take priority to appear. Restore the displayed contents to defaults.

- ① Press **C** and select *Settings* → *Phone settings* → *User dictionary* → *Reset learning*
- ② Enter Phone Password, press **C** (Confirm) and select *Yes*


Katakana

1 In Katakana mode, press a key to enter the assigned character



To add **°** or **°**

Enter a Katakana to which a voiced or semi-voiced sound symbol should be added and press *****



To correct a misentry


Use **C** to delete the character and press the correct key

When key is pressed too many times

Press **#** to return to the previous character assigned to the same key

To enter consecutive characters assigned to the same key

Press **r** to move cursor to the right




4

Entering Text



4-7



4

Entering Text

Tip

- **To enter Katakana in Kanji/Kana entry mode**
For example, to convert "くも" to "クモ" or "クモ".



- ① In Kanji/Kana entry mode, enter hiragana
- ② Press **o** (EngNumカタ)
- ③ Highlight katakana conversion alternative and press **c** (Confirm)

Alphanumerics

- 1 In Alphanumerics entry mode, press a key to enter the assigned character

**To toggle upper and lower case**

Enter a character and press *****

To correct a misentry

Use **C** to delete the character and press the correct key

When key is pressed too many times

Press **#** to return to a previous character assigned to the same key

707SC (E).book 10 ページ 2006年10月26日 木曜日 午前11時19分

4

Entering Text

Symbols, Pictograms, & Emoticons

1 In a text entry window, press # to toggle symbols

To toggle double-byte symbols and single-byte symbols

Press * while Suggestions for double-byte symbols and single-byte symbols appear

2 Highlight target character and press C

To enter symbols, pictograms, or emoticons successively

Press w (Continue)

Tip

- To enter symbols, pictograms, or emoticons in Kanji/Kana entry mode

Enter hiragana like てん and press w (Convert), symbols and ... appear among conversion alternatives. Similarly, convert はーと or でんわ to pictograms and わーい or えーん to emoticons.

4-10

707SC (E).book 11 ページ 2006年10月26日 木曜日 午前11時19分

Line Breaks

Enter a line break the same way in all text entry modes.

1

In a text entry window, press *

Quoting Saved Text

Using Phonebook Entries

In a text entry window, use *Phonebook* via *Options* to search saved entries for inserting phone numbers or mail addresses into message text.

1

In message text, select *Options* → *Phonebook*

2

Select an entry and open details

3

Highlight an item and press **C** (Select)

SMS Template

In a text entry window, use *SMS template* via *Options* to quote saved text in SMS.

Save frequently used words/phrases as SMS templates beforehand (P.4-16).

1

In message text, select *Options* → *SMS template*

2

Select a template

Using Template

In a text entry window, use *Templates* via *Options* to save ".ne.jp" or "http://www" in Phonebook for one keystroke entry.

1

In message text, select *Options* → *Templates*

2

Select an item

4-11

Entering Text

7075C(E).book 12 ページ 2006年10月26日 木曜日 午前11時19分

Entering Text

4

Hangul

Select Hangul entry mode to enter Hangul characters.

1

In a text entry window, press **e** and select *Hangul*

2

Press number keys to enter assigned character units that appear; combine several consonants and vowels

Consonant Example (Key Assignment)			
4	(once)	4	(twice)
			4 (three times)

Vowel Example (Key Assignment)			
	0 1 (), 2 ()		0 1 2 2
	0 2 (), 1 ()		0 2 2 1
	0 2 (), 3 ()		0 2 2 3
	0 2 (), 3 (), 1 (), 2 (), 1 ()		

Editing Text

Deleting

1

Highlight character to delete and press **C**

When a space is highlighted

The character before cursor is deleted.

To delete all text on/after cursor

Press **C** for 1+ seconds

To delete all text

Place cursor at the end of text and press **C** for 1+ seconds

4-12

707SC (E).book 13 ページ 2006年10月26日 木曜日 午前11時19分

Copy/Cut, Paste, & Undo

Copy/Cut

Select a range of characters to copy/cut. Paste copied/cut characters repeatedly to other locations.

1 In a text entry window, select *Options* → *Copy or Cut*

2 Use **a** to highlight the first character in the range and press **c** (Start)

To copy/cut all
Press **o** (All)

3 Use **a** to specify range and press **c** (End)

Tip

- To copy text from Phonebook entries or My Phonebook Details
Select *Options* → *Copy item* (P.5-14, 5-17)
- When copy/cut items
Up to 10 copied/cut items can be saved. The contents remains even after turning power off. With 10 items already saved, oldest items are automatically deleted.

Paste

1 Use **a** to move cursor to paste location

2 Select *Options* → *Paste*

3 Select an item to paste and press **c** (Select)

4

Entering Text

4-13

Tip

- **To delete copied/cut items**
In Step 3, highlight item to delete, press **W** (Delete) and select **Yes**.

Undo

Undo operations immediately after performing such as Cut, Paste, or Delete. Alternatively, undo converting operations immediately after character conversion; this operation can be performed in Kanji/Kana entry mode only.

- 1 In a text entry window, select **Options**
→ **Undo**

Jump

- 1 In a text entry window, select **Options**
→ **Jump** → **Top** or **End**

Prediction On/Off
(Japanese Only)

Select to show/hide Japanese kana conversion alternatives in Suggestions.

Default Setting ☒ On

- 1 In a text entry window, select **Options**
→ **Prediction On** or **Prediction Off**

Learning On/Off
(Japanese Only)

Default Setting ☒ On

Select to keep record or not for entered character strings by Suggestions.

- 1 In a text entry window, select **Options**
→ **Learning On** or **Learning Off**

707SC (E).book 15 ページ 2006年10月26日 木曜日 午前11時19分

Font Size

Default Setting Large

Change font size for SMS, S! Mail, or template text; available sizes vary.

1 In message text, select Options → Font Size

User Dictionary (Japanese Only)

Save frequently used words/phrases of up to 20 characters; entries appear in Suggestions when key characters are entered.

1 Press c and select Settings → Phone settings → User dictionary → New entry

2 Select Word field and enter text

3 Select Reading field and enter key characters

4 Press w (Save)

Tip

To edit User Dictionary entries

① Press c and select Settings → Phone settings → User dictionary → Edit entry

② Select contents to edit

③ Edit a word or readings and press w (Save)

To delete one item

① Press c and select Settings → Phone settings → User dictionary → Edit entry

② Highlight item to delete, select Options → Delete

To delete all items

① Press c and select Settings → Phone settings → User dictionary → Delete all

② Enter Phone Password, press c (Confirm) and select Yes

4

Entering Text

4-15

Saving to User Dictionary

1 In a text entry window, select *Options*
→ *Word registration*

2 Use **a** to move cursor to the first
character, press **c** (Start)

To display User Dictionary window for
checking the saved contents, etc.

Press **o** (UserDic)

3 Use **a** to set the range, press
c (End)

4 Select Reading field and enter reading

5 Press **w** (Save)

Tip

- **When the range containing line break**
Character string before line break is saved as the dictionary word.
- **To edit User dictionary**
Press **o** (UserDic) to select start point for Word registration; operations in "User Dictionary (Japanese Only)" (P.4-15) can be performed. Select *Edit entry* and registered entries appear.

SMS Templates

Save frequently used words/phrases of up to 70 characters.

1 Press **w** () and select *Templates*
→ *SMS templates*

2 Select *Options* → *Add new*

When no SMS templates have been saved
Press **w** (Add new)

3 Press **c** (Select) and enter text

4 Press **w** (Save)

Tip



- To use an SMS template (P.4-11)
- To edit an SMS template
 - ① Press **w** () and select *Templates* → *SMS templates*
 - ② Highlight an item to edit and press **c** (Edit)
 - ③ Press **c** (Select) and edit the text
 - ④ Press **w** (Save)
- To delete an SMS template
 - ① Press **w** () and select *Templates* → *SMS templates*
 - ② Highlight an item to delete, select *Options* → *Delete* → *Selected* → *Yes*
To delete all SMS templates, in Step **b**, select *Delete* → *All*, enter Phone Password, press **c** (Confirm) and select *Yes*. To delete multiple items, select *Delete* → *Multiple* in Step **②**, check items to delete, press **w** (Delete) and select *Yes*.

4


Entering Text




707SC(E).book 18 ページ 2006年10月26日 木曜日 午前11時19分



4-18



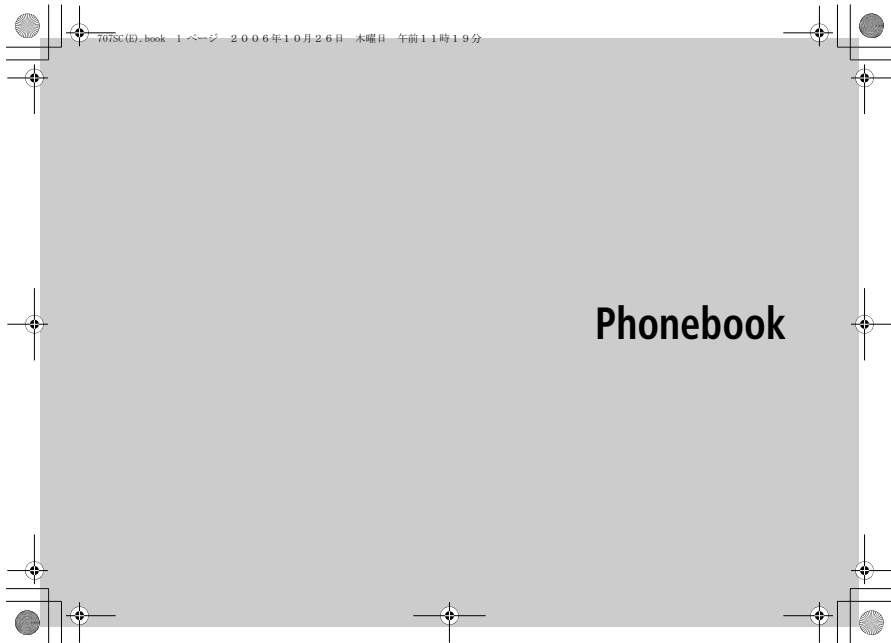

707SC (B).book 1 ページ 2006年10月26日 木曜日 午前11時19分

Phonebook

☛ Saving to Phonebook

☛ Phonebook Entry Items

Save phone numbers, mail addresses, and more for up to 1,000 entries in Phonebook; USIM Card Phonebook capacity varies by card. Insert USIM Card into compatible SoftBank handsets to use USIM Card Phonebook entries.

Each 707SC Phonebook entry contains the items listed below.

Item	Description	Availability (Quantity)	
		707SC	USIM Card
Entry Number	a 3-digit number	Yes (000-999) ¹	Yes (000-0XX) ²
Name	Single-/double-byte characters	Yes (Up to 50 characters)	Yes ³
Reading	Single-byte characters	Yes	Yes ³
Phone Icon	Select one of six icons	Yes (Six Icons)	No

Item	Description	Availability (Quantity)	
		707SC	USIM Card
Phone Number	Saved with area code	Yes (5 of up to 40 digits each)	Yes ^{2 3}
Email	Single-byte alphanumerics	Yes (4 of up to 256 characters each)	Yes ³ (1 address)
Email Icon	Select one of three icons	Yes	No
Category	Select one of twenty categories	Yes	Yes ²
Caller ID	Select incoming call image from Data Folder	Yes	No
Call Notice	Select incoming call ringtone from Data Folder	Yes	No

Item	Description		Availability (Quantity)
	Message	7075C USIM Card	
Message	Select incoming SI Mail/SMS ringtone from Data folder	Yes	No
Blood	Select one of four blood types	Yes	No
Birth day	Enter the party's date of birth	Yes	No
Address	Enter up to 20 single-byte characters for postal code and up to 50 for address	Yes	No
Hobby	Up to 100 characters	Yes	No
URL	Up to 100 single-byte alphanumeric (2 URLs)	Yes	No
URL icon	Select one of three icons	Yes	No
Notes	Up to 100 characters	Yes	No
Secret Mode	Select secret setting	Yes	No

1 Use speed dialing (P.5-12) to initiate a Voice Call to phone numbers with memory Nos. 000 to 099 in Phonebook of handset.
2 The number of items that can be saved varies by the type of USIM Card.
3 The number of characters that can be saved varies by the type of USIM Card.
Note
• Protect important information
Phonebook entry information may be altered or deleted when battery is removed or left uncharged for an extended period. Accidents or malfunctions may also affect Phonebook entries. Back-up Phonebook entry information and store separately. SoftBank is not liable for damages resulting lost information.

Phonebook

Adding Entry Items

707SC assigns lowest available Entry Number; edit as required.



Phonebook Details

5

Phonebook

1 **Select Options** → **Add to** → **Phone or USIM**

2 **Enter additional items as required**

*Not available in USIM Card Phonebook.

To change Entry number

Highlight Entry number field and enter a number

To save Name

- ① Select Name field
- ② Enter a name

To modify Reading Name

- ① Select Reading Name field
- ② Enter a reading name (use katakana to organize entries in Phonebook list)

To save Phone number

Highlight Phone number field and enter a number

To set Phone icon

- ① Select Phone number field
- ② Select an icon

To save Mail address

- ① Select Mail address field
- ② Enter an address
- ③ Select an icon


To set Category

- ① Select Category field
- ② Select a Category

To set Caller ID for a Voice Call or Video Call*

- ① Select Caller ID field
- ② Select *On*
- ③ Open Data Folder to select an image file, etc.

5-4



To set Call notice for a Voice Call or Video Call*

- ① Select Call notice field
- ② Select *On*
- ③ Open Data Folder to select a file

To set S! Mail/SMS Notice*

- ① Select Message notice field
- ② Select *On*
- ③ Select sound

To save Blood type*


- ① Select Blood type field
- ② Select blood Type

To save Birthday*

Highlight Birthday field and enter a date

To save Address*

- ① Select Address field
- ② Enter a postal code
- ③ Select Address field and enter an address
- ④ Press **w** (OK)



To save Hobby*

- ① Select Hobby field
- ② Enter text

To save URL*

- ① Select URL field
- ② Enter a URL
- ③ Select an icon




To save Memo*

- ① Select Notes field
- ② Enter text

To set Secret Mode*

- ① Select Secret Mode field
- ② Select *On*

3 Press **w (Save)**



Tip• **Phone number field characters**

Save 0-9, #, *, P (Pause), and + (International Code) in Phone field. Press * for 1+ seconds to enter P or press 0 for 1+ seconds to enter +.

• **To save after entering a phone number**

Alternatively, during a call, select *Options* → *Add to Phonebook*.

- ① In Standby, enter a phone number
- ② Select *Options* → *Add to Phonebook* → *Phone* or *USIM*
- ③ Select *New* or *Update* and select memory location for saving the information
- ④ Select the phone icon
- ⑤ Perform Steps 2 and 3

• **Synchronizing Phonebook with Samsung PC Studio**

The entries with Secret Mode *On* cannot be synchronized regardless of Secret Mode settings (cannot be back-upped to PC).

The entries with Secret Mode changed from *Off* to *On*, cannot be synchronized and deleted immediately after the Secret Mode settings has been changed and tried synchronization.

For more information about Samsung PC Studio, see the User's guide in the attached CD-ROM.

5-6

Saving from Call Log Records

Save numbers from Call Log records to new or existing Phonebook entries.

- 1 Press **r**
- 2 Use **s** to open a Call Log, highlight a record, select *Options* → *Add to Phonebook* → *Phone* or *USIM*
- 3 Select Phonebook entry type
 - To create a new entry
 - Select *New*
 - To save to an existing entry
 - ① Select *Update*
 - ② Open the Phonebook entry (P.5-9)
- 4 Select a phone icon
- 5 Enter additional items as required

707SC (E).book 7 ページ 2006年10月26日 木曜日 午前11時19分

6 Press w (Save)

Category Settings

Organize Phonebook entries among twenty Categories.

New Category (USIM Card)

1 Press c and select Phonebook

To select a USIM Card Category

After Step 1, select Options → View from USIM

2 Select Options → View from USIM

3 Press w (Search) and select Category search

4 Select Options → New category

5 Enter a name

Edit Category

Customize Category names, add Category image/ringtones to appear and sound for incoming calls/messages from Category members.

1 Press c and select Phonebook

To select a USIM Card Category

After Step 1, select Options → View from USIM

2 Press w (Search) and select Category search

3 Highlight category to change, select Options → Category settings

4 Edit Category items

To change Category name

Select Category name field and enter a name

5

Phonebook

5-7

707SC (E).book 8 ページ 2006年10月26日 木曜日 午前11時19分

5

Phonebook

To set Category image

Select Category image field then select a file from Data Folder

To set incoming call ringtone

Select Call notice field then select a file from Data Folder

To set incoming S! Mail/SMS notice

Select Message notice field then select a ringtone

To restore Category defaults

Highlight item to restore and press **o** (Reset)

5 Press **w** (Save)

Tip

• Incoming image & ringtone priority

Images and ringtones set for individual Phonebook entries take priority over those set for a Category.

Add Member

1 Press **c** and select *Phonebook*

To select Category on USIM Card

After Step 1, select *Options* → *View from USIM*

2 Press **w** *Search* and select *Category search*

3 Select Category to which to add member

4 Select *Options* → *Add member*

5 Check the member to add and press **w** (Add)

5-8

707SC (E).book 9 ページ 2006年10月26日 木曜日 午前11時19分

Tip

- **To delete a member from a Category**
Deleting a member from a Category does not affect member's Phonebook entry.
① Perform Steps 1 and 2 in "Add Member"
② Select Category from which to delete member
③ Highlight member to delete, select *Options* → *Remove* → *Yes*

Using Phonebook

Calling from Phonebook

Phonebook Search

1 Press d

If the correct search method appears first

Proceed to Step 2, Part b

To change method from an active search window

Press c and proceed to Step 2

2 Press w (Search)

To search Phonebook list

① Select *Phonebook list*

② Use s to navigate Phonebook list

To search by Category

① Select *Category search*

② Select Category

To search by name

① Select *Name search*

② Enter any part of Name

To search by Reading

① Select *Reading search*

② Enter any part of Reading

To search by Entry Number

① Select *Entry No. search*

② Enter Entry Number

To search by Phone Number

① Select *Phone No. search*

② Enter any part of a phone number

5 Phonebook

5-9

707SC (E).book 10 ページ 2006年10月26日 木曜日 午前11時19分

5

Phonebook

To search by Mail Address

①Select *Email search*

②Enter any part of an mail address

3 Select an entry

To open *Entry details*

Press *c* (*Details/Select*)

Tip

• To set Phonebook appearance preference (Phonebook or USIM Card Phonebook)

① Press *c* and select *Settings* → *Phonebook settings* → *View phonebook from*

② Select *Phone memory* or *USIM memory* and press *c* (*Save*)

• While *Secret Mode* is set to *Hide*

Phonebook *Secret Mode* is set to *On*, these Phonebook entries do not appear. To search these entries, set *Secret Mode* to *Show*.

Initiating a Call

1 Select an entry, press *c* (*Details*) to view *Details* window



Entry Details

2 Select a number and initiate a call

To initiate a *Voice Call*

Press *c* or select *Options* → *Voice call*

To initiate a *Video Call*

Select *Options* → *Video call*

5-10

Tip**• To place a call from Phonebook list**

Highlight an entry, select *Options* → *Voice call* or *Video call*. When entry contains multiple numbers, Default Number is dialed if set; otherwise, first number listed is dialed. If Default Number is *Not assigned*, Call window appears; select a number.

Calling from Simple Search and search result

When *Simple search* is set to *On* (P.15-7), enter numbers to search and display entry name/phone number; this search for entries starting with *Reading name* corresponding to the entered number. Highlight a phone number, press **t** or **c** (Select) → **c** (Call) to initiate a Voice Call; select *Options* → *Video call* to call a Video Call.

Calling from phone number search and search result

Enter 4-digit number to search and display entry name/phone number; this search for entries contains the entered number at the first/last part of the entry. When *Simple search* is set to *On* and any entry searched, press **s** to switch the search result between phone number search and *Simple search*. Highlight a phone number, press **t** or **c** (Select) → **c** (Call) to initiate a Voice Call; select *Options* → *Video call* to call a Video Call.

Calling USIM Card Phonebook Entries

Use Entry Numbers as shortcuts to call numbers saved in the first 100 USIM Card Phonebook entries.

1 Enter the last two digits of an Entry Number**2 Press #**

If the correct entry is not highlighted

Use **j** to highlight it

707SC(E).book 12 ページ 2006年10月26日 木曜日 午前11時19分

5

Phonebook

3 Press w (Call)

To initiate a Video Call

Press o (V-Call)

Change Search Method

Default Setting: Phonebook list

Set to display specified search window when pressed d in Standby.

1 Press c and select Settings → Phonebook settings → Search type

2 Select the setting and press c (Save)

Tip

The contents of search method settings are:

Phonebook list: Press d in Standby, shows list window.

Other settings: Set each search type window appears.

Speed Dialing

Enter the last two digits of an Entry Number to call the Voice Call Default Number in Phonebook entries 000 - 099.

1 Enter the last two digits of an Entry Number

2 Press c ()

Tip

When Simple search is set to On

Enter number to show Simple search result (entry names and phone numbers) appears. After 5 seconds, Simple search result disappears. appeared (Center Key area) enables Speed dialing.

5-12

Note

- Speed Dialing is invalid for an entry if Voice Call Default Number (P.5-14) is set to *Not assigned*.
- While Secret Mode is set to *Hide* and Phonebook Secret Mode is set to *On*; these Phonebook entry numbers cannot be used for Speed Dialing.

Phonebook Options

Use the following options in Phonebook List or Entry details.

Item	Description
Add to ¹	Start the process of saving a new entry.
Voice call	Initiate a Voice Call to the highlighted number or Default Number (P.5-10).
Video call	Initiate a Video Call to the highlighted number or Default Number (P.5-10).
Create message	Open a new message addressed to the number saved as an entry (P.17-6).

Item	Description
Send	Send entry as a vfile; select <i>Via message</i> , to open a new message with entry attached (P.17-6), or <i>Via bluetooth</i> , to send entry to another device wirelessly (P.12-6).
Delete	Delete an entry (P.5-15).
Save to Data Folder	Create a vfile and save it to <i>Other documents</i> in Data Folder.
Copy to USIM/ Copy to phone	(P.5-15)
View from USIM/ View from Phone ¹	Toggle between Phonebook and USIM Phonebook.
International dial	Add international code and country code to the number (P.2-2).
Hide/Show my ID	Initiate a Voice/Video Call with your number Shown/Hidden. Select <i>None</i> to follow Caller ID settings. Select <i>Show my ID</i> to show your number. Select <i>Hide my ID</i> to hide your number.
Print via Bluetooth	Print highlighted Entry details (name, phone number information) using the printer via Bluetooth® connection.

1 This item does not appear in Entry details.
2 This item does not appear in Phonebook list.

5 Phonebook

When editing Phonebook entries with Phonebook Secret Mode *On*, set Secret Mode to *Show*.

3 Edit entry items and press **w** (Save)

Resetting an item changes it to *Not assigned*.

- To set**
- ① Select *Voice call*, *Video call*, or *Message*
 - ② Select a phone number or mail address