



This user manual includes detailed usage instructions for your camera. Please read this manual thoroughly.

# USER MANUAL

**DV150F** 

#### Click a topic

Basic troubleshooting

Quick reference

Contents

Basic functions

Extended functions

Shooting options

Playback/Editing

Wireless network

Settings

**Appendixes** 

Index

# **Health and safety information**

Always comply with the following precautions and usage tips to avoid dangerous situations and ensure peak performance of your camera.



Warning—situations that could cause injury to yourself or others

#### Do not disassemble or attempt to repair your camera.

This may result in electric shock or damage to the camera.

# Do not use your camera near flammable or explosive gases and liquids.

This may cause a fire or explosion.

# Do not insert flammable materials into the camera or store these materials near the camera.

This may cause a fire or electric shock.

#### Do not handle your camera with wet hands.

This may result in electric shock.

#### Prevent damage to subjects' eyesight.

Do not use the flash in close proximity (closer than 1 m/3 ft) to people or animals. If you use the flash too close to your subject's eyes, this can cause temporary or permanent eyesight damage.

#### Keep your camera away from small children and pets.

Keep your camera and all accessories out of the reach of small children and animals. Small parts may cause choking or serious injury if swallowed. Moving parts and accessories may present physical dangers as well.

# Do not expose the camera to direct sunlight or high temperatures for an extended period of time.

Prolonged exposure to sunlight or extreme temperatures can cause permanent damage to your camera's internal components.

#### Avoid covering the camera or charger with blankets or clothes.

The camera may overheat, which may distort the camera or cause a fire.

# Do not handle the power supply cord or go near the charger during a thunderstorm.

This may result in electric shock.

If liquid or foreign objects enter your camera, immediately disconnect all power sources, such as the battery or charger, and then contact a Samsung service center.

# Comply with any regulations that restrict the use of a camera in a certain area.

- · Avoid interference with other electronic devices.
- Turn off the camera when in an aircraft. Your camera can cause interference with aircraft equipment. Follow all airline regulations and turn off your camera when directed by airline personnel.
- Turn off the camera near medical equipment. Your camera can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

#### Avoid interference with pacemakers.

Maintain a minimum of 15 cm between this camera and all pacemakers to avoid potential interference, as recommended by the manufacturer and the independent research group, Wireless Technology Research. If you have any reason to suspect that your camera is interfering with a pacemaker or other medical device, turn off the camera immediately and contact the manufacturer of the pacemaker or medical device for guidance.



Caution – situations that could cause damage to your camera or other equipment

# Remove the batteries from your camera when storing it for an extended period of time.

Installed batteries may leak or corrode over time and cause serious damage to your camera.

# Use only authentic, manufacturer-recommended, Lithium-ion replacement batteries. Do not damage or heat the battery.

Inauthentic, damaged, or heated batteries may cause a fire or personal injury.

# Use only Samsung-approved batteries, chargers, cables and accessories.

- Using unauthorized batteries, chargers, cables or accessories can cause batteries to explode, damage your camera, or cause injury.
- Samsung is not responsible for damage or injuries caused by unapproved batteries, chargers, cables or accessories.

#### Use the battery only for its intended purpose.

Misusing the battery may cause a fire or electric shock.

#### Do not touch the flash while it fires.

The flash is very hot when fired and may burn your skin.

# When you use the AC charger, turn off the camera before you disconnect the power to the AC charger.

Failing to do so may result in fire or electric shock.

#### Disconnect the charger from the wall socket when not in use.

Failing to do so may result in fire or electric shock.

# Do not use a damaged power supply cord, plug, or loose outlet when you charge batteries.

This may cause a fire or electric shock.

# Do not allow the AC charger to come in contact with the +/-terminals on the battery.

This may cause a fire or electric shock.

# Do not force the camera's parts or apply pressure to the camera.

This may cause your camera to malfunction.

# Exercise caution when you connect cables or adapters and install batteries and memory cards.

If you force the connectors, improperly connect cables, or improperly install batteries and memory cards, you can damage ports, connectors, and accessories.

#### Keep cards with magnetic strips away from the camera case.

Information stored on the card may be damaged or erased.

#### Never use a damaged charger, battery, or memory card.

This may result in electric shock or camera malfunction or cause a fire.

#### Check that the camera is operating properly before use.

The manufacturer takes no responsibility for any loss of files or damage that may result from camera malfunction or improper use.

#### You must plug the small end of the USB cable into your camera.

If the cable is reversed, it may damage your files.

The manufacturer is not responsible for any loss of data.

#### Avoid interference with other electronic devices.

Your camera emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience. To prevent unwanted interference, use only Samsung-approved devices or accessories.

#### Use your camera in the normal position.

Avoid contact with your camera's internal antenna.

#### Data transference and your responsibilities

- Data transferred via WLAN could be leaked, so avoid transferring sensitive data in public areas or on open networks.
- The camera manufacturer is not liable for any data transfers that infringe on copyrights, trademarks, intellectual property laws, or public decency ordinances.

#### Copyright information

- Microsoft Windows and the Windows logo are registered trademarks of the Microsoft Corporation.
- Mac is a registered trademark of the Apple Corporation.
- microSD™, microSDHC™, and microSDXC™ are registered trademarks of the SD Association.
- Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- Trademarks and trade names used in this manual are the property of their respective owners.
  - Camera specifications or contents of this manual may be changed without prior notice due to upgrade of camera functions.
  - We recommend using your camera within the country where you purchased.
  - Use this camera responsibly and adhere to all laws and regulations concerning its use.
- You are not allowed to reuse or distribute any part of this manual without prior permission.

### Outline of the User Manual

Basic functions	13
Learn about your camera's layout, icons, and basic functions for shooting.	
Extended functions	37
Learn how to capture a photo and record a video by selecting a mode.	
Shooting options	56
Learn how to set the options in Shooting mode.	
Playback/Editing	77
Learn how to play back photos or videos, and edit photos or videos. Also, learn how to connect your camera to your computer, photo printer, or TV.	
Wireless network	98
Learn to connect to wireless local area networks (WLANs) and use functions.	
Settings	118
Refer to options to configure your camera's settings.	
Appendixes	124
Get information about error messages, specifications, and maintenance.	


#### Icons used in this manual

Icon	Function
	Additional information
<u> </u>	Safety warnings and precautions
[]	Camera buttons. For example, [Shutter] represents the shutter button.
( )	Page number of related information
$\rightarrow$	The order of options or menus you must select to perform a step; for example: Select Face Detection → Normal (represents Select Face Detection, and then select Normal).
*	Annotation

### Expressions used in this manual

#### Pressing the shutter

- Half-press [Shutter]: Press the shutter halfway down
- Press [Shutter]: Press the shutter all the way down

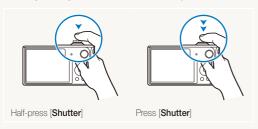

#### Subject, background, and composition

- Subject: The main object in a scene, such as a person, animal, or still life
- Background: The objects around the subject
- Composition: The combination of a subject and background



#### Exposure (Brightness)

The amount of light that enters your camera determines the exposure. You can alter the exposure by changing the shutter speed, aperture value, or ISO sensitivity. By altering the exposure, your photos will be darker or lighter.







▲ Overexposure (too bright)

# **Basic troubleshooting**

Learn to solve common problems by setting shooting options.

appear red.	Red eye occurs when the subject's eyes reflect light from the camera flash.  • Set the flash option to ● Red-eye or ● Red-eye Fix. (p. 64)  • If the photo has already been captured, select ● Red-eye Fix in the edit menu. (p. 97)
Photos have dust spots.	If dust particles are present in the air, you may capture them in photos when you use the flash.  Turn off the flash or avoid capturing photos in a dusty place.  Set ISO sensitivity options. (p. 66)
Photos are blurred.	Blurring can occur if you capture photos in low light conditions or hold the camera incorrectly.  Use the OIS function or half-press [Shutter] to ensure the subject is focused. (p. 35)
Photos are blurred when shooting at night.	As the camera tries to let in more light, the shutter speed slows. This can make it difficult to hold the camera steady long enough to capture a clear photo and may result in camera shake.  • Select Night Shot mode. (p. 51)  • Turn on the flash. (p. 64)  • Set ISO sensitivity options. (p. 66)  • Use a tripod to prevent your camera from shaking.
Subjects come out too dark because of backlighting.	When the light source is behind the subject or when there is a high contrast between light and dark areas, the subject may appear too dark.  • Avoid shooting toward the sun.  • Select <b>Backlight</b> in Scene mode. (p. 42)  • Set the flash option to <b>F Fill in</b> . (p. 64)  • Adjust the exposure. (p. 74)  • Set the Auto Contrast Balance ( <b>ACB</b> ) option. (p. 75)  • Set the metering option to <b>Spot</b> if a subject is in the center of the frame. (p. 75)
	Photos are blurred.  Photos are blurred when shooting at night.  Subjects come out too dark because of

### **Quick reference**



### Capturing photos of people

- Picture in Picture mode ▶ 45.
- Self Shot mode ▶ 46.
- Children mode ► 48.
- Beauty Shot mode ► 50
- Intelligent Portrait mode ► 51
- · Red-eye/Red-eye Fix (to prevent or correct red-eve) ▶ 64
- Face Detection ▶ 70



#### Capturing photos at night or in the dark

- Scene mode > Sunset, Dawn ▶ 42
- Night Shot mode ► 51
- Flash options ▶ 64
- ISO sensitivity (to adjust the sensitivity to light) ▶ 66



#### Capturing action photos

Continuous, Motion Capture ▶ 78



#### Capturing photos of text, insects, or flowers

- Scene mode > Text ▶ 42
- Close-up Shot mode ▶ 52
- Macro ▶ 67



#### Adjusting the exposure (brightness)

- · ISO sensitivity (to adjust the sensitivity to light) ▶ 66
- EV (to adjust exposure) ▶ 74
- · ACB (to compensate for subjects against bright backgrounds) ▶ 75
- Metering ▶ 75
- . AEB (to capture 3 photos of the same scene with different exposures) ▶ 78



### Capturing photos of scenery

- Scene mode > Landscape ► 42
- Live Panorama mode ▶ 43



### Applying effects to photos

- Magic Frame mode ▶ 53
- Funny Face mode ► 54
- Photo Filter mode ▶ 55
- Split Shot mode ▶ 57
- Artistic Brush mode ► 58
- Motion Photo mode ▶ 59
- · Image Adjust (to adjust Sharpness, Contrast, or Saturation) ▶ 79



#### Applying effects to videos

Movie Filter mode ► 56



### Reducing camera shake

- Optical Image Stabilization (OIS) ► 33
  - · Viewing files by category in Smart Album ▶ 86
  - Viewing files as thumbnails ▶ 87
  - Deleting all files on the memory ▶ 89
- Viewing files as a slide show ▶ 91
- Viewing files on a TV ▶ 99
- · Connecting your camera to a computer
- · Using photo or video sharing websites ▶ 115
- Sending photos or videos via email ► 118
- Adjusting sound and volume ► 130
- · Adjusting the brightness of the display ▶ 131
- Changing the display language ► 132
- . Setting the date and time ▶ 132
- Before contacting a service center ▶ 146

# **Contents**

Basic functions	13
Unpacking	14
Camera layout	15
Inserting the battery and memory card	17
Charging the battery and turning on your camera	18
Charging the battery	18
Turning on your camera	18
Performing the initial setup	19
Learning icons	21
Using the Home screen	22
Accessing the Home screen	22
Icons on the Home screen	23
Setting Wallpaper	25
Selecting options or menus	26
Setting the display and sound	28
Setting the display type	28
Setting the sound	29
Capturing photos	30
Turning on the front display	31
Zooming	31
Reducing camera shake (OIS)	33
Tips for getting a clearer photo	35

Extended functions	. 3
Using Basic modes	3
Using the Smart Auto mode	3
Using the Program mode	3
Using the Smart Movie mode	4
Using the Movie mode	4
Using the Scene mode	4
Using the Live Panorama mode	4
Using the Self Shot mode	4
Using the Children mode	4
Using the Jump Shot mode	4
Using the Beauty Shot mode	4
Using the Night Shot mode	4
Using the Close-up Shot mode	5
Using Magic modes	5
Using the Magic Frame mode	5
Using the Photo Filter mode	5
Using the Movie Filter mode	5
Using the Split Shot mode	5
Using the Motion Photo mode	5

#### Contents

Shooting options	. 56
Selecting a resolution and quality	57
Selecting a resolution	57
Selecting an image quality	58
Using the timer	59
Shooting in the dark	60
Preventing red-eye	60
Using the flash	60
Adjusting the ISO sensitivity	62
Changing the camera's focus	63
Using macro	63
Using tracking auto focus	
Adjusting the focus area	
Adjusting the locus area	00

Using Face Detection	66
Detecting faces	66
Capturing a smile shot	67
Detecting eye blinking	
Adjusting brightness and color	68
Adjusting the exposure manually (EV)	68
Compensating for backlighting (ACB)	69
Changing the metering option	69
Selecting a White Balance setting	70
Using burst modes	72
Adjusting images	73
Reducing the sound of the zoom	74
Available shooting options by shooting mode	75

Playback/Editing	77
Viewing photos or videos in Playback mode	78
Starting Playback mode	78
Viewing photos	82
Playing a video	85
Editing a photo	87
Resizing photos	87
Cropping portraits automatically	87
Rotating a photo	88
Applying Smart Filter effects	88
Adjusting your photos	89
Viewing files on a TV	91
Transferring files to your Windows computer	92
Transferring files with Intelli-studio	93
Transferring files by connecting the camera as a	
removable disk	95
Disconnecting the camera (for Windows XP)	96
Transferring files to your Mac computer	97

/ireless network	98
Connecting to a WLAN and configuring network	
settings	. 99
Connecting to a WLAN	. 99
Using the login browser	100
Network connection tips	101
Entering text	102
Sending photos or videos to a smart phone	103
Using a smart phone as a remote shutter release	104
Using photo or video sharing websites	106
Accessing a website	106
Uploading photos or videos	106
Sending photos or videos via email	108
Changing email settings	108
Sending photos or videos via email	109
Using Auto Backup to send photos or videos	111
Installing the program for Auto Backup on your PC	111
Sending photos or videos to a PC	111
Viewing photos or videos on a TV Link-enabled	
TV	113
Sending photos using Wi-Fi Direct	115
About the Wake on LAN (WOL) feature	116

#### Contents

Settings	118
Settings menu	119
Accessing the settings menu	119
Sound	120
Display	120
Connectivity	121
General	122
Appendixes	124
Error messages	125
Camera maintenance	127
Cleaning your camera	127
Using or storing the camera	128
About memory cards	129
About the battery	132
Before contacting a service center	136
Camera specifications	139
Glossary	143
FCC notice	148
Declaration sentence in official languages	151
Index	

# **Basic functions**

Learn about your camera's layout, icons, and basic functions for shooting.


Unpacking	14
Camera layout	15
Inserting the battery and memory card	17
Charging the battery and turning on your	
camera	18
Charging the battery	18
Turning on your camera	18
Performing the initial setup	19
Learning icons	21
Using the Home screen	22
Accessing the Home screen	22
Icons on the Home screen	23
Setting Wallpaper	25


Selecting options or menus	26
Setting the display and sound	28
Setting the display type	28
Setting the sound	29
Capturing photos	30
Turning on the front display	31
Zooming	31
Reducing camera shake (OIS)	33
Tips for getting a clearer photo	35

# **Unpacking**

Quick Start Guide

The following items are included in your product box.

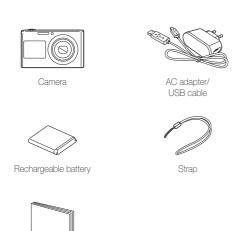

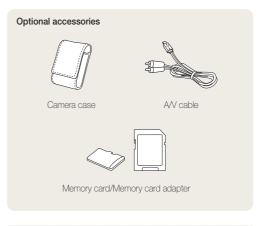





- The illustrations may differ slightly from the items shipped with your product.
- The items included in the box may differ depending on the model.
- You can purchase optional accessories at a retailer or a Samsung service center. Samsung is not responsible for any problems caused by using unauthorized accessories.

### Camera layout

Before you start, familiarize yourself with your camera's parts and their functions.

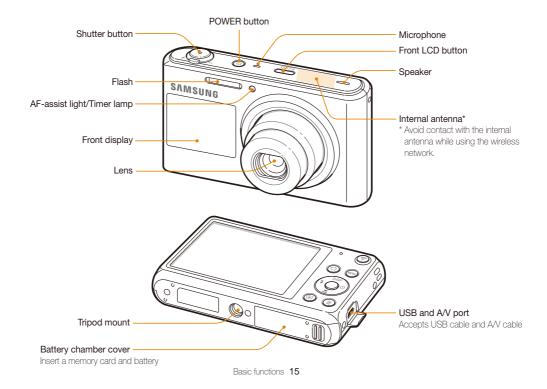

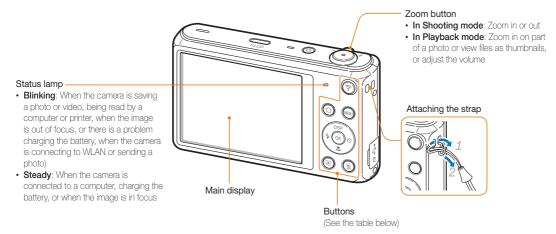

Button	Description
$\bigcirc$	Access the Home screen.
MENU	Access options or menus.
(E)	Enter Playback mode.
1	Delete files in Playback mode.

Button	Description		
DISP (4 OK) SS		Basic functions	Other functions
	DISP	Change the display option.	Move up
	*	Change the macro option.	Move down
	4	Change the flash option.	Move left
	ণ্ড	Change the timer option.	Move right
(OK)	Confirm the highlighted option or menu.		

# Inserting the battery and memory card

Learn how to insert the battery and an optional memory card into the camera.







Insert a memory card with the gold-colored contacts facing up.



Insert the battery with the Samsung logo facing up.






#### Removing the battery and memory card



Push the card gently until it disengages from the camera, and then pull it out of the slot.



Slide the lock to the right to release the battery.



You can use the internal memory for temporary storage if a memory card is not inserted.

## Charging the battery and turning on your camera

### Charging the battery

Before you use the camera for the first time, you must charge the battery. Plug the small end of the USB cable into your camera, and then plug the other end of the USB cable into the AC adapter.



Use only the AC adapter and USB cable supplied with your camera. If you use another AC adapter (such as SAC-48), the camera battery may not charge or work properly.

### Turning on your camera

Press [POWER] to turn your camera on or off.

• The initial setup screen appears when you turn on the camera for the first time. (p. 19)



#### Turning on your camera in Playback mode

Press [**]**. The camera turns on and immediately accesses Playback mode.






If you turn on your camera by pressing and holding [12] until the status lamp blinks, the camera does not emit any sounds.

# Performing the initial setup

When you turn on your camera for the first time, the initial setup screen appears. Follow the steps below to configure the camera's basic settings.

1 Verify that **Language** is highlighted, and then press [**③**] or [**0K**].



- 2 Press [DISP/♥] to select a language, and then press [OK].
- 3 Press [♥] to select **Time Zone**, and then press [♥] or [**OK**].

- 4 Press [DISP/♥] to select Home, and then press [OK].
  - When you travel to another country, select **Visit**, and then select a new time zone.
- 5 Press [4/5] to select a time zone, and then press  $[0K] \rightarrow [MENU]$ .



. The screen may differ depending on the language selected.

6 Press [♥] to select Date/Time Set, and then press [♥] or [0K].




- The screen may differ depending on the language selected.
- 7 Press [\$/\omega] to select an item.
- 8 Press [DISP/♥] to set the date, time, and daylightsaving time, and then press [OK].

- 9 Press (♣) to select Date Type, and then press
  (♦) or (OK).
- 10 Press [DISP/♥] to select a date type, and then press [OK].
- 11 Press [♥] to select **Time Type**, and then press [♥] or [**OK**].
- 12 Press [DISP/\$) to select a time type, and then press [OK].
- 13 Press [MENU] to finish the initial setup.

# **Learning icons**

The icons the camera displays on the screen change according to the mode you select or the options you set.

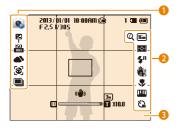

### 1 Shooting options (left)

Icon	Description
8	Shooting mode
	Exposure value adjusted
150 100	ISO sensitivity
	White balance
<b>[83]</b>	Face detection
2	Face tone
	Burst option

### 2 Shooting options (right)

Q	Intelli zoom on
16m	Photo resolution
HD	Video resolution
$\Box$	Metering
30 <b>F</b>	Frame rate
<b>\$</b> <sup>8</sup>	Flash
€	Sound Alive on
(M)) (0)5	Optical Image Stabilization (OIS)
*	Auto focus option
[W]	Image adjustment (sharpness, contrast, and saturation)
63	Timer

### 3 Shooting information

	3
Icon	
2013/01/01	Current date
10:00AM	Current time
	Front display is on
1	Available number of photos
	Memory card inserted
<b>(III</b>	<ul> <li>III: Fully charged</li> <li>IIII III: Partially charged</li> <li>III: Empty (Recharge)</li> </ul>
F 2.5	Aperture value
1/305	Shutter speed
00:10	Available recording time
	Auto focus frame
(( <b>Ш</b> ))	Camera shake
	Zoom indicator
∃m	Photo resolution when the Intelli zoom is on
X10.0	Zoom ratio

# **Using the Home screen**

You can select a shooting mode or access the settings menu by selecting the icons on the Home screen.

### Accessing the Home screen





No.	Description
0	Current Home screen Rotate [Zoom] to the left or right to switch to another Home screen. Press [DISP] to scroll to the Home screen name, and then press [❖/③] to switch to another Home screen. Press [❖/③] repeatedly to switch to another Home screen.
2	Mode icons • Press [DISP/ず/歩/む] to scroll to a desired mode, and then press [OK] to access the mode.

### Icons on the Home screen

#### <Basic>

	Description
SMART	Smart Auto: Capture a photo with a scene mode selected automatically by the camera. (p. 38)
P	<b>Program</b> : Capture a photo with settings you have adjusted manually. (p. 39)
SMARE	Smart Movie: Record a video with a scene mode selected automatically by the camera. (p. 40)
9	Movie: Record a video. (p. 41)
SCN	Scene: Capture a photo with options that are preset for a specific scene. (p. 42)
	Live Panorama: Capture and combine a series of photos to create a panoramic image. (p. 43)
0	Settings: Adjust settings to match your preferences. (p. 129)

#### <Wi-Fi>

Icon	Description
CAMBONO.	<b>MobileLink</b> : Send photos or videos to a smart phone. (p. 112)
STATE OF STA	Remote Viewfinder: Use a smart phone as a remote shutter release and see a preview on your smart phone of an image from your camera. (p. 113)
	<b>Social Sharing</b> : Upload photos or videos to file sharing websites. (p. 115)
0	Email: Send photos or videos stored on the camera via email. (p. 117)
	Cloud: Upload photos to a cloud server. (p. 120)
	<b>Auto Backup</b> : Send photos or videos that you captured with the camera to a PC wirelessly. (p. 121)
	<b>TV Link</b> : View photos or videos that you captured with the camera on a widescreen TV. (p. 123)

#### <Scene>

Icon	Description
	<b>Picture in Picture</b> : Capture a background photo and inser a smaller photo or video into the foreground. (p. 45)
	<b>Self Shot</b> : Use the front display when you capture a self portrait. (p. 46)
<b>2</b>	<b>Children</b> : Attract children's attention with a short animation on the front display. (p. 48)
*	<b>Jump Shot</b> : Let your subjects know the best moment to jump with a countdown on the front display. (p. 48)
<b>31</b>	<b>Beauty Shot</b> : Capture a portrait with options to hide facial imperfections. (p. 50)
<b>1</b>	Intelligent Portrait: Save 2 additional portraits automatically using the face detection functions. (p. 51)
	Night Shot: Capture a night scene by adjusting shutter speed. (p. 51)
*	Close-up Shot: Capture close-up photos of subjects. (p. 52)

### <Magic>

_	
	Description
	<b>Magic Frame</b> : Capture a photo with various frame effects. (p. 53)
@ @	Funny Face: Capture a photo with funny face effects. (p. 54)
	Photo Filter: Capture a photo with various filter effects. (p. 55)
	<b>Movie Filter</b> : Record a video with various filter effects. (p. 56)
1.4	<b>Split Shot</b> : Capture several photos and arrange them with preset layouts. (p. 57)
	<b>Artistic Brush</b> : Capture a photo and save a video that shows how to apply the filter effect. (p. 58)
<b>2</b> 0	Motion Photo: Capture and combine a series of photos, and then select an area to be animated to create a GIF animation. (p. 59)

#### <Album>

Icon	Description
	Album: View files by category in Smart album. (p. 86)
	Photo Editor: Edit photos with various effects. (p. 95)

### **Setting Wallpaper**

Set wallpaper for the Home screen with the desired image.

- 1 On the Home screen, scroll to **<Basic>**.
- 2 Select .
- 3 Select Display → Wallpapers.
- 4 Select an option.

Option	Description
Wallpaper Gallery	Select the desired wallpaper from the default gallery.
Album	Set a photo you have captured as wallpaper.

- 5 Scroll to the desired wallpaper, and then press [**0K**].
  - If you select a photo you have captured, you can set a specified area as wallpaper. Rotate [Zoom] to the left or right to reduce or enlarge the area. Press [DISP/W/\$/5)] to move the area.
- 6 Press [OK] to save.



You can also set the photo you are viewing as wallpaper by pressing [MENU], and then selecting Set Wallpaper in Playback mode.

# Selecting options or menus

To select an option or a menu, press [MENU], and then press [DISP/\$/\$/\$) or [DK].

- 1 In Shooting mode, press [MENU].
- 2 Select an option or a menu.
  - To move up or down, press [DISP] or [♣].
  - To move left or right, press [4] or [3].





3 Press [**0K**] to confirm the highlighted option or menu.

#### Going back to the previous menu

Press [MENU] to go back to the previous menu.




Half-press [Shutter] to return to Shooting mode.

# For example, to select a White Balance option in Program mode:

- 1 On the Home screen, scroll to <Basic>.
- 2 Select S.
- 3 Press [MENU].



4 Press [DISP/♥] to select White Balance, and then press [᠔] or [OK].



5 Press [4/8)] to select a White Balance option.




6 Press [OK] to save your settings.

# Setting the display and sound

Learn how to change the basic display information and sound settings.

### Setting the display type

You can select a display type for the Shooting or Playback mode. Each type displays different shooting or playback information. See the table below.



Press [DISP] repeatedly to change the display type.

Mode	Display type
Shooting	<ul><li> Hide all information about shooting options.</li><li> Show all information about shooting options.</li></ul>
Playback	Hide all information about the current file. Hide all information about the current file except basic information. Show all information about the current file.

#### Setting the option display view

You can hide or show the option display appearing in some modes.

#### Press [OK] repeatedly.

- · Hide the option display.
- Show the option display.



▲ For example, in Scene mode

### Setting the sound

Turn the sound your camera emits when you perform functions on or off.

- 1 On the Home screen, scroll to **<Basic>**.
- 2 Select (a).
- 3 Select Sound → Beep Sound.
- 4 Select an option.

Option	Description
Off	The camera does not emit any sounds.
On	The camera emits sounds.


# **Capturing photos**

Learn how to capture photos easily and quickly in Smart Auto mode.

- 1 On the Home screen, scroll to <Basic>.
- 2 Select .....
- 3 Align your subject in the frame.



- 4 Half-press [Shutter] to focus.
  - · A green frame means the subject is in focus.
  - · A red frame means the subject is out of focus.



- 5 Press [Shutter] to capture a photo.
- 6 Press [ ] to view the captured photo.
  - To delete the photo, press [46], and then select Yes.
- 7 Press [ ] to return to Shooting mode.



See page 35 for tips to get clearer photos.

### Turning on the front display

The front display helps you capture photos while viewing yourself.

#### In Shooting mode, press [F.LCD].

• Press [F.LCD] again to turn it off.





- Several buttons are not available when the front display turns on.
- In Self Shot, Children, and Jump Shot modes, the front display will activate automatically.
- When you set timer options, the front display will remain active. (p. 63)
- When you use the camera in brightly lit or sunny areas, you may not be able to see the front display clearly.
- The front display will not activate when you press [F.LCD] in Playback mode
- When the front display is on, the camera consumes more battery power.

### Zooming

You can capture close-up photos by adjusting the zoom.





Zoom ratio






Zoom in

Ø

When you rotate the zoom button, the zoom ratio shown on the screen may change inconsistently.

#### Digital zoom

The Digital zoom is supported by default in Shooting mode. If you zoom in on a subject in Shooting mode and the zoom indicator is in the digital range, your camera is using the Digital zoom. By using both the 5X Optical zoom and 5X Digital zoom, you can zoom in up to 25 times.






- The Digital zoom is not available with the Tracking AF option.
- If you capture a photo with the Digital zoom, the photo quality may be lower than normal.

#### Intelli zoom

If the zoom indicator is in the Intelli range, your camera is using the Intelli zoom. Photo resolution varies according to the zoom rate if you use the Intelli zoom. By using both the Optical zoom and Intelli zoom, you can zoom in up to 10 times.





- Intelli zoom is not available with the Tracking AF option.
- The Intelli zoom helps you capture a photo with less quality deterioration than the Digital zoom. However, the photo quality may be lower than when you use the Optical zoom.
- The Intelli zoom is available only when you set a 4:3 resolution ratio.
  If you set another resolution ratio with Intelli zoom on, the Intelli zoom will be turned off automatically.

### Setting Intelli zoom

- 1 In Shooting mode, press [MENU].
- 2 Select Intelli Zoom.
- 3 Select an option.

Icon	Description
O OFF	Off: The Intelli zoom is deactivated.
Q	On: The Intelli zoom is activated.

### Reducing camera shake (OIS)

Reduce camera shake optically in Shooting mode.





▲ Before correction

▲ After correction

- 1 In Shooting mode, press [MENU].
- 2 Select OIS.
- 3 Select an option.

Icon	Description
山)) OFF	Off: OIS is deactivated.
心) (015	On: OIS is activated.



- OIS may not function properly when:
  - you move your camera to follow a moving subject
  - you use the Digital zoom
  - there is too much camera shake
  - the shutter speed is slow (for example, when you capture night scenes)
  - the battery is low
  - you capture a close-up shot
  - If you use the OIS function with a tripod, your images may be blurred by the vibration of the OIS sensor. Deactivate the OIS function when you use a tripod.
  - . If the camera is hit or dropped, the display will be blurry. If this occurs, turn off the camera, and then turn it on again.


### Tips for getting a clearer photo





Ensure nothing is blocking the lens, flash, or microphone.


 Change the composition and halfpress [Shutter] again if the focus frame appears in red.






Set the Optical Image Stabilization option to reduce camera shake optically. (p. 33)



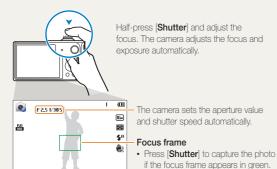

When ( is displayed



When you shoot in the dark, avoid setting the flash option to **Slow Sync** or **Off**. The aperture remains open longer and it may be harder to hold the camera steady long enough to capture a clear photo.

- Use a tripod or set the flash option to Fill in. (p. 64)
- · Set ISO sensitivity options. (p. 66)



#### Preventing your subject from being out of focus


It may be difficult to get your subject in focus when:

- there is little contrast between the subject and background (for example, when your subject is wearing clothing that is similar in color to the background)
- the light source behind the subject is too bright
- the subject is shiny or reflective
- the subject includes horizontal patterns, such as blinds
- the subject is not positioned in the center of the frame



#### Using the focus lock

Half-press [Shutter] to focus. When the subject is in focus, you can reposition the frame to change the composition. When you are ready, press [Shutter] to capture your photo.





· When you capture photos in low light



Turn on the flash. (p. 64)

· When subjects are moving rapidly



Use the Continuous or Motion Capture function. (p. 78)

# **Extended functions**

Learn how to capture a photo and record a video by selecting a mode.

Using Basic modes	38
Using the Smart Auto mode	38
Using the Program mode	39
Using the Smart Movie mode	40
Using the Movie mode	11
Using the Scene mode	12
Using the Live Panorama mode	13
Using the Self Shot mode	15
Using the Children mode	16
Using the Jump Shot mode	17
Using the Beauty Shot mode	18
Using the Night Shot mode	19
Using the Close-up Shot mode 5	50

Ising Magic modes	51
Using the Magic Frame mode	51
Using the Photo Filter mode	52
Using the Movie Filter mode	53
Using the Split Shot mode	54
Using the Motion Photo mode	55

# **Using Basic modes**

Capture photos or record videos using basic modes. You can also use the Scene mode and the Live Panorama mode.

#### Using the Smart Auto mode

In Smart Auto mode, your camera automatically chooses the appropriate camera settings based on the type of scene it detects. The Smart Auto mode is helpful if you are not familiar with the camera settings for various scenes.

- 1 On the Home screen, scroll to <Basic>.
- 2 Select .....
- 3 Align your subject in the frame.
  - The camera automatically selects a scene. An appropriate scene icon appears at the top left of the screen. The icons are listed below.



Icon	
<b>Δ</b> \	Landscapes
WHITE	Scenes with bright white backgrounds

Icon	Description
*)	Landscapes at night
2	Portraits at night
<b>™</b> ↓	Landscapes with backlighting
<b>*</b>	Portraits with backlighting
	Portraits
	Close-up photos of objects
<b>4</b>	Close-up photos of text
	Sunsets
	Blue skies
<u></u>	Forested areas
	Close-up photos of colorful subjects
*	Camera is stabilized or on a tripod (when shooting in the dark)
*****	Actively moving subjects
*	Fireworks (when using a tripod)

- 4 Half-press [Shutter] to focus.
- 5 Press [Shutter] to capture the photo.




- If the camera does not recognize an appropriate scene mode, it uses the default settings for Smart Auto mode.
- Even if it detects a face, the camera may not select a portrait mode depending on the subject's position or lighting.
- The camera may not select the correct scene depending on the shooting conditions, such as camera shake, lighting, or distance to the subject.
- Even if you use a tripod, the camera may not detect the R mode if the subject is moving.
- In Smart Auto mode, the camera consumes more battery power, because it changes settings often to select appropriate scenes.

#### Using the Program mode

In Program mode, you can set most options, except the shutter speed and aperture value, which the camera sets automatically.

- 1 On the Home screen, scroll to **<Basic>**.
- 2 Select S.
- 3 Set the desired options.
  - For a list of options, refer to "Shooting options". (p. 60)



- 4 Align your subject in the frame, and then half-press [Shutter] to focus.
- 5 Press [Shutter] to capture the photo.

### Using the Smart Movie mode

In Smart Movie mode, your camera automatically chooses the appropriate camera settings based on the scene it has detected.

- 1 On the Home screen, scroll to **<Basic>**.
- 2 Select Em.
- 3 Align your subject in the frame.
  - The camera automatically selects a scene. An appropriate scene icon will appear at the top left of the screen.



Icon	Description
<u></u>	Landscapes
	Sunsets
<u></u>	Blue skies
<u></u>	Forested areas

- 4 Press [Shutter] to start recording.
- 5 Press [Shutter] again to stop recording.



- If the camera does not recognize an appropriate scene mode, it uses the default settings for Smart Movie mode.
- The camera may not select the correct scene depending on the shooting conditions, such as camera shake, lighting, and distance to the subject.

#### Using the Movie mode

In Movie mode, you can customize settings to record HD videos of up to 20 minutes in length. The camera saves recorded videos as MP4 (H.264) files.



- H.264 (MPEG-4 part10/AVC) is a high-compression video format established by the international standards organizations ISO-IEC and ITU-T.
- Some memory cards may not support high definition recording. If your card does not, set a lower resolution.
- Memory cards with slow writing speeds will not support highresolution videos. To record high-resolution videos, use memory cards with faster write speeds.
- If you activate the OIS function while recording a video, the camera may record the operating sound of the OIS function.
- If you use the zoom function when recording a video, the camera may record the noise of the zoom operating. To decrease zoom noise, use the Sound Alive function. (p. 80)

- 1 On the Home screen, scroll to **<Basic>**.
- 2 Select sea.
- 3 Set desired options.
  - For a list of options, refer to "Shooting options". (p. 60)
- 4 Press [Shutter] to start recording.
- 5 Press [Shutter] again to stop recording.

#### Pause recording

The camera allows you to temporarily pause a video while recording. With this function, you can record separate scenes as a single video.




- Press [OK] to pause while recording.
- $\bullet$  Press  $[\mbox{\bf OK}]$  to resume.

## Using the Scene mode

In Scene mode, you can capture a photo with options that are preset for a specific scene.

- 1 On the Home screen, scroll to <Basic>.
- 2 Select ...
- 3 Select a scene.



Option	Description
Landscape	Capture still-life scenes and landscapes.
Sunset	Capture scenes at sunset, with natural-looking reds and yellows.
Dawn	Capture scenes at sunrise.
Backlight	Capture backlit subjects.
Beach & Snow	Reduce underexposure of subjects caused by sunlight reflected from sand or snow.
Text	Clearly capture text from printed or electronic documents.

- 4 Align your subject in the frame, and then half-press [Shutter] to focus.
- 5 Press [Shutter] to capture the photo.

#### Using the Live Panorama mode

In Live Panorama mode, you can capture a wide panoramic scene in a single photo. Capture and combine a series of photos to create a panoramic image.



- ▲ Shooting example
- 1 On the Home screen, scroll to **<Basic>**.
- 2 Select ......
- 3 Align your subject in the frame, and then half-press [Shutter] to focus.
  - Align the camera with the far left or the far right, or very top or bottom, of the scene you want to capture.
- 4 Press and hold [Shutter] to start shooting.

- 5 With [Shutter] pressed, slowly move the camera in the direction that will let it capture the rest of the panorama.
  - When the viewfinder is aligned with the next scene, the camera captures the next photo automatically.



- 6 When you are finished, release [Shutter].
  - When you have captured all the necessary shots, the camera combines them into one panoramic photo.




- For best results when capturing panoramic photos, avoid the following:
- moving the camera too quickly or too slowly
  - moving the camera too little to capture the next image
  - moving the camera at irregular speeds
  - shaking the camera
  - changing the camera direction while capturing a photo
  - shooting in dark places
  - capturing moving subjects nearby
- shooting conditions where the brightness or color of light is changing
- Selecting Live Panorama mode will disable the digital and optical zoom functions. If you select Live Panorama mode while the lens is zoomed in, the camera automatically zooms out to the default position.
- In Live Panorama mode, some shooting options are not available.
- The camera may stop shooting due to the shooting composition or movement within the scene.
- In Live Panorama mode, your camera may not capture the last scene in its entirety frou stop moving the camera exactly where you want the scene to end. To capture the entire scene, move your camera slightly beyond the point where you want the scene to end.

#### Using the Self Shot mode

Conveniently capture photos of yourself with the front display.

- 1 On the Home screen, scroll to **<Scene>**.
- 2 Select O.
  - Your camera will automatically detect your face and display a frame to indicate the detected face.

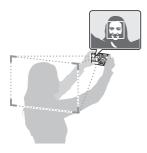

- 3 Half-press [Shutter] to focus.
- 4 Press [Shutter] to capture the photo.



In Self Shot mode, the front display will activate automatically.

#### Capturing an Easy Self Shot


If you press [F.LCD] when the power is off, the front display turns on in Easy Self Shot mode. Because the main display is off, the camera consumes less battery power and you can prevent others from viewing the main display.

- The camera will turn off when you press [F.LCD] again or press [POWER].
- The front display will turn off and the main display will turn on when you press [\(\frac{\chi}{\chi}\)].

#### Customizing the front display

You can let subjects know when to smile or attract their attention to the lens.

- 1 In Shooting mode, press [MENU].
- 2 Select Half Shutter → an option.



Icon	Description
OFF	Off: No icon will appear on the front display.
•	<b>Smile Icon</b> : Set an icon to appear that prompts the subject to smile.
<b>©</b> >>	<b>Eyesight catching</b> : Set an icon to appear to attract the subject's attention to the lens.

#### Using the Children mode

The Children mode attracts children by showing a short animation on the front display.

- 1 On the Home screen, scroll to **<Scene>**.
- 2 Select 🚇.
  - The front display will activate and play the preset animation.
- 3 Press [MENU].
- 4 Select Background Music → an option.
- 5 Align your subject in the frame, and then half-press [Shutter] to focus.
- 6 Press [Shutter] to capture the photo.



You can download animations for the front display from Intelli-studio. (p. 102)


#### Using the Jump Shot mode

Capture a photo of people jumping. An icon will appear on the front display to tell your subjects when to jump.



- 1 On the Home screen, scroll to **<Scene>**.
- 2 Select 🗻
  - To capture animated jump shots, refer to "Capturing animated jump shots". (p. 49)
- 3 Press [Shutter].
  - . The AF-assist light/timer lamp blinks.
  - The front display will start a countdown a few seconds before shooting.

- 4 Jump when the jump icon appears on the front display.
  - . The camera will capture multiple shots.





- If you are capturing photos using the jump shot timer in low light conditions or indoors, photos may appear dark.
- . Use a tripod to prevent your camera from shaking.

#### Capturing animated jump shots

Capture multiple jump shots, and then save them as a GIF animation. This feature is available only when you insert a memory card into the camera.

- 1 In Jump Shot mode, press [MENU].
- 2 Select Jump Shot → GIF animation.
  - The camera saves an animated GIF and one JPG of the middle scene from the GIF file. You cannot view the JPG file on your camera. To view it, connect your camera to a PC. (p. 101)



- If you select GIF animation, the resolution is automatically set to VGB.
- . If you select GIF animation, it may take longer to save files.
- . Use a tripod to prevent your camera from shaking.

### Using the Beauty Shot mode

In Beauty Shot mode, you can capture a portrait with options to hide facial imperfections.

- 1 On the Home screen, scroll to **<Scene>**.
- 2 Select .
- 3 Press [♣/ॐ] to adjust Face Retouch.
  - For example, increase the face retouch setting to hide more imperfections.



- 4 Press [MENU].
- 5 Select Face Tone.

- 6 Press [\$/\omega] to adjust **Face Tone**.
  - For example, increase the face tone setting to make skin appear lighter.



- 7 Press [**0K**] to save the setting.
- 8 Align your subject in the frame, and then half-press [Shutter] to focus.
- 9 Press [Shutter] to capture the photo.

#### Using the Night Shot mode

In Night Shot mode, you can use a slow shutter speed to extend the time the shutter stays open. Increase the aperture value to prevent overexposure.

- 1 On the Home screen, scroll to **<Scene>**.
- 2 Select <a></a>.
- 3 Press [\$/\omega] to adjust the shutter speed.



- 4 Align your subject in the frame, and then half-press [Shutter] to focus.
- 5 Press [Shutter] to capture the photo.




Use a tripod to prevent blurry photos.

## Using the Close-up Shot mode

In Close-up Shot mode, you can capture close-up photos of subjects, such as flowers or insects.

- 1 On the Home screen, scroll to **<Scene>**.
- 2 Select V.
- 3 Align your subject in the frame, and then half-press [Shutter] to focus.



4 Press [Shutter] to capture the photo.

# **Using Magic modes**

Capture a photo or record a video with various effects.

#### Using the Magic Frame mode

In Magic Frame Shot mode, you can apply various frame effects to your photos. The shape and the feel of the photos will change according to the frame you select.

- 1 On the Home screen, scroll to < Magic>.
- 3 Select a desired frame.



- 4 Align your subject in the frame, and then half-press [Shutter] to focus.
- 5 Press [Shutter] to capture the photo.



In Magic Frame mode, the resolution is automatically set to 2...

#### Using the Photo Filter mode

Apply various filter effects to your photos to create unique images.





Miniature

Vignetting





Fish-eye

Sketch

- 1 On the Home screen, scroll to **<Magic>**.
- 2 Select .
- 3 Select an effect.

Option	Description
Miniature	Apply a tilt-shift effect to make the subject appear in miniature.
Vignetting	Apply the retro-looking colors, high contrast, and strong vignette effect of Lomo cameras.
Ink Painting	Apply a watercolor painting effect.
Oil Painting	Apply an oil painting effect.
Cartoon	Apply a cartoon painting effect.
Cross Filter	Add lines that radiate outward from bright objects to imitate the visual effect of a cross filter.
Sketch	Apply a pen sketch effect.
Soft Focus	Hide facial imperfections or apply dreamy effects.
Fish-eye	Blacken the edges of the frame and distort objects to imitate the visual effect of a fisheye lens.
Old Film	Apply a vintage film effect.
Half Tone Dot	Apply a halftone effect.
Classic	Apply a black and white effect.
Retro	Apply a sepia tone effect.
Zooming Shot	Blur the edges of a photo to emphasize the subjects in the center.

- 4 Align your subject in the frame, and then half-press [Shutter] to focus.
- 5 Press [Shutter] to capture a photo.



Depending on the option you select, the resolution may change to **5** or smaller automatically.

#### Using the Movie Filter mode

Apply various filter effects to your videos to create unique images.

- 1 On the Home screen, scroll to < Magic>.
- 2 Select
- 3 Select an effect.

Option	Description
Miniature	Apply a tilt-shift effect to make the subject appear in miniature.
Vignetting	Apply the retro-looking colors, high contrast, and strong vignette effect of Lomo cameras.
Half Tone Dot	Apply a halftone effect.
Sketch	Apply a pen sketch effect.

Option	Description
Fish-eye	Distort close objects to imitate the visual effect of a fisheye lens.
Classic	Apply a black and white effect.
Retro	Apply a sepia tone effect.
Palette Effect 1	Create a vivid look with sharp contrast and strong color.
Palette Effect 2	Make scenes clean and clear.
Palette Effect 3	Apply a soft brown tone.
Palette Effect 4	Create a cold and monotone effect.

- 4 Press [Shutter] to start recording.
- 5 Press [Shutter] again to stop recording.



- If you select Miniature, the miniature recording time is also displayed and is shorter than the real recording time.
- If you select Miniature, you cannot record the video sound.
- Depending on the option you select, the recording speed may change to \$\sum\_{\text{B}}\$ and the recording resolution may change to \$\mathbf{VGH}\$ or smaller automatically.

#### Using the Split Shot mode

In Split Shot mode, you can capture several photos and arrange them with preset layouts.

- 1 On the Home screen, scroll to < Magic>.
- 2 Select III.
- 3 Select a split style.
  - To adjust the sharpness of the dividing line, press [MENU], and then select Line Blur → a desired value.
  - To apply a Smart Filter effect to part of the shot, press
    [MENU], and then select Smart Filter → a desired option.
    You can apply different Smart Filter effects to each part of the shot.



- 4 Align your subject in the frame, and then half-press [Shutter] to focus.
- 5 Press [Shutter] to capture a photo.
  - Repeat steps 4 and 5 to capture the rest of the photos.
  - To recapture a photo, press [46].



- In Split Shot mode, the resolution is automatically set to (3m) or smaller.
- In Split Shot mode, the available zoom range may be less than in other shooting modes.

#### Using the Motion Photo mode

In Motion Photo mode, you can capture and combine a series of photos, and then select an area to be animated to create a GIF animation. This mode is available only when you insert a memory card into the camera.

- 1 On the Home screen, scroll to < Magic>.
- 2 Select 1
- 3 Align your subject in the frame, and then half-press [Shutter] to focus.
- 4 Press [Shutter] to capture the photo.
  - The camera captures multiple photos while the status lamp is blinking.
- 5 Press [DISP/\$/\$/\$)] to scroll to an area to be animated.

6 Rotate [Zoom] to the left or right to reduce or enlarge the area.



- 7 Press [**0K**] to save the photo.
  - The camera saves an animated GIF and one JPG of the first scene from the GIF file. You cannot view the JPG file on your camera. To view it, connect your camera to a PC. (p. 101)



- . In Motion Photo mode, the resolution is automatically set to VGA.
- Use a tripod to prevent your camera from shaking.
- . In Motion Photo mode, it may take longer to save files.

# **Shooting options**

Learn how to set the options in Shooting mode.

57
57
58
59
60
60
60
62
63
63
64
65
66
66
67
67

Adjusting brightness and color	68
Adjusting the exposure manually (EV)	68
Compensating for backlighting (ACB)	69
Changing the metering option	69
Selecting a White Balance setting	70
Using burst modes	72
Adjusting images	73
Reducing the sound of the zoom	74
Available shooting options by shooting	
mode	75

# Selecting a resolution and quality

Learn how to change the image resolution and quality settings.

#### Selecting a resolution

As you increase the resolution, your photo or video will include more pixels, so it can be printed on larger paper or displayed on a larger screen. When you use a high resolution, the file size will also increase.

#### Setting the photo resolution

- 1 In Shooting mode, press [MENU].
- 2 Select Photo Size.
- 3 Select an option.

Icon	Description
16 <sub>M</sub>	<b>4608 X 3456</b> : Print on A1 paper.
ЧмР	4608 X 3072: Print on A1 paper in wide ratio (3:2).
12m	<b>4608 X 2592</b> : Print on A1 paper in panorama ratio (16:9) or play back on an HDTV.
10 <sub>M</sub>	<b>3648 X 2736</b> : Print on A2 paper.
Sm	2592 X 1944: Print on A4 paper.
■ME	1984 X 1488: Print on A5 paper.
2 <sub>M</sub>	1920 X 1080: Print on A5 paper in panorama ratio (16:9) or play back on an HDTV.
1 <sub>m</sub>	1024 X 768: Attach to an email.

#### Setting the video resolution

- 1 In Video Shooting mode, press [MENU].
- 2 Select Movie Size.
- 3 Select an option.

Icon	Description
HD	1280 X 720: HD files to play back on an HDTV.
VGA	640 X 480: SD files to play back on an analog TV.
QVGA	<b>320 X 240</b> : Post on a web page.
240 WEB	For Sharing: Post on a website using the wireless network (30 seconds maximum).

### Selecting an image quality

Set the photo and video quality settings. Higher image quality settings will result in larger file sizes.

#### Setting the photo quality

The camera compresses and saves the photos you capture in the JPEG format.

- 1 In Shooting mode, press [MENU].
- 2 Select Quality.
- 3 Select an option.

Icon	Description
	Super Fine: Capture photos in super high quality.
	Fine: Capture photos in high quality.
	Normal: Capture photos in normal quality.

#### Setting the video quality

The camera compresses and saves the videos you record in MP4 (H.264) format.

- 1 In Video Shooting mode, press [MENU].
- 2 Select Frame Rate.
- 3 Select an option.

	Description
30 <b>≠</b>	30 FPS: Record 30 frames per second.
15 <b>F</b>	15 FPS: Record 15 frames per second.

# Using the timer

Learn how to set the timer to delay shooting.

#### 1 In Shooting mode, press [3].



#### 2 Select an option.



Available options may differ depending on the shooting conditions.

#### 3 Press [Shutter] to start the timer.

- The AF-assist light/timer lamp blinks. The camera will automatically capture a photo after the specified time has elapsed.
- The front display will start a countdown before shooting.



- Press [Shutter] or [3] to cancel the timer.
- Depending on the Face Detection options you selected, the timer function may not be available.
- In some modes, you can also set the timer option by pressing [MENU], and then selecting Timer.

# Shooting in the dark

Learn how to capture photos at night or in low light conditions.

### Preventing red-eye

If the flash fires when you capture a photo of a person in the dark, a red glow may appear in the person's eyes. To prevent this, select Red-eye or Red-eye Fix. Refer to flash options in "Using the flash."








▲ After correction

#### Using the flash

Use the flash when you capture photos in the dark or when you need more light in your photos.

1 In Shooting mode, press [4].



2 Select an option.

	Description
<b>③</b>	The flash will not fire.     The camera will display the shake warning «♣» when you are shooting in low light.
SMART	<b>Auto</b> : The camera will select a proper flash setting for the scene it detects in Smart Auto mode.
<b>\$</b> <sup>R</sup>	<b>Auto</b> : The flash will fire automatically when the subject or background is dark.

#### Icon Description

#### Red-eye:



- The flash will fire twice when the subject or background is dark to reduce the red-eye effect.
- There is an interval between the 2 bursts of the flash.

  Do not move until the flash fires a second time.

#### Fill in:



- The flash always fires.
- · The camera automatically adjusts light intensity.

#### Slow Sync:

• The flash fires and the shutter stays open longer.





- This option is recommended when you want to capture more ambient light to reveal more details in the background.
- . Use a tripod to prevent your photos from blurring.
- The camera will display the shake warning (\(\mathbb{\mathbb{d}}\)) when you are shooting in low light.

#### Red-eye Fix:



- The flash fires twice when the subject or background is dark. The camera corrects red-eyes through its advanced software analysis.
- There is an interval between the 2 bursts of the flash.
   Do not move until the flash fires a second time.

Available options may differ depending on the shooting conditions.



- Flash options are not available if you set burst options or select Blink Detection.
- Make sure that your subjects are within the recommended distance from the flash. (p. 150)
- If light from the flash is reflected or there is a substantial amount of dust in the air, tiny spots may appear in your photo.
- In some modes, you can also set the flash option by pressing [MENU], and then selecting Flash.

### Adjusting the ISO sensitivity

The ISO sensitivity is the measure of a film's sensitivity to light as defined by the International Organization for Standardization (ISO). The higher ISO sensitivity you select, the more sensitive to light your camera becomes. Use a higher ISO sensitivity to capture better photos and reduce camera shake when not using the flash

- 1 In Shooting mode, press [MENU].
- 2 Select ISO.
- 3 Select an option.
  - Select to use an appropriate ISO sensitivity based on the brightness of the subject and lighting.



Higher ISO sensitivities may result in more image noise.

# Changing the camera's focus

Learn how to adjust the camera's focus to suit the subject and the shooting conditions.

#### Using macro

Use macro to capture close-up photos of subjects, such as flowers or insects.



- . Try to hold the camera firmly to prevent blurry photos.
- . Turn off the flash if the distance to the subject is less than 15.7 in. (40 cm).

In Shooting mode, press [\$\mathbb{T}\$].



Select an option.

Normal (AF): Focus on a subject farther than [80 cm] away. Farther than 98 in. (250 cm) away when you use the zoom.



Macro: Focus on a subject that is 2-32 in. (5-80 cm) from the camera. 39–98 in. (100–250 cm) when you use the zoom.

#### Auto Macro:



- · Focus on a subject farther than 2 in. (5 cm) away. Farther than 39 in. (100 cm) away when you use the zoom.
- · It is set automatically in some shooting modes.

Available options may differ depending on the shooting conditions.




In some modes, you can also set the focus option by pressing [MENU], and then selecting Focus.

#### Using tracking auto focus

Tracking AF allows you to track and auto focus on your subject, even when you are moving.

- 1 In Shooting mode, press [MENU].
- 2 Select Focus Area → Tracking AF.
- 3 Focus on the subject you want to track, and then press [0K].
  - A focus frame appears on the subject and follows the subject as you move the camera.



- The white frame means that your camera is tracking the subject.
- When you half-press [Shutter], the green frame means that your subject is in focus.
- 4 Press [Shutter] to capture the photo.



- If you do not select a focus area, the focus frame will appear in the center of the screen.
- . Tracking a subject may fail when:
  - the subject is too small
  - the subject moves excessively
  - the subject is backlit or you are shooting in a dark place
  - colors or patterns on the subject and the background are the same
  - the subject includes horizontal patterns, such as blinds
  - the camera shakes excessively
- When tracking a subject fails, the focus frame will appear as a white single-line frame (
  ).
- If the camera fails to track the subject, you must reselect the subject to track.
- If the camera fails to focus, the focus frame will change to a red single-line frame (

  ).
- If you use this function, you cannot set Face Detection options, Timer options, Burst options, and Intelli zoom.

### Adjusting the focus area

You can get clearer photos by selecting an appropriate focus area according to your subject's location in the scene.

- 1 In Shooting mode, press [MENU].
- 2 Select Focus Area.
- 3 Select an option.

Icon	Description
+	Center AF: Focus on the center of the frame (suitable when subjects are located at or near the center).
###	Multi AF: Focus on one or more of 9 possible areas.
$\Xi$	Tracking AF: Focus on and track the subject. (p. 68)

Available shooting options may differ depending on the shooting conditions.

# **Using Face Detection**

If you use Face Detection options, your camera can automatically detect a human face. When you focus on a human face, the camera adjusts the exposure automatically. Use **Blink Detection** to detect closed eyes or **Smile Shot** to capture a smilling face. You can also use **Smart Face Recognition** to register faces and prioritize the focus on them.



- When your camera detects a face, it tracks the detected face automatically.
- · Face Detection may not be effective when:
  - the subject is far from the camera (The focus frame will appear orange for Smile Shot and Blink Detection.)
  - it is too bright or too dark
  - the subject is not facing the camera
  - the subject is wearing sunglasses or a mask
  - the subject's facial expression changes drastically
  - the subject is backlit or the lighting conditions are unstable
- · Face Detection is not available when you set the Tracking AF.
- Depending on the shooting options you selected, available Face Detection options may differ.
- Depending on the Face Detection options you selected, the timer function may not be available.
- When you set Face Detection options, the AF area is automatically set to Multi AF.
- Depending on the Face Detection options you selected, Burst options may not be available.
- When you set Smart Face Recognition option and capture photos of detected faces, they will be registered in the face list.
- You can view registered faces in order of priority in Playback mode.
   (p. 86) Even though faces are registered successfully, they may not be classified in Playback mode.
- A face detected with Smart Face Recognition option may not appear in the face list or Smart Album.

#### **Detecting faces**

Your camera automatically detects up to 10 human faces in one scene.

- 1 In Shooting mode, press [MENU].
- 2 Select Face Detection → Normal.



The face nearest the camera or nearest the center of the scene appears in a white focus frame and the rest of the faces appear in gray focus frames.



The closer you are to the subjects, the quicker your camera will detect faces.

## Capturing a smile shot

The camera automatically releases the shutter when it detects a smiling face.

- 1 In Shooting mode, press [MENU].
- 2 Select Face Detection → Smile Shot.
- 3 Compose your shot.
  - The camera automatically releases the shutter when it detects a smiling face.





When your subject smiles broadly, your camera can detect the smile more easily.

## Detecting eye blinking

If your camera detects closed eyes, it will automatically capture 2 photos in succession.

- 1 In Shooting mode, press [MENU].
- 2 Select Face Detection → Blink Detection.







# Adjusting brightness and color

Learn how to adjust the brightness and color for better image quality.

### Adjusting the exposure manually (EV)

Depending on the intensity of the ambient light, your photos may be too bright or dark. In these cases, you can adjust the exposure to get a better photo.







▲ Darker (-)

▲ Neutral (0)

▲ Brighter (+)

- 1 In Shooting mode, press [MENU].
- 2 Select EV.

#### 3 Select a value to adjust the exposure.

. The photo will be brighter as the exposure value increases.



#### 4 Press [**0K**] to save your settings.



- Once you adjust the exposure, the setting will be stored automatically.
   You may need to change the exposure value later to avoid overexposure or underexposure.
- If you cannot decide on an appropriate exposure, select the AEB (Auto Exposure Bracket) option. The camera will capture 3 consecutive photos, each with a different exposure: normal, underexposed, and overexposed. (p. 78)

### Compensating for backlighting (ACB)

When the light source is behind your subject or there is high contrast between your subject and the background, your subject is likely to appear dark in the photo. In this case, set the Auto Contrast Balance (ACB) option.





▲ Without ACB

▲ With ACB

- 1 In Shooting mode, press [MENU].
- 2 Select ACB.
- 3 Select an option.

Icon	Description
<b>OFF</b>	Off: ACB (Auto Contrast Balance) is deactivated.
<b>₽</b>	On: ACB (Auto Contrast Balance) is activated.



- . The ACB feature is always on in Smart Auto mode.
- The ACB feature is not available when you set Burst options.

#### Changing the metering option

The metering mode refers to the way in which a camera measures the quantity of light. The brightness and lighting of your photos will vary depending on the metering mode you select.

- 1 In Shooting mode, press [MENU].
- 2 Select Metering.
- 3 Select an option.

Icon	Description
<b></b>	Multi:     Your camera divides the frame into several areas, and then measures the light intensity of each area.     Suitable for general photos.
•	Spot:  Your camera measures only the light intensity at the very center of the frame.  If a subject is not in the center of the frame, your photo may be improperly exposed.  Suitable for a subject with backlighting.
©	Center-weighted:     Your camera averages the meter reading of the entire frame with emphasis placed on the center.     Suitable for photos with subjects in the center of the frame.

## Selecting a White Balance setting

The color of your photo depends on the type and quality of the light source. If you want the color of your photo to be realistic, select a White Balance setting that is appropriate for the lighting conditions, such as Auto WB, Daylight, Cloudy, or Tungsten.









• Daylight



Cloudy

: Tungsten

- 1 In Shooting mode, press [MENU].
- 2 Select White Balance.
- 3 Select an option.

Icon	Description
AWB	<b>Auto WB</b> : Automatically set the White Balance based on the lighting conditions.
٠	Daylight: For outdoor photos on a sunny day.
<b>a</b> >	Cloudy: For outdoor photos on a cloudy day or in shadows.
1	Fluorescent_H: For shooting under a daylight fluorescent or 3-way fluorescent light.
***	Fluorescent_L: For shooting under white fluorescent light.
; <b>ф</b> ;	Tungsten: For shooting indoor photos under incandescent bulbs or halogen lamps.
	Custom Set: To use White Balance settings that you define. (p. 77)

#### Defining your own White Balance

You can customize the White Balance by capturing a photo of a white surface, such as a piece of paper, under the lighting conditions in which you intend to capture a photo. The White Balance feature will help you to match the colors in your photo with the actual scene.

- 1 In Shooting mode, press [MENU].
- 2 Select White Balance → Custom Set.
- 3 Aim the lens at a piece of white paper, and then press [Shutter].



## **Using burst modes**

It can be difficult to capture photos of fast-moving subjects or capture natural facial expressions and gestures of your subjects in photos. Also, it can be difficult to adjust the exposure correctly and select a proper light source. In these cases, select one of the burst modes.



- 1 In Shooting mode, press [MENU].
- 2 Select Drive.
- 3 Select an option.

Icon	Description
	Single: Capture a single photo.
	Continuous: While you are pressing [Shutter], the camera continuously captures photos. The maximum number of photos depends on the capacity of your memory card.

Icon	Description
<b>3</b>	Motion Capture: While you are pressing [Shutter], the camera captures VER photos (5 photos per second; maximum of 30 photos).
RED	AEB:     Capture 3 consecutive photos, each with a different exposure: normal, underexposed, and overexposed.     Use a tripod to prevent blurry photos.




- When you select Motion Capture, your camera will set the resolution to VGR and set the ISO sensitivity to Auto.
- . Depending on the Face Detection option you selected, some Burst options may not be available.

## **Adjusting images**

Adjust the sharpness, contrast, or saturation of your photos.

- 1 In Shooting mode, press [MENU].
- 2 Select Image Adjust.
- 3 Select an option.
  - Sharpness
  - Contrast
  - Saturation



4 Press [\$/\omega] to adjust each value.

Sharpness	Description
-	Soften the edges on your photos (suitable for editing the photos on your computer).
+	Sharpen the edges to improve the clarity of your photos. This may also increase the noise in your photos.

Contrast	Description
-	Decrease the color and brightness.
+	Increase the color and brightness.
Saturation	Description

	Description
-	Decrease the saturation.
+	Increase the saturation.

5 Press [**0K**] to save your settings.



Select 0 if you do not want to apply any effects (suitable for printing).

## Reducing the sound of the zoom

When you use the zoom while recording videos, the camera can record the sound of the zoom. Use the Sound Alive function to reduce the zoom noise.

- 1 In Video Shooting mode, press [MENU].
- 2 Select Voice.
- 3 Select an option.

Icon	Description
•	<b>Sound Alive On:</b> Turn on the Sound Alive function to reduce the zoom noise.
OFF	Sound Alive Off: Turn off the Sound Alive function. The camera can record the zoom noise.
<b>2</b>	Mute: Do not record sounds.
<i>(</i> 77)	Do not block the microphone when you use the Sound Alive



- Do not block the microphone when you use the Sound Aliv function.
- Recordings made with Sound Alive may differ from actual sounds.
- In Picture-in-Picture mode, you cannot set the Sound Alive options.

## Available shooting options by shooting mode

For details about shooting options, refer to "Shooting options".

	Smart Auto	Program	Smart Movie	Movie	Scene	Live Panorama	Picture in Picture	Self Shot	Children	Jump Shot	Beauty Shot
Resolution	0	0	0	0	0	Δ	$\triangle$	0	0	0	0
Quality	Δ	0	0	0	0	Δ	-	0	0	0	0
Timer	Δ	0	Δ	Δ	0	-	Δ	-	0	Δ	Δ
Flash	Δ	0	-	-	Δ	-	Δ	0	Δ	-	Δ
ISO sensitivity	-	0	-	-	-	-	-	-	-	-	-
Macro	Δ	0	Δ	0	Δ	-	-	Δ	-	-	Δ
Focus area	-	0	-	-	-	-	-	-	Δ	-	-
Face detection	Δ	0	-	-	Δ	-	-	Δ	Δ	-	Δ
EV	-	0	-	0	-	-	-	-	-	-	-
ACB	Δ	0	-	-	-	-	-	-	-	-	-
Metering	-	0	-	0	-	-	-	-	-	-	-
White balance	-	0	-	0	-	-	-	-	-	-	-
Drive	-	0	-	-	-	-	-	-	Δ	-	-
Image adjust	-	0	-	-	-	-	-	-	-	-	Δ
Sound Alive	-	-	0	0	-	-	-	-	-	-	-
Digital zoom	-	0	-	-	Δ	-	-	-	-	-	-
Intelli zoom	Δ	Δ	-	-	Δ	-	-	-	-	-	-
OIS	0	0	0	0	0	-	0	0	0	0	0

 $\Delta$ : In these modes, some options are limited or a certain option is set by default. O: The option is available in this mode.

	Intelligent Portrait	Night Shot	Close-up Shot	Magic Frame	Funny Face	Photo Filter	Movie Filter	Split Shot	Artistic Brush	Motion Photo
Resolution	0	0	0	Δ	0	Δ	Δ	Δ	Δ	Δ
Quality	0	0	0	0	0	0	Δ	0	0	Δ
Timer	Δ	0	0	Δ	0	0	Δ	Δ	Δ	Δ
Flash	Δ	Δ	-	Δ	Δ	Δ	-	Δ	Δ	-
ISO sensitivity	-	-	-	-	-	-	-	-	-	-
Macro	Δ	-	$\triangle$	-	-	-	Δ	-	-	Δ
Focus Area	-	-	-	-	-	-	-	-	-	-
Face detection	Δ	-	-	-	Δ	-	-	-	-	-
EV	-	-	-	-	-	-	-	-	-	-
ACB	-	-	-	-	-	-	-	-	-	-
Metering	-	-	-	-	-	-	-	-	-	-
White balance	-	-	-	-	-	-	-	-	-	-
Drive	-	-	-	-	-	-	-	-	-	-
Image adjust	-	-	-	-	-	Δ	-	Δ	Δ	-
Sound Alive	-	-	-	-	-	-	Δ	-	-	-
Digital zoom	-	-	-	-	-	-	-	-	-	-
Intelli zoom	-	-	-	-	-	-	-	-	-	-
OIS	0	0	0	-	0	0	0	0	0	0

 $<sup>\</sup>Delta$ : In these modes, some options are limited or a certain option is set by default. O: The option is available in this mode.

# Playback/Editing

Learn how to play back photos or videos, and edit photos or videos. Also, learn how to connect your camera to your computer, photo printer, or TV.

Viewing photos or videos in Playback
mode 78
Starting Playback mode
Viewing photos
Playing a video8
Editing a photo 8
Resizing photos8
Cropping portraits automatically8
Rotating a photo
Applying Smart Filter effects
Adjusting your photos
Viewing files on a TV

ransferring files to your Windows	
omputer	92
Transferring files with Intelli-studio	93
Transferring files by connecting the	
camera as a removable disk	95
Disconnecting the camera	
(for Windows XP)	96
ransferring files to your Mac computer	97

## Viewing photos or videos in Playback mode

Learn how to play back photos or videos and how to manage files.

## Starting Playback mode

View photos or play videos stored in your camera.

### 1 Press [▶].

- . The most recent file will be displayed.
- If the camera is off, it will turn on and display the most recent file

### 2 Press [4/8] to scroll through files.

• Press and hold [4/8)] to scroll through files quickly.



- If you want to view files stored in the internal memory, remove your memory card.
- You may not be able to edit or play back files that were captured with other cameras, due to unsupported sizes (image size, etc) or codecs.
   Use a computer or another device to edit or play back these files.

### Photo file information




Icon	
1/2	Current file/Total files
100-0001	Folder name-File name
GIF	GIF file
Оп	Protected file



To display file information on the screen, press [DISP].

### Video file information



lcon	Description
1/2	Current file/Total files
100-0002	Folder name-File name
00:00	Current playback time
00:50	Video length
Оп	Protected file




To display file information on the screen, press [DISP].

### Viewing files by category in Smart Album

View files by category, such as date, face, or file type.

- 1 In Playback mode, rotate [Zoom] to the left.
  - You can also access Smart Album by scrolling to <Album> on the Home screen, and then selecting ...
- 2 Press [MENU].
- 3 Select Filter → a category.



Icon	Description
ALL	All: View files normally.
12	Date: View files by the date they were saved.
•	Face List: View files by recognized faces and favorite faces. (Up to 20 people)
	File Type: View files by the file type.

- 4 Scroll to a desired list, and then press [OK] to open the list.
- 5 Scroll to a desired file, and then press [**0K**] to view the file.
- 6 Rotate [Zoom] to the left to return to the previous view.

It may take some time for the camera to open Smart Album, change the category, or reorganize files.

#### Viewing files as thumbnails

Scan thumbnails of files.



In Playback mode, rotate [Zoom] to the left to view thumbnails (12 at a time). Rotate [Zoom] to the left once more to display more thumbnails (24 at a time). Rotate [Zoom] to the right to return to the previous view.



You can also view files as thumbnails by scrolling to <Album>
on the Home screen, and then selecting

Press [DISP/\$/\$/\overline{\displaystyle j}] to scroll through files.

### Protecting files

Protect your files from accidental deletion.

- 1 In Playback mode, press [MENU].
- 2 Select Protect → On.



You cannot delete or rotate a protected file.

#### Deleting files

Select files to delete in Playback mode.

### Deleting a single file

You can select one file, and then delete it.

- 1 In Playback mode, select a file, and then press [4].
- 2 When the pop-up message appears, select **Yes**.



You can also delete files in Playback mode by pressing [MENU], and then selecting  $Delete \to Delete \to Yes$ .

#### Deleting multiple files

You can select multiple files, and then delete them at once.

- 1 In Playback mode, press [备].
  - When in thumbnails view, press [MENU], select
     Delete → Select, and then skip to step 3, or press [46],
     select Select, and then skip to step 3.
- When the pop-up message appears, select Multiple Delete.
- 3 Scroll to each file you want to delete, and then press [0K].
  - Press  $[\mathbf{0K}]$  again to cancel your selection.
- 4 Press [☆].
- 5 When the pop-up message appears, select Yes.

#### Deleting all files

You can select all files, and then delete them at once.

- 1 In Playback mode, press [MENU].
  - When in thumbnails view, press [MENU], select
     Delete → Delete All, and then skip to step 3, or press [46], select Delete All, and then skip to step 3.
- 2 Select Delete → Delete All.
- 3 When the pop-up message appears, select Yes.
  - · All unprotected files are deleted.

### Copying files to a memory card

Copy files from the internal memory to a memory card.

- 1 In Playback mode, press [MENU].
- 2 Select Copy to Card.


## Viewing photos

Enlarge part of a photo or view photos as a slide show.

### Enlarging a photo



In Playback mode, rotate [Zoom] to the right to enlarge a portion of the photo. Rotate [Zoom] to the left to zoom out.



То	Description
Move the enlarged area	Press [DISP/♥/\$/③].
Trim the enlarged photo	Press [ <b>OK</b> ], and then select <b>Yes</b> . (The trimmed photo will be saved as a new file. The original photo is retained in its original form.)



When you view photos that were captured by another camera, the zoom ratio may differ.

### Viewing panoramic photos

View photos captured in Live Panorama mode.

- In Playback mode, press [4/8] to scroll to a desired panoramic photo.
  - The entire panoramic photo appears on the screen.

## 2 Press [**0K**].

- The camera automatically scrolls through the photo from left to right for a horizontal panoramic photo and from top to bottom for a vertical panoramic photo. The camera then switches to Playback mode.
- While playing back a panoramic photo, press [OK] to pause or resume.
- After you have paused the playback of a panoramic photo, press [DISP/#/\$/\$) to move the photo horizontally or vertically, depending on the direction you moved when capturing the photo.
- 3 Press [MENU] to return to Playback mode.



The camera automatically scrolls through the panoramic photo only if the longest side of the photo is two or more times longer than the shortest side.

### Viewing animated photos

View animated GIF files repeatedly that were captured in Motion Photo mode or Jump Shot mode.

- 1 In Playback mode, press [4/3] to scroll to a desired GIF file.
- 2 Press [**0K**].
  - · The GIF file plays back repeatedly.
- 3 Press [OK] to return to Playback mode.

#### Playing a slide show

Apply effects and audio to a slide show of your photos. The slide show function does not work for videos and GIF files.

- 1 In Playback mode, press [MENU].
- 2 Select Slide Show Options.
- 3 Select a slide show effect option.
  - · Skip to step 4 to start a slide show with no effects.

\* Default

Option	Description
Play Mode	Set whether or not to repeat the slide show. (One Play*, Repeat)
Interval	Set the interval between photos. (1 sec*, 3 sec, 5 sec, 10 sec) You must set the Effect option to Off to set the interval.
Music	Set background audio.
Effect	Set a scene change effect between photos. (Off, Calm*, Shine, Relax, Lively, Sweet) Select Off to cancel effects. When you use the Effect option, the interval between photos will be set to 1 second.

- 4 Press [MENU].
- 5 Select Start Slide Show.
- 6 View the slide show.
  - · Press [OK] to pause the slide show.
  - . Press [OK] again to resume the slide show.



- Press [0K], and then press [歩/む] to stop the slide show and return to Playback mode.
- Rotate [Zoom] to the left or right to adjust the volume level.

## Playing a video

In Playback mode, you can view a video, and then capture or trim parts of the playing video. You can save the captured or trimmed segments as new files.

- 1 In Playback mode, select a video, and then press [**0K**].
- 2 View the video.



То	
Scan backward	Press [4]. Each time you press [4], you change the scan speed in this order: 2X, 4X, 8X.
Pause or resume playback	Press [OK].
Scan forward	Press [3]. Each time you press [3], you change the scan speed in this order: 2X, 4X, 8X.
Adjust the volume level	Rotate [Zoom] to the left or right.

### Trimming a video

- 1 In Playback mode, select a video, and then press [MENU].
- 2 Select Trim Movie.
- 3 Press [0K] to start playing the video.
- 4 Press [OK] → [♥] at the point where you want the trimming to begin.
- 5 Press [**0K**] to resume playing the video.
- 6 Press [OK] → [♥] at the point where you want the trimming to end.
- 7 Press [ ] to trim.
- 8 When the pop-up message appears, select **Yes**.



- . The original video should be at least 10 seconds long.
- The camera will save the edited video as a new file and leave the original video intact.

### Capturing an image from video

- 1 While viewing a video, press [OK] at the point where you want to capture an image.
- 2 Press [♣].



- The resolution of the captured image will be the same as the original video.
- . The captured image is saved as a new file.

## **Editing a photo**

Learn how to edit photos.



- . The camera will save edited photos as new files.
- When you edit photos, the camera will automatically convert them to a lower resolution. Photos that you rotate or resize manually are not automatically converted to
  a lower resolution.

## Resizing photos

Change the size of a photo and save it as a new file.

- 1 In Playback mode, select a photo, and then press [MENU].
- 2 Select Resize.
- 3 Select an option.





- Available resize options differ depending on the original size of the photo.
- You may not be able to resize photos created with the Intelligent Portrait feature.

## Cropping portraits automatically

Extract and save close-up portraits from landscape shots.

- 1 In Playback mode, select a photo, and then press [MENU].
- 2 Select Intelligent Portrait.
  - The camera detects the face of a subject, crops the photo around the face, and then saves 2 cropped photos under consecutive file names.







The Intelligent Portrait feature will not function if:

- no face is detected
- more than 2 faces are detected
- the detected facial area is larger than a certain ratio

## Rotating a photo

- 1 On the Home screen, scroll to < Album>.
- 2 Select .
- 3 Rotate [Zoom] to the left, and then select a photo.
- 4 Select Rotate → an option.
- 5 Press [♣] to save.





- . The camera will overwrite the original file.
- In Playback mode, press [MENU], and then select Rotate to rotate a photo.

## Applying Smart Filter effects

Apply special effects to your photos.

- 1 On the Home screen, scroll to < Album>.
- 2 Select 3.
- 3 Rotate [Zoom] to the left, and then select a photo.
- 4 Select Smart Filter → an option.



Option	Description
Normal	No effect
Miniature	Apply a tilt-shift effect to make the subject appear in miniature.
Vignetting	Apply the retro-looking colors, high contrast, and strong vignette effect of Lomo cameras.

Option	Description
Ink Painting	Apply a watercolor painting effect.
Oil Painting	Apply an oil painting effect.
Cartoon	Apply a cartoon painting effect.
Cross Filter	Add lines that radiate outward from bright objects to imitate the visual effect of a cross filter.
Sketch	Apply a pen sketch effect.
Soft Focus	Hide facial imperfections or apply dreamy effects.
Fish-eye	Distort close objects to imitate the visual effect of a fisheye lens.
Old Film	Apply a vintage film effect.
Half Tone Dot	Apply a halftone effect.
Classic	Apply a black and white effect.
Retro	Apply a sepia tone effect.
Zooming Shot	Blur the edges of a photo to emphasize the subjects in the center.

5 Press [ to save.

## Adjusting your photos

Learn how to adjust the brightness, contrast, or saturation or how to correct the red-eye effect. If the center of a photo is dark, you can adjust it to be brighter. The camera will save an edited photo as a new file, but may convert it to a lower resolution.



- You can adjust brightness, contrast, and saturation and apply Smart Filter effects at the same time.
- You cannot apply the ACB, Face Retouch, and Red-eye Fix effects at the same time.

#### Adjusting brightness, contrast, or saturation

- 1 On the Home screen, scroll to <Album>.
- Select 2
- 3 Rotate [Zoom] to the left, and then select a photo.
- 4 Select an adjusting option.

Icon	Description
•	Brightness
•	Contrast
*	Saturation

- 5 Press [\$/\omega] to adjust the option.
- 6 Press [0K].
- 7 Press [ ] to save.

### Adjusting dark subjects (ACB)

- 1 On the Home screen, scroll to < Album>.
- Select 6
- 3 Rotate [Zoom] to the left, and then select a photo.
- 4 Select ACB.
- 5 Press [ to save.

## Retouching faces

- 1 On the Home screen, scroll to < Album>.
- 2 Select ...
- 3 Rotate [Zoom] to the left, and then select a photo.
- 4 Select Face Retouch.
- 5 Press [4/3) to adjust the option.
  - As the number increases, the skin tone becomes brighter and smoother.
- 6 Press [ to save.

### Removing red-eye

- 1 On the Home screen, scroll to < Album>.
- Select 2
- 3 Rotate [Zoom] to the left, and then select a photo.
- 4 Select Red-eye Fix.
- 5 Press [ to save.

## Viewing files on a TV

Play back photos or videos by connecting your camera to a TV with the AV cable.

- 1 On the Home screen, scroll to **<Basic>**.
- 2 Select .
- 3 Select Connectivity → Video Out.
- 4 Select the video signal output for your country or region. (p. 131)
- 5 Turn off your camera and TV.
- 6 Connect your camera to your TV with the A/V cable.



- 7 Turn on your TV, and then select the A/V video source with the TV remote control.
- 8 Turn on your camera.
  - The camera automatically enters into Playback mode when you connect it to a TV.
- 9 View photos or play videos using the camera buttons.



- Depending on the TV model, you may see some digital noise or part of an image may not appear.
- Images may not be centered on the TV screen depending on your TV settings.

## **Transferring files to your Windows computer**

Transfer files to your Windows computer, edit them with Intelli-studio, and upload them to the web.

#### Requirements

Item	Requirements		
CPU	Intel® Pentium®4 3.2 GHz or higher/ AMD Athlon™ FX 2.6 GHz or higher		
RAM	Minimum 512 MB RAM (1 GB or more recommended)		
OS*	Windows XP SP2, Windows Vista, or Windows 7		
Hard disk capacity	250 MB or more (1 GB and above recommended)		
Others	CD-ROM drive  1024 X 768 pixels, 16-bit color display compatible monitor (1280 X 1024 pixels, 32-bit color display recommended)  USB 2.0 port  NIDIA Geforce 7600GT or higher/ ATI X1600 series or higher  Microsoft DirectX 9.0c or higher		

<sup>\*</sup> A 32-bit version of Intelli-studio will be installed—even on 64-bit editions of Windows XP, Windows Vista, and Windows 7.



- The requirements are recommendation only. Intelli-studio may not work
  properly even when the computer meets the requirements, depending
  on the condition of your computer.
- If your computer does not meet the requirements, videos may not play correctly or it may take longer to edit videos.
- Install DirectX 9.0c or later before you use Intelli-studio.
- Your computer must be running Windows XP, Windows Vista, or Windows 7 for you to connect the camera as a removable disk.



The manufacturer is not responsible for any damage that results from using unqualified computers such as a computer you assembled yourself.

## Transferring files with Intelli-studio

You can download Intelli-studio from the linked webpage and install it on your computer. When you connect the camera to a computer with Intelli-studio installed, the program will launch automatically.




The battery will charge while the camera is connected to a computer with the LISR cable

- 1 On the Home screen, scroll to **<Basic>**.
- 2 Select .
- 3 Select Connectivity → PC Software → On.
- 4 Turn off the camera.
- 5 Connect the camera to your computer with the USB cable.



You must plug the small end of the USB cable into your camera. If the cable is reversed, it may damage your files. The manufacturer is not responsible for any loss of data.



#### 6 Turn on the camera.

- When the Intelli-studio installation pop-up appears on the computer screen, follow the on-screen instructions to complete the installation.
- Once the Intelli-studio is installed on your computer, the computer recognizes the camera and launches the Intelli-studio automatically.



If you set the USB option to **Select Mode**, select **Computer** in the pop-up window.

- 7 Select a destination folder on your computer, and then select Yes.
  - New files stored on the camera will automatically transfer to the selected folder.
  - If your camera has no new files, the pop-up window for saving new files will not appear.



For Windows Vista and Windows 7, select **Run iLinker.exe** from the Auto Play window to start Intelli-studio. If **Run iLinker.exe** does not appear on the computer, click **69** — **Computer** — **Intelli-studio**, and then follow the on-screen instructions to complete the Intelli-studio installation.

### Using Intelli-studio

Intelli-studio allows you to play back and edit files. For details, select  $\mathbf{Help} \to \mathbf{Help}$  from the program toolbar.



- You can update the firmware of your camera by selecting Web Support → Upgrade firmware for the connected device from the program toolbar.
- · You can download short animations for use in Children mode.
- You cannot edit files directly on the camera. Transfer files to a folder on your computer before editing.
- · Intelli-studio supports the following formats:
  - Videos: MP4 (Video: H.264, Audio: AAC), WMV (WMV 7/8/9), AVI (MJPEG)
  - Photos: JPG, GIF, BMP, PNG, TIFF



	Description
0	Open menus.
2	Display files in the selected folder.
3	Switch to the Photo edit mode.
4	Switch to the Video edit mode.
6	Switch to the Sharing mode (to send files by email or upload files to websites, such as Flickr or YouTube).
6	Download short animations for use in Children mode.
7	Enlarge or reduce the thumbnails in the list.
8	Select a file type.
9	View files in the selected folder on your computer.
10	Show or hide files on the connected camera.
•	View files in the selected folder on the camera.
<b>1</b>	View files as thumbnails or on a map.
B	Browse folders stored on the camera.
14	Browse folders stored on your computer.
<b>1</b> 5	Move to the previous or next folder.
16	Print files, view files on a map, store files in My Folder, or register faces.

# Transferring files by connecting the camera as a removable disk

Connect the camera to your computer as a removable disk.

- 1 On the Home screen, scroll to <Basic>.
- 2 Select .
- 3 Select Connectivity → PC Software → Off.
- 4 Turn off the camera.
- 5 Connect the camera to your computer with the USB cable.



You must plug the small end of the USB cable into your camera. If the cable is reversed, it may damage your files. The manufacturer is not responsible for any loss of data.



- 6 Turn on the camera.
  - · The computer recognizes the camera automatically.



If you set the USB option to **Select Mode**, select **Computer** in the pop-up window.

- 7 On your computer, select My Computer → Removable Disk → DCIM → 100PHOTO.
- 8 Drag or save files to your computer.

## Disconnecting the camera (for Windows XP)

With Windows Vista and Windows 7, the methods for disconnecting the camera are similar.

- 1 Verify that the status lamp is not blinking.
  - The status lamp blinks when transferring files. Wait until it stops.
- 2 Click on the tool bar at the bottom right of your computer screen.



- 3 Click the pop-up message.
- 4 Click the message box that indicates the camera can be removed safely.
- 5 Remove the USB cable.



The camera may not disconnect safely while Intelli-studio is running. End the program before disconnecting the camera.

## Transferring files to your Mac computer

When you connect the camera to a Macintosh computer, the computer will automatically recognize the device. You can transfer files directly from the camera to the computer without installing any programs.



Mac OS 10.4 or later is supported.

1 Connect your camera to a Macintosh computer with the USB cable.



You must plug the small end of the USB cable into your camera. If the cable is reversed, it may damage your files. The manufacturer is not responsible for any loss of data.



- 2 Turn on the camera.
  - The computer recognizes the camera automatically and displays a removable disk icon.



If you set the USB option to **Select Mode**, select **Computer** in the pop-up window.

- 3 Double-click the removable disk icon.
- 4 Drag or save files to your computer.

# Wireless network

Learn to connect to wireless local area networks (WLANs) and use functions.

Connecting to a WLAN and configuring	
network settings	. 99
Connecting to a WLAN	99
Using the login browser	100
Network connection tips	101
Entering text	102
Sending photos or videos to a smart	
phone	103
Using a smart phone as a remote shutter	
release	104
Using photo or video sharing	
websites	106
Accessing a website	106
Uploading photos or videos	106
Sending photos or videos via email	108
Changing email settings	108
Sending photos or videos via email	109

Using Auto Backup to send photos or	
videos	111
Installing the program for Auto Backup	
on your PC	111
Sending photos or videos to a PC	111
Viewing photos or videos on a TV	
Link-enabled TV	113
Sending photos using Wi-Fi Direct	115
About the Wake on LAN (WOL)	
feature	116

## Connecting to a WLAN and configuring network settings

Learn to connect via an access point (AP) when you are in a range of a WLAN. You can also configure network settings.

## Connecting to a WLAN

- 1 On the Home screen, scroll to <Wi-Fi>.
- 2 Select 🌎, 🖲, 🥎, 🗾, or 🛂.
- 3 Press [MENU], and then select Wi-Fi Setting.
  - In some modes, press [MENU] or follow the on-screen instructions until the Wi-Fi Setting screen appears.
  - The camera automatically searches for available AP devices.
- 4 Select an AP.



- · Select WPS PBC to connect to a WPS AP.
- · Select Refresh to refresh connectable APs.
- · Select Add wireless network to add an AP manually.



- When you select a secured AP, a pop-up window appears.
   Enter the required passwords to connect to the WLAN. For information about entering text, refer to "Entering text". (p. 111)
- When a login page appears, refer to "Using the login browser".
   (p. 109)
- When you select an unsecured AP, the camera will connect to the WI AN.
- If you select a WPS profile supported AP, select WPS PIN, and then enter a PIN on the AP device. You can also connect to a WPS profile supported AP by selecting WPS PBC on the camera, and then pushing the WPS button on the AP device.

#### Setting network options

- 1 In the Wi-Fi Setting screen, move to an AP, and then press [ல].
- 2 Select each option, and then enter the required information.

Option	Description
Authentication	Select a network authentication type.
Data Encryption	Select an encryption type.
Network Password	Enter the network password.
IP Setting	Set the IP address manually.

#### Manually setting the IP address

- 1 In the Wi-Fi Setting screen, move to an AP, and then press [3].
- 2 Select IP Setting → Manual.
- 3 Select each option, and then enter the required information.

Option	Description
IP	Enter the static IP address.
Subnet Mask	Enter the subnet mask.
Gateway	Enter the gateway.
DNS Server	Enter the DNS address.

## Using the login browser

You can enter your login information via the login browser when connecting to some APs, sharing sites, or cloud servers.

Button	Description
[DISP/\$/♦/ॐ]	Move to an item or scroll the page.
[OK]	Select an item.
[MENU]	Access the following options:  Previous Page: Move to the previous page.  Next Page: Move to the next page.  Reload: Reload the page.  Stop: Stop loading the page.  Exit: Close the login browser.
[备]	Close the login browser.



- You cannot select some items depending on the page you connected to. This does not indicate a malfunction.
- The login browser may not close automatically after you log into some pages. If this occurs, close the login browser by pressing [4], and then proceed with the desired operation.
- It may take longer to load the login page due to the page size or network speed. If this occurs, wait until the login information input window appears.

## Network connection tips

- The quality of the network connection will be determined by the AP.
- The further the distance between your camera and the AP, the longer it will take to connect to the network.
- If a nearby device is using the same radio frequency signal as your camera, it may interrupt your connection.
- If your AP name is not in English, the camera may not be able to locate the device or the name may appear incorrectly.
- For network settings or a password, contact your network administrator or network service provider.
- If a WLAN requires authentication from the service provider, you may not be able to connect to it. To connect the WLAN, contact your network service provider.
- Depending on the encryption type, the number of digits in the password may differ.
- A WLAN connection may not be possible in all surroundings.
- The camera may display a WLAN enabled printer on the AP List. You cannot connect to a network via a printer.
- You cannot connect your camera to a network and a TV simultaneously. Also, you cannot view photos or videos on a TV while connected to a network.
- Connecting to a network may incur additional charges. Costs will vary based on the conditions of your contract.

- If you cannot connect to a WLAN, try another AP from the available AP list.
- You can also connect to free WLANs in some foreign countries.
- A login page may appear when you select free WLANs provided by some network service providers. Enter your ID and password to connect to the WLAN. For information about registering or the service, contact the network service providers.
- Be cautious when you enter personal information for an AP connection. Do not enter any payment or credit card information on your camera. The manufacturer is not liable for any problem caused by entering such information.
- · Available network connections may differ by country.
- The WLAN feature of your camera must comply with radio transmission laws in your region. To ensure compliance, use the WLAN feature only in the country where you purchased the camera.
- The process for adjusting network settings may differ, depending on network conditions.
- Do not access a network that you are not authorized to use.
- Before you connect to a network, ensure your battery is fully charged.
- When a DHCP server is not available you must make an autoip.
   txt file and copy it to the inserted memory card to connect to the network using Auto IP.

## **Entering text**

Learn how to enter text. The icons in the table below let you move the cursor, change the case, etc. Press  $[DISP/\sqrt[4]{5}]$  to move to a desired key, and then press [OK] to enter the key.



Icon	Description
<b>←</b>	Delete the last letter.
<b>♦</b>	Move the cursor.
1	In ABC mode, change the case.
.com	Enter ".com".

	Description
!@#/ABC	Switch between Symbol mode and ABC mode.
П	Enter a space.
Done	Save the displayed text.
?	View the entering text guide.



- You can use only the English alphabet, regardless of the display language.
- To move to **Done** directly, press [].
- You can enter up to 64 characters.

## Sending photos or videos to a smart phone

The camera connects to a smart phone that supports the MobileLink feature via a WLAN. You can easily send photos or videos to your smart phone.



- The MobileLink feature is supported by Galaxy S smart phones with the Android 2.2 OS or higher. If your smart phone uses the Android 2.1 OS, upgrade your
  smart phone to Android 2.2 or higher. This feature is also supported by the 7 and 10.1 inch Galaxy Tab. This feature may be supported by other devices with
  Android 2.2 or higher, but Samsung makes no guarantee of its functionality.
- You should install the Samsung MobileLink application on your phone or device before using this feature. You can download the application from Samsung Apps or Android market.
- . When there are no files in the camera memory, you cannot use this feature.
- You can view up to 1,000 files and send up to 100 files at a time.
- 1 On the camera's Home screen, scroll to <Wi-Fi>.
- 2 On the camera, select
  - If the pop-up message that prompts you to download the application appears, select OK.
- 3 On the smart phone, turn on the Samsung MobileLink application.
  - Read the on-screen instructions carefully to select and connect to your camera.
  - · The smart phone can connect to only one camera at a time.
- 4 On the camera, select **OK**.

- 5 On the smart phone, select files to send from the camera to the smart phone.
- 6 On the smart phone, select Copy.
  - The camera will send the files.

## Using a smart phone as a remote shutter release

The camera connects to a smart phone via a WLAN. Use the smart phone as a remote shutter release with the Remote Viewfinder feature. The captured photo will display on the smart phone.



- The Remote Viewfinder feature is supported by Galaxy S smart phones with the Android 2.2 OS or higher. If your smart phone uses the Android 2.1 OS, upgrade
  your smart phone to Android 2.2 or higher. This feature is also supported by the 7 and 10.1 inch Galaxy Tab. This feature may be supported by other devices with
  Android 2.2 or higher, but Samsung makes no guarantee of its functionality.
- You should install the Remote Viewfinder application on your phone or device before using this feature. You can download the application from Samsung Apps or Android market.
- 1 On the camera's Home screen, scroll to **Wi-Fi>**.
- 2 On the camera, select 2.
  - If the pop-up message that prompts you to download the application appears, select OK.
- 3 On the smart phone, turn on the Remote Viewfinder application.
  - Read the on-screen instructions carefully to select and connect to your camera.
  - . The smart phone can connect to only one camera at a time.

4 On the smart phone, set the following shooting options.

Icon	Description
<b>4</b> <sup>8</sup>	Flash option
€0FF	Timer option
12m	Photo size

- While using this feature, some buttons are not available on your camera.
- The zoom button and the shutter button on your smart phone will not function when using this feature.
- Remote Viewfinder mode supports the and photo sizes only.

- 5 On the smart phone, touch and hold to focus.
  - . The focus is automatically set to multi-AF.
- 6 Release to capture the photo.
  - . The photo will be saved in your camera.
  - . Touch the photo in the bottom of the screen to save it to the smart phone. The photo will be resized to 640 X 360.



- When you use this feature, the ideal distance between the camera and the smart phone may vary, depending on your surroundings.
  - The smart phone must be within 23 ft/7 m of the camera to use this
  - It will take some time to capture the photo after you release on the smart phone.
  - The Remote Viewfinder function will deactivate when:
    - there is an incoming call on the smart phone
    - either the camera or the smart phone turn off
    - the memory is full
    - either device loses its connection to the WLAN
    - the Wi-Fi connection is poor or unstable

## Using photo or video sharing websites

Upload your photos or videos to file sharing websites. Available websites will be displayed on your camera.

## Accessing a website

- 1 On the Home screen, scroll to **<Wi-Fi>**.
- 2 Select 
  .
- 3 Select a website.
  - The camera will automatically attempt to connect to a WLAN via the most recently connected AP device.
  - If the camera has not previously been connected to a WLAN, it will search for available AP devices. (p. 108)
- 4 Enter your ID and password, and then select Login.
  - For information about entering text, refer to "Entering text".
     (p. 111)
  - To select an ID from the list, select ▼ → an ID.
  - If you have previously logged in to the website, you may be logged in automatically.



You must have an existing account on the file sharing website to use this feature.

## Uploading photos or videos

- 1 Access the website with your camera.
- 2 Scroll to the files you want to upload, and then press [0K].
  - You can select up to 20 files. The total size must be 10 MB or less.
- 3 Select Upload.
  - If you connected to Facebook, select Upload → Upload.
  - If you connected to Facebook, you can enter your comments by selecting the Comment box. For information about entering text, refer to "Entering text". (p. 111)



- The maximum photo resolution you can upload is 2M, and the longest video you can upload is 30 seconds at OVER resolution or a video recorded using 240. If the selected photo resolution is higher than 2M, it will be automatically resized to a lower resolution.
  - . The method of uploading photos or videos may differ depending on the selected website.
  - . If you cannot access a website because of firewall or user authentication settings, contact your network administrator or network service provider.
  - . Uploaded photos or videos may be automatically titled with the date they were captured.
  - The speed of your internet connection may affect how quickly photos upload or web pages open.
  - . When there are no files in the camera memory, you cannot use this feature.
  - . You can also upload photos or videos to file sharing websites in Playback mode by pressing [MENU], and then selecting Share(Wi-Fi) → a desired website.

# Sending photos or videos via email


You can change settings in the email menu, and send photos or videos stored on the camera via email.

## Changing email settings

In the email menu, you can change settings for storing your information. You can also set or change the email password. For information about entering text, refer to "Entering text". (p. 111)

#### Storing your information

- 1 On the Home screen, scroll to <Wi-Fi>.
- 2 Select o.
- 3 Press [MENU].
- 4 Select Sender Setting.
- 5 Select the Name box, enter your name, and then select Done.



- 6 Select the Email box, enter your email address, and then select Done.
- 7 Select **OK** to save your changes.
  - To delete your information, select Reset.

#### Setting an email password

- 1 On the Home screen, scroll to **<Wi-Fi>**.
- 2 Select .
- 3 Press [MENU].
- 4 Select Setting Password → On.
  - . To deactivate the password, select Off.
- 5 When the pop-up appears, press [0K].
  - The pop-up disappears automatically even if you do not press [0K].
- 6 Enter a 4-digit password.
- 7 Enter the password again.
- 8 When the pop-up appears, press [OK].
  - The pop-up disappears automatically even if you do not press [OK].



If you lost your password, you can reset it by selecting Reset on the password setting screen. When you reset the information, previously saved user's setting information, email address, and recently sent email list will be deleted.

#### Changing the email password

- 1 On the Home screen, scroll to **Wi-Fi>**.
- 2 Select .
- .3 Press [MENU].
- 4 Select Change Password.
- 5 Enter your current 4-digit password.
- 6 Enter a new 4-digit password.
- 7 Enter the new password again.
- 8 When the pop-up appears, press [0K].
  - The pop-up disappears automatically even if you do not press [OK].

## Sending photos or videos via email

You can send photos or videos stored on the camera via email. For information about entering text, refer to "Entering text". (p. 111)

- 1 On the Home screen, scroll to <Wi-Fi>.
- 2 Select .
- 3 Select the Name(Email) box, enter your email address. and then select **Done** 
  - · If you have previously saved your information, it will be inserted automatically. (p. 117)
  - . To use an address from the list of previous senders, select → an address.
- 4 Select the **Receiver** box, enter an email address, and then select Done.
  - To use an address from the list of previous recipients, select → an address
  - Select + to add additional recipients. You can input up to 30 recipients.
  - Select X to delete an address from the list.
- 5 Select Next.

- 6 Scroll to files to send, and then press [OK].
  - You can select up to 20 files. The total size must be 10 MB or less.
- 7 Select Next.
- 8 Select the Comment box, enter your comments, and then select Done.
- 9 Select Send.
  - The camera will automatically attempt to connect to a WLAN via the most recently connected AP device and send the email.
  - If the camera has not previously been connected to a WLAN, it will search for available AP devices. (p. 108)



- Even if a photo appears to have transferred successfully, errors with the recipient's email account may cause the photo to be rejected or recognized as spam.
- You may not be able to send an email if no network connection is available or if your email account settings are incorrect.
- The maximum photo resolution you can send is 2M and the longest video you can upload is 30 seconds at OVER resolution or a video recorded using 2.1%. If the selected photo resolution is higher than 2M, it will be automatically resized to a lower resolution.
- If you cannot send an email because of firewall or user authentication settings, contact your network administrator or network service provider.
- When there are no files in the camera memory, you cannot use this
- You can also send an email in Playback mode by pressing [MENU], and then selecting Share(Wi-Fi) 

  Email.

# Using Auto Backup to send photos or videos

You can send photos or videos that you captured with the camera to a PC wirelessly. The Auto Backup feature works only with the Windows OS.

# Installing the program for Auto Backup on your PC

- 1 Install Intelli-studio on the PC. (p. 101)
- 2 Connect the camera to the PC with the USB cable.
- 3 Click **OK** on the pop-up window.
  - The Auto Backup program is installed on the PC.
    Follow the on-screen instructions to complete the installation.
- 4 Remove the USB cable.
- 5 Connect the camera to the PC again with the USB cable.
  - The camera stores information about the PC, so that the camera can send files to the PC.



Before installing the program, ensure that the PC is connected to a network. If no internet connection is available, you must install the program from the provided CD.

## Sending photos or videos to a PC

- 1 On the camera's Home screen, scroll to <Wi-Fi>.
- 2 Select **E**.
  - You must configure the backup PC information to use the Auto Backup feature. For more details, refer to "Installing the program for Auto Backup on your PC". (p. 121)
- 3 Press [MENU] to set options.
  - To turn off your PC automatically after the transfer is complete, select Shut down PC after backup → On.
- 4 Press [OK] to start the backup.
  - To cancel sending, press [OK].
  - You cannot select individual files to backup. This function backs up only new files on the camera.
  - The backup's progress will be shown on the PC monitor.
  - When the transfer is completed, the camera will turn off automatically in approximately 30 seconds. Select Cancel to return to the previous screen and prevent the camera from turning off automatically.




- If the PC supports the Wake on LAN (WOL) feature, you can turn on the PC automatically by searching for the PC from your camera. (p. 126)
  - . When you connect the camera to the WLAN, select the AP that is connected to the PC.
  - The camera will search for available access points even if you are connecting to the same access point again.
  - . If you turn off the camera or remove the battery while sending files, the file transfer will be interrupted.
  - . While you are using this feature, only [POWER] is available on your camera.
  - . You can connect only one camera to the PC at a time for sending files.
  - . The backup may be canceled due to network conditions.
  - . Photos or videos can be sent to a PC one time only. Files cannot be sent again even if you reconnect your camera to another PC.
  - . When there are no files in the camera memory, you cannot use this feature.
  - · You must turn off Windows Firewall and any other firewalls before using this feature.
  - . You can send up to 1,000 files.
  - On the PC software, the server name must be entered in the Latin alphabet and can contain no more than 48 characters.
  - . When multiple file types are created at once, only the image files (JPG) will be sent to the PC with this feature.

# Viewing photos or videos on a TV Link-enabled TV

TV Link is a technology for sharing media files between a camera and TV connected to the same AP device. With this technology, you can view your photos or videos on a widescreen TV.

- 1 On the Home screen, scroll to <Wi-Fi>.
- 2 Select N
  - If the guide message appears, press [OK].
  - The camera will automatically attempt to connect to a WLAN via the most recently connected AP device.
  - If the camera has not previously been connected to a WLAN, it will search for available AP devices. (p. 108)
- 3 Connect your TV to a wireless network via an AP device.
  - · Refer to your TV's user manual for more information.

- 4 On the TV, search for the camera and browse the shared photos or videos.
  - For information about searching for the camera and browsing the photos or videos on the TV, refer to the TV user manual.
  - Videos may not play smoothly depending on the type of TV or network condition. If this happens, re-record the video in VGA or OVGA quality and play it again. If videos do not play smoothly on your TV over the wireless connection, try connecting the camera to the TV with an AVV cable.

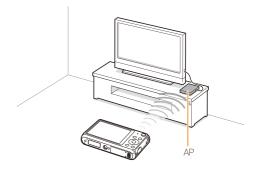



- You can share up to 1,000 photos or videos.
  - . On a TV screen, you can view only photos or videos captured with your camera.
  - . The range of the wireless connection between your camera and a TV may vary depending on the specifications of the AP.
  - If the camera is connected to 2 TVs, playback may be slower.
  - · Photos or videos will be shared in their original sizes.
  - . You can use this feature only with TV Link-enabled TVs.
  - . Shared photos or videos will not be stored on the TV, but they can be stored in the camera to meet the TV's specifications.
  - . Transferring photos or videos to the TV may take some time depending on the network connection, the number of files to be shared, or sizes of the files.
  - If you power off the camera abnormally while viewing photos or videos on a TV (for example, by removing the battery), the TV considers the camera to still be connected.
  - The order of photos or videos on the camera may be different than on the TV
  - . Depending on the number of photos or videos you want to share, it may take some time to load your photos or videos and complete the initial set-up process.
  - . While viewing photos or videos on the TV, continuously using the TV remote or performing additional operations on the TV may prevent this feature from working properly.
  - . If you reorder or sort files on the camera while viewing them on a TV. you must repeat the initial set-up process to update the list of files on the TV
  - . When there are no files in the camera memory, you cannot use this feature

# Sending photos using Wi-Fi Direct

When the camera connects via a WLAN to a device that supports the Wi-Fi Direct function, you can send photos to the device. This feature may not be supported on some devices.

- 1 On the device, turn on the Wi-Fi Direct option.
- 2 On the camera, in Playback mode, scroll to a photo.
- 3 Press [MENU], and then select Share(Wi-Fi) → Wi-Fi Direct.
  - When in the single image view, you can send only one photo at a time.
  - When in the thumbnails view, you can select multiple photos by scrolling to thumbnails, and then pressing [OK].
     Select Next when you are finished selecting photos.
- 4 Select the device from the camera's list of Wi-Fi Direct devices.
  - Ensure that the device's Wi-Fi Direct option is turned on.
  - You can also select your camera from the device's list of Wi-Fi Direct devices.
- 5 On the device, allow the camera to connect to the device.
  - . The photo will be sent to the device.



- When there are no photos in the camera memory, you cannot use this feature
- If you cancel the connection attempt before it is complete, the camera may not be able to reconnect to the device. In this case, update your device with the latest firmware.

# About the Wake on LAN (WOL) feature

With the WOL feature, you can automatically turn on or wake up a PC with your camera. This feature has been available for Samsung desktop PCs for the last 5 years (not available for all-in-one PCs).



Any changes to your PC's BIOS settings other than the ones described below may damage your PC. The manufacturer is not responsible for damage caused by your changing our PC's BIOS settings.



#### Setting the PC to wake up from sleep mode

- 1 Click **Start**, and then open the **Control Panel**.
- 2 Configure the network connection.
  - Windows 7: Click Network and Internet → Network and Sharing Center → Change adapter settings.
  - Windows Vista: Click Network and Internet → Network and Sharing Center → Manage network connections.
  - Windows XP: Click Network and Internet Connection → Network Connection

- 3 Right click Local Area, and then click Properties.
- 4 Click Configure → the Power manage tab → Allow this device to wake the computer.
- 5 Click OK.
- 6 Restart the PC.

## Setting the PC to turn on

- 1 Turn on the PC, and then press F2 while the PC is booting.
  - · The BIOS setting menu will appear.
- 2 Select Advanced tab → Power management Setup.
- 3 Select Resume on PME → Enabled.
- 4 Press F10 to save your changes, and then continue booting.
- 5 Click Start, and then open the Control Panel.
- 6 Configure the network connection.
  - Windows 7: Click Network and Internet → Network and Sharing Center → Change adapter settings.
  - Windows Vista:
     Click Network and Internet → Network and Sharing
     Center → Manage network connections.
  - Windows XP: Click Network and Internet Connection → Network Connection

- 7 Select the drivers for the network adapter.
- 8 Click the **Advanced** tab, and then set the WOL menus.



- You cannot use this feature across a firewall or if a security program has been installed.
- To turn on the PC with the WOL feature, the PC must have an active connection to the LAN. Ensure that the indicator light on the PC's LAN port is on indicating that the LAN connection is active.
- Depending on your PC model, the camera may only be able to wake the PC.
- Depending on your PC's OS or drivers, the names of the WOL setting menu may vary.
- examples of setting menu names: Enable PME, Wake on LAN, etc.
- examples of setting menu values: Enable, Magic packet, etc.

# Settings Refer to options to configure your camera's settings.


Settings menu	119
Accessing the settings menu	119
Sound	120
Display	120
Connectivity	121
Conorol	100


# Settings menu

Learn to configure your camera's settings.

## Accessing the settings menu

- 1 On the Home screen, scroll to **<Basic>**.
- 2 Select .
- 3 Select a menu.





4 Select an item.



5 Select an option.



6 Press [MENU] to return to the previous screen.

## Sound

\* Default

Item	Description
Volume	Set the volume of all sounds. (Off, Low, Medium*, High)
Beep Sound	Set to emit a sound when you press the buttons or switch modes. (Off, On*)
Shutter Sound	Set the sound the camera emits when you press the shutter button. (Off, Sound 1*, Sound 2, Sound 3)
Start Sound	Set the sound the camera emits when you turn on your camera. (Off*, Star Flight, Laser Show, Cloud)
AF Sound	Set to emit a sound when you half-press the shutter button. (Off, On*)

## Display

* Default	
mera	

Item	Description
Start Image	Set a start image to display when the camera turns on.  Off*: Display no start image.  Logo: Display a default image stored in the internal memory.  User Image: Select User Image from the photos you captured in the memory.  The camera will save only one User Image in the internal memory at a time.  If you select a new photo as a User Image or reset your camera, the camera will delete the current image.
Wallpapers	Set wallpaper for the Home screen with the desired image. (Wallpaper Gallery, Album)
Guide Line	Select a guide to help you compose a scene. (Off*, 3 X 3, 2 X 2, Cross, Diagonal)
Date/Time Display	Set whether or not to display the date and time on the camera's display. (Off*, On)
Help Guide Display	Display a brief description of an option or menu. (Off, On*)

	* Default
Item	Description
Display Brightness	Adjust the brightness of the screen. (Auto*, Dark, Normal, Bright)  Normal is fixed in Playback mode even if you have selected Auto.
Quick View	Set whether or not to review a captured image before returning to the Shooting mode. (Off, On*)
Power Save	If you perform no operations for 30 seconds, the camera automatically switches to Power save mode. (Off', On)  • In Power save mode, press any button other than [POWER] to resume using the camera. • Even if you do not set the Power save mode,
	the screen will dim 30 seconds after the last operation to save power.

## Connectivity

	* Default
	Description
Video Out	Set the video signal output for your region.  NTSC: USA, Canada, Japan, Korea, Taiwan, Mexico  PAL (supports only BDGHI): Australia, Austria, Belgium, China, Denmark, England, Finland, France, Germany, Italy, Kuwait, Malaysia, Netherlands, New Zealand, Norway, Singapore, Spain, Sweden, Switzerland, Thailand
USB	Select the mode to use when you connect the camera to a computer or printer with a USB cable.  Computer*: Connect your camera to a computer for transferring files.  Printer: Connect your camera to a printer for printing files.  Select Mode: Manually select the USB mode when you connect your camera to a device.
PC Software	Set Intelli-studio to launch automatically when you connect your camera to your computer. (Off, On*)

## General

\* Default

Item	Description
Device Information	See the Mac address and serial number of your camera.
Language	Set a language for the display text.
Time Zone	Set the time zone for your location. When you travel to another country, select <b>Visit</b> , and then select the appropriate time zone. ( <b>Home</b> *, <b>Visit</b> )
Date/Time Set	Set the date and time.
Date Type	Set a date format. (YYYY/MM/DD, MM/DD/YYYY, DD/MM/YYYY)  The default date type may differ depending on the language selected.
Time Type	Set the time format. (12 Hr, 24 Hr)  The default time type may differ depending on the language selected.

	* Default
Item	Description
File No.	Specify how to name files.  Reset: Set the file number to start from 0001 when you insert a new memory card, format a memory card, or delete all files.  Series*: Set the file number to resume from the previous file number when you insert a new memory card, format a memory card, or delete all files.  The default name of the first folder is 100PHOTO and the default name of the first file is SAM_0001.  The file number increases by one, from SAM_0001 to SAM_9999, each time you take a picture.  The folder number increases by one, from 100PHOTO to 999PHOTO, each time a folder is full.  The maximum number of files that can be stored in one folder is 9,999.  The camera defines file names according to the Design rule for Camera File system (DCF) standard. If you intentionally change file names, the camera may not play back the files.

	* Default
	Description
Imprint	Set whether or not to display the date and time on captured photos. (Off', Date, Date & Time)  • The date and time will be displayed on the bottom right comer of the photo.  • Some printer models may not print the date and time properly.  • The photo will not display the date and time if:  - you select Text in Scene mode  - you select Live Panorama, Picture in Picture, Self Shot, Children, Jump Shot, Intelligent Portrait, Funny Face, or Motion Photo  - you capture a photo with the front display
Auto Power Off	Set the camera to automatically turn off when you perform no operations for a specified period. (Off, 1 min, 3 min*, 5 min, 10 min)  • Your settings will not change when you replace the battery.  • The camera will not automatically turn off when the camera is connected to a computer, printer, or WLAN, and when you are playing a slide show or videos.
AF Lamp	Set a light to automatically turn on in dark places to help you focus. (Off, On*)

* Defau
Description
Format the internal memory and the memory card. Formatting will delete all files, including protected files. (Yes, No)
Errors can occur if you use a memory card formatted by another brand of camera, a memory card reader, or a computer. Please format memory cards in the camera before using them to capture photos.
Reset menus and shooting options. Date and time, language, and video output settings will not be reset. (Yes, No)

# **Appendixes**

Get information about error messages, specifications, and maintenance.

# **Error messages**

When the following error messages appear, try these remedies.

Error message	Suggested remedies
Card Error	<ul> <li>Turn off your camera, and then turn it on again.</li> <li>Remove your memory card, and then insert it again.</li> <li>Format your memory card.</li> </ul>
Card not supported.	The inserted memory card is not supported by your camera. Insert a microSD, microSDHC, or microSDXC memory card.
Connection failed.	<ul> <li>The camera cannot connect to the network using the selected access point. Select another AP and try again.</li> <li>The camera has failed to connect to the other camera. Try connecting again.</li> </ul>
DCF Full Error	File names do not match the DCF standard.  Transfer the files from the memory card to your computer and format the card. Then, open the Settings menu and select <b>File No. → Reset</b> . (p. 132)

Error message	Suggested remedies
Device disconnected.	Network connection disconnected while transferring photos. Select a TV Link device again.
File Error	Delete the damaged file or contact a service center.
File system not supported.	Your camera does not support the FAT file structure of the inserted memory card. Format the memory card on the camera.
Initialization failed.	Turn on TV Link enabled devices on the network. The camera has failed to locate a TV Linkenabled device.
Invalid password.	The password for transferring files to another camera is wrong. Enter the correct password again.
Low Battery	Insert a charged battery or recharge the battery.
Memory Full	Delete unnecessary files or insert a new memory card.

Error message	Suggested remedies	
No Image File	Capture photos or insert a memory card that contains some photos.	
Photo transfer failed.	Network connection disconnected while transferring photos. Try turning on the TV Link feature again.	
Photo reception failed.	The camera has failed to receive a photo from the sending camera. Ask the other person to send the file again.	
Transfer failed.	The camera has failed to send a photo to the other camera. Try sending again.  The camera has failed to send an email or transfer a photo to a TV Link device. Check the network connection and try again.	

## Camera maintenance

## Cleaning your camera

#### Camera lens and display

Use a blower brush to remove dust and wipe the lens gently with a soft cloth. If any dust remains, apply lens cleaning liquid to a piece of lens cleaning paper and wipe gently.





#### Camera body

Wipe gently with a soft, dry cloth.





- Never use benzene, thinners, or alcohol to clean the device. These solutions can damage the camera or cause it to malfunction.
- Do not press on the lens cover or use a blower brush on the lens cover.

## Using or storing the camera

#### Inappropriate places to use or store the camera

- Avoid exposing the camera to very cold or very hot temperatures.
- Avoid using your camera in areas with extremely high humidity, or where the humidity changes drastically.
- Avoid exposing the camera to direct sunlight and storing it in hot, poorly-ventilated areas, such as in a car during summer time.
- Protect your camera and the display from impact, rough handling, and excessive vibration to avoid serious damage.
- Avoid using or storing your camera in dusty, dirty, humid, or poorly-ventilated areas to prevent damage to moving parts and internal components.
- Do not use your camera near fuels, combustibles, or flammable chemicals. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the camera or its accessories.
- . Do not store the camera where there are mothballs.

#### Using on beaches or shores

- Protect your camera from sand and dirt when you use it on beaches or in similar areas.
- Your camera is not waterproof. Do not handle the battery, adapter, or memory card with wet hands. Operating the camera with wet hands may cause damage to your camera.

#### Storing for extended period of time

- When you store the camera for an extended period, place it in a sealed container with an absorbent material, such as silica gel.
- Remove the batteries from your camera when storing it for an extended period. Installed batteries may leak or corrode over time and cause serious damage to your camera.
- Over time, unused batteries will discharge and must be recharged before use.
- The present date and time can be initialized when the camera is turned on after the camera and battery have been separated for over 40 hours.

#### Using the camera with caution in humid environments

When you transfer the camera from a cold environment to a warm one, condensation can form on the lens or internal components of the camera. In this situation, turn off the camera and wait for at least 1 hour. If condensation forms on the memory card, remove the memory card from the camera and wait until all moisture has evaporated before reinserting it.

#### Other cautions

- Do not swing your camera by the strap. This may cause injury to yourself or others or damage to your camera.
- Do not paint your camera, as paint can clog moving parts and prevent proper operation.
- Turn off the camera when not using it.

- Your camera contains delicate parts. Avoid impacts to the camera.
- Protect the display from external force by keeping it in the case when not in use. Protect the camera from scratches by keeping it away from sand, sharp implements, or loose change.
- Do not use the camera if the screen is cracked or broken.
   Broken glass or acrylic could cause injury to your hands and face. Take the camera to a Samsung service center to have it repaired.
- Never place cameras, batteries, chargers, or accessories near, on, or in heating devices, such as microwave ovens, stoves, or radiators. These devices may be deformed and can overheat and cause a fire or explosion.
- Do not expose the lens to direct sunlight, as this may discolor the image sensor or cause it to malfunction.
- Protect the lens from fingerprints and scratches. Clean the lens with a soft, clean, debris-free lens cloth.
- The camera may turn off if struck or dropped. This is to protect the memory card. Turn on the camera to use it again.
- While you use the camera, it may heat up. This is normal and should not affect your camera's lifespan or performance.
- When you use the camera in low temperatures, it may take some time to turn on, the color of the display may be changed temporarily, or after-images may appear. These conditions are not malfunctions and they will correct themselves when the camera is returned to milder temperatures.

- Paint or metal on the outside of the camera may cause allergies, itchy skin, eczema, or swelling for people with sensitive skin. If you experience any of these symptoms, stop using the camera immediately and consult a doctor.
- Do not insert foreign objects into any of your camera's compartments, slots, or access points. Damage due to improper use may not be covered by your warranty.
- Do not allow unqualified personnel to service the camera or attempt to service the camera yourself. Any damage that results from unqualified service is not covered by your warranty.

## About memory cards

#### Supported memory cards

Your camera supports microSD, microSDHC, or microSDXC memory cards.



To read data with a PC or memory card reader, insert the memory card into a memory card adapter.

### Memory card capacity

The memory capacity may differ depending on shooting scenes or shooting conditions. These capacities are based on a 1 GB microSD card:

#### Photo

Size	Super Fine	Fine	Normal
IБм	105	206	303
Чме	117	230	337
124	140	275	406
10m	166	323	469
Sm	319	607	858
■m	522	954	1,336
2m	742	1,336	1,878
lm	1,582	2,505	3,006

#### Video

Size	30fps	15fps
<b>HD</b>	Approx.	Approx.
1280 X 720	14' 55"	28' 54"
<b>VGA</b>	Approx.	Approx.
640 X 480	34' 55"	65' 40"
<b>QVGA</b>	Approx.	Approx.
320 X 240	134' 34"	231' 14"
240 (IIII) For Sharing	Approx. 134' 34"	Approx. 231' 14"

<sup>\*</sup> The figures above are measured without using the zoom function. Available recording time may vary if you use the zoom. Several videos were recorded in succession to determine the total recording time.

#### Cautions when using memory cards

- Avoid exposing memory cards to very cold or very hot temperatures (below 0 °C/32 °F or above 40 °C/104 °F).
   Extreme temperatures can cause memory cards to malfunction.
- Insert a memory card in the correct direction. Inserting a memory card in the wrong direction may damage your camera and memory card.
- Do not use memory cards that have been formatted by other cameras or by a computer. Reformat the memory card with your camera.
- Turn off the camera before you insert or remove the memory card.
- Do not remove the memory card or turn off your camera while the lamp is blinking, as this may damage your data.
- When the lifespan of a memory card has expired, you cannot store any more photos on the card. Use a new memory card.
- Do not bend, drop, or subject memory cards to heavy impact or pressure.
- Avoid using or storing memory cards near strong magnetic fields.
- Avoid using or keeping memory cards in areas with high temperature, high humidity, or corrosive substances.

- Prevent memory cards from making contact with liquids, dirt, or foreign substances. If dirty, wipe the memory card clean with a soft cloth before you insert the memory card into your camera.
- Do not allow liquids, dirt, or foreign substances to come in contact with memory cards or the memory card slot. Doing so may cause memory cards or the camera to malfunction.
- When you carry a memory card, use a case to protect the card from electrostatic discharges.
- Transfer important data to other media, such as a hard disk, CD, or DVD.
- When you use the camera for an extended period, the memory card may become warm. This is normal and does not indicate a malfunction.



The manufacturer is not responsible for any loss of data.

## About the battery

Use only Samsung-approved batteries.

#### Battery specifications

Specification	Description
Model	BP70A
Туре	Lithium-ion battery
Cell capacity	740 mAh
Voltage	3.7 V
Charging time* (when the camera is switched off)	Approximately 160 min

<sup>\*</sup> Charging the battery by connecting it to a computer may take longer.

#### Battery life

	shooting time/ of photos	Test conditions (when the battery is fully charged)
	Approximately	The battery life was measured under the following conditions: in Program mode, in darkness,   resolution, Fine quality, OIS on.  1. Set the flash option to Fill in, take a
		single shot, and zoom in or out.
Photos 120 min/ Approximately 240 photos	2. Set the flash option to <b>Off</b> , take a single shot, and zoom in or out.	
	240 photos	Perform steps 1 and 2, waiting     So seconds between each step.     Repeat the process for 5 minutes, and then turn off the camera for 1 minute.
		4. Repeat steps 1 to 3.
Videos	Approximately 100 min	Record videos at <b>HD</b> resolution and 30 FPS.

- The figures above are measured by Samsung's standards. Your results may differ, depending on your actual usage.
- Several videos were recorded in succession to determine the total recording time.
- . When using network functions, the battery will be depleted more quickly.

#### Low battery message

When the battery has fully discharged, the battery icon will turn red and the "Low Battery" message will appear.

#### Notes about using the battery

- Avoid exposing batteries to very cold or very hot temperatures (below 0 °C/32 °F or above 40 °C/104 °F). Extreme temperatures can reduce the charging capacity of your batteries
- When you use the camera for an extended period, the area around the battery chamber may become warm. This does not affect the normal use of the camera.
- Do not pull the power supply cord to disconnect the plug from the power outlet, as this may cause a fire or electric shock.
- In temperatures below 0 °C/32 °F, battery capacity and battery life may decrease.
- Battery capacity may decrease in low temperatures but will return to normal in milder temperatures.

#### Cautions about using the battery

# Protect batteries, chargers, and memory cards from damage

Prevent batteries from making contact with metal objects, as this can create a connection between the + and – terminals of your battery and lead to temporary or permanent battery damage and may cause a fire or electric shock.

#### Notes about charging the battery

- If the status lamp is off, make sure that the battery is inserted correctly.
- If the camera is on while charging, the battery may not fully charge. Turn off the camera before charging the battery.
- Do not use your camera when you are charging the battery. This may cause a fire or electric shock.
- Do not pull the power supply cord to disconnect the plug from the power outlet, as this may cause a fire or electric shock.
- Let the battery charge for at least 10 minutes before turning on the camera.
- If you connect the camera to an external power source when the battery is depleted, using high energy-consuming functions will cause the camera to turn off. To use the camera normally, recharge the battery.

- If you reconnect the power cable when the battery is fully charged, the status lamp turns on for approximately 30 minutes.
- Using the flash or recording videos depletes the battery quickly. Charge the battery until the red status lamp turns off.
- If the status lamp blinks in red, reconnect the cable, or remove the battery and insert it again.
- If you charge the battery when the cable is overheated or the temperature is too high, the status lamp may blink in red. Charging will start when the battery cools down.
- Overcharging batteries may shorten battery life. After charging is finished, disconnect the cable from your camera.
- Do not bend or place heavy objects on the AC cable. Doing so may damage the cable.

#### Notes about charging with a computer connected

- · Use only the provided USB cable.
- The battery may not charge when:
  - you use a USB hub
  - other USB devices are connected to your computer
  - you connect the cable to the port on the front side of your computer
  - the USB port of your computer does not support the power output standard (5 V, 500 mA)

## Handling and disposing of batteries and chargers with care

- Never dispose of batteries in a fire. Follow all local regulations when you dispose of used batteries.
- Never place batteries or cameras on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when they are overheated.



# Personal injury or death can occur if the battery is handled carelessly or improperly. For your safety,

## follow these instructions for proper battery handling:

- The battery can ignite or explode if not handled properly.
   If you notice any deformities, cracks, or other abnormalities in the battery, immediately discontinue use of the battery and contact a service center.
- Use only authentic, manufacturer-recommend battery chargers and adapters and charge the battery only by the methods described in this user manual.
- Do not place the battery near heating devices or expose it to excessively warm environments, such as the inside of an enclosed car in the summertime.
- . Do not place the battery in a microwave oven.
- Avoid storing or using the battery in hot, humid places, such as spas or shower enclosures.
- Do not rest the device on flammable surfaces, such as bedding, carpets, or electric blankets for a prolonged period.
- When the device is switched on, do not leave it in any confined space for a prolonged period.
- Do not allow battery terminals to come in contact with metallic objects, such as necklaces, coins, keys, or watches.
- Use only authentic, manufacturer-recommended, Lithium-ion replacement batteries.

- Do not disassemble or puncture the battery with any sharp object.
- Avoid exposing the battery to high pressure or crushing forces.
- Avoid exposing the battery to major impacts, such as dropping it from high places.
- Do not expose the battery to temperatures of 60 °C (140 °F) or above.
- Do not allow the battery to come in contact with moisture or liquids.
- Do not expose the battery to sources of excessive heat such as sunshine, fire or the like.

#### Disposal guidelines

- . Dispose of the battery with care.
- . Do not dispose of the battery in a fire.
- Disposal regulations may differ by country or region.
   Dispose of the battery in accordance with all local and federal regulations.

#### Guidelines for charging the battery

Charge the battery only by the method described in this user manual. The battery can ignite or explode if not charged properly.

## Before contacting a service center

If you are having trouble with your camera, try these troubleshooting procedures before you contact a service center. If you have attempted the suggested remedy and are still having problems with your device, contact your local dealer or service center.



When you leave your camera at a service center, be sure to also leave the other components that may have contributed to the malfunction, such as the memory card and battery.

Situation	Suggested remedies
Cannot turn on the camera	Ensure that the battery is inserted.     Ensure that the battery is inserted correctly. (p. 17)     Charge the battery.
The power turns off suddenly	Charge the battery.     Your camera may be in Auto Power Off mode. (p. 133)     The camera may turn off to prevent the memory card from being damaged due to an impact. Turn on your camera again.
The camera is losing battery power quickly	The battery may lose power more quickly in low temperatures (below 0 °C/32 °F). Keep the battery warm by putting it into your pocket. Using the flash or recording videos depletes the battery quickly. Recharge if needed. Batteries are consumable parts that must be replaced over time. Get a new battery if the battery life is diminishing quickly.

	Suggested remedies	
Cannot capture photos	There is no space on the memory card. Delete unnecessary files or insert a new card. Format the memory card. The memory card is defective. Get a new memory card. Make sure that the camera is switched on. Charge the battery. Make sure that the battery is inserted correctly.	
The camera freezes	Remove the battery and insert it again.	
The camera heats up	While you use the camera, it may heat up. This is normal and should not affect your camera's lifespan or performance.	
The flash does not work	<ul> <li>The flash option may be set to Off. (p. 64)</li> <li>You cannot use the flash in some modes.</li> </ul>	

Situation	Suggested remedies
The flash fires unexpectedly	The flash may fire due to static electricity. The camera is not malfunctioning.
The date and time are incorrect	Set the date and time in the display settings. (p. 132)
The display or buttons do not work	Remove the battery, and then insert it again.
The camera display responds poorly	If you use your camera at very low temperatures, it may cause the camera screen to malfunction or discolor. For better performance of your camera screen, use your camera in moderate temperatures.
The memory card has an error	Turn off your camera, and then turn it on again. Remove your memory card, and then insert it again. Format your memory card. See "Cautions when using memory cards" for more detail. (p. 141)
Cannot play back files	If you change the name of a file, your camera may not play the file (the name of the file should meet the DCF standard). If you encounter this situation, play back the files on your computer.

Situation	Suggested remedies
The photo is blurry	<ul> <li>Make sure that the focus option you set is suitable for close-up shots. (p. 67)</li> <li>Make sure that the lens is clean. If not, clean the lens. (p. 137)</li> <li>Make sure that the subject is within range of the flash. (p. 150)</li> </ul>
The colors in the photo do not match the actual scene	An incorrect White Balance can create unrealistic color. Select the proper White Balance option to suit the light source. (p. 76)
The photo is too bright	Your photo is overexposed.  Turn off the flash. (p. 64)  Adjust the ISO sensitivity. (p. 66)  Adjust the exposure value. (p. 74)
The photo is too dark	Your photo is underexposed.  Turn on the flash. (p. 64)  Adjust the ISO sensitivity. (p. 66)  Adjust the exposure value. (p. 74)

Situation	Suggested remedies
The TV does not display your photos	<ul> <li>Make sure that the camera is correctly connected to the TV with the AV cable.</li> <li>Make sure that your memory card contains photos.</li> </ul>
Your computer does not recognize your camera	<ul> <li>Make sure that the USB cable is connected correctly.</li> <li>Make sure that your camera is switched on.</li> <li>Make sure that you are using a supported operating system.</li> </ul>
Your computer disconnects the camera while transferring files	The file transmission may be interrupted by static electricity. Disconnect the USB cable and connect it again.
Your computer cannot play videos	Videos may not play on some video player programs. To play video files captured with your camera, install and use the Intelli-studio program on your computer. (p. 101)

Situation	Suggested remedies
Intelli-studio is not functioning properly	End Intelli-studio and restart the program.     You cannot use Intelli-studio on Macintosh computers.     Make sure that PC Software is set to On in the settings menu. (p. 131)     Depending on your computer's specifications and environment, the program may not launch automatically. In this case, click Start → All Programs → SAMSUNG → Intelli-studio → Intelli-studio on your computer.
Your TV or computer cannot display photos and videos that are stored on a microSDXC memory card.	microSDXC memory cards use the exFAT file system. Ensure that the external device is compatible with the exFAT file system before connecting the camera to the device.
Your computer does not recognize a microSDXC memory card.	microSDXC memory cards use the exFAT file system. To use microSDXC memory cards on a Windows XP computer, download and update the exFAT file system driver from the Microsoft website.

Image sensor		
Туре	1/2.33" (Approximately 7.73 mm) CCD	
Effective pixels	Approximately 16.2 mega-pixels	
Total pixels	Approximately 16.5 mega-pixels	
Lens		
Focal length	Samsung Lens f = 4.5–22.5 mm (35 mm film equivalent: 25–125 mm)	
F-stop range	F2.5 (W)-F6.3 (T)	
Zoom	Still image mode: 1.0–5.0X (Optical zoom X Digital zoom: 25.0X, Optical zoom X Intelli zoom: 10.0X)	
Display		
Туре	TFT LCD	
Feature	Main display: 2.7" (69.0 mm) 230K     Front display: 1.52" (37.6 mm) 61K	
Focusing		
Туре	TTL auto focus (Center AF, Multi AF, Tracking AF, Face Detection AF)	

		Wide (W)	Tele (T)
		vvide (vv)	iele (i)
Range	Normal (AF)	80 cm-infinity	250 cm-infinity
	Macro	5-80 cm	100-250 cm
	Auto Macro	5 cm-infinity	100 cm-infinity

#### Shutter speed

Auto: 1/8–1/2,000 sec.
Program: 1–1/2,000 sec.
Night: 16–1/2,000 sec.
Fireworks: 2 sec.

Exposure	
Control	Program AE
Metering	Multi, Spot, Center-weighted, Face Detection
Compensation	±2EV (1/3 EV Step)
ISO equivalent	Auto, ISO 80, ISO 100, ISO 200, ISO 400, ISO 800, ISO 1600, ISO 3200

Flash		Date Imprint	ing	
Mode	Off, Smart Auto, Auto, Red-eye, Fill in, Slow Sync,		Date, Off	
	Red-eye Fix	Shooting		
Range	Wide: 0.3-4.2 m (ISO Auto)     Tele: 0.5-1.6 m (ISO Auto)		Modes: Smart Auto (Portrait, Night Portrait, Backlight Portrait, Night, Backlight, Landscape,	
Recharging time	Approximately 4.5 sec.		White, Natural Green, Blue Sky, Sunset, Macro, Macro text, Macro Color, Tripod, Action, Firewor	
Shake reduction			Program, Scene (Landscape, Sunset, Dawn, Backlight, Beach & Snow, Text), Live Panorama, Shot, Children, Jump Shot, Beauty Shot, Night S Close-up Shot, Magic Frame, Photo Filter, Split S	
Digital Image Stabilization (DIS)		Photos		
Effect				
Photo Shooting mode	Photo Filter (Smart Filter): Miniature, Vignetting, Ink Painting, Oil Painting, Cartoon, Cross Filter, Sketch, Soft Focus, Fish-eye, Old Film, Half Tone Dot. Classic. Petro. Zooming Shot		Motion Photo  Burst: Single, Continuous, Motion Capture, AEB  Timer: Off, 10 Sec, 2 Sec, Double (10 Sec, 2 Sec)	
	Image Adjust: Sharpness, Contrast, Saturation		Modes: Smart Movie (Landscape, Blue Sky, Natural Green, Sunset), Movie, Movie Filter     Format: MP4 (H.264) (Max recording time: 20 min Size: 1280 X 720, 640 X 480, 320 X 240, For Sharing     Frame Rate: 30fps, 15fps	
Video Shooting mode	Movie Filter (Smart Filter): Miniature, Vignetting, Half Tone Dot, Sketch, Fish-eye, Classic, Retro, Palette Effect 1, Palette Effect 2, Palette Effect 3, Palette Effect 4	Videos		
White Balance			Sound Alive: Sound Alive On, Sound Alive Off, N	
Auto WB, Daylight, Cloudy, Fluorescent_H, Fluorescent_L, Tungsten, Custom Set			DIS: On, Off     Video editing (embedded): Pause during recording	

Playback			
Photos	Type: Single image, Thumbnails, Multi Slide Show with Music and Effect, Movie clip, Smart Album* Smart Album category: All, Date, File Type Edit: Resize, Rotate, Image Adjust, Smart Filter, Crop Effect: Image Adjust (Brightness, Contrast, Saturation, ACB, Face Retouch, Red-eye Fix), Smart Filter (Normal, Miniature, Vignetting, Ink Painting, Oil Painting, Cartoon, Cross Filter, Sketch, Soft Focus, Fish-eye, Old Film, Half Tone Dot, Classic, Retro, Zooming Shot)		
Videos	Edit: Still image capture, Time trimming		
Storage			
Media	Internal memory: Approximately 8 MB     External memory (Optional):     microSD card (1-2 GB guaranteed),     microSDHC card (up to 32 GB guaranteed),     microSDXC card (up to 64 GB guaranteed)  Internal memory capacity may not match these specifications.		
File format	Still Image: JPEG (DCF), EXIF 2.21, GIF     Movie Clip: MP4 (Video: MPEG-4.AVC/H.264, Audio: AAC)		

			. =		
lmage siże			Super Fine	Fine	Norma
	16 <sub>M</sub>	4608 X 3456	105	206	303
	[ЧмР	4608 X 3072	117	230	337
	12m	4608 X 2592	140	275	406
	Шм	3648 X 2736	166	323	469
	Sm	2592 X 1944	319	607	858
	∃m	1984 X 1488	522	954	1,336
	2m	1920 X 1080	742	1,336	1,878
	lm	1024 X 768	1,582	2,505	3,006

conditions. Your results may vary depending on the shooting conditions and camera settings.

\//ir	eless	: not	MORL

Connector type Micro USB (5 pin)

The power source may differ depending on your region.

Social Sharing, Email, MobileLink, Remote Viewfinder, Auto Backup, AllShare Play, AutoShare, Wi-Fi Direct

Interface			
Digital output connector	USB 2.0		
Audio input/ output	Internal speaker (Mono), Microphone (Mono)		
Video output	AVV: NTSC, PAL (selectable)		
DC power input connector	5 V		
Power source			
Rechargeable battery	Lithium-ion battery (BP70A, 740 mAh)		

#### Dimensions (W X H X D)

95.5 X 55.2 X 18.4 mm (without protrusions)

#### Weight

115 g (4.233 oz.) (without battery and memory card)

#### **Operating Temperature**

0-40 °C (32-104 °F)

#### Operating Humidity

5-85 %

#### Software

#### il auncher

Specifications may change without notice to improve performance.

## **Glossary**

#### ACB (Auto Contrast Balance)

This feature automatically improves the contrast of your images when the subject is backlit or when there is a high contrast between your subject and the background.

#### **AEB (Auto Exposure Bracket)**

This feature automatically captures several images at different exposures to help you capture a properly-exposed image.

#### AF (Auto Focus)

A system that automatically focuses the camera lens on the subject. Your camera uses the contrast to focus automatically.

#### Aperture

The aperture controls the amount of light that reaches the camera's sensor.

#### Camera shake (Blur)

If the camera is moved while the shutter is open, the entire image may appear blurred. This occurs more often when the shutter speed is slow. Prevent camera shake by raising the sensitivity, using the flash, or using a faster shutter speed. Alternately, use a tripod, the DIS or OIS function to stabilize the camera.

#### Composition

Composition in photography means arranging objects in a photo. Usually, abiding by the rule of thirds leads to a good composition.

#### DCF (Design rule for Camera File system)

A specification to define a file format and file system for digital cameras created by the Japan Electronics and Information Technology Industries Association (JEITA).

#### Depth of field

The distance between the nearest and farthest points that can be acceptably focused in a photograph. Depth of field varies with lens aperture, focal length, and distance from the camera to the subject. Selecting a smaller aperture, for example, will increase the depth of field and blur the background of a composition.

#### Digital zoom

A feature that artificially increases the amount of zoom available with a zoom lens (Optical zoom). When using the Digital zoom, the image quality will deteriorate as the magnification increases.

## **DPOF** (Digital Print Order Format)

A format for writing printing information, such as selected images and number of prints, on a memory card. DPOF-compatible printers, sometimes available at photo shops, can read the information from the card for convenient printing.

## EV (Exposure Value)

All the combinations of the camera's shutter speed and lens aperture that result in the same exposure.

## **EV** Compensation

This feature allows you to quickly adjust the exposure value measured by the camera, in limited increments, to improve the exposure of your photos. Set the EV compensation to -1.0 EV to adjust the value one step darker and 1.0 EV to one step brighter.

#### Exif (Exchangeable Image File Format)

A specification to define an image file format for digital cameras created by the Japan Electronic Industries Development Association (JEIDA).

#### Exposure

The amount of light allowed to reach the camera's sensor. Exposure is controlled by a combination of the shutter speed, the aperture value, and ISO sensitivity.

#### Flash

A speed light that helps to create adequate exposure in low-light conditions.

## Focal length

The distance from the middle of the lens to its focal point (in millimeters). Longer focal lengths result in narrower angles of view and the subject is magnified. Shorter focal lengths result in wider angles of view.

#### H.264/MPEG-4

A high-compression video format established by international standard organizations ISO-IEC and ITU-T and developed by the Joint Video Team (JVT). This codec is capable of providing good video quality at low bit rates.

## Image sensor

The physical part of a digital camera that contains a photosite for each pixel in the image. Each photosite records the brightness of the light that strikes it during an exposure. Common sensor types are CCD (Charge-coupled Device) and CMOS (Complementary Metal Oxide Semiconductor).

## ISO sensitivity

The sensitivity of the camera to light, based on the equivalent film speed used in a film camera. At higher ISO sensitivity settings, the camera uses a higher shutter speed, which can reduce blur caused by camera shake and low light. However, images with high sensitivity are more susceptible to noise.

## JPEG (Joint Photographic Experts Group)

A lossy method of compression for digital images. JPEG images are compressed to reduce their overall file size with minimal deterioration of the image resolution.

## LCD (Liquid Crystal Display)

A visual display commonly used in consumer electronics. This display needs a separate backlight, such as CCFL or LED, to reproduce colors.

#### Macro

This feature allows you to capture close-up photos of very small objects. When using the macro feature, the camera can maintain a sharp focus on small objects at a near life-size ratio (1:1).

## Metering

The metering refers to the way in which the camera measures the quantity of light to set the exposure.

## MJPEG (Motion JPEG)

A video format which is compressed as a JPEG image.

#### Noise

Misinterpreted pixels in a digital image that may appear as misplaced or random, bright pixels. Noise usually occurs when photos are shot with a high sensitivity or when a sensitivity is automatically set in a dark place.

#### OIS (Optical Image Stabilization)

This feature compensates in real-time for shaking and vibrating while shooting. There is no image degradation compared to Digital Image Stabilization feature.

## Optical zoom

This is a general zoom which can enlarge images with a lens and does not deteriorate quality of images.

## Quality

An expression of the rate of compression used in a digital image. Higher quality images have a lower rate of compression, which usually results in a larger file size.

## Resolution

The number of pixels present in a digital image. High resolution images contain more pixels and typically show more detail than low resolution images.

## Shutter speed

Shutter speed refers to the amount of time it takes to open and close the shutter, and it is an important factor in the brightness of a photo, as it controls the amount of light which passes through the aperture before it reaches the image sensor. A fast shutter speed allows less time to let light in and the photo becomes darker and more easily freezes subjects in motion.

## Vignetting

A reduction of an image's brightness or saturation at the periphery (outer edges) compared to the center of the image. Vignetting can draw interest to subjects positioned in the center of an image.

## White balance (color balance)

An adjustment of the intensities of colors (typically the primary colors red, green, and blue), in an image. The goal of adjusting the white balance, or color balance, is to correctly render the colors in an image.



# Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



PlanetFirst represents Samsung Electronics' commitment to sustainable development and social responsibility through eco-driven business and management activities.



### Correct disposal of batteries in this product

(Applicable in countries with separate collection systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

This Class [B] digital apparatus complies with Canadian ICES-003.

Dispose unwanted electronics through an approved recycler. To find the nearest recycling location, go to our website: www.samsung.com/recyclingdirect Or call, (877) 278 - 0799

## **FCC** notice

#### Caution:

Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorientate, or relocate, the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## · Declaration of Conformity

Trade Name : Samsung Electronics America, Inc.

Model No. : Samsung DV150F

Responsible Party : Samsung Electronics America, Inc.

Address : 85 Challenger Road, Ridgefield Park,

NJ 07660

Telephone No. : 1-800-SAMSUNG (726-7864)

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including

interference that may cause undesired operation.



## FCC ID:A3LDV150F

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### RF exposure statements:

This device is for handheld operation only. The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 0 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

## **CAUTION**

RISK OF EXPLOSION IF BATTERY IS REPLACED BY
AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS.

This device complies with Industry Canada licence-exempt RSS standard(s).

## Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received,

including interference that may cause undesired operation.

#### Caution:

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

IC: 649F-DV150F

This equipment may be operated in all EU countries. In France, this equipment may only be used indoors.

Le present appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RF du FCC d'exposition aux radiations: Cet appareil et son antenne ne doivent pas être co-localisés ou fonctionnant en conjonction avec une autre antenne ou transmetteur. Cet équipement doit être installé et utilisé avec une distance minimale de 20 centimètres entre le radiateur et votre corps.

Complies with IDA Standards DA100790

Approved by PTA, year 2012







TA-2011/1536 APPROVED

NO-L-14041/01/2011/ETA/2012 1668/2012/WRLO



# **Declaration of Conformity**

## Product details

For the following

Product: DIGITAL CAMERA

Model(s): DV150F

## Declaration & Applicable standards

We hereby declare that the product(s) above is(are) in compliance with the essential requirements and other provisions of the R&TTE Directive (1999/5/EC), the Low Voltage Directive (2006/95/EC) and the Electromagnetic Compatibility Directive (2004/108/EC) by application of:

EN 60950-1:2006+A1:2010 EN 55024:1998+A1:2001+A2:2003

EN 55022:2006+A1 :2007 EN 61000-3-2:2006 +A1:2009 +A2:2009

EN 300 328 v1.7.1 EN 301 489-1 v1.8.1 EN 301 489-17 v2.1.1

EN62311:2008

and the Eco-Design Directive (2009/125/EC) implemented by Regulations (EC) No 278/2009 for external power supplies.

## Representative in the EU

Samsung Electronics Euro QA Lab. Blackbushe Business Park Saxony Way, Yateley, Hampshire GLI46 6GG, LIK

22 December, 2011

(Place and date of issue)

(YEAR TO BEGIN AFFIXING CE MARKING 2011)



Joong-Hoon Choi / Lab. Manager

(Name and signature of authorized person)

\* This is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.

# **Declaration sentence in official languages**

Nation	Declaration
Cesky	Samsung Electronics tímto prohlašuje, že tento digitální fotoaparát je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Dansk	Samsung Electronics erklærer herved, at digitale kameraer overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Deutsch	Hiermit erklärt Samsung Electronic, dass sich die Digitalkamera in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
Eesti	Käesolevaga kinnitab Samsung Electronics digitaalkaamera vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
English	Hereby, Samsung Electronics declares that this digital camera is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Español	Por medio de la presente Samsung Electronics declara que la cámara digital cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Ελληνική	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ η Samsung Electronics ΔΗΛΩΝΕΙ ΟΤΙ η ψηφιακή φωτογραφική μηχανή ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Français	Par la présente Samsung Electronic déclare que l'appareil photo numérique est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Italiano	Con la presente Samsung Electronicsdichiara che questa fotocamera digitale è conforme ai requisiti essenziali e alle altre disposizioni stabilite dalla Direttiva 1999/5/CE.
Latviski	Ar šo Samsung Electronics deklarē, ka digitālā kamera atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių	Šiuo Samsung Electronics deklaruoja, kad šis skaitmeninis fotoaparatas, atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Nederlands	Hierbij verklaart Samsung Electronics dat de digitale camera in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

Nation	Declaration
Malti	Hawnhekk, Samsung Electronics, tiddikjara li din il-kamera diģitali hi konformi mar-rekwiżiti essenzjali u ma' dispożizzjonijiet rilevanti oħrajn ta' Direttiva 1999/5/KE.
Magyar	A Samsung Electronics kijelenti, hogy ez a digitális fényképezőgép megfelel az 1999/5/EK irányelv alapvető követelményeinek és egyéb vonatkozó előírásainak.
Polski	Niniejszym firma Samsung Electronics oświadcza, że ten aparat cyfrowy jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/WE.
Português	Samsung Electronics declara que esta câmera digital está conforme os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Slovensko	Samsung Electronics izjavlja, da je ta digitalni fotoaparat v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Slovensky	Samsung Electronics týmto vyhlasuje, že tento digitálny fotoaparát spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Suomi	Samsung Electronics vakuuttaa täten että tämä digitaalikamera on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Svenska	Härmed intygar Samsung Electronicsatt dessa digitalkameror står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Български	С настоящото Samsung Electronics декларира, че този цифров фотоапарат е в съответствие със съществените изисквания и другите приложими разпоредби на Директива 1999/5/ЕК.
Română	Prin prezenta, Samsung Electronics, declară că această cameră foto digitală este în conformitate cu cerințele esențiale și alte prevederi relevante ale Directivei 1999/5/CE.
Norsk	Samsung Electronicserklærer herved at dette digitalkameraet er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
Türkiye	Bu belge ile, Samsung Electronics bu dijital kameranın 1999/5/EC Yönetmeliginin temel gerekliliklerine ve ilgili hükümlerine uygun olduğunu beyan eder.
Íslenska	Hér með lýsir Samsung Electronics því yfir að þessi stafræna myndavél sé í samræmi við grunnkröfur og önnur ákvæði tilskipunar 1999/5/EB.

## Index

Α

AF-assist light

Location 15 Settings 133

AF Lamp 133

AF Sound 130

Artistic Brush mode 58

Auto Backup 121

Auto Contrast Balance (ACB)

Playback mode 97 Shooting mode 75

Auto Exposure Bracket (AEB) 78

A/V port 15

В

Battery

Caution 143 Charging 18 Inserting 17

Beauty Shot mode 50

Blink Detection 71

Brightness

Playback mode 96 Shooting mode 74

Burst modes

Auto Exposure Bracket (AEB) 78 Continuous 78 Motion Capture 78 C

Camera maintenance 137

Camera specifications 149

Capturing an image from video 93

Charging 18

Children mode 48

Cleaning

Camera body 137 Display 137 Lens 137

Close-up Shot mode 52

Connecting to a computer
Mac 105

Windows 100

Contrast

Playback mode 96 Shooting mode 79 D

Date/Time Set 132

Deleting files 88

Digital Print Order Format (DPOF) 98

Digital zoom 32

Disconnecting the camera 104

Display brightness 131

Display type 28

Е

Editing photos 94

Editing videos

Capturing 93 Trimming 93

Enlarging 89

Error messages 135

Exposure 74

F

Face Detection 70

Flash

Auto 64 Fill in 65 Off 64 Red-eye 65 Red-eye Fix 65 Slow Sync 65

Focus area

Center AF 69 Multi AF 69 Tracking AF 69

Formatting 133

Front display

Customizing 47 Easy Self Shot 47 Turning on 31

Funny Face mode 54

G

Guide Line 130

Н

Half-press shutter 35

Home screen 22

Icons

Playback mode 84 Shooting mode 21

Image Adjustment

ACB 97 Brightness Playback mode 96

Shooting mode 74 Contrast Playback mode 96

Shooting mode 79

Red-eye 97 Saturation

Playback mode 96 Shooting mode 79 Sharpness 79 Image quality 62

Imprint 133

Intelligent Portrait mode 51

Intelli-studio 102

Intelli zoom 32

ISO sensitivity 66

J

Jump Shot mode 48

L

Language settings 132

Live Panorama mode 43

M

Macro 67

Magic Frame mode 53

Memory card

Caution 141 Insert 17

Menu button 16

Metering

Center-weighted 75 Multi 75 Spot 75

Motion Capture 78

Movie Filter mode 56

Movie mode 41

My star

Cancelling 86 Ranking 85 Registering 73

0

Optical Image Stabilization (OIS) 33

Optional accessories 14

P

Photo Filter mode 55

PictBridge 106

Picture in Picture mode 45

Playback button 16

Playback mode 84

Power button 15

Power save mode 131

Printing photos 106

Program mode 39

Protecting files 88

Q

Quick view 131

R

Red-eye

Playback mode 97 Shooting mode 64

Remote Viewfinder 113

Reset 133

Resolution

Playback mode 94 Shooting mode 61

Retouching faces

Playback mode 97 Shooting mode 50

Rotating 95

S

Saturation

Playback mode 96 Shooting mode 79

Scene mode 42

Service center 146

Settings 132

Sharpness 79

Shooting portraits

Blink Detection 71 Face Detection 70 Red-eye 65 Red-eye fix 65

Smart Face Recognition 72 Smile Shot 71

Shutter button 15

Slide show 91

Smart Album 86

Smart Auto mode 38

Smart Face Recognition 72

Smart Filter

Photo shooting mode 55 Playback mode 95 Video recording mode 56

Smart Movie mode 40

Smile Shot 71

Sound settings 29

Split Shot mode 57

Start Image 130

Status lamp 16

Ţ

Thumbnails 87

Timer

Shooting mode 63 Timer lamp 15

Time settings 19

Time zone settings 19, 132

Transferring files

Auto Backup 121 Email 117 Mac 105 Windows 100

Tripod mount 15

TV Link 123

## U

Unpacking 14

USB port 15

## V

## Video

Playback mode 92 Shooting mode 41

Video out 131

## Viewing files

Animated photos 91 Panoramic photos 90 Slide show 91 Smart Album 86 Thumbnails 87 TV 99

## W

#### Website

Accessing 115 Uploading photos or videos 115

White Balance 76

Wireless network 108

## Z

### Zoom

Using the zoom 31 Zoom button 16 Zoom sound settings 80



Please refer to the warranty that came with your product or visit our website www.samsung.com for after-sales service or inquiries.

**C€** 0678