

Some of the contents in this manual may differ from your device depending on the software of the device or your service provider.

**SAMSUNG ELECTRONICS**



Draft version 2008.06.10



## Using this guide

This user's guide has been specially designed to guide you through the functions and features of your device.

### Instructional icons

Before you start, familiarise yourself with the icons you will see in this guide:



*Warning*—situations that could cause injury to yourself or others



*Caution*—situations that could cause damage to your device or other equipment



*Note*—notes, usage tips, or additional information

- ▶ *Refer to*—pages with related information; for example:
  - ▶ p. 12 (represents refer to page 12)
- *Followed by*—the order of options or menus you must select to perform a step; for example: Press [Menu] → **Messaging** → **New message** (represents [Menu], followed by **Messaging**, followed by **New message**)
- [ ] *Square brackets*—phone keys; for example: [ⓘ] (represents the Power key)
- < > *Angled brackets*—softkeys that control different functions at each screen; for example: <**OK**> (represents the **OK** softkey)

## Copyrights and trademarks

Rights to all technologies and products that comprise this device are the property of their respective owners:

- This product includes software licensed from Symbian Ltd.  
© 1998-2008. Symbian and Symbian OS are trademarks of Symbian Ltd.
- Java™ is a trademark of Sun Microsystems, Inc.

**symbian**  
OS



- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide—Bluetooth QD ID: B013532
- Windows Media Player® is a registered trademark of Microsoft Corporation.

# Contents

Safety and usage information .....	5	Customise your device .....	21
<b>1. Introduce your device</b> .....	<b>11</b>	<b>4. Communication</b> .....	<b>23</b>
Unpack.....	11	Calls .....	23
Device layout .....	11	Messages .....	26
<b>2. Assemble and prepare your device</b> .....	<b>15</b>	Logs .....	44
Insert the SIM card and battery .....	15	<b>5. Media</b> .....	<b>48</b>
Charge the battery.....	16	Music player .....	48
Insert a memory card (optional) .....	17	Music Client .....	50
<b>3. Basic functions</b> .....	<b>18</b>	Camera.....	50
Switch the device on or off.....	18	Gallery.....	53
Enter text .....	18	Video Editor.....	54
Work with applications .....	20	Image Editor.....	57
		Radio.....	59
		RealPlayer® .....	61

MICAT .....	62
Recorder .....	62
PC Studio .....	63

## **6. Personal Productivity 64**

Contacts .....	64
Calendar .....	68
Quickoffice® .....	70
Adobe® Reader® .....	71
Notes .....	72

## **7. Web 73**

Browse a web page .....	73
Change browser settings .....	75
Add a bookmark .....	75

Use a bookmark .....	76
Save a web page and view it offline .....	76
Download files from the web .....	77

## **8. Connectivity 78**

Use the Bluetooth wireless feature .....	78
Connect via USB .....	81
Synchronise your device .....	83

## **9. Additional Programs 85**

Game .....	85
Calculator .....	85
Clock .....	86
Converter .....	87
GPS data .....	89

Landmarks.....	91
Mobile Stock .....	91
E-Book .....	91

## **10. Managers 92**

File manager .....	92
Application manager .....	93
Device manager .....	94
Activation key manager .....	96
Memory card manager.....	97
Connection manager .....	98

## **11. Settings 101**

General settings .....	101
Phone settings .....	106
Connection settings .....	109
Applications settings .....	111

## **12. Troubleshooting 115**

## **Safety and usage information**

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your device.



### **Safety warnings**

#### **Keep your device away from small children and pets**

Keep your device and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

#### **Protect your hearing**



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

#### **Install mobile devices and equipment with caution**

Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted. Avoid placing your device and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

#### **Handle and dispose of batteries and chargers with care**

- Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.
- Never dispose of batteries in a fire. Follow all local regulations when disposing used batteries.



- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.

### **Avoid interference with pacemakers**

Maintain a minimum of 15 cm (6 inches) between mobile devices and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your device is interfering with a pacemaker or other medical equipment, turn off the device immediately and contact the manufacturer of the pacemaker or medical equipment for guidance.

### **Turn off the device in potentially explosive environments**

Do not use your device at refuelling points (service stations) or near fuels or chemicals. Turn off your device whenever directed by warning signs or instructions. Your device could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

### **Reduce the risk of repetitive motion injuries**

When sending text messages or playing games on your device, hold the device with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.



## Safety precautions

### **Drive safely at all times**

Avoid using your device while driving and obey all regulations that restrict the use of mobile devices while driving. Use hands-free accessories to increase your safety when possible.

### **Follow all safety warnings and regulations**

Comply with any regulations that restrict the use of a mobile device in a certain area.

### **Use only Samsung-approved accessories**

Using incompatible accessories may damage your device or cause injury.

### **Turn off the device near medical equipment**

Your device can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

### **Turn off the device or disable the wireless functions when in an aircraft**

Your device can cause interference with aircraft equipment. Follow all airline regulations and turn off your device or switch to a mode that disables the wireless functions when directed by the airline personnel.

## **Protect batteries and chargers from damage**

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/ 32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.
- Risk of explosion if a battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

## **Handle your device carefully and sensibly**

- Do not allow your device to get wet—liquids can cause serious damage. Do not handle your device with wet hands. Water damage to your device can void your manufacturer's warranty.
- Avoid using or storing your device in dusty, dirty areas to prevent damage to moving parts.
- Your device is made of complex electronics—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your device, as paint can clog moving parts and prevent proper operation.
- Avoid using the device's camera flash or light close to the eyes of children or animals.

- Your device and memory cards may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

### **Avoid interference with other electronic equipment**

Your device emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, and medical equipment in homes or vehicles. Consult the manufacturers of your electronic equipment to solve any interference problems you experience.



## **Important usage information**

### **Use your device in the normal position**

Avoid contact with your device's internal antenna.

### **Allow only qualified personnel to service your device**

Allowing unqualified personnel to service your device may result in damage to your device and will void your warranty.

### **Ensure maximum battery and charger life**

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.

## Safety and usage information

- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

### **Handle SIM cards and memory cards with care**

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other equipment.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

### **Ensure access to emergency services**

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

### **Specific Absorption Rate (SAR) certification information**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews

of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the

power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

The highest SAR values for this model phone as reported to the FCC are:

#### GSM 850 Mode

- Head: **0.102 W/Kg.**
- Body-worn: **0.465 W/Kg.**

#### GSM 1900 Mode(Part 24)

- Head: **0.3 W/Kg.**
- Body-worn: **0.454 W/Kg.**

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with a Samsung accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

Non-compliance with the above restrictions may result in violation of FCC RF exposure guidelines. SAR information on this and other model phones can be viewed on-line at [www.fcc.gov/oet/fccid](http://www.fcc.gov/oet/fccid).

This site uses the phone FCC ID number, **A3LSGHG818E**. Sometimes it may be necessary to remove the battery pack to find the number.

Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at [www.fcc.gov/cgb/sar](http://www.fcc.gov/cgb/sar).

## Consumer Information on Wireless Phones

---

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

### What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

### Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range

while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

### **What is FDA's role concerning the safety of wireless phones?**

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- "Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- "Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- "Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- "National Institute for Occupational Safety and Health
- "Environmental Protection Agency
- "Federal Communications Commission
- "Occupational Safety and Health Administration
- "National Telecommunications and Information Administration



The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

### **What are the results of the research done already?**

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures

characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period

of phone use in these studies was around three years.

**What research is needed to decide whether RF exposure from wireless phones poses a health risk?**

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

**What is FDA doing to find out more about the possible health effects of wireless phone RF?**

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

### **What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?**

If there is a risk from these products - and at

this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- "If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

### **What about children using wireless phones?**

The scientific evidence does not show a danger to users of wireless phones, including children

and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

### **Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?**

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is

the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

### **Do wireless phone accessories that claim to shield the head from RF radiation work?**

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that

sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

### **What about wireless phone interference with medical equipment?**

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs

when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

- FCC RF Safety Program:  
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):  
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):  
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National Institute for Occupational Safety and Health (NIOSH):  
<http://www.cdc.gov/niosh/emfpg.html>
- World Health Organization (WHO):  
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:

<http://www.icnirp.de>

- National Radiation Protection Board (UK):  
<http://www.nrpb.org.uk>
- Updated 4/3/2002: US food and Drug Administration  
<http://www.fda.gov/cellphones>

## Road Safety

---

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless

phone with one of the many hands free accessories available today.

3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you

are driving and suspend conversations that have the potential to divert your attention from the road.

8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

**"The wireless industry reminds you to use your phone safely when driving."**

For more information, please call 1-888-901-SAFE, or visit our web-site [www.wow-com.com](http://www.wow-com.com)  
Provided by the Cellular Telecommunications & Internet Association

## Operating Environment

---

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

## Using Your Phone Near Other Electronic Devices

---

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

### Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

**Persons with pacemakers:**

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

**Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

**Other Medical Devices**

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

**Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

**Posted Facilities**

Switch your phone off in any facility where posted notices require you to do so.

**Potentially Explosive Environments**

---

Switch your phone off when in any area with a potentially explosive atmosphere and obey all



signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

## Emergency Calls


---

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for

example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
3. Press .

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

## Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

## FCC Notice and Cautions

---

### FCC Notice



- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.



However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated. Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Battery march Park, Quincy, MA 02269, Attn: Publication Sales Division.

### Cautions

Changes or modifications made in the radio phone, not expressly approved by Samsung, will void the user's authority to operate the equipment.

Only use approved batteries, antennas andchargers.

The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

### Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same

compartment as the phone, its parts or accessories.

- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

## Product Performance

---

### Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

### Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

### Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

### Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended and over your shoulder.
- Try not to hold, bend or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

### Availability of Various Features/ Ring Tones

---

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all

features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

### Battery Standby and Talk Time

---

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

### Battery Precautions

---

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.

- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

## Care and Maintenance

---

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

## Safety and usage information

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes color. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

# Introduce your device

Learn about your device's parts, accessories, keys, and icons.


## Unpack

Your package contains the following items:

- Handset
- Battery
- Travel adapter (charger)
- Headset
- PC data cable


## Device layout

### Front view

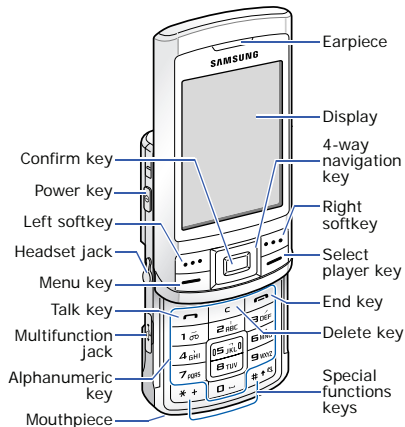








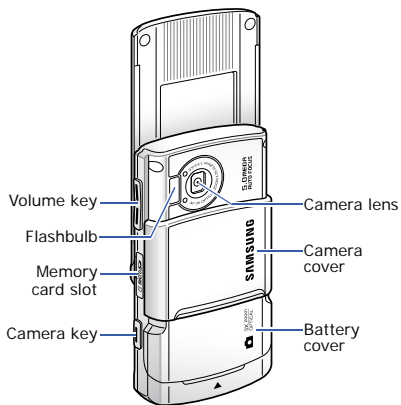

## Rear view





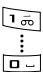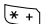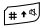





## Keys







Key	Description
	Turn the device on or off (press and hold); Access the Quick Menu
	Perform actions indicated at the bottom of the display
	Scroll through lists or menus; Move the cursor up, down, left, or right
	Confirm your selection
	Open the main menu; Show all active applications (press and hold)
	Display a list of players
	Make or answer a call; In Standby mode, access call logs

Key	Description
	Delete
	End a call; Exit an application
	Enter numbers and characters; In Standby mode, press and hold [1] to access voice mail
	Enter an international call prefix or pause; Display a list of symbols (press and hold)
	Change the text input mode; Change character case; In Standby mode, activate or deactivate Silent mode (press and hold)
	In Standby mode, adjust key volume; During a call, adjust earpiece volume; During an incoming call, adjust ringtone volume

Key	Description
	Turn on the camera (press and hold); In Camera mode, take a photo or record a video

## Icons

Icon	Description
	Signal strength (GSM/GPRS network)
	Alarm activated
	New text message
	New voice mail message
	New email message
	Sending a message
	Active phone line
	Missed call


Icon	Description
	Bluetooth activated
	Headset connected
	Connected to computer
	Keypad locked
	Memory card inserted
	Battery power level

## Assemble and prepare your device

Get started by assembling and setting up your device for its first use.


### ■ Insert the SIM card and battery

1. Remove the battery cover.

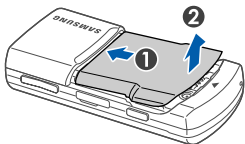


If the phone is on, press and hold the Power key to turn it off.

2. Insert the SIM card.

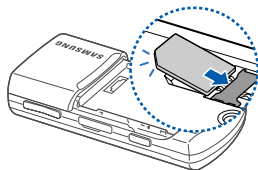


Place the card in the phone with the gold-coloured contacts facing down.

3. Insert the battery.

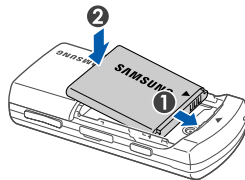


4. Replace the battery cover.

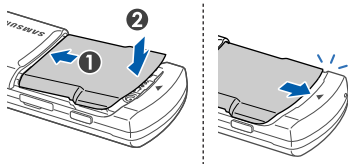


## Charge the battery

Before using the phone for the first time, you must charge the battery.

1. Open the cover to the multifunction jack on the side of the phone.

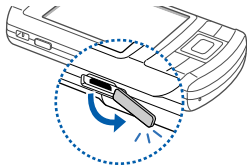



2. Plug the small end of the travel adapter into the jack.

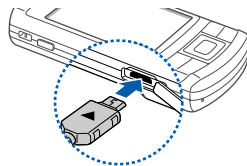

With the triangle facing the front of your phone



Improperly connecting the adapter can cause serious damage to the device. Any damages by misuse are not covered by the warranty.

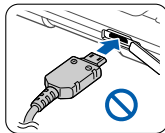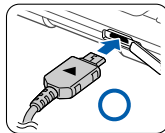


3. Plug the large end of the travel adapter into a power outlet.
4. When the battery is fully charged (the icon is no longer moving), unplug the travel adapter from the power outlet.
5. Unplug the travel adapter from the device.
6. Close the cover to the multifunction jack.

## **Insert a memory card (optional)**

By inserting a memory card, you can store multimedia files and messages or backup your important information. Your phone accepts microSD™ memory cards up to 4 GB (depending on memory card manufacturer and type).

1. Open the cover to the memory card slot on the side of the device.
2. Insert a memory card with the label side facing down.

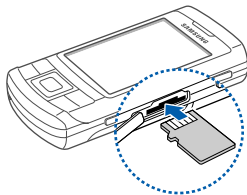

3. Push the card in the slot until it locks in place.


To remove the memory card, push it gently until it disengages from the device, and then pull the card out of the slot.

## Basic functions

Learn how to perform basic operations and use the main features of your device.

### Switch the device on or off

To switch the device on,








1. Press and hold [⓪].
2. Enter your PIN (if necessary) and press [].
3. Follow the onscreen instructions to see the region, city, current time, and the date.

To switch the device off, repeat step 1 above.

### Enter text

#### Change the text input mode

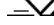Press [#] to switch between the following text input modes:

-  拼音: Pinyin mode
-  笔画: Stroke mode
-  **Abc**: Predictive mode (initial capital)
-  **abc**: Predictive mode (lower case)
-  **Abc**: Normal mode (initial capital)
-  **abc**: Normal mode (lower case)
-  **123**: Number mode

To access symbols, press and hold [**\***].

To use Pinyin and Stroke mode, press **<Options>** → **Writing language** → 简体中文.

## Enter text in Pinyin mode

Pinyin is a system to enter Chinese words by spelling them phonetically (how they sound) using the Latin alphabet.

1. Press the appropriate alphanumeric keys to enter pinyins.
2. Scroll left or right to select a pinyin.
3. Press the Confirm key. A number appears by each character.
4. Scroll up or down to select a character.
5. Press an alphanumeric key to enter the corresponding character.
6. When you are finished, press **<Cancel>**.

## Enter text in Stroke mode

Stroke mode allows you to enter individual Chinese strokes, in written order, from top to bottom, and from left to right.

1. Press **[1]** through **[5]** to enter strokes.  
Press **[6]** when you are unsure which stroke to enter. This will insert a placeholder.
2. Scroll left or right to select a character.  
A number appears by each character.
3. Press an alphanumeric key to enter the corresponding character.
4. When you are finished, press **<Cancel>**.



## Enter text in Predictive mode

In Predictive mode, your device attempts to predict the word you are entering to save you time and keystrokes.

To enter a word in Predictive mode,

1. Press each alphanumeric key one time only for each letter needed.
2. Type the complete word before confirming that the device has predicted it properly. The device will actively attempt to predict words, so the correct word may not appear until you have entered it completely.
3. If the device shows the correct word, scroll right to confirm the word.
4. If the device shows an incorrect word, press [**\***] to view other words that match your entry, or add a word to the dictionary (see the next section).

## Add a word to the dictionary

When using Predictive mode, you can add new words to the dictionary.

1. Press <**Spell**>.
2. Enter the word in normal mode and press <**OK**> to confirm.

## Work with applications

### Open applications or folders

1. In Standby mode, press [Menu].
2. Scroll to an application and press the Confirm key.


## Switch applications

Your device allows you to multi-task by running multiple applications at the same time.

To switch from one active application to another,

1. Press and hold [Menu] to open a list of applications.
2. Scroll to an application and press **<Select>**.

## Close applications

To close the current application, press .

To close an application that is running in the background,

1. Press and hold [Menu] to open a list of applications.
2. Scroll to an application and press [C].
3. Press **<Yes>** to exit the application.

## Customise your device

Your device includes preset profiles that control ringtones, key tones, and alerts and themes that control skins, wallpaper, and menu layouts. You can activate profiles for different situations, personalise profiles, apply themes, and download new themes from the web.

## Activate a profile

1. In Standby mode, press [Menu] → **Profiles**.
2. Scroll to a profile and press **<Options>** → **Activate**.



In Standby mode, the current profile is shown at the top of the display (except for the General profile). To quickly change profiles press [⓪] and select a different profile.

## Personalise a profile

1. In Standby mode, press [Menu] → **Profiles**.
2. Press **<Options>** → **Personalise**.
3. Change the settings as desired.
4. When you are finished personalising the profile, press **<Back>**.

## Apply a theme

1. In Standby mode, press [Menu] → **Settings** → **General** → **Personalisation** → **Themes**.
2. Scroll to a category and press the Confirm key:
  - **General**: choose a skin for your display.
  - **Menu view**: choose a layout of the display.
  - **Wallpaper**: choose a background image for Standby mode.
3. Scroll to a theme or image and press the Confirm key.



# Communication

Your device allows you to send and receive many types of calls and messages over cellular networks and the internet.



## Calls

Learn to use your device's call functions.




### Make a call

1. In Standby mode, enter an area code and phone number.
2. Press [] to dial the number.
3. To end the call, press [].



### Answer a call

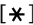1. When a call comes in, press [].
2. To end the call, press [].

### Call an international number

1. Press [] twice to insert the + character (this replaces the international access code).
2. Enter the complete number you want to dial (country code, area code, and phone number), and then press [] to dial.
3. To end the call, press [].

## Make a call from the contact list

1. In Standby mode, press [Menu] → **Contacts** to open your contact list.
2. Scroll to a contact or search by entering the first few letters of the contact's name.
3. Press [

---

You can also press the Confirm key to open the contact information and select a different number or call type (e.g., video).

---

## Insert a pause

When calling automated systems, you can insert a pause between the device number and another set of numbers.


To insert a pause, press [**\***] to select the type of pause:

- **p** (automatic pause): press [**\***] three times to insert an automatic pause. The device will pause for two seconds, then automatically transmit the numbers after the pause.
- **w** (manual pause): press [**\***] four times to insert a manual pause. After the pause, you must press <**Send**> to transmit the remaining numbers.



## View and return missed calls

Your device will show missed calls on the display.

To return a missed call,

1. Press the Confirm key.
2. Scroll to a missed call.
3. Press [>] to dial.

## Call a recently dialled number

1. In Standby mode, press [>] to display a list of recent numbers.
2. Scroll to a number and press [].

## Divert calls

Your service provider or network may or may not support this feature.

To divert your incoming calls to another number,

1. In Standby mode, press [Menu] → **Settings** → **Phone** → **Call divert**.
2. Scroll to a call type and press the Confirm key.
3. Scroll to a diverting type and press **<Options>** → **Activate**.
4. For voice calls, scroll to a diverting location (mailbox or other number) and press the Confirm key.
5. If necessary, enter a phone number and press **<OK>**.

## Bar (block) calls

To activate this function, you need a barring password from your service provider.

To bar incoming calls from a specific number,

1. In Standby mode, press [Menu] → **Settings** → **Phone** → **Call barring**.
2. Scroll to a barring type and press **<Options>** → **Activate**.
3. Enter the barring password and press **<OK>**.



---

If you enter the incorrect barring password three times, the device will lock. Contact your service provider.

---

## Messages

Learn to use messaging functions. For instructions on entering text, see "Enter text." ► p. 18 For an explanation of options, see "Change message options." ► p. 40

### Message folders

When you open Messaging, you will see the **New message** function and a list of folders:

- **Inbox:** received messages, except email and cell broadcast messages
- **My folders:** message templates and saved messages
- **Mailbox:** received email messages; when you create a mailbox, the name you specify will appear here

- **Drafts:** messages you have not yet sent
- **Sent:** recent sent messages
- **Outbox:** temporary storage for messages waiting to be sent
- **Reports:** delivery reports of text and multimedia messages; you must request a delivery report in the message options before sending



- Messages sent via the Bluetooth wireless feature are not saved in the Drafts or Sent folder.
- You may not receive a delivery report for a multimedia message if you send it to an email address.

## Inbox icons

In the Inbox, you may see the following icons next to your messages:

Icon	Description
	Unread text message
	Multimedia message notification
	Unread multimedia message
	Unread smart message
	Unread service message
	Data received via a Bluetooth connection
	Unknown message type



## Outbox status

When you are outside your service area or have no connection to the network or email server, your messages will remain in the Outbox until you re-establish a connection. The outbox status explains why a message is being held in the Outbox:

- **Sending:** the device is connecting and the message will be sent immediately
- **Waiting:** the message is in cue behind another message and will be sent as soon as possible
- **Resend at (time):** the message has failed to send and will be sent at the specified time. Press <**Options**> → **Send** to resend the message immediately
- **Deferred:** the message has been scheduled to send at a later time

- **Failed:** the device has attempted to send the message multiple times, but has failed

## Text messages

---



Text messages longer than 160 characters will be sent as two or more messages and may result in additional charges.

---

### Send a text message

1. In Standby mode, press [Menu] → **Messaging** → **New message** → **Text message**.
2. Enter a phone number or press the Confirm key to select a contact.
3. Scroll down and enter text.
4. Press the Confirm key → **Send** to send the message.

## View a text message

1. In Standby mode, press [Menu] → **Messaging** → **Inbox**.
2. Scroll to a message and press the Confirm key.

## Retrieve messages from a SIM card

If you have text messages stored on a SIM card, you must copy them to the device before you can view them.

1. In Standby mode, press [Menu] → **Messaging** → **<Options>** → **SIM messages**.
2. Press **<Options>** → **Mark/Unmark** → **Mark** (to select one) or **Mark all** (to select all).
3. Press **<Options>** → **Copy** → **Inbox** or a folder.

You can now view the messages from the folder on your device.

## Multimedia messages

Before you can send multimedia messages, you must define an access point.

### Set an access point

Your service provider may supply access point settings via a smart message. To automatically set an access point using a smart message, see "Save smart message data or settings to your device."

► p. 39

To manually set an access point,

1. In Standby mode, press [Menu] → **Settings** → **Connection** → **Access points**.
2. Scroll down and press the Confirm key to select an existing access point or press **<Options>** → **New access point**.

3. Set access point options according to the instructions provided by your service provider.

### Send a multimedia message

1. In Standby mode, press [Menu] → **Messaging** → **New message** → **Multimedia message**.
2. Enter a phone number or press the Confirm key to select a contact.
3. Scroll down and enter a subject.
4. Scroll down and enter text.
5. To insert an existing multimedia object, press <**Options**> → **Insert object** → an object type. To create and insert a new multimedia object, press <**Options**> → **Insert new** → an object type.
6. Press the Confirm key → **Send** to send the message.



You can only add images with a resolution of 176 x 144 or lower.

---

### Edit a multimedia message

You can edit your multimedia message before sending it:

- To add fields to the message header, press <**Options**> → **Address fields** → a field type
- To change the message layout, press <**Options**> → a text position
- To preview the message, press <**Options**> → **Preview**
- To remove an item, press <**Options**> → **Remove** → an item



You can add images, sounds, or videos to slides; however, you can only add one type of media type per slide.

---

## View a multimedia message

1. In Standby mode, press [Menu] → **Messaging** → **Inbox**.
2. Scroll to a message and press the Confirm key.

## Listen to voice mail

If your voice mail number is preset by your service provider, you can press and hold [1] to access your voice mail.

If the voice mail number is not preset or if you need to change the voice mail number,

1. In Standby mode, press [Menu] → **Tools** → **Call mailbox**.
2. Enter the voice mail number provided by your service provider.

3. Press <**OK**>.

You can now access your voice mail from Standby mode by pressing and holding [1].

## Email messages

Before you can send or receive email messages, you must create a mailbox.

### Create a mailbox

1. In Standby mode, press [Menu] → **Messaging** → <**Options**> → **Settings** → **E-mail**.
2. Scroll to **Mailbox in use** and press the Confirm key.
3. Press <**Yes**>.
4. Press the Confirm key to start the mailbox wizard and follow the onscreen instructions.

The new mailbox will automatically appear in Messaging. To change the current mailbox, return to email settings and switch the "Mailbox in use" to another mailbox.



If you use the POP3 protocol, the mailbox will not update automatically when you are online. You must disconnect and then reconnect to view new messages.

### Send an email message

1. In Standby mode, press [Menu] → **Messaging** → **New message** → **E-mail**.
2. Enter an email address or press the Confirm key to select a contact.
3. Scroll down and enter a subject.
4. Scroll down and enter text.

5. Press <**Options**> → **Insert** → an attachment type (optional).

6. Press the Confirm key → **Send**.

If you are offline or outside your service area, the message will be held in the Outbox until you are online and in your service area.

### View an email message

When you open a mailbox, you can view previously retrieved emails offline or connect to the email server to view new messages. After you retrieve email messages, you can view them offline.

To view new messages online,

1. In Standby mode, press [Menu] → **Messaging** → your mailbox.
2. Press <**Options**> → **Connect**.
3. Press <**Options**> → **Retrieve e-mail** → **New**.

To view new messages offline,

1. Repeat steps 1-3 above.
2. Press **<Options> → Disconnect.**

### View or save email attachments



CAUTION

Email attachments (📎) may contain viruses that can damage your device. To protect your device, open attachments only if you trust the sender. For more information, see "Certif. management." ► p. 105

To view an attachment,

1. From an open email message, press **<Options> → Attachments.**
2. Scroll to the attachment and press the Confirm key.

The attachment opens with the corresponding application.

To save an attachment,

1. From an open email message, press **<Options> → Attachments.**
2. Scroll to the attachment and press **<Options> → Save.**

### Delete an email message

You can delete email messages from your device only or from both your device and the mail server.

To delete a message from your device only,

1. In Standby mode, press [Menu] → **Messaging** → your mailbox.
2. Scroll to an email and press **<Options> → Delete → Phone only.**



The email header will remain in your mailbox until you delete the message from the mail server.

To delete a message from both from device and the mail server,

1. In Standby mode, press [Menu] → **Messaging** → your mailbox.
2. Scroll to an email and press <**Options**> → **Delete** → **Phone and server**.



If you are offline, messages will be deleted from the server the next time you connect. If you are using the POP3 protocol, deleted messages are removed when you close the mailbox connection.

## Instant messages

You can send and receive instant messages (IM) if your service provider supports this feature. Before you can send or receive instant messages, you must set up a server.

## Set up a server

1. In Standby mode, press [Menu] → **Connect.** → **IM.**

A prompt asks if you want to define a server. Press <**Yes**> (If the prompt does not appear, press <**Options**> → **Settings** → **Servers**).

2. Set the server options according to instructions provided by your service provider.

## Log in to the IM server

1. In Standby mode, press [Menu] → **Connect.** → **IM.**
2. If the device does not attempt to log in automatically, press <**Options**> → **Log in.**

3. Enter your user ID and password, and then press **<OK>**.
4. To log out, press **<Options>** → **Log out**.

### Start a conversation

1. In Standby mode, press [Menu] → **Connect.** → **IM** → **Conversations**.
2. Press **<Options>** → **New conversation** → **Enter user ID** or **Select from contacts**.
3. Enter a user ID or select a contact from your contact list.
4. During a conversation, press **<Options>** to access the following:
  - **Insert smiley**: use one of the preset smileys
  - **Send image**: send an image to an IM contact

- **Record chat**: record your conversation and save it in Notes
- **Blocking options** → **Add to blocked list**: block messages from an IM contact
- **Change own availability**: change the way you appear to other IM contacts

5. To end the conversation, press **<Options>** → **End conversation**.

### Accept an invitation



When you receive an IM invitation, press **<Show>** to accept the invitation. If you have multiple invitations at once, press **<Show>**, scroll to an invitation, and press **<OK>**.



## Add IM contacts

You can save IM contact information by pressing **<Options>** → **Add to IM contacts** during a conversation. You can also add information in IM Contacts by pressing **<Options>** → **New IM contact**.

When you view your IM contacts, you may see the following icons:

Icon	Description
	the contact is online
	the contact is offline

If you see no icon next to a contact's name, the contact is unknown.

## Change IM options

When chatting, press **<Options>** → **Settings** to change the following:

- **Preferences:** set preferences for IM contacts and messages
- **Servers:** add a new server or edit settings for an existing server
- **Default server:** set the default server for instant messaging
- **IM login type:** set the login mode to automatic (types) or manual

## Audio messages

You can send audio messages with voice memos or sound clips. To record a voice memo or sound clip, see "MICAT."

► p. 62

## Send an audio message

1. In Standby mode, press [Menu] → **Messaging** → **New message** → **Audio message**.
2. Press <**Options**> → **Add recipient**.
3. Scroll to a recipient and press the Confirm key → <**OK**> → a number (if necessary).
4. To insert an existing sound clip:
  - a. Press <**Options**> → **Insert sound clip** → **From Gallery**.
  - b. Scroll to a sound clip and press the Confirm key (skip to step 6).
5. To record and insert a new sound clip:
  - a. Press <**Options**> → **Insert sound clip** → **New sound clip**.
  - b. When you finish recording, press <**Stop**> to automatically attach the sound clip to the audio message.

6. Press <**Options**> → **Send**.

## Cell broadcast messages

If your service provider supports this function, you can subscribe to cell broadcasts that provide automatic notifications or news updates. To learn about available cell broadcasts, contact your service provider.

### Add a cell broadcast topic

1. In Standby mode, press [Menu] → **Messaging** → <**Options**> → **Cell broadcast**.
2. Press <**Options**> → **Topic** → **Add manually**.
3. Enter the topic name and number, and then press <**OK**>.

## Subscribe to a cell broadcast

1. In Standby mode, press [Menu] → **Messaging** → <**Options**> → **Cell broadcast**.
2. Scroll to a topic and press <**Options**> → **Subscribe**.

Your device will now receive new messages automatically.

3. To cancel a subscription, press <**Options**> → **Cancel subscription**.



Some connection settings may block cell broadcasts. Contact your service provider for the appropriate connection settings.

---

## View a cell broadcast topic

1. In Standby mode, press [Menu] → **Messaging** → <**Options**> → **Cell broadcast**.
2. Scroll to a topic folder and press the Confirm key.
3. Scroll to a topic and press the Confirm key.

## Set automatic notification of new cell broadcast messages

1. In Standby mode, press [Menu] → **Messaging** → <**Options**> → **Cell broadcast**.
2. Scroll to a topic and press <**Options**> → **Hotmark**.
3. To stop automatic notifications, press <**Options**> → **Remove hotmark**.

## Smart messages

Your device can receive many kinds of smart messages, including business cards, ringtones, calendar events, browser bookmarks, and settings. Your service provider may send smart messages that you can use to load settings into your device.

### Save smart message data or settings to your device

1. In Standby mode, press [Menu] → **Messaging** → **Inbox**.
2. Scroll to a message and press the Confirm key.
3. Press <**Options**> and save the data or settings according to the smart message type:
  - Business card: select **Save business card**

- Ringing tone: to save a ringtone to **Gallery**, press <**Options**> → **Save**
- Calendar entry: select **Save to Calendar**
- WAP message: select **Add to bookmarks** or **Save to Contents**
- SMS service number: select **Save**
- Voice mail number: select **Save to Contacts**
- Access point settings: select **Save**
- Email settings: select **Save**

You may also receive an email notification, which tells you how many new email messages are in your remote mailbox.

## Service messages

You may receive service messages from your service provider that are deleted automatically when they expire. You can view service messages from the Inbox (you may have to download the message from the service provider). Contact your service provider for more information about service messages.

## Change message options

### Change text message options

In Standby mode, press [Menu] →

**Messaging** → **<Options>** → **Settings** →

**Text message** to change the following options:

- **Message centres:** view all defined message centres or add a new centre (press **<Options>** → **New message centre**)
- **Message centre in use:** set a message centre to use when sending text messages
- **Character encoding:** set a character encoding type (**Full support** for Unicode reduces your maximum message length by about one-half)
- **Receive report:** set to receive a report when the message has been delivered
- **Message validity:** set a duration for the message to be valid; if the message cannot be delivered within the specified time, it will be removed from the message centre

- **Message sent as:** set to convert text messages to another format
- **Preferred connection:** set a network connection type
- **Reply via same centre:** set to use the same message centre when receiving a reply message

### Change multimedia message options

In Standby mode, press [Menu] →

**Messaging** → **<Options>** → **Settings** → **Multimedia message** to change the following options:

- **Image size:** set a size for images added to multimedia messages (when sending a message to an email address, the size is automatically set to **Small**)
- **MMS creation mode:** set the mode for creating multimedia messages
- **Access point in use:** set an access point to use when sending multimedia messages
- **Multimedia retrieval:** set an option for receiving multimedia messages
- **Allow anon. msgs.:** set to allow or deny messages from anonymous senders
- **Receive adverts:** set to receive or block advertisements
- **Receive report:** set to receive a report when the message has been delivered
- **Deny report sending:** set to deny delivery reports for multimedia messages

- **Message validity:** set a duration for the message to be valid; if the message cannot be delivered within the specified time, it will be removed from the message centre

### Change email options

In Standby mode, press [Menu] →

**Messaging** → <**Options**> → **Settings** →

**E-mail** to change the following options:

- **Mailboxes:** view a list of defined mailboxes; for each mailbox, you can set the following options:

#### Connection settings

- **Incoming e-mail:** set options for incoming email messages
- **Outgoing e-mail:** set options for outgoing email messages

#### User settings

- **My name:** set your user name
- **Send message:** set email to send immediately or the next time you connect to the server
- **Send copy to self:** set to save copies of outgoing email messages
- **Include signature:** create a signature to include in a new email message
- **New e-mail alerts:** set to show an icon when you receive a new email message

#### Retrieval settings

- **E-mail to retrieve:** set to retrieve email headers or full messages with attachments (you can specify a size limit for full messages)
- **Retrieval amount:** set a maximum number of headers to retrieve at one time

- **IMAP4 folder path** (IMAP4): set a path to the folder that will synchronise with the server
- **Folder subscriptions** (IMAP4): connect to mailbox and update folders

### Automatic retrieval

- **E-mail notifications**: set to be notified when you receive a new email message
- **E-mail retrieval**: set to automatically retrieve email from the server
- **Mailbox in use**: set a mailbox for messages

### Change service message options

In Standby mode, press [Menu] → **Messaging** → <**Options**> → **Settings** → **Service message** to change the following options:

- **Service messages**: set to receive service messages
- **Download messages**: set to automatically or manually download new service messages

### Change cell broadcast message options

In Standby mode, press [Menu] → **Messaging** → <**Options**> → **Settings** → **Cell broadcast** to change the following options:

- **Reception**: set to receive cell broadcast messages
- **Language**: set to receive cell broadcast messages in **All**, **Selected**, or **Other** languages
- **Topic detection**: set to automatically save the topic number when you receive a cell broadcast message that does not belong to an existing topic



## Change other message options

In Standby mode, press [Menu] → **Messaging** → <**Options**> → **Settings** → **Other** to change the following options:

- **Save sent messages:** set to save copies of sent messages
- **Number of saved msgs.:** set a maximum number of saved messages to store in the Sent folder; as new messages are saved, older messages will be deleted
- **Memory in use:** set a memory location to use for storing messages

## Logs

Learn to view log information about calls, packet data, and other communication events.

### Recent calls


You can view recent and erase logs of recently missed calls, received calls, or dialled numbers.

### View recent call logs

To view recently missed calls, received calls, or dialled numbers,

1. In Standby mode, press [Menu] → **Log** → **Recent calls**.
2. Scroll to a call type and press the Confirm key.



To call a number from a call log, scroll to the number and press [].

---

## Erase recent call logs

You can erase all recent call logs at once, erase a single call log, or delete a single number from a log.

To erase all recent call logs,

1. In Standby mode, press [Menu] → **Log** → **Recent calls**.
2. Press <**Options**> → **Clear recent calls**.
3. Press <**Yes**> to confirm.

To erase a single call log,

1. In Standby mode, press [Menu] → **Log** → **Recent calls** → a call type.
2. Press <**Options**> → **Clear list**.
3. Press <**Yes**> to confirm.

To erase a single number from a log,

1. In Standby mode, press [Menu] → **Log** → **Recent calls** → a call type.
2. Scroll to a number and press [C].
3. Press <**Yes**> to confirm.

## Call duration

To view the durations of your last call, dialled number, received call, or all calls.

In Standby mode, press [Menu] → **Log** → **Call duration**.

To reset the call timers,

1. In Standby mode, press [Menu] → **Log** → **Call duration**.
2. Press <**Options**> → **Clear timers**.
3. Enter the lock code (the default lock code is **00000000**), and then press <**OK**>.

### Packet data

To view the amount of sent or received packet data.

In Standby mode, press [Menu] → **Log** → **Packet data**.

To reset the packet data counters,

1. In Standby mode, press [Menu] → **Log** → **Packet data**.
2. Press <**Options**> → **Clear counters**.
3. Enter the lock code (the default lock code is **00000000**), and then press <**OK**>.

### Communication log

You can view communication details and filter logs with the communication log.

### View the communication log

1. In Standby mode, press [Menu] → **Log**.
2. Scroll right to switch to the communication log.



Some events, such as a text message split into multiple parts, will appear as one communication event.

---

### Filter log events

1. In Standby mode, press [Menu] → **Log**.
2. Scroll right to switch to the communication log.
3. Press <**Options**> → **Filter**.
4. Scroll to a filter type and press the Confirm key.

## Erase the communication log

To permanently erase all of the log contents, press <**Options**> → **Clear log**.

1. In Standby mode, press [Menu] → **Log**
2. Scroll right to switch to the communication log.
3. Press <**Options**> → **Clear log**.
4. Press <**Yes**> to confirm.

## Log duration

You can change the length of time that communication events are stored in the logs. After that time, events are automatically erased to free up memory.

To set a log duration,

1. In Standby mode, press [Menu] → **Log**.
2. Press <**Options**> → **Settings**.
3. Press <**Options**> → **Change**.
4. Scroll to a duration and press the Confirm key.



If you select **No log**, no communication events will be stored in the log.

---

Learn to use the media applications on your device: **Music player, Music Client, Camera, Gallery, Video Editor, Image Editor, Radio, RealPlayer, MICAT, Recorder, and PC Studio.**

## Music player

With Music player, you can play mp3 or aac music files.

### Add files to your device

Use the following methods to add music files to your device:

- Download files from a PC, using the supplied PC Studio software
- Copy files to a microSD memory card and insert the card into the device
- Download files from the wireless web (see "Download files from the web." ► p. 77)
- Receive via Bluetooth (see "Receive data via the Bluetooth wireless feature." ► p. 80)
- Synchronise with Windows Media Player (see "Synchronise with Windows Media Player." ► p. 82)

### Add files to the music library

To automatically add files to the music library,

1. Add music files to your device.
2. In Standby mode, press [Menu] → **Media** → **Music plyr.**

3. Press <**Options**> → **Music library**.
4. Press <**Options**> → **Update Music library**.

## Play music files

1. In Standby mode, press [Menu] → **Media** → **Music plyr**.
2. Press <**Options**> → **Music library**.
3. Scroll to a playlist.
4. Press <**Options**> → **Play**.
5. Use the following keys during playback:

Key	Function
Confirm	Pause or resume playback
Navigation (Up)	Skip backward; scan backward (press and hold)

Key	Function
Navigation (Down)	Skip forward; scan forward (press and hold)
Navigation (Left/Right)/ Volume	Adjust the volume up or down
0	Stop playback

You can also access the following options:

- To play tracks in random, press <**Options**> → **Random play**.
- To play a track or all tracks repeatedly, press <**Options**> → **Loop**.
- To close the music player, leaving music still in the background, press <**Options**> → **Play in background**.

## Create a playlist

To create a custom playlist,

1. In Standby mode, press [Menu] → **Media** → **Music plyr.**
2. Press <**Options**> → **Music library** → **Track lists.**
3. Press <**Options**> → **New track list** → a memory location (if necessary).
4. Enter a name for the playlist and press the Confirm key.
5. Scroll to a track and press the Confirm key to add the track to the playlist.

## Music Client

With the Music Client server, you can buy and download your favourite songs, and listen to them at any time. For more information, contact your service provider.

In Standby mode, press [Menu] → **Installations** → **Music Client.**

## Camera

Your device allows you to take digital photos (jpg format) or record videos (mp4 format).

## Capture a photo

1. Open the camera cover. The camera starts automatically.  
If the cover is already open, press [Menu] → **Media** → **Camera** or press and hold the Camera key in Standby mode.
2. Rotate the device 90° counterclockwise (to the left).
3. Aim the lens at the subject and make adjustments (see "Use the keypad in Camera mode").
4. Press the Camera key to capture the image.



Set the GPS Off/On setting to **On** and capture a photo. The photo saves the current location information and you can upload it to Google Map.

## Use the keypad in Camera mode

Key	Function
Navigation (Up)	Hide or show the icons or guidelines on the screen
Navigation (Down)	Set the time delay before taking a photo
Navigation (Left)	Open the Quickview
Navigation (Right)	Turn the flash on or off
<b>1</b>	Switch to Camcorder mode
<b>2</b>	Change the shooting mode
<b>3</b>	Set the time delay before taking a photo
<b>*</b>	Turn the flash on or off
<b>0</b>	Turn the macro feature on or off
<b>#</b>	Hide or show the icons or guidelines on the screen




## View a photo

1. In Standby mode, press [Menu] → **Media** → **Gallery** → **Images**.
2. Scroll to an image and press the Confirm key.

## Record a video

1. Open the camera cover. The camera starts automatically.  
If the cover is already open, press [Menu] → **Media** → **Camera** or press and hold the Camera key in Standby mode.
2. Rotate the device 90° counterclockwise (to the left).
3. Press [**1**] three times to launch the camcorder.

4. Aim the lens at the subject and make any adjustments (see "Use the keypad in Camcorder mode").
5. Press the Camera key to begin recording.
6. Press <  > or the Camera key to stop recording.

## Use the keypad in Camcorder mode

Key	Function
Navigation (Up)	Hide or show the icons on the screen
Navigation (Down)	Set the time delay before recording a video
Navigation (Left)	Open the Quickview

Key	Function
Navigation (Right)	Mute or unmute the audio
1	Switch to Camera mode
3	Set the time delay before recording a video
#	Hide or show the icons on the screen

## Play a video

1. In Standby mode, press [Menu] → **Media** → **Gallery** → **Video clips**.
2. Scroll to a video and press the Confirm key.

## Gallery

You can manage all your media files and streaming internet links from Gallery.

### Open a media file

1. To open the Gallery, press [Menu] → **Media** → **Gallery**.

Your media files are automatically organised by file type.

2. Scroll to a media folder and press the Confirm key.
3. Scroll to a media file and press the Confirm key.

## Add a streaming internet link to the Gallery

1. In Standby mode, press [Menu] → **Media** → **Gallery** → **Streaming links**.
2. Press <**Options**> → **New link** → a memory location (if necessary).
3. Enter a name and web address and press <**OK**>.

## Play streaming content from the internet

1. In Standby mode, press [Menu] → **Media** → **Gallery** → **Streaming links**.
2. Scroll to a link and press the Confirm key.  
RealPlayer will launch and ask if you want to connect to the wireless web.
3. Press <**Yes**>.

## Video Editor

With Video Editor, you can edit or make videos by combining photos or videos.

### Crop a video

1. In Standby mode, press [Menu] → **Media** → **Video Editor** → **Edit video**.
2. Select a video file.
3. Press the Confirm key to start playback.
4. Mark the beginning and end of the new video:
  - Press <**Start**> at the point where you want the new video to begin.
  - Press <**End**> at the point where you want the new video to end.

5. Press **<Options>** → **Settings** and change the properties for saving the video file, such as image quality, name prefix, and memory location.

6. When you are finished, press **<Back>** → **<Options>** → **Save**.

After saving the new video, the device plays the video automatically.

## Add audio to a video

1. In Standby mode, press [Menu] → **Media** → **Video Editor** → **Edit video**.

2. Select a video file.

3. Press the Confirm key to start playback.

4. Press **<Options>** → **Audio** and choose one of the following options:

- **Audio dubbing:** Add one of the sounds you have saved.

- **Live dubbing:** Add audio by recording a new sound.

5. To add an existing sound, press **<Options>** → **Dubbing** → a sound.

To add a new sound, press **<Record>** and record a sound.

After adding the sound, the device plays the video automatically.

6. Press **<Back>**.

7. Press **<Options>** → **Settings** and change the properties for saving the video file, such as image quality, name prefix, and storage location.

8. When you are finished, press **<Back>** → **<Options>** → **Save**.

After saving the new video, the device plays the video automatically.

## Make a slideshow

You can combine photos to make a slideshow with your favourite photos.

1. In Standby mode, press [Menu] → **Media** → **Video Editor** → **Make photo movie**.
2. Select the photos you want and press **<Done>**.
3. While viewing photos, press **<Options>** to use the following options:

Option	Description
<b>Effect</b>	Change the colour tone or apply a special effect
<b>Insert</b> → <b>Insert photos</b> , <b>Insert text clip</b>	Insert a photo or a text

Option	Description
<b>Transition</b>	Change how your slideshow plays from one video clip or photo to the next
<b>Narration</b> → <b>Insert</b>	Add audio to your slideshow
<b>Duration</b>	Set the duration of photos
<b>Move</b>	Change the order of photos
<b>Settings</b>	Change the properties for saving the video file, such as image quality, default label, and memory location

4. When you are finished, press **<Options>** → **Save**.

After saving the new video, the device plays the video automatically.

## Make a storyboard

You can combine photos and videos to make a storyboard.

1. In Standby mode, press [Menu] → **Media** → **Video Editor** → **Storyboard**.
2. Select the photos and videos you want and press <**Done**>.

You can use the same options as when making a slideshow. See the previous section.

Additionally, you can use **Edit clip** to crop a selected video or add audio to the video.

3. When you are finished, press <**Options**> → **Save**.

After saving the new video, the device plays the video automatically.

## Image Editor

With Image Editor, you can edit images and apply fun effects.

### Apply effects to images

1. In Standby mode, press [Menu] → **Media** → **ImageEditor**.
2. Press <**Options**> → **New Image** → **Open** or **Capture image**.
3. Select an image or take a new photo.
4. Press <**Options**> → **Effects** → an effect option.
5. Select a variation of the effect to apply and press <**Done**>.
6. When you are finished, press <**Options**> → **Save as**.
7. Enter a new file name for the image and press <**OK**>.

## Adjust an image

1. In Standby mode, press [Menu] → **Media** → **ImageEditor**.
2. Press <**Options**> → **New Image** → **Open** or **Capture image**.
3. Select an image or take a new photo.
4. Press <**Options**> → **Adjust** → an adjustment option (auto level, brightness, contrast, or colour).
5. Using the navigation key, adjust the image as desired and press <**Done**>.
6. When you are finished, press <**Options**> → **Save as**.
7. Enter a new file name for the image and press <**OK**>.

## Transform an image

1. In Standby mode, press [Menu] → **Media** → **ImageEditor**.
2. Press <**Options**> → **New Image** → **Open** or **Capture image**.
3. Select an image or take a new photo.
4. Press <**Options**> → **Transform** → **Rotate** or **Flip**.
5. Using the navigation key, rotate or flip the image as desired and press <**Done**>.
6. When you are finished, press <**Options**> → **Save as**.
7. Enter a new file name for the image and press <**OK**>.



## Insert a visual feature

1. In Standby mode, press [Menu] → **Media** → **ImageEditor**.
2. Press <**Options**> → **New Image** → **Open** or **Capture image**.
3. Select an image or take a new photo.
4. Press <**Options**> → **Insert** → a visual feature (frame, image, clip art, emoticon, or text).
5. Select a visual feature to add and press <**Select**>.
6. Press <**Done**> or <**Options**> → **Done**.
7. When you are finished, press <**Options**> → **Save as**.
8. Enter a new file name for the image and press <**OK**>.

## Radio

You can listen to your favourite stations with the FM radio.



### Listen to the FM radio

1. Plug a headset into the headset jack.
2. In Standby mode, press [Menu] → **Media** → **Radio**.
3. Select  or  to scan through available radio stations.
4. Use the following options:
  - To access a radio station by manually entering a frequency, press <**Options**> → **Manual tuning**.
  - To adjust the volume level, press the Volume key.
  - To switch sound output to the speaker, press <**Options**> → **Activate loudspeaker**.



- To access other functions while listening to the radio, press **<Options>** → **Play in background**.

## Set up your favourite radio station list

Once you have set up a station list, you can access the stations by selecting  or  from the radio screen.

## Save radio stations by automatic tuning

1. From the radio screen, press **<Options>** → **Stations** to access the station list.
2. Press **<Options>** → **Auto-save stations**.
3. Press **<Yes>** to confirm (this will replace any existing stations).
4. When you are finished, press **<Back>**.

## Save a radio station manually

1. From the radio screen, scroll to the radio station you want.
2. Press **<Options>** → **Save station**.
3. Select an empty location.
4. Enter a station name and press **<OK>**.

## Record a radio clip

1. In Standby mode, press [Menu] → **Media** → **Radio**.
2. Press the Confirm key to begin the recording.
3. When you are finished recording, press the Confirm key. The radio clip is automatically saved.

## Play a radio clip

1. In Standby mode, press [Menu] → **Media** → **Gallery** → **Tracks**.
2. Scroll to a radio clip and press the Confirm key. Playback begins automatically.
3. Use the onscreen buttons to control the playback.

## RealPlayer®

Your device includes RealPlayer for viewing many types of media files and streaming content from the wireless web. RealPlayer supports files with the following extensions: 3gp, mp4, rm, ram, ra, and rv.

## Play a media file in RealPlayer

1. In Standby mode, press [Menu] → **Media** → **RealPlayer**.
2. Press <**Options**> → **Open** → **Most recent clips** or **Saved clip**.
3. Locate a media file and press the Confirm key.

## Play streaming web content with RealPlayer

When you open a link to streaming web content via your web browser, RealPlayer will buffer and play the content (see "Browse a web page." ► p. 73). You can then use the softkeys and volume key to control options for the streaming content.

## MICAT

MICAT is a multimedia transfer service. You can send a variety of media files to your friends or the preset website and back up your private data, such as SMS and contacts, to the website. For more information, contact your service provider.

In Standby mode, press [Menu] → **Installations** → **MICAT**.

## Recorder

You can use Recorder to record and play back voice memos and sound clips.

### Record a voice clip

1. In Standby mode, press [Menu] → **Media** → **Recorder**.

2. Press the Confirm key to begin the recording.
3. When you are finished recording, press **<Stop>**.  
The voice clip is automatically saved.

### Play a voice clip

1. In Standby mode, press [Menu] → **Media** → **Recorder**.
2. Press **<Options>** → **Go to Gallery**.
3. Scroll to a voice clip and press the Confirm key.  
Playback begins automatically.
4. Use the onscreen buttons to control the playback.

## PC Studio

PC Studio, which is included on the PC Studio CD-ROM, is a Windows-based program that allows you to manage your personal information and sync files to your device. For more information, install the program and refer to the PC Studio help.

### Install PC Studio

1. Insert the PC Studio CD into a Windows-compatible PC.
2. Select a language for the setup program.
3. Follow the onscreen instructions.



---

During installation, the setup program will automatically install the necessary USB drivers.

---

### Use PC Studio

To connect your phone to a PC with PC Studio, you must change the phone's USB mode (see "Use PC Studio."

► p. 82).

# Personal Productivity

Learn to manage contacts, schedule calendar events, create notes, and use QuickOffice and Adobe® Reader™.

## Contacts

Learn to use contact cards and groups to store personal information, such as names, phone numbers, and addresses.

### Create a new contact card

You can store contact cards in your device's memory or on a SIM card.

#### Create a new contact card in the device's memory

1. In Standby mode, press [Menu] → **Contacts**.

2. Press <**Options**> → **New contact**.
3. Enter contact information.



---

To insert additional information fields, press <**Options**> → **Add detail** → a detail type. To assign an image to the contact card, press <**Options**> → **Add thumbnail** → an image.

---

4. When you are finished entering information, press <**Done**> to save the contact card.

### Create a new contact card on a SIM card

1. In Standby mode, press [Menu] → **Contacts**.
2. Press <**Options**> → **SIM contacts** → **SIM directory** (SIM card).

3. Press **<Options>** → **New SIM contact**.
4. Enter contact information.
5. When you are finished entering information, press **<Done>** to save the contact card.

## Search for a contact card

1. In Standby mode, press [Menu] → **Contacts**.
2. Enter the first few characters of the contact name in the search box.  
The contact cards are listed, highlighting the name that most closely matches your input.
3. Scroll to a contact and press the Confirm key to open it.

## Copy contact cards

To copy contact cards from one memory location to another,

1. Open a contact list:
  - a. In Standby mode, press [Menu] → **Contacts** (device's memory).
  - b. In Standby mode, press [Menu] → **Contacts** → **<Options>** → **SIM contacts** → **SIM directory** (SIM card).
2. Scroll to a contact and press **<Options>** → **Copy to Contacts** or **Copy to SIM directory**.



If you have inserted a memory card, you can also copy contacts to and from the card: press **<Options>** → **Copy** → **To memory card** or **From memory card**.

---

## Set a default number or address

Some contact cards may include more than one number or address.

To assign a single number or address as the default,

1. Open a contact list (see "Copy contact cards." ► p. 65).
2. Scroll to a contact and press the Confirm key.
3. Press <**Options**> → **Defaults**.
4. Scroll to a default type and press the Confirm key.
5. Scroll to a number or address and press the Confirm key.
6. When you are finished, press <**Back**>.

## Assign a speed dial number to a contact card

You can assign speed dial numbers to up to eight contact cards ([**2**] through [**9**]); [**1**] is reserved as a speed dial number for your voice mail.

To assign a speed dial number,

1. In Standby mode, press [Menu] → **Contacts**.
2. Scroll to a contact and press the Confirm key.
3. Scroll to a phone number and press <**Options**> → **Assign speed dial**.
4. Scroll to a speed dial number and press the Confirm key.
5. Press <**Yes**> (if necessary).

## Assign a ringtone to a contact card or group

You can assign a ringtone to any contact card or group.

1. In Standby mode, press [Menu] → **Contacts**.
2. Scroll to a contact or group and press the Confirm key.
3. Press <**Options**> → **Ringtone**.
4. Scroll to a ringtone and press the Confirm key.



For an individual contact, your device will use the ringtone that was assigned last to the contact card. For example, if you assign a ringtone to a group and then assign another ringtone to a contact card within that group, the device will use the ringtone assigned to the contact card when that contact calls.

---

## Create a contact group

You can create groups of contacts and send messages to the entire group.

1. In Standby mode, press [Menu] → **Contacts**.
2. Scroll right to switch to the group list.
3. Press <**Options**> → **New group**.
4. Enter a name and press the Confirm key.
5. Scroll to your new group and press the Confirm key to open it.
6. Press <**Options**> → **Add members**.
7. Scroll to each contact you want to add and press the Confirm key.
8. When you are finished selecting contacts, press <**OK**> to save them to the group.



## Synchronise your contacts

To synchronise your contacts by using the current sync profile,

1. In Standby mode, press [Menu] → **Contacts**.
2. Scroll to a contact and press <**Options**> → **Synchronisation** → **Start**.
3. Scroll to a sync profile or device and press the Confirm key.



To change sync profiles or settings, see "Synchronise your device."

► p. 83

---

## Calendar

Use the calendar to keep track of appointments, birthdays, or other events.

### Create a calendar event

1. In Standby mode, press [Menu] → **Organiser** → **Calendar**.
2. Scroll to a date and press <**Options**> → **New entry** → an event type:
  - **Meeting**: a reminder at a specific date and time
  - **Memo**: general text
  - **Anniversary**: an annual reminder of a special date
  - **To-do**: a note about a particular task

3. Complete the fields and adjust the settings for your event.
4. When you are finished, press <**Done**> to save your entry.



In the **Synchronisation** field, you can specify whether an event is **Private** (seen only by you), **Public** (seen by anyone with access to your data after you sync), or **None** (not synchronised).

## Change the calendar view

1. In Standby mode, press [Menu] → **Organiser** → **Calendar**.
2. Press <**Options**> → a view type.

## Stop an event alarm

If you set an alarm for a calendar event, the alarm will sound for one minute at the specified time. To stop the alarm, press <**Stop**>. To silence the alarm, press <**Silence**>. To set the alarm to sound again shortly, press <**Silence**> → <**Snooze**> → a snooze period.

## Change calendar options

From any calendar view, press <**Options**> → **Settings** to change the following options:

- **Calendar alarm tone:** set a personalised alarm tone
- **Alarm snooze time:** set a snooze duration for calendar alarms
- **Default view:** set the view that is shown when you open Calendar

- **Week starts on:** set a day to show first in week view
- **Week view title:** set the title of the week view to a week number or date

### **Quickoffice®**

With Quickoffice, you can open Word, Excel, and PowerPoint files on your device.

### Open a Quickoffice document

1. In Standby mode, press [Menu] → **Organiser** → **Quickoffice**.
2. Scroll right to switch applications (Quickword, Quicksheet, and Quickpoint).
3. Scroll to a document and press the Confirm key.

4. While viewing a document, press **<Options>** to use the following options:

Option	Description
<b>Zoom</b>	Magnify part of a document
<b>Worksheet</b>	Switch to another worksheet
<b>Search</b>	Search for text
<b>Go to</b>	Jump to the top, bottom, or the specific part of a document
<b>Start Autoscroll</b>	Automatically scroll through a document
<b>Resize</b>	Resize a column or row, or fit a column into the widest column
<b>Pan</b>	Move right or left
<b>Full screen</b>	Use the full display for viewing

## Update Quickoffice

With Quickmanager, you can download program updates, new Quickoffice products, or special offers.

1. In Standby mode, press [Menu] → **Organiser** → **Quickoffice**.
2. Scroll right to switch to **Quickmanager**.
3. Scroll to a Quickmanager item and press the Confirm key.

## Adobe® Reader®

With Adobe Reader, you can open and view PDF documents.

1. In Standby mode, press [Menu] → **Organiser** → **Adobe PDF**.
2. Press <**Options**> → **Browse for file**.

3. Scroll to a memory location and press the Confirm key.
4. Scroll to a file type and press the Confirm key.
5. Scroll to a file and press the Confirm key.
6. While viewing a document, press <**Options**> to use the following options:

Option	Description
<b>Zoom</b>	Magnify part of a document
<b>Find</b>	Search for text
<b>View</b>	Use the full display for viewing or rotating the document
<b>Go to</b>	Skip to another page

## Notes

With Notes, you can create text notes and synchronise them with other devices.

### Create a note

1. In Standby mode, press [Menu] → **Organiser** → **Notes**.
2. Press <**Options**> → **New note**.
3. Enter text.
4. When you are finished entering text, press <**Done**> to save the note.

### Synchronise notes with other devices

1. In Standby mode, press [Menu] → **Organiser** → **Notes**.
2. Scroll to a note and press <**Options**> → **Synchronisation** → **Start**.
3. Scroll to a sync profile or device and press the Confirm key.

Your device allows you to connect to the wireless web with the built-in web browser. To connect to the web, you must:

- Subscribe to a wireless network that supports data calls
- Activate the data service for your SIM card
- Obtain an internet access point from a service provider
- Define your web settings





Your device is preset to access the wireless web. If you cannot connect to the web, contact your service provider to download new browser settings.






## Browse a web page

1. In Standby mode, press [Menu] → **Web**.

The device shows the list of bookmarks and folders.


2. Access a web page:
  - Scroll to a bookmark or folder and press the Confirm key
  - Enter a web address and press the Confirm key
3. While browsing a web page, press and hold the Confirm key to display or hide the toolbar:

Icon	Description
	Frequently used links
	Forward

Icon	Description
	Home
	Page overview
	Reload
	Find
	Stop

#### 4. To close the web connection, press **<Close>**.



- If your device shows "Not enough memory," close other running applications to free up memory, and then restart the browser.
- The device will show a security indicator () whenever you have established an encrypted connection.

While browsing, press **<Options>** to access the following:

- **Go to web address:** move to the entered web page
- **Bookmarks:** open the bookmark list
- **Save as bookmark:** create a new bookmark for the current page
- **Rotate screen:** switch to wide view
- **Navigation options:** view screenshots of pages you have visited recently or reload the current page
- **Zooming options:** zoom in or out on a web page
- **Window:** block all pop-ups while browsing the wireless web, or allow the pop-ups to display on the browser
- **Clear privacy data:** delete data transmitted while browsing the wireless web, such as cookies, data in the cache, history, and form or password data

- **Tools:** save pages for viewing offline, send a web page, or view information about a web page
- **Find:** search for text on a web page
- **Settings:** change the browser settings

## Change browser settings

From the browser, press <**Options**> → **Settings** to access the following:

- **General:** set access point, homepage, history, security, and Java options
- **Page:** set options for loading and displaying web content
- **Privacy:** set bookmark and cookie options
- **Web feeds:** set the page to update automatically

## Add a bookmark

1. In Standby mode, press [Menu] → **Web**.
2. Press <**Options**> → **Bookmark manager** → **Add bookmark**.
3. Enter the bookmark name, address, and access point, as well as a user name and password if desired.
4. Press <**Options**> → **Save**.









## ■ ■ Use a bookmark

While browsing, you can also access bookmarks (see "Add a bookmark."

► p. 75). Press <**Options**> →

**Bookmarks** to access the following:

Icon	Description
	Start page of the access point
	Folder of automatic bookmarks
	Folder you have created
	Default folder
	Web feed folder
	Bookmark

## ■ ■ Save a web page and view it offline

When you save a web page, you can view a copy of it offline without connecting to the web. The saved copy will not update automatically, so you must reconnect to the web periodically to retrieve the current version.

### Save a web page

1. Use your browser to access the web page (see "Browse a web page." ► p. 73).
2. Press <**Options**> → **Tools** → **Save page**.

The web page is saved to your device.

## View a saved web page

1. In Standby mode, press [Menu] → **Web**.
2. Scroll to **Saved pages** and press the Confirm key.
3. Scroll to a saved web page and press the Confirm key.
4. To update the web page, press <**Options**> → **Navigation options** → **Reload**.

## Download files from the web

When you download files from the web, your device stores them in a corresponding folder in the Gallery. For example, your device will store downloaded images in the **Images** folder.



Files you download from the web can include viruses that will damage your device. To lessen your risk, only download files from sources you trust.



Some media files include Digital Rights Management to protect copyrights. This protection may prevent you from downloading, copying, modifying, or transferring some files.

---

Learn to transfer data to and from your device via the Bluetooth wireless feature or the PC data cable.

## Use the Bluetooth wireless feature

You can connect with other Bluetooth-enabled wireless devices over a distance of 10 metres (30 feet). Walls or other obstacles between devices may block or impair the wireless connection.

### Turn on the Bluetooth wireless feature

1. In Standby mode, press [Menu] → **Connect.** → **Bluetooth.**





2. Scroll to **Bluetooth** and press the Confirm key.
3. To make your device visible to others, scroll to **My phone's visibility** and press the Confirm key.
4. Select a visibility option and press the Confirm key.

### Search for and pair with a Bluetooth-enabled device

1. In Standby mode, press [Menu] → **Connect.** → **Bluetooth.**
2. Scroll right to open the paired device list.

3. Press **<Options>** → **New paired device**.

Your device searches for and displays the list of Bluetooth-enabled devices:

Icon	Device type
	Mobile phone
	Computer
	Headset
	Hands-free car kit
	Audio device
	Unknown device

4. Scroll to a device and press the Confirm key.

5. Enter the Bluetooth passcode and press the Confirm key.



To pair with another Bluetooth-enabled device, both devices must use the same passcode. Headsets or hands-free car kit may use a fixed passcode, such as **0000**.

6. To allow the device to send and receive data without confirmation, press **<Yes>**. Otherwise, press **<No>** to require confirmation.

## Change paired device options

From the paired device list, press **<Options>** to access the following:

- **New paired device:** search for another Bluetooth-enabled device
- **Connect to audio device:** connect to the paired audio device

- **Assign short name:** set a short name for a paired device
- **Set as authorised/Set as unauthorised:** set to allow another device to connect automatically or require permission
- **Delete:** remove a device from the list
- **Delete all:** remove all devices from the list
- **Exit:** close the paired device list

### Send data via the Bluetooth wireless feature


1. Select a file or item to send.
2. Press **<Options>** → **Send** → **Via Bluetooth**.

3. Scroll to a paired device and press the Confirm key.
4. Enter a passcode and press **<OK>** (if necessary).

### Receive data via the Bluetooth wireless feature

1. When another device attempts to access yours, press **<Yes>** to permit the connection.
2. Press **<Yes>** again to confirm that you are willing to receive data from the device (if necessary).



Accepted items are placed in your Inbox. The  icon indicates messages received via Bluetooth.

---

## Activate Remote SIM mode

To use Remote SIM mode with a compatible hands-free car kit,

1. Connect to your device from an authorised hands-free car kit.
2. In Standby mode, press [Menu] → **Connect.** → **Bluetooth** → **Remote SIM mode** → **On.**

You can now make or answer calls only with the connected hands-free car kit via the SIM card on your device.

To deactivate it, press [⓪] → **Exit remote SIM mode.**

## Connect via USB

### Set a default action for your USB connection

To set your device to perform a default action when you connect the device to a computer with the PC data cable,

1. In Standby mode, press [Menu] → **Connect.** → **USB** → **USB mode.**
2. Set the default USB mode (**Media player**, **PC Studio**, or **Data transfer**).



You can also set your device to **Ask on connection**, instead of using a default USB mode. If you use this setting, your device will prompt you to choose the USB mode every time you connect to a computer.

## Use PC Studio

1. Change the USB connection to **PC Studio**.
2. Connect your device to a PC with the PC data cable.
3. Run PC Studio and manage personal data and media files.

Refer to the PC Studio help for more information.

## Synchronise with Windows Media Player

You can copy music files to the device by synchronising with Windows Media Player 11.

1. Change the USB connection to **Media player**.
2. Connect your device to a PC with the PC data cable.

3. Select **Sync digital media files to this device** when a pop-up window appears on your PC.
4. Enter the name of your device and click **Finish**.
5. Select and drag the music files you want to the sync list.
6. Click **Start Sync**.
7. When synchronisation is finished, disconnect the device from the PC.

## Copy files to a memory card

1. Insert a memory card into the device.
2. Change the USB connection to **Data transfer**.
3. Connect your device to a computer with the PC data cable.

4. Select **Open folder to view files** when a pop-up window appears on your PC.
5. Copy files from the PC to the memory card.
6. When you are finished, disconnect the device from the PC.

## Synchronise your device

Learn to synchronise the data on your device with data on a computer or other wireless device.

### Create a new sync profile

Your device includes a sync profile for PC Studio.

To create a new sync profile,

1. In Standby mode, press [Menu] → **Connect.** → **Sync.**
2. Press <**Options**> → **New sync profile.**
3. Press <**Yes**> to copy settings from an existing profile or <**No**> to define new settings.
4. Define the following:
  - **Sync profile name:** set a name for the profile
  - **Applications:** set the applications to synchronise
  - **Connection settings:** set options for connecting to the network
5. Press <**Back**> to save your new profile.



## Synchronise data

1. Connect your device to another Bluetooth-enabled wireless device (see "Search for and pair with a Bluetooth-enabled device." ► p. 78).
2. In Standby mode, press [Menu] → **Connect.** → **Sync.**
3. Press <**Options**> → **Synchronise.**
4. Scroll to a device and press the confirm key (if necessary).

Your device displays a progress metre at the bottom of the screen.



After synchronisation is complete, you can press <**Options**> → **View log** to view a list of data that was changed.

---

## Additional Programs

Learn to use Game, Calculator, Clock, Converter, GPS data, Landmarks, Mobile Stock, and E-Book.

### Game

Play a fun game with Mahjong.

In Standby mode, press [Menu] → **Installations** → **Mahjong**.

### Calculator

1. In Standby mode, press [Menu] → **Organiser** → **Calculator**.

2. Use the alphanumeric keys and the navigation key to perform basic mathematical operations.



Press [#] to insert a decimal. Press [C] to clear a result. Press [✖] to switch functions.

---

3. When performing calculations, press <**Options**> to access the following:
- **Last result:** insert the result from the last calculation
  - **Memory:** save, recall, or clear the calculator's temporary memory
  - **Clear screen:** clear all calculations on the screen

## Clock

You can adjust clock settings, set alarms, and create a world clock.

### Change clock settings

1. In Standby mode, press [Menu] → **Organiser** → **Clock**.
2. Press <**Options**> → **Settings** (see "Date and time." ► p. 103).

### Set a new alarm

1. In Standby mode, press [Menu] → **Organiser** → **Clock**.
2. Scroll right to the alarm view.
3. Press <**Options**> → **New alarm**.
4. Set alarm details.
5. Press <**Done**>.

### Stop an alarm

When an alarm sounds, press <**Stop**> to end the alarm or <**Snooze**> to repeat the alarm after a specified time. You can delay the alarm (snooze) up to five times.



Your current profile setting will not affect the volume of a clock alarm.

---

### Create a world clock

With a world clock, you can monitor the time in another city or country.

To create a world clock,

1. In Standby mode, press [Menu] → **Organiser** → **Clock**.
2. Scroll right to the world clock view.
3. Press <**Options**> → **Add city**.

4. Scroll to a city and press the Confirm key, or enter the first few letters of the city name to search the list.
5. Repeat steps 3 and 4 to add more cities (if necessary).
6. When you are finished adding cities, press **<Exit>**.

## Converter

With Converter, you can convert measurements or currencies from one unit to another. To convert currencies, you must first set a base currency and exchange rate.

### Add currencies and exchange rates

---



The value of the base currency is always 1. You must enter exchange rates for other currencies as they relate to one unit of the base currency. Exchange rates change often. To ensure an accurate conversion, you must enter a current exchange rate.

---

1. To set a base currency, in Standby mode, press [Menu] → **Organiser** → **Converter**.
2. Scroll right until the type shows **Currency**.
3. Press **<Options>** → **Currency rates**.
4. Scroll to a currency and press **<Options>** → **Rename currency**.
5. Enter the name of the base currency and press the Confirm key.

6. Press <**Options**> → **Set as base currency**.

7. Press <**Yes**> to confirm.

To add other currencies and exchange rates,

1. Repeat steps 1-4 above.
2. Enter the name of a new currency and press the Confirm key.
3. Scroll to the new currency and enter the exchange rate.
4. Press <**Options**> → **Save**.

### Convert currencies

1. In Standby mode, press [Menu] → **Organiser** → **Converter**.
2. Scroll right until the type shows **Currency**.

3. Scroll down to **Unit** and scroll right to select a currency to convert.

4. Scroll down to **Amount** and enter the amount to convert.

5. Scroll down to **Unit** and scroll right to select a currency to convert to.

The device displays the conversion result.

### Convert measurements

1. In Standby mode, press [Menu] → **Organiser** → **Converter**.
2. Scroll right to change the type of measurement.
3. Scroll down to **Unit** and scroll right to change the base unit (if necessary).
4. Scroll down to **Amount** and enter the base amount.

5. Scroll down to **Unit** and scroll right to change the conversion unit (if necessary).

The device displays the conversion result.

## GPS data

You can view GPS data to help you navigate, show your position, or monitor trip details. Before you can use GPS data, you must activate a positioning method via a Bluetooth wireless connection or a wireless network connection.



For information about mobile navigation, refer to <http://samsung.navigon.com>. This may not be available depending on your country or service provider.

## Activate a positioning method

1. In Standby mode, press [Menu] → **Tools** → **GPS data**.
2. Press <**Options**> → **Positioning settings**.
3. Scroll to a positioning method (**Bluetooth GPS** or **Network based**) and press <**Options**> → **Enable**.



- If you enable Bluetooth GPS, you must pair with a Bluetooth-enabled device (see "Search for and pair with a Bluetooth-enabled device." ► p. 78). Once you activate a positioning method, your device will attempt to open that connection when you launch GPS data.
- If you use Integrated GPS, you must install XTRA data file (see "Landmarks." ► p. 91).

## Navigate with GPS data

1. In Standby mode, press [Menu] → **Tools** → **GPS data** → **Navigation**.
2. Press <**Options**> → **Set destination** → **Coordinates**.
3. Enter the latitude and longitude of your destination and press the Confirm key.

Your device will display the direction of your destination, your current speed, and the duration of your trip.

4. To stop the GPS navigation, press <**Options**> → **Stop navigation**.

## View your current position

In Standby mode, press [Menu] → **Tools** → **GPS data** → **Position**.

## Monitor trip details

1. In Standby mode, press [Menu] → **Tools** → **GPS data** → **Trip distance**.
2. Press <**Options**> → **Start**.  
Your device will track trip details, including distance, time, and speed.
3. To stop monitoring trip details, press <**Options**> → **Stop**.

## Landmarks

With Landmarks, you can save your current location or manually enter new locations.

1. In Standby mode, press [Menu] → **Tools** → **Landmarks**.
2. Press <**Options**> → **New landmark** → **Current position** or **Enter manually**.



To add your current location automatically, your device must have an active connection.

---

3. Enter details about the landmark (if necessary).
4. When you are finished entering landmark information, press <**Done**>.

## Mobile Stock

Mobile Stock is a Windows Mobile software for mobile phones to use online stock transaction services. For more information, contact your service provider.

In Standby mode, press [Menu] → **Installations** → **Mobile Stock**.

## E-Book

E-Book is a mobile reading application which provides you with an electronic book reading, comments, and interactive communication services. For more information, contact your service provider.

In Standby mode, press [Menu] → **Installations** → **E-Book**.



Learn to manage files, applications, device configurations, activation keys, and connections.

## File manager

With File manager, you can search for and organise your files or folders.

### Search for a file or folder

1. In Standby mode, press [Menu] → **Organiser** → **File mgr.**
2. Press <**Options**> → **Find**.
3. Scroll to a memory location and press the Confirm key.
4. Enter text in the search field and press the Confirm key.

5. To open a file or folder from the search results, scroll to the file or folder and press the Confirm key.

### Create a new folder

1. In Standby mode, press [Menu] → **Organiser** → **File mgr.**
2. Press <**Options**> → **New folder**.
3. Enter a folder name and press the Confirm key.

### Move a file to a folder

1. In Standby mode, press [Menu] → **Organiser** → **File mgr.**
2. Scroll to a file or folder and press <**Options**> → **Move to folder** → a memory location (if necessary).

3. Scroll to a folder and press the Confirm key.
4. Scroll to a subfolder and press the Confirm key (if necessary).
5. Press the Confirm key.

## Application manager

Your device supports applications made for the Symbian OS and the Java platform, Micro Edition (J2ME™). Your device will not support applications made for other operating systems or Java platforms (including PersonalJava™). To download applications to your device, see "Download files from the web." ► p. 77

## Install a new application

1. In Standby mode, press [Menu] → **Installat.** → **App. mgr.**
2. Scroll to an application and press **<Options>** → **Install.**
3. Follow any onscreen instructions.



---

The application manager automatically tries to verify an application's digital signatures and certificates during installation and will show a warning if the application does not meet normal security requirements. To protect your device and your data, do not install applications that do not have valid digital signatures or certificates.

---

## Change installation options

In Standby mode, press [Menu] → **Installations** → **App. mgr.** → **<Options>** → **Settings** to access the following:

- **Software installation:** set to allow or block installations
- **Online certificate check:** set to check for online certificates when installing applications
- **Default web address:** set a default web address for checking online certificates

## Remove an application

1. In Standby mode, press [Menu] → **Installat.** → **App. mgr.**
2. Scroll to an application and press **<Options>** → **Remove.**
3. Press **<Yes>** to confirm.

## Device manager

This feature is network-dependent and may not be available from your service provider. If available, Device manager allows your service provider to assist you with device configurations. Before you can start a configuration session, you must define a server profile.

### Define a server profile

1. In Standby mode, press [Menu] → **Tools** → **Device mgr.**
2. Press **<Options>** → **New server profile.**
3. Set the following server options according to the instructions provided by your service provider:
  - **Server name:** set a name for this profile

- **Server ID:** set the ID of the remote server
- **Server password:** set the password that must be used by the device manager to synchronise your device
- **Access point:** set an access point
- **Host address:** set the web address of the host server
- **Port:** set a port to use for the device manager
- **User name:** set a user name for this profile
- **Password:** set a user password for this profile
- **Allow configuration:** set to allow the server to configure your device
- **Network authentication:** set to require network authentication

4. When you are finished setting the options, press <**Back**>.

## Start a configuration session

1. In Standby mode, press [Menu] → **Tools** → **Device mgr.**
2. Scroll to a server profile and press <**Options**> → **Start configuration.**
3. Press <**Yes**> to confirm.
4. Scroll to an access point and press the Confirm key (if necessary).

## Activation key manager

When you download digital content, you may need to purchase an activation key from the website that allows you to access the file.

### View activation keys

1. In Standby mode, press [Menu] → **Tools** → **Actv. keys**.
2. Scroll to a folder and press the Confirm key:
  - **Valid keys:** all valid activation keys
  - **Invalid keys:** expired activation keys
  - **Not in use:** activation keys of media files that are no longer stored on the device
3. Scroll to an activation key and press the Confirm key.

## Restore an expired activation key

When your activation key expires, you must purchase additional rights to use the media file.

1. In Standby mode, press [Menu] → **Tools** → **Actv. keys**.
2. Scroll to **Invalid keys** and press the Confirm key.
3. Scroll to an activation key and press **<Options>** → **Get new key**.
4. Press **<Yes>** to confirm.
5. Follow the onscreen instructions.

## Memory card manager

With Memory card manager, you can back up and restore data, protect a memory card with a password, or view memory details.

Before you can use a memory card for the first time, you must format the card.

### Format a memory card



Your device supports FAT16 or FAT32 file systems.

1. Insert a memory card (see "Insert a memory card (optional)." ► p. 17).
2. In Standby mode, press [Menu] → **Organiser** → **Memory**.
3. Press <Options> → **Format memory card**.
4. Press <Yes> to confirm.

### Back up data to a memory card

1. In Standby mode, press [Menu] → **Organiser** → **Memory**.
2. Press <Options> → **Back up phone memory**
3. Press <Yes> to confirm.

### Restore data from a memory card

1. In Standby mode, press [Menu] → **Organiser** → **Memory**.
2. Press <Options> → **Restore from card**.
3. Press <Yes> to confirm.

## Protect a memory card with a password

---



Devices that do not support this feature, such as PCs, cannot read the card while the password protection is active. Remove the password protection from the card to use it with those devices.

---

1. In Standby mode, press [Menu] → **Organiser** → **Memory**.
2. Press <**Options**> → **Set password**.
3. Enter and confirm a password (up to 8 characters).
4. To remove the password, press <**Options**> → **Remove password**.
5. Enter and confirm the password.

## View memory details

You can view the used and available memory on your memory card,

1. In Standby mode, press [Menu] → **Organiser** → **Memory**.
2. Press <**Options**> → **Memory details**.



## Connection manager

With Connection manager, you can view the details of data connections and close open connections.

## View connection details

1. In Standby mode, press [Menu] → **Connectivity** → **Conn. mgr.** → **Active data connections**.
2. Scroll to a connection and press <**Options**> → **Details** to access the following:
  - **Name:** the current access point or modem (if using a dial-up connection)
  - **Bearer:** the type of data connection
  - **Status:** the connection status
  - **Total:** the total amount of data received and sent
  - **Received:** the amount of data received
  - **Sent:** the amount of data sent

- **Duration:** the length of time the connection has been open
- **Speed:** the current upload and download speeds
- **Acc. pt.:** the name of the access point in use
- **Shared:** the number of applications using the same connection

## Close an open connection

1. In Standby mode, press [Menu] → **Connectivity** → **Conn. mgr.** → **Active data**.
2. Scroll to a connection and press <**Options**> → **Disconnect**.
3. Press <**Yes**> to confirm.



## View wireless connection details

1. In Standby mode, press [Menu] → **Connectivity** → **Conn. mgr.** → **Available WLAN networks**.
2. Scroll to a connection and press **<Options>** → **Details** to access the following:
  - **Network**: the name of the access point in use
  - **Signal**: the strength of the signal
  - **Mode**: the current network mode
  - **Security**: the security state of the access point in use
  - **Coverage**: the number of access points
  - **Speed**: current upload and download speeds

# Settings

Learn about your device settings. To access your device settings,

1. In Standby mode, press [Menu] → **Settings**.
2. Scroll to a category (**General**, **Phone**, **Connection**, or **Applications**) and press the Confirm key.



You can also access some settings from other menus: press <**Options**> → **Settings**.

## General settings

### Personalisation

Control the appearance and behavior of your display, Standby mode, tones, and language (for **Themes** settings, see "Apply a theme." ► p. 22).

### Display

- **Brightness**: set the brightness of the display
- **Font size**: set the size of the text on the display
- **Welcome note/logo**: set a text note or image that shows when you turn on the device
- **Backlight on time**: set the delay before the backlight dims
- **Dim time**: set the delay before the dimmed backlight turns off

### Standby mode

- **Active standby**: set to show application shortcuts and calendar events in Standby mode

- **Shortcuts:** set the softkey shortcuts for Standby mode
- **Active standby apps.:** set the application shortcuts to show in Standby mode

### Tones

- **Ringtone:** set a ringtone for incoming calls
- **Ring type:** set a ring type
- **Ring volume:** set the volume for ringtones and message alerts
- **Message alert tone:** set a tone for incoming text or multimedia messages
- **E-mail alert tone:** set a tone for incoming email messages
- **Calendar alarm tone:** set a tone for calendar events
- **Clock alarm tone:** set a tone for a clock alarm

- **Vibrating alert:** set a vibrating alert for incoming voice calls and text or multimedia messages
- **Keypad tones:** set the volume for keypad tones
- **Warning/game tones:** set the device to sound a warning tone (e.g., when the battery is low) or a tone while playing a game

### Language

- **Phone language:** set a display language (for all menus and applications)
- **Writing language:** set a language for writing messages (for all text editors and dictionaries)
- **Predictive text:** turn Predictive text on or off (for all text editors)

## Date and time

Control the appearance and behavior of the date, time, and alarms.

- **Time:** set the current time (press [C] to switch between am and pm)
- **Time zone:** set the time zone
- **Date:** set the current date
- **Date format:** set a date format
- **Date separator:** set a date separator
- **Time format:** set a time format
- **Time separator:** set a time separator
- **Clock type:** set a clock type for the display
- **Clock alarm tone:** set a tone for a clock alarm
- **Alarm snooze time:** set the delay for alarms to repeat

- **Workdays:** set the days of the week to sound alarms
- **Network operator time:** set the network to automatically update the time and date

## Enhancement

Set the device to use the headset, headphone, hands-free car kit, or a TV as the default enhancement.

Press <Options> → **Set**. You can change the following settings for either enhancement:

- **Default profile:** set the default profile for the enhancement
- **Automatic answer:** set the enhancement to automatically answer incoming calls (when connected to the device)

- **TV screen size:** set a screen size of your TV
- **TV system:** set a system of your TV

## Security

Set security codes and manage security certificates or security modules.

### Phone and SIM card

- **PIN code request:** set the device to request a PIN code each time you turn it on
- **PIN code:** set a PIN code for the device
- **PIN2 code:** set a PIN2 code (supplied with some SIM cards)
- **Phone autolock period:** set the delay before the device locks automatically
- **Lock code:** set a lock code for the device
- **Lock if SIM card changed:** set the device to lock automatically when the SIM card is changed
- **Closed user group:** set the device to restrict calls to and from a selected group of users
- **Confirm SIM services:** set the device to show a confirmation message when you use a SIM service
- **Lock Keypad if slide closed:** set to lock the keypad automatically when the device is closed

## Certif. management

Your device uses digital certificates to verify the identity and authenticity of various online services and software. These certificates help keep your personal data secure and help you avoid viruses and other dangerous software. In Certificate management, you can view certificate details, delete certificates, or change the following trust settings:

- **Internet:** set the device to verify web servers that use this certificate
- **Online certif. check:** set the device to check the certificate against a list of revoked certificates
- **VPN:** set the device to verify VPN connections that use this certificate

## Security module

Manage security modules on your device.

## Factory settings

Reset settings to their factory defaults. You must enter the lock code to reset the device. After entering the code, the device will restart.

## Positioning

Control the methods and servers your device uses to retrieve global positioning information.

### Positioning methods

- **Bluetooth GPS:** set the device to use the Bluetooth feature to retrieve global positioning information
- **Network based:** set the device to use the cellular network to retrieve global positioning information

## Positioning server

- **Access point:** set an access point for the global positioning server
- **Server address:** set a web address for the global positioning server

## Phone settings

### Call

Control how your device handles calls with caller ID, call waiting, speed dial, and other call settings.

- **Send my caller ID:** set to send your caller ID based on your preferences or network settings
- **Call waiting:** set to alert you of an incoming call while you are on a call
- **Reject call with SMS:** set to send a text message to callers you reject
- **Message text:** set the message to send to rejected callers
- **Automatic redial:** set to automatically redial an unconnected call
- **Show call duration:** set to show the length of a call
- **Summary after call:** set to show a summary after a call
- **Speed dialling:** set to allow speed dialling
- **Anykey answer:** set to answer a call when you press any key (except [⏏], [🔊], and the Volume key).
- **Alert during call:** set to sound a tone when you receive a message and an alarm expires during a call

- **Side volume key:** set the Volume key to mute the ringer or reject calls when pressed during an incoming call
- **Slide up:** set to answer a call when you open the device
- **Slide down:** set to continue or stop an operation when you close the device

## Call divert

Divert incoming calls to another number. When you divert calls, you must specify a receiving number or delay time for diverted calls.

### Voice calls

- **All voice calls:** set to divert all voice calls
- **If busy:** set to divert calls when you are on another call

- **If not answered:** set to divert calls you do not answer
- **If out of reach:** set to divert calls when you are outside the service area
- **If not available:** set to divert calls when your device is off

### Data calls

- **All data calls:** set to divert all data calls
- **If busy:** set to divert calls when you are on another call
- **If not answered:** set to divert calls you do not answer
- **If out of reach:** set to divert calls when you are outside the service area
- **If not available:** set to divert calls when your device is off



## Call barring

- **Outgoing calls:** set to prevent all outgoing calls
- **International calls:** set to prevent calls to international numbers
- **International calls except to home country:** set to prevent international calls to countries other than your home country
- **Incoming calls:** set to prevent all incoming calls
- **Incoming calls when abroad:** set to prevent incoming calls when you are outside your home service area

## Network

Control network modes and selection methods.

- **Operator selection:** set the device to automatically or manually select a list of cellular networks



To receive service on another network, you must select one that has a roaming agreement with your home network.

---

- **Cell info display:** set to indicate when the device is used in a Micro Cellular Network
- **Operator Settings:** check your service provider according to the SIM card you are using

## Connection settings

### Bluetooth

Control the Bluetooth wireless feature.

- **Bluetooth:** turn the Bluetooth wireless feature on or off
- **My phone's visibility:** make your device visible to or hidden from other Bluetooth-enabled devices and set how long the device is visible to other Bluetooth-enabled devices
- **My phone's name:** set a name for your device
- **Remote SIM mode:** activate Remote SIM mode to make a call from a Bluetooth hands-free car kit connected to your device

### USB

Control how your device behaves when you connect it to a PC.

- **USB mode:** set to **Media player** (when synchronising with Windows Media Player to copy media files), **PC Studio** (when using PC Studio to sync files), or **Data transfer** (when using a memory card to transfer files)
- **Ask on connection:** set to ask which mode to use when you connect to a PC

### Access points

Control access point connections, passwords, and homepages.

- **Connection name:** set a name for the access point connection
- **Access point name:** set the web address for the access point

- **User name:** set a user name
- **Prompt password:** set to ask for a password when you connect to the access point
- **Password:** set a password for the access point
- **Authentication:** set an authentication mode
- **Homepage:** set a homepage for access points that connect to web services

You can also define advanced settings for access points: press <**Options**> →

### **Advanced settings.**

- **Network type:** set a network type (IPv6 or IPv4)
- **Phone IP address (IPv4 only):** set the IP address of your device
- **DNS address (IPv4):** set primary and secondary domain name server (DNS) addresses or set to 0.0.0.0 for automatic detection
- **DNS address (IPv6):** set primary and secondary domain name server (DNS) addresses or set to **Automatic** (use automatic detection) or **Well-known** (use well-known IPv6 addresses)
- **Proxy server address:** set the IP address of the proxy server
- **Proxy port number:** set the port number of the proxy server

## Packet data

Control packet data connections when using a GPRS network.

- **Packet data connection:** set to open a packet data connection, **When needed** (if an application needs to send packet data) or **When available** (anytime a packet data connection on a GPRS network becomes available)
- **Access point:** set an access point name to send packet data to a PC (see PC Studio help)

## Configurations

View network configurations received from your service provider. To apply the configurations, press <**Options**> → **Save**.

## APN control

Control the use of packet data connections, if your SIM card supports the access point control service. To turn this service on or off or to change the allowed access points, press <**Options**>.

## Applications settings

### RealPlayer

Control how RealPlayer behaves when playing videos or streaming media.

### Video

- **Contrast:** set the contrast for the video playback
- **Loop:** set to loop video playback

### Streaming (Proxy)

- **Use proxy:** set to use a proxy server
- **Proxy server address:** set the address of a proxy server
- **Proxy port number:** set the port number of a proxy server

### Streaming (Network)

- **Default access point:** set a default access point
- **Online time:** set a time to remain online when RealPlayer is inactive
- **Lowest UDP port:** set the lower end of a range of server ports
- **Highest UPD port:** set the higher end of a range of server ports

### Camera

Control how the camera behaves when you capture images or videos.

#### General

- **Extended Digital Zoom:** set to extend the zoom ratio
- **Shutter sound:** set to sound when you press the shutter release key
- **Contrast:** set the contrast for new images and videos
- **Saturation:** set the saturation for new images and videos
- **Sharpness:** set the sharpness for new images and videos
- **Date/Time:** set to insert date or time and date

- **Default storage:** set a memory location to store new images or videos
- **GPS Off/On:** set to store the current location information

## Image

- **Quality:** set to capture High, Normal, or Economy quality images
- **ISO:** set an ISO setting to controls the sensitivity of the device
- **Exposure Metering:** set to use a Matrix, Spot, or Center-weighted light meter
- **Auto Focus:** set to use Auto-focus mode
- **Single Shot Mode:** set to save new images automatically

## Video

**Quality:** set to capture High, Normal, or Economy quality videos

## Voice recorder

Control the quality and memory location of voice clips.

- **Recording quality:** set to record High or MMS-compatible voice clips
- **Memory in use:** set a memory location to store new voice clips

## App. manager

Control how your device behaves when you install new applications.

- **Software installation:** set to install only programs with signed security certificates or to install all programs
- **Online certificate check:** set to require that applications pass a security certificate check
- **Default web address:** set a default web address to use when checking security certificates

## Log

Set how long the Log will store call and packet data information.

# Troubleshooting

If you have trouble with your device, try these procedures before you contact a service professional.

## Contacting a service centre

If you have attempted the troubleshooting solution and are still having problems with your device, make a note of the following information and contact your local dealer or Samsung after-sales service:

- Model number(s) of your device
- Serial number(s) of your device
- A clear description of the problem

When contacting Samsung, use the contact phone numbers, web addresses, or postal addresses for your country of residence.

**When you turn on your device, the following messages may appear:**

Message	Try this to solve the problem:
Insert SIM card	Ensure that the SIM card is installed correctly.
Locked	<p>The autolock feature is enabled. To use the device, you must press &lt;<b>Unlock</b>&gt; and enter the code. To disable the autolock feature,</p> <ol style="list-style-type: none"><li>1. In Standby mode, press [Menu] → <b>Settings</b> → <b>General</b> → <b>Security</b> → <b>Phone and SIM card</b>.</li><li>2. Set the Phone autolock period to <b>None</b>.</li></ol>



Message	Try this to solve the problem:
PIN code	<p>When using the device for the first time or when the PIN code request is enabled, you must enter the PIN supplied with the SIM card. To disable the PIN code request feature,</p> <ol style="list-style-type: none"> <li>1. In Standby mode, press [Menu] → <b>Settings</b> → <b>General</b> → <b>Security</b> → <b>Phone and SIM card</b>.</li> <li>2. Set the PIN code request to <b>Off</b>.</li> </ol>
PUK code	<p>Your SIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.</p>

### Your device does not show a signal (no bars next to the network icon)

- If you just turned on the device, wait about 2 minutes for your device to find the network and receive a signal.
- You may not be able to receive a signal in tunnels or elevators. Move to an open area.
- You may be between service areas. You should receive a signal when you enter a service area.


### You forgot a security, PIN, or PUK code

The default lock code is **00000000**. If you forget or lose this or another code, contact the seller or your service provider.

**Your display shows white lines**

The display may show white lines if you have turned the device on after a long period of disuse or if you removed the battery without first turning off the device. The display should correct itself in a short time.

**You enter a number, but the call is not dialed**

- Ensure that you have pressed [].
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

**You select a contact to call, but the call is not dialed**

- Ensure that the correct number is stored in the contact information.

- Re-enter and save the number, if necessary.

**Another caller cannot hear you speaking**

- Ensure that you are not blocking the built-in microphone.
- Move the built-in microphone closer to your mouth.
- If using a headset, ensure that it is properly connected.

**The sound quality of a call is poor**

- Ensure that you are not blocking the internal antenna on top of the device.
- When you are in areas with weak signals, you may lose reception. Move to another area and try again.

### **The battery does not charge properly or sometimes your device turns itself off while charging**

- Disconnect the device from the charger, remove and reinstall the battery, and try charging again.
- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery no longer charges completely, dispose of the old battery properly and replace it with a new battery.

### **Your device is hot to the touch**

When you use several applications at once, your device requires more power and may heat up. This is normal and should not affect your device's lifespan or performance.

### **Your device prompts you to delete some data**

The available memory is low. Move your data to a memory card or delete old items from applications.

### **An application is frozen (will not respond)**

1. Press and hold [Menu] to open the application list.
2. Scroll to the application that is frozen and press [C] and then <Yes>.
3. Launch the application again.

## You cannot find a Bluetooth-enabled device

- Ensure that both devices have activated the Bluetooth wireless feature.
- Ensure that the distance between the devices is not more than 10 metres and that they are not separated by walls or other obstacles.
- Ensure that each device's visibility is not set to **Hidden**.
- Ensure that both devices are compatible with Bluetooth wireless technology.