

### Package Contents

You should have received the following components in your SS-300-AT-C-55 package.



**Tip:** The internal antennas of SS-300-AT-C-55 give optimal coverage and performance in the following configurations:



#### Vertical wall mount

AirTight logo facing away from the mounted wall



#### Horizontal ceiling mount

AirTight logo facing the floor

### Getting SS-300-AT-C-55 Online

#### Step 1: Power up

If using PoE, plug one end of the Ethernet cable into the PoE switch or injector and plug the other end into the Ethernet port on the SS-300-AT-C-55. Make sure the PoE source you are using is turned ON.


OR

If not using PoE, insert the power adapter plug into an AC power outlet and the other end into the power input port on the SS-300-AT-C-55.

**Warning:** If not using PoE, make sure to use a rated AC power adapter to power up the SS-300-AT-C-55 device. Contact your sales representative for more details.

#### Step 2: Connect to the network

If you are using PoE, then SS-300-AT-C-55 should already be connected to your network. If you are not using PoE, then plug one end of the Ethernet cable into an Ethernet jack on your network and the other end into the Ethernet port on the SS-300-AT-C-55.

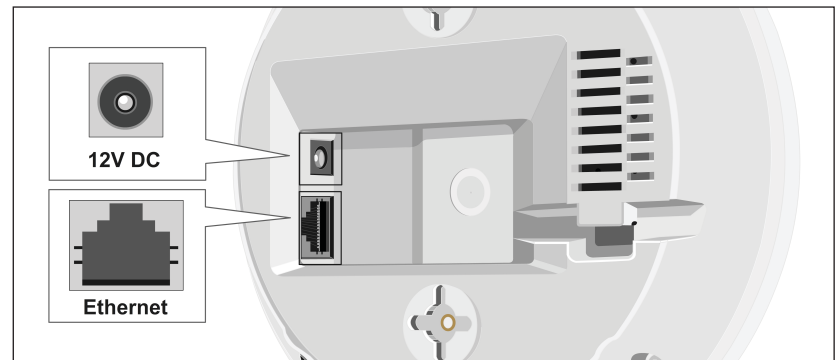

#### Step 3: Check the LED status

Wait for a few minutes till the three LEDs for Power, LAN and Wi-Fi turn ON, which indicates that the SS-300-AT-C-55 is operational. Please refer to the table overleaf for details.

