

# USER GUIDE

**XP3.20 QUEST**

English

  
**sonim**<sup>®</sup>  
BUILT FOR LIFE<sup>™</sup>

Copyright © 200 Sonim Technologies, Inc.

SONIM, Sonim Xperience, Sonim Xtend and the Sonim logo are trademarks of Sonim Technologies, Inc. Other company and product names may be trademarks or registered trade- marks of the respective owners with whom they are associated.



### Disposal of old electrical & electronic equipment



The symbol of the crossed-out wheeled bin indicates that within the countries in the European Union, this product, and any enhancements marked with this symbol, can not be disposed as unsorted waste but must be taken to separate collection at their end- of-life.

### Disposal of battery



Please check local regulations for disposal of batteries. The battery should never be placed in municipal waste. Use a battery disposal facility if available.

**General Information**-----6

Network Services  
 Sonim Support Information  
 Use the guide effectively  
 Options commonly used across menu items  
 Phone Models Covered

**Your Safety Guidelines**-----8

Battery Performance  
 Battery Replacement  
 Avoid Short Circuit  
 Avoid High Temperatures  
 Battery Disposal  
 Personal Medical Devices  
 Child Safety  
 Emergency Calls  
 SAR Certification

**Getting Started**-----12

Battery Usage  
 Inserting the Battery  
 Removing the Battery  
 Charging the Battery  
 Set Battery Alert  
 Your SIM Card  
 Inserting the SIM card  
 Removing the SIM card  
 Home screen  
 Operations in Home Screen  
 Basic Settings  
 Keypad Functions

**Your XP3.20 Phone**-----24

Your XP3.20 Phone  
 Main Menu  
 Main Menu icons  
 Home Screen Indicators  
 Key Operations Without Your SIM Card

**Phone Settings**-----28

Phone Settings  
 General Settings

Display Settings  
 Sounds Settings  
 Connectivity Settings

**Calls**-----33

Calls  
 Dial a Number  
 Dial an International Number  
 Dial a Number via Contacts  
 Dial a Number Via the Calls List  
 Managing Call List  
 Fixed Number Dialing  
 Speed Dial  
 Receive a call  
 Any Key Answer  
 Call Forwarding  
 Call Barring  
 Call Waiting  
 Auto Redial  
 Auto Answer  
 Filter Calls  
 Add to Black list  
 Other Call Settings  
 Review Call Cost Information  
 Recording a Call

**Managing Contacts**-----38

Managing Contacts  
 Add a New Contact  
 Dialing a Number From Contacts  
 Sending a Message From Contacts  
 Add a New Contact in Group  
 Group Settings  
 Special Numbers  
 Default Contact List  
 Default Contact Location  
 Sending Contact  
 Delete Contacts  
 Copy or Move Numbers to Other Lists  
 Adding a Contact to Blacklist  
 Adding a Contact to Whitelist

Searching Contacts

## **Messages**-----41

Messages  
 Advanced Settings  
 Text Input Mode  
 Write Messages  
 Send a Message Via Contacts  
 Call Or Save a Number Embedded in a Received  
 Message  
 Manage your Messages  
 Inbox  
 Outbox  
 Draft Messages  
 Sent Messages  
 Predefined Messages  
 View SMS Memory  
 Voice mail  
 SIM Card Menu

## **Hardcoded Shortcuts**-----45

Hardcoded shortcuts

## **WAP Browser**-----46

WAP Browser

## **Opera Mini**-----47

Opera Mini  
 Configuration of APN (Access Point Name) for Opera  
 Mini  
 Configuration of Opera Mini as Key Shortcut

## **Java**-----48

Java  
 Launch Application

## **Tools**-----49

Tools  
 Alarm  
 Bluetooth  
 Calendar  
 Calculator  
 Voice recorder

Audio Playback  
 Stopwatch  
 Unit Converter  
 Countdown Timer  
 GPS  
 USB function

## **FM Radio**-----55

FM Radio

## **Camera**-----56

Camera  
 Camera Options

## **Flashlight**-----57

Flashlight

## **Sonim Xperience™**-----58

Sonim Xperience™  
 Starting With Sonim Xperience™  
 Settings  
 Set Quick Access  
 Wallpaper  
 GPS Information  
 Weather Report  
 Current Weather  
 4 hour Forecast  
 3 day Forecast  
 3 day Detailed Forecast  
 Weather at Stations  
 Lightning Information  
 Marine Bulletin  
 Help  
 About  
 Exit

## **Micro SD Card**-----64

Micro SD (secure digital) Card  
 Inserting Micro SD Card Into the Phone

## **Managing Your Files**-----65

Managing Your Files

**Wired Headset**-----**66**

Wired Headset  
During Calls

**End User License Agreement**-----**67**

Unconditional 3 year Guarantee  
Our Guarantee  
What We Will Do  
Phone Care  
Conditions

**Index**-----**70**

**3** **UNCONDITIONAL**  
**3 YEAR GUARANTEE**

Congratulations on the purchase of a Sonim XP3.20™ mobile phone. This phone is a GSM/GPRS/EDGE enabled handset with tri-band capabilities and has an intuitive, feature-rich user interface, which allows you to make the best use of the offered functions.

## Phone Models Covered

This user guide covers two Sonim XP3.20™ phone models: XP3.20-E and XP3.20-A. These two models contain an identical scope of features and differ only in the supported set of radio frequencies:

- Sonim XP3.20-E Quest (GSM 900/1800/1900 MHz)
- Sonim XP3.20-A Quest (GSM 850/1800/1900 MHz)

The model name can be read on the phone label under the battery. In this User Guide, both models are referred to as XP3.20, except for the few places where information corresponding to a specific model (that is, XP3.20-A or XP3.20-E) can be found.

## Network Services

These are additional services that you can avail through your network service provider. To make the best of these services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Sonim Support Information

For additional product and support information, visit [www.sonimtech.com](http://www.sonimtech.com).

## Use the Guide Effectively

Acquaint yourself with the terminology and symbols used in the guide to help you use your phone effectively.

---

### PRESS

Means to press and release a key immediately. For example, Press 2 means that you press the key on the keypad that is labelled with the numeral 2 and the alphabets “ABC”.

---

### SELECT

Means to either press the Left or Right Selection Key to apply the command indicated at the bottom of the screen. The Center navigation key can also be used to select options. For example, if this guide says Select **Menu > Messages > Create message**, you must press the Left Selection Key to select Menu, scroll to Messages and press the Left Selection Key, scroll to Create message and press the Left Selection Key. To return to the previous screen, press the Right Selection Key.

---

---

**PRESS & HOLD**

Means to press and hold a key for 2 seconds before releasing the key. This action is typically used when trying to switch on/off the phone or when using shortcuts to access specific functions. For example: press and hold 1 to access voicemail.

---

**MENU OPTIONS**

These options are displayed at the bottom of the screen. The selection keys are used to accomplish the indicated option.

---

**SELECT MENU**

Means to press the **Left Selection Key** to select the **Menu** option or press the Menu key (centre) for the same result.

---

**A MENU ITEM SUFFIXED WITH THREE DOTS (...)**

Means more options are available but only one has been mentioned in the guide.

---



Signifies a Note.

---

**Options Commonly Used Across Menu Items**

The following are common actions used across various menu items:

---

**EXIT**

Displays the previous screen. Use the Right Selection key to perform this function.

---

**CLEAR**

Deletes data character by character. Use the Right selection key to perform this function.

---

**OK**

Confirms an action. Use the Left Selection Key or the Menu key to perform this function.

---



Please read and understand the following safety guidelines before you use the phone. These guidelines provide details to enable you to operate your phone safely and conform to any legal requirements regarding the use of cellular phones.



Do not use the phone at a refuelling point. Observe restrictions when using radio equipment at fuel depots, chemical plants or where blasting operations are in progress.



Electrical interference may obstruct the use of your phone. Observe restrictions in hospitals and near medical equipment.



Switch off your cellular phone when in an aircraft. Wireless phones can cause interference or danger to an aircraft. In an aircraft, the phone can be used in flight mode.



Do not expose the battery to high temperatures (in excess of 60°C).



Adhere to road safety laws. Do not hold/use a phone while you are driving; find a safe place to stop first. Do not speak into a hands-free microphone while you are driving.



Avoid using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.



Use only Sonim XP3.20 approved charging equipment to charge your phone and avoid damage to your phone.



The symbol of the crossed-out wheeled bin indicates that within the countries in the European Union, this product, and any enhancements marked with this symbol, can not be disposed as unsorted waste but must be taken to separate collection at their end-of-life.





Ensure that only qualified personnel install or repair your phone.



The Sonim XP3.20 is water-proof and can be submerged to 1 metre for 30 minutes. It can work for 30 minutes if immersed. However, it is not waterproof in deeper water, during charging or when the system connector cover on bottom of the phone is open or compromised.

- To keep your phone waterproof, make sure that the connector cover located at the bottom is firmly plugged in every time it is open for charging or use of a wired headset
- Water droplets may form on the connector cover when it is opened soon after immersion. This does not indicate water leakage. The connector cover is sealed and waterproof.
- Water droplets may condense under the display cover if the phone is immersed in water with significant drop in temperature. This does not indicate water leakage. The droplets will disappear at room temperature.

The Sonim XP3.20 is dust-resistant, rugged and shock-resistant. However, it is not dust-proof or un-breakable if subjected to overwhelming impact. For best results and long product life, one should protect the XP3.20 from salt water, dust and strong impacts.



Make back-up copies of important information stored in your phone or maintain a written record.

## Battery Performance

A rechargeable battery powers your device. Use the battery only for its intended purpose. Never use any charger or battery that is damaged. If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. Unplug the charger from the electrical plug and the device when not in use. Do not leave the fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

## Battery Replacement

When the talk and standby times are noticeably shorter than normal, replace the battery with an original Sonim battery. If a replacement battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger and then disconnect and reconnect it to begin charging the battery.

## Avoid Short Circuit

Do not short-circuit the battery. An accidental short-circuit can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. A short-circuit at the terminals may damage the battery or the connecting object.

## Avoid High Temperatures

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

## Battery Disposal

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations and recycle when possible. Do not dispose as household waste. Do not dismantle, open or shred cells or batteries. In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. In the event of a leak or a hazard seek medical help immediately.

## Personal Medical Devices

Mobile phones may affect the operation of cardiac pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, for example, in your breast pocket. When using the mobile phone, place it at the ear opposite the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you suspect that interference is taking place, immediately turn off your mobile phone. Contact your cardiologist for more information. For other medical devices, consult your physician and the manufacturer of the device. Comply with instructions to switch off the device or deactivate the RF transmitter function when required, especially when posted in hospitals and aeroplanes. Equipment used in these places may be sensitive to radio waves emitted from the device and

adversely affect their operation. Also, observe restrictions at gas stations or other areas with flammable atmospheres or when close to electro-explosive devices.

### Child Safety

Do not allow children to play with your mobile phone or its accessories. Keep it out of their reach. They could hurt themselves or others, or could accidentally damage the mobile phone or accessories. Your mobile phone and its accessories may contain small parts, which could be detached and create a choking hazard.

### Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection under all conditions. Therefore you should never rely solely upon any mobile phone for essential communications (e.g. medical emergencies). Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use. Check with your local service provider.

### SAR Information

**XP3.20 has been certified in compliance with the Government's requirements for exposure to Radio Waves.**

When communicating over the wireless network, the mobile phone emits low radio waves known as radio frequency energy or RF. The Specific Absorption Rate or SAR is the unit used to measure the amount of RF energy absorbed by the body while using the phone and is expressed in watts/kilogram (W/kg).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, for example, ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population.

Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.

**SAR Data Information for residents in countries that have adopted the SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP). For example, European Union, Japan, Brazil and New Zealand.**

The limit recommended by ICNIRP is 2 W/kg averaged over ten (10) gram of tissue.

The highest SAR value for the XP3.20-E phone when tested by Sonim for use at the ear is 0.582 W/kg (10g).

The highest SAR value for the XP3.20-A phone when tested by Sonim for use at the ear is 0.253 W/kg (10g).

**SAR Data Information for residents in the United States and Canada.**

In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram averaged over one gram of tissue. The standard incorporates a margin of safety to give additional protection for the public and to account for any variations in measurements.

Before a phone model is available for sale to the public in the US, it must be tested and certified by the Federal Communications Commission (FCC) that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, by the ear and worn on the body) as required by the FCC for each model. The FCC has granted an Equipment Authorization for XP3.20 with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. While there may be differences between the SAR levels of various phones, all mobile phones granted an FCC equipment authorization meet the government requirement for safe exposure.

The highest SAR value for the XP3.20-A phone when tested by Sonim for use:

- By the ear is 0.557 W/kg (1 g),
- When worn on the body is 0.532 W/kg (1 g) for speech and 0.519 W/kg (1 g) for data calls.

The highest SAR value for the XP3.20-E phone when tested by Sonim for use:

- By the ear is 0.204 W/kg (1 g),
- When worn on the body is 0.153 W/kg (1 g) for speech and 0.275 W/kg (1 g) for data calls.

For body-worn operation, this phone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 1.5 cm from the body, or with the original Sonim accessory intended for this phone and worn on the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

## Battery Usage

- Use only an XP3.20 certified battery that is designed for this phone model.
- The use of other batteries may void the warranty terms of your phone and cause damage.
- Do not subject the battery to extreme temperature environments and protect it from moisture.
- Please keep the battery out of the reach of children.

## Inserting the Battery

### 1 Unscrew Cover

To open the battery cover, rotate both the battery cover screws in an anti-clockwise direction (as shown in the figure). Sometimes, the battery cover may be tight and some extra effort is required to open it.



### 2 Lift Cover

Lift the flap that covers the battery.



### 3 Insert Battery

Insert the battery flush into the battery slot such that the three metallic contacts at the top of the battery are aligned with the metallic contacts within the battery compartment.



### 4 Close Cover

Close the battery cover. Rotate the battery cover screws in clockwise direction.

## Removing the Battery

Follow steps 1 and 2 of **“Inserting the Battery”** on page 14.

To remove the battery, lift the flap behind the phone and raise the upper end of the battery from the slot.

The battery can now be removed.

Follow step 4 of **“Inserting the Battery”** on page 14 to close the cover.

## Charging the Battery

The battery delivered with your mobile phone is not fully charged. We recommend that you charge your mobile for three hours before you use your mobile phone for the first time.



If the battery is deeply discharged, it can take several minutes for the charging icon to appear when the charger is connected.

## 1 Insert Charger

Insert the charger plug into a power outlet.

## 2 Align

Align the charger connector with the USB socket at the bottom of the phone and insert it.



## 3 Charging

If the battery is being charged when the phone is switched off, only the battery icon is displayed (as shown in the adjacent figure).



## 4 Charging Icon

If the battery is being charged while the phone is switched on, you will notice that the bars in the battery charge icon (visible on the home screen) show movement indicating that the battery is being charged. After the phone is fully charged the battery bars on the display stop scrolling. You can disconnect the charger from the phone.



## 5 Charging Process

After the charging process has begun, the only way to stop charging is to disconnect the charger.

**CAUTION:** There is a risk of explosion while charging if the battery has been replaced by an incorrect type.

### Set Battery Alert

When you set the battery alert, every time the battery charge is low you hear an alarm. To set the battery alert select **Menu > Settings > Sounds tab > Battery alert**. Select **On** to activate the alert.

### Your SIM Card

Purchase a SIM card from your mobile operator. The SIM card can be used in any GSM phone. Your phone number <sup>15</sup> and user registration information always remain the same.

### Inserting the SIM card

## 1 Switch Off Phone

Ensure that the phone is switched off.

## 2 Lift Cover

Lift the battery cover and remove the battery. For instructions refer **“Inserting the Battery” on page 14.**

---

## 3 Place SIM Card

Place the SIM card by pushing it upward in the designated slot located under the battery.



## 4 Lock Cover

Replace the battery and the cover. Turn the battery cover screws clockwise to lock the battery cover.

---

## 4 Lock Cover

Replace the battery and the cover.

---

### Removing the SIM card

## 1 Close Phone

Ensure the phone is switched off.

---

## 2 Lift Cover

Lift the battery cover and remove the battery. For instructions refer **“Inserting the Battery” on page 14.**

---

## 3 Remove SIM Card

Remove the SIM card by pushing it downward from the slot.

---



# Parts of the XP3.20 Phone

The XP3.20 keypad has 9 function keys and 12 alphanumeric keys. The left side of the phone has one key and the right side of the phone has three keys.



# Parts of the XP3.20 Phone



# Sonim XP3.20 Keypad

The various keypad keys and their corresponding functions are described in the following figure. Based on customization request, some of the keys may be mapped to other shortcuts than those represented above. You can also change many of the shortcuts via **Menu > Settings > General tab > Shortcuts**. Select the key and select **Options > Activate**.



Menu key  
Navigation arrow keys  
(Up/Down/Left/Right)

Left Selection Key (LSK)

Right Selection Key (RSK)

Call accept/Send

Power On/Off/End call

Press and hold for voicemail

Press and hold to lock/ unlock the keypad

Press and hold to turn on/off silent mode


Press and hold to display+ (before dialing an international number)

\*Features in grey must be enabled.

The alpha-numeric keys comprise numbers from one to zero, alphabets from A-Z, plus [\*] and [#] keys. By pressing the designated key you can input numbers or characters. Choose the appropriate text input option to enable you to use these keys efficiently. For more information on text input modes refer “Set Quick Access” on page 61.

## Home screen

Certain information is displayed when the phone is in standby mode, for example, the name of the service provider, date and time, battery charge status, GPRS connectivity. Other indicators may be displayed (if the feature is activated), like the alarm, call forward etc. The device with a fully-charged battery can remain in the standby mode for a duration of XXX hours.

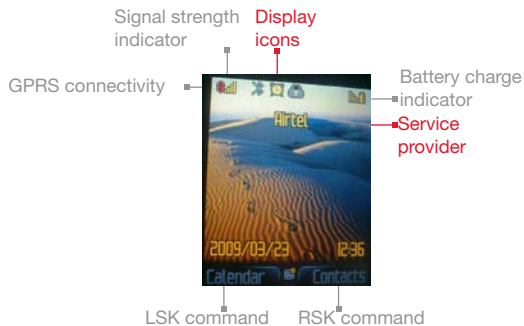

## Operations in Home Screen

The following can be accessed from the home screen.

Press	To Access
Up Arrow	Java Applications List
Down Arrow	Sonim Xperience
Right Arrow	SMS Inbox
Left Arrow	FM Radio
Menu Key	Main Menu
Left Selection Key	Calendar
Right Selection Key	Phonebook
Pickup/Send Key	All Calls List



The four functions that are performed using the arrow keys are set as factory defaults, however they can be changed. Select **Menu > Settings > General tab > Shortcuts**. Go to the second tab. Select the arrow key and select **Options > Change**. You can also change many of the shortcuts. Select **Menu > Settings > General tab > Shortcuts**. Select the key and select **Options > Change**.

## Basic Settings

When you have switched on your phone the name of the service provider is displayed.

## Security Settings

To prevent unauthorised use of your phone, you can set a PIN code. The PIN is operator dependent.

1. Select **Menu > Settings > General tab > Security settings > PIN code > On**. Enter the PIN. Select **OK**. After this is set, every time you power on the phone, you will be requested to enter the PIN. If the PIN code is wrong you cannot access the phone.
2. To change the PIN code select **Menu > Settings > General tab > Security settings > Change password**. You can change codes for PIN, PIN2, Call barring, Safeguard and Phonelock password.

## Date and Time

To set the Date and Time, select **Menu > Settings > General tab > Date & Time**.

## Auto Keypad Lock

To lock the keypad, select **Menu > Settings > General tab > Auto keypad lock**. You can choose to switch it off or enable the feature by setting time.

Alternatively press and hold the **\*\*** key to lock and unlock the keypad.

## Silent Mode

In the silent mode, the alerts for Calls, Organizer, SMS and battery status are disabled.

Select **Menu > Settings > Sounds tab > Alert type >**

**Silent OR long** press the **#** key.

## Safeguard Mode

In the safeguard mode, the Call list, Contacts, Messages and Quick call can be accessed only by entering a password.

To enter the safeguard password, select **Menu > Settings > General tab > Security settings > Safeguard**. Enter the password. After entering the password, the private information screen is displayed. Press the **menu** key to select the required features to be safeguarded and select **OK** to enable.

## Phonelock Mode

In the phonelock mode, the phone can be unlocked only by entering a password.

To enter the phonelock password, select **Menu > Settings > General tab > Security settings > Phonelock > On**. **Enter the password**. Select **OK**. <sup>21</sup>





The default password for phonelock is **1234**.














To change the safeguard or phonelock password, select **Menu > Settings > General tab > Security settings > Change password > Change phonelock pw / Change safeguard pw**. Enter the password. Select **OK**.

## Keypad Functions



The following table displays the various keys and the corresponding functions they perform:

Keypad key	Operations
 <b>POWER ON/OFF/END CALL</b>	<ul style="list-style-type: none"><li>• <b>Press</b> to end a call (GSM).</li><li>• <b>Press and hold</b> for &gt; 5secs to switch on or switch off the mobile phone.</li><li>• <b>Press</b> when in Menu or Edit modes to return to Standby mode.</li><li>• <b>Press</b> to reject an incoming call.</li></ul>
 <b>ACCEPT/SEND</b>	<ul style="list-style-type: none"><li>• <b>Press</b> to answer an incoming call.</li><li>• After entering a phone number, <b>press</b> to make a call.</li><li>• <b>Press</b> while in Standby mode to access All calls list.</li></ul>
 <b>LSK/RSK</b>	<p>These keys are present immediately below the display screen.</p> <ul style="list-style-type: none"><li>• <b>Press</b> the Left Selection Key (LSK) or Right Selection Key (RSK) to select the function indicated at the bottom of the screen. The indicated functions can vary according to different program definitions.</li><li>• <b>Press LSK</b> to access the main menu in standby mode.</li><li>• <b>Press RSK</b> to access the Contacts in standby mode.</li></ul>
 <b>MENU KEY (CENTRE)</b>	<p>Present at the centre of the navigation keys.</p> <ul style="list-style-type: none"><li>• <b>Press</b> while in standby mode to enter the main menu.</li><li>• <b>Press</b> when required to be used as a toggle key to select or clear a checkbox.</li><li>• <b>Press</b> to perform similar tasks as the Left Selection Key.</li><li>• <b>Press</b> to select the OK command.</li></ul>

Keypad key	Operations
 <p><b>NAVIGATION KEYS</b></p>	<p>The Left and Right Selection keys and Power On/Off keys surround this key group. There are arrows on the key that denote the direction to scroll for information displayed on the screen.</p> <p><b>UP/DOWN</b></p> <ul style="list-style-type: none"> <li>• <b>Press</b> to view the pages in the text editor.</li> <li>• <b>Press</b> to browse menus/lists at the same level.</li> <li>• <b>Press</b> to view the previous or next picture when previewing pictures.</li> <li>• <b>Press</b> to browse the main menu.</li> </ul> <p><b>LEFT/RIGHT</b></p> <ul style="list-style-type: none"> <li>• <b>Press</b> to move the cursor left or right in the text editor.</li> <li>• <b>Press</b> to browse the main menu.</li> </ul>
<p><b>NUMERIC KEYS</b></p>	<ul style="list-style-type: none"> <li>• <b>Press</b> the required keys to enter the desired phone number and press to make a call. Alternatively, enter the number and select <b>Options</b> to dial the number.</li> <li>• <b>Press</b> and hold any numeric key to create shortcuts from the available options.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Press</b> and hold in standby mode to access your Voice mail.</li> <li>• When entering text, press to enter space.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Press</b> and hold to display the Ringtones.</li> </ul>

Keypad key	Operations
	<ul style="list-style-type: none"><li>• <b>Press</b> and hold to display Call alert type.</li></ul>
	<ul style="list-style-type: none"><li>• <b>Press</b> and hold to set the Alarm.</li></ul>
	<ul style="list-style-type: none"><li>• <b>Press</b> and hold to display the Calculator.</li></ul>
	<ul style="list-style-type: none"><li>• <b>Press</b> and hold to display Bluetooth.</li></ul>
	<ul style="list-style-type: none"><li>• <b>Press</b> and hold to display WAP.</li></ul>
	<ul style="list-style-type: none"><li>• <b>Press</b> and hold to display Opera mini.</li></ul>
	<ul style="list-style-type: none"><li>• <b>Press</b> and hold to display the Languages.</li></ul>
	<ul style="list-style-type: none"><li>• <b>Press</b> and hold to display '+' used for dialing an international number.</li><li>• When entering text, <b>press</b> to enter a dot (.).</li></ul>



Keypad key	Operations
	<ul style="list-style-type: none"><li>• <b>Press</b> and hold to lock the keypad. Use it as a toggle key to lock and unlock the keypad.</li><li>• When entering text, <b>press</b> to display special characters, for example, period, comma, and so on. <b>Press</b> and hold to display the text input languages.</li></ul>
	<ul style="list-style-type: none"><li>• <b>Press</b> and hold in standby mode to switch between Silent on/off modes.</li><li>• When entering text, <b>press</b> to switch between lower case, upper case or numeric. <b>Press</b> and hold to enable T9 mode.</li></ul>

## Your XP3.20 Phone

This model is a bar type phone with a single LCD screen. The graphic field of the screen is 176 (w) and 220 (h) pixels. The CSTN technology used displays 64K colours.

### Main Menu

To access the phone menu, press the **menu** key to display the main menu which comprises the following nine items:

### Main Menu icons









1. CALLS
2. SETTINGS
3. MY FILES
4. CONTACTS
5. CAMERA
6. TOOLS
7. MESSAGES
8. APPLICATIONS
9. BROWSER








## Home Screen Indicators







The home screen indicators are visible when the phone is in standby mode. Some icons indicate the status of certain functionalities of the phone, for example, the battery charge indicator, the network status indicator, the date and time etc. Some icons are displayed only if the specific service is activated.






The following table describes the display indicators on the top bar of the home screen in the XP3.20 phone. These icons depend on the selected theme.






Display Indicators	Name	Description
	<b>Battery</b>	Four clear bars indicate maximum battery charge. Opaque bars indicate decline in battery charge.
	<b>Roaming</b>	This icon is only displayed when your phone is registered with a nonhome network.
 	<b>GPRS</b>	G displayed in green indicates that GPRS is active. G displayed in red indicates that GPRS is inactive.
	<b>Alarm Clock</b>	Indicates that the alarm clock has been set.
	<b>Meeting</b>	Indicates that the phone is on meeting mode.

Display Indicators	Name	Description
	<b>Call Forward</b>	Indicates that the call forward function is enabled.
	<b>Missed Appointment</b>	Indicates a missed appointment.
	<b>Unread Message</b>	Indicates that there are unread messages in the inbox.
	<b>SMS Memory Full</b>	Indicates that the SMS memory is full.
	<b>Voice Message</b>	Indicates a new voice message.
	<b>Auto Answer</b>	Indicates that auto answer has been set.
	<b>Keypad Lock</b>	Indicates that the keypad is locked.




Display Indicators	Name	Description
	<b>Firewall</b>	Indicates that the black list/white list has been enabled.
	<b>Bluetooth Connectivity</b>	Indicates that bluetooth is active.
	<b>Bluetooth CarKit/Headset Connectivity</b>	Indicates that your device is paired and connected to a carkit or headset with bluetooth connectivity.
	<b>SD Card</b>	Indicates that an SD card is inserted.
	<b>WAP Push Message</b>	Indicates a new WAP push message.
	<b>Wired Headset</b>	Indicates that a wired headset is connected.

Display Indicators	Name	Description
	<b>Vibrate Then Ring</b>	Indicates that the phone will first vibrate then ring.
	<b>EDGE</b>	Indicates that the EDGE network is active.
	<b>GPRS</b>	Indicates that the GPRS is attached and EDGE network is inactive.

The following table describes the display indicators on the GSM call screen in the XP3.20 phone:

Display indicators	Name	Description
	<b>Active Call</b>	Indicates an active call.
	<b>Call on Hold</b>	Indicates a call on hold.
	<b>Call on Mute</b>	Indicates a call on mute.
	<b>Handsfree Call</b>	Indicates a handsfree call.
	<b>Active Conference Call</b>	Indicates an active conference call.

The following table describes the display indicators on the home screen in the XP3.20 phone:

Display Indicators	Name	Description
	<b>Incoming Call</b>	Indicates an incoming call.
	<b>Outgoing Call</b>	Indicates an outgoing call.
	<b>Missed Call</b>	Indicates a missed call.

- My files
  - Camera
  - Tools
  - Applications

## Key Operations Without Your SIM Card

### Making SOS Call

Select **SOS**. A message appears **SOS Call?** Select **OK** to make the emergency call.

### Menus Accessible

The following menus can be accessed on the phone without the SIM card:

- Settings
  - General settings
  - Display settings
  - Sounds settings

## Phone Settings

You can create and modify various settings on your XP3.20 phone. On the Standby screen, select **Menu > Settings** to display the options.

## General Settings

Select **Menu > Settings > General tab**. The following general settings are displayed.

### Profiles

You can customise the profiles to use features such as ring volume, ringtones, alert type, key sound and backlight level. There are seven environment profiles present in this phone. Personal is the default profile, while the other profiles are Car, Flight, Home, Meetings, Outdoor and Silent.



You cannot change the parameters for the Flight and Silent modes.

- Personal:** This is the default profile where all sounds are enabled. Parameters in this mode can be changed. Select **Menu > Settings > General tab > Profiles > Personal > Options > Personalize** to open the Personalize screen. You can use this screen to choose ring volume, ringtones, alert type, key sound or backlight level. Select **Menu > Settings > General tab > Profiles > Personal > Options > Activate** to activate this profile.
- Car:** Parameters in this mode can be changed. Select **Menu > Settings > General tab > Profiles > Car > Options > Personalize** to open the Personalize screen. You can use this screen to choose ring volume, ringtones, alert type, key sound or backlight level. Select **Menu > Settings > General tab >**
- Profiles > Car > Options > Activate** to activate this profile.
- Flight:** Here all sounds are kept in mute. Select **Menu > Settings > General tab > Profiles > Flight > Options > View** to open the View screen. Select **Menu > Settings > General tab > Profiles > Flight > Options > Activate** to activate this profile.
- Home:** Parameters in this mode can be changed. Select **Menu > Settings > General tab > Profiles > Home > Options > Personalize** to open the Personalize screen. You can use this screen to choose ring volume, ringtones, alert type, key sound or backlight level. Select **Menu > Settings > General tab > Profiles > Home > Options > Activate** to activate this profile.
- Meetings:** Here only the vibrate mode is enabled. Parameters in this mode can be changed. Select **Menu > Settings > General tab > Profiles > Meetings > Options > Personalize** to open the Personalize screen. You can use this screen to choose ring volume, ringtones, alert type, key sound or backlight level. Select **Menu > Settings > General tab > Profiles > Meetings > Options > Activate** to activate this profile.
- Outdoors:** Here both the vibrate and ring modes are enabled. Parameters in this mode can be changed. Select **Menu > Settings > General tab > Profiles > Outdoors > Options > Personalize** to open the Personalize screen. You can use this screen to choose ring volume, ringtones, alert type, key sound or backlight level. Select **Menu > Settings > General tab > Profiles > Outdoors > Options > Activate** to activate this profile.
- Silent:** Here all sounds are kept in mute. Select **Menu > Settings > General tab > Profiles > Silent > Options > View** to open the View screen. Select

**Menu > Settings > Profiles > General tab > Silent > Options > Activate** to activate this profile.

## Languages

You can display all the phone menu options and text in the selected language. For example, choose English to display all menu items, text messages, and so on, in English. Select the language and select **OK**.

## Time and Date

You can set and display the date and time on the phone. You can also select the display format. The time zone can also be set for local settings and foreign settings.



The date formats supported are YYYY/MM/DD, YYYY.MM.DD, DD.MM.YYYY, YYYY-MM-DD, DD-MM-YYYY or MM-DD-YYYY. The time formats supported are 24 hr and 12 hr.

You can view the time of major cities in different time zones using this function and set the time on your phone to a selected time zone. You also have the option to use Daylight Saving Time (DST).

The local time or the international time is displayed in the lower half of the screen. Use the navigation keys to view various time zones.

1. To view the international clock, select **Menu > Settings > General tab > Date and Time > International clock > Clock status > On**. The international clock is displayed on the idle screen.
2. To set your local time, select **Menu > Settings > General tab > Date and Time > International clock > Local settings > Option > Set time > Change time**. Enter the time and select **OK**. To set the local date, select **Option > Set time > Change date**. Enter

the date and select **OK**.

3. To set Daylight Saving Time (DST), select **Menu > Settings > General tab > Date and Time > International clock > Local settings OR Foreign settings > Option > Daylight saving > On**. The symbol of the sun is displayed beside the name of the city signifying that the DST option is on.
4. To switch between local and foreign settings, select **Menu > Settings > General tab > Date and Time > International clock > Switch local/foreign > OK**.
5. To view the city list, select **Menu > Settings > General tab > Date and Time > International clock > Local settings OR Foreign settings > Option > City list**.

## Security Settings

To prevent unauthorised use of your phone, you can set PIN protection, safeguard and phonelock. To enable PIN protection or phonelock, select **On**. To enable safeguard, enter the password. To change any security related password, select **Change Password** and change the particular password.

## Shortcuts

Shortcut keys have been set for specific functions. To activate a shortcut, select the shortcut and select **Options > Activate**. To change any shortcut, select the shortcut and select **Options > Change**. Select the new function.

## Default Storage

The individual default storage location for Camera, Voice recorder, WAP download or Bluetooth can be set as Phone memory or Memory card.

## Memory Status

The memory status for Contacts, Messages and My files is displayed.

### Auto Power On

To enable this feature, select **On**. Select the time after which the phone will be automatically switched on. Select **OK**. Select **Off** to disable this feature.

### Auto Power Off

To enable this feature, select **On**. Select the time after which the phone will be automatically switched off. Select **OK**. Select **Off** to disable this feature.

## Firewall

You can avoid unwanted calls or messages by entering such numbers in the Black list and enabling the Black list. You can make calls or send messages only to specific numbers by entering such numbers in the White list and enabling the White list. You can enable either the Black list or White list at a time.

1. To enable the Black list or White list, select **Menu > Settings > General tab > Firewall > Enable > Black list OR White list > SMS OR Incoming call OR SMS and Incoming call > OK**.
2. To disable the Black list or White list, select **Menu > Settings > General tab > Firewall > Enable > Off**.
3. To enter a number in Black list or White list, select **Menu > Settings > General tab > Firewall > Black list OR White list > Add new > New number (enter the number) OR Contacts (select the number from Contacts) > OK**.

## Auto Keypad Lock

Select the time after which the keypad will be automatically locked. Select **Off** to disable this feature. The keypad will be locked automatically when the phone is in idle state on home screen.

### Default Settings

Select to reset the settings to the original factory settings.

## Display Settings

Select **Menu > Settings > Display tab** . The following display settings are displayed:

1. **Wallpaper:** Allows you to set the background screen display using the embedded pictures available in your phone or from your own pictures that you have downloaded on to your phone or SD card. The selected wallpaper is displayed on the standby screen only if you select **On**.
2. **Themes:** Allows you to set the colour theme and icons for the main menu and other screens. There are two themes available. Select **Menu > Settings > Display tab > Themes > Theme 1 OR Theme 2 > OK**.
3. **Backlight Level:** Select the backlight level of the screen display as maximum, high, medium or low.



- Backlight Duration:** Keeps the screen display active for the period chosen by you. Select the screen display active time as 10 sec, 30 sec or 60 sec.
- Greeting:** Select **On**. Enter the greeting and **Save** to make it appear on the screen while powering on the phone.
- Screensaver:** Select **On** to make the screen saver appear on the idle screen.

### Sounds Settings

Select **Menu > Settings > Sounds tab** . Changing it effects the current set profile.The following sound settings are displayed:

- Alert Type:** You can set the alert type for incoming calls and SMS alerts. You can select from Ring only, Vibrate only, Vibrate then ring or Silent.
- Ringtone:** You can set different ringtones for your incoming calls., SMS alerts and alarms. This helps you to identify callers of a specific group. You can select from Default sounds (pre-recorded factory tunes) OR Phone memory (downloaded via WAP, personal recordings or files transferred via Bluetooth) OR SD card.



You can download and store ring tones over Bluetooth, WAP or PC software. The ringtone formats are MIDI, MP3, AAC and AMR.

- Ring Volume:** You can set the ringer volume for GSM calls, alarms and alerts.
- Key Tone:** You can set the keypad sound as Off, Low, Medium or High.
- Shutter Sound:** You can set the camera shutter

sound.

- Battery Alert:** Select **On** to get any low battery alert.

### Connectivity Settings

Select **Menu > Settings > Connectivity tab**. The following connectivity settings are displayed:

- Network Settings:** This relates to various network related settings. You can select your network, specify the network account, indicate whether GPRS is required at all times, and so on.
  - Select Network:** Your phone will select the network automatically or you can do it manually.
  - Search Mode:** You can select **Auto** to set the phone to automatically select a cellular network available in your area, or select **Manual** to set the network manually. If manual mode is set, the user has to invoke **Select Network** to do network selection.
  - Preferred Networks:** You have a list of options which will enable you to view a list of preferred networks, allows you to add a new network or delete an existing network. This list is made to use while the user is roaming.

- **Attach GPRS:** You can access GPRS network.



When **Always attached** is selected, the phone always remains registered with the GPRS network.



When **Attached during PDP session** is selected, the phone gets registered with the GPRS network only when data transfer is required. .

2. **Connections:** You can set the GPRS profile and view the GPRS information.


- **GPRS Profiles:** You can view or edit the profiles. There are five profiles present. You can edit the following information in the profiles: Profile name, APN, Login and Password. Make the changes and select Save.
- **GPRS Info:** You can view the GPRS information such as data received.

## Calls

Before making a call you must ensure the following:

- Keypad is not locked.
- A valid SIM card is installed.
- Phone battery is charged.
- Phone is switched on and the network operator's name or number is displayed.

### Dial a Number

1. Use the numeric keys to enter the number and press .
2. Alternatively you can enter the desired phone number and select **Options > Dial > Dial > Select**.



### Dial an International Number

**Press** and hold the numeric key 0 till the + symbol is displayed. Enter the Country code, Area code (without preceeding 0) and the phone number and press  or select **Options > Dial > Dial > Select**.

### Dial a Number via Contacts



You can dial a number directly from the Contacts.

#### To Locate a Phone Number

1. On the home screen, select **Contacts**. Scroll to the phone number.
2. Press  to dial the number OR select **Options > Dial > Dial > Select** OR press the **easy call** key. Press  or Select **End** to disconnect.

### Dial a Number Via the Calls List

This Calls list comprises separate lists for All calls, Missed calls, Answered calls and Outgoing calls.

1. To access the Calls list, press  OR select **Menu > Calls > Call list**. All the available call lists are displayed.
2. Select a list, scroll to the number and press  to dial the number.

### Managing Call List

Contacts within the call list have the following options:

- **Save:** You can save the number in Contacts (if it is not saved).
- **Send messages:** You can send an SMS to the number. Enter the SMS and select Options to view the SMS options and send it accordingly.
- **Send phone number:** You can send the name and phone number of a contact to the recipient via SMS.
- **Delete:** You can delete the number from the Call list.
- **Dial:** displays dial options from which to choose.

---

<b>Dial</b>	Dials the selected number.
-------------	----------------------------

---

<b>Handsfree Dial</b>	You can talk using the speaker.
-----------------------	---------------------------------

---

- **Add to blacklist:** You can add the number to blacklist.
- **Edit number before dialing:** You can edit the number before dialing.


## Fixed Number Dialing

A fixed set of numbers are stored as fixed numbers and only those numbers can be dialed from the phone. User(s) can make calls from Contacts or dial the number if the selected number is stored in fixed numbers list. User(s) can however receive calls from any number. User(s) cannot make calls to the numbers which are not stored in fixed numbers list.



1. Select **Menu > Calls > Call settings > Fixed Dial > Mode > On**. Enter the PIN2 to activate fixed number dialing.
2. Enter the PIN2 to activate fixed number dialing. Select **Add new** to add a new number to the list or select Fixed numbers list to view the list.

## Speed Dial


This option enables you to dial a number quickly via a shortcut.

1. If shortcut is not set for Speed dial, select **Menu > Settings > General tab > Shortcuts > scroll to a key > Options > Change**. Select Speed dial from the list. The shortcut is set.
2. Press and hold the shortcut designated for Speed dial from home screen. The Speed dial screen appears.
3. To add a new contact, scroll to an empty slot, select **Add**. Select the contact. Select **Yes** to add a picture or **No** to not add picture. Select the picture from Default pictures OR Phone memory OR SD card. The Speed dial is set.
4. To make a call, press . The other options available for a contact are View, Replace, Delete and Send message.

## Receive a call


1. To receive a call, press the **Accept** key  OR press **Left Selection** key. Select **Accept**.
2. To reject a call press the **Power on/off** key  OR press **Left Selection** key. Select **Accept**.
3. To receive another call while you are already speaking, enable the call waiting feature for GSM calls. Select **Menu > Calls > Call settings > Call services > Call waiting > Enable**. For details on how to enable Call waiting facility, refer "**Call Waiting**" on page 38.

## Any Key Answer

When enabled, you can press any key except  to answer a call.

To activate this feature, select **Menu > Calls > Call settings > Anykey answer > On**.




Long pressing the Power on/off key  during a GSM call will only end the call and not switch off the phone.

## Call Forwarding

You can forward your incoming calls to a new number or an existing number in the Contacts, provided your network operator supports this service. To access call forward settings, select **Menu > Calls > Call settings > Call forward**. The Call forward options are mentioned below:

Call Forward Option	Function
<b>All calls</b>	Forward all incoming calls to a pre-designated number.
<b>If no reply</b>	Forward calls when you do not answer incoming calls.
<b>If unreachable</b>	Forward calls when you have switched off your phone or you are out of your coverage area.
<b>If busy</b>	Forward calls when your phone is busy.
<b>Status</b>	Check the current Call forward status.
<b>Cancel all</b>	Withdraws the call forward option.



When All calls divert is enabled, the icon  is displayed at the top of the screen when the phone is in standby mode.

## Call Barring

You can set Call barring facility for all outgoing calls, all international calls, only here & home, all incoming calls or incoming if abroad.

1. To set call barring settings, select **Menu > Calls > Call settings > Call barring**.
2. Enter a restriction password. (Your network operator provides this before you use this function). This password will be sent to the network for verification.

The Call barring options are mentioned below:

Call Barring Option	Function
<b>Outgoing calls</b>	All outgoing calls are barred.
<b>International calls</b>	All international calls are barred.
<b>Local calls only</b>	All calls except from the current country and the home country are barred.
<b>All incoming</b>	All incoming calls are barred.
<b>Roaming incoming</b>	All incoming calls from abroad are barred.
<b>Barring status</b>	Checks the current call barring status.
<b>Cancel barring</b>	Withdraws call barring.

## Call Waiting

When call waiting is enabled and your phone is in conversation, the message **Call waiting** and the number is displayed when you receive an incoming call.

1. To enable this facility, select **Menu > Calls > Call settings > Call services > Call waiting > Enable**.
2. To cancel this facility, select **Menu > Calls > Call settings > Call services > Call waiting > Cancel**. You will not be prompted when you receive an incoming call while your phone is busy. The caller will receive a busy signal.
3. To verify the call waiting status, select **Menu > Calls > Call settings > Call services > Call waiting > Status**.

## Auto Redial

When auto redial is enabled, your phone will automatically redial within a set interval, if a call does not connect.

1. To enable this function select **Menu > Calls > Call settings > Auto redial > On**.
2. When you redial a number, you are prompted with the message **Auto redial?** Select **OK** to redial. Select **Back** to return to home screen.

## Auto Answer

When auto answer is enabled, your incoming calls will automatically be answered.

Select **Menu > Calls > Call settings > Auto answer > On**.

## Filter Calls

This function enables you to avoid receiving unnecessary calls OR messages. Users can select SMS/Calls/Both SMS and Calls to go to the black list/white list.



At any point of time, you can enable either black list or white list. If white list is enabled, only the contacts in the white list can reach you. When black list is enabled, all other contacts except the ones in the black list can reach you.

To enable this function, select **Menu > Settings > General tab > Firewall > Enable > Black list or White list > SMS or Incoming call or SMS and Incoming call > OK**.



If the black list or white list is empty, it cannot be enabled.

- **Enable Black list:** Rejects all incoming calls and messages from numbers in the black list.
- **Enable White list:** Allows incoming calls and messages from numbers in the white list and rejects incoming calls and messages from numbers that are not in the white list.
- **Off:** Disallows filtering of incoming calls and messages.

## Add to Black list

To add a number to the black list, select **Menu > Settings > General tab > Firewall > Black list > Add new**. Two options are displayed:

- **New number:** You can enter a new number to be stored in the black list.
- **Contacts:** You can open the Contacts list to select and transfer a number to the black list.

## Add to White list

To add a number to the white list, select **Menu > Settings > General tab > Firewall > White list > Add new**. Two options are displayed:

- **New number:** You can enter a new number to be stored in the white list.
- **Contacts:** You can open the Contacts list to select and transfer a number to the white list.

## Other Call Settings

- **Minute reminder:** When enabled, you receive a prompt at the 50th second of every minute during a conversation. Select **Menu > Calls > Call settings > Minute reminder > On**.
  - **Own ID:** When enabled, your ID is displayed to the recipient when you call or send a message. However this service must be supported by your network.
1. To enable this option, select **Menu > Calls > Call settings > Call services > Own ID > Show ID**.
  2. To disable this option, select **Menu > Calls > Call settings > Call services > Own ID > Hide ID**.

3. To request the network to set this option, select **Menu > Calls > Call settings > Call services > Own ID > Set by network**.
  - **Caller ID:** When enabled, you can view the ID of the caller. To enable this option, select **Menu > Calls > Call settings > Call services > Caller ID**.

## Review Call Cost Information

Select **Menu > Calls > Call settings > Call services > Cost settings**. The following options are available:

- **Currency:** Displays the currency balance.
- **Personal rate:** Displays the personal rate per call unit.
- **Maximum cost:** Displays the maximum cost.
- **Auto display:** Displays the Cost or Duration or Both after a call.

## Recording a Call

1. After making a call or receiving a call, select **Option > Record > Record own voice OR Record opposite party OR Record both**. You can also long press the menu key to record or stop.
2. A square button at the bottom indicates that recording is going on.
3. Select **Option > Stop** recording to stop the recording.
4. The recorded file is saved in the location **My files > Sounds**.

Depending on the settings, the storage location can be phone or SD card.

## Managing Contacts

You can use the Contacts list to maintain phone numbers of your contacts. This feature enables you to add, delete, dial phone numbers and send SMS messages. To access the contacts, select **Menu > Phonebook > Contacts**. The contacts are displayed.



You can use the **volume** keys to scroll through the contacts.

### Add a New Contact

To add a new contact, select **Menu > Phonebook > Contacts > Add new**. Press the menu key. Enter the name and phone number and select **Save**. Alternatively, you can directly enter a number and select **Option > Save**. Enter the name of the contact and select **Save**. The new number is updated in the Contacts list.

### Dialing a Number From Contacts

On the home screen, select **Menu > Phonebook > Contacts**. Select the contact. Select **Option > Dial OR** press the **easy call** key.

### Sending a Message From Contacts

1. On the home screen, select **Menu > Phonebook > Contacts**. Select the contact. Select **Option > Send message**.
2. Enter the message and select **Option > Continue**.
3. Select **Send** to send your message.

## Add a New Contact in Group

On the home screen, select **Menu > Phonebook > Groups**. Select the group. Select **Add**. The phone numbers in Contacts are displayed. Select the phone numbers to be added to the group.



On the contacts stored in phone memory can be added to the group.

## Group Settings

To view or change the group settings, select **Menu > Phonebook > Groups**. Select the group. Select **Options**. The following options are displayed:

- **View:** You can view the contacts in the group.
- **Rename:** You can rename the group. Enter the new group name. Select **OK** to save.
- **Send message:** You can send a message to the contacts in the group.
- **Reset:** You can reset the group settings.

## Special Numbers

You can store some special purpose phone numbers in this location. It has four categories:

- **Own Info:** You can manage your own information. Select **Menu > Phonebook > Special numbers > Own info**. The following sub-menus are present.



- **Edit own info:** Enter your Name and other personal details such as Mobile number, Office number, Home number, Fax number, Pager number, Email, Postal address and Postal code. Select **Save**.
- **Delete own info:** You can delete your information.
- **Send own info:** You can send your information to any number via SMS.
- **Display own info:** You can view your own information.
- **Service Numbers:** Contains the service numbers provided by the operator.
- **Voice Mail Number:** You can enter and save your voicemail number.
- **SOS:** You can call the SOS number already provided.

### Default Contact List

1. Select **Menu > Phonebook > Advanced > Choose contact list > Default contact list**.
2. Select **Phone** or **SIM** or **All** to indicate the location of the default contact list displayed.

### Default Contact Location

1. Select **Menu > Phonebook > Advanced > Choose contact list > Default contact location**.
2. Select either **Phone** or **SIM** as the memory location to store the new numbers.

### Sending Contact

You can send contact information by SMS or by Bluetooth.

### Send Contact by SMS

1. Select **Menu > Phonebook > Contacts**.
2. Select the contact and select **Options > Send contact > via SMS**.
3. Enter the message and select **Options > Continue**.
4. Select **Contacts** to add existing phone numbers OR Select **Select multiple** to send the message more than one number OR Select **Phone number** to enter the number.
5. Select **Send** to send the contact in your message.

### Send Contact by Bluetooth

1. Select **Menu > Phonebook > Contacts**.
2. Select the contact and select **Options > Send contact > via Bluetooth**.
3. Select the paired device to which you want to send the namecard.
4. If the device is not paired, select **Search more...** and then select the device.
5. When the other device accepts the contact, **Object sent** message will be displayed.

## Delete Contacts

- To delete a contact, select **Menu > Phonebook > Contacts**. Select the contact to delete and select **Delete**.
- To delete all contacts, select **Menu > Phonebook > Advanced > Delete all contacts > Delete SIM entries OR Delete phone entries**.

## Copy or Move Numbers to Other Lists

- To copy all records from Phone memory to SIM card, select **Menu > Phonebook > Advanced > Copy to SIM > select > OK**.
- To copy all records from SIM card to Phone memory, select **Menu > Phonebook > Advanced > Copy to phone > select > OK**.
- To move all records from Phone memory to SIM card, select **Menu > Phonebook > Advanced > Move to SIM > select > OK**. Moved records get deleted from the source location. All the records moved from the Phone memory will not be available in the Phone memory thereafter.
- To move all records from SIM card to Phone memory, select **Menu > Phonebook > Advanced > Move to phone > select > OK**. Moved records get deleted from the source location. All the records moved from the SIM card will not be available in the SIM card thereafter.

## Adding a Contact to Blacklist

1. Select **Menu > Phonebook > Contacts**.
2. Select the contact and select **Options > Add to blacklist**.

## Adding a Contact to Whitelist

1. Select **Menu > Phonebook > Contacts**.
2. Select the contact and select **Options > Add to whitelist**.

## Searching Contacts

1. Select **Menu > Phonebook > Contacts**.
2. Enter the contact name.
3. The contact will be displayed.

## Messages

SMS is a convenient and inexpensive means of communication. You can send a text message to other people via this service. You can use the Messages menu in your phone to send an SMS message to other mobile phones or any other equipment that can receive SMS. To access the SMS function select **Menu > Messages**. The list of options are displayed.

### Advanced Settings

To view or define settings for your messages select **Menu > Messages > Advanced**.

- **Cell info:** You can select to receive broadcast messages.
  - **Reception:** Select **On** to get information about the reception tower.
  - **Topics:** Select **Topics > Add new** to add the channel number of the topic to get information.
- **Message settings:** You can set the SMS account. Select **SMS Account > Options > Activate** to set selected account. Select **SMS Account > Options > Edit** to edit the following settings:

Settings	Function
<b>Service Center No</b>	The message centre number, provided by your service provider, via which your messages are sent and received.
<b>Validity period</b>	Select the period for which your messages will be stored in the message centre.

<b>Delivery report</b>	Select On to get a confirmation report whether message has been delivered or not.
<b>Signature</b>	Select On to set a signature that will be attached along with your sent messages.
<b>Storage location</b>	Select SIM or Mobile phone as the storage location of messages.
<b>Send &amp; save</b>	Select On to save the sent messages.

- **Memory status:** You can number of messages stored in the SIM and the mobile phone.
- **My favourites:** You can view the messages stored in this location.
- **SIM archive:** You can view the messages stored in the SIM.
- **SMS timer:** You can add a timer to an SMS and mention the time in which it is to be sent. Select **SMS timer > Add > Enter the text > Save > Contacts or Phone number > Enter date > OK > Enter time > OK**.

### Text Input Mode

When you enter text, the input mode is displayed at the top left of the screen. Press and release the # key to view the different text input modes, that is conventional (Abc/ABC/abc) and numeric (123). Long press the # key to enable the T9 mode.

In conventional mode, you can enter a letter by repeatedly pressing a key until the letter you want appears. Numeric mode is used to input numbers.

In T9 mode, when you press a key, the alphabets or letters are displayed. Scroll to the alphabet or letter and press the **menu** key to select.

- To switch between upper case (ABC), lower case (abc) or sentence case (Abc), use key #. When the sentence case is used, the letter which comes immediately after the characters full stop (.), exclamation mark (!) and question mark (?) automatically becomes capital.
- To enter a character, press the numeric key repeatedly until the desired character appears on the screen. For example, to enter GOOD, in the text mode, press **4** once to display G, press **6** thrice to display O, and again press **6** thrice to display O and press **3** once to display D.  
OR  
If you are in T9 mode, press **4**, scroll to G. Press **6**, scroll to GO. Press 6, scroll to GOO. Press 3, scroll to and select GOOD.
- When editing text, to insert a space between characters or words, press **1**.
- To erase a character select **Clear**.

To insert special characters, press **\*** to display the special characters. Press the **navigation keys** to scroll through the special characters. Select the character to appear in the text.

Long press **\*** to display the text input in different languages. Press the **menu** key to select the language. Select **Done** to change the text input language.

## Write Messages

- To create a message select **Menu > Messages > Create message** OR press the **Right navigation key** as a shortcut to the Write message screen.

- Enter the message in the text pane. The text input mode is displayed at the top left of the screen. Press and release **\*** to select the appropriate text input mode.
- Enter the message and select **Option**. The following options are present:

Option	Function
<b>Contacts</b>	You can select the number from Contacts.
<b>Select multiple</b>	You can select more than one number from Contacts. Use the menu key to select.
<b>Phone number</b>	You can enter the phone number.
<b>Group</b>	You can send the message to a group.
<b>Use template</b>	You can use a message template stored in Templates folder.
<b>Save as draft</b>	You can save the message as a draft in Draft folder.
<b>Save as template</b>	You can save the message as a template in Template folder.

- Select OK. Select **Send message** to send the message OR select **Add recipient** to add another recipient.

## Send a Message Via Contacts

You can send an SMS from the Contacts.

1. On the home screen, select **Menu > Contacts > Phonebook**. Select the contact. Select **Options > Send message**.
2. Enter the message and select **Options > Continue**.
3. Select **Contacts** to add existing phone numbers OR Select **Group** to send the message to a group OR Select **Phone number** to enter the number.
4. Press the **menu** key to send your message.

## Call Or Save a Number Embedded in a Received Message

It is possible to call a number embedded in a received SMS.

1. Select **Menu > Messages > Inbox** > open the message.
2. Select **Options > Extract numbers**. The number is displayed.
3. Select **Options > Dial** OR Select **Options > Save**.

## Manage your Messages

The inbox, outbox, sent and draft folders displays the number of stored messages in parenthesis.

### Inbox

The Inbox stores and displays all the incoming messages.

1. To access the Inbox, select **Menu > Messages > Inbox > Select**. The Inbox displays a list of messages.
2. To delete a message or all the messages, select **Options > Delete** or **Options > Delete all**

respectively.

3. To open a message, scroll to a message and press the **menu** key.
4. After a message is opened other functions can be performed. Select **Options** to list the options.
  - **Reply:** You can send a message to the sender of that message.
  - **Forward:** You can send the message to another recipient.
  - **Delete:** You can delete the message after reading it.
  - **Extract numbers:** You can save the numbers present in the message. You can also dial or send a message to the numbers.
  - **Archive to SIM:** You can save the message in your SIM card memory.
  - **Move to my favourites:** You can save the message in My favourites folder. These will be stored in the phone memory.
  - **Details:** You can view the details about the message such as storage location and time of receipt.
  - **Dial:** You can call the sender of the message.

### Outbox

Messages that were undelivered to the recipient due to some reason are stored in in Outbox.

1. To access undelivered messages, select **Menu > Messages > Outbox**.
2. Select **Options** to display the outbox options.
3. Press the **menu** key to view the message.
4. Press **Options > Resend** to send the message. You can also forward an undelivered message.

## Draft Messages

Messages that have been saved to be sent later are stored in Draft.

1. To access unsent messages, select **Menu > Messages > Draft**.
2. Select **Options** to display the draft options.
3. Press the **menu** key to view the message.
4. Press **Options > Send** to send the message.

## Sent Messages

Messages that have been sent and delivered are stored in Sent.

1. To access sent messages, select **Menu > Messages > Sent**.
2. Select **Options** to display the sent options.
3. Press the **menu** key to view the message.
4. Press **Options > Send** to resend the message.
5. You can also forward a sent message.

## Predefined Messages

You can customise and store up to a maximum of 10 messages in Templates.

1. Select **Menu > Messages > Templates > Select > OK**.
2. Enter a message and select **Options > Save Templates**.

## View SMS Memory

To view the memory capacity for messages, select **Menu >**

**Messages > Advanced > Memory status**.

## Voice mail

Your incoming calls can be forwarded to your voice mail. Callers will be prompted to leave a message for you. This feature requires you to enter a voice mail number which is provided by your service provider.

1. To set voice mail number, select **Menu > Messages > Voice mail > Voice mail number > OK**. Enter the number provided by your service provider. This number should be used when you want to listen to your stored voice mail messages.
2. When you need to listen to your incoming voice mail messages, select **Menu > Messages > Voice mail > Call voice mail > OK**. Enter your voice mail number and select **Call**. You are connected to your mailbox where you can hear the stored voice mails messages.<sup>46</sup> If your voice mail number is already stored, select **Menu > Messages > Voice mail > Call voice mail > Call**.



For quick access to voice mail, press and hold **1**.

## SIM Card Menu

You can access certain services provided by the operator using this menu. This feature can be accessed via **Menu > Messages > Operator service**.

## Hardcoded shortcuts

The following is the list of hardcoded shortcuts.

- Press the green dial button From idle screen - Get the All calls list.
- Enter 0 followed by SEND - releases all held calls or sets User Determined User Busy (UDUB) for a waiting call.
- Enter 1 followed by SEND - Releases all active calls (if any exist) and accepts the other (held or waiting) call.
- Enter 1X followed by SEND - Releases a specific active call X.
- Enter 2 followed by SEND - Places all active calls (if any exists) on hold and accepts the other (held or waiting) call.
- Enter 2X followed by SEND - Places all active calls on hold except call X with which communication shall be supported.
- Enter 3 followed by SEND - Adds a held call to the conversation.
- Enter 4 followed by SEND - Connects two calls and disconnects the subscriber from both calls (ECT).
- Enter 4 \* “Directory Number” followed by SEND - Redirects an incoming or a waiting call to the specified directory number.
- Enter 5 followed by SEND - Activates the completion of calls to busy subscriber request.
- Enter “Directory Number” followed by SEND - Places all active calls (if any exists) on hold and sets up a new call to the specified directory number.
- Enter END - Releases the subscriber from all calls (except a possible waiting call).

- Press LEFT and RIGHT key in Outgoing/Answered/ Missed calls list - Allows to scroll between these 3 screens.



“X” is the numbering (starting with 1) of the call given by the sequence of setting up or receiving the calls (active, held or waiting) as seen by the served subscriber. Calls hold their number until they are released. New calls take the lowest available number.



Where both a held and a waiting call exist, the above procedures shall apply to the waiting call (that is, not to the held call) in conflicting situation.

## WAP Browser

This mobile phone has an internal WAP browser that allows you to browse contents of various WAP websites on the Internet. This facility is made available only if you subscribe to a data service from your network operator for Internet access. You need to consult your local operator for more details. Configure the WAP when you use it for the first time. Some WAP parameters on your phone have already been set to a specific network operator. If you utilize the services of the same network operator you can directly operate the WAP service with the available configuration. If not, you need to reconfigure the settings.



If you are unable to view WAP web pages because your network operator changed its WAP parameters or the Internet content Provider (ICP) changed its WAP web address or contents, please consult your network operator and ICP for updates.

Select **Menu > Browser > Select**. The following sub menus are displayed:

- **Load Homepage:** This is the page that is displayed first when you open the WAP browser.
- **Bookmarks:** You can use this menu to add and manage your bookmarks and go directly to the corresponding web address. You can also edit or delete bookmarks via this menu.
- **History:** You can view web pages which you have viewed previously. Click on them to open the pages.
- **Enter address:** You can enter a web address directly and browse.
- **Settings:** The following configurations can be set via this menu:
  - **Edit homepage:** You can edit the web address of your homepage. Specify a title and the web

address.

- **Select profile:** In this menu, existing profiles are listed on the display. Scroll to the required profile and select **OK**.
- **Connection:** Specify the connection details for WAP. The following details are present:
  1. **Network account:** Select the profile which you had selected in **Settings > Connectivity > Connections > GPRS profiles**.
  2. **Connection type:** Select the connection type.
  3. **Timeout:** Enter the time (in seconds) after which your connection will be timed out.
  4. **Proxy address:** Enter the proxy address as 125.63.77.141.
  5. **Proxy port:** Enter the proxy port as 8888 (for HTTP) OR 9201 (for WSP).
- **Browser options:** You can enable the refresh option to refresh the web pages, you can select to display or not display images in the web pages and you can enable or clear cookies.
- **Rename profile:** You can specify a name for the selected profile in this menu. The maximum length of the name is 40 characters.
- **Push settings:** You can decide to receive or not receive push messages from operators and web portals.
- **Resume:** You can view web pages from where you last left off. Access the web pages you visited last via this menu. Select the Back and Forward options to move between web pages.
- **Push inbox:** This is the inbox for WAP push messages.



## Opera Mini

Opera Mini is a web browser designed for mobile phones. It uses the Java ME platform and consequently requires that the mobile device be capable of running Java ME applications. Opera Mini is offered free of charge. This mobile phone has a copy of Opera Mini pre-installed.

### Configuration of APN (Access Point Name) for Opera Mini

Set the network account for the Opera Mini.

1. Select **Menu > Settings > Connectivity tab > Connections > GPRS profiles > Select > Profile 5.** Select **Edit** to enter the profile details.
2. The following details are to be entered.
  - **Profile name:** Enter the name of the profile.
  - **APN:** Enter the access point name.
  - **Login:** Enter the login name.
  - **Password:** Enter the password.
3. Select **Save** to save the details.



Always use Profile 5 for Opera Mini and other Java applications.

### Configuration of Opera Mini as Key Shortcut

A shortcut can be assigned for launching Opera Mini.

Select **Menu > Settings > General tab > Shortcuts >** select an empty key. Select **Set.** Select **Opera Mini** and select **OK.** The shortcut is set.

Press the particular shortcut to launch Opera Mini.

## Java

Sonim XP3.20 has a collection of Java applications that are saved in the phone as default. You can also download more Java application via WAP or Bluetooth.

### Launch Application

Select **Menu > Applications > Java**.

The list of the downloaded Java applications is shown. Scroll to the desired application and select using the **menu** key.



Java applications can also be uploaded from the SD card.

## Tools

Tools are used to organize and manage your daily tasks systematically.

## Alarm

You can set alarm for a particular time. Select **Menu > Tools > Alarm**.

1. To set a simple alarm, select **Menu > Tools > Alarm > Simple alarm**. Enter the time and select **OK**.
2. To set a recurrent alarm, select **Menu > Tools > Alarm > Recurrent alarm**. Enter the time and day, and select **OK**.
3. To set the alarm tone, select **Menu > Tools > Alarm > Alarm tone > Default sounds or Phone memory**. Select the alarm tone.
4. To enable snooze, select **Menu > Tools > Alarm > Snooze**. Use the **menu** key to toggle between on and off.



The alarm will work even if the phone is in Silent mode.

## Bluetooth

Bluetooth is a wireless connection that enables devices to exchange information. Devices within a range of 10 meters can be connected wirelessly using Bluetooth technology.

Sonim XP3.20 is compliant with Bluetooth specification 2.0 supporting the following profiles: Headset profile, Hands free profile, Object push profile, Dial up networking profile, Serial port profile. This device can send images and audio files using Bluetooth connection.



There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service providers.

## Activate Bluetooth

Select **Menu > Tools > Bluetooth > Activate**. Use the menu key to toggle between on and off. When the Bluetooth is activated, the Bluetooth icon is displayed on the home screen.

## Deactivate Bluetooth

Select **Menu > Tools > Bluetooth > Activate**. Use the menu key to toggle between on and off.

## Bluetooth Settings

Type	Function
<b>My name</b>	Select this option to change the name of your device.
<b>Visibility</b>	Select On to show your presence to other devices. Select Off to hide your presence from other devices.
<b>My profiles</b>	Use this option to view the Bluetooth service list.

## Pairing Devices

1. Select **Menu > Tools > Bluetooth > Search for devices**.
2. Select **Search more...** to view the list of devices within a range of 10 metres with Bluetooth connectivity.
3. Select the device of your choice.
4. Enter the passcode (for example, **0000**) in the Enter passcode screen. The same passcode must be entered for the other devices also.
5. Select **OK**.
6. When the other device accepts your request the message **Pairing Done** is displayed on the screen.
7. When the other device rejects your request the message **Pairing Failed** is displayed on the screen.



Do not pair with an unknown device for security reasons.

## Connecting a Bluetooth Headset

You can connect a bluetooth headset after pairing it with your phone.

1. Select **Menu > Tools > Bluetooth > My devices**.
2. Select the paired Bluetooth headset.
3. Select **Options > Connect**.



For more details, refer the user manual of the Bluetooth headset.

## Rename Paired Device

1. Select **Menu > Tools > Bluetooth > My devices**.
2. Select the paired device.
3. Select **Options > Rename**.
4. Enter the new name.
5. Select **OK**.

## Delete Paired Device

1. Select **Menu > Tools > Bluetooth > My devices**.
2. Select the paired device.
3. Select **Options > Delete**.



If you cancel the pairing with a device that is connected, pairing is removed and the connection is switched off immediately.

## Sending Data via Bluetooth

You can connect several Bluetooth devices at a time. You can also transfer files to another compatible device.

1. Select **Menu > My files**.
2. To send an image file, select **Pictures >** select the file OR To send an audio file, select **Sounds >** select the file OR To send any other file, select **Others >** select the file.

3. Select **Option > Send > via Bluetooth**.
4. Select the paired device to which you want to send the file.



**My devices** screen normally displays the paired devices as well as devices which are not paired currently. Re-pairing may be required. To send a data to an unpaired device, Select **Search more....** Select the unpaired device of your choice. Enter the pin code when you are asked to enter.

5. When the other device accepts your file, the message **Object sent** is displayed on the screen.
6. When the other device rejects the file, the message **Connection failed** is displayed on the screen.

### Receiving Data via Bluetooth

To receive data using Bluetooth, your device should be Bluetooth activated and must be visible to other devices.

1. When you receive a data, you are asked if you want to accept it.
2. Select **Accept** to receive data OR select **Reject** to refuse the data.
3. If you accept, the data will be stored in **My files > Pictures** or **Sounds** or **Others**.

### Calendar

The calendar enables you to set appointments, create appropriate notes, schedule reminders when required, set alerts and repeat specific settings. Tasks can be viewed on a daily, weekly and monthly basis.

1. To access the Organizer and its associated functions,

select **Menu > Tools > Calendar**. The calendar for the current month is displayed. Use the navigation keys to navigate across months.

2. Select **Option** to view the list of options available.
  - **View day:** You can view the list of events for the day.
  - **View week:** You can view the list of events for the week.
  - **New event:** You can enter a new event.
  - **Go to date:** You can go to a particular date and view the events for that date.
  - **Advanced:** You can find any event, delete all events or check for reminders.

### Edit Events

Select **Menu > Tools > Calendar > Option > View day**. Select the event. Select **Option > Edit**. Make the changes. Select **Save**.

### Delete Events

Select **Menu > Tools > Calendar > Option > View day**. Select the event. Select **Option > Delete**. Select **OK**.

## Calculator

The calculator in this phone is designed to perform simple mathematical calculations.

1. Select **Menu > Tools > Calculator**.
2. To enter the numbers, press the numeric keys.
3. To use mathematical operators use the navigation keys.

Navigation Key	Operation
<b>Up</b>	+ (Addition)
<b>Down</b>	- (Subtraction)
<b>Left</b>	/ (Division)
<b>Right</b>	* (Multiplication)

4. After performing the calculations, press the **menu** key for the final result.
5. Select **Option** to display the following options.

Option	Function
<b>Calculate</b>	Performing calculations
<b>Percentage</b>	Percentage calculations
<b>Modular</b>	Modular division
<b>MC</b>	Clears number from memory
<b>MR</b>	Reads the number from memory
<b>MS</b>	Stores the entered number in memory

**M+**

Adds a number to the number in memory and stores the result in memory



This phone accepts numbers up to a maximum of 9 digits per entry.

## Voice recorder

Select **Menu > Tools > Voice recorder**.

1. To record an audio file, select **Option > New episode**.
2. To temporarily stop the recording, select **Pause**.
3. To continue with the recording, select **Resume**.
4. To end the recording, select **Stop**.
5. To select the storage location of the recorded file, select **Option > Select memory > Phone memory or Memory card**.

The recorded audio file is stored under My files. For more information refer "[Managing Your Files](#)" on page 67.

## Audio Playback

The user can do instant playback of the recorded audio within the voice recorder. To listen to an recorded audio file, select **Menu > My files > Sounds**. Select the file.

## Stopwatch

Select **Menu > Tools > Stopwatch**.

1. To trigger the timer, select **Start**. The counter starts running.
2. To temporarily stop the counter, select **Pause**.
3. To resume running the counter, select **Go**.
4. To stop the counter, select **Stop**.

## Unit Converter

You can convert one type of physical units to another type. Select **Menu > Tools > Unit converter**.

1. Select the type of physical unit. Use the Right or Left navigation keys to scroll. For example, Temperature.
2. Scroll down and select the Unit 1 for Temperature, for example, Fahrenheit.
3. Scroll down and enter the amount for Fahrenheit in Amount 1, for example, 80.
4. Scroll down and select the Unit 2 for Temperature, for example, Celsius.
5. The Temperature in Celsius is displayed in Amount 2.

## Countdown Timer

This function is helpful when you need to be reminded of a specific event or you want to time a particular task.

1. Select **Menu > Tools > Countdown**.
2. Specify the time for the reminder in terms of hours and minutes. The maximum time you can set is 23 hours, 59 minutes and 59 minutes (23:59:59) and the minimum is one second (00:00:01).

3. When the countdown is completed, the alarm rings.

## GPS

The Global Positioning System (GPS) is a Global Navigation Satellite System. It uses satellites that transmit precise microwave signals, which enable GPS receivers to determine their current location and time.

1. To enable GPS, select **Menu > Tools > GPS > GPS > On**.
2. To set the time interval to receive the current location and time, select **Menu > Tools > GPS > Frequency > select the time**.
3. To enter the IP address of the instant fix server from which the related file will be received, select **Menu > Tools > GPS > Instant fix server > Instant fix server > enter the IP address > Save**.
4. To set the time interval to receive the file from the server, select **Menu > Tools > GPS > Instant fix server > Frequency**. Select the time.

## USB function

You can transfer and synchronize data between the XP3.20 phone and your computer using either USB drive or PC Sync. Select **Menu > Tools > USB Function > USB Drive OR PC Sync**.



If you select USB drive, the SD Card should be present in the phone and the phone should be connected to the computer via USB cable. The SD card will be displayed as a separate drive in the computer.



Select PC Sync if you want to use the PC Tools software on your computer to transfer data.



## FM Radio

The FM radio is built-in and offers instant and easy access to FM radio channels in your phone. A wired headset must be attached to the phone, as the wire works as an antenna for the radio. You can then listen to the radio via the wired headset.



Select **Menu > Applications > FM Radio**. The radio starts playing. Select **Option** to display the following options.

- **Preset station:** You can view the radio stations that have already been saved. Select a radio station to play.
- **Search and save:** You can automatically save the radio channels.
- **Off:** You can switch off the radio.
- **Handsfree:** To play FM radio in the phone speaker, select **Option > Handsfree > On**.
- **Play in background:** You can play the radio in background. An icon at the bottom half of the screen indicates that radio is playing in background.

## Camera

The Sonim XP3.20 phone provides a 2 MP (megapixel) camera. You can use the camera to take pictures. The pictures can then be saved in your phone.

Select **Menu > Camera** OR press the **camera** key. The camera is switched on. Select the **menu** key to shoot the picture. A message appears **Save photo?** Select **Yes** to save. The picture is saved in **Menu > My files > Pictures**. After shooting is complete, select **Option** to display the following options:

- **Send:** You can send the picture to a phone number via Bluetooth.
- **Delete:** You can delete the selected file.
- **Capture:** You can capture a new picture.
- **Set as contact picture:** You can set the captured picture as the picture against a contact.
- **Set as wallpaper:** You can set the captured picture as the phone screen wallpaper.

## Camera Options

To view the camera options, select **Menu > Camera > Option**. The following options are displayed:

- **Picture resolution:** Select the picture resolution from the following options: 1600\*1200, 1280\*1024, 1024\*768, 640\*480 or 176\*220.
- **Picture quality:** Select the picture quality from the following options: Superfine, Fine or Normal.
- **View picture:** This option takes the user to the **Pictures** folder.
- **Camera Mode:** You can set the color effects,

self-timer and multishot.

- The color effects available are black and white, sepia and blue.
- If you switch on self-timer, the picture will be shot only after a certain amount of time after pressing the menu key.
- If you switch on multishot, you can shoot three pictures with a single press of the menu key.
- **Flash:** Select **On** to turn on the flash or select **Off** to turn off the flash.
- **Advanced:** The advanced options available are:
  - **Storage location:** You can set the default location of pictures as **Phone memory** OR **Memory card**.
  - **Default name:** You can set the default name of the picture.
  - **Frequency:** You can set the frequency of the power as **50 Hz** OR **60 Hz**.
  - **Full screen preview:** You can turn on the full screen preview during shooting.

## Flashlight

You can use the camera flash as a flashlight. To turn on the flash, press and hold (long press) the lowest button on the right side of the phone. Press and hold (long press) the button again to turn off the flash. The flashlight can be turned ON/OFF from the following screens:

- Idle screen.
- Keypad locked screen.
- Main menu screen.
- GSM call screen.
- Menu screens: Contacts, Messages, Create message, Settings, Call list and My files.
- Tools screen.
- Without SIM screen and when keypad locked without SIM screen.



The flashlight does not work if you are using WAP or any Java applications.

## Sonim Xperience™

Sonim Xperience™ enables the user of the Sonim XP 3.20 phone to access a variety of information.



This application uses data network service provided by the operator. The operator may collect service charges depending on the contract with the operator.

## Starting With Sonim Xperience™

To access the application, select **Menu > Applications > Sonim Xperience > press Agree** for the **Sonim Agreement**.



The screen **Sonim Agreement** appears only once. Once you accept the agreement, this option will not appear again.

## Settings

To provide information to the user in a familiar format, the user can configure the units to be displayed. The behavior of the applications may also be tuned according to user requirement.

### Network Settings

The following information can be set via network settings.

- To enable or disable GPS (if GPS is disabled, the user should enter a default location to be used for current location).
- The data network profile to be used by Sonim

Xperience on the phone.

- To enable or disable data network usage when roaming (only GPS information is available when data network is not available).

To enable GPS, select **Menu > Applications > Sonim Xperience > Options > Settings > Network settings > GPS > Enable**.

To select the data network profile 4, select **Menu > Applications > Sonim Xperience > Options > Settings > Network settings > Network account > Profile 4**.

To enable data network usage while roaming, select **Menu > Applications > Sonim Xperience > Options > Settings > Network settings > Allow while roaming > Enable**.

Refer “**Configuration of APN (Access Point Name) for Opera Mini**” on page 49 for setting the APN. Use **Profile 4**.



In the Network settings, the **Attach GPRS** settings should be **Always attached** for Sonim Xperience™ to work consistently.

60



Check that the  icon on the phone is green before accessing Sonim Xperience™.

### Display Settings

The following information can be set via display settings.

- The preferred format can be set as image or text.
- The distance unit can be set as miles, kilometers or nautical miles.

- The temperature unit can be set as fahrenheit or celsius.
- The coordinate unit can be set as decimal or degree-minute-second.

To set the preferred format, select **Menu > Applications > Sonim Xperience > Options > Settings > Display settings > Preferred format > Image OR Text.**



Only the reports that support image format will be displayed as images. Other reports will be displayed as text even if image is set as the preferred format.



A green arrow at the top or bottom of a report in image format indicates there is a previous or next page, which can be viewed by pressing the up or down navigation key respectively.

To set the distance unit, select **Menu > Applications > Sonim Xperience > Options > Settings > Display settings > Distance units > Miles OR Kilometers OR Nautical miles.**

To set the temperature unit, select **Menu > Applications > Sonim Xperience > Options > Settings > Display settings > Temperature units > Fahrenheit OR Celsius.**

To set the coordinate unit, select **Menu > Applications > Sonim Xperience > Options > Settings > Display settings > Coordinate units > Decimal OR Degree-Minute-Second.**

## Wallpaper Settings

The following information can be set via wallpaper settings.

- The GPS check interval.
- The distance threshold.

The current location of the phone is checked using the GPS regularly based on the specified interval. If the phone has moved beyond the specified distance threshold since the last refresh of the wallpaper, it is refreshed again. The units of the distance threshold is the same as the unit specified for distance in the Display settings.

To set the GPS check interval, select **Menu > Applications > Sonim Xperience > Options > Settings > Wallpaper settings > GPS check interval.**

To set the distance threshold, select **Menu > Applications > Sonim Xperience > Options > Settings > Wallpaper settings > Distance threshold.**

## Set Quick Access

You can set a quick access for Sonim Xperience™. Select **Menu > Applications > Sonim Xperience > Options > Set quick access.**



The **Set quick access** option appears only on selecting **GPS information** OR the individual items within the **Weather reports** folder.

Press and hold the **easy call** key on idle screen to start Sonim Xperience™ on the screen that is set as quick access.

## Wallpaper

The user can select one of the following dynamic wallpapers:

- Current weather
- 4 hour forecast
- 3 day forecast

The wallpaper is updated periodically. The **current weather** and **4 hour forecast** wallpapers are updated every 3 hours. The **3 day forecast** wallpaper is updated every day.

- To display the default wallpaper, select **Menu > Applications > Sonim Xperience > Options > Wallpaper > Phone default.**
- To display the current weather condition as wallpaper, select **Menu > Applications > Sonim Xperience > Options > Wallpaper > Current weather.**
- To display the 4 hour forecast as wallpaper, select **Menu > Applications > Sonim Xperience > Options > Wallpaper > 4 hour forecast.**
- To display the 3 day forecast as wallpaper, select **Menu > Applications > Sonim Xperience > Options > Wallpaper > 3 day forecast.**



The wallpaper gets refreshed based on Distance threshold and GPS check interval.

## GPS Information

The following information is displayed from GPS:

- Latitude, longitude, altitude and accuracy.
- Speed and direction of movement.
- Current time in UTC.
- Position and signal strength of satellites within the range.

To view the GPS information, select **Menu > Applications > Sonim Xperience > GPS Information.** Select **Satellite** to view satellite information.

## Weather Report

Weather information can be obtained for the following locations:

- Current location from GPS.
- A new location whose name or coordinates may be entered. The name of a location can be the name of a city or city followed by state or/and country. Different fields have to be separated by comma. Coordinates can be entered in decimal or degree:minute:second format. You can use + or – or use N, S, E or W in coordinates. Here are some examples of valid location entries:
  - San Mateo
  - San Mateo, CA
  - New Delhi, India
  - 13,18
  - 13N,18E
  - 13:30:0,18:10:0
  - 37.6,-122.3

- A location that was queried in the recent past.

To view the weather reports, select **Menu > Applications > Sonim Xperience > Weather reports**. Now select the type of report and location for which the weather needs to be displayed.



The location list contains the 6 recently queried locations.

### Current Weather

The following current weather conditions are displayed.

- Air temperature.
- Wind speed and direction.
- Cloud cover (in percentage).
- Relative humidity (in percentage).
- Barometric pressure.
- Weather summary (For example: partly cloudy).
- Weather icon is shown if image format is selected.
- Sunrise and sunset times.
- Phase of moon.

The following information is given if the location is within 200km of the coastline.

- Low tide and high tide times.
- Wave height and period.

To view the current weather information, follow these steps.

- To view the weather information for the current location, select **Weather report > Current weather > My location**.
- To view weather information for a new location, select **Weather report > Current weather > New location**. Enter the new location. Select **OK**.



If GPS is disabled, the default location configured is used as the current location.

### 4 hour Forecast

The following current weather conditions are displayed.

- Air temperature.
- Wind speed and direction.
- Cloud cover (in percentage).
- Relative humidity (in percentage).
- Barometric pressure.
- Weather summary (For example: partly cloudy).
- Weather icon is shown if image format is selected.

To view the 4 hour forecast, follow these steps.

- To view the 4 hour forecast for the current location, select **Weather report > 4 hour forecast > My location**.
- To view the 4 hour forecast for a new location, select **Weather report > 4 hour forecast > New location**. Enter the new location. Select **OK**.

### 3 day Forecast

The following current weather conditions are displayed.

- Minimum and maximum air temperature.
- Maximum wind speed.
- Maximum probability of precipitation (in percentage).
- Maximum relative humidity (in percentage).
- Maximum barometric pressure.
- Weather summary is shown if text format is selected.
- Weather icon is shown if image format is selected.

To view the 3 day forecast, follow these steps.

- To view the 3 day forecast for the current location, select **Weather report > 3 day forecast > My location**.
- To view the 3 day forecast for a new location, select **Weather report > 3 day forecast > New location**. Enter the new location. Select **OK**.

### 3 day Detailed Forecast

The following current weather conditions are displayed.

- Minimum and maximum air temperature.
- Maximum wind speed.
- Maximum probability of precipitation (in percentage).
- Maximum relative humidity (in percentage).
- Maximum barometric pressure.
- Weather summary (For example: partly cloudy).
- Weather icon is shown if image format is selected.

- Sunrise and sunset times.
- Phase of moon.

The following information is given if the location is within 200km of the coastline.

- Low tide and high tide times.
- Maximum wave height and period.

To view the 3 day detailed forecast, follow these steps.

- To view the 3 day detailed forecast for the current location, select **Weather report > 3 day detailed forecast > My location**.
- To view the 3 day detailed forecast for a new location, select **Weather report > 3 day detailed forecast > New location**. Enter the new location. Select **OK**.

### Weather at Stations

The following current weather conditions are reported from each weather station within 100km of the requested location. The reports from the 10 nearest weather stations that are sending information to our meteorological network are displayed.

- Station id, location and type.
- Latitude and longitude of the station.
- Air temperature.
- Wind speed and direction.
- Cloud cover (in percentage).
- Relative humidity (in percentage).
- Barometric pressure.



- Weather summary (For example: partly cloudy).
- Weather icon is shown if image format is selected.
- Sunrise and sunset times.

The following information is given if the location is within 200km of coastline

- Low tide and high tide times.
- Wave height and period.

To view the weather at stations, follow these steps.

- To view the weather at stations for the current location, select **Weather report > Weather at stations > My location.**
- To view the weather at stations for a new location, select **Weather report > Weather at stations > New location.** Enter the new location. Select **OK.**

### Lightning Information

A list of locations (up to 10), within 100 km of the requested location, which recently observed lightning strikes in the past 30 minutes is displayed.

To view the lightning information, follow these steps.

- To view the lightning information for the current location, select **Weather report > Lightning information > My location.**
- To view the lightning information for a new location, select **Weather report > Lightning information > New location.** Enter the new location. Select **OK.**

### Marine Bulletin

Any marine warnings (in English text), within 100km of the

requested location, in effect for the closest marine zone is displayed.

To view the marine bulletin, follow these steps.

- To view the marine bulletin for the current location, select **Weather report > Marine bulletin > My location.**
- To view the marine bulletin for a new location, select **Weather report > Lightning information > New location.** Enter the new location. Select **OK.**

### Help

To view the help for any item, highlight the item via **Menu > Applications > Sonim Xperience OR Menu > Applications > Sonim Xperience > Weather reports.** Then, select **Options > Help.**

### About

To view the Sonim Xperience™ version, select **Menu > Applications > Sonim Xperience > Options > About.**

### Exit

To view the Sonim Xperience™ version, select **Menu > Applications > Sonim Xperience > Options > Exit.**

## Micro SD (secure digital) Card

In XP3.20 phone, you can insert a removable Micro SD Card to increase the storage capacity. This card is inserted into the slot inside the phone. You can perform the following functions on the SD card.

- Formatting of the SD card.
- Viewing memory details such as free space, used space and total space.
- Setting the images in the SD card as wallpaper.
- Setting the audio files in the SD card as ringtones.

## Inserting Micro SD Card Into the Phone

1. Ensure the phone is switched off.
2. Lift the battery cover and remove the battery. For instructions refer **Inserting the Battery**.
3. Lift the silver clip over the designated slot located at the top left end of the phone.



4. Place the SD card in the designated slot and close the silver clip.



5. Replace the battery and the cover. Turn the battery cover screws clockwise to lock the battery cover.



When the XP3.20 phone is connected to a computer using USB, the Micro SD card is displayed as a separate drive in the computer.

## Managing Your Files

Using the **My files** menu, you can store and manage audio files, picture files, .jar files and .txt files. You can preview the files, view their details and delete files. The internal storage capacity is approximately 25 MB.

1. To view your files select **Menu > My files**.
2. Scroll to a category and select either **Pictures** OR **Sounds** OR **Others** and select **OK**.
3. For pictures, select the pictures that you would have downloaded via WAP or Bluetooth. For sounds select the audio files that you would have downloaded or recorded.
4. Scroll to file from the displayed list and select **Option** to display further options.

For a picture file, the following options are present.

Option	Function
<b>View</b>	You can view the picture in full screen mode.
<b>Send</b>	You can send the picture to a phone number via Bluetooth.
<b>Advanced</b>	You can cut or copy the picture to another location. You can also rename the picture or view the details.
<b>Use</b>	You can use the picture as contact id or wallpaper.
<b>Delete</b>	You can delete the picture.
<b>Slide show</b>	You can view the pictures as a slide show.

<b>Change view</b>	You can view the pictures as a list or as a grid.
<b>Sort</b>	You can sort the pictures by name, date or size.
<b>Select multiple</b>	You can select all the pictures or select one by one.

For an audio file, the following options are present.

Option	Function
<b>Play</b>	You can play the audio file.
<b>Send</b>	You can send the audio file to a phone number via Bluetooth.
<b>Advanced</b>	You can cut or copy the audio file to another location. You can also rename the audio file or view the details.
<b>Use</b>	You can use the audio file as contact id or ringtone.
<b>Delete</b>	You can delete the audio file.
<b>Change view</b>	You can view the audio files as a list or as a grid.
<b>Sort</b>	You can sort the audio files by name, date or size.
<b>Select multiple</b>	You can select all the audio files or select one by one.

## Wired Headset

A wired headset is supplied along with the XP3.20 phone. This wired headset enables you to talk on the phone without holding the phone. The wired headset also acts as an antenna for FM radio.

### During Calls

1. To accept a call, press headset button to accept a call.
2. To end a call, press and hold the headset button.
3. To record the conversation, press the headset button during a call.

This wireless device, (the “Device”) contains software owned by Sonim Technologies, Inc. (“Sonim”) and its third party suppliers and licensors (collectively, the “Software”). As user of this Device, Sonim grants you a non-exclusive, non-transferable, non-assignable license to use the software solely in conjunction with the Device on which it is installed and/or delivered with. Nothing herein shall be construed as a sale of the Software to a user of this Device.

You shall not reproduce, modify, distribute, reverse engineer, decompile, otherwise alter or use any other means to discover the source code of the Software or any component of the Software. For avoidance of doubt, you are at all times entitled to transfer all rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules.

You are granted this license for a term of the useful life of this Device. You can terminate this license by transferring all your rights to the Device on which you have received the Software to a third party in writing. If you fail to comply with any of the terms and conditions set out in this license, it will terminate with immediate effect Sonim and its third party suppliers and licensors are the sole and exclusive owner of and retain all rights, title and interest in and to the Software. Sonim, and, to the extent that the Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms. The validity, construction and performance of this license shall be governed by the laws of Delaware, United States.

### Unconditional 3 year Guarantee

Sonim provides this Unconditional three year Guarantee for your mobile phone (hereinafter referred to as Product”).

Should your Product need guaranty service, please return it to the dealer from whom it was purchased, or contact Sonim Customer Care at: support@sonimtech.com.

### Our Guarantee

Subject to the conditions of this Unlimited 3 year Guarantee Sonim warrants this product to be free from major defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of Three (3) years.

### What We Will Do

If during the guarantee period, this product fails to operate under normal use and service, due to defects in design, material or workmanship, Sonim’s authorised distributors or service partners, in the country/region where you purchased the product, will replace with the same or better model in the same or better condition. Sonim and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads or other information may be lost when your Sonim Product is repaired or replaced. Sonim does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sonim Product such as downloads, calendar and contacts before handing in your Sonim Product for repair or replacement.

## Phone Care

The Sonim XP3.20 is designated class IP57 for dust and water protection, according to the IEC Ingress Protection (IP) Standard 60529. This means that the phone is dust protected and can be submerged into 1.0m deep water for up to 30 minutes. Immersion in deeper water can damage it and must be avoided. The phone is not water-proof or water resistant during charging, use of a plug-in headset, or any other use when the system connector cover on the bottom of the phone is not tightly enclosed.

The Sonim XP3.20 is solid and built for heavy duty use. Its design protects against disassembly or mechanical damage when subjected to forces equal to free fall from the high of an average adult. Subjecting the phone to stronger impact and forces can damage it and must be avoided.

## Conditions

1. The warranty is valid only if the original proof of purchase issued to the original purchaser by a Sonim authorised dealer, specifying the date of purchase and serial number for this Product, is presented with the Product to be repaired or replaced. Sonim reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
2. If Sonim repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sonim.
3. This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sonim instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid interacting with the product beyond what is described as acceptable in the user guide for the product. A rechargeable battery can be charged and discharged hundreds of times. However, it will eventually wear out - this is not a defect. When the talk-time or standby time is noticeably shorter, it is time to replace your battery. Sonim recommends that you use only batteries and chargers approved by Sonim. Minor variations in display brightness and colour may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Several defective pixels are deemed acceptable.
4. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sonim authorised person. Tampering with any of the seals on the Product will void the warranty.
5. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sonim branded original accessories intended for use with the Product.

6. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONIM OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW. DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONIM OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

**WARNING:** Changes or modifications made to this equipment not expressly approved by Sonim Technologies, Inc. for compliance could void the user's authority to operate the equipment.

### FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



## Declaration of Conformity

Sonim Technologies Inc, declares that the mobile phone Sonim XP3.20™ is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.



### Declaration of Conformity

We, Sonim Technologies, Inc. 1875 S. Grant Street, Suite 620, San Mateo CA 94402, US declare under our own responsibility that our products

**Type:** P22C001AA, P23C001AA  
**Model:** Sonim XP3.20-E Quest, Sonim XP3.20-A Quest

to which this declaration refers, alone and in combination with our accessories conform with the relevant standards:

Safety: EN 60950  
SAR: EN 50360, EN 50361  
RF: EN 301511, EN 300328  
EMC: EN 301489-1, EN 301489-7, EN 301489-17  
3GPP: TS 51.010-1

We hereby declare that all essential radio test suites have been carried out and that the above named products are in conformity to the essential requirements of Radio and Telecommunication Terminal Equipment Directive 1999/5/EC.

The conformity assessment procedure according to the regulations in R&TTE Directive 1999/5/EC has been followed with the involvement of the following Notified Body:  
**BAHT, Balfour House, Churchfield Rd, Walton-on-Thames, Surrey, KT11 2TD, UK,**  
Notified Body Number **0168**.

The technical documentation relevant to the above products will be held at:  
Sonim Technologies, Inc.  
1875 S. Grant Street, Suite 620, San Mateo, California 94402, USA

San Mateo, March 11 2009

The original copy of this Declaration of Conformity is signed.

**A****Access Point Name (APN)** 47, 48**Alarm clock** 49**Alpha-numeric** 18**Audio**

Playback 52

Recorder 52

**Auto-power ON/OFF** 30**B****Bar calls**

Cancel 35

Status 35

**Battery**

Alert 13

Bars 13

Charge 13, 18

Usage 12

**Bluetooth**

Activate 49

Deactivate 49

Headset 50

Pair devices 50

Receive data 51

Send data 50

Settings 49

**Bookmarks** 46**C****Calculator** 52**Calendar** 51**Call accept/Send key** 17**Call cost details** 37**Call list** 33**Calls on hold/waiting** 36**Camera** 55

Flash 56

Options 56

**Car mode** 28**Connectivity settings** 31**Contacts** 38

Add 38

Delete 40

Group 38

Move or copy 40

Send 39

Send message 38

**Count-down timer** 53**Create messages** 42**D****Display settings** 30**F****Filter calls** 36**Firewall**

Black list 30

White list 30

**Fixed number dialing** 34**Flashlight** 57**Flight mode** 28**FM radio** 55**Forward calls** 35**G****General settings** 28**GPRS** 36**GPS** 53**GSM**

Dial 33

Send phone number 33

**H****Handsfree dial** 33**Hardcoded shortcuts** 44**Home mode** 28**Homepage** 46**I****International clock**

Daylight saving time 29

Local settings 29

**International number dialling** 33

**K****Keypad**

- Accept/Send 20
- End call 20
- Function keys 15
- LSK/RSK 20
- Navigation keys 17, 21
- Power On/Off 20
- XP3.2 17

**L****Left Selection Key 17****M****Managing your files 65****Meeting mode 28****Memory 41****Memory status 30****Menu**

- Call list 24, 33
- Key 18, 20
- Main 24
- Messages 24, 41
- My files 24, 65
- Phone book 24, 38
- Quick settings 24
- Settings 24, 28
- SIM toolkit 24, 44
- Tools 24, 49
- WAP 24, 46

**Messages**

- Delete 43

- Dial sender 43
- Forward 43
- Inbox 43
- Predefined SMS 43
- Save sender's number 43
- Sent 43
- SMS memory 44
- Unsent 43
- Write 42

**Message settings 41**

- Memory 41
- Reply path 41
- Service number 41
- Signature 41
- Status report 41
- Validity period 41

**Micro SD card 64**

- Insert 64

**My files 65****O****Opera Mini 47, 48**

- Access Point Name (APN) 47, 48
- Language Selection 47
- Network account 47

**Organizer**

- Delete entries 50
- Edit entries 50

**Outdoor mode 28****P****Pair devices 50****Personal mode 28****Phone languages 29****Predefined message 44****Predefined SMS 43****Profiles 28**

- Car 28
- Flight 28
- Home 28
- Meeting 28
- Outdoor 28
- Personal 28
- Silent 28

**R****Recording a call 37****S****Security settings 29****Silent mode 28****SMS memory 44****Sonim xperience**

- GPS information 60
- Quick access 59
- Settings 58
- Weather information 60

**Sonim Xperience 58****Sound settings 31****Speed dial 34****Standby mode duration 18**

## Stopwatch 53

## T

### Text input mode

- Conventional 41
- Predictive 41

## Themes 30

## Tools

- Alarm clock 49
- Audio playback 52
- Audio recorder 52
- Bluetooth 49
- Calculator 52
- Calendar 51
- Camera 55
- Count-down timer 53
- Flashlight 57
- FM radio 55
- GPS 53
- opera mini 47, 48
- Stopwatch 53
- Unit converter 53
- USB function 54

## U

### Unit converter 53

### USB function 54

## V

### Voicemail 17

## W

## WAP 46

- Address 46
- Bookmarks 46
- Cache 46
- Homepage 46
- Push inbox 46
- Settings 46

## Weather forecast 60

## Write Messages 42