

# Contents

## **Getting started.....5**

Assembly.....	5
Turning on the phone.....	6
Help.....	7
Charging the battery.....	8
Phone overview.....	9
Menu overview*.....	12
Navigation.....	14
Memory.....	15
Phone language.....	16
Entering text.....	16

## **Walkman™ .....17**

Stereo portable handsfree.....	17
Walkman™ player.....	18
PlayNow™.....	21
TrackID™ .....	22
Online music and video clips.....	22
Video player.....	23
Radio .....	23
MusicDJ™.....	24
Record sound .....	24

## **Transferring and handling content.....25**

Handling content in the phone.....	25
Sending content to another phone.....	26
Using a USB cable.....	26
Transferring content to and from a computer.....	27
Phone name.....	28
Using Bluetooth™ wireless technology.....	28
Backing up and restoring.....	29

## **Calling.....31**

Making and receiving calls.....	31
Contacts.....	33
Speed dial.....	36
More calling features.....	36

## **Messaging.....40**

Text and picture messages.....	40
Conversations.....	41
Voice messages.....	42
Email.....	42
Instant messaging .....	43

**Imaging .....45**

Using the camera.....45  
More camera features.....47  
Viewing and tagging photos.....47  
Using photos.....48  
Working with photos.....48  
Sending content to a Web site.....49  
Printing photos.....50

**Internet .....51**

Bookmarks.....51  
History pages.....51  
More browser features.....51  
Internet security and certificates.....52  
Web feeds.....52  
YouTube™.....54

**Synchronising.....54**

Synchronising using a computer.....54  
Synchronising using an Internet service.....55

**More features.....56**

Flight mode.....56  
Update Service.....56  
Gesture control.....57  
Location services.....57  
Alarms.....57

Calendar.....58  
Notes.....59  
Tasks.....59  
Profiles.....60  
Time and date.....60  
Theme.....60  
Main menu layout.....61  
Ringtones.....61  
Screen orientation.....61  
Games.....61  
Applications.....62  
Locks.....63  
IMEI number.....64  
Style-Up™ covers.....64  
Using the flip.....65

**Troubleshooting.....65**

Common questions.....65  
Error messages.....68

**Index.....70**

## Sony Ericsson W508 Walkman™

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©Sony Ericsson Mobile Communications AB, 2009  
Publication number: xxxx-xxxx.1

**Attention: Some of the services and features described in this User guide are not supported by all networks and/or service providers in all areas. Without limitation, this applies to the GSM International Emergency Number 112. Please contact your network operator or service provider to determine availability of any specific service or feature and whether additional access or usage fees apply.**

Please read the *Important information* before you use your mobile phone.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

Smart-Fit Rendering is a trademark or a registered trademark of ACCESS Co., Ltd.

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

The Liquid Identity logo, SensMe, PlayNow, MusicDJ, PhotoDJ, TrackID and VideoDJ are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB. TrackID™ is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

WALKMAN, WALKMAN logo, Sony, Memory Stick Micro™, M2™ and Media Go are trademarks or registered trademarks of Sony Corporation. PictBridge is a trademark or registered trademark of Canon Kabushiki Kaisha Corporation.

Style-Up is a trademark or registered trademark of Sony Ericsson Mobile Communications AB. Google™, Google Maps™, YouTube and the YouTube logo are trademarks or registered trademarks of Google, Inc.

SyncML is a trademark or registered trademark of Open Mobile Alliance LTD.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Adobe Photoshop Album Starter Edition is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.

Microsoft, ActiveSync, Windows, Outlook, Windows Media and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

T9™ Text Input is a trademark or a registered trademark of Tegic Communications. T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No.

1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG-4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

Java, JavaScript and Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

End-user license agreement for Sun Java Platform, Micro Edition.

1. Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

2. Export Regulations: Software including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, re-export, or import Software. Software may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders. 3. Restricted rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) and FAR 52.227-19(c) (2) as applicable.

Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS

252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved. All illustrations are for illustration only and may not accurately depict the actual phone.

## Instruction symbols

These symbols may appear in the User guide.

! Note

💡 Tip

⚠️ Warning


> Use a selection or navigation key to scroll and select. See *Navigation* on page 14.

# Getting started

## Assembly

Before you start using your phone, you need to insert a SIM card and the battery.


*To insert the SIM card*

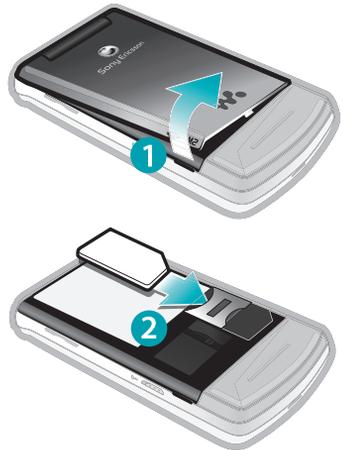

1 Remove the battery cover.

- Slide the SIM card into its holder with the gold-coloured contacts facing down.


*To insert the battery*

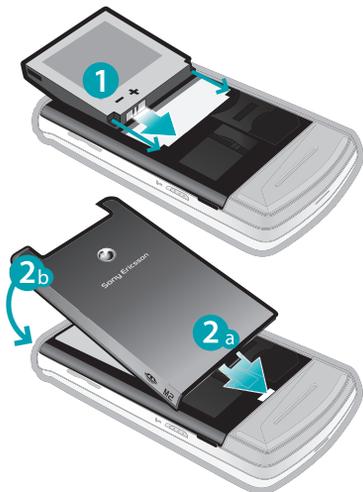

- Insert the battery with the label side up and the connectors facing each other.
- Attach the battery cover.

## Turning on the phone

*To turn on the phone*

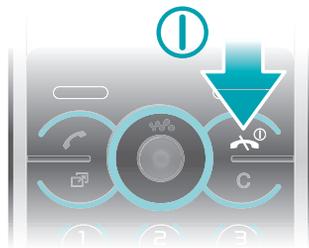

- Press and hold down ①.
- Enter your SIM card PIN, if requested, and select OK.
- Select a language.
- Follow the instructions to use the setup wizard for basic settings and useful tips.

💡 *If you want to correct a mistake when you enter your PIN, press (C).*

### SIM card

The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your

phone and detach the charger before you insert or remove the SIM card.

-  You can save contacts on the SIM card before you remove it from your phone. See *To copy names and numbers to the SIM card on page 34.*

## PIN

You may need a PIN (Personal Identification Number) to activate the services and functions in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as \*, unless it starts with emergency number digits, for example, 112 or 911. You can see and call an emergency number without entering a PIN.

-  If you enter the wrong PIN three times in a row, the SIM card is blocked. See *SIM card lock on page 33.*

## Standby

After you have turned on your phone and entered your PIN, the name of the network operator appears. This view is called standby. Your phone is now ready for use.

## Using other networks

Making and receiving calls, using messaging, and data transfer, for example, Internet-based services,

outside your home network (roaming), may incur additional costs. Contact your operator for more information.

## Help

In addition to this User guide, Feature guides and more information are available at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

Help and information are also available in your phone.

### To access the User guide

- Select Menu > Settings > User help > User guide.

### To view tips and tricks

- Select Menu > Settings > User help > Tips and tricks.

### To view information about functions

- Scroll to a function and select Info, if available. In some cases, Info appears under Options.

### To view the phone demonstration

- Select Menu > Entertainment > Demo tour.

### To view the phone status

- Press  and then press the volume key. Phone, memory and battery information is shown.

## Charging the battery

The phone battery is partly charged when you buy it.

### To charge the battery



- 1 Connect the charger to the phone. It takes approximately 2.5 hours to fully

charge the battery. Press a key to view the screen.

- 2 Remove the charger by tilting the plug upwards.


 You can use your phone while it is charging. You can charge the battery at any time and for more or less than 2.5 hours. You can interrupt the charging without damaging the battery.

## Phone overview

- 1 Video call camera\*
- 2 Ear speaker
- 3 Screen
- 4 Selection keys
- 5 Call key
- 6 Activity menu key
- 7 Microphone
- 8 Connector for charger, handsfree and USB cable
- 9 End key, On/off key
- 10 C key (Clear)
- 11 Navigation key
- 12 Silent key



- 13 Media player key - play/stop
- 14 Media player key - next/fast forward
- 15 Screen light sensor
- 16 Volume, digital zoom keys
- 17 Battery cover
- 18 Keylock switch
- 19 Memory Stick Micro™ (M2™) slot
- 20 Loudspeaker
- 21 Media player key - previous/rewind
- 22 External display
- 23 Main camera

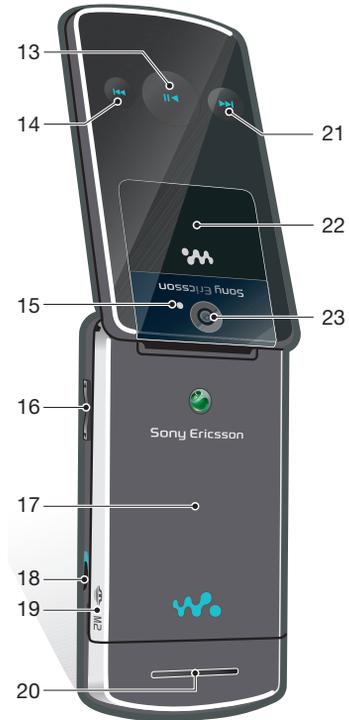

\*Video call camera may not be available in every market.

## Menu overview\*



PlayNow™



Camera



Radio



Calls\*\*



All



Answered



Dialled



Missed



Internet



Messaging

Write new

Inbox/Conversations

Messages

Email

IM

Call voicemail



Contacts

Myself

New contact



Organiser

File manager \*\*

Alarms

Applications

Video call

Calendar

Tasks

Notes

Synchronisation

Timer

Stopwatch

Calculator

Code memo



Entertainment

Online services

TrackID™

Location services

Games

VideoDJ™

PhotoDJ™

MusicDJ™

Remote control

Record sound

Demo tour



Media

Photo

Music

Video

Games

Web feeds

Settings



WALKMAN



Settings

General

Profiles

Time & date

Language

Update service

Gesture control

Voice control

New events

Shortcuts

Flight mode

Security

Setup wizard

Accessibility

Phone status

Master reset

Sounds & alerts

Ring volume

Ringtone

Silent mode

Increasing ring

Vibrating alert

Message alert

Key response

Display

Wallpaper

Main menu layout

Theme

Startup screen

Screen saver

Clock size

Brightness

Edit line names  
Calls  
Speed dial  
Smart search  
Divert calls  
Switch to line 2  
Manage calls  
Time & cost  
Show/hide my no.  
Handsfree  
Open to answer  
**Connectivity**  
Bluetooth  
USB  
Phone name  
Synchronisation  
Device management  
Mobile networks  
Data communication  
Internet settings  
Streaming settings  
Message settings  
SIP settings  
Accessories  
**User help**  
User guide  
Settings download  
Basic setup  
Tips and tricks

\* Some menus are operator-, network- and subscription-dependent.


\*\* You can use the navigation key to scroll between tabs in submenus. For more information, see *Navigation* on page 14.

## Navigation

### *To access the main menu*

- When **Menu** appears on the screen, press the centre selection key to select **Menu**.
- If **Menu** does not appear on the screen, press , and then press the centre selection key to select **Menu**.

### *To navigate the phone menus*

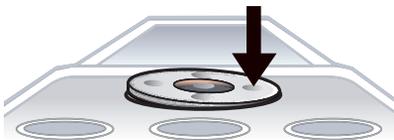

- Press the navigation key , ,  or  to move through the menus.

### *To select actions on the screen*

- Press the left, centre or right selection key.

### *To view options for an item*

- Select **Options** to, for example, edit.

### *To end a function*

- Press .

### *To return to standby*

- Press .

### *To navigate your media*

- 1 Select **Menu** > **Media**.
- 2 Scroll to a menu item and press .
- 3 To go back, press .

### *To delete items*

- Press  to delete items such as numbers, letters, pictures and sounds.

## Tabs

Tabs may be available. For example, **Calls** have tabs.



### *To scroll between tabs*

- Press the navigation key  or .

## Shortcuts

You can use keypad shortcuts to go directly to functions from standby.

### *To use navigation key shortcuts*

- Press , ,  or  to go directly to a function.

### *To edit a navigation key shortcut*

- 1 Select **Menu** > **Settings** > **General** > **Shortcuts**.
- 2 Scroll to an option and select **Edit**.
- 3 Scroll to a menu option and select **Shortc..**

### **Main menu shortcuts**

Menu numbering starts from the top left icon and moves across and then down row by row.

### *To go directly to a main menu item*

- Select **Menu** and press (1) – (9), (\* 0 #), (□ +) or (# ← →).

- ! *The Main menu layout must be set to Grid. See To change the main menu layout on page 61.*

### **Activity menu**

The activity menu gives you quick access to:

- **New events** – missed calls and new messages.
- **Running apps** – applications that are running in the background.
- **My shortcuts** – add your favourite functions to access them quickly.
- **Internet** – quick access to the Internet.

### *To open the activity menu*

- Press (☰).

## **Memory**

You can save content on the memory card, in the phone memory and on the SIM card. Photos and music are saved on the memory card, if a memory card is inserted. If not, or if the memory card is full, photos and music are saved in the phone memory. Messages and contacts are saved in the phone memory, but you can choose to save them on the SIM card.

### **Memory card**

- ! *You may have to purchase a memory card separately.*

Your phone supports Memory Stick Micro™ (M2™) memory card adding more storage space to your phone. It can also be used as a portable memory card with other compatible devices.

You can move content between a memory card and the phone memory. See *Handling content in the phone* on page 25.

### To insert a memory card



- Remove the battery cover and insert the memory card with the gold-coloured contacts facing down.

### Phone language

You can select a language to use in your phone.

#### To change the phone language

- 1 Select **Menu > Settings > General > Language > Phone language**.
- 2 Select an option.

### Entering text

You can use multitap text input or T9™ Text Input **T9** to enter text. The T9 Text Input method uses a built-in dictionary.

### To change text input method

- When you enter text, press and hold down **(✕ a/A)**.

### To shift between capitals and lower-case letters

- When you enter text, press **(✕ a/A)**.

### To enter numbers

- When you enter text, press and hold down **(0 +) – (9)**.

### To enter full stops and commas

- When you enter text, press **(1)**.

### To enter a symbol

- 1 When you enter text, select **Options > Add symbol**.
- 2 Scroll to a symbol and select **Insert**.

### To enter text using T9™ Text Input

- 1 Select, for example, **Menu > Messaging > Write new > Message**.
- 2 If **T9** is not displayed, press and hold down **(✕ a/A)** to change to T9 Text Input.
- 3 Press each key only once, even if the letter you want is not the first letter on the key. For example, to write the word “Jane”, press **(5)**, **(2)**, **(6)**, **(3)**. Write the whole word before looking at the suggestions.
- 4 Use **(↶)** or **(↷)** to view suggestions.
- 5 Press **(# →)** to accept a suggestion.

### *To enter text using multitap*

- 1 From standby select, for example, **Menu > Messaging > Write new > Message**.
- 2 If **T9** is displayed, press and hold down **(\*)a/A** to change to multitap text input.
- 3 Press **(2)** – **(9)** repeatedly until the desired letter appears.
- 4 When a word is written, press **(#...>)** to add a space.

### *To add words to the built-in dictionary*

- 1 When you enter text using T9 Text Input, select **Options > Spell word**.
- 2 Write the word using multitap input and select **Insert**.

## Walkman™

You can listen to music, audio books and podcasts. Use Media Go™ to transfer content to and from your phone. For more information, see *Transferring content to and from a computer* on page 27.


### Stereo portable handsfree



### *To use a handsfree*

- Connect a portable handsfree. Music stops when you receive a call and resumes when the call has ended.

## Walkman™ player

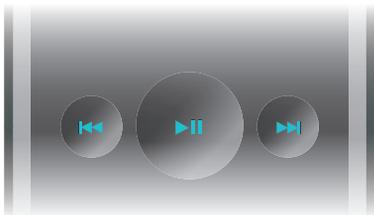

You can use the media player keys to control the Walkman™ player when the phone is closed. The keys must be unlocked. For information on how to unlock the keys, see *To unlock the media player keys* on page 65.

### *To play music*

- 1 When the phone is open, select **Menu > Media > Music**.
- 2 Browse by category using the navigation key.
- 3 Scroll to a title and select **Play**.

 You can use  to start playing music when the phone is closed.  starts the last used music application, that is the Walkman™ player or the radio.

### *To stop playing music*

- When the phone is closed, press .

### *To fast forward and rewind*

- When the phone is closed, press and hold down  or .

### *To move between tracks*

- When the phone is closed, press  or .

### *To minimise the player*

- When the phone is open, select **Options > Minimise**.

### *To return to the player*

- When the phone is open and you are not in any menu, press .

## Shake control

### *To switch tracks*



- 1 When the phone is closed and music is playing, press and hold down  and move the phone to the right with a flick of your wrist to go to the next track.
- 2 To go to the previous track, use the same action to the left.

### *To shuffle tracks*



- When the phone is closed and music is playing, press and hold down  and shake your phone.

### *To change the volume*



- 1 When the phone is closed and music is playing, hold the phone out in front of you facing upwards.
- 2 Press and hold down  and bend your arm upwards towards you to increase the volume. To decrease the volume, repeat the action in the opposite direction.

### **Playlists**

You can create playlists to organise your music. You can add tracks and folders to a playlist. It may take a few minutes for the phone to create a playlist.


### *To create a playlist*

- 1 When the phone is open, select **Menu** > **Media** > **Music** > **Playlists**.
- 2 Scroll to **New playlist** and select **Add**.
- 3 Enter a name and select **OK**.
- 4 For each track you want to add, scroll to the track and select **Mark**.
- 5 Select **Add** to add the marked tracks to the playlist.

### *To add tracks to a playlist*

- 1 When the phone is open, select **Menu** > **Media** > **Music** > **Playlists**.
- 2 Select a playlist.
- 3 Scroll to **Add music** and select **Add**.
- 4 For each track you want to add, scroll to the track and select **Mark**.
- 5 Select **Add** to add the marked tracks to the playlist.

### **SensMe™**

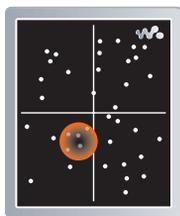

With SensMe™ you can create playlists in two ways, by mood or from all the tracks in your phone. By mood, you first use Media Go™ to transfer tracks to your phone. Information such as mood, tempo and chords is then added. The tracks are displayed as dots on a map with two axes. In the **All** view, all the tracks in your phone are placed randomly on the map.

### *To create a playlist by mood*

- 1 When the phone is open, select **Menu** > **Media** > **Music**.
- 2 Scroll to **SensMe™** and select **Open**.
- 3 Press **⬆**, **⬇**, **⬅** or **⬅**.
- 4 Make sure you are in **Mood** view. If you are not, select **Mood**.
- 5 To preview different tracks, press **⬆**, **⬇** or **⬅**.
- 6 To choose an area of tracks, select **Add** and press **⬆** or **⬇**.
- 7 To create the playlist and play it in the Walkman™ player, select **Create**.
- 8 Select **Options** > **Save playlist**.
- 9 Enter a name and select **OK**.

### *To create a playlist from All view*

- 1 When the phone is open, select **Menu** > **Media** > **Music**.
- 2 Scroll to **SensMe™** and select **Open**.
- 3 Press **⬆**, **⬇**, **⬅** or **⬅**.

- 4 Make sure you are in **All** view. If you are not, select **All**.
- 5 To preview different tracks, press ,  or .
- 6 To choose an area of tracks, select **Add** and press  or .
- 7 To create the playlist and play it in the Walkman™ player, select **Create**.
- 8 Select **Options** > **Save playlist**.
- 9 Enter a name and select **OK**.

### Audio books

If you use Media Go™ to transfer audio books to your phone from a computer, you can listen to the audio books in your phone. It may take a few minutes before a transferred audio book appears in the list of available audio books.

#### To access audio books

- When the phone is open, select **Menu** > **Media** > **Music** > **Audio books**.

 You can find audio books in formats other than M4B and those that do not have ID3v2 chapter tags in the **Tracks** folder.

### Buy Now

If you subscribe to a music service allowing limited, non-permanent use with your phone, you can mark a track you are interested in buying later. The

next time you synchronise your music with Windows Media® Player on a computer with enabled Internet access, you should be asked if you want to buy the track you marked earlier. If you accept, the track is downloaded to your computer and your selected music service account is charged. This service requires a subscription and account with a downloadable music service, a computer with Microsoft® Windows Media® Player 11 or subsequent compatible version of Windows Media® Player, and a USB computer connection.

- ! You cannot see that a track is marked.  
You cannot unmark tracks you have already marked.

#### To mark a track

- When the phone is open and the track you want to mark is playing, press and hold down .

### PlayNow™

When you select **PlayNow™** you enter **PlayNow™** arena, where you can download music, games, ringtones, themes and wallpapers. You can preview or listen to content before you purchase and download it to your

phone. If you cannot use PlayNow™ and PlayNow™ arena, see *I cannot use Internet-based services* on page 66.

! *This service is not available in all countries.*

For extended functionality, you can also access the PlayNow™ arena Web shop on a computer from [www.playnow-arena.com](http://www.playnow-arena.com). For more information, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to read the *PlayNow™ arena* Feature guide.

### **To use PlayNow™**

- 1 Select **Menu > PlayNow™**.
- 2 Scroll through PlayNow™ arena and follow the instructions to preview and purchase content.

### **TrackID™**

TrackID™ is a music recognition service. You can search for title, artist and album name for a track you hear playing through a loudspeaker or on the radio in your phone. If you cannot use TrackID™, see *I cannot use Internet-based services* on page 66.

### **To search for track information**

- When you hear a track through a loudspeaker, select **Menu > Entertainment > TrackID™ > Start**.
- When the radio in your phone is playing select **Options > TrackID™**.

💡 *For best results, use TrackID™ in a quiet area.*

### **Online music and video clips**

You can view video clips and listen to music by streaming them to your phone from the Internet. If you cannot use the Internet, see *I cannot use Internet-based services* on page 66.

### **To select a data account for streaming**

- 1 Select **Menu > Settings > Connectivity > Streaming settings > Connect using:**
- 2 Select the data account to use.
- 3 Select **Save**.

### **To stream music and video clips**

- 1 Select **Menu > Internet**.
- 2 Select **Options > Go to > Bookmarks**.
- 3 Select a link to stream from.

## Video player

### *To play videos*

- 1 Select **Menu > Media > Video > Videos**.
- 2 Scroll to a title and select **Play**.

### *To stop playing videos*

- Press the centre selection key.

### *To fast forward and rewind*

- Press and hold down  or .

### *To move between videos*

- Press  or .

### *To change the volume*

- Press the volume key up or down.


### *To change the video screen size*

- 1 Select **Options > Video size**.
- 2 Select an option.

### *To save a picture from a video clip*

- 1 To pause the video clip, press the centre selection key.
- 2 To save the paused image as a picture, select **Options > Save picture**.

## Radio

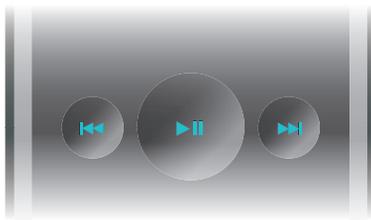

You can use the media player keys to control the radio when the phone is closed. The keys must be unlocked. For information on how to unlock the keys, see *To unlock the media player keys* on page 65.

- ! Do not use your phone as a radio in places where this is prohibited.

### *To turn on the radio*

- 1 Connect a handsfree to the phone.
- 2 When the phone is open, select **Menu > Radio**.

- 💡 You can use  to turn on the radio when the phone is closed.  starts the last used music application, that is the radio or the Walkman™ player.

### *To search for channels automatically*

- When the phone is open, select **Search**.

### *To search for channels manually*

- When the phone is closed, press  or .

### *To change the volume*

- Press the volume key up or down.

### *To minimise the radio*

- When the phone is open, select **Options > Minimise**.

### *To return to the radio*

- When the phone is open, select **Menu > Radio**.

### **Saving channels**

You can save up to 20 preset channels.

### *To save channels automatically*

- When the phone is open, select **Options > Auto save**.

### *To save channels manually*

- 1 When the phone is open and you have found a radio channel, select **Options > Save**.
- 2 Scroll to a position and select **Insert**.

### *To select saved channels*

- 1 When the phone is open, select **Options > Channels**.
- 2 Select a radio channel.

### *To switch between saved channels*

- When the phone is closed, press and hold down  or .

## **MusicDJ™**

You can compose and edit your own melodies to use as ringtones. Pre-arranged sounds with different characteristics are available.

### *To compose a melody*

- 1 Select **Menu > Entertainment > MusicDJ™**.
- 2 Select to **Insert, Copy** or **Paste** sounds.
- 3 Use , ,  or  to scroll between the sounds.
- 4 Select **Options > Save melody**.

## **Record sound**

You can record a voice memo or a call. Recorded sounds can also be set as ringtones.

- ! *In some countries or states it is required by law that you inform the other person before recording the call.*

### *To record a sound*

- Select **Menu > Entertainment > Record sound > Record**.

### *To record a call*

- 1 During an ongoing call, select **Options > Record**.
- 2 To save the recording, select **Save**.

### *To listen to a recording*

- 1 Select **Menu > Organiser > File manager**.
- 2 Scroll to **Music** and select **Open**.
- 3 Scroll to a recording and select **Play**.

## Transferring and handling content

You can transfer and handle content such as pictures and music.

- ! You are not allowed to exchange some copyright-protected material.  identifies a protected item.

### Handling content in the phone

You can use **File manager** to handle content saved in the phone memory or on a memory card. Tabs and icons in **File manager** show where the content is saved. If the memory is full, delete some content to create space.

#### *To view memory status*

- 1 Select **Menu > Organiser > File manager**.
- 2 Select **Options > Memory status**.
- 3 Select **Memory card** or **Phone**.

#### *To select more than one item in a folder*

- 1 Select **Menu > Organiser > File manager**.
- 2 Scroll to a folder and select **Open**.
- 3 Select **Options > Mark > Mark several**.
- 4 For each item you want to mark, scroll to the item and select **Mark**.

*To move items between the phone memory and the memory card*

- 1 Select **Menu > Organiser > File manager**.
- 2 Find an item and select **Options > Manage file > Move**.
- 3 Select **Memory card or Phone**.
- 4 Scroll to a folder and select **Open**.
- 5 Select **Paste**.

*To view information about content*

- 1 Select **Menu > Organiser > File manager**.
- 2 Find an item and select **Options > Information**.

## **Sending content to another phone**

You can send content, for example, in messages or using Bluetooth™ wireless technology.

*To send content*

- 1 Scroll to an item and select **Options > Send**.
- 2 Select a transfer method.

- ! *Make sure the receiving device supports the transfer method you select.*

## **Using a USB cable**

You can connect your phone to a computer with a USB cable to synchronise, transfer and back up phone content and use your phone as a modem. For more information, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to read Feature guides.

- ! *You may have to purchase a USB cable separately.*

### **Before using a USB cable**

See *Required operating systems* on page 27.

- ! *Only use a USB cable supported by your phone. Do not remove the USB cable from your phone or computer during transfer as this may corrupt the memory card or the phone memory.*

### **To disconnect the USB cable safely**

- 1 **Computer:** Close any software that you are using with your phone.
- 2 Disconnect the USB cable.

### **Drag and drop content**

You can drag and drop content between your phone, a memory card and a computer in *Microsoft Windows Explorer*.

### *To drag and drop content*

- 1 Connect your phone to a computer using a USB cable.
- 2 **Phone:** Select **Media transfer**. The phone will remain activated during file transfer.
- 3 **Computer:** Wait until the phone memory and memory card appear as external disks in *Windows Explorer*.
- 4 Drag and drop selected files between the phone and the computer.

### **Transferring content to and from a computer**

You can use Media Go™ to transfer media content between your phone and a computer.

-  *Media Go™ is available for download at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).*

### **Required operating systems**

You need one of these operating systems to use Sony Ericsson PC software:

- Microsoft® Windows Vista™
- Microsoft® Windows XP, Service Pack 2 or higher

### *To download Media Go™*

- 1 **Computer:** In your Internet browser, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

- 2 Select a region and country.
- 3 Select *Software downloads*.
- 4 Select a phone from the list.
- 5 Select *Read more and download* under Media Go™.
- 6 Select *Download now* and save the file to your computer.

-  *Remember where you save the file.*

### *To install Media Go™ from the downloaded file*

- 1 Locate the downloaded Media Go™ file on the computer.
- 2 Double-click the file and follow the instructions.

### *To transfer content using Media Go™*

-  *Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the memory card or the phone memory.*
- 1 Connect the phone to a computer with a USB cable supported by your phone.
  - 2 **Computer:** Select *Start/Programs/Sony/Media Go™*.
  - 3 **Phone:** Select **Media transfer**.
  - 4 **Computer:** Select *Transfer to or from Device using Media Go™* and click **OK**.
  - 5 Wait until the phone appears in Media Go™.

- 6 Move files between your phone and the computer in Media Go™.

## Phone name

You can enter a name for your phone that is shown to other devices when using, for example, Bluetooth™ wireless technology.

### *To enter a phone name*

- 1 Select **Menu > Settings > Connectivity > Phone name**.
- 2 Enter the phone name and select **OK**.

## Using Bluetooth™ wireless technology

The Bluetooth™ function is free of charge and makes wireless connection to other Bluetooth devices possible. You can, for example:

- Connect to handsfree devices.
- Connect to several devices at the same time.
- Connect to computers and access the Internet.
- Exchange items.
- Play multiplayer games.

- ! *A range within 10 metres (33 feet), with no solid objects in between, is recommended for Bluetooth communication.*

## Before using Bluetooth wireless technology

You must turn on the Bluetooth function to communicate with other devices. You may also have to pair your phone with other Bluetooth devices.

### *To turn on the Bluetooth function*

- Select **Menu > Settings > Connectivity > Bluetooth > Turn on**.
- ! *Make sure that the device you want to pair your phone with has the Bluetooth function activated and Bluetooth visibility turned on.*

### *To pair the phone with a device*

- 1 Select **Menu > Settings > Connectivity > Bluetooth > My devices**.
- 2 Scroll to **New device** and select **Add** to search for available devices.
- 3 Select a device.
- 4 Enter a passcode, if required.

### *To allow connection to the phone*

- 1 Select **Menu > Settings > Connectivity > Bluetooth > My devices**.
- 2 Select a device from the list.
- 3 Select **Options > Allow connection**.

- 4 Select **Always ask** or **Always allow**.

! *This is only possible with devices that require access to a secure service.*

#### *To pair the phone with a Bluetooth handsfree for the first time*

- 1 Select **Menu > Settings > Connectivity > Bluetooth > Handsfree**.
- 2 Select a device.
- 3 Enter a passcode, if required.

#### **Power saving**

You can save battery power with the Power save function. In Power save mode you can only connect with a single Bluetooth device. If you want to connect with more than one Bluetooth device at the same time you must turn this function off.

#### *To turn on power save*

- Select **Menu > Settings > Connectivity > Bluetooth > Power save > On**.

#### **Transferring sound to and from a Bluetooth handsfree**

You can transfer the sound to and from a Bluetooth handsfree using a phone key or the handsfree key.

#### *To transfer sound*

- 1 Select **Menu > Settings > Connectivity > Bluetooth > Handsfree > Incoming call**.
- 2 Select an option. In phone transfers sound to the phone. In handsfree transfers sound to the handsfree.

! *You need to answer the call with the phone key for this setting to apply.*

#### *To transfer sound during a call*

- 1 During a call, select **Sound**.
- 2 Select from the list.

## **Backing up and restoring**

You can backup and restore contacts, the calendar, tasks, notes and bookmarks using the *Sony Ericsson PC Suite*.

Before backing up and restoring, you need to install the *Sony Ericsson PC Suite*, which is available from [www.sonyericsson/support](http://www.sonyericsson/support).

You can backup and restore contacts within your phone using a Memory Stick Micro™ (M2™) memory card. You can move content between the memory card and the phone memory.

See *Handling content in the phone* on page 25.

 *Back up your phone content regularly to make sure you do not lose it.*

#### ***To make a backup using the Sony Ericsson PC Suite***

- 1 **Computer:** Start the *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.
- 2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
- 3 **Phone:** Select **Phone mode**.
- 4 **Computer:** Go to the backup and restore section in the *Sony Ericsson PC Suite* and make a backup.

#### ***To restore phone content using the Sony Ericsson PC Suite***

 *The Sony Ericsson PC Suite will overwrite all the phone content during the restore process. You may damage your phone if you interrupt the process.*

- 1 **Computer:** Start the *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.
- 2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.

3 **Phone:** Select **Phone mode**.

4 **Computer:** Go to the backup and restore section in the *Sony Ericsson PC Suite* and restore your phone.

# Calling

## Making and receiving calls

You need to turn on your phone and be within range of a network.

### To make a call

- 1 Enter a phone number (with international country code and area code, if applicable).
- 2 Press .

 You can call numbers from your contacts and call list. See *Contacts* on page 33, and *Call list* on page 33.

### To end a call

- Press .

### To make international calls

- 1 Press and hold down  until a “+” sign appears.
- 2 Enter the country code, area code (without the first zero) and phone number.
- 3 Press .

### To re-dial a number

- When **Retry?** appears select **Yes**.

 Do not hold your phone to your ear when waiting. When the call connects, your phone gives a loud signal.

### To answer a call

- Press .

### To reject a call

- Press .

### To change the ear speaker volume during a call

- Press the volume key up or down.

### To mute the microphone during a call

- 1 Press and hold down .
- 2 Press and hold down  again to resume.

### To turn on the loudspeaker during a call

- Press **SpkrOn**.

 Do not hold your phone to your ear when using the loudspeaker. This could damage your hearing.

### To view missed calls

- Press  to open the call list.

### Networks

Your phone switches automatically between GSM and 3G (UMTS) networks depending on availability. Some network operators allow you to switch networks manually.

### *To switch networks manually*

- 1 Select **Menu > Settings > Connectivity > Mobile networks > GSM/3G networks.**
- 2 Select an option.

### **Emergency calls**

Your phone supports international emergency numbers, for example, 112 or 911. You can normally use these numbers to make emergency calls in any country, with or without the SIM card inserted, if you are within range of a network.

- ! *In some countries, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.*

### *To make an emergency call*

- Enter 112 (the international emergency number) and press .

### *To view your local emergency numbers*

- 1 Select **Menu > Contacts.**
- 2 Scroll to **New contact** and select **Options > Special numbers > Emergency nos..**

### **Video call**

You can share experiences with friends and family as they happen or save them to share later. You see the person you are talking to on your screen. The other person sees what is on your camera.

### **Before making video calls**

3G (UMTS) service is available when **3G** appears. To make a video call, both parties on the call must have a 3G (UMTS) phone subscription that supports 3G (UMTS) service and 3G (UMTS) coverage.

### *To make a video call*

- 1 Enter a phone number (with international country code and area code, if applicable).
- 2 Select **Options > Make video call.**

### *To use the zoom with an outgoing video call*

- Press  or .

### *To share photos and videos during a video call*

- 1 During a video call, press  to switch to the video share mode tab.
- 2 Scroll to a video clip or photo and select **Share.**

### *To view video call options*

- During the call, select **Options**.

### **Call list**

You can view information about recent calls.

### *To call a number from the call list*

- 1 Press  and scroll to a tab.
- 2 Scroll to a name or a number and press .

## **Contacts**

You can save names, phone numbers and personal information in **Contacts**. Information can be saved in the phone memory or on the SIM card.

 You can synchronise your contacts using the Sony Ericsson PC Suite.

### **Default contacts**

You can choose which contact information is shown as default. If **Phone contacts** is selected as default, your contacts show all the information saved in **Contacts**. If you select **SIM contacts** as default, your contacts show names and numbers saved on the SIM card.

### *To select default contacts*

- 1 Select **Menu > Contacts**.

- 2 Scroll to **New contact** and select **Options > Advanced > Default contacts**.
- 3 Select an option.

### **Phone contacts**

Phone contacts can contain names, phone numbers and personal information. They are saved in the phone memory.

### *To add a phone contact*

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Add**.
- 3 Enter the name and select **OK**.
- 4 Scroll to **New number:** and select **Add**.
- 5 Enter the number and select **OK**.
- 6 Select a number option.
- 7 Scroll between the tabs and add information to the fields.
- 8 Select **Save**.

### **Calling contacts**

### *To call a contact*

- 1 Select **Menu > Contacts**.
- 2 Scroll to a contact and press .

### *To go directly to the contacts list*

- Press and hold down  – .

### *To call with Smart search*

- 1 Press **(0+)** – **(9)** to enter a sequence of (at least two) digits. All entries which match the sequence of digits or corresponding letters are shown in a list.
- 2 Scroll to a contact or a phone number and press **(↻)**.

### *To turn on or off Smart search*

- 1 Select **Menu > Settings > Calls > Smart search**.
- 2 Select an option.

### **Editing contacts**

#### *To add information to a phone contact*

- 1 Select **Menu > Contacts**.
- 2 Scroll to a contact and select **Options > Edit contact**.
- 3 Scroll between the tabs and select **Add** or **Edit**.
- 4 Select an option and an item to add or edit.
- 5 Select **Save**.

 *If your subscription supports Calling Line Identification (CLI) service, you can assign personal ringtones and pictures to contacts.*

### *To copy names and numbers to phone contacts*

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Copy from SIM**.
- 3 Select an option.

### *To copy names and numbers to the SIM card*

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Copy to SIM**.
- 3 Select an option.

 *When you copy all contacts from your phone to the SIM card, all existing SIM card information is replaced.*

### *To automatically save names and phone numbers on the SIM card*

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Auto save on SIM**.
- 3 Select an option.

### *To save contacts on a memory card*

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Back up to m. card**.

## **SIM contacts**

SIM contacts can contain names and numbers only. They are saved on the SIM card.

### *To add a SIM contact*

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Add**.
- 3 Enter the name and select **OK**.
- 4 Enter the number and select **OK**.
- 5 Select a number option and add more information, if available.
- 6 Select **Save**.

## **Deleting contacts**

### *To delete all contacts*

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Delete all contacts**.
- 3 Select an option.

## **Contact memory status**

The number of contacts you can save in your phone or on the SIM card depends on available memory.

### *To view contact memory status*

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Memory status**.

## **Myself**

You can enter information about yourself and, for example, send your business card.

### *To enter Myself information*

- 1 Select **Menu > Contacts**.
- 2 Scroll to **Myself** and select **Open**.
- 3 Scroll to an option and edit the information.
- 4 Select **Save**.

### *To add your own business card*

- 1 Select **Menu > Contacts**.
- 2 Scroll to **Myself** and select **Open**.
- 3 Scroll to **My contact info** and select **Add > Create new**.
- 4 Scroll between the tabs and add information to the fields.
- 5 Enter the information and select **Save**.

## **Groups**

You can create a group of phone numbers and email addresses from **Phone contacts** to send messages to. See *Messaging* on page 40. You can also use groups (with phone numbers) when you create accepted callers lists. See *Accept calls* on page 39.

### *To create a group of numbers and email addresses*

- 1 Select **Menu > Contacts**.

- 2 Scroll to **New contact** and select **Options > Groups**.
- 3 Scroll to **New group** and select **Add**.
- 4 Enter a name for the group and select **Continue**.
- 5 Scroll to **New** and select **Add**.
- 6 For each contact phone number or email address you want to mark, scroll to it and select **Mark**.
- 7 Select **Continue > Done**.

## Speed dial

Speed dialling lets you select nine contacts that you can dial quickly from standby. The contacts can be saved in positions 1-9.

### *To add contacts to speed dial numbers*

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Speed dial**.
- 3 Scroll to a position number and select **Add**.
- 4 Select a contact.

### *To speed dial*

- Enter the position number and press .

## More calling features

### Vicemail

If your subscription includes an answering service, callers can leave a voicemail message when you cannot answer a call.

### *To enter your voicemail number*

- 1 Select **Menu > Messaging > Messages > Settings > the Message settings tab > Voicemail number**.
- 2 Enter the number and select **OK**.

### *To call your voicemail service*

- Press and hold down .

### Voice control

By creating voice commands you can:

- Voice dial – call someone by saying their name
- Answer and reject calls when you use a handsfree

### *To record a voice command using voice dialling*

- 1 Select **Menu > Settings > General > Voice control > Voice dialling > Activate**.
- 2 Select **Yes > New voice command** and select a contact. If the contact has

- more than one number, select the number to add the voice command to.
- 3 Record a voice command such as “John mobile.”
  - 4 Follow the instructions that appear. Wait for the tone and say the command to record. The voice command is played back to you.
  - 5 If the recording sounds OK, select **Yes**. If not, select **No** and repeat steps 3 and 4.

! *Voice commands are saved in the phone memory only. They cannot be used in another phone.*

#### *To voice dial*

- 1 Press and hold down a volume key.
- 2 Wait for the tone and say a recorded name, for example “John mobile.” The phone plays the name back to you and connects the call.

#### **Diverting calls**

You can divert calls, for example, to an answering service.

! *When **Restrict calls** is used, some divert call options are not available. See **Restricted dialling** on page 39.*

#### *To divert calls*

- 1 Select **Menu > Settings > Calls > Divert calls**.

- 2 Select a call type and a divert option.
- 3 Select **Activate**.
- 4 Enter the number to divert calls to and select **OK**.

#### **More than one call**

You can handle more than one call at a time. For example, you can put an ongoing call on hold, while you make or answer a second call. You can also switch between the two calls. You cannot answer a third call without ending one of the first two calls.

#### **Call waiting**

You will hear a beep if you receive a second call while call waiting is active.

#### *To activate call waiting*

- Select **Menu > Settings > Calls > Manage calls > Call waiting > Activate**.

#### *To make a second call*

- 1 During the call, press . This puts the ongoing call on hold.
- 2 Select **Options > Add call**.
- 3 Enter the number to call and press .

#### *To answer a second call*

- During the call, press . This puts the ongoing call on hold.

### *To reject a second call*

- During the call, press  and continue with the ongoing call.

### *To end an ongoing call and answer a second call*

- During the call, select **Replace active call**.

### **Handling two voice calls**

You can have calls ongoing and on hold at the same time.

### *To switch between two calls*

- During the call, press .

### *To join two calls*

- During the call, select **Options > Join calls**.

### *To connect two calls*

- During the call, select **Options > Transfer call**. You are disconnected from both calls.

### *To end an ongoing call and return to the call on hold*

- First press  and then .

### **Conference calls**

With a conference call, you can have a joint conversation with up to five people.

### *To add a new participant*

- 1 During the call, press . This puts the joined calls on hold.
- 2 Select **Options > Add call**.
- 3 Enter the number to call and press .
- 4 Select **Options > Join calls** to add the new participant.
- 5 Repeat this task to add more participants.

### *To release a participant*

- 1 Select **Options > Release party**.
- 2 Select the participant to release.

### *To have a private conversation*

- 1 During the call, select **Options > Talk to** and select the participant to talk to.
- 2 To resume the conference call, select **Options > Join calls**.

### **My numbers**

You can view, add and edit your own phone numbers.

### *To check your phone numbers*

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Special numbers > My numbers**.
- 3 Select an option.

## Accept calls

You can choose to receive calls from certain phone numbers only.

### *To add numbers to the accepted callers list*

- 1 Select **Menu > Settings > Calls > Manage calls > Accept calls > Only from list.**
- 2 Scroll to **New** and select **Add.**
- 3 Select a contact or **Groups.**

 See *Groups* on page 35.

### *To accept all calls*

- Select **Menu > Settings > Calls > Manage calls > Accept calls > All callers.**

## Restricted dialling

You can restrict outgoing and incoming calls. A password from your service provider is required.

 *If you divert incoming calls, you cannot use some restrict calls options.*

## Restrict calls options

Standard options are:

- **All outgoing** – all outgoing calls
- **Outgoing intl** – all outgoing international calls

- **Outgoing intl roam.** – all outgoing international calls except to your home country
- **All incoming** – all incoming calls
- **Inc. when roaming** – all incoming calls when you are abroad

### *To restrict calls*

- 1 Select **Menu > Settings > Calls > Manage calls > Restrict calls.**
- 2 Select an option.
- 3 Select **Activate.**
- 4 Enter your password and select **OK.**

## Call time and cost

During a call, the phone shows how long you have been talking. You can also check on the duration of your last call, your outgoing calls and the total time of all your calls.

### *To check the call time*

- Select **Menu > Settings > Calls > Time & cost > Call timers.**

## Showing or hiding your phone number

You can decide to show or hide your phone number when you make a call.

### *To hide your phone number*

- 1 Select **Menu > Settings > Calls > Show/hide my no..**
- 2 Select **Hide number.**

# Messaging

## Text and picture messages

Messages can contain text, pictures, sound effects, animations, and melodies. You can also create and use templates for your messages.

When sending messages, the phone automatically selects the most suitable method (as a text or picture message) for sending the message.

If you cannot use picture messages, see *I cannot use Internet-based services* on page 66.

### Sending messages

You can send messages from your phone. The maximum size of a standard text message is 160 characters including spaces if no other items are added to the message. If you enter more than 160 characters, a second message is created. Your messages are sent as one concatenated message.

#### *To create and send a message*

- 1 Select **Menu > Messaging > Write new > Message**.

- 2 Enter text. To add items to the message, press , scroll  and select an item.
- 3 Select **Continue > Contacts look-up**.
- 4 Select a recipient and select **Send**.

 *If you send a message to a group, you will be charged for each member.*

#### *To copy and paste text in a message*

- 1 When you write the message, select **Options > Copy & paste**.
- 2 Select **Copy all** or **Mark & copy**. Scroll to and mark text in the message.
- 3 Select **Options > Copy & paste > Paste**.

#### Receiving and saving messages

You are notified when you receive a message. Messages are automatically saved in the phone memory. When the phone memory is full, you can delete messages or save them on a memory card or on the SIM card.

#### *To save an incoming message on a memory card*

- Select **Menu > Messaging > Messages > Settings > Save to > Memory card**.

### *To save a message on the SIM card*

- 1 Select **Menu > Messaging > Messages** and select a folder.
- 2 Scroll to a message and select **Options > Save message**.

### *To view a message from the inbox*

- 1 Select **Menu > Messaging > Inbox**.
- 2 Scroll to the message and select **View**.

### *To call a number in a message*

- When you view the message, scroll to the phone number and press .

### **Templates**

If you often use the same phrases and pictures in a message, you can save the message as a template.

### *To add a message template*

- 1 Select **Menu > Messaging > Messages > Templates > New template > Add**.
- 2 Enter text. To add items to the message, press , scroll  and select an item.
- 3 Select **Save**.
- 4 Enter a title and select **OK**.

### *To save a message as a template*

- 1 Select **Menu > Messaging > Inbox**.
- 2 Scroll to the message and select **View > Options > Save as template**.

### **Message options**

You can set some options, such as the Message alert and default storage location, to apply to all messages. You can set other options, such as the Delivery priority and Delivery time, for each message you send.

### *To set options for all messages*

- 1 Select **Menu > Messaging > Messages > Settings**.
- 2 Select an option.

### *To set options for a specific message*

- 1 When the message is ready and a recipient is selected, select **Options > Advanced**.
- 2 Scroll to an option and select **Edit**.

### **Conversations**

You can choose whether to view your messages in **Conversations** or **Inbox**. A messaging conversation shows all messaging communication between you and one of your contacts.

### *To view messages in Conversations*

- 1 Select **Menu > Messaging > Inbox > the Conversations tab**.
- 2 Select a conversation.

### *To send a message from Conversations*

- 1 Select **Menu > Messaging > Conversations**.
- 2 Select a conversation.
- 3 Write a message and select **Send**.

### **Voice messages**

You can send and receive a sound recording as a voice message.

- ! *The sender and recipient must have a subscription supporting picture messaging.*

### *To record and send a voice message*

- 1 Select **Menu > Messaging > Write new > Voice message**.
- 2 Record the message and select **Stop > Send > Contacts look-up**.
- 3 Select a recipient and select **Send**.

### **Email**

You can use standard email functions and your computer email address in your phone.

- 💡 *You can synchronise your email using Microsoft® Exchange ActiveSync®.*

### **Before using email**

You can use the setup wizard to check if settings are available for your email

account or you can enter them manually. You can also receive settings at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

### *To create an email account*

- 1 To start the setup wizard, select **Menu > Messaging > Email**.
- 2 Follow the instructions to create the account.

- 💡 *If you enter settings manually, you can contact your email provider for more information. An email provider could be the company that supplied your email address.*

### *To write and send an email message*

- 1 Select **Menu > Messaging > Email > Write new**.
- 2 Select **Add > Enter email address**. Enter the email address and select **OK**.
- 3 To add more recipients, scroll to **To:** and select **Edit**.
- 4 Scroll to an option and select **Add > Enter email address**. Enter the email address and select **OK**. When you are ready, select **Done**.
- 5 Select **Edit** and enter a subject. Select **OK**.
- 6 Select **Edit** and enter the text. Select **OK**.
- 7 Select **Add** and choose a file to attach.
- 8 Select **Continue > Send**.

### *To receive and read an email message*

- 1 Select **Menu** > **Messaging** > **Email** > **Inbox** > **Options** > **Check new email**.
- 2 Scroll to the message and select **View**.

### *To save an email message*

- 1 Select **Menu** > **Messaging** > **Email** > **Inbox**.
- 2 Scroll to the message and select **View** > **Options** > **Save message**.

### *To reply to an email message*

- 1 Select **Menu** > **Messaging** > **Email** > **Inbox**.
- 2 Scroll to the message and select **Options** > **Reply**.
- 3 Write the reply and select **OK**.
- 4 Select **Continue** > **Send**.

### *To view an attachment in an email message*

- When you view the message, select **Options** > **Attachments** > **Use** > **View**.

### **Active email account**

If you have several email accounts, you can change which one is active.

### *To change the active email account*

- 1 Select **Menu** > **Messaging** > **Email** > **Accounts**.
- 2 Select an account.

### **Push email**

You can receive notification in your phone from your email server that you have new email messages.

### *To turn on push email notification*

- Select **Menu** > **Messaging** > **Email** > **Settings** > **Push email**.

 *When using push email, the phone stays connected to the email server and normal traffic rates apply. Contact your network operator for details.*

### **Instant messaging**

You can connect and log in to the Instant messaging server to communicate online using chat messages. If you cannot use Instant messaging, see *I cannot use Internet-based services* on page 66.

### **Before using Instant messaging**

If no settings exist in your phone, you need to enter server settings. Your service provider can provide standard settings information such as:

- Username
- Password
- Server address
- Internet profile

### *To enter Instant messaging server settings*

- 1 Select **Menu** > **Messaging** > **IM** > **Configure**.
- 2 Scroll to a setting and select **Add**.

### *To log in to the Instant messaging server*

- Select **Menu** > **Messaging** > **IM** > **Log in**.

### *To log out of the Instant messaging server*

- Select **Options** > **Log out**.

### *To add a chat contact*

- 1 Select **Menu** > **Messaging** > **IM** > the **Contacts** tab.
- 2 Select **Options** > **Add contact**.

### *To send a chat message*

- 1 Select **Menu** > **Messaging** > **IM** > the **Contacts** tab.
- 2 Scroll to a contact and select **Chat**.
- 3 Write the message and select **Send**.

### **Status**

You can show your status, for example, **Happy** or **Busy**, to your contacts only. You can also show your status to all users on the Instant messaging server.

### *To view my status*

- 1 Select **Menu** > **Messaging** > **IM**.
- 2 You are the first contact listed.

### *To update your status*

- 1 Select **Menu** > **Messaging** > **IM** > the **Contacts** tab.
- 2 Scroll to your name and select **Change**.
- 3 Edit the information and select **Save**.

### **Chat group**

A chat group can be started by your service provider, by an individual Instant messaging user or by yourself. You can save chat groups by saving a chat invitation or by searching for a specific chat group.

### *To create a chat group*

- 1 Select **Menu** > **Messaging** > **IM** > the **Chat groups** tab.
- 2 Select **Options** > **Add chat group** > **New chat group**.
- 3 Select who to invite from your contacts list and select **Continue**.
- 4 Enter a short invitation text and select **Continue** > **Send**.

### *To add a chat group*

- 1 Select **Menu** > **Messaging** > **IM** > the **Chat groups** tab > **Options** > **Add chat group**.

2 Select an option.

- *Conversation history is saved between log out and when you log in again to let you return to chat messages from previous conversations.*

#### *To save a conversation*

- 1 Select **Menu > Messaging > IM > the Conversations** tab.
- 2 Enter a conversation.
- 3 Select **Options > Advanced > Save conversation**.

## Imaging

You can take photos and record video clips to view, save or send. You find saved photos and video clips in **Media** and in **File manager**.

### Using the camera

#### *To activate the camera*

- Select **Menu > Camera**.

## Viewfinder and camera keys



- 1 Zoom in or out
- 2 Take photos/Record video
- 3 Select still camera or video camera
- 4 Brightness
- 5 Self-timer

- 6 Night mode
- 7 Camera: Shoot mode  
Video: Video length
- 8 Camera key guide

### *To take a photo*

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Press the centre selection key to take a photo. The photo is automatically saved.

### *To record a video clip*

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Press the centre selection key to start recording.
- 3 To stop recording, press the centre selection key. The video clip is automatically saved.

### *To use zoom*

- Press  or .

 *When taking a photo, zoom is available only in VGA picture size.*

### *To adjust brightness*

- Press the volume key up or down.

### *To view photos*

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Select **Options > View all photos**
- 3 Press  or  to scroll to a photo.

### *To view video clips*

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Select **Options > View all clips**.
- 3 Scroll to a video clip and press the centre selection key.

## **More camera features**

### *To change settings*

- Activate the camera and select **Options**.

### *To view information about settings*

- Scroll to a setting and select **Info**.

### **Photo fix**

You can use Photo fix to improve photos. In a one-click operation, brightness, light and contrast are adjusted to give you the best possible photo. The improvements are saved as a copy of the photo. The original photo is not affected.

### *To improve a photo with Photo fix*

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Make sure **Review** is set to **On**. Select **Options > Review > On**.
- 3 Take a photo.
- 4 During review, select **Options > Photo fix**.

## **Viewing and tagging photos**

### *To view photos in a slide show*

- 1 Select **Menu > Media > Photo > Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Select **Options > Slide show**.
- 5 Select a mood.

### **Viewing photos on a map**

When you take a photo, you can attach your geographical position to it. This is called geo tagging. Geo-tagged photos are tagged with  in **Media**.

### *To view photos on a map*

- 1 Select **Menu > Media > Photo > Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.

- 4 Select **Options > View on map.**

! *To view photos on a map, you need a subscription that supports data transmission and Internet settings in your phone. You can download Internet settings using the setup wizard or from [www.sonyericsson.com/support](http://www.sonyericsson.com/support).*

#### **To change the geo tagging setting**

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Select **Options > Add position.**
- 3 Select an option.

#### **Photo tags**

You can tag photos to categorise them in **Photo tags**. For example, you can create a tag called vacation and add it to all your vacation photos.

#### **To create a new photo tag**

- 1 Select **Menu > Media > Photo > Camera album.**
- 2 Select a month.
- 3 Scroll to a photo and select **View.**
- 4 Press  and select **Options > New tag.**
- 5 Enter a name and select **OK.**
- 6 Select an icon.
- 7 To tag the photo, select **Options > Tag this photo.**

#### **To tag photos**

- 1 Select **Menu > Media > Photo > Camera album.**
- 2 Select a month.
- 3 Scroll to a photo and select **View.**
- 4 Press  and scroll to a tag.
- 5 Select **Options > Tag this photo.**
- 6 For each photo you want to tag, scroll to the photo and select **Options > Tag this photo.**

#### **Using photos**

You can add a photo to a contact, use it during phone startup, as a wallpaper in standby or as a screen saver.

#### **To use photos**

- 1 Select **Menu > Media > Photo > Camera album.**
- 2 Select a month.
- 3 Scroll to a photo and select **View.**
- 4 Select **Options > Use as.**
- 5 Select an option.

#### **Working with photos**

You can view, enhance and organise your photos and video clips on your computer by installing the *Adobe™ Photoshop™ Album Starter Edition*. It is available for download at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

Use Media Go™ to transfer content to and from your phone. For more information, see *Transferring content to and from a computer* on page 27.

### PhotoDJ™ and VideoDJ™

You can edit photos and video clips.

#### *To edit and save a photo*

- 1 Select **Menu > Media > Photo > Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Select **Options > Edit in PhotoDJ™**.
- 5 Edit the photo.

#### *To edit and save a video clip*

- 1 Select **Menu > Organiser > File manager > Videos**.
- 2 Scroll to a video clip and select **Options > Edit in VideoDJ™**.
- 3 Edit the video clip.
- 4 Select **Options > Save**.

#### *To trim a video clip*

- 1 Select **Menu > Organiser > File manager > Videos**.
- 2 Scroll to a video clip and select **Options > Edit in VideoDJ™ > Edit > Trim**.
- 3 Select **OK > Set > Start** to set the starting point.

- 4 Select **Set > End** to set the ending point.
- 5 Select **Trim > Options > Save**.

## Sending content to a Web site

If your subscription supports this service, you can send photos or video clips to a Web site. If you cannot send content to a Web site, see *I cannot use Internet-based services* on page 66.

- ! *Web services may require a separate license agreement between you and the service provider. Additional regulations and charges may apply. Contact your service provider.*

#### *To send photos saved in your phone to a Web site*

- 1 Select **Menu > Media > Photo > Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Select **Options > Send > To Web site**.
- 5 Select a Web site from the list or select **New Web site > Add**.
- 6 Enter the email address used for sending to the Web site.
- 7 Enter the Web address and title.
- 8 Select **Save**.
- 9 Select a Web site from the list.
- 10 Enter text.
- 11 Select **Continue > Send**.

*To send video clips saved in your phone to a Web site*

- 1 Select **Menu > Media > Video > Videos**.
- 2 Scroll to a video clip and select **Options > Send > To Web site**.
- 3 Select a Web site from the list or select **New Web site > Add**.
- 4 Enter the email address used for sending to the Web site.
- 5 Enter the Web address and title.
- 6 Select **Save**.
- 7 Select a Web site from the list.
- 8 Enter text.
- 9 Select **Continue > Send**.

*To send photos or video clips you have just taken to a Web site*

- 1 When you have taken a photo or recorded a video clip, select **Send > To Web site**.
- 2 Select a Web site from the list or select **New Web site > Add**.
- 3 Enter the email address used for sending to the Web site.
- 4 Enter the Web address and title.
- 5 Select **Save** and select the Web site.
- 6 Enter text.
- 7 Select **Continue > Send**.

*To go to a Web address from contacts*

- 1 Select **Menu > Contacts**.
- 2 Scroll to a contact and select **Open**.

- 3 Scroll to a Web address and select **Go to**.

## Printing photos

You can print photos using a USB cable connected to a PictBridge™ compatible printer.

 You can also print using a Bluetooth compatible printer that supports the Object Push Profile.

*To print photos using a USB cable*

- 1 Connect a USB cable to the phone.
- 2 Connect the USB cable to the printer.
- 3 Wait for feedback in the phone and select **OK**.
- 4 Enter printer settings (if required) and select **Print**.
- 5 Select **Menu > Media > Photo > Camera album**.
- 6 Select a month.
- 7 Scroll to a photo and select **Options > Print**.

 You should disconnect and re-connect the USB cable if there is a printer error.

## Internet

If you cannot use the Internet, see *I cannot use Internet-based services* on page 66.

### *To start browsing*

- 1 Select **Search**.
- 2 Enter a Web address, a search phrase or the name of a bookmark.
- 3 Scroll to an item in the list and select **Go to** or **Search**.

### *To exit the browser*

- Select **Options > Exit browser**.

## Bookmarks

You can create and edit bookmarks as quick links to your favourite Web pages.

### *To create a bookmark*

- 1 When you browse the Internet, select **Options > Tools > Add bookmark**.
- 2 Enter a title and an address. Select **Save**.

### *To select a bookmark*

- 1 Select **Menu > Internet**.
- 2 Select **Options > Go to > Bookmarks**.
- 3 Scroll to a bookmark and select **Go to**.

## History pages

You can view Web pages you have browsed.

### *To view history pages*

- Select **Menu > Internet > Options > Go to > History**.

## More browser features

### *To use pan and zoom on a Web page*

- 1 When you browse the Internet, press .
- 2 Use the navigation key to move the frame.
- 3 Press **Zoom**.
- 4 To switch back to pan, press .

! *To use pan and zoom, Smart-Fit must be turned off.*

### *To turn on or off Smart-Fit Rendering™*

- 1 Select **Menu > Internet > Options > Advanced > Smart-Fit**.
- 2 Select an option.

### *To make a call when you browse*

- Press .

### *To save a picture from a Web page*

- 1 When you browse the Internet, select **Options > Tools > Save picture**.

- 2 Select a picture.

#### *To find text on a Web page*

- 1 Select **Options > Tools > Find on page**.
- 2 Enter text and select **Find**.

#### *To send a link*

- 1 When you browse the Internet, select **Options > Tools > Send link**.
- 2 Select a transfer method.

- ! *Make sure the receiving device supports the transfer method you select.*

#### **Internet keypad shortcuts**

You can use the keypad to go directly to an Internet browser function.

Key	Shortcut
	<b>Bookmarks</b>
 - 	<b>Enter text to Enter address, Search Internet or search in Bookmarks</b>
	<b>Zoom</b>
	<b>Pan &amp; zoom (when Smart-Fit is off)</b>

#### *To select Internet keypad shortcuts*

- 1 Select **Menu > Internet**.
- 2 Select **Options > Advanced > Keypad mode > Shortcuts**.

## **Internet security and certificates**

Your phone supports secure browsing. Certain Internet services, such as banking, require certificates in your phone. Your phone may already contain certificates when you buy it or you can download new certificates.

#### *To view certificates in the phone*

- Select **Menu > Settings > General > Security > Certificates**.

## **Web feeds**

You can subscribe to and download frequently updated content, such as news, podcasts or photos, using Web feeds.

#### *To add new feeds for a Web page*

- 1 When you browse a page on the Internet that has Web feeds, indicated by , select **Options > Web feeds**.
- 2 For each feed you want to add, scroll to the feed and select **Mark**.
- 3 Select **Continue**.

### *To search for Web feeds*

- 1 Select **Menu > Media > Web feeds**.
- 2 Select **New feed** and enter a Web address.

### *To download content via Web feeds*

- 1 Select **Menu > Media > Web feeds**.
- 2 Scroll to an updated feed and select **View** or .
- 3 Select a heading to expand.
- 4 Select an icon depending on content,  to open a Web page,  to download an audio podcast,  to download a video podcast or  to download a photo.

 You can also subscribe to and download content to a computer via feeds using **Media Go™**. You can then transfer the content to your phone.

### **Updating Web feeds**

You can manually update your feeds, or schedule updates. When there are updates,  appears on the screen.

### *To schedule Web feed updates*

- 1 Select **Menu > Media > Web feeds**.
- 2 Scroll to a feed and select **Options > Schedule update**.
- 3 Select an option.

 *Frequent updates may be costly.*

### **Web feeds in standby**

You can show news updates on the standby screen.

### *To show Web feeds in standby*

- 1 Select **Menu > Media > Web feeds**.
- 2 Scroll to a feed and select **Options > Settings > Standby ticker > Show in standby**.

### *To access Web feeds from standby*

- 1 Select **Ticker**.
- 2 To read more about a feed, press  or  to scroll to a headline and select **Go to**.

### **Podcasts**

Podcasts are files, for example, radio programmes or video content, that you can download and play. You subscribe to and download podcasts using Web feeds.

### *To access audio podcasts*

- Select **Menu > Media > Music > Podcasts**.

### *To access video podcasts*

- Select **Menu > Media > Video > Podcasts**.

## Photo feeds

You can subscribe to Photo feeds and download photos. To start using Photo feeds, see *Web feeds* on page 52.

### *To access photo feeds*

- Select **Menu > Media > Photo > Photo feeds**.

## YouTube™

You can watch video clips on your phone by using the YouTube™ Java™ application. You can search for video clips or upload your own videos.

### *To access YouTube*

- Select **Menu > Media > Video > YouTube**.
-  *To upload videos to YouTube, you need to access YouTube and follow the instructions in the application.*

## Synchronising

You can synchronise in two different ways. You can synchronise your phone using a computer program or you can synchronise using an Internet service.

-  *Use only one of the synchronisation methods at a time with your phone.*

For more information, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to read the *Synchronisation Feature guide*.

## Synchronising using a computer

You can use a USB cable or Bluetooth wireless technology to synchronise phone contacts, appointments, bookmarks, tasks and notes with a computer program such as Microsoft Outlook®.

Before synchronising, you need to install the *Sony Ericsson PC Suite*.

-  *Sony Ericsson PC Suite software is available for download at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).*

See *Required operating systems* on page 27.

### *To download Sony Ericsson PC Suite*

- 1 **Computer:** In your Internet browser, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).
- 2 Select a region and country.
- 3 Select *Software downloads*.
- 4 Select a phone from the list.
- 5 Select *Read more and download* under *PC Suite*.
- 6 Select *Download now* and save the file to your computer.

 Remember where you save the file.

### *To install Sony Ericsson PC Suite from the downloaded file*

- 1 Locate the downloaded **Sony Ericsson PC Suite** file on the computer.
- 2 Double-click the file and follow the instructions.

### *To synchronise using the Sony Ericsson PC Suite*

- 1 **Computer:** Start *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.
- 2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
- 3 **Phone:** Select **Phone mode**.
- 4 **Computer:** When you are notified that the *Sony Ericsson PC Suite* has found

your phone, you can start synchronising.

 For usage details, see the *Sony Ericsson PC Suite Help* section once the software has been installed on your computer.

## **Synchronising using an Internet service**

You can synchronise with an Internet service using SyncML™ or a Microsoft® Exchange Server using Microsoft Exchange ActiveSync. For more information, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to read the *Synchronisation Feature* guide.

## More features

### Flight mode

In **Flight mode** the network and radio transceivers are turned off to prevent disturbance to sensitive equipment.

When the flight mode menu is activated you are asked to select a mode the next time you turn on your phone:

- **Normal mode** – full functionality
- **Flight mode** – limited functionality

#### *To activate the flight mode menu*

- Select **Menu > Settings > General > Flight mode > Continue > Show at startup**.

#### *To select flight mode*

- 1 When the flight mode menu is activated, turn off your phone.
- 2 Turn on your phone and select **Flight mode**.

### Update Service

You can update your phone with the latest software using your phone or a PC.

- ! *Updating using your phone is not possible in all countries/regions.*

#### *To view the current software in the phone*

- 1 Select **Menu > Settings > General > Update service**.
- 2 Select **Software version**.

#### **Update Service using the phone**

You can update your phone over the air using your phone. You do not lose personal or phone information.

- ! *Update Service using your phone requires data access such as GPRS, 3G or HSDPA.*

#### *To select settings for Update Service*

- Select **Menu > Settings > General > Update service > Settings > Internet settings**.

#### *To use Update Service using the phone*

- 1 Select **Menu > Settings > General > Update service**.
- 2 Select **Search for update** and follow the instructions that appear.

#### **Update Service using a PC**

You can update your phone using a USB cable and an Internet-connected PC.

- ! *Make sure all personal data in your phone memory is backed up before you perform*

*an update using a PC. See Backing up and restoring on page 29.*

### **To use Update Service using a PC**

- Go to [www.sonyericsson.com/updateservice](http://www.sonyericsson.com/updateservice).

## **Gesture control**

When the phone is closed, you can mute incoming calls or snooze alarms with a hand gesture.

### **To use gesture control**

- When a call comes in or the alarm rings, a light appears adjacent to the camera. When the light appears, sweep your hand back and forth once in front of the camera lens to mute the call or snooze the alarm.

! *The distance between your hand and the camera lens must be 0–7 cm (0–3 inches).*

### **To turn on gesture control**

- Select Menu > Settings > General > Gesture control > Turn on.

## **Location services**

You can get help to find your way and save your favourite locations. With information from mobile towers near you, you may be able to view your approximate location on a map.

💡 *You can get more exact information about your location with a GPS accessory supported by your phone.*

! *If you cannot use some features of Location services, see I cannot use Internet-based services on page 66.*

### **To use Google Maps for mobile**

- Select Menu > Entertainment > Location services > Google Maps.

### **To learn more about Google Maps**

- When you use Google Maps, select Options > Help.

### **To view your location**

- When using Google Maps, press (□+).

### **To view a saved location on a map**

- 1 Select Menu > Entertainment > Location services > My favourites.
- 2 Scroll to a location and select Go to.

### **To access favourites from Google Maps**

- Press (✕a/A).

## **Alarms**

You can set a sound or the radio as an alarm signal. The alarm sounds even if the phone is turned off. When the alarm sounds you can silence it or turn it off.

### *To set the alarm*

- 1 Select **Menu** > **Organiser** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to **Time:** and select **Edit**.
- 4 Enter a time and select **OK** > **Save**.

### *To set the recurrent alarm*

- 1 Select **Menu** > **Organiser** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to **Recurrent:** and select **Edit**.
- 4 Scroll to a day and select **Mark**.
- 5 To select another day, scroll to the day and select **Mark**.
- 6 Select **Done** > **Save**.

### *To set the alarm signal*

- 1 Select **Menu** > **Organiser** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to the  tab.
- 4 Scroll to **Alarm signal:** and select **Edit**.
- 5 Find and select an alarm signal. Select **Save**.

### *To silence the alarm*

- When the alarm sounds, press any key.
- To repeat the alarm, select **Snooze**.

### *To turn off the alarm*

- When the alarm sounds, press any key, then select **Turn off**.

### *To cancel the alarm*

- 1 Select **Menu** > **Organiser** > **Alarms**.

- 2 Scroll to an alarm and select **Turn off**.

### **The alarm in silent mode**

You can set the alarm not to sound when the phone is in silent mode.

### *To set an alarm to sound or not in silent mode*

- 1 Select **Menu** > **Organiser** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to the  tab.
- 4 Scroll to **Silent mode:** and select **Edit**.
- 5 Select an option.

### *To set the snooze duration*

- 1 Select **Menu** > **Organiser** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to **Snooze duration:** and select **Edit**.
- 4 Select an option.

## **Calendar**

 You can synchronise your calendar with a computer calendar, with a calendar on the Web or with a Microsoft® Exchange Server (Microsoft® Outlook®).

## **Appointments**

You can add new appointments or reuse existing appointments.

### *To add an appointment*

- 1 Select **Menu > Organiser > Calendar**.
- 2 Select a date.
- 3 Scroll to **New appointment** and select **Add**.
- 4 Enter the information and confirm each entry.
- 5 Select **Save**.

### *To view an appointment*

- 1 Select **Menu > Organiser > Calendar**.
- 2 Select a date.
- 3 Scroll to an appointment and select **View**.

### *To edit an appointment*

- 1 Select **Menu > Organiser > Calendar**.
- 2 Select a date.
- 3 Scroll to an appointment and select **View**.
- 4 Select **Options > Edit**.
- 5 Edit the appointment and confirm each entry.
- 6 Select **Save**.

### *To set when reminders should sound*

- 1 Select **Menu > Organiser > Calendar**.
- 2 Select a date.
- 3 Select **Options > Advanced > Reminders**.
- 4 Select an option.

! *A reminders option set in calendar affects a reminders option set in tasks.*

## Notes

You can make notes and save them. You can also show a note in standby.

### *To add a note*

- 1 Select **Menu > Organiser > Notes**.
- 2 Scroll to **New note** and select **Add**.
- 3 Write a note and select **Save**.

### *To show a note in standby*

- 1 Select **Menu > Organiser > Notes**.
- 2 Scroll to a note and select **Options > Show in standby**.

### *To hide a note from standby*

- 1 Select **Menu > Organiser > Notes**.
- 2 Scroll to the note shown in standby. This is marked with an icon. Select **Options > Hide in standby**.

## Tasks

You can add new tasks or reuse existing tasks.

### *To add a task*

- 1 Select **Menu > Organiser > Tasks**.
- 2 Select **New task** and select **Add**.
- 3 Select an option.
- 4 Enter details and confirm each entry.

### *To set when reminders should sound*

- 1 Select **Menu** > **Organiser** > **Tasks**.
- 2 Scroll to a task and select **Options** > **Reminders**.
- 3 Select an option.

! *A reminders option set in tasks affects a reminders option set in calendar.*

## **Profiles**

You can change settings such as the ring volume and vibrating alert to suit different locations. You can reset all profiles to the phone's original settings.

### *To select a profile*

- 1 Select **Menu** > **Settings** > **General** > **Profiles**.
- 2 Select a profile.

### *To view and edit a profile*

- 1 Select **Menu** > **Settings** > **General** > **Profiles**.
- 2 Scroll to a profile and select **Options** > **View and edit**.

! *You cannot rename the Normal profile.*

## **Time and date**

### *To set the time*

- 1 Select **Menu** > **Settings** > **General** > **Time & date** > **Time**.

- 2 Enter the time and select **Save**.

### *To set the date*

- 1 Select **Menu** > **Settings** > **General** > **Time & date** > **Date**.
- 2 Enter the date and select **Save**.

### *To set the time zone*

- 1 Select **Menu** > **Settings** > **General** > **Time & date** > **My time zone**.
- 2 Select the time zone you are in.

! *If you select a city, My time zone also updates the time when daylight saving time changes.*

### *To change the clock size of the standby screen*

- 1 Select **Menu** > **Settings** > **Display** > **Clock size**.
- 2 Select an option.

## **Theme**

You can change the appearance of the screen through items such as colours and wallpaper. You can also create new themes and download them. For more information, go to [www.sonyericsson.com/fun](http://www.sonyericsson.com/fun).

### *To set a theme*

- 1 Select **Menu** > **Settings** > **Display** > **Theme**.

- 2 Scroll to a theme and select **Set**.

## Main menu layout

You can change the layout of the icons in the main menu.

### *To change the main menu layout*

- 1 Select **Menu > Options > Main menu layout**.
- 2 Select an option.

## Ringtones

### *To set a ringtone*

- 1 Select **Menu > Settings > Sounds & alerts > Ringtone**.
- 2 Find and select a ringtone.

### *To set the ringtone volume*

- 1 Select **Menu > Settings > Sounds & alerts > Ring volume**.
- 2 Press  or  to change the volume.
- 3 Select **Save**.

### *To turn off the ringtone*

- Press  and then press and hold down .

 *The alarm signal is not affected.*

### *To set the vibrating alert*

- 1 Select **Menu > Settings > Sounds & alerts > Vibrating alert**.

- 2 Select an option.

## Screen orientation

You can change between landscape and portrait orientation, or select **Auto rotate** to have the orientation change when you rotate the phone.

### *To change screen orientation in the browser*

- 1 Select **Menu > Internet**.
- 2 Select **Options > View**.
- 3 Select **Landscape** or **Portrait**.

### *To change screen orientation in Media*

- 1 Select **Menu > Media > Settings > Orientation**.
- 2 Select an option.

## Games

Your phone contains preloaded games. You can also download games. For more information, go to [www.sonyericsson.com/fun](http://www.sonyericsson.com/fun). Help texts are available for most games.

### *To start a game*

- 1 Select **Menu > Media > Games**.
- 2 Select a game.

### *To end a game*

- Press .

## **Applications**

You can download and run Java applications. You can also view information or set different permissions. If you cannot use Java applications, see *I cannot use Internet-based services* on page 66.

### *To select a Java application*

- 1 Select **Menu** > **Organiser** > **Applications**.
- 2 Select an application.

### *To set permissions for a Java application*

- 1 Select **Menu** > **Organiser** > **Applications**.
- 2 Scroll to an application and select **Options** > **Permissions**.
- 3 Set permissions.

### **Java application screen size**

Some Java applications are designed for a specific screen size. For more information, contact the application vendor.

### *To set the screen size for a Java application*

- 1 Select **Menu** > **Organiser** > **Applications**.
- 2 Scroll to an application and select **Options** > **Screen size**.
- 3 Select an option.

### *To set a Java™ application as a wallpaper*

- 1 Select **Menu** > **Settings** > **Display**.
- 2 Select **Wallpaper** > **Application**.
- 3 Select a Java application.

- ! *You can only see the Java applications that have support for wallpaper.*

### **Walk mate**

Walk mate is a step counter application. It keeps track of how many steps you have walked and how many steps you have left towards a daily goal. You can put your phone in a pocket when you use Walk mate. You can also set Walk mate as wallpaper to view in standby.

### *To set Walk mate as wallpaper*

- 1 Select **Menu** > **Settings** > **Display**.
- 2 Select **Wallpaper** > **Application** > **Walk mate**.

## Locks

### SIM card lock

This lock only protects your subscription. Your phone will work with a new SIM card. If the lock is on, you have to enter a PIN (Personal Identity Number).

If you enter your PIN incorrectly three times in a row, the SIM card is blocked and you need to enter your PUK (Personal Unblocking Key). Your PIN and PUK are supplied by your network operator.

#### *To unblock the SIM card*

- 1 When **PIN blocked** appears, enter your PUK and select **OK**.
- 2 Enter a new four-to-eight-digit PIN and select **OK**.
- 3 Re-enter the new PIN and select **OK**.

#### *To edit the PIN*

- 1 Select **Menu > Settings > General > Security > Locks > SIM protection > Change PIN**.
- 2 Enter your PIN and select **OK**.
- 3 Enter a new four-to-eight-digit PIN and select **OK**.
- 4 Re-enter the new PIN and select **OK**.

- ! *If Codes do not match appears, you entered the new PIN incorrectly. If Wrong*

*PIN appears, followed by Old PIN; you entered your old PIN incorrectly.*

#### *To use the SIM card lock*

- 1 Select **Menu > Settings > General > Security > Locks > SIM protection > Protection**.
- 2 Select an option.
- 3 Enter your PIN and select **OK**.

### Phone lock

You can stop unauthorised use of your phone. Change the phone lock code (0000) to any four-to-eight-digit personal code.

- ! *It is important that you remember your new code. If you forget it, you have to take your phone to your local Sony Ericsson retailer.*

#### *To use the phone lock*

- 1 Select **Menu > Settings > General > Security > Locks > Phone protection > Protection**.
- 2 Select an option.
- 3 Enter the phone lock code and select **OK**.

#### *To unlock the phone*

- Enter your code and select **OK**.

### To change the phone lock code

- 1 Select **Menu > Settings > General > Security > Locks > Phone protection > Change code**.
- 2 Enter the old code and select **OK**.
- 3 Enter the new code and select **OK**.
- 4 Repeat the code and select **OK**.

### IMEI number

Keep a copy of your IMEI (International Mobile Equipment Identity) number in case your phone is stolen.

#### To view your IMEI number

- Press **(\*) 0 6 / (#) 0 6**, **(\*) 0 6**, **(\*) 0 6**, **(\*) 0 6**, **(\*) 0 6**.

### Style-Up™ covers

You can change the front and battery covers of your phone. Extra covers may be included in some kits.

### To change the front cover



- 1 Lift the front cover off from the notch which is located on the right side of the flip.
- 2 Put the new front cover on top of the flip, then press the cover until it fits well into the flip.

💡 To change the battery cover, see To insert the SIM card on page 5.

## Using the flip

When the phone is closed, you can use the media player keys on the flip to control your Walkman™ player or radio. You can lock these keys to avoid accidental touch.

### *To unlock the media player keys*

- Slide the keylock switch away from .

### *To lock the media player keys*

- Slide the keylock switch towards .

## Troubleshooting

Some problems can be fixed using Update Service. Using Update Service on regular basis will optimize the phone's performance. See *Update Service* on page 56.

Some problems will require you to call your network operator.

For more support go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

## Common questions

### **I have problems with memory capacity or the phone is working slowly**

Restart your phone every day to free memory or do a **Master reset**.

### **Master reset**

If you select **Reset settings**, the changes that you have made to settings will be deleted.

If you select **Reset all**, your settings and content, such as contacts, messages, pictures, sounds and downloaded games, will be deleted. You may also lose content that was in the phone at purchase.

### ***To reset the phone***

- 1 Select **Menu > Settings > General > Master reset**.
- 2 Select an option.
- 3 Follow the instructions that appear.

#### **I cannot charge the phone or battery capacity is low**

The charger is not properly connected or the battery connection is poor. Remove the battery and clean the connectors.

The battery is worn out and needs to be replaced. See *Charging the battery* on page 8.

#### **No battery icon appears when I start charging the phone**

It may take a few minutes before the battery icon appears on the screen.

#### **Some menu options appear in grey**

A service is not activated. Contact your network operator.

#### **I cannot use Internet-based services**

Your subscription does not include data capability. Settings are missing or incorrect.

You can download settings using the setup wizard or by going to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

### ***To download settings***

- 1 Select **Menu > Settings > User help > Settings download**.
- 2 Follow the instructions that appear.

 *Contact your network operator or service provider for more information.*

#### **I cannot send messages from my phone**

Most messages require a service centre number to send them. The number is supplied by your service provider and is usually saved on the SIM card. If the number to your service centre is not saved on your SIM card, you must enter the number yourself.

To send most picture messages, you must set an MMS profile and the address of your message server. If no MMS profile or message server exists, you can receive all the settings automatically from your network operator, download settings using the setup wizard or at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

#### *To enter a service centre number*

- 1 Select **Menu > Settings > Connectivity > Message settings > Text message** and scroll to **Service centre**. The number is shown if it is saved on the SIM card.
- 2 If there is no number shown, select **Edit**.
- 3 Scroll to **New ServiceCentre** and select **Add**.
- 4 Enter the number, including the international “+” sign and country code.
- 5 Select **Save**.

#### *To select an MMS profile*

- 1 Select **Menu > Settings > Connectivity > Message settings > Picture message**.
- 2 Select an existing profile or create a new one.

#### *To set the message server address*

- 1 Select **Menu > Settings > Connectivity > Message settings > Picture message**.
- 2 Scroll to a profile and select **Options > Edit**.
- 3 Scroll to **Message server** and select **Edit**.
- 4 Enter the address and select **OK > Save**.

#### **The phone does not ring or rings too softly**

Make sure that **Silent mode** has not been set to **On**. See *To turn off the ringtone* on page 61.

Check the ringtone volume. See *To set the ringtone volume* on page 61.

Check the profile. See *To select a profile* on page 60.

Check the divert call options. See *To divert calls* on page 37.

#### **The phone cannot be detected by other devices using Bluetooth wireless technology**

You have not turned the Bluetooth function on. Make sure that the visibility is set to **Show phone**. See *To turn on the Bluetooth function* on page 28.

#### **I cannot synchronise or transfer content between my phone and my computer, when using a USB cable.**

The cable or software has not been properly installed. Go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to read Feature guides which contain detailed installation instructions and troubleshooting sections.

## I have forgotten my code memo passcode

If you forget your passcode, you must reset the code memo. This means that all entries in the code memo are deleted. The next time you enter the code memo, you must proceed as if you are opening it for the first time.

### To reset Code memo

- 1 Select **Menu > Organiser > Code memo**.
- 2 Enter an incorrect passcode three times.
- 3 **Reset Code memo and delete all items?** appears.
- 4 Select **Yes**.

Where can I find the regulatory information such as my IMEI number if I cannot turn on my phone?



## Error messages

### Insert SIM

There is no SIM card in your phone or you may have inserted it incorrectly.

See *To insert the SIM card* on page 5.

The SIM card connectors need cleaning. If the card is damaged, contact your network operator.

### Insert correct SIM card

Your phone is set to work only with certain SIM cards. Check if you are using the correct operator SIM card.

### Wrong PIN/Wrong PIN2

You have entered your PIN or PIN2 incorrectly.

Enter the correct PIN or PIN2 and select **Yes**.

### PIN blocked/PIN2 blocked

You have entered your PIN or PIN2 code incorrectly three times in a row.

To unblock, see *SIM card lock* on page 63.

### Codes do not match

Codes that you have entered do not match. When you want to change a

security code, for example your PIN, you have to confirm the new code. See *SIM card lock* on page 63.

#### **No netw. coverage**

Your phone is in flight mode. See *Flight mode* on page 56.

Your phone is not receiving any network signal, or the received signal is too weak. Contact your network operator and make sure that the network has coverage where you are.

The SIM card is not working properly. Insert your SIM card in another phone. If this works, it is probably your phone that is causing the problem. Please contact the nearest Sony Ericsson service location.

#### **Emerg. calls only**

You are within range of a network, but you are not allowed to use it. However, in an emergency, some network operators allow you to call the international emergency number 112. See *Emergency calls* on page 32.

#### **PUK blocked. Contact operator.**

You entered your personal unblocking key code (PUK) incorrectly 10 times in a row.

# Index

## A

activity menu .....	15
alarms .....	57
answering service .....	36
applications .....	62
appointments .....	58
assembly .....	5
audio book .....	21
auto rotate .....	61

## B

backing up and restoring .....	29
battery	
capacity .....	8
charging .....	8
inserting .....	6
Bluetooth™ wireless technology .....	28
bookmarks .....	51
business card .....	35

## C

calendar .....	58
call divert .....	37
call list .....	33
call numbers in message .....	41
call time .....	39
caller-specific ringtones .....	34
calls	
accepting .....	39
answering and rejecting .....	31

emergency .....	32
handling two calls .....	38
international .....	31
making and receiving .....	31
putting on hold .....	37
recording .....	24
video .....	32

camera .....	45, 46
printing .....	50
code memo .....	68
conference calls .....	38

## contacts

adding phone contacts .....	33
default contacts .....	33
groups .....	35
Smart search .....	34

costs .....	7
-------------	---

## covers

changing .....	64
----------------	----

## D

date .....	60
------------	----

## download

settings .....	66
----------------	----

downloading music .....	22
-------------------------	----

## E

email .....	42
-------------	----

emergency numbers .....	32
-------------------------	----

entering text .....	16
---------------------	----

## F

file manager .....	25
flight mode .....	56
flip	
locking .....	65
unlocking .....	65

## G

games .....	61
geo tagging .....	47
gesture control .....	57
groups .....	35

## H

handsfree .....	17, 36
Bluetooth™ wireless technology .	29
help .....	7
hiding number .....	39

## I

imaging .....	45
IMEI number .....	64
instant messaging .....	43
Internet	
bookmarks .....	51
screen orientation .....	61
security and certificates .....	52
settings .....	66

## K

keys .....	9
------------	---

## L

language .....	16
location services .....	57
lock	
phone .....	63
SIM card .....	63
locking	
flip .....	65

## M

master reset .....	65
Media Go™ .....	27
media transfer .....	27
memory .....	15
memory card .....	15
memory status .....	35
menu overview .....	12
messages	
email .....	42
picture .....	40
text .....	40
voice .....	42
microphone .....	31
<i>MMS See picture messages</i>	
model name .....	8
MusicDJ™ .....	24
my numbers .....	38
my phone number .....	8

## N

navigating menus .....	14
notes .....	59

<b>O</b>	
online	
music .....	22
video clips .....	22
<b>P</b>	
pan and zoom	
Web pages .....	51
PC Suite .....	54
phone	
turning on .....	6
phone memory .....	8, 15
phone mode .....	55
phone name .....	28
photo fix .....	47
PhotoDJ™ .....	49
photos .....	47
editing .....	49
feeds .....	54
geo tagging .....	47
improving .....	47
printing .....	50
tags .....	48
picture messages .....	40
pictures .....	47
PIN .....	7, 63
playlists .....	19
PlayNow™ .....	21
podcasts .....	53
power saving .....	29
profiles .....	60
PUK .....	63
	push email .....
	43
<b>R</b>	
radio .....	23
recording	
listening to .....	25
restricted dialling .....	39
ringtones .....	61
setting .....	61
roaming .....	7
<i>RSS feeds See Web feeds</i>	
<b>S</b>	
screen orientation .....	61
search	
on Web pages .....	52
selection keys .....	14
SensMe™ .....	20
setting	
ringtones .....	61
settings	
download .....	66
settings, Internet .....	66
shake control .....	18
shortcuts .....	14
SIM card	
copying to/from .....	34
inserting .....	5
lock and unblock .....	63
<i>SMS See text messages</i>	
<i>SOS See emergency numbers</i>	
sound recorder .....	24

speed dialling .....	36
standby .....	7
notes .....	59
step counter .....	62
streaming .....	22
Style-Up™ covers .....	64
synchronising .....	54

## T

T9™ Text Input .....	16
tagging photos .....	47
tasks .....	59
templates .....	41
text messages .....	40
theme .....	60
time .....	60
time zone .....	60
TrackID™ .....	22
transfer method	
Bluetooth™ wireless technology .	28
USB cable .....	26
transferring	
music .....	27
photos .....	27
sound .....	29
turning on/off	
Bluetooth™ function .....	28
phone lock .....	63
SIM lock protection .....	63

## U

Update Service .....	56
----------------------	----

USB cable .....	26
-----------------	----

## V

video editing .....	49
video player .....	23
video recorder .....	45
video ringtones .....	61
VideoDJ™ .....	49
voice control .....	36
voice messages .....	42
voicemail .....	36
volume	
ear speaker .....	31
ringtone .....	61

## W

Walk mate .....	62
Walkman™ player .....	17, 18
Web feeds .....	52
Web pages	
history .....	51

## Y

YouTube .....	54
---------------	----

## Z

zoom .....	46
------------	----

## Sony Ericsson

### Important information

#### Sony Ericsson Consumer Web site

On [www.sonyericsson.com/support](http://www.sonyericsson.com/support) there is a support section where help and tips are on a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

#### Service and support

You have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support
- A global network of Call Centers
- An extensive network of Sony Ericsson service partners
- A warranty portal to learn more about the warranty conditions in its User guide.

On [www.sonyericsson.com](http://www.sonyericsson.com), you will find the latest support tools and information. For operator-specific services and features, please contact your network operator. You can also contact our Call Centers. If your country/region is not represented in the list below, please contact your local dealer. (Calls are charged according to national rates, including local taxes and/or a toll-free number). If you are unable to reach your dealer, you need service, please contact the dealer from whom it was purchased, or one of our service partners. For warranty claims, save proof of purchase.

#### Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to how to properly function, use the product checked by a certified service partner before charging or using it.

#### Recommendations for care and safe use of our products

- Handle with care and keep in a clean and dust-free place.
- Warning! May contain mercury. Do not dispose of as household waste.
- Do not expose your product to liquid or moisture or excess humidity.
- Do not expose to extreme temperatures. Do not expose the battery to temperatures above +60°C (+140°F).
- Do not use the battery or to lit tobacco products.
- Do not drop, throw or try to bend your product.
- Do not paint or attempt to disassemble or modify your product. Only Sony Ericsson authorized personnel should perform service.
- Consult with authorized medical staff and the instructions of the medical device manufacturer before using your product near pacemakers or other medical devices or equipment.
- Discontinue use of electronic device or disable the radio transmitting functionality if the device when used causes interference to other electronic equipment.
- Do not use where a potentially explosive atmosphere exists.
- Do not place your product or install wireless equipment in the area above an air bag in your car.
- Do not use cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.
- Do not use your Bluetooth Headset in positions where it is uncomfortable or will be subjected to pressure.

**Important information**  
**Informations importantes**  
**Wichtige Informationen**  
**Informazioni importanti**  
**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrijke informatie**

**Important information**

**Informations importantes**

**Wichtige Informationen**

**Informazioni importanti**

**Belangrij**



Sony Ericsson

FCC Statement  
Declaration of Conformity

Sony Ericsson W508a Walkman™

UMTS HSDPA band 1/2/5 GSM GPRS/EDGE  
850/900/1800/1900

## FCC Statement

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and (2)

This device must accept any interference received, including interference that may cause undesired operation.



Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Industry Canada Statement

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## Declaration of Conformity for W508a

We, **Sony Ericsson Mobile Communications AB** of  
Nya Vattentorget

SE-221 88 Lund, Sweden

declare under our sole responsibility that our product

**Sony Ericsson type AAD-3880024-BV**

and in combination with our accessories, to which this  
declaration relates is in conformity with the appropriate  
standards EN 301 511:V9.0.2, EN 301 908-1:V3.2.1, EN 301  
908-2:V3.2.1, EN 300 328:V1.7.1, EN 301 489-7:V1.3.1, EN 301  
489-17:V1.3.2, EN 301 489-24:V1.4.1, EN 60 950-1:2006  
following the provisions of, Radio Equipment and  
Telecommunication Terminal Equipment directive **1999/5/EC** .

Lund, February 2008

**CE 0682**



---

Rikko Sakaguchi,

*Head of Creation & Development*

We fulfil the requirements of the R&TTE Directive (1999/5/EC).

Ce produit est conforme aux directives de R&TTE (1999/5/EC).

Cumplimos con los requisitos de la Directiva R&TTE – Normas  
sobre equipos de terminales de radio y telecomunicaciones  
(1999/5/EC).

Atendemos aos requisitos da Diretriz R&TTE (1999/5/EC).

[www.sonyericsson.com](http://www.sonyericsson.com)



**Sony Ericsson**

Sony Ericsson Mobile Communications AB  
SE-221 88 Lund, Sweden

1226-3392.1