

# CD/DVD Player

### **Operating Instructions**

#### For customers in the U.S.A Owner's Record

The model and serial numbers are located at the rear of the unit. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. DVP-NS75H	
Serial No.	

#### For Customers in Canada

If this product is not working properly, please call 1-877-602-2008 for **Peace of Mind Warranty Replacement service.** 

For other product related questions please contact our **Customer Information Service Centre** at 1-877-899-7669 or write to us at: Customer Information Service 115 Gordon Baker Road, Toronto, Ontario, M2H 3R6







**DVP-NS75H** 

© 2006 Sony Corporation

### **WARNING**

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

The AC power cord must be changed only at a qualified service shop.

#### CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD player is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.





This symbol is intended to alert the user to the presence of uninsulated

"dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and

maintenance (servicing) instructions in the literature accompanying the appliance.

#### CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

#### Note

This equipment has been tested and found to comply with the limits for a Class B digital device. pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions. may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Notes About the Discs

 To keep the disc clean, handle the disc by its edge. Do not touch the surface.





- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its
- Clean the disc with a cleaning cloth.
   Wipe the disc from the center



- Do not use solvents such as benzine, thinner, commercially available disc/lens cleaners, or anti-static spray intended for vinyl LPs.
- If you have printed the disc's label, dry the label before playing.

# **Important Safeguards**

For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference. Carefully observe all warnings, precautions and instructions on the appliance, or the one described in the operating instructions and adhere to them.

#### Use

#### Power sources

This set should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of electrical power supplied to your



home, consult your dealer or local power company. For those sets designed to operate from battery power, or other sources, refer to the operating instructions.

#### Grounding or Polarization

This set is equipped with a polarized ac power cord plug (a plug having one blade wider than the other), or with a three-wire grounding type plug (a plug having a third pin for grounding). Follow the instructions below:

### For the set with a polarized AC power cord plua:

This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the polarized plug by forcing it in.

### For the set with a three-wire grounding type AC plug:

This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the grounding plug.

#### Overloading

Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.



#### Object and Liquid Entry

Never push objects of any kind into the set through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the set.



#### **Attachments**

Do not use attachments not recommended by the manufacturer, as they may cause hazards.



#### Cleaning

Unplug the set from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the set.



#### Installation

#### Water and Moisture

Do not use power-line operated sets near water - for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.



#### Power-Cord Protection

Route the power cord so that it is not likely to be walked on or pinched by items placed upon or against them, paying particular



attention to the plugs, receptacles, and the point where the cord exits from the appliance.

#### Accessories

Do not place the set on an unstable cart, stand, tripod, bracket, or table. The set may fall, causing serious injury to a



child or an adult, and serious damage to the set. Use only a cart stand tripod, bracket, or table recommended by the manufacturer.

An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



#### Ventilation

The slots and openings in the cabinet are provided for necessary ventilation. To ensure reliable operation of the set, and to protect it from overheating, these slots and openings must never be blocked or covered.

· Never cover the slots and openings with a cloth or other materials




Never block the slots and openings by placing the set on a bed, sofa, rug or other similar surface.



 Never place the set in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.







#### **Antennas**

### **Outdoor antenna grounding**


If an outdoor antenna or cable system is installed, follow the precautions below.

An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits.

WHEN INSTALLING AN OUTDOOR ANTENNA SYSTEM, EXTREME CARE SHOULD BE TAKEN TO KEEP FROM CONTACTING SUCH POWER LINES OR CIRCUITS AS CONTACT WITH THEM IS ALMOST INVARIABLY FATAL.

Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

### Antenna Grounding According to the National Electrical Code

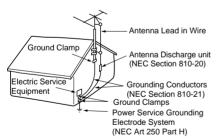

NEC-NATIONAL ELECTRICAL CODE

#### Lightning

For added protection for this set during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the set due to lightning and power-line surges.

#### Service

### **Damage Requiring Service**

Unplug the set from the wall outlet and refer servicing to qualified service personnel under the following conditions:

 When the power cord or plug is damaged or frayed.



CRACKED PLUG

 If liquid has been spilled or objects have fallen into the set.



 If the set has been exposed to rain or water.



 If the set has been subject to excessive shock by being dropped, or the cabinet has been damaged.



 If the set does not operate normally when following the operating instructions. Adjust only those controls that are specified in the



operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set to normal operation.

• When the set exhibits a distinct change in performance - this indicates a need for service.

#### Servicing

Do not attempt to service the set yourself as opening or removing covers may expose you to dangerous voltage or other hazards



Refer all servicing to qualified service personnel.

#### Replacement parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original parts.

Unauthorized substitutions may result in fire, electric shock, or other hazards.

#### Safety Check

Upon completion of any service or repairs to the set, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition.



### **Precautions**

### On safety

- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- Should any solid object or liquid fall into the cabinet, unplug the player and have it checked by qualified personnel before operating it any further.

### On power sources

- The player is not disconnected from the AC power source as long as it is connected to the wall outlet, even if the player itself has been turned off.
- If you are not going to use the player for a long time, be sure to disconnect the player from the wall outlet. To disconnect the AC power cord, grasp the plug itself; never pull the cord.

### On placement

- Place the player in a location with adequate ventilation to prevent heat build-up in the player.
- Do not place the player on a soft surface such as a rug.
- Do not place the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- Do not install the player in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the player and the discs away from equipment with strong magnets, such as microwave ovens, or large loudspeakers.
- Do not place heavy objects on the player.

### On operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.
- When you move the player, take out any discs. If you don't, the disc may be damaged.

### On adjusting volume

Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level section is played.

### On cleaning

Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

On cleaning discs, disc/lens cleaners Do not use a commercially available cleaning disc or disc/lens cleaner (wet or spray type). These may cause the apparatus to malfunction.

#### IMPORTANT NOTICE

Caution: This player is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Plasma display panel televisions and projection televisions are susceptible to this.

If you have any questions or problems concerning your player, please consult your nearest Sony dealer.

# **Table of Contents**

	WARNING	
	Notes About the Discs	
	Important Safeguards	
	Precautions	
	About This Manual	
	This Player Can Play the Following Discs	
	Index to Parts and Controls	
	Guide to the Control Menu Display	
Hook	ups	
	Hooking Up the Player	16
	Step 1: Unpacking	16
	Step 2: Inserting Batteries Into the Remote	16
	Step 3: Connecting the Video Cords/HDMI Cords	17
	Step 4: Connecting the Audio Cords	21
	Step 5: Connecting the Power Cord	23
	Step 6: Quick Setup	
Plavii	ng Discs	
. iayii	Playing Discs	
	Resuming Playback From the Point Where You Stopped the Disc (Multi-disc	
	Resume)	
	Using the DVD's Menu.	
	Selecting "ORIGINAL" or "PLAY LIST" on a DVD-RW/DVD-R	
	Playing VIDEO CDs With PBC Functions (PBC Playback)	
	Various Play Mode Functions (Program Play, Shuffle Play, Repeat Play,	20
	A-B Repeat Play)	30
	A B Repeat Flay)	50
Searc	ching for a Scene	34
	Searching for a Particular Point on a Disc (Search, Scan, Slow-motion Play,	
	Freeze Frame)	
	Searching for a Title/Chapter/Track/Scene, etc.	
	Searching by Scene (PICTURE NAVIGATION)	
Vious	ng Information About the Dies	
viewi	ng Information About the Disc	
	Checking the Playing Time and Remaining Time	
Sound	d Adjustments	
	Changing the Sound	
	TV Virtual Surround Settings (TVS)	42
Fniov	ing Movies	
Lijuy	Changing the Angles	
	Displaying the Subtitles	
	Adjusting the Playback Picture (CUSTOM PICTURE MODE)	
	Sharpening the Picture (SHARPNESS)	
	Adjusting the Picture Quality (BNR, MNR)	
	rajaoning the Flotale sciality (DINIX) ININIX)	7/

	Adjusting the Delay Between the Picture and Sound (AV SYNC) 49
Enjoyi	Ing MP3 Audio and JPEG Images50About MP3 Audio Tracks and JPEG Image Files50Playing MP3 Audio Tracks or JPEG Image Files51Enjoying JPEG Images as a Slide Show54
Using	Various Additional Functions56Locking Discs (CUSTOM PARENTAL CONTROL, PARENTAL CONTROL)56Controlling Your TV with the Supplied Remote59
Settin	gs and Adjustments61Using the Setup Display61Setting the Display or Sound Track Language (LANGUAGE SETUP)62Settings for the Display (SCREEN SETUP)63Custom Settings (CUSTOM SETUP)65Settings for the Sound (AUDIO SETUP)66
Additi	onal Information69Troubleshooting69Self-diagnosis Function (When letters/numbers appear in the display)72Glossary72Specifications74Language Code List75Parental Control Area Code List75

### **About This Manual**

- Instructions in this manual describe the controls on the remote. You can also use the controls on the player if they have the same or similar names as those on the remote.
- "DVD" may be used as a general term for DVD VIDEOs, DVD+RWs/DVD+Rs (+VR mode) and DVD-RWs/DVD-Rs (video mode).
- The meaning of the icons used in this manual is described below:

Icons	Meaning
DVDvideo	Functions available for DVD VIDEOs and DVD+RWs/DVD+Rs in +VR mode or DVD-RWs/DVD-Rs in video mode
Functions available for DVD-RWs/DVD-Rs in VR (Video Recording) me	
VCD	Functions available for VIDEO CDs (including Super VCDs or CD-Rs/CD-RWs in video CD format or Super VCD format)
CD	Functions available for music CDs or CD-Rs/CD-RWs in music CD format
DATA CD	Functions available for DATA CDs (CD-ROMs/CD-Rs/CD-RWs containing MP3* audio tracks, and JPEG image files)
DATA DVD	Functions available for DATA DVDs (DVD-ROMs/DVD+RWs/DVD+Rs/DVD-RWs/DVD-Rs containing MP3* audio tracks, and JPEG image files)

\*MP3 (MPEG-1 Audio Layer III) is a standard format defined by ISO (International Organization for Standardization)/IEC (International Electrotechnical Commission) MPEG which compresses audio data.

# This Player Can Play the Following Discs



"DVD+RW," "DVD-RW," "DVD+R," "DVD-R," "DVD-R," "DVD VIDEO," and "CD" logos are trademarks.

### Note about CDs/DVDs

The player can play CD-ROMs/CD-Rs/CD-RWs recorded in the following formats:

- music CD format
- video CD format
- MP3 audio tracks and JPEG image files of format conforming to ISO 9660\* Level 1/ Level 2, or its extended format, Joliet
- KODAK Picture CD format
- \* A logical format of files and folders on CD-ROMs, defined by ISO (International Organization for Standardization).

The player can play DVD-ROMs/ DVD+RWs/DVD-RWs/DVD+Rs/DVD-Rs recorded in the following format:

 MP3 audio tracks and JPEG image files of format conforming to UDF (Universal Disk Format).

# Example of discs that the player cannot play

The player cannot play the following discs:

- CD-ROMs/CD-Rs/CD-RWs other than those recorded in the formats listed on this page.
- . CD-ROMs recorded in PHOTO CD format.
- Data part of CD-Extras.
- DVD Audio discs.
- HD layer on Super Audio CDs.

Also, the player cannot play the following discs:

- A DVD VIDEO with a different region code.
- A disc recorded in a color system other than NTSC, such as PAL or SECAM (this player conforms to the NTSC color system).
- A disc that has a non-standard shape (e.g., card, heart).
- A disc with paper or stickers on it.
- A disc that has the adhesive of cellophane tape or a sticker still left on it.

### Region code

Your player has a region code printed on the back of the unit and only will play DVD VIDEOs (playback only) labeled with identical region codes. This system is used to protect copyrights.

DVD VIDEOs labeled will also play on this player.

If you try to play any other DVD VIDEO, the message "Playback prohibited by area limitations." will appear on the TV screen. Depending on the DVD VIDEO, there may be no region code indication, even though playing the DVD VIDEO is prohibited by area restrictions.



### **Notes**

#### Notes about DVD+RWs/DVD+Rs, DVD-RWs/ DVD-Rs or CD-Rs/CD-RWs

Some DVD+RWs/DVD+Rs, DVD-RWs/DVD-Rs, or CD-Rs/CD-RWs cannot be played on this player due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software. The disc will not play if it has not been correctly finalized. For more information, refer to the operating instructions for the recording device. Note that some playback functions may not work with some DVD+RWs/DVD+Rs, even if they have been correctly finalized. In this case, view the disc by normal playback. Also some DATA CDs/DATA DVDs created in Packet Write format cannot be played.

### Music discs encoded with copyright protection technologies

This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

#### · Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side.

However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

## Note on playback operations of DVDs and VIDEO CDs

Some playback operations of DVDs and VIDEO CDs may be intentionally set by software producers. Since this player plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the instructions supplied with the DVDs or VIDEO CDs.


### Copyrights

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

### **Index to Parts and Controls**

For more information, see the pages indicated in parentheses.

### Front panel




- **1 I**/**∪** (on/standby) button (25)
- **2** Disc tray (25)
- 3 Front panel display (11)
- 4 HDMI\* (High-Definition Multimedia Interface) indicator (18, 63, 66, 73)
  Lights up when the HDMI OUT jack is correctly connected to a HDCP (Highbandwidth Digital Content Protection) compliant device with HDMI or DVI (Digital Visual Interface) input.
- $\boxed{\mathbf{5}} \triangleq \text{(open/close) button (25)}$
- **6** (play) button (25)
- **7** (stop) button (26)

- **8** ► (previous/next) buttons (34)
- 9 PROGRESSIVE button/indicator (20) Lights up when the player outputs progressive signals.
- **10** (remote sensor) (16)
- \* This player is based on version 1.1 of High-Definition Multimedia Interface Specifications.

This DVD player incorporates High-Definition Multimedia Interface (HDMI<sup>TM</sup>) technology.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.


### Rear panel




- 1 HDMI OUT (high-definition multimedia interface out) jack (17)
- 2 DIGITAL OUT (OPTICAL) jack (21)
- 3 DIGITAL OUT (COAXIAL) jack (21)
- 4 LINE OUT L/R (AUDIO) jacks (21)
- 5 LINE OUT (VIDEO) jack (17)
- 6 S VIDEO OUT jack (17)
- OMPONENT VIDEO OUT (Y, PB, PR) jacks (17)

### Front panel display


### When playing back a DVD VIDEO/DVD-VR mode disc

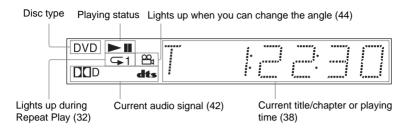

### When playing back a VIDEO CD with Playback Control (PBC) (29)




### When playing back a CD, DATA CD (MP3 audio)/DATA DVD (MP3 audio) or VIDEO CD (without PBC)

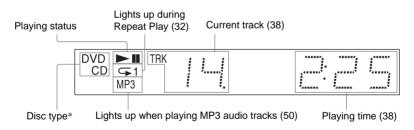

<sup>\*</sup> When playing DATA DVDs, the DVD indicator is displayed.
When playing VIDEO CDs (without PBC), the VCD indicator is displayed.

### Remote

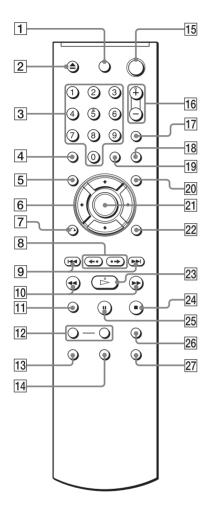

- 1 TV I/U (on/standby) button (59)
- **2** ▲ OPEN/CLOSE button (26)
- Number buttons (28)
  The number 5 button has a tactile dot.\*
- 4 CLEAR button (30)
- 5 TOP MENU button (28)
- **6 ←**/**↑**/**→** buttons (28)
- **7** RETURN button (26)
- 8 ←• ◀II/•→ II► REPLAY/STEP/ ADVANCE/STEP buttons (26, 35)

- 10 ◀ ◀◀/▶▶ I► SCAN/SLOW buttons (35)
- 11 ZOOM button (26, 53)
- 26) SLOW PLAY/FAST PLAY buttons
- 13 AUDIO button (41)
- 14 SUBTITLE button (44)
- 15 **1**/() (on/standby) button (25)
- 16 VOL (volume) +/- buttons (59) The + button has a tactile dot.\*
- 17 TV/VIDEO button (59)
- **18** PICTURE NAVI (picture navigation) button (37, 53)
- 19 TIME/TEXT button (38)
- **20** MENU button (28)
- 21 ENTER button (23)
- 22 DISPLAY button (13)
- PLAY button (25)
  The button has a tactile dot.\*
- **24** STOP button (26)
- **25 II** PAUSE button (26)
- **26** SUR (surround) button (42)
- 27 ANGLE button (44)
- \* Use the tactile dot as a reference when operating the player.

### **Guide to the Control Menu Display**


Use the Control Menu to select a function and to view related information. Press DISPLAY repeatedly to turn on or change the Control Menu display as follows:



### **Control Menu display**

The Control Menu display 1 and 2 will show different items depending on the disc type. For details about each item, see the pages in parentheses.

Example: Control Menu display 1 when playing a DVD VIDEO.

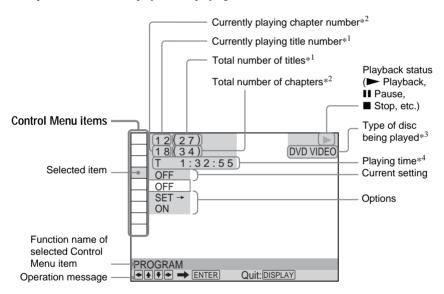

- \*1 Displays the scene number for VIDEO CDs (PBC is on), track number for VIDEO CDs/ CDs, album number for DATA CDs/DATA DVDs
- \*2 Displays the index number for VIDEO CDs, MP3 audio track number or JPEG image file number for DATA CDs/DATA DVDs.
- Displays Super VCD as "SVCD."
- Displays the date for JPEG files.

### To turn off the display

Press DISPLAY repeatedly.

### List of Control Menu items

Item	Item Name, Function	
	TITLE (page 35)/SCENE (page 35)/TRACK (page 35) Selects the title, scene or track to be played.	
	CHAPTER (page 35)/INDEX (page 35) Selects the chapter or index to be played.	
IJ	TRACK (page 35) Selects the track to be played.	
	ORIGINAL/PLAY LIST (page 28) Selects the type of titles (DVD-RW/DVD-R in VR mode) to be played, the ORIGINAL one, or an edited PLAY LIST.	
	TIME/TEXT (page 35) Checks the elapsed time and the remaining playback time. Input the time code for picture and music searching. Displays the DVD/CD text or the DATA CD/DATA DVD track/file name.	
	PROGRAM (page 30) Selects the title, chapter or track to play in the order you want.	
F %	SHUFFLE (page 32) Plays the title, chapter or track in random order.	
U	REPEAT (page 32) Plays the entire disc (all titles/all tracks/all albums) repeatedly or one title/chapter/track/album repeatedly.	
<b>■</b>	A-B REPEAT (page 33) Specifies the parts you want to play repeatedly.	
	CUSTOM PICTURE MODE (page 45) Adjusts the video signal from the player. You can select the picture quality that best suits the program you are watching.	
	SHARPNESS (page 46) Exaggerates the outline of the image to produce a sharper picture.	
■ BNR	BNR (page 47) Adjusts the picture quality by reducing the "block noise" or mosaic like patterns that appear on your TV screen.	
■ MNR	MNR (page 47) Adjusts the picture quality by reducing the faint noise appearing around the outlines of the images.	
	AV SYNC (page 49) Adjust the delay between the picture and sound.	
	PARENTAL CONTROL (page 56) Set to prohibit playback on this player.	
	SETUP (page 61) QUICK Setup (page 23) Use Quick Setup to choose the desired language of the on-screen display, the aspect ratio of the TV and the audio output signal. CUSTOM Setup In addition to the Quick Setup setting, you can adjust various other settings. RESET Returns the settings in "SETUP" to the default setting.	
	ALBUM (page 50) Selects the album that contains MP3 audio track and JPEG image file to be played.	

	FILE (page 35) Selects the JPEG image file to be played.	
	DATE (page 53) Displays the date the picture was taken by a digital camera.	
	INTERVAL (page 55) Specifies the duration for which the slides are displayed on the screen.	
	EFFECT (page 55) Selects the effects to be used for changing slides during a slide show.	
GATA	MODE (MP3, JPEG) (page 54) Selects the data type; MP3 audio track (AUDIO), JPEG image file (IMAGE) or both (AUTO) to be played when playing a DATA CD or DATA DVD.	

### ΰ Hint

The Control Menu icon indicator lights up in green when you select any item except "OFF" ("PROGRAM," "SHUFFLE," "REPEAT," "A-B REPEAT," "CUSTOM PICTURE MODE," "SHARPNESS," "BNR," "MNR" only). The "ORIGINAL/PLAY LIST" indicator lights up in green when you select "PLAY LIST" (default setting). The "AV SYNC" indicator lights up in green when set to more than 0 ms.

### **Hooking Up the Player**

Follow steps 1 to 6 to hook up and adjust the settings of the player.

### **Notes**

- · Plug cords securely to prevent unwanted noise.
- Refer to the instructions supplied with the components to be connected.
- You cannot connect this player to a TV that does not have a video input jack.
- Be sure to disconnect the power cord of each component before connecting.


### Step 1: Unpacking

Check that you have the following items:

- Audio/Video cord (phono plug  $\times$  3  $\longleftrightarrow$  phono plug  $\times$  3) (1)
- Remote commander (remote) (1)
- Size AA (R6) batteries (2)

### Step 2: Inserting Batteries Into the Remote

You can control the player using the supplied remote. Insert two Size AA (R6) batteries by matching the  $\oplus$  and  $\ominus$  ends on the batteries to the markings inside the compartment. When using the remote, point it at the remote sensor  $\blacksquare$  on the player.

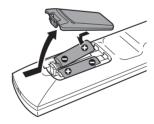


#### **Notes**

- Do not leave the remote in an extremely hot or humid place.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct light from the sun or a lighting apparatus. Doing so may cause a
  malfunction.
- If you do not use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

### Step 3: Connecting the Video Cords/HDMI Cords

Connect this player to your TV monitor, projector or AV amplifier (receiver) using a video cord. Select one of the patterns **(a)** through **(b)**, according to the input jack on your TV monitor, projector or AV amplifier (receiver).

In order to view progressive signal (480p) pictures with a compatible TV, projector or monitor, you must use pattern **②**. Select pattern **②** when connecting to a TV, projector or AV amplifier (receiver) equipped with HDMI input.

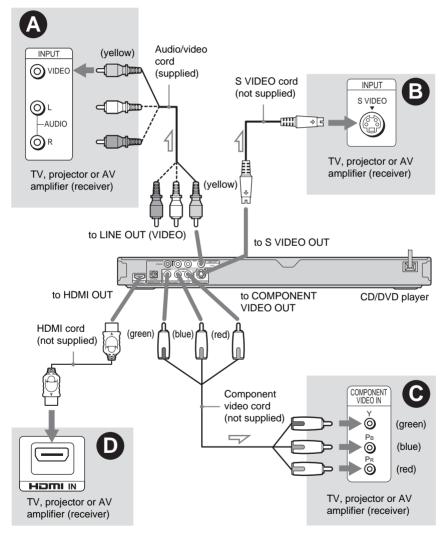

### A If you are connecting to a video input jack

Connect the yellow plug of an audio/video cord (supplied) to the yellow (video) jack. You will enjoy standard quality images.

With this connection, select "NORMAL (INTERLACE)" (default) by pressing the PROGRESSIVE button on the front panel.



### If you are connecting to an S VIDEO input jack

Connect an S VIDEO cord (not supplied). You will enjoy high quality images. With this connection, select "NORMAL (INTERLACE)" (default) by pressing the PROGRESSIVE button on the front panel.



# $\odot$ If you are connecting to a monitor, projector or AV amplifier (receiver) having component video input jacks (Y, $P_B$ , $P_R$ )

Connect the component via the COMPONENT VIDEO OUT jacks using a component video cord (not supplied) or three video cords (not supplied) of the same kind and length. You will enjoy accurate color reproduction and high quality images.

If your TV accepts progressive 480p format signals, use this connection and press the PROGRESSIVE button on the front panel to output progressive signals. For details, see "Using the PROGRESSIVE button" (page 20).



### • If you are connecting to an HDMI/DVI input jack

Use a certified Sony HDMI cord (not supplied) to enjoy high quality digital picture and sound through the HDMI OUT jack. When connecting to the HDMI OUT jack, carefully align the HDMI connector with the jack. Do not bend and apply pressure to the HDMI cord.



### To connect to a TV with DVI input


Use an HDMI-DVI converter cord (not supplied). The DVI jack will not accept any audio signals, so you have to use another audio connection in addition to this connection (page 21). Furthermore, you cannot connect the HDMI OUT jack to DVI jacks that are not HDCP compliant (e.g., DVI jacks on PC displays).

### When connecting to a standard 4:3 screen TV

Depending on the disc, the image may not fit your TV screen. To change the aspect ratio, see page 63.

### **Notes**

Do not connect a VCR, etc., between your TV and the player. If you pass the player signals via the VCR, you may not receive a clear image on the TV screen. If your TV has only one audio/video input jack, connect the player to this jack.




• If the picture appears too white when you are using **A** or **3** connection, set "BLACK LEVEL" in "SCREEN SETUP" to "OFF" (page 64).

### Using the PROGRESSIVE button

By using the PROGRESSIVE button on the front panel, you can select the signal format in which the player outputs video signals (Progressive or Interlace), and the conversion method for progressive signals. The PROGRESSIVE indicator lights up when the player outputs progressive signals.

Each time you press PROGRESSIVE, the display changes as follows:



#### **◆PROGRESSIVE AUTO**

Select this setting when:

- -your TV accepts progressive signals, and,
- the TV is connected to the COMPONENT VIDEO OUT jacks.

Normally select this under the above condition. This automatically detects the software type, and selects the appropriate conversion method.

Note that the picture will not be clear or no picture will appear if you select these settings when either of the above conditions is not met.

#### **◆PROGRESSIVE VIDEO**

Select this setting when:

- your TV accepts progressive signals, and,
- the TV is connected to the COMPONENT VIDEO OUT jacks, and,
- you want to fix the conversion method to PROGRESSIVE VIDEO for video-based software.
   Select this if the image is not clear when you select PROGRESSIVE AUTO.

Note that the picture will not be clear or no picture will appear if you select these settings when either of the above conditions is not met.

#### **◆NORMAL (INTERLACE)**

Select this setting when:

- your TV does not accept progressive signals, or,
- your TV is connected to jacks other than the COMPONENT VIDEO OUT jacks (LINE OUT (VIDEO) or S VIDEO OUT).

You cannot select this setting while the HDMI indicator is lit.

#### About DVD software types and the conversion method

DVD software can be divided into two types: film-based software and video based software. Video-based software is derived from TV, such as dramas and sit-coms, and displays images at 30 frames/60 fields per second. Film-based software is derived from film and displays images at 24 frames per second. Some DVD software contains both video and film.

In order for these images to appear natural on your screen when output in progressive format, the progressive signals need to be converted to match the type of DVD software that you are watching.


#### Note

When you play video-based software in progressive signal format, sections of some types of images may appear unnatural due to the conversion process when output through the COMPONENT VIDEO OUT jacks. Images from the S VIDEO OUT and LINE OUT (VIDEO) jacks are unaffected as they are output in the normal (interlace) format.

### **Step 4: Connecting the Audio Cords**

Select one of the following patterns **A** or **B**, according to the input jack on your TV monitor, projector or AV amplifier (receiver).

This will enable you to listen to sound.

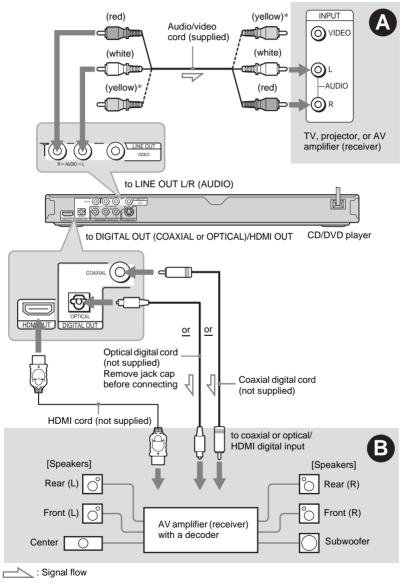


<sup>\*</sup> The yellow plug is used for video signals (page 17).

#### Ϋ́ Hint

For correct speaker location, see the operating instructions supplied with the connected components.

# ♠ Connecting to audio L/R input jacks

This connection will use your TV's or stereo amplifier's (receiver's) two speakers for sound. Connect using the audio/video cord (supplied).



• Surround effect (page 43) TV: Dynamic Theater, Dynamic, Wide, Night




Stereo amplifier (receiver): Standard, Night



# © Connecting to a digital audio input jack

If your AV amplifier (receiver) has a Dolby Digital\*<sup>1</sup> or DTS\*<sup>2</sup> decoder and a digital input jack, use this connection.

Connect using a coaxial or optical digital cord/HDMI cord (not supplied).



• Surround effect Dolby Digital (5.1ch), DTS (5.1ch)



- \*1 Manufactured under license from Dolby Laboratories. "Dolby," "Pro Logic," and the double-D symbol are trademarks of Dolby Laboratories.
- \*2 "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

#### **Notes**


- After you have completed the connection, be sure to set "DOLBY DIGITAL" to "DOLBY DIGITAL" and "DTS" to "ON" in Quick Setup (page 23).
- When you connect an amplifier (receiver) that conforms to the 96 kHz sampling frequency, set "48kHz/96kHz PCM" in "AUDIO SETUP" to "96kHz/24bit" (page 68).
- The TVS effects of this player cannot be used with this connection.
- When you connect the player to an AV amplifier (receiver) using an HDMI cord, you will need to do one of the following:
- Connect the AV amplifier (receiver) to the TV with the HDMI cord.
- Connect the player to the TV with a video cord other than HDMI cord (component video cord, S VIDEO cord, or audio/video cord).
- When connecting to the HDMI OUT jack, carefully align the HDMI connector with the jack. Do not bend and apply pressure to the HDMI cord.

### **Step 5: Connecting the Power Cord**

Plug the player and TV power cords into an AC outlet.

### Step 6: Quick Setup

Follow the steps below to make the minimum number of basic adjustments for using the player. To skip an adjustment, press >> 1. To return to the previous adjustment, press >> 1.

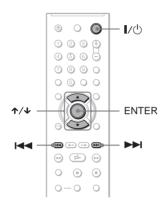


- Turn on the TV.
- 2 Press **I**(<sup>1</sup>).
- 3 Switch the input selector on your TV so that the signal from the player appears on the TV screen.

"Press [ENTER] to run QUICK SETUP" (press enter to run Quick Setup) appears at the bottom of the screen. If this message does not appear, select "QUICK" (quick) under "SETUP" (setup) in the Control Menu to run Quick Setup (page 62).

4 Press ENTER without inserting a disc.

The Setup Display for selecting the language used in the on-screen display appears.




**5** Press **↑**/**↓** to select a language.

The player displays the menu and subtitles in the selected language.

6 Press ENTER.


The Setup Display for selecting the aspect ratio of the TV to be connected appears.



- 7 Press ★/◆ to select the setting that matches your TV type.
  - ◆ If you have a 4:3 standard TV
  - 4:3 LETTER BOX or 4:3 PAN SCAN (page 63)
  - ◆ If you have a wide-screen TV or a 4:3 standard TV with a wide-screen mode
  - 16:9 (page 63)

### 8 Press ENTER.

The Setup Display for selecting the type of jack used to connect your amplifier (receiver) appears.



9 Press ★/→ to select the type of jack (if any) you are using to connect to an amplifier (receiver), then press ENTER.


If you did not connect an AV amplifier (receiver), select "NO," then go to step 13.

If you connected an AV amplifier (receiver) using just an audio cord, select "YES: LINE OUTPUT L/R (AUDIO)," then go to step 13.

If you connected an AV amplifier (receiver) using a digital coaxial or optical/HDMI cord, select "YES: DIGITAL OUTPUT."


10Press ★/↓ to select the type of Dolby Digital signal you wish to send to your amplifier (receiver).

If your AV amplifier (receiver) has a Dolby Digital decoder, select "DOLBY DIGITAL." Otherwise, select "D-PCM."



### 11 Press ENTER.

"DTS" is selected.



12Press ★/♣ to select whether or not you wish to send a DTS signal to your amplifier (receiver).

If your AV amplifier (receiver) has a DTS decoder, select "ON." Otherwise, select "OFF."

### 13 Press ENTER.

Quick Setup is finished. All connections and setup operations are complete.


### **Playing Discs**

# Playing Discs DVDvideo DVDvR

### VCD CD DATA CD DATA DVD

Depending on the DVD or VIDEO CD, some operations may be different or restricted. Refer to the operating instructions supplied with your disc.



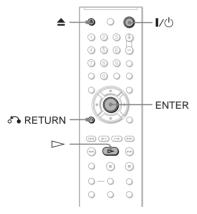

- Turn on your TV.
- 2 Press I/U.

The player turns on.

- 3 Switch the input selector on your TV so that the signal from the player appears on the TV screen.
  - ♦ When using an amplifier (receiver) Turn on the amplifier (receiver) and select the appropriate channel so that you can hear sound from the player.

### 4 Press \( \rightarrow \) on the player, and place a disc on the disc tray.



Playback side facing down

### **5** Press ⊳.

The disc tray closes. The player starts playback (continuous play). Adjust the volume on the TV or the amplifier (receiver).

Depending on the disc, a menu may appear on the TV screen. For DVD VIDEOs, see page 28. For VIDEO CDs, see page 29.

### To turn off the player

Press . The player enters standby mode.

### Ϋ Hint

You can have the player turn off automatically whenever you leave it in stop mode for more than 30 minutes. To turn this function on or off, set "AUTO POWER OFF" in "CUSTOM SETUP" to "ON" or "OFF" (page 65).


### Notes on playing DTS sound tracks on a DVD VIDEO

- · DTS audio signals are output only through the DIGITAL OUT (COAXIAL or OPTICAL)/HDMI OUT jack.
- When you play a DVD VIDEO with DTS sound tracks, set "DTS" to "ON" in "AUDIO SETUP" (page 68).
- · If you connect the player to audio equipment without a DTS decoder, do not set "DTS" to "ON" in "AUDIO SETUP" (page 68). A loud noise may come out from the speakers, affecting your ears or causing the speakers to be damaged.

#### Note

Discs created on DVD recorders must be correctly finalized before they can be played. For more information about finalizing, refer to the operating instructions supplied with the DVD recorder.

### **Additional operations**

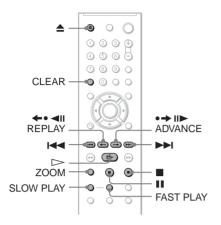

То	Operation
Stop	Press
Pause	Press II
Resume play after pause	Press ■ or >
Go to the next chapter, track or scene in continuous play mode	Press ►►I
Go back to the previous chapter, track or scene in continuous play mode	Press ►
Stop play and remove the disc	Press 📤
Replay the previous scene*1	Press ←• ◀II REPLAY during playback
Briefly fast forward the current scene* <sup>2</sup>	Press •→ II► ADVANCE during playback
Magnify the image* <sup>3</sup>	Press ZOOM repeatedly. Press CLEAR to cancel.

- \*1 DVD VIDEOs/DVD-RWs/DVD-Rs only
- \*2 DVD VIDEOs/DVD-RWs/DVD-Rs/ DVD+RWs/DVD+Rs only
- \*3 Video and JPEG pictures only (except BACKGROUND pictures). You can move the enlarged picture using ←/↑/↓/→). Depending upon the contents of the disc, the zoom function may be canceled automatically when the picture is moved.

#### Note

You may not be able to use the Replay or Advance function with some scenes.

## Playback quickly or slowly with sound

You can listen to dialog or sound while playing the current scene quickly or slowly.

### During playback, press FAST PLAY or SLOW PLAY.

The speed changes when you press either FAST PLAY or SLOW PLAY.

To return to normal playback Press ►

#### **Notes**

- You can only use this function with DVDs/ VIDEO CDs/Super VCDs and DVD-RWs/DVD-Rs in VR mode only.
- "Operation not possible" will appear when maximum or minimum speed is reached.
- During Fast Play or Slow Play mode, you cannot change the angle (page 44), subtitle (page 44), or sound (page 41). The sound can only be changed for VIDEO CDs/Super VCDs.
- Fast Play and Slow Play functions do not work when playing DTS sound tracks.
- You cannot use Fast Play or Slow Play functions when playing a still picture on DVD-RW/DVD-R in VR mode.

## Locking the disc tray (Child Lock)

You can lock the disc tray to prevent children from opening it.

When the player is in standby mode, press  $\sim$  RETURN, ENTER and then  $1/\circlearrowleft$  on the remote.

The player turns on and "LOCKED" appears on the front panel display. The ≜ and ≜ buttons on the player or the remote do not work while the Child Lock is set.

### To unlock the disc tray

When the player is in standby mode, press RETURN, ENTER and then \( \bar{\bar{\lambda}} \) again.


#### Note

Even if you select "RESET" under "SETUP" in the Control Menu (page 62), the disc tray remains locked.

### Resuming Playback From the Point Where You Stopped the Disc (Multi-disc

Resume) DVDvideo VCD

The player stores the point where you stopped the disc for up to 6 discs and resumes playback the next time you insert the same disc. If you store a resume playback point for the 7th disc, the resume playback point for the first disc is deleted.

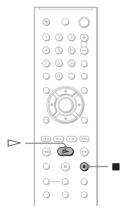

# 1 While playing a disc, press ■ to stop playback.

"RESUME" appears on the front panel display.

### **2** Press ⊳.

The player starts playback from the point where you stopped the disc in step 1.

### " Hint

To play from the beginning of the disc, press  $\blacksquare$  twice, then press  $\triangleright$ .

#### **Notes**

- "MULTI-DISC RESUME" in "CUSTOM SETUP" must be set to "ON" (default) for this function to work (page 65).
- The point where you stopped playing is cleared when:
- you change the play mode.
- you change the settings on the Setup Display.
- For DVD-RWs/DVD-Rs in VR mode, CDs, DATA CDs, and DATA DVDs the player remembers the resume playback point for the current disc.

The resume point is cleared when:


- you opened the disc tray.
- you disconnect the power cord.
- the player enters standby mode (DATA CD/DATA DVD only).
- Resume Play does not work during Shuffle Play and Program Play.
- · This function may not work with some discs.
- If "MULTI-DISC RESUME" in "CUSTOM SETUP" is set to "ON" and you playback a recorded disc such as DVD-RW, the player may playback other recorded discs from the same resume point.

### Using the DVD's Menu

### **DVD**Video

A DVD is divided into long sections of a picture or a music feature called "titles." When you play a DVD which contains several titles, you can select the title you want using the TOP MENU button.

When you play DVDs that allow you to select items such as language for the sound and subtitles, select these items using the MENU button.

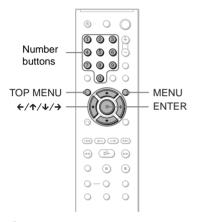

### 1 Press TOP MENU or MENU.

The disc's menu appears on the TV screen.

The contents of the menu vary from disc to disc.

2 Press ←/↑/↓/→ or the number buttons to select the item you want to play or change.

If you press the number buttons, the following display appears.


Press the number buttons to select the item you want.



3 Press ENTER.

# Selecting "ORIGINAL" or "PLAY LIST" on a DVD-RW/DVD-R DVDVA

Some DVD-RWs/DVD-Rs in VR (Video Recording) mode have two types of titles for playback: originally recorded titles (ORIGINAL) and titles that can be created on recordable DVD players for editing (PLAY LIST). You can select the type of title to be played.

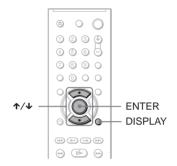


1 Press DISPLAY when the player is in stop mode.

The Control Menu appears.

2 Press ↑/↓ to select 「□□□ (ORIGINAL/PLAY LIST), then press ENTER.


The options for "ORIGINAL/PLAY LIST" appear.



- **3** Press **↑**/**↓** to select a setting.
  - PLAY LIST: plays the titles created from "ORIGINAL" for editing.
  - ORIGINAL: plays the titles originally recorded.
- 4 Press FNTFR

# Playing VIDEO CDs With PBC Functions (PBC Playback)

PBC (Playback Control) allows you to play VIDEO CDs interactively by following the menu on the TV screen.

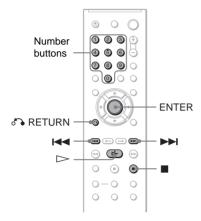

1 Start playing a VIDEO CD with PBC functions.

The menu for your selection appears.

- 2 Press the number buttons to select the item number you want.
- 3 Press ENTER.
- 4 Follow the instructions in the menu for interactive operations.

Refer to the instructions supplied with the disc, as the operating procedure may differ depending on the VIDEO CD.

To return to the menu Press & RETURN.

#### Ϋ Hint

To play without using PBC, press I◀◀/▶▶I or the number buttons while the player is stopped to select a track, then press ▷ or ENTER.

"Play without PBC" appears on the TV screen and the player starts continuous play. You cannot play still pictures such as a menu.

To return to PBC playback, press ■ twice then press ▷.

### Note


Depending on the VIDEO CD, "Press ENTER" in step 3 may appear as "Press SELECT" in the instructions supplied with the disc. In this case, press .

# Various Play Mode Functions (Program Play,

# Shuffle Play, Repeat Play, A-B Repeat Play)

You can set the following play modes:

- Program Play (page 30)
- Shuffle Play (page 32)
- Repeat Play (page 32)
- A-B Repeat Play (page 33)

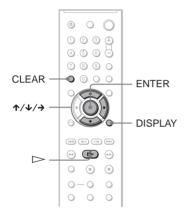

#### Note

The play mode is canceled when:


- you open the disc tray.
- the player enters standby mode by pressing **I**/்.

# Creating your own program (Program Play) DVDVIdeo VCD CD

You can play the contents of a disc in the order you want by arranging the order of the titles, chapters or tracks on the disc to create your own program. You can program up to 99 titles, chapters and tracks.


- Press DISPLAY.
  The Control Menu appears.
- Press ↑/↓ to select [ [ PROGRAM], then press ENTER.

  The options for "PROGRAM" appear.



3 Press ★/♣ to select "SET →," then press ENTER.


"TRACK" is displayed when you play a VIDEO CD or CD.



Titles or tracks recorded on a disc

### 4 Press →.

The cursor moves to the title or track row "T" (in this case, "01").




Chapters recorded on a disc

### 5 Select the title, chapter or track you want to program.

### ♦ When playing a DVD VIDEO

For example, select chapter "03" of title "02."

Press **↑**/**↓** to select "02" under "T," then press ENTER.



Next, press **↑**/**↓** to select "03" under "C," then press ENTER.

55555111		
PROGRAM	-	
ALL CLEAR	I	
1. TITLE 02-03		
2 TITLE (02 03)	01	
3. TITLE	02	
4. TITLE	03	
5. TITLE	04	
6. TITLE	05	
7. TITLE		
7. 1112		

Selected title and chapter

### ♦ When playing a VIDEO CD or CD

For example, select track "02." Press **↑**/**↓** to select "02" under "T," then press ENTER.

#### Selected track

PROGRAM		0:15:30
ALL CLEAR		Т
1. TRACK (	02)	
2. TRACK		01
3. TRACK		02
4. TRACK		03
5. TRACK		04
6. TRACK		05
7. TRACK		
•		

Total time of the programmed tracks

### 6 To program other titles, chapters or tracks, repeat steps 4 to 5.

The programmed titles, chapters and tracks are displayed in the selected order.

### Press to start Program Play.

Program Play begins.

When the program ends, you can restart the same program again by pressing  $\triangleright$ .

### To return to normal play

Press CLEAR or select "OFF" in step 3. To play the same program again, select "ON" in step 3 and press ENTER.

### To change or cancel a program

- Follow steps 1 to 3 of "Creating your own program (Program Play)."
- 2 Select the program number of the title, chapter or track you want to change or cancel using **↑**/**↓** and press **→**. If you want to delete the title, chapter or track from the program, press CLEAR.
- Follow step 5 for new programming. To cancel a program, select "--" under "T," then press ENTER.

### To cancel all of the titles, chapters or tracks in the programmed order

- Follow steps 1 to 3 of "Creating your own program (Program Play)."
- 2 Press ↑ and select "ALL CLEAR."
- 3 Press ENTER

### ზ Hint

You can perform Repeat Play or Shuffle Play of programmed titles, chapters or tracks. During Program Play, follow the steps of Repeat Play (page 32) or Shuffle Play (page 32).


#### **Notes**

- · When you program tracks on a Super VCD, the total playing time is not displayed.
- You cannot use this function with VIDEO CDs or Super VCDs with PBC playback.

# Playing in random order (Shuffle Play) DVDVideo VCD CD

You can have the player "shuffle" titles, chapters or tracks. Subsequent "shuffling" may produce a different playing order.

- 1 Press DISPLAY during playback. The Control Menu appears.



- 3 Press **↑**/**↓** to select the item to be shuffled.
  - ♦ When playing a DVD VIDEO
  - TITLE
  - CHAPTER
  - ♦ When playing a VIDEO CD or CD
  - TRACK
  - ◆ When Program Play is activated
  - ON: shuffles titles, chapters or tracks selected in Program Play.
- 4 Press ENTER.
  Shuffle Play starts.

### To return to normal play

Press CLEAR or select "OFF" in step 3.

### 🍟 Hints

- You can set Shuffle Play while the player is stopped. After selecting the "SHUFFLE" option, press ▷. Shuffle Play starts.
- Up to 200 chapters in a disc can be played in random order when "CHAPTER" is selected.

#### Note

You cannot use this function with VIDEO CDs or Super VCDs with PBC playback.


### Playing repeatedly (Repeat Play)

DVDvideo DVDvR VCD CD DATA CD DATA DVD

You can play all of the titles or tracks on a disc, or a single title, chapter or track repeatedly.

You can use a combination of Shuffle or Program Play modes.

- 1 Press DISPLAY during playback. The Control Menu appears.

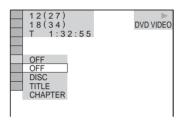

- 3 Press ↑/↓ to select the item to be repeated.
  - ◆ When playing a DVD VIDEO
  - DISC: repeats all of the titles.
  - TITLE: repeats the current title on a disc.
  - CHAPTER: repeats the current chapter.
  - ♦ When playing a DVD-VR mode disc
  - DISC: repeats all the titles of the selected type.
  - TITLE: repeats the current title on a disc
  - CHAPTER: repeats the current chapter.
  - ◆ When playing a VIDEO CD or CD
  - DISC: repeats all of the tracks.
  - TRACK: repeats the current track.
  - ◆ When playing a DATA CD or DATA DVD with MP3 audio tracks or JPEG image files
  - DISC: repeats all of the albums.
  - ALBUM: repeats the current album.
  - TRACK (MP3 audio tracks only): repeats the current track.
  - ◆ When Program Play or Shuffle Play is activated
  - ON: repeats Program Play or Shuffle Play.

### 4 Press ENTER.

Repeat Play starts.

### To return to normal play

Press CLEAR or select "OFF" in step 3.

### 🌣 Hint

You can set Repeat Play while the player is stopped. After selecting the "REPEAT" option, press ▷. Repeat Play starts.

### **Notes**


- You cannot use this function with VIDEO CDs or Super VCDs with PBC playback.
- When repeating a DATA CD/DATA DVD which contains MP3 audio tracks and JPEG image files, and their playing times are not the same, the sound will not match the image.
- When "MODE (MP3, JPEG)" is set to "IMAGE (JPEG)" (page 54), you cannot select "TRACK."

# Repeating a specific portion (A-B Repeat Play)

DVDvideo DVDvR VCD CD

You can play a specific portion of a title, chapter or track repeatedly. (This function is useful when you want to memorize lyrics, etc.)

- 1 Press DISPLAY during playback. The Control Menu appears.

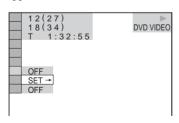

3 Press ★/◆ to select "SET →," then press ENTER.

The "A-B REPEAT" setting bar appears.

A 18 - 1:32:30 B

4 During playback, when you find the starting point (point A) of the portion to be played repeatedly, press ENTER.

The starting point (point A) is set.

A 18 - 1:32:55 B 18 - 1:33:05

When you reach the ending point (point B), press ENTER again.

The set points are displayed and the player starts repeating this specific portion.

### To return to normal play

Press CLEAR or select "OFF" in step 3.

### **Notes**


- When you set A-B Repeat Play, the settings for Shuffle Play, Repeat Play and Program Play are canceled
- A-B Repeat Play does not work across multiple titles
- You may not set A-B Repeat Play for contents on a DVD-RW/DVD-R (VR mode) that contains still pictures.

### Searching for a Scene

### Searching for a Particular Point on a

**Disc** (Search, Scan, Slow-motion Play, Freeze Frame)

You can quickly locate a particular point on a disc by monitoring the picture or playing back slowly.

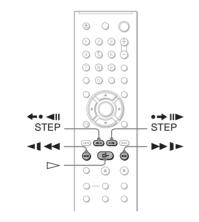



### **Notes**

- Depending on the disc, you may not be able to do some of the operations described.
- For DATA CDs/DATA DVDs, you can search for a particular point only on an MP3 audio track.

# Locating a point quickly using the PREV (previous)/NEXT (next) buttons (Search)

DVDvideo DVDvR VCD CD DATA CD DATA DVD

You can search for the next or previous chapter, track or scene using ► on the player.


During playback, press ▶ or ► once briefly to go to the next or previous chapter/ track/scene. Or, press and hold ▶ or ► to search forward or backwards and release the button when you find the point you want to return to normal playback. (Search)

# Locating a point quickly by playing a disc in fast forward or fast reverse (Scan)

DVDvideo DVDvR VCD CD DATA CD DATA DVD

Press ◀▮ ◀◀ or ▶▶ ▶ while playing a disc. When you find the point you want, press ▷ to return to normal speed. Each time you press ◀▮ ◀◀ or ▶▶▶ during scan, the scan speed changes. With each press the indication changes as shown below. Actual speeds may differ between discs.

Playback direction



Opposite direction



The " $\times 2$ \" " " " " playback speed is about twice the normal speed.

The "3▶"/"3◄" playback speed is faster than "2▶"/"2◄" and the "2▶"/"2◄" playback speed is faster than "1▶"/
"1◄."

### Watching frame by frame (Slow-motion Play)

DVDvideo DVDvR VCD

Press  $\blacktriangleleft \blacksquare \blacktriangleleft \blacktriangleleft$  or  $\blacktriangleright \blacktriangleright \blacktriangleright$  when the player is in pause mode. To return to normal speed, press >.

Each time you press ◀▮ ◀◀ or ▶▶ ▮▶ during Slow-motion Play, the playback speed changes. Two speeds are available. With each press the indication changes as follows:

Playback direction

$$2 \blacktriangleright \longleftarrow 1 \blacktriangleright \blacktriangleright$$

Opposite direction (DVD/DVD-VR mode only)

The "2 ▶"/"2 ◀¶" playback speed is slower than "1 **▶**"/"1 **◄1**."

### Playing one frame at a time (Freeze Frame) DVDvideo DVDvR VCD

When the player is in the pause mode, press •→ II► STEP to go to the next frame. Press **←• ◄II** STEP to go to the preceding frame (DVD/DVD-VR mode only). To return to normal playback, press .

#### Note


You cannot search for a still picture on a DVD-RW/ DVD-R in VR mode.

### Searching for a Title/ Chapter/Track/Scene,

etc. DVDvideo DVDvR VCD CD

DATA CD DATA DVD

You can search a DVD by title or chapter, and you can search a VIDEO CD/CD/DATA CD/ DATA DVD by track, index, file, or scene. As titles and tracks are assigned unique numbers on the disc, you can select the desired one by entering its number. You can also search for a scene using the time code.

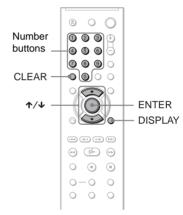

1 Press DISPLAY. (When playing a DATA CD or DATA DVD with JPEG image files, press twice.)

The Control Menu appears.

- 2 Press ★/♦ to select the search method
- ◆ When playing a DVD VIDEO/DVD-VR mode disc



Select "TIME/TEXT" to search for a starting point by inputting the time code.

♦ When playing a VIDEO CD or Super VCD without PBC Playback



♦ When playing a VIDEO CD or Super VCD with PBC Playback



♦ When playing a CD




♦ When playing a DATA CD/DATA DVD



Example: when you select CHAPTER




"\*\* (\*\*)" is selected (\*\* refers to a number). The number in parentheses indicates the total number of titles, chapters, tracks, indexes, scenes, albums or files.

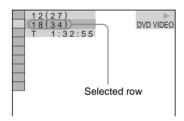

### 3 Press ENTER.

"\*\* (\*\*)" changes to "-- (\*\*)."

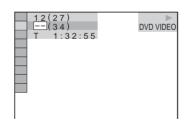

4 Press the number buttons to select the title, chapter, track, index, scene, etc., number you want to search.

If you make a mistake

Cancel the number by pressing CLEAR, then select another number.

### **5** Press ENTER.

The player starts playback from the selected number.

## To search for a scene using the time code (DVD VIDEO/DVD-VR mode only)

- 1 In step 2, select TIME/TEXT. "T \*\*: \*\*: \*\*" (playing time of the current title) is selected.
- 2 Press ENTER.
  "T \*\*:\*\*:\*\*" changes to "T --:--:"
- 3 Input the time code using the number buttons, then press ENTER.

  For example, to find the scene at 2 hours, 10 minutes and 20 seconds after the beginning, just enter "2:10:20."

### Ϋ́ Hints

- When the Control Menu display is turned off, you
  can search for a chapter (DVD VIDEO/DVD-VR
  mode) or track (CD/DATA CD/DATA DVD) by
  pressing the number buttons and ENTER.
- You can display the first scene of titles, chapters or tracks recorded on the disc on a screen divided into 9 sections. You can start playback directly by selecting one of the scenes. For details, see "Searching by Scene (PICTURE NAVIGATION)" (page 37).


#### **Notes**

- The title, chapter or track number displayed is the same number recorded on the disc.
- You cannot search for a scene on a DVD+RW/ DVD+R using the time code.

# **Searching by Scene**


(PICTURE NAVIGATION) DVDvideo VCD

You can divide the screen into 9 subscreens and find the desired scene quickly.

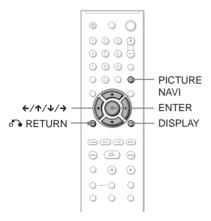

# Press PICTURE NAVI during playback.

The following display appears.



# 2 Press PICTURE NAVI repeatedly to select an item.

- CHAPTER VIEWER (DVD VIDEO only): displays the first scene of each chapter.
- TITLE VIEWER (DVD VIDEO only): displays the first scene of each title.
- TRACK VIEWER (VIDEO CD/ Super VCD only): displays the first scene of each track.

# 3 Press ENTER.

The first scene of each chapter, title or track appears as follows.

1	2	3	
4	5	6	
7	8	9	•

# 4 Press ←/↑/↓/→ to select a chapter, title or track, and press ENTER.

Playback starts from the selected scene.

To return to normal play during setting Press RETURN or DISPLAY.

# Ϋ́ Hint

If there are more than 9 chapters, titles or tracks,  $\blacktriangledown$  is displayed at the bottom right of the screen. To display the additional chapters, titles or tracks, select the bottom scenes and press  $\blacktriangledown$ . To return to the previous scene, select the top scenes and press

# Note


Depending on the disc, you may not be able to select some items.

Viewing Information About the Disc

# Checking the Playing Time and Remaining Time DVDvideo DVDviR VCD CD

DATA CD DATA DVD

You can check the playing time and remaining time of the current title, chapter or track. Also, you can check the DVD/CD text or track name (MP3 audio) recorded on the disc.

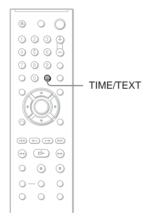

# 1 Press TIME/TEXT during playback.

The following display appears.



# 2 Press TIME/TEXT repeatedly to change the time information.

The available time information depends upon the type of disc you are playing.

# ◆ When playing a DVD VIDEO or DVD-VR mode disc

- T \*:\*:\* (hours: minutes: seconds)
  Playing time of the current title
- T-\*:\*:\*
  Remaining time of the current title
- C \*:\*:\* Playing time of the current chapter
- C-\*:\*:\*
  Remaining time of the current chapter

# ◆ When playing a VIDEO CD or Super VCD (with PBC functions)

- \*:\* (minutes: seconds)
  Playing time of the current scene
- ♦ When playing a VIDEO CD (without PBC functions) or CD
- T \*:\* (minutes: seconds)
  Playing time of the current track
- T-\*:\*
  Remaining time of the current track
- D \*:\*
  Playing time of the current disc
- D-\*:\*
  Remaining time of the current disc
- ◆ When playing a Super VCD (without PBC functions)
- T \*:\* (minutes: seconds)
  Playing time of the current track
- ♦ When playing a DATA CD (MP3 audio) or DATA DVD (MP3 audio)
- T \*:\* (minutes: seconds)
  Playing time of the current track

# Checking the play information of the disc


#### To check the DVD/CD text

Press TIME/TEXT repeatedly in step 2 to display text recorded on the DVD/CD. The DVD/CD text appears only when text is recorded in the disc. You cannot change the text. If the disc does not contain text, "NO TEXT" appears.



# To check DATA CD (MP3 audio)/DATA DVD (MP3 audio) album name, etc.


By pressing TIME/TEXT while playing MP3 audio tracks on a DATA CD/DATA DVD, you can display the name of the album/track and the audio bit rate (the amount of data per second of the current audio track) on your TV screen.

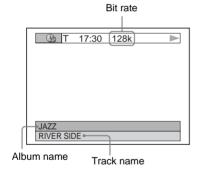

# Checking the information on the front panel display


You can view the time information and text displayed on the TV screen also on the front panel display. The information on the front panel display changes as follows when you change the time information on your TV

# When playing a DVD VIDEO or DVD-VR mode disc

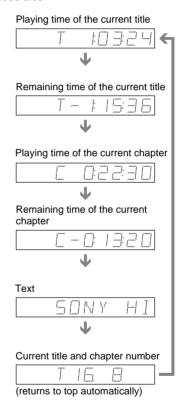


# When playing a DATA CD (MP3 audio)/ DATA DVD (MP3 audio)

Playing time and number of the current track

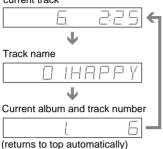

# When playing a VIDEO CD (without PBC functions) or CD

Playing time and number of the current track

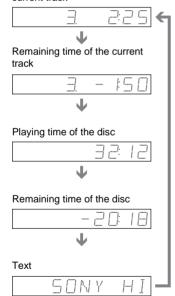

### ʹϔ Hints

- When playing VIDEO CDs without PBC functions, the track number and the index number are displayed after the text.
- When playing VIDEO CDs with PBC functions, the scene number or the playing time are displayed.
- Long text that does not fit in a single line will scroll across the front panel display.
- You can also check the time information and text using the Control Menu (page 13).

- Depending on the type of disc being played, the DVD/CD text or track name may not be displayed.
- The player can only display the first level of the DVD/CD text, such as the disc name or title.
- Playing time of MP3 audio tracks may not be displayed correctly.
- If you play a disc containing JPEG image files only, "NO AUDIO DATA" appears when "MODE (MP3, JPEG)" is set to "AUTO," "JPEG" appears when "MODE (MP3, JPEG)" is set to "IMAGE (JPEG)" in the front panel display.

# **Sound Adjustments**

# Changing the Sound

DVDvideo DVDvR VCD CD DATA CD

# DATA DVD


When playing a DVD VIDEO recorded in multiple audio formats (PCM, Dolby Digital or DTS), you can change the audio format. If the DVD VIDEO is recorded with multilingual tracks, you can also change the

With CDs, DATA CDs, DATA DVDs or VIDEO CDs, you can select the sound from either the right or left channel and listen to the sound of the selected channel through both the right and left speakers. For example, when playing a disc containing a song with the vocals on the right channel and the instruments on the left channel, you can hear the instruments from both speakers by selecting the left channel.



# Press AUDIO during playback.

The following display appears.



2 Press AUDIO repeatedly to select the desired audio signal.

# ♦ When playing a DVD VIDEO

Depending on the DVD VIDEO, the choice of language varies.

When 4 digits are displayed, they indicate a language code. See "Language Code List" on page 75 to see which language the code represents. When the same language is displayed two or more times, the DVD VIDEO is recorded in multiple audio formats.

### ♦ When playing a DVD-VR mode disc

The types of sound tracks recorded on a disc are displayed. The default setting is underlined.

Example:

- 1: MAIN (main sound)
- 1: SUB (sub sound)
- 1: MAIN+SUB (main and sub sound)

# ◆ When playing a VIDEO CD, CD or DATA CD (MP3 audio)/DATA DVD (MP3 audio) The default setting is underlined.

- · STEREO: the standard stereo sound
- 1/L: the sound of the left channel (monaural)
- 2/R: the sound of the right channel (monaural)

# ♦ When playing a Super VCD

The default setting is underlined.

- 1:STEREO: the stereo sound of the audio track 1
- 1:1/L: the sound of the left channel of the audio track 1 (monaural)
- 1:2/R: the sound of the right channel of the audio track 1 (monaural)
- · 2:STEREO: the stereo sound of the audio track 2
- 2:1/L: the sound of the left channel of the audio track 2 (monaural)
- 2:2/R: the sound of the right channel of the audio track 2 (monaural)


- · While playing a Super VCD on which the audio track 2 is not recorded, no sound will come out when you select "2:STEREO," "2:1/L," or
- When playing DVD-RW/DVD-R in VR mode: If you connect to an AV amplifier (receiver) using the DIGITAL OUT (COAXIAL or OPTICAL)/ HDMI OUT jack and want to switch between the sound tracks, set "DOLBY DIGITAL" to "D-PCM" in "AUDIO SETUP".

# Checking the audio signal format DVDVideo

You can check the audio signal format by pressing AUDIO repeatedly during playback. The format of the current audio signal (Dolby Digital, DTS, PCM, etc.) appears as shown below.


### Example:

Dolby Digital 5.1 ch



## Example:

Dolby Digital 3 ch



# About audio signals

Audio signals recorded in a disc contain the sound elements (channels) shown below. Each channel is output from a separate speaker.

- Front (L)
- Front (R)
- Center
- Rear (L)
- Rear (R)
- Rear (Monaural): This signal can be either the Dolby Surround Sound processed signals or the Dolby Digital sound's monaural rear audio signals.
- LFE (Low Frequency Effect) signal


#### Note

If "DTS" is set to "OFF" in "AUDIO SETUP" (page 68) the DTS track selection option will not appear on the screen even if the disc contains DTS tracks.

# TV Virtual Surround Settings (TVS) DVDvideo


When you connect a stereo TV or 2 front speakers, TVS (TV Virtual Surround) lets you enjoy surround sound effects by using sound imaging to create virtual rear speakers from the sound of the front speakers (L: left, R: right) without using actual rear speakers. TVS was developed by Sony to produce surround sound for home use using just a stereo TV.

This only works when playing a multichannel Dolby audio sound track. Furthermore, if the player is set up to output the signal from the DIGITAL OUT (OPTICAL or COAXIAL)/HDMI OUT jack, the surround effect will only be heard when "DOLBY DIGITAL" is set to "D-PCM" in "AUDIO SETUP" (page 67).



# 1 Press SUR during playback.

The following display appears.



# 2 Press SUR repeatedly to select one of the TVS sounds.

See the explanations given for each item in the following section.


- TVS DYNAMIC THEATER
- TVS DYNAMIC
- TVS WIDE
- TVS NIGHT
- TVS STANDARD

# To cancel the setting Select "OFF" in step 2.

#### **◆TVS DYNAMIC THEATER**

Creates one set of LARGE virtual rear speakers and virtual subwoofer from the sound of the front speakers (L, R) without using actual rear speakers and subwoofer (shown below).

This mode is effective when the distance between the front L and R speakers is short, such as with built-in speakers on a stereo TV.




#### **◆TVS DYNAMIC**

Creates one set of virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers (shown below). This mode is effective when the distance between the front L and R speakers is short, such as with built-in speakers on a stereo TV.



#### **◆TVS WIDE**

Creates five sets of virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers (shown below). This mode is effective when the distance between the front L and R speakers is short, such as with built-in speakers on a stereo TV.

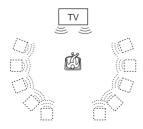


#### **◆TVS NIGHT**

Large sounds, such as explosions, are suppressed, but the quieter sounds are unaffected. This feature is useful when you want to hear the dialog and enjoy the surround sound effects of "TVS WIDE" at low volume.

#### **◆TVS STANDARD**

Creates three sets of virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers (shown below). Use this setting when you want to use TVS with 2 separate speakers.

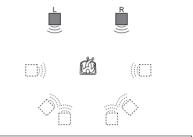

- L: Front speaker (left)
- R: Front speaker (right)
- : Virtual speaker


- When the playing signal does not contain a signal for the rear speakers, the surround effects cannot be heard.
- When you select one of the TVS modes, turn off the surround setting of the connected TV or amplifier (receiver).
- Make sure that your listening position is between and at an equal distance from your speakers and that the speakers are located in similar surroundings.
- Not all discs will respond to the "TVS NIGHT" function in the same way.
- If you use the DIGITAL OUT (OPTICAL or COAXIAL)/HDMI OUT jack and set "DOLBY DIGITAL" to "DOLBY DIGITAL," and "DTS" to "ON" in "AUDIO SETUP," sound will come from your speakers but it will not have the SURROUND effect.
- The TVS effects do not work when using the Fast Play or Slow Play functions, even though you can change the TVS modes.

# **Enjoying Movies**

# **Changing the Angles**

### DVDvideo

If various angles (multi-angles) for a scene are recorded on the DVD VIDEO, "2" appears in the front panel display. This means that you can change the viewing angle.

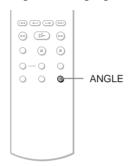

# 1 Press ANGLE during playback.

The number of the angle appears on the display.



# 2 Press ANGLE repeatedly to select an angle number.

The scene changes to the selected angle.

#### Note

Depending on the DVD VIDEO, you may not be able to change the angles even if multi-angles are recorded on the DVD VIDEO.

# **Displaying the Subtitles**


DVDvideo DVDvR

If subtitles are recorded on the discs, you can change the subtitles or turn them on and off whenever you want while playing a DVD.



# 1 Press SUBTITLE during playback.

The following display appears.



# 2 Press SUBTITLE repeatedly to select a setting.

# ♦ When playing a DVD VIDEO

Select the language.

Depending on the DVD VIDEO, the

when 4 digits are displayed, they indicate a language code. See "Language Code List" on page 75 to see which language the code represents.

◆ When playing a DVD-VR mode disc Select "ON."

#### To turn off the subtitles

Select "OFF" in step 2.

- Depending on the DVD VIDEO, you may not be able to change the subtitles even if multilingual subtitles are recorded on it. You also may not be able to turn them off.
- While playing a disc with subtitles, the subtitle may disappear when you press FAST PLAY or SLOW PLAY button.


# **Enjoying Movies**

# Adjusting the Playback Picture (CUSTOM PICTURE MODE)

DVDvideo DVDvR VCD DATA CD

# DATA DVD

You can adjust the video signal of the DVD, VIDEO CD or DATA CD/DATA DVD in JPEG format from the player to obtain the picture quality you want. Choose the setting that best suits the program you are watching. When you select "MEMORY," you can make further adjustments to each element of the picture (color, brightness, etc.).

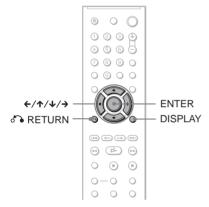


Press DISPLAY twice during playback.

The Control Menu appears.

2 Press ↑/↓ to select 🔳 (CUSTOM PICTURE MODE), then press ENTER.

> The options for "CUSTOM PICTURE MODE" appear.



# 3 Press **↑**/**↓** to select the setting you want.

The default setting is underlined.

- STANDARD: displays a standard picture.
- DYNAMIC 1: produces a bold dynamic picture by increasing the picture contrast and the color intensity.
- DYNAMIC 2: produces a more dynamic picture than DYNAMIC 1 by further increasing the picture contrast and color intensity.
- · CINEMA 1: enhances details in dark areas by increasing the black level.
- CINEMA 2: white colors become brighter and black colors become richer and the color contrast is increased.
- MEMORY: adjusts the picture in greater detail.

# 4 Press ENTER.

The selected setting takes effect.



When you watch a movie, "CINEMA 1" or "CINEMA 2" is recommended.

# Adjusting the picture items in "MFMORY"

You can adjust each element of the picture individually.

- PICTURE: changes the contrast
- · BRIGHTNESS: changes the overall brightness
- COLOR: makes the colors deeper or lighter
- · HUE: changes the color balance
- In step 3 of "Adjusting the Playback Picture," select "MEMORY" and press FNTFR.

The "PICTURE" adjustment bar appears.



# 2 Press ←/→ to adjust the picture contrast.

To go to the next or previous picture item without saving the current setting, press  $\uparrow \downarrow \downarrow$ 

# 3 Press ENTER.

The adjustment is saved and "BRIGHTNESS" adjustment bar appears.

4 Repeat step 2 and 3 to adjust "BRIGHTNESS," "COLOR" and "HUE."

# To turn off the display

Press RETURN or DISPLAY.

# Note


The "BRIGHTNESS" setting is not effective if you connect the player via the LINE OUT (VIDEO) or S VIDEO OUT jack and select "PROGRESSIVE AUTO" or "PROGRESSIVE VIDEO" by using the PROGRESSIVE button on the front panel.

# **Sharpening the Picture**

(SHARPNESS) DVDvideo DVDvR VCD

DATA CD DATA DVD

You can enhance the outlines of images to produce a sharper picture.

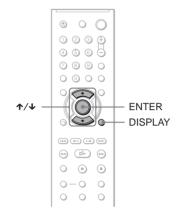


1 Press DISPLAY twice during playback.

The Control Menu appears.

2 Press ↑/↓ to select ☐☐☐☐ (SHARPNESS), then press ENTER.

The options for "SHARPNESS" appear.



- 3 Press ↑/↓ to select a level.
  - 1: enhances the outline.
  - 2: enhances the outline more than 1.
- 4 Press ENTER.

The selected setting takes effect.

To cancel the "SHARPNESS" setting Select "OFF" in step 3.


#### Note

This setting is not effective if you connect the player via the LINE OUT (VIDEO) or S VIDEO OUT jack and select "PROGRESSIVE AUTO" or "PROGRESSIVE VIDEO" by using the PROGRESSIVE button on the front panel.

# **Adjusting the Picture** Quality (BNR, MNR) DVDvideo

DVDvR VCD DATA CD DATA DVD

You can adjust the picture quality by "BNR" (Block Noise Reduction) or "MNR" (Mosquito Noise Reduction)

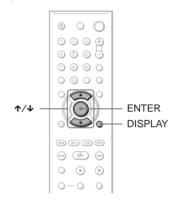

# Adjusting the BNR


The "BNR" function adjusts the picture quality by reducing the "block noise" or mosaic like patterns that appear on your TV screen.

1 Press DISPLAY twice during playback.

The Control Menu appears.

2 Press ↑/↓ to select [ BNR), then press ENTER.

The options for "BNR" appear.



# 3 Press **↑**/**↓** to select the setting.

- OFF: To cancel the "BNR" effect.
- ON: To turn on the "BNR" effect.

# 4 Press ENTER.

The disc plays with the setting you selected.

To cancel the "BNR" setting Select "OFF" in step 3.

#### To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.

#### Notes

- If the outlines of the images on your screen should become blurred, set "BNR" to "OFF."
- Depending on the disc or the scene being played, there may be no "BNR" effect, or it may be hard to discern.

# Adjusting the MNR

The "MNR" function adjusts the picture quality by reducing the faint noise appearing around the outlines of the images.


The noise reduction effects are automatically adjusted within each setting range according to the video bit rate and other factors.

1 Press DISPLAY twice during playback.

The Control Menu appears.

Press ↑/↓ to select [ MNR), then press ENTER.

The options for "MNR" appear.



# **3** Press **↑**/**↓** to select the setting.

- . OFF: To cancel the "MNR" effect.
- ON: To turn on the "MNR" effect.

# 4 Press ENTER.

The disc plays with the setting you selected.

# To cancel the "MNR" setting

Select "OFF" in step 3.

### To turn off the Control Menu


Press DISPLAY repeatedly until the Control Menu is turned off.

- If the outlines of the images on your screen should become blurred, set "MNR" to "OFF."
- Depending on the disc or the scene being played, there may be no "MNR" effect, or it may be hard to discern.

# Adjusting the Delay Between the Picture and Sound (AV SYNC)

DVDvideo DVDvR VCD

When the sound does not match the pictures on the screen, you can adjust the delay between the picture and sound.

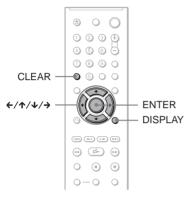


1 Press DISPLAY twice during playback.

The Control Menu appears.

2 Press ★/↓ to select [ [AV SYNC), then press ENTER.

The following display appears.



3 Press → to select "SET →", then press ENTER.

The "AV SYNC" adjustment bar appears.



4 Press → repeatedly to adjust the delay.

Each time you press  $\leftarrow/\rightarrow$ , the delay is adjusted by 10 milliseconds.

**5** Press ENTER.

The selected setting takes effect.

To reset the "AV SYNC" setting Press CLEAR in step 4.

- This function is not effective if you use the DIGITAL OUT (OPTICAL or COAXIAL) jack, and set "DOLBY DIGITAL" or "DTS" in AUDIO SETUP to "DOLBY DIGITAL" or "ON" respectively (page 67).
- This function is not effective if you connect a Dolby Digital or DTS-compliant device via the HDMI OUT jack, and set "DOLBY DIGITAL" or "DTS" in AUDIO SETUP to "DOLBY DIGITAL" or "ON" respectively (page 67).

**Enjoying MP3 Audio and JPEG Images** 

# **About MP3 Audio Tracks** and JPEG Image Files

MP3 is audio compression technology that satisfies the ISO/IEC MPEG regulations. JPEG is image compression technology. You can play DATA CDs/DATA DVDs that contain MP3 audio tracks or JPEG image files.

# DATA CDs/DATA DVDs that the player can play

You can play back DATA CDs (CD-ROMs/ CD-Rs/CD-RWs) or DATA DVDs (DVD-ROMs/DVD+RWs/DVD+Rs/DVD-RWs/ DVD-Rs) recorded in MP3 (MPEG-1 Audio Laver III) and JPEG format.

However, this player only plays DATA CDs whose logical format is ISO 9660 Level 1/ Level 2 or Joliet and DATA DVDs of Universal Disk Format (UDF).

Refer to the instructions supplied with the disc drives and the recording software (not supplied) for details on the recording format.

### Note

The player may not be able to play some DATA CDs/DATA DVDs created in the Packet Write format

# MP3 audio track or JPEG image file that the player can play

The player can play the following tracks and

- MP3 audio tracks with the extension ".MP3."
- JPEG image files with the extension ".JPEG" or ".JPG."
- JPEG image files that conform to the DCF\* image file format.
- \* "Design rule for Camera File system": Image standards for digital cameras regulated by JEITA (Japan Electronics and Information Technology Industries Association).

#### **Notes**


- The player will play any data with the extension ".MP3," ".JPG," or ".JPEG," even if they are not in MP3 or JPEG format. Playing these data may generate a loud noise which could damage your speaker system.
- The player does not conform to audio tracks in mp3PRO format.
- · Some JPEG files cannot be played.

# About playback order of albums, tracks and files

Albums play in the following order:

Structure of disc contents

Tree 2 Tree 3 Tree 1 Tree 4 Tree 5

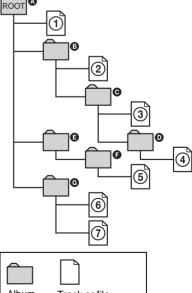

When you insert a DATA CD/DATA DVD and press , the numbered tracks (or files) are played sequentially, from (1) through (7). Any sub-albums/tracks (or files) contained within a currently selected album take priority over the next album in the same tree. (Example: **©** contains **D** so **(4)** is played before (5).)

When you press MENU and the list of album names appears (page 52), the album names are arranged in the following order:

 $\mathbf{A} \rightarrow \mathbf{B} \rightarrow \mathbf{O} \rightarrow \mathbf{O} \rightarrow \mathbf{G}$ . Albums that do not contain tracks (or files) (such as album (a) do not appear in the list.

### Ϋ́ Hints


- If you add numbers (01, 02, 03, etc.) to the front of the track/file names when you store the tracks (or files) in a disc, the tracks and files will be played in that order.
- · Since a disc with many trees takes longer to start playback, it is recommended that you create albums with no more than two trees.

#### **Notes**

- · Depending on the software you use to create the DATA CD/DATA DVD, the playback order may differ from the above illustration.
- The playback order above may not be applicable if there are more than 200 albums and 300 tracks/ files in each album.
- The player can recognize up to 200 albums (the player will count just albums, including albums that do not contain MP3 audio tracks and JPEG image files). The player will not play any albums beyond the 200th album.
- · Proceeding to the next or another album may take some time.

# **Playing MP3 Audio** Tracks or JPEG Image FI es DATA CD DATA DVD

You can play MP3 audio tracks and JPEG image files on DATA CDs (CD-ROMs/CD-Rs/CD-RWs) or DATA DVDs (DVD-ROMs/ DVD+RWs/DVD+Rs/DVD-RWs/DVD-Rs).

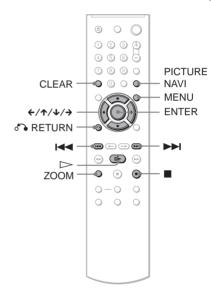

#### ヴ Hint

You can view the disc information while playing MP3 audio tracks (page 38).

- · DATA CDs recorded in KODAK Picture CD format automatically start playing when inserted.
- · If no MP3 audio track or JPEG image file is recorded on the DATA CD/DATA DVD, "No audio data" or "No image data" appears on the screen.

# Selecting an album

1 Press MENU.

The list of albums on the disc appears. When an album is being played, its title is shaded.



- 2 Press **↑**/**↓** to select the album you want to play.
- **3** Press ⊳.

Playback starts from the selected album. To select MP3 audio tracks, see "Selecting an MP3 audio track" (page 52).

To select JPEG image files, see "Selecting a JPEG image file" (page 53).

# To stop playback

Press ■.

To go to the next or previous page  $Press \rightarrow or \leftarrow$ .

# To turn on or off the display

Press MENU repeatedly.

# 🌣 Hint

Of the selected album, you can select to play only the MP3 audio tracks, JPEG image files or both, by setting "MODE (MP3, JPEG)" (page 54).

# Selecting an MP3 audio track

After step 2 of "Selecting an album," press ENTER.

The list of tracks in the album appears.



2 Press ↑/↓ to select a track and press FNTFR.

Playback starts from the selected track.

To stop playback

Press .

To go to the next or previous page  $Press \rightarrow or \leftarrow$ .

To return to the previous display Press & RETURN.

To go to the next or previous MP3 audio track

Press ► or during playback. You can select the first track of the next album by pressing ► during playback of the last track of the current album.

Note that you cannot return to the previous album by using I◀◀ and that you need to select the previous album from the album list.

# Selecting a JPEG image file

# 1 After step 2 of "Selecting an album," press PICTURE NAVI.

The image files in the album appear in 16 subscreens. A scroll box is displayed on the right.

1	2	3	4	
5	6	7	8	
9	10	11	12	
13	14	15	16	

To display the additional image, select the bottom images and press  $\Psi$ . To return to the previous image, select the top images and press  $\uparrow$ .

# 2 Press ←/↑/↓/→ to select the image you want to view, and press ENTER.

The selected image appears. Example



# To go to the next or previous JPEG image file

Press ← or → during playback. You can select the first file of the next album by pressing → during playback of the last file of the current album.


Note that you cannot return to the previous album by using  $\leftarrow$  and that you need to select the previous album from the album list.

### To rotate a JPEG image

Press ↑/↓ while viewing the image. Each time you press ↑, the image rotates counterclockwise by 90 degrees.

To return to normal view, press CLEAR. Note that the view also returns to normal if you press ←/→ to go to the next or previous image.

Example: when **↑** is pressed once.

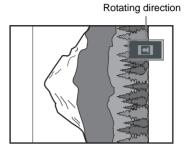

# To magnify a JPEG image (ZOOM)

Press ZOOM while viewing the image. You can enlarge the image up to four times the original size and scroll using  $\leftarrow/\uparrow/\downarrow/\rightarrow$ . To return to normal view, press CLEAR.

# ◆When pressed once (x2)

The image enlarges twice the original size.

# ◆When pressed twice (x4)

The image enlarges four times the original size.

# To stop viewing the JPEG image Press ■.

#### " Hints

- While viewing JPEG image files, you can set options such as "INTERVAL" (page 55), "EFFECT" (page 55) and "SHARPNESS" (page 46).
- You can view JPEG images files without MP3 audio by setting "MODE (MP3, JPEG)" to "IMAGE (JPEG)" (page 54).
- The date the picture was taken is displayed beside "DATE" in the Control Menu (page 13). Note that no date may appear depending on the digital camera.


#### Note

PICTURE NAVI does not work if "AUDIO (MP3)" is selected in "MODE (MP3, JPEG)" (page 54).

# Enjoying JPEG Images as a Slide Show

# DATA CD DATA DVD

You can play JPEG image files on a DATA CD or DATA DVD successively as a slide show.

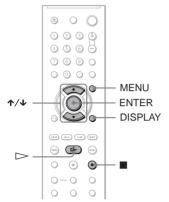

# 1 Press MENU.

The list of albums on the DATA CD/DATA DVD appears.



- 2 Press **↑**/**↓** to select an album.
- **3** Press  $\triangleright$ .

The JPEG images in the selected album start playing as a slide show.

# To stop playback Press ■.

### **Notes**


- The slide show stops when ↑/◆ or ZOOM is pressed. To resume the slide show, press ▷.
- This function does not work if "MODE (MP3, JPEG)" is set to "AUDIO (MP3)" (page 54).

# Viewing a slide show with sound (MODE (MP3, JPEG))

When JPEG image files and MP3 audio tracks are placed in the same album, you can enjoy a slide show with sound.

- Press DISPLAY during stop mode. The Control Menu appears.
- 2 Press ★/♣ to select Gam (MODE (MP3, JPEG)) and press ENTER.

  The options for "MODE (MP3, JPEG)" appear.



- 3 Press ★/↓ to select "AUTO" (default), and press ENTER.
  - AUTO: plays both the JPEG image files and MP3 audio tracks in the same album as a slide show.
  - AUDIO (MP3): plays only MP3 audio tracks continuously.
  - IMAGE (JPEG): plays only JPEG image files continuously.
- 4 Press MENU.

The list of albums on the DATA CD/DATA DVD appears.



- 5 Press ↑/↓ to select the album that contains both the MP3 audio tracks and JPEG images you want to play.
- 6 Press ⊳.

A slide show starts with sound.

#### Ϋ́ Hints

- To repeat both MP3 audio tracks and JPEG image files in a single album, repeat the same MP3 audio track or album when "MODE (MP3, JPEG)" is set to "AUTO." See "Playing repeatedly (Repeat Play)" (page 32) to repeat the track or album.
- The player recognizes a maximum of 200 albums regardless of the selected mode. Of each album, the player recognizes up to 300 MP3 audio tracks and 300 JPEG image files when "AUTO" is selected, 600 MP3 audio tracks when "AUDIO (MP3)" is selected, 600 JPEG image files when "IMAGE (JPEG)" is selected.

### **Notes**

- This function does not work if the MP3 audio tracks and JPEG image files are not placed in the same album.
- If playing time of JPEG image or MP3 audio is longer than the other, the longer one continues without sound or image.
- If you play large MP3 track data and JPEG image data at the same time, the sound may skip. It is recommended that you set the MP3 bit rate to 128 kbps or lower when creating the file. If the sound still skips, then reduce the size of the JPEG file.

# Setting the pace for a slide show (INTERVAL)

You can set the time the slides are displayed on the screen.

Press DISPLAY twice while viewing a JPEG image or when the player is in stop mode.

The Control Menu appears.

3 ( 1 2) 1 ( 4) 10/29/2006 NORMAL NORMAL FAST SLOW 1 SLOW 2

**3** Press  $\uparrow / \downarrow$  to select a setting.

The default setting is underlined.

- <u>NORMAL</u>: sets the duration to between 6 to 9 seconds.
- FAST: sets a duration shorter than NORMAL.

- SLOW 1: sets a duration longer than NORMAL.
- SLOW 2: sets a duration longer than SLOW 1.

# 4 Press ENTER.

#### Note


Some JPEG files, especially progressive JPEG files or JPEG files of 3,000,000 pixels or more, may take longer to display than others, which may make the duration seem longer than the setting you selected.

# Selecting the slides' appearance (EFFECT)

You can select the way the slides are displayed during a slide show.

- Press DISPLAY twice while viewing a JPEG image or when the player is in stop mode.
- 2 Press ↑/↓ to select then press ENTER.

The options for "EFFECT" appear.



# **3** Press **↑**/**↓** to select a setting.

The default setting is underlined.

- MODE 1: the image sweeps in from top to bottom.
- MODE 2: the image sweeps in from left to right.
- MODE 3: the image stretches out from the center of the screen.
- MODE 4: the images randomly cycle through the effects.
- MODE 5: the next image slides over the previous image.
- OFF: turns off this function.

# 4 Press ENTER.


# Using Various Additional Functions

# Locking Discs (custom Parental Control, Parental Control)

You can set two kinds of playback restrictions for a disc

- Custom Parental Control
   You can set playback restrictions so that the
   player will not play inappropriate discs.
- Parental Control
   Playback of some DVD VIDEOs can be
   limited according to a predetermined level
   such as the age of the users. Scenes may be
   blocked or replaced with different scenes.

The same password is used for both Parental Control and Custom Parental Control.

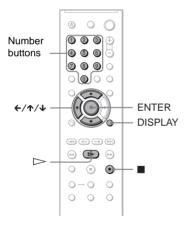

# Custom Parental Control


You can set the same Custom Parental Control password for up to 40 discs. When you set the 41st-disc, the first disc is canceled.

- 1 Insert the disc you want to lock. If the disc is playing, press ■ to stop playback.
- 2 Press DISPLAY while the player is in stop mode.

The Control Menu appears.

# 3 Press ↑/↓ to select (PARENTAL CONTROL), then press ENTER.

The options for "PARENTAL CONTROL" appear.



- 4 Press ★/♣ to select "ON →," then press ENTER.
  - ◆ If you have not entered a password The display for registering a new password appears.



Enter a 4-digit password using the number buttons, then press ENTER. The display for confirming the password appears.

♦ When you have already registered a password

The display for entering the password appears.

5 Enter or re-enter your 4-digit password using the number buttons, then press ENTER.

"Custom parental control is set." appears and then the screen returns to the Control Menu.

# To turn off the Custom Parental Control function

- Follow steps 1 to 3 of "Custom Parental Control."
- Press  $\uparrow/\downarrow$  to select "OFF  $\rightarrow$ ," then press ENTER.
- Enter your 4-digit password using the number buttons, then press ENTER.

# To play a disc for which Custom Parental Control is set

Insert the disc for which Custom Parental Control is set The "CUSTOM PARENTAL CONTROL" display appears.



Enter your 4-digit password using the number buttons, then press ENTER. The player is ready for playback.

If you forget your password, enter the 6-digit number "199703" using the number buttons when the "CUSTOM PARENTAL CONTROL" display asks you for your password, then press ENTER. The display will ask you to enter a new 4-digit password.

# **Parental Control (limited** playback) DVDvideo


Playback of some DVD VIDEOs can be limited according to a predetermined level such as the age of the users. The "PARENTAL CONTROL" function allows you to set a playback limitation level.

Press DISPLAY while the player is in stop mode.

The Control Menu appears.

2 Press **↑**/**↓** to select **⊕** (PARENTAL CONTROL), then press ENTER.

The options for "PARENTAL CONTROL" appear.



- 3 Press **↑**/**↓** to select "PLAYER →," then press ENTER.
  - ◆ If you have not entered a password The display for registering a new password appears.




Enter a 4-digit password using the number buttons, then press ENTER. The display for confirming the password appears.

 When you have already registered a password

The display for entering the password appears.


# 4 Enter or re-enter your 4-digit password using the number buttons, then press ENTER.

The display for setting the playback limitation level appears.



# 5 Press ★/◆ to select "STANDARD," then press ENTER.

The selection items for "STANDARD" are displayed.




# 6 Press ↑/↓ to select a geographic area as the playback limitation level, then press ENTER.

The area is selected.

When you select "OTHERS →," select and enter a standard code in the table on page 75 using the number buttons.


# 7 Press ★/◆ to select "LEVEL," then press ENTER.

The selection items for "LEVEL" are displayed.



# 8 Select the level you want using ↑/↓, then press ENTER.

Parental Control setting is complete.



The lower the value, the stricter the limitation

# To turn off the Parental Control function Set "LEVEL" to "OFF" in step 8.

# To play a disc for which Parental Control is set

- Insert the disc and press ▷.
   The display for entering your password appears.
- 2 Enter your 4-digit password using the number buttons, then press ENTER. The player starts playback.

#### Ϋ́ Hint

If you forget your password, remove the disc and repeat steps 1 to 3 of "Parental Control (limited playback)." When you are asked to enter your password, enter "199703" using the number buttons, then press ENTER. The display will ask you to enter a new 4-digit password. After you enter a new 4-digit password, replace the disc in the player and press . When the display for entering your password appears, enter your new password.

- When you play discs which do not have the Parental Control function, playback cannot be limited on this player.
- Depending on the disc, you may be asked to change the parental control level while playing the disc. In this case, enter your password, then change the level. If the Resume Play mode is canceled, the level returns to the previous level.

# Changing the password

Press DISPLAY while the player is in stop mode.

The Control Menu appears.

(PARENTAL CONTROL), then press ENTER.

The options for "PARENTAL CONTROL" appear.

3 Press ★/◆ to select "PASSWORD  $\rightarrow$ ," then press ENTER. The display for entering the password

appears.


- Enter your 4-digit password using the number buttons, then press ENTER.
- 5 Enter a new 4-digit password using the number buttons, then press ENTER.
- 6 To confirm your password, re-enter it using the number buttons, then press ENTER.

# If you make a mistake entering your password

Press ← before you press ENTER and input the correct number.

# **Controlling Your TV with** the Supplied Remote

You can control the sound level, input source. and power switch of your Sony TV with the supplied remote.

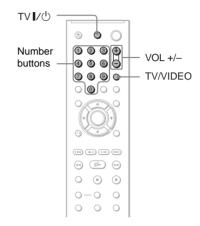

You can control your TV using the buttons below.

By pressing	You can
TV I/Ů	Turn the TV on or off
VOL +/-	Adjust the volume of the TV
TV/VIDEO	Switch the TV's input source between the TV and other input sources.

### Note

Depending on the connected unit, you may not be able to control your TV using all or some of the buttons on the supplied remote.

# Controlling other TVs with the remote

You can control the sound level, input source, and power switch of non-Sony TVs as well. If your TV is listed in the table below, set the appropriate manufacturer's code.

- While holding down TV I/(¹), press the number buttons to select your TV's manufacturer's code (see the table below).
- 2 Release TV I/(¹).

#### Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

Manufacturer	Code number
Sony	01 (default)
Daewoo	04, 22
Hitachi	02, 04
JVC	09
LG/Goldstar	04
MGA/Mitsubishi	04, 13
Panasonic	19
Philips	21
RCA	04, 10
Samsung	04, 20
Sharp	18
Toshiba	07, 18


- When you replace the batteries of the remote, the code number you have set may be reset to the default setting. Set the appropriate code number again.
- Depending on the connected unit, you may not be able to control your TV using all or some of the buttons on the supplied remote.

By using the Setup Display, you can make various adjustments to items such as picture and sound. You can also set a language for the subtitles and the Setup Display, among other

For details on each Setup Display item, see pages from 62 to 68.

### Note

Playback settings stored in the disc take priority over the Setup Display settings and not all of the functions described may work.

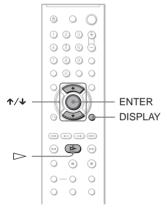


1 Press DISPLAY when the player is in stop mode.

The Control Menu appears.


2 Press **↑**/**↓** to select **a** (SETUP), then press ENTER.

The options for "SETUP" appear.

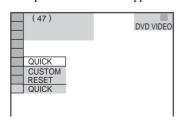

3 Press ★/¥ to select "CUSTOM," then press ENTER.


The Setup Display appears.



4 Press ★/◆ to select the setup item from the displayed list: "LANGUAGE SETUP," "SCREEN SETUP," "CUSTOM SETUP" or "AUDIO SETUP." Then press FNTFR.


The Setup item is selected. Example: "SCREEN SETUP"

Selected item

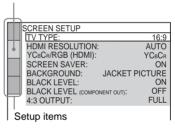

5 Press **↑**/**↓** to select an item, then press ENTER.


The options for the selected item appear. Example: "TV TYPE"



# 6 Press ★/↓ to select a setting, then press ENTER.

The setting is selected and setup is complete.

Example: "4:3 PAN SCAN"

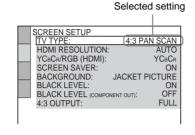

### To enter the Quick Setup mode

Select "QUICK" in step 3. Follow from step 5 of the Quick Setup explanation to make basic adjustments (page 23).

### To reset all of the "SETUP" settings

- 1 Select "RESET" in step 3 and press ENTER.
- 2 Select "YES" using ↑/↓. You can also quit the process and return to the Control Menu by selecting "NO" here.
- 3 Press ENTER.


All the settings explained on pages 62 to 68 return to the default settings. Do not press \( \begin{align\*} \lambda \cdot \cdot \) while resetting the player, which takes a few seconds to complete.

# **Setting the Display or Sound Track Language**

# (LANGUAGE SETUP)

"LANGUAGE SETUP" allows you to set various languages for the on-screen display or sound track.

Select "LANGUAGE SETUP" in the Setup Display. To use the display, see "Using the Setup Display" (page 61).



# ◆ OSD (On-Screen Display)

Switches the display language on the screen.

# ◆ MENU (DVD VIDEO only)

You can select the desired language for the disc's menu.

# ◆ AUDIO (DVD VIDEO only)

Switches the language of the sound track. When you select "ORIGINAL," the language given priority in the disc is selected.

# ◆ SUBTITLE (DVD VIDEO only)

Switches the language of the subtitle recorded on the DVD VIDEO.

When you select "AUDIO FOLLOW," the language for the subtitles changes according to the language you selected for the sound track.

#### Ϋ́ Hint

If you select "OTHERS →" in "MENU,"
"SUBTITLE," or "AUDIO," select and enter a
language code from "Language Code List" on
page 75 using the number buttons.

#### Note

If you select a language in "MENU," "SUBTITLE" or "AUDIO" that is not recorded on a DVD VIDEO, one of the recorded languages will be automatically selected.


# **Settings for the Display**

# (SCREEN SETUP)

Choose settings according to the TV to be connected.

Select "SCREEN SETUP" in the Setup Display. To use the display, see "Using the Setup Display" (page 61).

The default settings are underlined.




#### ◆ TV TYPF

Selects the aspect ratio of the connected TV (4:3 standard or wide).

16:9	Select this when you connect a wide-screen TV or a TV with a wide mode function.
4:3 LETTER BOX	Select this when you connect a 4:3 screen TV. Displays a wide picture with bands on the upper and lower portions of the screen.
4:3 PAN SCAN	Select this when you connect a 4:3 screen TV. Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit.

16:9



4:3 LETTER BOX



4:3 PAN SCAN



#### Note

Depending on the DVD, "4:3 LETTER BOX" may be selected automatically instead of "4:3 PAN SCAN" or vice versa.

#### HDMI RESOLUTION

Selects the type of video signals output from the HDMI OUT jack. When you select AUTO (default), the player outputs video signals of the highest resolution acceptable for your TV. If the picture is not clear, natural or to your satisfaction, try another option that suits the disc and your TV/projector, etc. For details, refer also to the instruction manual supplied with the TV/projector, etc.

<u>AUTO</u>	Normally, select this.
1920×1080i	Sends 1920×1080i video signals.
1280×720p	Sends 1280×720p video signals.
720×480p	Sends 720×480p video signals.

#### **Notes**

- · Even when a setting other than "AUTO" is selected and the connected TV cannot accept the resolution, the player automatically adjusts the video signals that are suitable for the TV.
- When the HDMI indicator on the front panel lights up, images from the S VIDEO OUT and LINE OUT (VIDEO) jacks are enlarged vertically. (Except when 720×480p is selected).

# ◆ YCBCR/RGB (HDMI)

Selects the type of HDMI signal output from HDMI OUT jack.

YC <sub>B</sub> C <sub>R</sub>	Outputs YCBCR signals.
RGB	Outputs RGB signals.

- · If the playback picture becomes distorted, set "YCBCR" to "RGB."
- · If the HDMI OUT jack is connected to equipment with a DVI jack, "RGB" signals will be automatically output even when you select "YCBCR".

#### **◆ SCRFFN SAVFR**

The screen saver image appears when you leave the player in pause or stop mode for 15 minutes, or when you play a CD or DATA CD (MP3 audio)/DATA DVD (MP3 audio) for more than 15 minutes. The screen saver will help prevent your display device from becoming damaged (ghosting). Press ▶ to turn off the screen saver.

<u>ON</u>	Turns on the screen saver.
OFF	Turns off the screen saver.

#### ◆ BACKGROUND

Selects the background color or picture on the TV screen when the player is in stop mode or while playing a CD or DATA CD (MP3 audio)/DATA DVD (MP3 audio).

JACKET PICTURE	The jacket picture (still picture) appears, but only when the jacket picture is already recorded on the disc (CD-EXTRA, etc.). If the disc does not contain a jacket picture, the "GRAPHICS" picture appears.
GRAPHICS	A preset picture stored in the player appears.
BLUE	The background color is blue.
BLACK	The background color is black.

#### **♦ BLACK LEVEL**

Selects the black level (setup level) for the video signals output from the jacks other than COMPONENT VIDEO OUT/HDMI OUT.

<u>ON</u>	Sets the black level of the output signal to the standard level.
OFF	Lowers the standard black level. Use this when the picture becomes too white.

#### **♦ BLACK LEVEL (COMPONENT OUT)**

Selects the black level (setup level) for the video signals output from the COMPONENT VIDEO OUT jacks. You cannot select this when the player outputs progressive signals (page 20).

<u>OFF</u>	Sets the black level of the output signal to the standard level. Normally select this position.
ON	Raises the standard black level. Use this setting when the picture appears too dark.

#### ◆ 4:3 OUTPUT

This setting is effective only when you set "TV TYPE" in "SCREEN SETUP" to "16:9."

Adjust this to watch 4:3 aspect ratio progressive signals. If you can change the aspect ratio on your progressive format (480p) compatible TV, change the setting on your TV, not the player. Note that this setting is effective only for HDMI connection or progressive signals output from the COMPONENT VIDEO OUT jacks.

FULL	Select this when you can change the aspect ratio on your TV.
NORMAL	Select this when you cannot change the aspect ratio on your TV. Shows a 16:9 aspect ratio signal with black bands on left and right sides of the image.




16:9 aspect ratio TV

# **Custom Settings** (CUSTOM SETUP)

Use this to set up playback related and other settings.

Select "CUSTOM SETUP" in the Setup Display. To use the display, see "Using the Setup Display" (page 61).

The default settings are underlined.



### ◆ AUTO POWER OFF

Switches the Auto Power Off setting on or off.

OFF	Switches this function off.
	The player enters standby mode when left in stop mode for more than 30 minutes.

# ◆ AUTO PLAY

Switches the Auto Play setting on or off. This function is useful when the player is connected to a timer (not supplied).

<u>OFF</u>	Switches this function off.
	Automatically starts playback when the player is turned on by a timer (not supplied).

#### DIMMFR

Adjusts the lighting of the front panel display.

BRIGHT	Makes the lighting bright.
DARK	Makes the lighting dark.
AUTO DARK	Makes the lighting dark if you do not operate the player or remote for a short while.

# ◆ PAUSE MODE (DVD VIDEO/DVD-VR mode only)

Selects the picture in pause mode.

<u>AUTO</u>	The picture, including subjects that move dynamically, is output with no jitter. Normally select this position.
FRAME	The picture, including subjects that do not move dynamically, is output in high resolution.

# ◆ TRACK SELECTION (DVD VIDEO only)

Gives the sound track which contains the highest number of channels priority when you play a DVD VIDEO on which multiple audio formats (PCM, DTS, or Dolby Digital format) are recorded.

<u>OFF</u>	No priority given.
AUTO	Priority given.

### **Notes**

- · When you set the item to "AUTO," the language may change. The "TRACK SELECTION" setting has higher priority than the "AUDIO" settings in "LANGUAGE SETUP" (page 62).
- If you set "DTS" to "OFF" (page 68), the DTS sound track is not played even if you set "TRACK SELECTION" to "AUTO."
- · If PCM, DTS, and Dolby Digital sound tracks have the same number of channels, the player selects PCM, DTS, and Dolby Digital sound tracks in this order.

# ◆ MULTI-DISC RESUME (DVD VIDEO/ VIDEO CD only)

Switches the Multi-disc Resume setting on or off. Resume playback can be stored in memory for up to 6 different DVD VIDEOs/ VIDEO CDs (page 27).

ON	Stores the resume setting in memory for up to 6 discs.
OFF	Does not store the resume setting in memory. Playback restarts at the resume point only for the current disc in the player.

#### Note

If you run Quick Setup, Multi-disc Resume settings stored in memory may return to the default settings.

# ◆ AUDIO (HDMI)

Selects the type of audio signal output from the HDMI OUT jack.

AUTO	Normally, select this. Outputs audio signals according to the "DIGITAL OUT" settings (page 67).
PCM	Converts Dolby Digital, or 96 kHz/24 bit PCM signals to 48 kHz/16 bit PCM.

#### Note


A loud noise (or no sound) will be output if you connect the player to a TV that is not compatible with DOLBY DIGITAL/DTS signals and "AUTO" is selected. In this case, select "PCM."

# Settings for the Sound (AUDIO SETUP)

"AUDIO SETUP" allows you to set the sound according to the playback and connection conditions.

Select "AUDIO SETUP" in the Setup Display. To use the display, see "Using the Setup Display" (page 61).

The default settings are underlined.



# ◆ AUDIO ATT (attenuation)

If the playback sound is distorted, set this item to "ON." The player reduces the audio output level.

This function affects the output of the LINE OUT L/R (AUDIO) jacks.

<u>OFF</u>	Normally, select this position.
	Select this when the playback sound from the speakers is distorted.

# ◆ AUDIO DRC (Dynamic Range Control) (DVD VIDEO/DVD-VR mode only)

Makes the sound clear when the volume is turned down when playing a DVD that conforms to "AUDIO DRC."

This function affects the output from the following jacks:

- -LINE OUT L/R (AUDIO) jacks
- DIGITAL OUT (OPTICAL or COAXIAL)/ HDMI OUT jack only when "DOLBY DIGITAL" is set to "D-PCM" (page 67).

STANDARD	Normally select this position.
TV MODE	Makes low sounds clear even if you turn the volume down.
WIDE RANGE	Gives you the feeling of being at a live performance.

#### **◆ AUDIO FILTER**

Selects the digital filter to reduce noise above 22.05 kHz (Sampling frequency (Fs) of the audio source is 44.1 kHz), 24 kHz (Fs is 48 kHz), or 48 kHz (Fs is above 96 kHz).

SHARP	Provides a wide frequency range and spatial feeling.
SLOW	Provides smooth and warm sound.

#### Note

There may be little effect by changing the digital filter depending on the disc or playback environment.

# ◆ DOWNMIX (DVD VIDEO/DVD-VR mode only)

Switches the method for mixing down to 2 channels when you play a DVD which has rear sound elements (channels) or is recorded in Dolby Digital format. For details on the rear signal components, see "Checking the audio signal format" (page 42). This function affects the output of the following jacks:

- -LINE OUT L/R (AUDIO) jacks
- DIGITAL OUT (OPTICAL or COAXIAL)/ HDMI OUT jack when "DOLBY DIGITAL" is set to "D-PCM" (page 67).

DOLBY SUR- ROUND	Normally, select this position. Multi-channel audio signals are output to 2 channels for enjoying surround sounds.
NORMAL	Multi-channel audio signals are downmixed to 2 channels for use with your stereo.

#### **♦ DIGITAL OUT**

Selects if audio signals are output via the DIGITAL OUT (OPTICAL or COAXIAL)/ HDMI OUT jack.

 Normally select this position. When you select "ON," see "Setting the digital output signal" for further settings.

OFF	The influence of the digital circuit upon the analog circuit is minimal. If you are using the HDMI OUT jack, PCM sound will be output depending on the connected equipment. If the signal is encrypted for copyright protection purposes, the signal is only output as 48 kHz/16 bit PCM.

# Setting the digital output signal

Switches the method of outputting audio signals when you connect a component such as an amplifier (receiver) or MD deck with a digital input jack.

For connection details, see page 21. Select "DOLBY DIGITAL," "DTS," and "48kHz/96kHz PCM" after setting "DIGITAL OUT" to "ON."

If you connect a component that is incompatible with the selected audio signal, a loud noise (or no sound) may be heard from the speakers, risking damage to your ears or speakers.

#### **Notes**

- The AV SYNC function (page 49) is not effective if you use the DIGITAL OUT (OPTICAL or COAXIAL) jack, and set "DOLBY DIGITAL" or "DTS" to "DOLBY DIGITAL" or "ON" respectively.
- The AV SYNC function (page 49) is not effective if you connect a Dolby Digital or DTS-compliant device via the HDMI OUT jack, and set "DOLBY DIGITAL" or "DTS" to "DOLBY DIGITAL" or "ON" respectively.

# ◆ DOLBY DIGITAL (DVD VIDEO/DVD-VR mode only)

Selects the type of Dolby Digital signal.

D-PCM	Select this when the player is connected to an audio component without a built-in Dolby Digital decoder. You can select whether the signals conform to Dolby Surround (Pro Logic) or not by making adjustments to the
	"DOWNMIX" item in
	"AUDIO SETUP" (page 67).

Select this when the player is connected to an audio
component with a built-in Dolby Digital decoder.

# Note

If the HDMI OUT jack is connected to equipment not compatible with DOLBY DIGITAL signals, the "D-PCM" signals will be automatically output even when you select "DOLBY DIGITAL."

#### ◆ DTS

Select the type of DTS audio signals.

OFF	Select this when the player is connected to an audio component without a built-in DTS decoder.
ON	Select this when the player is connected to an audio component with a built-in DTS decoder.

### Note

If the HDMI OUT jack is connected to equipment not compatible with DTS signals, the "OFF" signals will be automatically output even when you select "ON."

# ◆ 48kHz/96kHz PCM (DVD VIDEO only)

Selects the sampling frequency of the audio signal.

48kHz/16bit	The audio signals of DVD VIDEOs are always converted to 48kHz/16bit.
96kHz/24bit	All types of signals including 96kHz/24bit are output in their original format. However, if the signal is encrypted for copyright protection purposes, the signal is only output as 48kHz/16bit.

- The analogue audio signals from the LINE OUT L/R (AUDIO) jacks are not affected by this setting and keep their original sampling frequency level.
- If the HDMI OUT jack is connected to equipment not compatible with 96 kHz/24 bit signals, 48 kHz/16 bit PCM will be automatically output even when you select "96kHz/24bit."

### **Additional Information**

# **Troubleshooting**

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer (For customers in the USA only).

### **Power**

# The power is not turned on.

→ Check that the power cord is connected securely.

# **Picture**

# There is no picture/picture noise appears.

- → Re-connect the connecting cord securely.
- → The connecting cords are damaged.
- → Check the connection to your TV (page 17) and switch the input selector on your TV so that the signal from the player appears on the TV screen.
- → The disc is dirty or flawed.
- → If the picture output from your player goes through your VCR to get to your TV or if you are connected to a combination TV/ VIDEO player, the copy-protection signal applied to some DVD programs could affect picture quality. If you still experience problems even when you connect your player directly to your TV, try connecting your player to your TV's S VIDEO input (page 17).
- You have selected "PROGRESSIVE AUTO" or "PROGRESSIVE VIDEO" using the PROGRESSIVE button on the front panel (the PROGRESSIVE indicator lights up) even though your TV cannot accept the progressive signal. In this case, disconnect the HDMI cord from the player and then select "NORMAL (INTERLACE)" so that the
- PROGRESSIVE indicator turns off. → Even if your TV is compatible with

progressive format 480p signals, the image may be affected when you set the player to progressive format. In this case, select "NORMAL (INTERLACE)" using the PROGRESSIVE button on the front panel so that the PROGRESSIVE indicator turns off and the player is set to normal (interlace) format.

- The player is connected to an input device that is not HDCP compliant (the HDMI indicator on the front panel does not light up). See page 18.
- If the HDMI OUT jack is used for video output, changing the "HDMI RESOLUTION" setting in "SCREEN SETUP" may solve the problem (page 63). Connect the TV and the player using a video jack other than the HDMI OUT, and switch the TV's input to the connected video input so that you can see the on-screen displays. Change the "HDMI RESOLUTION" setting in "SCREEN SETUP," and switch the TV's input back to HDMI. If the picture still does not appear, repeat the steps and try other options.
- ➤ If the signal from the LINE OUT (VIDEO) or S VIDEO OUT jacks is distorted, change the "HDMI RESOLUTION" setting in "SCREEN SETUP" to "720 × 480p."

# There is no picture or the picture noise appears when connected to the HDMI OUT jack.

→ Try the following: ①Turn the player off and on again. (2) Turn the connected equipment off and on again. 3Disconnect and then connect the HDMI cord again.

# The picture does not fill the screen, even though the aspect ratio is set in "TV TYPE" under "SCREEN SETUP."

→ The aspect ratio of the disc is fixed on your DVD

#### Sound

#### There is no sound.

- → Re-connect the connecting cord securely.
- → The connecting cord is damaged.
- → The player is connected to the wrong input jack on the amplifier (receiver) (page 21).
- → The amplifier (receiver) input is not correctly set.
- → The player is in pause mode or in Slowmotion Play mode.
- → The player is in fast forward or fast reverse mode.
- → If the audio signal does not come through the DIGITAL OUT (OPTICAL or COAXIAL)/HDMI OUT jack, check the audio settings (page 67).
- → While playing a Super VCD on which the audio track 2 is not recorded, no sound will come out when you select "2:STEREO," "2:1/L," or "2:2/R."

→ The equipment connected to the HDMI OUT jack does not conform to the audio signal format, in this case set "AUDIO(HDMI)" in "CUSTOM SETUP" to "PCM" (page 66).

# No sound is output from the HDMI OUT jack

- → Try the following: ①Turn the player off and on again. ②Turn the connected equipment off and on again. ③Disconnect and then connect the HDMI cord again.
- → The HDMI OUT jack is connected to a DVI device (DVI jacks do not accept audio signals).

#### Sound distortion occurs.

→ Set "AUDIO ATT" in "AUDIO SETUP" to "ON" (page 66).

#### The sound volume is low.

- → The sound volume is low on some DVDs.

  The sound volume may improve if you set
  "AUDIO DRC" in "AUDIO SETUP" to
  "TV MODE" (page 66).
- → Set "AUDIO ATT" in "AUDIO SETUP" to "OFF" (page 66).

# **Operation**

#### The remote does not function.

- → The batteries in the remote are weak.
- → There are obstacles between the remote and the player.
- → The distance between the remote and the player is too far.
- → The remote is not pointed at the remote sensor on the player.

# The disc does not play.

- → The disc is turned over.
- Insert the disc with the playback side facing down.
- → The disc is skewed.
- → The player cannot play certain discs (page 8).
- → The region code on the DVD does not match the player.
- → Moisture has condensed inside the player (page 5).
- → The player cannot play a recorded disc that is not correctly finalized (page 9).

# The MP3 audio track cannot be played (page 51).

- → The DATA CD is not recorded in an MP3 format that conforms to ISO 9660 Level 1/
- → The DATA DVD is not recorded in MP3 format that conforms to UDF (Universal Disk Format)
- → The MP3 audio track does not have the extension ".MP3."
- → The data is not formatted in MP3 even though it has the extension ".MP3."
- → The data is not MPEG-1 Audio Layer III data.
- → The player cannot play audio tracks in mp3PRO format.
- → "MODE (MP3, JPEG)" is set to "IMAGE (JPEG)" (page 54).

# The JPEG image file cannot be played (page 51).

- → The DATA CD is not recorded in a JPEG format that conforms to ISO 9660 Level 1/ Level 2, or Joliet.
- → The DATA DVD is not recorded in JPEG format that conforms to UDF (Universal Disk Format).
- → The file has an extension other than "JPEG" or "JPG."
- → The image is larger than 3072 (width) × 2048 (height) in normal mode, or more than 3,300,000 pixels in progressive JPEG. (Some progressive JPEG files cannot be displayed even if the file size is within this specified capacity.)
- → The image does not fit the screen (the image is reduced).
- → "MODE (MP3, JPEG)" is set to "AUDIO (MP3)" (page 54).

# The MP3 audio tracks and JPEG image files start playing simultaneously.

→ "MODE (MP3, JPEG)" is set to "AUTO" (page 54).

# The album/track/file names are not displayed correctly.

→ The player can only display numbers and alphabet. Other characters are displayed as "\*".

# The disc does not start playing from the beginning.

- → Program Play, Shuffle Play, Repeat Play, or A-B Repeat Play is selected (page 30).
- → Resume play has taken effect (page 27).

# The player starts playing the disc automatically.

- → The disc features an auto playback function.
- → "AUTO PLAY" in "CUSTOM SETUP" is set to "ON" (page 65).

### Playback stops automatically.

While playing discs with an auto pause signal, the player stops playback at the auto pause signal.

# Some functions such as Stop, Search, Fast Play, Slow Play, Slow-motion Play, Repeat Play, Shuffle Play or Program Play cannot be performed.

→ Depending on the disc, you may not be able to do some of the operations above. Refer to the operating manual that comes with the disc.

# The language for the sound track cannot be changed.

- Try using the DVD's menu instead of the direct selection button on the remote (page 28).
- → Multilingual tracks are not recorded on the DVD being played.
- → The DVD prohibits the changing of the language for the sound track.

# The subtitle language cannot be changed or turned off.

- → Try using the DVD's menu instead of the direct selection button on the remote (page 28).
- → Multilingual subtitles are not recorded on the DVD being played.
- → The DVD prohibits the changing of subtitles.

# The angles cannot be changed.

- → Try using the DVD's menu instead of the direct selection button on the remote (page 28).
- Multi-angles are not recorded on the DVD being played.

- The angle can only be changed when the "indicator lights up on the front panel display (page 11).
- → The DVD prohibits changing of the angles.

# The player does not operate properly.

→ When static electricity, etc., causes the player to operate abnormally, unplug the player.

# 5 numbers or letters are displayed on the screen and on the front panel display.

→ The self-diagnosis function was activated. (See the table on page 72.)

# The disc tray does not open and "LOCKED" appears on the front panel display.

→ Child Lock is set (page 26).

# The disc tray does not open and "TRAY LOCKED" appears on the front panel display.

Contact your Sony dealer or local authorized Sony service facility.

# "Data error" appears on the TV screen when playing a DATA CD/DATA DVD.

- → The MP3 audio track/JPEG image file you want to play is broken.
- → The data is not MPEG-1 Audio Layer III data.
- → The JPEG image file format does not conform to DCF (page 50).
- The JPEG image file has the extension ".JPG" or ".JPEG," but is not in JPEG format.

# **Self-diagnosis Function**

# (When letters/numbers appear in the display)

When the self-diagnosis function is activated to prevent the player from malfunctioning, a five-character service number (e.g., C 13 50) with a combination of a letter and four digits appears on the screen and the front panel display. In this case, check the following table.



First three characters of the service number	Cause and/or corrective action
C 13	The disc is dirty or recorded in a format that this player cannot play (page 8).  → Clean the disc with a cleaning cloth or check its format (page 2).
C 31	The disc is not inserted correctly.  Re-insert the disc correctly.
E XX (xx is a number)	To prevent a malfunction, the player has performed the self-diagnosis function.  Contact your nearest Sony dealer or local authorized Sony service facility and give the 5-character service number. Example: E 61 10

# **Glossary**

# Album (page 50, 52)

A unit in which to store JPEG image files or MP3 audio tracks on a DATA CD/DATA DVD. ("Album" is an exclusive definition for this player.)

# Chapter (page 13)

Sections of a picture or a music feature that are smaller than titles. A title is composed of several chapters. Depending on the disc, no chapters may be recorded.

# Dolby Digital (page 21, 67)

Digital audio compression technology developed by Dolby Laboratories. This technology conforms to multi-channel surround sound. The rear channel is stereo and there is a discrete subwoofer channel in this format. Dolby Digital provides the same discrete channels of high quality digital audio found in "Dolby Digital" theater surround sound systems. Good channel separation is realized because all of the channel data is recorded discretely and little deterioration is realized because all channel data processing is digital.

# DTS (page 21, 68)

Digital audio compression technology that Digital Theater Systems, Inc. developed. This technology conforms to multi-channel surround sound. The rear channel is stereo and there is a discrete subwoofer channel in this format. DTS provides the same discrete channels of high quality digital audio. Good channel separation is realized because all of the channel data is recorded discretely and little deterioration is realized because all channel data processing is digital.

# DVD VIDEO (page 7)

A disc that contains up to 8 hours of moving pictures even though its diameter is the same as a CD.

The data capacity of a single-layer and single-sided DVD is 4.7 GB (Giga Byte), which is 7 times that of a CD. The data capacity of a double-layer and single-sided DVD is 8.5 GB, a single-layer and double-sided DVD is

9.4 GB, and double-layer and double-sided DVD is 17 GB.

The picture data uses the MPEG 2 format, a worldwide standard of digital compression technology. The picture data is compressed to about 1/40 (average) of its original size. The DVD also uses a variable rate coding technology that changes the data to be allocated according to the status of the picture. Audio information is recorded in a multi-channel format, such as Dolby Digital, allowing you to enjoy a more realistic audio presence.

Furthermore, various advanced functions such as the multi-angle, multilingual, and Parental Control functions are provided with the DVD.

# DVD-RW (page 7)

A DVD-RW is a recordable and rewritable disc that is the same size as a DVD VIDEO. The DVD-RW has two different modes: VR mode and Video mode. DVD-RWs created in Video mode have the same format as a DVD VIDEO, while discs created in VR (Video Recording) mode allow the contents to be programmed or edited.

# DVD+RW (page 7)

A DVD+RW (plus RW) is a recordable and rewritable disc. DVD+RWs use a recording format that is comparable to the DVD VIDEO format.

# File (page 50, 53)

A JPEG image recorded on a DATA CD/DATA DVD ("File" is an exclusive definition for this player.) A single file consist of a single image.

# Film based software, Video based software (page 20)

DVDs can be classified as Film based or Video based software. Film based DVDs contain the same images (24 frames per second) that are shown at movie theaters. Video based DVDs, such as television dramas or sit-coms, displays images at 30 frames/60 fields per second.

# HDMI (High-Definition Multimedia Interface)

HDMI is an interface that supports both video and audio on a single digital connection. The

HDMI connection carries standard to high definition video signals and multi-channel audio signals to AV components such as HDMI equipped TVs, in digital form without degradation.

Since the video signals are compatible with the current DVI (Digital Visual Interface) format, HDMI jacks can be connected to DVI jacks by way of an HDMI-DVI converter cord. The HDMI specification supports HDCP (High-bandwidth Digital Contents Protection), a copy protection technology that incorporates coding technology for digital video signals.

# Normal (Interlace) format (page 20)

Normal (Interlace) format shows every other line of an image as a single "field" and is the standard method for displaying images on television. The even number field shows the even numbered lines of an image, and the odd numbered field shows the odd numbered lines of an image.

# Progressive format (page 20)

Compared to the Interlace format that alternately shows every other line of an image (field) to create one frame, the Progressive format shows the entire image at once as a single frame. This means that while the Interlace format can show 30 frames/60 fields in one second, the Progressive format can show 60 frames in one second. The overall picture quality increases and still images, text, and horizontal lines appear sharper. This player is compatible with the 480 progressive format.

### Progressive JPEG

Progressive JPEGs are used mostly on the internet. They are different from other JPEGs in that they "fade in" gradually instead of being drawn from top to bottom when displayed on a browser. This lets you view the image while it is being downloaded.

# Title (page 11)

The longest section of a picture or music feature on a DVD, movie, etc., in video software, or the entire album in audio software.

# **Specifications**

System

Laser: Semiconductor laser Signal format system: NTSC

Audio characteristics

Frequency response: DVD VIDEO (PCM 96 kHz): 2 Hz to 44 kHz (±1.0 dB)/DVD VIDEO (PCM 48 kHz): 2 Hz to 22 kHz (±0.5 dB)/CD: 2 Hz to 20 kHz (±0.5 dB)

**Signal-to-noise ratio (S/N ratio):** 115 dB (LINE OUT L/R (AUDIO) jacks only)

Harmonic distortion: 0.003 %

**Dynamic range:** DVD VIDEO: 103 dB/

CD: 99 dB

Wow and flutter: Less than detected value

(±0.001% W PEAK)

# Outputs

(**Jack name:** Jack type/Output level/Load impedance)

LINE OUT (AUDIO): Phono jack/2 Vrms/ 10 kilohms

**DIGITAL OUT (OPTICAL):** Optical output jack/–18 dBm (wave length 660 nm)

**DIGITAL OUT (COAXIAL):** Phono jack/ 0.5 Vp-p/75 ohms

**HDMI OUT:** Type A (19 pin)

COMPONENT VIDEO OUT(Y, PB, PR):

Phono jack/Y: 1.0 Vp-p/P<sub>B</sub>, P<sub>R</sub>: interlace\* $^1$  = 0.648 Vp-p, progressive or interlace\* $^2$  = 0.7 Vp-p/75 ohms

\*1 BLACK LEVEL (COMPONENT OUT) is ON \*2 BLACK LEVEL (COMPONENT OUT) is OFF

LINE OUT (VIDEO): Phono jack/1.0 Vp-p/75 ohms

**S VIDEO OUT:** 4-pin mini DIN/Y: 1.0 Vp-p, C: 0.286 Vp-p/75 ohms

#### General

Power requirements:

120 V AC, 60 Hz

Power consumption: 12 W Dimensions (approx.):

 $430 \times 43 \times 237$  mm (width/height/depth)

incl. projecting parts **Mass (approx.):** 1.92 kg

Operating temperature: 5 °C to 35 °C Operating humidity: 25 % to 80 %

### Supplied accessories

See page 16.

Specifications and design are subject to change without notice.

# **Language Code List**

For details, see pages 41, 44, 62.

The language spellings conform to the ISO 639: 1988 (E/F) standard.

Code Language	Code Language	Code Language	Code Language
1027 Afar	1183 Irish	1347 Maori	1507 Samoan
1028 Abkhazian	1186 Scots Gaelic	1349 Macedonian	1508 Shona
1032 Afrikaans	1194 Galician	1350 Malayalam	1509 Somali
1039 Amharic	1196 Guarani	1352 Mongolian	1511 Albanian
1044 Arabic	1203 Gujarati	1353 Moldavian	1512 Serbian
1045 Assamese	1209 Hausa	1356 Marathi	1513 Siswati
1051 Aymara	1217 Hindi	1357 Malay	1514 Sesotho
1052 Azerbaijani	1226 Croatian	1358 Maltese	1515 Sundanese
1053 Bashkir	1229 Hungarian	1363 Burmese	1516 Swedish
1057 Byelorussian		1365 Nauru	1517 Swahili
1059 Bulgarian	1235 Interlingua	1369 Nepali	1521 Tamil
1060 Bihari	1239 Interlingue	1376 Dutch	1525 Telugu
1061 Bislama	1245 Inupiak	1379 Norwegian	1527 Tajik
1066 Bengali;	1248 Indonesian	1393 Occitan	1528 Thai
Bangla	1253 Icelandic	1403 (Afan)Oromo	1529 Tigrinya
1067 Tibetan	1254 Italian	1408 Oriya	1531 Turkmen
1070 Breton	1257 Hebrew	1417 Punjabi	1532 Tagalog
1079 Catalan	1261 Japanese	1428 Polish	1534 Setswana
1093 Corsican	1269 Yiddish	1435 Pashto;	1535 Tonga
1097 Czech	1283 Javanese	Pushto	1538 Turkish
1103 Welsh	1287 Georgian	1436 Portuguese	1539 Tsonga
1105 Danish	1297 Kazakh	1463 Quechua	1540 Tatar
1109 German	1298 Greenlandic	1481 Rhaeto-	1543 Twi
1130 Bhutani	1299 Cambodian	Romance	1557 Ukrainian
1142 Greek	1300 Kannada	1482 Kirundi	1564 Urdu
1144 English	1301 Korean	1483 Romanian	1572 Uzbek
1145 Esperanto	1305 Kashmiri	1489 Russian	1581 Vietnamese
1149 Spanish	1307 Kurdish	1491 Kinyarwanda	1587 Volapük
1150 Estonian	1311 Kirghiz	1495 Sanskrit	1613 Wolof
1151 Basque	1313 Latin	1498 Sindhi	1632 Xhosa
1157 Persian	1326 Lingala	1501 Sangho	1665 Yoruba
1165 Finnish	1327 Laothian	1502 Serbo-	1684 Chinese
1166 Fiji	1332 Lithuanian	Croatian	1697 Zulu
1171 Faroese	1334 Latvian;	1503 Singhalese	
1174 French	Lettish	1505 Slovak	
1181 Frisian	1345 Malagasy	1506 Slovenian	1703 Not specified

# **Parental Control Area Code List**

For details, see page 57.

Code Area Code Area	Code Area
2044 Argentina         2165 Finland         2362 Mexico           2047 Australia         2174 France         2376 Netherl           2046 Austria         2109 Germany         2390 New Ze           2057 Belgium         2248 India         2379 Norway           2070 Brazil         2238 Indonesia         2427 Pakista           2079 Canada         2254 Italy         2424 Philippi           2090 Chile         2276 Japan         2436 Portuga           2092 China         2304 Korea         2489 Russia           2115 Denmark         2363 Malaysia         2501 Singap	rlands 2499 Sweden ealand 2086 Switzerland y 2528 Thailand an 2184 United ines Kingdom al

# Index

Numerics 16:9 63 4:3 LETTER BOX 63 4:3 PAN SCAN 63 48kHz/96kHz PCM 68 5.1 Channel Surround 22  A A-B REPEAT 33 ADVANCE 26 ALBUM 36 Album 50, 72 ANGLE 44 AUDIO 41, 62 AUDIO ATT 66 AUDIO DRC 66 AUDIO FILTER 67 AUDIO SETUP 66 AUTO PLAY 65 AUTO POWER OFF 65 AV SYNC 49  B BACKGROUND 64 Batteries 16 BLACK LEVEL 64 BLACK LEVEL (COMPONENT OUT) 64 BNR 47	Front panel display 11 Setup Display 61 DOLBY DIGITAL 41, 67, 72 DOWNMIX 67 DTS 41, 68, 72 DVD 7, 25, 72 DVD+RW 7, 26, 73 DVD's menu 28 DVD-RW 7, 28, 73  E EFFECT 55 F Fast forward 34 FAST PLAY 26 Fast reverse 34 FILE 36 File 73 Film based software 20, 73 Freeze Frame 35 Front panel display 11 H Handling discs 2 HDMI AUDIO (HDMI) 66 HDMI 73 HOBII RESOLUTION 63	On-screen display Control Menu Display 13 Setup Display 61 ORIGINAL 28 ORIGINAL 28 ORIGINAL/PLAY LIST 28 OSD 62  P PARENTAL CONTROL 56 PAUSE MODE 65 PBC Playback 29 PICTURE NAVIGATION 37, 53 PLAY LIST 28 PROGRAM 30 Program Play 30 PROGRESSIVE AUTO 20 Progressive format 73 PROGRESSIVE VIDEO 20  Q QUICK 62 Quick Setup 23, 62  R Remote 12, 16, 59 REPEAT 32 Repeat Play 32 PRIMA A 20
C CD 8, 25 CHAPTER 35 Chapter 72 CHAPTER VIEWER 37 Checking the audio signal format 42 Child Lock 26 Connecting 17 Continuous play CD/VIDEO CD 25 DVD 25 Control Menu 13 CUSTOM 61 CUSTOM PARENTAL CONTROL 56 CUSTOM PICTURE MODE 45 CUSTOM SETUP 65  D DATA CD 7, 50 DATA DVD 7, 50 DATA DVD 7, 50 DATA DVD 7, 50 DATE 53 DIGITAL OUT 67 Digital output 67 DIMMER 65 Display Control Menu Display 13	INDEX 36 Interlace format 73 INTERVAL 55  J JPEG 7, 50  L LANGUAGE SETUP 62 Locating a specific point by watching the TV screen 34  M MEMORY 45 MENU 62 MNR 48 MODE (MP3, JPEG) 54 MP3 7, 50 MULTI-DISC RESUME 27, 65  N NORMAL (INTERLACE) 20 Normal (Interlace) format 73	REPLAY 26 RESET 62  S Scan 34 SCENE 35 SCREEN SAVER 64 SCREEN SETUP 63 Searching 34 SETUP 61 Setup Display 61 SHARPNESS 46 SHUFFLE 32 Shuffle Play 32 Slide Show 54 SLOW PLAY 26 Slow-motion Play 35 Speakers Hooking up 21 SUBTITILE 44, 62 Surround 42  T TIME/TEXT 38 TITLE 35 Title 73 TITLE VIEWER 37 TOP MENU 28 TRACK 36 Track 11

TRACK SELECTION 65 TRACK VIEWER 37 Troubleshooting 69 TV TYPE 63 TVS (TV Virtual Surround) 42

# U

Usable discs 8

### ۷

Video based software 20, 73 VIDEO CD 7, 25

# Ζ

ZOOM 26, 53



Printed on 100% recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink.



2-662-865-11 (2)