



Sprint PCS Vision® Phone LX350  
by LG®



Model LX350

## Phone User Guide

- Setting Up Service
- Phone Basics
- Sprint Service Features
- Safety and Warranty



by LG  
Sprint PCS Vision® Phone LX350  
Model LX350

Tips to help you  
get the most out  
of your phone

Sprint Pocket Reference Guide



Sprint PCS service not included. Depending on the plan and options selected, additional charges may apply. Coverage is not available everywhere.

For complete phone and warranty information visit  
[www.sprint.com](http://www.sprint.com)

©2006 Sprint Nextel. All rights reserved.  
SPRINT, the "Going Forward" logo and other trademarks are trademarks of Sprint Nextel. All other marks are held by their respective owners.

### Sprint PCS Vision®

#### Connecting With Sprint PCS Vision®

1. From standby mode, press Web (Left Softkey) to launch your Sprint PCS Vision connection.
2. Use your navigation key to scroll through the Sprint PCS Vision Home page. When you find what you're looking for, just highlight it and press to go to that page. For more information, sign on to [www.sprint.com](http://www.sprint.com).

#### Pictures

##### Taking Pictures

1. Press the camera hot key on the right side of the device to activate Camera Mode.
2. Using the Main LCD as a viewfinder, aim the camera at your subject.

3. Press to take the picture.

4. Press Options to send, upload, erase or assign pictures or press to return to the Camera Mode.

##### Viewing Pictures

1. Press once to access the Pictures main menu.
2. Navigate down to My Albums and press.
3. Select either In Phone or Online Albums and press.

4. Use navigation key to view your pictures. In reviewing pictures, you can view pictures to the Picture Mail Web site, assign picture Caller ID, add captions and more.

### Using SMS Text Messaging

#### Sending SMS Text Messages

1. From standby mode, press and select Messaging.

2. Select Send Message then Text Message.

3. Enter your recipient's mobile phone number or email address or select a recipient from your Contacts. (You may enter up to 25 recipients).

4. Press Next when you are finished adding recipients.

5. Compose a message or use the canned (pre-set) messages, recent messages and/or smileys (icons).

• Use Mode to select an input mode.

- Press Mode to select a category, highlight the desired message or emotion and press.

6. Press when you have finished entering the message.

7. Review the message, select your delivery options (such as callback number or priority) and press Send to send the text message.

#### Accessing SMS Text Messages

To read an incoming text message:

- When you receive a message, it will automatically appear on your phone's screen. Use your navigation key to scroll down and view the entire message.

To reply to a text message:

1. While the message is open, select Reply.
2. Follow steps 5-7 in "Sending SMS Text Messages" above.

### Using the Phone Book

#### Saving Phone Numbers

- To save a number in your phone's internal phone book:
1. From standby mode, use the keypad to enter a phone number.

2. Scroll down to Save and press.

3. Select either New Entry or Existing Entry.

4. Select a Phone Type Label (Mobile, Home, Office).

5. Enter a name and press.

6. Press (Done) to save the entry.

#### Calling From Your Phone Book

To place a call from your phone book:

1. Press the key.

2. Scroll to the right to the Contacts icon.

3. Press.

4. Select Find/Add entry.

5. Highlight the listing you want to call and press.

### Using Call History

#### Making a Call From Call History

Call History keeps track of the last 50 phone calls you've made, received or missed. From your Call History lists, you can redial calls, return calls, save numbers to your Phone Book and more.

To make a call from your Call History list:

1. From standby mode, press and select Call History.
2. Select the Call History list you're looking for (Outgoing, Incoming or Missed) and press.
3. Highlight the listing you want to call and press.

### Sprint PCS Voicemail

#### Setting Up Your Sprint PCS Voicemail

1. Press and hold. You will be connected to the Sprint PCS Voicemail system.

2. Follow the system prompts to create your passcode and record your greeting and name announcement.

#### Retrieving Your Sprint PCS Voicemail Messages

From your Sprint PCS Phone: When you have new voicemail messages waiting, your phone's display will notify you. Press and hold to dial your voicemail box. Follow the system prompts to retrieve your messages.

From another phone: Dial your Sprint PCS phone number. When your voicemail answers, press and enter your passcode to access your voicemail box. Follow the system prompts to retrieve your messages.

### Calling Options

#### Call Waiting

To respond to an incoming call while you're on a call:

1. The screen displays the incoming call and a tone is played. Press to accept the call and place your existing call on hold.

2. To switch between callers, press.

3. When finished, press.



## **Phone User Guide**

**Sprint PCS Vision® Phone  
LX350 by LG®**

**[www.sprint.com](http://www.sprint.com)**

© 2006 Sprint Nextel. All rights reserved. No reproduction in whole or in part without prior written approval. Sprint, the "Going Forward" logo, and other trademarks are trademarks of Sprint Nextel.

Printed in the U.S.A.

# Table of Contents

---

|                                              |             |
|----------------------------------------------|-------------|
| <b>Welcome to Sprint</b>                     | <b>.i</b>   |
| <b>Introduction</b>                          | <b>.ii</b>  |
| <b>Your Phone's Menu</b>                     | <b>.iii</b> |
| <b>Section 1: Getting Started</b>            | <b>.1</b>   |
| <b>1A. Setting Up Service</b>                | <b>.2</b>   |
| Getting Started With Sprint PCS Service      | .3          |
| Setting Up Your Voicemail                    | .4          |
| Sprint PCS Account Passwords                 | .5          |
| Getting Help                                 | .6          |
| <b>Section 2: Your Phone</b>                 | <b>.9</b>   |
| <b>2A. Your Phone: The Basics</b>            | <b>.10</b>  |
| Front View of Your Phone                     | .11         |
| Viewing the Display Screen                   | .14         |
| Features of Your Phone                       | .16         |
| Turning Your Phone On and Off                | .18         |
| Using Your Phone's Battery and Charger       | .19         |
| Navigating Through Phone Menus               | .22         |
| Displaying Your Phone Number                 | .23         |
| Making and Answering Calls                   | .23         |
| Entering Text                                | .35         |
| <b>2B. Controlling Your Phone's Settings</b> | <b>.40</b>  |
| Sound Settings                               | .41         |
| Display Settings                             | .44         |
| Location Settings                            | .49         |
| Messaging Settings                           | .50         |
| Airplane Mode                                | .54         |
| TTY Use With Sprint PCS Service              | .55         |
| Phone Setup Options                          | .57         |
| <b>2C. Setting Your Phone's Security</b>     | <b>.60</b>  |
| Accessing the Security Menu                  | .61         |

|                                                      |           |
|------------------------------------------------------|-----------|
| Using Your Phone's Lock Feature .....                | 61        |
| Using Special Numbers .....                          | 63        |
| Erasing the Contacts List .....                      | 63        |
| Restricting Your Phone .....                         | 64        |
| Resetting Your Phone .....                           | 65        |
| Updating Your Picture Mail Profile .....             | 65        |
| Security Features for Sprint PCS Vision® .....       | 66        |
| Selective Call Block .....                           | 67        |
| <b>2D. Controlling Your Roaming Experience .....</b> | <b>68</b> |
| Understanding Roaming .....                          | 69        |
| Setting Your Phone's Roam Mode .....                 | 71        |
| Using Call Guard .....                               | 72        |
| Using Data Roam Guard .....                          | 73        |
| <b>2E. Managing Call History .....</b>               | <b>74</b> |
| Viewing History .....                                | 75        |
| Call History Options .....                           | 76        |
| Making a Call From Call History .....                | 77        |
| Saving a Phone Number From Call History .....        | 77        |
| Prepending a Phone Number From Call History .....    | 78        |
| Erasing Call History .....                           | 79        |
| <b>2F. Using Contacts .....</b>                      | <b>80</b> |
| Adding a New Contacts Entry .....                    | 81        |
| Finding Contacts Entries .....                       | 82        |
| Contacts Entry Options .....                         | 83        |
| Adding a Phone Number to a Contacts Entry .....      | 84        |
| Editing a Contacts Entry's Phone Number .....        | 85        |
| Assigning Speed Dial Numbers .....                   | 85        |
| My Information .....                                 | 86        |
| Editing a Contacts Entry .....                       | 87        |
| Selecting a Ringer Type for an Entry .....           | 87        |
| Wireless Backup .....                                | 88        |
| Dialing Sprint PCS Services .....                    | 89        |

|                                                    |            |
|----------------------------------------------------|------------|
| <b>2G. Using the Phone's Calendar and Tools</b>    | <b>90</b>  |
| Using Your Phone's Calendar                        | 91         |
| Using Your Phone's Alarm Clock                     | 95         |
| Using Your Phone's Notepad                         | 96         |
| Using Your Phone's Tools                           | 96         |
| <b>2H. Using Your Phone's Voice Services</b>       | <b>98</b>  |
| Managing Voice Memos                               | 99         |
| Automatic Speech Recognition (ASR)                 | 100        |
| <b>2I. Using Your Phone's Built-in Camera</b>      | <b>101</b> |
| Taking Pictures                                    | 102        |
| Storing Pictures                                   | 109        |
| Recording Videos                                   | 112        |
| Storing Videos                                     | 114        |
| Viewing and Sending Sprint PCS® Picture Mail       | 115        |
| Managing Sprint PCS Picture Mail                   | 121        |
| <b>2J. Using Bluetooth</b>                         | <b>129</b> |
| Turning Bluetooth On and Off                       | 130        |
| Using the Bluetooth Settings Menu                  | 131        |
| Bluetooth Profiles                                 | 133        |
| Pairing Bluetooth Devices                          | 134        |
| <b>Section 3: Sprint PCS Service Features</b>      | <b>137</b> |
| <b>3A. Sprint PCS Service Features: The Basics</b> | <b>138</b> |
| Using Voicemail                                    | 139        |
| Using SMS Text Messaging                           | 147        |
| Using VoiceSMSMessaging                            | 150        |
| Using Caller ID                                    | 152        |
| Responding to Call Waiting                         | 153        |
| Making a Three-Way Call                            | 154        |
| Using Call Forwarding                              | 155        |
| <b>3B. Sprint PCS Vision®</b>                      | <b>156</b> |
| Sprint PCS Vision Applications                     | 157        |
| Getting Started With Sprint PCS Vision             | 158        |
| Accessing Messaging                                | 164        |

|                                                          |            |
|----------------------------------------------------------|------------|
| Downloading Premium Services Content .....               | 169        |
| Exploring the Web .....                                  | 173        |
| Sprint PCS Vision FAQs .....                             | 178        |
| Using Your Sprint PCS Phone as a Modem .....             | 180        |
| <b>3C. Sprint PCS® Voice Command .....</b>               | <b>182</b> |
| Getting Started With Sprint PCS Voice Command .....      | 183        |
| Creating Your Own Address Book .....                     | 184        |
| Making a Call With Sprint PCS Voice Command .....        | 185        |
| Accessing Information Using Sprint PCS Voice Command ... | 186        |
| <b>Section 4: Safety and Warranty Information .....</b>  | <b>187</b> |
| <b>4A. Important Safety Information .....</b>            | <b>188</b> |
| General Precautions .....                                | 189        |
| Maintaining Safe Use of and Access to Your Phone .....   | 189        |
| Using Your Phone With a Hearing Aid Device .....         | 192        |
| Caring for the Battery .....                             | 193        |
| Radiofrequency (RF) Energy .....                         | 194        |
| Owner's Record .....                                     | 196        |
| Phone Guide Proprietary Notice .....                     | 196        |
| <b>4B. Manufacturer's Warranty .....</b>                 | <b>197</b> |
| Manufacturer's Warranty .....                            | 198        |



# Welcome to Sprint

---

**Sprint is committed to bringing you the best wireless technology available.** We built our complete, nationwide network from the ground up, so all your services – whether it's Voicemail, Caller ID, email, or Sprint PCS® Picture Mail – will work the same wherever you go on the Nationwide Sprint PCS Network.

This guide will familiarize you with our technology and your new phone through simple, easy-to-follow instructions. It's all right here – from setting up your account passwords and voicemail to using the most advanced features of Sprint PCS Vision®.

**Welcome and thank you for choosing Sprint.**



# Introduction

---

This **Phone Guide** introduces you to Sprint PCS Service and all the features of your new phone. It's divided into four sections:

- ◆ **Section 1:** Getting Started
- ◆ **Section 2:** Your Phone
- ◆ **Section 3:** Sprint PCS Service Features
- ◆ **Section 4:** Safety and Warranty Information

Throughout this guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new phone and service. The Table of Contents and Index will also help you quickly locate specific information.

You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, simply locate that section in the Table of Contents and go directly to that page. Follow the instructions in that section, and you'll be ready to use your phone in no time.

---

**Phone Guide Note:** Due to updates in phone software, this printed guide may not be the most current version for your phone. Visit [www.sprint.com](http://www.sprint.com) and sign on to **My PCS** to access the most recent version of the phone guide.

---

---

**WARNING:** Please refer to the **Important Safety Information** section on page 188 to learn about information that will help you safely use your phone. Failure to read and follow the Important Safety Information in this phone guide may result in serious bodily injury, death, or property damage.

---

# Your Phone's Menu

---

The following list outlines your phone's menu structure. For more information about using your phone's menus, see "Navigating Through Phone Menus" on page 22

## 1. Call History

1. Missed Calls
2. Incoming Calls
3. Outgoing Calls
4. Recent Calls
5. Delete History

1. Missed Calls / 2. Incoming Calls / 3. Outgoing Calls / 4. Recent Calls / 5. All Calls

## 2. Contacts

1. Find/Add Entry
2. Groups
3. Speed Dials
4. My Information
5. Wireless Backup
6. Services

1. Subscribe / 2. Alert / 3. Learn More / 4. Customer Service / 2. Dir Assistance / 3. Account Info / 4. Sprint Operator / 5. Voice Command

## 3. Messaging

1. Send Message

1. Text Message / 2. Picture Mail / 3. VoiceSMS

2. Text Messages

1. Inbox / 2. Sent / 3. Outbox / 4. Draft / 5. Edit Folder / 6. Send Message / Inbox/Sent Mail/Saved Mail/Pending

3. Picture Mail

4. VoiceSMS

5. Chat & Dating

6. IM & Email

1. PCS Mail / 2. AOL / 3. MSN / 4. Yahoo! / 5. Earthlink / 6. Other

7. Voicemail

1. Call Voicemail / 2. Voicemail Details / 3. Clear Icon

8. Premium Content

## 4. Pictures

1. Camera

2. Camcorder

3. Picture Mail

4. My Albums

5. PictBridge

6. Order Prints

7. Account Info

- Inbox/Sent Mail/Saved Mail/Pending / In Phone/Online Albums

## 5. My Content

Games

Get New/My Content Manager/2Fast  
2Furious/Midnight Pool/Ms. PAC-MAN  
DEMO by Namco/Tetris Demo/World  
Poker Tour Demo

Ringers

Get New/My Content Manager

Screen Savers

Get New/My Content Manager/  
Screen Saver Preview

Applications

Get New/My Content Manager/  
Bottomline Pro Trial/MobiTV Trial/  
ToneMaker

IM & Email

Get New/My Content Manager

Call Tones

<Options>

Memory Status/Get New/My Content  
Manager

## 6. Web

1. Launch

## 7. Bluetooth

1. Add Device

2. Trusted Devices

3. Supported Services

Audio/Dial-up Networking/  
Send vCard/vCalendar (OPP)

4. Settings

1. On/Off / 2. DUN Service / 3. Visibility /  
4. Bluetooth Info

## 8. Tools

1. Scheduler

2. Alarm Clock

1. Alarm 1 / 2. Alarm 2 / 3. Alarm 3 /  
4. Quick Alarm

3. Voice Memo

4. Notepad

5. Ez Tip Calculator

6. Calculator

7. World Clock

## 9. Settings

1. Display

1. Greeting

2. Incoming Calls

3. Screen Saver

4. Menu Styles

5. Skins

6. Clock & Calendar

Custom/Off

1. Caller ID / 2. No Caller ID / 3. Roaming

1. Main Display / 2. Sub Display

Grid/List

Gray/Blue/Mint/Red

1. Normal Clock / 2. Analog Clock /

3. Digital Clock / 4. Dual Clock /

5. Calendar

- |                                           |                                                                                        |
|-------------------------------------------|----------------------------------------------------------------------------------------|
| 7. Font Size                              | 1. Message / 2. Browser / 3. Notepad                                                   |
| 8. Backlight                              | 1. Main LCD / 2. Sub LCD / 3. Keypad                                                   |
| 9. Power Save Mode                        | Off/30 Seconds/60 Seconds/<br>90 Seconds                                               |
| 0. Status Light                           | On/Off                                                                                 |
| 2. Sounds                                 |                                                                                        |
| 1. Ringers                                | 1. Caller ID / 2. No Caller ID / 3. Roaming                                            |
| 2. Key Tones                              | Short Tones/Long Tones                                                                 |
| 3. Volume                                 |                                                                                        |
| 1. Ringer                                 | Silence All/Off/Vibrate/Low/Med Low/<br>Med/High Med/High/High + Vib                   |
| 2. Earpiece                               | Low/Med Low/Med/High Med/High                                                          |
| 3. Key Beep                               | Off/Low/Med Low/Med/High Med/<br>High                                                  |
| 4. Application                            | Off/Low/Med Low/Med/High Med/<br>High                                                  |
| 5. Power On/Off                           | Off/Low/Med Low/Med/High Med/<br>High                                                  |
| 4. Alerts                                 |                                                                                        |
| 1. Voicemail Alerts                       | Silent/Vib once/Vib & Sound/Custom/<br>1 Low beep/Low beeps/1 Loud beep/<br>Loud beeps |
| 2. Message Alerts                         | Silent/Vib once/Vib & Sound/Custom/<br>1 Low beep/Low beeps/1 Loud beep/<br>Loud beeps |
| 3. Service Change                         | On/Off                                                                                 |
| 4. Minute Beep                            | On/Off                                                                                 |
| 5. Call Connect                           | On/Off                                                                                 |
| 6. Signal Fade                            | On/Off                                                                                 |
| 3. PCS Vision                             |                                                                                        |
| 1. Enable PCS Vision (Disable PCS Vision) |                                                                                        |
| 2. Net Guard                              | On/Off                                                                                 |
| 3. Update Vision Profile                  |                                                                                        |
| 4. Roaming                                |                                                                                        |
| 1. Set Mode                               | Automatic/Sprint Only/Roaming Only                                                     |
| 2. Call Guard                             | On/Off                                                                                 |
| 3. Data Roam Guard                        | Always Ask/Never Ask Again                                                             |
| 5. Location                               | On/Off                                                                                 |
| 6. Messaging                              |                                                                                        |
| 1. Notification                           | Message & Icon/Icon Only                                                               |
| 2. Message Reminder                       | On/Off                                                                                 |

|                               |                                                                                          |
|-------------------------------|------------------------------------------------------------------------------------------|
| 3. Callback Number            | None/My Phone Number/Other                                                               |
| 4. Auto-Delete                | On/Off                                                                                   |
| 5. Signature                  | None/Custom                                                                              |
| 6. Preset Messages            |                                                                                          |
| 7. VoiceSMS Options           | 1. Speaker Phone / 2. From Name                                                          |
| 7. Bluetooth                  |                                                                                          |
| 1. On/Off                     | On/Off                                                                                   |
| 2. DUN Service                | Enabled/Disabled                                                                         |
| 3. Visibility                 | Hidden/Visible for 3 Min/<br>Always Visible                                              |
| 4. Bluetooth Info             |                                                                                          |
| 8. Wireless Backup            | Subscribe/Alert/Learn More                                                               |
| 9. Security [Enter Lock Code] |                                                                                          |
| 1. Lock Phone                 | Unlock/Lock Now/On Power Up                                                              |
| 2. Picture Mail               | 1. Lock Pictures / 2. Update Picture Mail<br>Profile                                     |
| 3. Change Lock Code           |                                                                                          |
| 4. Special Numbers            | 911/*2/Empty                                                                             |
| 5. Delete Contacts            | 1. Yes / 2. No                                                                           |
| 6. Restrict Calls             | Unlock/Except 911/Except Special #s/<br>Except Contacts                                  |
| 7. Selective Call Block       |                                                                                          |
| 8. Reset Phone                | 1. Yes / 2. No                                                                           |
| 0. Setup/Others               |                                                                                          |
| 1. Shortcuts                  | Left Navigation/Right Navigation/<br>Up Navigation/Down Navigation                       |
| 2. Answer Call                | Flip Open/Any Key / TALK Only                                                            |
| 3. Auto-Answer                | Off / Car-Kit/Headset                                                                    |
| 4. Dialing Match              | 1. Abbreviated Dialing / 2. Contacts<br>Match / 3. Speed Dial                            |
| 5. Text Entry                 | 1. Auto-Capital/2. Word Choice List/<br>3. Word Prediction/4. Word<br>Completion/5. Help |
| 6. Language                   | English/Español                                                                          |
| 7. TTY Mode                   | Enable TTY/Disable TTY                                                                   |
| 8. Airplane Mode              | On/Off                                                                                   |
| 9. Update Phone SW            |                                                                                          |
| *. Phone Info                 | 1. My Phone Number / 2. Version /<br>3. Icon Glossary / 4. Advanced                      |

## Section 1

# Getting Started



# Setting Up Service

---

### In This Section

---

- ◆ **Getting Started With Sprint PCS Service** (page 3)
  - ◆ **Setting Up Your Voicemail** (page 4)
  - ◆ **Sprint PCS Account Passwords** (page 5)
  - ◆ **Getting Help** (page 6)
- 

**Setting up service on your new phone is quick and easy.** This section walks you through the necessary steps to unlock your phone, set up your voicemail, establish passwords, and contact Sprint for assistance with your Sprint PCS Service.

# Getting Started With Sprint PCS Service

---

## Determining if Your Phone is Already Activated

If you purchased your phone at a Sprint Store, it is probably activated, unlocked, and ready to use. If you received your phone in the mail, it probably has been activated; all you need to do is unlock it.

If your phone is not activated, please refer to the activation card included with your phone.

## Unlocking Your Phone

To unlock your phone, follow these easy steps:

1. Press and hold  to turn the phone on.
2. Press **Unlock** (right softkey).

---

**Note:** To select a softkey, press the softkey button directly below the softkey text that appears at the bottom left and bottom right of your phone's display screen. Softkey actions change according to the screen you're viewing and will not appear if there is no corresponding action available.

---

3. Enter your four-digit lock code. (For security purposes, the code is not visible as you type.)

---

**Tip:** If you can't recall your lock code, try using the last four digits of either your Social Security number or wireless phone number or try 0000 or NATL (6285). If none of these work, call Sprint Customer Service at 1-888-211-4PCS (4727).

---



# Setting Up Your Voicemail

---

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as your phone is activated.

**To set up your voicemail:**

1. From standby mode, press and hold .
2. Follow the system prompts to:
  - Create your passcode
  - Record your name announcement
  - Record your greeting
  - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding , bypassing the need for you to enter your passcode)

---

## **Voicemail Passcode**

If you are concerned about unauthorized access to your voicemail account, Sprint recommends you enable your voicemail passcode.

---

For more information about using your voicemail, see “Using Voicemail” on page 139.

# Sprint PCS Account Passwords

As a Sprint PCS customer, you enjoy unlimited access to your personal account information, your voicemail account, and your Sprint PCS Vision account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

## Account Password

If you are the account owner, you'll have an account password to sign on to [www.sprint.com](http://www.sprint.com) and to use when calling Sprint Customer Service. Your default account password is the last four digits of your Social Security number. If you are not the account owner (if someone else receives the bill for your Sprint PCS Service), you can get a sub-account password at [www.sprint.com](http://www.sprint.com).

## Voicemail Password

You'll create your voicemail password (or passcode) when you set up your voicemail. See "Setting Up Your Voicemail" on page 139 for more information on your voicemail password.

## Sprint PCS Vision Password

With your LX350 by LG, you may elect to set up a Sprint PCS Vision password. This optional password may be used to authorize purchase of Premium Services content and to protect personal information on multi-phone accounts.

For more information, or to change your passwords, sign on to [www.sprint.com](http://www.sprint.com) or call Sprint Customer Service at **1-888-211-4PCS (4727)**.

# Getting Help

---

## Visit [www.sprint.com](http://www.sprint.com)

You can go online to:

- Access your account information
- Check your minutes used (depending on your Sprint PCS service plan)
- View and pay your bill
- Make your life easier by enrolling in Sprint PCS online billing and automatic payment
- Purchase accessories
- Shop for the latest phones
- View available Sprint PCS service plans and options
- Learn more about Sprint PCS Vision and other great products like Sprint PCS® Picture Mail, games, ringers, screen savers, and more

## Reaching Sprint Customer Service

You can reach Sprint Customer Service many different ways:

- Dial    on your phone
- Sign on to your account at [www.sprint.com](http://www.sprint.com)
- Call us toll-free at **1-888-211-4727** (Consumer customers) or **1-888-788-4727** (Business customers)
- Write to us at Sprint Customer Service, P.O. Box 8077, London, KY 40742

## Receiving Automated Invoicing Information

For your convenience, your phone gives you access to invoicing information on your Sprint PCS Account. This information includes balance due, payment received, invoicing cycle, and an estimate of the number of minutes used since your last invoicing cycle.

To access automated invoicing information:

▶ Press   .

---

**Note:** This service may not be available in all Affiliate areas.

---

## Sprint 411

Call     from your phone and you'll have access to a variety of services and information through Sprint 411, including residential, business, and government listings; movie listings or showtimes; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411 and you will be billed for airtime.

To call Sprint 411:

▶ Press    .

## Sprint PCS Operator Services

Sprint PCS Operator Services provides assistance when placing collect calls or when placing calls billed to a local telephone calling card or third party.

**To access Sprint PCS Operator Services:**

▶ Press  .

For more information or to see the latest in products and services, visit us online at [www.sprint.com](http://www.sprint.com).

## Section 2

# Your Phone



# Your Phone: The Basics

---


## In This Section

---

- ◆ **Front View of Your Phone** (page 11)
  - ◆ **Viewing the Display Screen** (page 14)
  - ◆ **Features of Your Phone** (page 16)
  - ◆ **Turning Your Phone On and Off** (page 18)
  - ◆ **Using Your Phone's Battery and Charger** (page 19)
  - ◆ **Navigating Through Phone Menus** (page 22)
  - ◆ **Displaying Your Phone Number** (page 23)
  - ◆ **Making and Answering Calls** (page 23)
  - ◆ **Entering Text** (page 35)
- 

**Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you.** This section will guide you through the basic functions and calling features of your phone.

# Front View of Your Phone

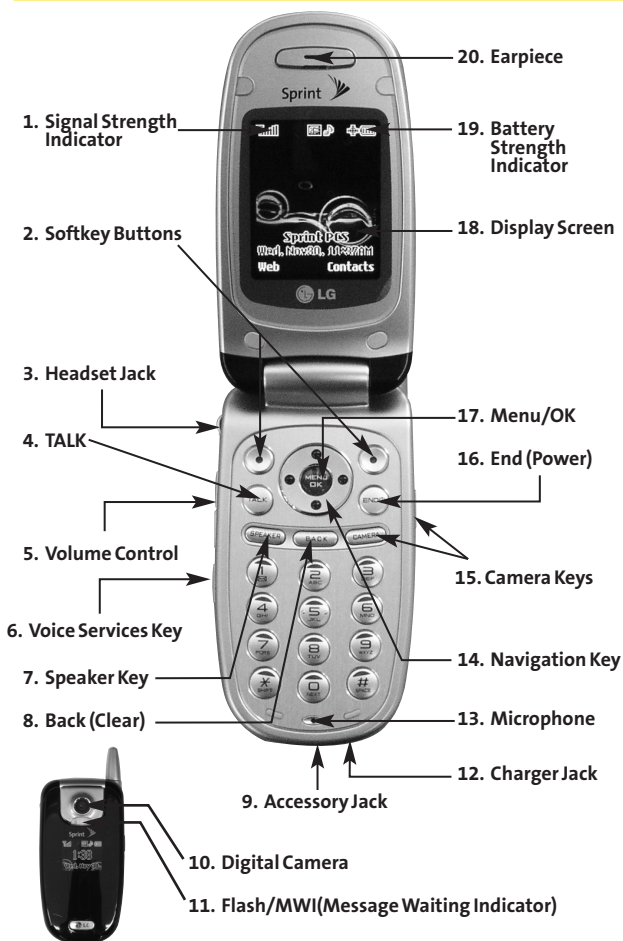



## Key Functions

1. **Signal Strength Indicator** represents the signal strength by displaying bars. The more bars displayed, the better the signal strength.
2. **Softkey Buttons** let you select softkey actions or menu items corresponding to the bottom left and right lines on the display screen.
3. **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations.  
**CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
4. **Talk** allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Voice Dial.
5. **Volume Control** allows you to adjust the ringer volume in standby mode (with the flip open) or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options. To mute the ringer during an incoming call, press the volume key up or down.
6. **Voice Services Key** lets you dial phone numbers by speaking contact name from idle mode with folder open.
7. **Speaker Key** enables your phone's built-in speaker, allowing you to hear other callers.
8. **Back (Clear)** deletes characters from the display in text entry mode. When in a menu, press the Back key to return to the previous menu. This key also allows you to return to the previous screen in a Sprint PCS Vision session.

9. **Accessory Jack** allows you to connect optional accessories, such as a USB cable.  
**CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
10. **Digital Camera** allows you to take sharp, high-resolution digital pictures.
11. **Flash** allows you to take pictures indoors or at night and also functions as a MWI(Message Waiting Indicator).
12. **Charger Jack** connects the phone to the battery charger.
13. **Microphone** allows other callers to hear you clearly when you are speaking to them.
14. **Navigation Key** scrolls through the phone's menu options and acts as a shortcut key from standby mode. You may also customize the navigation shortcuts in the Settings menu (see "Shortcuts" on page 57).
  - Press **Up** to access Messaging.
  - Press **Down** to access My Content.
  - Press **Right** to access Tools.
  - Press **Left** to view your Calendar.
15. **Camera Key** allows you to access the Pictures menu with the press of a button in standby mode. Press and hold to automatically launch the camera.
16. **End (Power)** ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the main menu, it returns the phone to standby mode and cancels your input.
17. **Menu/OK** displays the phone's main menu from standby mode. It also selects the highlighted choice when navigating through a menu.

18. **Display Screen** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
19. **Battery Strength Indicator** represents the amount of remaining battery charge currently available in your phone. When all bars are displayed in the battery icon, the phone's battery is fully charged. When no bars are displayed, the phone's battery is completely discharged or empty.
20. **Earpiece** lets you hear the caller and automated prompts.

## Viewing the Display Screen

---

Your phone's display screen provides a wealth of information about your phone's status and options. This list identifies the symbols you'll see on your phone's display screen:

---

**Note:** To view a list of your phone's icons and descriptions, from the main menu select **Settings > Phone Info > Icon Glossary**.

---

- |                                                                                     |                                                                                                                                                                         |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | indicates your phone is using SSL (Secure Sockets Layer) protocol for client/server communication.                                                                      |
|    | shows your current signal strength. (The more lines you have, the stronger your signal.)                                                                                |
|  | means your phone cannot find a signal.                                                                                                                                  |
|  | tells you a call is in progress.                                                                                                                                        |
|  | indicates you are "Roaming" off the Nationwide Sprint PCS Network.                                                                                                      |
|  | indicates you have new text messages.                                                                                                                                   |
|  | indicates you have voicemail messages. (Press and hold  to call your voicemail box.) |
|  | indicates you have new VoiceSMS messages.                                                                                                                               |
|  | indicates you have new Picture Mail.                                                                                                                                    |

-  indicates you have new messages.
-  indicates your phone's location feature is on.
-  indicates your phone's location feature is off.
-  indicates your Sprint PCS Vision connection is active. (Data is being transferred.)
-  indicates ringer volume is set to vibrate.
-  indicates Ringer & Vibrate mode is set.
-  indicates Silence All/Ringer Off mode is set.
-  indicates your phone is operating in TTY mode.
-  indicates battery charge level (icon shows full charge).
-  indicates battery needs to be recharged.
-  indicates outgoing calls number.
-  indicates missed calls number.
-  indicates incoming calls number.
-  indicates alarm is activated.
-  indicates speaker is activated.
-  indicates Bluetooth is enabled.
-  indicates a Bluetooth headset or hands-free device is connected.
-  indicates PC or PDA is now under dial-up networking.
-  indicates camera preview mode.
-  indicates camcoder preview mode.

---

**Note:** Display indicators help you manage your roaming charges by letting you know when you're off the Sprint Nationwide PCS Network, and whether you're operating in digital or analog mode. (For more information, see Section 2D: Controlling Your Roaming Experience on page 68.)

---

# Features of Your Phone

---

Congratulations on the purchase of your phone. The LX350 by LG is lightweight, easy-to-use, and reliable, and it also offers many significant features and service options. The following list previews some of those features and provides page numbers where you can find out more:

- Dual-band/tri-mode capability allows you to make and receive calls while on the Nationwide Sprint PCS Network and to roam on other analog and 1900 and 800 MHz digital networks where Sprint has implemented roaming agreements (page 68).
- Sprint PCS Vision® provides access to the wireless Internet in digital mode (page 156).
- Sprint PCS® Mail (page 165), SMS Text Messaging (page 147), and VoiceSMS Messaging (page 150) provide quick and convenient messaging capabilities.
- Sprint PCS® Voice Command lets you dial phone numbers by speaking someone's name or the digits of that person's phone number (page 186).
- Games, ringers, screen savers, and other applications can be downloaded to make your phone as unique as you are (page 169). Additional charges may apply.
- Your Contacts list allows you to store up to 500 entries, with up to five phone numbers per entry (page 80).
- The built-in Calendar offers several personal information management features to help you manage your busy lifestyle (page 90).
- Your phone is equipped with a Location feature for use in connection with location-based services that may be available in the future (page 49).

- Your phone's external LCD display allows you to monitor the phone's status and to see who's calling without opening the phone.
- T9 Text Input lets you quickly type messages with one keypress per letter (page 35).
- Speed dial lets you dial phone numbers with one or two keypresses (page 34).
- You can wirelessly pair your Bluetooth-enabled phone to other Bluetooth devices, including headsets and hands-free devices. You may also pair a personal computer or hand-held device with your phone for dial-up networking, using your phone as a wireless modem (page 129).
- The built-in camera allows you to take full-color digital pictures, view your pictures using the phone's display, and instantly share them with family and friends using Sprint PCS® Picture Mail service (page 101).
- Wireless Backup allows you to back up and manage your phone's Contacts list on a secure Web site (page 88).

Wireless Backup supports the following uses:

- Back up the handset Contacts List
- Transfer the handset Contacts List to another Wireless Backup—compatible handset on the Sprint network.
- View and edit your phone's Contacts List using a Web browser on a desktop or laptop computer.
- Data Roam Guard will alert you when you are roaming and using your browser or other online applications, giving you the option to continue using those applications while in the roaming area (page 73).

# Turning Your Phone On and Off

---

## Turning Your Phone On

To turn your phone on:

- ▶ Press and hold  for approximately two seconds.

Once your phone is on, it may display “Searching for Service,” which indicates that your phone is searching for a signal. When your phone finds a signal, it automatically enters standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint PCS Service by pressing any key (when your phone is turned on).

---

**Tip:** The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

---

## Turning Your Phone Off

To turn your phone off:

- ▶ Press and hold  for two seconds until you see the powering-down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

# Using Your Phone's Battery and Charger

---

**WARNING:** Use only Sprint-approved or manufacturer-approved batteries and chargers with your phone. The failure to use a Sprint-approved or manufacturer-approved battery and charger may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.

---

Sprint- or manufacturer-approved batteries and accessories can be found at Sprint Stores or through your phone's manufacturer, or call 1-866-343-1114 to order. They're also available at [www.sprint.com](http://www.sprint.com) – click the **Wireless** link under Personal, and then click **Accessories**.

## Battery Capacity

Your phone is equipped with a Lithium-Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 4 hours of continuous digital talk time.

When the battery reaches 5% of its capacity, the battery icon blinks. When there are approximately two minutes of talk time left, the phone sounds an audible alert and then powers down.

---

**Note:** Long backlight settings, searching for service, vibrate mode, and browser use affect the battery's talk and standby times.

---

---

**Tip:** Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power.


---



## Installing the Battery

To install the Li-Ion battery:

- ▶ To install, insert the battery into the opening on the back of the phone and gently press down until the latch snaps into place.

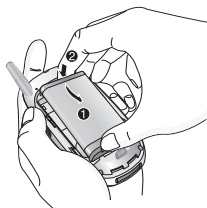

## Removing the Battery


---

**WARNING:** Do not handle a damaged or leaking Li-Ion battery as you can be burned.

---

To remove your battery:

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Press the battery release latch up and remove the battery from the phone at a 45-degree angle.

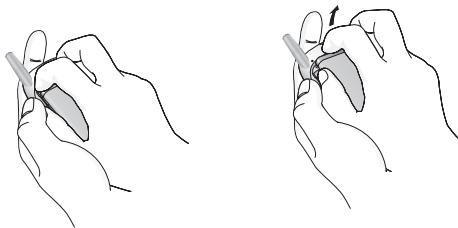

## Charging the Battery

Your phone's Li-Ion battery is rechargeable and should be charged as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon (  ) blinks and the phone sounds a warning tone.

Always use a Sprint- or manufacturer-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

## Using the Charger

To use the travel charger provided with your phone:

- ▶ Plug the round end of the AC adapter into the phone's charger jack and the other end into an electrical outlet.
  - A **red indicator light** on the phone lets you know the battery is charging.
  - A **green indicator light** lets you know that the battery is at least 90 percent charged.

It takes approximately 3 hours to fully recharge a completely rundown battery. With the Sprint-approved Li-Ion battery, you can recharge the battery before it becomes completely run down.

# Navigating Through Phone Menus

---

The navigation key on your phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

To navigate through a menu, simply press the navigation key up or down. If you are in a first-level menu, such as **Settings**, you may also navigate to the next or previous first-level menu by pressing the navigation key right or left.

For a diagram of your phone's menu, please see "Your Phone's Menu" on page iii.

## Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select any numbered option by simply pressing the corresponding number on the phone's keypad. You may also select any item by highlighting it and pressing .

For example, if you want to view your last incoming call:  
When Menu Styles are set as Grid,

1. Press  to access the main menu.
2. Select **Call History** by pressing  or by highlighting it and pressing . (It may already be highlighted.)
3. Select **Incoming Calls** by pressing  or by highlighting it and pressing . (If you have received any calls, they are displayed on the screen.)

---

**Note:** For the purposes of this guide, the above steps condense into "Select **Menu > Call History > Incoming Calls**."

---

## Backing Up Within a Menu

To go to the previous menu:

- ▶ Press .

To return to standby mode:

- ▶ Press .

## Displaying Your Phone Number

Just in case you forget your phone number, your phone can remind you.

To display your phone number:

- ▶ Select **Menu > Settings > Phone Info > My Phone Number**. (Your phone number and other information about your phone and account will be displayed.)

---

**Note:** To select **Menu**, press . To select menu options (such as **Settings**, above), highlight the option and press . (If the menu options are numbered, you may also select an option simply by pressing the corresponding number key.)

---

## Making and Answering Calls

### Making Calls

Placing a call from your phone is as easy as making a call from any landline phone. Just enter the number and press , and you're on your way to clear calls.

To make a call using your keypad:

1. Make sure your phone is on.

2. Enter a phone number from standby mode. (If you make a mistake while dialing, press **BACK** to erase one digit at a time. Press and hold **BACK** to erase the entire number.)
3. Press **TALK**. (To make a call when you are roaming and Call Guard is enabled, highlight **Roam Call** and press **TALK**. See “Using Call Guard” on page 72.)
4. Press **END** or close the phone when you are finished.

---

**Tip:** To redial your last outgoing call, press **TALK** twice.

---

**Tip:** When making calls off the Nationwide Sprint PCS Network, always dial using 11 digits (1 + area code + phone number).

---

You can also place calls from your phone by using Sprint PCS Voice Command<sup>SM</sup> (page 182), Speed Dialing numbers from your Contacts (page 85), and using your Call History listings (page 74).

## Dialing Options

When you enter numbers in standby mode, you will see a variety of dialing options appear on the phone’s display screen.

---

**Tip:** To speed dial a phone number from standby mode, press and hold the speed dial number. If the speed dial number is two digits, enter the first digit, and then press and hold the second digit. (For information on setting up speed dial numbers, see “Assigning Speed Dial Numbers” on page 85.) (This feature will not work when you are roaming off the Nationwide Sprint PCS Network; when roaming you must dial using eleven digits [1 + the area code + the seven-digit phone number.])

---

- **Call** dials the displayed phone number.
- **Send Message** allows you to send a text message or picture mail to the number being dialed.

- **Save** allows you to enter a seven- or ten-digit number (phone number and area code) and press **Save** to save the phone number in your Contacts. (See “Saving a Phone Number” on page 30.)
- **Find** allows you to enter a digit or string of digits. (See “Finding a Phone Number” on page 31.)
- **Hard pause** allows you to enter a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 32.)
- **2-sec pause** allows you to enter a two-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 32.)

## Answering Calls

To answer an incoming call:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press  to answer an incoming call. (Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any number key. See “Call Answer Mode” on page 57 for more information.)

Your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The indicator light flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number may also be displayed, if available.

If Call Answer is set to **TALK only**, the following options are also displayed. To select an option, press the corresponding softkey button.

- **Quiet** to mute the ringer.
- **Ignore** to send the call to your voicemail box.

---

**Note:** When your phone is off, incoming calls go directly to voicemail.

---

## Answering a Roam Call With Call Guard Enabled

Call Guard is an option that helps you manage your roaming charges when making or receiving calls while outside the Nationwide Sprint PCS Network. Please see Section 2D: Controlling Your Roaming Experience for more information about roaming.

**To answer a call when you are roaming and Call Guard is enabled:**

- ▶ Select **Answer** to answer the call. (See “Call Guard” on page 72 for additional information.)

## Ending a Call

**To disconnect a call when you are finished:**

- ▶ Close the phone or press .

## Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.

**To display the Missed Call entry from the notification screen:**

- ▶ Highlight the entry and press . (To dial the phone number, press .)

**To display a Missed Call entry from standby mode:**

1. Select **Menu > Call History > Missed Calls**.

2. Highlight the entry you wish to view and press  .

## Calling Emergency Numbers

You can place calls to 911 (dial     ), even if your phone is locked or your account is restricted.

---

**Note:** When you place an emergency call, your phone automatically enters Emergency mode.

---

During the call, press the desired menu list to display among menu lists. To select menu, highlight it and press  .

- **Mute** or **Unmute** to mute your microphone, or to unmute the microphone if it was muted earlier.
- **Speaker On** or **Speaker Off** to route the phone's audio through the speaker or through the earpiece.
  - Select **Speaker On** to route the phone's audio through the speaker. (You can adjust the speaker volume using the volume keys on the side of the phone.)
  - Select **Speaker Off** to use the phone's earpiece.
- **3-Way Call** to set up a three-way conversation.



### To exit Emergency mode:

1. Press  to end a 911 call.
2. Press **Exit** (right softkey).

---

**Note:** When you are in Emergency mode, you can exit only from the options menu.

---

## In-Call Options

While a call is in progress, a list of options is displayed that you may use during the call. To select an option, highlight the option and press . The following options are available:

- **Mute** or **Unmute** to mute your microphone, or to unmute the microphone if it was muted earlier.
- **Speaker On** or **Speaker Off** routes the phone's audio through the speaker or through the earpiece.
  - Select **Speaker On** to route the phone's audio through the speaker. (You can adjust the speaker volume using the volume keys on the side of the phone.)
  - Select **Speaker Off** to use the phone's earpiece.

---

**Warning!** Due to higher volume levels, do not place the phone near your ear during speakerphone use.

---

- **3-Way Call** to set up a three-way conversation.
- **Contacts** to access the Contacts menu.
- **Recent Calls** to access the Recent Calls list.
- **Send Message** to send a text message.
- **Record Voice Memo** to record the current conversation.
- **Notepad** to display the phone's electronic notepad.
- **Menu** to display the phone's main menu.

## End-of-Call Options

After receiving a call from or making a call to a phone number that is not in your Contacts, the phone number and the duration of the call are displayed. Select this option if you wish to add the new number to your Contacts. (See “Saving a Phone Number” below.)

After receiving a call from or making a call to a phone number that is already in your Contacts, the Contacts entry name and phone number and the duration of the call are displayed. To select one of the following options after a call has ended, press :

- **Save** to save the phone number in your Contacts list.
- **View** to view the Contacts entry if the number is already in your Contacts list.

---

**Note:** The End-of-Call options are not displayed for calls identified as No ID or Restricted.

---

## Saving a Phone Number

Your phone can store up to five phone numbers in each of 500 Contacts entries. Each entry's name can contain up to 32 characters. Your phone automatically sorts the Contacts entries alphabetically. (For more information, see Section 2F: Using Contacts on page 80.)

**To save a number from standby mode:**

1. Enter a phone number.
2. Scroll to **Save** and press .
3. Select **New Entry** for a new contact or **Existing Entry** to add a number to an existing contact and press . Scroll to the desired phone label.  
**Mobile/Home/Office/Pager/Fax/None**

4. Use the numeric keypad to enter the new contact name and press  to save the new entry.

— or —

Search for an existing contact name and press  to save the new number.

5. Press **Done** (left softkey) to save the new entry.

## Finding a Phone Number

You can search Contacts entries for phone numbers that contain a specific string of numbers.

### To find a phone number:

1. Enter one or more digits in standby mode. (The more numbers you enter, the more specific the search becomes.)
2. Scroll to **Find** and press .
3. To display the Contacts entry that contains the phone number, highlight the entry and press .
4. To dial the number, scroll to **Call** and press .

---

**Tip:** You can also dial the number by highlighting it and pressing **TALK** during step 3 above.

---

## Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

- **Hard pause** sends the next set of numbers when you press .
- **2-sec pause** automatically sends the next set of numbers after two seconds.

---

**Note:** You can have multiple pauses in a phone number and combine two-second and hard pauses.

---

**To dial or save phone numbers with pauses:**

1. Enter the phone number.
2. Scroll to either **Hard pause** or **2-sec pause** and press . (Hard pauses are displayed as a “P” and 2-sec pause as a “T”.)
3. Enter additional numbers.
4. Press  to dial the number.

— or —

To save the number in your Contacts list, highlight **Save** and press .

---

**Note:** When dialing a number with a hard pause, press **OK** to send the next set of numbers.

---

## Plus (+) Code Dialing

When placing international calls, you can use Plus Code Dialing to automatically enter the international access code for your location (for example, 011 for international calls made from the United States).

To make a call using Plus Code Dialing:

1. Press and hold  until a “+” appears on your phone display.
2. Dial the country code and phone number you’re calling and press . (The access code for international dialing will automatically be dialed, followed by the country code and phone number.)

## Dialing From the Contacts

To dial directly from a Contacts entry:

1. Press  to access the main menu. Contacts may also be accessed by pressing right on the navigation key from the idle screen.
2. Select **Contacts** (.
3. Scroll to **Find/Add Entry** and press .

---

**Shortcut:** Press **Right** on the Navigation key to list entries.

---

4. Use your Navigation key to scroll through the Contacts list, then highlight your desired entry.
  5. Press  to dial the entry’s default phone number.
- or —

To dial another number from the entry, press , highlight the desired number, and press .

## Using Speed Dialing

You can store up to 99 numbers in your phone's speed dial memory to make contacting friends and family as easy as pressing a button or two. With this feature, you can dial speed dial entries using one keypress for locations 1-9 or two keypresses for locations 10-99.

### To use One-Touch Dialing for speed dial locations 1-9:

- Press and hold the appropriate key for approximately two seconds. The display confirms that the number has been dialed when it shows "Calling..."

### To use Two-Touch Dialing for speed dial locations 10-99:

1. Press the first digit.
2. Press and hold the second digit for approximately two seconds. The display confirms that the number has been dialed when it shows "Calling..."

---

**Note :** Speed dialing is not available when you are roaming; when you are roaming off the Nationwide Sprint PCS Network, you must always dial using eleven digits (1 + area code + number).

---

# Entering Text

## Selecting a Character Input Mode

Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when using Sprint PCS Mail and SMS Text Messaging).

To change the character input mode:

1. When you display a screen where you can enter text, press the right softkey to change the character input mode.
2. Select one of the following options:
  - **Abc** to cycle through the alpha characters associated with the letters on the keypad (see page 38).
  - **T9Word** to enter text using a predictive text entering system that reduces the amount of keys that need to be pressed while entering a word (see page 36).
  - **123** to enter numbers by pressing the numbers on the keypad (see page 39).
  - **Symbols** to enter symbols (see page 39).
  - **Smileys** to enter “emoticons” (see page 39).
  - **Recent messages** to enter a recent message.
  - **Preset messages** to enter preprogrammed messages (see page 39).
  - **Preset suffix** to enter preset suffix such as `http://www.`, `https://www.`, `www.`, `.com`, `.net`, `.org`, `.edu`, `.wap`, `/`, `"`, `'`, `()`, `{}`, `[]`, `<>`, `<<>>`

---

**Tip:** When entering text, press the \* (Shift) key to change letter capitalization (**Abc** > **ABC** > **abc**).

---



## Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in your phone by pressing keys just once per letter. (To select the **T9 Word** mode when entering text, see “Selecting a Character Input Mode” on page 35.)

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.)

**To enter a word using T9 Text Input:**

1. Select the **T9 Word** character input mode. (See “Selecting a Character Input Mode” on page 35.)
2. Press the corresponding keys once per letter to enter a word. (For example, to enter the word “Bill,” press     .) (If you make a mistake, press  to erase a single character. Press and hold  to delete an entire entry.)

If the word you want is not displayed after you have entered all the letters, press  to scroll through additional word selections. To accept a word and insert a space, press .

## Adding a Word to the T9 Database

If a word you want to enter is not displayed as an option when you are using T9 Text Input, you can add it to the database.

**To add a word to the T9 Text Input database:**

1. Select the **Abc** character input mode. (See “Selecting a Character Input Mode” on page 35.)
2. Enter the word using multi-tap text entry. (See “Entering Characters by Tapping the Keypad” on page 38.) The word will appear as an option the next time you scroll through options during T9 Text Input.

For more information about T9 Text Input, visit the Tegic Web site at [www.T9.com](http://www.T9.com).

## Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad:

1. Select the **Abc** mode. (See “Selecting a Character Input Mode” on page 35.)
2. Press the corresponding keys repeatedly until the desired letter appears. (For example, to enter the word “Bill,” press  twice,  three times,  three times, and  three times again.) (If you make a mistake, press  to erase a single character. Press and hold  to delete an entire entry.)

By default, the first letter of an entry is capitalized and the following letters are lowercased. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order:

|                                                                                            |                   |
|--------------------------------------------------------------------------------------------|-------------------|
|           | ., @ 1' ? ! * # / |
|           | ABC 2             |
|           | DEF 3             |
|           | GHI 4             |
|          | JKL 5             |
|         | MNO 6             |
|         | PQRS 7            |
|         | TUV 8             |
|         | WXYZ 9            |
|         | 0                 |
|  | SPACE             |
|         | SHIFT             |

## Entering Numbers, Symbols, Smileys, Preset Messages and Recent Messages

To enter numbers:

- ▶ Select the **123** mode and press the appropriate key. (See “Selecting a Character Input Mode” on page 35).

To enter symbols:

- ▶ Select the **Symbols** mode. (See “Selecting a Character Input Mode” on page 35.) To enter a symbol, press the appropriate key indicated on the display.

To enter “emojicons” (smileys):

- ▶ Select the **Smileys** mode and press the appropriate key. (See “Selecting a Character Input Mode” on page 35.)

To enter preset messages:

1. Select the **Preset messages** mode. (See “Selecting a Character Input Mode” on page 35.)
2. Scroll to the desired preprogrammed message and press .

To enter recent messages:

1. Select **Send Message > Text Message**.
2. In message input mode, select **Mode** (right softkey), scroll to **Recent messages**, and press .

---

**Note:** Preset messages make composing text messages even easier by allowing you to enter preset messages, such as “Meet me at”, “Let’s get lunch”, or a customized message of your own. (For more information on preset messages, please see “Managing Preset Messages” on page 52.)

---

# Controlling Your Phone's Settings

---

### In This Section

---

- ◆ **Sound Settings** (page 41)
  - ◆ **Display Settings** (page 44)
  - ◆ **Location Settings** (page 49)
  - ◆ **Messaging Settings** (page 50)
  - ◆ **Airplane Mode** (page 54)
  - ◆ **TTY Use With Sprint PCS Service** (page 55)
  - ◆ **Phone Setup Options** (page 57)
- 

**Using the menu options available on your phone, you can customize your phone to sound, look, and operate just the way you want it to.** This section describes how you can change your phone's settings to best suit your needs. Take a few moments to review these options and to adjust or add settings that are right for you.

# Sound Settings

## Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages.

- **Preprogrammed Ringers** include a variety of standard ringer types and familiar music.
- **Vibrating Ringer** alerts you to calls or messages without disturbing others.
- **Downloaded Ringers** can be downloaded right to your phone. (See “Downloading Premium Services Content” on page 169.)

## Selecting Ringer Types for Voice Calls

Your phone provides a variety of ringer options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls by the ring.

To select a ringer type for voice calls:

1. Select **Menu > Settings > Sounds > Ringers**.
2. Select **Caller ID, No Caller ID, or Roaming**. (The list of preprogrammed ringers is displayed.)
3. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign the desired ringer.  
— or —

Select **Options > My Content** and scroll through the list of downloaded ringers. Assign the desired ringer by pressing .

## Selecting Ringer Types for Messages

To select a ringer type for messages:

1. Select **Menu > Settings > Sounds > Alerts**.
2. Select **Voicemail Alerts** or **Message Alerts**. (The list of preprogrammed ringers is displayed.)
3. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign the desired ringer.

## Selecting a Key Tone

Your phone offers a number of options for selecting the audible tones accompanying a keypress. (Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.)

To select a key tone:

1. Select **Menu > Settings > Sounds > Key Tones**.
2. Select **Short Tones** or **Long Tones** and press .

## Adjusting the Phone's Volume Settings

You can adjust your phone's volume settings to suit your needs and your environment.

To adjust your phone's volume settings:

1. Select **Menu > Settings > Sounds > Volume**.
2. Select **Ringer, Earpiece, Key Beep, Application, or Power On/Off**.
3. Using the navigation key, choose a volume level and press .

---

**Tip:** You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the volume key on the left side of your phone.

---

## Alert Notification

Your phone can alert you with an audible tone when you change service areas, once a minute during a voice call, or when a call has been connected.

To enable or disable alert sounds:

1. Select **Menu > Settings > Sounds > Alerts**.
2. Select **Service Change, Minute Beep, Call Connect, or Signal Fade** and press .
3. Select **On or Off** and press .



## Silence All

There may be times when you need to silence your phone entirely. The phone's Silence All option allows you to mute all sounds without turning your phone off.

### To activate Silence All:

- ▶ With the phone open, press and hold the volume key down in standby mode. (The screen will display "Silence All.")

### To deactivate Silence All:

- ▶ Press the volume key up repeatedly to select a desired volume level.

## Display Settings

---

### Changing the Text Greeting

The text greeting can be up to 16 characters and is displayed on your phone's screen in standby mode. You may choose to keep the phone's default greeting ("Sprint"), or you may enter your own custom greeting.

#### To display or change your greeting:

1. Select **Menu > Settings > Display > Greeting > Custom**.
2. Use the numeric keypad to enter a new custom greeting. (See "Entering Text" on page 35.) (To erase the existing greeting one character at a time, press **BACK**. To erase the entire greeting, press and hold **BACK**.)
3. Press **MENU/OK** to save your new greeting.

## Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad are backlit after any keypress is made.

To change the backlight setting:

1. Select **Menu > Settings > Display > Backlight**.
2. Select **Main LCD, Sub LCD or Keypad**.
3. Select a time setting and press .

---

**Note:** Long backlight settings affect the battery's talk and standby times.

---

## Changing the Display Screen

Your new phone offers options for what you see on the display screen while powering on or off and when in standby mode.

To change the display images:

1. Select **Menu > Settings > Display > Screen Saver**.
2. Select **Main Display or Sub Display**.
3. Selected **Preloaded, In Phone, My Content or Get New**.
4. Use the navigation key to select an image and press  to view the image. (Once an image is displayed, you can use your navigation key to scroll through and view the other default images.)

— or —

Select **Options > In Phone**. Use the navigation key to highlight your selection and press  to view images.

— or —

Select **Options > My Content**. Use the navigation key to highlight your selection and press  to view downloaded images. (Once an image is displayed, you can use your navigation key to scroll through and view the other downloaded images. For more information on downloading images, see “Downloading Premium Services Content” on page 169.)

4. Press  to assign the desired image.

## Changing the Display Screen for Incoming Calls

You can set the color or downloaded image (screen saver) to be shown on the Incoming Calls display.

To set the incoming calls display:

1. Select **Menu > Settings > Display > Incoming Calls**.
2. Select **Caller ID, No Caller ID, or Roaming**.
3. Use the navigation key to highlight your selection and press  to view the image. (Once an image is displayed, you can use your navigation key to scroll through and view the other default images.)

— or —

Select **Options > In Phone**. Use the navigation key to highlight your selection and press  to view images.

— or —

Select **Options > My Content**. Use the navigation key to highlight your selection and press  to view downloaded images. (Once an image is displayed, you can use your navigation key to scroll through and view the other downloaded images. For more information on downloading images, see “Downloading Premium Services Content” on page 169.)

4. Press  to assign the desired image.

## Changing the Phone's Menu Style

Your phone allows you to choose how the menu appears on your display screen.

To select the display's menu style:

1. Select **Menu > Settings > Display > Menu Styles**.
2. Select **Grid** to view each main menu item as an animated single-screen icon or **List** to view the main menu as a list, and press .

## Changing the Theme Color

You can customize your phone's display appearance by selecting a color scheme to reflect your personality.

To change the display's theme color:

1. Select **Menu > Settings > Display > Skins**.
2. Select **Gray, Blue, Mint, or Red** and press .

## Changing the Clock Display

Choose whether you want your phone's clock to be displayed in analog mode, digital mode, or with time and date.

To change the clock's appearance on the standby screen:

1. Select **Menu > Settings > Display > Clock & Calendar**.
2. Select **Normal Clock, Analog Clock, Digital Clock, Dual Clock, or Calendar** and press .
3. Press  to apply the clock display setting.

## Changing the Text Input Font

This setting allows you to adjust the display appearance when entering text (for example, when using the notepad or when adding a Contacts entry).

To change the text input font:

1. Select **Menu > Settings > Display > Font Size**.
2. Select **Message, Browser, or Notepad**.
3. Select a desired size and press .

## Changing the Power Save Mode

This feature helps conserve your battery power by restricting the display.

To change the power save mode:

1. Select **Menu > Settings > Display > Power Save Mode**.
2. Select **Off, 30 Seconds, 60 Seconds, or 90 Seconds** and press . (If you select **Off**, a prompt will be displayed. Select **Yes** and press  to save your setting.)

## Changing the Status Light Mode

This feature shows the status of your phone by blinking the light.

To change the status light mode:

1. Select **Menu > Settings > Display > Status Light**.
3. Select **On or Off** and press .

# Location Settings

Your phone is equipped with a Location feature for use in connection with location-based services that may be available in the future.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

**Note:** Turning Location on will allow the network to detect your position using GPS technology, making some Sprint applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

**To enable your phone's Location feature:**

1. Select **Menu > Settings > Location**. (The Location disclaimer is displayed.)
2. Read the disclaimer and press .
3. Select **On** or **Off** and press .

When the Location feature is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will be displayed.

# Messaging Settings

---

Staying connected to your friends and family has never been easier. With your phone's advanced messaging capabilities, you can send and receive many different kinds of text messages without placing a voice call. (For more information, see "Using SMS Text Messaging" on page 147.)

Your phone's messaging settings make text messaging even faster and easier by letting you decide how you would like to be notified of new messages, create a signature with each sent message, and create your own preset messages, to name just a few.

## Displaying Pop-up Messages

When you receive a text message, your phone notifies you by displaying an icon on your display screen. You can also choose to be notified with a larger pop-up message on your display screen.

To display pop-up messages:

1. Select **Menu > Settings > Messaging > Notification**.
2. Select **Message & Icon** or **Icon Only** and press .

## Setting Message Alerts

When new messages arrive, you can choose to have your phone notify you by playing an audible alert.

To hear an alert when you receive a new message:

1. Select **Menu > Settings > Messaging > Message Reminder**.
2. Select **On** or **Off** and press .

## Callback Number

1. Select **Menu > Settings > Messaging > Callback Number**.
2. Select **None**, **My Phone Number**, or **Other** and press .  
(If you select **Other**, enter a number and press .)

## Deleting Old Messages

You can delete messages that you've already read whenever you like, or you can have your phone delete them automatically for you.

To automatically delete read messages:

1. Select **Menu > Settings > Messaging > Auto-Delete**.
2. Select **On** or **Off** and press .

## Adding a Customized Signature

Each message you send can have a customized signature to reflect your personality.

To add a customized signature to each sent message:

1. Select **Menu > Settings > Messaging > Signature > Custom**.  
(If you do not wish to attach a signature to your outgoing messages, select **None**.)
2. Enter your signature and press . (See "Entering Text" on page 35.)



## Managing Preset Messages

Your phone is loaded with 20 preset messages to help make sending text messages faster and easier. These messages, such as “Where are you?”, “Let’s get lunch”, and “Meet me at”, can be customized or deleted to suit your needs. You can even add your own preset messages to the list.

**To edit or delete a preset message:**

1. Select **Menu > Settings > Messaging > Preset Messages**.  
(The list of preset messages is displayed.)
2. To edit or delete a preset message, highlight it and press .
3. Scroll to **Edit** and press , edit the selected message (see “Entering Text” on page 35), and press .  
— or —  
Scroll to **Delete** and press , and then select **Yes** to delete the selected message. (Select **No** to cancel the deletion.)

---

**Note:** Default preset messages cannot be deleted.

---

**To add a new preset message:**

1. Select **Menu > Settings > Messaging > Preset Messages**.  
(The list of preset messages is displayed.)
2. To add a new preset message, select **<Add New>**.
3. Enter your message (see “Entering Text” on page 35), and press . (Your new message will be added to the beginning of the list.)

---

**Note:** You may also add or edit preset messages in the “My Online Tools” area at [www.sprint.com](http://www.sprint.com).

---

## VoiceSMS Options

Your phone offers several options for organizing and accessing your VoiceSMS.

1. Select **Menu > Settings > Messaging > VoiceSMS Options**.
2. Select **Speaker Phone**, or **From Name** and press .  
(If you select **Speaker Phone**, select **On** or **Off** and press  to save your setting.)

# Airplane Mode

---

Airplane Mode allows you to use many of your phone's features, such as Games, Notepad, Voice Memos, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

**To set your phone to Airplane Mode:**

1. Select **Menu > Settings > Setup/Others > Airplane Mode**. (The Airplane Mode disclaimer is displayed.)
2. Read the disclaimer and press .
3. Select **On** or **Off** and press .

While in Airplane Mode, your phone's standby screen will display "Phone off."

---

**Note:** If Airplane Mode is set to On, this mode is automatically reactivated when you power off or reset the phone.

---



## TTY Use With Sprint PCS Service

ATTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard-of-hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your Sprint PCS Service, please call Sprint Customer Service via the state Telecommunications Relay Service (TRS) by first dialing    . Then provide the state TRS with this number: 866-727-4889.

### To turn TTY Mode on or off:

1. Press from standby mode. (An informational message is displayed')
2. Press .
3. Select **Enable TTY** and press to turn TTY mode on.  
— or —  
Select **Disable TTY** and press to turn TTY mode off.

---

**Note:** In TTY Mode, your phone will display the TTY access icon.

---

---

**Note:** If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

---

---

#### **WARNING: 911 Emergency Calling**

Sprint recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and PSAP community are currently working to resolve this.

---

# Phone Setup Options

## Shortcuts

Your phone offers you the option of assigning a shortcut key to a favorite or often-used function. Pressing the navigation key to the left in standby mode will launch your personally designated shortcut.

To assign your shortcut key:

1. Select **Menu > Settings > Setup/Others > Shortcuts**. (An information window is displayed.)
2. Read the information and press .
3. Select **Left Navigation, Right Navigation, Up Navigation, or Down Navigation** and press .
4. Using the navigation key or your keypad, select the desired shortcut and press .
5. Press  to return to standby mode.

## Call Answer Mode

You can determine how to answer incoming calls on your phone, whether only by pressing , by pressing any number key, or simply by opening the phone.

To set call answer mode:

1. Select **Menu > Settings > Setup/Others > Answer Call**.
2. To select an option, highlight it and press 
  - **Flip Open / Any Key** to allow an incoming call to be answered by opening the phone or by pressing any key.
  - **TALK Only** to require  to be pressed to answer all incoming calls.

## Auto Answer Mode

You may set your phone to automatically pick up incoming calls when connected to an optional hands-free car kit.

To set Auto Answer mode:

1. Select **Menu > Settings > Setup/Others > Auto-Answer**.
2. To select an option, highlight it and press .
  - **Off** to disable Auto Answer.
  - **Car-Kit/Headset** to answer calls automatically when the phone is connected to a hands-free car kit or a headset (sold separately). Remember, your phone will answer calls in Auto Answer mode even if you are not present.

## Dialing Match

Your dialing match options allow you to enable or disable Abbreviated Dialing (page 33) and Speed Dialing (page 34).

To set your dialing match options:

1. Select **Menu > Settings > Setup/Others > Dialing Match**.
2. Select **Abbreviated Dialing**, **Contacts Match**, or **Speed Dial** and press .
3. Select **Enabled** or **Disabled** and press .
4. (Abbreviated Dialing only.) If you enable **Abbreviated Dialing**, enter a five- or six-digit number (for example, area code and prefix) and press .

## Text Entry

1. Select **Menu > Settings > Setup/Others > Text Entry**.
2. Read the information and press .
2. Select **Auto-Capital, Word Choice List, Word Prediction, Word Completion, or Help** and press .

## Display Language

You can choose to display your phone's onscreen menus in English or in Spanish.

To assign a language for the phone's display:

1. Select **Menu > Settings > Setup/Others > Language**.
2. Select **English** or **Español** and press .



# Setting Your Phone's Security

---

### In This Section

---

- ◆ **Accessing the Security Menu** (page 61)
  - ◆ **Using Your Phone's Lock Feature** (page 61)
  - ◆ **Using Special Numbers** (page 63)
  - ◆ **Erasing the Contacts List** (page 63)
  - ◆ **Restricting Your Phone** (page 64)
  - ◆ **Resetting Your Phone** (page 65)
  - ◆ **Updating Your Picture Mail Profile** (page 65)
  - ◆ **Security Features for Sprint PCS Vision®** (page 66)
  - ◆ **Selective Call Block** (page 67)
- 

**By using the security settings on your phone, you receive peace of mind without sacrificing flexibility.** This section will familiarize you with your phone's security settings. With several options available, you can customize your phone to meet your personal needs.

# Accessing the Security Menu

---

All of your phone's security settings are available through the Security menu. You must enter your lock code to view the Security menu.

To access the Security menu:

1. Select **Menu > Settings > Security**.
2. Enter your lock code to display the Security menu.

---

**Tip:** If you can't recall your lock code, try using the last four digits of either your Social Security number or wireless phone number or try 0000 or NATL (6285). If none of these work, call Sprint Customer Service at 1-888-211-4PCS (4727).

---

## Using Your Phone's Lock Feature

---

### Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, Sprint Customer Service, or special numbers. (See "Using Special Numbers" on page 63.)

To lock your phone:

- ▶ From the Security menu, select **Lock Phone > Lock Now**. (To set your phone to lock the next time it is turned on, select **On Power Up**.)

### Unlocking Your Phone

To unlock your phone:

1. From standby mode, press **Unlock** (right softkey).
2. Enter your lock code.

## Locking Pictures

To turn picture lock on or off:

1. From the Security menu, scroll to **Picture Mail** and press . Scroll to **Lock Pictures** and press .
2. Highlight **Lock** and press .

## Changing the Lock Code

To change your lock code:

1. Select **Menu > Settings > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Change Lock Code**, and then enter and re-enter your new lock code.

## Calling in Lock Mode

You can place calls to 911 and to your special numbers when in lock mode. (For information on special numbers, see “Using Special Numbers” on page 63.)

To place an outgoing call in lock mode:

- ▶ To call an emergency number, special number, or Sprint Customer Service, enter the phone number and press .

## Using Special Numbers

Special numbers are important numbers that you have designated as being “always available”. You can call and receive calls from special numbers even if your phone is locked.

You can save up to 10 special numbers in addition to your Contacts entries. (The same number may be in both directories.)

**To add or replace a special number:**

1. Select **Menu > Settings > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Special Numbers**.
3. Select a location for your entry.
4. Enter the number and press .

---

**Note:** There are no speed dial options associated with special numbers.

---

## Erasing the Contacts List

You can quickly and easily erase all of the contents of your Contacts.

**To erase all the names and phone numbers in your Contacts:**

1. Select **Menu > Settings > Security**, then enter your lock code. (The Security menu is displayed.)
2. Select **Delete Contacts**.
3. If you are certain you would like to erase all of your Contacts entries, select **Yes**.

# Restricting Your Phone

---

There may be occasions when you want to limit the numbers your phone can call. You can use the Restrict Calls setting to do just that. (The Restrict Calls setting does not apply to incoming calls, calls made to 911, or calls made to Sprint Customer Service.)

To restrict your phone:

1. Select **Menu > Settings > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Restrict Calls**.
3. Select **Unlock, Except 911, Except Special #s, or Except Contacts** and press .
  - **Unlock** allows all calls to be made without any restrictions (default setting).
  - **Except 911** restricts all outgoing calls (except 911 or Sprint Customer Service).
  - **Except Special** allows you to call only the 10 numbers stored in the Special Number section in the Security menu.
  - **Except Contacts** allows you to call only the entries saved in the Contacts.

---

**Note:** “Lock Code” is displayed when your restriction is set to **Contacts Only** and you make a call to a saved number or try to edit an existing entry.

---

# Resetting Your Phone

---

Resetting the phone restores all the factory defaults, including the ringer types and display settings. The Contacts, Call History, Scheduler, and Messaging are not affected.

To reset your phone:

1. Select **Menu > Settings > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Reset Phone**. (A disclaimer appears.)
3. Read the disclaimer and press .
4. If you are certain that you would like to restore all the factory settings, select **Yes**.

## Updating Your Picture Mail Profile

---

You can quickly and easily update your Sprint PCS Picture Mail profile from your phone.

To update picture mail profile:

1. From the Security menu, scroll to **Picture Mail** and press .
2. Scroll to **Update Picture Mail Profile** and press . (A disclaimer appears.)
3. Read the disclaimer and press .
4. Select **Yes**.
5. Press .

# Security Features for Sprint PCS Vision®

---

## Enabling and Disabling Sprint PCS Vision Services

You can disable Sprint PCS Vision services without turning off your phone; however, you will not have access to all Sprint PCS Vision services, including Web and messaging. Disabling Sprint PCS Vision will avoid any charges associated with Sprint PCS Vision services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may enable Sprint PCS Vision services again at any time.

### To disable Sprint PCS Vision services:

1. Select **Menu > Settings > PCS Vision > Disable PCS Vision**. (A message will appear.)
2. Select **Yes** (right softkey) to confirm that you want to sign out.

### To enable Sprint PCS Vision services:

1. Select **Menu > Settings > PCS Vision > Enable PCS Vision**. (A message will appear.)
2. Press **OK** to enable Vision service.

# Selective Call Block

---

## Enabling Selective Call Block

You can enable Call Block for selected calls that you do not wish to answer.

1. Select **Menu > Settings > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Selective Call Block**.



# Controlling Your Roaming Experience

---

## In This Section

---

- ◆ **Understanding Roaming** (page 69)
  - ◆ **Setting Your Phone's Roam Mode** (page 71)
  - ◆ **Using Call Guard** (page 72)
  - ◆ **Using Data Roam Guard** (page 73)
- 

**Roaming is the ability to make or receive calls when you're off the Nationwide Sprint PCS Network.** Your new dual-band/tri-mode LX350 by LG works anywhere on the Nationwide Sprint PCS Network and allows you to roam on other analog and 1900 and 800 MHz digital networks where we've implemented roaming agreements with other carriers.

This section explains how roaming works as well as special features that let you manage your roaming experience.

# Understanding Roaming

---

## Recognizing the Roaming Icon on the Display Screen

Your phone's display screen always lets you know when you're off the Nationwide Sprint PCS Network. Any time you are roaming, the phone displays the roaming icon (  ). If you are roaming on a digital system, the roaming icon will be displayed along with the text – **Digital Roam** – . If you are roaming on an analog system, the roaming icon will be displayed along with the text – **Analog Roam** – .

---

**Tip:** Remember, when you are using your phone off the Nationwide Sprint PCS Network, always dial numbers using 11 digits (1 + area code + number).

---

---

**Note:** Unless your Sprint PCS Service Plan includes roaming, you will pay a higher per-minute rate for roaming calls.

---

## Roaming on Other Digital Networks

When you're roaming on other digital networks, your call quality and security will be similar to the quality you receive when making calls on the Nationwide Sprint PCS Network. However, you may not be able to access certain features, such as Sprint PCS Vision.

---

**Note:** If you're on a call when you leave the Nationwide Sprint PCS Network and enter an area where roaming is available, your call is dropped. If your call is dropped in an area where you think Sprint PCS Service is available, turn your phone off and on again to reconnect to the Nationwide Sprint PCS Network.

---

## Roaming on Analog Networks

When you roam on analog networks, you will experience a similar quality provided by other analog carriers today. Although some features, such as Sprint PCS Vision and Sprint PCS Voice Command, will be unavailable, you can still make and receive calls and access voicemail. If you are accustomed to Sprint PCS Service, you may notice some of the following differences when using analog service:

- You are more likely to experience static, crosstalk, fade-out, and dropped calls.
- Some features which are standard on the Nationwide Sprint PCS Network, such as call waiting, Sprint PCS Vision, and direct international dialing, may be unavailable.
- Though callers can leave voicemail messages while you are roaming, you will not receive notification until you return to the Nationwide Sprint PCS Network. (See “Checking for Voicemail Messages While Roaming” on page 71.)
- There are security and privacy risks (eavesdropping and cloning) that exist with conventional analog services today.
- Your battery’s charge will deplete more quickly and you will need to recharge it more often when you use your phone for analog roaming.

---

**Note:** When using your phone in analog mode, the phone may feel warm. This is normal for analog operation.

---

## Checking for Voicemail Messages While Roaming

When you are roaming off the Nationwide Sprint PCS Network, you will not receive on-phone notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended period of time.

**To check your voicemail while roaming:**

1. Dial 1 + area code + your phone number.
2. When you hear your voicemail greeting, press .
3. Enter your passcode at the prompt and follow the voice prompts.

When you return to the Nationwide Sprint PCS Network, voicemail notification will resume as normal.

## Setting Your Phone's Roam Mode

Your phone allows you to control your roaming capabilities. By using the **Roaming** menu option, you can determine which signals your phone accepts.

### Set Mode

Choose from three different settings on your dual-band phone to control your roaming experience.

**To set your phone's roam mode:**

1. Select **Menu > Settings > Roaming > Set Mode**.
2. To select an option, highlight it and press .

- **Automatic** seeks Sprint PCS Service. When Sprint PCS Service is unavailable, the phone searches for an alternate system.
- **Sprint Only** allows you to access the Nationwide Sprint PCS Network only and prevents roaming on other networks.
- **Roaming Only** forces the phone to seek a roaming system. The previous setting (Sprint Only or Automatic) is restored the next time the phone is turned on.

## Using Call Guard

---

Your phone has two ways of alerting you when you are roaming off the Nationwide Sprint PCS Network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming charges by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on the Nationwide Sprint PCS Network.)

**To turn Call Guard on or off:**

1. Select **Menu > Settings > Roaming > Call Guard**.
2. Highlight **On** or **Off** and press .

---

**Note:** Voice dialing and speed dialing are not available when you are roaming with Call Guard enabled.

---

**To place roaming calls with Call Guard on:**

1. From standby mode, dial 1 + area code + the seven-digit number and press . (You can also initiate a call from the Contacts, Call History, or Messaging.)
2. Select **Roam Call**.

To answer incoming roaming calls with Call Guard on:

1. Press . (A message will be displayed notifying you that roaming charges will apply.)
2. Select **Answer**.

---

**Note:** If the Call Guard feature is set to **On**, you need to take extra steps to make and receive roaming calls.

---

## Using Data Roam Guard

---

When Data Roam Guard is enabled, you will be asked if you want to continue using your browser or other online applications when you are in a data roaming area. When Data Roam Guard is turned off, your phone will establish or maintain a data connection in a data roaming area without asking you for permission.

To turn Data Roam Guard on or off:

1. Select **Menu > Settings > Roaming > Data Roam Guard**.
2. Highlight **Always Ask** or **Never Ask Again** and press .

# Managing Call History

---

### In This Section

---

- ◆ **Viewing History** (page 75)
  - ◆ **Call History Options** (page 76)
  - ◆ **Making a Call From Call History** (page 77)
  - ◆ **Saving a Phone Number From Call History** (page 77)
  - ◆ **Prepending a Phone Number From Call History** (page 78)
  - ◆ **Erasing Call History** (page 79)
- 

**The Call History keeps track of incoming calls, calls made from your phone, and missed calls.** This section guides you through accessing and making the most of your Call History.

# Viewing History

---

You'll find the Call History feature very helpful. It is a list of the last 50 phone numbers (or Contacts entries) for calls you placed, accepted, or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Contacts entry name (if the phone number is in your Contacts). All call logs (same number and type of call) may appear on the list.

To view a Call History entry:

1. Press **Menu** > **Call History**, and then select **Missed Calls**, **Incoming Calls**, **Outgoing Calls**, or **Recent Calls**.
2. Highlight the entry you wish to view and press .

---

**Note:** Call History records only calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not appear in the phone's Incoming or Missed call logs.

---

---

**Note:** If you return a call from the voicemail menu, it will not appear in your phone's Outgoing call log.

---



# Call History Options

---

For additional information and options on a particular call, highlight a Call History entry and press . This feature displays the date and time of the call, the phone number (if available), and the caller's name (if the number is already in your Contacts). By pressing , you can select from the following options:

- **Call** to dial the number.
- **Save** to save the number if it is not already in your internal Contacts. (See “Saving a Phone Number From Call History” on page 77.)
- **Send Message** to send a message.
- **Prepend** to add numbers to the beginning of the selected number. (See “Prepending a Phone Number From Call History” on page 78.)
- **Delete** to delete the entry.
- **Next** to view the next entry.
- **Prev** to view the previous entry.

---

**Tip:** You can also view the next Call History entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

---

# Making a Call From Call History

---

To place a call from Call History:

1. Select **Menu > Call History**, and then select **Missed Calls**, **Incoming Calls**, **Outgoing Calls**, or **Recent Calls**.
2. Use your navigation key to select a Call History entry and press .

---

**Note:** You cannot make calls from Call History to entries identified as **No ID** or **Restricted**.

---

## Saving a Phone Number From Call History

---

Your phone can store up to 500 Contacts entries. Contacts entries can store up to a total of five phone numbers, and each entry's name can contain 32 characters.

To save a phone number from Call History:

1. Use your navigation key to select a Call History entry and press .
2. Scroll to **Save** and press .
3. Select **New Entry** to create a new internal Contacts entry for the number or **Existing Entry** to save the number to an existing entry.
4. Use your navigation key to highlight the information you want to edit, and then press .

5. Use the keypad to type in the new entry name and press .

– or –

Use your navigation key to scroll through your existing Contacts entries, highlight a name, and press .

6. Use your navigation key to select a phone number type (Mobile, Home, Office, etc.) and press .
7. Press **Done** (left softkey) to save the entry.

After you have saved the number, the new Contacts entry is displayed. (See “Contacts Entry Options” on page 83.)

---

**Note:** You cannot save phone numbers already in your Contacts or from calls identified as **No ID** or **Restricted**.

---

## Prepending a Phone Number From Call History

---

If you need to make a call from Call History and you happen to be outside your local area code, you can add the appropriate prefix by prepending the number.

**To prepend a phone number from Call History:**

1. Select a Call History entry and press .
2. Scroll to **Prepend** and press .
3. Enter the prefix and press  to call the number.

– or –

Scroll to **Save** and press  to save the amended number in your Contacts.

# Erasing Call History

---

To erase individual Call History entries, see “Call History Options” on page 76.

To erase Call History:

1. Select **Menu > Call History > Delete History**.
2. Select **Missed Calls, Incoming Calls, Outgoing Calls, Recent Calls, or All Calls**. (A confirmation dialog will appear.)
3. If you are certain you want to erase the call history, select **Yes**.  
— or —  
Select **No** to return to the previous menu.

# Using Contacts

---

## In This Section

---

- ◆ **Adding a New Contacts Entry** (page 81)
  - ◆ **Finding Contacts Entries** (page 82)
  - ◆ **Contacts Entry Options** (page 83)
  - ◆ **Adding a Phone Number to a Contacts Entry** (page 84)
  - ◆ **Editing a Contacts Entry's Phone Number** (page 85)
  - ◆ **Assigning Speed Dial Numbers** (page 85)
  - ◆ **My Information** (page 86)
  - ◆ **Editing a Contacts Entry** (page 87)
  - ◆ **Selecting a Ringer Type for an Entry** (page 87)
  - ◆ **Wireless Backup** (page 88)
  - ◆ **Dialing Sprint PCS Services** (page 89)
- 

**Now that you know the basics that make it easier to stay in touch with people and information, you're ready to explore your phone's more advanced features.** This section explains how to use your phone's Contacts list and helps you make the most of your contacts and time when you are trying to connect with the important people in your life.

# Adding a New Contacts Entry

---

Your phone can store up to 500 Contacts entries. Contacts entries can store up to a total of five phone numbers, and each entry's name can contain 32 characters.

To add a new entry:

1. Select **Menu > Contacts > Find/Add Entry**.
2. Scroll to **<New Entry>** and press .
3. Enter a name for the new entry and press . (See "Entering Text" on page 35.)
4. Scroll to **[Add Number]**, enter the phone number, and then press .
5. Select a label field (Mobile, Home, Office, Pager, Fax, or None) and press .
6. Scroll down to additional fields and enter or edit information as desired.
7. Press **Done** (left softkey).

---

**Shortcut:** You can also begin by entering the phone number in standby mode and selecting Save. (See "Saving a Phone Number" on page 30.)

---

After you have saved the number, the new Contacts entry is displayed. (See "Contacts Entry Options" on page 83.)

# Finding Contacts Entries

---

There are several ways to display your Contacts entries: by name, by speed dial number, and by group. Follow the steps outlined in the sections below to display entries from the Contacts menu.

## Finding Names

To find Contacts entries by name:

1. Select **Menu > Contacts > Find/Add Entry**.
2. Scroll through all the entries using your navigation key.  
— or —  
Enter the full letter of a name or part of a name.
3. To display an entry, highlight it and press .
4. To dial the entry's default phone number, press   
— or —  
To display additional Contacts entries, press the navigation key left or right.

---

**Shortcut:** From standby mode, press **Contacts** (right softkey) to display the Contacts feature.

---

## Finding Group Entries

To find entries designated as part of a group:

1. Select **Menu > Contacts > Groups**.
2. Scroll through the group titles using your navigation key.  
To display entries belonging to a group, highlight the group and press .

3. To display an entry within the group, highlight it and press .
4. To dial the entry's default phone number, press .  
— or —  
To display additional Contacts entries, press the navigation key left or right.

## Finding Speed Dial Numbers

To find phone numbers you have stored in speed dial locations:

1. Select **Menu > Contacts > Speed Dials**.
2. Scroll through speed dial entries using your navigation key. Speed dial numbers are displayed in numeric order.  
— or —  
Enter the number of a speed dial location using your keypad.
3. To display an entry, highlight it and press .
4. To dial the entry's default phone number, press .  
— or —  
To display additional Contacts entries, press the navigation key left or right.

## Contacts Entry Options

To access a Contacts entry's options, display the entry, highlight **<Edit Entry>**, and press . To select an option, highlight it and press .

-  **[Add Number]** to add a phone number to the entry. (See “Adding a Phone Number to a Contacts Entry” on page 84.)



-  **[Add Email]** to add an email address to the entry.
-  **No Group** to assign the entry to a group.
-  **Default** to assign a preprogrammed or downloaded ringer.
-  **[Memo]** to add a note, street address, or other information.
-  **Preloaded** to assign an image type to the entry.
-  **[URL]** to add a Web site's URL. to the entry.

---

**Tip:** You can view the next entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

---

## Adding a Phone Number to a Contacts Entry

---

To add a phone number to an entry:

1. Display a Contacts entry. (See “Finding Contacts Entries” on page 82.)
2. Scroll to **<Edit Entry>** and press .
3. Highlight **[Add Number]** and press .
4. Enter the new phone number and press .
5. Use the keypad to enter the new number and press .
6. Press **Done** (left softkey) to save the new number.

— or —

Press **Options** (right softkey), assign a speed dial number for the number, and then press **Done** (left softkey) to save your new settings.

# Editing a Contacts Entry's Phone Number

To edit an entry's phone number:

1. Display a Contacts entry (see page 81).
2. Scroll to **<Edit Entry>** and press .
3. Highlight the number you wish to edit and press .
4. Press  to clear one digit at a time, or press and hold  to erase the entire number.
5. Re-enter or edit the number and press .
6. Press **Done** (left softkey) to save the number.

— or —

Press **Options** (right softkey) for additional options.  
When you're finished, press **Done** (left softkey) to save your new settings.

## Assigning Speed Dial Numbers

Your phone can store up to 99 phone numbers in speed dial locations. For details on how to make calls using speed dial numbers, see “Using Speed Dialing” on page 34.

Speed dial numbers can be assigned when you add a new Contacts entry, when you add a new phone number to an existing entry, or when you edit an existing number.

To assign a speed dial number to a new phone number:

1. Add a phone number to a new or to an existing Contacts entry. (See “Adding a New Contacts Entry” on page 81 or “Adding a Phone Number to a Contacts Entry” on page 84.)
2. Press **Options** (right softkey).
3. Highlight **Set Speed Dial** and press .

4. Select an available speed dial location and press  .  
(A confirmation will be displayed.)
5. Scroll to **Set Speed Dial** and press  .  
(A confirmation will be displayed.)
6. Press **Done** (left softkey) to save the new speed dial number.

#### To assign a speed dial number to an existing phone number:

1. Display a Contacts entry. (See “Finding Contacts Entries” on page 82.)
2. Scroll to **<Edit Entry>** and press  .
3. Highlight the phone number for which you wish to assign a speed dial number, and press **Options** (right softkey).
4. Highlight **Set Speed Dial** and press  .
5. Select an available speed dial location and press  .
6. Scroll to **Set Speed Dial** and press  . (A confirmation will be displayed.)
7. Press **Done** (left softkey) to save the new speed dial number.

---

**Note:** If you attempt to assign an already in-use speed dial location to a new phone number, a dialog will appear asking if you wish to replace the existing speed dial assignment. Select **Yes** to assign the location to the new phone number and delete the previous speed dial assignment.

---

## My Information

---

You can view your phone number, edit entry and send vCard via Bluetooth.

#### To access to My Information:

1. Select **Menu > Contacts > My Information**.

# Editing a Contacts Entry

---

To make changes to an entry:

1. Display a Contacts entry.
2. Scroll to **<Edit Entry>** and press .
3. Highlight the part of the entry you wish to edit (**Name**, **Group**, **Ringer**, etc.) and press .
4. Add or edit the desired information and press .
5. Press **Done** (left softkey) to save your changes.

## Selecting a Ringer Type for an Entry

---

You can assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 41.)

To select a ringer type for an entry:

1. Display a Contacts entry.
2. Scroll to **<Edit Entry>** and press .
3. Highlight the current ringer type and press  to display the Ringer Type menu.
4. Select a ringer menu by pressing **Options** (right softkey) and choosing **Single Tones** or **Ring Tones** for preprogrammed ringers or **My Content** for downloaded ringers.
5. Use your navigation key to scroll through available ringers. (When you highlight a ringer type, a sample ringer will sound.)
6. Highlight your desired ringer and press .

7. Press **Done** (left softkey) to save the new ringer type.

— or —

1. Display a Contacts entry and press .
2. Scroll to **<Edit>** and press .
3. Highlight the current ringer type and press the navigation key right or left to display available ringer types. As each ringer is displayed, you will hear a preview of that ringer's sound.
4. When you've selected your desired ringer, press **Done** (left softkey) to save the new ringer type.

## Wireless Backup

---

Wireless Backup allows you to back up all of your Contacts to the Sprint Web site and restore them if your phone is lost, stolen, damaged, or replaced.

**To subscribe to the Wireless Backup service from your Contacts:**

1. Select **Menu > Contacts > Wireless Backup** (  ).
2. Select **<Subscribe>** and press .

**Subscribe**—Launches the subscription process. If you are already subscribed to wireless backup, Unsubscribe will be displayed.

To subscribe to the wireless backup service, you will need to purchase a license to use the wireless backup service via the Sprint vending machine, accessed through the WAP browser on your phone. The license expires after a set period of time and must be renewed regularly. As part of the initial subscription process, a random wireless backup password is generated. The randomly-generated password will be sent to your phone as an SMS text message.

**Alert**—Turns the pop-up alert on or off when a Wireless Backup is in progress.

**Learn More**—Displays a series of information screens about the Wireless Backup service.

## Dialing Sprint PCS Services

Your Contacts list is preprogrammed with contact numbers for various Sprint PCS Services.

To dial a service from your Contacts:

1. Select **Menu > Contacts > Services** (  ).
2. Select **Customer Service, Dir Assistance, Account Info, Sprint Operator, or Voice Command.**

To dial a service from standby mode using your keypad:

1. Dial the appropriate service number:
  - **Customer Service** —  
  - **Sprint 411** —   
  - **Account Info** —  
  - **Sprint Operator** — 
  - **Voice Command** — 
2. Press  to place the call.

# Using the Phone's Calendar and Tools

---

### In This Section

---

- ◆ Using Your Phone's Calendar (page 91)
  - ◆ Using Your Phone's Alarm Clock (page 95)
  - ◆ Using Your Phone's Notepad (page 96)
  - ◆ Using Your Phone's Tools (page 96)
- 

**Your phone is equipped with several personal information management features that help you manage your busy lifestyle.** This section shows you how to use these features to turn your phone into a time management planner that helps you keep up with your contacts, schedules, and commitments. It takes productivity to a whole new level.

# Using Your Phone's Calendar

## Adding an Event to the Calendar

Your Calendar helps organize your time and reminds you of important events.

To add an event:

1. Select **Menu > Tools > Scheduler**.
2. Using your navigation key, highlight the day to which you would like to add an event and press **Add** (left softkey).

---

**Tip:** Press the navigation key up or down to scroll by week through the Calendar.

---

3. Select a time for the event by highlighting the time field and pressing .
  - Using your keypad and/or navigation key, set the start and end time for the event and press .
4. Select a title for the event by highlighting **[Content]** and pressing .
  - Enter the event title and press . (See “Entering Text” on page 35.)
5. Select a repeating status for the event by highlighting the repeat field and pressing .
  - Highlight **None, Daily, Mon - Fri, Weekly, Monthly, or Yearly** and press .
6. Select an alarm time for the event by highlighting the alarm field and pressing .
  - Highlight **None, On time, 5 minutes, 10 minutes, 1 hour, 1 day, or 2 days** and press .



7. Select a ringer type for the alarm by highlighting the ringer field and pressing .
  - To select a ringer menu, select **Options > Single Tones/Ring Tones** for preprogrammed ringers or **Options > My Content** for downloaded ringers.
8. Press **Save** (left softkey) to save the event.

## Event Alerts

There are several ways your phone alerts you to scheduled events:

- By playing the assigned ringer type.
- By illuminating the backlight.
- By flashing the LED.

## Event Alert Menu

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary. To silence the alarm and reset the schedule, press .

To view additional options, press the appropriate softkey.

- **Details** (right softkey) displays the event detail screen.
- **Snooze** (left softkey) silences the alarm and schedules it to replay again in 10 minutes.

## Viewing Events

To view your scheduled events:

1. Select **Menu > Tools > Scheduler**.
2. Using your navigation key, highlight the day for which you would like to view events and press . (If you have events scheduled for the selected day, they will be listed in chronological order.)

---

**Tip:** In the calendar view, days with events scheduled are underlined.

---

3. To display the details of an event listed in the schedule, highlight it and press .

## Going to Today's Calendar Menu

To go to the Calendar menu for today's date:

- ▶ Select **Menu > Tools > Scheduler > Options > Go to Today**.

## Erasing a Day's Events

To erase a day's scheduled events:

1. Select **Menu > Tools > Scheduler**.
2. Using your navigation key, highlight the day for which you would like to erase events and press .

---

**Tip:** In the calendar view, days with events scheduled are underlined.

---

3. Select **Options > Delete All**. (An alert will appear notifying you of the number of events to be erased.)
4. Select **Yes** or **No**.

---

**Note:** If the day for which you are erasing events contains a repeating event, you will receive the following prompt: “This is a recurring event. <event name>.” Select **Delete this** to erase a single occurrence, **Delete all** to erase all occurrences of the event, or **Cancel** to cancel the deletion of the repeating event.

---

## Purging Events

To delete events scheduled before a specific time and date:

1. Select **Menu > Tools > Scheduler > Options > Delete Old**.
2. Select the option to erase events older than **One week**, **One month**, **One year**, or **One day**. (A dialog will be displayed to inform you how many old events have been erased.)

## Purging All Events

To delete all scheduled events:

1. Select **Menu > Tools > Scheduler > Options > Delete All**. (A dialog will be displayed informing you how many events will be erased.)
2. Select **Yes** to erase all events or **No** to return to the calendar view.

# Using Your Phone's Alarm Clock

Your phone comes with a built-in alarm clock with multiple alarm capabilities.

To use the alarm clock:

1. Select **Menu > Tools > Alarm Clock**.
2. Select **Alarm 1, Alarm 2, Alarm 3, or Quick Alarm**.
3. Turn the alarm on or off by highlighting the activation field and pressing .
  - Select **On** or **Off** and press .
4. Select a time for the alarm by highlighting the time field and pressing .
  - Using your keypad and/or navigation key, set the alarm time and press .
5. Select a repeating status for the alarm by highlighting the repeat field and pressing .
  - Highlight **Once, Daily, Mon - Fri, or Weekends** and press .
6. Select a ringer type for the alarm by highlighting the ringer field and pressing .
  - To select a ringer menu, select **Options > Single Tones** (or **Options > Ring Tones**) for preprogrammed ringers, or **Options > My Content** for downloaded ringers, and press .
7. Press **Save** (left softkey) to save your alarm settings.

# Using Your Phone's Notepad

---

Your phone comes with a notepad you can use to compose and store reminders and notes to help keep you organized.

To compose a note:

1. Select **Menu > Tools > Notepad > <Add New>**.
2. Type your note using the numeric keypad and press . (See “Entering Text” on page 35.)

To read a saved note:

1. Select **Menu > Tools > Notepad**.
2. Highlight a note and press .

To delete saved notes:

1. Select **Menu > Tools > Notepad**.
2. Highlight a note and press .
3. Press **Delete** (right softkey).
4. Scroll to **Yes** and press .

# Using Your Phone's Tools

---

In addition to helping you be more efficient and organized, your phone offers useful and entertaining tools.

## Using EZ Tips

To quickly and easily calculate tip amounts:

1. Select **Menu > Tools > Ez Tip Calculator**.

2. Use your keypad and navigation key to enter the bill amount and desired tip percentage. (The correct tip will be calculated instantly.)
3. If you're splitting the check, highlight **Split** and enter the number of people in your party. (An equal split of the bill will be calculated and displayed.)

## Using the Calculator

Your phone comes with a built-in calculator.

To use the calculator:

1. Select **Menu > Tools > Calculator**.
2. Enter numbers using your keypad.
  - Press  to enter decimal points.
  - Press  to change the numeric value from positive to negative.
  - Press **Clear** (left softkey) to clear all numbers.
3. Press  for the total.

## World Clock

To view the time in over 50 different locations:

1. Select **Menu > Tools > World Clock**.
2. Press **Cities** (right softkey) to select a city.  
— or —

Press the navigation key left or right to scroll through different time zones.

# Using Your Phone's Voice Services

---

## In This Section

---

- ◆ **Managing Voice Memos** (page 99)
  - ◆ **Automatic Speech Recognition (ASR)** (page 100)
- 

**Your phone's Voice Services let you place calls using your voice, store voice reminders, and record memos right on your phone.** This section includes easy-to-follow instructions on using voice-activated dialing and managing voice memos.

# Managing Voice Memos

You can use your phone's Voice Services to record brief memos to remind you of important events, phone numbers, or grocery list items.

## Recording Voice Memos

To record a voice memo:

1. Select **Menu > Tools > Voice Memo**.
2. Scroll to **<Record New>** and press . (The phone prompts you to start recording after the beep.)
3. Wait for the beep and then start speaking. (As it is recording, the phone displays a countdown timer that shows how many seconds are left for recording.)

To end the recording of your memo:

- ▶ Press .

To record a conversation during a phone call:

- ▶ During a call, scroll to **Record Voice Memo** and press . (A one-minute counter is displayed on the screen to indicate the amount of time a single voice memo can be recorded.)

To end the recording of your conversation:

- ▶ Scroll to **Stop Voice Memo** and press  to end the recording prior to the countdown completion.

---

**Note:** Your phone can store a total of three minutes of memos.

---

## Voice Memo Options

To play the voice memos you have recorded:

1. Press **Menu > Tools > Voice Memo**.



2. Scroll to the voice memo you wish to hear and press .
  - **Play** to play the selected voice memo.
  - **Set As** to assign the recording as a default ringer, a voicemail alert, a message alert, or a Contacts ringer.
  - **View Details** to view the selected voice memo information.
  - **Edit Title** to edit the selected voice memo title.
  - **Delete** to erase the selected voice memo.
3. Scroll to **Play** and press .

## Erasing Voice Memos

To erase all voice memos:

1. Select **Menu > Tools > Voice Memo**.
2. Scroll to **<Delete All>** and press .
3. Scroll to **Yes** and press to confirm that you want to erase all voice memos.

## Automatic Speech Recognition (ASR)

---

To access Voice Command by pressing the Voice Services Key ():

1. Press the left side key ().
2. After hearing the message “Please say the contact name” or a beep, say the name of a Contacts list entry.
3. If the correct name is displayed, select to confirm the call.
4. If the Contact is not listed, repeat steps 1 and 2.

# Using Your Phone's Built-in Camera

---

### In This Section

---

- ◆ **Taking Pictures** (page 102)
  - ◆ **Storing Pictures** (page 109)
  - ◆ **Recording Videos** (page 112)
  - ◆ **Storing Videos** (page 114)
  - ◆ **Viewing and Sending Sprint PCS® Picture Mail** (page 115)
  - ◆ **Managing Sprint PCS Picture Mail** (page 121)
- 

**Your phone's built-in camera gives you the ability to take full-color digital pictures, view your pictures using the phone's display, and instantly send them to family and friends. It's fun and as easy to use as a traditional point-and-click camera: just take a picture, view it on your phone's display, and send it from your phone to up to 25 people.**

This section explains the features and options of your phone's built-in camera.

# Taking Pictures

---

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate the phone's camera mode whether the phone is open or closed.

**To take a picture with the phone open:**

1. Select **Menu > Pictures > Camera** to activate camera mode. For Shortcut to camera mode, you can also press the camera button twice or just press the side camera button to access the camera menu. (Additional camera options are available through the camera mode **Options** menu. See "Camera Mode Options" on page 105 for more information.)

---

**Shortcut:** You must press and hold side camera key to access the camera. To return to camera mode, the user must selection Options and then Take New Picture. (see illustration on page 11).

---

2. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
3. Press **Capture** (left softkey), , , or the side camera button until the shutter sounds. (The picture will automatically be saved in the In Phone Folder.)
  - To return to camera mode to take another picture, press .
4. Press **Options** (right softkey) for more options:
  - **Send** to send the picture to up to 25 contacts at one time. (See page 117 for details.)

- **Upload** to upload the picture you just took to the Sprint PCS Picture Mail Web site ([www.sprint.com/picturemail](http://www.sprint.com/picturemail)). Depending on your settings, you may be prompted to accept a Sprint PCS Vision connection.
- **Assign** to assign the picture to a phone task. Select an option:
  - **Picture ID** to assign the picture to a Contacts entry.
  - **Screen Saver** to use the picture as a screen saver.
  - **Incoming Calls** to display the picture for all incoming calls.
- **Delete** to delete the picture you just took.
- **Order Prints** to print an image by mail or at a retail outlet.
- **Post to Service** to send the image to a number of popular third-party Web image services.
- **Review/Send Media** to go to the In Phone Folder to review your saved pictures.
- **Take New Picture** to return to Camera mode to take another picture.

### To take a picture with the phone closed:

1. Press and hold the side camera button to activate camera mode.
2. Point the camera lens at your subject. (You can check the picture framing through the external display screen.)

---

**Note:** When taking a picture with the phone closed, the subject image appears in reverse on the external display. The captured image will not be saved in reverse.

---

3. Press the side camera button to take the picture. (The picture will automatically be saved in the In Phone Folder.)

## Creating Your Sprint PCS Picture Mail Password

The first time you use any of the picture management options involving the Sprint PCS Picture Mail Web site, you will need to establish a Sprint PCS Picture Mail password through your Sprint PCS Vision Picture Phone. This password will also allow you to sign in to the Sprint PCS Picture Mail Web site at [www.sprint.com/picturemail](http://www.sprint.com/picturemail) to access and manage your uploaded pictures and albums.

To create your Sprint PCS Picture Mail password:

1. Select **Menu > Pictures > My Albums > Online Albums > View Albums**. (You will be prompted to create a Sprint PCS Picture Mail password.)

---

**Note:** If your Sprint PCS Service Plan does not include Sprint PCS Picture Mail, you will first be prompted to subscribe to the service for an additional monthly charge.

---

2. Enter a four- to eight-digit password and press . (You will be prompted to confirm your password.)
3. Please wait while the system creates your account.

---

**Tip:** Write down your Sprint PCS Picture Mail password in a secure place.

---

Once you have received confirmation that your account has been successfully registered, you may upload and share pictures and access the Sprint PCS Picture Mail Web site.

## Camera Mode Options

When the phone is open and in camera mode, press **Options** (right softkey) to display additional camera options:

- **Flash** to activate the flash. (See “Setting the Flash” on page 106 for details.)
- **Self Timer** to activate the camera’s timer. (See “Setting the Self-Timer” on page 106 for details.)
- **Color Tone**: Press the navigation key right or left to select **Normal**, **Black & White**, **Negative**, or **Sepia**. (The default setting is **Normal**.)
- **Image Controls** to select from the following options:
  - **Brightness** to select **Auto** or **Manual** brightness control. If you select **Manual**, press the navigation key right (increase) or left (decrease) to select a setting, and press  to apply the selected setting.
  - **White Balance** to adjust white balance based on changing conditions. Select from **Auto**, **Tungsten**, **Fluorescent**, **Sunny**, or **Cloudy**.
- **Settings** to select **Resolution**, **Quality**, **Shutter Sound**, or **Full Screen**. (See “Selecting Camera Settings” on page 107 for details.)
- **Review/Send Media** to display the pictures saved in the In Phone folder and/or to send the picture.
- **Camcorder Mode** to switch to Video mode. (See “Recording Videos” on page 112 for details.)

## Setting the Flash

To activate the flash:

1. From camera mode, select **Options > Flash**.
2. Select one of the following options and press :
  - **Off** to deactivate the flash.
  - **On This Shot** to activate the flash for one shot.
  - **Always On** to activate the flash for all pictures.

---

**Note:** While the phone is open and in camera mode, the flash may be turned on by pressing the voice services key ().

---

## Setting the Self-Timer

To activate the self-timer:

1. From camera mode, select **Options > Self Timer**.
2. Highlight the length of delay you want the timer to use (**5 seconds** or **10 seconds**) and press .
3. Select **Start** (left softkey) when you are ready to start the timer. ( appears on the upper right portion of the main LCD during the self-timer countdown.)
4. Get ready for the picture. (When the timer is down to three seconds, the self-timer icon will turn red and the phone will begin to beep.)

To cancel the self-timer after it has started:

- ▶ Press **Cancel** (right softkey).

---

**Note:** While the self-timer is active, all keys are disabled except **Back**, **End**, and the right softkey button **Cancel**.

---

## Using the Zoom

This feature allows you to zoom in on an object when you take a picture. Depending on your resolution settings, you can adjust the zoom from 1x to 15x.

To use the zoom:

1. From camera mode, press the navigation key or the side volume key up or down to adjust the zoom. (The gauge bar appears.)
2. Press **Capture** (left softkey), , , or the side camera button to take the picture. (The picture will automatically be saved in the In Phone Folder.)

---

**Note:** The Zoom gauge will not appear when the Resolution setting is 1.3M. Zoom is only offered when using VGA or QVGA resolution.

---


## Selecting Camera Settings

To select your camera settings:

1. From camera mode, select **Options > Settings**.
2. Select one of the following options and press  :
  - **Resolution** to select a picture's file size (**1.3M[960\*1280]**, **VGA[480\*640]**, or **QVGA[240\*320]**).
  - **Quality** to select the picture quality setting (**Fine**, **Normal**, or **Economy**).
  - **Shutter Sound** to select a shutter sound (**Shutter 1~4**, or **Off**).
  - **Full Screen** to expand the camera display to full-screen view without icons (except the flash icon).



# Viewing Your Camera's Status Area Display

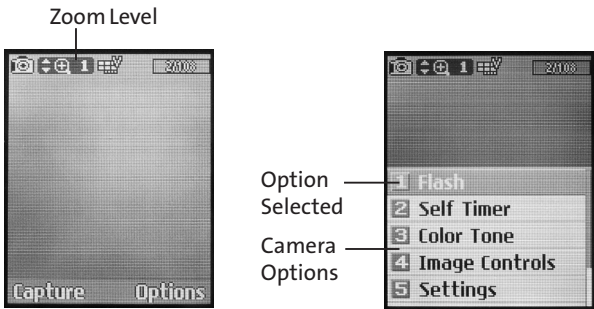

# Storing Pictures

Your phone's picture storage area is called **My Albums**. Pictures are stored in the **In Phone** folder.

## In Phone Folder

Once a picture is taken, it is automatically saved to the **In Phone** folder. From the In Phone Folder, you can view all of the pictures you have taken, store selected images in your phone, send pictures to the Sprint PCS Picture Mail Web site ([www.sprint.com/picturemail](http://www.sprint.com/picturemail)), delete images, and access additional picture options.

To review your stored pictures in the In Phone folder:

1. Select **Menu > Pictures > My Albums > In Phone**.
2. Use your navigation key to view and scroll through the pictures.

## In Phone Folder Options

When you are viewing the In Phone folder, press **Options** (right softkey) to display the following options:

- **Play** to play the video that was just recorded (if applicable).
- **Send** to send an image to another user using picture mail.
- **Upload** to upload pictures from the In Phone folder to the Sprint PCS Picture Mail Web site ([www.sprint.com/picturemail](http://www.sprint.com/picturemail)). Depending on your settings, you may be prompted to accept a Sprint PCS Vision connection. Choose from the following options:
  - **Upload Selection** to upload the selected pictures. Press  to select a picture. (The check box on the lower right corner will be marked.)

- **Upload All** to upload all pictures in the In Phone folder.

---

**Note:** If this is the first time you have accessed the Sprint PCS Picture Mail account, you will be prompted to create your Sprint PCS Picture Mail password. See “Creating Your Sprint PCS Picture Mail Password” on page 104.

---

- **Assign**

- **Picture ID** to display the currently highlighted picture for incoming calls from a specific Contacts entry. Select the desired entry and press .
- **Screen Saver** to display the currently highlighted picture as a screen saver.
- **Incoming Calls** to display the picture for all incoming calls.

---

**Note:** Pictures assigned as Picture ID or Screen Savers will automatically be copied to the **In Phone** folder.

---

- **Delete** to delete pictures in the In Phone Folder. Select **Delete selection**, or **Delete all**.

---

**Note:** Deleting pictures will free up memory space in your phone to enable you to take more pictures. Once deleted, pictures cannot be uploaded to your online Sprint PCS Picture Mail account or assigned to phone tasks.


---

- **Order Prints** to print an image by mail or at a retail outlet.
- **Post to Service** to send the image to a number of popular third-party Web image services.
- **Details/Edit** to display the following options:
  - **Text Caption** to edit the selected picture's caption.
  - **Picture Info** to display information such as the picture's caption, time/date, and size.
  - **Rotate** to rotate the selected picture. To rotate, press **Options** (right softkey).

- **Album List** to display the My Albums list.
- **Media Filter** to display the following options:
  - **All** to display all media.
  - **Pictures Only** to display only pictures.
  - **Videos Only** to display only videos.
- **Camera/Camcorder Mode** to activate Camera/Camcorder mode.

When you are viewing the In Phone folder, press **Expand** (left softkey) to display the following option:

- **Expand/Thumbnail** to switch the display from expanded view to thumbnail view (up to four pictures per screen).

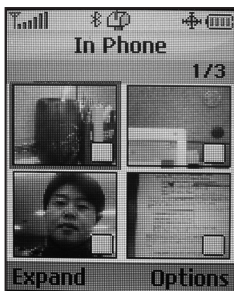

# Recording Videos

---

In addition to taking pictures, you can also record, view, and send videos to your friends and family with your phone's built-in video camera.

To record a video:

1. Select **Menu > Pictures > Camcorder** to activate video mode. (Additional video options are available through the video mode **Options** menu. See “Video Mode Options” on page 113 for more information.)
2. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
3. Press **Record** (left softkey), , , or the side camera button to begin recording. (The maximum recording time is 15 seconds.)
4. Press **Done** (left softkey) or the side camera button to stop recording. (The video will automatically be saved in the In Phone folder.)
5. Press **Options** (right softkey) for more options:
  - **Play** to play the video that was just captured.
  - **Send** to send the video.
  - **Upload** to upload videos from the In Phone Folder to the Sprint PCS Picture Mail Web site ([www.sprint.com/picturemail](http://www.sprint.com/picturemail)). Depending on your settings, you may be prompted to accept a Sprint PCS Vision connection. Choose from the following options:
    - **Upload Selection** to upload the selected videos. Press  to select a video. (The check box on the lower right corner will be marked.)

- **Upload All** to upload all videos in the In Phone folder.
- **Assign** to assign the video as an animated screen saver or ringer.
  - **Screen Saver** to display the currently highlighted picture as a screen saver.
  - **Ringers** to display the picture for all incoming calls.
- **Delete** to delete video in the In Phone folder.
- **Post to Service** to send the image to a number of popular third-party Web image services.
- **Review/Send Media** to display the videos saved in the In Phone folder and/or to send the video.
- **Take New Video** to return to camcorder mode.

## Video Mode Options

When the phone is open and in camcorder mode, press **Options** (right softkey) to display additional camera options:

- **Video Light** to activate the video light.
- **Color Tone:** Press the navigation key right or left to select **Normal**, **Black & White**, **Negative**, or **Sepia** (default setting is **Normal**).
- **Image Controls** to select from the following options:
  - **Brightness** to select **Auto** or **Manual** brightness control. If you select **Manual**, press the navigation key right (increase) or left (decrease) to select a setting and press  to apply the selected setting.
  - **White Balance** to adjust white balance based on changing conditions. Select from **Auto**, **Tungsten**, **Fluorescent**, **Sunny**, or **Cloudy**.

- **Settings** to select **Cue Sound**, or **Full Screen**. (See “Selecting Video Settings” below for details.)
- **Review/Send Media** to display the videos saved in the In Phone folder / to send the video.
- **Camera Mode** to switch to Camera mode. (See “Taking Pictures” on page 102 for details.)

## Selecting Video Settings

To select your video settings:

1. From camcorder mode, select **Options > Settings**.
2. Select one of the following options and press  :
  - **Cue Sound** to select a cue sound (**Cue 1~3**, or **Off**).
  - **Full Screen** to expand the camcorder display to full-screen view without icons (except the flash icon).

## Storing Videos

---

Your phone’s video storage area is called My Albums. There are two types of folders in the My Albums menu that can be used separately according to your needs:

- **In Phone** (See “In Phone Folder” on page 109.)
- **Online Albums**

# Viewing and Sending Sprint PCS® Picture Mail

Once you've taken a picture, you can use the messaging capabilities of your phone to instantly share the picture with family and friends. You can send a picture to up to 25 people at a time using their email addresses or their wireless phone numbers.

## Viewing Pictures From the In Phone Folder

To view Picture Mail from the Inbox:

1. Select **Menu** > **Pictures** > **Picture Mail** > **Inbox**
2. Highlight a Folder you wish to view and press .
3. Press **Options** (right softkey).
  - **Reply** to send picture mail, text mail or voicemail.
  - **Reply All** to send picture mail or text mail to all recipients.
    - ♦ **In Phone** to select pictures saved in phone.
    - ♦ **Online Albums** to select pictures saved in Online Albums.
    - ♦ **Take New Picture** to take a new picture.
    - ♦ **Take New Video** to record a new video.
    - ♦ **Text Only** to select a text only.
  - **Forward** to send picture mail to other recipients' mobile phones and email addresses.
  - **Delete** to delete selected picture mail.
  - **Assign Media** to assign the selected picture to one of these options:
    - ♦ **Picture ID** to assign the picture to a Contacts entry.



- ♦ **Screen Saver** to use the picture as a screen saver.
- ♦ **Incoming Calls** to display the picture for all incoming calls.
- **Print Media** to print an image by mail or at a retail outlet.
- **Call** to make a call to the party who sent the picture mail.
- **Save** to save Phone #s, Media Files, or Mail(Online).
- **Information** to check picture information.

#### To view Picture Mail from the Sent Mail folder:

1. Select **Menu > Pictures > Picture Mail > Sent Mail**
2. Highlight a folder you wish to view and press .
3. Press **Options** (right softkey).
  - **Forward** to send picture mail to other recipients' mobile phones and email addresses.
  - **Delete** to delete selected picture mail.
  - **Call** to make a call to the party who sent the picture mail.
  - **Save** to save Phone #s, Media Files, or Mail(Online).
  - **Information** to check picture information.

#### To view Picture Mail from the Saved Mail folder:

1. Select **Menu > Pictures > Picture Mail > Saved Mail**
2. Highlight a Folder you wish to view and press .
3. Press **Options** (right softkey).
  - **Forward** to send picture mail to other recipients' mobile and email.
  - **Delete** to delete selected picture mail.
  - **Call** to make a call to the party who sent the picture mail.

- **Save** to save Phone #s, Media Files, or Mail(Online).
- **Information** to check picture information.

To view Picture Mail from the Pending folder:

You can check to see if there are pictures waiting to be sent, or to see if pending pictures have been successfully sent.

- ▶ Select **Menu > Pictures > Picture Mail > Pending**

## Sending Pictures From the In Phone Folder

To send pictures from the In Phone folder:

1. Select **Menu > Pictures > My Albums > In Phone**.
2. Highlight a picture you wish to send and press . (The check box on the lower right corner will be checked. You can select multiple pictures.)
3. Press **Options** (right softkey).
4. Select **Send** or **Post to Service** and press . (You will see a message on the display.)

---

**Note:** The first time you send Sprint PCS Picture Mail, you will be prompted to establish a Sprint PCS Picture Mail Web site account and password. (See “Creating Your Sprint PCS Picture Mail Password” on page 104.)

---

5. Press the left softkey to proceed.
6. Select **Recipients** and press .

7. Select one of the following options and press  :
  - **Contacts Entry** to select recipients from your Contacts. Highlight a recipient and press  to select.
  - **Mobile Phone#** to enter a mobile phone number directly.
  - **Email Address** to enter an email address directly.
  - **From Recent List** to select from a list of recent Sprint PCS Picture Mail or messaging recipients.
8. Press **Next** (left softkey) when you have finished adding recipients. (You may include up to 10 recipients per message.)
9. If you wish to include a text message, scroll to **Text Message** and press the appropriate softkey. Enter your message using your keypad (or press **Mode** [right softkey] to select from **Preset Messages, Recent Messages, or Signature**) and press . (See “Entering Text” on page 35.)
10. If you wish to include a voice memo with the picture, highlight the box next to **Voice Memo** and press the appropriate softkey to record. Press  to start recording. (The maximum recording time is 10 seconds.)

11. Confirm the recipients, message, voice memo, and picture.
  - To change a recipient, highlight the recipient, press the appropriate softkey, and follow the instructions in step 8 to select or edit the recipient.
  - To change the text message, scroll to **Text Message** and press the appropriate softkey.
  - To change the voice memo, highlight the box next to **Voice Memo** and press the appropriate softkey to display options:
    - ◆ **Voice Memo Play** to play the attached voice memo.
    - ◆ **Voice Memo Rec** to rerecord the voice memo.
    - ◆ **Voice Memo Erase** to delete the voice memo from the message.
  - To change the attached picture(s), select the thumbnail picture and press the appropriate softkey. Select **From My Pics.** or **Take Picture** and press . After selecting the new picture(s), press **Next** (left softkey).
12. Press the appropriate softkey to send the picture.

## Sending Pictures From Messaging

You can also send Sprint PCS Picture Mail from your phone's Messaging menu.

To send pictures from the Messaging menu:

1. Select **Menu > Messaging > Send Message > Picture Mail**.  
(The In Phone Folder will be displayed, with up to nine thumbnail pictures per screen.)
2. Use the navigation key to display the picture you wish to send and press . (You can select multiple pictures.)
3. To return to camera mode to take another picture, press **Options** (right softkey), then select **Take New Picture**.

---

**Tip:** To activate camera mode, you can also press the camera button twice or just press and hold the side camera button (see illustration on page 11).

---

# Managing Sprint PCS Picture Mail

---

## Using the Sprint PCS Picture Mail Web site

Once you have uploaded pictures from your phone to your online Sprint PCS Picture Mail account at [www.sprint.com/picturemail](http://www.sprint.com/picturemail) (see “In Phone Folder Options” on page 109), you can use your personal computer to manage your pictures. From the Sprint PCS Picture Mail Web site ([www.sprint.com/picturemail](http://www.sprint.com/picturemail)), you can share pictures, edit album titles, add captions and organize images. You can even send your pictures to be printed at participating retail locations.

You will also have access to picture management tools to improve and customize your pictures. You'll be able to lighten, darken, crop, add antique effects, add comic bubbles and cartoon effects, and use other features to transform your pictures.

**To access the Sprint PCS Picture Mail Web site:**

1. From your computer's Internet connection, go to [www.sprint.com/picturemail](http://www.sprint.com/picturemail).
2. Enter your phone number and Sprint PCS Picture Mail password to register. (See “Creating Your Sprint PCS Picture Mail Password” on page 104.)

## Managing Online Pictures and Videos From Your Phone

You can use your phone to manage, edit, or share pictures you have uploaded to the Sprint PCS Picture Mail Web site at [www.sprint.com/picturemail](http://www.sprint.com/picturemail). (See “In Phone Folder Options” on page 109 for information about uploading.)

To view your online pictures from your phone:

1. Select **Menu > Pictures > My Albums > Online Albums > View Albums**. (Depending on your settings you may be prompted to accept a Sprint PCS Vision connection.) (The **My Uploads** folder and your albums appear.)
2. Highlight **My Uploads** or an album title and press  to display images. (Thumbnail pictures, up to nine per screen, are displayed.)

---

**Tip:** To expand a selected picture from thumbnail to full-screen, select **Expand** (left softkey).

---

3. Use your navigation key to select a picture.
4. Press **Options** (right softkey) to display your online picture options.

## Uploading Pictures

To upload pictures:

1. Select **Menu > Pictures > My Albums > In Phone**. (Thumbnail pictures will be displayed.)
2. Select the picture(s) you wish to upload and select **Options** (right softkey) > **Upload**.
3. Select **Upload Selection** or **Upload All**.

## Downloading Your Online Pictures

From your online Sprint PCS Picture Mail albums display at [www.sprint.com/picturemail](http://www.sprint.com/picturemail), you can select pictures to download to your phone's In Phone folder.

To download pictures from the Sprint PCS Picture Mail Web site:

1. From the online pictures display, select the picture you wish to download and press **Options** (right softkey). (See "Managing Online Pictures and Videos From Your Phone" on page 122.)
2. Select **Save to**, then select one of the following options and press :
  - **My Album** to view highlighted pictures saved in My Album.
  - **My Content** to view highlighted content saved in My Content.



## Sending Online Sprint PCS Picture Mail

To send pictures using the online Address Book:

1. From the online Sprint PCS Picture Mail display at [www.sprint.com/picturemail](http://www.sprint.com/picturemail), select a picture you wish to send and press **Send** (left softkey). (See “Managing Online Pictures and Videos From Your Phone” on page 122.)
2. Select **Recipients > Online Addr. Book**.
3. Highlight a recipient or recipients (up to 10) from your Online Address Book and press .
4. Press **Done** (left softkey) when you have finished selecting recipients.
5. Press **Next** (left softkey).
6. To include a text message, highlight the box under **Text Message** and press the appropriate softkey. Enter your message and press .
7. Confirm your recipients and attached data.
8. Press the appropriate softkey to send the Sprint PCS Picture Mail.

To send an album from the online pictures menu:

1. From the online albums display, select an album you wish to send and press **Send** (left softkey). (See “Managing Online Pictures and Videos From Your Phone” on page 122.)
2. Follow steps 2-8 in “To send pictures using the online Address Book” above to complete and send your Sprint PCS Picture Mail album.

## Accessing Online Picture Options From Your Phone

1. Select a picture from your online Picture Mail. (See “Managing Online Pictures and Videos From Your Phone” on page 122.)
2. Select **Options** (right softkey) to display options.
3. To select an option, highlight it and press .
  - For pictures:
    - **Send** to send the selected picture to others.
    - **Assign**
      - ◆ **Picture ID** to assign the picture to a Contacts entry.
      - ◆ **Screen Saver** to use the picture as a screen saver.
      - ◆ **Incoming Calls** to display the picture for all incoming calls.
    - **Delete**
      - ◆ **Delete Selection** to delete the selected picture.
      - ◆ **Delete All** to delete all pictures.
    - **Order Prints** to order printed copies of your online pictures.
      - ◆ **Prints By Mail** to order prints that will be sent to you by mail.
      - ◆ **Print@Retail** to order prints that you can pick up at leading photo centers.
    - **Post to Service** to upload your image to a third-party online service. (Contact individual services for details.)
    - **Save to**
      - ◆ **My Album** to save to My Album.
      - ◆ **My Content** to save to My Content.

- **Copy/Move** to copy or move pictures to a selected album.
  - ◆ **Copy This** to copy the selected picture to the album.
  - ◆ **Copy All** to copy all pictures in the current album to the target album.
  - ◆ **Move This** to move the selected picture to the album.
  - ◆ **Move All** to move all pictures in the current album to the target album.
- **Details/Edit** to display the following options:
  - ◆ **Text Caption** to edit the the selected picture's caption. You can create a new caption of up to 16 characters.
  - ◆ **Picture Info** to display information such as the picture's caption, time/date, and size.
  - ◆ **Rotate** to rotate the selected picture.
- **Album List** to display the My Albums list.
- **Media Filter** to display the following options:
  - ◆ **All** to display all media.
  - ◆ **Pictures Only** to display only pictures.
  - ◆ **Videos Only** to display only videos.
- For videos:
  - **Play** to play the selected video.
  - **Send** to send the selected video.
  - **Assign**
    - ◆ **Screen Saver** to use the video as a screen saver.
    - ◆ **Ringers** to assign the video to a ringer.
  - **Delete**

- ♦ **Delete Selection** to delete the selected video.
- ♦ **Delete All** to delete all videos.
- **Post to Service**
- **Save to**
  - ♦ **My Album** to save the selected video to My Album.
  - ♦ **My Content** to save the selected video to My Content.
- **Copy/Move** to copy or move videos to a selected album.
  - ♦ **Copy This** to copy the selected video to the album.
  - ♦ **Copy All** to copy all videos in the current album to the target album.
  - ♦ **Move This** to move the selected video to the album.
  - ♦ **Move All** to move all videos in the current album to the targeted album.
- **Details/Edit** to display the following options:
  - ♦ **Text Caption** to edit the selected video's caption. You can create a new caption of up to 16 characters.
  - ♦ **Video Info** to display information such as the video's caption, time/date, and size.
- **Album List** to display the My Albums List.
- **Media Filter** to display the following options:
  - ♦ **All** to display all media.
  - ♦ **Pictures Only** to display only pictures.
  - ♦ **Videos Only** to display only videos.

### To access your online Albums options from your phone:

1. Display the album list in the Online Sprint PCS Picture Mail menu. (See “Managing Online Pictures and Videos From Your Phone” on page 122.)
2. Use your navigation key to select an album (or Inbox).
3. Select **Options** (right softkey) to display options.
4. To select an option, highlight it and press .
  - **Share Album** to share the album through the Sprint PCS Picture Mail Web site. (See “Sending Online Sprint PCS Picture Mail” on page 124.)
  - **Create Album** to create a new album. Enter a new album name and select **Save** (left softkey).
  - **Erase Album** to delete the selected album.
  - **Rename Album** to rename the selected album. Enter a new name and select **Save** (left softkey).

---

**Note:** The Inbox cannot be erased or renamed.

---

- **Next** to display the next 20 albums (if applicable).
- **Previous** to display the previous 20 albums (if applicable).

# Using Bluetooth

---

## In This Section

---

- ◆ **Turning Bluetooth On and Off** (page 130)
  - ◆ **Using the Bluetooth Settings Menu** (page 131)
  - ◆ **Bluetooth Profiles** (page 133)
  - ◆ **Pairing Bluetooth Devices** (page 134)
- 

**Your phone features built-in Bluetooth technology, allowing you to share information more easily than ever before.**

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets, hands-free car kits, and Bluetooth-enabled handhelds, PCs, printers, and wireless phones. The Bluetooth communication range is usually up to approximately 10 meters (30 feet).

This section details how to set up and make the most of your phone's Bluetooth capabilities.

# Turning Bluetooth On and Off

---

By default, your device's Bluetooth functionality is turned off. Turning Bluetooth on makes your phone "available" by other in-range Bluetooth devices.

**To turn Bluetooth on:**

1. Select **Menu > Settings > Bluetooth > On/Off**.
2. Press the navigation key up or down to select **On** and press  to enable Bluetooth.

**To turn Bluetooth off:**

1. Select **Menu > Settings > Bluetooth > On/Off**.
2. Press the navigation key up or down to select **Off** and press  to disable Bluetooth.

## Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:



indicates Bluetooth is enabled.



indicates Bluetooth headset or hands-free device is connected.



indicates PC or PDA is now under Dialup-Networking.

# Using the Bluetooth Settings Menu

The **Bluetooth Settings** menu allows you to set up many of the characteristics of your phone's Bluetooth service, including:

- Entering or changing the name your phone uses for Bluetooth communication.
- Setting your phone's visibility (or "discoverability") for other Bluetooth devices.
- Displaying your phone's Bluetooth address.

To access the **Bluetooth Settings** menu:

1. Select **Menu > Settings > Bluetooth**.
2. Use the navigation key to select **Visibility** or **Bluetooth Info**, and press .

## Bluetooth Settings: My Bluetooth Name

The **My Bluetooth Name** section of the Bluetooth Settings menu allows you to select a Bluetooth name for your phone. Your phone's Bluetooth name will appear to other in-range Bluetooth devices, depending on your visibility settings.

To set a Bluetooth name for your phone:

1. Select **Menu > Settings > Bluetooth > Bluetooth Info**.
2. Select **Rename** (left softkey).
3. Press  to clear the current name.
4. Use your keypad to enter a new name and press  to save and exit.



## Bluetooth Settings: Visibility

The **Visibility** section of the Bluetooth Settings menu allows you to manage your phone's availability to other Bluetooth devices.

To configure your phone's visibility (discoverability) to other Bluetooth devices:

1. Select **Menu > Settings > Bluetooth > Visibility**.
2. Select your desired visibility setting and press :
  - **Hidden** to prevent other Bluetooth devices from detecting and identifying your phone.
  - **Visible for 3 Min** to allow Bluetooth devices to detect and identify your phone for three minutes.
  - **Always Visible** to allow Bluetooth devices to detect and identify your phone at any time it is within range.

---

**Note:** Any changes you make to your Bluetooth settings will be saved to the current profile when you exit the Bluetooth Settings menu.

---

## Bluetooth Settings: My Bluetooth Address

To display your phone's Bluetooth address:

- ▶ Select **Menu > Settings > Bluetooth > Bluetooth Info**.

# Bluetooth Profiles

---

All the Bluetooth settings you configure are stored in your phone's Bluetooth user profile. Different profiles can be used for specific Bluetooth functions.

- **Headset Profile**—This profile functions as a wireless ear jack. When an incoming call is received, the ringer can be heard through the headset and a built-in alert tone can be heard through the handset. The call can then be received by pushing a button. While using the headset, you can use the headset instead of the phone by pushing a button on the headset, the same as inserting a jack into the phone. Increase or decrease the volume by using the volume key on the side of the handset.
- **Hands-Free Profile**—This profile functions as a wireless car kit. Incoming calls ring to the hands-free headset or device. Calls can be received by pressing a button on the headset or device. For dialing, four functions are supported: recent call dial, voice dial, speed dial and number dial. Increase or decrease the volume by using the volume key on the side of the handset.
- **DUN: Dial-Up Network Profile**—This profile functions as a wireless data cable, connecting a PC or PDA to a network through your handset.
- **Object Push Profile(OPP)**—You can send a vCard or a vCalendar in your phone to other Bluetooth-enabled devices. The menu for "Sending vCard via Bluetooth" is under "Contacts-Find/Add Entry." The menu for "Sending vCalendar via Bluetooth" is under "Tools/Scheduler."

# Pairing Bluetooth Devices

---

## Add Device

The Bluetooth pairing process allows you to establish trusted connections between your phone and another Bluetooth device. When devices are paired, a passkey is shared between devices, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your phone with another Bluetooth device:

1. Select **Menu > Bluetooth > Add Device > <Search>**. (Your phone will display a list of discovered in-range Bluetooth devices.)
2. Select the device you wish to pair with and press .
3. Enter the passkey and press .

## Supported Services

- **Audio** to use Bluetooth audio devices, such as headsets or hands-free kits. The menu for "Connect/Disconnect" can be found under "Bluetooth-Trusted Devices."
- **Dial-up Networking** to use your phone as a modem to connect to the Internet. While your phone is connected to a PC or PDA, you can dial up the phone to connect to the Internet. The menu for "DUN Enable/Disable" can be found under "Bluetooth Settings."
- **Send vCard/vCalendar (OPP)** to send a vCard or a vCalendar in your phone to other Bluetooth-enabled devices. The menu for "Sending vCard" can be found under "Contacts/Find/Add Entry." The menu for "Sending vCalendar" can be found under "Tools/Scheduler."

## Bluetooth Settings

1. Select **Menu > Bluetooth > Settings > On/Off**.

The On/Off setting in the Bluetooth Settings menu enables or disables the Bluetooth function on the handset (page 130).

2. Select **Menu > Bluetooth > Settings > DUN Service > Enabled or Disabled**.

This Bluetooth Settings menu option enables or disables Bluetooth Dial-Up Networking (page 133).

3. Select **Menu > Bluetooth > Settings > Visibility > Hidden, Visible for 3 Min, or Always Visible**.

This Bluetooth Setting menu option allows other Bluetooth devices to search for your phone.

4. Select **Menu > Bluetooth > Settings > Bluetooth Info**.

This Bluetooth Settings menu options displays information about your phone's Bluetooth configuration, and it allows you to change your phone's Bluetooth device name that is displayed on other devices.

## Using the Bluetooth transfer audio function during a call

1. Check that a Bluetooth headset is connected to your phone.
2. During the call, transfer the phone's sound output from the phone to the headset (select Transfer to BT); or from the headset to the phone (select Transfer to Phone).



## Section 3

# Sprint PCS Service Features



# Sprint PCS Service Features: The Basics

---

### In This Section

---

- ◆ **Using Voicemail** (page 139)
  - ◆ **Using SMS Text Messaging** (page 147)
  - ◆ **Using VoiceSMS Messaging** (page 150)
  - ◆ **Using Caller ID** (page 152)
  - ◆ **Responding to Call Waiting** (page 153)
  - ◆ **Making a Three-Way Call** (page 154)
  - ◆ **Using Call Forwarding** (page 155)
- 

**Now that you've mastered your phone's fundamentals, it's time to explore the calling features that enhance your Sprint PCS Service.** This section outlines your basic Sprint PCS Service features.

# Using Voicemail

---

## Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Sprint PCS Voicemail and personal greeting as soon as your phone is activated.

**To set up your voicemail:**

1. Press and hold .
2. Follow the system prompts to:
  - Create your passcode.
  - Record your name announcement.
  - Record your greeting.
  - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding , bypassing the need for you to enter your passcode).

---

### **Voicemail Passcode**

If you are concerned about unauthorized access to your voicemail account, Sprint recommends you enable your voicemail passcode.

---



## Voicemail Notification

There are several ways your phone alerts you to a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By the LED blinking red.
- By displaying  at the top of your screen.

## New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

To call your voicemail:

- ▶ Press and hold .

To display your Missed Log:

- ▶ Press **Detail** (right softkey).

---

**Note:** When you are roaming off the Nationwide Sprint PCS Network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your wireless phone number. When your voicemail answers, press (\*) and enter your passcode. You will be charged roaming rates when accessing voicemail while roaming off the Nationwide Sprint PCS Network.

---

---

**Note:** Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on and you are in a Sprint PCS Service Area.

---

## Retrieving Your Voicemail Messages

You can review your messages directly from your phone or from any other touch-tone phone. To dial from your phone, you can either speed dial your voicemail or use the menu keys.

### Using One-Touch Message Access

- ▶ Press and hold . (Your phone will dial your voicemail box.)

### Using the Menu Keys on Your Phone to Access Your Messages

1. Select **Menu > Messaging > Voicemail**.
2. Press  to listen to your messages.

---

**Note:** You are charged for airtime minutes when you are accessing your voicemail from your phone

---

### Using a Phone Other Than Your Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, press .
3. Enter your passcode.

---

**Tip:** When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press **4** during the header.

---

## Vicemail Button Guide

Here's a quick guide to your keypad functions while listening to voicemail messages. For further details and menu options, see "Voicemail Menu Key" on page 146.

|                                                                                   |                                                                                   |                                                                                   |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|  |  |  |
| Date/Time                                                                         | Send Reply                                                                        | Advance                                                                           |
|  |  |  |
| Replay                                                                            | Rewind                                                                            | Forward                                                                           |
|  |  |  |
| Erase                                                                             | Call Back                                                                         | Save                                                                              |
|  |  |  |
| Cancel                                                                            | Help                                                                              | Skip                                                                              |

## Vicemail Options

Your phone offers several options for organizing and accessing your voicemail.

### Using Expert Mode

Using the Expert Mode setting for your personal voicemail box helps you navigate through the voicemail system more quickly by shortening the voice prompts you hear at each level.

**To turn Expert Mode on or off:**

1. Press and hold  to access your voicemail. (If your voicemail box contains any new or saved messages, press  to access the main voicemail menu.)
2. Press  to change your Personal Options, following the system prompts.

3. Press  for Expert Mode.
4. Press  to turn Expert Mode on or off.

## Setting Up Group Distribution Lists

Create up to 20 separate group lists, each with up to 20 customers.

1. Press and hold  to access your voicemail. (If your voicemail box contains any new or saved messages, press  to access the main voicemail menu.)
2. Press  to change your Personal Options, following the system prompts.
3. Press  for Administrative Options.
4. Press  for Group Distribution Lists.
5. Follow the voice prompts to create, edit, rename, or delete group lists.

## Sprint PCS Callback

Return a call after listening to a message without disconnecting from voicemail.

- ▶ Press  after listening to a message. (Once the call is completed, you're returned to the voicemail main menu.)

## Voicemail-to-Voicemail Message

Record and send a voice message to other Sprint PCS Voicemail users.

1. From the main voicemail menu, press  to send a message.
2. Follow the voice prompts to enter the phone number.

3. Follow the voice prompts to record and send your voice message.

### **Voicemail-to-Voicemail Message Reply**

Reply to a voice message received from any other Sprint PCS Voicemail user.

1. After listening to a voice message, press  .
2. Follow the voice prompts to record and send your reply.

### **Voicemail-to-Voicemail Message Forwarding**

Forward a voice message, except those marked “Private,” to other Sprint PCS Voicemail users.

1. After listening to a message, press  .
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record your introduction and forward the voice message.

### **Voicemail-to-Voicemail Receipt Request**

Receive confirmation that your voice message has been listened to when you send, forward, or reply to other Sprint PCS users.

1. After you have recorded a message, press  to indicate you are satisfied with the message you recorded.
2. Press  to mark receipt requested.
3. Press  to send your voicemail message.

## Continue Recording

When leaving a voice message, you can choose to continue recording even after you've stopped.

- ▶ Before pressing  to indicate that you are satisfied with the message you recorded, press  to continue recording.

## Extended Absence Greeting

When your phone is turned off or you are off the Nationwide Sprint PCS Network for an extended period, this greeting can be played instead of your normal personal greeting.

1. From the main voicemail menu, press  for Personal Options.
2. Press  for Greetings.
3. Press  to record an Extended Absence Greeting.

## Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.

To clear the icon from the display screen:

1. Select **Menu > Messaging > Voicemail > Clear Icon**.
2. Select **Clear All** or **Clear Icon** and press .

## Vicemail Menu Key

Following the prompts on the voicemail system, you can use your keypad to navigate through the voicemail menu. The following list outlines your phone's voicemail menu structure.

### 1 Listen

1 Envelope Information

2 Reply

3 Advance 8 Seconds

4 Replay

5 Rewind

6 Forward Message

7 Erase

8 Callback

9 Save

0 Options

### 2 Send a Message

### 3 Personal Options

1 Notification Options

1 Phone Notification

2 Numeric Paging to a Phone

\* Return to Personal Options Menu

2 Administrative Options

1 Skip Passcode

2 Autoplay

3 Message Date & Time On/Off

4 Change Passcode

5 Group Distribution List

\* Return to Personal Options Menu

3 Greetings

- ① Personal Greetings
- ② Name Announcement
- ③ Extended Absence Greeting
- ✳ Return to Personal Options Menu
- ④ Expert Mode (On/Off)
- ⑨ Place a Call
- ✳ Disconnect

## Using SMS Text Messaging

With SMS Text Messaging, you can use other people's wireless phone numbers to send instant text messages from your phone to their messaging-ready phones – and they can send messages to you. When you receive a new message, it will automatically be displayed on your phone's screen.

In addition, SMS Text Messaging includes a variety of preset messages, such as “I’m running late, I’m on my way,” that make composing messages fast and easy. You can also customize your own preset messages (up to 160 characters) from your phone or at [www.sprint.com](http://www.sprint.com).

## Composing SMS Text Messages

To compose an SMS Text message:

1. Select **Menu > Messaging > Send Message > Text Message** and select the entry method you prefer:
  - **Mobile** to use the keypad to enter the wireless phone number of the person to whom you wish to send a message.
  - **Email** to enter the recipient's email address.



- **From Contacts** to select a recipient from your internal Contacts (Qualifying Contacts entries must contain a wireless phone number or an email address.)
  - **Recent List** to select a recipient from your recent messages.
2. Press  to save the recipient. (To include additional recipients, input a new phone number or email address. You may include up to 25 recipients per message.)
  3. Press **Next** (left softkey) when you have finished selecting/entering recipients, and compose a message or use the preset messages or smileys (emoticons) and press .
    - To type a message, use your keypad to enter your message. Use the right softkey to select a character input mode. (See “Entering Text” on page 35.)
    - To use a preset message or a smiley, press the right softkey, select **Preset messages** or **Smileys**, and then highlight your desired message or emoticon and press .

---

**Note:** For more information about using and managing preset messages, see “Managing Preset Messages” on page 52.

---

4. Scroll to **Priority** and press your navigation key right or left to set the message priority (**Normal** or **Urgent**).
5. If you wish to change your callback number, scroll to it and press , then select **None**, **My Phone Number**, or **Other**, and press . (If you select Other, enter the desired number and press .)
6. Press **Send** (left softkey) to send the message.

## Accessing SMS Text Messages

### To read an SMS Text message:

- ▶ When you receive a text message, it will automatically appear on your phone's main display screen. Use your navigation key to scroll down and view the entire message.

### To reply to an SMS Text message:

1. While the message is open, select **Reply** (left softkey).
2. Compose your reply or use the preset messages or icons.
  - To type a message, use your keypad to enter your message. Use the right softkey to select a character input mode. (See "Entering Text" on page 35.)
  - To use a preset message or a smiley, press the right softkey, select **Preset messages** or **Smileys**, highlight your desired message or emoticon, and press .
3. Scroll to **Priority** and press your navigation key right or left to set the message priority (**Normal** or **Urgent**).
4. If you wish to change your callback number, scroll to it and press , select **None**, **My Phone Number**, or **Other**, and press . (If you select **Other**, enter the desired number and press .)
5. Press **Send** (left softkey) to send the message.

## Using Preset Messages

Preset messages make sending text messages to your friends, family, and coworkers easier than ever.

To add or edit preset messages:

1. Select **Menu > Settings > Messaging > Preset Messages > <Add New>**.  
— or —  
Highlight a message you wish to edit and press , select **Edit** or **Delete**.
2. Enter your new message or changes and press .  
(See “Entering Text” on page 35.)

---

**Note:** You may also add or edit preset messages in the “My Online Tools” area at [www.sprint.com](http://www.sprint.com).

---

## Using VoiceSMS Messaging

In addition to sending and receiving SMS Text messages, your phone is enabled with VoiceSMS Messaging. With VoiceSMS Messaging, you can quickly and easily send a voice message to other SMS-enabled phones or working email addresses without making a phone call. Just record a message and send it directly to the recipient’s phone messaging inbox.

### Activating VoiceSMS Messaging

To use VoiceSMS Messaging capabilities, you will first need to register your phone. Once you have registered, incoming VoiceSMS messages will be automatically downloaded to your phone.

To activate VoiceSMS Messages:

- ▶ Select **Yes**.

**Note:** When VoiceSMS is not activated, incoming VoiceSMS download is not available.

## Playing an VoiceSMS Message

To play an VoiceSMS message from the main menu:

1. Select **Menu > Messaging > VoiceSMS**. ( indicates an unplayed message.)
2. Select the message you want to play.
3. Press  to play the message. (To display the message options, press **Options** [right softkey].)

## Composing VoiceSMS Messages

To compose an VoiceSMS message:

1. Select **Menu > Messaging > Send Message > VoiceSMS**.
2. Select **Mobile**, or **Email** to enter a recipient's wireless phone number or email address directly.
3. Select **From Contacts** or **Recent List**.
4. Select your desired list and press  to select the recipient.
5. Press **Next** (left softkey) when you have finished selecting and entering recipients.
6. Start recording after the beep. (You can record up to two minutes.)
7. To finish recording, press **Done** (left softkey).
8. Press **Send** (left softkey) to send the voice message.

## Accessing VoiceSMS Messages

To play an VoiceSMS message:

- ▶ When you receive a voice message, a pop-up notification will automatically appear on your phone's main display screen. Use your softkeys to view and play the voice message.

To reply to an VoiceSMS message:

1. From the VoiceSMS inbox, press **Reply** (left softkey).
2. Record your reply, then press **Send** (left softkey).

## Using Caller ID

---

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, just follow these easy steps.

To block your phone number from being displayed for a specific outgoing call:

1. Press   .
2. Enter the number you want to call.
3. Press .

To permanently block your number, call Sprint Customer Service.

## Responding to Call Waiting

---

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

**To respond to an incoming call while you're on a call:**

- ▶ Press . (This puts the first caller on hold and answers the second call.)

**To switch back to the first caller:**

- ▶ Press  again.

---

**Tip:** For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing **\*70** before placing your call. Call Waiting is automatically reactivated once you end the call.

---

# Making a Three-Way Call

---

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

**To make a Three-Way Call:**

1. Enter a number you wish to call and press .
2. Once you have established the connection, enter the second number you wish to call and press . (This puts the first caller on hold and dials the second number.)
3. When you're connected to the second party, press  again to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all other callers are disconnected.

---

**Note:** Call Waiting and Three-Way Calling are not available while roaming off the Nationwide Sprint PCS Network.

---

# Using Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

## To activate Call Forwarding:

1. Press   .
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press . (You will see a message and hear a tone to confirm the activation of Call Forwarding.)

## To deactivate Call Forwarding:

1. Press    .
2. Press . (You will see a message and hear a tone to confirm the deactivation.)

---

**Note:** You are charged a higher rate for calls you have forwarded.

---



# Sprint PCS Vision®

---

## In This Section

---

- ◆ **Sprint PCS Vision Applications** (page 157)
  - ◆ **Getting Started With Sprint PCS Vision** (page 158)
  - ◆ **Accessing Messaging** (page 164)
  - ◆ **Downloading Premium Services Content** (page 169)
  - ◆ **Exploring the Web** (page 173)
  - ◆ **Sprint PCS Vision FAQs** (page 178)
- 

**Sprint PCS Vision® offers easy and amazing data services you will really use.** These features – including Sprint TV<sup>SM</sup>, messaging, games, downloadable ringtones and screen savers, and portable Web access – let you have fun, stay in touch, and stay informed no matter where you go on the Nationwide Sprint PCS Network.

This section introduces these advanced services and walks you through the necessary steps to start taking advantage of Sprint PCS Vision Services. For complete details and instructions, see the **Sprint PCS Vision User Guide** online at [www.sprint.com](http://www.sprint.com).

# Sprint PCS Vision Applications

Here is a brief list of the applications available through your phone. For more information, please see the **Sprint PCS Vision User Guide** online at [www.sprint.com](http://www.sprint.com).



**Sprint PCS® Picture Mail** – Instantly shoot, share, and print sharp, high resolution digital pictures, and take and send short video clips with your phone.



**Messaging** – Send and receive emails and chat on your phone.



**Games** – Play exciting games with full-color graphics, sound, and vibration.



**Ringers** – Personalize your phone by downloading and assigning different ringers to numbers in your Contacts.



**Screen Savers** – Download unique images to use as screen savers – or make it easy to tell who's calling by assigning specific images to numbers in your Contacts.



**Web** – Experience full-color graphic versions of popular Web sites from your phone.

# Getting Started With Sprint PCS Vision

---

This section will help you learn the basics of using your Sprint PCS Vision services, including managing your user name, launching a Vision connection, and navigating the Web with your phone.

## Your User Name

When you buy a phone and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprint.com." (For example, the third John Smith to sign up for Sprint PCS Vision services might have jsmith003@sprint.com as his user name.)

When you use Sprint PCS Vision services, your user name is submitted to identify you to the Nationwide Sprint PCS Network. The user name is also useful as an address for Sprint PCS Mail, as a way to personalize Web services, and as an online virtual identity.

Your user name will be automatically programmed into your phone. You don't have to enter it.

## Finding Your User Name

If you aren't sure what your Sprint PCS Vision user name is, you can easily find it online or on your phone.

To find your User Name:

- **At [www.sprint.com](http://www.sprint.com).** Sign on to your account using your phone number and password. To display your user name, click on the **My Personal Information** menu, then click **Vision User Name**.
- **On your phone.** You can find your user name under the **Phone Info** option in your phone's **Settings** menu (**Menu > Settings > Phone Info > Version**).

## Launching a Sprint PCS Vision Connection

To launch a Sprint PCS Vision connection:

- ▶ Select **Menu > Web**. (Your Sprint PCS Vision connection will open and the Sprint PCS Vision home page will be displayed.)

### The Sprint PCS Vision Home Page



---

**Shortcut:** You can also press the Left softkey to access the Web

---

**Note:** If Net Guard is enabled and displayed (see below), press **OK** (right softkey) to continue and access the Web.

---

While connecting, the following will appear on the screen:

**Vision Connecting...**

If you had a previous Sprint PCS Vision connection, the last page you visited will be displayed when you launch your browser. When this occurs, you may not see the “Connecting...” message when you launch the session.

Though the browser is open, you are not currently in an active data session—that is, no data is being sent or received. As soon as you navigate to another page, the active session will open and you will see the “Connecting...” message.

## Net Guard

When you first connect to the Web, the Net Guard will appear to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.

To change your Net Guard settings:

- ▶ Select **Menu > Settings > PCS Vision > Net Guard** and choose an option:
  - **On** to activate the Net Guard.
  - **Off** to deactivate the Net Guard.

---

**Note:** When enabled, the Net Guard appears only once per session. The Net Guard does not appear if the phone is merely reconnecting due to a time-out.

---

## Sprint PCS Vision Connection Status and Indicators

Your phone's display lets you know the current status of your Sprint PCS Vision connection through indicators which appear at the top of the screen. The following symbols are used:

-  Your Sprint PCS Vision connection is active (data is being transferred); the transmit/receive symbol will blink to indicate data transmission. Incoming voice calls go directly to voicemail; outgoing voice calls can be made, but the Sprint PCS Vision connection will terminate.
-  Your Sprint PCS Vision connection is dormant. (No data is being sent or received.) Though not currently active, when dormant the phone can restart an active connection quickly; voice calls can be made and received.
-  Your phone is not currently able to access Sprint PCS Vision service features.

If no indicator appears, your phone does not have a current Sprint PCS Vision connection. To launch a connection, see “Launching a Sprint PCS Vision Connection” on page 159.

## Navigating the Web

Navigating through menus and Web sites during a Sprint PCS Vision session is easy once you've learned a few basics. Here are some tips for getting around:

### Softkeys

During a Sprint PCS Vision session, the bottom line of your phone's display contains one or more softkeys. These keys are shortcut controls for navigating around the Web, and they correspond to the softkey buttons directly below the phone's display screen.

---

**Tip:** Depending on which Web sites you visit, the labels on the softkeys may change to indicate their function.

---

#### To use softkeys:

- ▶ Press the desired softkey button. (If an additional pop-up menu appears when you press the softkey button, select the menu items using your keypad [if they're numbered] or by highlighting the option and pressing .)

### Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Web sites.

#### To scroll line by line through Web sites:

- ▶ Press the navigation key up and down.

#### To scroll page by page through Web sites:

- ▶ Press the volume buttons on the side of the phone.

## Selecting

Once you've learned how to use softkeys and scroll, you can start navigating the Web.

### To select onscreen items:

- ▶ Use the navigation key to highlight the desired item, then press the desired softkey button (or press ).

---

**Tip:** You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "OK".

---

**Tip:** If the items on a page are numbered, you can use your keypad (number keys) to select an item. (The tenth item in a numbered list may be selected by pressing the 0 key on your phone's keypad, even though the number 0 doesn't appear on the screen.)

---

Links, which appear as underlined text, allow you to jump to different Web pages, select special functions, or even place phone calls.

### To select links:

- ▶ Highlight the link and press the appropriate softkey.

## Going Back

### To go back one page:

- ▶ Press the  key on your phone.

---

**Note:** The **BACK** key is also used for deleting text (like a BACKSPACE key) when you are entering text.

---



## Going Home

To return to the Sprint PCS Vision home page from any other Web page:

- ▶ Press and hold **BACK**.
- or —
- Press **Menu** (right softkey) and select **Home** (  ).



## Sprint PCS Messaging

### Accessing Messaging

---

Now you can send and receive emails and text messages and participate in Web-based chatrooms right from your phone. Messaging allows you to stay connected to friends, family, and coworkers 24 hours a day anywhere on the Nationwide Sprint PCS Network.

### Message Types

There are many types of text messaging available on your phone. These include SMS Text Messaging, Sprint® Instant Messaging, Email, and Chat.

(Sprint PCS Voicemail provides voicemail-to-mailbox messaging. For information on using your phone's voicemail feature, see “Using Voicemail” on page 139.)

## Accessing Sprint PCS® Mail

Sprint PCS Mail allows you to perform many of the typical email functions from your phone that you can from your personal computer. You can manage your Sprint PCS Mail account from your phone or from your personal computer at [www.sprint.com](http://www.sprint.com).

To access Sprint PCS Mail from your phone:

1. Select **Menu > Messaging > IM & Email**.
2. Select **PCS Mail**. (The browser will start and go to the email page.) (If you're a first-time user, your phone will prompt you to set up your Sprint PCS Mail account by establishing a user name and password.)
3. Select the folder you wish to view, such as **Inbox** or **Compose**.

For information and instructions about reading, replying to, and composing Sprint PCS Mail, please see the Sprint PCS Vision User Guide at [www.sprint.com](http://www.sprint.com).

## Accessing Additional Email Providers

With Sprint PCS Vision, you can use popular email services such as AOL® Mail, Yahoo!® Mail, MSN® Hotmail and EarthLink® to keep in touch, even while you're on the go.

**To access email providers from your phone:**

1. From the Sprint PCS Vision home page, select **Messaging > IM & Email**.
2. Select an email provider, such as **AOL, MSN, Yahoo, or Earthlink**.
3. Use your keypad to enter the required sign-in information for the selected provider, such as user name, email address, and/or password, and select **Sign In**. (Your mailbox for the selected provider will be displayed.)

---

**Note:** The information required for sign-in will vary depending on the email provider you are accessing.

---

4. Follow the onscreen instructions to read, reply to, compose, send, and manage messages in your email account.

## Accessing Sprint® Instant Messaging

Sprint PCS Vision also provides you with access to popular instant messaging (IM) clients, including AOL® Instant Messenger™, MSN® Messenger, and Yahoo!® Messenger.

To access instant messaging clients from your phone:

1. From the Sprint PCS Vision home page, select **Messaging > Instant Messaging**.
2. Select an email provider, such as **AOL Instant Messenger**, **MSN Messenger**, or **Yahoo! Messenger**.
3. Use your keypad to enter the required sign-in information for the selected provider, such as user name and/or password, and select **Sign In**. (Your IM screen for the selected provider will be displayed.)

---

**Note:** The information required for sign-in will vary depending on the instant messaging provider you are accessing.

---

4. Follow the onscreen instructions to read, reply to, compose, send, and manage messages in your IM account.

## Accessing Wireless Chatrooms

Sprint PCS Vision gives you the ability to join wireless chatrooms from your phone, to send text messages and icons to chatroom participants, or to launch a one-on-one (private) chatroom.

To access a chatroom from the browser:

1. Select **Messaging > Chat & Dating > Jumbuck**.
2. Follow the onscreen instructions to begin chatting.

---

**Note:** For information about using wireless chatrooms on your phone, please see the Sprint PCS Vision User Guide at [www.sprint.com](http://www.sprint.com).

---

# Downloading Premium Services Content

With Sprint PCS Vision and your new phone, you have access to a dynamic variety of Premium Service content, such as downloadable Games, Ringers, Screen Savers, and other applications. (Additional charges may apply.) The basic steps required to access and download Premium Service content are outlined below.

## Accessing the Download Menus

To access the Sprint PCS Vision download menus:

1. Select **Menu > My Content**.
2. Select the type of file you wish to download (**Games, Ringers, Screen Savers, Applications, IM & Email, Call Tones**, or **<Options>**), and then select **Get New**. (The browser will start and take you to the corresponding download menu.)

To access the Sprint PCS Vision download menus from the Web browser:

1. From the Sprint PCS Vision home page, select **Downloads**.
2. Select **Games, Ringers, Screen Savers, Applications, Messaging**, or **Call Tones** to go to the corresponding download menu. (For more information on navigating the Web, see “Navigating the Web” on page 162.)

## Selecting an Item to Download

You can search for available items to download in a number of ways:

- **Featured** displays a rotating selection of featured items.
- **Categories** allows you to narrow your search to a general category, such as Country or Pop/Rock for Ringers or For the Ladies for Screen Savers. (There may be several pages of available content in a list. Select **Next 9** to view additional items.)
- **Search** allows you to use your keypad to enter search criteria to locate an item. You may enter an entire word or title or perform a partial-word search. (For example, entering “goo” returns “Good Ol’ Boy,” “The Good, the Bad, and the Ugly,” and “Goofy - Club.”)

## Downloading an Item

Once you’ve selected an item you wish to download, highlight it and press  or press **OK** (left softkey). You will see a summary page for the item including its title, the vendor, the download detail, the file size, and the cost. Links allow you to view the **License Details** page, which outlines the price, license type, and length of license for the download; and the **Terms of Use** page, which details the Premium Services Terms of Use and your responsibility for payment.

To download a selected item:

1. From the information page, select **Buy**. (The item will download automatically. When the **New Download** screen appears, the item has been successfully downloaded to your phone.)

---

**Note:** If you have not previously purchased an item, you will be prompted to create your purchasing profile.

---

## 2. Select an option to continue:

- Select **Use/Run/View** to assign the downloaded item (or to start it, in the case of a game or application). Your Sprint PCS Vision session will end and you will be redirected to the appropriate phone menu screen.
- Select **Set as** to assign a ringer or screen saver to a phone function.
- Select **Settings** to configure downloaded games or applications.
- Select **Shop** to browse for other items to download.
- Press  to quit the browser and return to standby mode.

## Using My Content Manager

Whether you purchase your Premium Services content from your phone or from your online account management page at [www.sprint.com](http://www.sprint.com), all of your purchases are stored in **My Content Manager** and may be downloaded to your phone from there.

**My Content Manager** is a storage area on the Nationwide Sprint PCS Network that is assigned specifically to your account. It allows you to store all of your Premium Service downloadable files. The files remain in My Content Manager—even after you have downloaded the content to your phone—until their license terms have expired. This provides you with a convenient place to access information about your downloaded files without having to store the information in your phone's memory.

### To access My Content Manager:

- ▶ From the Sprint PCS Vision home page, select **Downloads > My Content Manager**. (A list of your purchased items will be displayed.)



## To download purchased content from My Content Manager:

1. From the **My Content Manager** display, highlight the category and item you wish to download and press . (The information page for the selected item will be displayed.)
2. Scroll to highlight **Download** and press . (The item will download automatically. When the **New Download** screen appears, the item has been successfully downloaded to your phone.)
3. Select an option to continue:
  - Select **Use/Run/View** to assign the downloaded item (or to start it, in the case of a game or application). Your Sprint PCS Vision session will end and you will be redirected to the appropriate phone menu screen.
  - Select **Set as** to assign a ringer or screen saver to a phone function.
  - Select **Settings** to configure downloaded games or applications.
  - Select **Shop** to browse for other items to download.
  - Press  to quit the browser and return to standby mode.

---

**Tip:** You can also access My Content Manager through the phone's main menu. Select **Menu > My Content > [Games, Ringers, Screen Savers, Applications, IM & Email, Call Tones, or <Options>] > My Content Manager**. The browser will start and take you to the corresponding content.

---

For complete information and instructions on downloading **Games, Ringers, Screen Savers, and Applications**, see the Sprint PCS Vision User's Guide at [www.sprint.com](http://www.sprint.com).



## Web

### Exploring the Web

---

With Web access on your phone, you can browse full-color graphic versions of your favorite Web sites, making it easier than ever to stay informed while on the go. Follow sports scores and breaking news and weather and shop on your phone anywhere on the Nationwide Sprint PCS Network.

In addition to the features already covered in this section, the Sprint PCS Vision home page offers access to these colorful, graphically rich Web categories, including **News, Weather, Entertainment, Sports, Money, Travel, Shopping, and Tools**, as well as useful management options including **My Account** and **Search**. Many sites are available under more than one menu – choose the one that’s most convenient for you.

### Using the Browser Menu

Navigating the Web from your phone using the Sprint PCS Vision home page is easy once you get the hang of it. For details on how to navigate the Web, select menu items, and more, see “Navigating the Web” on page 162.

Although the Sprint PCS Vision home page offers a broad and convenient array of sites and services for you to browse, not all sites are represented, and certain functions, such as going directly to specific Web sites, are not available. For these and other functions, you will need to use the browser menu. The browser menu offers additional functionality to expand your use of the Web on your phone.

## Opening the Browser Menu

The browser menu may be opened anytime you have an active Sprint PCS Vision session, from any page you are viewing.

To open the browser menu:

- ▶ Press the right softkey. (The browser menu will be displayed in a drop-down list.)

Options available under the browser menu include:

- **Home.** Returns the browser to the Sprint PCS Vision home page.
- **Forward.** Returns you to a previously viewed page (after having used the  key).
- **Mark this Page.** Allows you to bookmark the current site.
- **View Bookmarks.** Allows you to access bookmarked sites and manage your bookmarks.
- **Search.** Launches a Google search.
- **Send page to....** Allows you to send the current page as a text message.
- **Go to URL....** Allows you to navigate directly to a Web site by entering its URL (Web site address).
- **History.** Keeps a list of links to your most recently visited sites. To navigate to a site, highlight it and press , and then select **Connect**.
- **Refresh this page.** Reloads the current Web page.
- **More....** Displays additional options:
  - **Show URL.** Displays the URL (Web site address) of the site you're currently viewing.
  - **Restart Browser.** Restarts the current browser session.

- **About Browser.** Displays technical information about the browser, its version, and the encryption version, and provides links to Certificate Information for the various components.
- **Preferences.** Displays additional options:
- **Edit homepage URL.** Lets you edit the home page URL.
- **Revert to default homepage URL.** Lets you change to default home page.
- **Font Size.** Lets you adjust the font size.
- **Color.** Lets you change browser color.
- **Show Images.** Lets you view a page's image(s).
- **Cookies.** Lets you delete “cookies” stored in browser memory.
- **Title Tag.** Allows you to display a site's title information.
- **Send Referrer.** Allows you to turn send referrer on or off.
- **Launch Page.** Lets you view a recently visited page.

## Creating a Bookmark

Bookmarks allow you to store the addresses of your favorite Web sites for easy access at a later time.

To create a bookmark:

1. Go to the Web page you want to mark.
2. Press the right softkey to open the browser menu.
3. Select **Mark this Page** and press **Save** (left softkey) to save the bookmark.

---

**Note:** Bookmarking a page does not store the page's contents, just its address. Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.

---

## Accessing a Bookmark

To access a bookmark:

1. Press the right softkey to open the browser menu.
2. Select **View Bookmarks**.
3. Scroll to highlight the bookmark you'd like to access and press  (or press the number corresponding to the bookmark you wish to access).

## Deleting a Bookmark

To delete a bookmark:

1. Press the right softkey to open the browser menu.
2. Select **View Bookmarks**.
3. Scroll to highlight the bookmark you'd like to delete and press **Options** (right softkey).
4. Select **Delete** from the menu. (A confirmation screen will be displayed.)
5. Select **Yes** (right softkey) to remove the bookmark.

## Going to a Specific Web site

To go to a particular Web site by entering a URL (Web site address):

1. Press the right softkey to open the browser menu.
2. Select **Go to URL**.
3. Select the **URL** field and press .
4. Use your keypad to enter the URL of the Web site you wish to go to and press .
5. Press  again to go to the Web site.

---

**Note:** Not all Web sites are viewable on your phone.

---

## Reloading a Web Page

To reload (refresh) a Web page:

1. Press the right softkey to open the browser menu.
2. Select **Refresh**. (The browser will reload the current Web page.)

## Restarting the Web Browser

If the Web browser appears to be malfunctioning or stops responding, you can usually fix the problem by simply restarting the browser.

To restart the Web browser:

1. Press the right softkey to open the browser menu.
2. Select **More > Restart Browser**.

# Sprint PCS Vision FAQs

---

## **How will I know when my phone is ready for Sprint PCS Vision service?**

Your user name (for example, [bsmith001@sprint.com](mailto:bsmith001@sprint.com)) will be displayed when you access **Menu > Settings > Phone Info > My Phone Number**.

## **How do I sign in for the first time?**

You are automatically signed in to access Sprint PCS Vision services when you turn on your phone.

## **How do I know when my phone is connected to Sprint PCS Vision services?**

Your phone automatically connects when Sprint PCS Vision service is used or an incoming message arrives. Your phone will also display the  icon. (Connecting takes about 10-12 seconds.)

## **Can I make calls and use Sprint PCS Vision services at the same time?**

You cannot use voice and Sprint PCS Vision services simultaneously. If you receive a call while Sprint PCS Vision service is active, the call will be forwarded to voicemail. You can place an outgoing call anytime, but it will interrupt any in-progress Sprint PCS Vision session.

## **When is my data connection active?**

Your connection is active when data is being transferred. Outgoing calls are allowed; incoming calls go directly to voicemail. When active, the  indicator flashes on your phone's display screen.

**When is my data connection dormant?**

If no data is received for 10 seconds, the connection goes dormant. When the connection is dormant, voice calls are allowed. (The connection may become active again quickly.) If no data is received for an extended period, the connection will terminate.

**Can I sign out of data services?**

You can sign out without turning off your phone; however, you will not be able to browse the Web or use other Sprint PCS Vision services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may sign in again at any time. To sign out, go to **Settings > PCS Vision > Disable PCS Vision** in your phone's menu.



# Using Your Sprint PCS Phone as a Modem

---

Your Sprint Power Vision Multimedia Phone's data capabilities enable you to use your phone's high-speed data connection as a modem for your desktop or laptop PC. You'll be able to send and receive email, browse the Internet, and access your company's network anywhere on the Nationwide Sprint PCS Network.

---

**Note:** To use this service, you are required to sign up on a Sprint Power Vision with Phone as Modem plan. Go to [www.sprint.com](http://www.sprint.com) or visit a Sprint Store for phone as modem plan details and more information.

---

## Setting Up a Data Connection With Your PC

In order to use your phone as a modem, you'll first need to load the Sprint Power Vision Connection Manager software on your PC, then use the supplied USB cable to connect your phone to your PC.

**To set up your phone-to-PC data connection:**

1. From your computer's traditional Internet connection, go to [www.sprint.com](http://www.sprint.com) and download the Sprint Power Vision Connection Manager software. (The software and drivers can be downloaded free of charge.)
2. Double-click on the downloaded file and follow the onscreen instructions to install the Sprint Power Vision Connection Manager software and drivers to your PC.
3. Once the software has been fully installed, connect your phone to your PC using the supplied USB cable. (Your PC will detect the connection and an icon will appear in your system tray.)
4. Launch the Sprint Power Vision Connection Manager software, select a profile, and click **Connect**.

5. Once the connection is established, launch an Internet session, check your email, or do anything else you would do using a traditional data connection.
6. When you're ready to terminate the data connection, double-click on the Sprint Power Vision Connection Manager icon in the system tray, then click **Disconnect** to end the session.
7. Disconnect the USB cable from your phone and your PC.

---

**Note:** While your data connection is active, you will not be able to receive incoming calls; all incoming calls will be forwarded to your Sprint PCS Voicemail. Placing an outgoing call during a data session terminates the data connection.

---

Sprint PCS Vision services are available on the Nationwide Sprint PCS Network. Sprint Power Vision services work anywhere on the Nationwide Sprint PCS Network, but Broadband-like download speeds are only available in areas with high-speed data coverage.

---

# Sprint PCS® Voice Command

---

## In This Section

---

- ◆ **Getting Started With Sprint PCS Voice Command** (page 183)
  - ◆ **Creating Your Own Address Book** (page 184)
  - ◆ **Making a Call With Sprint PCS Voice Command** (page 185)
  - ◆ **Accessing Information Using Sprint PCS Voice Command** (page 186)
- 

**With Sprint PCS, reaching your friends, family, and co-workers has never been easier – especially when you're on the go.** You can even listen to Web-based information, such as news, weather, and sports. Your voice does it all with Sprint PCS Voice Command.

This section outlines the Sprint PCS Voice Command service.

# Getting Started With Sprint PCS Voice Command

---

With Sprint PCS Voice Command:

- You can store all your contacts' phone numbers, so you can simply say the name of the person you want to call.
- There's no need to punch in a lot of numbers, memorize voicemail passwords, or try to dial while you're driving.
- You can call anyone in your address book – even if you don't remember their phone number.
- You don't need to worry about losing your contacts or address book. This advanced service is network-based, so if you switch or happen to lose your phone, you won't lose your contacts or address book.

## It's Easy to Get Started

There are two easy ways to sign up for Sprint PCS Voice Command:

- ▶ Sign up when you purchase and activate your phone.
- ▶ Just dial    from your phone to contact Sprint Customer Service and sign up.

There is a monthly charge for Sprint PCS Voice Command.

# Creating Your Own Address Book

---

You can program up to 500 names into your personal address book, with each name having up to five phone numbers. That's 2,500 phone numbers, and with the advanced technology of Sprint PCS Voice Command, you can have instant access to all of them.

There are four ways to update your address book:

- **On the Web.** Go to [www.talk.sprintpcs.com](http://www.talk.sprintpcs.com) and sign on with your phone number and password to access a fully functional Web-based address book to create and update your contacts.
- **Use an Existing Address Book.** Automatically merge address books from desktop software applications with Sprint Sync<sup>SM</sup> Services for no additional charge. Simply click on the "Click to synchronize" button within your Sprint PCS Voice Command personal address book at [www.talk.sprintpcs.com](http://www.talk.sprintpcs.com).
- **Use Voice Recordings.** Simply dial   and say, "Add name." You will then be asked to say the name and number you want to add to your personal address book. Your address book can store up to 20 voice recorded names at once.
- **Call Sprint 411.** If you don't have a computer or Internet access handy, you can have Sprint 411 look up phone numbers for you and automatically add them to your address book. Just dial   and say "Call operator" and we'll add two names and all the numbers associated with those names to your address book for our standard directory assistance charge.

# Making a Call With Sprint PCS Voice Command

---

To make a call with Sprint PCS Voice Command:

1. Press   and you'll hear the "Ready" prompt.
2. After the "Ready" prompt, simply say, in a natural voice, "Call" and the name of the person or the number you'd like to call. (For example, you can say, "Call Jane Smith at work," "Call John Baker on the mobile phone," "Call 555-1234," or "Call Bob Miller.")
3. Your request will be repeated and you will be asked to verify. Say "Yes" to call the number or person. (The number will automatically be dialed.) Say "No" if you wish to cancel.

---

**Tip:** Keep in mind that Sprint PCS Voice Command recognizes not only your voice, but any voice, so that others can experience the same convenience if they use your phone.

---

For more helpful hints on Sprint PCS Voice Command, including a list of recognized commands and an interactive tutorial, visit [www.talk.sprintpcs.com](http://www.talk.sprintpcs.com).

# Accessing Information Using Sprint PCS Voice Command

---

To access information using Sprint PCS Voice Command:

1. Press  .
2. Say “Call the Web” and choose from a listing of information categories like news, weather, and sports.  
— or —  
Simply say “Call news room,” “Call the weather,” “Call Sports Central,” etc.

---

**Note:** Sprint PCS Voice Command is not available while roaming off the Nationwide Sprint PCS Network.

---

## Section 4

# Safety and Warranty Information





# Important Safety Information

---

## In This Section

---

- ◆ **General Precautions** (page 189)
  - ◆ **Maintaining Safe Use of and Access to Your Phone** (page 189)
  - ◆ **Using Your Phone With a Hearing Aid Device** (page 192)
  - ◆ **Caring for the Battery** (page 193)
  - ◆ **Radiofrequency (RF) Energy** (page 194)
  - ◆ **Owner's Record** (page 196)
  - ◆ **Phone Guide Proprietary Notice** (page 196)
- 

**This phone guide contains important operational and safety information that will help you safely use your phone.** Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

# General Precautions

---

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully extended, and over your shoulder.
- Try not to hold, bend, or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

---

**Note:** For the best care of your phone, only Sprint authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.

---

## Maintaining Safe Use of and Access to Your Phone

---

### Do Not Rely on Your Phone for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services and/or mobile phone features are in use. Check with your local service provider for details.

## Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

---

**Tip:** Purchase an optional hands-free accessory at your local Sprint Store, or call the Sprint PCS Accessory Hotline™ at 1-800-974-2221 or by dialing # 2 2 2 on your phone.

---

## Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

## Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radiofrequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

---

**Note:** Always turn off the phone in health-care facilities and request permission before using the phone near medical equipment.

---

## Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

## Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

---

**Note:** Never transport or store flammable gas, flammable liquid, or explosives in the compartment of your vehicle that contains your phone or accessories.

---

## Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your Sprint PCS Invoice.

# Using Your Phone With a Hearing Aid Device

---

Your phone has been tested for hearing aid device compatibility. When some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated.

Phones that are rated will have the rating on the box. **Your LX350 has an M3 rating.**

---

**Note:** Phones rated M3 or M4 meet FCC requirements and may generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

---

The M3/M4 ratings do not guarantee successful interoperability between your phone and hearing aid device. Results will vary depending on the level of immunity of your hearing device and degree of your hearing loss.

The more immune your hearing aid device is, the less likely you are to experience interference noise from your wireless phone. Hearing aid devices should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your aids. Most new hearing aids have at least an M2 immunity level. Add the “M” ratings of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers best use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for “best use.”

Sprint further suggests you experiment with multiple phones (even those not labeled M3 or M4) while in the store to find the one that works best with your hearing aid device. Should you experience interference after purchasing your phone, promptly return it to the store. With the Sprint 14 Day Risk Free Guarantee you may return the phone within 14 days of purchase for a full refund.

# Getting the Best Hearing Device Experience With Your LX350

One way to minimize interference is to set the phone's Display and Keypad backlight settings to ensure the minimum time interval.

To ensure the minimum interference for your Main Display's backlight, follow these steps:

1. Select **Menu > Settings > Display > Backlight > Main LCD**.
2. Scroll and select the minimum time interval setting (8 Seconds).

To ensure the minimum interference for the Keypad backlight, follow these steps:

1. Select **Menu > Settings > Display > Backlight > Keypad**.
2. Scroll and select the minimum time interval setting (8 seconds).

## Caring for the Battery

### Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Sprint is not aware of similar problems with Sprint PCS® Phones resulting from the proper use of batteries and accessories approved by Sprint or the manufacturer of your phone. Use only Sprint- or manufacturer-approved batteries and accessories found at Sprint Stores or through your phone's manufacturer, or call 1-866-343-1114 to order. They're also available at [www.sprint.com](http://www.sprint.com) — click the **Wireless** link under Personal, and then click **Accessories**.

Buying the right batteries and accessories is the best way to ensure they're genuine and safe.

- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.

- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4° F to 140° F (-20° C to 60° C)

More than one month:

-4° F to 113° F (-20° C to 45° C)

### **Disposal of Lithium Ion (Li-Ion) Batteries**

Do not handle a damaged or leaking Li-Ion battery as you can be burned.

For safe disposal options of your Li-Ion batteries, contact your nearest Sprint authorized service center.

**Special Note:** Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

## **Radiofrequency (RF) Energy**

---

### **Understanding How Your Phone Operates**

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radiofrequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

### **Knowing Radiofrequency Safety**

The design of your phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this

updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

### **Body-Worn Operation**

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Sprint supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least 7/16 inch (1.5 centimeters) from your body when transmitting. Use of non-Sprint approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC Web site at [www.fcc.gov](http://www.fcc.gov).

## **Specific Absorption Rate (SAR) for Wireless Phones**

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the LX350 are:

#### **AMPS mode (Part 22):**

Head: 1.24 W/kg; Body-worn: 1.12 W/kg

#### **PCS mode (Part 24):**

Head: 0.748 W/kg; Body-worn: 0.807 W/kg



## FCC Radiofrequency Emission

This phone meets the FCC Radiofrequency Emission Guidelines.  
FCC ID number: BEJLX350. More information on the phone's SAR can be found from the following FCC Web site: <http://www.fcc.gov/oet/fccid>.

## Owner's Record

---

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: Sprint PCS Vision® Phone LX350 by LG®

Serial No.:

## Phone Guide Proprietary Notice

---

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Phone Guide template version 5A (September 2005)

# Manufacturer's Warranty

---

## In This Section

---

- ◆ **Manufacturer's Warranty** (page 198)
- 

**Your phone has been designed to provide you with reliable, worry-free service.** If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your phone, please visit

<http://www.sprintpcs.com/common/popups/popLegalTermsPrivacy.html> or call Sprint Customer Service at 1-888-211-4PCS.

# Manufacturer's Warranty

---

## 1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the unit and enclosed accessories shall be a period of one (1) year from the date of original purchase. The remaining warranty period for the unit being repaired or replaced shall be determined by presentation of the original sales receipt for the purchase of the unit.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser / end user.
- (3) The limited warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories, and all Canadian Provinces.
- (4) The external housing and cosmetic parts shall be free of major defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information satisfactory to LG to prove the date of purchase or exchange.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

## 2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the product in other than its normal and customary manner.
- (2) Defect or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, or spills of food or liquid.

- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) Alleged defects or malfunctions of the product if the Customer Service Department at LG was not notified by the consumer during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including but not limited to any implied warranty of marketability merchantability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

### 3. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LGE MobileComm USA Inc. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusion of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

## **4. HOW TO GET WARRANTY SERVICE:**

To obtain warranty service, please call the following telephone number from anywhere in the continental United States:

LG Electronics Service

201 James Record Road

Huntsville, AL 35824

Tel. 1-800-793-8896 Email: <http://us.lgservice.com>

Please call or write for the location of the LGE authorized service center nearest you and the procedures for obtaining warranty claims.

# Index

## A

Alarm Clock 95  
Answering Calls 25

## B

Battery 19-21  
    Capacity 19  
    Charging 21  
    Installing 20  
Bluetooth 129-136  
Bookmarks 175-176  
    Accessing 176  
    Creating 175  
    Deleting 176  
Browser Menu 173

## C

Calculator 97  
Calendar 91-94  
Call Forwarding 155  
Call Guard 72  
Call History 74-79  
    Erasing 79  
    Making a Call From 77  
    Prepending a Phone  
        Number 78  
    Saving a Phone Number  
        From 77  
Call Waiting 153  
Caller ID 152  
Camera 101-128  
Chat 168

## D

Dialing Options 24  
Display Screen 14

## E

Email 166  
Entering Text 35-39  
    ABC Mode 38  
    Emoticons 39  
    Numbers 39  
    Preset messages 39  
    Recent messages 39  
    Selecting Mode 35  
    Symbols 39  
    T9 Text Input 36  
EZ Tips 96

## I

Instant Messaging 167

## K

Key Functions 12

## L

Lock Code  
    Changing the Lock Code  
        62  
Locking Your Phone 61

## M

Making Calls 23  
Menu iii  
My Content Manager 171

## N

Net Guard 160

## P

Phone (Illus.) 11

Phone Book

Erasing the Contacts List  
63

Phone Number

Displaying 23

Finding 31

Saving 30

Plus (+) Code Dialing 33

## R

Resetting Your Phone 65

Roaming 68-73

Setting Roam Mode 71

## S

Saving a Phone Number 30

Security 60-67

Security Menu 61

SMS Text Messaging 147-  
150

Special Numbers 63

Sprint Customer Service 6

Sprint PCS® Mail 165

Sprint PCS Picture Mail

Downloading Pictures  
123

Password 104

Sending 117-128

Uploading Pictures 122

Viewing 115

Web Site 121

Sprint PCS Service

Account Passwords 5

Operator Services 8

Setting Up 2-8

Sprint PCS Vision® 156-179

Applications 157

Chat 168

Downloading Content  
169

FAQs 178

Home Page 159

Launching 159

Messaging 164

My Content Manager 171

Navigating the Web 162

Net Guard 160

Password 5

Security Features 66

User Name 158

Storing Pictures 109

## T

T9 Text Input 36

Taking Pictures 102-128

Camera Mode Options  
105-128

Turning Your Phone On and  
Off 18

## U

Unlocking Your Phone 61

## V

Videos

Options 113

Recording 112

Settings 114

Storing Videos 114

Voice Memos 99-100

Voice Services 98-100

Voicemail

Menu Key 146

Options 142

Retrieving 141

Setting Up 4, 139

While Roaming 71

## W

Warranty 196

Web 173-177

Welcome i



[illegible]