

DRAFT 4



TB9400 base station

Installation and Operation Manual Draft in Progress

MBC-00001-01
Issue 1
September 2011

Contact Information

Tait Radio Communications Corporate Head Office

Tait Electronics Limited
P.O. Box 1645
Christchurch
New Zealand

For the address and telephone number of regional offices, refer to our website: www.taitradio.com

Copyright and Trademarks

All information contained in this document is the property of Tait Electronics Limited. All rights reserved. This document may not, in whole or in part, be copied, photocopied, reproduced, translated, stored, or reduced to any electronic medium or machine-readable form, without prior written permission from Tait Electronics Limited.

The word TAIT and the TAIT logo are trademarks of Tait Electronics Limited.

All trade names referenced are the service mark, trademark or registered trademark of the respective manufacturers.

Disclaimer

There are no warranties extended or granted by this document. Tait Electronics Limited accepts no responsibility for damage arising from use of the information contained in the document or of the equipment and software it describes. It is the responsibility of the user to ensure that use of such information, equipment and software complies with the laws, rules and regulations of the applicable jurisdictions.

Enquiries and Comments

If you have any enquiries regarding this document, or any comments, suggestions and notifications of errors, please contact your regional Tait office.

Updates of Manual and Equipment

In the interests of improving the performance, reliability or servicing of the equipment, Tait Electronics Limited reserves the right to update the equipment or this document or both without prior notice.

Intellectual Property Rights

This product may be protected by one or more patents or designs of Tait Electronics Limited together with their international equivalents, pending patent or design applications, and registered trade marks: NZ 409837, NZ 409838, NZ 508806, NZ 508807, NZ 509242, NZ 509640, NZ 509959, NZ 510496, NZ 511155, NZ 511421, NZ 516280/NZ 519742, NZ 520650/NZ 537902, NZ 521450, NZ 522236, NZ 524369, NZ 524378, NZ 524509, NZ 524537, NZ 524630, NZ 530819, NZ 534475, NZ 534692, NZ 535471, NZ 537434, NZ 546295, NZ 547713, NZ 569985, NZ 577009, NZ 579051, NZ 579364, NZ 580361, AU 2003281447, AU 2004216984, AU 2005267973, AU 11677/2008, AU 13745/2008, CN 200930004200.4, CN 200930009301.0,

CN 1031871, CN 1070368, EU 000915475-0001, EU 000915475-0002, GB 2386010, GB 23865476, GB 2413249, GB 2413445, US 5745840, US 7411461, US 7649893, US 10/523952, US 10/546696, US 10/546697, US 10/547964, US 10/597339, US 11/572700, US 29/306491, US 61/218015, US 61/236663, US 61/238769, US 61/251372.

This product may also be made under license under one or more of the following U.S. Patents: 4,590,473 4,636,791 4,716,407 4,972,460 5,146,497 5,148,482 5,164,986 5,185,795 5,185,796 5,271,017 5,377,229 5,502,767.

The IMBE™ voice coding Technology embodied in this product is protected by intellectual property rights including patent rights, copyrights and trade secrets of Digital Voice Systems, Inc. This voice coding Technology is licensed solely for use within this Communications Equipment. The user of this Technology is explicitly prohibited from attempting to decompile, reverse engineer, or disassemble the Object Code, or in any other way convert the Object Code into a human-readable form. Protected by U.S. Patents 5,870,405 5,826,222 5,754,974 5,701,390 5,715,365 5,649,050 5,630,011 5,581,656 5,517,511 5,491,772 5,247,579 5,226,084 and 5,195,166.

Environmental Responsibilities



Tait Electronics Limited is an environmentally responsible company which supports waste minimization, material recovery and restrictions in the use of hazardous materials.

The European Union's Waste Electrical and Electronic Equipment (WEEE) Directive requires that this product be disposed of separately from the general waste stream when its service life is over. For more information about how to dispose of your unwanted Tait product, visit the Tait Electronics WEEE website at www.taitradio.com/weee. Please be environmentally responsible and dispose through the original supplier, or contact Tait Electronics Limited.

Tait Electronics Limited also complies with the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS) Directive in the European Union.

In China, we comply with the Measures for Administration of the Pollution Control of Electronic Information Products. We will comply with environmental requirements in other markets as they are introduced.

Contents

Preface	6
Scope of Manual	6
Document Conventions	6
Associated Documentation	7
Publication Record	7
1 Description	9
1.1 Features	10
1.2 Modules	11
1.3 Mechanical Assembly	14
1.4 Frequency Bands and Sub-bands	17
1.5 Applications	17
1.6 Licenses	18
1.7 Theory of Operation	19
1.7.1 Signal Paths	21
1.7.2 Online and Offline Modes	21
1.7.3 Intermodule Communications	22
1.7.4 Power Management and Distribution	23
1.7.5 PMU Operation on DC Input	25
1.7.6 Front Panel Fans	28
2 General Safety and Regulatory Information	29
2.1 Personal Safety	29
2.1.1 Unpacking and Moving the Equipment	29
2.1.2 Lethal Voltages	29
2.1.3 AC Power Connection	30
2.1.4 Explosive Environments	30
2.1.5 Proximity to RF Transmissions	30
2.1.6 High Temperatures	30
2.1.7 LED Safety (EN60825-1)	30
2.2 Equipment Safety	31
2.2.1 Installation and Servicing Personnel	31
2.2.2 Preventing Damage to the PA	31
2.2.3 ESD Precautions	31
2.2.4 Anti-tampering Devices	32
2.3 Environmental Conditions	32
2.3.1 Operating Temperature Range	32
2.3.2 Humidity	32
2.3.3 Dust and Dirt	32
2.4 Regulatory Information	33
2.4.1 Distress Frequencies	33
2.4.2 FCC Compliance	33
2.4.3 Unauthorized Modifications	33

2.4.4	Health, Safety and Electromagnetic Compatibility in Europe.	34
3	Operation.	35
3.1	Front Panel	36
3.2	Module Indicator LEDs and Switches	40
3.2.1	Reciter.	40
3.2.2	PA	42
3.2.3	PMU	43
4	Working with Base Stations from Your PC.	45
4.1	PC Recommendations	46
4.2	Connecting Your PC to the Base Station.	46
4.2.1	Logging In	47
4.2.2	Setting the IP Address	48
4.2.3	Responding to Security Warnings	49
4.2.4	Connecting a Networked PC to a Base Station.	50
4.2.5	Troubleshooting Connection Problems	51
4.2.6	Finding a Lost or Forgotten IP Address	52
4.3	Working with the Web Interface	53
4.3.1	Monitoring Operation.	54
4.3.2	Viewing Configuration Settings	55
4.3.3	Viewing the Base Station and Network Identity	57
4.4	Basic Tasks.	58
4.4.1	User Settings.	58
4.4.2	Taking the Base Station Offline	58
4.4.3	Troubleshooting Alarms	58
4.4.4	Working with Configuration Files	59
4.4.5	Configuring Single Base Stations	59
4.4.6	Configuring Base Stations in a Channel Group	60
4.4.7	Setting Up Custom Alarms	60
4.4.8	Disabling the Front Panel Keypad	60
4.4.9	Preparing to Download Firmware	61
5	Installation	63
5.1	Before You Begin	63
5.1.1	Equipment Security.	63
5.1.2	Grounding and Lightning Protection	63
5.1.3	Equipment Ventilation	64
5.1.4	Ambient Temperature Sensor	64
5.1.5	Cabinet and Rack Ventilation	65
5.2	Unpacking and Moving the Subrack	67
5.3	Identifying the Equipment	69
5.4	Initial Setting Up	71
5.4.1	Confirming Operation	71
5.4.2	Customizing the Configuration	73
5.4.3	Changing the Root Password	74
5.4.4	Tuning the Reciter.	74

DRAFT 4

5.5	Installing the Base Station on Site	75
5.5.1	Base Stations for Trunked Systems	75
5.5.2	Equipment Required	75
5.5.3	Mounting the Subrack	76
5.6	Connecting Up the Base Station	80
5.6.1	Connection Overview	80
5.6.2	Connecting AC Power	81
5.6.3	Connecting DC Power	82
5.6.4	Connecting the Auxiliary DC Power Output	83
5.6.5	Connecting RF	84
5.6.6	Connecting an External Frequency Reference	85
5.6.7	Connecting a 1PPS Source	86
5.6.8	Ethernet Connection	86
5.6.9	Connecting General Purpose Inputs and Outputs	87
6	Maintenance	89
7	Troubleshooting	91
8	Replacing Modules	93
8.1	Saving the Base Station's Configuration	94
8.2	Preliminary Disassembly	95
8.3	Replacing a Reciter	97
8.4	Replacing a Power Amplifier	99
8.5	Replacing a Power Management Unit	101
8.6	Replacing the Front Panel Fans	102
8.7	Replacing the Module Guide Rails	105
8.8	Replacing the Subrack Interconnect Board	106
8.9	Final Reassembly	107
Appendix A	– Interface Pin Allocations	109
	System Interface Connector	109
	Ethernet Connector	109
	PMU Auxiliary DC Output	109
Appendix B	– Inter-Module Connections	111
	Dual 50W Base Station	111
	Single 50W Base Station	112
	100W Base Station	113
	TaitNet P25 Glossary	115
	Tait Software License Agreement	129

Preface

Scope of Manual

This manual provides information on installing and operating the TB9400 **base station**. It is intended for use by experienced technicians familiar with installing and operating base station equipment. It also includes configuration, maintenance and troubleshooting information.

Document Conventions

The TB9400 **base station** has a web interface with an accordion menu on the left side of the screen. “Configure > Base Station > Channels” means click Configure in the top-level menu, then in the expanded Configure menu click the + icon beside Base Station to expand its menu tree, and finally click Channels in this menu tree to display its page.



These alert icons & definitions will change.

Within this manual, four types of alerts are given to the reader: Warning, Caution, Important and Note. The following paragraphs illustrate each type of alert and its associated symbol.



Warning!! This alert is used when there is a potential risk of death or serious injury.



Caution This alert is used when there is a risk of minor or moderate injury to people.



Important This alert is used to warn about the risk of equipment damage or malfunction.



Note This alert is used to highlight information that is required to ensure procedures are performed correctly.

Associated Documentation

The current set of TB9400 product documentation is provided in PDF format on the product DVD. Updates are made available on the Tait support website. Printed copies of the documentation are available on request.

- TB9400 Specifications Manual (MBC-00002-xx).
- TaitNet P25 System Manual (MBA-00032-xx).
- T801-4 GPS Frequency Reference Installation and Operation Manual (MBA-00033-xx).

Technical notes are published from time to time to describe applications for Tait products, to provide technical details not included in manuals, and to offer solutions for any problems that arise. The product DVD includes technical notes that were available at the time of release. Look for new or updated technical notes on the Tait support website.

Publication Record

Issue	Publication Date	Description
1		First release

1 Description



The Tait TB9400 **base station** is a robust state-of-the-art digital fixed station that combines Tait's proven strengths in reliability, high performance and modular design with software-based configurability and operation, digital signal processing and voice-over-IP technology.

The **base station** is designed for operation in a Project 25 trunked or trunked simulcast radio network. The ability of the **base station** to link stations using standard Internet Protocol communications, and to add features through software options ensures that P25 systems designed with the TB9400 are scalable in both size and functionality.

The **base station** combines industry-leading digital voice quality with rugged design specifications and intuitive user interfaces. These products have been designed to meet the demanding needs of the public safety and public service sectors.

Its Ethernet interface provides built-in network connectivity, allowing the TB9400 to join with other TB9400 **base stations** to form a channel group. This network supports voice over IP and remote management of all **base stations** via a web browser.



1.1 Features

The following are some of the features of the **base station**:

- Fully compliant with the Project 25 Common Air Interface. Can therefore interoperate with any similarly compliant radios.
- Integrated built-in voting facility. No external voter is needed.
- Can be completely managed remotely from a PC running a web browser: configuration, alarm monitoring, fault diagnosis, feature and firmware upgrades.
- An integrated wiring solution is provided for the system control bus and DC power connections to each module in the subrack.
- Reciters can be replaced without affecting the operation of other reciters in the same subrack.
- Rugged construction with generous heatsinks and fan-forced cooling for continuous operation from -30°C to $+60^{\circ}\text{C}$ (-22°F to $+140^{\circ}\text{F}$).

1.2 Modules

The **base station** consists of a subrack with up to two transmit/receive channels.

The single PMU (power management unit) supplies and manages power to the whole subrack (refer to “[Theory of Operation](#)” on page 19). One reciter and one PA (power amplifier) are needed for each transmit/receive channel. There is also a front panel with user controls and fans. The modules are interconnected at the front of the subrack. External connections to the modules are located at the rear.

Modules come in different variants depending, for example, on the RF band or the supply voltage.

Each module is inserted into the 4U subrack from the front and is secured at the front with a metal clamp. Both clamp and module are easily removed for rapid module replacement. The modules are secured laterally with plastic guides that clip into the top and bottom of the subrack. These guides can be easily repositioned to change the configuration of a subrack. The heavier modules are also secured laterally by metal tabs at the rear of the subrack.

The following provides a brief description of the available modules.

Reciter

The reciter module comprises the receiver, exciter and digital control circuitry. The reciter provides the Ethernet interface and system inputs and outputs.



Power Amplifier

The PA amplifies the RF output from the reciter and is available in 50 W and 100 W models.

The 50 W model mounts vertically in the subrack, while the 100 W model mounts horizontally as it has a wider heatsink. The 100 W PA is also fitted with an airflow duct.



50W PA



100W PA

Both models are designed to operate on the 28 VDC output provided by the PMU.

Power Management Unit

The PMU provides the 28 VDC power supply for the modules in the subrack. The input voltage can be AC, DC or both AC and DC, depending on the model. The PMU also has an auxiliary DC output of 13.65 VDC, 27.3 VDC, or 54.6 VDC, depending on the model.



AC and DC PMU shown

DRAFT 4

Front Panel

The front panel is mounted onto the subrack with two quick-release fasteners. It incorporates the indicator LEDs, four-line LCD display, user controls and cooling fans.


The indicator LEDs allow some monitoring of the operational status of the **base station**. The user controls and display allow the technician to configure the IP address of each module. Refer to “**Front Panel**” on page 36 for more information.



Note The microphone input and speaker are not used in this release of the TB9400.

Subrack

The 4U subrack is made of passivated steel and is designed to fit into a standard 19 inch rack or cabinet. The subrack is fitted with an interconnect board that connects the system control bus and power to the modules and front panel. The position of a module in the subrack is defined by the socket on the subrack interconnect board to which the module is connected by the system control bus.

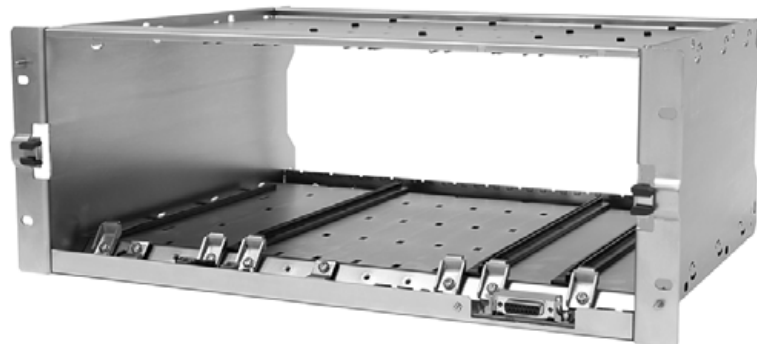

1.3 Mechanical Assembly

This section illustrates the main mechanical components of the **base station**.

Figure 1.1 below shows the configuration for a typical dual 50W **base station**. The PMU occupies the slot at the left end of the subrack, with the reciter and PA pairs to the right of it. Each PA is mounted vertically with its heatsink facing its associated reciter. The PMU and each reciter/PA pair have their own cooling fans.

The front panel can be easily removed from the subrack by undoing two quick-release fasteners. Refer to **“Replacing Modules”** on page 93 for more details.

Figure 1.1 Mechanical assembly - dual 50W **base station** with front panel

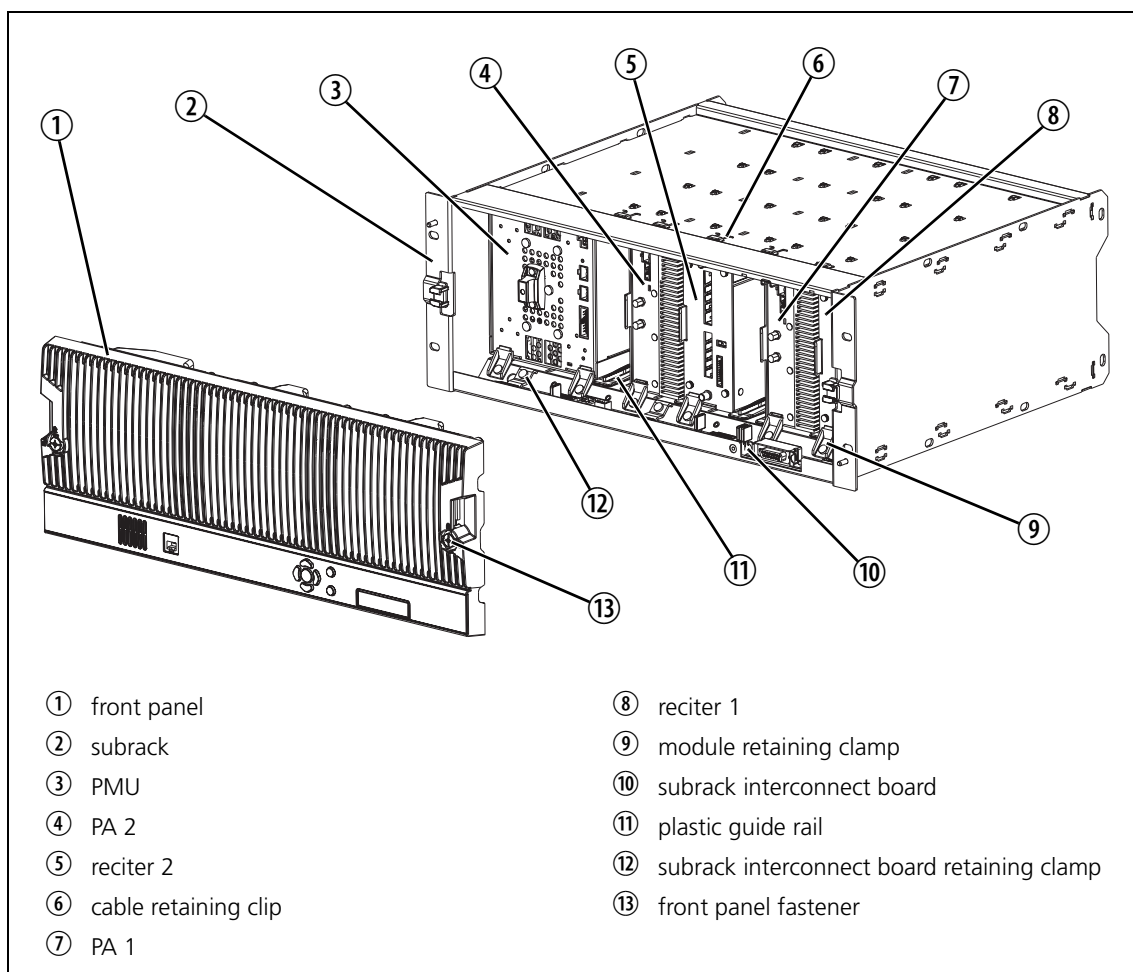


Figure 1.2 below shows the configuration for a typical single 50 W base station. The PMU occupies its usual slot at the left end of the subrack, with the reciter and PA pair at the right of the subrack. The PA is mounted vertically with its heatsink facing the reciter. The PMU and the reciter/PA pair have their own cooling fans.

Figure 1.2 Mechanical assembly - single 50W base station


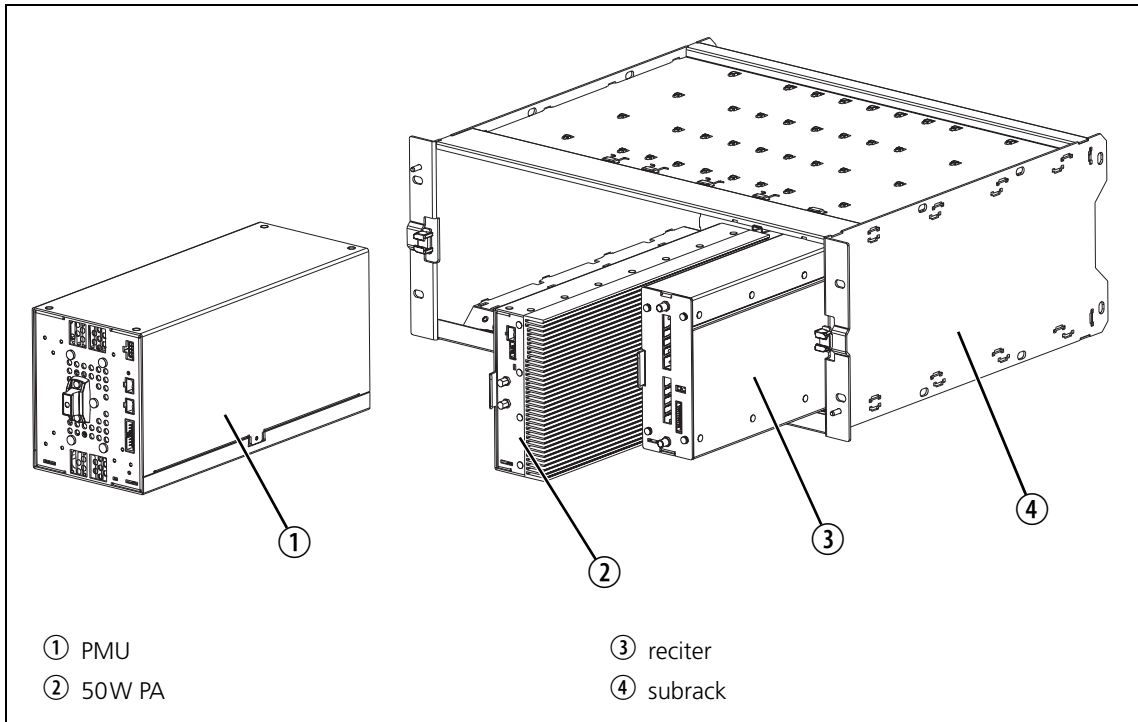


Figure 1.3 below shows the configuration for a typical 100 W base station. The PMU occupies its usual slot at the left end of the subrack, with the PA directly beside it. The reciter occupies the slot at the right of the subrack. Unlike the 50 W PAs, the 100 W PA is mounted horizontally with the heatsink facing upwards. It is also fitted with an airflow duct to channel the airflow from the cooling fan through the heatsink fins.

Figure 1.3 Mechanical assembly - single 100W base station

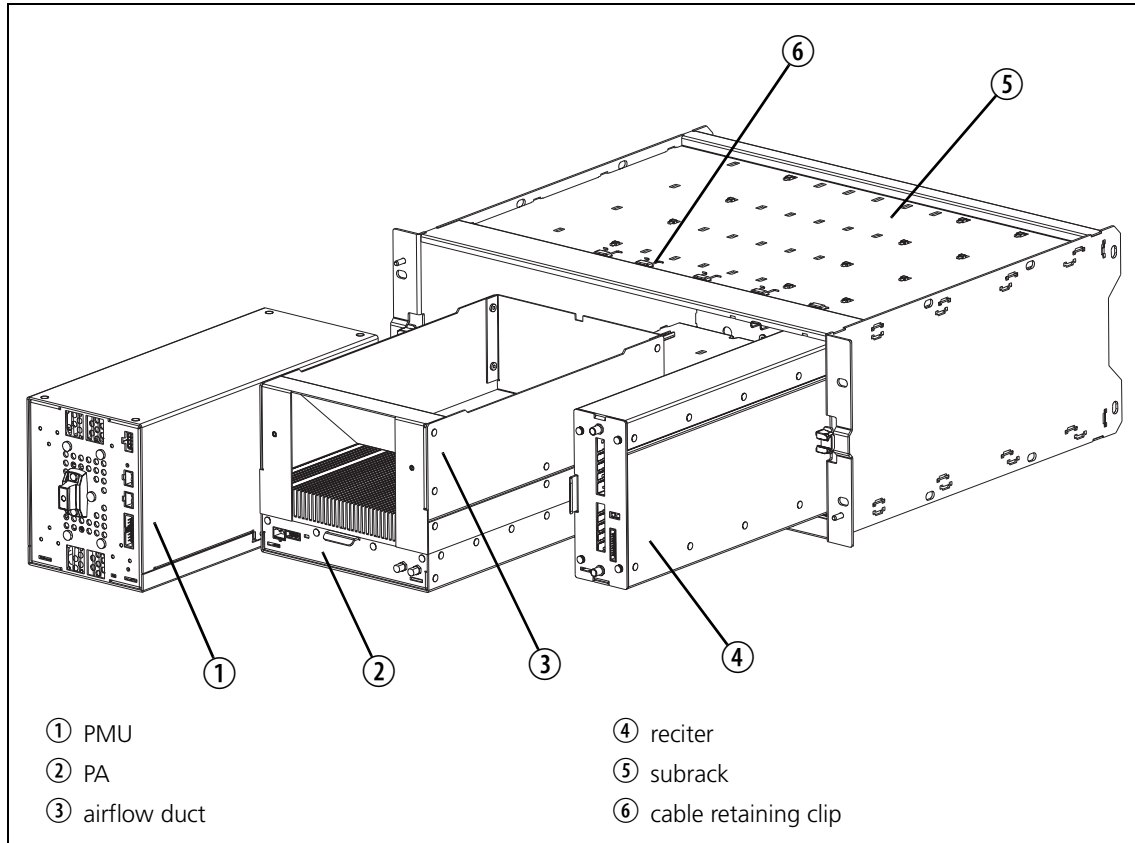

1.4 Frequency Bands and Sub-bands

The first release of the **base station** operates only on K band. Later releases will support operation on other frequency bands.

Frequency Identification	Frequency Band and Sub-band
K band	K4 = 762MHz to 870MHz ^a

a. The actual frequency coverage in this band is:

Transmit: 762MHz to 776MHz, and 850MHz to 870MHz
Receive: 792MHz to 824MHz

1.5 Applications

The TB9400 is designed for operation in a TaitNet P25 trunked radio network. It can operate as a single base station or as part of a channel group or simulcast channel group, and as a traffic channel or control channel.

In a trunked simulcast network, the transmitters in the channel group are synchronized and transmit simultaneously on the same frequency. Each transmitter needs a highly accurate 1PPS pulse and an external frequency reference, so that it can time transmissions with the required accuracy. We also recommend using an NTP server at each site, as this will ensure a common timestamp in logs across all units in the system.

For more information, refer to the TaitNet P25 System Manual.

1.6 Licenses

Some operational functions of the **base station** are controlled by licenses. These functions will not work unless you purchase the appropriate feature license and enable the feature set controlled by that license. The feature sets currently available are listed below.

P25 Common Air Interface

Allows the **base station** to go into Online mode. **Base stations** are always provided with this license.

P25 Trunking Operation

Allows a **base station** to participate in a trunking system. Without this feature, the **base station** cannot provide a control or a status connection to a trunking site controller and it cannot function as a control or traffic channel.

Networking with Centralized Voter

Allows the **base station** to act as a central voter within its channel group. This feature also allows voice networking. Only **base stations** that will centrally vote (normally the central voter and its backup) need this feature. The other members of the channel group only need the networking with distributed voter feature. A standard trunked **base station** (standalone without fill-in repeaters or other channel group members) can function as a master or a failsoft repeater without this license.

Simulcast Transmitter

This feature is required in **base stations** that have transmitters and belong to a simulcast network.

Simulcast Modulation

Allows the **base station** to transmit using the LSM modulation scheme. This scheme is designed to minimize performance degradation in simulcast channels caused by delay spread.

Failsoft for P25 Trunking

Allows trunked channels that become isolated from a site controller to perform simple conventional operation and to interface to a digital dispatch system. If a trunked channel consists of several **base stations** in a channel group, only the central voter (normally the master) needs this license. It is then able to become the failsoft repeater for that channel group.

Phase 2 Operation (not yet available)

This feature will allow the **base station** to operate in trunking mode using two-slot TDMA as defined by the P25 Phase 2 standard.


1.7 Theory of Operation

The reciter receives RF signals from its RF input and sends RF from its RF output to the PA, along with a PA key signal. The PA sends an RF feedback signal to the reciter for linearization and power control purposes. The reciter also receives signals from, and sends signals to, the system interface, the Ethernet interface, and the front panel (see [Figure 1.4](#)).

A system control bus interconnects the modules and carries alarm and control signaling between the reciter and the other modules.


The Ethernet interface carries voice over IP and also allows maintainer access via a web browser.

Figure 1.4 Base station high-level diagram

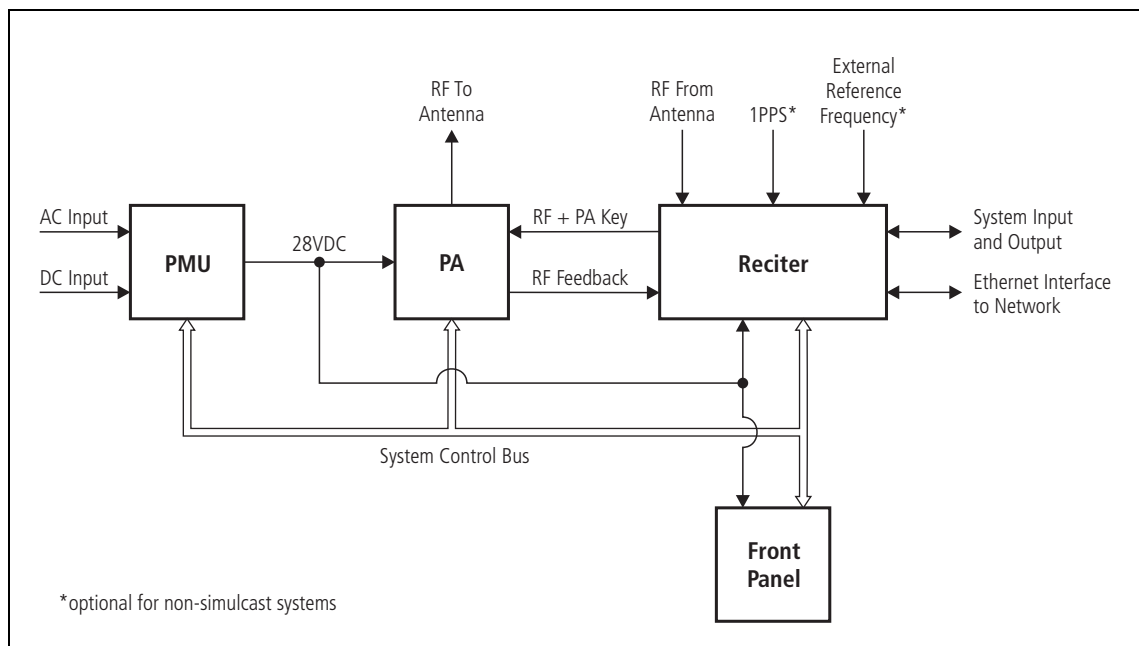

The reciter carries out signal processing and has overall control of the **base station**. It has four boards, as shown in [Figure 1.5](#).

Figure 1.5 Reciter boards

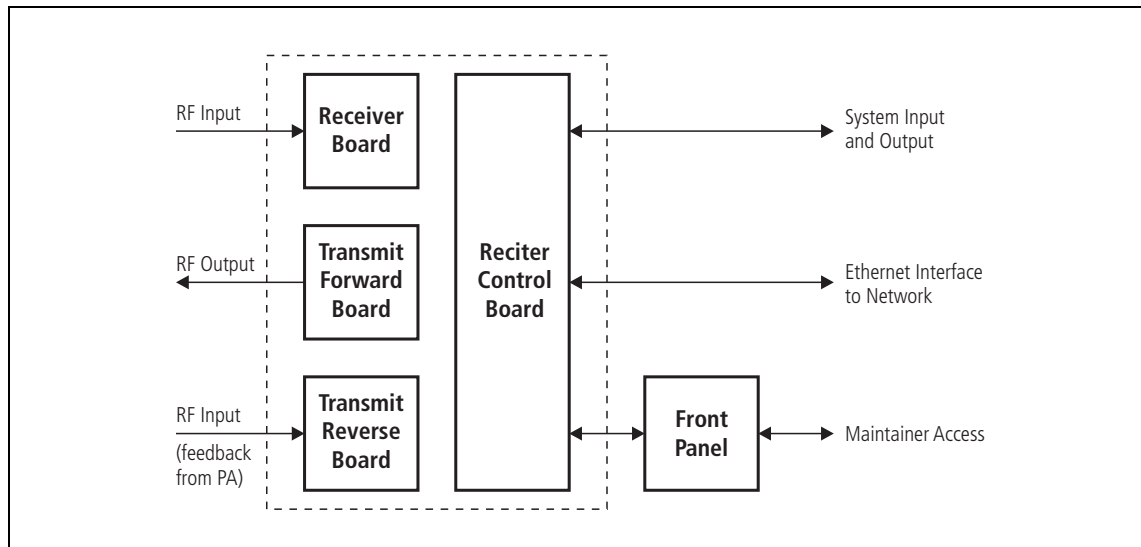


The receiver board contains all the receiver circuitry, while the exciter circuitry is located on the transmit forward board.

The reciter control board converts information between analog and digital and controls the maintainer's access via the front panel. It performs the air interface signal processing for digital P25 mode, gives the **base station** an identity as a network element, and provides the physical connections for the Ethernet and system interfaces.

1.7.1 Signal Paths

Figure 1.6 gives an overview of signal paths within the reciter.

Figure 1.6 Reciter signal paths

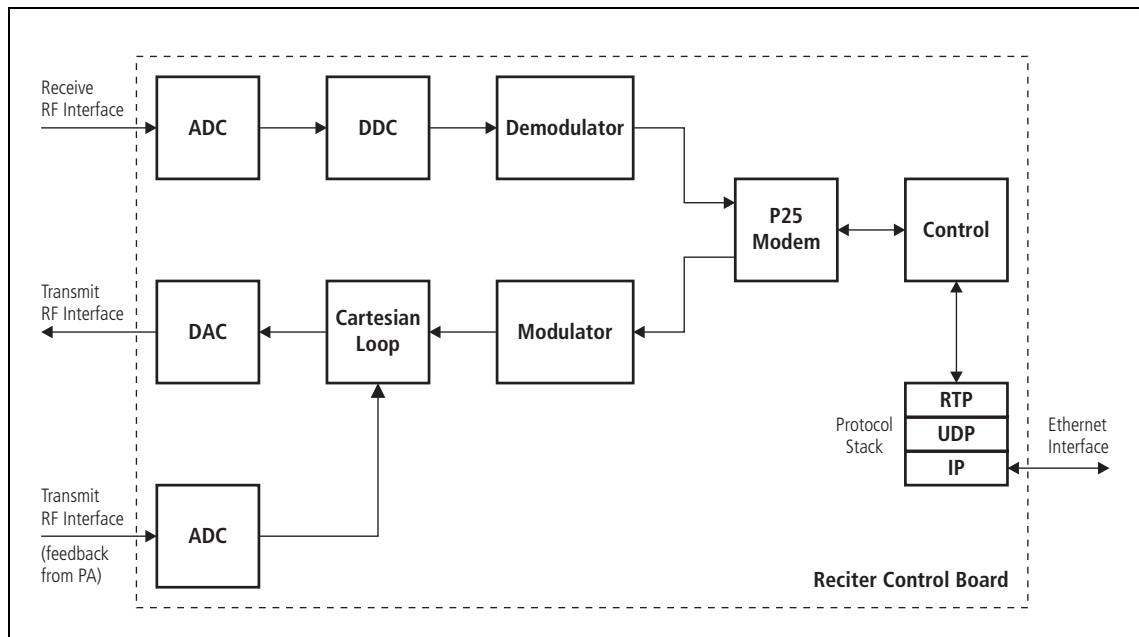

Digital P25 signals from the receive RF interface pass through the digital receiver and P25 modem to the control software in the RISC processor. The control software passes the signal through the Ethernet interface to the site controller, or to the central voter in a simulcast system.

Input to the Ethernet interface can be from the site controller, or from the central voter in a simulcast system. These inputs are processed by the RISC and passed through the P25 modem to the transmitter. If the **base station** is itself a central voter, this input can also be a received signal, which is voted on and sent back through the Ethernet interface to the site controller.

1.7.2 Online and Offline Modes

The **base station** normally operates in Online mode, but you can put it into Offline mode via its web interface.

Online Mode

In Online mode, the **base station** performs its normal functions.


Offline Mode

When you program the **base station** or run invasive diagnostic tests, the **base station** must be in Offline mode. This takes the **base station** out of service. However, the front panel is still operational and can be used in the normal way.

1.7.3 Intermodule Communications

A system control bus and a subrack interconnect board link the modules in the subrack and carry alarm and control signaling between the reciter and the other modules, as shown in [Figure 1.7](#).

Figure 1.7 Intermodule communication paths

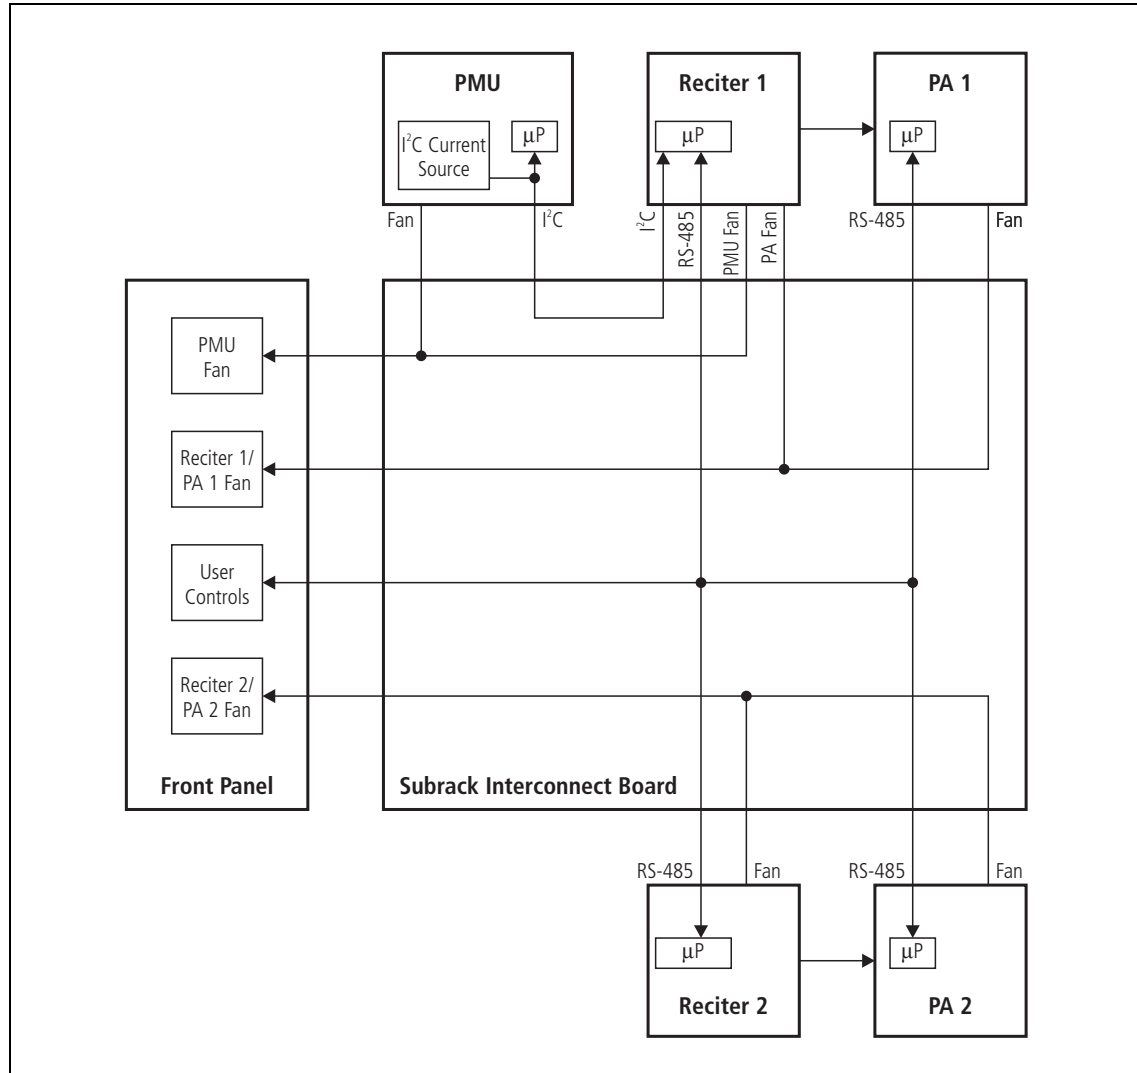

1.7.4 Power Management and Distribution

The PMU manages the supply of power to ensure uninterrupted operation of the **base station**. A range of parameters is monitored and these can trigger alarms that are sent to the reciter. Alarms can be monitored via the web interface, and are also recorded in the reciter's internal log file.

AC to DC Changeover

When the PMU has an AC and a DC module, the **base station** can be powered by either the AC (mains) or the DC (battery) supply. The **base station** will default to the AC supply if both supplies are provided. If the AC supply becomes unavailable, a seamless changeover from the AC to DC supply takes place, providing that the battery voltage is above the configured minimum. You can use a web browser to check whether the **base station** is running on battery or mains power.

DC Operation

When the **base station** is running off the DC supply and the battery voltage falls below the configured minimum, the **base station** will enter battery protection mode to protect the battery and **base station** equipment. The standby power supply card maintains the power to the PMU microprocessor, while the rest of the PMU is shut down. When the battery voltage rises to the configured startup setting, power is resumed to the DC supply. Refer to “[PMU Operation on DC Input](#)” on page 25 for more detailed information.

Auxiliary Power Control

The output from the auxiliary power supply board can be used to power other site equipment. The maximum output is 40 W.


Distribution

[Figure 1.8](#) shows how power is distributed to modules in the subrack. The 28VDC output from the PMU is fed directly to the 100 W PA and 50 W PA1, and to the other modules via the subrack interconnect board. Power to the reciters and front panel is current-limited by self-resetting fuses on the subrack board.

The AC converter has a series switch which breaks the phase input to the converter. The DC input, however, has much higher current ratings. Its switch does not disconnect power from the DC converter itself, but disables the converter by switching off its control circuitry.

The outputs from both the AC and DC high power converters are added together and fed to the modules via the high-current outputs. The auxiliary output is also tapped off this summed output.

Figure 1.8 Subrack power distribution for single and dual base stations

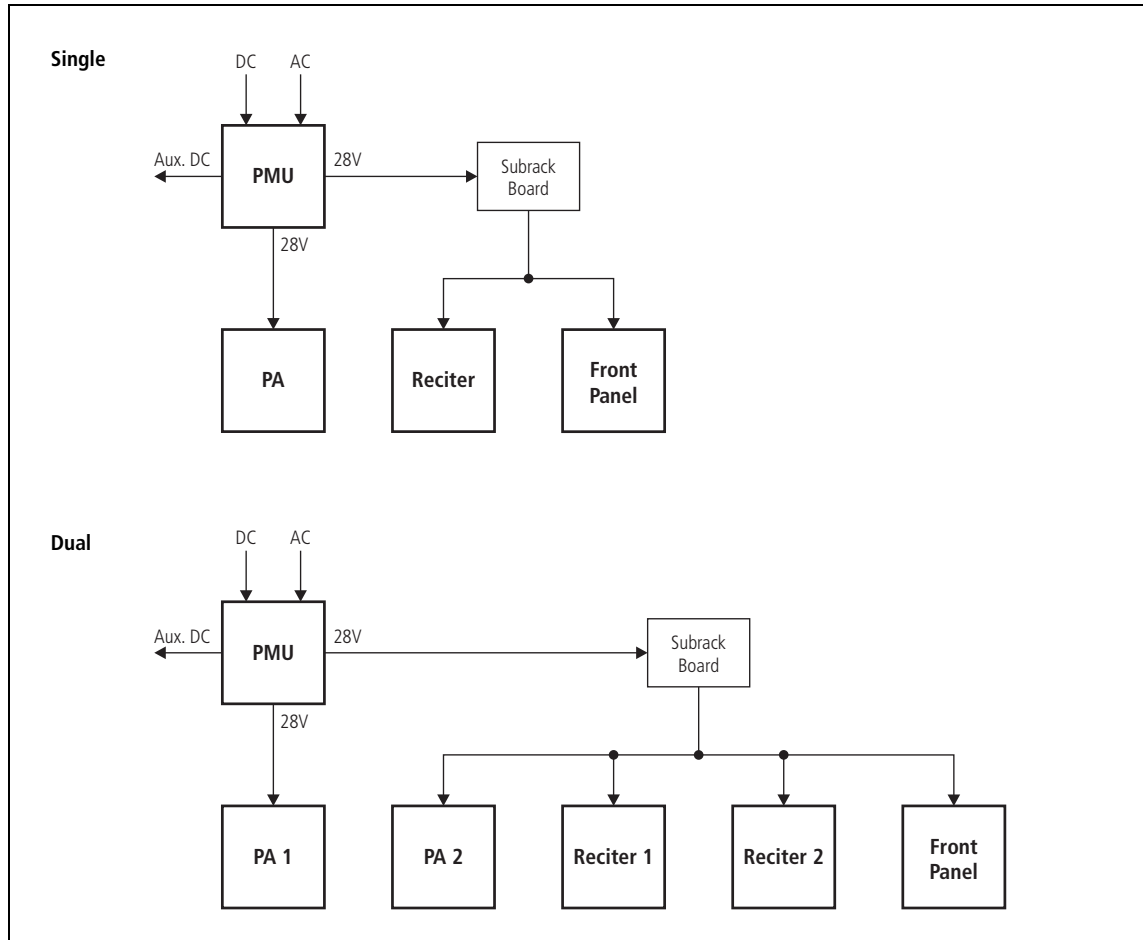

1.7.5 PMU Operation on DC Input

The operation of the PMU on DC input is controlled by three sets of parameters:

- user-programmable alarms
- user-programmable startup and shutdown limits
- battery protection limits

The voltage range for each of these parameters is provided in [Table 1.1 on page 26](#). [Figure 1.9 on page 27](#) illustrates how these parameters interact, and how they control the operation of the PMU over a range of DC input voltages.

Alarms

User-programmable alarms can be set for low or high battery voltage (Configure > Alarms > Thresholds). The alarms will be triggered when the set voltage levels are reached. These limits are subject to the tolerances of the battery protection circuitry, as stated in “Battery Protection (Fail-safe) Limits” in [Table 1.1](#).

Startup and Shutdown Limits

The user-programmable startup and shutdown limits allow for adjustable startup and shutdown voltages (Configure > Base Station > Miscellaneous). These limits can be adjusted for different numbers of battery cells, or for the particular requirements of the [base station](#) operation. Once the limits are reached, the PMU will shut down. These limits are subject to the tolerances of the battery protection circuitry, as stated in “Battery Protection (Fail-safe) Limits” in [Table 1.1](#).



Important

It is possible to set the startup voltage of the [base station](#) below the nominal voltage of the battery. Continuing to use a battery for extended periods when it is below its nominal voltage will severely shorten its service life. For more information on battery management, we recommend that you consult the battery manufacturer.

Battery Protection Limits


The battery protection limits are set in hardware at the factory, and cannot be adjusted by the user. These limits will not be reached under normal operation conditions, but are provided as “fail-safe” measures to protect the battery from deep discharge. They also remove the need for low-voltage disconnect modules.

Table 1.1 PMU DC voltage limits^a

Parameter	Voltage Range		
	12V PMU	24V PMU	48V PMU
User-programmable Alarms ^b Low Battery Voltage High Battery Voltage	10V to 14V 14V to 17.5V	20V to 28V 28V to 35V	40V to 56V 56V to 70V
User-programmable Limits ^{bc} Startup Voltage (after shutdown) Shutdown Voltage	10.9V to 15V ±0.3V 10V to 13.5V ±0.3V	21.8V to 30V ±0.3V 20V to 27V ±0.3V	43.6V ±0.3V 40V to 54V ±0.3V
Battery Protection (Fail-safe) Limits Startup Voltage Undervoltage Shutdown Overvoltage Shutdown Overvoltage Shutdown Reset	10.8V ±0.2V 9.5V ±0.3V 18.1V ±0.3V 17.1V ±0.3V	21.6V ±0.5V 19V ±0.5V 36.2V ±0.5V 34.2V ±0.5V	43.2V ±1V 38V ±1V 72.4V ±1V 68.4V ±1V

- The information in this table is extracted from the Specifications Manual. Refer to the latest issue of this manual for the most up-to-date and complete PMU specifications.
- Using the [base station's](#) web interface.
- These limits are subject to the tolerances of the battery protection circuitry.

Figure 1.9 PMU alarm thresholds and voltage limits when operating on DC

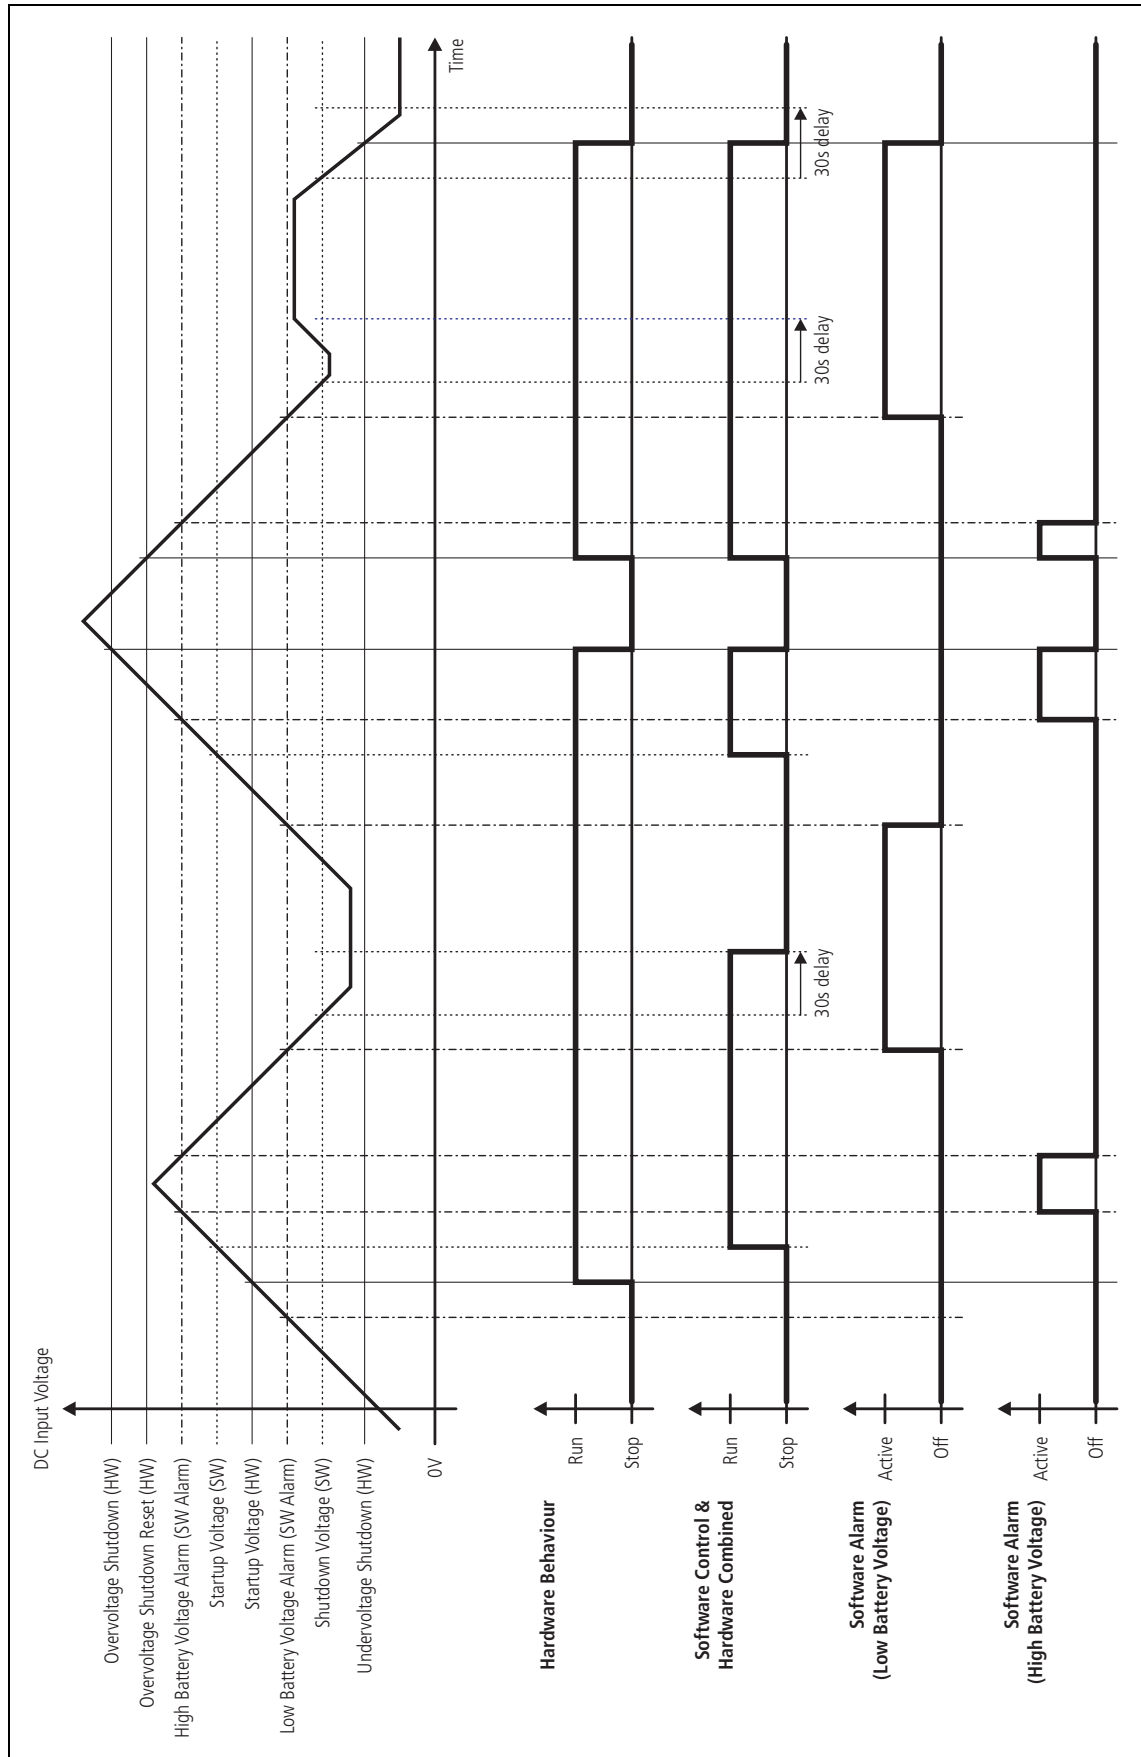

1.7.6 Front Panel Fans

The front panel is equipped with three fans. One fan is for the PMU and the other two are for the reciter/PA pairs in a 50W base station, or for the PA and reciter in a 100W base station. Front panel fans do not operate continuously but are switched on and off as needed by the reciter firmware. Each reciter controls the fan it shares with its PA, and reciter 1 also controls the PMU fan. Under certain conditions the PMU and each PA can override the reciter and assume control of its own fan.

Front panel fans are 3-wire fans (power, ground, and rotation detect). The reciter can monitor whether the fans are rotating and generate an alarm if the fan fails.

The fans turn on for a few seconds when the **base station** is powered up, and also after the front panel is refitted to a **base station** which is powered up.

Configuring Fan Control

The operation of the PA fan is configurable via the web interface; you can specify the threshold temperature at which the fan will be turned on, and set the fan to operate only when the PA is transmitting.

The PMU fan has fixed on/off thresholds and a defined set of duty cycles based on the PMU temperature, as described in the following table:

PMU Temperature	Fan Duty Cycle
<149°F (65°C)	Increases as the load on the PMU increases
149-167°F (65-75°C)	On for two minutes, off for one minute
>167°F (75°C)	Always on

2 General Safety and Regulatory Information

This chapter provides general information on safety precautions for operating the [base station](#).

2.1 Personal Safety

2.1.1 Unpacking and Moving the Equipment

To prevent personal injury and equipment damage, we recommend that two people unpack and move the equipment.



Caution

A subrack complete with modules can weigh up to 55lb (25kg), or up to 62lb (28kg) complete with packaging. We recommend that you have another person help you unpack and move the equipment. The TBAA03-16 carrying handles will make it easier to move the equipment once it has been unpacked. If necessary, remove the modules from the subrack before moving it (refer to [“Replacing Modules” on page 93](#)). In all cases follow safe lifting practices.

2.1.2 Lethal Voltages



Warning!!

The PMU contains voltages that may be lethal. Refer to the ratings label on the rear of the module.

The equipment must be installed so that the rear of the PMU is located in a service access area which is accessible only by qualified personnel. The PMU must be connected to the mains supply source by qualified personnel in accordance with local and national regulations.

Disconnect the mains IEC connector and wait for five minutes for the internal voltages to self-discharge before dismantling. The AC power on/off switch does not isolate the PMU from the mains. It breaks only the phase circuit, not the neutral.

The PMU should be serviced only by qualified technicians. There are no user-replaceable parts inside. If the PMU is damaged and does not function

properly, stop the module safely and contact your regional **Tait** office immediately.

All servicing should be carried out only when the PMU is powered through a mains isolating transformer of sufficient rating.

2.1.3 AC Power Connection

English (en)	The PMU must be connected to a grounded mains socket-outlet.
Norsk (no)	Apparatet må tilkoples jordet stikkontakt.
Suomi (fi)	Laite on liitettävä suojamaadoitus-koskettimilla varustettuun pistorasiaan.
Svenska (sv)	Apparaten skall anslutas till jordat uttag.

2.1.4 Explosive Environments



Warning!! Do not operate the equipment near electrical blasting caps or in an explosive atmosphere. Operating the equipment in these environments is a definite safety hazard.

2.1.5 Proximity to RF Transmissions

Do not operate the transmitter when someone is standing within 3 ft (90 cm) of the antenna. Do not operate the transmitter unless you have checked that all RF connectors are secure.

2.1.6 High Temperatures

Take care when handling a PMU or PA which has been operating recently. Under extreme operating conditions (+140°F [+60°C] ambient air temperature) or high duty cycles, the external surfaces of the PMU and PA can reach temperatures of up to +176°F (+80°C).

2.1.7 LED Safety (EN60825-1)

This equipment contains Class 1 LED Products.

2.2 Equipment Safety

2.2.1 Installation and Servicing Personnel

The equipment should be installed and serviced only by qualified personnel.

2.2.2 Preventing Damage to the PA

The **base station** has been designed to operate safely under a wide range of antenna loading conditions. Transmitting into a low VSWR will maximize the power delivered to the antenna.



Important Do not remove the load from the PA while it is transmitting.

Load transients (switching or removing the load) or atmospheric disturbances (for example rain static and electrical storms) can damage the PA output stage. See “[Connecting RF](#)” on page 84 for recommendations.

2.2.3 ESD Precautions




Important This equipment contains devices which are susceptible to damage from static charges. You must handle these devices carefully and according to the procedures described in the manufacturers’ data books.

We recommend you purchase an antistatic bench kit from a reputable manufacturer and install and test it according to the manufacturer’s instructions. [Figure 2.1](#) shows a typical antistatic bench set-up.

You can obtain further information on antistatic precautions and the dangers of electrostatic discharge (ESD) from standards such as ANSI/ESD S20.20-1999 or BS EN 100015-4 1994.

Figure 2.1 Typical antistatic bench set-up

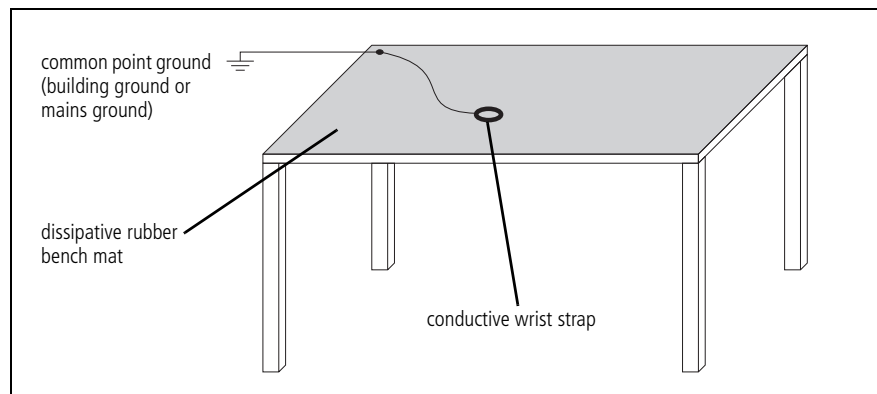

2.2.4 Anti-tampering Devices

All network elements should be physically secured, where possible. This includes the use of locked cabinets and the use of seals on connectors.

All network and audio connectors should be sealed with the stick-on type of seal. The purpose of the seals is to detect unauthorized tampering. The seal should reveal if any of the connectors have been unplugged or if any unauthorized equipment has been plugged in.

The seals must be difficult to remove without breaking, and must bridge between the cable and equipment side (plug and socket) of the connection.

Seals must cover any unused network or audio sockets. This includes the Ethernet connector on the rear panel, any spare switch ports, and the console port on the router and switch.

The seals must be difficult to reproduce. A sticker initialed or signed by the technician should satisfy this.

Seals must be replaced if they need to be disturbed during maintenance.

2.3 Environmental Conditions

2.3.1 Operating Temperature Range

The operating temperature range of the equipment is -22°F to $+140^{\circ}\text{F}$ (-30°C to $+60^{\circ}\text{C}$) ambient temperature. Ambient temperature is defined as the temperature of the air at the intake to the cooling fans.

2.3.2 Humidity

The humidity should not exceed 95% relative humidity through the specified operating temperature range.

2.3.3 Dust and Dirt

For uncontrolled environments, the level of airborne particulates must not exceed $100\mu\text{g}/\text{m}^3$.

2.4 Regulatory Information

2.4.1 Distress Frequencies

The 406 to 406.1MHz frequency range is reserved worldwide for use by Distress Beacons. Do **not** program transmitters to operate in this frequency range.

2.4.2 FCC Compliance

This equipment complies with:

- CFR Title 47 Part 15 Class B (except PMU):
Radiated and conducted emissions, and electromagnetic susceptibility specifications of the Federal Communications Commission (FCC) rules for the United States.
Operation is subject to the following two conditions:
 - a. This device may not cause harmful interference, and
 - b. This device must accept any interference received, including interference that may cause undesired operation.
- CFR Title 47 Part 15 Class A (PMU only):
Radiated and conducted emissions, and electromagnetic susceptibility specifications of the Federal Communications Commission (FCC) rules for the United States.
Operation is subject to the following two conditions:
 - a. This device may not cause harmful interference, and
 - b. This device must accept any interference received, including interference that may cause undesired operation.

2.4.3 Unauthorized Modifications

Any modifications you make to this equipment which are not authorized by Tait Electronics Limited may invalidate your compliance authority's approval to operate the equipment.

2.4.4 Health, Safety and Electromagnetic Compatibility in Europe

In the European Community, radio and telecommunications equipment is regulated by Directive 1999/5/EC, also known as Radio and Telecommunications Terminal Equipment (R&TTE) directive. The requirements of this directive include protection of health and safety of users, as well as electromagnetic compatibility.

Intended Purpose of Product

This product is a radio transceiver. It is intended for radio communications in the Private Mobile Radio (PMR) or Public Access Mobile Radio (PAMR) services, to be used in all member states of the European Union (EU) and states within the European Economic Area (EEA). This product can be programmed to transmit on frequencies that are not harmonized throughout the EU/EEA, and will require a licence to operate in each member state.

Declaration of Conformity

You can download the formal Declaration of Conformity from <http://eudocs.taitradio.com/>. You can also obtain a signed and dated paper copy of the Declaration of Conformity from Tait Electronics Limited.

3 Operation

This section describes the user controls and indicator LEDs on the front panel and on the **base station** modules.


3.1 Front Panel

The user controls and indicator LEDs on the front panel are shown in [Figure 3.1](#). They allow some manual control over the [base station](#) and monitoring of its operational status.



Note If there is more than one reciter in a subrack, inputs from all reciters are summed to drive the front panel LEDs.

Figure 3.1 Operating controls on the control panel

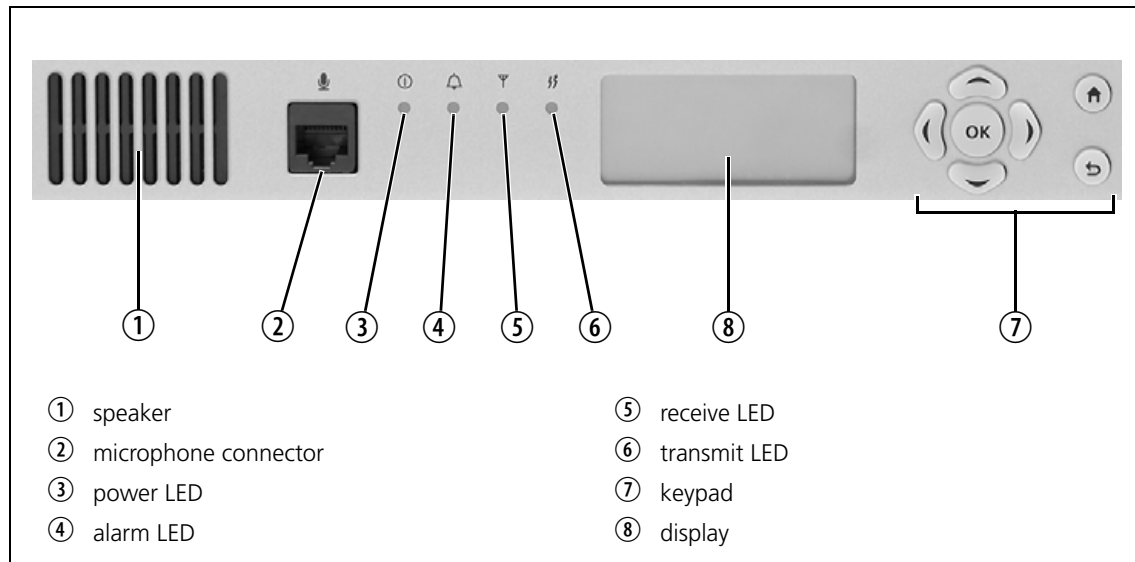

① ② **Speaker and Microphone Connector**

The speaker and microphone connector are not used in this release of the [base station](#).

③ **Power LED**



The green power LED is lit when power is supplied to the subrack.

④ **Alarm LED**



The red alarm LED will flash at a rate of 2 to 5 Hz when an alarm has been generated by any of the [base station](#) modules. It will continue to flash until the alarm is canceled or the fault is fixed. Note that only those alarms which are enabled using the web interface will cause this LED to flash.

LED	Description
On (steady)	The base station is in Offline mode (regardless of the presence of any fault).
Flashing	The base station is in Online mode, and one or more faults are present.
Off	The base station is in Online mode, and no faults are present.

DRAFT 4

⑤ Receive LED



The amber receive LED indicates whether the **base station** is receiving a valid RF signal.

LED	Description
On (steady)	The base station is receiving a valid RF signal.
Off	The base station is not receiving a valid RF signal.

⑥ Transmit LED



The amber transmit LED is lit while the transmitter is transmitting.

⑦ Keypad

The keypad is used to navigate the **base station's** menus, enter text, and to adjust the contrast of the display. The complete list of menu items is provided in [“Menu Map” on page 39](#).

If required, the keypad can be disabled in the web interface to prevent access to the **base station** via the front panel menus (see [“Disabling the Front Panel Keypad” on page 60](#)).

Key	Name	Function
	left and right arrow keys	<ul style="list-style-type: none">■ Move the cursor to the left or right when entering text. Moving the cursor beyond the end of a line will return it to the other end of the same line.■ Decrease or increase the contrast in the Display Contrast screen.
	scroll keys	<ul style="list-style-type: none">■ Scroll up and down through a list of menu items.■ Scroll up and down through the list of available characters when entering text.■ Increase or decrease the contrast in the Display Contrast screen.
	OK	<ul style="list-style-type: none">■ Selects the highlighted menu item.■ Confirms any adjustments made and exits to the previous menu.■ When setting the IP address, moves the cursor down one line. When all the IP addresses are confirmed, exits to the previous menu.
	home	<ul style="list-style-type: none">■ Returns to the idle screen from any other menu.
	return	<ul style="list-style-type: none">■ Returns to the previous menu.■ Moves the cursor up one line in the IP address screen. When the top line is reached, pressing again returns to the previous menu.



Note

Unlike a computer keyboard, the keys do not auto-repeat. Each action requires a separate key-press.

⑧ Display

The display is used in conjunction with the keypad to access the **base station's** menus. It allows the technician to configure the IP address of each reciter (refer to “[Setting the IP Address](#)” on page 48), and to set the contrast of the display (see below).

After the **base station** is powered up, the display shows “Please wait...” while the **base station** is starting up, followed by the idle screen when the start-up process is complete. If the front panel loses communication with reciter 1, the display also shows “Please wait...”, and the alarm LED flashes. If the **base station** is activating new firmware, the display is blank and the power LED flashes. The idle screen shows four lines of user-defined text, which can be entered via the web interface (Identity > Identity > Base Station Identity).

From the idle screen press an arrow key, a scroll key or OK to go to the **base station** menu. The display returns to the idle screen from any other screen 30 seconds after the last key press. Press any key to turn on the backlight. The backlight turns off 30 seconds after the last key press.



Note If the keypad has been disabled, pressing an arrow key, a scroll key or OK will cause the display to show “Keypad Disabled”.

Set the display contrast as follows:

1. From the **base station** menu select Modules > Front Panel > Contrast.
2. To increase the contrast, press the right arrow or scroll up key. To decrease the contrast, press the left arrow or scroll down key.
3. When the contrast is set to the required level, press OK to save the changes and exit the menu.

DRAFT 4


Menu Map

The menu map below shows the menu items available in this release of the **base station**.



Note

The menu map shown is for a single **base station**. The menu items available in your **base station** will depend on the modules present in the subrack.

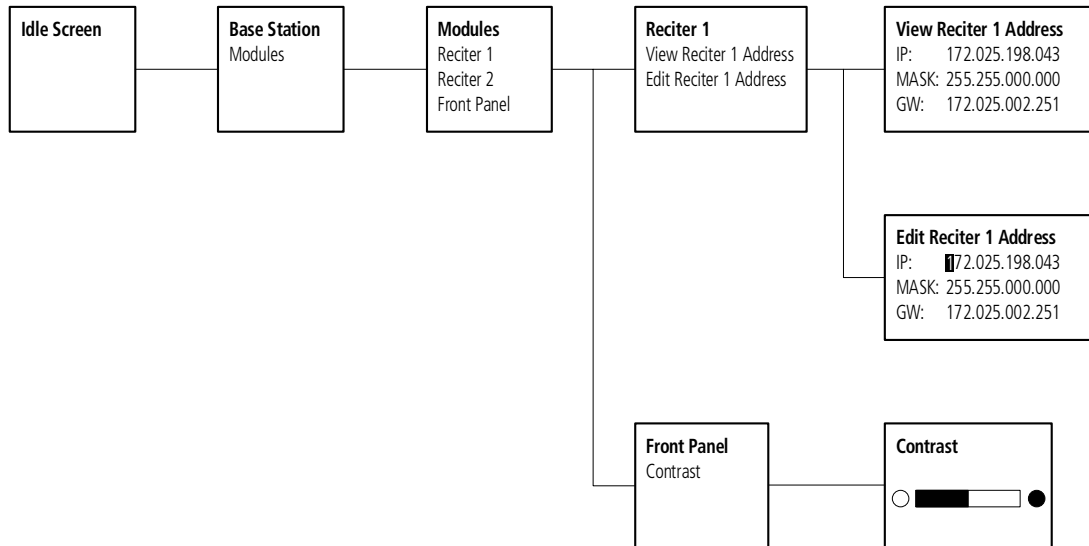


3.2 Module Indicator LEDs and Switches

Additional status information is displayed by LEDs in individual modules. The PMU also has switches that let you turn the AC and DC modules off.

3.2.1 Reciter

Front View The indicator LEDs on the front of the reciter are visible through a slot in its front panel.

Figure 3.2 Indicator LEDs on the front of the reciter

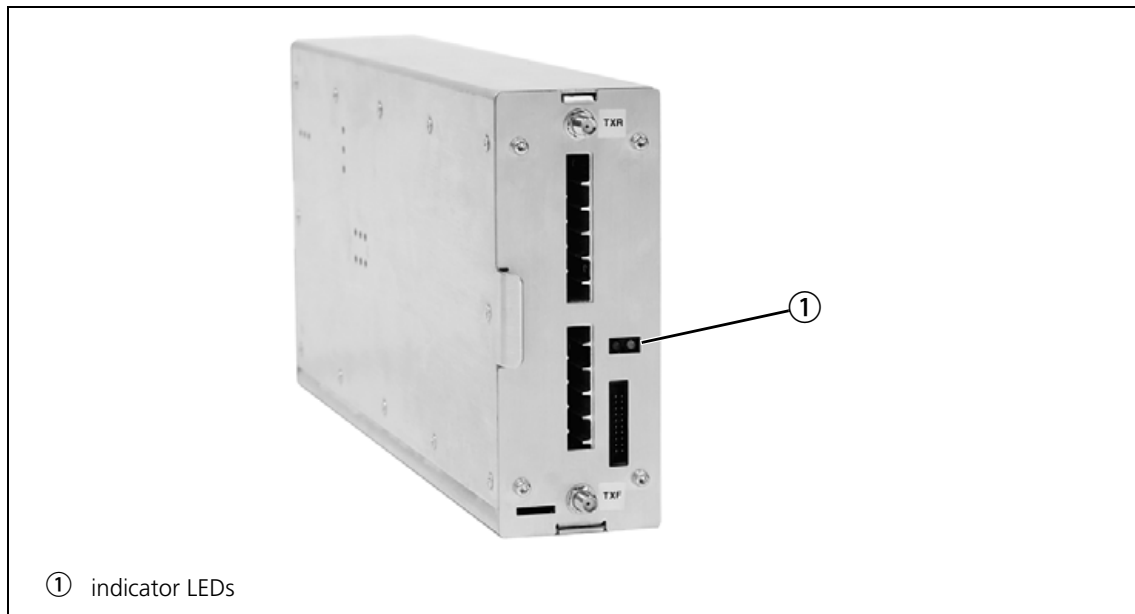


These LEDs provide the following information about the state of the reciter:

- steady green - the reciter is powered up
- flashing red - one or more alarms have been generated; you can use the web interface to find out more details about the alarms.

Rear View

The indicator LEDs on the rear of the reciter are on the Ethernet connector.

Figure 3.3 Indicator LEDs on the rear of the reciter

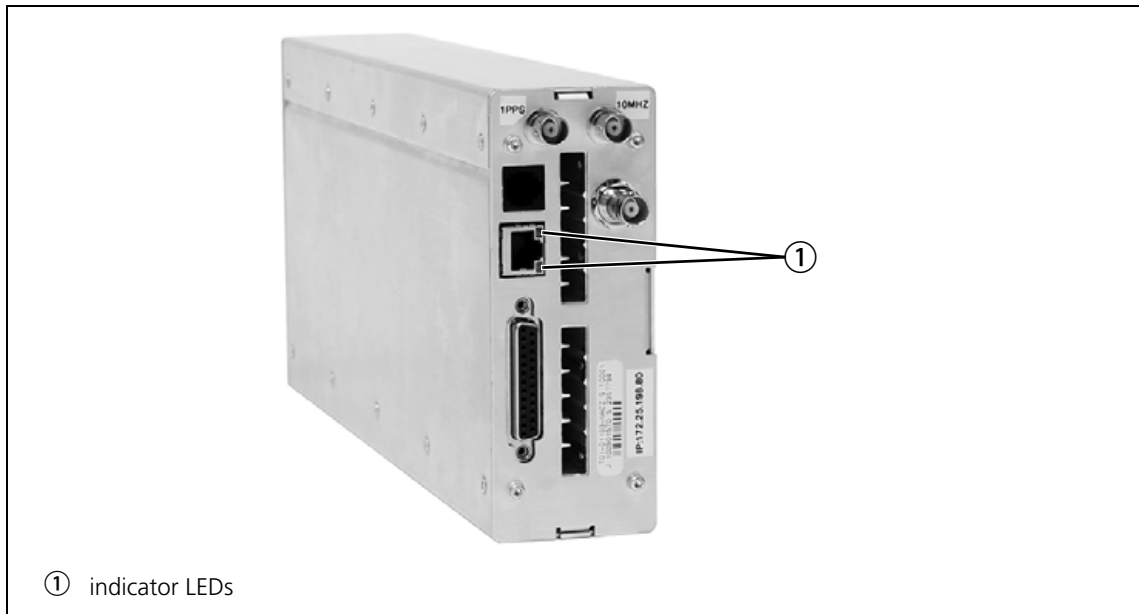


These LEDs provide the following information about the state of the reciter:

- steady amber - the Ethernet interface is connected
- flashing green - data is being transmitted across the Ethernet interface.

3.2.2 PA

The indicator LEDs on the PA are visible through a slot in its front panel.

Figure 3.4 Indicator LEDs on the PA

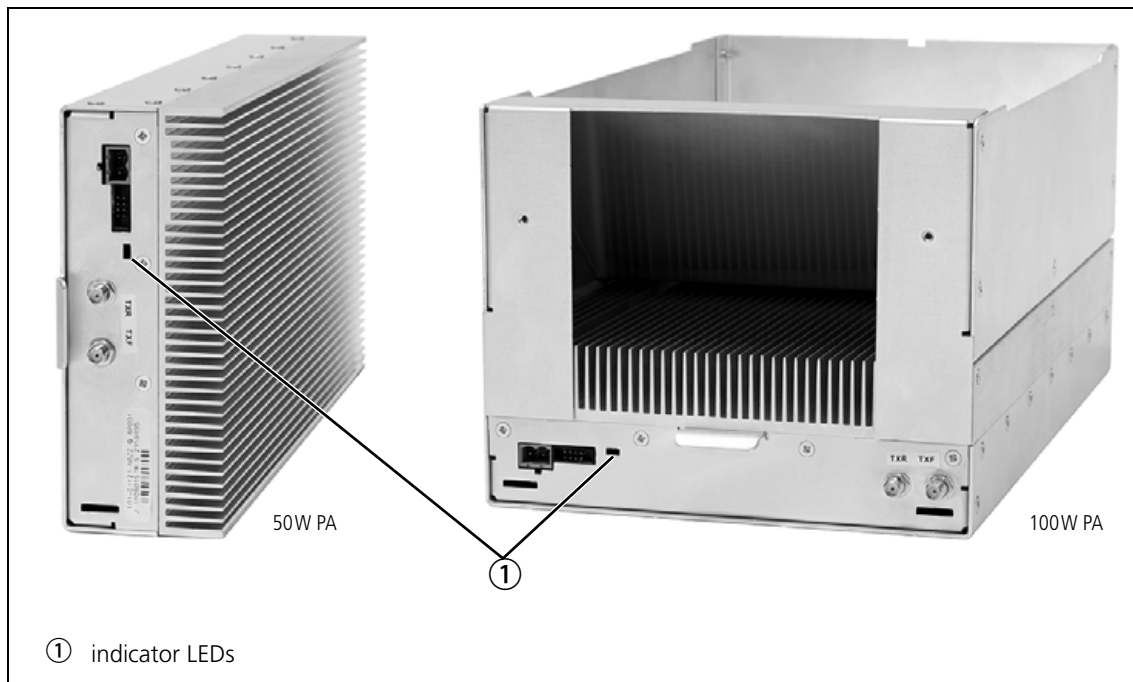

Indicator LEDs

These LEDs provide the following information about the state of the PA:

- steady green - the PA is powered up
- flashing green - the PA has no application firmware loaded or activated; you can use the web interface to download or activate the firmware; also see [“Preparing to Download Firmware” on page 61](#)
- flashing red - one or more alarms have been generated; you can use the web interface to find out more details about the alarms.




Note The alarm LED will flash whenever an alarm is generated, whether or not this alarm has been disabled via the web interface.

3.2.3 PMU

The only controls on the PMU are the on/off switches on the rear panel for the AC and DC modules, and the indicator LEDs visible through a slot in its front panel.

Figure 3.5 Operating controls on the PMU

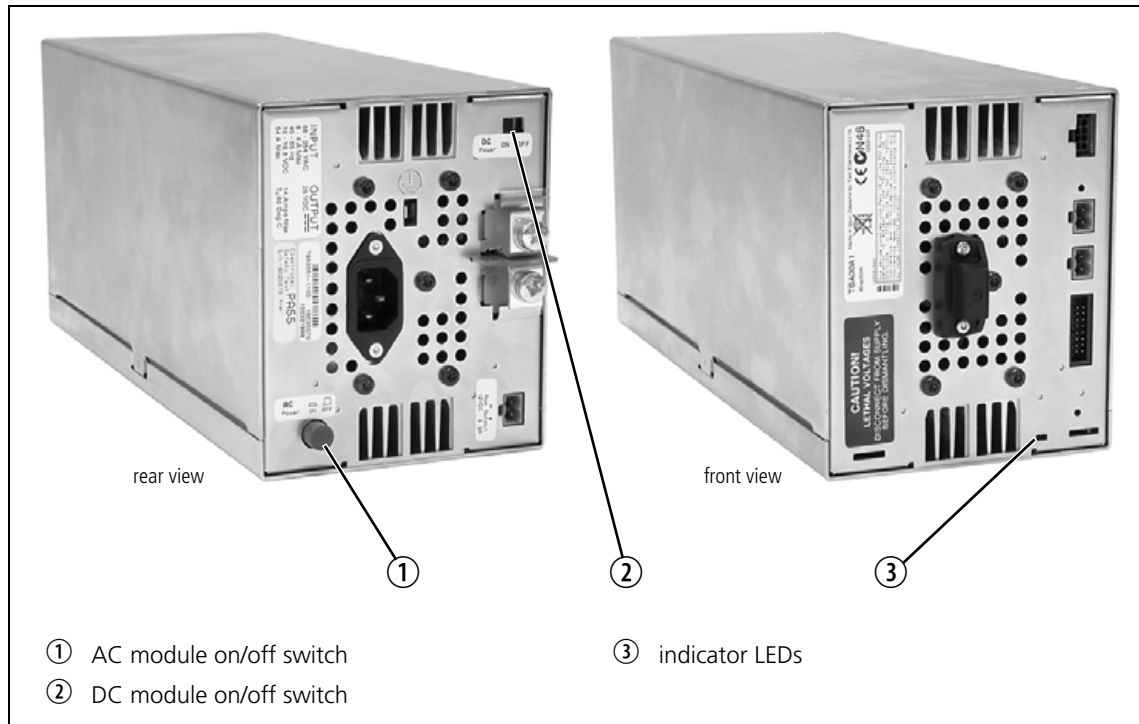

Warning!! The AC and DC module on/off switches do not totally isolate the internal circuitry of the PMU from the AC or DC power supplies. You must disconnect the AC and DC supplies from the PMU before dismantling or carrying out any maintenance. Refer to the service manual for the correct servicing procedures.

AC Module On/Off Switch

This switch turns the AC input to the PMU on and off. Note that this switch breaks only the phase circuit, not the neutral.



Note On switches fitted to PMUs up to November 2008, the red button is “in” when on, and “out” when off. On switches fitted from November 2008 onwards, the red button remains “out” whether on or off.

DC Module On/Off Switch

This switch turns the DC output from the PMU on and off. Note that this switch does not disconnect power from the DC converter itself. It disables the converter by switching off its control circuitry. Even when the DC converter is off, the DC input is still connected to its power circuitry.

The switch is recessed to prevent the DC module being accidentally switched off, thus disabling the battery back-up supply.

Indicator LEDs

These LEDs provide the following information about the state of the PMU:

- steady green - the PMU is powered up
- flashing green - the PMU has no application firmware loaded or activated; you can use the web interface to download or activate the firmware; also see [“Preparing to Download Firmware” on page 61](#)
- flashing red - one or more alarms have been generated; you can use the web interface to find out more details about the alarms.



Note The alarm LED will flash whenever an alarm is generated, whether or not this alarm has been disabled via the web interface.

4 Working with Base Stations from Your PC

The normal web browser on your PC provides a window into the TB9400 **base station**. Use it to connect to the **base station** so that you can monitor, configure, diagnose, and calibrate it (if required).

This section describes the following:

- Connecting to the base station, including initially setting things up.
- Working with **base station** web pages.
- Carrying out basic tasks.

This section provides an overview of some aspects of the web interface. Refer to the Help for detailed instructions.

4.1 PC Recommendations

We recommend the following PC hardware and software for connecting to a TB9400 **base station**:

- SVGA Monitor (1024 x 768 minimum).
- Network connection.
- Mozilla Firefox version 3.6 and later, Microsoft Internet Explorer version 8 and later.

Note We have tested the **base station** with Firefox 3.6 and Internet Explorer 8. If you encounter problems with your web browser, change to one of these browsers.

4.2 Connecting Your PC to the **Base Station**

You connect to a **base station** using your web browser. Using multiple browser windows or tabs, you can view more than one **base station** and more than one page of any **base station** at once. **Base stations** have a web-based interface that provides the pages you view. Up to five users may be logged in to a **base station** at once.

The **base station** has three different user access levels: Administrator, Maintainer, and Guest. Passwords can be defined for the Administrator and Maintainer levels. This is done using the **base station**'s web interface (Tools > Tools > User Administration). Refer to the Help for more information on setting user access levels.

DRAFT 4

4.2.1 Logging In



Verify default address.


1. Enter the **base station's** URL into your browser: the default address is <https://192.168.1.2> (note the use of a secure-socket connection). To find out the **base station's** IP address, on the front panel select Modules > Reciter 1 (or 2) > View Reciter 1 (or 2) Address. To set the IP address, refer to [“Setting the IP Address”](#) on page 48.



Note [If access to this menu on the front panel has been disabled, you can find out the IP address byhow??](#)



2. A security warning appears when you connect for the first time. Proceed anyway (refer to [“Responding to Security Warnings”](#) on page 49).
3. The login screen appears.

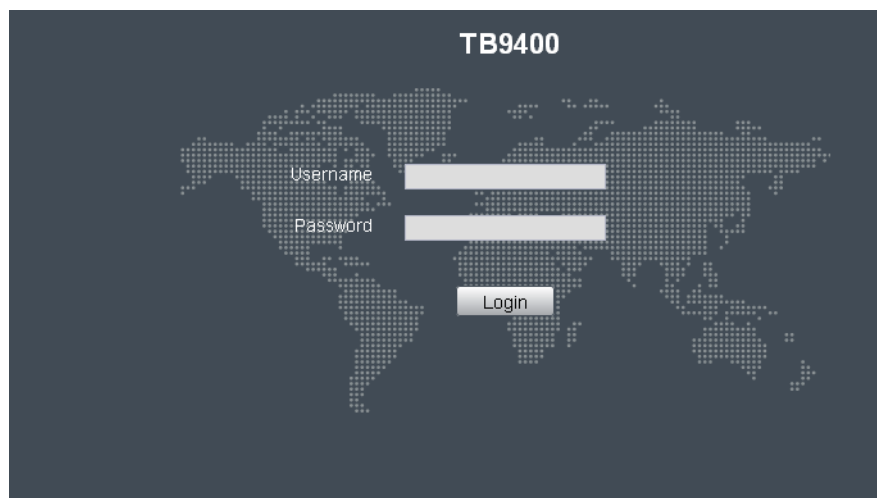

4. Enter your user name and password. When connecting for the first time, enter the user name “admin” and password “tbc_admin”.
5. Click **Login**.

4.2.2 Setting the IP Address

Before the **base station** is installed on site, you need to provide it with its proper IP address. Make sure that you do not lose this address. A quick way to set the **base station**'s IP address is to use the front panel, as described below.



Note If access to this menu on the front panel has been disabled, log in to the **base station** and set the IP address using the web interface (Identity > Identity > Network Identity).

1. Use the front panel display to enter the IP address, subnet mask and gateway specified for this **base station** by the IP addressing plan for the network. From the **base station** menu select Modules > Reciter 1 (or 2) > Edit Reciter 1 (or 2) Address. If the idle screen is showing, press an arrow key, a scroll key or OK to clear it.



Important In this screen each octet in the address lines has provision for three characters. If an octet in the address has less than three characters, enter one or two leading zeroes so that each position is filled, even though the zeroes are not part of the address. For example, enter 172.25.506.47 as 172.025.506.047. Leading zeroes are removed when the address is programmed into the **base station**.

2. Set each address as described below. Use the left and right arrow keys to move the cursor across each line in the Addresses screen. Use the scroll keys to scroll through the available numbers for each position in a line.
 - a. Set the IP address and press OK. This moves the cursor to the next line. To move the cursor back to the previous line, press the return key.
 - b. Set the Mask address and press OK.
 - c. Set the Gateway address and press OK.
 - d. The display shows “Setting Reciter 1 (or 2) address Please wait...” while the **base station** confirms that the addresses are correct. When this process has finished, the display will show “SUCCEEDED” or “FAILED” as appropriate. Press OK to return to the previous menu.
3. If the process failed, try entering the address again. If it still fails, try the following:
 - enter the address through the web interface
 - check that the IP address you are trying to enter is not already in use by another device on the same subnet.

4.2.3 Responding to Security Warnings

When your browser connects to a TB9400 for the first time, it raises a security warning. Normally, secure websites have a security certificate issued by a trusted Certification Authority. This is to foil attempts by rogue websites to pretend to be something they are not. Obtaining such certificates is impractical for each installed TB9400, so a self-signed certificate is created when the reciter's firmware is installed.

Your browser raises a security warning because the security certificate was not issued by a trusted Certification Authority. The browser has a way of letting you override or bypass the security warning. In Internet Explorer, you install a certificate, in Mozilla Firefox you add an exception, and in Google Chrome you elect to proceed anyway.

You can be confident that you are not connecting to a rogue website pretending to be your TB9400, so follow the procedure below to tell the browser that the security certificate is OK. The browser then stores the security certificate and will not raise a warning on subsequent connections, unless the IP address of the TB9400 changes or you use a different URL such as <https://127.0.0.1>. For more information, refer to <http://support.microsoft.com/kb/931850> (Internet Explorer) or search for "security certificate" in your browser's Help.

Firefox

1. When the message "This Connection is Untrusted" appears, click **I Understand the Risks**.
2. Click **Add Exception**.
3. The Location field includes details specific to your TB9400. Without changing the default values, click **Confirm Security Exception**.

Internet Explorer

1. Click **Continue to this website (not recommended)**.
2. Click **Certificate Error**.
3. Click **View certificates**. The Certificate dialog box, General tab is displayed.
4. Click **Install Certificate** and then follow the Certificate Import Wizard to install the certificate. Proceed to the end without changing the default values. When the Security Warning window appears, click **Yes**.

4.2.4 Connecting a Networked PC to a Base Station

You may want to temporarily disconnect a networked PC from its LAN in order to be able to establish a direct connection with the **base station**. A physical connection is needed as well as an alternate (Windows 7, Windows Vista, Windows XP) or temporary (Windows 2000) IP address and subnet mask.

Windows 7 or Windows Vista

1. Remove the local area Ethernet connection and connect an Ethernet patch cable between the PC and the **base station**. You can use either a straight through or crossover Ethernet patch cable with the current **base station** firmware.
2. Navigate to Control Panel > Network and Internet > Network and Sharing Center.
3. Click **View status**.
4. In the Local Area Connection Status dialog box, click **Properties**.
5. In the Local Area Connection Properties dialog box, click **Internet Protocol Version 4 (TCP/IPv4)**, and then click **Properties**.
6. Click **Alternate Configuration**.
7. Select the User configured option, and then enter a number that is on the same subnet as the **base station**. For example, if the TB9400 has IP 192.168.1.2, enter 192.168.1.1 for the PC.
8. Enter a suitable subnet mask, for example 255.255.255.0.
The web browser should now be able to connect to any physically connected **base station** that is on the same subnet.
9. Once the web browser session is finished, re-connect the local area network cable to the PC. The PC then uses its normal TCP/IP properties.

Windows XP Professional

1. Remove the local area Ethernet connection and connect an Ethernet patch cable between the PC and the **base station**. You can use either a straight through or crossover Ethernet patch cable with the current **base station** firmware.
2. Click Start > Settings > Control Panel.
3. Double-click **Network Connections**.
4. Double-click the Local Area Network icon.
5. Click **Properties**.
6. Click **Internet Protocol (TCP/IP)**, and then click **Properties**.
7. Click **Alternate Configuration**.

8. Select the User configured option, and then enter a number that is on the same subnet as the **base station**. For example, if the TB9400 has IP 192.168.1.2, enter 192.168.1.1 for the PC.
9. Enter a suitable subnet mask, for example 255.255.255.0. The web browser should now be able to connect to any physically connected **base station** that is on the same subnet.
10. Once the web browser session is finished, re-connect the local area network cable to the PC. The PC then uses its normal TCP/IP properties.

Windows 2000

1. Remove the local area Ethernet connection and connect an Ethernet patch cable between the PC and the **base station**. You can use either a straight through or crossover Ethernet patch cable with the current **base station** firmware.
2. Select Start > Settings > Network and Dialup Connections.
3. Double-click the Local Area Connection icon.
4. Click **Properties**.
5. Click **Internet Protocol (TCP/IP)**, and then click **Properties**.
6. Note the current settings so that you can restore them later.
7. Select **Use the following IP address**, and then enter a number that is on the same subnet as the **base station**. For example, if the **base station** has IP 192.168.1.2, enter 192.168.1.1 for the PC.
8. Enter a suitable subnet mask, for example 255.255.255.0. The web browser should now be able to connect to the **base station**.
9. When you have finished the web browser session, re-connect the local area network cable to the PC and then restore the original PC configuration. When you close the Network connection dialog box, the restored configuration is applied.

4.2.5 Troubleshooting Connection Problems

If the attempt to connect to a **base station** failed, consider these possible causes.

1. Your PC is part of your organization's LAN and does not belong to the same subnet as the **base station**. Give the PC a suitable IP address and subnet mask as described in "[Connecting a Networked PC to a Base Station](#)" on page 50.
2. You are attempting to connect to the wrong IP address. Check that the IP address is correct.



Note You can quickly check the **base station's** IP address via the front panel, as long as access to this menu has not been disabled.

3. The link to the **base station** is down. Use ping to check.
4. You may have to bypass the proxy in your organization's LAN to access the TaitNet P25 Network. Ask your system administrator to give you access.



4.2.6 Finding a Lost or Forgotten IP Address

What do you do if access to this front panel menu has been blocked via the web interface?


Use the following procedure if an IP address has been lost or forgotten.

1. Mount the reciter in a TB9400 subrack and fit the front panel. Power up the subrack.
2. On the front panel display select Modules > Reciter 1 (or 2) > View Reciter 1 (or 2) Address.

4.3 Working with the Web Interface

This section provides an overview of the web interface. Refer to the Help for detailed instructions.

When you connect to a **base station**, the browser displays a page like the following.

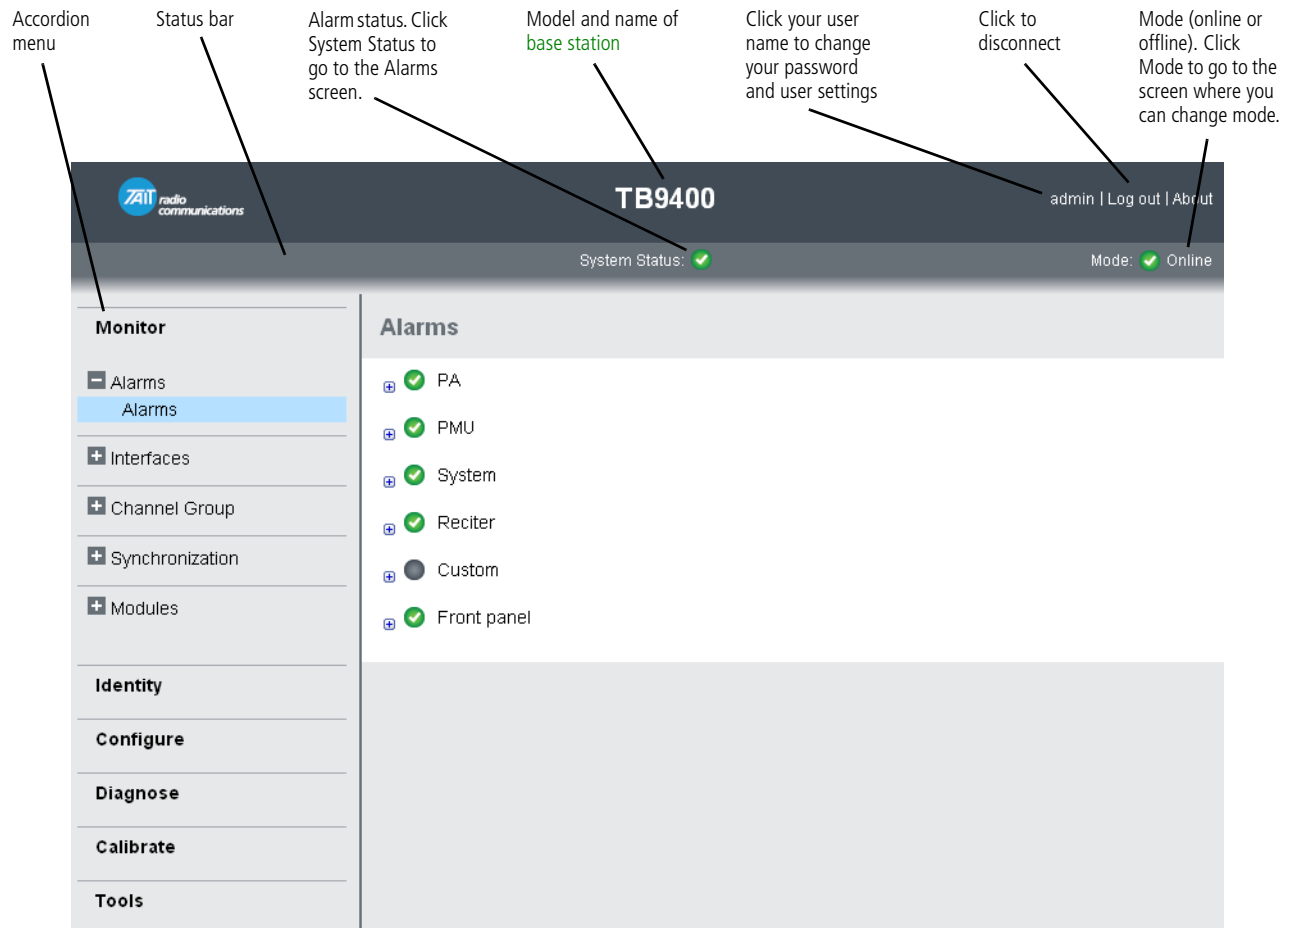

The accordion menu on the left gives you access to the various pages. Click a top level item (such as Configure) to open up its menu. Click the + icon (⊕) on a menu item to expand the menu tree and the – icon (⊖) to collapse it again. Click an item in an expanded menu tree to display its page.

You can have more than one page open at the same time. Right-click an item on the menu and select “Open link in new tab” or “Open link in new window”. You can also wheel-click an item to open it in a new tab.

Press F11 for a full-screen display of the browser which does not show toolbars and other information. Press F11 again to return to the standard view.

4.3.1 Monitoring Operation

Using the monitoring pages, you can see how the **base station** is currently operating.

For example, you can see the status of its trunking interface (Monitor > Interfaces > Trunking).

The screenshot displays the 'Trunking' monitoring page with the following sections and data:

- Trunking interface:** Status Connected
- Base station:**
 - IP address: 172.16.17.66
 - Configured listening port: 50900
 - Talking port: 50900
 - TX status: Normal
 - TCCP version: 05
- Role:**
 - Master
 - Non-master
 - Failsafe repeater
- Channel group:**
 - Connected
 - Isolated
 - Failsafe
 - Type: Traffic channel
 - Speech inbound
 - Speech outbound
 - Packet data inbound
 - packet data outbound
- Master:** Status Master
- Voice service:**
 - Connected
 - IP address: 172.16.17.66
 - SSRC: 1
 - Port: 50904

4.3.2 Viewing Configuration Settings

The **base station** has many configuration settings that personalize it for its particular role in the network. Some settings, such as those for the trunking interface (Configure > Network Interfaces > Trunking), always apply.

The screenshot shows the 'Trunking' configuration page. It is divided into three sections: 'Connection', 'Control channel', and 'Packet data'.
- **Connection:** Listen port (50900), Heartbeat interval (5 s), Allow control connection (checked), Connection timeout (100 s).
- **Control channel:** TSBK assembly (Single).
- **Packet data:** Message time (10000 ms), Retry time (9000 ms).
A 'Save' button is located at the bottom.

Others are channel-based so that they can be dynamically changed. To view these, you first need to know the channel that the **base station** is operating on. Select Identity > Identity > Base Station to see its default channel number. Then you can view the **base station's** channel configuration settings. Select Configure > Base Station > Channels to view the list of channels.

The screenshot shows the 'Channels' list interface. It contains a table with the following data:

Number	Name	Transmit frequency	Receive frequency
1	Site9-CCH	855.625000	815.625000
2	Site9-TCH	856.625000	816.625000

Below the table are three buttons: 'Edit', 'Add', and 'Delete'.

Select a channel and click **Edit** to view details of the channel. Clicking directly on any text in a line will also open the edit screen.

The screenshot shows the 'Channel 1' configuration page. It is divided into a 'General' section with the following fields:
- Name: Site9-TCH
- Transmit frequency: 856.625000 MHz
- Receive frequency: 816.625000 MHz
- Mains power: 5 W
- Battery power: 5 W
- Channel profile: Ch Profile 1
- Signaling profile: Sig Profile 1
- Channel group: Ch Group 1
At the bottom are 'Cancel' and 'Save' buttons.

Channel and signaling settings are grouped together in profiles. The channel configuration indicates the number of the currently active profile. To view the channel profile settings, select Configure > RF Interface > Channel Profiles and then click the relevant profile number.

The screenshot shows a configuration window titled "Channel Profile 1". It is divided into three sections: "General", "Digital P25", and "Simulcast".

- General:** Name: Ch Profile 1; Enable transmitter:
- Digital P25:** Modulation type: C4FM; Microslots per slot: 1; Status symbols: Local
- Simulcast:** Enable: ; Holdover duration: 40 h; Local transmit offset: 0 μ s; Transmit if unsynchronized:

At the bottom of the window are "Cancel" and "Save" buttons.

Proceed in a similar way to view signaling profile and channel group settings.

4.3.3 Viewing the Base Station and Network Identity

Each base station in a network has a unique base station and network identity.

Select Identity > Identity and then Base Station or Network to view details such as name, receiver number, default channel and network addresses. Note that the Host Name field has a maximum of 63 characters, and may use the characters a–z, 0–9, dot and hyphen.

The screenshot shows a web-based configuration interface divided into two main sections: 'Base Station Identity' and 'Network Identity'.

Base Station Identity

Receiver

Host name	Site9-TCH
Receiver number	1
Default channel	1

Front panel message

Line 1	Custom Line 1
Line 2	Custom Line 2
Line 3	Custom Line 3
Line 4	Custom Line 4

Save

Network Identity

Current network identity

IP address	172.16.163.99
Subnet mask	255.255.224.0
Default gateway	172.16.191.254

Change network identity

IP address	172.16.163.99
Subnet mask	255.255.224.0
Default gateway	172.16.191.254

Apply

You can also enter here the four lines of information you want to appear on the front panel display (at start-up and when idle). Each line has a maximum of 20 characters.

4.4 Basic Tasks

4.4.1 User Settings

Click on your user name in the top right corner of the page to choose whether the temperature is displayed in Fahrenheit or Celsius, and to change your password.


4.4.2 Taking the Base Station Offline

You may need to take the **base station** offline in order to carry out diagnostic tests or to take it out of service if a fault develops.

1. Click Mode on the status bar (or Select Tools > Tools > Base Station).
2. Under Control, select Offline. Click **Offline** to confirm the change. In the Status area, the Mode display changes first to “Changing”, and then to “Offline” (❗).

4.4.3 Troubleshooting Alarms

If the Alarm status on the status bar displays red, one or more alarms have been triggered, and the Alarms menu automatically expands to display the alarm(s). Click Help and navigate to the description of that alarm.

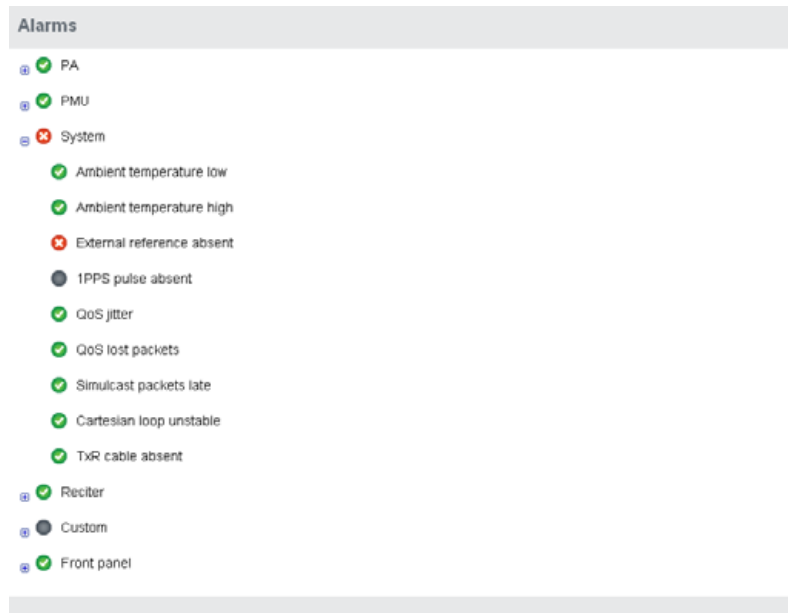

4.4.4 Working with Configuration Files

At any time, you can save the current configuration settings as a file (Tools > Tools > Configurations). This is stored in the **base station**, but you can download it and store it on your computer as an off-site backup. The **base station** identity and network identity are not saved as part of the configuration file.

You may want to develop a master configuration and upload it to all **base stations** in the network. The master configuration can contain all the different channel configurations and can be common to all **base stations**. The **base station** identity selects the default channel.

4.4.5 Configuring Single Base Stations

Most **base stations** in non-simulcast trunked networks are single. They interface to a site controller but not to other **base stations**. The following explains the special considerations when configuring single **base stations**.

Channel Group Membership

Although single **base stations** are not actually part of a channel group, their channel configurations (Configure > Base Station > Channels) must still select a channel group (Configure > Channel Group > Channel Groups).

Channel Group IP Address

The selected channel group must be configured for single **base station** operation. Specify 127.0.0.1 as the channel group IP address. This stops the **base station** from attempting to send voice packets to other **base stations**.

Preamble

Although the single **base station's** transmitter does not receive voice packets from other channel group members, it still receives them from other **base stations** via trunking controllers. So, while most channel group settings have no effect, the preamble setting still applies and determines how large the transmit buffer is.

The default setting of 40ms is intended for internal jitter only. If the **base station** is a traffic channel, you may have to increase the preamble. Voice arriving at the **base station's** trunking interface has travelled from another **base station** via the trunking site controller and could have significantly more jitter.

Marshalling Duration

If the **base station** is a control channel, the channel group settings should specify fixed marshalling and allow a duration of 40ms. This gives the control channel's transmitter an appropriate buffer (control channels do not use the preamble to regulate the transmit buffer). Marshalling duration does not apply to traffic channels.

Trunking Interface

Single **base stations** need a control connection to their site controller. A single **base station** interfaces to the site controller in the same way as the

master **base station** in a trunked channel group. Select Configure > Network Interfaces > Trunking to configure this.

4.4.6 Configuring **Base Stations** in a Channel Group

You can configure the way the base station behaves in its channel group. Also, qualified network engineers can change DSCP assignments, so that routers and switches provide a different quality of service to different types of IP packets.

In trunked networks, many base stations are single and not actually part of a channel group. However, they still must be assigned to a channel group configuration and some of its parameters must be set correctly.

4.4.7 Setting Up Custom Alarms

Each of the **base station's** 12 digital inputs can be used to raise a custom alarm when the input goes high or low. The Custom Alarms form (Configure > Alarms > Custom Alarms) allows you to assign a name to each custom alarm, and to configure whether the alarm is triggered when the digital input goes high or low.

Custom alarms are used to provide an alarm when an external event activates a digital input. You can rename any of the available alarms to provide a more meaningful name, such as "Door open".

4.4.8 Disabling the Front Panel Keypad

You can disable the front panel keypad to prevent access to the **base station** via the front panel menus. Select Configure > Base Station > Miscellaneous and in the Front Panel area clear the **Keypad enabled** check box.

4.4.9 Preparing to Download Firmware

New versions of **base station** firmware are remotely downloaded to **base stations** from a package server. A package server is a basic web server application. The product DVD provides the Mongoose web server.



Note You do not have to install Mongoose to make it work, because *mongoose-3.0.exe* is a self-sufficient executable file.

You can set up a single PC to be the central package server for all the **base stations** on the network using mongoose or any web server. You can also use a laptop as a temporary package server.

To set up a PC as a package server, proceed as follows.

1. Insert the product DVD in the computer's DVD drive.
2. If the DVD does not autorun, navigate to the DVD's root folder and double-click *mongoose-3.0.exe*. An "m" icon appears in the system tray to indicate that the package server is running.
3. If the PC is to be the central package server, configure each **base station** with the package server's IP address and port.
 - a. Select Configure > Base Station > Miscellaneous.
 - b. Under Package server, enter the IP address of the package server.
4. If a laptop is to be a temporary package server, temporarily override the package server IP address and port in each **base station**.
 - a. Select Tools > Tools > Firmware Download.
 - b. Under Package server, enter the IP address of the laptop.

You can now instruct a **base station** to list and download firmware from the package server.

5 Installation

This chapter provides information on the site requirements for your TB9400 equipment and also describes how to install the **base station** in a standard 19 inch rack or cabinet.

If this is your first time installing a TB9400 **base station**, we recommend that you read the entire chapter before beginning the actual installation.

5.1 Before You Begin

5.1.1 Equipment Security

The security of your **base station** equipment is a high priority. If the site is not fully secure, the **base station** should at least be locked in a secure cabinet to prevent unauthorized access.

5.1.2 Grounding and Lightning Protection

Electrical Ground

The **base station** modules are grounded by physical contact between the module case and the subrack. To ensure a good ground connection you must tighten each module retaining clamp securely (refer to [“Final Reassembly” on page 107](#) for the correct torque).

A threaded grounding connector is provided on the rear of the subrack for connection to the site ground point (refer to [“Connecting Up the Base Station” on page 80](#) for more details).

Lightning Ground

It is extremely important for the security of the site and its equipment that you take adequate precautions against lightning strike. Because it is outside the scope of this manual to provide comprehensive information on this subject, we recommend that you conform to your country’s standards organization or regulatory body.

5.1.3 Equipment Ventilation

Always ensure there is adequate ventilation around the **base station**.



Warning!! Do not operate it in a sealed cabinet. You must keep the ambient temperature within the specified range, and we strongly recommended that you ensure that the cooling airflow is not restricted.



Important The cooling fans are mounted on the front panel and will only operate when the panel is fitted correctly to the front of the subrack. To ensure adequate airflow through the **base station**, do not operate it for more than a few minutes with the front panel removed (e.g. for servicing purposes).

5.1.4 Ambient Temperature Sensor

The ambient temperature reading for the **base station** is provided by the temperature sensor located on the front panel circuit board.

5.1.5 Cabinet and Rack Ventilation

The cooling airflow for the **base station** enters through the front panel and exits at the rear of the subrack. For optimum thermal performance, the heated air that has passed through a **base station** must not be allowed to re-enter the air intakes on the front panel. Any space at the front of the cabinet not occupied by equipment should be covered by a blanking panel. Refer to [Figure 5.1 on page 66](#).

To allow enough cooling airflow through a cabinet-mounted **base station**, we recommend the following:

- an area of at least 23 in² (150 cm²) of unrestricted ventilation slots or holes in front of the air intakes for the fans for each subrack; for example, thirty 0.25x3.3 in (6x85 mm) slots will allow the recommended airflow
- a vent in the top of the cabinet with an area of approximately 23 in² (150 cm²) per subrack, or a similar area of ventilation per subrack at the rear of the cabinet behind each subrack
- a 2U gap at the top of the cabinet.



Note The ventilation opening must be unrestricted. If the slots or holes are covered with a filter, mesh or grille, the open area must be increased to allow the same airflow as an unrestricted opening.

The maximum ambient temperature entering the cabinet must not exceed +140°F (+60°C).

If you are installing multiple subracks in a cabinet, ensure that there will be enough cooling airflow through the cabinet after the equipment has been installed. For example, the recommended maximum number of subracks in a 38U cabinet is five, as shown in [Figure 5.1 on page 66](#).

If the **base station** is installed in a rack or cabinet with other equipment with different ventilation requirements, we recommend that the **base station** be positioned below this equipment.


Auxiliary Extractor Fans

The **base station** does not require auxiliary extractor fans mounted in the top of the cabinet. If your cabinet is already fitted with fans, the following procedures apply:

- if there are six or more 4.75 in (12 cm) fans, each capable of extracting 94.2 ft³ per minute (160 m³ per hour), they must run continuously
- if there are fewer than six fans, you must remove them and ensure the vent in the top of the cabinet has an area of approximately 23 in² (150 cm²) per subrack.

If you have any other configuration, the performance of your system will depend on how closely you comply with the **base station** airflow requirements described above.

Figure 5.1 Typical cabinet ventilation requirements

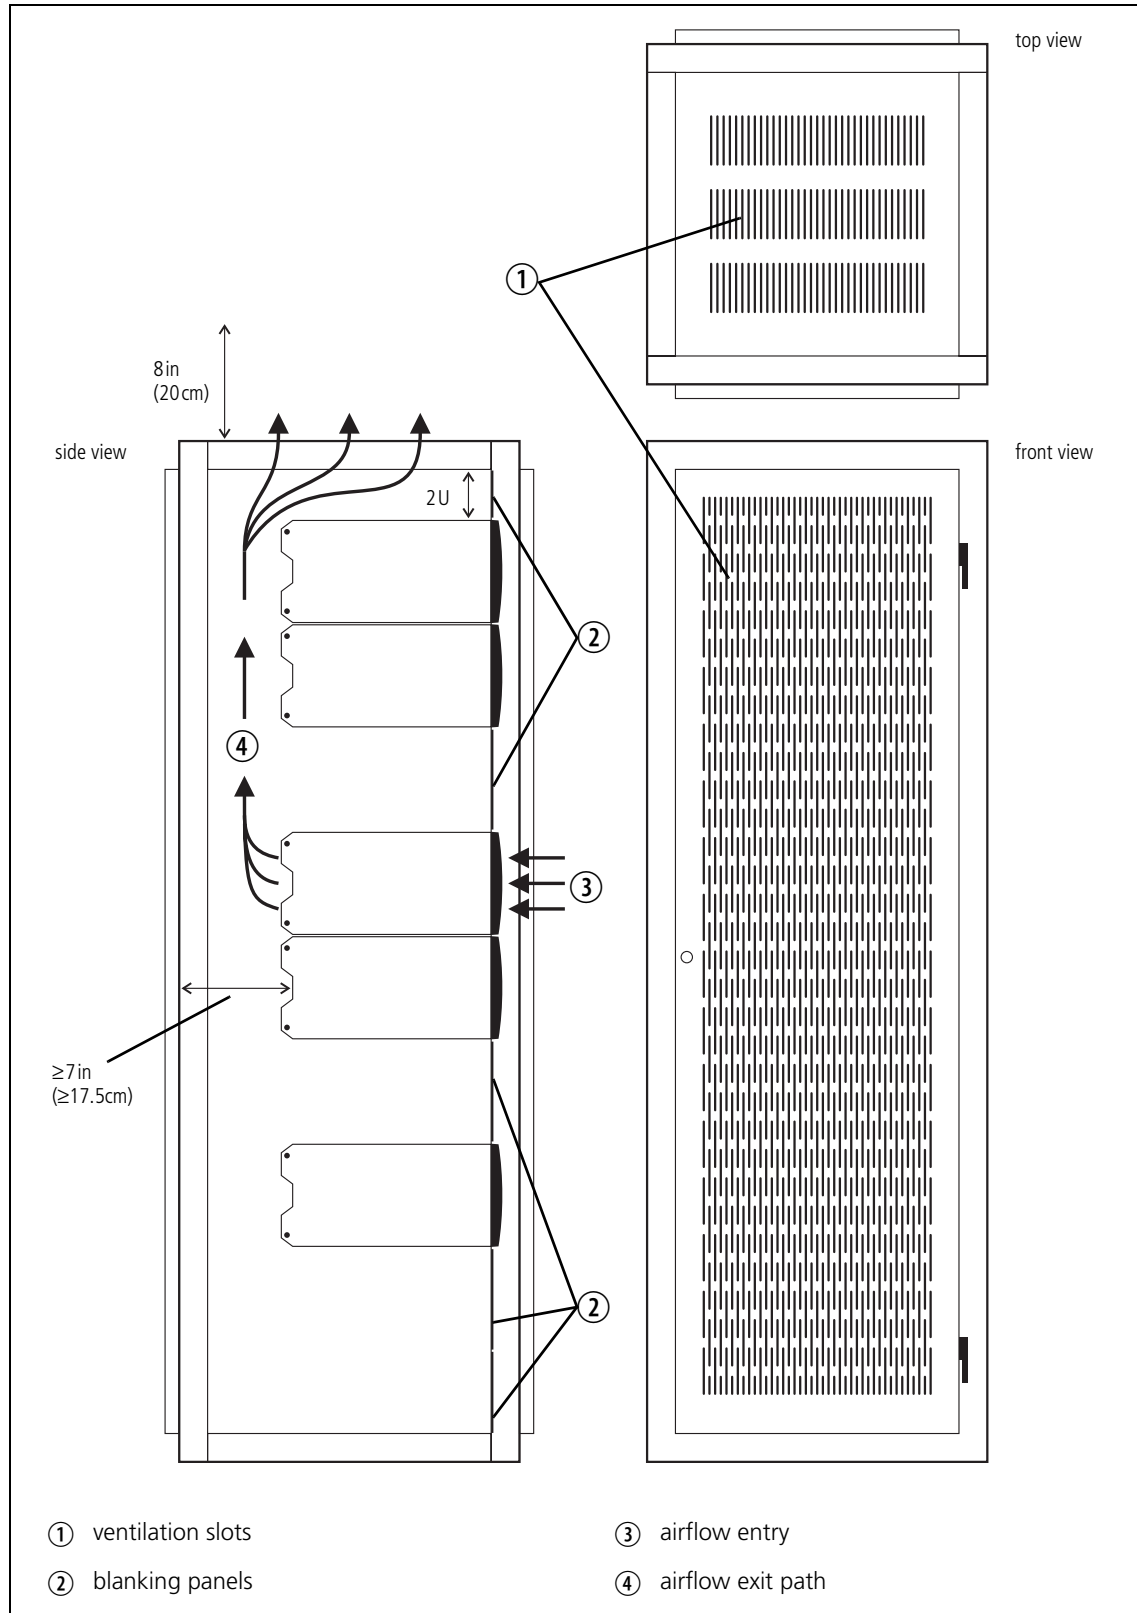

5.2 Unpacking and Moving the Subrack


The subrack is packed in a strong corrugated cardboard carton with top and bottom foam cushions. To prevent personal injury and damage to the equipment, we recommend that two people unpack and move the subrack. To remove the subrack from the carton, follow the procedure illustrated in [Figure 5.2](#).



Caution

A subrack complete with modules can weigh up to 55lb (25kg), or up to 62lb (28kg) complete with packaging. We recommend that you have another person help you unpack and move the subrack. The TBAA03-16 carrying handles will make it easier to move the subrack once it has been unpacked. If necessary, remove the modules from the subrack before moving it (refer to [“Replacing Modules” on page 93](#)). In all cases follow safe lifting practices.

Figure 5.2 Unpacking the subrack

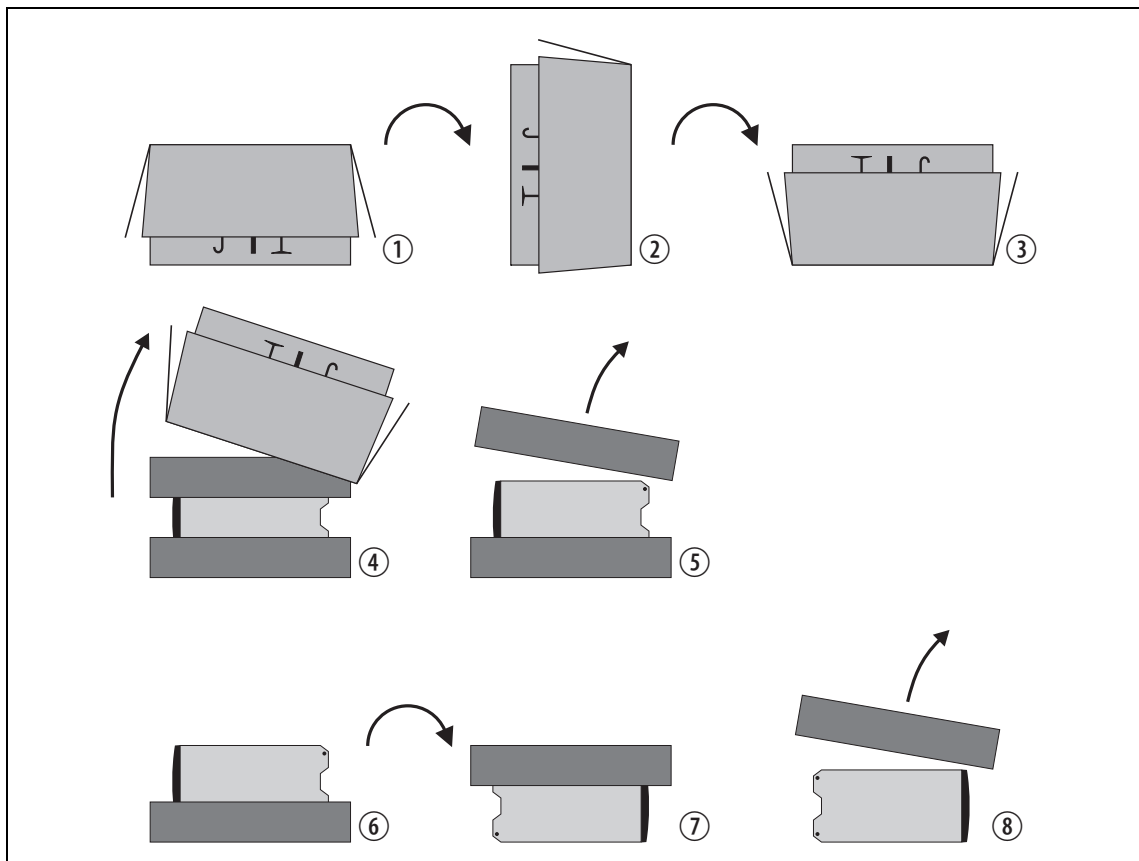

1. Cut the tape securing the flaps at the top of the carton and fold them flat against the sides ①.
2. Rotate the carton carefully onto its side ② and then onto its top ③, ensuring that none of the flaps is trapped underneath.

DRAFT 4

3. Slide the carton upwards over the foam cushions and lift it away ④. Remove the cushion from the bottom of the subrack ⑤.
4. Rotate the subrack and cushion carefully over the rear of the subrack ⑥ so that it is the right way up with the cushion on top ⑦. Remove the cushion from the top of the subrack ⑧.

Disposal of Packaging

If you do not need to keep the packaging, we recommend that you recycle it according to your local recycling methods. The foam cushions are CFC- and HCFC-free and may be burnt in a suitable waste-to-energy combustion facility, or compacted in landfill.

5.3 Identifying the Equipment

You can identify the model and hardware configuration of the TB9400 modules by referring to the product code printed on labels at the rear of each module. The meaning of each character in the product code is explained in the tables below.



Note This explanation of product codes is not intended to suggest that any combination of features is necessarily available in any one product. Consult your regional Tait office for more information regarding the availability of specific models and options.

Reciter Product Codes

Product Code	Description
T01-01103- X XXX	Frequency Band and Sub-band N = 762MHz to 870MHz ^a (K4)
T01-01103-X X XX	A = standard
T01-01103-XX X X	A = default
T01-01103-XXX X	A = default

- a. The actual frequency coverage in this band is:
Transmit: 762MHz to 776MHz and 850MHz to 870MHz
Receive: 792MHz to 824MHz

PA Product Codes

Product Code	Description
T01-01121- X XXX	Frequency Band and Sub-band N = 762MHz to 870MHz ^a (K4)
T01-01121-X X XX	A = 50W B = 100W
T01-01121-XX X X	A = default
T01-01121-XXX X	A = default

- a. The actual frequency coverage in this band when used with a K-band TB9400 reciter is 762MHz to 776MHz and 850MHz to 870MHz.

DRAFT 4

PMU Product Codes

Product Code	Description
TBA X XXX-XXXX	3 = PMU
TBA3 X XX-XXXX	0 = default
TBA3X X X-XXXX	0 = AC module not fitted A = AC module fitted
TBA3XX X -XXXX	0 = DC module not fitted 1 = 12V DC module fitted 2 = 24V DC module fitted 4 = 48V DC module fitted
TBA3XXX- X XXX	0 = standby power supply card not fitted 1 = 12VDC standby power supply card fitted 2 = 24VDC standby power supply card fitted 4 = 48VDC standby power supply card fitted
TBA3XXX-X X XX	0 = auxiliary power supply board not fitted 1 = 12VDC auxiliary power supply board fitted 2 = 24VDC auxiliary power supply board fitted 4 = 48VDC auxiliary power supply board fitted
TBA3XXX-XX X X	0 = default
TBA3XXX-XXX X	0 = default

5.4 Initial Setting Up

Before putting the **base station** into service, you may want to carry out some basic functional testing, configuration, and tuning (if required). This section provides an overview of these procedures:

- checking that the **base station** powers up correctly
- checking the basic functionality of the **base station** by using the tests available in the web interface
- customizing the configuration for the intended installation and verifying that the configuration is correct
- changing the root password (**if needed - TBD**)
- tuning the **base station** (if required).



5.4.1 Confirming Operation



Important

Make sure that the RF output is connected to a suitable attenuator or dummy load. Do not remove the load while the PA is transmitting as this may damage the PA output stage.

Applying Power

1. Apply power by turning on the PMU.
2. Check that the **base station** powers up correctly:
 - The front panel display will show “Please wait” while the **base station** starts up (this may take up to two minutes). When the startup process is complete, the display will show the idle screen.
 - The cooling fans in the front panel will run at full speed for a few seconds, then run at low speed while the **base station** starts up, and then assume standard operation. One or more fans may operate, depending on the temperature of the modules.

DRAFT 4

Functional Tests

The following table provides an overview of the tests available using the web interface. Refer to the Help for full details of these tests.

Test	Notes	Menu
receiver operation	requires a suitable RF source	Diagnose > RF Interface > Receiver
transmitter operation	requires connection to the network	Diagnose > RF Interface > Transmitter
synchronized transmit	checks the simulcast operation of a channel group or the transmitters in it	Diagnose > RF Interface > Synchronized Transmit
ping	checks the IP connection to another device with an IP address	Diagnose > Connection > Network
NTP query	checks if the NTP-based time synchronization is working	
PMU mains failure	requires a DC backup supply	Diagnose > Subsystems > PMU Control Tests
fan operation	checks the operation of each fan individually	Diagnose > Subsystems > Fan Tests

5.4.2 Customizing the Configuration

The following steps provide an overview of the process used to configure the **base station** with the settings it needs. Refer to the Help for detailed information.

1. Log in to the **base station** (refer to “[Connecting Your PC to the Base Station](#)” on page 46 for more details).
2. Select Configure. The **base station** has many different settings that can be configured before it is put into operation, such as:
 - channel configurations
 - alarm control and SNMP agent
 - network interfaces
 - channel groups and quality of service
 - channel and signaling profiles
 - CWID
 - miscellaneous items such as minimum battery voltages, fan control, NTP and package servers.
3. Make the changes needed in each form and click **Save**.



Note We recommend that you save the configuration to your PC or network. First make a backup copy of the configuration (which is stored in the **base station** as a file), then save this file to a folder on your PC or network. This provides a backup which can be restored to the **base station** if the configuration information becomes lost or corrupted.

5.4.3 Changing the Root Password



Procedure still to be decided. May be tied in with Admin password.

The root password to the Linux operating system of the reciter is a possible security risk. The equipment is delivered with a default password that is well known. Knowledge of the password could be used to render the equipment inoperable, for example by deleting files. If you are concerned about the security risk that this poses, change the password. If Tait provides support services, it may need to know the password.



Important

If you change the password and then lose it, the equipment must be returned to Tait. Make sure that you store the password securely and do not lose it.



To change the root password, follow these steps.



1. TBD



5.4.4 Tuning the Reciter

The K-band reciter does not require tuning.

5.5 Installing the Base Station on Site

5.5.1 Base Stations for Trunked Systems

When installing base stations that are part of a trunked system, it is very important to observe good site engineering rules. This is especially true when the channels are combined into a single antenna, particularly if the receivers and transmitters also share the antenna, as in a duplexed system.

If at all possible, the RF planner should avoid frequency plans in which the Rx to Tx spacing is an exact multiple of the trunked channel spacing, thus forcing Tx intermodulation products to fall outside the Rx channels.

Cables and antennas should be of high quality construction. Solid shield heliax type cables are best, but if braided shield cables must be used for short distances, their braids must be silver-plated.

When the outputs of more than one transmitter are combined, their voltages add, and the resulting peak envelope power is not simply the sum of their powers, but is equal to the power of one of them multiplied by the square of the number of sources. Cables, components, and hardware must be rated to withstand the peak envelope power.

During the commissioning process, all transmitters should be activated together using a diagnostic test tone, while the receiver RSSI is monitored. There should be no perceptible increase in RSSI while the transmitters are active.

5.5.2 Equipment Required

It is beyond the scope of this manual to list every piece of equipment that an installation technician should carry. However, the following tools are specifically required for installing the base station:

- Pozidriv PZ3 screwdriver for the M6 screws used in the DC input terminals on the PMU; M6 (0.25in) screws are also used to secure the subrack to the cabinet in factory-assembled systems
- Pozidriv PZ2 screwdriver for the M4 screws used to secure the module retaining clamps, and for the fasteners used to secure the front panel to the subrack
- 8mm AF spanner for the SMA connectors, and the subrack ground connector.

You can also obtain the TBA0ST2 tool kit from your regional Tait office. It contains the basic tools needed to install, tune, and service the base station.


5.5.3 Mounting the Subrack



Caution

A subrack complete with modules can weigh up to 55lb (25kg), or up to 62lb (28kg) complete with packaging. We recommend that you have another person help you unpack and move the subrack. The TBAA03-16 carrying handles will make it easier to move the subrack once it has been unpacked. If necessary, remove the modules from the subrack before moving it (refer to [“Replacing Modules” on page 93](#)). In all cases follow safe lifting practices.

Figure 5.3 Subrack mounting points

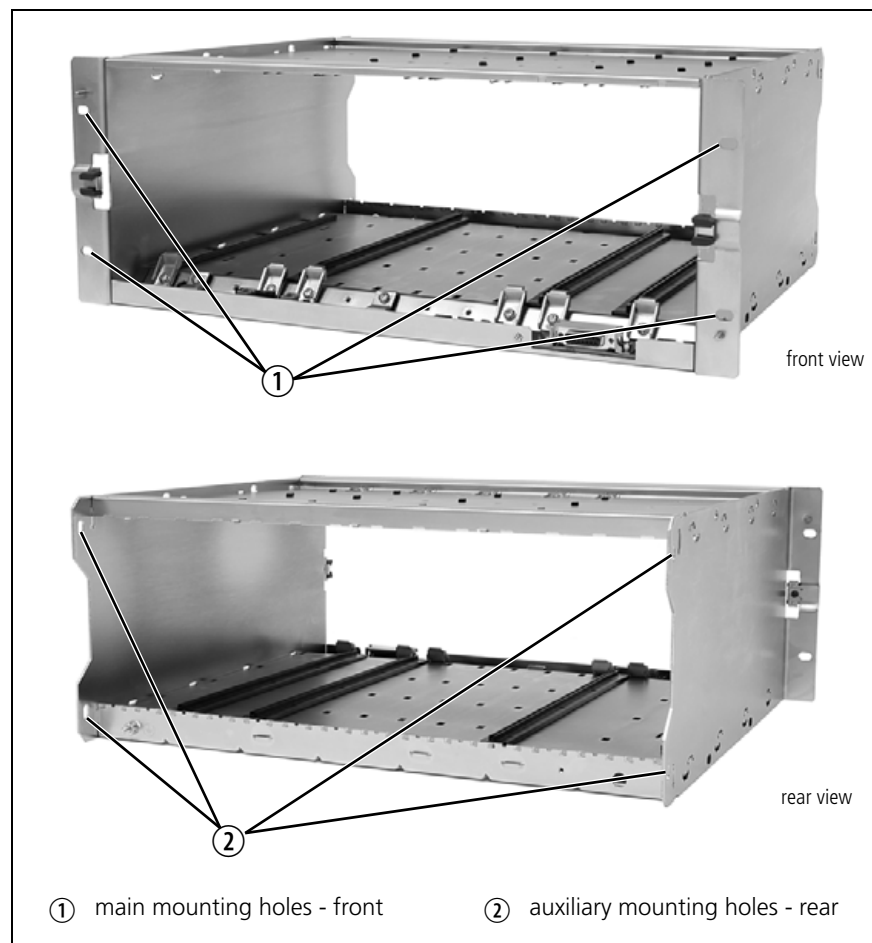

1. Remove the front panel, as described in [“Preliminary Disassembly” on page 95](#).
2. Fit the subrack into the cabinet or rack and secure it firmly with an M6 (0.25in) screw, flat and spring washer in each of the four main mounting holes ①, as shown in [Figure 5.3](#).


DRAFT 4



Note If you need extra mounting security, additional mounting holes ② are provided at the rear of the subrack for auxiliary support brackets.

Figure 5.4 below gives the dimensions of the subrack and its mounting holes.


Figure 5.4 Subrack dimensions

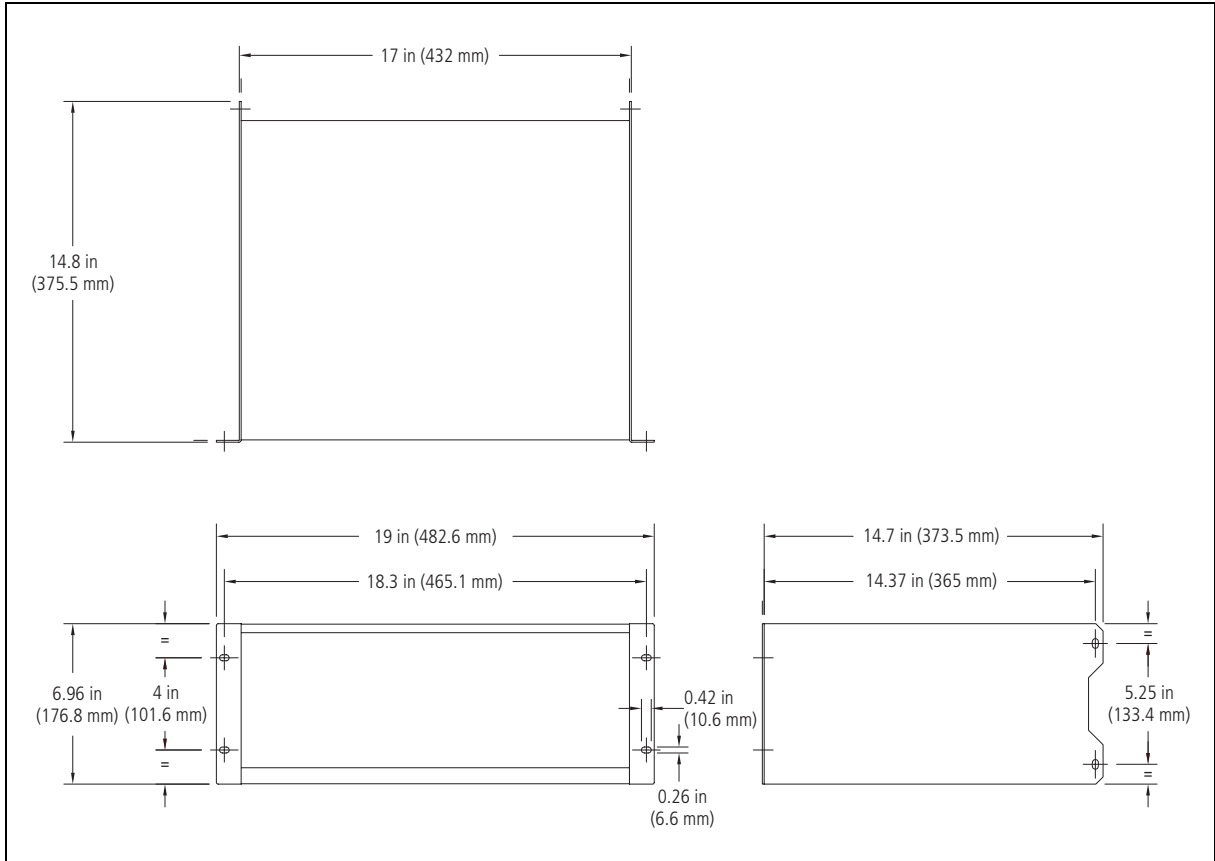

Auxiliary Support Bracket

TBAA03-13 auxiliary support brackets can be fitted to the rear of the subrack to provide additional mounting security. Figure 5.5 shows a standard TBAA03-13 bracket ① fitted in a typical Tait cabinet ②. If you are not using the Tait cabinet, you may have to make your own brackets to suit your installation.

Figure 5.5 Auxiliary support bracket

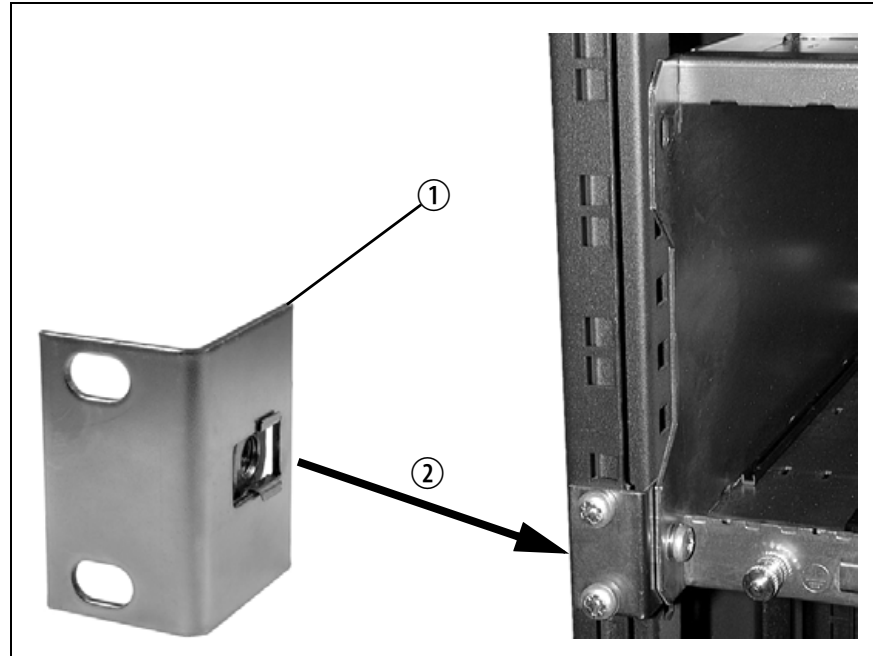

Important You **must** fit the auxiliary support brackets if you intend to transport a cabinet fitted with a fully built-up base station.

We also recommend that you fit the brackets under the following conditions:

- when the installation is in an area prone to earthquakes
- when third party equipment is installed hard up underneath the base station subrack.

General Cabling

We recommend that you try to route all cables to and from the base station along the side of the cabinet so the cooling airflow is not restricted.


DC Power Cabling

DC power cables should be well supported so that the terminals on the PMU and on the ends of the cables do not have to support the full weight of the cables.

Figure 5.6 shows two recommended methods of securing these cables to prevent straining either set of terminals.

We recommend that you fit the supplied covers to the DC terminals to protect against accidental shorts.

Figure 5.6 DC power cabling

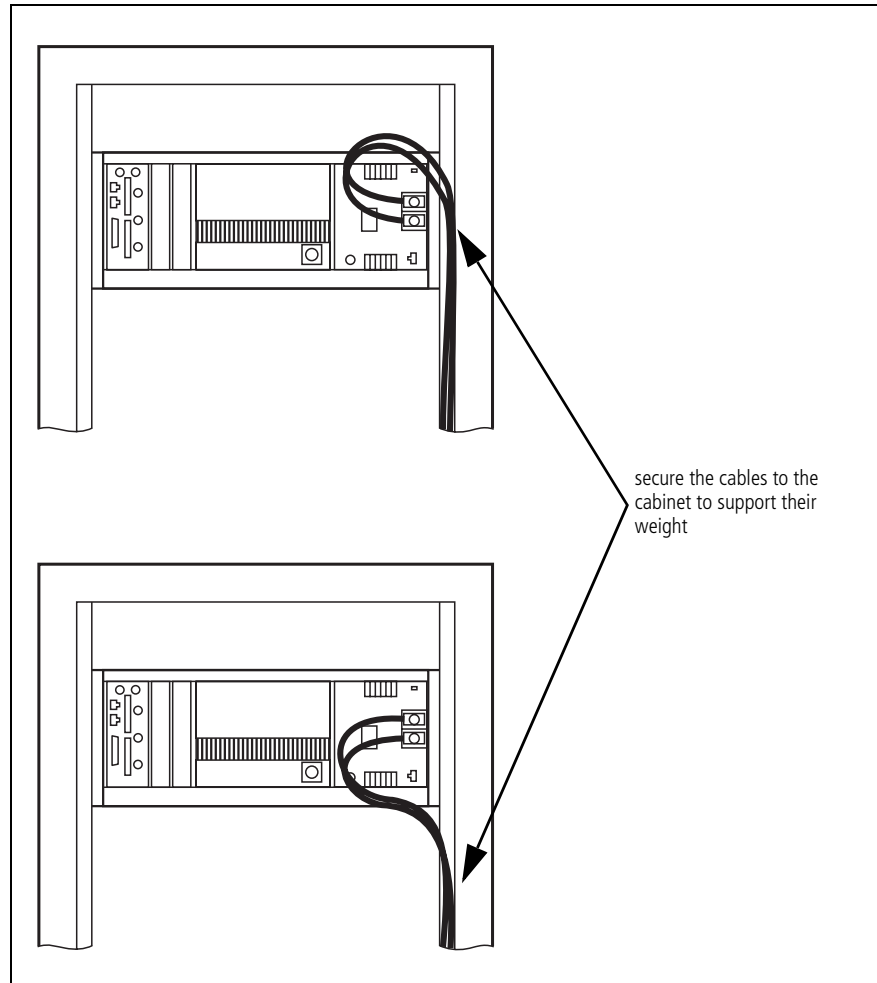


5.6 Connecting Up the Base Station

This section provides information relevant to the task of connecting up the various inputs and outputs of the base station.

5.6.1 Connection Overview

The connections at the rear of a dual 50 W base station are identified in Figure 5.7. External connections are all located at the rear of the subrack.

Figure 5.7 50W base station inputs and outputs

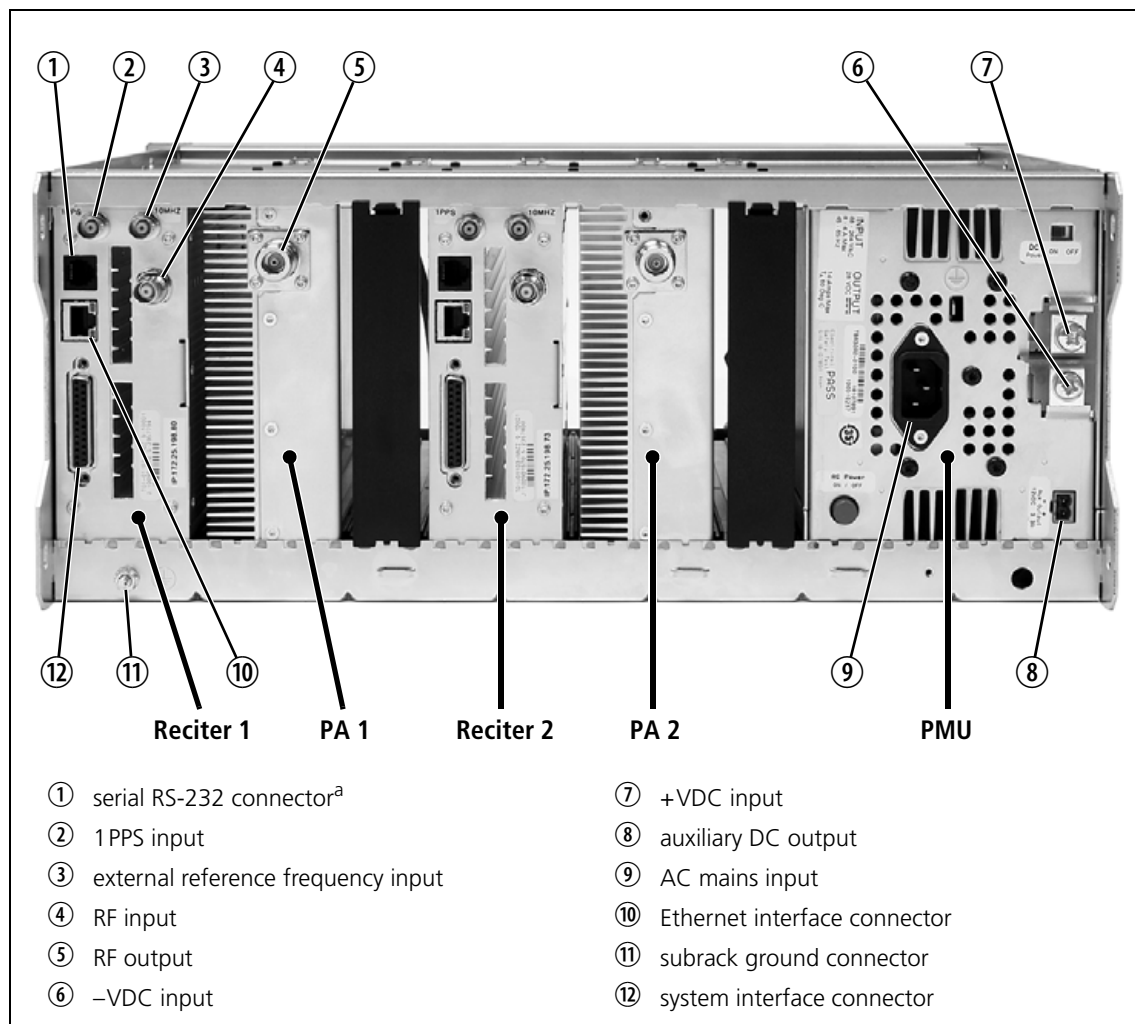

a. Factory use only.


5.6.2 Connecting AC Power

The PMU is designed to accept a mains input of 88 to 264 VAC at 45 to 65 Hz. A standard 3-wire grounded socket outlet must be used to supply the AC power. The socket outlet must be installed near the equipment and must be easily accessible. This outlet should be connected to an AC power supply capable of providing at least 600 W. The requirements of two typical AC supplies are given in the following table.

Nominal Supply	Current Requirement ^a	Circuit Breaker/Fuse Rating ^a
115VAC	8A	10A
230VAC	4A	6A

a. The actual current consumption of the **base station** will be lower than these requirements (refer to the Specifications Manual for more information).

Your **base station** should come supplied with a power supply cord to connect the male IEC connector on the PMU to the local AC supply. The pins of the IEC connector on the PMU are identified at right.

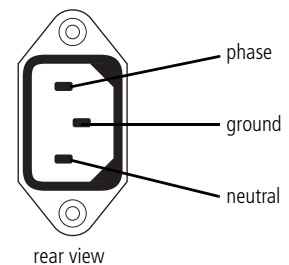

5.6.3 Connecting DC Power

The PMU is designed to accept a nominal 12VDC, 24VDC or 48VDC input (depending on the model) with negative or positive ground. There is a minimum DC startup threshold to prevent damaging a battery which has little capacity left.


You must connect the DC supply from the battery to the PMU via a fuse or DC-rated circuit breaker with a contact separation of 3mm, and with the appropriate rating, as shown in the table below. The DC input leads should be of a suitable gauge to ensure less than 0.2V drop at maximum load over the required length of lead.

Nominal Supply Voltage	Input Voltage Range	Circuit Breaker/ Fuse Rating ^a	Recommended Wire Gauge ^b
12VDC	10VDC to 16.8VDC	60A	2AWG / 35mm ²
24VDC	20VDC to 33.6VDC	30A	5AWG / 16mm ²
48VDC	40VDC to 60VDC	15A	8AWG / 8mm ²

- a. The actual current consumption of the **base station** will be lower than these requirements (refer to the Specifications Manual for more information).
- b. For a length of 5ft to 6.5ft (1.5m to 2m) (typical).

Terminate and insulate the DC input leads to protect them from accidentally shorting to the subrack if the PMU is removed before the leads are disconnected. Protective covers for the DC terminals are supplied with each PMU.

Figure 5.8 Recommended DC power connection

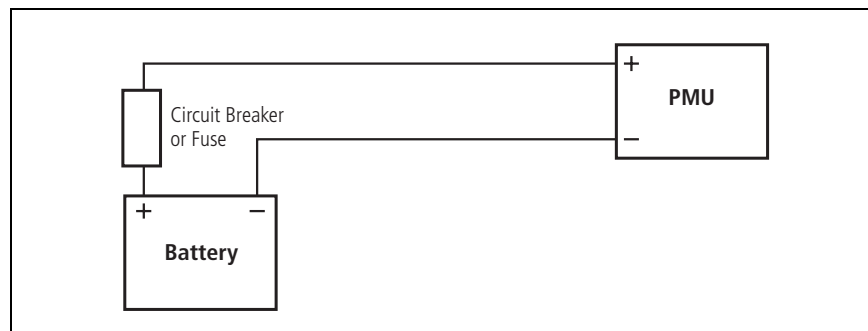

We recommend a screw torque of 18–20lb·in (2–2.25 N·m).

5.6.4 Connecting the Auxiliary DC Power Output

The PMU can provide an auxiliary DC output when it is fitted with the auxiliary power supply board. This board is available with an output of 13.65VDC, 27.3VDC, or 54.6VDC (depending on the model), and is current limited to 3A, 1.5A or 750mA respectively. This power supply is permanently on as soon as the **base station** has finished powering up, and is available on the auxiliary output connector on the rear panel.


You can connect multiple auxiliary power supply boards in parallel for redundancy purposes, or to provide an output greater than 40W. Although no active current sharing is used, auxiliary boards connected in parallel will current-share before reaching their power limit. The failure (or switching off) of one auxiliary board will not load any other paralleled auxiliary boards in the circuit.

Auxiliary DC Power Output Cabling

Network elements are supplied with a connector, as shown in [Figure 5.9](#). You can use this to connect the PMU's auxiliary DC power output to another device.

Contact your regional **Tait** office for details on the full range of wiring kits available.

Figure 5.9 Auxiliary DC power connector

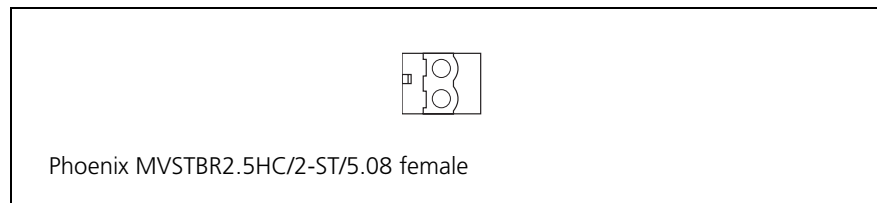

5.6.5 Connecting RF



Important Do not remove the load from the PA while it is transmitting as this may damage the PA output stage.

The RF input to the **base station** is via the marked BNC connector on the rear panel of the reciter. The RF output is via the N-type connector on the rear panel of the PA (refer to [Figure 5.7 on page 80](#)).

Cables and antennas should be of high quality construction. Solid shield heliax type cables are best, but if braided shield cables must be used for short distances, their braids must be silver-plated.

Recommendations for Installing the PA

We recommend the following installation procedures, which should protect the PA from damage under all but the most extreme operating conditions.

1. Do not connect the PA directly to the antenna. Fit an isolator or duplexer between the PA and the load. Fit the isolator as close as possible to the RF output connector on the PA. Do not connect any switching equipment between the isolator and the PA, unless the switch **cannot** operate while there is RF present (i.e. the **base station** is transmitting).
2. Fit a surge suppressor to the antenna cabling where it enters the building.
3. Inspect all cables and equipment connected to the **base station** for defects.

Ice on the antenna, or a broken antenna, is unlikely to cause damage to the PA.

Explanation

The circuit design of the PA protects the circuitry from high VSWR. This makes it difficult to damage the RF power device by keying the PA into a mismatched load, or if the load deteriorates over even a short period of time (milliseconds).

However, it is possible to damage the device if **all** the following conditions happen **at the same time**:

- there is a step change in the PA load (for example, the load is removed)
- the PA is transmitting
- the feed line loss between the PA and the mismatch is < 1 dB.

The effect of such conditions is variable: some devices will not be destroyed, and some may fail after repeated load interruptions.


5.6.6 Connecting an External Frequency Reference

For K4 Band, the internal frequency reference accuracy is inadequate, and an external reference (for example, the Tait T801-4) **must** be used. An external reference is also required for simulcast. The external reference frequency can be 10MHz or 12.8MHz, with an input level of 300mV_{pp} to 5V_{pp}. The stability of this reference should be better than 50 parts per billion (for non-simulcast) or ≤ 1 part per billion (for simulcast). The reciter automatically detects the frequency of the external reference and configures itself accordingly.

If an external reference is required, enable the external reference “Absent” alarm (Configure > Alarms > Control).

Use a 50 Ω coaxial cable (RG58 or RG223) to connect the external reference to the base station’s external reference frequency input. You can daisy-chain up to eight base stations using T-junctions. The maximum overall cable length is 30m. Terminate the last connection with a 50 Ω load.

Figure 5.10 Daisy-chaining an external frequency reference input

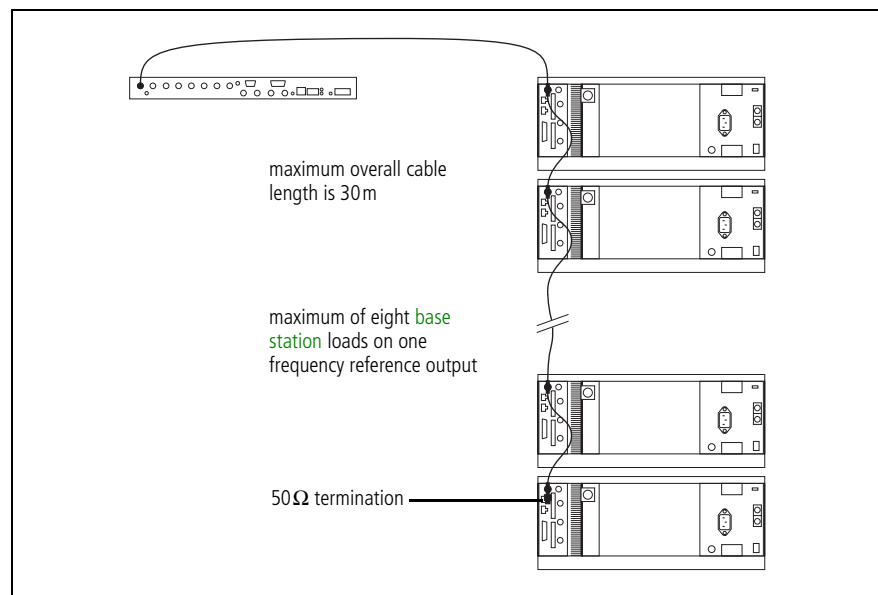


5.6.7 Connecting a 1PPS Source

A 1PPS signal is required for simulcast base stations. This and the external frequency reference can be provided, for example, by a Tait T801-4 Frequency Reference. For more information, see the T801-4 Installation and Operation Manual (MBA-00033-xx).

Use a 50Ω coaxial cable (RG58 or RG223) to connect the source to the base station's 1PPS input. You can daisy-chain up to six base stations using T-junctions. We recommend that the cable length between the first and last load is kept to a minimum. This will reduce any propagation variation between base stations. The maximum overall cable length is 30m. Terminate the last connection with a 50Ω resistor, otherwise reflections of the 1PPS pulse may occur.

Figure 5.11 Daisy-chaining a 1PPS input

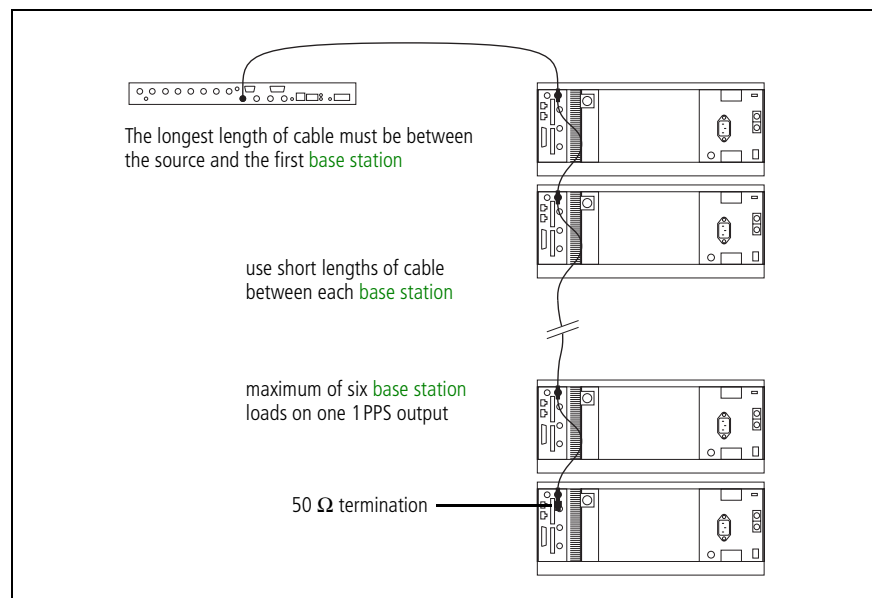

5.6.8 Ethernet Connection

The RJ-45 socket on the reciter's rear panel provides the 10BASE-T or 100BASE-T Ethernet connection to the other devices in the network. Use Cat-5 cable to connect this socket to the TaitNet P25 Network via a router or switch.


If necessary, refer to “[Ethernet Connector](#)” on page 109 for a list of Ethernet connection pin allocations.

DRAFT 4

5.6.9 Connecting General Purpose Inputs and Outputs

The **base station** has a number of general purpose inputs and outputs. These are connected via the 25-way D-range on the rear panel.

The pin allocations for the D-range connector are given in the following table. Not all pins are used in this release of the **base station**.

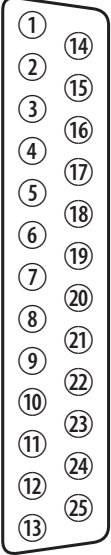	Pin	Signal Name	Signal Type	Notes	
 <p>external view</p>	1	not used			
	2				
	3				
	4				
	5				
	6				
	7				
	8				
	9				
	10				
		11	digital in 1	input	5V TTL logic active low
		12	digital in 2		
		13	+5.2VDC output	power output	maximum current 200mA
		14	digital in 3	input	5V TTL logic active low
		15	digital in 4		
		16	digital in 5		
		17	digital in 6		
		18	digital in 7		
		19	digital in 8		
		20	digital in 9		
		21	digital in 10		
		22	digital in 11		
		23	digital in 11		
		24	not used		
		25	ground	ground	

6 Maintenance

The **base station** is designed to be very reliable and should require little maintenance. However, performing regular checks will prolong the life of the equipment and prevent problems from happening.

It is beyond the scope of this manual to list every check that you should perform on your **base station**. The type and frequency of maintenance checks will depend on the location and type of your system. The checks and procedures listed below can be used as a starting point for your maintenance schedule.

Performance Checks We suggest you monitor the following operational parameters using the web interface:

- VSWR
- DC input voltage, especially on transmit
- receiver sensitivity
- any temperature alarms.

These basic checks will provide an overview of how well your **base station** is operating.

Reciter If an external frequency reference is not used, check UHF reciters for frequency drift after 3 months' service and annually thereafter. If the drift is >0.5ppm, adjust the carrier frequency offset. For details, see the Help.

PA There are no special maintenance requirements for the PA.

PMU There are no special maintenance requirements for the PMU. However, we suggest that you periodically check that the screws on the DC input terminals are tight. They may work loose with thermal cycling. Also, if you are using battery back-up, you should check the batteries regularly in accordance with the manufacturer's recommendations.

Ventilation The **base station** has been designed to have a front-to-back cooling airflow. We strongly recommend that you periodically check and maintain the ventilation requirements described in "[Equipment Ventilation](#)" on page 64 to ensure a long life and trouble-free operation for your **base station**.

Cooling Fans The cooling fans have a long service life and have no special maintenance requirements. You can use the web interface to configure the **base station** to generate an alarm if any of the front panel cooling fans fails. Refer to the Help for more details.

7 Troubleshooting

Check that all front and rear connectors and cables are in place, and that power switches are on. If problems persist, contact your regional [Tait](#) office.

Symptom	Possible Cause	Action
Alarm LED red and steady (not flashing)	The base station is in Offline mode	Use the web interface to put the base station in Online mode
Desired feature is not operating	Feature license missing	Check that you have the necessary feature licenses (refer to " Licenses " on page 18 and the Help)
	Feature license present but feature is not enabled	Use the web interface to enable the feature.
Tx stuck on	Tx and Rx frequencies are the same	Reconfigure Tx and Rx with different frequencies
Power LED on front panel is on, but keypad does not work	Keypad is disabled	Check that the keypad is enabled in the web interface (Configure > Base Station > Miscellaneous)
No power or LEDs on front panel	System control bus not connected to front panel	Check cable connections
	Pins bent on 15-pin D-range plug on front panel	Replace or repair D-range plug
The base station appears to make random transmissions	CWID feature enabled	No action: CWID transmissions are made according to configuration settings
PA has low power	Channel is configured to low power	Use the web interface to check the power settings
	PA may have suffered partial damage	Replace module and send faulty module for servicing
Test tones can't be heard	IMBE does not pass on tones higher than 400Hz	Ensure test tones are less than 400Hz
Lost or forgotten base station IP address		Procedure TBD



8 Replacing Modules



Caution

The 100 W PA and PMU weigh between 9.3lb (4.2kg) and 15.4lb (7kg) each. Take care when handling these modules to avoid personal injury.



Important

The cooling fans are mounted on the front panel and will only operate when the panel is fitted correctly to the front of the subrack. To ensure adequate airflow through the [base station](#), do not operate it for more than a few minutes with the front panel removed (e.g. for servicing purposes). Both the PMU and PA modules have built-in protection mechanisms to prevent damage from overheating.

8.1 Saving the Base Station's Configuration

Before replacing a module in the **base station**, you should decide whether you need to save its configuration data. If you are unsure whether you have a record of the configuration, backup and save the configuration file before removing any modules. Once you have replaced the module, you will be able to restore the original configuration to the **base station**.

If one or more of the modules is faulty, you may be unable to save the configuration. In this case, you will have to restore the configuration from a back-up file. Refer to the Help for more information.

8.2 Preliminary Disassembly

Hot-pluggable Modules

The reciter, PA and front panel are hot-pluggable and can be removed without powering down the whole **base station**. These modules can also be removed without disrupting the system control bus communications with the other modules in the subrack.



Important

Before removing a PA, first disconnect the DC input, transmit forward input and transmit reverse output, followed by the RF output. After refitting the PA, reconnect the RF output first, followed by the transmit forward input, transmit reverse output, and then the DC input.

Disconnecting the Power


If you want to disconnect the power before working on the **base station**, follow these steps.



Caution

Before disconnecting the battery supply leads from the PMU, open the circuit breaker or disconnect the supply leads from the battery.


1. Turn off the AC ① and DC ② switches at the rear of the PMU.
2. Also at the rear of the PMU disconnect the mains ③ and battery ④ supply leads, and the auxiliary DC supply lead ⑤ (if fitted).

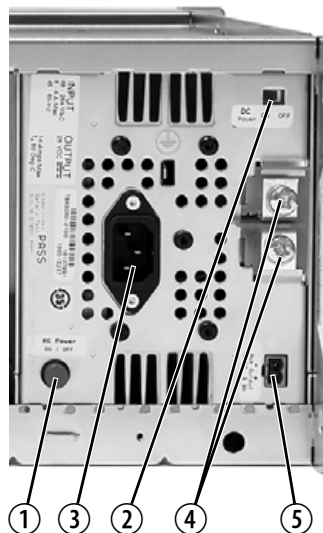

DRAFT 4

Remove the Front Panel

1. Using a Pozidriv PZ2 screwdriver, undo the fastener at each end of the front panel ① with a quarter turn counterclockwise.

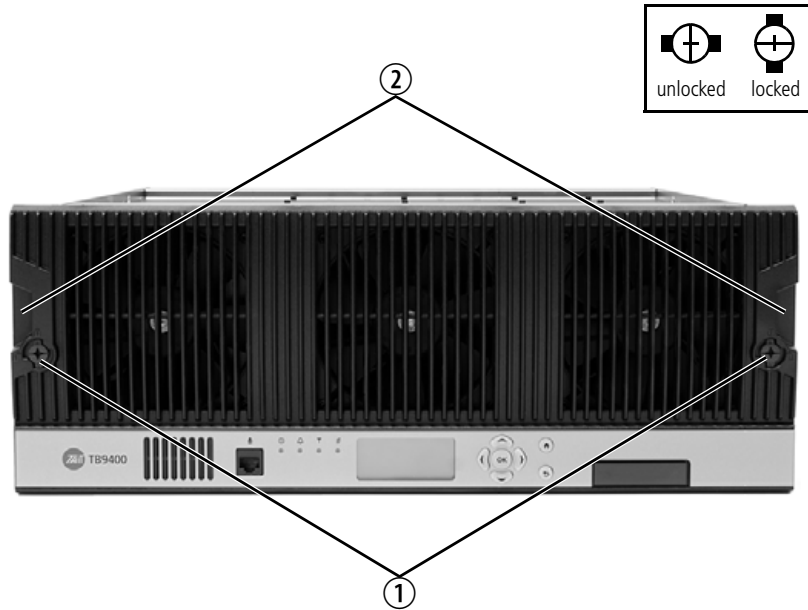


2. Place a finger in the recess ② provided at each end of the front panel and pull the front panel away from the subrack.

Cable Retaining Clips

The cable retaining clips are used to hold cables in position at the top of the subrack so that they do not interfere with the mounting of the front panel, or interrupt the airflow through the base station.


If you need to remove any front panel cables, simply pull the front of the cable retaining clip down and then slide it out from the subrack until it reaches the end of its travel.

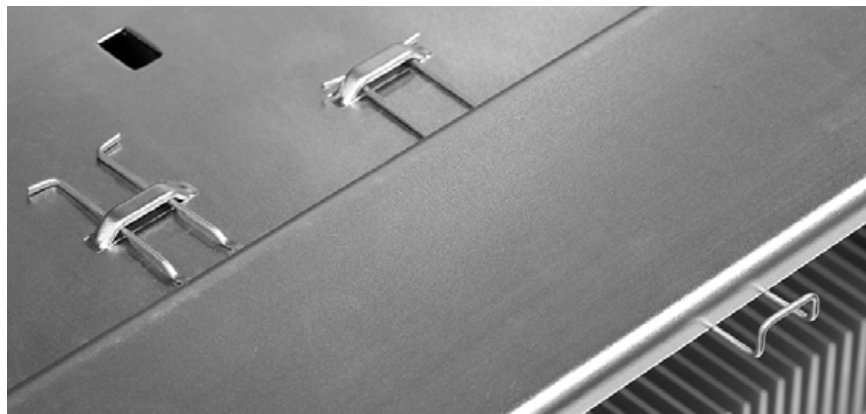

8.3 Replacing a Reciter

Removal

1. If you have not already done so, carry out the instructions in “[Preliminary Disassembly](#)” on page 95.
2. At the rear of the reciter, unplug the RF input cable ①, any system cables ②, and the external reference ③ and 1PPS ④ cables (if fitted).
3. At the front of the reciter, unplug the transmit reverse ⑤ and transmit forward ⑥ cables, and move both cables to one side. Unplug both ends of the system control bus cable ⑦ and remove it.
4. Loosen the screw securing the retaining clamp ⑧ and rotate the clamp through 90° to clear the module.
5. Slide the reciter out of the subrack, taking care not to damage any of the cables.

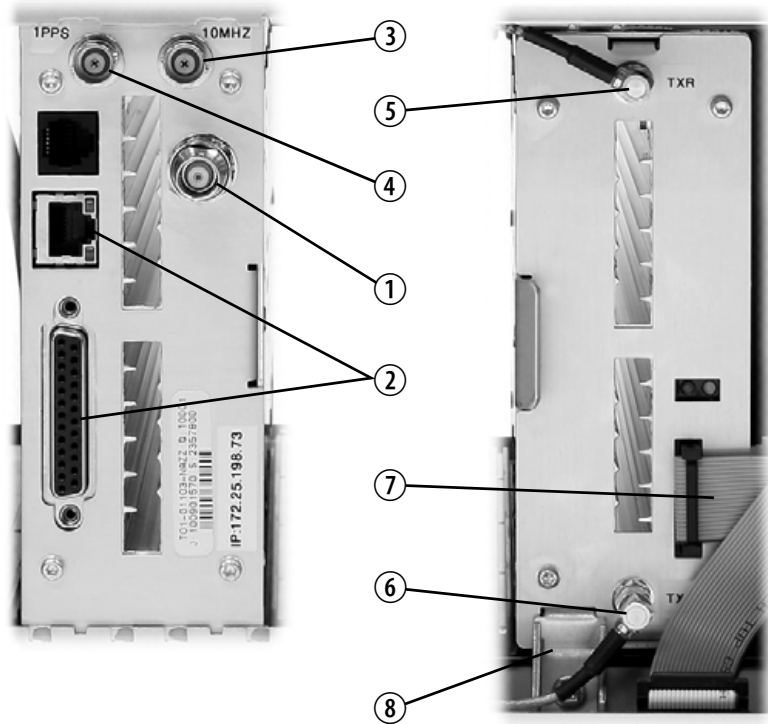

Refitting

1. Slide the replacement reciter into the subrack and secure it with the retaining clamp.
2. Reconnect all the front and rear panel cables previously disconnected. Ensure the front panel cables are positioned correctly, and retained where required by the cable retaining clips in the top of the subrack (refer to [“Appendix B – Inter-Module Connections”](#) on page 111).
3. Tighten the nut on the SMA connector to a torque of 8lbf·in (0.9N·m).
4. Carry out the instructions in [“Final Reassembly”](#) on page 107.

8.4 Replacing a Power Amplifier




Important

Before removing a PA, first disconnect the DC input, transmit forward input and transmit reverse output, followed by the RF output. After refitting the PA, reconnect the RF output first, followed by the transmit forward input, transmit reverse output, and then the DC input.

Removal

1. If you have not already done so, carry out the instructions in “[Preliminary Disassembly](#)” on page 95.
2. At the front of the PA, unplug the DC input ①, transmit forward ② and transmit reverse ③ cables, and move the cables to one side. Unplug both ends of the system control bus cable ④ and remove it.
3. At the rear of the PA, unplug the RF output cable.
4. Loosen the screw securing the retaining clamp(s) ⑤ and rotate the clamp(s) through 90° to clear the module.
5. Slide the PA out of the subrack, taking care not to damage any of the cables.

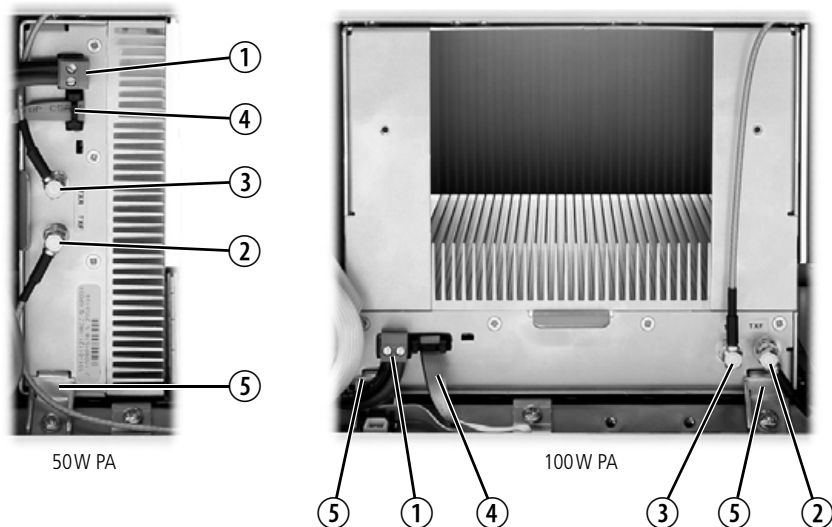

Refitting

1. Slide the replacement PA into the subrack and secure it with the retaining clamp(s).
2. At the rear of the PA, connect the RF output cable.
3. At the front of the PA, connect the transmit forward and transmit reverse cables, followed by the DC input cable.
4. Reconnect all the other front and rear panel cables previously disconnected. Ensure the front panel cables are positioned correctly, and retained where required by the cable retaining clips in the top of

DRAFT 4

the subrack (refer to “Appendix B – Inter-Module Connections” on page 111).

5. Tighten the nut on the SMA connector to a torque of 8lbf·in (0.9N·m).
6. Carry out the instructions in “Final Reassembly” on page 107.


8.5 Replacing a Power Management Unit



Important You must disconnect the AC and DC power cables before removing the PMU from the subrack.

Removal

1. If you have not already done so, carry out the instructions in “[Preliminary Disassembly](#)” on page 95.
2. At the front of the PMU, unplug and remove the output power cable ① to the subrack interconnect board. Also unplug and remove the system control bus cable ②.
3. Unplug the output power cable to the PA ③ and move it to one side.
4. Loosen the screws securing the retaining clamps ④ and rotate the clamps through 90° to clear the module.
5. Slide the PMU out of the subrack, taking care not to damage any of the cables.

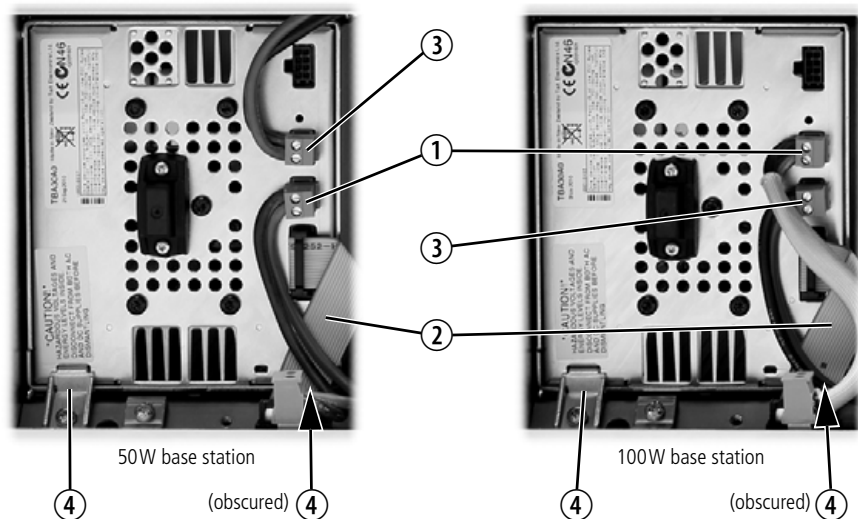

Refitting

1. Slide the replacement PMU into the subrack and secure it with the retaining clamps.
2. Reconnect all the front and rear panel cables previously disconnected. Connect the DC power cables on the rear panel as shown in [Figure 5.6 on page 79](#). Tighten the screws to a torque of 18–20lbf·in (2–2.25N·m). Ensure the front panel cables are positioned correctly, and retained where required by the cable retaining clips in the top of the subrack (refer to “[Appendix B – Inter-Module Connections](#)” on page 111).
3. Carry out the instructions in “[Final Reassembly](#)” on page 107.

8.6 Replacing the Front Panel Fans

The following instructions refer to [Figure 8.1 on page 104](#).



Important You must replace each fan duct assembly in its original location in the front panel. Each module, or pair of modules, requires a specific type of fan duct to ensure the cooling air flow passes directly through the modules' heatsinks.

If a cooling fan has failed and you are fitting a replacement front panel, you must also fit the correct type of front panel for that **base station**. Each type of **base station** has a different combination of modules, and must use a front panel fitted with fan ducts that match those modules.

The front panel for a 100 W **base station** has different fan ducts from the front panel for a 50 W **base station**, as shown in [Figure 8.1](#). In a 50 W **base station**, the fan duct for reciter and PA 1 is slightly different from the duct for reciter and PA 2. Each duct is designed to fit only in its correct position.

Removal

1. If you have not already done so, carry out the instructions in [“Preliminary Disassembly” on page 95](#).
2. Reciter and 50 W PA Fan
 - a. Unplug the fan from the front panel board (① or ②).
 - b. Remove the four screws labeled ③ or ④ and remove the fan duct assembly from the front panel.
 - c. Remove the four screws holding the fan into the duct and remove the fan.
3. 100 W PA Fan
 - d. Unplug the fan from the front panel board ⑤.
 - e. Remove the four screws labeled ⑥ and remove the fan duct assembly from the front panel.
 - f. Remove the four screws holding the fan into the duct and remove the fan.
4. PMU Fan
 - a. Remove the 100 W PA or reciter and 50 W PA 2 fan duct assembly as described above.
 - b. Unplug the PMU fan from the front panel board ⑦.
 - c. Remove the two screws labeled ⑧ and remove the PMU fan duct assembly.
 - d. Remove the four screws holding the fan into the duct and remove the fan.

Refitting


1. If the original fan was fitted with spacers ⑨, refit these spacers to the replacement fan.
2. Fit the replacement fan into the duct, routing the power wires neatly around the body of the fan to the slot in the side of the duct, as shown in [Figure 8.1](#).
3. Refit the four screws securing the fan into the duct. **Do not** overtighten these screws or you may distort the fan body.
4. PMU Fan
 - a. Refit the PMU fan duct assembly onto its mounting bosses. Note that the two mounting tabs nearest the center fan fit over the bosses.
 - b. Refit the two screws labeled ⑧.
 - c. Plug the fan into the front panel board ⑦.
 - d. Refit the 100 W PA or reciter and PA 2 fan duct as described below.
5. 100 W PA Fan
 - a. Refit the PA fan duct assembly onto its mounting bosses. Note that the two mounting tabs nearest the PMU fan fit over the tabs of the PMU fan duct.
 - b. Refit the four screws labeled ⑥.
 - c. Plug the fan into the front panel board ⑤.
6. Reciter and 50 W PA Fan
 - a. Refit the fan duct assembly onto its mounting bosses. When refitting the duct for reciter and PA 2, note that the two mounting tabs nearest the PMU fan fit over the tabs of the PMU fan duct.
 - b. Refit the four screws labeled ③ or ④.
 - c. Plug the fan into the front panel board (① or ②).
7. Carry out the instructions in “[Final Reassembly](#)” on page 107.



Important

You must connect the fans to the correct sockets on the front panel board, as shown in [Figure 8.1](#). If the fan connections are changed, the wrong fan will be activated when a module needs cooling. The module may then fold back or shut down.

Figure 8.1 Replacing the front panel fans

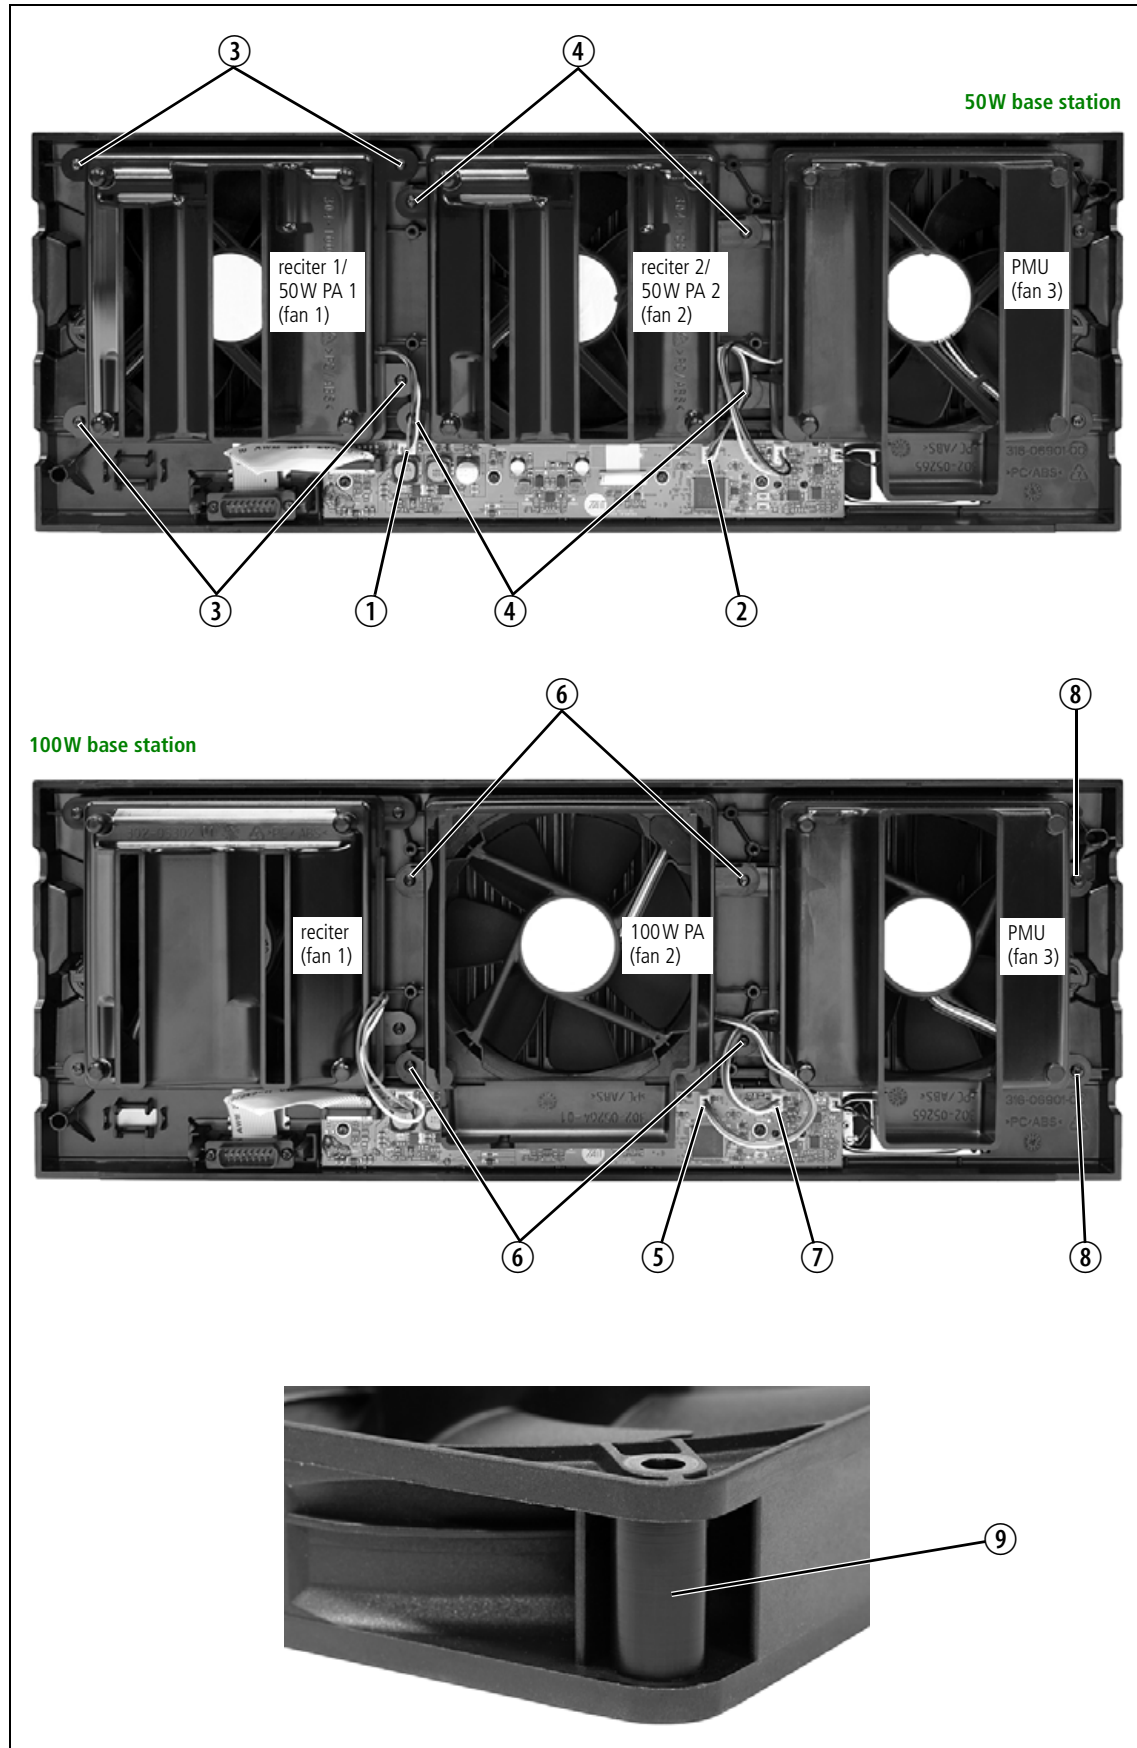

8.7 Replacing the Module Guide Rails

The module guide rails are held in place by four hooks that fit through the slots in the top and bottom of the subrack. There is also a locking tab which prevents the guide rails from working loose.




Note Subracks produced from late 2008 onwards have wider slots than earlier subracks. Guide rails designed for these wider slots will not fit older subracks with narrow slots.


Removal

1. Bottom Guide Rails
 - a. Insert a small flat-blade screwdriver under the front end of the guide rail and lift it slightly ①. This will ensure the small locking tab is clear of the slot in the subrack.
 - b. While holding the front end of the guide rail up, pull the guide rail towards the front of the subrack ② and lift it clear of the slots.
2. Top Rails
 - a. Insert a small flat-blade screwdriver under the rear end of the guide rail and lift it slightly ③. This will ensure the small locking tab is clear of the slot in the subrack.
 - b. While holding the rear end of the guide rail up, pull the guide rail towards the rear of the subrack ④ and lift it clear of the slots.

bottom guide rail

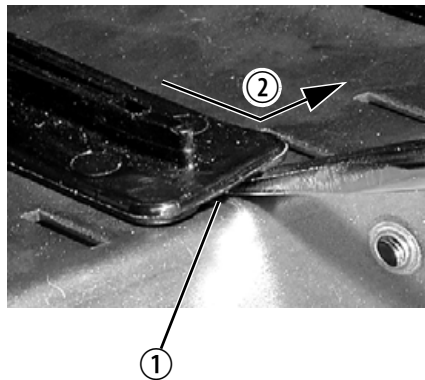

top guide rail

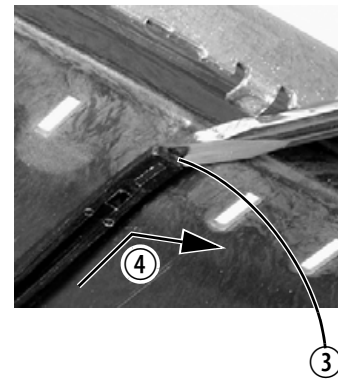


Refitting

1. Bottom Guide Rails
 - a. With the locating hooks pointing towards the rear of the subrack, insert the hooks into the slots in the subrack.
 - b. Push the guide rail towards the rear of the subrack until you hear the locking tab “click” into place.
2. Top Guide Rails
 - a. With the locating hooks pointing towards the front of the subrack, insert the hooks into the slots in the subrack.
 - b. Push the guide rail towards the front of the subrack until you hear the locking tab “click” into place.

8.8 Replacing the Subrack Interconnect Board

- Removal**
1. If you have not already done so, carry out the instructions in [“Preliminary Disassembly” on page 95](#).
 2. Disconnect any system control bus cables and DC power cables from the subrack board.
 3. Remove the three M3 nuts and spring washers ① securing the right end of the board to the subrack.
 4. Remove the D-range cover ②.
 5. Remove the two retaining clamps ③ securing the left end and centre of the board.
 6. Remove the board.
- Refitting**
1. If previously removed, replace the insulator ④.
 2. Refit the board and D-range cover, and secure with the M3 nuts and spring washers. Replace the two retaining clamps.
 3. Reconnect the system control bus cables and reciter DC cables as shown in [“Appendix B – Inter-Module Connections” on page 111](#).

Figure 8.2 Replacing the subrack interconnect board

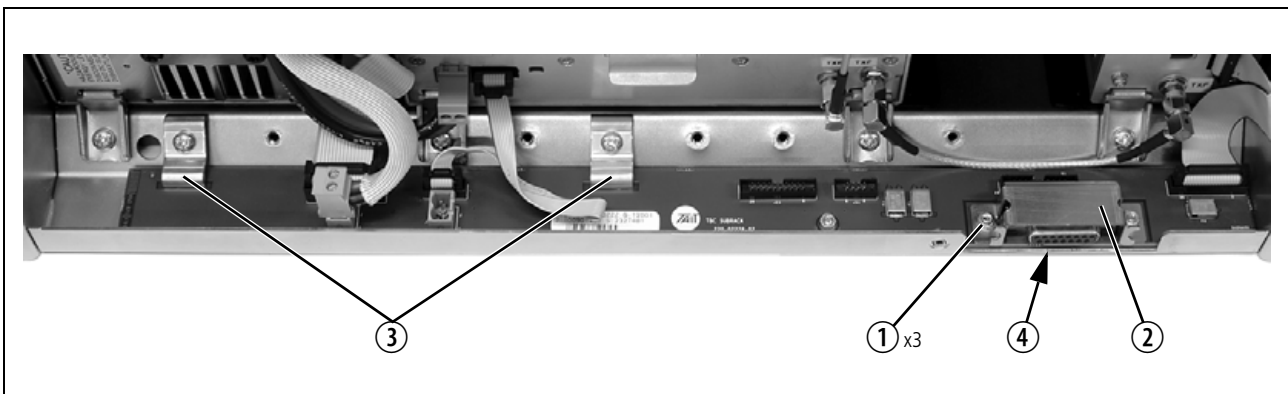


8.9 Final Reassembly



Important You must fit the correct type of front panel to your **base station**. The different types of front panel and fan ducts are explained in “[Replacing the Front Panel Fans](#)” on page 102.

1. Before fitting the front panel, ensure that all cables are secured and positioned correctly so they are clear of the fan ducts (refer to “[Appendix B – Inter-Module Connections](#)” on page 111). Otherwise the panel may not fit properly, or you may damage the cables.
2. Refit the Front Panel
 - a. Ensure that the fasteners ① are in the unlocked position.
 - b. Fit the front panel onto the locating pegs on the subrack.
 - c. Secure each fastener with a quarter turn clockwise.
 - d. Push the self-aligning D-range connector ② fully in.

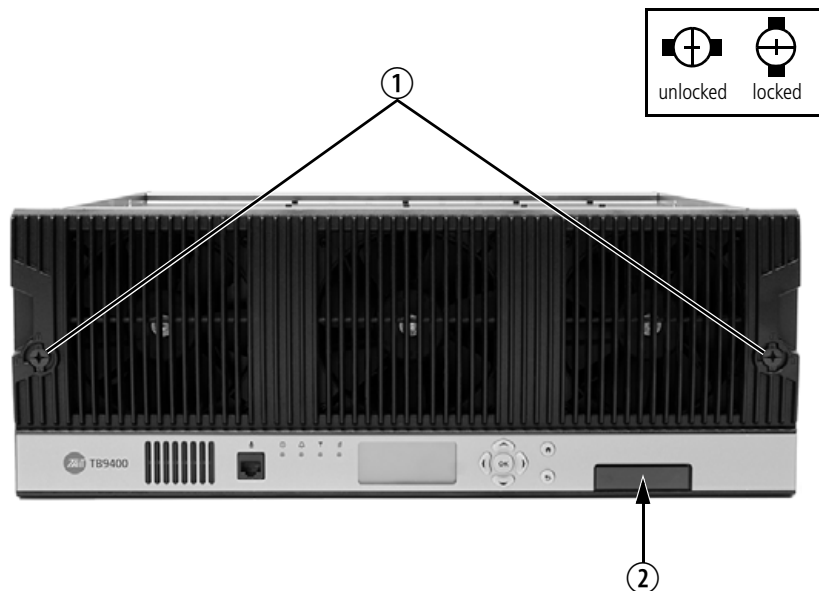

3. Before powering up the **base station**, check that all power, RF and system cables are connected correctly and securely at the rear of the **base station**.




Important When refitting modules, make sure they are fitted correctly into the subrack and all retaining clamps are securely tightened. The recommended torque for the retaining clamp screws is 17lbf·in (1.9N·m). As well as holding the modules in place, the retaining clamps push the modules hard against the rear rail of the subrack to ensure a good ground connection between the modules and the subrack.

Appendix A – Interface Pin Allocations

System Interface Connector


For the pin allocations for the system interface D-range connector, see “Connecting General Purpose Inputs and Outputs” on page 87.

Ethernet Connector

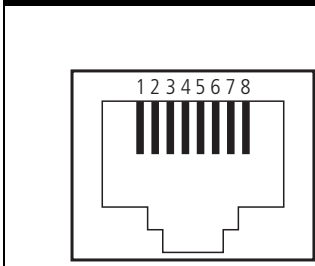	Pin	Description
 external view	1	transmit data +
	2	transmit data –
	3	receive data +
	4	not connected
	5	not connected
	6	receive data –
	7	not connected
	8	not connected

PMU Auxiliary DC Output

The pin allocations for the auxiliary DC output on the PMU are given in the following table.

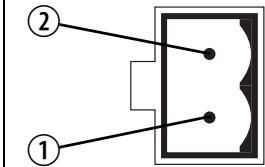
	Pin	Description
 2-pin connector - external view	1	+V output
	2	ground

Appendix B – Inter-Module Connections

Dual 50W Base Station

The connections between modules at the front of a dual 50W base station are shown below.

Dual 50W base station inter-module connections

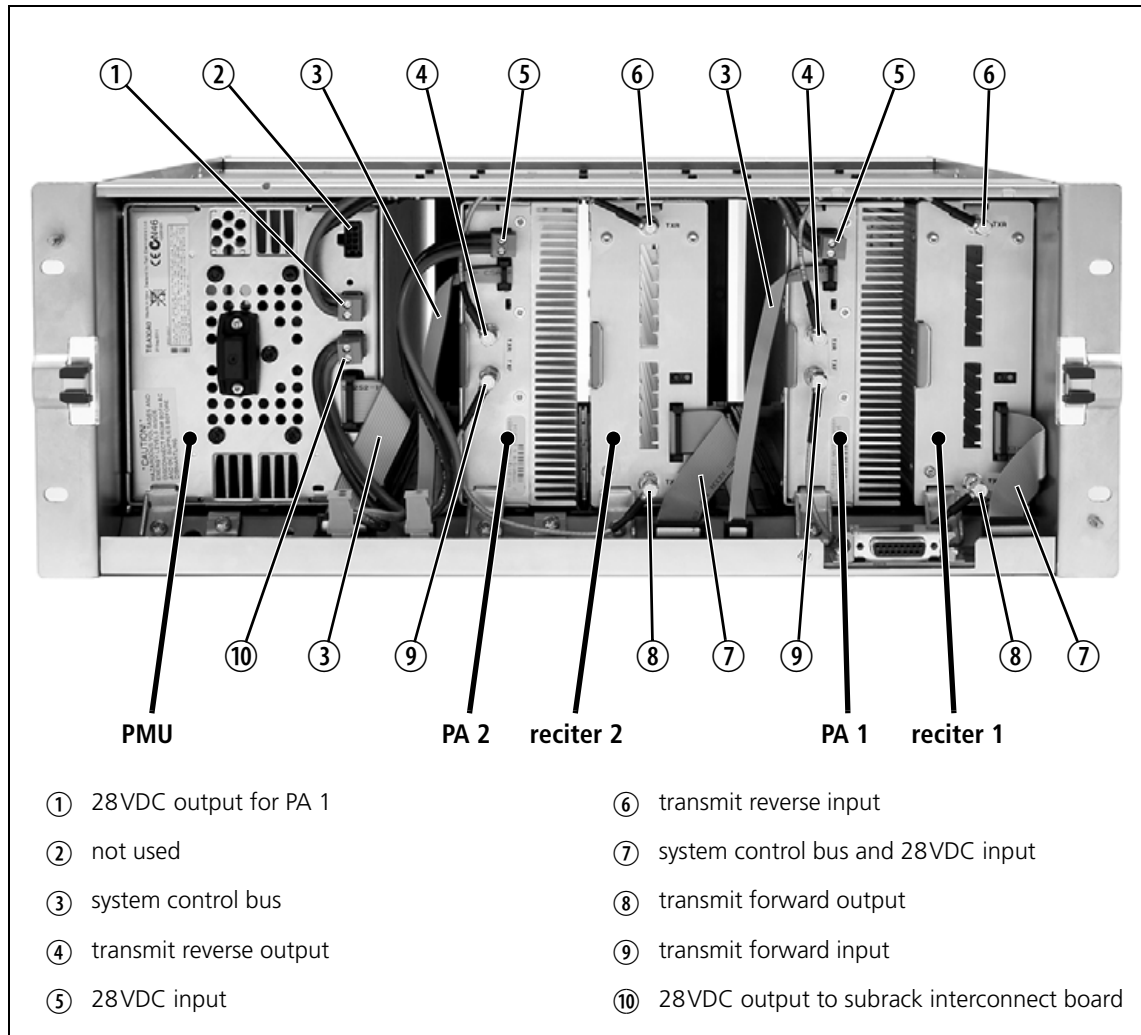


DC Supply

PA 1 is powered by a direct connection from the PMU. The other modules in the subrack are powered from the PMU via the subrack interconnect board. The DC supply to the reciters is via the system control bus ribbon cable.

Single 50W Base Station

The connections between modules at the front of a single 50 W base station are shown below.

Single 50W base station inter-module connections

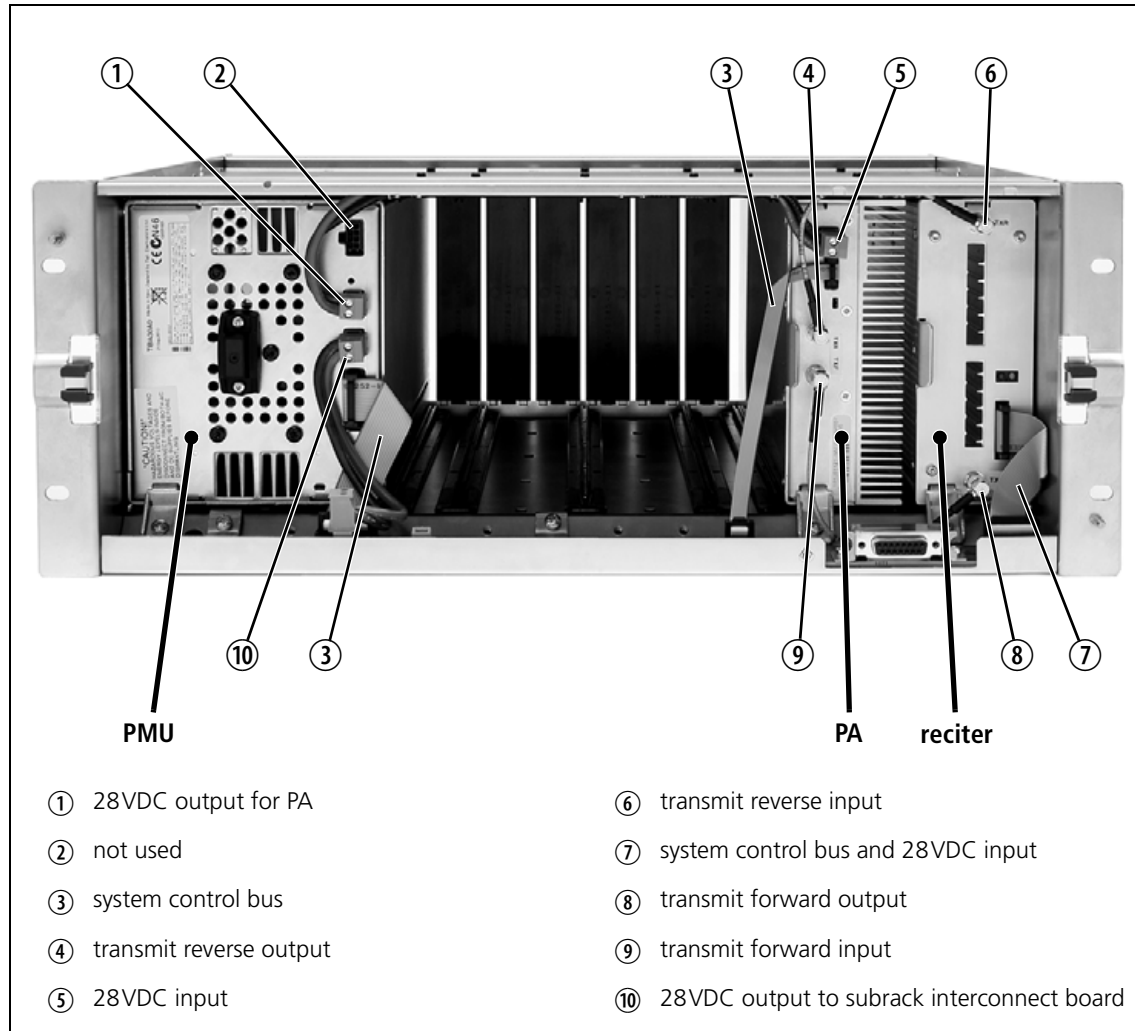

DC Supply


The PA is powered by a direct connection from the PMU. The other modules in the subrack are powered from the PMU via the subrack interconnect board. The DC supply to the reciter is via the system control bus ribbon cable.

DRAFT 4

100W Base Station

The connections between modules at the front of a 100 W base station are shown below.

100W base station inter-module connections

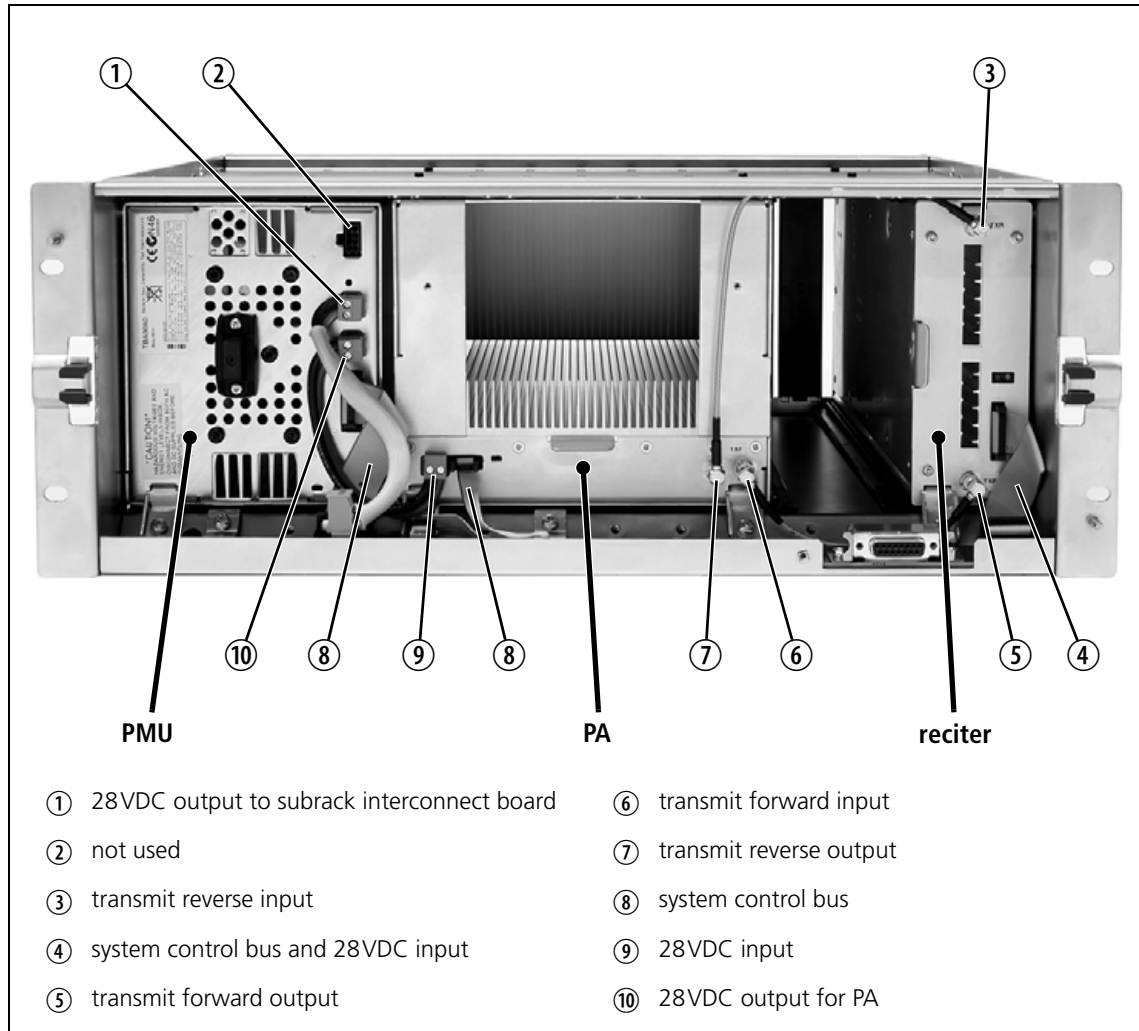

DC Supply

The PA is powered by a direct connection from the PMU. The reciter is powered from the PMU via the subrack interconnect board and system control bus ribbon cable.

TaitNet P25 Glossary

This glossary contains an alphabetical list of terms and abbreviations related to the TaitNet P25 network and the TB9400 base station.

A

- ADC** Analog-to-Digital Converter. A device for converting an analog signal to a digital signal that represents the same information.
- ANI** Automatic Number Identification. A service that provides the receiver of a call with a numerical identifier or alphanumeric label of the caller.
- APCO** The Association of Public Safety Communications Officials in the United States. The APCO Project 25 standards committee defined the P25 digital radio standard. The standard is often referred to as APCO or P25.
- ARP** Address Resolution Protocol is an IP protocol used to map IP network addresses to the hardware addresses used by a data link protocol.

B

- base station** A radio receiver and transmitter that is located in a specific place (at a site) that enables a two-way radio to communicate with a dispatcher or over a larger range with other two-way radios. Specifically, Tait TB9400 equipment in a subrack.
- battery protection mode** A PMU enters battery protection mode when it has AC power but its DC power is below the configured power shutdown voltage. In battery protection mode, the PMU will shut down to protect the battery if it loses AC power.
- bearer network** Telecom equipment that is used to carry user data.
- BER** Bit Error Rate. A measure of the quality of digital transmission, expressed as a percentage. The BER indicates the proportion of errors to correctly received digits in a received signal.

C

C4FM	Compatible Four-level Frequency Modulation. A modulation scheme defined in the P25 CAI standard for 12.5 kHz bandwidth.
CAI	Common Air Interface. The over-the-air data formats and protocols defined by the APCO P25 committee.
call	A complete exchange of information between two or more parties. A call requires a receive signal path and a transmit signal path. In conventional systems, a call is an over, but in trunked systems, a call may be a conversation, made up of a number of overs.
Cartesian Loop	The reciter's RF output is fed to the PA through the transmit forward path. A coupled signal from the PA's RF output is fed back to the reciter through the transmit reverse path. The reciter uses this feedback through a Cartesian Loop to linearize the RF amplification system. Linearization is required to accurately transmit complex waveforms which vary in frequency and amplitude, such as those used in P25 Phase 2.
central voting	Voting that is centralized at one member of the channel group.
channel	<ol style="list-style-type: none">1. A path through which signals can flow.2. In the RF domain, a frequency pair (or just a single frequency in a simplex system).3. A set of configuration information that defines the frequency pair and other related settings (a channel configuration). "Channel" has this meaning in the web interface.
channel group	A single logical channel consisting of a set of base stations . The members of a channel group are linked by an IP network and share a common multicast IP address.
channel profile	A named group of configuration settings that help to define the properties of a channel. Each channel in the channel table must have a channel profile assigned to it.
channel spacing	The bandwidth that a channel nominally occupies. If a base station has a channel spacing of 12.5 kHz, there must be a separation of at least 12.5 kHz between its operating frequencies and those of any other equipment.
channel table	The base station's database of channel configurations.
CODEC	A device which combines analog-to-digital conversion (coding) and digital-to-analog conversion (decoding).

DRAFT 4

community repeater	Repeater that is shared by several user groups.
configuration file	Consists of all the configuration settings needed for a base station , stored as a file.
conventional network	Systems that do not have centralized management of channel access. System operation is entirely controlled by system end users.
CWID	Continuous Wave Identification is a method of automatically identifying the base station using a Morse code. Continuous wave means transmission of a signal with a single frequency that is either on or off, as opposed to a modulated carrier.
D	
DAC	Digital-to-Analog Converter. A device for converting a digital signal to an analog signal that represents the same information.
DDC	Digital Down Converter. A device which converts the digitized IF signal of the receiver down to a lower frequency (complex baseband) to suit the DSP.
dispatcher	A person who gives official instructions by radio to one or more SU users.
distributed voting	Voting for the best RF signal that is carried out separately by each channel group member using the same voting algorithm.
dotted quad	A method for writing IPv4 addresses. The form is DDD.DDD.DDD.DDD where DDD is an 8-bit decimal number.
downlink	The transmission path from fixed equipment to SUs.
DSP	Digital Signal Processor.
duplex	Providing transmission and reception in both directions simultaneously.
duty cycle	Used in relation to the PA, it is the proportion of time (expressed as a percentage) during which the PA is transmitting.

E

EIA	Electronic Industries Alliance. Accredited by the American National Standards Institute (ANSI) and responsible for developing telecommunications and electronics standards in the USA.
EMC	Electromagnetic Compatibility. The ability of equipment to operate in its electromagnetic environment without creating interference with other devices.
ETSI	European Telecommunications Standards Institute. The non-profit organization responsible for producing European telecommunications standards.

F

failsoft mode	An optional operational mode of TaitNet P25 trunked networks. It comes into effect when the channel group loses all connection to the trunking site controller.
FCC	Federal Communications Commission. The FCC is an independent United States government agency that regulates interstate and international radio communications.
feature code	The alphanumeric code used to identify a feature set.
feature set	A function or mode of operation of the base station which can be enabled or disabled using the web interface. Each feature set requires a license to be purchased from Tait before it can be enabled.
feature license key	The unique set of digits belonging to a license which is programmed into the base station to enable a feature set.
fill-in receiver	An additional receiver placed within the coverage area of a base station to receive SU transmissions that are too weak to be received by that base station .
FLASH	Electrically block-erasable and programmable read-only memory.
FM	Frequency Modulation. Often used as an adjective to denote analog radio transmission.

DRAFT 4

frequency band The range of frequencies that the equipment is capable of operating on.

front panel The cover over the front of the **base station** containing the indicator LEDs, four-line LCD display, user controls and cooling fans.

G

gating The process of opening and closing the receiver gate. When a valid signal is received, the receiver gate opens, letting the signal through.

group call A call that is sent to more than one SU simultaneously.

H

heartbeat message A message whose purpose is to indicate to the receiver that the sender is operational.

hiccup mode Many power supplies switch off in the event of a short-circuit and try to start again after a short time (usually after a few seconds). This “hiccup”-type of switching off and on is repeated until the problem is eliminated.

holdover mode A simulcast **base station** can enter holdover mode when it loses its 1PPS pulse. Holdover mode temporarily maintains synchronization by phase-locking the transmit clock to the external frequency reference.

hostname The unique name by which a network element is known on the network.

hub A unit for connecting hosts together. It sends all incoming Ethernet packets to all the other hosts.

hysteresis The difference between the upper and lower trigger points. For example, the receiver unmutes when the upper trigger point is reached, but will mute again until the level falls to the lower trigger point. An adequate hysteresis prevents the receiver gate from repeatedly muting and unmuting when the level varies around the trigger point.

I

I²C	A bi-directional two-wire serial bus which is used to connect integrated circuits (ICs). I ² C is a multi-master bus, which means that multiple chips can be connected to the same bus, and each one can act as a master by initiating a data transfer. Used in the TB9400 for communications between reciter 1 and the PMU.
IMBE	Improved Multiband Excitation. A voice compression technology patented by Digital Voice Systems, Inc and used in the vocoders of P25 radios.
impairment	A measure of signal quality used in channel group voting. Impairment is inversely related to signal quality. The lowest impairment (0) indicates the highest signal quality. The highest impairment (15) indicates the worst signal quality.
inbound	Describes the direction of a signal: from an SU over the air interface to the fixed station.
inhibit	A control command that can be sent across the CAI to inhibit an SU. An inhibited SU appears to the user as if it is powered off.
IP	Internet Protocol is a protocol for sending data packets between hosts.
isolator	A passive two-port device which transmits power in one direction, and absorbs power in the other direction. It is used in a PA to prevent damage to the RF circuitry from high reverse power.

K

kernel	The core executable of an operating system.
---------------	---

L

LAN	Local Area Network. A computer network that interconnects computers in a limited area, such as a single building or group of buildings.
LDU	Link Data Unit. Voice calls are sent over the CAI as a series of LDUs.
LED	Light Emitting Diode. Also the screen representation of a physical LED.

DRAFT 4

license Some operational functions of the **base station** are controlled by licenses. Purchasing a license from **Tait** allows you to enable the feature set which includes the required functionality.

LSM Linear Simulcast Modulation is a proprietary modulation scheme designed to give optimal performance in simulcast systems, compared to that obtainable using C4FM.

M

marshalling duration The length of time that the voice stream needs to travel from the central voter to the furthest channel group member. The fixed marshalling duration parameter includes the time needed to fill the transmit buffer to the required level.

master The channel group master is the member with the control connection to the trunking site controller.

multicast group The group of hosts associated with a specific IP multicast address.

multicast IP address An IP address that refers to a group of hosts rather than a single host. These hosts will all accept packets with this IP address.

mute Prevents audio from being passed to the radio's speaker.

N

NAC Network Access Code. The 12 most significant bits of the network identifier information that precedes every packet sent on the CAI. The NAC identifies which network the data belongs to, allowing **base stations** and mobiles to ignore packets belonging to interfering networks.

NAT Network Address Translation allows the use of a single IP address for a whole network of computers. A NAT sits between the public Internet and the network it serves, and works by rewriting IP addresses and port numbers in IP headers on the fly so the packets all appear to be coming from (or going to) the single public IP address of the NAT device instead of the actual source or destination.

network element Any device that is network-connected. A **TaitNet digital network** consists of a number of network elements. The TB9400 base station is a network element designed and manufactured by Tait.

NTP Network Time Protocol is a protocol and software implementation for synchronizing the clocks of computer systems across a network. An NTP server obtains the correct time from a time source and sets the local time in each connected computer.

O

octet A set of 8 bits.

Offline mode A mode of operation in which active service is suspended so that special operations can be carried out, such as programming in a new configuration or carrying out invasive diagnostic tests.

Online mode The normal operating mode of the **base station**.

outbound Describes the direction of a signal: from a fixed station over the air interface to an SU.

over A single transmission, which begins when a user presses PTT and ends when the user stops pressing.

P

P25 Project 25. A suite of standards and requirements endorsed by the TIA and intended for digital public safety radio communications systems.

PA The Power Amplifier is a **base station** module that boosts the exciter output to the required transmit level.

PCB Printed Circuit Board.

PMU The Power Management Unit is a module in the **base station** that provides power to the subrack and monitors power conditions.

preamble A well-defined signal that is transmitted at the beginning of digital P25 calls to facilitate downlink voting and to allow the transmit buffer to fill.

privileges A set of access rights to the web interface functions. There are Guest, Maintainer, and Administrator privileges.

DRAFT 4

Project 25 A project set up by APCO (the Association of Public Safety Communications Officials), together with other US governmental organizations, to develop standards for interoperable digital radios to meet the needs of public safety users.

PSTN Public Switched Telephone Network: the public telephone network.

PTT Push To Talk. The button on an SU that keys the transmitter.

Q

QoS Quality Of Service. A router feature that gives real-time data such as voice calls priority over other data.

R

receiver number A unique number assigned to the members of a channel group.

reciter A module of a [base station](#) that provides both receiver and exciter functionality.

repeater talkaround Allows the SU user to bypass repeater operation and so communicate directly with other SUs. While repeater talkaround is active, all transmissions are made on the receive frequency programmed for the channel.

RISC Reduced Instruction Set Computer. A type of microprocessor that recognizes a relatively limited number of instructions. The reciter's control board has a RISC microprocessor.

router A router is an internetwork packet switch that switches data packets from an input interface to an output interface. The interfaces can be of different types.

RS-232 A protocol for serial communications between a DTE (data terminal equipment) and a DCE (data communications equipment) device.

RS-485 An updated version of the RS-232 protocol for serial communications between multiple devices.

RSSI Received Signal Strength Indicator is a level that indicates the strength of the received signal.

DRAFT 4

RTP	Real Time Protocol is an Internet protocol that supports the real-time transmission of voice and data.
Rx	Receiver.
S	
satellite voter	A channel group member that has delegated voting activity to a central voter.
SAW filter	Surface Acoustic Wave filter. A band pass filter that can be used to filter both RF and IF frequencies. A SAW filter uses the piezoelectric effect to turn the input signal into vibrations that are turned back into electrical signals in the desired frequency range.
selectivity	The ability of a radio receiver to select the wanted signal and reject unwanted signals on adjacent channels (expressed as a ratio).
sensitivity	The sensitivity of a radio receiver is the minimum input signal strength required to provide a usable signal.
signaling profile	A named set of configuration items related to signaling that can be applied to any channel.
simplex	Able to provide transmission and reception in only one direction at a time.
simulcast	The simultaneous broadcast by more than one transmitter of the same signal on the same frequency.
SINAD	Signal plus Noise and Distortion is a measure of signal quality. It is the ratio of (signal + noise + distortion) to (noise + distortion). A SINAD of 12dB corresponds to a signal-to-noise ratio of 4:1.
site	<ol style="list-style-type: none">1. The base station equipment at a particular location. This includes power supplies, transmitters, receivers, network interfaces and controllers.2. The location of that equipment.
skew	A measure used in centrally voted channel groups. If a voice stream arrives at the central voter 20ms later than the first voice stream from the same SU, it is said to have a skew of 20ms.

DRAFT 4

SMR	Specialized Mobile Radio. A communications system used by police, ambulances, taxis, trucks and other delivery vehicles.
SNMP	Simple Network Management Protocol. A protocol used (for example) by the trunking site controller to monitor the status of the channel group and its members.
SSRC	Synchronization source. The SSRC is a large number specified by the trunking controller in its connection message. It uniquely identifies voice streams sent from the master base station .
SU	Subscriber Unit. The term used in the APCO P25 standard documents for a two-way radio (generally a mobile or a portable radio) conforming to the CAI specifications.
supplementary service	A term used in the P25 standards. It refers to a group of services that is additional to the basic service that a telecommunications network provides. Examples include encryption and SU monitoring.
system control bus	Provides the following physical paths in a TB9400 base station : <ul style="list-style-type: none">■ I²C and RS-485 communications between the modules in the subrack■ fan power from the PMU■ power connections for the reciter and front panel.

T

TaitNet	Brand name for any PMR network designed and manufactured by Tait Electronics Limited.
TaitNet P25 network	A set of Tait base stations interconnected by an IP network that can carry voice and data traffic.
TB9400 Base Station	A P25-compliant base station consisting of the equipment necessary to receive and transmit on one channel. Generally, this means a reciter, a PA, and a PMU. Often abbreviated to TB9400 or base station .
TCCP	Trunking Channel Control Protocol. A proprietary protocol operating over IP for the exchange of channel control messages between a base station and a trunking site controller.
TCP	Transmission Control Protocol. A complex protocol on top of IP for sending reliable streams of data with flow control.

DRAFT 4

TELCO	Telephone company.
TIA	Telecommunications Industry Association
toggle	Describes the switching between two states. If something is on, toggling it turns it off. If it is off, toggling it turns it on.
tone	A sound wave of a particular frequency.
TSBK	A Trunking Signaling Block is an over-the-air message format used in digital P25 mode for setting up trunked calls and for supplementary services such as messaging and status updates.
Tx	Transmitter.
U	
UDP	User Datagram Protocol. A simple protocol on top of IP for sending streams of data.
uninhibit	A control command that can be sent across the CAI to restore an inhibited SU to normal functioning.
uplink	The transmission path from SUs to fixed equipment.
UTC	Coordinated Universal Time (word order from French). An international time standard that has replaced Greenwich Mean Time.
V	
valid signal	A signal that the receiver unmutes to. A signal is valid, for example, when it is strong enough to be decoded and when it has the specified NAC.
voice stream	A digitized voice signal that passes through the main switch.
VoIP	Voice over IP. The name for the technology that puts speech signals in packets and then routes them over an IP backbone network.
voting	The systematic sampling of a group of channels for the channel with the greatest signal strength. Voting provides wide-area coverage and ensures that

DRAFT 4

as the user moves throughout the coverage area the strongest channel is always available for a call.

VPN Virtual Private Network. A private communications network used to communicate confidentially over a non-private network.

VSWR Voltage Standing Wave Ratio is the ratio of the maximum peak voltage anywhere on the transmission line to the minimum value anywhere on the transmission line. A perfectly matched line has a VSWR of 1:1. A high ratio indicates that the antenna subsystem is poorly matched.

W

watchdog A circuit that checks that the system is still responding. If the system does not respond (because the firmware has locked up), the circuit generally resets the system.

Tait Software License Agreement

This Software License Agreement ("Agreement") is between you ("Licensee") and Tait Electronics Limited ("Tait").

By using any of the Software items embedded and pre-loaded in the related Tait Designated Product, included on CD, downloaded from the Tait website, or provided in any other form, you agree to be bound by the terms of this Agreement. If you do not agree to the terms of this Agreement, do not install or use any of the Software. If you install or use any of the Software, that will be deemed to be acceptance of the terms of this Agreement.

For good and valuable consideration, the parties agree as follows:

Section 1 DEFINITIONS

"Confidential Information" means all or any information supplied to or received by Licensee from Tait, whether before or after installation or use and whether directly or indirectly pertaining to the Software and Documentation supplied by Tait, including without limitation all information relating to the Designated Products, hardware, software; copyright, design registrations, trademarks; operations, processes, and related business affairs of Tait; and including any other goods or property supplied by Tait to Licensee pursuant to the terms of this Agreement.

"Designated Products" means products provided by Tait to Licensee with which or for which the Software and Documentation is licensed for use.

"Documentation" means product and software documentation that specifies technical and performance features and capabilities; user, operation, and training manuals for the Software; and all physical or electronic media upon which such information is provided.

"Executable Code" means Software in a form that can be run in a computer and typically refers to machine language, which is comprised of native instructions the computer carries out in hardware. Executable code may also refer to programs written in interpreted languages that require additional software to actually execute.

"Intellectual Property Rights" and **"Intellectual Property"** mean the following or their substantial equivalents or counterparts, recognized by or through action before any governmental authority in any jurisdiction throughout the world and including, but not limited to all rights in patents, patent applications, inventions, copyrights, trademarks, trade secrets, trade names, and other proprietary rights in or relating to the Software and Documentation; including any adaptations, corrections, de-compilations, disassemblies, emulations, enhancements fixes, modifications, translations and updates to or derivative works from, the Software or Documentation, whether made by Tait or another party, or any improvements that result from Tait processes or provision of information services.

"Licensee" means any individual or entity that has accepted the terms of this License.

"Open Source Software" means software with freely obtainable source code and license for modification, or permission for free distribution.

"Open Source Software License" means the terms or conditions under which the Open Source Software is licensed.

"Person" means any individual, partnership, corporation, association, joint stock company, trust, joint venture, limited liability company, governmental authority, sole proprietorship, or other form of legal entity recognized by a governmental authority.

"Security Vulnerability" means any flaw or weakness in system security procedures, design, implementation, or internal controls that if exercised (accidentally triggered or intentionally exploited) could result in a security breach such that data is compromised, manipulated, or stolen, or a system is damaged.

"Software" (i) means proprietary software in executable code format, and adaptations, translations, de-compilations, disassemblies, emulations, or derivative works of such software; (ii) means any modifications, enhancements, new versions and new releases of the software provided by Tait; and (iii) may contain one or more items of software owned by a third-party supplier. The term "Software" does not include any third-party software provided under separate license or not licensable under the terms of this Agreement.

"Source Code" means software expressed in human readable language necessary for understanding, maintaining, modifying, correcting, and enhancing any software referred to in this Agreement and includes all states of that software prior to its compilation into an executable programme.

"Tait" means Tait Electronics Limited and includes its Affiliates.

Section 2 SCOPE

This Agreement contains the terms and conditions of the license Tait is providing to Licensee, and of Licensee's use of the Software and Documentation. Tait and Licensee enter into this Agreement in connection with Tait delivery of certain proprietary Software and/or products containing embedded or pre-loaded proprietary Software.

Section 3 GRANT OF LICENSE

3.1. Subject to the provisions of this Agreement and the payment of applicable license fees, Tait grants to Licensee a personal, limited, non-transferable (except as permitted in Section 7), and non-exclusive license to use the Software in executable code form, and the Documentation, solely in connection with Licensee's use of the Designated Products for the useful life of the Designated Products. This Agreement does not grant any rights to source code.

3.2. If the Software licensed under this Agree-

ment contains or is derived from Open Source Software, the terms and conditions governing the use of such Open Source Software are in the Open Source Software Licenses of the copyright owner and not in this Agreement. If there is a conflict between the terms and conditions of this Agreement and the terms and conditions of the any applicable Open Source Software Licenses, the terms and conditions of the Open Source Software Licenses will take precedence. For information about Open Source Components contained in Tait products and the related Open Source licenses, see: <http://support.taitradio.com/go/opensource>

Section 4 LIMITATIONS ON USE

4.1. Licensee may use the Software only for Licensee's internal business purposes and only in accordance with the Documentation. Any other use of the Software is strictly prohibited. Without limiting the general nature of these restrictions, Licensee will not make the Software available for use by third parties on a "time sharing," "application service provider," "service bureau" basis, or for any other similar commercial rental or sharing arrangement.

4.2. Licensee will not, and will not directly or indirectly allow or enable any third party to: (i) reverse engineer, disassemble, extract components, decompile, reprogram, or otherwise reduce the Software or any portion thereof to a human perceptible form or otherwise attempt to recreate the source code; (ii) modify, adapt, create derivative works of, or merge the Software; (iii) copy, reproduce, distribute, lend, or lease the Software or Documentation to any third party; (iv) grant any sublicense or other rights in the Software or Documentation to any third party; (v) take any action that would cause the Software or Documentation to be placed in the public domain; (vi) remove, or in any way alter or obscure any copyright notice or other notice of Tait proprietary rights; (vii) provide, copy, transmit, disclose, divulge or make the Software or Documentation available to, or permit the use of the Software by, any third party or on any machine except as expressly authorized by this Agreement; or (viii) use, or permit the use of, the Software in a manner that would result in the production of a copy of the Software by any means whatsoever other than what is permitted in this Agreement. Licensee may make one copy of the Software to be used solely for archival, back-up, or disaster recovery purposes; provided that Licensee may not operate that copy of the Software at the same time as the original Software is being operated. Licensee may make as many copies of the Documentation as it may reasonably require for the internal use of the Software.

4.3. Unless otherwise authorized by Tait in writing, Licensee will not, and will not enable or allow any third party to: (i) install a copy of the Software on more than one unit of a Designated Product; or (ii) copy or transfer Software installed on one unit of a Designated Product to any other device. Licensee may temporarily transfer Software installed on a Designated Product to another device if the Designated Product is inoperable or

malfunctioning. Temporary transfer of the Software to another device must be discontinued when the original Designated Product is returned to operation and the Software must be removed from the other device.

4.4. Licensee will maintain, during the term of this Agreement and for a period of two years thereafter, accurate records relating to this license grant to verify compliance with this Agreement. Tait, or a third party nominated by Tait, may inspect Licensee's premises, books and records, upon reasonable prior notice to Licensee, during Licensee's normal business hours and subject to Licensee's facility and security regulations. Tait is responsible for the payment of all expenses and costs of the inspection, provided that Licensee shall indemnify Tait for all costs (including audit costs and legal costs on a solicitor client basis) if Licensee has breached the terms of this Agreement. Any information obtained by Tait during the course of the inspection will be kept in strict confidence by Tait and used solely for the purpose of verifying Licensee's compliance with the terms of this Agreement.

Section 5 OWNERSHIP AND TITLE

Tait, its licensors, and its suppliers retain all of their Intellectual Property Rights in and to the Software and Documentation, in any form. No rights are granted to Licensee under this Agreement by implication, estoppel or otherwise, except for those rights which are expressly granted to Licensee in this Agreement. All Intellectual Property developed, originated, or prepared by Tait in connection with providing the Software, Designated Products, Documentation, or related services, remains vested exclusively in Tait, and Licensee will not have any shared development or other Intellectual Property Rights.

Section 6 LIMITED WARRANTY; DISCLAIMER OF WARRANTY

6.1. The commencement date and the term of the Software warranty will be a period of one (1) year from Tait shipment of the Software. If Licensee is not in breach of any obligations under this Agreement, Tait warrants that the unmodified Software, when used properly and in accordance with the Documentation and this Agreement, will be free from a reproducible defect that eliminates the functionality or successful operation of a feature critical to the primary functionality or successful operation of the Software. Whether a defect has occurred will be determined solely by Tait. Tait does not warrant that Licensee's use of the Software or the Designated Products will be uninterrupted, error-free, completely free of Security Vulnerabilities, or that the Software or the Designated Products will meet Licensee's particular requirements. Tait makes no representations or warranties with respect to any third-party software included in the Software.

6.2 Tait sole obligation to Licensee, and Licensee's exclusive remedy under this warranty, is to use reasonable efforts to remedy any material Software defect covered by this warranty. These efforts will involve either replacing the media or attempting to correct significant, demonstrable

program or documentation errors or Security Vulnerabilities. If Tait cannot correct the defect within a reasonable time, then at Tait option, Tait will replace the defective Software with functionally equivalent Software, license to Licensee substitute Software which will accomplish the same objective, or terminate the license and refund Licensee's paid license fee. If Tait investigation of the perceived defect reveals that no such defect in fact exists, Tait may recover its costs in respect of such investigation from Licensee.

6.3. Tait disclaims any and all other warranties relating to the Software or Documentation other than the express warranties set forth in this Section 6. Warranties in Section 6 are in lieu of all other warranties whether express or implied, oral or written, and including without limitation any and all implied warranties of condition, title, non-infringement, merchantability, or fitness for a particular purpose or use by Licensee (whether Tait knows, has reason to know, has been advised of, or is otherwise aware of any such purpose or use), whether arising by law, by reason of custom or usage of trade, or by course of dealing. In addition, Tait disclaims any warranty to any person other than Licensee with respect to the Software or Documentation.

Section 7 TRANSFERS

7.1. Licensee will not transfer the Software or Documentation to any third party without specific prior written consent from Tait. Tait may withhold such consent or at its own discretion make the consent conditional upon the transferee paying applicable license fees and agreeing to be bound by this Agreement.

7.2. In the case of a value-added reseller or distributor of Tait Designated Products, the consent referred to in Section 7.1 may be contained in a Tait Reseller or Tait Distributor Agreement.

7.3. If the Designated Products are Tait vehicle-mounted mobile products or hand-carried portable radio products and Licensee transfers ownership of the Tait mobile or portable radio products to a third party, Licensee may assign its right to use the Software which is embedded in or furnished for use with the radio products and the related Documentation; provided that Licensee transfers all copies of the Software and Documentation to the transferee.

7.4. For the avoidance of any doubt, Section 7.3 excludes TaitNet Infrastructure, or the products listed at any time under network products at: <http://www.taitradio.com>.

7.5. If Licensee, as a contractor or subcontractor (integrator), is purchasing Tait Designated Products and licensing Software not for its own internal use but for end use only by a Customer, the Licensee may transfer such Software, but only if a) Licensee transfers all copies of such Software and the related Documentation to the transferee and b) Licensee has first obtained from its Customer (and, if Licensee is acting as a subcontractor, from the interim transferee(s) and from the ultimate end user sub license) an enforceable sublicense agreement that prohibits any other transfer and that contains restrictions substantially identical to the terms set forth in this Software License Agree-

ment. Except as stated in the foregoing, Licensee and any transferee(s) authorized by this Section may not otherwise transfer or make available any Tait Software to any third party nor permit any party to do so. Licensee will, on request, make available evidence reasonably satisfactory to Tait demonstrating compliance with all the foregoing.

Section 8 TERM AND TERMINATION

8.1. Licensee's right to use the Software and Documentation will commence when the Designated Products are supplied by Tait to Licensee and will continue for the life of the Designated Products with which or for which the Software and Documentation are supplied, unless Licensee breaches this Agreement, in which case this Agreement and Licensee's right to use the Software and Documentation may be terminated immediately upon notice by Tait.

8.2. Within thirty (30) days after termination of this Agreement, Licensee must certify in writing to Tait that all copies of the Software have been removed or deleted from the Designated Products and that all copies of the Software and Documentation have been returned to Tait or destroyed by Licensee and are no longer in use by Licensee.

8.3. Licensee acknowledges that Tait made a considerable investment of resources in the development, marketing, and distribution of the Software and Documentation and that Licensee's breach of this Agreement will result in irreparable harm to Tait for which monetary damages would be inadequate. If Licensee breaches this Agreement, Tait may terminate this Agreement and be entitled to all available remedies at law or in equity including immediate injunctive relief and repossession of all non-embedded Software and associated Documentation. Licensee shall pay all Tait costs (on an indemnity basis) for the enforcement of the terms of this Agreement.

Section 9 CONFIDENTIALITY

Licensee acknowledges that the Software and Documentation contain proprietary and Confidential Information valuable to Tait and are Tait trade secrets, and Licensee agrees to respect the confidentiality of the information contained in the Software and Documentation.

Section 10 LIMITATION OF LIABILITY

10.1. In no circumstances shall Tait be under any liability to Licensee, or any other person whatsoever, whether in Tort (including negligence), Contract (except as expressly provided in this Agreement), Equity, under any Statute, or otherwise at law for any losses or damages whether general, special, exemplary, punitive, direct, indirect, or consequential arising out of or in connection with any use or inability of using the Software.

10.2. Licensee's sole remedy against Tait will be limited to breach of contract and Tait sole and total liability for any such claim shall be limited at the option of Tait to the repair or replacement of the Software or the refund of the purchase price of the Software.

Section 11 GENERAL

11.1. COPYRIGHT NOTICES. The existence of a copyright notice on the Software will not be

construed as an admission or presumption of publication of the Software or public disclosure of any trade secrets associated with the Software.

11.2. COMPLIANCE WITH LAWS. Licensee acknowledges that the Software may be subject to the laws and regulations of the jurisdiction covering the supply of the Designated Products and will comply with all applicable laws and regulations, including export laws and regulations, of that country.

11.3. ASSIGNMENTS AND SUBCONTRACTING. Tait may assign its rights or subcontract its obligations under this Agreement, or encumber or sell its rights in any Software, without prior notice to, or consent of, Licensee.

11.4. GOVERNING LAW. This Agreement shall be subject to and construed in accordance with New Zealand law and disputes between the parties concerning the provisions hereof shall be determined by the New Zealand Courts of Law. Provided however Tait may at its election bring proceedings for breach of the terms hereof or for the enforcement of any judgment in relation to a breach of the terms hereof in any jurisdiction Tait considers fit for the purpose of ensuring compliance with the terms hereof or obtaining relief for breach of the terms hereof.

11.5. THIRD-PARTY BENEFICIARIES. This Agreement is entered into solely for the benefit of Tait and Licensee. No third party has the right to make any claim or assert any right under this Agreement, and no third party is deemed a beneficiary of this Agreement. Notwithstanding the foregoing, any licensor or supplier of third-party software included in the Software will be a direct and intended third-party beneficiary of this Agreement.

11.6. SURVIVAL. Sections 4, 5, 6.3, 7, 8, 9, 10, and 11 survive the termination of this Agreement.

11.7. ORDER OF PRECEDENCE. In the event of inconsistencies between this Agreement and any other Agreement between the parties, the parties agree that, with respect to the specific subject matter of this Agreement, this Agreement prevails.

11.8. SECURITY. Tait uses reasonable means in the design and writing of its own Software and the acquisition of third-party Software in order to limit Security Vulnerabilities. While no software can be guaranteed to be free from Security Vulnerabilities, if a Security Vulnerability is discovered, Tait will take the steps specified in Section 6 of this Agreement.

11.9. SEVERABILITY. In the event that any part or parts of this Agreement shall be held illegal or null and void by any court or administrative body of competent jurisdiction, such determination shall not affect the remaining terms which shall remain in full force and effect as if such part or parts held to be illegal or void had not been included in this Agreement. Tait may replace the invalid or unenforceable provision with a valid and enforceable provision that achieves the original intent and economic effect of this Agreement.

11.10. CONSUMER GUARANTEES. Licensee acknowledges that the licenses supplied in terms of this agreement are supplied to Licensee

in business, and that the guarantees and other provisions of prevailing consumer protection legislation shall not apply.

11.11. WHOLE AGREEMENT. Licensee acknowledges that it has read this Agreement, understands it and agrees to be bound by its terms and conditions. Licensee also agrees that, subject only to the express terms of any other agreement between Tait and Licensee to the contrary, this is the complete and exclusive statement of the Agreement between it and Tait in relation to the Software. This Agreement supersedes any proposal or prior agreement, oral or written, and any other communications between Licensee and Tait relating to the Software and the Designated Products.