

**TECHNIK**



**How to connect up,  
build-in, set up, use and look  
after your oven**

---

## Table of Contents

---

	Page		Page
<b>Important Information</b>		<b>Cleaning and Care</b>	
<input type="checkbox"/> Notes on disposal	3	<input type="checkbox"/> Important cleaning basics	18
<input type="checkbox"/> Before connecting your new appliance	3	<input type="checkbox"/> Enamel and glass	18
<input type="checkbox"/> Appliance safety considerations	4	<input type="checkbox"/> Stainless steel front	18
<b>Introducing: Your New Oven</b>		<input type="checkbox"/> Oven interior	18
<input type="checkbox"/> Control panel overview	5	<input type="checkbox"/> Removing/installing the oven door	19
<input type="checkbox"/> Accessories	6	<input type="checkbox"/> Oven light	19
<input type="checkbox"/> Shelf positions	6	<input type="checkbox"/> Removing shelf railings – Mini oven	19
<b>Before Using Your Appliance for the First Time</b>		<b>Service and Repair Information</b>	20
<input type="checkbox"/> Setting the time of day	7	<b>Trouble-shooting Guide</b>	21
<input type="checkbox"/> Preliminary cleaning	7	<b>Assembly Instructions</b>	
<input type="checkbox"/> Initial burn-in	7	<input type="checkbox"/> For the installer and kitchen expert	22
<b>Electronic Timer</b>		<input type="checkbox"/> Installation of the built-in oven	23
<input type="checkbox"/> Alarm function	8		
<input type="checkbox"/> Automatic OFF	9		
<input type="checkbox"/> Automatic ON and OFF	10		
<b>Baking Roasting and Grilling</b>			
<input type="checkbox"/> Definition of Oven Features	11		
<input type="checkbox"/> Switching the oven ON and OFF	12		
<input type="checkbox"/> Baking – Main oven	13		
<input type="checkbox"/> Roasting – Main oven	14		
<input type="checkbox"/> Roasting – Mini oven	15		
<b>Grilling – Mini oven</b>	15		
<b>Cooking Tips and Helpful Hints</b>	16		
<b>Defrosting and Cooking – Main oven</b>	17		

---

## Important Information

---

### Notes on disposal

- ❑ Old appliances still have some residual value. An environment-friendly method of disposal will ensure that valuable raw materials can be recovered and used again.  
Before you dispose of your old appliance, make sure that it has been rendered inoperable.
- ❑ Your new appliance was protected by suitable packaging while it was on its way to you. All materials used for this purpose are environment-friendly and suitable for recycling. Please make a contribution to protecting the environment by disposing of the packaging appropriately.  
Up-to-date information concerning options for disposing of your old appliance and the packaging from the new one can be obtained from your retailer or local government office.

### Before connecting your new appliance


- ❑ Before using your new appliance, please read these Instructions for use carefully. They contain important information concerning your personal safety as well as on use and care of the appliance.
- ❑ The Instructions for Use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance.
- ❑ Please keep the operating and installation instructions in a safe place; this important documentation may also be of use to a possible subsequent owner.
- ❑ Do not use the appliance if it is damaged in any way.
- ❑ Installation and connection of the appliance should be performed according to the instructions and connection diagram provided, and should be entrusted to a competent electrician. In the event of a damage that occurs as a result of improper connection, the warranty will be void.
- ❑ Our appliances meet the applicable safety regulations for electrical appliances. Repairs must only be performed by service engineers trained by the manufacturer. Repairs carried out by incompetent service agents can make the appliance unsafe.

---


## Important Information

---

### Appliance safety considerations


- The appliance should only be used for the preparation of food.
- The surfaces of heating and cooking appliances get hot during operation. The interior oven walls and the heating elements get extremely hot. Always keep children away from the appliance.
- Never leave the appliance unattended when cooking with fat or oil. They can catch fire if overheated.
- Clean the oven regularly. Fatty or oily remnants could ignite when the oven is switched on.
- Make sure that the power cord does not get caught in the hot oven door. The plastic insulation could melt.
- In the case of a defect, switch off at the mains.
- Do not store combustible items in the oven. They could ignite if the oven is switched on accidentally.
- Do not clean the oven with steam or high-pressure cleaners.
- If using hot air , do not place greaseproof paper loosely in the oven (e.g. when heating the oven). The hot-air fan could draw in the paper which may damage the heater and fan.
- Do not insert a baking sheet at the bottom of the oven, or cover it with aluminium foil, because a heat build-up would result. Roasting and baking times would change, and the enamel would be damaged.
- Never pour water directly into the hot oven. Damage to the enamel could result.
- Dripping juices may leave spots on the oven lining. Always place a baking tray below to prevent this from happening.
- Never stand or sit on the open oven door.
- The oven door must close properly. Keep the door sealing surfaces clean.

# Introducing: Your new Oven

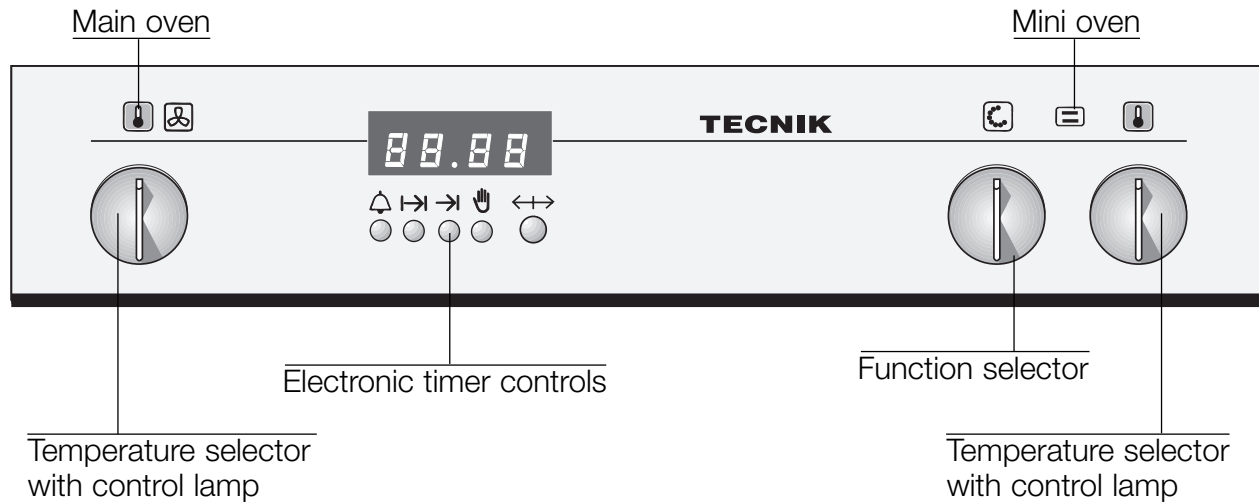



## Main oven
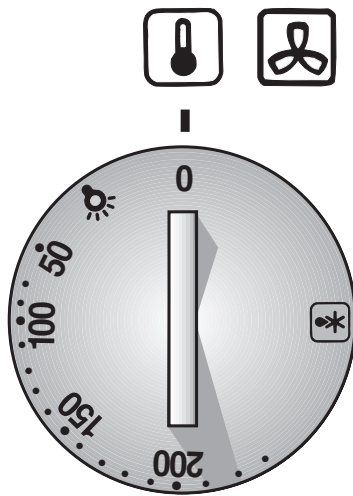
### Temperature selector (Hot air)




#### Settings:



-  Oven light
- 50–200** Hot air temperature in °C
-  "Defrost" setting

## Mini oven

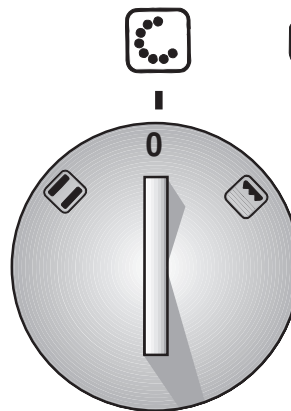
### Function selector



#### Settings:

-  Conventional top and bottom heat
-  Radiant grilling

### Temperature selector

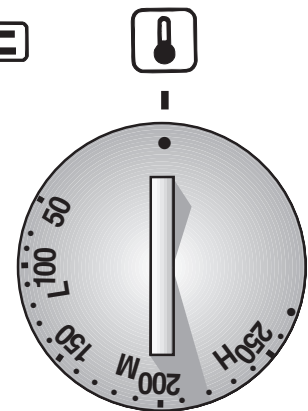

#### Settings:

- 50–250** temperature in °C
- L, M, H** temperature for radiant grilling

---


## Introducing: Your new Oven

---


### Accessories

Your oven comes with the following accessories:

#### Universal baking pan / shelf

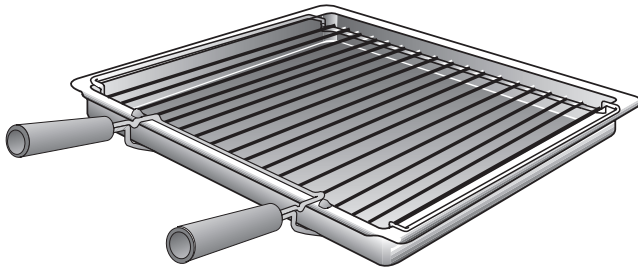

#### wire shelf

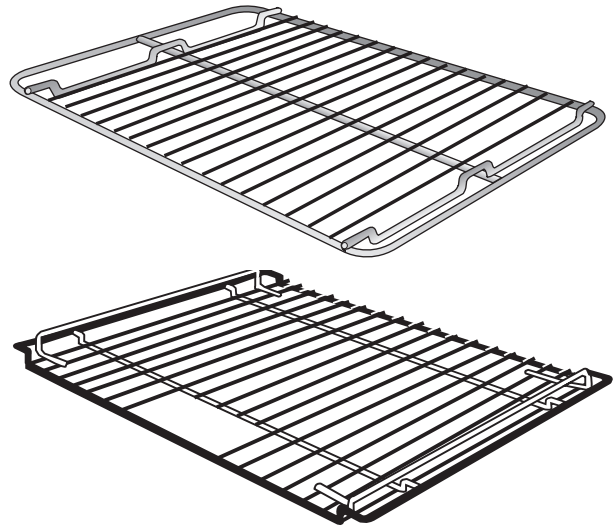


Additional accessories are available from your dealer.

---

### Shelf positions

Your oven features 3 shelf positions. The shelf positions are counted from bottom to top. The numbers are marked in the oven.

#### Mini oven

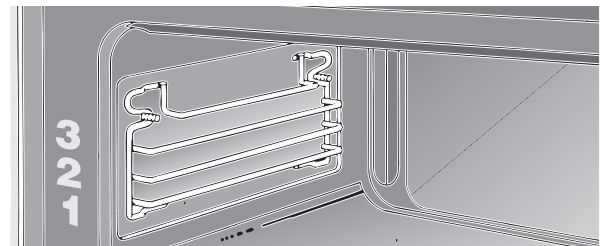

Your oven features 4 shelf positions. The shelf positions are counted from bottom to top. The numbers are marked in the oven.

**When using hot air do not use shelf »2«,** in order not to block air circulation.

#### Main oven



---




## Before Using Your Appliance for the First Time

---


### Time of day

- ❑ Before you use your appliance for the first time, it is necessary to set the current time on the electronic timer.
- ❑ After connecting to the mains, or after a power failure, the display 0.00 will blink.

#### To set the time of day:

Press the  and  button simultaneously, while turning the rotary knob  to set the current time of day (example: 15.00 hrs., see illustration).

Note: Any incorrect settings that were made accidentally must be reset to zero before setting the time of day (see the section “Electronic timer”).

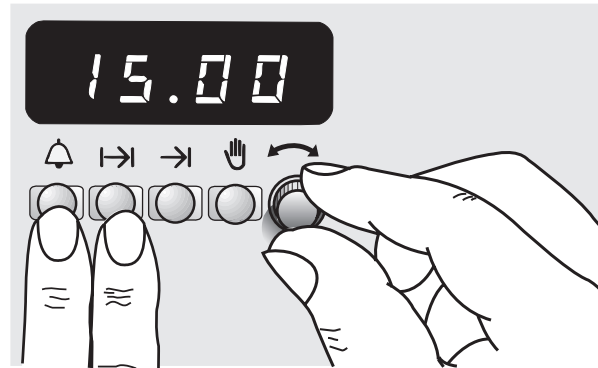

---

### Preliminary cleaning:

1. Clean the appliance exterior with a soft damp cloth.
2. Clean the oven interior and the accessories with a hot detergent solution.

### Initial burn-in


1. Heat the empty oven for approx. 30 minutes.  
Select heat for the main and mini oven at a setting of 240 °C.  
During the initial burn-in phase, please open the kitchen windows to dissipate unpleasant odours.

---

## Electronic Timer


---

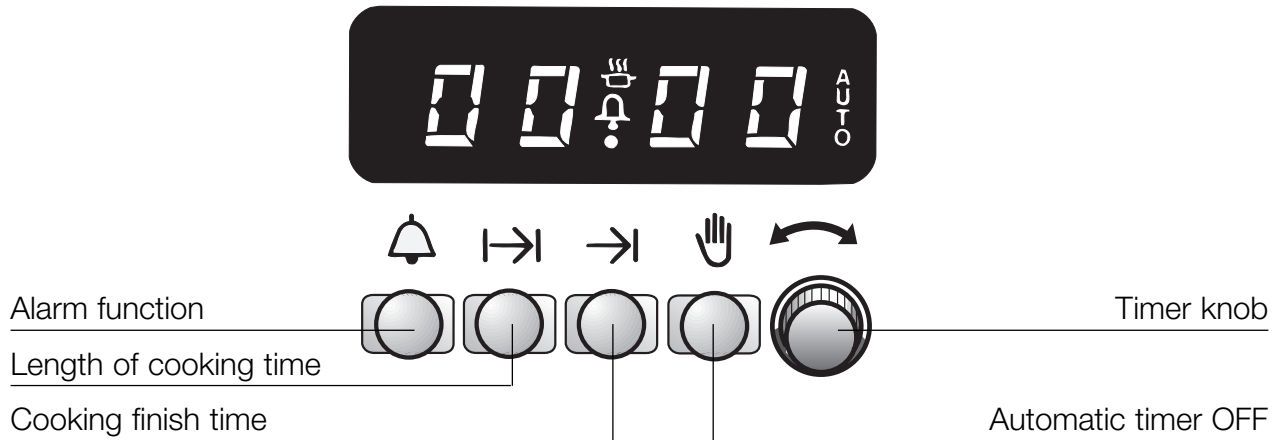


### Operating the timer




- The timer knob is designed for one-hand operation. To use this function, the required cooking time must be set by turning the timer knob within 4 seconds of pressing the appropriate function button.
- Setting the time of day:**  
Follow the steps described in the preceding section "Before Using Your Appliance for the First Time ...".

#### Alarm function:

Press the  button and set the length of time required for the alarm. (The example in the illustration shows a time of 5 minutes.) After setting, the time of day is displayed again.

- Press the  button to display the time remaining.
- After the time has elapsed, an alarm signal sounds. To switch off the alarm, briefly press the  button.
- The settings can be corrected at any time.
- To cancel a setting before the time has elapsed:  
Press the  button and set the time in the display to 0.00.

#### Setting the timer:

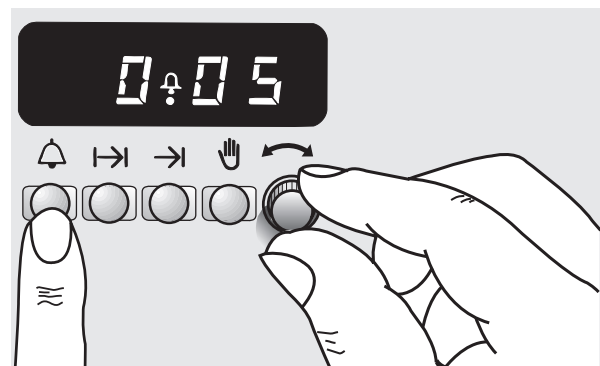




### Automatic timer for the main oven

- ❑ You can use the automatic timer functions to switch the oven ON or OFF.

#### Automatic OFF:

- ❑ If you want cooking to start immediately, simply use the timer knob to set the required total cooking time.
1. Set the oven to the required temperature.
  2. Press the I→I button and set the total cooking time (see the example in the illustration to the right, showing 1 hour and 30 minutes).  
After setting the display shows the time of day and indicates »AUTO«.
  - ❑ The oven is now operating.
  - ❑ After the set cooking time, a signal sounds and the oven is automatically switched OFF.  
To turn the signal off, briefly press the I→I button.
  3. Turn the oven selector switch to the 0 position.
  4. The »AUTO« symbol blinks.  
**Important:** It must be switched OFF by pressing the ⏸ button.

#### Setting the length of cooking time

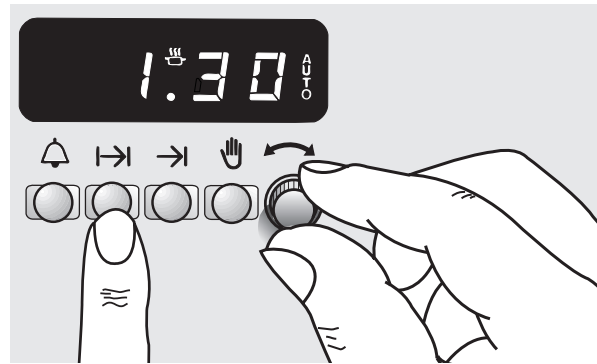

---


## Electronic Timer

---


### Automatic ON and OFF:

1. Set the oven to the required temperature.
  2. Press the I→I button and set the total cooking time (see the example in the illustration right, showing 1 hour and 30 minutes).
  3. Press the →I button and set the cooking finish time (the example in the illustration shows 12.30 hrs.).  
After setting the display shows the time of day and indicates »AUTO«.
- The oven cooling fan will start immediately.
  - At the pre-set time, the oven will be automatically switched ON.
  - The settings can be corrected at any time.
  - When the pre-set cooking finish time is reached, a signal sounds and the oven is automatically switched OFF.  
To turn the signal off, briefly press the →I button.
4. Turn the oven selector switch to the 0 position.
  5. The »AUTO« symbol blinks.  
**Important:** It must be switched OFF by pressing the ⏸ button.

### Setting the length of cooking time

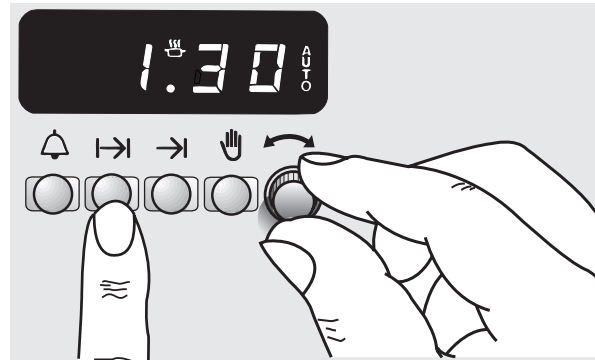

### Setting the end of cooking time

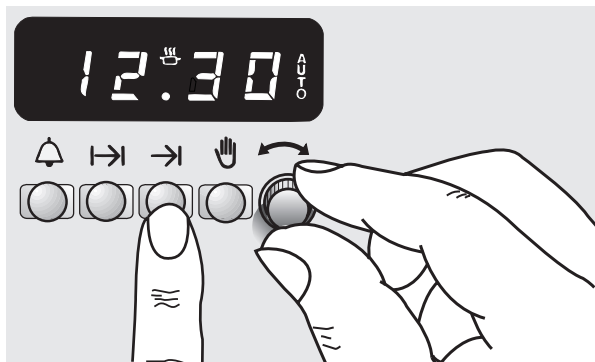

---

### Please note:

- The automatic timer is ideal for dishes that require little attention during cooking.
- Both the alarm and the automatic timer may be programmed up to 24 hours in advance.
- The current settings can always be checked by pressing the appropriate function button.
- To cancel a setting before the timer has elapsed:  
Press the I→I button and reset the time in the display to 0.00.

---

## Definition of Oven Features

---

### Mini oven

**Conventional cooking** \_\_\_\_\_   
(top and bottom heat)

The food being cooked is exposed to heat radiation from heating elements located at the top and bottom of the oven cavity.

Cooking is possible on one shelf level only.

Advantages:

- Baking of cake with moist filling, pizza, quiche

**Radiant grilling** \_\_\_\_\_ 

The food being cooked is exposed to heat radiation from the heating element at the top of the oven cavity.

Advantages:


- particularly suitable for flat, small cuts of meat, i.e., steaks and sausages, fish, vegetables and toast.

---

### Main oven

**Hot air** \_\_\_\_\_ 

Advantages of hot air:

- low soiling of oven interior
- cooking on up to 3 shelf levels at once is possible
- shorter preheating times
- low oven temperatures
- gentle defrosting 
- bread baking

**Hot air grilling** \_\_\_\_\_ 

A system by which foods, that would normally be grilled by direct heat from an element, are cooked using hot air.

Temperatures between 180 to 190 °C are selected and the food is placed on the wire shelf.

Advantages Hot-air grilling:

- ideal for steaks, sausages, chicken joints, fish, kebabs and chops
- no turning of food is required
- three shelves of 'grilled' food can be prepared at one time
- very convenient

---

## Switching the Oven ON and OFF


---

### Mini oven:

Before switching on your oven, you should decide which heating system you wish to use.

#### Switching the oven ON:

1. Use the function selector to determine the desired system.
  2. Set the temperature control knob to the desired temperature.
- The selected temperature will be controlled automatically.
  - The red oven temperature control lamp illuminates when the oven is first switched on, and extinguishes when the required temperature has been reached.

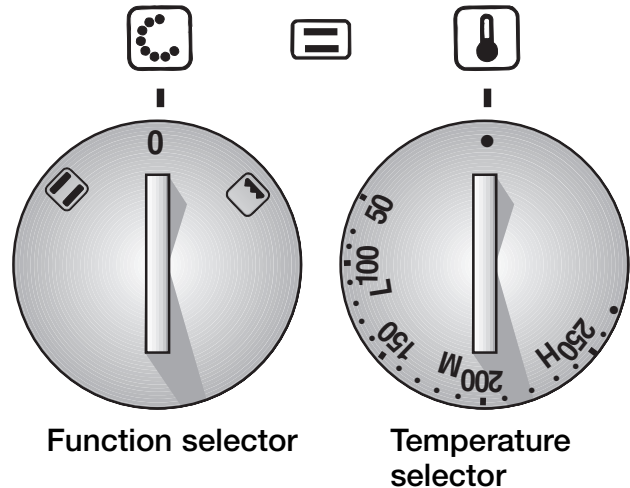


#### Switching the oven OFF:

To switch the oven OFF, turn both the temperature selector and function selector to the »0« position.

---

### Main oven:


1. Set the temperature control knob to the desired temperature.
- The selected temperature will be controlled automatically.
  - The red oven temperature control lamp illuminates when the oven is first switched on, and extinguishes when the required temperature has been reached.

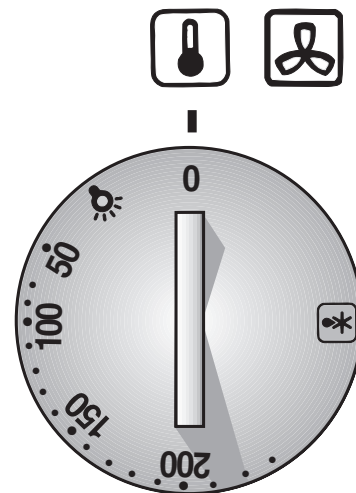

Temperature selector

### Using baking tins

- Always place baking tins in the centre of the wire shelf.**
- The wire shelf may be turned upside down to accommodate different size tins.
- If the cake bottom gets too dark:**  
Check the shelf level. Shorten the baking time, and possibly use a lower baking temperature.
- If the cake bottom stays too light:**  
Check the shelf level. Increase the baking time, select a lower temperature, or use a dark metal baking tin.
- You can use baking tins of any material and having any colour, as long as they are oven-proof.
- Do not place baking tins or high cakes too close to the rear oven wall.

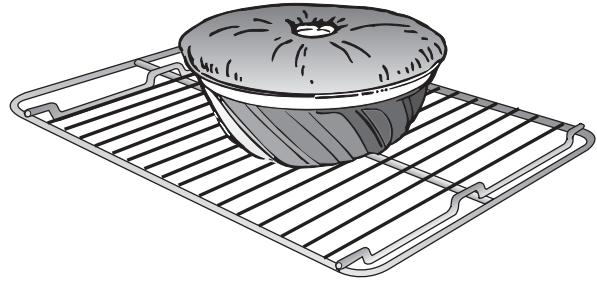

### Notes:

- You can influence the degree of browning by changing the temperature setting.
- If a cake collapses after removing it from the oven, use less liquid on your next attempt, consider using a longer baking time, or use a slightly lower temperature setting.

---


## Roasting – Main oven

---

### Roasting with hot air

#### Notes:

- Meat roasted using the hot air system will brown on all sides and stay moist without adding additional fat.
- Choose cuts of meat that weigh 150 grams (5oz) or more.
- Place the shelf on top of the universal pan.
- Place the meat on the shelf, season if desired.
- Slide the pan and shelf into the oven on the same shelf position.
- No pre-heating is required. Save energy by putting the roast into the cold oven.
- Use a hot air temperature of 160 °C.

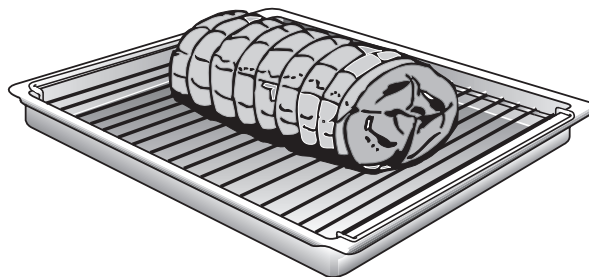

#### Casseroling or pot-roasting in a covered dish:

- Some meats should be prepared in liquid in a covered casserole. This type of cooking is suitable for less tender cuts of meat.
- Place the casserole on the wire shelf at a suitable shelf position.

#### Cooking tips:

- Only use ovenproof cookware.
- Extra large Turkeys and joints can be placed directly in the universal pan and not on the wire shelf.
- Cover large Turkeys with foil during cooking. Remove foil during the last hour.

---

## Grilling – Main oven

---

### Hot-air grilling

Use this method for small cuts of meat – steaks, chops, sausages, bacon, chicken joints and fish.

- Use the shelf and universal pan together.
- Season meat as required.
- Place on shelf.
- Do not turn food over – the hot air will circulate around the food cooking all sides.
- Use a temperature of 180–190 °C.

---

## Roasting – Mini oven

---

### Roasting with Conventional heat

- Follow the steps above. With fatty meat 125 – 250 ml (4 – 8floz) of water can be poured into the roasting pan.
- Baste the meat if desired.
- Place in a cold oven to save energy or pre-heat if desired.

### Casseroles or pot-roasting in a covered dish:

- Some meats should be prepared in liquid in a covered casserole. This type of cooking is suitable for less tender cuts of meat.
- Place the casserole on the wire shelf at a suitable shelf position.

### Cooking tips:

- Only use ovenproof cookware.
- Extra large Turkeys and joints can be placed directly in the universal pan and not on the wire shelf.
- Cover large Turkeys with foil during cooking. Remove foil during the last hour.

---

## Grilling – Mini oven

---

### Radiant grilling


Used for small cuts of meat or poultry.

- Exercise CAUTION when grilling.**
- Always keep children away from the oven when it is in use.**

### Notes on grilling:

- Always close the oven door when grilling.
- The grilling temperatures are variable.
- Always use the grill and universal pan together.
- Turn the food after approx. two-thirds of the grilling time has elapsed.
- Lightly brush the wire shelf with oil and baste the food if desired.

- Always place the food to be grilled in the centre of the wire shelf.
- If the heating element switches off automatically, the overheating protection was activated. The element will be reactivated after a short period of time.

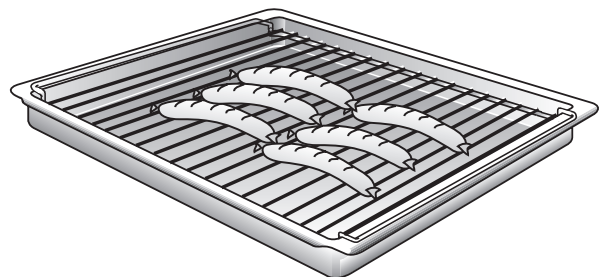

---

## Cooking Tips and Helpful Hints

---

### When cooking conventionally:

- The bottom of a cake baked on a baking tray stays too light.

Ensure that no other pans or trays are in the oven. Lower shelf position. Place tin on wire shelf.

- The cake gets too dry.

Select a slightly higher oven temperature. Cook for shorter period of time.

- The inside of the cake remains spongy or doughy, or meat stays raw in the centre.

Use a slightly lower temperature and cook for a longer time. Reduce the liquid in a cake mixture.

### When cooking with hot air:

- Cakes baked in a tin gets too dark at the back.

Avoid blocking the air vents at the rear wall of the oven with the cake tins.

- Cakes remain doughy and collapse when removed from the oven.

Reduce the temperature for deep cakes. Bake for a longer period of time. Test with a skewer before removing.

- Uneven browning of small cakes or biscuits.

Avoid placing trays too close to the back wall. Space food on the tray.

- With very moist food steam develops and condenses on the oven door and drips onto the floor.

Several brief periods of opening the oven door during baking (1 or 2 times, more frequently with longer roasting times) will aid in venting the water vapour in the oven and reduce condensation.

---

### To save energy:

- Preheat only if expressly required by the recipe.
- Dark baking tins have a higher degree of heat absorption.

- Residual heat:** In the case of longer baking times, you can switch off the oven 5 – 10 minutes before the full baking time has elapsed.




### Defrosting and cooking using the hot air cooking option

#### Important heating system information:

- For defrosting and cooking of frozen or deep-frozen foods, use only the hot-air heating system.
- With all deep-frozen foods, follow the food manufactures instructions on the packaging.
- If **frozen meat** is placed in the oven, the defrosting time must be added to the required cooking time.
- Always defrost **deep-frozen poultry** before cooking.
- For cooking **deep-frozen fish**, use the same temperatures as for fresh fish.
- Deep-frozen ready-to-eat meals** in aluminium dishes may be placed into the oven several at a time.
- Deep-frozen vegetables** (i.e., when cooking complete meals) should be cooked in a covered pot together with the roast. Use only approximately half of the liquid specified in the recipe. Use fat only for adding flavour.

#### Gentle defrosting:

Recommended for delicate pastries only (i.e., whipped-cream gateaus).

- Turn the hot air selector switch to the  position. Dependent on size and type of the baked goods, defrost 25 – 45 minutes, take out of the oven and allow to stand 30 – 45 minutes.
- With smaller amounts (pastries), the defrosting time is reduced to 15 – 20 minutes and the subsequent standing time to 10 – 15 minutes.

#### Standard defrosting of various foods:

##### Shelf positions:

**With 1 baking tray:** shelf position **3**

**With 2 baking trays:** shelf positions **1** and **3**

- All stated times** are approximate guidelines that vary with the shape and volume of deep-frozen products.
- Raw deep-frozen products or foods from a freezer** always defrost at 50 °C. Higher defrosting temperatures may cause the food to dry out.
- Defrost **deep-frozen meals packed in aluminium foil or closed aluminium containers** at a setting of 130 – 140 °C.
- Place deep-frozen meals **packed in plastic bags or plastic containers** in a pot filled with water. Cover the pot and defrost at a setting of 130 – 140 °C.  
**Attention:** Pot handles must be oven-proof.
- Defrost and warm **deep-frozen baked goods** at 100 – 140 °C. Brush bread, rolls or yeast pastry lightly with water to give a better crust.
- Defrost **dry deep-frozen yeast cakes** at 160 – 170 °C for 20 – 30 minutes.
- Defrost **moist deep-frozen yeast cakes** (with fruit topping) at 160 – 170 °C for 30 – 50 minutes after wrapping in aluminium foil to prevent cake from drying out.
- Defrost and toast **deep-frozen toast** (with topping) at 160 – 170 °C for about 20 minutes.

---

## Cleaning and Care

---

### Important cleaning basics:

- For cleaning, do not use abrasives, corrosive cleaners, aerosol cleaners or sharp objects.
  - Do not scratch off burnt-on food residues, but soak off them with a damp cloth and washing up liquid.
  - Oven cleaners must not be used on aluminium or plastic parts.
- 

### Stainless steel front:


- When using commercially available Stainless Steel cleaning agents, avoid cleaning any lettering, as this can become damaged!
  - Do not use any scouring pads or abrasive cleaners.
  - Use commercially available detergents applied with a soft, moistened cloth or a chamois.
- 

### Enamel and glass:

- Use hot detergent suds for cleaning.
  - Remove the oven door before cleaning the enamel surface.
- 

### Oven interior:

- Clean the oven after each use, especially after roasting or grilling. Food remnants burn in when the oven is reheated.  
The baked in remnants are very difficult to remove once burnt in.
- You can reduce the degree of soiling by greater use of the circotherm.

 Do not clean the warm oven with any of the cleaning products specifically designed for this purpose.

- When baking very moist cake (e.g. rich fruit cake) that could drip over the top of the tin, place on the roasting pan or your own baking sheet.
- When roasting, ensure that the meat juices do not splash on to the base of the oven.
- Clean the oven before soiling becomes too heavy. Wash out the oven cavity with hot detergent suds. Leave the door open until the interior has dried.


## Cleaning and Care

### Manual cleaning steps:

**Note:** To make cleaning more convenient, the oven offers you the following options:


### Removing the oven door:

1. Fully open the oven door.
2. Move the catch levers on the right and left-hand sides to the fully open position.
3. Placing the door at an upward angle toward you, grasp the door with both hands and lift it out of the hinges toward you.

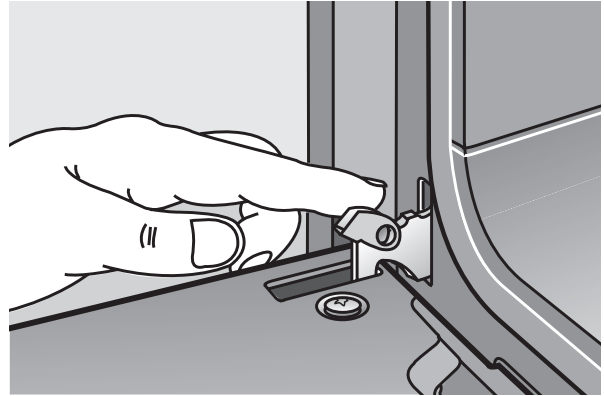


### Replacing the oven door:

1. Set both hinges into their respective receptacles on the left and right, and swing the oven door downward.
2. Close the catch levers on the left and right.
3. Close the oven door.

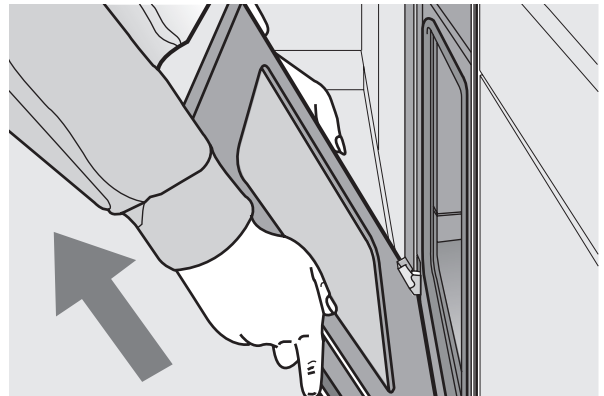

### Switch on the oven light

#### Main oven:

- Turn the temperature selector to the  position.


#### Mini oven:

- Set the function selector to a random position.

### Removing the shelf railings

#### Mini oven:

- On both left and right sides, remove two milled screws each.
- Carefully remove the shelf railings.

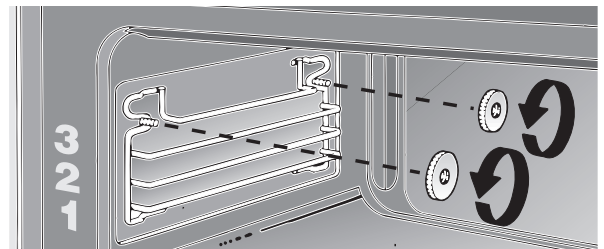

---

## Service and Repair Information

---

In the event of problems or repairs that you cannot solve or perform yourself, our service company will be happy to help. Check the service directory for the service facility in your area.

You can find this information on the appliance's nameplate. The nameplate is located on the appliance, behind the oven door, on the left bottom edge of the oven.

### Replacing the oven light:

**Caution: Unplug the appliance or remove the fuse!**

#### Mini oven:

1. To prevent damage, place a tea towel into the cold oven.
2. Remove the glass cover by inserting a knife or similar object between the glass and the frame.
3. Replace the lamp.
  - Type: Incandescent bulb E 14, 230–240 V, 25 W, heat-resistant to 300 °C.
  - You may obtain this bulb from your customer service or from your appliance dealer.

#### Main oven:




1. To prevent damage, place a tea towel into the cold oven.
2. Unscrew the lamp cover by turning it anti-clockwise.
3. Replace the lamp.
  - Type: Incandescent bulb E 14, 220–240 V, 40 W, heat-resistant to 300 °C.
  - You may obtain this bulb from your customer service or from your appliance dealer.

### Replacing the oven door seal:

1. Remove the defective oven door seal by simply unhooking it. You may obtain the new oven door seal from our customer service.

**Caution:** Calling customer service because of an operator error can be very costly! In the event of a customer service request, please have the following information handy:

<b>E-Number</b>	<b>FD</b>
-----------------	-----------

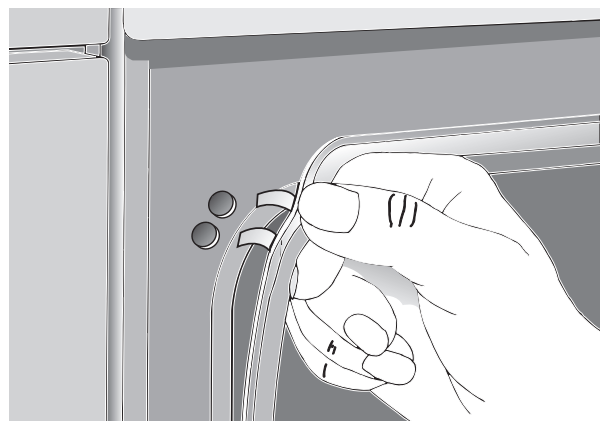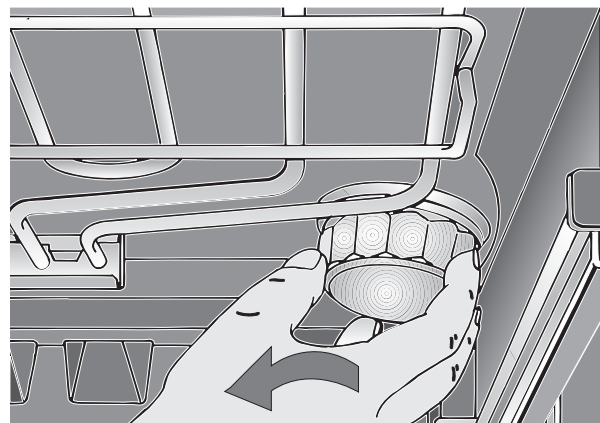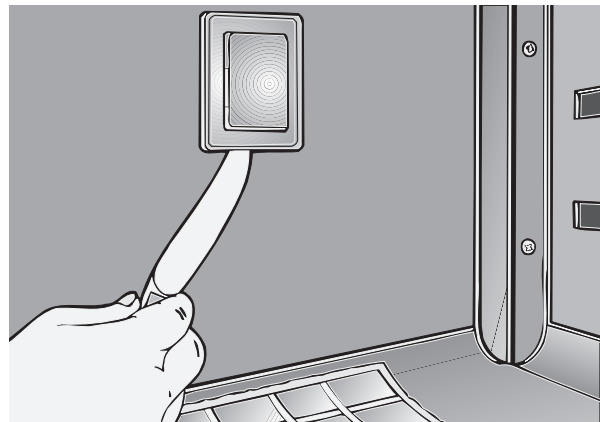
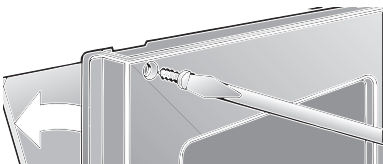


# Trouble-shooting Guide

**Calling the customer service is not always really necessary. In some cases, you can remedy the situation yourself. The following table may contain some helpful tips.**

**Important general safety guidelines:**

Service or repair work on the electronic components may only be performed by a qualified expert. Without exception, prior to starting such repairs, the appliance must be disconnected from the mains. This may be accomplished by tripping the automatic fuse or by removing the fuse from the fuse box that controls your flat or apartment.

Problem	Possible cause	Remedy
There is a general failure of all electrical functions, i.e., the control lamps have suddenly ceased to function.	Defective fuse.	Check the fuse in the fuse box, and replace if required.
Liquids or thin cake mixes are distributed at a visibly uneven thickness.	The appliance has not been placed or installed plumb-and-level.	Level the appliance using the leveling feet, or check the installation.
The electronic timer display suddenly shows a blinking 0.00.	The power supply was briefly interrupted.	Reset the time of day.
The oven suddenly stop functioning.	The electronic timer is set to an automatic timing cycle.	Set the timer for operation without automatic timing. Press the  key.
The oven door window pane fogs up.	This is a normal condition. It is caused by the occurrence of temperature differences.	Heat the oven at 100 °C for about 5 minutes.
A considerable amount of water condensation occurs in the oven.	This condition is normal with moist cakes or with very large roasts.	During baking or roasting, open the oven briefly several times; wipe up condensation after use.
After prolonged use, the oven window panes are soiled from the inside.	This kind of soiling is normal. 	<b>Remove the oven door</b> , and put aside with the handle facing upward. For cleaning, remove the two screws at the door handle moulding with a screwdriver.

---


## Assembly Instructions

---

### For the installer and kitchen expert!

#### Important installation notes:

- Properly dispose of **packaging materials**.
- Do not use **oven door handle** for transporting or handling the unit during installation.
- WARNING:** Connection and first start of the appliance may only be performed by an authorised specialist.
- Connection must be made using an H05VV-F mains connection cable.
- Nominal connected loading, nominal voltage and model number of the appliance:**  
see the rating plate, located behind the oven door, fixed to the lower left facing edge of the oven.
- The unit's nameplate is located at on the right sidewall of the unit.**
- Electrical safety** of the appliance can be ensured only if the equipment earth in the building installation has been installed according to regulations.
- On the installation side a isolating device shall be provided.  
Any switch with a contact gap exceeding 3 mm may be considered a separating device.  
Other examples are LS switches, fuses and contactors.
- In the case of repairs** interrupt all power connections to the unit.
- Connection diagram**





### Kitchen furniture

Oven housing units from virtually all lines of kitchen furniture are suitable for installing the built-in oven. However, the veneers or plastic laminates on the housing unit must be applied with heat-resistant glue (90 °C). If plastic laminate or glue are not sufficiently heat-resistant, warping, bubbling or detachment of the finish may result.

## Assembly Instructions

### Installation of the built-in oven

- ❑ To burn-in the insulation, heat up the oven prior to installing the unit.
- ❑ Push the built-in oven into the housing unit and align the unit until it is in a **level position**.
- ❑ Open the oven door and, using one screw on each side, fasten the built-in oven to the side strips of the housing unit (see illustration).  
The two screws (supplied with the built-in oven) must be started slightly outward.
- ❑ Verify that the built-in oven is positioned securely and in a **level position**, and that the required installation dimensions have been maintained.
- ❑ The properly installed appliance must be covered on all sides in such a fashion that not even components with rough insulation are exposed to the touch. The cover must be removable with tools only.

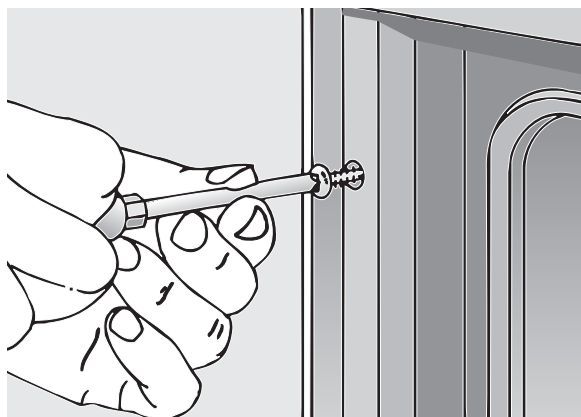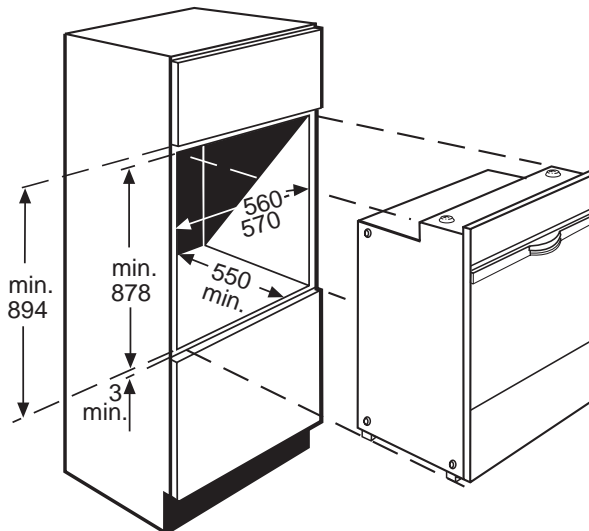

# **Your TECNIK Guarantee** **(READ CAREFULLY)**

Your new appliance is guaranteed for 12 months against electrical/mechanical breakdown due to faulty manufacture.

This guarantee does not apply to:

- a) Any faults which occur due to accidental damage, installation or misuse of the appliance.
- b) Repair, or interference with, the appliance by any person not authorised by the manufacturer to carry out service.
- c) Any parts which are fitted to the appliance which are not manufacturer's parts.
- d) Non-domestic use of the machine.
- e) Operation at incorrect voltage.
- f) Customer advice and consultation purposes.
- g) Cosmetic parts.

The guarantee applies to Great Britain and Northern Ireland only.

The foregoing does not affect your statutory rights.

## **Before you call for service:**

**Please read the information given in the user manual**

**In the event a technician is called out for any of the reasons stated above or for consultation purposes charges will be made to the customer either at the time of visit or at a later time in administration.**

----- **OVENS ONLY** -----

**Heating appliances will rise in temperature within use and retain their heat for a long period after use. Children should be supervised at all times and should not be allowed to touch the surfaces or be in the vicinity of the appliance when in use up until the time the appliance has cooled after use.**

---

**Our contribution to the environment –  
This manual has been printed on recycled paper**

---