

3G2060(R)

HSPA/3G WIRELESS ALARM COMMUNICATOR

3G Communicator – North America

TL260(R)

ETHERNET/INTERNET ALARM COMMUNICATOR

Ethernet Communicator

TL2603G(R)

ETHERNET/INTERNET AND HSPA/3G DUAL-PATH ALARM COMMUNICATOR

3G / Ethernet Communicator - North America



Installation Manual
v3.0

Warning: This manual contains information on limitations regarding product use and function and information on the limitations as to liability of the manufacturer.

TABLE OF CONTENTS

Warning: Installer Please Read Carefully	3
Initial Panel Programming	9
Communicator Technical Specifications	5
This manual covers Communicator models with and without 'R' throughout entire manual unless specifically states otherwise.	4
UL/ULC Installation Requirements	4
Ratings Compatibility	5
Ratings Compatibility	5
Software Compatability	6
Communicator Installation Configuration	6
Encryption	5
Encryption.	7
Communicator Configuration with SCW	7
Installing CAT 5 Cable (TL260R/TL2603GR only)	7
Communicator Reset	8
Establishing a Communication Channel with the SCW Panel.	8
Label Programming for SMS Message	9
Programming Options Sections	
ETHERNET/Cellular Programming Options	12
System Options	12
Programming Options.	14
Communications Reporting Codes	14
Ethernet Receiver 1 Options	16
Ethernet Receiver 2 Options	16
Ethernet Options	17
Cellular Receiver 1 Options	17
Cellular Receiver 2 Options	18
Cellular Options.	18
System Information (Read Only)	23
System Reset Defaults	23
Communicator Status, Initialization, Diagnostics and Troubleshooting	24
Programming Worksheets Sections	
Ethernet/Cellular Programming Worksheets	29
System Options	29
Programming Options.	29
Ethernet Receiver 1 Options	30
Ethernet Receiver 2 Options	30
Ethernet Options	30
Cellular Receiver 1 Options	30
Cellular Receiver 2 Options	31
Cellular Options.	31
System Information (Read Only)	33
System Reset Defaults	33
End User Licence Agreement	34
Limited Warranty	35

WARNING: INSTALLER PLEASE READ CAREFULLY**Note to Installers**

The Warnings on this page contain vital information. As the only individual in contact with system users, it is the installer's responsibility to bring each item in this Warning to the attention of all users of this system.

System Failures

This system has been carefully designed to be as effective as possible. There are circumstances, however, involving fire, burglary, or other types of emergencies where it may not provide protection. Any alarm system of any type may be compromised deliberately or may fail to operate as expected for a variety of reasons. Some, but not all, of the reasons may be:

Access by Intruders

Intruders may enter through an unprotected access point, circumvent a sensing device, evade detection by moving through an area of insufficient coverage, disconnect a warning device, or interfere with or prevent the proper operation of the system.

Component Failure

Although every effort has been made to make this system as reliable as possible, the system may fail to function as intended due to the failure of a component.

Compromise of Radio Frequency (Wireless) Devices

Signals may not reach the receiver under all circumstances which could include metal objects placed on or near the radio path or deliberate jamming or other inadvertent radio signal interference.

Criminal Knowledge

This system contains security features which were known to be effective at the time of manufacture. It is possible for persons with criminal intent to develop techniques which reduce the effectiveness of these features. It is important that your security system be reviewed periodically to ensure that its features remain effective and that it is updated or replaced if it is found that it does not provide the protection expected.

Failure of Replaceable Batteries

This system's wireless transmitters have been designed to provide several years of battery life under normal conditions. The expected battery life is a function of the device environment, usage, and type. Ambient conditions such as high humidity, high or low temperatures, or large temperature fluctuations may reduce the expected battery life. While each transmitting device has a low battery monitor which identifies when the batteries need to be replaced, this monitor may fail to operate as expected. Regular testing and maintenance will keep the system in good operating condition.

Inadequate Installation

A security system must be installed properly in order to provide adequate protection. Every installation should be evaluated by a security professional to ensure that all access points and areas are covered. Locks and latches on windows and doors must be secure and operate as intended. Windows, doors, walls, ceilings and other building materials must be of sufficient strength and construction to provide the level of protection expected. A reevaluation must be done during and after any construction activity. An evaluation by the fire and/or police department is highly recommended if this service is available.

Inadequate Testing

Most problems that would prevent an alarm system from operating as intended can be found by regular testing and maintenance. The complete system should be tested weekly and immediately after a break-in, an attempted break-in, a fire, a storm, an earthquake, an accident, or any kind of construction activity inside or outside the premises. The testing should include all sensing devices, keypads, consoles, alarm indicating devices, and any other operational devices that are part of the system.

Insufficient Time

There may be circumstances when the system will operate as intended, yet the occupants will not be protected from an emergency due to their inability to respond to the warnings in a timely manner. If the system is remotely monitored, the response may not occur in time to protect the occupants or their belongings.

Motion Detectors

Motion detectors can only detect motion within the designated areas as shown in their respective installation instructions. They cannot discriminate between intruders and intended occupants. Motion detectors do not provide volumetric area protection. They have multiple beams of detection and motion can only be detected in unobstructed areas covered by these beams. They cannot detect motion which occurs behind walls, ceilings, floor, closed doors, glass partitions, glass doors or windows. Any type of tampering whether intentional or unintentional such as masking, painting, or spraying of any material on the lenses, mirrors, windows or any other part of the detection system will impair its proper operation.

Passive infrared motion detectors operate by sensing changes in temperature. However their effectiveness can be reduced when the ambient temperature rises near or above body temperature or if there are intentional or unintentional sources of heat in or near the detection area. Some of these heat sources could be heaters, radiators, stoves, barbecues, fireplaces, sunlight, steam vents, lighting and so on.

Power Failure

Control units, intrusion detectors, smoke detectors and many other security devices require an adequate power supply for proper operation. If a device operates from batteries, it is possible for the batteries to fail. Even if the batteries have not failed, they must be charged, in good condition and installed correctly. If a device operates only by AC power, any interruption, however brief, will render that device inoperative while it does not have power. Power interruptions of any length are often accompanied by voltage fluctuations which may damage electronic equipment such as a security system. After a power interruption has occurred, immediately conduct a complete system test to ensure that the system operates as intended.

Security and Insurance

Regardless of its capabilities, an alarm system is not a substitute for property or life insurance. An alarm system also is not a substitute for property owners, renters, or other occupants to act prudently to prevent or minimize the harmful effects of an emergency situation.

Smoke Detectors

Smoke detectors that are a part of this system may not properly alert occupants of a fire for a number of reasons, some of which follow. The smoke detectors may have been improperly installed or positioned. Smoke may not be able to reach the smoke detectors, such as when the fire is in a chimney, walls or roofs, or on the other side of closed doors. Smoke detectors may not detect smoke from fires on another level of the residence or building.

Every fire is different in the amount of smoke produced and the rate of burning. Smoke detectors cannot sense all types of fires equally well. Smoke detectors may not provide timely warning of fires caused by carelessness or safety hazards such as smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits, children playing with matches, or arson.

Even if the smoke detector operates as intended, there may be circumstances when there is insufficient warning to allow all occupants to escape in time to avoid injury or death.

Telephone Lines

If telephone lines are used to transmit alarms, they may be out of service or busy for certain periods of time. Also an intruder may cut the telephone line or defeat its operation by more sophisticated means which may be difficult to detect.

Warning Devices

Warning devices such as sirens, bells, horns, or strobes may not warn people or waken someone sleeping if there is an intervening wall or door. If warning devices are located on a different level of the residence or premise, then it is less likely that the occupants will be alerted or awakened. Audible warning devices may be interfered with by other noise sources such as stereos, radios, televisions, air conditioners, other appliances, or passing traffic. Audible warning devices, however loud, may not be heard by a hearing-impaired person

GENERAL

IMPORTANT

This installation manual shall be used in conjunction with the Power Series Alarm Controller Power Panel manual. All the safety instructions specified within that manual shall be observed. (or equivalent). The Alarm Controller Power Panel is referenced as the "panel" throughout this document.

The General Packet Radio Service (3G/GPRS)/Ethernet Communicator is a fixed, wall-mounted unit, located inside the panel, and shall be installed in the location specified in these instructions. The equipment enclosure must be fully assembled and closed, with all the necessary screws/tabs, and secured to a wall before operation. Internal wiring must be routed in a manner that prevents:

- Excessive strain on wire and on terminal connections,
- Interference between power limited and non power limited wiring,
- Loosening of terminal connections, or
- Damage of conductor insulation.

WARNING: Never install this equipment during a lightning storm!

Safety Information

The Installer must instruct the System user on each of the following:

- Do not attempt to service this product. Opening or removing covers may expose the user to dangerous voltages or other risks.
- Any servicing shall be referred to trained service personnel only.
- Use authorized accessories only with this equipment.
- Do not stay close to the equipment during device operation.
- Do not touch the external antenna.

Model Information

3G2060R: Is a 3G/GPRS Cellular alarm Communicator that sends alarm communication to Sur-Gard System I, II, III (SG-DRL3IP), and IV (SG-DRL4IP) central station receivers via a 3G/GPRS digital cellular network.

TL260R: Is an Ethernet only alarm Communicator that sends alarm communication to Sur-Gard System I, II, III and IV central station receivers through a wired Ethernet/Internet connection.

TL2603GR: Is a Dual-path 3G/GPRS/Ethernet alarm Communicator that sends alarm communication to Sur-Gard System I, II, III, and IV central station receivers through Ethernet/Internet or a 3G/GPRS digital cellular network.

The Communicator can be used as either a backup or primary Communicator. The Communicator supports Internet Protocol (IP) transmission of panel and Communicator events over Ethernet/Internet and/or 3G/GPRS.

The 3G/GPRS performance of the **3G2060R** or **TL2603GR** Communicator depends greatly on 3G/GSM network coverage in the local area. The unit should not be mounted in the final location without first performing the Communicator Placement Test below to determine the best location for radio reception (minimum of one green LED ON). Optional antenna kits are available from DSC at: <http://www.DSC.com>.

NOTE: Prior to installation of the 3G2060R or TL2603GR Communicator, confirm with your local service provider that the 3G/GPRS network is available and active in the area where the Communicator will be installed, and that radio signal strength (CSQ) is adequate.

Panel Mounting

The following Communicators are compatible with PC1616/PC1832/PC1864 panels:

- **3G2060R, 3G2060** (3G/GPRS only)
- **TL260R, TL260**(Ethernet/Internet only)
- **TL2603GR, TL2303G** (Ethernet/Internet + 3G/GPRS dual-path)

NOTE: This manual covers Communicator models with and without 'R' throughout entire manual unless specifically states otherwise.

Features

- 128-bit AES encryption via 3G/GPRS and Ethernet/Internet (NIST Validation Certificate No. 1627).
- Back up or primary 3G/GPRS alarm communication.
- Ethernet LAN/WAN 10/100 BaseT (TL260R/TL2603GR only).
- Full event reporting to central station (UL/ULC listed) and C24 Interactive, via RS-422 to the C24-HUB.
(This supplementary feature is in addition to what is required for a UL/ULC Listed system configuration and it does not affect the required UL/ULC Listed signaling).
- Fully redundant Ethernet/Internet and 3G/GPRS Dual-path Alarm Communication (TL2603GR only).
- Individual Ethernet and/or 3G/GPRS Periodic test transmission.
- Integrated call routing.
- Remote Firmware upgrade capability of the Communicator and Panel Firmware via Ethernet and/or HSPA/3G radio.
- Dual-Band Operation: 850 MHz, and 1900 MHz. (North America only).
- Panel remote uploading/downloading support via 3G/GPRS and Ethernet/Internet.
- PC-LINK connection.
- Programmable Labels.
- RS-422 balanced line for supplementary communication to the external C24-HUB up to 1,000 ft. (305 m) for C24 Interactive. (This supplementary feature is in addition to what is required for a UL/ULC Listed system configuration and it does not affect the required UL/ULC Listed signaling). Only models with "R".
- SIA and Contact ID (CID) formats supported.
- Signal strength and Trouble display LEDs.
- Subscriber Identity Module (SIM) card included with Communicator.
- Supervision heartbeats sent via 3G/GPRS and Ethernet/Internet.
- Supervision heartbeats via HSPA/3G/2G and/or Ethernet/Internet.
- iControl "TBDev_data_2B_provided_by_WH"

Technical Specifications

The input voltage to the Communicator can be drawn from the Underwriters Laboratories/Underwriters Laboratories Canada (UL/ULC) Listed Control Panel or provided by an external UL/ULC Listed power supply rated for the application (external power-limited source).

NOTE: The power supply must be Class II, Power Limited.

UL/ULC Installation Requirements

NOTE: For equipment used at the protected premises and intended to facilitate IP communications (hubs, routers, NIDs, Digital Subscriber Line (DSL), Cable modems), 24 hour back-up power is required. Where such cannot be facilitated, a secondary (back-up) communication channel is required.

Ⓢ Domain Name Service (DNS) programming is not permitted in UL/ULC listed systems.

Notes for using Private, Corporate, and High Speed Data Networks:

Network access and domain access policies shall be set to restrict unauthorized network access, and spoofing or Denial of Service (DoS) attacks. Select an Internet Service Provider (ISP) that has redundant servers/systems, back-up power, routers with firewalls enabled, and methods to identify and protect against DoS attacks (e.g., via spoofing).

Notes for using Public Switched and Cellular Data Networks:

Communication channels shall be facilitated such that the Communicator will restrict unauthorized access, which could otherwise compromise security. The Communicator shall be located in a secured area.

- For **ULC Residential** Fire and Burglary applications the **TL2603GR** can be used as primary communication channel via either 3G/GSM or Ethernet or as a back-up in conjunction with the Digital Alarm Communicator Transmitter (DACT). Test transmission every 24 hours shall be enabled on each channel.
- For **ULC Commercial** Fire and Burglary applications the **3G2060R** and **TL2603GR** can be used as a passive communication module with the following Security Levels:
 - P1 (each channel 3G/GSM or Ethernet is independent),
 - P2 (3G/GSM and Ethernet in back-up configuration, Panel Section **[851][005]** Toggle Option [5] OFF).

- P3 (3G/GSM and Ethernet in redundant configuration, Panel Section [851][005] Toggle Option [5] ON).
- The Communicator can also be used as an Active communication system with the Security Levels A1-A4 (each channel 3G/GPRS or Ethernet independent or together in a back-up/redundant configuration). For Active Line Security systems AES128 bit encryption shall be enabled (at the monitoring station receiver) and the supervision heartbeat rate shall be set as 90 seconds (Panel Section [851][004] = 005A/90). The supervision window at the Signal Receiver Center (SRC)'s receiver shall be programmed as maximum of 180 (00B4/180) seconds.
- For **UL Residential** Fire and Burglary applications the **3G2060R** and **TL2603GR** can be used as the primary communication channel via either 3G/GSM or Ethernet, or as a back-up in conjunction with the DACT (30 day test transmission is required on each channel).
- For **UL Commercial** Burglary applications the **TL2603GR** can be used as Dual Signalling Line communication system (3G/GPRS and Ethernet channels used in redundant configuration), Standard Line Security and as Encrypted Line Security.
- The supervision heartbeat shall be enabled (Panel Section [851][005] Toggle Option [1] (Ethernet) and/or Toggle Option [2] (3G/GSM) shall be ON), Toggle Option [3] (Supervision Type) shall be ON and the supervision heartbeat rate shall be selected as 135 (0087/135) seconds. Option [004] = 0087. The supervision window at the supervising station shall be maximum 200 (00C8/200) seconds. For Encrypted Line Security systems the encryption AES128 bit shall be enabled at the monitoring station receiver.
- For **UL Commercial** Burglary installations, the **3G2060R** is listed as a primary (sole) communication means (heartbeat must be enabled) or for supplementary (back-up) use in conjunction with a Plain Old Telephone Service (POTS) line dialer. When the heartbeat transmission over the Ethernet or 3G/GPRS network is enabled, using the **TL2603GR** with a compatible control unit listed for standard/encrypted line security, it can provide line security for the alarm system over the primary line.
- The **TL2603GR** is also suitable to be used with a compatible control unit listed for dual line security transmission when used in conjunction with a DACT or a Public Switched Data Network (PSDN) transmitter, where the PSDN provides the line security and is the primary line. In this mode, alarm signals are required to be sent simultaneously over both communication methods.

Ratings Compatibility

Table 1: Communicator Ratings

Model	3G2060R 3G/GPRS only	TL260R Ethernet only	TL2603GR Ethernet and 3G/GPRS
POWER SUPPLY RATINGS			
• Input Voltage	Nominal 12 VDC: The panel Bell output shall be derated: 700mA - (Communicator mA) = (derated Bell output).		
CURRENT CONSUMPTION			
• Standby Current	90mA @ 13.66V	100mA @ 13.65V	120mA @ 13.66V
• Alarm (Transmitting) Current	400mA @ 12V		
• Operating Frequency	Quad band 850MHz, 900MHz, 1800MHz, 1900MHz		
• Typical Antenna Gain	2dBi		
ENVIRONMENTAL SPECIFICATIONS			
• Operating Temperature	32°F - 120°F (0°C - 49°C)		
• Humidity	5% ~ 93% relative humidity, non-condensing		
MECHANICAL SPECIFICATIONS			
• Board Dimensions (mm)	100 x 150 x 15	100 x 150 x 18	100 x 150 x 15
• Weight (grams) with bracket	310	290	320

Table 2: Compatible Receivers, and Panels

Communicator	Receiver/ Panel	Description
3G2060R	Receiver	• Sur-Gard System I Receiver, version 1.13+
TL260R		• Sur-Gard System II Receiver, version 2.10+
TL2603GR	Panel	• Sur-Gard SG-DRL3-IP, version 2.30+ (for Sur-Gard System III Receiver)
		• Sur-Gard SG-DRL4-IP version 1.20+ (for Sur-Gard System IV Receiver)
		• Power Series PC1616, version 4.5+
		• Power Series PC1832, version 4.5+
		• Power Series PC1864, version 4.5+

NOTE: Enter [*][8][Installer Code][900] at keypad to view the Panel Version number.

Products or components of products, which perform communications functions only shall comply with the requirements applicable to communications equipment as specified in UL60950 or CAN CSA C22.2. No. 60950-1, Information Technology Equipment - Safety - Part 1: General Requirements. Where network interfaces are internal to the control unit or receiver, compliance to CAN CSA C22.2. No. 60950-1 is adequate. Such components include, but are not limited to: hubs; routers; NIDs; third-party communications service providers; DSL modems; and Cable modems.

C24 Interactive

NOTE: This application has not been investigated by UL/ULC and is not be used on UL/ULC certified installations.

The Communicator provides C24 Interactive monitoring and control via an RS-422 interface to an external C24-HUB. The default Keybus link speed is 115.2 KB and this option is programmable by the installer. All life-style events are transmitted by the RS-422 link to the C24-HUB and then remotely to the C24 Interactive Servers.

NOTE: The C24-HUB is an interface device which connects to security panels, IP cameras, sensors, Z-wave based home automation devices, etc. to deliver a host of advanced functionality.

NOTE: Life-style events are “non alarm” events. Life-safety events are “alarm” events.

The following features are available with the RS-422 C24 Interactive:

- Communicator faults can be transmitted.
- Panel communication errors are reported to the C24-HUB.
- Real time reporting of Zone status information to the C24 Interactive Server.
- Remote update of the Communicator (flash upgrade).
- SMS incoming “wake up” for the 3G/GPRS channel.
- WEB login to request an incoming session with the Communicator.
- Zone Label Programming.

NOTE: Communicator buffers 1000 date/time stamped Life-Style events to the C24-HUB as First In First Out (FIFO).

PRE INSTALLATION CONFIGURATION

Encryption

The Communicator uses 128 Bit AES Encryption. Encryption can only be enabled from the monitoring station receiver. Each receiver (Ethernet 1 and 2, 3G/GPRS 1 and 2) can independently have encryption enabled or disabled. When encryption is enabled, the central station will configure the device to encrypt communications the next time the Communicator module performs a communication to that receiver.

NOTE: Packets will start being encrypted only after the next event is sent to that receiver, or if the unit is restarted.

Before leaving the installation site, the Communicator TL260R/TL2603GR Ethernet line shall be connected via an APPROVED (acceptable to the local authorities) Network Interface Device (NID) (e.g., for UL Installations, UL60950 listed NID). All wiring shall be performed according to the local electrical codes.

COMMUNICATOR INSTALLATION CONFIGURATION

This 3G/GPRS/Ethernet Communicator shall be installed by Service Persons only. (Service Person is defined as a person having the appropriate technical training and experience necessary to be aware of hazards to which that person may be exposed in performing a task and can also take measures to minimize the risks to that

person or other persons). The Communicator shall be installed and used within an environment that provides the pollution degree max 2, overvoltages category II, in non-hazardous, indoor locations only. This manual shall be used with the Installation Manual of the panel which is connected to the 3G/GPRS/Ethernet Communicator. All instructions specified within the panel manual must be observed.

All the local rules imposed by local electrical codes shall be observed and respected during installation.

Installing the Ethernet Cable

(TL260R/TL2603GR only)

A Category 5 (CAT 5) ethernet cable must be run from a source with Ethernet/Internet connectivity to the Communicator module, inside the Panel. The Communicator end of the cable must be terminated with an RJ45 plug, which will connect to the Communicator's RJ45 jack after the Communicator is installed. All requirements for installation of CAT5 ethernet cable must be observed for correct operation of the Communicator, including, but not limited to, the following:

- Do NOT strip off cable sheathing more than required for proper termination.
- Do NOT kink/knot cable.
- Do NOT crush cable with cable ties.
- Do NOT untwist CAT5 pairs more than ½ in. (1.2cm).
- Do NOT splice cable.
- Do NOT bend cable at right angles or make any other sharp bends.

NOTE: CAT5 specification requires that any cable bend must have a minimum 2 in. (5 cm) bend radius. Maximum length of CAT 5 cable is 328 ft. (100 m).

Running the RS-422 Cable

An RS-422 cable must be connected to the C24-HUB and cable run to the Communicator module inside the panel.

NOTE: Maximum cable length for RS-422 cable is 1,000 ft. (305 m).

At the **C24-HUB**, make connections as follows:

1. Securely fasten the **TX+** wire on the terminal block.
2. Securely fasten the **TX-** wire on the terminal block.
3. Install a **120 Ω ¼ W** resistor between the **RX +** and **RX-** terminals at the C24-HUB.
4. Securely fasten the **RX+** wire on the terminal block.
5. Securely fasten the **RX-** wire on the terminal block.
6. (Optional) Securely fasten the **GND** wire on the terminal block.

NOTE: The GND connection is optional. DSC recommends connecting the GND wire at both ends.

7. Run the RS-422 Cable from the C24-HUB to the inside of the Panel.

Inserting and Removing the SIM Card

1. Remove the front cover of the Panel to access SIM holder.
2. Remove power from the panel and disconnect the battery and telephone line.
3. On the SIM card holder push gently to slide the cover towards the Printed Circuit Board (PCB) antenna, as indicated by the arrow on SIM holder, to **OPEN**. This will unlatch the SIM card holder on the side closest to edge of the Communicator PCB. (See **Figure 3**).
4. Lift up the SIM card holder from the side that is not hinged.

NOTE: The SIM can be damaged by bending, or scratching contacts. Use caution when handling SIM cards.

5. Insert or remove the SIM card, noting the orientation of the notches on the SIM card and the SIM card holder.
6. When inserting a SIM card, insert the card in the proper orientation and gently push the SIM card holder down and slide the holder as indicated by the arrow on SIM holder, to **LOCK**.
7. Reconnect the backup battery and telephone line, apply AC power to panel, and replace the panel cover.

Hardware Reset

The Communicator can be hardware reset by installing a jumper between Pins 4 and 5 on the AUDIO/DEFAULT connector and restarting the Communicator. Installing jumper during normal operation has no effect.

INSTALLING THE 3G/GSM/ETHERNET COMMUNICATOR IN PANEL


Installing Communicator with PC1616/1832/1864 Panel

NOTE: Before installing Communicator or inserting/removing SIM, ensure that system power is OFF and telephone line is disconnected.

1. To assemble supplied mounting bracket, perform the following: (See **Figure 1**).
 - a. Remove the 4 white plastic standoffs from the bag provided with the Communicator kit.
 - b. Insert the 4 standoffs through the back of the mounting bracket, into the holes at each corner. (The antenna mounting tab should be facing away from you).
 - c. Place the bracket on a flat, solid surface. Hold the Communicator component side up and orient the 4 holes on the Communicator with the 4 standoffs protruding from the bracket. Push the Communicator firmly and evenly onto the standoffs until it is securely attached to the mounting bracket.
 - d. Remove the panel front cover.
 - e. **TL260R/TL2603GR only:** Remove and discard the circular knockout located in the top-right section of the panel. (This hole will be used for connection of the supplied radio antenna).
 - f. **TL260R/TL2603GR only:** Connect the supplied 5" (12.7 cm) antenna cable to the radio, by passing the connector through the hole on back of the mounting bracket to the Communicator board. Push the antenna connector firmly into the socket on the 3G/GPRS radio. (See **Figure 3**).
2. Install the Communicator into the panel:
 - a. Attach one end of the PC-LINK cable to the panel PC-LINK header on the panel (red wire goes on Pin 1 of the panel PC-LINK header).
 - b. Insert the assembled Communicator into the panel.

NOTE: Ensure that the threaded antenna connection point is visible through the knockout hole at the top right of the panel.

- c. **TL260R/TL2603GR only:** Place the nylon washer with bushing (thick flat washer) onto the threaded section of the antenna cable. Insert the threaded section through the antenna mounting knockout hole at top right of panel.
- d. Place the second nylon washer (flat), followed by the brass washer and the brass nut, onto the threaded section of the cable, **outside** the panel. Tighten the assembly by hand only. (Finger tight only- Do not overtighten the antenna assembly).

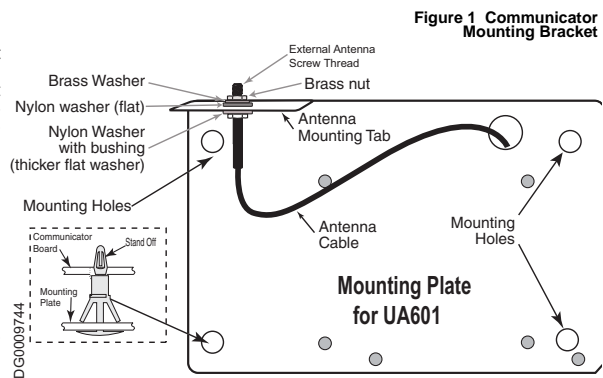

- e. Locate the screw hole on the right side wall of the panel. See **Figure 2** (screw). Line up the assembled Communicator with the right side wall of the panel and, using the screw provided, secure the mounting bracket to the panel.
- f. Attach the other end of the PC-LINK cable to the Communicator (black wire goes on Pin 1 of the **Communicator**).
- g. **TL260R/TL2603GR only:** Using light pressure (finger tight only), attach the supplied white quad band whip antenna to the threaded antenna connection point at top of the panel.

WARNING!

3G2060R/TL260R/TL2603GR MODULES ARE POWER LIMITED. DO NOT ROUTE ANY WIRING OVER THE CIRCUIT BOARD. MAINTAIN AT LEAST 1IN. (25.4MM) SEPARATION BETWEEN CIRCUIT BOARD AND WIRING. A MINIMUM OF ¼ IN. (7MM) SEPARATION MUST BE MAINTAINED AT ALL POINTS BETWEEN NON-POWER LIMITED WIRING AND POWER LIMITED WIRING.

- 3. To electrically connect the Communicator to the panel, perform the following steps (See **Figure 3**).
 - a. Disconnect both AC power and battery connections from the panel, and disconnect telephone line.

Module Power Connection

- b. Attach a wire from the Communicator's left **PWR** terminal to the panel's **BELL+** terminal.
- NOTE: For ULC Commercial Fire Monitoring applications, do NOT connect any devices on the Bell + terminal other than the Communicator.**
- c. Attach a wire from the Communicator's **GND** terminal (beside PWR) to the panel's **AUX -** terminal.
- d. Attach a wire from the Communicator's **SHLD** terminal to the panel's **EGND** terminal. (Protective earth ground).

(Optional) External Bell/Siren Connection

- e. Attach a wire from the Communicator's right **PWR** terminal to the positive (+) terminal on the Bell/Siren.
- f. Attach the panel's **BELL -** terminal to the negative (-) terminal on the Bell/Siren.
- NOTE: If an external Bell/Siren is not used, install the 1KΩ ½W 5% resistor (Brown, Black, Red, Gold) (supplied with the panel) between the panel's Bell + and Bell - terminals, then only wire the BELL + to the PWR terminal on the Communicator.**
- g. Confirm that the SIM card is inserted in the holder and locked.


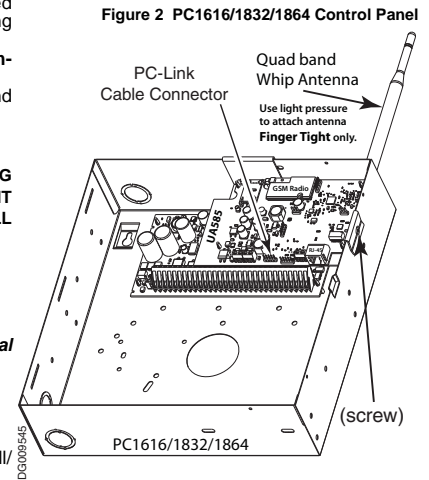


Figure 3 Communicator Wiring Diagram

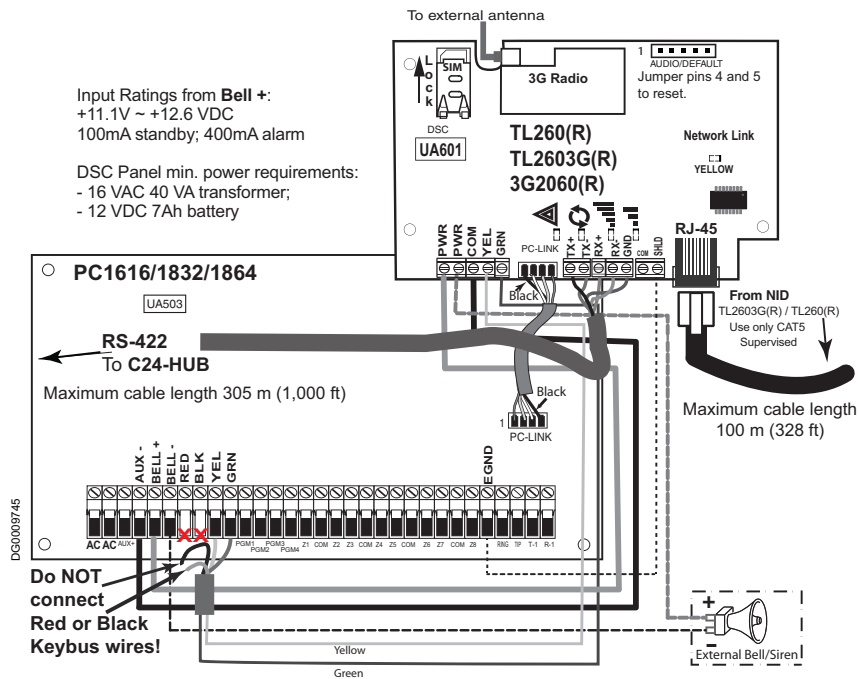

Keybus Connection for C24 Interactive

- 4. Install the Keybus cable between Communicator and Panel as follows:
 - WARNING: DO NOT CONNECT KEYBUS RED OR BLK WIRES TO THE PANEL OR THE COMMUNICATOR TERMINAL BLOCKS.**
 - a. Attach a wire from the Communicator **YEL** terminal to the panel **YEL** terminal.
 - b. Attach a wire from the Communicator **GRN** terminal to the panel **GRN** terminal.

RS-422 Connection for C24 Interactive

- At the Communicator inside the Panel, connect the previously run RS-422 cable as follows:
1. Securely fasten the **TX+** wire to **RX+** on the terminal block.
 2. Securely fasten the **TX-** wire to **RX-** on the terminal block.
 3. Securely fasten the **RX+** wire to **TX+** on the terminal block.
 4. Securely fasten the **RX-** wire to **TX-** on the terminal block.
 5. (Optional) Securely fasten the **GND** wire on the terminal block.

NOTE: The GND connection is optional. DSC recommends connecting GND wire at both ends.

Install Network Cable (TL260R/TL2603GR only)

- 6. Route the CAT 5 Ethernet cable through back of the panel and plug it into the Communicator's RJ45 jack.

Before leaving the premises the Ethernet communication lines must first be connected to an approved (acceptable to local authorities) type NID, (UL installations, UL 60950 listed NID, for ULC installations CAN/CSA C22.2. No. 60950-1 Certified NID). All wiring shall be performed according to the local electrical codes.

- 7. Perform the following steps for initial power on of the panel with Communicator installed:
 - a. Reconnect the AC power, telephone line, and battery + connector to the panel. (The Communicator and Panel will power up together).

- b. Observe that the Communicator's red and yellow LEDs are flashing together while it initializes. The red and yellow LEDs will continue to flash until the Communicator has successfully communicated to all programmed receivers. If this is the first time the Communicator has been powered up in the panel, the module will initiate communication to Connect24 to request remote programming.

NOTE: Initialization may take several minutes to complete, red and yellow LEDs will flash together during initialization. Do not continue to next step until the red and yellow LEDs have stopped flashing. (If only the yellow LED is flashing, there is a Communicator trouble and the Green LEDs are not valid for Communicator Placement Test). Correct trouble indicated by flashes on yellow LED before continuing. (See Table 5 for troubleshooting assistance).

8. **3G2060R/TL2603GR only:** Perform the Communicator Placement Test below.
9. Mount the Panel in final location indicated by placement test.

INITIAL PANEL PROGRAMMING

ⓘ Domain Name Service (DNS) programming is not permitted in UL/ULC listed systems.

Keypad Data Display

NOTE: Programming locations accessible via the keypad are for viewing only. All communicator programming is modified via Connect24.

- **Section-Toggle Options:** The number is displayed when Toggle is ON, the number is not displayed when Toggle is OFF. (e.g., Toggle Options displays: [-- 3--6--]. Options 3 and 6 are ON, all others are OFF). Pressing keys 1 through 8 will alternately turn the Toggle ON and OFF.
- **HEX/Decimal Data:** Values that are provided with two defaults, separated by a " / " character, use the format: hexadecimal followed by decimal equivalent (e.g., Default [0BF5/3061]). Hexadecimal numbers are shown, with all leading zeroes, to the full field length defined for the number.

Entering HEX values at keypad

To enter HEX values at the keypad, you must press the * key before entering the HEX value. (e.g., to enter "C" at the keypad, press [*][3].

Entering ASCII Characters at keypad

1. Press [*] and use scroll buttons [←] [→] to display "ASCII Entry" on the LCD screen.
2. Press [*] to select ASCII entry mode.
3. Use the [←] [→] scroll keys to display the character you want and press [*] to save and exit ASCII.
4. Repeat the steps above to enter another ASCII character.

PC1616/1832/1864 Initial Programming

Perform the following steps to ensure that the Communicator and the Panel work together as intended.

These Sections must be programmed at the panel keypad. Enter [*][8][Installer Code][Section Number]. Record any values that are modified from their default, in the appropriate Worksheets for the Panel or Communicator.

1. In Panel Section [167] program 060 (seconds).
2. In Panel Section [382] set Option [5] ON

NOTE: If this option is OFF, the yellow status LED on the Communicator will indicate 'Panel Supervision Trouble' (2 flashes) and the unit can not be programmed via the PC-LINK cable.

3. In Panel Section [383] set Option [7] ON.
4. In Panel Section [383] set Option [8] ON for CID, or OFF for SIA.
5. A valid Account Number must be entered in Communicator Section [851][021]. See Programming Section.

NOTE: DSC recommends using the same Account Number for Panel and Communicator.

6. In Panel Sections [301], [302], and [303], program the central station telephone number that will be used for the 3G/GPRS/Ethernet Communicator. Valid entries are:

- a. A valid telephone number; signals will be routed to the central station using the PSTN.
- b. **DCAA** (Receiver 0); signals will be routed to 3G/GPRS/Ethernet Receivers 1 - 4 depending on programming Toggle Options in Communicator Section [851][006].
- c. Panel Section [301] sets the Primary communication path, and may be configured as either PSTN or Communicator routing. Panel Section [302] is redundant, and Panel Section [303] is the backup telephone number for Panel Section [301]. Refer to the Panel manual for additional information.

NOTE: The leading digit 'D' (dial tone detection) in the telephone number is pre-programmed.

7. In Panel Section [350], program the communication format as: CID (03) or SIA FSK (04).
8. In Panel Sections [351] - [376], program the Communicator call direction options. Refer to the Panel Installation Manual for details on setting these options.
9. In Panel Section [401] set Toggle Option [2] 'User Enable DLS' to ON in order to perform panel DLS session through 3G/GPRS or Ethernet.

NOTE: Before leaving the premises, the installer should verify all programmed communications paths. See Programming Options Section [851][901] to send immediate test transmissions.

Communicator Troubles displayed on a PC1616/1832/1864

The General System trouble is the only trouble that will appear on the keypad Liquid Crystal Display (LCD) when encountered by a Communicator installed in a PC1616/1832/1864. For more information about the trouble on the Communicator module refer to the panel event buffer. Log entry will show Fault or Restore for each of the following events:


- **T-LINK Network Fault/Restore:** This log will occur for the following trouble conditions: SIM Lock Trouble, 3G/GSM Trouble, Ethernet Trouble, or Connect24 Configuration Trouble.
- **T-LINK Receiver Trouble/Restore:** This log will occur for the following trouble conditions: Receiver Not Available Trouble, Receiver Supervision Trouble, or Failure to Communicate (FTC) Trouble.
- **T-LINK Comm. Fault/Restore:** This log will occur when the panel loses communications with the Communicator and will clear when communications is restored.

COMMUNICATOR PLACEMENT TEST

(3G2060R and TL2603GR only).

To confirm that the 3G/GPRS antenna location is suitable for radio operation, perform the placement test as follows:

NOTE: You may need to relocate the Panel or install an optional extension antenna during this procedure, if radio signal strength is too low.



1. Confirm that the yellow LED on the Communicator is not flashing. A flashing yellow LED indicates trouble on the Communicator. See Table 5 to troubleshoot and correct the cause of this trouble before continuing to the next step.
2. Observe the strength of the radio signal on the yellow LED and the 2 green LEDs on the Communicator meet or exceed the minimum signal level requirement. Minimum Signal Level: The yellow LED is OFF and the Green LED 1  (furthest from the yellow LED) is ON. (i.e., not flashing) for the panel location to be acceptable. See table for "Radio Signal Strength" on page 9 for interpretation of receiver signal strength on LEDs.

NOTE: If the required signal strength is too low with the panel in its current location, the panel must be relocated or an external antenna is required.

- a. If required, the following 3G/GSM extension antenna kits are available to the installer:
 - GS15-ANTQ - 4.57m (15')Internal Antenna Extension Kit (Suitable for interior mounting only).
 - GS25-ANTQ - 7.62m (25')External Antenna Extension Kit (Suitable for exterior mounting only).
 - GS50-ANTQ - 15.24m (50')External Antenna Extension Kit (Suitable for exterior mounting only).

Specific instructions for the installation of the extension antenna are included with the kit. Observe all the electrical safety instructions regarding the installation of the antenna. All the wiring of the equipment shall be fully compliant with the local rules and regulations.

3. If required, install the antenna extension and perform the following steps to determine the best location for placement of the antenna :
 - a. Disconnect the white whip antenna from the panel.
 - b. Attach one end of the antenna extension cable to the threaded antenna connector on the panel and the other end to the external antenna.
4. Move the extension antenna to various locations while observing the two Green LEDs on the panel.
 - a. Continue to reposition the extension antenna until you receive an acceptable (minimum one green LED ON solid) signal strength.

NOTE: Minimum strength is:  green LED 1 flashing and  yellow LED OFF. If green LED 1 is flashing, relocation should be considered.

- b. Mount the supplied antenna extension bracket at the location that provides the best signal strength.

5. Alternately, you can reposition the Panel to improve signal strength. Dismount the panel and move it to another location to achieve the required signal strength. If the Panel is relocated to improve signal strength, mount it in the new location.
6. When final Panel/antenna location is determined, continue at the **Initial Panel Programming** section.

COMMUNICATOR STATUS LEDs

The Communicator has 4 onboard LED indicators. These include 1 yellow trouble LED, 1 red Network Connection Status LED, and 2 green Signal Strength LEDs. The LED meaning is described in this Section.

Yellow Trouble LED

This yellow LED will flash to indicate a trouble on the unit. The number of flashes indicates the type of trouble. See the table below for the coded flashes and the conditions which will activate the Trouble Status LED.

Table 3: Yellow Trouble Status LED

# of Flashes	Trouble	# of Flashes	Trouble
2	Panel Supervision Trouble	8	Receiver Supervision Trouble
4	SIM Lock Trouble	9	FTC Trouble
5	3G/GSM Trouble	10	Configuration Failure
6	Ethernet Trouble	11	Remote Programming
7	Receiver Not Available Trouble	12	Module Configuration Trouble

NOTE: Only the highest priority trouble (2 Flashes is the highest priority trouble) is indicated. When this trouble is restored, the next highest trouble will indicate, if present. This will continue until all troubles have been cleared. (yellow LED is not flashing).

The following paragraphs describe the conditions associated with the trouble indicated:

Panel Supervision Trouble (2 Flashes)

This trouble will be indicated when communication between the Communicator module and the Panel fails. If the module can not communicate with the Panel (e.g., loss of power to the panel) the Communicator will send the 'Panel Absent Trouble Event' message to the central station receiver. When communication returns, a 'Panel Absent Restore Event' is sent by the Communicator to the central station receiver. The reporting codes are ET0001 for Trouble and ER0001 for Restore. The panel absent event always uses the primary receiver account code when communicating to the central station.

NOTE: The Panel Supervision Trouble/Restore are internally generated events by the Communicator. They are the only internal events; all other events are generated by the panel. Trouble is generated if the Communicator misses 6 Polls. Trouble is restored on receipt of first Poll from the Panel.

SIM Lock Trouble (4 Flashes)

This trouble will signify that the SIM lock feature has been enabled and the unit has not been programmed with the correct PIN for the SIM card.

3G/GSM Trouble (5 Flashes)

This trouble is indicated for any of the following 4 conditions:

1. **Radio Failure:** Trouble is indicated after 8 failed attempts to communicate with the 3G/GPRS radio.
2. **SIM Failure:** Trouble is indicated after 10 failed attempts to communicate with the SIM.
3. **3G/GPRS Network Trouble:** Trouble is indicated for loss of the registration to the network provider.
4. **Insufficient Signal Strength:** Trouble is indicated if **calculated average** signal strength is too low. (Both green LEDs are OFF). Trouble will clear when the calculated average signal strength is above minimum (i.e., > CSQ 5).

Ethernet Trouble (6 Flashes)

This trouble is indicated when Ethernet link between the transmitter and the local switch or router is absent. This trouble will also be indicated if the unit fails to get Dynamic Host Control Protocol (DHCP) settings from the DHCP server. (Not active if Ethernet Receivers are not programmed).

Receiver Not Available (7 Flashes)

This trouble is indicated if the unit is not able to successfully initialize with any of the programmed receivers. Unprogrammed receivers are excluded. This trouble is also indicated if the 3G/GPRS receiver APNs have not been programmed in Sections [205] and [215].

Receiver Supervision Trouble (8 Flashes)

This trouble is indicated when receiver supervision is enabled and communication between the Communicator module and the receiver fails. Trouble is indicated if Ethernet is supervised and does not receive a heartbeat from the receiver or if 3G/GPRS is supervised and the unit does not receive an acknowledgment to 4 heartbeats sent to the receiver.

FTC Trouble (9 Flashes)

This trouble is indicated when the unit fails to communicate module events to the central station. Trouble is displayed after the unit has exhausted all communications attempts to all programmed receivers for events generated by the Communicator.

Configuration Failure (10 Flashes)

This trouble is indicated when the unit fails to receive remote programming.

Remote Programming (11 Flashes)

This trouble is indicated during a remote firmware upgrade. Indicates that a remote firmware update is in progress over 3G/GPRS/Ethernet. Trouble will clear automatically when update completes successfully.

Module Configuration Trouble (12 Flashes)

This trouble is indicated when the System Account Code or the Receiver Account have not been programmed. Disabled receivers are excluded.

Red Network Connection Status LED (TL260R/TL2603GR)

BLINKING: Indicates communications in progress.

- Once quickly for outgoing Ethernet transmission.
- Twice quickly to indicate incoming Ethernet ACK/NACK.

OFF: This is the normal state of the Red Network Connection Status LED. There are no network connection issues present.

ON: There is a problem with the Ethernet or the 3G/GPRS network connection. LED will be ON if any of the following occur:

- Ethernet cable is not connected,
- DHCP configuration times out,
- Unit fails to get an IP address from the 3G/GPRS network, or
- 3G/GPRS connection has been reset.

(Green LED 1) (Green LED 2) and (Yellow LED) Signal Strength

NOTE: If the yellow LED is flashing, Signal Strength in table below is not valid.

See Table 5 for troubleshooting flashing yellow LED.

Table 4: Radio Signal Strength

Signal Strength	CSQ Level	Yellow LED	Green Led 2	Green LED 1	Signal Level dBm	Action Required
No Signal	0	ON	OFF	OFF	-108.8	<ul style="list-style-type: none"> • Check all antenna connections. • Confirm 3G/GPRS service is active in area. • Relocate Panel or install external antenna.

Table 4: Radio Signal Strength (Continued)

Signal Strength	CSQ Level	Yellow LED	Green Led 2	Green LED 1	Signal Level dBm	Action Required
1 Bar	1 - 4	ON	OFF	Flashing	-108 ~ -103	Relocate Panel or install external antenna if Yellow Trouble LED has: 5 flashes.
2 Bars	5 - 6	OFF See Note	OFF	Flashing	-102 ~ -99	
3 Bars	7 - 10	OFF	OFF	ON	-98 ~ -91	Location is OK. 3G/GPRS Signal Strength is greater than CSQ 5.
4 Bars	11-13	OFF	Flashing	ON	-90 ~ -85	
5 Bars	14 +	OFF	ON	ON	-84 and higher	

NOTE: The Communicator will indicate 3G/GSM Trouble (yellow LED = 5 flashes) if the calculated average CSQ Level is 5 or less. The Communicator Signal Strength can be viewed remotely with Connect24.

Network Activity LEDs (Red and Green)

(TL2603GR only)

- **Ethernet Activity:** Red LED will blink quickly once for Ethernet Transmit, or twice for Ethernet Receive.
- **3G/GPRS Activity:** Green LED 2 will blink quickly once for 3G/GPRS Transmit, or twice for 3G/GPRS Receive.

Network Link LED (Yellow)

(TL260R only) See Figure 3 for location of LED.

The TL260R uses an additional Link LED on the board. LED is lit to indicate an active Ethernet connection.

COMMUNICATOR RESET / UPDATE

Factory Defaults Reset

You can reset the programming options for the Communicator to the factory settings by installing the hardware jumper. Perform the following steps to reset the Communicator:

NOTE: A jumper is required on AUDIO/DEFAULT pins 4 and 5 to reset the hardware values.

1. Remove Panel front cover.
2. Locate the AUDIO/DEFAULT 5 pin connector on the Communicator board. (See Figure 3).
3. Apply a jumper to short the hardware default pins 4 and 5.
4. Remove AC and DC power from the panel and then reapply power to the Panel. Wait until the two green LEDs on the Communicator begin flashing rapidly.
5. Remove the jumper from the hardware default pins 4 and 5. (Green LEDs will stop flashing).
6. Replace the Panel cover.

NOTE: Your Communicator has now been reset to the factory default values.

Firmware Update

The firmware of the device can be updated over 3G/GPRS or Ethernet (Remote or Local updating):

- When the firmware update begins, all 4 LEDs are ON.
- During the firmware update process, the LEDs will be cycled individually in a chaser pattern.
- After a successful update, the unit will automatically restart.
- Should the update fail, all 4 LEDs will flash ON, then OFF together at 1 second intervals.

NOTE: If the firmware update fails, restart the Communicator by cycling Power. For persistent update failures, contact your dealer. For UL/ULC listed installations, only local firmware updates are allowed.

APPENDIX A: COMMUNICATOR TROUBLESHOOTING

Table 5: Trouble LED indications

Trouble indication	Possible Causes	Trouble Possible Solution
No Indication	No Power	<ul style="list-style-type: none"> Check the power connections between the Panel and the Communicator. Confirm PC-LINK cable is properly installed between communicator and panel.
Yellow LED – ON Solid	Insufficient Signal Strength	<ul style="list-style-type: none"> Confirm that 3G/GPRS network service is active in your area. Ensure the antenna is securely connected to the radio. Check antenna stub cable is securely connected to the radio. If an external antenna is used ensure the antenna is securely screwed on to the antenna cable connector. Check external antenna for damage or open/short.
Trouble LED – 2 Flashes	Panel Supervision Trouble	<ul style="list-style-type: none"> Check Section [382]Toggle Option[5] is ON.(3G/GPRS/Ethernet Module Enabled) Ensure the PC-LINK cable between the Panel and Communicator is connected properly (not reversed) and is securely in place.
Yellow LED - 4 Flashes	Lockout Trouble	<ul style="list-style-type: none"> The SIM card has incorrect PIN programmed or has a PIN that the module does not recognize. Replace the SIM card.
Yellow LED – 5 Flashes	3G/GSM Trouble	<ul style="list-style-type: none"> Confirm that 3G/GPRS service is available and active in your area. Check all antenna connections. Ensure average radio signal strength is CSQ 6 or higher. (See Table 4). Ensure the SIM card is properly inserted into the SIM card holder. Ensure the SIM card has been activated. (Could take up to 24 hrs after install). If this trouble persists, you must relocate the Panel (and Communicator) or install an external antenna extension kit.
Yellow LED – 6 Flashes	Ethernet Trouble	<ul style="list-style-type: none"> Check with your ISP to confirm Internet service is active in your area. Ensure your Ethernet cable is securely inserted into the RJ45 jack of the Communicator and the Hub/Router/ Switch. Check the link light on the Hub/Router/ Switch is ON . If link light is OFF, try restarting the Hub/Router/ Switch. If DHCP is used, ensure that the unit has an assigned IP address from the server. In Section [851] [992] verify a valid IP address is programmed. If not, contact the Network administrator. If problem persists, replace the Ethernet cable and RJ45 connector.
Yellow LED – 7 Flashes	Receiver Not Available	<ul style="list-style-type: none"> Ensure that the Ethernet path has internet connectivity. If you are using a static IP address make sure the gateway and subnet mask are entered correctly. If the network has a firewall, ensure the network has the programmed outgoing ports open (Default UDP Port 3060 and Port 3065). Ensure that all the receivers are programmed for DHCP or have the proper IP address and port number. Ensure the 3G/GPRS Receiver APNs have been programmed with the Access Point Name provided by your 3G/GPRS provider.
Yellow LED – 8 Flashes	Receiver Supervision Trouble	<ul style="list-style-type: none"> This trouble is indicated when supervision is enabled and the unit is not able to successfully communicate with the receiver. If this trouble persists, contact your central station.
Yellow LED - 9 Flashes	FTC Trouble	<ul style="list-style-type: none"> The unit has exhausted all communications attempts to all programmed receiver for events generated by the Communicator. Restart the system, if trouble persists, contact your dealer.
Yellow LED – 10 Flashes	Connect24 Configuration Failure	<ul style="list-style-type: none"> The SIM is active but there is no programming for the Communicator. Ensure a profile has been programmed in Connect 24 for the SIM. You can confirm your programming by calling the Connect 24 VRU, or by logging into the Connect24 VRU web site.
Yellow LED – 11 Flashes	Remote Programming	<ul style="list-style-type: none"> The LEDs will flash when a remote firmware upgrade is in progress over Ethernet or 3G/GPRS. The LEDs will extinguish when update is complete. The LEDs will flash to indicate a remote programming session is active over Ethernet or 3G/GPRS. The LEDs will extinguish when the session terminates.
Yellow LED – 12 Flashes	Module Configuration Trouble	<ul style="list-style-type: none"> This indication appears when Section [021] System Account Code or Section [101]; [111]; [201]; and [211] Receiver Account Code have not been programmed. Ensure that a valid account code has been entered in these Sections.
All LEDs flashing together	Boot Loader Failed	<ul style="list-style-type: none"> Disconnect power, then reconnect power to the Communicator module.
Red and Yellow LEDs flashing together	Initialization Sequence	<ul style="list-style-type: none"> The unit is still initializing please wait while the unit gets its programming and establishes a connection to all programmed receivers. Note: This process may take several minutes to complete.
Only Green LEDs flashing	Hardware Default Jumper	<ul style="list-style-type: none"> The hardware default jumper is installed and must be removed. See Figure 3.

ETHERNET/CELLULAR PROGRAMMING OPTIONS

The Programming Sections described in this document can be viewed at the SCW LCD. To start programming enter: [*][8][installer code] [851][###], Where ### is the 3 digit Section number referenced in this section. The Programming Worksheets at the end of this document can be used to record the new values when programming changes have been made from the default values.

Programming Sections are accessed through Connect24. Installers may **review/record** programming Options at the panel.

NOTE: Ethernet/Cellular Programming Sections accessed through the panel are for **display purposes only**. Configuration changes must be done using Connect24.

SYSTEM OPTIONS

[001] Ethernet IP Address

Default (000.000.000.000)

Enter the IP address of the Communicator. Ensure that the IP address is unique to your Communicator on the local network. Format is 4 fields, each field is a 3 digit decimal number. Valid range: 000-255. If an IP address is programmed in this Section, the unit will operate with Static IP (DHCP disabled). Sections [002] and [003] must also be programmed when using Static IP addresses.

NOTE: Default for this Section is Dynamic Host Configuration Protocol (DHCP) enabled. When enabled, the DHCP Server will set values for: IP Address [001], Subnet Mask [002], and Gateway [003]. Programming an IP address in this Section will disable DHCP (Static IP).

[002] Ethernet IP Subnet Mask

Default (255.255.255.000)

Enter the Ethernet IP Subnet Mask of the Communicator. Format is 4 fields, each field is 3 digits. Valid range: 000-255.

NOTE: If DHCP is enabled, the DHCP Server will assign the subnet mask for this Section and the programmed value will be ignored.

[003] Ethernet Gateway IP Address

Default (000.000.000.000)

Enter the Ethernet Gateway IP address of the Communicator. The gateway IP address is required when a router is used on the local network to reach the destination IP address specified in Section [001]. Format is 4 fields, each field is a 3 digit decimal number. Valid range: 000-255.

NOTE: If DHCP is enabled, the DHCP Server will assign the Gateway IP address for this Section and the programmed value will be ignored.

[004] Receiver Supervision Interval

Default (0087/135)

When receiver supervision is enabled (ON) in Section [005] Toggle Option [3], the unit sends heartbeats to Ethernet Receiver 1 or Cellular Receiver 1 to test the communications path. Use this Section to set the interval time (in seconds) when heartbeats will be sent to the receivers. Valid range 000A-FFFF seconds. If the programmed value is less than (000A/10) seconds, supervision is disabled.

- **Receiver Window:** This is the supervision timeout that must be configured at the central station receiver.
- **Recommended Values:** This is the recommended heartbeat interval that should be programmed into the Communicator.
- For ULC installations, the Daily test transmission must be enabled over each available communication channel Sections [125] and [225]. When programming with Connect24, the recommended intervals will be programmed automatically when the required window is selected.

[005] System Toggle Options

[1] Ethernet Receiver 1 Supervised

Default (OFF)

(TL2603GR/TL260R only).

ON: Ethernet Receiver 1 will be supervised and heartbeats will be sent to Ethernet Receiver 1 based on the supervision interval programmed in Section [004].

OFF: Ethernet Receiver 1 will not be supervised. When disabled, heartbeat 1 is sent to the Ethernet receiver once every hour, regardless of supervision type (heartbeat 1 or 2). The heartbeat is resent every 5 seconds until ACK. If no event or heartbeat ACK is received after (Receiver Supervision Interval + 75 seconds), Supervisory trouble is indicated.

NOTE: Ethernet Receiver 2 can not be supervised.

[2] Cellular Receiver 1 Supervised

Default (OFF)

ON: Cellular Receiver 1 will be supervised and heartbeats will be sent to Cellular Receiver 1 based on the supervision interval programmed in Section [004]. If ACK to heartbeat is not received, it is retransmitted every 5 seconds. Failure to ACK 2 consecutive heartbeats will reset the radio.

OFF: Cellular Receiver 1 will not be supervised. When disabled, heartbeat is not sent to the receiver. Supervisory trouble is indicated.

NOTE: Cellular Receiver 2 can not be supervised.

[3] Supervision Type

Default (OFF)

ON: Heartbeat 1 (Commercial Supervision). This supervision type is suitable for applications where swap detection is required on the supervisory packet.

OFF: Heartbeat 2 (Residential Supervision). This supervision type is suitable for applications where supervision of the communication path to the receiver is required. (no swap detection).

NOTE: Commercial supervision is more data intensive than residential supervision and should only be used when required to meet the approval for the installation.

[4] Primary Path

Default (OFF - **TL2603GR/TL260R**) (ON - **3G2060R**)

ON: Cellular channel is the primary path. Ethernet channel is the secondary path, if it exists.

OFF: Ethernet channel is the primary path in a dual Communicator. Cellular channel is the secondary path.

[5] Redundant Communications

Default (OFF) (**TL260R** only)

ON: Events will be communicated to Ethernet Receiver 1 and Cellular Receiver 1 at the same time. Events will be communicated to Ethernet Receiver 2 and Cellular Receiver 2 at the same time. As long as the event is successfully communicated to 1 of the 2 paths (Ethernet or Cellular) the Communicator will move on to the next event.

NOTE: Do not configure Ethernet Receiver 1 and Cellular Receiver 1 to communicate using a common receiver configuration (i.e., identical Receiver IP address and Receiver Remote Port). **OFF:** Events will be communicated to the receivers individually.

Toggle should be OFF when guaranteed message delivery to both receivers is required.

[6] Remote Firmware Upgrade

Default (ON)

ON: The Communicator module firmware can be remotely upgraded using the Ethernet/Cellular paths.

OFF: The Communicator module firmware can not be remotely upgraded. Local firmware upgrade is still possible.

[7] Alternate Test Transmissions

Default (OFF).

ON: When the periodic test transmission interval occurs, the test transmission will alternate between being sent to the primary and secondary receivers with each test transmission interval.

OFF: When the periodic test transmission interval occurs, the test transmission will be sent to the programmed receivers, based on the settings of the periodic test transmission reporting codes.

[8] Cellular Low Signal Trouble.

Default (OFF)

This option masks the Low Signal trouble from the Cellular trouble event.

ON: A Cellular Trouble event is transmitted to receiver when the radio signal level falls below threshold level (average CSQ level is 4 or less).

OFF: A Cellular Trouble event is **not** transmitted to receiver when the radio signal level falls below threshold level (average CSQ level is 4 or less).

[006] System Toggle Options 2

[1] Ethernet 1 Receiver Enabled.

Default (ON) (OFF for **3G2060R**).

ON: Ethernet Receiver 1 is enabled.

OFF: Ethernet Receiver 1 is disabled.

[2] Ethernet 2 Receiver Enabled.

Default (ON) (OFF for **3G2060R**).

ON: Ethernet Receiver 2 is enabled.

OFF: Ethernet Receiver 2 is disabled.

[3] Reserved. ().

[4] Cellular 1 Receiver Enabled.

Default (ON).(OFF for **TL2603GR**)

ON: Cellular Receiver 1 is enabled.

OFF: Cellular Receiver 1 is disabled.

[5] Cellular 2 Receiver Enabled.

Default (ON).(OFF for **TL2603GR**)

ON: Cellular Receiver 2 is enabled.

OFF: Cellular Receiver 2 is disabled.

[6] Reserved ().

[7] DLS Over Cellular.

Default (ON).

NOTE: Program this toggle as OFF if you want to completely disable DLS from using the Cellular path.

ON: DLS is enabled on the Cellular path.

OFF: DLS is disabled on the Cellular path.

NOTE: If this Toggle is OFF, DLS sessions will occur on the Ethernet path only, regardless of Primary Path set in Section [005] Toggle Option [4]. If it is ON then the Communicator will connect to the Primary path first for DLS and if the session fails, the Secondary path will be used.

[8] Reserved ().

[007] DNS Server IP 1

Default (000.000.000.000)

ⓘ Programming this Section is **not** permitted on a UL/ULC listed system.

Enter the IP address for DNS Server 1. Format is 4 fields, each field is a 3 digit decimal. Valid range: 000-255.

NOTE: If no value is programmed and DHCP is used, the DHCP Server will configure the address. If an address is programmed and DHCP is used, the address that you program will be used instead of the DHCP address.

[008] DNS Server IP 2

Ⓞ Programming this Section is **not** permitted on a UL/ULC listed system.

Default (000.000.000.000)

Enter the IP address for DNS Server 2. Format is 4 fields, each field is a 3 digit decimal. Valid range: 000-255.

NOTE: If no value is programmed and DHCP is used, the DHCP Server will assign this value. If an address is programmed and DHCP is used, the address that you program will be used instead of the DHCP address.

PROGRAMMING OPTIONS

[010] System Toggle Option

Default (Disable)

[1] This bit is used to enable/disable two way audio over 3G.

[011] Installer Code

Default (CAFE)

Program your installer code for this Communicator module. The installer code will be required when programming the Communicator module. Valid range: 0000 - FFFF.

[012] DLS Incoming Port

Default (0BF6/3062)

The DLS Incoming Local Port (listening port) is the port DLS IV will use when connecting to the Communicator. If a router or gateway is used, it must be programmed with a Transmission Control Protocol (TCP) port forward for this port to the Communicator module IP address. Valid range: 0000 - FFFF.

[013] DLS Outgoing Port

Default (0BFA/3066)

The DLS Outgoing Port is used for outgoing session to DLS IV after an SMS request has been sent to the Communicator. Use this Section to set the value of the local outgoing port. The value must be changed if the Communicator is located behind a firewall and must be assigned a particular port number, as determined by your network administrator. In most cases, changing the default value or configuring your firewall with this port is not required.

Valid range: 0000-FFFF.

NOTE: If Section [006] Toggle Option [7] is ON, DLS will use the Primary path for session. If Section [006] Toggle Option [7] is OFF DLS will use the Ethernet path, if available.

[021] Account Code

Default (FFFFFF)

The account code is included when transmitting any events generated by the Communicator. (e.g., Panel Absent Trouble). It is recommended that the account code be the same as the control panel account number. Valid range: 000001-FFFFFFE. If 4 digit account codes are needed the 2 lowest digits shall be programmed as FF.

(e.g., Account 1234 is programmed as:1234FF).

NOTE: Programming this Section with all 0 or F will cause a Module Configuration Trouble.

[022] Communications Format

Default (04)

Program 03 for Contact ID (CID). Program 04 for SIA. The module can be configured to send Events in SIA or CID format. The SIA communication format follows the level 2 specifications of the *SIA Digital Communication Standard - October 1997*. This format will send the account code along with its data transmission. The transmission will look similar to the following at the receiver. Example: **Nri0 ET001**

Where: **N** = New Event; **ri0** = Partition/Area identifier; **ET** = Panel Absent Trouble; **001** = Zone 001.

COMMUNICATIONS REPORTING CODES

Table 6: Communications Reporting Codes

Event	SIA Identifier	SIA Reporting Code	CID Qualifier	CID Event Code	CID Reporting Code	CID User/Zone
[023] Panel Absent Trouble	ET	001	1	3	55	001
[024] Panel Absent Trouble Restore	ER	001	3	3	55	001
[025] Radio Activation Restore	RS	001	3	5	52	001
[026] Ethernet 1 Test Transmission	RP	001	1	6	A3	951
[027] Ethernet 2 Test Transmission	RP	002	1	6	A3	952
[028] Cellular 1 Test Transmission	RP	003	1	6	A3	955
[029] Cellular 2 Test Transmission	RP	004	1	6	A3	956
[030] FTC Restore	YK	001	3	3	54	001

[023] Panel Absent Trouble

Default (FF)

Program 00 to disable this event or FF to enable. This event will occur when communications with the panel have been lost for more than 60 seconds.

[024] Panel Absent Trouble Restore

Default (FF)

Program 00 to disable this event or FF to enable. This event will occur when communications with the control panel have resumed.

[025] Radio Activation Restore

Default (FF)

Program 00 to disable this event or FF to enable. This event will occur after any successful Connect24 programming session.

SYSTEM TEST OPTIONS [026 - 029]**Test Transmissions to Primary Receiver, with Backup to Secondary Receiver:**

Set Ethernet Section [026] to (FF); [027] to (00). Set Cellular Section [028] to (FF); [029] to (00).

- If the test transmission fails to the primary receiver it will backup to the secondary receiver.
- If the test transmission fails to the secondary receiver an FTC trouble will be generated.

Test Transmission Unique to Primary and Secondary Receivers:

Set Ethernet Section [026] to (FF); [027] to (FF). Set Cellular Section [028] to (FF); [029] to (FF).

- The module will send periodic test transmissions to each receiver independently, with no backups.
- If the test transmission fails to any of the programmed receivers, an FTC trouble will be generated.

Alternate Test Transmission:

Alternate Test Transmission can be enabled or disabled in Section [005] Toggle Option [7].

[026] Ethernet 1 Transmission

Default (FF)

Program 00 to disable this event transmission or FF to enable. See System Test Options (above) for details on settings.

[027] Ethernet 2 Transmission

Default (00)

Program 00 to disable this event transmission or FF to enable. See System Test Options (above) for details on settings.

[028] Cellular 1 Transmission

Default (FF)

Program 00 to disable this event transmission or FF to enable. See System Test Options (above) for details on settings.

[029] Cellular 2 Transmission

Default (00)

Program 00 to disable this event transmission or FF to enable. See System Test Options (above) for details on settings.

NOTE: The time interval (in minutes) between periodic tests is programmed in Section [125] (Ethernet) and Section [225] (Cellular).**[030] FTC Restore**

Default (FF)

Program 00 to disable this event transmission or FF to enable. This event will occur when an FTC Trouble on the system restores.

[033] Communicator Firmware Update Begin

Default (FF);

Program 00 to disable this event transmission or FF to enable. This event will occur when the communicator firmware update begins.

[034] Communicator Firmware Update Successful

Default (FF);

Program 00 to disable this event transmission or FF to enable. This event will occur when the communicator firmware update successfully completed.

[035] Panel Firmware Update Begin

Default (FF);

Program 00 to disable this event transmission or FF to enable. This event will occur when the panel firmware update begins.

[036] Panel Firmware Update Successful

Default (FF);

Program 00 to disable this event transmission or FF to enable. This event will occur when the panel firmware is updated successfully.

[037] Panel Firmware Update Fail

Default (FF);

Program 00 to disable this event transmission or FF to enable. This event will occur when the panel firmware updated has failed.

Table 7: Panel Tamper Alarm Restore

Event	SIA Identifier	SIA Reporting Code	Contact ID Qualifier	Contact ID Event Code	Contact ID Reporting Code	Contact ID User/Zone
[033]Comm. FW Update Begin	LB	00	1	9	03	002
[034]Comm. FW Update Successful	LS	00	3	9	03	002
[035]Panel FW Update Begin	LB	00	1	9	03	003
[036]Panel FW Update Successful	LS	00	3	9	03	003
[037]Panel FW Update Fail	LU	00	1	9	04	003

ETHERNET RECEIVER 1 OPTIONS

[101] Ethernet Receiver 1 Account Code

Default (0000000000)

The account code is used by the central station to distinguish between transmitters. This account code is used when transmitting heart-beat signals to the central station receiver. Signals received from the Panel will use the control panel account number. Valid range: 0000000001-FFFFFFFFFE. Programming all **0** or all **F** will cause a Module Configuration Trouble.

NOTE: If Ethernet Receiver 1 and Cellular Receiver 1 are programmed as the same receiver (IP and port number are identical), Ethernet Receiver 1 account code will be used.

[102] Ethernet Receiver 1 DNIS

Default (000000)

The Dialed Number Information Service (DNIS) is used in addition to the Account Code to identify the Communicator module at the central station. Valid range: 000000 - 099999. Value is entered as a leading 0 followed by the 5 digit DNIS. Format is Binary Coded Decimal (BCD).

NOTE: Each Ethernet/Cellular receiver must be programmed with a unique DNIS.

[103] Ethernet Receiver 1 Address

Default (127.000.000.001)

The default address enables the Communicator to operate in **Unattended Mode**.

Unattended Mode is used when a receiver is not available and the unit is required to perform DLS sessions. Typically used where the customer programs the control panel daily due to access control and still wants to receive alarms without buying extra hardware (receiver) or software.

NOTE: When a valid IP address has been programmed, Ethernet Receiver 1 is enabled and will communicate events over the Ethernet channel.

Ethernet Receiver 1 and Cellular Receiver 1 may be configured to communicate to the same central station receiver. To configure the device to operate using this Common Receiver Mode functionality, program Ethernet Receiver 1 and Cellular Receiver 1, IP address and port number with identical values.

NOTE: When operating in Common Receiver Mode, Ethernet Receiver 1 account code will be used for Ethernet and Cellular.

[104] Ethernet Receiver 1 Remote Port

Default (0BF5/3061)

This Section determines the remote port of Ethernet receiver 1. Valid range: 0000 - FFFF.

[105] Ethernet Receiver 1 Local Port

Default (0BF4/3060)

Use this Section to set the value of the local outgoing port. Set the value of this port when your installation is located behind a firewall and must be assigned a particular port number as determined by your central station system administrator. Valid range: 0000 - FFFF.

[106] Ethernet Receiver 1 Domain Name

Default ()

Enter the Domain Name as 32 ASCII characters.

ⓘ Programming this Section is **not** permitted on a UL/ULC listed system.

ETHERNET RECEIVER 2 OPTIONS

[111] Ethernet Receiver 2 Account Code

Default (0000000000)

The account code is used by the central station to distinguish between transmitters. The account code is used when transmitting heart-beat signals to the central station receiver. Signals received from the control panel will use the control panel account number. Valid range: 0000000001-FFFFFFFFFE. Programming all **0** or all **F** will cause a Module Configuration Trouble (yellow LED=12 flashes).

NOTE: If both Ethernet Receiver 2 and Cellular Receiver 2 are the same receiver (IP and port number are identical), Ethernet Receiver 2 account will be used for Ethernet and Cellular.

[112] Ethernet Receiver 2 DNIS

Default (000000)

The DNIS is used in addition to the account code to identify the Communicator module at the central station. Valid range: 000000 - 099999. Value is entered as leading 0 followed by the 5-digit DNIS. Format is BCD.

NOTE: Each Ethernet/Cellular receiver must be programmed with a unique DNIS.

[113] Ethernet Receiver 2 Address

Default (000.000.000.000)

Programming the Ethernet receiver 2 IP address with 000.000.000.000 will disable Ethernet.

Enter the Ethernet receiver 2 IP address. This address will be provided by your central station system administrator. Format is 4 fields, each field is a 3-digit decimal. Valid range: 000-255.

NOTE: When a valid IP address has been programmed, Ethernet Receiver 2 is enabled and will communicate events over the Ethernet channel.

Ethernet Receiver 2 and Cellular Receiver 2 may be configured to communicate to the same central station receiver.

To configure the device to operate using this common receiver mode functionality, program the Ethernet Receiver 2 and Cellular Receiver 2, IP address and port number with the same values. When operating in common receiver mode the Ethernet Receiver 2 account code will be used for communications over Ethernet and Cellular.

NOTE: Do not program Ethernet Receiver 1 and Ethernet Receiver 2 to communicate to same receiver.

[114] Ethernet Receiver 2 Remote Port

Default (0BF5/3061)

This Section is used to program the port number used by Ethernet Receiver 2. Set the value of this port when your installation is located behind a firewall, and must be assigned a particular port number as determined by your central station system administrator. Valid range: 0000 - FFFF.

NOTE: Do not program Ethernet Receiver 1 and Ethernet Receiver 2 Port with the same value.

[115] Ethernet Receiver 2 Local Port

Default (0BF9/3065)

Use this Section to program the value of the local outgoing port. You can set the value of this port when your installation is located behind a firewall and must be assigned a particular port number as determined by your network administrator. Valid range: 0000 - FFFF.

NOTE: Do not program Ethernet Receiver 1 and Ethernet Receiver 2 Port with the same value.

[116] Ethernet Receiver 2 Domain Name

Default ()

D Programming this Section is **not** permitted on a UL/ULC listed system.

Enter the Domain Name as 32 Character ASCII.

ETHERNET OPTIONS**[124] Ethernet Test Transmission Time**

Default (9999)

Enter a 4 digit number (0000-2359) using the 24-hour clock format (HHMM) to set the test transmission time of day.

Valid range: 00 - 23 hours (HH) and 00 - 59 minutes (MM). Programming a value of 9999 will disable the test transmission time.

NOTE: The internal date and time will automatically be programmed when the unit communicates with the primary receiver.

[125] Ethernet Test Transmission Cycle

Default (000000)

This value represents the interval between test transmissions, in minutes. Valid range: 000000 - 999999 minutes. Once the unit has sent the initial periodic test transmission, all future test transmissions will be offset by the programmed number of minutes. See Sections [026] - [029].

Table 8: Ethernet Test Transmission Interval

Test Transmission Interval	Daily	Weekly	Monthly
Programmed Minutes	001440	010080	043200

NOTE: Minimum value is 000005 minutes. Programming an interval that is less than 5 minutes will disable test transmission.

CELLULAR RECEIVER 1 OPTIONS**[201] Cellular Receiver 1 Account Code**

Default (0000000000)

The account code is used by the central station to distinguish between transmitters. This account code is used when transmitting heart-beat signals to the central station receiver. Signals received from the control panel will use the control panel account number. Valid range: 0000000001 - FFFFFFFF00. Programming all 0 or all F will cause a Module Configuration Trouble (yellow LED = 12 flashes).

[202] Cellular Receiver 1 DNIS

Default (000000)

The DNIS is used in addition to the account code to identify the Communicator module at the central station. Valid range: 000000 - 099999. Values are entered as leading 0 followed by the five digit DNIS. Format is BCD.

NOTE: Each Ethernet/Cellular receiver must be programmed with a unique DNIS.

[203] Cellular Receiver 1 Address

Default (000.000.000.000)

Enter the Cellular Receiver 1 IP address. This information will be provided by your central station system administrator. Each 3-digit segment of the address must be within a valid range of 000-255.

NOTE: When a valid IP address has been entered, the Cellular is enabled and will communicate events over the Cellular channel.

[204] Cellular Receiver 1 Port

Default (0BF5/3061)

This Section determines the port used by Cellular Receiver 1. Change the default value of this port when your installation is located behind a firewall, and must be assigned a particular port number as determined by your central station system administrator. Valid range: 0000 - FFFF.

NOTE: Programming this Section with 0000 will disable the receiver.

[205] Cellular Receiver 1 APN

Default ()

The Access Point Name (APN) determines the Cellular network that the Communicator will connect to. This information is available from your network carrier. Program this Section as 32 ASCII characters.

NOTE: When a SIM card with a custom APN is used, the unit will not have access to the Internet. DLS and remote flash can still be done if Section [221] is programmed with a valid Public APN.

[206] Cellular Receiver 1 Domain Name

Default ()

ⓘ Programming this Section is *not* permitted on a UL/ULC listed system.

Enter the Domain Name as 32 ASCII characters. This information will be provided by your central station system administrator.

CELLULAR RECEIVER 2 OPTIONS**[211] Cellular Receiver 2 Account Code**

Default (0000000000)

The account code is used by the central station to distinguish between different transmitters. This account code is used when transmitting signals to the central station receiver. Signals received on the panel will use the panel account number. Valid range: 0000000001 - FFFFFFFF0E.

NOTE: Programming this Section as all 0 or F will cause a Module Configuration Trouble (yellow LED = 12 flashes).

[212] Cellular Receiver 2 DNIS

Default (000000)

The DNIS is used in addition to the Account Code to identify the Communicator module at the central station. Valid range: 000000 - 099999. Values are entered as a 0 followed by the 5 digit DNIS value. Format is BCD.

NOTE: Each Ethernet/Cellular receiver must be programmed with a unique DNIS.

[213] Cellular Receiver 2 Address

Default (000.000.000.000)

Enter the Cellular Receiver 2 IP address. This IP address will be provided by your central station. Format is 4 fields, each field is 3-digit decimal. Valid range: 000 - 255.

NOTE: When a valid address has been entered, Cellular Receiver 2 is enabled and will communicate events over the Cellular path.

[214] Cellular Receiver 2 Port

Default (0BF5/3061)

This Section defines the port of Cellular Receiver 2. Change the value of this port when your installation is located behind a firewall and must be assigned a particular port number, as determined by your central station system administrator. Valid range: 0000 - FFFF.

NOTE: Do not program Cellular Receiver 1 and Cellular Receiver 2 to communicate to the same receiver.

[215] Cellular Receiver 2 APN

Default ()

The APN determines the Cellular network that the Communicator will connect to. This information is available from your network carrier. Program this Section with up to 32 ASCII characters.

NOTE: When a SIM card with a custom APN is used, the unit will not have access to the internet. DLS and remote flash can still be done if Section [221] is programmed with a valid Public APN.

[216] Cellular Receiver 2 Domain Name

Default ()

ⓘ Programming this Section is *not* permitted on a UL/ULC listed system.

Enter the Cellular Receiver 2 Domain Name with up to 32 ASCII characters.

CELLULAR OPTIONS**[221] Cellular Public Access Point Name**

Default ()

When the Communicator is operating on a private APN, use this Section to select a public APN for DLS and Remote Firmware Update. This information is available from your network carrier. The APN identifies the public Cellular network that the Communicator will connect to.

[222] Cellular Login User Name

Default ()

Some network carriers require you to provide login credentials when connecting to an APN. Program your login User Name in this Section. Format is up to 32 ASCII characters.

NOTE: This Section is not accessible via SCW keypad programming.

[223] Cellular Login Password

Default ()

Some network carriers require you to provide login credentials when connecting to an APN. Program your login Password in this Section.

Format is up to 32 ASCII characters.

[224] Cellular Test Transmission Time of Day

Default (9999)

Enter a 4 digit value using the 24-hour clock format (HHMM) to set the test transmission time of day. Valid range: 00-23 for the hours (HH) and 00-59 for the minutes (MM).

NOTE: To disable the test transmission time of day enter 9999 or FFFF in this Section.

The internal date and time will be automatically programmed by the primary receiver only.

[225] Cellular Test Transmission Cycle

Default (000000)

This value represents the interval in between test transmissions in minutes. Valid range: 000000 - 999999 minutes. Once the unit has sent the initial periodic test transmission, all future test transmissions will be offset by the programmed number of minutes. See Sections [026] - [029].

Table 9: Cellular Test Transmission Interval

Test Transmission Interval	Daily	Weekly	Monthly
Programmed Minutes	001440	010080	043200

NOTE: Minimum value is 000005 minutes. Programming an interval that is less than 5 minutes will disable test transmission.

[226] Cellular Trouble Delay

Default (00)

This option is used to program the delay, in minutes, for reporting a Cellular Trouble Delay. Valid entries are 00 - FF. (e.g., for a 10 minute Cellular Trouble Delay enter: **0A**). There is no reporting delay if value is programmed as 00.

COMMAND AND CONTROL OPTIONS**[301] Command and Control Toggle Options**

[1] SMS Notification Default (ON).

[2] Reserved Default ().

[3] SMS Command and Control Default (ON).

[4] Reserved Default ().

[5] SMS Character Format Default.

ON: SMS Unicode, maximum message length is 70 characters.

OFF: 7 bit SMS, maximum message length is 160 characters.

[6] Long SMS Message Handling Default (OFF).

ON: If longer than maximum message length, it is split and sent as multiple SMS messages.

OFF: If longer than maximum message length, a single, truncated SMS message is sent.

[7-8] Reserved Default ().

[311] - [318] SMS Phone Number 1 - 8

Default () ;

These Sections may be programmed through DLS IV or the keypad. Up to 8 SMS telephone numbers (4 - 32 digits) can be programmed in Section [31x] Where x is an SMS telephone number from 1 to 8. Leaving programming blank for a telephone number will disable that number. The User can program their own mobile telephone numbers at the keypad using [*] [6] <> “SMS Programming”. The SMS Command and Control feature utilize the SMS messaging service provided by the Cellular network and is subject to the limitations of SMS messaging. These limitations include delayed messages and lack of guaranteed delivery.

NOTE: SMS Command and Control (Sections [601] - [618]) will only process messages from the mobile telephone numbers programmed in this Section if SMS Command and Control is enabled [301][3] ON. SMS responses are listed in Sections [621] - [630]. A blank telephone number is disabled.

SMS COMMAND AND CONTROL FUNCTIONS

Users can send SMS text messages from their mobile phone to the communicator cellular phone number assigned to their system. Commands are only accepted from telephone numbers that have been programmed in Sections [311]-[318]. The system will reject messages sent from telephone numbers that are not on the programmed list.

When the received SMS text matches a valid Section message, the function is performed on the control panel. Text messages are not case sensitive and extra spaces are ignored. A User Access Code may be required for some SMS messages.

The User can send just the partition number or the complete label.(e.g., “Away arm Partition 2 1234” is treated the same as “away arm 2 1234”).

The SMS Message format is in 3 parts: **Command, Partition Label** (or only the partition number), and **Access Code**.

- If an Access Code is included in the message, it is sent to the control panel for validation, along with the requested function.
- If the panel is configured to require an Access Code and the code is not sent (or invalid) the panel will fail the function (unsuccessful).
- If the panel fails the function, an SMS response message is sent to the user. The SMS response will echo the command sent, followed by the label “unsuccessful”. (e.g., “night arm partition 2 1234 unsuccessful”).
- The partition label or partition number may be excluded from the SMS request in a single partition system (e.g., disarm 9123).

NOTE: The communicator cellular phone number can be viewed in Section [851], [996] and/or [851], [229] or by user entering *6, then scrolling down to ‘SMS Programming’ and scrolling down to “Cellular phone No.” [<] [>] “Cellular Phone No.” at the keypad. An Access Code is required for all SMS commands, except Help.

[601] Stay Arm

Default (Stay Arm);

Send this command to the system to stay arm. It may be followed by a Partition Label or partition number and Access Code.

[602] Away Arm

Default (Away Arm);

Send this command to the system to away arm. It may be followed by a Partition Label or partition number and Access Code.

[603] Night Arm

Default (Night Arm);

Send this command to the system to night arm. It may be followed by a Partition Label or partition number and Access Code.

[604] Disarm

Default (Disarm);

Send this command to the system to disarm. It may be followed by a Partition Label or partition number and Access Code.

[605] - [608] Activate Command Output 1 - 4

Default (Activate Command Output n);

Where n is a number from 1 - 4. Send this command to the system to activate a command output. It may be followed by a Partition Label or partition number and Access Code.

[609] - [612] Deactivate Command Output 1 - 4

Default (Deactivate Command Output n);

Where n is a number from 1 - 4. Send this command to the system to deactivate a command output. This command may be followed by a Partition Label or partition number and optional Access Code.

[613] Bypass

Default (Bypass);

Send this command to the system to bypass a Zone. This command should be followed by a Zone label or Zone number and Access Code.

[614] Unbypass

Default (Unbypass);

Send this command to the system to unbypass a Zone. This command should be followed by the Zone label or Zone number and Access Code.

[615] Status Request

Default (Status Request);

Send this command to request the status of the system. It may be followed by a partition label or partition number and Access Code. If partition label is omitted, status of all enabled partitions will be sent. If there is a trouble on the system, the system label is sent, followed by the trouble label, then the partition status.

NOTE: Status Request response may require more than one SMS message, depending on status of the system. There is a 10-second delay between transmission of SMS messages.

[616] Alarm Memory Request

Default (Alarm Memory Request);

Send this command to the system to request the alarm memory from the system. This command may be followed by a Partition Label or partition number, and Access Code. If partition label is omitted, alarm memory of all partitions will be sent. Alarm memory responses will include Partition label and Zone label. Up to 8 partitions may be contained in 1 message.

NOTE: Alarm Memory Request response may require more than one SMS message, depending on alarm memory of the unit. There is a 10-second delay between transmission of SMS messages.

[617] Help

Default (Help);

When help is sent, the SMS response is a listing of all interactive commands that can be sent to the module. Access Code is not required.

SMS COMMAND AND CONTROL RESPONSE

NOTE: SMS Command and Control Response messages are up to 32 ASCII characters (Maximum 160 characters per SMS message). The message language is specified in Section [009]. SMS responses are sent to the phone that initiated the command.

[621] Function Successful

Default (Successful);

When an SMS Command and Control function is successfully performed by the panel, the successful label is included in the response sent to the user, following the command requested. (e.g., if “stay armed” command is completed by the panel, SMS response is: “stay armed successful”).

[622] Function Unsuccessful

Default (Unsuccessful);

When an SMS Command and Control function is not successfully performed by the panel, the command sent to the unit will be included in the response sent to the user, followed by this label. (e.g., if “stay armed” command is not completed, SMS response is: “stay armed unsuccessful”).

[623] Invalid Command

Default (Invalid Command);

This label will be included in the response message if the command was not accepted as a valid SMS command.

[624] System Stay Armed

Default (Stay Armed);

This label will be included in the response to a status request command if a partition is stay armed.

[625] System Away Armed

Default (Away Armed);

This label will be included in the response to a status request command if a partition is away armed.

[626] System Night Armed

Default (Night Armed);

This label will be included in the response to a status request command if a partition is night armed.

[627] System Disarmed Ready

Default (Disarmed Ready);

This label will be included in the response to a status request command if a partition is disarmed and is ready to arm.

[628] System Disarmed Not Ready

Default (Disarmed Not Ready);

This label will be included in the response to a status request command if a partition is disarmed and is not ready to arm.

[629] System is in Alarm

Default (is in Alarm);

This label will be included in the response to a status request command if a partition is in alarm.

[630] Trouble Label

Default (Service is Required);

This label will be included in the response of Status Request if there is a trouble present on the system.

[631] No Alarms in Memory

Default (No Alarm Memory);

This label will be included in the response to an Alarm Memory Request if there are no alarms on the system.

[634] Error Code

Default (Error Code):

When an SMS initiated function fails, the module will send an error code to the telephone number that was source of the SMS request. Message format is: **[Account Label] [Date and Time] [Error Code] [Error Type]**. Fields are "space" delimited.

Table 10: Error Code Format

Class	Definition	Error	Definition
01	DLS	01	Bad SMS format
		02	Session failed due to local network issues
		03	Unable to connect to remote server
		04	Bad DLS access code
		05	DLS lockout active
02	TFTP	01	Bad SMS format
		02	Session failed due to local network issues
		03	Unable to connect to remote server
		04	File not found on TFTP server
		05	File not found on TFTP server
		06	Update was unsuccessful
		07	Update was successful

RECEIVER DIAGNOSTIC TESTING

[901] Diagnostic Test Transmission

[1]	Ethernet 1	(OFF).
[2]	Ethernet 2	(OFF).
[3]	Cellular 1	(OFF).
[4]	Cellular 2	(OFF).
[5],[6],[7],[8]	Reserved	(OFF).

This Section may be used by the installer to force the Communicator to send an immediate test transmission to specific receivers, to verify that the communications paths are available. Diagnostic Test Transmission failure will indicate as FTC trouble (Yellow LED = 9 flashes). If an FTC error occurs when testing all receivers, select only one receiver and repeat test to isolate the receiver that is not communicating.

SYSTEM INFORMATION (READ ONLY)

NOTE: Sections [987] - [998] are provided for information (Read Only). Values in these Sections can not be modified by the Installer.

[987] Language Version

This Section will display the current Language version of the Communicator.

[988] DNS 1 IP Address

This Section will display the IP address of DNS Server 1. This is useful when the unit is configured for DHCP and you need to see the IP address was assigned to the device by the DHCP Server. This value is programmed in Section [007] or assigned by DHCP.

[989] DNS 2 IP Address

This Section will display the IP address of DNS Server 2. This is useful when the unit is configured for DHCP and you need to see the IP address that was assigned to the device by the DHCP Server. This value is programmed in Section [008] or assigned by DHCP.

[990] Boot Loader Version

This Section will display the current Boot Loader version of the Communicator.

[991] Firmware Version

This Section will display the current firmware version of the device. Update worksheets with new version after a flash update is completed.

[992] Ethernet IP Address

This Section will display the IP address of the Ethernet connection. This value is programmed in Section [001] or assigned by DHCP.

[993] Ethernet Gateway Address

This Section will display the IP address of the Ethernet Gateway. This value is programmed in Section [003] or assigned by DHCP.

[994] Cellular IP Address

This Section will display the current dynamic IP address assigned by DHCP to the Cellular connection.

NOTE: Cellular uses DHCP (Dynamic IP) only. The Cellular IP address is always provided by the Cellular network (i.e., not programmable).

[995] SIM Number

This Section will display the Subscriber Identity Module (SIM) number of the SIM card installed in the Communicator. Format is: Major Industry Identifier (2 digits) Mobile Country Code (2 or 3 digits); Mobile Network Code (2 - 3 digits); Unique Number (10 - 12 digits); and Checksum (1 digit). Valid SIM numbers range is: 18 - 21 numbers. This number is printed on SIM and the outside of the Communicator carton.

NOTE: The Checksum digit is omitted on 19-digit SIM Card numbers.

[996] Cellular Telephone Number

NOTE: This Section will display the Cellular telephone number of the SIM. This telephone number is required by the Installer for DLS and remote firmware (flash) update. User can access this telephone number by entering [*] [6] <> "Cellular Phone No." to display the phone number.

[997] IMEI Number

This Section will display the unique 15-digit International Mobile Equipment Identity (IMEI) of the radio. Format is: Reporting Body Identifier (2 digits), Allocation Number (4 digits); Final Assembly Code (2 digits); Serial Number (6 digits); and a check digit.

[998] MAC Address

This Section will display the unique 12-digit, hexadecimal number assigned as the Media Access Control (MAC) address of the device.

SYSTEM RESET DEFAULTS

[999] Software Default

Default (99);

The Software default allows the installer to refresh the unit after changes and also return the Communicator to the default state.

00: Default Module. All programming Sections in module revert to factory settings. This will erase all existing programming of the unit.

55: Reset. The Communicator is reset. This option is equivalent to power cycling the Communicator.

COMMUNICATOR STATUS, INITIALIZATION, DIAGNOSTICS AND TROUBLESHOOTING

[984] Communicator Status

The communicator status sections are intended to provide the installer with real-time status of the communicator's functionality, operational readiness, failures, and potential malfunctions that may affect flawless operation of the communicator and its primary function of sending signal to the central station in case the monitored event occurs.

The communicator status is displayed in the form of a 6-digit CODE (6 hexadecimal numbers) as in the following pattern: 00000F. The range of the code is from: 00000F – 2220CF. Not all numbers in this range are assigned a status code (Some numbers are skipped, i.e. not assigned the code).

Each digit represents a status or trouble indicator (or assigned function when no trouble is present) as described below:

1. Digit 1 - Signal Indicator 1, displays the presence/strength of signal 1.
2. Digit 2 - Signal Indicator 2, displays the presence/strength of signal 2.
3. Digit 3 - Network Indicator, displays the presence (operational status) of network.
4. Digit 4 & 5 – TROUBLE INDICATOR displays the type of problem/malfunction on communicator or modules associated with and connected to communicator.
5. Digit 6 – Reserved for future use.

For example, status code 11002F – when interpreted means: “Signal Indicator 1 OK, Signal indicator 2 OK, there is no network trouble, and there is trouble in the communicator, Panel supervision trouble.” For details see the table below:

Table 11: Communicator Status and Trouble Coding in Hexadecimal Numbers

Digit 1		Digit 2		Digit 3		Digit 4 & 5		Digit 6
Signal indicator 1		Signal indicator 2		Network indicator		TROUBLE INDICATOR		Future use
0	Off	0	Off	0	Off	00	Off (No trouble)	F
1	On	1	On	1	On	01	Future use	F
2	Flashing	2	Flashing	2	Flashing	02	Panel supervision trouble	F
						03	Future use	F
						04	Lockout trouble	F
						05	3G/Cellular trouble	F
						06	Ethernet Trouble	F
						07	Receiver Not Available	F
						08	Receiver Supervision trouble	F
						09	FTC Trouble	F
						0A	C24 Configuration SMS Failure	F
						0B	Future use	F
						0C	Module configuration Trouble	F

The communicator status codes will indicate the signal levels with digit 1 and 2, a network status with digit 3, and the trouble status with digit 4 and 5 as indicated in table above. For example status code 11000F would display following status:

1 – On = Signal indicator 1, is ON

1 – On = Signal indicator 2, is ON

0 – OFF = Network indicator, network is working

00 – TROUBLE INDICATOR = there is no trouble on the communicator.

F – Future code not assigned yet. It is sixth hexadecimal digit. It could be also ‘ - ’ (dash) instead of letter F (11000-).

In this example both signal indicators are on indicating that communicator has excellent signal level; the network indicator is OFF showing that we do not have any network problems and trouble indicators are both OFF indicating that we don't have any trouble on the communicator.

[985] Radio Initialization Status

The radio initialization status is intended to provide the installer with real-time status of radio communication. The radio initialization status is displayed in an 8 bit toggle option. Each digit indicates one task in the radio initialization process as follows:

1. Radio power up
2. Receiving the SMS from C24
3. Radio reset
4. Radio attached to network
5. Receiver 1 Initialized
6. Receiver 2 Initialized
7. Receiver 3 Initialized
8. Receiver 4 Initialize

The following table shows each digit position in the status code, each digit's value and its assigned meaning in the eight-digit code:

Table 12: Radio Initialization Status - 1-8 bits completion

Bit	1	2	3	4	5	6	7	8
Not Completed	-	-	-	-	-	-	-	-
Completed	1	2	3	4	5	6	7	8

For example, the radio initialization status code 12-45--- indicates that Radio has been powered up, it has received SMS signal from C24, the radio is attached to the network, and Receiver 1 has been initialized. This code could be followed with...567 if Receivers 2, 3, and 4 are initialized where applicable.

If the radio initialization status code does not indicate any problems, proceed with installation as per this manual. If troubles are reported, reset the initialization process. If this action does not fix the problem, refer to Trouble shooting section in this manual.

Table 13: Trouble Code Indications

Trouble Indicator Digit	Possible Causes	Trouble Possible Solutions
00	No Trouble	N/A
02	Panel Supervision Trouble	Check Section [382]Toggle Option[5] is ON (3G/Ethernet Module Enabled). Ensure the PC-LINK cable between the Panel and Communicator is connected properly (not reversed) and is securely in place.
04	Lockout Trouble	The SIM card has incorrect PIN programmed or has a PIN that the module does not recognize. Replace the SIM card.
05	3G/Cellular Trouble	Confirm that 3G service is available and active in your area. Check all antenna connections. Ensure average radio signal strength is CSQ 6 or higher. (See Table 7). Ensure the SIM card is properly inserted into the SIM card holder. Ensure the SIM card has been activated. (Could take up to 24 hrs after install). If this trouble persists, relocate the Panel (and Communicator) or install an external antenna extension kit.
06	Ethernet Trouble	Check with your ISP to confirm Internet service is active in your area. Ensure your Ethernet cable is securely inserted into the RJ45 jack of the Communicator and the Hub/Router/ Switch. Check that the link light on the Hub/Router/ Switch is ON. If link light is OFF, try restarting the Hub/Router/ Switch. If DHCP is used, ensure that the unit has an assigned IP address from the server. In Section [851] [992] verify a valid IP address is programmed. If not, contact the Network administrator. If problem persists, replace the Ethernet cable and RJ45 connector.
07	Receiver Not Available	Ensure that the Ethernet path has internet connectivity. If you are using a static IP address make sure the gateway and subnet mask are entered correctly. If the network has a firewall, ensure the network has the programmed outgoing ports open (Default UDP Port 3060 and Port 3065). Ensure that all the receivers are programmed for DHCP or have the proper IP address and port number. Ensure the 3G Receiver APNs have been programmed with the Access Point Name provided by your 3G provider.
08	Receiver Supervision Trouble	This trouble is indicated when supervision is enabled and the unit is not able to successfully communicate with the receiver. If this trouble persists, contact your central station.
09	FTC Trouble	The unit has exhausted all communications attempts to all programmed receivers for events generated by the Communicator. Restart the system. If trouble persists, contact your dealer.
0A	Connect24 Configuration Failure	The SIM is active but there is no programming for the Communicator. Ensure a profile has been programmed in Connect-24 for the SIM. You can confirm your programming by calling the Connect-24 VRU, or by logging into the Connect24 VRU web site.
0C	Module Configuration Trouble	This indication appears when Section [021] System Account Code, Section [101], [111], [201], and [211] Receiver Account Code have not been programmed. Ensure that a valid account code has been entered in these Sections.

Communicator Troubleshooting

The status code for the radio signal strength, its typical troubles, possible causes and troubleshooting instructions is displayed in the table below.

Table 14: Radio Signal Strength

Signal Strength	CSQ Level	Signal Indicator 1	Signal Indicator 2	Signal Level [dBm]	Signal Level Status	Action Required
No Signal	0	0	0	-108.8	bad	Check all antenna connections. Confirm 3G service is active in area. Relocate Panel or install external antenna.
1 Bar	1 - 4	0	2	-108 ~ -103	weak	Relocate Panel or install external antenna if Yellow Trouble LED has: 5 flashes.
2 Bars	5 - 6	0	1	-102 ~ -99	normal/ acceptable	
3 Bars	7 - 10	2	1	-98 ~ -91	strong	Location is OK. 3G Signal Strength is greater than CSQ 5.
4 Bars	11 - 13	2	1	-90 ~ -85	strong	
5 Bars	14 +	1	1	-84 and higher	excellent	

The table below displays the Network indicator codes and meaning of each code.

Table 15: Network indicator - Digit 3

Network indicator Value	Means
OFF	No Network Trouble
ON	Ethernet Cable disconnected Ethernet DHCP failed Radio connection has been rest Radio IP failed
Flashing	Incoming transmission Connect 24 programming Outgoing transmission Incoming transmission

Firmware Update Diagnostics Section

The firmware updates can be made from communicator. Communicator can update firmware of the panel and also of communicator itself.

- The Firmware Update Diagnostic is located in section [984]

The Firmware Update Diagnostic section shall be a Read Only 2 Digit, Hexadecimal Section

- From Factory Default, the value of this Location shall be 0xFE which indicates No Errors, when a default is made, Diagnostic Section shall default to 0xFE
- Communicator could reject Firmware Download SMS String for many reasons, this will only be represented as 1 Reason Code 0xFF Described as Firmware Receive Failure (The detailed reasons why this occurred will be captured in the manual) Firmware Receive Failure may be rejected of the following conditions:
 - DLS Session in Progress
 - C24 Programming in Progress
 - Remote Firmware Upgrade is Disabled
 - TFTP Firmware Update Download is in Progress
 - iControl/iHub Firmware Update in Progress
 - Panel Update in Progress
 - Once file download has begin, Section [984] shall be updated with 0xFD
 - If the download was dropped/cancelled for any reason, section [984] shall update it with 0xFF
 - Upon Download successful, the communicator will either be updating itself, or the panel
 - In the case of Communicator Firmware Upgrade, the communicator shall enter a 4.5 minute window before it performs the update because it is communicating to Central Station and interactive services. Section [984] shall use reason code 0x0A indicating communication in progress at this point
 - In the case of Panel Firmware Update, if panel firmware pushes through, User will be able to observe it because the keypad enters keybus fault. If panel rejects firmware for any reason, the communicator shall update section [984] with the cancellation reason code provided by the panel
 - In the Case of Communicator Firmware Update successful, the communicator shall update diagnostic section to 0xFB after it is updated successfully
 - During Panel Firmware Update Sequence, the Panel could Cancel the Firmware Update due to the Following Reasons Codes:
 - Panel does not Send any Reason Code Upon Success of Panel Firmware Upgrade, section [984] shall be updated with 0xFC to indicate Panel Firmware Update Complete.

Reason codes and corresponding firmware images are displayed in the table below.

Table 16: Reason Codes Description and Corresponding Firmware Images

Reason Code	Description of Reason Code	Firmware Image is
00	Version Check Failed	Image Erased
01	Image Type Mismatch	Image Erased
02	Panel Type Mismatch	Image Erased
03	Hardware Type Mismatch	Image Erased
04	Firmware header Wrong Length	Image Erased
05	Panel is Armed	Firmware Update Pending Status Clearnace
06	AC Trouble	Firmware Update Pending Status Clearnace
07	Low Battery	Firmware Update Pending Status Clearnace
08	Unviewed Alarm	Firmware Update Pending Status Clearnace
09	FTC Trouble	Firmware Update Pending Status Clearnace
0A	Communication in Progress	Firmware Update Pending Status Clearnace
0B	Software Variant Mismatch	Image Erased
FA	(Future Use)	(Future Use)
FB	Communicator Firware Update Complete	
FC	Panel Firmware Update Complete	
FD	File Download in Progress	
FE	Firmware File Empty	Software Default Value (Factory Default)
FF	File Receive Failure	File Was Not Received

The table below displays the Network indicator codes and meaning of each code.

The firmware updates can be made from communicator. Communicator can update firmware of the panel and also of communicator itself.

- This section does not provide specific details such as if the Image is still stored or erased due to the cancellation code. Specific details shall be captured in User/Installation Manuals and provided to Technical Advice Bulletin
- For the Purpose of Documentation:
 - Communicator shall erase panel image file on Reason Code 0x00 ~ 0x04 and 0x0B
 - Communicator shall try to upgrade panel image file forever on Reason Code 0x05 ~ 0x0A.

ETHERNET/CELLULAR PROGRAMMING WORKSHEETS

SYSTEM OPTIONS

[001] Ethernet IP Address

Default (000.000.000.000)

[002] Ethernet IP Subnet Mask

Default (255.255.255.000)

[003] Ethernet Gateway IP Address

Default (000.000.000.000)

[004] Receiver Supervision Interval

Default (0087/135) Valid range: 0000 - FFFF.

[005] System Toggle Options

[1] Ethernet Receiver 1 Supervised Default (OFF).

[2] Cellular Receiver 1 Supervised Default (OFF).

[3] Supervision Type Default (OFF).

[4] Primary Communications Path.

Default [OFF] TL260R; [ON] 3G2060R.

[5] Redundant Communications Default (OFF).

[6] Remote Firmware Upgrade Default (ON).

[7] Alternate Test Transmission Default (OFF).

[8] Cellular Low Signal Trouble Default (OFF).

[006] System Toggle Options 2

[1] Ethernet Receiver 1 Enabled Default (ON).

[2] Ethernet Receiver 2 Enabled Default (ON).

[4] Cellular Receiver 1 Enabled Default (ON).

[5] Cellular Receiver 2 Enabled Default (ON).

[7] DLS Over Cellular Default (ON).

[8] Interactive Over Cellular Default (ON).

[007] DNS Server IP 1

Ⓢ Programming not permitted on UL/ULC listed system.

Default (000.000.000.000)

[008] DNS Server IP 2

Ⓢ Programming not permitted on UL/ULC listed system.

Default (000.000.000.000)

PROGRAMMING OPTIONS

[010] System Toggle Option

Default (CAFE) Valid range: 0000 - FFFF.

[011] Installer Code

Default (CAFE) Valid range: 0000 - FFFF.

[012] DLS Incoming Port

Default (0BF6/3062) Valid range: 0000 - FFFF.

[013] DLS Outgoing Port

Default (0BFA/3066) Valid range: 0000 - FFFF.

[020] Time Zone

Default (CAFE) Valid range: 0000 - FFFF.

[022] Communications Format

Default (04) Program 03 (CID), 04 (SIA).

[023] Panel Absent Trouble

Default (FF); Program 00 disable or FF enable.

[024] Panel Absent Trouble Restore

Default (FF) Program 00 disable or FF enable.

[025] Radio Activation Restore

Default (FF) Program 00 disable or FF enable.

SYSTEM TEST OPTIONS [026 - 029]

[026] Ethernet 1 Transmission

Default (FF) Program 00 disable or FF enable.

[027] Ethernet 2 Transmission

Default (00) Program 00 disable or FF enable.

[028] Cellular 1 Transmission

Default (FF) Program 00 disable or FF enable.

[029] Cellular 2 Transmission

Default (00) Program 00 disable or FF enable.

[030] FTC Restore

Default (FF) Program 00 disable or FF enable.

[033] Communicator Firmware Update Begin

Default (FF) Program 00 disable or FF enable.

[034] Communicator Firmware Update Successful

Default (FF) Program 00 disable or FF enable.

[035] Panel Firmware Update Begin

Default (FF) Program 00 disable or FF enable.

[036] Panel Firmware Update Successful

Default (FF) Program 00 disable or FF enable.

[037] Panel Firmware Update Fail

Default (FF) Program 00 disable or FF enable.

[206] Cellular Receiver 1 Domain Name Default ()

Ⓞ Programming not permitted on UL/ULC listed system.
32 Character ASCII characters.

CELLULAR RECEIVER 2 OPTIONS

[211] Cellular Receiver 2 Account Code

Default (0000000000)
Valid range: 0000000001 - FFFFFFFFEE.

[212] Cellular Receiver 2 DNIS

Default (000000)
Valid range: 000000 - 0FFFFFFF.

[213] Cellular Receiver 2 Address

Default (000.000.000.000)
Valid segment range: 000-255

[214] Cellular Receiver 2 Port

Default (0BF5/3061) Valid range: 0000 - FFFF.

[215] Cellular Receiver 2 APN

Default () 32 ASCII characters.

[216] Cellular Receiver 2 Domain Name Default ()

Ⓞ Programming not permitted on UL/ULC listed system.
32 ASCII characters.

CELLULAR OPTIONS

[221] Cellular Public Access Point Name

Default () 32 ASCII characters

[222] Cellular Login User Name

Default () 32 ASCII characters.

[223] Cellular Login Password

Default () 32 ASCII characters.

[224] Cellular Test Transmission Time of Day

Default (9999) Valid range: 00 - 23 hrs. (HH) 00 - 59 min. (MM).

[225] Cellular Test Transmission Cycle

Default (000000)
Valid range: 000000 - 999999 minutes.

[226] Cellular Trouble Delay

Default (00)
Program 00 disable or FF enable.

[301] Command and Control Toggle Options

- [1] Reserved Default ()
- [2] Reserved Default ()
- [3] SMS Command and Control Default (ON).
- [4] Reserved Default ()
- [5] SMS Character Format
- [6] Long SMS Message Handling Default (OFF)
- [7] Reserved Default ()
- [8] Reserved Default ()

[311] - [318] SMS Phone Number 1 - 8

This section may be programmed through DLS IV or the keypad.

[321] - [328] SMS Phone Number 1 - 8 Toggle Options

- [1] SMS Notification Alarm/Restore Default (OFF)
- [2] SMS Notification Tamper/Restore Default (OFF)
- [3] SMS Notification Opening/Closing Default (OFF)
- [4] SMS Notification System Maintenance Default (OFF)
- [5] SMS Notification System Test Default (OFF)
- [6] SMS Notification Internal Events Default (OFF)
- [7] SMS Notification Enabled Default (OFF)
- [8] SMS Command and Control Enabled Default (ON)

[601] Stay Arm

Default (Stay Arm);
Send this command to the system to stay arm.

[602] Away Arm

Default (Away Arm);
Send this command to the system to away arm.

[603] Night Arm

Default (Night Arm);
Send this command to the system to night arm.

[604] Disarm

Default (Disarm);
Send this command to the system to night disarm.

[605] - [608] Activate Command Output 1 - 4

Default (Activate Command Output n);
Send this command to the system to activate a command output.

[609] - [612] Deactivate Command Output 1 - 4

Default (Deactivate Command Output n);
Send this command to the system to deactivate a command output.

[613] Bypass

Default (Bypass);
Send this command to the system to bypass a Zone.

[614] Unbypass

Default (Unbypass);
Send this command to the system to unbypass a Zone.

[615] Status Request

Default (Status Request);

Send this command to request the status of the system.

[616] Alarm Memory Request

Default (Alarm Memory Request);

Send this command to request the alarm memory from the system.

[617] Help

Default (Help);

Access Code is not required.

[621] Function Successful

Default (Successful);

Example: "stay armed successful."

[622] Function Unsuccessful

Default (Unsuccessful);

Example: "stay armed unsuccessful."

[623] Invalid Command

Default (Invalid Command);

Unprogrammable, enter correct command.

[624] System Stay Armed

Default (Stay Arm);

Included in the response message if the command was not accepted as a valid SMS command.

[625] System Away Armed

Default (Away Arm);

Included in the response to a status request command if a partition is away armed.

[626] System Night Armed

Default (Night Arm);

Included in the response to a status request command if a partition is night armed.

[627] System Disarmed Ready

Default (Disarmed Ready);

Included in the response to a status request command if a partition is disarmed and is ready to arm.

[628] System Disarmed Not Ready

Default (Disarmed Not Ready);

Included in the response to a status request command if a partition is disarmed and is not ready to arm.

[629] System is in Alarm

Default (Stay Arm);

This label will be included in the response to an Alarm Memory Request if there are no alarms on the system

[630] Trouble Label

Default (Service is Required);

Included in the response to the Alarm Memory command if there are no alarms in memory.

[631] No Alarms in Memory

Default (No Alarm Memory);

Included in the response to the Alarm Memory command if there are no alarms on the system.

[634] Error Code

Default (Error Code);

Included in the response to an Alarm Memory Request if there are no alarms on the system

[901] Diagnostic Test Transmission

- [1] Ethernet 1 Default (OFF).
- [2] Ethernet 2 Default (OFF).
- [3] Cellular 1 Default (OFF).
- [4] Cellular 2 Default (OFF).

SYSTEM INFORMATION (READ ONLY)

[988] DNS 1 IP Address

[989] DNS 2 IP Address

[991] Firmware Version

[992] Ethernet IP Address

[993] Ethernet Gateway Address

[994] Cellular IP Address

[995] SIM Number

[996] Cellular Telephone Number

This number is required for DLS, and Firmware upgrades.

[997] IMEI Number

[998] MAC Address

SYSTEM RESET DEFAULTS

[999] Software Default

Default (99); Valid entries are 00 or 55

END USER LICENCE AGREEMENT

IMPORTANT - READ CAREFULLY: DSC Software purchased with or without Products and Components is Copyrighted and is purchased under the following license terms:

This End-User License Agreement (EULA) is a legal agreement between You (the company, individual or entity who acquired the SOFTWARE and any related HARDWARE) and **Digital Security Controls (DSC)**, a division of Tyco Safety Products Canada Ltd., the manufacturer of the integrated security systems and the developer of the software and any related products or components ('HARDWARE') which you acquired.

If the DSC software product ('SOFTWARE PRODUCT' or 'SOFTWARE') is intended to be accompanied by HARDWARE, and is NOT accompanied by new HARDWARE, You may not use, copy or install the SOFTWARE PRODUCT. The SOFTWARE PRODUCT includes computer software, and may include associated media, printed materials, and 'online' or electronic documentation.

Any software provided along with the SOFTWARE PRODUCT that is associated with a separate EULA is licensed to You under the terms of that license agreement. By installing, copying, downloading, storing, accessing, or otherwise using the SOFTWARE PRODUCT, You agree unconditionally to be bound by the terms of this EULA, even if this EULA is deemed to be a modification of any previous arrangement or contract. If You do not agree to the terms of this EULA, DSC is unwilling to license the SOFTWARE PRODUCT to You, and You have no right to use it.

SOFTWARE PRODUCT LICENSE

The SOFTWARE PRODUCT is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties. The SOFTWARE PRODUCT is licensed, not sold, under the following terms:

GRANT OF LICENSE This EULA grants You the following rights:

Software Installation and Use - For each license You acquire, You may have only one copy of the SOFTWARE PRODUCT installed.

Storage/Network Use - The SOFTWARE PRODUCT may not be installed, accessed, displayed, run, shared or used concurrently on or from different computers, including a workstation, terminal or other digital electronic device ('Device'). In other words, if You have several workstations, You will have to acquire a license for each workstation where the SOFTWARE will be used.

Backup Copy - You may make back-up copies of the SOFTWARE PRODUCT, but You may only have one copy per license installed at any given time. You may use the back-up copy solely for archival purposes. Except as expressly provided in this EULA, You may not otherwise make copies of the SOFTWARE PRODUCT, including the printed materials accompanying the SOFTWARE.

DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS

Limitations on Reverse Engineering, Decompilation and Disassembly - You may not reverse engineer, decompile, or disassemble the SOFTWARE PRODUCT, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation. You may not make any changes or modifications to the Software, without the written permission of an officer of DSC. You may not remove any proprietary notices, marks or labels from the Software Product. You shall institute reasonable measures to ensure compliance with the terms and conditions of this EULA.

Separation of Components - The SOFTWARE PRODUCT is licensed as a single product. Its component parts may not be separated for use on more than one HARDWARE unit.

Single INTEGRATED PRODUCT - If You acquired this SOFTWARE with HARDWARE, then the SOFTWARE PRODUCT is licensed with the HARDWARE as a single integrated product. In this case, the SOFTWARE PRODUCT may only be used with the HARDWARE as set forth in this EULA.

Rental - You may not rent, lease or lend the SOFTWARE PRODUCT. You may not make it available to others or post it on a server or web site.

Software Product Transfer - You may transfer all of Your rights under this EULA only as part of a permanent sale or transfer of the HARDWARE, provided You retain no copies. You transfer all of the SOFTWARE PRODUCT (including all component parts, the media and printed materials, any upgrades and this EULA), and provided the recipient agrees to the terms of this EULA. If the SOFTWARE PRODUCT is an upgrade, any transfer must also include all prior versions of the SOFTWARE PRODUCT.

Termination - Without prejudice to any other rights, DSC may terminate this EULA if You fail to comply with the terms and conditions of this EULA. In such event, You must destroy all copies of the SOFTWARE PRODUCT and all of its component parts.

Trademarks - This EULA does not grant You any rights in connection with any trademarks or service marks of DSC or its suppliers.

COPYRIGHT - All title and intellectual property rights in and to the SOFTWARE PRODUCT (including but not limited to any images, photographs, and text incorporated into the SOFTWARE PRODUCT), the accompanying printed materials, and any copies of the SOFTWARE PRODUCT, are owned by DSC or its suppliers. You may not copy the printed materials accompanying the SOFTWARE PRODUCT. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE PRODUCT are the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants You no rights to use such content. All rights not expressly granted under this EULA are reserved by DSC and its suppliers.

EXPORT RESTRICTIONS - You agree that You will not export or reexport the SOFTWARE PRODUCT to any country, person, or entity subject to Canadian export restrictions.

CHOICE OF LAW - This Software License Agreement is governed by the laws of the Province of Ontario, Canada.

ARBITRATION - All disputes arising in connection with this Agreement shall be determined by final and binding arbitration in accordance with the Arbitration Act, and the parties agree to be bound by the arbitrator's decision. The place of arbitration shall be Toronto, Canada, and the language of the arbitration shall be English.

7. LIMITED WARRANTY

NO WARRANTY - DSC provides the SOFTWARE 'as is' without warranty. DSC does not warrant that the SOFTWARE will meet your requirements or that operation of the SOFTWARE will be uninterrupted or error free.

CHANGES IN OPERATING ENVIRONMENT - DSC shall not be responsible for problems caused by changes in the operating characteristics of the hardware, or for problems in the interaction of the SOFTWARE with non DSC software or hardware products.

LIMITATION OF LIABILITY; WARRANTY REFLECTS ALLOCATION OF RISK - In any event, if any statute implies warranties or conditions not stated in this license agreement, entire liability under any provision of this license agreement shall be limited to the greater of the amount actually paid by you to license the SOFTWARE and five Canadian dollars (CAD\$5.00). Because some jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages, the above limitation may not apply to you.

DISCLAIMER OF WARRANTIES - This warranty contains the entire warranty and shall be in lieu of any and all other warranties, whether expressed or implied (including all implied warranties of merchantability or fitness for a particular purpose) and of all other obligations or liabilities on the part of DSC. DSC makes no other warranties. DSC neither assumes nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this SOFTWARE PRODUCT.

EXCLUSIVE REMEDY AND LIMITATION OF WARRANTY - Under no circumstances shall DSC be liable for any special, incidental, consequential or indirect damages based upon breach of warranty, breach of contract, negligence, strict liability, or any other legal theory. Such damages include, but are not limited to, loss of profits, loss of the SOFTWARE or any associated equipment, cost of capital, cost of substitute or replacement equipment, facilities or services, down time, purchasers time, the claims of third parties, including customers, and injury to property.

DSC recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this Software Product to fail to perform as expected.

LIMITED WARRANTY

Digital Security Controls (DSC) warrants the original purchaser that for a period of twelve (12) months from the date of purchase, the product shall be free of defects in materials and workmanship under normal use. During the warranty period, Digital Security Controls shall, at its option, repair or replace any defective product upon return of the product to its factory, at no charge for labour and materials. Any replacement and/or repaired parts are warranted for the remainder of the original warranty or ninety (90) days, whichever is longer. The original purchaser must promptly notify Digital Security Controls in writing that there is defect in material or workmanship, such written notice to be received in all events prior to expiration of the warranty period. There is absolutely no warranty on software and all software products are sold as a user license under the terms of the software license agreement included with the product. The Customer assumes all responsibility for the proper selection, installation, operation and maintenance of any products purchased from DSC. Custom products are only warranted to the extent that they do not function upon delivery. In such cases, DSC can replace or credit at its option.

International Warranty

The warranty for international customers is the same as for any customer within Canada and the United States, with the exception that Digital Security Controls shall not be responsible for any customs fees, taxes, or VAT that may be due.

Warranty Procedure

To obtain service under this warranty, please return the item(s) in question to the point of purchase. All authorized distributors and dealers have a warranty program. Anyone returning goods to Digital Security Controls must first obtain an authorization number. Digital Security Controls will not accept any shipment whatsoever for which prior authorization has not been obtained.

Conditions to Void Warranty

This warranty applies only to defects in parts and workmanship relating to normal use. It does not cover:

- damage incurred in shipping or handling;
- damage caused by disaster such as fire, flood, wind, earthquake or lightning;
- damage due to causes beyond the control of Digital Security Controls such as excessive voltage, mechanical shock or water damage;
- damage caused by unauthorized attachment, alterations, modifications, or foreign objects;
- damage caused by peripherals (unless such peripherals were supplied by Digital Security Controls);
- defects caused by failure to provide a suitable installation environment for the products;
- damage caused by use of the products for purposes other than those for which it was designed;
- damage from improper maintenance; or
- damage arising out of any other abuse, mishandling or improper application of the products.

Items Not Covered by Warranty

In addition to the items which void the Warranty, the following items shall not be covered by Warranty:

- freight cost to the repair centre;
- products which are not identified with DSC's product label and lot number or serial number; or

products disassembled or repaired in such a manner as to adversely affect performance or prevent adequate inspection or testing to verify any warranty claim.

Access cards or tags returned for replacement under warranty will be credited or replaced at DSC's option. Products not covered by this warranty, or otherwise out of warranty due to age, misuse, or damage shall be evaluated, and a repair estimate shall be provided. No repair work will be performed until a valid purchase order is received from the Customer and a Return Merchandise Authorisation number (RMA) is issued by DSC's Customer Service.

Digital Security Controls' liability for failure to repair the product under this warranty after a reasonable number of attempts will be limited to a replacement of the product, as the exclusive remedy for breach of warranty. Under no circumstances shall Digital Security Controls be liable for any special, incidental, or consequential damages based upon breach of warranty, breach of contract, negligence, strict liability, or any other legal theory. Such damages include, but are not limited to, loss of profits, loss of the product or any associated equipment, cost of capital, cost of substitute or replacement equipment, facilities or services, down time, purchaser's time, the claims of third parties, including customers, and injury to property. The laws of some jurisdictions limit or do not allow the disclaimer of consequential damages. If the laws of such a jurisdiction apply to any claim by or against DSC, the limitations and disclaimers contained here shall be to the greatest extent permitted by law. Some states do not allow the exclusion or limitation of incidental or consequential damages, so that the above may not apply to you.

Disclaimer of Warranties

This warranty contains the entire warranty and shall be in lieu of any and all other warranties, whether expressed or implied (including all implied warranties of merchantability or fitness for a particular purpose) and of all other obligations or liabilities on the part of Digital Security Controls. Digital Security Controls neither assumes responsibility for nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

This disclaimer of warranties and limited warranty are governed by the laws of the province of Ontario, Canada.

Digital Security Controls recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.

Out of Warranty Repairs

Digital Security Controls will at its option repair or replace out-of-warranty products which are returned to its factory according to the following conditions. Anyone returning goods to Digital Security Controls must first obtain an authorization number. Digital Security Controls will not accept any shipment whatsoever for which prior authorization has not been obtained.

Products which Digital Security Controls determines to be repairable will be repaired and returned. A set fee which Digital Security Controls has predetermined and which may be revised from time to time, will be charged for each unit repaired.

FCC Compliance Statement

CAUTION: Changes or modifications not expressly approved by the Digital Security Controls could void your authority to use this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

The user may find the following booklet prepared by the FCC useful: 'How to Identify and Resolve Radio/Television Interference Problems'. This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402, Stock # 004-000-00345-4.

WARNING: TO SATISFY FCC RF EXPOSURE REQUIREMENTS FOR MOBILE TRANSMITTING DEVICES, A SEPARATION DISTANCE OF 20CM OR MORE MUST BE MAINTAINED BETWEEN THE ANTENNA OF THIS DEVICE AND PERSONS DURING DEVICE OPERATION.

Industry Canada Statement

The prefix 'IC:' in front of the radio certification number signifies only that Industry Canada technical specifications were met.

Certification Number IC: 160A-3G260R

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme avec Industrie Canada exempts de licence standard RSS (s). Le fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne peut pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.



29008306R001

DSC

A Tyco International Company

© 2012 Tyco International Ltd. and its Respective Companies. All Rights Reserved.
Toronto, Canada · www.dsc.com
Tech Support: 1-800-387-3630 (CA, US), 905-760-3000
Printed in Canada