


RM300 2-port / 4-port UHF RFID Reader Module

- RM300 -

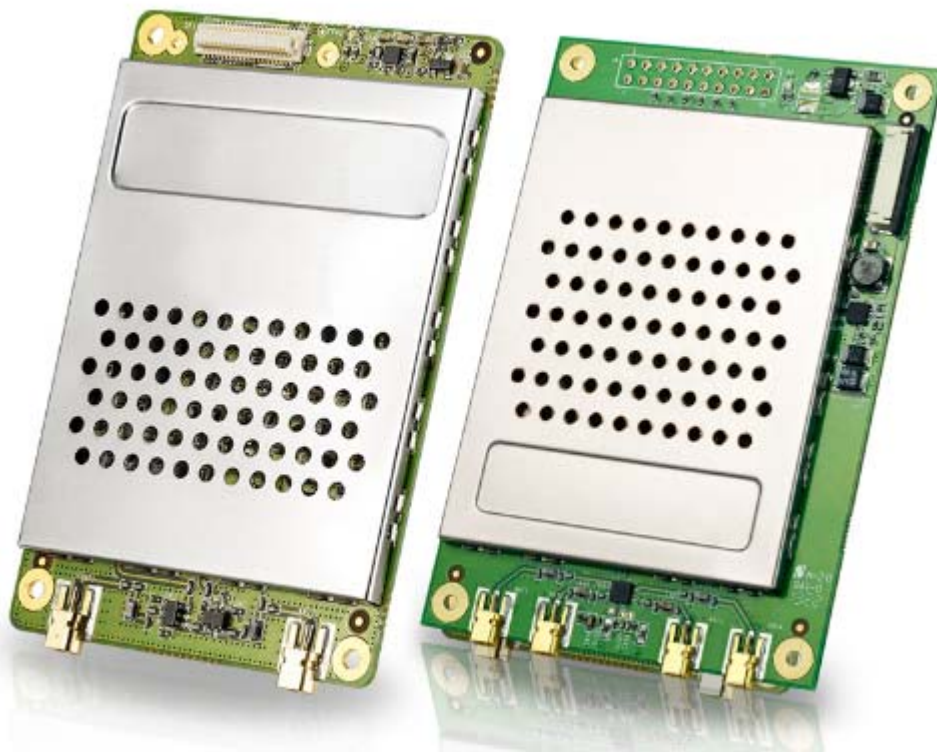

User manual

Version 2.5

Preface

About This Manual

Thank you for purchasing the unitech product.

This manual explains how to install, operate and maintain our product.

No part of this publication may be reproduced or used in any form, or by any electrical or mechanical means, such as photocopying, recording, or information storage and retrieval systems, without permission in writing from the manufacturer. The material in this manual is subject to change without notice.

Regulatory Compliance Statements

(1) NCC :

本模組於取得認證後將依規定於模組本體標示審驗合格標籤，並要求最終產品平

台廠商(OEM Integrator)於最終產品平台(End Product)上標示"本產品內含射頻

模組，其 NCC 型式認證號碼為: CCXXxxYYyyyZzW"。

(2) FCC :

This device is intended only for OEM integrators under the following conditions:

The use of the External PCB Antenna with gain=3.08 dBi(2.4GHz)

IMPORTANT NOTE:

In the event that these conditions can't be met (for example certain laptop configurations or co-location with another transmitter), then the FCC authorization is no longer considered valid and FCC ID can't be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product(including the transmitter) and obtain a separate FCC authorization.

End Product Labeling

The final end product must be labeled in a visible area with the following:
"Contains FCC ID: HLERM3004PF".The grantee's FCC ID can be used only when all FCC compliance requirements are met.



FCC (U. S. Federal Communications Commission)

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may NOT cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. The limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF exposure warning

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

Table of Contents

Chapter 1

Hardware Overview	1
Introducing the RM300 2-port/4-port UHF RFID Reader Module	1
<i>Features.....</i>	<i>1</i>
<i>Specifications.....</i>	<i>2</i>
Package Content	4
Tour of the RM300 2-port/4-port UHF RFID Reader Module	5
Installing the IndyTool	6
Installation Procedure	6
Connecting the RM300 Series to a PC	7

Chapter 2

IndyTool for Configuration and Development.....	12
Introduction	12
<i>Overview</i>	<i>12</i>
Indy Tool General Usage	12
<i>Info Bar</i>	<i>14</i>
<i>Enumerate.....</i>	<i>14</i>
<i>Connect.....</i>	<i>15</i>
<i>Disconnect and Reset.....</i>	<i>16</i>
<i>Cancel and Abort.....</i>	<i>16</i>
IndyTool Functions.....	16
<i>Register Access</i>	<i>16</i>
<i>Tag Access.....</i>	<i>18</i>
<i>Scripts</i>	<i>19</i>
<i>Profile.....</i>	<i>21</i>
<i>Inventory</i>	<i>22</i>
<i>Tx Control.....</i>	<i>24</i>
<i>Command.....</i>	<i>25</i>
<i>GPIO</i>	<i>26</i>
<i>NV Mem</i>	<i>26</i>

<i>Macros</i>	27
<i>Sensors</i>	28
<i>Mac Error</i>	28
<i>Calibration</i>	29
<i>Help</i>	30

Chapter 3

Indy Tracer for Demonstration	31
Introduction	31
Tracer Installation	31
Tracer Usage	32
Known Issues	56

Chapter 1

Hardware Overview

Introducing the RM300 2-port/4-port UHF RFID Reader Module

Unitech's RM300 2-port/4-port is a high-performance UHF RFID reader module based on Impinj R2000 chip and compliant with EPC C1 Gen2 / ISO 18000-6C and FCC modular approval requirements. System Integrators, RFID device makers could use RM300 to develop their own products with the benefits of cost-efficiency and high-performance.

RM300 series has two models, one is named RM300-2port with two (MMCX) antenna connectors and the other one is RM300-4port with four (MMCX) antenna connectors. The antenna connectors of RM300-2port that can be configured as one bi-static antenna or two mono-static antennas. It also supports dense reader mode (DRM), anti-collision, and Listen-Before-Talk (LBT) features. RM300 has an operating distance up to 9 meters when its adjustable TX power is set to 30 dBm with a 6 dBi antenna. In addition, RM300 is small and ideal for adding 2-port/4-port UHF RFID read/write capabilities to a wide range of products and solutions such as handheld PDA, label printers, stationary readers, or any other device for 2-port / 4-port UHF RFID applications. RM300 uses Serial and USB interfaces to connect to an external processor board or PC host.

Unitech offers a starter kit to enable you to design RM300 into your products quickly and easily. This kit includes SDK, demo code, driver, and documentation. With its tiny size, excellent operating range, and high quality UHF RFID technology, RM300 is the perfect solution for embedded RFID applications.

Features


- Support for EPC C1 Gen2 / ISO 18000-6C tag protocol with anti-collision, DRM and
- Listen-Before-Talk features
- Meet worldwide regulatory: FCC, TELEC, NCC (RM300-2port version)
- Offer two kinds of models with two or four (MMCX) antenna connectors for choice.
- Adjustable transmit output level control from 5 dBm to 30 dBm in 1 dB step
- Maximum tag read rate of over 600 tags per second
- Maximum tag read distance of over 27 feet (9 m) with 6 dBi antenna
- Easy to use Starter Kit to shorten product development time

Specifications

Protocol	
RFID	EPCglobal Gen 2 (ISO 18000-6C), DRM
Architecture	
RFID ASIC	IMPINJ R2000
Processor	ATMEL AT91SAM7S-256
Power	
Voltage	5V VDC
Current Consumption	Scan Mode : 1.5 A (Max), Idle Modes : 0.33 A (Typical)
Interface	
Connector	RM300-2port 50-pin (HRS-DF12 SMT connector) RM300-4port 20-pin (ZIF FPC 0.5mm connector)
UART	Baud rates: 9,600 to 115,200 bps, Logic levels: 3.3 / 5 V
USB	USB 2.0 Full Speed (12 Mbps)
GPIO	4 GPIO pins, Logic levels: 3.3 / 5 V
API Interface	Impinj
RF	
Antenna Connector	Two/Four MMCX antenna connectors supporting 2/4 mono-static antennas, or one bi-static antenna(only 2 port version supports), with VSWR less than 2:1
Frequency	FCC (US) 860-960MHz SRRC (China) 920.5 - 924.5 MHz TELEC (Japan) 916.8 - 923.4 MHz NCC (Taiwan) 922 - 928 MHz
TX power	Adjustable from 5 dBm to 30 dBm @ +/-1 .0 dBm accuracy
Frequency Stability	±20 ppm
Harmonic performance	under 65.0dBc
Modulation Depth	90% nominal
Data Encoding	FM0 or Miller code
Bit Rate	Supports uplink data rates of up to 640 Kbps
Performance	
Tag Read Rate	Over 600 tags/second
Inventory Reliability	Through anti-collision
Tag Read Distance	27 feet (9m) with a 6 dBi antenna (36 dBm EIRP)
Compliance	
Regulatory	Certification obtained : RM300-2port : FCC, TELEC, NCC Certifiable: CE, SRRC
Environmental Compliance	
Temperature Range	Operating: -20 to +60 degree C, Storage: -30 to + 85 degree C
Humidity	10% ~ 85% Non-condensing
Electrostatic Discharge	10 KV to antenna conductor with the antenna attached
Shock & Vibration	TBD
Physical	
Dimensions	76.5mm (L) x 50mm (W) x 4.2 mm (H) (2-port) 92.5mm (L) X 63mm (W) x 4.5 mm (H) (4-port)
Software	

Platform support	PC Windows OS & WinCE SDK
Development Tools	Visual studio with C#/C++/VB.NET

■ Dimension

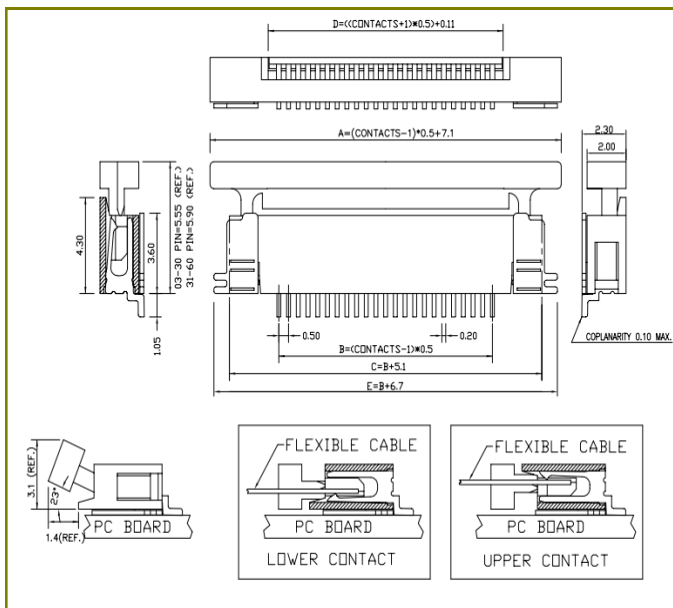

■ Pin assignment

Pin	Type	Function
1	P	+5V Power Supply
2	P	+5V Power Supply
3	P	+5V Power Supply
4	P	+5V Power Supply
5	P	+5V Power Supply
6	P	Power / Signal Ground
7	IO	GPIO 4
8	P	Power / Signal Ground
9	IO	GPIO3
10	P	Power / Signal Ground
11	I	UART RX
12	P	Power / Signal Ground
13	O	UART TX
14	P	Power / Signal Ground
15	P	Power / Signal Ground
16	IO	USB D-
17	IO	USB D+
18	IO	GPIO0
19	IO	GPIO1
20	IO	GPIO2

Package Content


Check the package before connecting and operating the RM300 Series. If one or more items in this package are lost, contact your local dealer.

 2-port 4-port	
RM300 2-port / 4-port UHF RFID Reader Module	Power Adaptor
 2-port 4-port	
Interface board	USB Cable
	
Antenna	RFID Tag
	
RS232 Cable	

Tour of the RM300 2-port / 4-port UHF RFID Reader Module

This section describes the main components and features of the interface board.

2-port

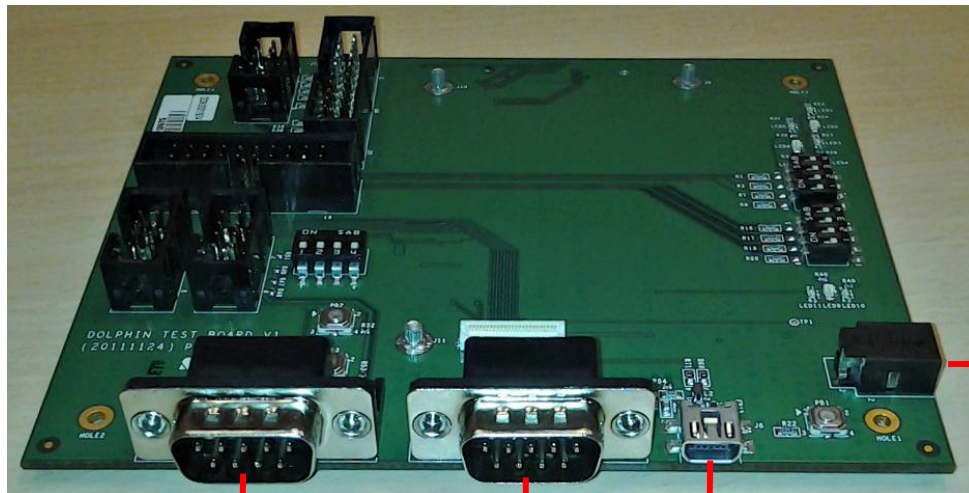


Debug Port

UART Port

Mini USB Port

Power Inlet

4-port

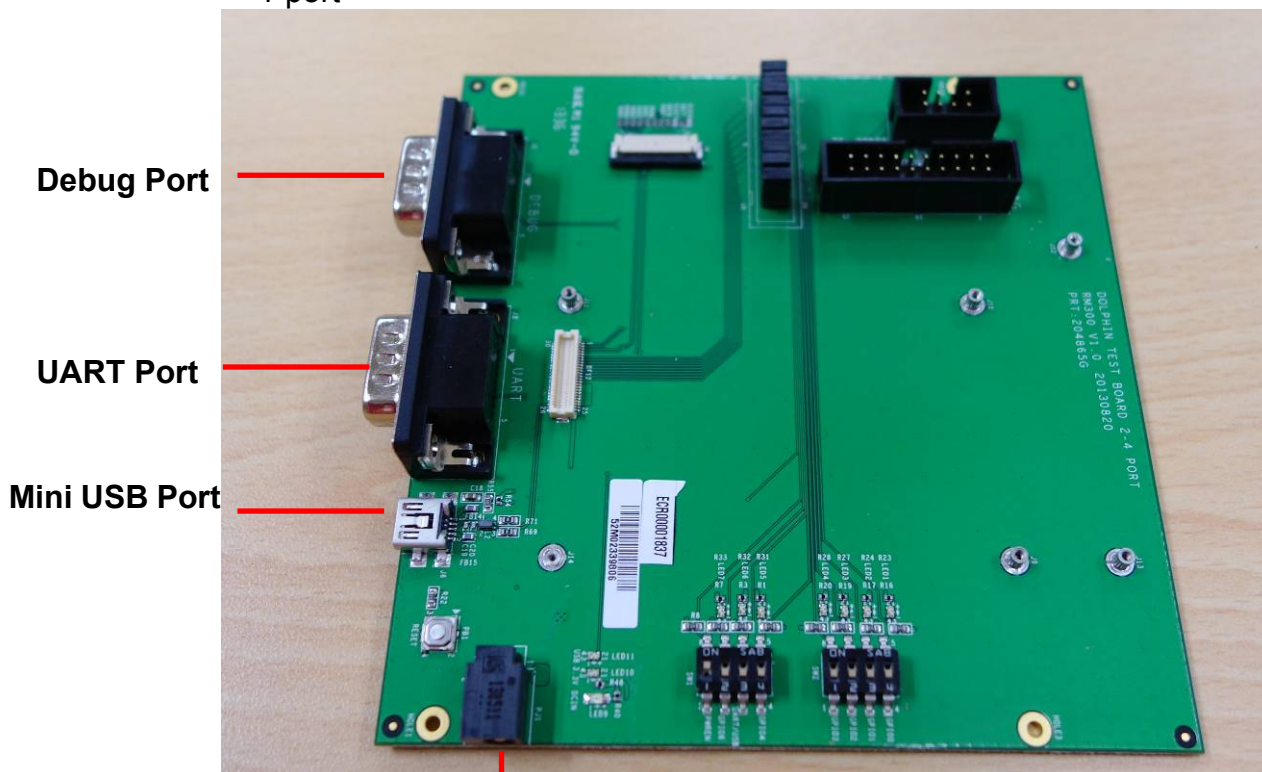

Debug Port

UART Port

Mini USB Port

Power Inlet

Installing the IndyTool

First of all, install the IndyTool before connecting the interface board to a PC. It is possible for multiple versions of IndyTool to co-exist on a single system, so long as a unique install path is used for each, such as the default installation directory.

Installation Procedure



1. Double click the IndyTool installer file, IndyTool v2.4.2.msi, to launch the installation wizard.
2. When prompted, designate the desired installation directory. The default is: [Program Files]\IMPINJ\IndyTool v2.4.2
3. Installation includes the C++ runtime libraries and adds a desktop shortcut to the IndyTool application.
4. To Start the IndyTool application:
 - a. Double click the desktop shortcut, or
 - b. Use the Start Menu. For example, if installed to the default directory:
Click Start, select All Programs, IMPINJ, Impinj IndyTool v2.4.2, and click IndyTool.
 - c. Open the IndyTool installation folder and double click IndyTool.exe.

Connecting the RM300 to a PC


Before operating the Indy tool software for development of the RFID device, follow the steps made below to connect the RM300 Series to a PC.

1. Install the Indy tool on your PC.
2. Mount the 2-port / 4-port UHF RFID Module onto the interface board.

2-port

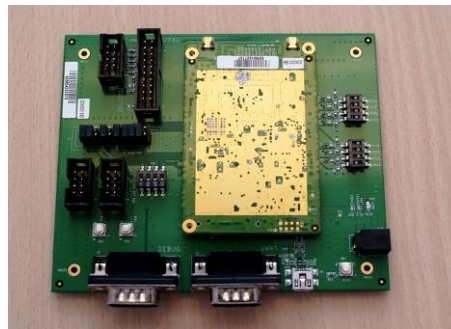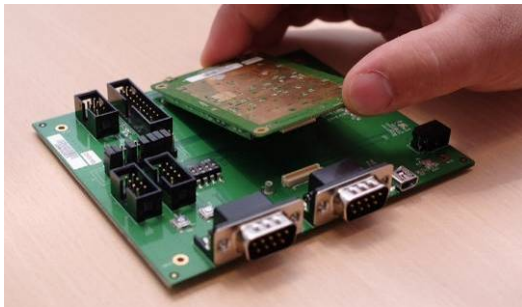


4-port

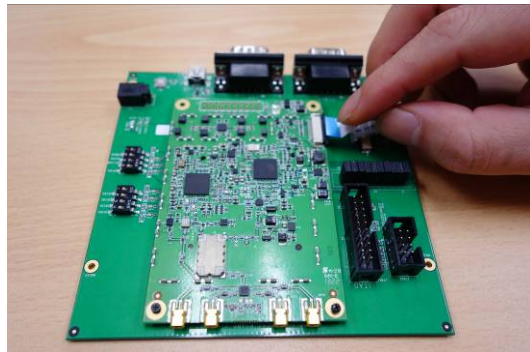


Set up the jumper. The jumper settings are defined below.

2-port

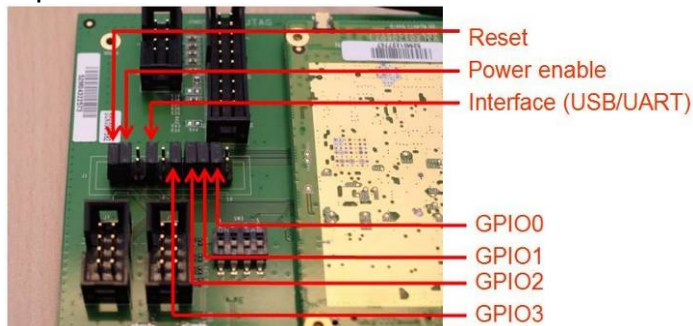

4-port

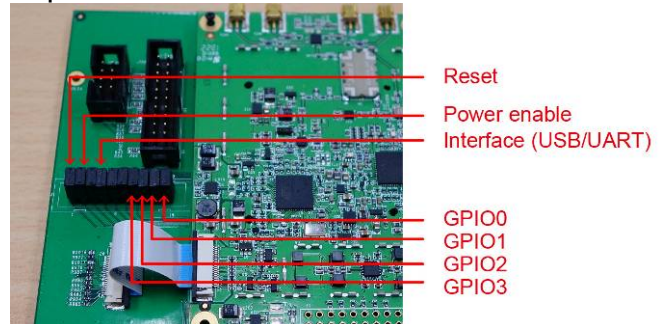

3. Connect the interface board to a PC by using a miniUSB cable (default setting) or a RS232 cable, respectively described in options 3a and 3b.

Option a: By using a miniUSB cable

2-port




4-port



or Option b: By using a RS232 cable

2-port

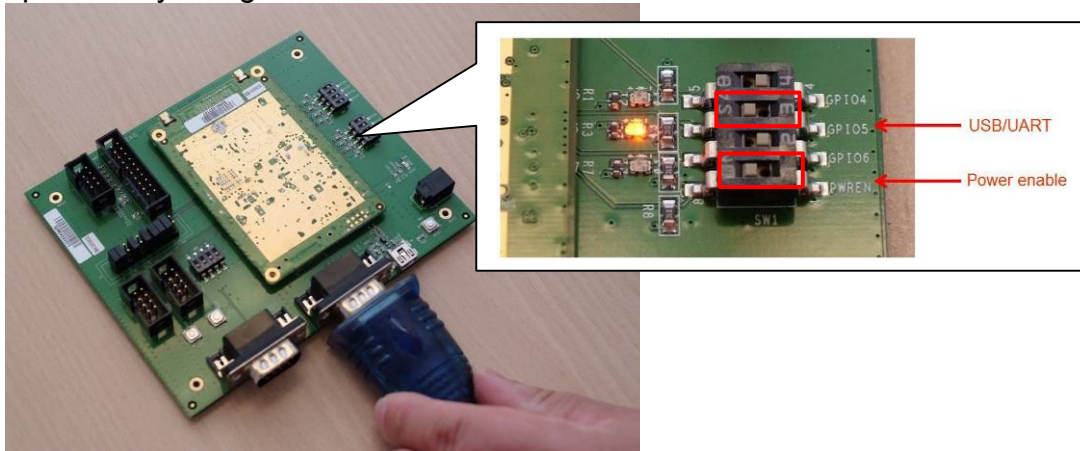


4-port



4. Insert the power connector into the power inlet on the interface board, and then plug the power adapter into an electrical socket.

2-port

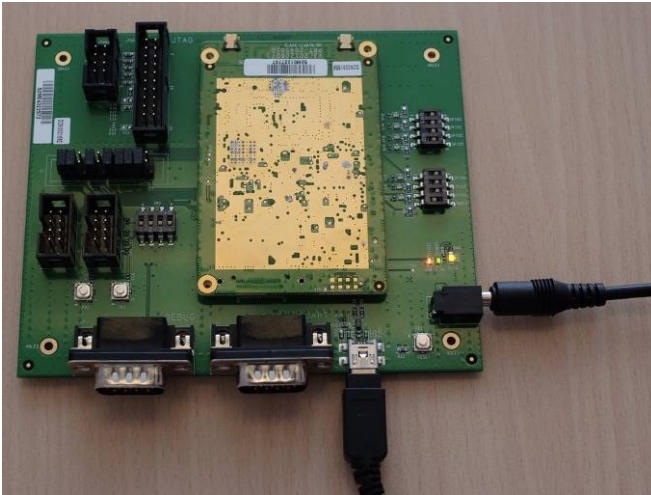


4-port




5. Insert the connector of antenna into one of the two antenna ports of the RM300 2-port / 4-port UHF RFID Reader Module. You can connect at most two antennae at the same time.

2-port

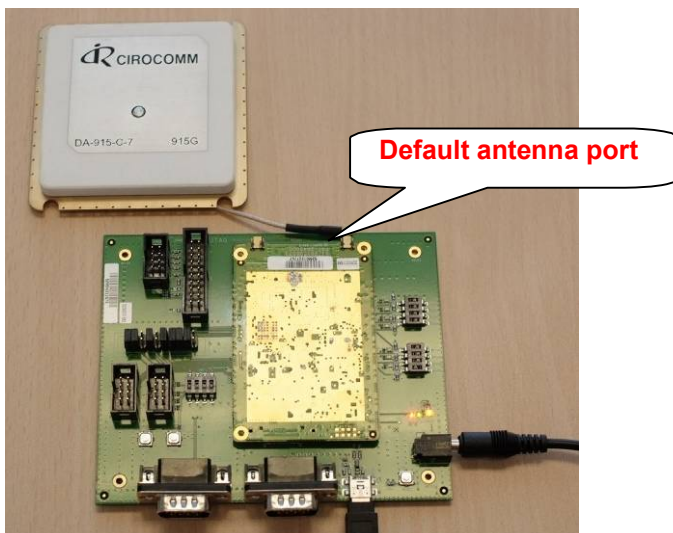

4-port

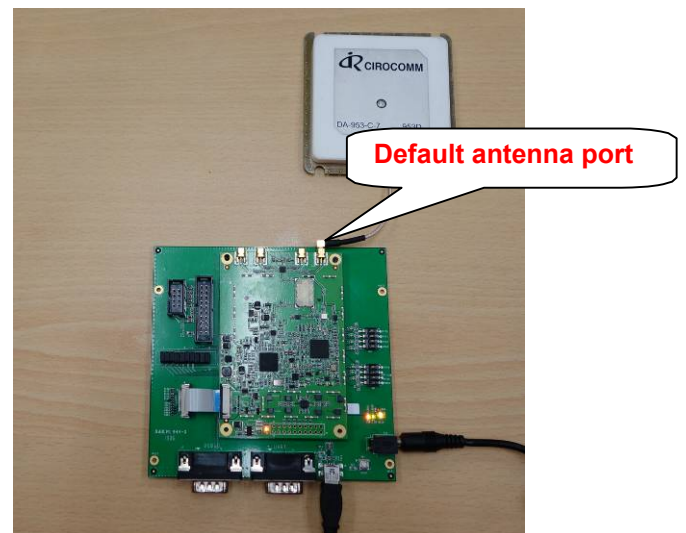

6. Open the IndyTool. Click **Start** to scan RFID tags by using the RM300 2-port /4-port UHF RFID Reader module.

2-port



4-port



Activated Reader [impinjserialnum01] via USB

Status Window: Clear Save Skip 0 Remaining Status Options Packet Options

Impinj State Idle

Inventory

Single Cycle Start Stop

Note: Inventory options must be preconfigured via MAC registers

Logical Antenna 0

Set Antenna 0 Power (dBm) 30.0

Test Frequency

Set 915.25 Div 24 (FCC) Div 60 (ETSI)

Info

Summary Statistics Configuration Tag Data


Options

TagFocus FastID

Inv, 91, -41.0, 129, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 91, -41.0, 128, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 78, -51.0, 107, 0, 0, 0, 3000, 3005FB63AC1F3841EC880467, F29E
 Inv, 81, -48.8, 111, 0, 0, 0, 3000, 3005FB63AC1F3841EC880467, F29E
 Inv, 91, -41.0, 129, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 92, -40.3, 135, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 81, -48.8, 110, 0, 0, 0, 3000, 3005FB63AC1F3841EC880467, F29E
 Inv, 91, -41.0, 128, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 92, -40.3, 134, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 92, -40.3, 135, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 92, -40.3, 134, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 92, -40.3, 130, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 81, -48.8, 111, 0, 0, 0, 3000, 3005FB63AC1F3841EC880467, F29E
 Inv, 80, -49.8, 111, 0, 0, 0, 3000, 3005FB63AC1F3841EC880467, F29E
 Inv, 91, -41.0, 128, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 91, -41.0, 129, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 92, -40.3, 134, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 81, -48.8, 111, 0, 0, 0, 3000, 3005FB63AC1F3841EC880467, F29E
 Inv, 91, -41.0, 128, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 91, -41.0, 129, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 91, -41.0, 130, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 91, -41.0, 129, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 91, -41.0, 128, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 91, -41.0, 129, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 92, -40.3, 134, 0, 0, 0, 3000, E2003411B802011718302423, CCDD
 Inv, 81, -48.8, 109, 0, 0, 0, 3000, 3005FB63AC1F3841EC880467, F29E
 Command End (Status = 0000)
 Singulation Rate = 82.80 tags/sec (167 tags in 2.02 sec, 2 Unique, 0 Unique TID)
Inventory Success


Note: The GPIO settings can be turned on optionally by hardware or software, as illustrated below.

By hardware, push the GPIO switches to the left.

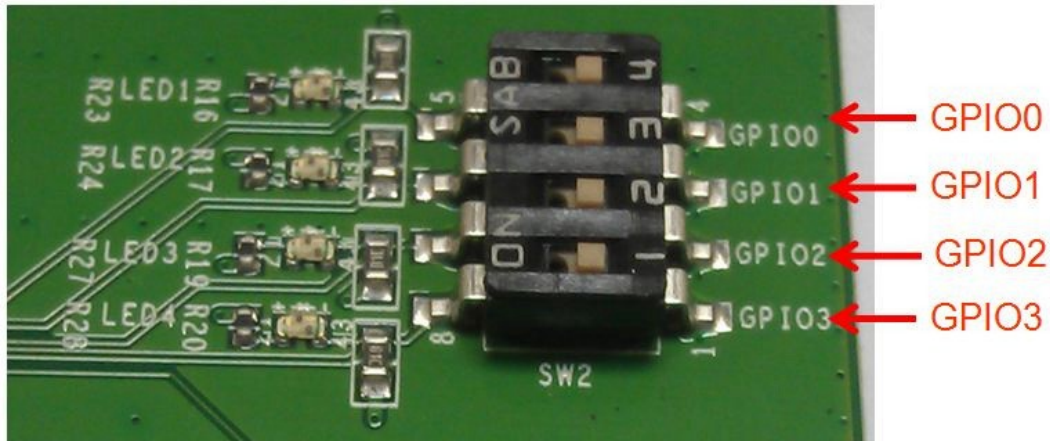

By software, use the IndyTool to turn on the GPIO settings. The General purpose GPIO can be configured as Input or Output and the corresponding state is also reflected. The Refresh button can be used to update the states of the GPIOs configured as input. The greyed state boxes reflect the Input State. When configured as GPIOs the state becomes user selectable.

The ARM GPIOs can be set Low and High via the ARM GPIO control box.

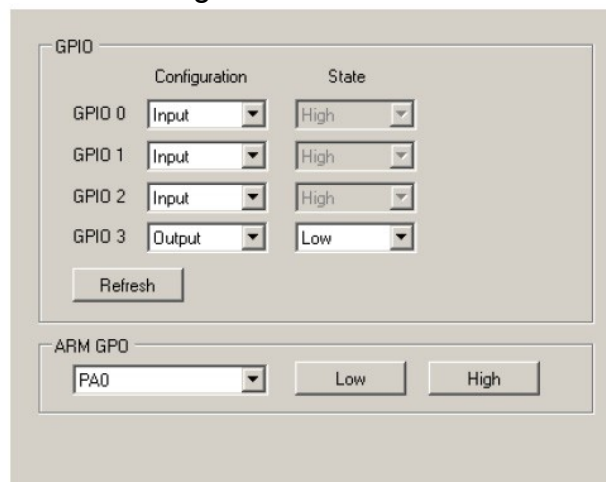

IndyTool for Configuration and Development

Introduction

Overview

The IndyTool is a .Net-based graphical user interface (GUI) tool that uses the Indy[®] RFID Host Library API to exercise the functionality of the reader platform, a platform that is based on the Indy chip and firmware.

The IndyTool is dynamically linked to the Indy RFID Host Library. Therefore, there is no need to install the interface library separately. However, the USB / UART host driver must be installed prior to using IndyTool.

IndyTool is supported on Windows XP only.

The goal of this document is to explain the operation of the tool. This document does not explain the underlying RFID functionality that it is controlling via the Indy RFID Host Library API.

Indy Tool General Usage


General Guidelines

- z IndyTool will not modify the reader state without user intervention. The state of the reader is only affected when the user executes a function within the application.
- z Multiple instances of IndyTool can be opened concurrently, however only one reader in one instance can be connected at any one time.
- z All user input fields indicate the input type. The label (d) indicates a decimal input. The label (h) indicates a hexadecimal input is expected, and if any other characters are inputted they will be corrected by the application. Unless otherwise specified all the input fields in the GUI that are marked (h) do not require the 0x prefix.
- z All user commands are logged in the Status Window and will show continuous progress or show single command execution depending on the status options.
- z If a reader is disconnected or reset without using IndyTool, the application will show the last known state of the reader and on the next command attempt, the status will indicate the connection error. To recover, select disconnect, re-enumerate if necessary, and connect back to the reader.
- z IndyTool can be connected and disconnected to and from a reader at any time. This will allow for a user to configure the reader, disconnect and subsequently run any other application to run the reader.

- z The target usage for IndyTool is for Engineering Development. The scope of this document is to describe the functions in IndyTool and is not meant to describe the MAC firmware fundamentals, which are a prerequisite to utilizing the system as a whole.

IndyTool Main Window

The following figure shows the main application window.

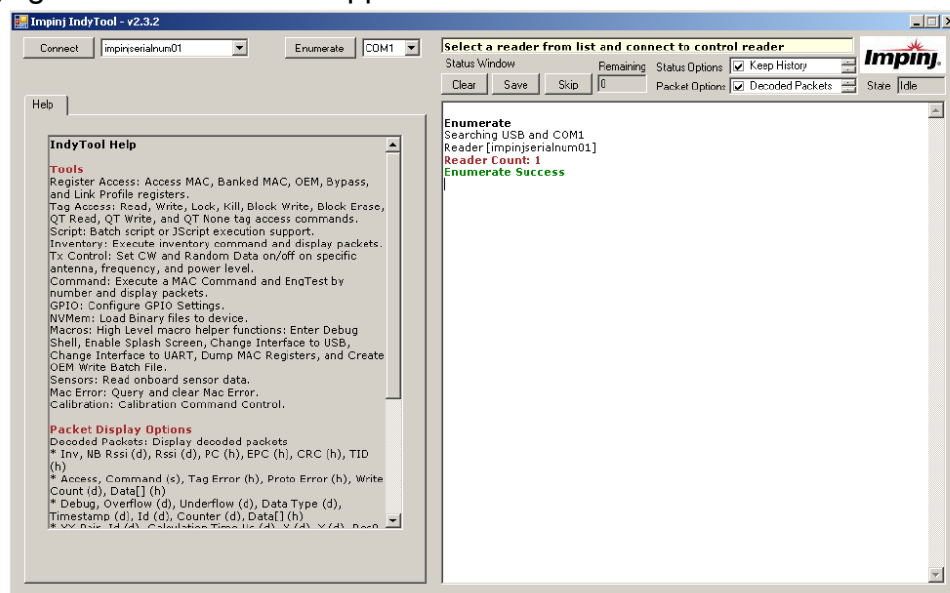

Main Application Window

On IndyTool startup, all the readers connected to the system via USB and the indicated COM port are auto-enumerated. The attached readers are indicated in the status window and a pull down list is populated from which to select.

If there are no readers connected to the system, this will be displayed in the status window and there will no readers in the pull down menu. If there is a library exception when starting up the application or any other error, this will be indicated in the status window.

Status Window

The status window shows the outcome of a user command. All commands and functions will generate some form of feedback in this window.

1. Clear Button – Clears the current contents of the status window.
2. Save Button – Save the current contents of the status window to a specified file.
3. Skip Button – Skips all current status messages queued up by the application for display. Under some high message traffic conditions, the status window will queue up messages for display because it may not be able to keep up with influx of messages. This button will flush the current queue and indicate in the status window how many messages were skipped and show the tail end of the message queue.
4. Remaining– This is count of queued up status messages waiting to be displayed in the status window. The Skip button is most useful when this count is very large and can be useful to flush the messages and see the final status in the queue.
5. Status Options – Special options for controlling the status window:
 - a. Keep History – [Checked] Append all status messages. [Unchecked] Clear status window upon each command operation.
 - b. Status Timestamps – [Checked] Show local timestamp on each status message. [Unchecked] No timestamp.

- c. Read Only – [Checked] Does not allow user to input any text in status window.
[Unchecked] Allows the user to input notes in the status window, which can be useful when logging data and results.
- d. Large Window Buffer – Increases the size of the window buffer before flushing.
- 6. Packet Options – Special options for controlling Indy packet displaying
 - a. Decoded Packets – Displays high level decoded packet information.
 - b. Raw Packets 8 – Displays raw packet data in bytes.
 - c. Raw Packets 32 – Displays raw packet data in 32-bit words.
 - d. Packet Timestamps – Displays packet timestamps in milliseconds (when available in the packet).

Status Timestamps

<2/18/2010 11:05:49 AM> Inv, 42, -78.0, 3000, 11112222CCCCDDDDDEEEEEFFFF, 7098

Decoded Packets

Inv, 42, -78.0, 3000, 11112222CCCCDDDDDEEEEEFFFF, 7098

Raw Packets 8

Inv, 42, -78.0, 3000, 11112222CCCCDDDDDEEEEEFFFF, 7098

T:0005 V:01 F:02 L:0007 [45 6A 0A 00 58 6D 04 01 4A FE 00 00 30 00 AA AA BB BB CC CC DD DD EE EE FF FF 4A 5B]

Raw Packets 32

Inv, 42, -78.0, 3000, 11112222CCCCDDDDDEEEEEFFFF, 7098

T:0005 V:01 F:02 L:0007 [000A6A45 01046D58 0000FE4A AAAA0030 CCCCBBBB EEEEDDDD 5B4AFFFF]

Packet Timestamps

[682579] Inv, 42, -78.0, 3000, 11112222CCCCDDDDDEEEEEFFFF, 7098

The status window will self flush automatically when the status window buffer is full. The window will indicate how many times it has self flush at the top of the status window. The current windows buffer is 2^{16} characters which is approximately equivalent to 1500 singulations of 96-bit EPCs. Use the large window buffer option to increase the windows buffer to 2^{22} .

The Help Tab contains the decoded packet descriptions for reference. The following is the summary of the decoded packet formats:

- z Inv, NB Rssi (d), Rssi (d), PC (h), EPC (h), CRC (h), TID (h)
- z Access, Command (s), Tag Error (h), Proto Error (h), Write Count (d), Data[] (h)
- z Debug, Overflow (d), Underflow (d), Data Type (d), Timestamp (d), Id (d), Counter (d), Data[] (h)
- z XY-Pair, Id (d), Calculation Time Us (d), X (d), Y (d), Res0 (d), Res1 (d), Res2 (d), Res3 (d)

Info Bar

The Info Bar indicates when a reader is connected or when no reader is connected. The Info Bar will also indicate the type of connection either USB or UART.

Enumerate


The Enumerate Button will execute the reader enumeration process. The application will scan the USB interface and the selected COM port for valid readers. The enumeration is only performed when the application is started and when the user presses this button. If a new reader is connected after the application is started, the enumeration process must be executed to control the reader. The reader list will be repopulated when the enumeration is complete. If the reader is not in the pull down list, check the cable connections to make sure the reader is connected correctly. Depending on the situation and nature of readers using the UART port, if

the reader is not responding (in UART mode) it is best to shutdown the application and restart to re-enumerate the radio.

When changing the COM port to enumerate, the application will need to be restarted (as indicated in the status window) to apply the settings. The RFIDcomm.cfg is used to configure the COM port to control, and by default (after installation) it is set to COM1.

Connect

The Connect Button will attempt to make a connection to the reader selected in the pull down menu. Upon a successful connection, a new set of menus will appear as shown in the following figure. If the reader is not connected successfully, it will be indicted in the status window and no menus will appear.

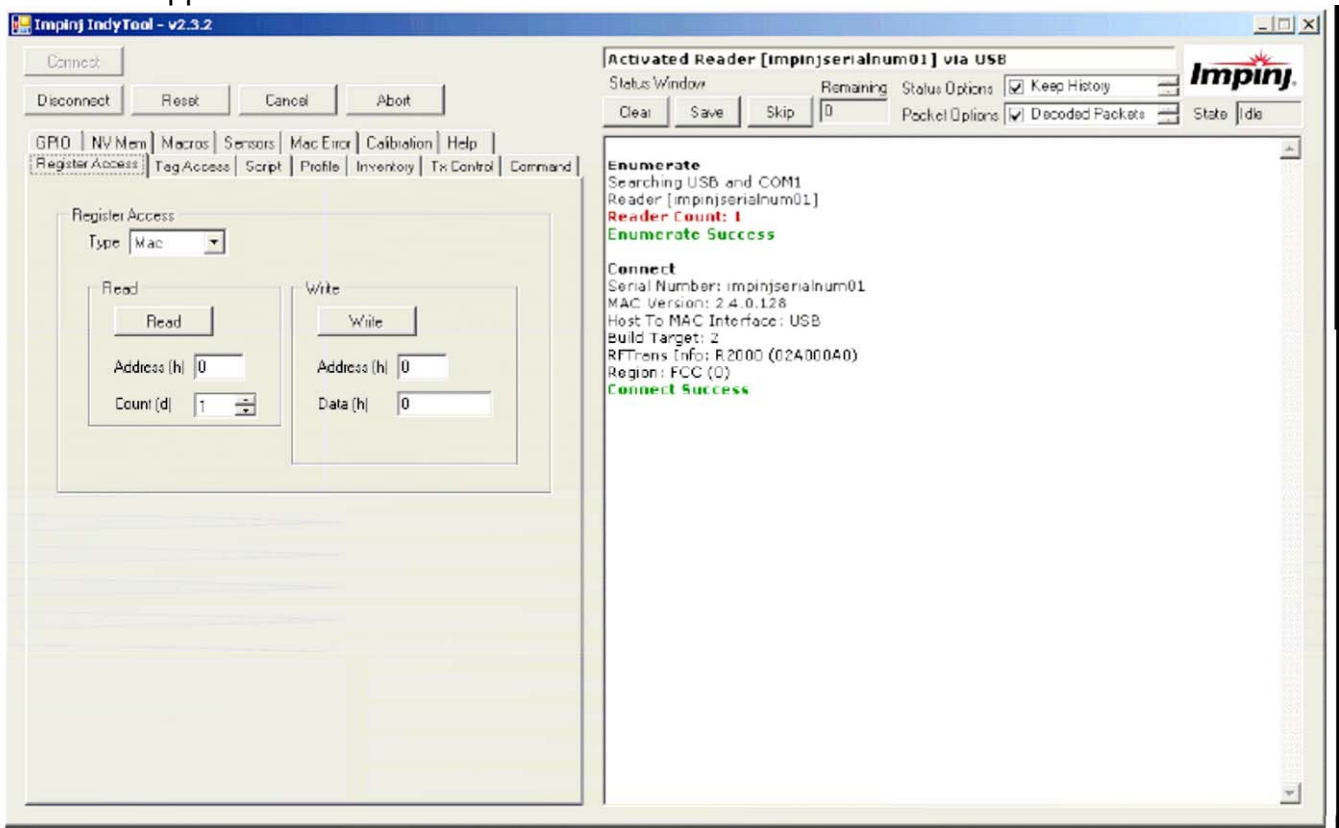

After the reader is connected it is queried for its parameters.

1. Serial Number
2. Bootloader Version (if available and active)
3. Mac Firmware Version and CRC
4. RF Transceiver Info –R1000, R2000, R500
5. Host To MAC Interface = USB or COMx
6. Build Target – 1 = R1000, 2 = R2000, 3 = R500
7. Region – 0 = FCC, 1 = ETSI, 2 = JAPAN

Connect

Serial Number: impinjserialnum01
MAC Version: 2.2.0.240 (CRC FFFFFFFF)
RFTrans Info: R1000 (000C00B0)
Host To MAC Interface: USB
Build Target: 1
Region: FCC (0)
Connect Success

The Info Bar will be updated with the name of the connected Reader and the activated Host To MAC interface.

Disconnect and Reset

The Disconnect Button will attempt to disconnect from the connected reader. The menus will disappear and the unconnected state will be indicated. The Reset Button will attempt to reset the connected reader and will also make the menus disappear.

Cancel and Abort


The Cancel and Abort Button will issue the respective command to Reader when executing a MAC Command. The status window will indicate the issuing of the command and the reader will respond accordingly.

IndyTool Functions

These sections describe the functions found in the visible menus when a reader is successfully connected.

Register Access

The Register Access menu is shown in the following figure.

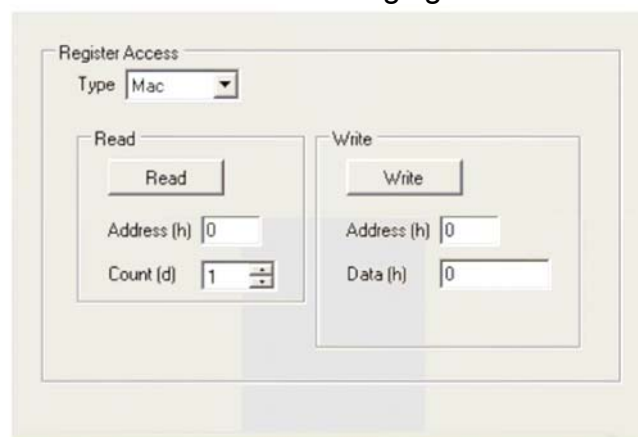

There are five Read/Write Register access types:

1. MAC – Regular MAC Register
 - a. [Read] The read address and count are the inputs. The count indicates how many consecutive addresses to be read. If the application reaches a register that is not readable, it will stop reading.
 - b. [Write] The write address and data are the inputs. This is single write access.
2. MAC Bank – Banked MAC Register
 - a. [Read] The read address and count are the inputs. The count indicates how many consecutive addresses to be read. If the application reaches a register that is not readable it will stop reading. A banked read will detect if the register is a banked register and display the entire banked contents. If it is not a banked register, the single value is displayed.
 - b. [Write] The write address, data and bank number are the inputs. This is a single write access. If the address is not banked, an error will be displayed.
3. Bypass – MAC Bypass Register
 - a. [Read] The read address and count are the inputs. The count indicates how many consecutive addresses to be read. If the application reaches a register that is not readable it will stop reading.
 - b. [Write] The write address and data are the inputs. This is single write access.
4. OEM – OEM Register
 - a. [Read] The read address and count are the inputs. The count indicates how many consecutive addresses to be read. If the application reaches a register that is not readable, it will stop reading.
 - b. [Write] The write address and data are the inputs. This is single write access.
5. LinkProfile – Link Profile Transceiver Register
 - a. [Read] The read address, count, and profile Id are the inputs. The count indicates how many consecutive addresses to be read. If the application reaches a register that is not readable, it will stop reading.
 - b. [Write] The write address, profile Id, and data are the inputs. This is single write access.

All the results are displayed in the status window.

```
Read Register [Mac]
Read Mac [0000] = 020200F0 (Normal RO)

Write Register [Mac]
Write Mac [0003] = 0000FFFF

Read Register [MacBank]
Read Mac [0702][00] = 00000001 (Banked Sel:0701)
Read Mac Register Bank [0702][00] = 00000001
Read Mac Register Bank [0702][01] = 00000000
Read Mac Register Bank [0702][02] = 00000000
Read Mac Register Bank [0702][03] = 00000000
Read Mac Register Bank [0702][04] = 00000000
Read Mac Register Bank [0702][05] = 00000000
Read Mac Register Bank [0702][06] = 00000000
Read Mac Register Bank [0702][07] = 00000000
Read Mac Register Bank [0702][08] = 00000000
Read Mac Register Bank [0702][09] = 00000000
Read Mac Register Bank [0702][0A] = 00000000
Read Mac Register Bank [0702][0B] = 00000000
```

Read Mac Register Bank [0702][0C] = 00000000
 Read Mac Register Bank [0702][0D] = 00000000
 Read Mac Register Bank [0702][0E] = 00000000
 Read Mac Register Bank [0702][0F] = 00000000

Write Register [MacBank]
 Write Mac Register Bank Fail [INVALID_PARAMETER]

Write Register [LinkProfile]
 Write Link Profile [0100][2] = 0000

Tag Access

The Tag Access menu is shown in the following figure.

The screenshot shows a software interface for Tag Access. It has three main sections: 'Tag Access' with a dropdown menu (currently showing 'Read') and an 'Execute' button; 'Parameters' with 'Memory Bank' (dropdown, showing 'EPC'), 'Offset (h)' (text input, showing '0'), and 'Count (d)' (spin box, showing '1'); and 'Passwords' with 'Access Pwd (h)' (text input, showing '0').

The following are the available Tag Access functions:

1. Read
2. Write
3. Kill
4. Lock
5. BlockWrite
6. BlockErase
7. QT_Read
8. QT_Write
9. QT_None

The following are the general inputs to the Tag Access functions:

1. Memory Bank – The target for the access operation: EPC, TID, User, or Reserved.
2. Offset – The offset of the first 16-bit word to access from the target memory bank.
3. Word Count – The number of 16-bit words to access, starting at Offset.
4. Values – The 16-bit word values used in access. The values are comma separated hex values without the 0x prefix.
5. Access Password – The access password for the access.
6. Kill Password – The kill password for performing a kill operation.
7. Kill Permissions – The kill permissions for performing a kill operation.
8. QT Controls – The QT controls for performing a QT operation.

Depending on the function selected, the appropriate inputs fields are displayed and valid values are required for all fields.


Tag Access

Tag Access [Read]
Read = Bank:EPC Offset:0002 Count:0001 APwd:00000000
Command Begin (Cmd = 0010)
EPC = 3000CFE900238C87234200000000
Read = Flags:80 TagErr:00 ProtErr:0000 Data:CFE9
Command End (Status = 0000)
Access Count = 1
Tag Read Executed

Tag Access [Write]
Write = Bank:EPC Offset:0002 Value:1234 Count:0001 APwd:00000000
Command Begin (Cmd = 0011)
EPC = 3000CFE900238C87234200000000
Write = Flags:00 TagErr:00 ProtErr:0000 WriteCount: 1
Command End (Status = 0000)
Access Count = 1
Tag Write Executed

Scripts

The Scripts menu is shown in the following figure.

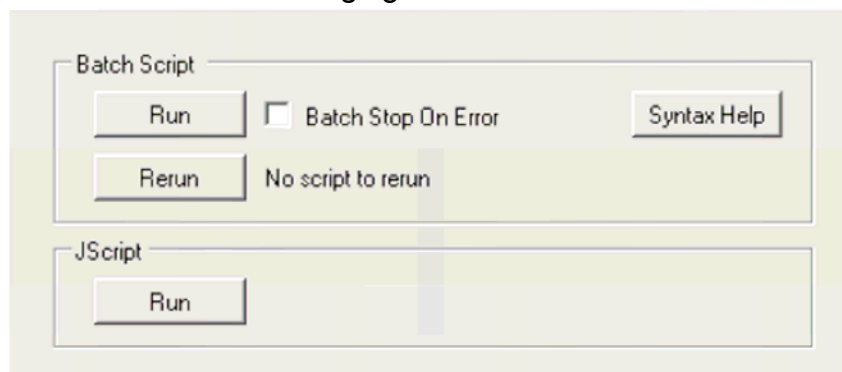

Batch Script

The Batch Access allows a user to have preconfigured access scripts to quickly configure the reader for a specific operation. When the Run is pressed a dialog box prompts the user to select a batch file for execution. The batch files are basic ASCII text with specific commands to execute in order. There is a Syntax Help button to assist a user with the script format when operating IndyTool without the manual. The ReRun Button will re-run the last loaded script file without prompting.

The Batch Script Syntax format legend is as follows:

Batch Script Help
Legend
* Decimal value or Hex Value (0x_)
** Same as *, but in addition -1 for all banks
is the comment character
'durationMs' - Indicates time in ms before sending cancel
'inventory' - Executes inventory command and dumps summary upon completion
Commands
script,sleep,*durationMs

```
mac,command,*id
mac,command,*id,*durationMs
mac,engtest,subcmd,arg0,arg1
mac,engtest,subcmd,arg0,arg1,*durationMs
mac,inventory
mac,inventory,*durationMs

mac,read,*address
mac,read,*address,*count
mac,write,*address,*data

macbank,read,*address,**bank
macbank,read,*address,**bank,*count
macbank,write,*address,*bank,*data

bypass,read,*address
bypass,read,*address,*count
bypass,write,*address,*data
oem,read,*address
oem,read,*address,*count
oem,write,*address,*data
single_entry,*address,*data

linkprofile,read,*address,*id
linkprofile,read,*address,*id,*count
linkprofile,write,*address,*id,*data
```

The following are a list of commands that are supported:

- 1) Script Sleep
- 2) Mac Command and EngTest Commands (with duration option)
- 3) Read/Write of MAC, MAC Bank, Bypass, OEM, and Link Profile Registers

The commands are straightforward and follow the same input requirements as the GUI, but are in comma separated format. The ability to put comments in the scripts is also available by using the # symbol. Decimals values are the default input, but if hexadecimal is preferred then add the prefix 0x to the input.

Note that 'single_entry' is provided as an alias to the 'oem,write' command for backward compatibility with previous oem_tool formatted files.

For example, to configure the reader for Fixed Q algorithm with a Q value of 0, the following commands can be placed in a batch script.

```
mac,write,0x901,0 # Configure MAC 0x901 with 0
macbank,write,0x903,0,0 # Configure MAC 0x903 Bank 0 with 0
```


There is a checkbox option called "Batch Stop On Error" that will halt executing a batch script on any access or syntax error. This may be useful when the use case requires all the accesses to be successful (for example, when first writing the batch script and checking for typographical errors). If the checkbox is not checked, the batch will continue to execute even if an error is detected.

Jscript

The only function available in the JScript menu is to run a JScript. When the button is pressed, the user is prompted with a dialog for selecting a JScript for execution. If the script is valid, IndyTool will disconnect from the reader, run the Jscript, and then reconnect back to the reader for IndyTool control.

The JScript feature is legacy feature from the original MACTool which IndyTool is replacing. The low level MacComDirect Library is used to execute these JScripts. IndyTool provides a GUI interface to run these scripts. However, when IndyTool is installed, the MacComDirect is registered in the system so that a JScript can be run outside the IndyTool application.

An example JScript is included in the installation directory as a sample. The example script is called Example.js. The example will query and display the current MAC Error in a pop up box.

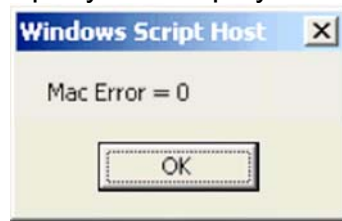


```
Disconnect
Disconnect Success

JScript Select File
JScript Run Begin
Script: C:\Program Files\IMPINJ\Impinj IndyTool v2.2.0\JScripts\Example.js
JScript Run Success

Connect
Serial Number: impinjserialnum01
MAC Version: 2.2.0.240
RFTrans Info: R1000 (000C00B0)
Host To MAC Interface: USB
Build Target: 1
Region: FCC (0)
Connect Success
```

Profile

The Profile menu is shown in the following figure.

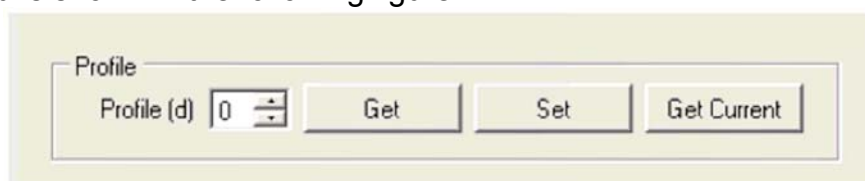

The Profile menu has three profile functions:

1. Get the profile parameter information – The input is the Profile number.
2. Set a new active profile – The input is the Profile number.
3. Get the current active profile – There is no input to this function.

The Get profile function will display all the Gen2 RF profile information

```
Get Link
Profile Profile Number: 0
Configuration: 4
Identifier High: 0x00000001
Identifier Low: 0x00000000
Identifier Version: 0x443A8B29
Protocol: 0
R2T Mod Type: 0
Tari: 25000
X: 1
```

PW: 12500
RTCal: 75000
TRCal: 200000
DR: 2
Miller Number: 0
TRLINK Frequency: 40000
Var T2 Delay: 51
Rx Delay: 577
Min To T2 Delay: 75
Tx Prop Delay: 24
RSSI Configuration: 0x00000000
Get Link Profile Success

The Set profile function will execute the Set Current Profile Command.

Set Link Profile
Profile Number: 0
Command Begin (Cmd = 0019)
Command End (Status = 0000)
Set Link Profile Success

The Get Current function will read the current and active profile numbers.

Get Current Link Profile
Current Profile Number: 0
Active Profile Number: 0
Get Current Link Profile Success

Inventory

The Inventory menu is shown in the following figure.

The Inventory menu has five inventory functions:

1. As configured – Executes the Inventory command without modifying any Mac Registers
2. Single Cycle - Executes the Inventory with HST_CYCLES set to 1.
3. Infinite Cycles - Executes the Inventory with HST_CYCLES set to 0xFFFF.
4. Test Channel – Executes the Inventory with currently Set Test Frequency. If no test frequency is set an error will occur. The HST_CYCLES will also be set to 0xFFFF.
5. Test Channel with Continuous Tx - Executes the Inventory with currently Set Test

Frequency. If no test frequency is set an error will occur. The HST_CYCLES will also be set to 0xFFFF. The continuous_tx bit in HST_TEST_INVENTORY_CFG will also be set.

The Start and Stop can be used to initiate and terminate the selected inventory option. Stop is the equivalent to the Cancel Command.

The note indicates that the Inventory must be preconfigured prior to executing the command (other than the registers that will be explicitly set by IndyTool as described). It is assumed that the user has preconfigured all the parameters using the Register Access menu.

After the Inventory command is complete, the basic singulation rate, tag count, duration and unique count are displayed to the user.

```
Inventory
Command Begin (Cmd = 000F)
EPC = 3000CFE900238C87234200000000
EPC = 3000CFE900238C87234200000000
...
EPC = 3000CFE900238C87234200000000
EPC = 3000CFE900238C87234200000000
Command End (Status = 0000)
Singulation Rate =34.95 tags/second (70 tags in 2.00 sec, 1 Unique)
Inventory Success
```

The Logical Antenna 0 control box allows the configuration of the ohysical antenna port and power level.

The Test Frequency control box allows the configuration of the test frequency for the test modes.

The Info control box allows for statistical data to be dumped to the status window.

The Inventory Info has four functions:

1) Summary – This will provide an overview of statistics of the inventory as a whole

```
Inventory Summary
Status: Completed without errors
Start Time: 1630896 ms (27.2 min)
End Time: 1635611 ms (27.3 min)
Duration: 4715 ms (4.7 sec)
Rate: 57.90 tags/second
Total Tags: 273
Total Unique Tags: 1
Time To See All Once: 20 ms
Inital Inactivity Time: 20 ms
Max Inactivity Time: 47 ms
Final Inactivity Time: 0 ms
Min Rssi: -44.3 dBm
Max Rssi: -42.8 dBm
Inventory Summary Success
```

2) Statistics – This will provide an overview of Gen2 Interface statistics of the inventory as a whole

```
Inventory Statistics
Duration: 4.72 sec Query:
286 (60.64 / sec)
RN16 Received: 273 (57.89 / sec)
RN16 Timeout: 4024 (853.27 / sec)
EPC Timeout: 0 (0.00 / sec)
Tag Read: 273 (57.89 / sec)
```

EPC CRC: 0 (0.00 / sec)
Inventory Statistics Success

3) Configuration – This will provide an overview of all the configuration settings for the inventory.

Inventory Configuration
Algorithm: 1
Stop After N Tags: 0
Issue Select: False (0)
Disable Inventory After Select: False (0)
Query Target: S0 (0)
Query Session: S2 (2)
Query Select Action: ASLINVA_NOTHING (1)
Start Q: 4
Max Q: 15
Min Q: 0
Threshold Multiplier: 4
Query Retry Count: 0
AB Flip: True (1)
Run Until Zero: False (0)
Inventory Configuration Success


4) Tag Data – This will provide an overview of all the individual tag statistics.

Inventory Tag Data
EPC, Count, First Seen (ms), Last Seen (ms), Min Rssi (dBm), Max Rssi (dBm)
3000AAAABBBBCCCCDDDDDEEEEEFFFF, 273, 20, 4715, -44.3, -42.8
Inventory Tag Data Success

5) Options – This provides an ability to toggle the TagFocus or FastID feature in the Indy Firmware.

Tx Control

The Tx Control menu is shown in the following figure.

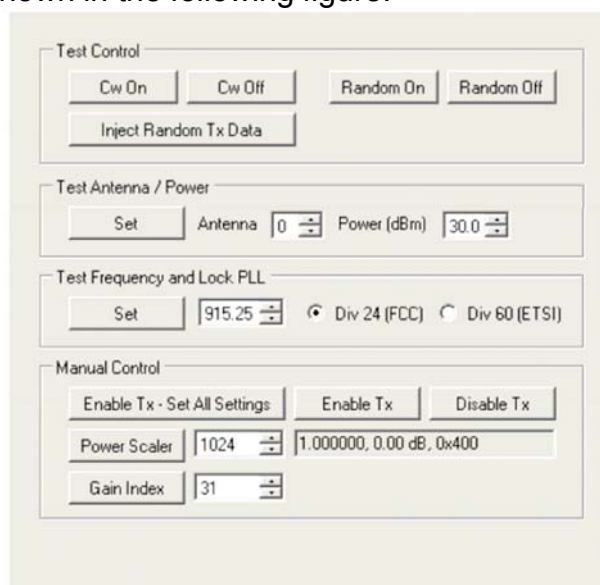

The following are the available TX Control functions:

1. CW On/Off – Controls the CW State.
2. Random Data On/Off – Controls the Random Data State.
3. Inject Random Data – Sends Random Tx Data to the Transmit FIFO on the transceiver chip while in CW operation.
4. Set Antenna and Power – Sets physical antenna and power level for Test Modes.
5. Set Frequency – Sets the Test Frequency and locks the PLL for Test Modes.
6. Manual Tx Control – Functions for Manual Tx Control
 - a. Enable Tx (Set All Settings) – Sets Frequency, Power Scaler, Gain Index, and Enables Tx
 - b. Enable Tx – Only enables the Tx. Note other Tx settings must be set in conjunction to see the transmitter output.
 - c. Disable Tx – Disables the Tx.
 - d. Power Scaler — Sets the power scaler.
 - e. Gain Index – Sets the Tx Gain to the gain code in the internal Gross Gain table.

Command

The Command menu is shown in the following figure.

MAC Command

Execute

Command (h)

EngTest Command

Execute

Results

Sub Command (h)

Arg0 (h)

Arg1 (h)

The following are the available Command functions:

1. MAC Command Execute – The input is the command number.
2. EngTst Command Execute – This is essentially a regular command operation, but it allows for easy access to configure the Sub Command and arguments for testing purposes.


```
Mac Command  
Command [00]  
Command Begin (Cmd = 0000)  
Command End (Status = 0000)  
Mac Command Success
```



```
EngTst Command  
Sub Test [00]  
Arg0 [0000000]  
Arg1 [00000000]  
Command Begin (Cmd = 0004)  
EPC = 5347415453474154534741545347415453474154534741545347415453474154534741545347415453474154534741545347  
1 = Flags:00 TagErr:10 ProtErr:0000  
Data:5343434153434341534343415343434153434341534343415343434153434341534343415343434153434  
341  
Command End (Status = 0000)  
Eng Test Success
```

GPIO

The GPIO menu is shown in the following figure.

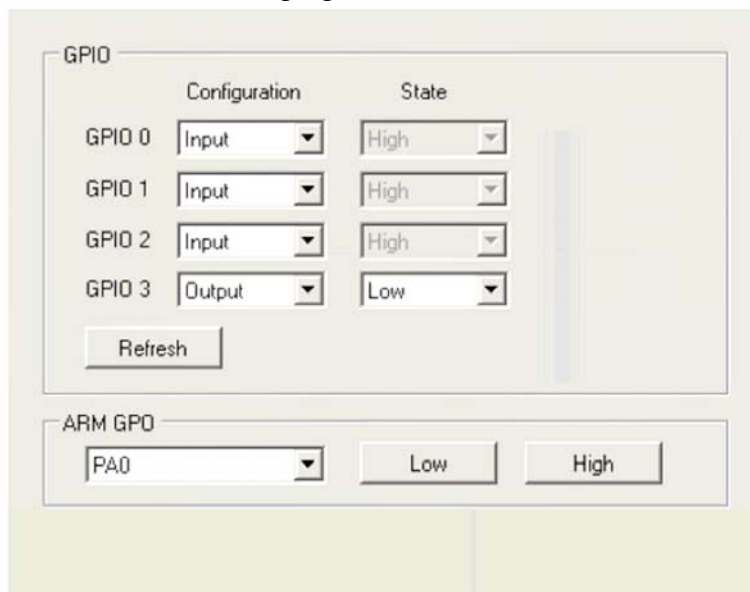


The General purpose GPIO can be configured as Input or Output and the corresponding state is also reflected. The Refresh button can be used to update the states of the GPIOs configured as input. The greyed state boxes reflect the Input State. When configured as GPOs the state becomes user selectable.

The ARM GPOs can be set Low and High via the ARM GPO control box.

NV Mem

The NV Mem menu is shown in the following figure.

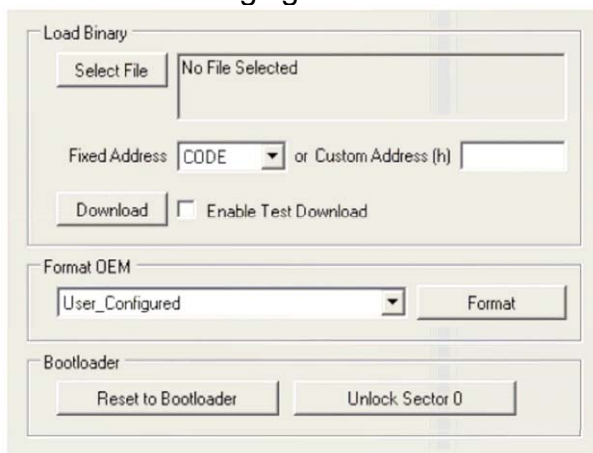

The following are the available Command functions:

1. Load Binary -

The NV Mem can be used to write to any of the NV memory, but the primary function is for firmware downloads.

There are three main inputs to this NV Mem update function:

- A) Input File – To select a file, a dialog will prompt the user to select the binary file. Once selected the file is cached into the IndyTool application and the file properties are displayed:
Name: harvemacR1000.a79 Date: 2/16/2010 7:58:15 PM Size: 162996 bytes

- B) Starting NV Memory Address – Either a fixed Address or custom Address can be selected. For fixed address the options are CODE (0x100000), OEM (0x137C00), INIT_OEM (0x0013FFF8). A custom address can be entered for special cases. To use the fixed address, the custom address must be blank.
- C) Test Download – Selects whether to do perform a Test download or an actual download. When the download button is pressed, the NV Mem sequence commences. If successful, the reader will reboot itself and IndyTool will ask the user to wait 10 seconds and then self disconnect from the reader. When the success is indicated, the user can reconnect to the reader once it is reset.

```

NVMem Select File
Directory: C:\
Name: harvemacR1000.a79
Date: 2/16/2010 7:58:15 PM
Size: 162996 bytes
Select File Success


Memory Update Begin
Name: harvemacR1000.a79
Date: 2/16/2010 7:58:15 PM
Size: 162996 bytes
Start Address: 0x00100000
Executing Operation...
Reader will self reset, please wait 10 seconds...
Memory Update Success

```

- 2. Format OEM – This is used to initialize the OEM space for a specific platform. The pull down menu provides the various options for the various supported platforms. The User_Configured option can always be used, but the appropriate Format OEM preconditions in the MAC Registers must be configured manually by the user (see the MAC Register document for further details).
- 3. Reset To Bootloader - Allows a user to reset the firmware to the bootloader code.
- 4. Unlock Sector 0 – Allows a user to unlock Sector 0 for performing NV Mem updates in that sector.

Macros

The Macros menu is shown in the following figure.

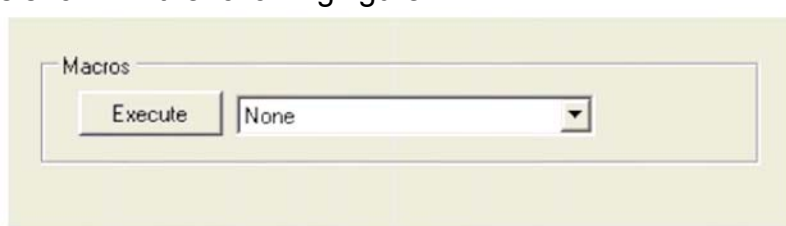


The following are the available Macros functions:

- 1. None – Performs no operation.
- 2. Enter Debug Shell – Executes Mac Command to enter into Debug Shell on the Debug Port.
- 3. Enable Splash Screen with 2 second Delay – Configures the OEM to enable splash screen and sets the Boot Delay to 2 seconds.
- 4. Interface to USB – Configures the OEM for the host for USB operation and resets the reader.
- 5. Interface to UART– Configures the OEM for the host for UART operation and resets the reader.
- 6. Dump Mac – Dumps the entire Mac Register Set.

7. Create OEM Batch – Reads the entire OEM space and prompts the user for a file name to save a Batch script that can be used to write the entire OEM space back to a reader. Essentially saves the OEM state to a file so that it can be preserved, and the Batch Access function in the Register Access menu can be used to restore the state.

Sensors

The Sensors menu is shown in the following figure.

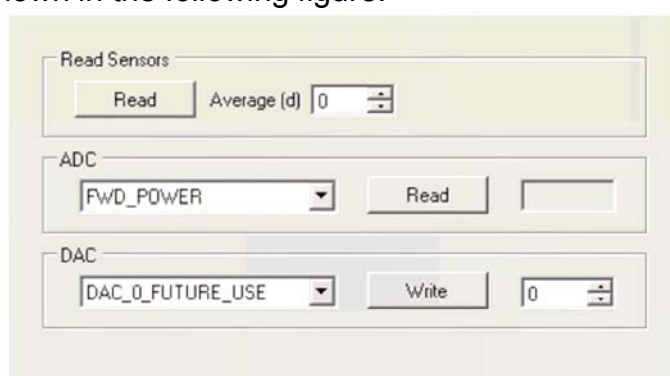

The following are the available Sensor functions:

1. Read – The current sensor registers are queried.

Read Sensors
Averaging [0]
Ambient Temperature: 33 C [237]
Xcvr Temperature: 0 C [0]
PA Temperature: 34 C [238]
Forward Power: -3.9 dBm [76]
Reverse Power: -3.6 dBm [75]

PA Current: 56 mA [195]
Antenna Sense Resistor: 0 [0]
Read Sensors Success

2. ADC – Directly control the ADC


- f. Forward Power
- g. Reverse Power
- h. Ambient Temperature
- i. PA Temperature
- j. Tranceiver Temperature
- k. PA Current
- l. Antenna Sense

3. DAC – Directly control the DAC

- a. Tranceiver DAC 0 – Future Use
- b. Tranceiver DAC 1 – PA Bias

Mac Error

The Mac Error menu is shown in the following figure.

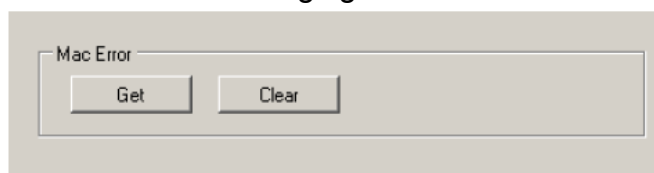

The following are the available Mac Error functions:


1. Get – The Current and Last Mac Error are queried from the reader. Diagnostic codes are also queried and displayed
2. Clear – The Clear Mac Command is executed. Note that the Last Mac Error register is not clearable, only the current Mac Error will be cleared.

```
Get Mac Error
Current Mac Error = None
Last Mac Error = 0316
Diagnostic Code [0] = 0x00000000, 0
Diagnostic Code [1] = 0x00000000, 0
Diagnostic Code [2] = 0x00000000, 0
Get Mac Error Success

Clear Mac Error
Clear Mac Error Success
```

Calibration

The Calibration menu is shown in the following figure.

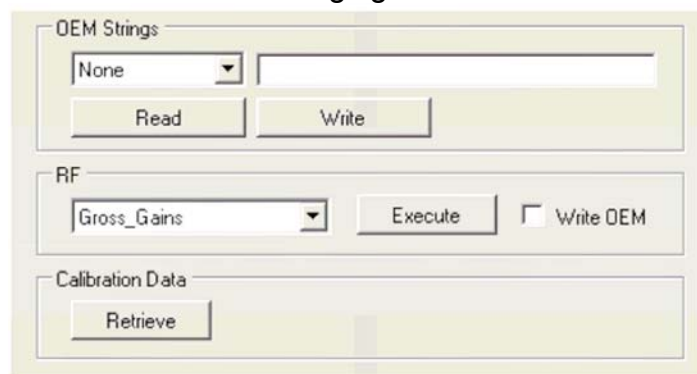


The following are the available Calibration functions:

1. OEM Strings – Read and Write the OEM Strings directly. The available strings are Manufacturer, Product and Serial.
2. RF – The following automatic RF calibration procedures can be performed. Also, the check box for Write to OEM will automatically store the calibration data to the proper OEM area on successful calibration completion.
 - a. Gross Gain Calibration – Requires forward power detector to be calibrated.
 - b. DC Offset – Requires forward power detector to be calibrated.
 - c. LBT_RSSI_Threshold – Requires a known signal level (typically -74dBm for Japan) to be injected into the receive port at the test frequency.
 - d. PA Bias DAC Value – Does not have any prerequisites.
 - e. PA Bias Current Coefficients – Does not have any prerequisites.
3. Calibration Data – Dumps RF related calibration data from the OEM configuration space and formats the data into an IndyTool Batch Script for future use. The script that is generated can be used in the future to configure the same reader with the same calibration data.

Help

The Help menu is shown in the following figure.

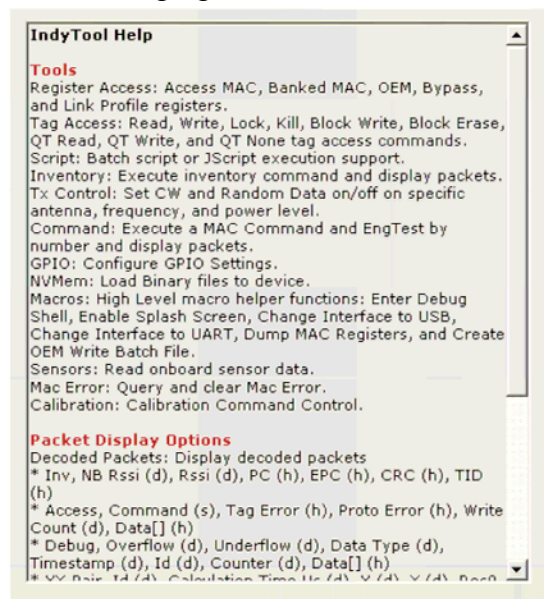

There is no function available in the Help Menu. This menu is for a quick summary of all the other available functions in other menus.

The Tools section describes all the functions in the specific tabs. The Packet Display Options section describes the various packet formats and the options related to displaying packets. The Status Display Options section describes options related to the Status Display Window.

Indy Tracer for Demonstration

Introduction

The Tracer application is a .NET-based graphical user interface (GUI) tool that uses the Indy RFID Host Library API to exercise the functionality of the reader platform, a platform that is based on the Indy R1000 and R2000 chip, and Indy R1000 and R2000 firmware respectively.

Tracer is dynamically linked to the Indy RFID Host Library. Therefore, there is no need to install the interface library separately. However, the USB / UART host driver must be installed prior to using Tracer.

Tracer is supported on Windows XP only.

The goal of this document is to explain the operation of the tool. This document does not explain the underlying RFID functionality that it is controlling via the Indy RFID Host Library API.

Tracer Installation

Installation Requirements

Tracer requires Microsoft Windows XP Professional with Service Pack 1 (or later). Tracer also relies on release 2.0 of the Microsoft .Net Framework. The Tracer setup program checks to ensure that the correct version of the .Net Framework is installed. If the correct version is not installed, the Tracer setup program offers to install it. The user may also download and install a copy of the .Net Framework from the Microsoft Windows Update Site (<http://update.microsoft.com/>) or the Microsoft Download Center (<http://www.microsoft.com/downloads/>).

To communicate with the reader, the current version of the USB / UART host driver must be installed. See the Indy SDK Getting Started Guide for additional information.

To take advantage of the data import/export feature, Microsoft Excel 2003 is required.

Installation

It is possible for multiple versions of Tracer to co-exist on a single system, so long as a unique install path is used for each, such as the default installation directory.

Installation Procedure

To install the Tracer tool:

1. Double click the Tracer installer file, Tracer v2.4.
2. 2.msi, to launch the installation wizard.
3. When prompted, designate the desired installation directory. The default is [Program Files]\IMPINJ\Tracer v2.4.2\.
3. Installation includes the C++ runtime libraries and adds a desktop shortcut to the Tracer application.
4. To Start the Tracer application:
¾ Double click the desktop shortcut, or

- ¾ Use the Start Menu. For example, if installed to the default directory:
Click Start, Select All Programs, IMPINJ, Impinj Tracer v2.4.2, Click Tracer.
- ¾ Open the Tracer installation folder and double click Tracer.exe.

Removal Procedure

To uninstall the Tracer tool:

1. Click Start, Select All Programs, IMPINJ, Impinj Tracer v2.4.2, Click Uninstall Tracer.
2. When prompted to uninstall this product, click Yes.

Alternatively:

1. Open the Control Panel and select Add or Remove Programs.
2. Select the entry for the Tracer version to uninstall and click Change/Remove.
3. When prompted to remove this product, click Yes.

Configuring for UART Operation

In the installation directory there is a file called RFIDcomm.cfg. This file contains the COM Port number if UART operation is desired. The Tracer program will need to be restarted if this file is changed. With UART operation, only a single reader can be controlled.

Tracer Usage


This section describes the features of the Tracer Application.

Tracer has been adapted with reader platform differences in mind. Consequently, Tracer version 2.2.0 supports both the Indy R1000-based and R2000-based reader, hereafter referred to as the reader.

Tracer Appearance

The Tracer consists of a main display window and a floating control panel window. See figure below.

- z The main window contains a menu and a main display area used to show different views of the data received from the reader.
- z The floating control panel is used to start, stop, and pause inventory rounds, and to perform other reader actions.

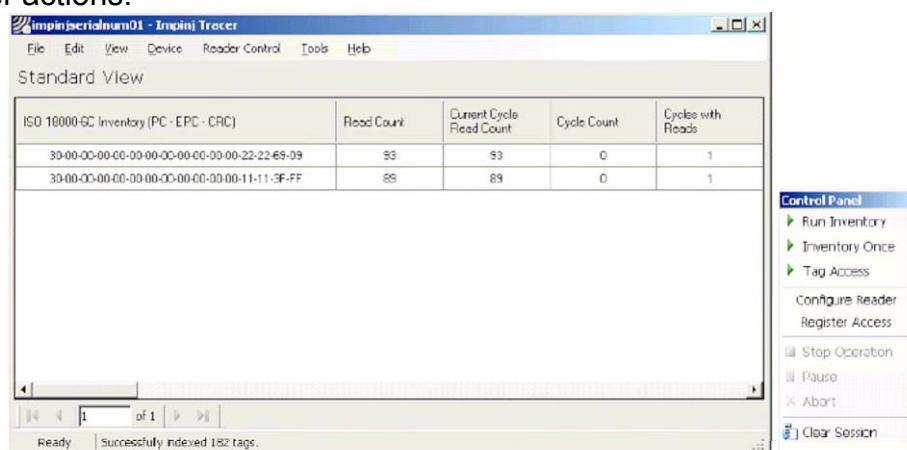


Tracer User Interface Main Window (left) and Control Panel (right)

Selecting a Device and a Mode

Selecting a Device

When the Tracer application starts, it attempts to open all attached readers. Each attached reader is listed separately in the Device menu. If no readers are found, the application displays a warning and the Device menu is empty.


The reader that is found first is automatically selected as the active device. The name of the active reader device is always displayed on the window caption. To change the active reader, make a selection from the Device menu as shown in the figure below.

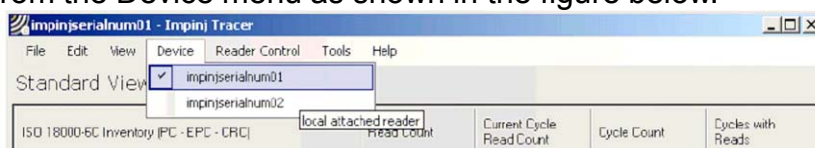

The Device Menu

Controlling a Device


After making a selection from the Device menu, you can control the active reader from the Reader Control menu or from the floating Control Panel. The figure below shows the Control Panel buttons and describes the actions they perform.

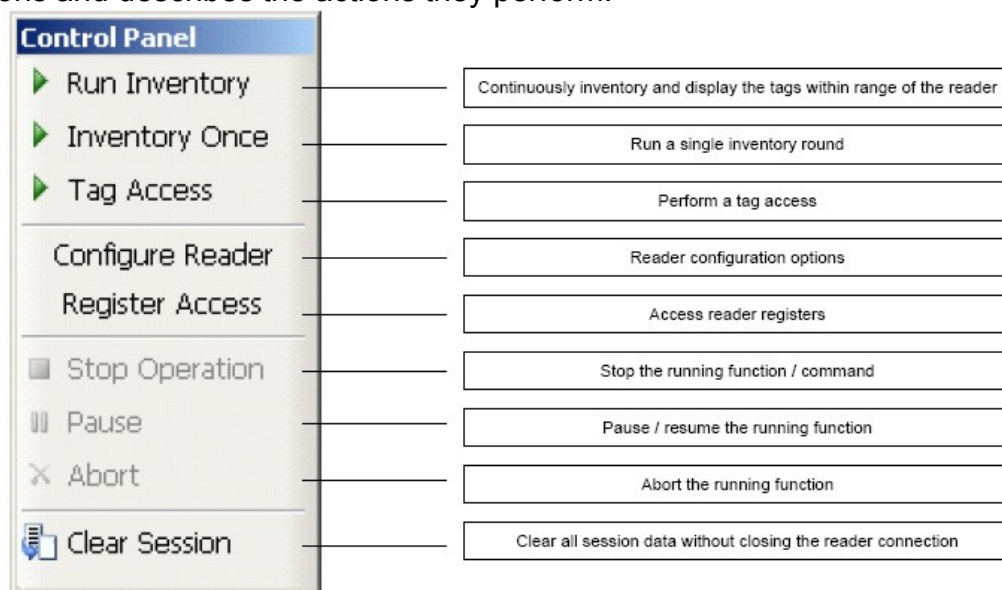

Reader Control Panel

Tag Access

Selecting the Tag Access option presents the user with the configuration dialog shown in the figure below.

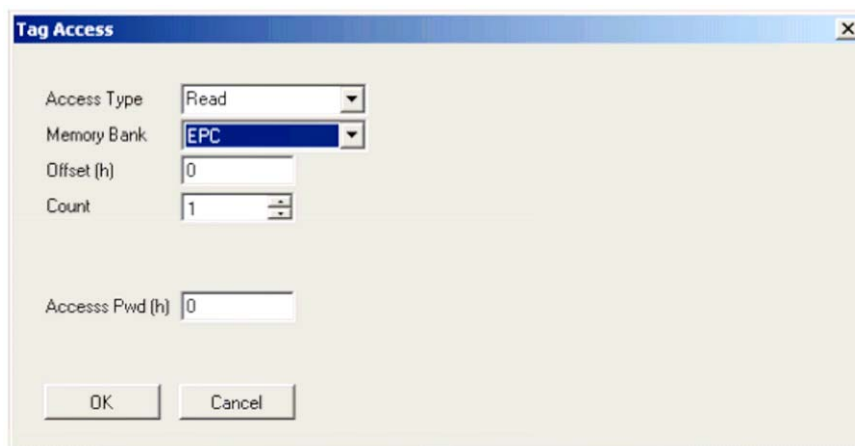

Tag Access dialog box, Access Type Read selected

From the Tag Access dialog box, the user can perform many different access operations against tags as follows.

Access Type Read

Selecting the Read Access Type option displays the configuration dialog shown in the figure above.


From this dialog, the user can perform a read operation against tags and can provide the following configurable parameters:

- < Memory Bank—the target for the read operation, has selectable values of either the EPC, TID, User, or Reserved memory bank
- < Offset—the offset in hexadecimal of the first 16-bit word to read from the target memory bank
- < Count—the number of 16-bit words to read, starting at Offset
- < Access Pwd—the previously applied access password for the target tag, or no entry for tags with no access permissions

Output from read operations is directed to the primary application window.

Access Type Write

Selecting the Write Access Type option displays the configuration dialog shown in the figure below.

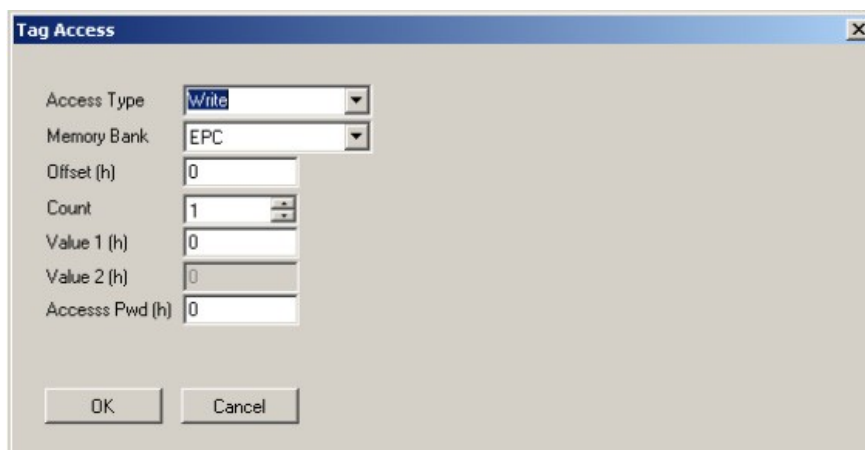

Tag Access dialog box, Access Type Write selected


From this dialog, the user can perform a write operation against tags and can provide the following configurable parameters:

- < Memory Bank—the target for the write operation, has selectable values of either the EPC, TID, User, or Reserved memory bank
- < Offset—the offset in hexadecimal of the first 16-bit word to write from the target memory bank
- < Count—the number of 16-bit words to read, starting at Offset
- < Value 1—the hexadecimal value of the 16-bit word to write at Offset
- < Value 2—the hexadecimal value of the 16-bit word to write at Offset+1, applicable if Count is 2
- < Access Pwd—the previously applied access password for the target tag, or no entry for tags with no access permissions.

Output from write operations is directed to the primary application window.

Access Type Kill

The kill operation allows the user to render any tag with a matching access and kill password as permanently non-functional. Selecting the Kill Access Type option displays the configuration dialog shown in the figure below.

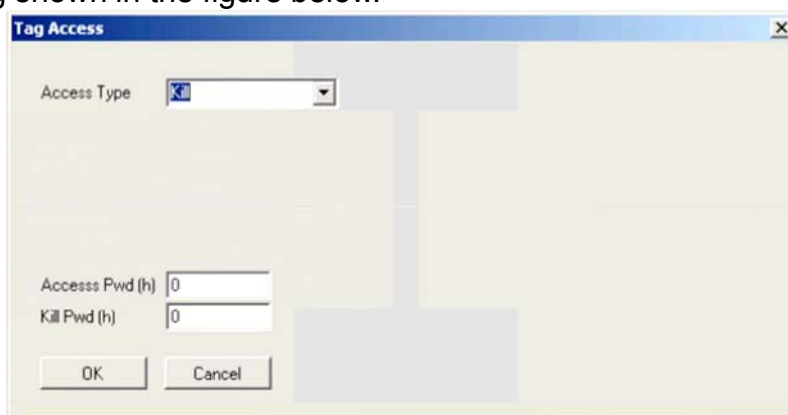


Tag Access dialog box, Access Type Kill selected

Note: Tags with a value of zero for their password are not expected to respond to the kill command.

Access Type Lock

The lock operation allows the user to specify the desired exposure of tag kill and access password permissions. It also allows the user to specify write permission and condition levels for the EPC, TID, and User memory banks. Selecting the Lock Access Type option displays the dialog box shown in the figure below.

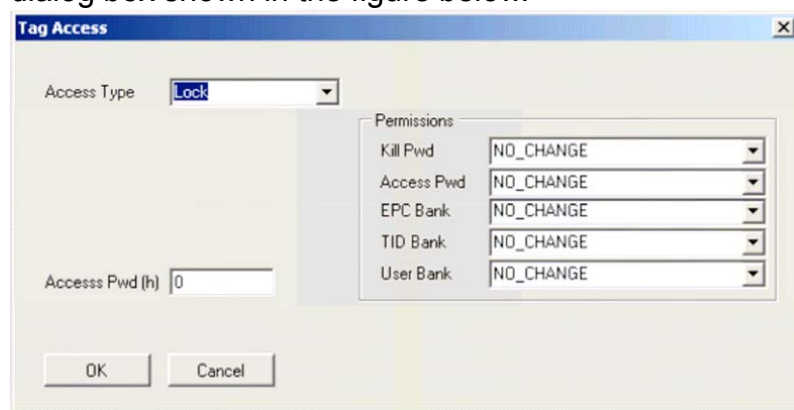

Tag Access dialog box, Access Type Lock selected

Note that all permissions are set in a single operation. In many circumstances, it may be desirable to leave one or more of the target passwords or permissions in an unmodified state. To do this, select the NO_CHANGE option for those targets.

Access Type BlockWrite

Selecting the BlockWrite Access Type option displays the configuration dialog shown in the figure below.

The image shows a 'Tag Access' dialog box. The 'Access Type' dropdown is set to 'BlockWrite'. The 'Memory Bank' dropdown is set to 'EPC'. The 'Offset (h)' text box contains '0'. The 'Count' spinner box is set to '2'. The 'Value 1 (h)' text box contains '0'. The 'Value 2 (h)' text box contains '0'. The 'Access Pwd (h)' text box contains '0'. At the bottom are 'OK' and 'Cancel' buttons.

Tag Access dialog box, Access Type BlockWrite selected

From this dialog, the user can perform a block write operation against tags and can provide the following configurable parameters:

- < Memory Bank—the target for the read operation, has selectable values of either the EPC, TID, User, or Reserved memory bank
- < Offset—the offset in hexadecimal of the first 16-bit word to read from the target memory bank
- < Count—the number of 16-bit words to read, starting at Offset
- < Value 1—the hexadecimal value of the 16-bit word to write at Offset
- < Value 2—the hexadecimal value of the 16-bit word to write at Offset+1, applicable if Count is 2.
- < Access Pwd—the previously applied access password for the target tag, or no entry for tags with no access permissions.

Output from block write operations is directed to the primary application window.

Access Type BlockErase

Selecting the BlockErase Access Type option displays the configuration dialog shown in the figure below.

The image shows a 'Tag Access' dialog box. The 'Access Type' dropdown is set to 'BlockErase'. The 'Memory Bank' dropdown is set to 'EPC'. The 'Offset (h)' text box contains '0'. The 'Count' spinner box is set to '1'. The 'Access Pwd (h)' text box contains '0'. At the bottom are 'OK' and 'Cancel' buttons.

Tag Access dialog box, Access Type BlockErase selected


From this dialog, the user can perform a read operation against tags and can provide the following configurable parameters:

- < Memory Bank—the target for the read operation, has selectable values of either the EPC, TID, User, or Reserved memory bank
- < Offset—the offset in hexadecimal of the first 16-bit word to erase in the target memory bank
- < Count—the number of 16-bit words to erase, starting at Offset
- < Access Pwd—the previously applied access password for the target tag, or no entry for tags with no access permissions.

Output from block erase operations is directed to the primary application window.

Access Type QT_None

Selecting the QT_None Access Type option displays the configuration dialog shown in the figure below.

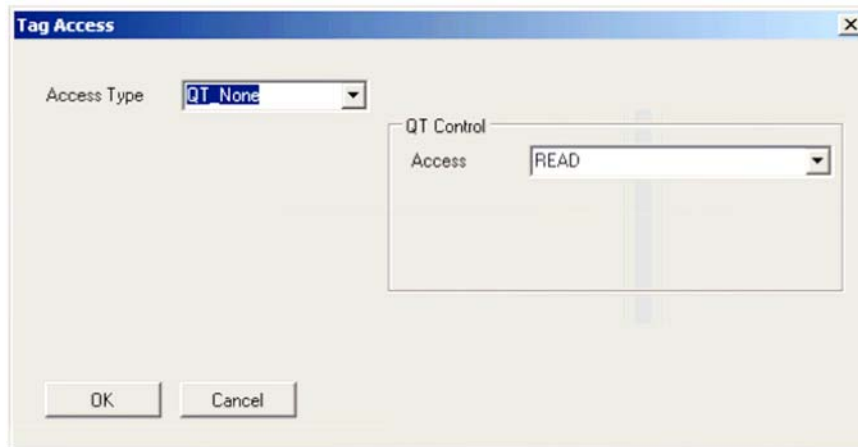


Tag Access dialog box, Access Type QT_None selected and QT Control Access READ option selected

From this dialog, the user can perform a QT control data read or write operation against tags.

The figure above illustrates the QT Control Access READ option, for which no additional parameters are required.

Selecting the QT Control Access WRITE option displays additional options in the configuration dialog shown in the figure below.

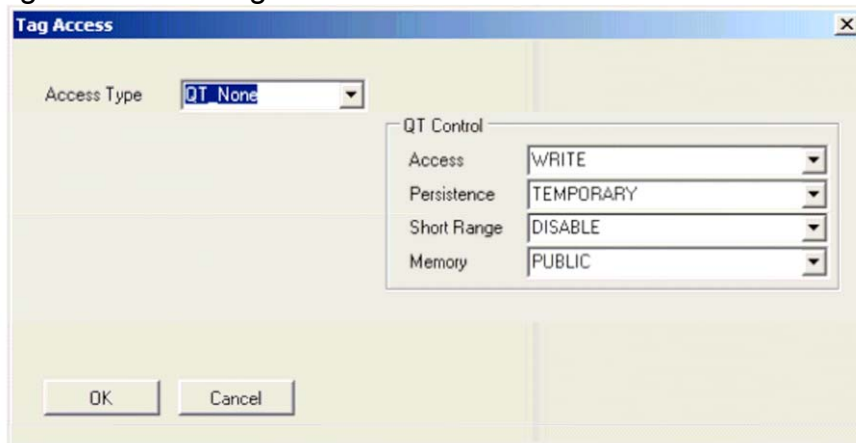


Tag Access dialog box, Access Type QT_None selected and QT Control Access WRITE option selected

Refer to Monza4_Tag_Chip_Datasheet for an explanation of these QT related parameters. Output from QT operations is directed to the primary application window.

Access Type QT_Read

Selecting the QT_Read Access Type option displays the configuration dialog shown in the figure below.

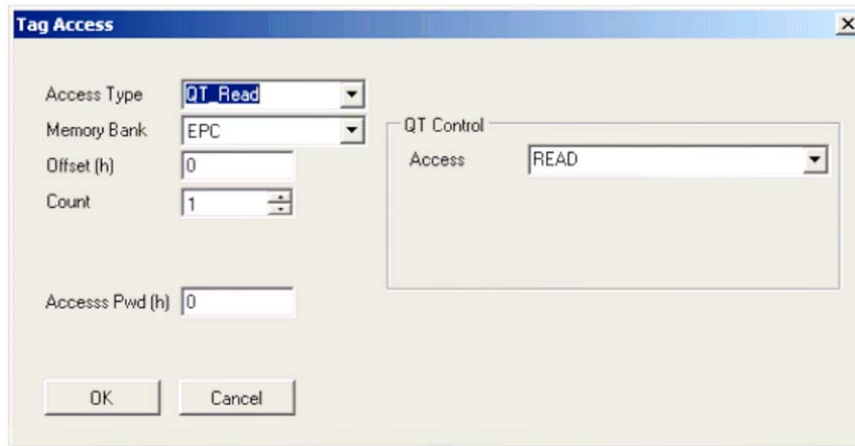

The image shows a 'Tag Access' dialog box. The 'Access Type' dropdown is set to 'QT_Read'. The 'Memory Bank' dropdown is set to 'EPC'. The 'Offset (h)' text box contains '0'. The 'Count' spinner box is set to '1'. The 'Access Pwd (h)' text box contains '0'. On the right, the 'QT Control' section has an 'Access' dropdown set to 'READ'. At the bottom are 'OK' and 'Cancel' buttons.

Tag Access dialog box, Access Type QT_Read selected


From this dialog, the user can perform a QT control data read or write operation followed immediately by a read operation against tags.

The configurable parameters for the QT control data read or write operation are identical to those in section titling **Access Type QT_None**.

The configurable parameters for the QT read operation are identical to those in section titling Access Type Read. Output from QT read operations is directed to the primary application window.

Access Type QT_Write

Selecting the QT_Write Access Type option displays the configuration dialog shown in the figure below.

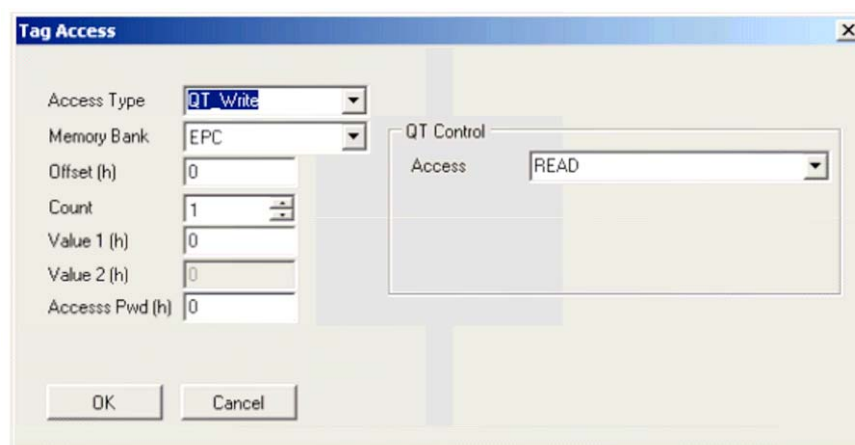

The image shows a 'Tag Access' dialog box. The 'Access Type' dropdown is set to 'QT_Write'. The 'Memory Bank' dropdown is set to 'EPC'. The 'Offset (h)' text box contains '0'. The 'Count' spinner box is set to '1'. The 'Value 1 (h)' text box contains '0'. The 'Value 2 (h)' text box contains '0'. The 'Access Pwd (h)' text box contains '0'. On the right, the 'QT Control' section has an 'Access' dropdown set to 'READ'. At the bottom are 'OK' and 'Cancel' buttons.

Tag Access dialog box, Access Type QT_Write selected

From this dialog, the user can perform a QT control data read or write operation followed immediately by a write operation against tags.

The configurable parameters for the QT control data read or write operation are identical to those in section titling **Access Type QT_None**..

The configurable parameters for the QT write operation are identical to those in section 3.3.1.2. Output from QT write operations is directed to the primary application window.

RFID Data Views

Overview

The Tracer provides several views that allow users to examine RFID data from different perspectives. Use the View menu (on the main window) to select different views.

Tracer provides two types of data views:

- z Live data views, which are captured in real-time from the reader
- z Post-capture views, which are generated after an operation is completed


The live data views display data as the packets arrive from the reader. The application applies minimal processing to this live data. The following table describes the three live data views that are available.

Live Data Views

View Name	Contents
Summary View	Overview statistics about the current session, currently executing command and reporting time slice.
Standard View	A list of unique tag singulations (tag id inventoried) in the session and a count of the number of times the id was read (inventoried).
Protocol Trace	A graphical view of the packet data for the current (active) command broken out by the packet fields.

Note that while a reader is actively executing a command, such as Inventory, only live data views are available. Even if a user has selected a post-capture view, the view is automatically switched to a live data view when a command is issued to the reader.

While the command is running, users can switch between any of the three live views (Summary, Standard and Protocol Trace). However, the user interface prevents users from switching to any of the post-capture views. See the figure below.

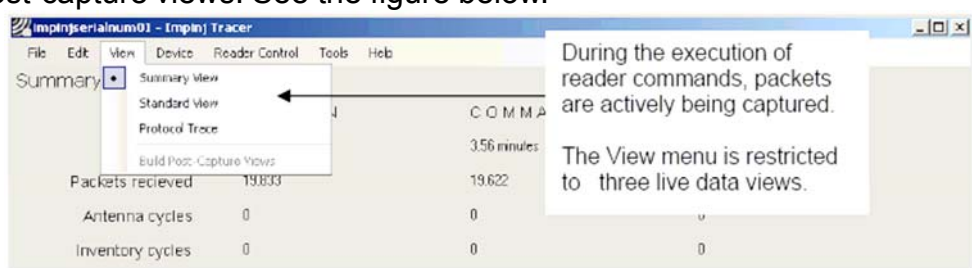


View Menu Options – During Reader Command Execution

Performing Post-Capture Processing

After one or more reader functions has completed, Tracer must perform the post-capture processing to create the post-capture views. The post-capture processing builds an index of the captured data which provides the data for the post-capture views.


You can perform the post processing by initiating it yourself or by configuring the application to invoke it automatically. The procedure for each approach is described below:

- z To initiate the post processing (i.e., to build the indexed data file), select Build Post-Capture Views as shown in the figure below. This option is enabled after the reader functions have completed.

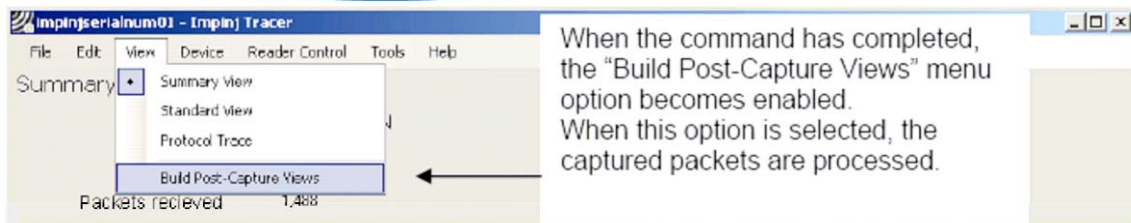


View Menu Options - Build Post-Capture Views

- z To configure the application to automatically invoke the post-capture processing:
 1. From the Tools menu, select Tracer Options. The Tracer Option dialog box displays.
 2. Select Automatically perform post-capture processing as shown in the figure below.

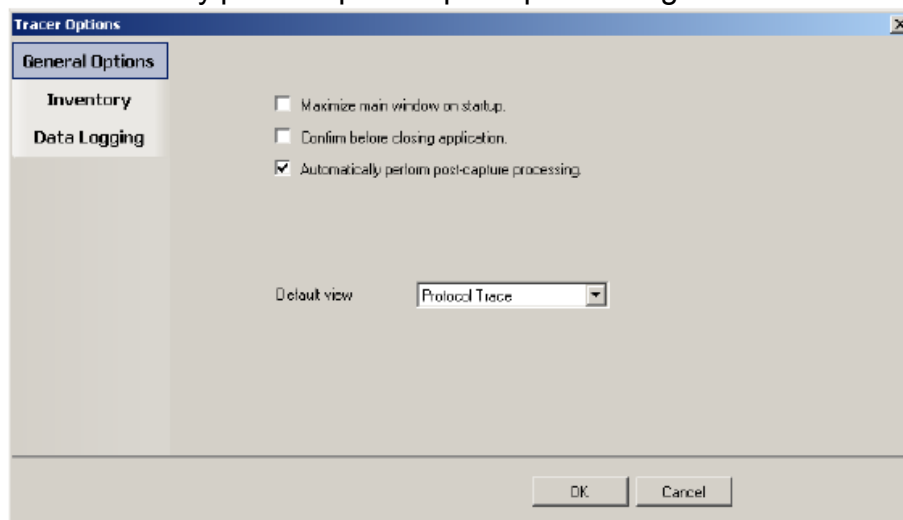

Automatically Perform Post-Capture Processing

When the post-capture processing completes, all views become available from the View menu, as shown in the figure below.

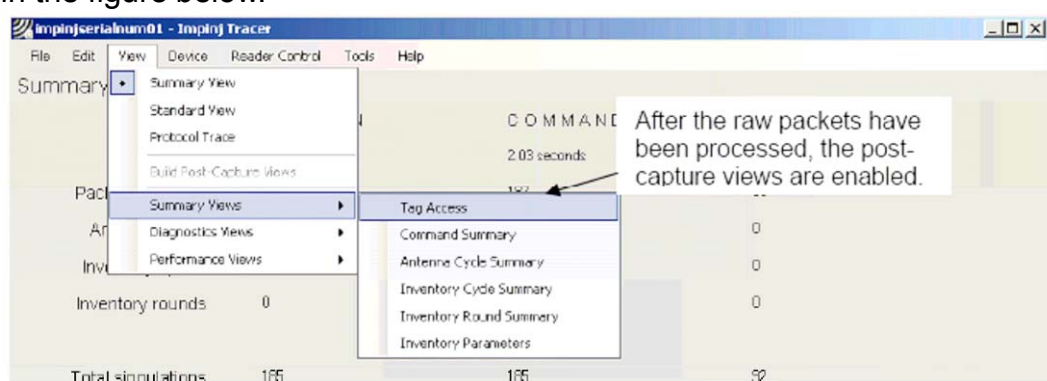

View Menu Options - Post-capture Views

Except for the Reader Protocol view, all post-capture views are divided into three groups under the submenus:

- z Packet Views
- z Diagnostic Views
- z Performance Views

The Protocol Trace is the only view that supports the display of both live and post-capture data. When the reader is active, the Reader Protocol view displays the last one thousand captured packets for the current command. When the post-capture process completes, the Reader

Protocol view displays all packets for the active session.

The following table lists the post-capture packet views that are available:

Post-Capture Packet Views

View Name	Contents
Tag Access	Lists in chronological order all Inventory Response packets received from the reader. The view includes the Tag ID, time of packet arrival, the Antenna number, device time, the access type, and the tag data.
Command Summary	Provides summary information about the commands executed by the reader in the current session. Data items include elapsed time of the command, execution mode, tag count, unique tag count, and tag read rate.
Antenna Cycle Summary	Provides summary information about the antenna cycles executed by the reader in the current session. Data items include the number of antennas included, the tag count, unique tags, and tag singulation rate.
Inventory Cycle Summary	Provides a summary of all of the inventory cycles included in the current session (or since the last time the session was cleared). The view includes the total and unique tag count, logical antenna number, and read rate.
Inventory Round Summary	Lists data related to each inventory round including the antenna used, tag count, and elapsed time in milliseconds.
Inventory Parameters	Lists the parameter used in the session's inventory rounds.

The following table lists the post-capture diagnostic views that are available:

Post-Capture Diagnostic Views

View Name	Contents
All Packets (Raw Format)	Lists in chronological order all packets received from the reader.
Invalid Packets	Lists invalid or unrecognized packets, the raw data, and the parsing error.
Inventory Cycle Diagnostics	Lists diagnostic information for each inventory cycle. <i>Note: The extended data format must be selected to obtain this information.</i>
Inventory Round Diagnostic	Lists the diagnostic information for each inventory round. <i>Note: The extended data format must be selected to obtain this information.</i>

The following table lists the post-capture performance view that is available:

Post-Capture Performance View

View Name	Contents
Singulation Rate Data	Provides data useful for calculating the read rate achieved by the reader.

Exporting Data

The Tracer application allows you to export data to Microsoft Excel 2003. To export data:

- z From the File menu, click Export. A dialog box opens from which you can select the views you wish to export. You can export one or more views at a time.

The application saves exported files in the user's temporary directory. After the export completes, Tracer invokes Microsoft Excel, or the associated application for xml format worksheets, to open the exported data file. Each view selected for export becomes a separate sheet in an Excel workbook.


Note: Microsoft Excel allows only the first 65536 rows in each view to be exported. If a session is too big for Excel,

you can always view it in the Tracer application.

Logging Data

Tracer supports the logging to a text file of all packets received from readers. See figure below To enable logging:

1. From the Tools menu, click Tracer Options. This opens the Tracer Options dialog box.
2. In the Tracer Options dialog box, click the Data Logging tab.
3. Select the Enable Logging check box.
4. If desired, specify an alternative directory in which log files should be stored.

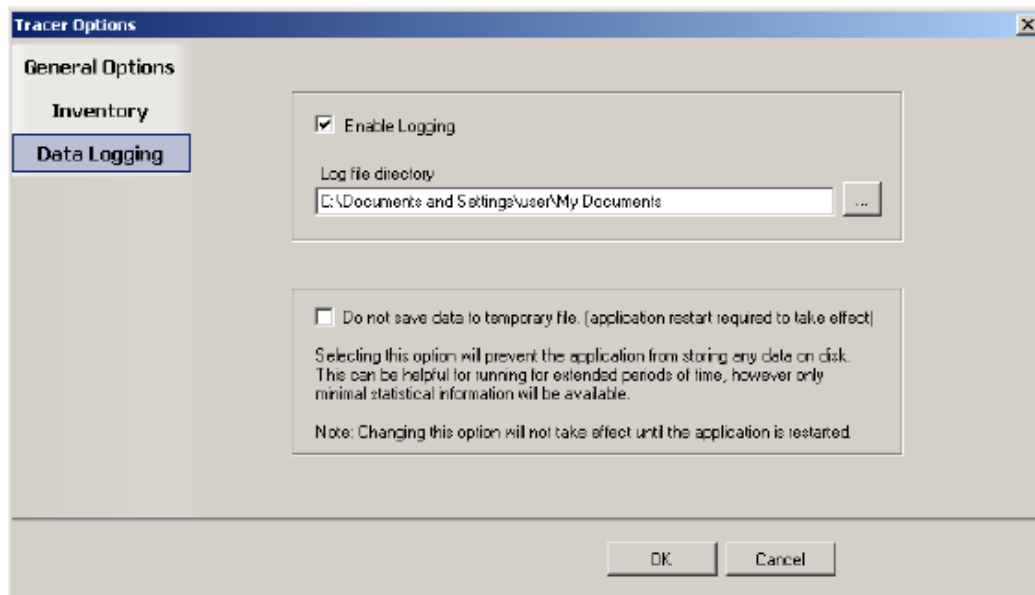

Data Logging

The log files created by Tracer are named rfidxxxx.log, where xxxx is a four digit sequence number. The figure below shows an example of log file content.

00	1962797	"Cmd Begin"	01-00-00-00-02-00-00-00-0F-00-00-00-05-00-00-00
00	1962797	"Cyc Begin"	01-00-02-00-00-00-00-00
00	1962797	"Ant Begin"	01-00-03-00-01-00-00-00-00-00-00-00
00	1962797	"Inv Begin"	01-00-04-00-00-00-00-00
00	1962797	"Inventory"	01-00-05-00-03-00-29-41-2D-A8-09-00-10-00-00-00-00-EB-6B
00	1962797	"Inventory"	01-00-05-00-03-00-29-41-2D-A8-09-00-10-00-00-00-00-01-FB-4A
00	1962798	"Inventory"	01-00-05-00-03-00-29-41-2D-A8-09-00-10-00-00-00-00-02-CB-29
00	1962798	"Inventory"	01-00-05-00-03-00-29-41-2D-A8-09-00-10-00-00-00-00-03-DB-08
00	1962798	"Inventory"	01-01-05-00-01-00-00-00-06-00-00-00
00	1962798	"Inv End"	01-00-09-00-00-00-00-00
00	1962798	"Inv Begin"	01-00-04-00-00-00-00-00

Log File Example

The log file contains four fields separated by tab characters. These fields are defined in the following table.

Log File Field Definitions


Field	Contents
Radio Index	A unique serial number for the reader.
Time stamp	Elapsed time in milliseconds from the start of the session.
Symbolic Name	The symbolic name for the packet.
Packet Data	The packet data in hexadecimal format.

Accessing and Changing Reader Configuration

The Tracer application allows the user to configure many of the settings of the attached readers.


To access the configuration panel:

- z From the Reader Control menu, select Configure Reader. Alternatively, from the Control Panel, select Configure Reader. See the figure below. This opens the Tracer Reader Configuration dialog box.

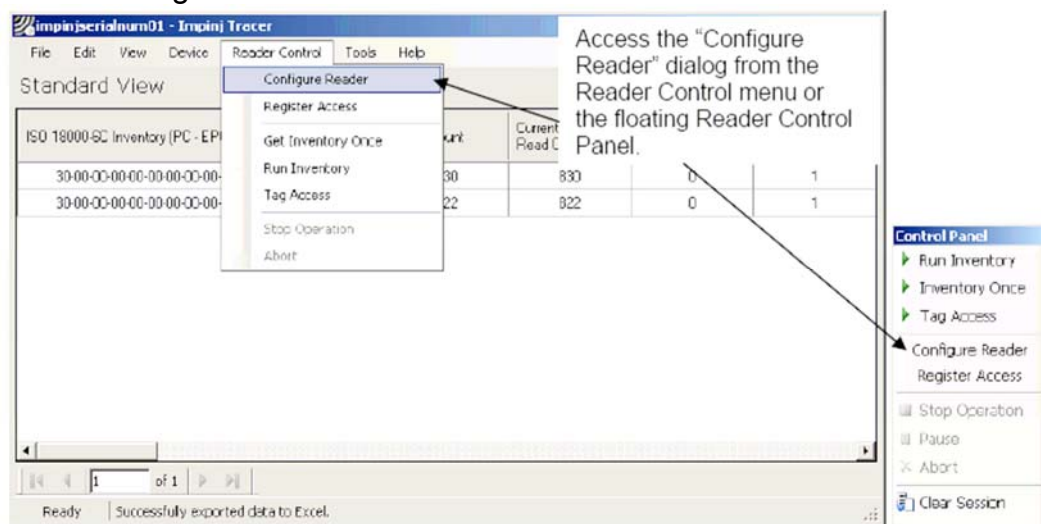

Accessing the Reader Configuration Dialog

The Tracer Reader Configuration dialog contains many function-specific pages, each of which is listed on the left-hand side selection bar. The current selection is always indicated by a visual highlight. For example, in the figure below, the Settings page is active.

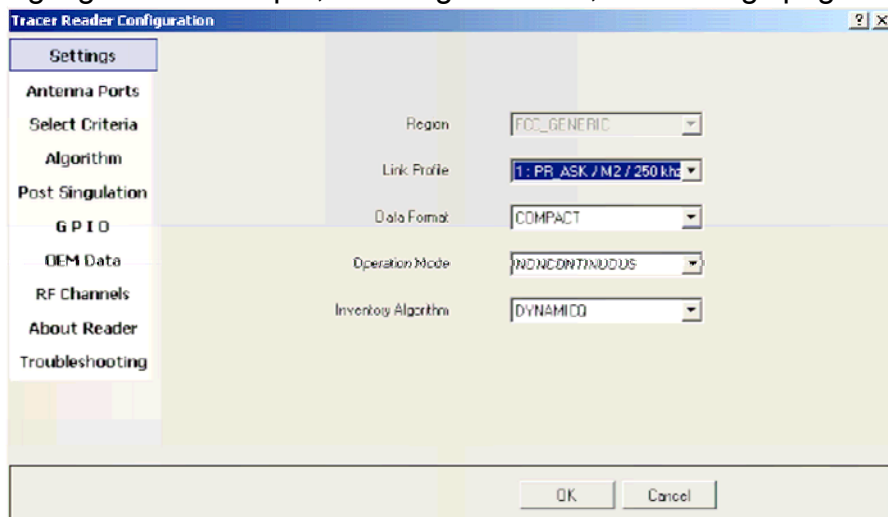

Reader Configuration Dialog Box

The following sections describe each page of the Tracer Reader Configuration dialog box—starting with the Settings page. Refer to the *Indy_Firmware_Datasheet* and the *IN_DG_IPJ_Indy_RFID_Host_Library_API_Reference_Manual* for a description of the underlying functionality.


Settings Page

When the Reader Configuration dialog first opens, it displays the Settings page shown in the figure above. The settings displayed are the current settings on the reader. From this page, you can view and/or configure the following items:

- z Operating Region (Read only, set within the reader)
- z Link Profile • Data Format (Compact, Normal or Extended)
- z Operational Mode (Continuous Mode or Discontinuous Mode)
- z Inventory Algorithm (Fixed Q or Dyanmic Q)

Antenna Configuration Page


From the Antenna Configuration page, you can configure the reader's 16 logical antenna ports. As the figure below shows, this page displays the current antenna configuration within a grid.

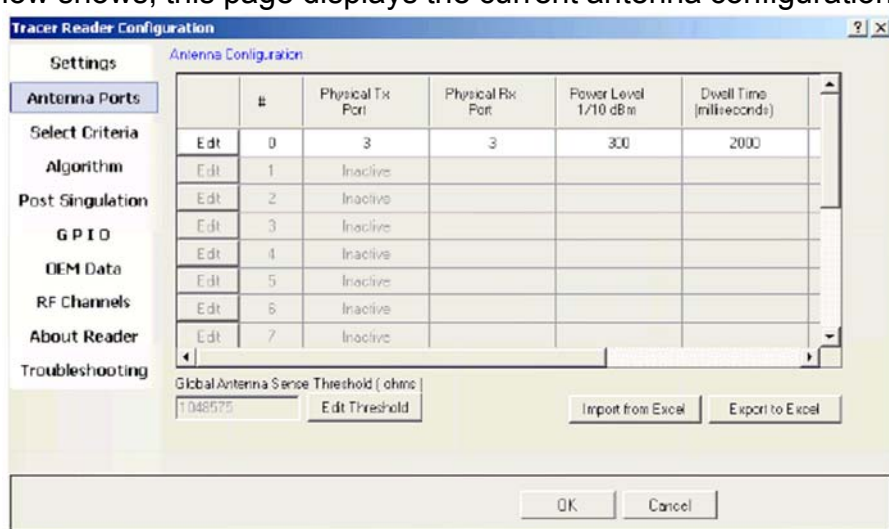

Antenna Configuration

The Import and Export buttons allow the antenna data to be manipulated by Microsoft Excel and then imported back into the reader.

To change the setting for a logical antenna, click its associated Edit button in the first column of the grid. This displays the dialog box shown in the figure below.

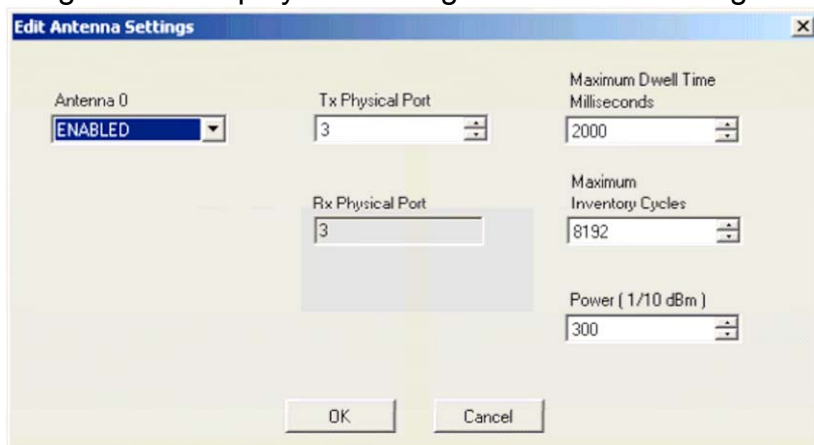

Antenna Logical Settings

Configurable parameters for individual antennas are:

- z Tx Physical Port indicating the physical connector (0 thru 3) to which the logical antenna is bound for transmission of data.
- z Rx Physical Port indicating the physical connector to which the logical antenna is bound for receipt of data. This value is currently bound and must be equal to the Tx Physical Port value.
- z Maximum Dwell Time indicating the maximum number of milliseconds that may be spent on the logical antenna during a single cycle.
- z Maximum Inventory Cycles specifying the maximum number of inventory cycles that will be spent on the logical antenna before a switch to the next one available.
- z Antenna transmission Power in 1/10 dBm increments.

Note: The dwell time and inventory cycles may not both be set to a value of zero. If the user attempts to perform such an operation, the last of the two fields to be modified will automatically have its value converted to one (1).


To change the global antenna sense threshold, click on the “Edit Threshold” button. This will bring up the dialog box shown in the figure below.



Antenna Sense Threshold Settings

Select Criteria Page

Use the Select Criteria page to view and configure the selection criteria query settings that can be used for any tag–protocol operations. As shown in the figure below, this page displays the active selection criteria of the current reader.

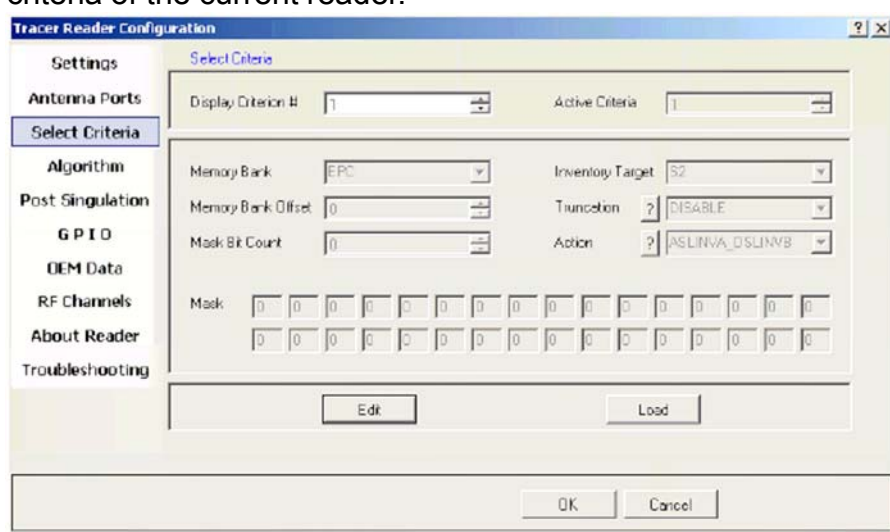

Select Criteria View

The Display Criterion # spin box allows you to select the criteria currently being viewed. It has a range of one (1) up to the value displayed under Active Criteria.

The Load button causes the application to perform a direct query to the current reader and reload the page with the retrieved select criteria settings.

To change the select criteria parameters for the active reader, click the Edit button. This displays the dialog box shown in the figure below.

The dialog box is titled "Edit Select Criteria Settings". It contains the following fields and controls:

- Select Criteria** section:
 - Display Criterion #: Spin box with value 1.
 - Active Criteria: Spin box with value 1.
- Memory Bank**: Dropdown menu with "EPC" selected.
- Memory Bank Offset**: Spin box with value 0.
- Mask Bit Count**: Spin box with value 0.
- Inventory Target**: Dropdown menu with "S2" selected.
- Truncation**: Dropdown menu with "DISABLE" selected.
- Action**: Dropdown menu with "ASLINVA_DSLINVB" selected.
- Mask**: A 2x16 grid of checkboxes, all currently unchecked.
- Buttons**: "Save" and "Cancel" buttons at the bottom.

Select Criteria Edit Dialog

This panel allows configuration of individual select criterion parameters.

Note 1: Only one active select criteria is allowed at this time. Attempts to set the Active Criteria count (in the Edit dialog) greater than one (1) results in an Invalid Parameter error. This error is generated and displayed when the Save button is clicked.

Note 2: Truncation is not supported in the Indy firmware at this time. The Truncation parameter should be set to DISABLE.

Inventory Algorithm Panel

The Inventory Algorithm panels are used to view and configure the reader's query settings, the parameters for the selected singulation algorithm, and whether select and post singulation filters should be utilized during inventory, read, write and similar operations.

The figure below shows an example of the Inventory Algorithm View panel.

The panel is titled "Tracer Reader Configuration" and shows the "Algorithm Settings" tab. It includes a sidebar with navigation options: Settings, Antenna Ports, Select Criteria, **Algorithm** (selected), Post Singulation, GPIO, OEM Data, RF Channels, About Reader, and Troubleshooting.

The main area contains the following settings:

- Active Algorithm**: Dropdown menu with "DYNAMICQ" selected.
- Select State**: Dropdown menu with "SELECT_ALL" selected.
- Session**: Dropdown menu with "S2" selected.
- Session Target**: Dropdown menu with "A" selected.
- Activate Select Rules**: Unchecked checkbox.
- Activate Post-Singulation Rules**: Unchecked checkbox.
- Start Q Value**: Spin box with value 4.
- Relay Count**: Spin box with value 0.
- Min Q Value**: Spin box with value 0.
- Threshold Multiplier**: Spin box with value 4.
- Max Q value**: Spin box with value 15.
- Toggle Target (A<8)**: Dropdown menu with "Enable" selected.
- Buttons**: "Edit", "Load", "OK", and "Cancel" buttons at the bottom.

Algorithm Settings View Page

The Load button queries the current reader and refreshes the values displayed on the Algorithm Settings page.

To modify the algorithm settings for the current reader, click the Edit button. This opens a dialog box similar to the one shown in the figure below.

Inventory Algorithm Edit Page

In the Active Algorithm dropdown box, you can select between the Fixed Q and Dyanmic Q algorithm. When you select a new algorithm, the configurable fields displayed in the center sub-panel change to match those available with the selected algorithm.

The Activate Select Rules and Active Post-Singulation Rules checkboxes control whether the select and post singulation criteria that have been configured should be utilized during inventory, read, write, and similar operations.

Post Singulation Criteria Page

Use the Post Singulation page to view and configure reader settings that define the manner in which tags and post singulation are filtered (based on all or part of the tag's EPC).

The figure below shows an example of the page displayed when the Post Singulation Criteria option is chosen.

Post Singulation Criteria View Page

The Display Criterion # spin box allows you to select the criteria currently being viewed. It has a range of one (1) up to the value displayed under Active Criteria.

The Load button causes the application to perform a direct query to the current reader and reload the page with the retrieved post singulation criteria settings.

To change the post singulation criteria parameters for the active reader, click the Edit button. This displays the dialog box shown in the figure below.

The dialog box is titled "ConfigurePostSingulation_Edit". It contains the following fields and controls:

- Display Criterion #**: A spin box with the value 1.
- Active Criteria**: A spin box with the value 1.
- Memory Bank Offset**: A spin box with the value 0.
- Mask Bit Count**: A spin box with the value 0.
- Mask Match**: A dropdown menu set to "REGULAR".
- Mask**: A grid of 16 checkboxes, all currently unchecked.
- Buttons**: "Save" and "Cancel" buttons at the bottom.

Post Singulation Criteria Edit Dialog

This page allows configuration of individual post singulation criterion parameters.

Note: Only one active post singulation criteria is allowed at this time. Attempts to set the Active Criteria count greater than one (1) in the Edit dialog result in an Invalid Parameter error. This error is generated and displayed when the Save button is clicked.

GPIO Pin Configuration Page

Use the GPIO Pin Configuration page to set and retrieve the current values of General Purpose Input/Output (GPIO) pins which are accessible to the user on the Indy Firmware microcontroller. The figure below shows the GPIO panel.

The panel is titled "Tracer Reader Configuration" and "GPIO Pin Configuration". It features a sidebar with navigation options: Settings, Antenna Ports, Select Criteria, Algorithm, Post Singulation, **GPIO**, OEM Data, RF Channels, About Reader, and Troubleshooting. The main area contains a table with the following data:

	Name	Access	State	Status
APPLY	PIN_0	GET	HI	SUCCESS
APPLY	PIN_1	GET	HI	SUCCESS
APPLY	PIN_2	GET	HI	SUCCESS
APPLY	PIN_3	GET	HI	SUCCESS

Below the table is a "Read All" button. At the bottom of the panel are "OK" and "Cancel" buttons.

GPIO Pin Page

To retrieve the current value for a specific GPIO pin:

1. Set the Access value to GET.
2. Click the associated Apply button. The State column then indicates the retrieved value—LOW for a binary value of zero or HI for a binary value of one. If the operation fails, the Status field indicates this and the displayed state changes to UNKNOWN.

To retrieve the current values of all GPIO pins:

- z Click the Read All button. This operation sets all pins to GET mode and retrieves the current values from the system.

To set a value for a specific GPIO pin:

1. Change the Access value to SET.
2. Change the State field to the desired value.
3. Click the associated Apply button.

OEM Data Page

The OEM Data page allows the user to read product data from the OEM area on the Indy Firmware microcontroller. The GPIO page is shown in the figure below.

The screenshot shows the 'OEM Data' page of the 'Tracer Reader Configuration' window. The left sidebar has a tree view with 'OEM Data' selected. The main area contains the following fields:

- Serial Number / ID: Input field with 'ImpinjSerialNum01'.
- Product Name: Input field with 'HARVEMAC'.
- Manufacturer: Input field with 'Impinj RFID'.
- FCB Assembly Code (16 bytes of data in hex format): Input field with '00000000 - 00000000 - 00000000 - 00000000'.
- Year, Week, Month, Day, Minute, Second: Spinners, all set to 0.
- Site Code 1, Site Code 2, Capability Code: Spinners, all set to 0x0.
- DEM Code, DEM Version, DEM Content ID: Spinners, all set to 0x0.
- USB Vendor ID, USB Product ID, Checksum: Spinners, set to 0x1e15, 0x200, and 0x0 respectively.

At the bottom are 'OK' and 'Cancel' buttons.

OEM Data Page

RF Channel Definitions Page

The RF (Radio Frequency) Channel Definitions page provides a simplified method to view and configure the reader's frequency channels. An example of this page is shown below in the figure below.

The screenshot shows the 'RF Channel Definitions' page of the 'Tracer Reader Configuration' window. The left sidebar has a tree view with 'RF Channels' selected. The main area contains a table with the following data:

	Slot	Enabled	Frequency (MHz)	Multiplier Ratio	Divide Ratio
Edit	0	ENABLED	915.75	3663	24
Edit	1	ENABLED	915.25	3661	24
Edit	2	ENABLED	903.25	3613	24
Edit	3	ENABLED	926.75	3707	24
Edit	4	ENABLED	926.25	3705	24
Edit	5	ENABLED	904.25	3617	24
Edit	6	ENABLED	927.25	3709	24
Edit	7	ENABLED	920.25	3681	24
Edit	8	ENABLED	919.25	3677	24


Below the table are 'Import from Excel' and 'Export to Excel' buttons. At the bottom are 'OK' and 'Cancel' buttons.

RF Channels Page

RF channels are identified and ordered by their slot number and displayed in a grid format along with their current configuration values.

This dialog also allows you to import data from and export data to Microsoft Excel (using the Excel XML format).

To edit a slot, click the Edit button next to the slot number. This displays the RF Channels dialog box (shown in the figure below) from which the user can configure the channel.

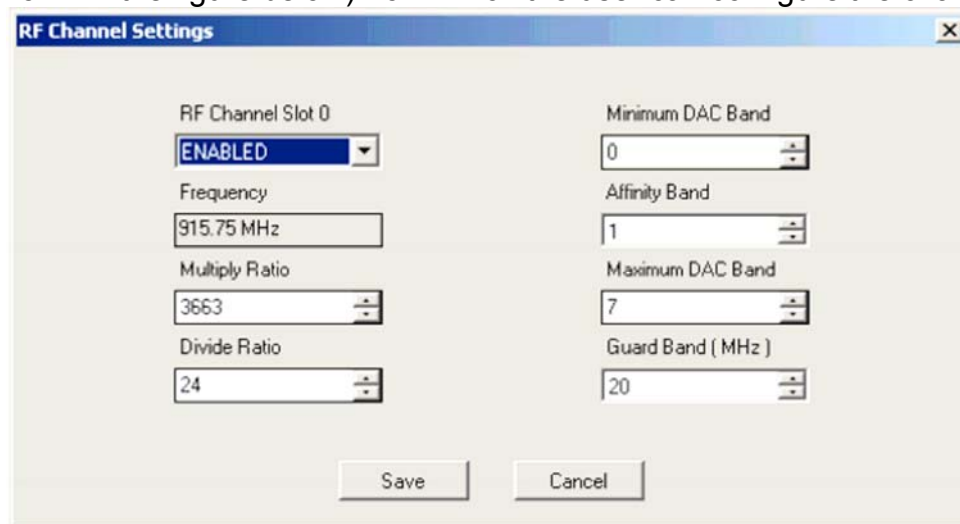

The image shows a screenshot of the 'RF Channel Settings' dialog box. It has a title bar with the text 'RF Channel Settings' and a close button. The dialog is divided into two columns of settings. The left column contains: 'RF Channel Slot 0' with a dropdown menu showing 'ENABLED'; 'Frequency' with a text box showing '915.75 MHz'; 'Multiply Ratio' with a spin box showing '3663'; and 'Divide Ratio' with a spin box showing '24'. The right column contains: 'Minimum DAC Band' with a spin box showing '0'; 'Affinity Band' with a spin box showing '1'; 'Maximum DAC Band' with a spin box showing '7'; and 'Guard Band (MHz)' with a spin box showing '20'. At the bottom of the dialog are two buttons: 'Save' and 'Cancel'.

RF Channel Settings Dialog

Note that the channel frequency value is not directly editable by the user. Instead, this value is dynamically calculated based upon the supplied multiply and divide ratios.


Other value limitations for fields presented on this page are as follows: • Divide Ratio can only be set to a value of 1 or greater

- z Minimum DAC Band can only be set to value ranging from 0 to the current value of Maximum DAC Band inclusive
- z Affinity Band can only be set to values from the current Minimum DAC Band to Maximum DAC Band inclusive
- z Maximum DAC Band can only be set to values ranging from the current value of Minimum DAC Band to 7 inclusive

Note: When settings for a channel are saved, the specified Affinity Band is evaluated by the reader firmware. If the firmware determines the Affinity Band is non-optimal, a new value between the Minimum DAC and Maximum DAC Bands (inclusive) is generated and subsequently displayed on the RF Channels page.

About Reader Page


The About Reader page is a static page that provides versioning information for the Indy components of the reader. It provides a single place to find the version information for the Indy device, Indy Firmware, Indy USB host driver, and Indy Host Library API Interface. The figure below shows a sample About Page.

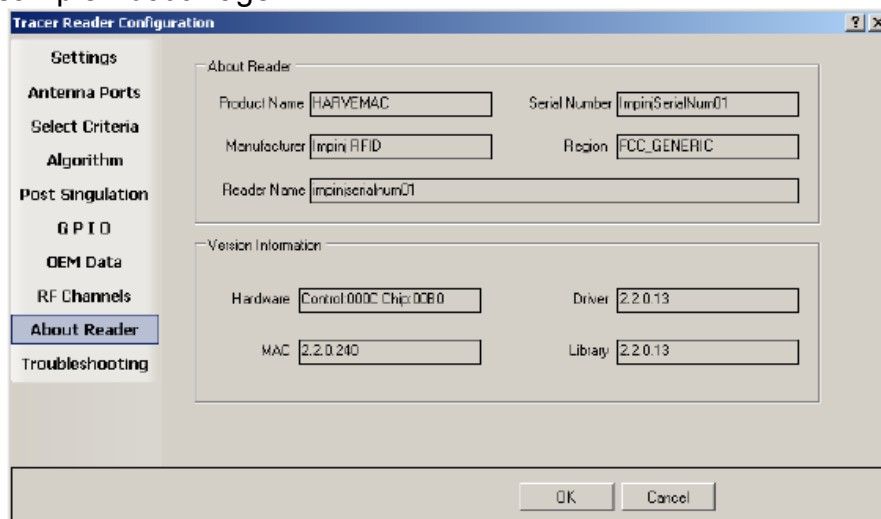

About Reader Page

Troubleshooting Panel

The Troubleshooting page provides access to the Indy Firmware error register as well as the ability to clear the error and reset the Indy Firmware. See the figure below.

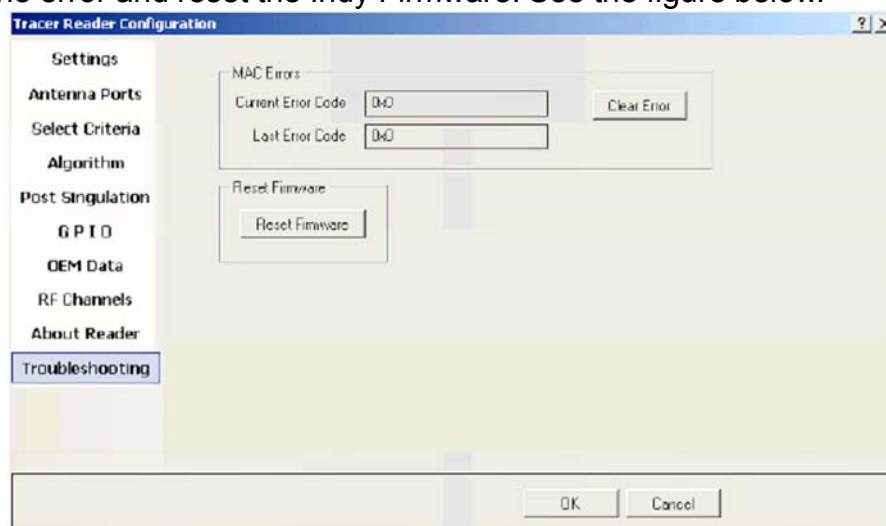

Troubleshooting Page

Note: Performing a Reset Firmware operation causes a reset of the connection to the current reader. The reader will no longer be accessible via the application until the application is restarted.

Register Access Panel

It is recommended that you have a very strong understanding of the behavior of the underlying Indy Firmware prior to modifying register values directly via this method.

For more information, see the [Indy_Firmware_Datasheet](#). For the purpose of controlling and configuring the reader, the Tracer application allows the user to read and write the various Indy Firmware registers.

Register Type Mac

Selecting the Mac Register Access option displays the dialog shown in the figure below. From this dialog, the user can perform read and write access to MAC Registers.

MAC Registers Page

To read an individual MAC register value:

- z Enter the hexadecimal start address and the total number registers to read.
- z Click the Read button. If a register cannot be read, for example because of an invalid address entry or the register is write-only, a read fail result will be displayed in the status window.

To write an individual MAC register value:

- z Enter the hexadecimal start address and the hexadecimal value to write.
- z Click the Write button. If a register cannot be written, for example because of an invalid address entry or the register is read-only, a write fail result will be displayed in the status window.

The Batch button allows for batch processing of multiple registers. Select the ? button for Register Access Batch Help and file format.

The Dump MAC button reads all MAC registers and dumps the data in the status window.

The Clear Status button clears the status window.

The Save Status button allows the content of the status window to be saved to a file.

Check Keep History to retain all access history in the status window. Uncheck Keep History to retain only the last access record in the status window.

Register Type MacBank


Selecting the MacBank Register Access option displays the dialog shown in the figure below.

This dialog reduces the user input required to perform read and write access to MAC Banked Registers.


The image shows a software dialog box titled "Register Access". At the top, there is a dropdown menu for "Register Type" set to "MacBank". To the right of this menu is a "Close" button. Below the dropdown, there are two main sections: "Read" and "Write". The "Read" section includes a "Read" button, an "Address (h)" input field with the value "0", and a "Count (d)" spinner box set to "1". The "Write" section includes a "Write" button, an "Address (h)" input field with "0", a "Data (h)" input field with "0", and a "Bank (h)" input field with "0". Below these sections, there is a "Batch" button with a question mark icon and a checkbox labeled "Batch Stop On Error" which is currently unchecked. At the bottom left of the dialog are "Clear Status" and "Save Status" buttons. At the bottom right is a checkbox labeled "Keep History" which is checked. The main body of the dialog is a large, empty rectangular area intended for displaying status or history.

MAC Banked Registers Page

The configurable parameters for MAC Banked Register read operations are identical to those in section 3.7.11.1. The figure below shows the status window for a valid banked register read, detailing the currently selected bank, the applicable selector address, and the content of all banks.

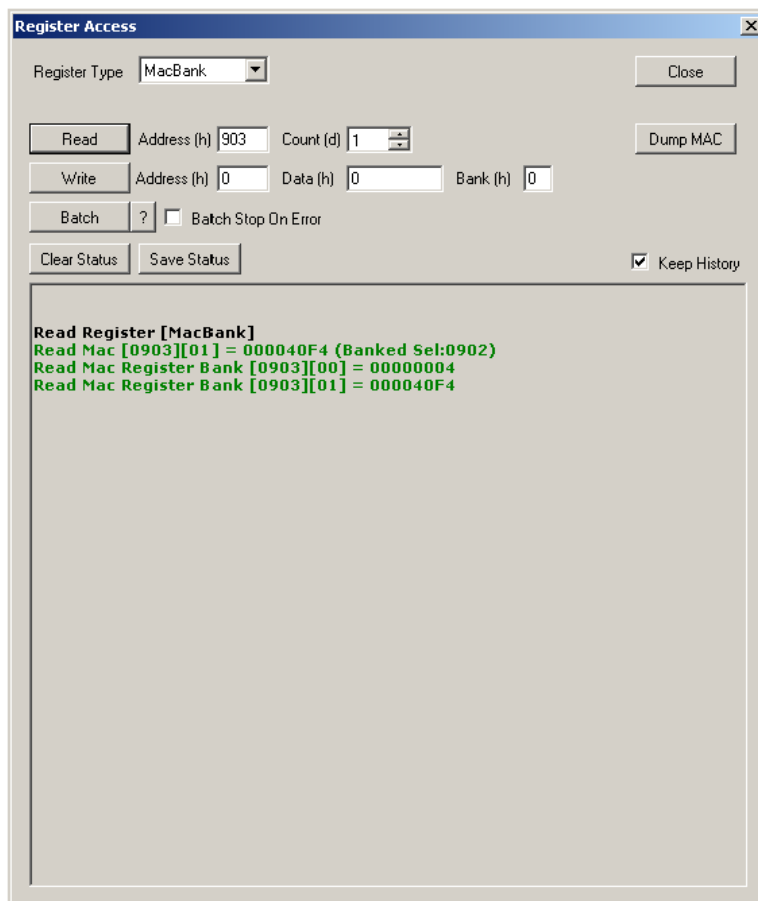

MAC Banked Register Read Status Example

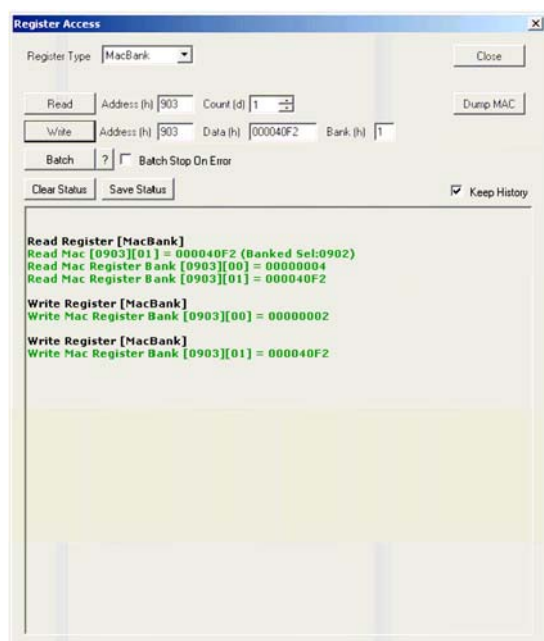

MAC Banked Register Read and Write Status Example

The configurable parameters for MAC Banked Register write operations are identical to those in section 3.7.11.1, except that an additional bank parameter is provided. This alleviates the need to utilize the Mac Register Access dialog to select the desired bank via the bank selector register before performing banked register operations. The figure below shows the status window for a valid banked register read, detailing the currently selected bank, the applicable selector address, and the content of all banks. This is followed by a write to each bank by simply changing the bank index.

Register Type Bypass

Selecting the MacBypass Register Access option displays the dialog shown in the figure below. From this dialog, the user can perform read and write access to Indy R1000 and R2000 Registers.

The screenshot shows the 'Register Access' dialog box. The 'Register Type' dropdown is set to 'Bypass'. The 'Read' section has 'Address (h)' set to 0 and 'Count (d)' set to 1. The 'Write' section has 'Address (h)' set to 0 and 'Data (h)' set to 0. There are buttons for 'Read', 'Write', 'Batch', 'Clear Status', 'Save Status', 'Close', 'Dump MAC', and a checkbox for 'Batch Stop On Error'. A 'Keep History' checkbox is checked at the bottom right. The main area of the dialog is empty.

MAC Bypass Registers Page

The configurable parameters for Bypass Register read and operations are identical to those in section 3.7.11.1.

Register Type OEM

The screenshot shows the 'Register Access' dialog box. The 'Register Type' dropdown is set to 'OEM'. The 'Read' section has 'Address (h)' set to 0 and 'Count (d)' set to 1. The 'Write' section has 'Address (h)' set to 0 and 'Data (h)' set to 0. There are buttons for 'Read', 'Write', 'Batch', 'Clear Status', 'Save Status', 'Close', 'Dump MAC', and a checkbox for 'Batch Stop On Error'. A 'Keep History' checkbox is checked at the bottom right. The main area of the dialog is empty.

OEM Registers Page

Selecting the OEM Register Access option displays the dialog shown in the figure below. From this dialog, the user can perform read and write access to the OEM Registers.

The configurable parameters for OEM Register read and operations are identical to those in section 3.7.11.1.

Register Type LinkProfile

Selecting the LinkProfile Register Access option displays the dialog shown in the figure below. From this dialog, the user can perform read and write access to the registers of individual link profiles.

LinkProfile Registers Page

The configurable parameters for OEM Register read and write operations are identical to those in section 3.7.11.1, except that a Profile Id parameter is provided in order to perform the read and write operations on a specific link profile.

Known Issues

- z The application does detect new readers that become active after the application has started. You should power on and connect your readers prior to starting the Tracer application.
- z The names of detected readers are displayed as ASCII only in the Device menu.
- z Truncation is not supported in the Firmware Release v2.4.2, so selecting it in the Select criteria will render an error.