

Syn248[®]

User's Guide

AT&T SB35031 Deskset



CONTENTS

Preface	6
Additional Documentation	6
Topic Navigation	7
Text Conventions	7
Overview	8
Syn248 System Overview	9
Deskset Overview	9
Deskset Description	10
Deskset Hard Keys	11
Deskset Idle Screen	12
Setting Your Password	13
Deskset Soft Keys	14
Deskset Status Indicators	15
Call Indicators	16
Call Status Icons	17
Call Status LEDs	17
Deskset Dial-Pad Entry	18
Using the Speakerphone	19
Using Help Screens	19
Outgoing Calls	20
Active Call Screen	21
Predialing	22
Live Dialing	23
Making a Call from a List	24
Making an Intercom Call	25
Making Calls with the Optional DECT Cordless Headset	26
Incoming Calls	27
Incoming Call Screen	28
Incoming Call Indication	29
Answering a Call	30
Ignoring a Call	31
Intercom Auto Answering	32



Call Forward–No Answer.....	33
About the Auto Attendant.....	33
Caller Options.....	33
Call Management	34
Call Management.....	35
Putting a Call on Hold	36
Transferring a Call.....	37
Making a Conference Call.....	39
Putting a Conference on Hold.....	40
Ending a Conference	40
Call Management Using a Headset.....	42
Accessing Items in Lists	43
About the Extension List.....	44
Accessing the Extension List	45
Accessing the Quick-Dial List.....	46
Editing Quick Dial Entries.....	47
About the Redial List.....	48
Accessing the Redial List	49
Deleting Redial Entries.....	50
Searching the Directory or Extension Lists	51
Accessing the Held Calls List.....	52
Directory	53
Using the Directory.....	54
Viewing Directory Entries	55
Creating a New Personal List Entry	57
Editing a Personal List Entry.....	58
Storing Directory Entries from the Call Log or Redial List.....	59
Deleting a Personal List Entry	60
Sorting Directory Entries.....	61
Voicemail	62
Voicemail Overview.....	63
Selecting Your Voicemail Greeting.....	65
Recording a Greeting	66
Accessing Your Messages	67
Deleting Messages.....	70
New Message Status Indications (! Icons).....	71
Accessing Your Voicemail Remotely.....	72
Call Log	75
Using the Call Log	76
Reviewing the Call Log List.....	78
Listening to Voicemail From the Call Log.....	79
Storing Call Log Entries.....	80
Deleting Call Log Entries.....	81



Paging.....	82
Sending a Page.....	83
Deskset Settings	84
Deskset Menu.....	85
Deskset Settings	86
Display	87
Sounds	87
Preferred Audio.....	89
User Settings.....	90
Intercom Auto Answer.....	92
Voicemail Memory.....	93
Name Recording	94
Registering an Optional Cordless Headset	96
Deregistering a Cordless Headset	97
Cordless Accessory Registration and Deregistration Time-Out.....	98
Setting and Changing Your Password.....	99
Admin Settings.....	100
Deskset Information.....	101
Auto-Attendant Settings.....	102
Using Do Not Disturb (DND)	104
Web Interface	105
Accessing the Web User Interface (WebUI).....	106
Error Handling.....	107
Basic Settings.....	108
Personal Directory	109
Quick-Dial Keys	111
Help	112
Troubleshooting	113
Common Troubleshooting Procedures.....	114
Display Messages.....	116
Calls Generally.....	118
Incoming Calls.....	121
Outgoing Calls	123
Voicemail	124
Other Deskset Features.....	126
WebUI.....	127
PC/Deskset Interaction	128
Cordless Headset.....	129
Appendixes	133
Appendix A: Deskset Soft Keys.....	133
Appendix B: Technical Specifications	135
Appendix C: Maintenance.....	136
Appendix D: Important Safety Instructions.....	137
Appendix E: GPL License Information	138



Glossary **139**

Draft



PREFACE

This User's Guide provides instructions for using your Syn248 SB35031 telephone with firmware version 1.3.0 or newer, and its optional accessories. See [page 101](#) for instructions on checking the firmware version on the Deskset. Although the Quick Start Guides also include information on using the devices, this guide has information on setting up the devices and more complete information on feature usage.

Before using this AT&T product, please read "[Appendix D: Important Safety Instructions](#)" on [page 137](#). Please thoroughly read this user's guide for all the feature operations and troubleshooting information necessary to operate your new AT&T product.



NOTE

For customer service or product information, contact the person who installed your system. If your installer is unavailable, visit our web site at www.telephones.att.com/smb or call **1 (888) 386-2006**. In Canada, dial **1 (888) 469-2005**.

Additional Documentation



Downloadable copies of all Syn248 documents, including user's and administrator's guides, installation instructions and Quick Start Guides, are available at www.telephones.att.com/manuals.






Topic Navigation

This Syn248 SB35031 Deskset User's Guide features easy navigation between topics and the ability to return to your original topic.

Text in blue indicates a link to another page in the document. **Bold text in blue** indicates a hyperlink to an external web site.



You can also click the arrows at the bottom of the page to move around this document.

	Go back to the last page viewed.
	Go to the previous page.
	Go to the next page.

Text Conventions

Table 1 lists text formats and describes how they are used in this guide.

Table 1. Description of Text Conventions

Text Format	Description
Screen	Identifies text that appears on a device screen or a WebUI page in a title, menu, or prompt.
HARD KEY or DIAL-PAD KEY	Identifies a hard key, including the dial-pad keys.
CallFwd	Identifies a soft key.
 NOTE	Notes provide important information about a feature or procedure. Example of a Note.
 CAUTION	A caution means that loss of data or unintended circumstances may result. Example of a Caution.



CHAPTER
1

OVERVIEW

The Syn248® Business Phone System from AT&T is for businesses that need up to 100 extensions. This system is scalable from 1 to 39 outside lines, so as your business grows, your phone system can too. The Syn248 Business Phone System provides simplicity without sacrifice—it's simple to install, manage, and use, without sacrificing any of the features you need and expect from a business telephone system.

This chapter introduces the SB35031 Deskset and provides an overview of the Syn248 System and the external features of the Deskset.

- ["Syn248 System Overview" on page 9](#)
- ["Deskset Description" on page 10](#)
- ["Setting Your Password" on page 13](#)
- ["Using the Speakerphone" on page 19](#)
- ["Using Help Screens" on page 19.](#)



Syn248 System Overview

Your Deskset is part of the Syn248 System. Syn248 differs from conventional telephone systems in that calls are not coordinated by a central controller. Instead, Syn248 uses a distributed control system over a Local Area Network (LAN). Figure 1 illustrates a sample system.



Figure 1. Sample Syn248 System

Deskset Overview

The SB35031 Deskset has a large screen and a built-in DECT 6.0 radio to host an optional cordless headset.

This User's Guide describes how to register and use a compatible AT&T DECT cordless headset with the SB35031 Deskset. See ["Registering an Optional Cordless Headset"](#) on page 96.

Deskset Description

The key external features of the Deskset are shown in Figure 2 and described in Table 2.

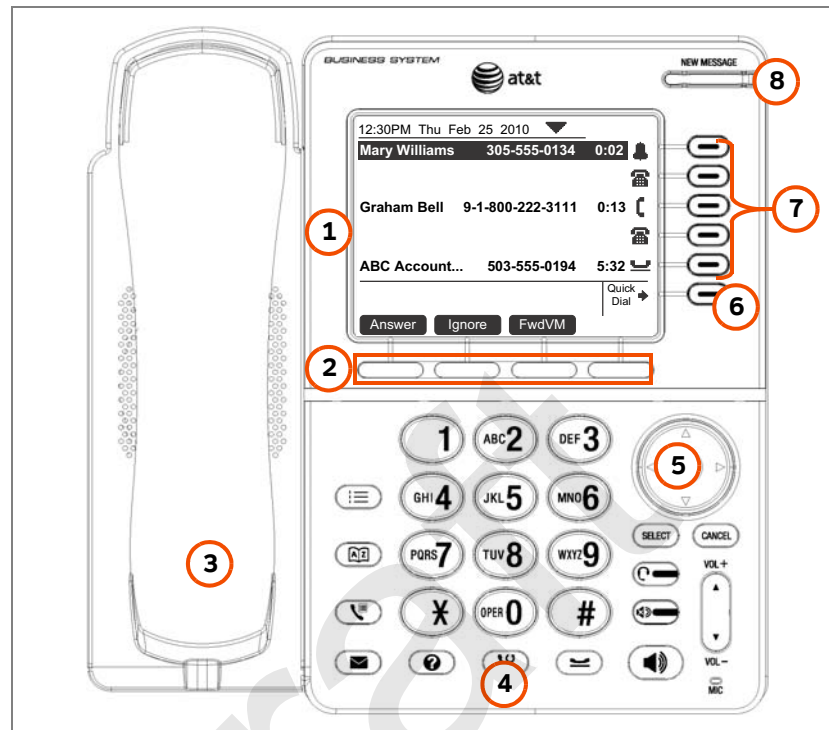


Figure 2. Deskset External Features

Table 2 Deskset External Features

1. Liquid Crystal Display (LCD)	Provides controls and information for using the Deskset.
2. Soft Keys	Four keys that produce different actions, depending on the LCD labels.
3. Corded Handset	Traditional 2-conductor wiring (FXO—Foreign Exchange Office Ports).
4. Hard Keys	Fixed-function keys. See “Deskset Hard Keys” on page 11.
5. Navigation Key	Moves the cursor up/down/left/right on the display.
6. Quick Dial Key	Provides easy access to frequently dialed numbers.
7. Line Keys	Five keys that access active calls and held calls.
8. New Message Indicator	Illuminates when you have new messages.



Deskset Hard Keys

The hard keys include the standard telephone dial-pad keys and the function keys shown in Figure 3 and defined in Table 3.

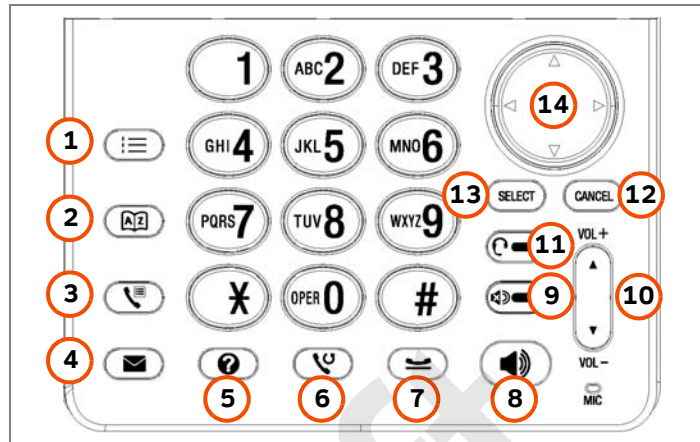


Figure 3. Deskset Function Keys

Table 3 Deskset Function Keys

1. MENU	Accesses the Deskset menu.
2. DIRECTORY	Accesses the Directory.
3. CALL LOG	Accesses the incoming call log.
4. MESSAGES	Accesses your voice messages.
5. HELP	Displays the Help menu.
6. REDIAL	Accesses the Redial list.
7. HOLD	Puts current active call on hold. Allows access to other calls and features while maintaining call connection.
8. SPEAKER	During a call, switches voice to and from the speakerphone. Can be used to answer or start a call, or to hang up.
9. MUTE	Mutes the microphone. When on, the other party cannot hear you. Does not mute the optional cordless headset.
10. VOL+/VOL-	Increases or decreases the ringer and voice volume.
11. HEADSET	Routes audio to a headset, if a headset is connected or registered. Can be used to go off hook.
12. CANCEL	Cancels the most recent operation and returns to previous function.
13. SELECT	Usually selects a highlighted option. Dials highlighted phone numbers.
14. Navigation	Moves the cursor up (Δ), down (∇), left (\triangleleft), right (\triangleright) on the display.



Deskset Idle Screen

Figure 4 identifies the basic elements of the Idle screen. Table 4 describes the call functions displayed on the Idle Screen. The Idle screen appears when the system is first turned on and when there is no call activity. The display is backlit when you are using it, but the backlight turns off 30 seconds after the most recent button press.

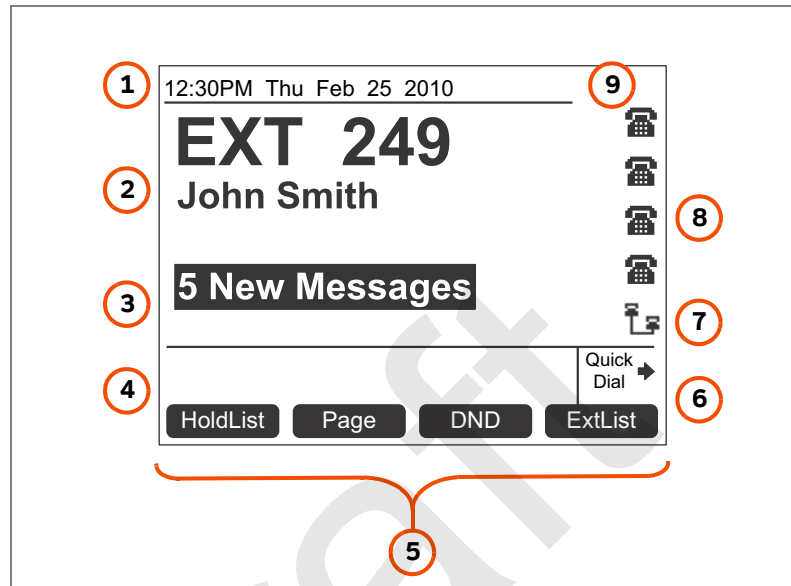


Figure 4. Idle Screen

Table 4 Idle Screen

1. Time and Date	
2. Extension Number and Name	Your extension number and name appear on the Idle screen.
3. New Messages	Press SELECT to view the list of new voice messages.
4. Help	Help messages appear in this area, depending on Deskset activity.
5. Soft Key Labels	See "Deskset Soft Keys" on page 14.
6. Quick Dial	When the nearby key is pressed, the line icons or line names change to display up to six quick-dial numbers.
7. Intercom Icon	Indicates the Intercom line for internal calls.
8. Call Status Icons	Show whether there is an active, conference, or held call, or whether there is a line available for making a call. Your system administrator can enter line names that replace these Idle screen icons.
9. Status Indicators	Status indicators appear in this space. See "Deskset Status Indicators" on page 15.

Each phone line connected to your system corresponds to a Line key on the Deskset as shown in [Figure 2 on page 10](#). The Syn248 system can have up to 8 lines connected. The system administrator can configure your Deskset with up to four lines on which you can make and receive external calls. One key is reserved for "Intercom" calls to other Syn248 Deskset extensions.

Other Desksets in the system share these lines and display the line status. In general, incoming calls on a line ring at all Desksets that share that line. However, your system administrator can set your Deskset to ignore calls on a selected line. Your Deskset will not ring for calls on the ignored line, but you can still view call activity for that line. The Line key LED indicates whether a line is ringing, busy, or on hold.

The Line keys are used for receiving and making calls to external numbers. To call another extension in your office, you must use an Intercom key. By default, the Intercom key is the fifth key, but your system administrator can configure additional Intercom keys.

Setting Your Password

You can protect your Deskset by setting a password that prevents other users from accessing your User Settings and messages. If you create a password, you will need to enter it before accessing User Settings, messages, and the WebUI.

For more information, see ["Setting and Changing Your Password" on page 99](#).



Deskset Soft Keys

The Deskset provides soft keys as illustrated in Figure 5. The soft key labels change according to the current task. For example, if you are holding a call, the key labels displayed are different from those displayed if you are making a call. See [“Appendix A: Deskset Soft Keys” on page 133](#) for an alphabetical list of the labels that appear above the soft keys.

Table 5 describes the Deskset Idle screen soft keys, as shown in Figure 5.

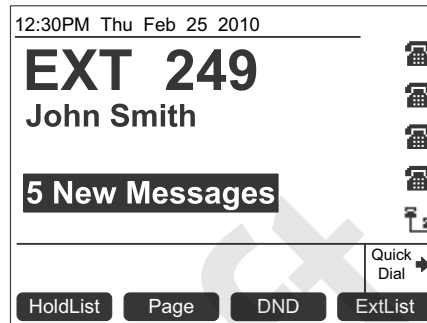


Figure 5. Deskset Idle Screen

Table 5 Idle Screen Soft Keys

Key	Description	Key	Description
HoldList	Accesses Held Calls list.	Page	Pages internal extensions.
DND	Turns Do Not Disturb on or off.	ExtList	Accesses Extension list.



Deskset Status Indicators

Status indicators appear in the upper right-hand corner of the Deskset display, as shown in Figure 6.

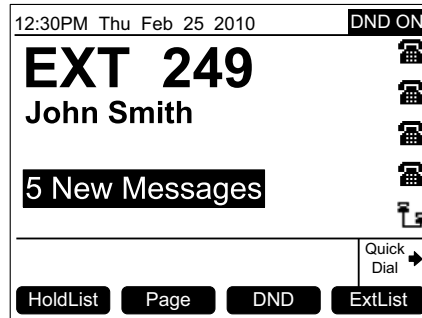



Figure 6. Example of DND On

Status messages include:

- DND ON** Do Not Disturb is on.
- INT ON** Intercom Call Forward All is on.
- ANS ON** Intercom Auto Answer is on. See [“Intercom Auto Answering” on page 32.](#)
- VM Full** Voicemail memory is full.
- < 5 Min** Less than five minutes of voicemail recording time is available.
-  Ringer volume set to zero. The ringer is silent.



NOTE

The silent ringer and the voicemail indicators alternate with each other and the other status indications. When Do Not Disturb is on, there is no indication for Auto Answer.



Call Indicators

The Line keys, as shown in Figure 7, allow you to manage your calls. The Deskset presents call status information next to the Line keys at the side of the display. When there is an incoming call, the Line key LED flashes. Icons on the screen identify the status of each call. When there are several lines active, press Line keys to access calls. The soft keys change accordingly. See [“Call Status Icons” on page 17](#) for a complete description of the available icons.

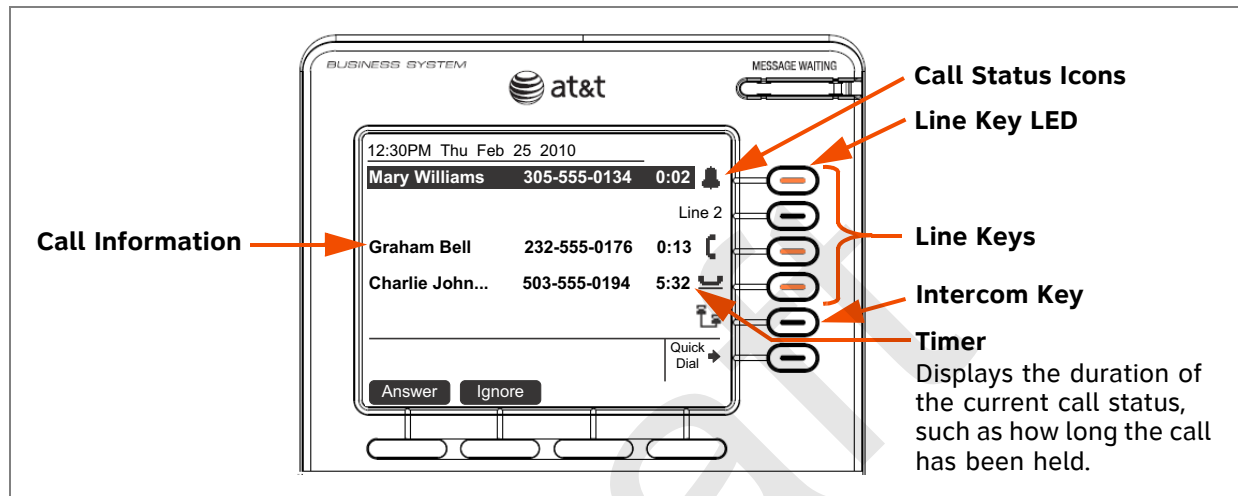











Figure 7. Sample Active Call Screen

Call Status Icons

Table 6 shows and describes the call status icons.

Table 6 Deskset Call Status Icons

Icon	Status	Icon	Status
	Available Indicates an available line (if the system administrator has not named your lines).		Incoming Call Indicates an incoming call when there are no other calls.
	Intercom Indicates an available Intercom line for internal calls.		Ring Indicates an incoming call.
	Off Hook Indicates that you have lifted the corded handset, pressed SPEAKER or HEADSET , or you are on a phone call.		Silenced Ring Indicates an ignored incoming call.
	On Hold Indicates you have put the call on hold.		Conference On Hold Indicates you have put a conference call on hold.
	Conference Indicates a conference call.		

Call Status LEDs

The Call Status LED flash patterns indicate call status as described in Table 7. All Desksets that share lines also display the same LED activity. For example, if someone puts a call on line 3 on hold, the Line key for line 3 flashes slowly on all the Desksets that share line 3.

Table 7 Deskset Call Status LED Activity

LED Activity	Description
Off	No Call
Steady On	Active Call
Fast Flash	Ring Call
Slow Flash	Held Call

Deskset Dial-Pad Entry

Use the dial-pad keys to enter letters and numbers into a text field. Keys **2**, **3**, **4**, **5**, **6**, and **8** have three assigned letters, while keys **7** and **9** have four assigned letters, as shown in Figure 8.

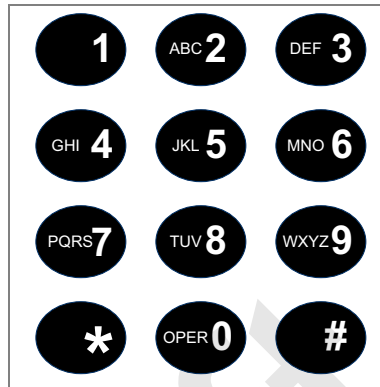


Figure 8. Dial Pad

Pressing **1** once enters a **space**; pressing it twice enters a **1**.

Pressing a key numbered **2** to **9** enters characters in the following order:

1. Upper-case letters.
2. Key number.
3. Lower-case letters.

For example, pressing **2** cycles through A, B, C, 2, a, b, c. Pressing **7** cycles through P, Q, R, S, 7, p, q, r, s.

For text fields that accept only numbers, pressing a key once enters a number.



You can enter special characters by pressing the **#** and ***** keys.


- Press **#** to cycle through the special characters **# & ' , - . @** (in that order).
- Press ***** to cycle through the special characters **! () * + ?** (in that order).

Using the Speakerphone

When the speakerphone is active, the  (**SPEAKER**) key is lit.

To use the speakerphone:

1. To make a call, press . The key lights up and you hear a dial tone. Begin dialing.
2. To end a call, press . The key light goes out.


During an active call, if you are using the corded handset or any corded or cordless headset, pressing  switches audio to the speakerphone.




Using Help Screens

In addition to the brief Help messages at the bottom of each screen, you can view more Help on the Deskset screen. These are very brief descriptions of how to use some of the features.

To use the Deskset Help:

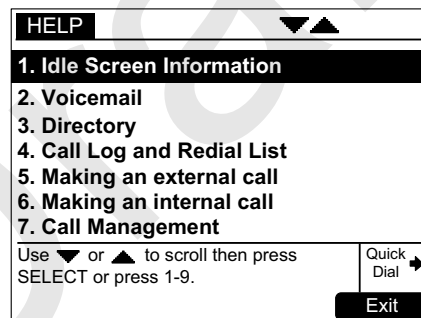1. On the Deskset, press  (**HELP**). The Help menu appears.



2. Press  or  to highlight the desired feature.
3. Press **SELECT**.
4. Press  to exit the Help.



CHAPTER
2

OUTGOING CALLS

The Deskset provides several methods for making a call. You can also use an optional cordless headset to complete a call that you dialed on the Deskset.

If you are in Idle mode or have calls on hold, you can predial a phone number and then go off hook to call the number. You can make a call at any time by choosing an off-hook method, then dialing a number. This is referred to as live dialing. You can also predial or live dial using phone numbers from lists, such as the Directory, Call Log, Redial, Quick Dial, and Messages.

You can dial the extension for the system operator by dialing **0** (zero) on an Intercom line.

- [“Active Call Screen” on page 21](#)
- [“Predialing” on page 22](#)
- [“Live Dialing” on page 23](#)
- [“Making a Call from a List” on page 24](#)
- [“Making an Intercom Call” on page 25](#)
- [“Making Calls with the Optional DECT Cordless Headset” on page 26.](#)



Active Call Screen

The active call screen, as shown in Figure 9, appears while you are on a call.

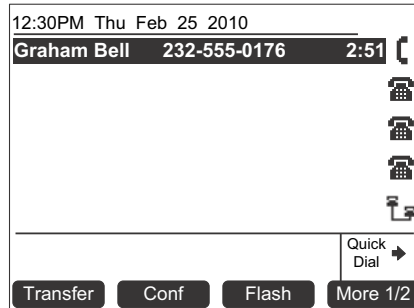


Figure 9. Active Call Screen

Table 8. Active Call Screen Description

Key	Description	Key	Description
Transfer	Begins transfer of a call.	Conf	Begins a conference call.
Flash	External calls only — Simulates a hook flash, which signals your telephone service provider to activate a feature.	More	Moves to the next set of soft keys. More 1/2 indicates that you are on page one of three.
HoldList	Displays the Held Calls list.	Page	Pages all extensions.
DND	Turns Do Not Disturb on or off.		




Predialing

Predial is only available when the Deskset is idle or when all calls are on hold. In Predial mode, there is no dial tone. You can only predial one phone number at a time. To begin Predial, press a dial-pad key.


To make a Predial call:

1. Enter an extension number or phone number (for example: **232-555-0176**) using the dial pad. The predial screen appears.

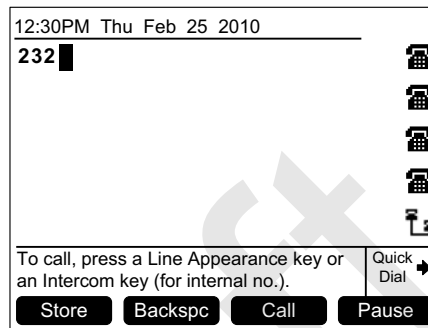

Before you call the number, you can press:

- **Store** to store the number in your Personal list.
 - **Backspc** to delete the last digit entered.
 - **Pause** to insert a two-second pause into the phone number.
 - **CANCEL** to cancel predial.
2. Lift the corded handset, or press **SPEAKER**, **HEADSET**, **Call**, or a Line key to go off hook and call the number.

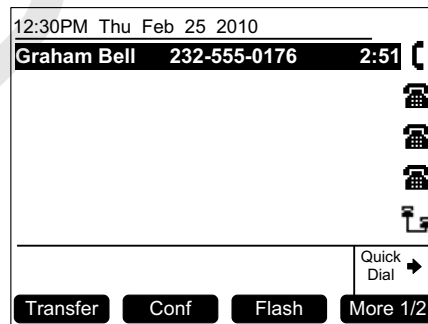


Live Dialing


You can make a call by going off hook, then dialing a phone number.

To dial a live number:

1. Do one of the following to go off hook (to hear the dial tone) from Idle mode:
 - Lift the corded handset.
 - Press **SPEAKER** or **HEADSET**.
 - Press an available Line key.
2. Enter the extension number or phone number you want to dial, as shown below.

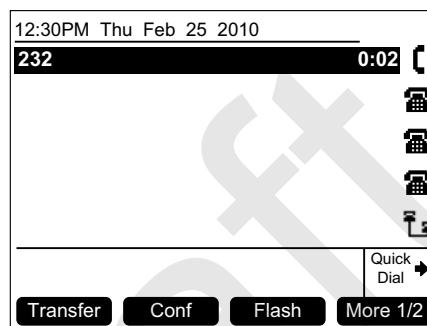


The active call screen appears.

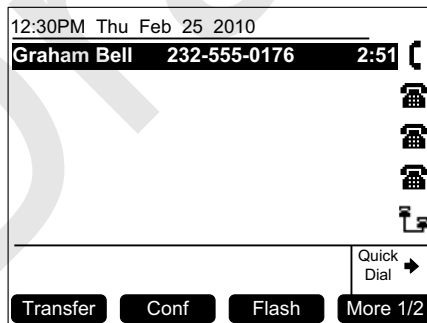


Making a Call from a List

To make a call from a list:

1. Access the desired list entry. For example, press **DIRECTORY**. The **Directory** screen appears. See ["Accessing Items in Lists" on page 43](#).

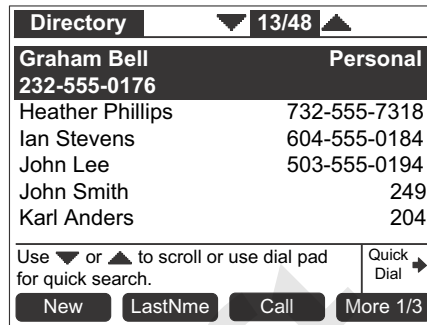

2. Press \triangle or ∇ until you highlight the desired entry.
3. Press **Call** or **SELECT** to dial the highlighted number. The Deskset dials the number and the active call screen appears.

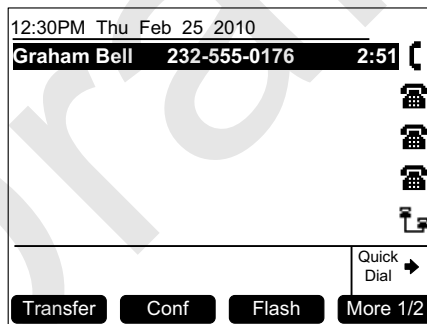

NOTE Phone numbers are dialed as they appear in the lists.




Making an Intercom Call

To make an internal (extension-to-extension) call, you must press the **INTERCOM** key as shown in [Figure 7 on page 16](#). By default, key 5 is the Intercom key, but your system administrator can configure additional Intercom keys to give you more Intercom lines.

By default, your Deskset uses an outside line any time you go off hook by lifting the handset, pressing **SPEAKER**, or by some other method. However, your system administrator can configure your Deskset to use the Intercom line any time you go off hook.


To make an intercom call:

1. With the Deskset in Idle mode, go off hook by lifting the handset, pressing **SPEAKER**, or by some other method.
2. If necessary, press the **INTERCOM** key, then dial the extension number.

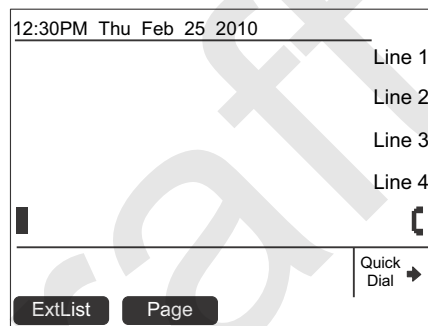

Instead of dialing after pressing the **INTERCOM** key, you can press **ExtList**, highlight the desired extension number, then press **Call** or **SELECT** to dial the number.

3. When your Intercom call is answered, the active call screen appears.

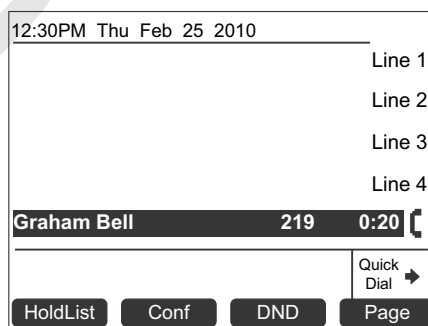

Making Calls with the Optional DECT Cordless Headset

If you have an optional AT&T DECT Cordless Headset registered to your Deskset, then you can make calls with the headset. Use the Deskset dial pad to dial the number.

To make a call with the Cordless Headset:

1. Remove the headset from its charger and press the headset **ON/OFF** button. The headset is active when you hear a dial tone.
2. Dial the extension or phone number on the Deskset.
3. Press the headset **ON/OFF** button to end the call.

OR

1. Predial the extension or phone number on the Deskset.
2. Press the headset **ON/OFF** button to initiate dialing and transfer the audio to the headset.
3. Press the headset **ON/OFF** button to end the call.

Draft



CHAPTER
3

INCOMING CALLS

When a call comes in, the Deskset rings and the incoming call information appears as shown in [Figure 10 on page 28](#). The screen displays the caller's name and number (if available). If there is more than one incoming call, they are displayed on the screen. You can answer or ignore each call.

You can also answer calls with the optional DECT Cordless Headset. When you hear the ring, remove the headset from its charger (if necessary) and press **ON/OFF** on the headset.

The following sections describe handling incoming calls:

- ["Incoming Call Screen" on page 28](#)
- ["Incoming Call Indication" on page 29](#)
- ["Answering a Call" on page 30](#)
- ["Ignoring a Call" on page 31](#)
- ["Intercom Auto Answering" on page 32](#)
- ["About the Auto Attendant" on page 33.](#)



Incoming Call Screen

The incoming call and active call screens are shown in Figure 10.

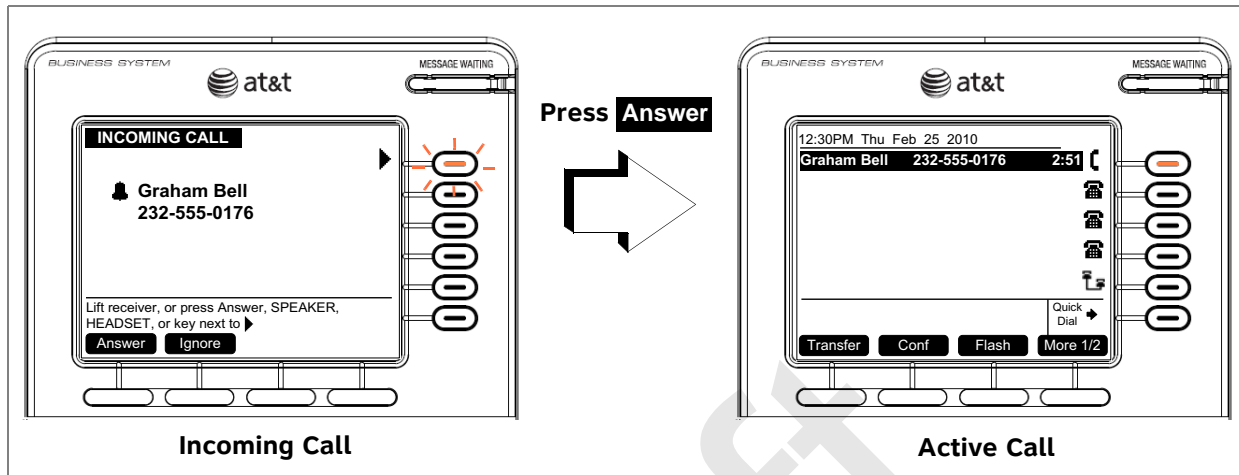


Figure 10. Incoming Call and Active Call

Table 9. Incoming Call Screen Soft Keys

Key	Description
Answer	Answers incoming call.
Ignore	Silences ringer during incoming call.



Incoming Call Indication

When there is an incoming call, the Deskset rings. See *"Sounds"* on page 87.



Do Not Disturb automatically silences the ringer. See *"Using Do Not Disturb (DND)"* on page 104.

If someone at another Deskset answers an outside call, your Deskset returns to Idle mode.

If your company has caller ID, the incoming call screen displays caller information. If the caller ID information is absent because it is unavailable, **UNKNOWN NAME** and **UNKNOWN NUMBER** display. If the caller chooses not to send the information, **PRIVATE NAME** and **PRIVATE NUMBER** display.

Draft




Answering a Call

To answer a call:

- Lift the corded handset.
- Press **Answer** to answer using the Preferred Audio Mode. See [“Preferred Audio” on page 89](#).
- Press **SPEAKER** to use the speakerphone.
- Press **HEADSET** to use a cordless or corded headset. See [“Call Management Using a Headset” on page 42](#).
- For multiple incoming calls, press **Answer** or press the corresponding Line key to answer each call. You can also press **Ignore** to return the highlight to your active call.

The active call screen appears.

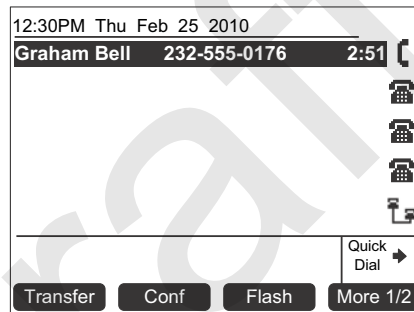

If someone at another Deskset answers the call, your Deskset returns to Idle mode.

If you are listening to voicemail when a call comes in, press **Ignore** to redirect the call and allow message playback to continue.

If Intercom Auto Answer is enabled, an Intercom call is automatically answered after the set time delay. See [“Intercom Auto Answering” on page 32](#).



Ignoring a Call

You can ignore an incoming call by pressing **Ignore** to silence the ringer. The silenced ringer icon appears, as shown in Figure 11. If you are on an active or held call, after the ignored call has been forwarded, the highlight moves back to whatever call you were on before the incoming call.

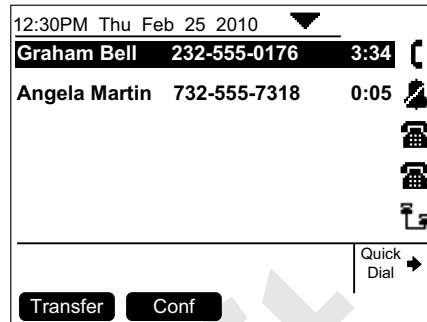


Figure 11. Ignored Call

- Once a call is ignored:
 - The **Ignore** key is no longer available on the incoming call screen.
 - The Line key LED continues to flash.
 - You can press the flashing Line key to answer the incoming call.
 - Going off hook does not answer the call, but starts a new call on the next available Line.



NOTE

Your system administrator can set your Deskset to ignore all incoming calls on selected lines. If your Deskset has one or more lines configured this way, your Deskset automatically ignores incoming calls on those lines. Your Deskset does not ring, and you can answer the call by pressing the **Answer** key or the flashing Line key.




Intercom Auto Answering

You can set your Deskset to answer Intercom calls automatically, without your having to touch the phone to answer. See [“Intercom Auto Answer” on page 92](#). When you enable Auto Answer, **ANS ON** appears at the top of the Deskset screen. **ANS ON** does not appear if **DND ON** is active, because Auto Answer is disabled when Do Not Disturb is on.




Intercom Auto Answering applies only to direct Deskset-to-Deskset calls. Auto Answering does not apply to forwarded calls that use your Intercom line(s).

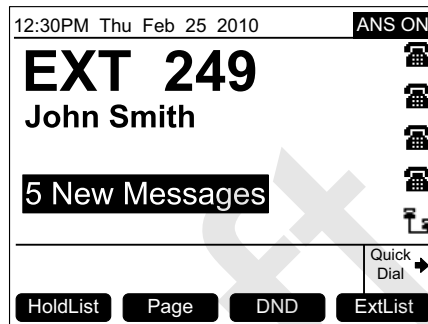

To respond to an Auto Answered call:

In Idle mode, all incoming calls ring for the amount of time specified in the Auto Answer Delay. See [“Intercom Auto Answer” on page 92](#). After the last ring, a two-second notification screen appears, and you hear a warning tone. Talk after the tone.

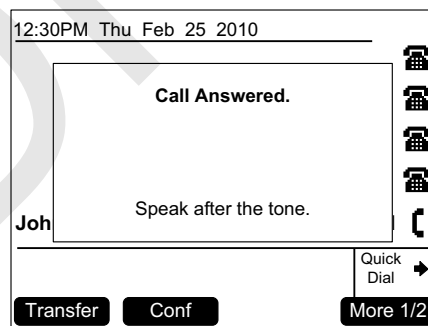

If the Auto Answer Delay is set to zero, you hear no ring. Instead, the **Call Answered** screen appears and you hear the warning tone.

If you do not want the Deskset to automatically answer the call, you can press **IGNORE** to send the call to the Intercom Call Forward–No Answer target (see [“Call Forward–No Answer” on page 33](#)).

If there are multiple incoming Intercom calls, Auto Answer applies to the first call.



Call Forward–No Answer

Call Forward–No Answer is a setting that redirects incoming calls. The Syn248 system has two types of Call Forward–No Answer settings.

Phone Line Call Forward–No Answer can only be set by the system administrator. This setting determines the destination for unanswered calls on each line. After a call is forwarded, the call cannot be answered at the Deskset. Calls can be forwarded to:

- an extension
- an extension's voicemail (without ringing the Deskset)
- an external phone number
- Auto Attendant (default destination). See ["About the Auto Attendant" on page 33](#).

Intercom Call Forward–No Answer is a setting unique to each Deskset. The system administrator also sets this setting. This setting determines the delay of, and the destination for, unanswered calls coming through your Intercom line. These calls can include Intercom calls or outside calls forwarded to you by the Phone Line Call Forward–No Answer setting. The default destination is your voicemail. It can also be set for another extension, an outside phone number, or OFF.

About the Auto Attendant

The Syn248 system features an Auto Attendant that can answer calls during periods when your office is closed or when calls go otherwise unanswered. The Auto Attendant has an interactive voice menu that can guide callers to the desired extension or extension's voicemail.

If your Deskset is set as the Operator extension, you can set the Auto Attendant to one of three menus: a default menu, a Day menu and a Night menu. The default menu instructs callers to "Enter the extension number or enter 0 for the operator." You can customize both the Day and Night menus with your own greeting message and instructions to callers.

Caller Options

Until callers get through to a live person, they can press **0** at any time to redirect their call to the system operator, if the system administrator has enabled this feature.

When a caller is redirected to voicemail, the caller has the option to press **5** to skip the greeting and press **0** to reach the operator.

The Auto Attendant may be set up so that callers can access the Auto Attendant directory. This allows callers to use any touch-tone phone's dial pad to spell your name, followed by pressing the pound (#) sign, to reach your extension.



CHAPTER
4

CALL MANAGEMENT

This chapter describes the call management features of the Deskset. The Deskset enables you to put calls on hold, transfer calls, and create conference calls.

- ["Call Management" on page 35](#)
- ["Putting a Call on Hold" on page 36](#)
- ["Transferring a Call" on page 37](#)
- ["Making a Conference Call" on page 39](#)
- ["Call Management Using a Headset" on page 42.](#)



Call Management

The Deskset call management functions begin with the Active Call screen shown in Figure 12.

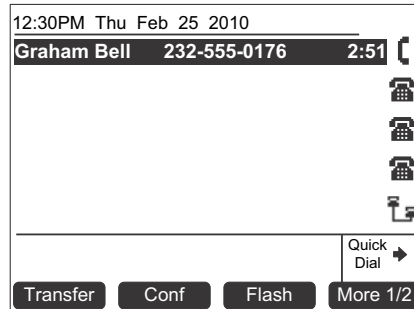


Figure 12. Active Call Screen

Table 10. Active Call Screen Description

Key	Description	Key	Description
Transfer	Begins transfer of a call.	Conf	Begins a conference call.
Flash	External calls only – Simulates a hook flash, which signals your telephone service provider to activate a feature.	More	Moves to the next set of soft keys. More 1/2 indicates that you are on page one of three.
HoldList	Access the Held Calls list.	Page	Pages all extensions.




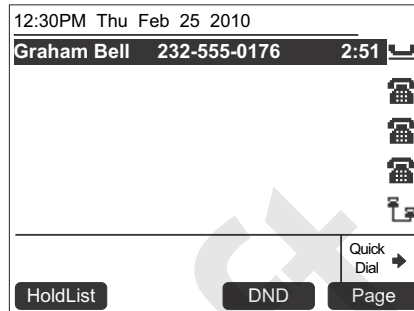
Putting a Call on Hold

All Desksets that share assigned lines can view held calls and take calls off hold.

To hold calls and manage held calls:

1. When you are on an active call, press **HOLD**.

The Held Call icon  appears and the Line key LED flashes slowly.



- On other Desksets that are assigned that line, the Line key LED flashes slowly. Someone at any other Deskset assigned that line can press the flashing Line key to take the call off hold, making it an active call on their Deskset.
 - All Desksets, including those that are not assigned that line, can view and take your call off hold from the Held Calls list. See [“Accessing the Held Calls List” on page 52](#).
 - When you put an Intercom call on hold, only you can take the call off hold.
 - When a call is on hold, you can use the Deskset Menu to access other functions.
 - After the call has been on hold for a delay period set by your system administrator (the default setting is three minutes), the Deskset rings to remind you that the call is still on hold.
2. To take the call off hold, press **SELECT** or press the Line key for that call.




Transferring a Call

You can transfer an active call to:


- an internal extension
- an external number, if this function has been enabled by your system administrator
- another extension's voicemail, Group Mailbox, or your Personal mailbox
- an Auto Attendant.

To transfer a call:

1. Press **Transfer** from the Active Call screen. The call is automatically put on hold and the Transfer Setup screen appears.

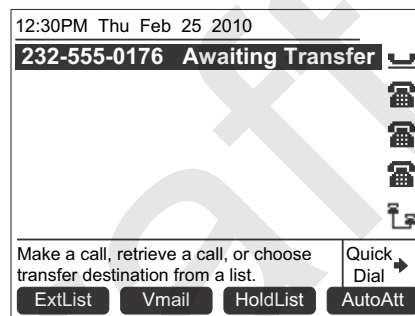

2. Select a transfer target. You can:
 - press the Intercom key and dial an extension number.
 - press an available Line key and dial an external number. Depending on your system configuration, transferring calls to an outside line may be disabled.
 - call a number from a list. For example, press **ExtList** and select an extension to call.
 - take a held call off hold or press **HoldList** to retrieve a held call
 - transfer the call directly to voicemail by pressing **Vmail**. The **Transfer to Voicemail** screen appears, on which you can press **VMList** to select an extension's mailbox, or press **Personal** to transfer the call to your Personal mailbox.

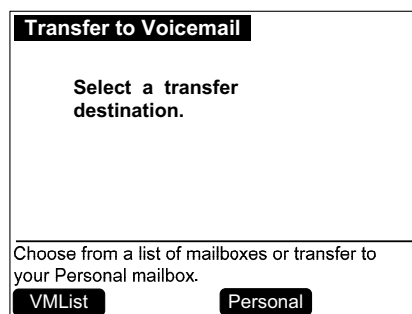

- Press **AutoAtt** to select an Auto Attendant to which to transfer the call
3. When the new call is established, you are ready to transfer the first call. You can:
 - speak to the person to whom you are transferring the call and announce the transfer.
 - cancel the Transfer Setup screen on the first call by pressing **CANCEL**. The call remains on hold.
 4. To complete the transfer, press **Xfer?** . A **Call Transferred** screen appears for two seconds. When the transfer is complete, the screen returns to Idle mode.

Draft




Making a Conference Call

You can set up a conference call with yourself and two telephone numbers (either internal, external, or with both).


To make a conference call:

1. Press **Conf** from an active call screen. The call is put on hold and the conference setup screen appears.

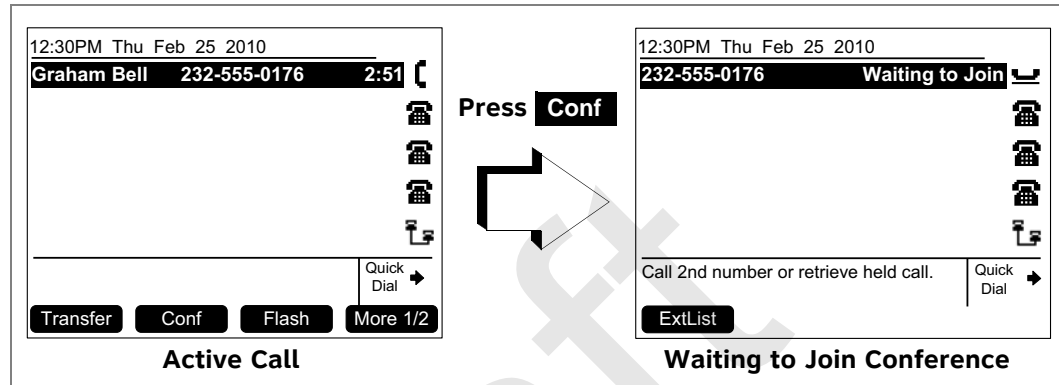


2. Establish a second call. You can dial the second call normally, or you can select a held call and take it off hold, or you can start the second call from a list. See ["Accessing Items in Lists" on page 43](#).

When the second call has been established, the **Join?** soft key appears.

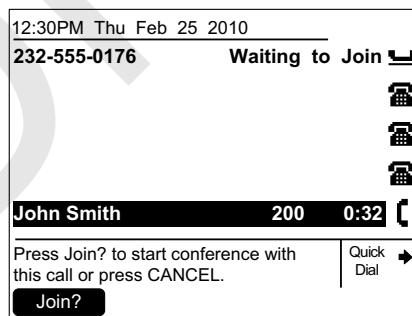

3. To join the calls, press **Join?**.

Your extension is now in conference with the other two phone numbers.

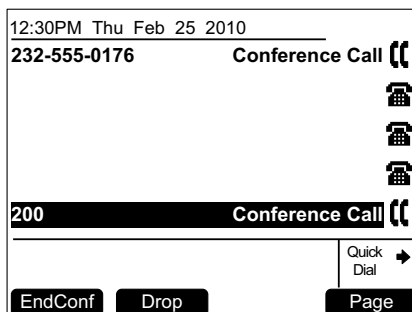


If you hang up while on the conference, the conference ends. If you make or answer another call, the conference continues without you. You can rejoin by pressing a corresponding Line key.

Putting a Conference on Hold

To put a conference on hold:

1. Press **HOLD**.

The other callers can continue communicating with each other. The held conference icon indicates a held conference.

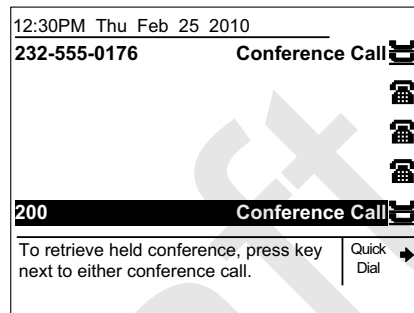

NOTE **Conf** is unavailable during an active call if you have another conference on hold.

A conference is automatically put on hold when you:

- Press an available Line key to start a new call.
- Answer an incoming call.

To take a conference call off hold:

1. Press a Line key for one of the calls on the conference.


Ending a Conference

To end a conference:

From the conference screen, press:

- **EndConf** to end the conference. Both calls hang up.
- **Drop** to end the highlighted call. The other call remains active.



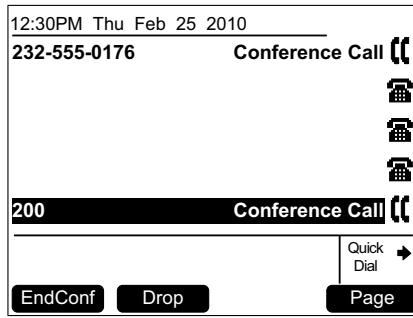


Draft




Call Management Using a Headset

You can use a corded or cordless headset with the Deskset. A corded headset can be plugged into the Headset jack on the back of the Deskset. The cordless headset must provide its own wireless radio in a base unit that is plugged into the Headset jack. If the headset is a compatible AT&T DECT cordless headset, it can be registered to the Deskset and no other connections to the Deskset are required. See ["Registering an Optional Cordless Headset" on page 96](#).



To use a headset:

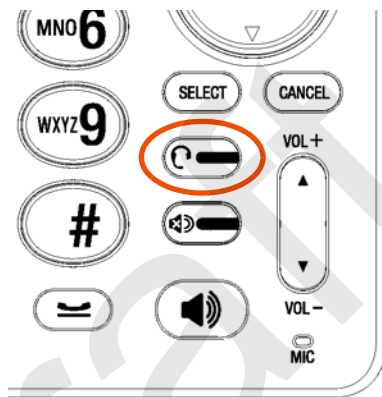- From Idle mode or during a call using the corded handset or speakerphone, press  (**HEADSET**).



If you have a headset connected to the jack on the back of the Deskset, then that headset becomes active.

If you have a AT&T DECT cordless headset registered to the Deskset, then the cordless headset becomes active.

- To send audio from the headset to the Deskset speakerphone, press **SPEAKER**.
- To send audio from the headset to the corded handset, lift the handset. If the handset is already off hook, press  to send audio to the handset. While the handset is off hook, you can press  again to return audio to the headset.

CHAPTER
5

ACCESSING ITEMS IN LISTS

The Deskset has lists of phone numbers that are used for making calls and for call management. Some of the lists, like Voicemail, are explained elsewhere in this guide. In this chapter, you learn how to access an individual item in a list. All instructions start from the Idle screen.

The Deskset may provide access to the following lists:

- **Directory List**—See Chapter 6, [“Directory” on page 53](#)
- **Voicemail List**—See Chapter 7, [“Voicemail” on page 62](#)
- **Call Log**—See Chapter 8, [“Call Log” on page 75](#)
- **Extension List**—See [“Accessing the Extension List” on page 45](#)
- **Quick Dial**—See [“Accessing the Quick-Dial List” on page 46](#)
- **Redial List**—See [“Accessing the Redial List” on page 49](#)
- **Held Calls List**—See [“Accessing the Held Calls List” on page 52](#).



About the Extension List

You can access the Extension list illustrated in Figure 13 from Idle, Live Dialing, Transfer, and Conference Setup modes.

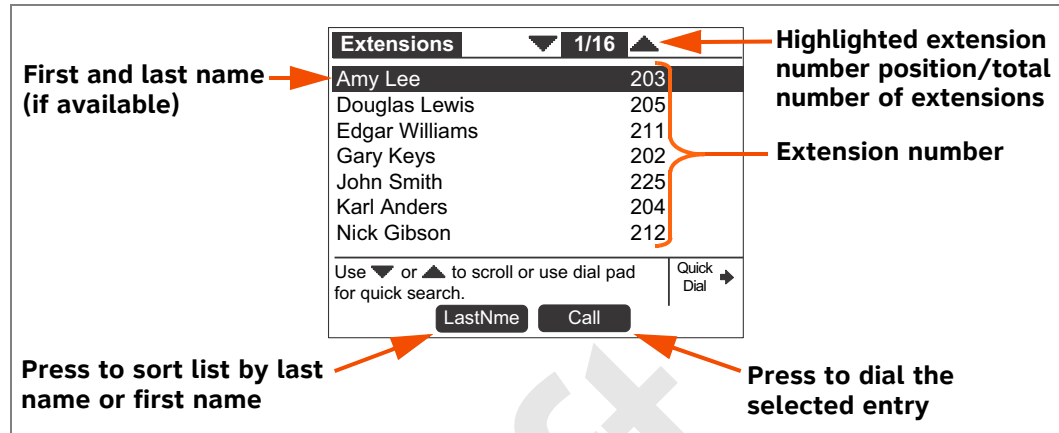


Figure 13. Extension List Functions



Accessing the Extension List

You can access the Extension list as part of the Directory when the phone is idle. See ["Using the Directory" on page 54](#). When you go off-hook on an Intercom line, you can access the Extension list using the **ExtList** soft key that appears.

To access the Extension list:

1. From the Idle screen, press **ExtList**.

OR

When off hook on an Intercom line, press **ExtList**.

The **Extensions** list appears.

Extensions		▼ 1/16 ▲
Amy Lee	203	
Douglas Lewis	205	
Edgar Williams	211	
Gary Keys	202	
John Smith	225	
Karl Anders	204	
Nick Gibson	212	

Use ▼ or ▲ to scroll or use dial pad for quick search. Quick Dial →

LastNme Call

2. Press ▼ or ▲ until you highlight the desired entry.

OR

Use the dial pad to jump to the first name that begins with the first letter of the key that you press.

3. Press **Call** to call the highlighted extension.



NOTE

You can also access the Extension list from the following:

- **Transfer**—See ["Transferring a Call" on page 37](#).
- **Conference Setup**—See ["Making a Conference Call" on page 39](#).




Accessing the Quick-Dial List


The quick-dial list provides up to six entries for frequently called numbers.

To access and dial quick-dial numbers:

1. Press the button to the right of ^{Quick}Dial _{Dial} →.

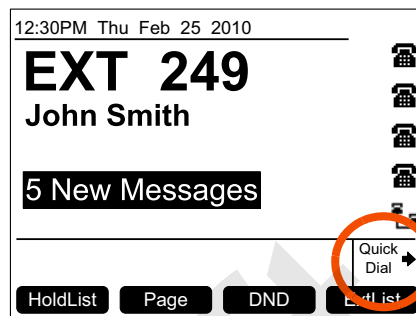

Quick-dial labels appear.

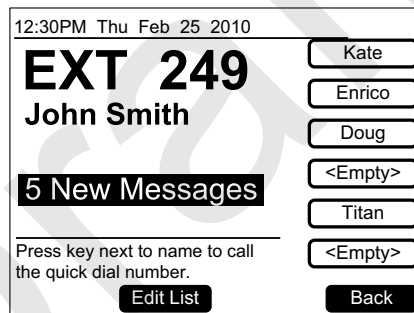


2. Press a quick-dial button to the right of a label to dial that number.




Editing Quick Dial Entries

After you access a quick-dial entry, you can add and edit quick-dial entries using the Deskset or the WebUI. To edit entries using the WebUI, see ["Quick-Dial Keys" on page 111](#).

To edit quick dial from the Deskset:

1. Press the key to the right of  to display the quick-dial list.
2. Press **Edit List** to add or edit a quick-dial entry. The quick-dial edit screen appears.

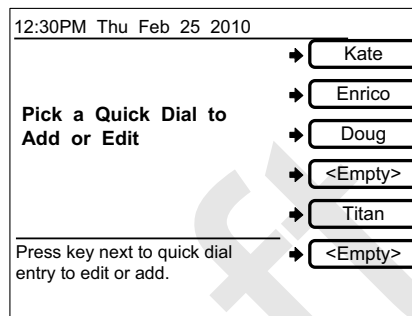


12:30PM Thu Feb 25 2010

Pick a Quick Dial to Add or Edit

- Kate
- Enrico
- Doug
- <Empty>
- Titan
- <Empty>

Press key next to quick dial entry to edit or add.

3. Press the key to the right of the entry you want to edit.
4. Enter the desired name and number. Press **Backspc** to erase the highlighted character if there is one, or else the character before the cursor.

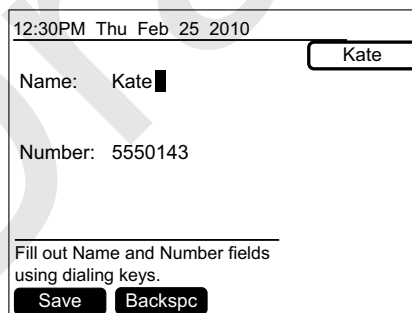

12:30PM Thu Feb 25 2010

Name: Kate

Number: 5550143

Fill out Name and Number fields using dialing keys.

Save Backspc

- a. Enter the name.
 - b. Press ∇ and enter the number.

To include a pause in the number, press **Pause**.
5. Press **Save** to store the number. The quick-dial list appears.



About the Redial List

The last 20 phone numbers that you dialed are recorded in the Redial list, as shown in Figure 14.

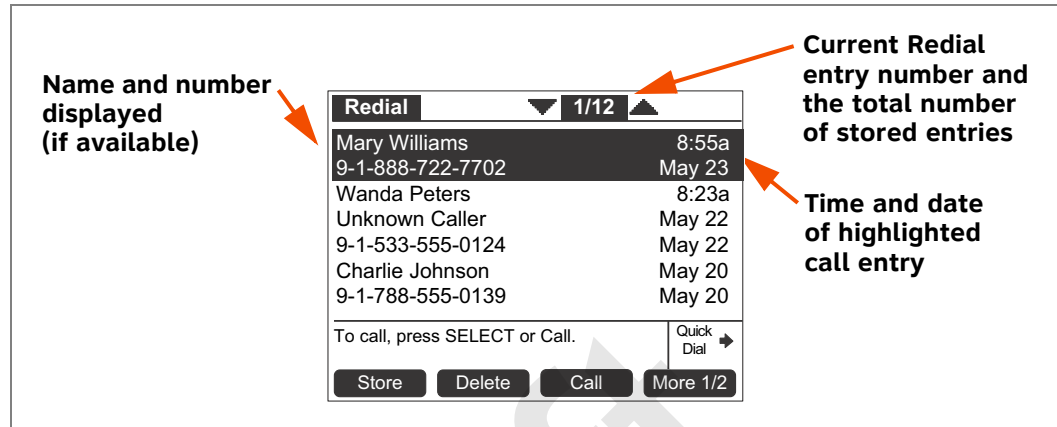


Figure 14. Redial List


Table 11. Redial List Function


Key	Description	Key	Description
Store	Stores number in Personal list.	Delete	Deletes an entry.
Details	Shows more details for a particular entry.	DelAll	Deletes all entries.
Call	Dials the selected entry.	More	Moves to the next set of soft keys. If this key appears, there are more than four soft keys available. More 1/2 indicates that you are on page one of two.



Accessing the Redial List

To access a Redial entry:

1. Press  (**REDIAL**) to display the Redial list, as shown in Figure 14.
2. Press ∇ or \triangle until you highlight the desired entry.
3. Press:
 - **Call** to redial the number.
 - **More 1/2**, then **Details** to display details about the highlighted entry.

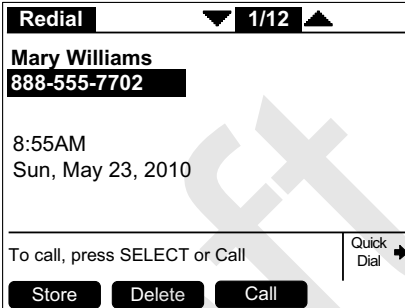

The screenshot shows a screen titled "Redial" with a dropdown menu showing "1/12". The main content area displays the name "Mary Williams" and the phone number "888-555-7702". Below this, it shows the time "8:55AM" and the date "Sun, May 23, 2010". At the bottom, there is a prompt "To call, press SELECT or Call" and a "Quick Dial" button with a right arrow. Three buttons are visible at the bottom: "Store", "Delete", and "Call".

- **Store** to store the caller's number. The **Personal Entry** screen appears with the First Name and number filled in.



The screenshot shows a screen titled "Personal Entry" with a dropdown menu. The "First Name" field is filled with "Mary Williams". The "Last Name" field is empty. The "Phone #" field is filled with "8885557702". Below the fields, there is a prompt "Use dial pad to enter letters." and a "Quick Dial" button with a right arrow. Two buttons are visible at the bottom: "Save" and "Backspc".

- If necessary, edit the name and number. Press ∇ to move the cursor to the **Last Name** and **Phone #** entries.
- Press **Save** to save the entry.



NOTE

The system does not check for duplicate entries.


4. Press **CANCEL** to exit the Redial list.




Deleting Redial Entries

You can delete a single Redial entry from the Redial list or all Redial entries. Ensure the entry you wish to delete is highlighted.

To delete a single entry:

1. Press  (**REDIAL**) to access the Redial list.
2. Press ∇ or \triangle until you highlight the desired entry.
3. Press **Delete**.
4. Press **CANCEL** to exit the Redial list.

To delete all Redial entries:

1. Press  (**REDIAL**) to access the Redial list.
2. Press **More 1/2** to display the **DelAll** soft key.
3. Press **DelAll**. A confirmation screen appears.



4. Press **Yes** to confirm deletion.
5. Press **CANCEL** to exit the Redial list.



Searching the Directory or Extension Lists

Use the dial pad to view the first entry that starts with any letter.

To search for a list entry on the Deskset:

1. Select a list to search, such as the Directory.

Directory		▼ 1/48 ▲
ABC Accountants	Personal	
503-555-0194		
Amy Lee		203
Angela Martin		732-555-7318
Charlie Johnson		888-883-2445
David Carter		443-555-0625
Davis Caterer		317-555-0129
Use ▼ or ▲ to scroll or use dial pad for quick search.		Quick Dial →
New	LastNme	Call More 1/3

2. Press the dial-pad keys to cause the Deskset to search for an exact match or the closest match. For example:

- If you press **4** once, the Deskset searches for names beginning with **G**.
- If you press **4** twice, the Deskset searches for names beginning with **H**.

See [“Deskset Dial-Pad Entry” on page 18](#) for information on entering other individual letters. This searching function uses only the uppercase letters.

When an exact match is found, the entry is highlighted. If you enter a letter and the Deskset cannot find an exact match, the entry with the next closest alphabetical match is highlighted.

Directory		▼ 13/48 ▲
Graham Bell	Personal	
232-555-0176		
Heather Phillips		732-555-7318
Ian Stevens		604-555-0184
John Lee		503-555-0194
John Smith		249
Karl Anders		204
Use ▼ or ▲ to scroll or use dial pad for quick search.		Quick Dial →
New	LastNme	Call More 1/3



Accessing the Held Calls List

When you or any other Deskset user puts an external call on hold, the call is displayed in the Held Calls list. From the Held Calls list, you can view and retrieve any held call in the system.

Your Deskset Line key LEDs also show which lines have held calls on them, but only for the lines assigned to that Deskset. All Desksets in the system may not have the same lines assigned to them. For example, your department may have lines 1 to 4 assigned to your Desksets. Another department in your company may have lines 5 to 8 assigned to their Desksets. Using the Held Calls list at your Deskset, you can access calls being held on lines 1 to 8.

You can view and retrieve any held call in the system from the Held Calls list. If the held call is on a line that is not assigned to your Deskset, retrieving the call will route it to the Intercom line on your Deskset.

To view and retrieve calls from the Held Calls list:

1. Press **HoldList** .

The **Calls on Hold** screen appears.

Calls on Hold		1/4
Graham Bell	Line 3	3:32
	Line 1	2:10
Amy Lee	Line 8	1:46
1-800-123-1234	Line 2	0:12
Press ▼ or ▲ to scroll, then press Retrieve to un-hold call.		Quick Dial →
Retrieve		Page

2. Press ▼ or ▲ to highlight the desired call.
3. Press **SELECT** to retrieve the call.

If the held call used a line that was not assigned to your Deskset, the call becomes active on your Intercom line. Any previous active call on your Deskset goes on hold.



CHAPTER
6

DIRECTORY

The Syn248 system provides three Directory lists. By default, the system displays entries from all three lists when you press **A2** (**DIRECTORY**). See [“Viewing Directory Entries” on page 55](#) to learn how you can limit this display to one of the three lists.

- **Personal**—You can add, edit, and delete up to 50 entries in this Personal directory from the Deskset or the WebUI (referred to as “Extension Directory” on the WebUI). These entries are available only at your extension.
- **System**—This public directory is created and maintained by the system administrator. You can view and sort this directory, but you cannot modify it.
- **Extension**—This is a list of all extensions in the system. It contains the Display Names that the administrator entered and the extension number of each Deskset. You can view and sort this directory, but you cannot modify it.
 - [“Using the Directory” on page 54](#)
 - [“Viewing Directory Entries” on page 55](#)
 - [“Creating a New Personal List Entry” on page 57](#)
 - [“Editing a Personal List Entry” on page 58](#)
 - [“Storing Directory Entries from the Call Log or Redial List” on page 59](#)
 - [“Sorting Directory Entries” on page 61.](#)



Using the Directory

Access the Directory by pressing **AZ** (**DIRECTORY**) to display the screen shown in Figure 15.

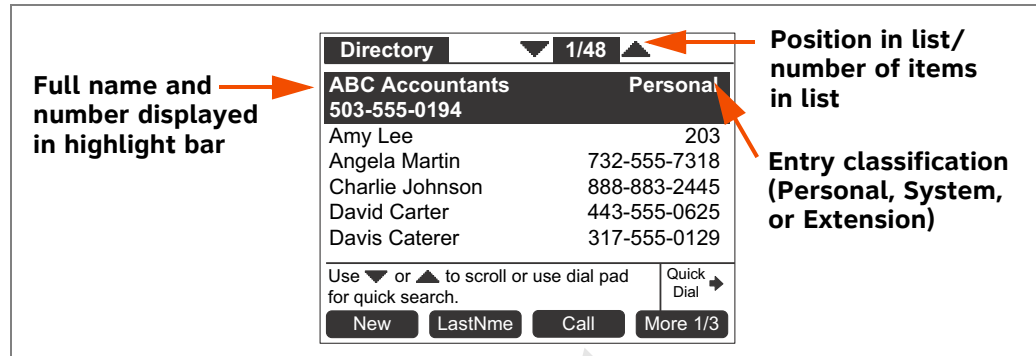


Figure 15. Directory Screen Description

Table 12. Directory Screen Description


Key	Description	Key	Description
New	Creates a new entry in the Personal list.	FirstNme	Switches between first and last name sort in Directory and Extension list.
Call	Dials the selected entry.	LastNme	
Edit	Allows you to change previously entered information.	More	Moves to the next set of soft keys. If this key appears, there are more than eight soft keys available. More 1/3 indicates that you are on page one of three.
List	Opens the Directory List Options menu.	Delete	Deletes the highlighted entry.
		Details	Displays entry details.




Viewing Directory Entries


You can view all **Directory** entries in one list, or you can view only the Personal list, System list, or Extension list. Within a list, you can press a dial-pad key to see the first name that starts with the first letter on that key. If there is no match, the set displays the next entry in the alphabetical list.

To view and call Directory entries:

1. Press  (**DIRECTORY**). The Directory list appears.

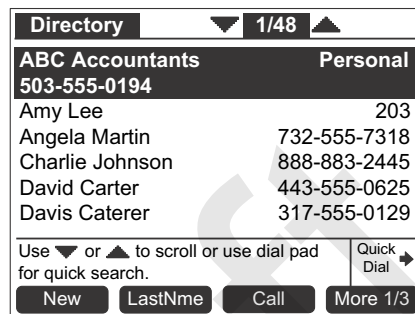

2. Press ▼ or ▲ to highlight the desired entry.
3. If necessary, press **More** until **Details** appears, then press **Details** to see names and numbers that are too long to be displayed on the **Directory** list.

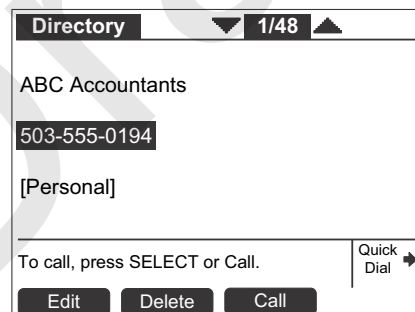


4. Press **Call** to dial the displayed phone number.




To change Directory settings:

1. From the Directory list, press **More 1/3** to display the second set of **Directory** soft keys.

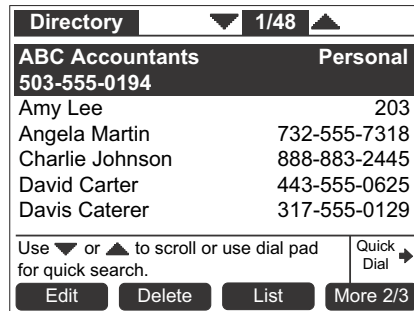

If the Directory is empty, **Edit** and **Delete** do not appear.

2. Press **List**. The **Directory List** appears.

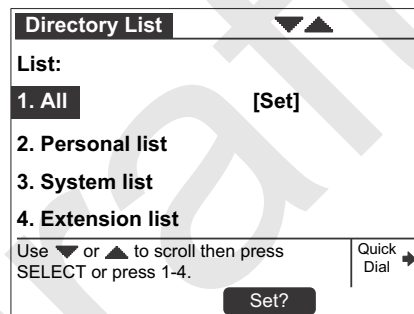

3. Press ▼ or ▲ to highlight the desired list, and press **SELECT**.
The selected list appears.
4. Press **List** to display the **Directory List** screen again.
5. To change the default list, press ▲ or ▼ to highlight the desired list, then press **Set?**.
6. Press **CANCEL** to return to the **Directory**.







Creating a New Personal List Entry

You can add up to 50 personal entries to the **Directory**. These personal entries are only visible at your extension.

To create a new Personal list entry:

1. Press  (**DIRECTORY**) to display the **Directory**.

Directory		▼ 1/48 ▲
ABC Accountants	Personal	
503-555-0194		
Amy Lee	203	
Angela Martin	732-555-7318	
Charlie Johnson	888-883-2445	
David Carter	443-555-0625	
Davis Caterer	317-555-0129	
Use ▼ or ▲ to scroll or use dial pad for quick search.		Quick Dial →
New	LastNme	Call More 1/3




2. Press **New** to display the **Personal Entry** screen with the cursor positioned in the **First Name** field.
3. Edit the **First Name**, **Last Name**, and **Phone #** fields using the dial pad. See ["Deskset Dial-Pad Entry" on page 18](#). The name text fields are limited to 20 characters each and the number field is limited to 32 digits.
4. When editing the entry, you have the following options:
 - Press  or  to move the cursor.
 - Press  or  to move to the previous or next field.
 - Press **Backspc** to erase the highlighted character if there is one, or else the character before the cursor.
 - Press **Pause** to insert a two-second pause into the phone number. The pause appears as a **P** in the field and is counted as a digit.
5. Press **Save**. The **Directory** appears.




Editing a Personal List Entry





You can edit any Personal list entry while viewing the **Directory**.

To edit a Personal list entry:

1. Press  (**DIRECTORY**) to display the **Directory**.
2. Press  or  to highlight a **Personal** entry.
3. Press **More 1/3** and **Edit** . The **Personal Entry** edit screen appears.

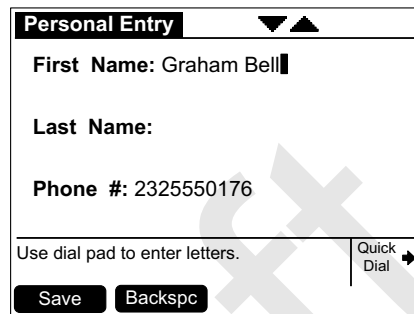






The **Edit** key is not available when a **System** or **Extension** entry is highlighted in the Directory list.


4. Edit the **First Name**, **Last Name**, and **Phone #** fields using the dial pad. See ["Deskset Dial-Pad Entry" on page 18](#). The name text fields are limited to 20 characters each and the number field is limited to 32 digits.
5. When editing the entry, you have the following options:
 - Press  or  to move the cursor.
 - Press  or  to move to the previous or next field.
 - Press **Backspc** to erase the highlighted character if there is one, or else the character before the cursor.
 - Press **Pause** to insert a two-second pause into the phone number. The pause appears as a **P** in the field and is counted as a digit.
6. Press **Save** . The **Directory** appears.




Storing Directory Entries from the Call Log or Redial List

To store a Call Log or Redial entry into your Personal list:

1. Press  (CALL LOG) or  (REDIAL) to access either list.
2. Press  or  until you highlight the desired entry.
3. Press **Store** to store the entry in your Personal list. (Press **More 1/3** to display **Store** on the Call Log screen.) The **Personal Entry** screen appears.



The Deskset automatically fills in the name and number, if available.

- If necessary, edit the name and number. Press  to move the cursor to the **Last Name:** and **Phone #:** entries.
 - Press **Backspc** to erase the highlighted character if there is one, or else the character before the cursor.
 - Press **Pause** to insert a two-second pause into the phone number. The pause appears as a **P** in the field and is counted as a digit.
4. Press **Save** to save the entry.



NOTE




The system does not check for duplicate entries.




Deleting a Personal List Entry

You can delete any one of your personal list entries while viewing the **Directory**.

To delete a Personal list entry:

1. Press  (**DIRECTORY**) to display the **Directory**.
2. Press  or  to highlight the entry to be deleted.
3. Press **More 1/3** to display the **Delete** soft key.
4. Press **Delete**. The confirmation screen appears.

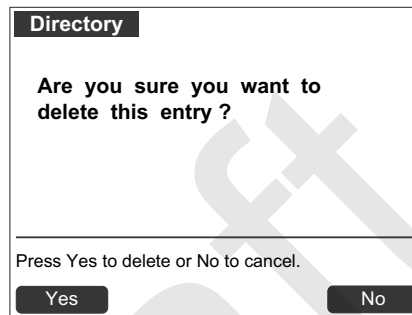

5. To confirm the deletion, press **Yes**.




The **Delete** key is not available when a System or Extension entry is highlighted in the Directory.



Sorting Directory Entries

The **Directory** entries are sorted by first or last names. When you use the dial pad to search, the system searches for the names in the sort order.

To sort Directory entries:

1. Press  (**DIRECTORY**) to display the **Directory**.
2. To sort the entries by last name, press **LastNme** .
To sort the entries by first name, press **FirstNme** .

Draft



CHAPTER
7

VOICEMAIL

Your Deskset records and saves incoming voice messages. The NEW MESSAGE LED, shown in [Figure 16 on page 63](#), lights up when there is at least one new message.

Each message can be up to 2 minutes long. Your Deskset mailbox has 30 minutes of recording time and can hold up to 100 messages.

The following sections describe how to listen to and manage voicemail on your Deskset:

- ["Voicemail Overview" on page 63](#)
- ["Accessing Your Messages" on page 67](#)
- ["Accessing Your Voicemail Remotely" on page 72.](#)



Voicemail Overview

When there is at least one new message, the NEW MESSAGE LED lights up, as shown in Figure 16.



Figure 16. Message Waiting LED

To access your messages, see [“Accessing Your Messages” on page 67](#). Messages appear in a list as shown in Figure 17. Pressing \triangle or ∇ highlights messages in the list. Pressing \triangleleft or \triangleright displays options for dialing the number.

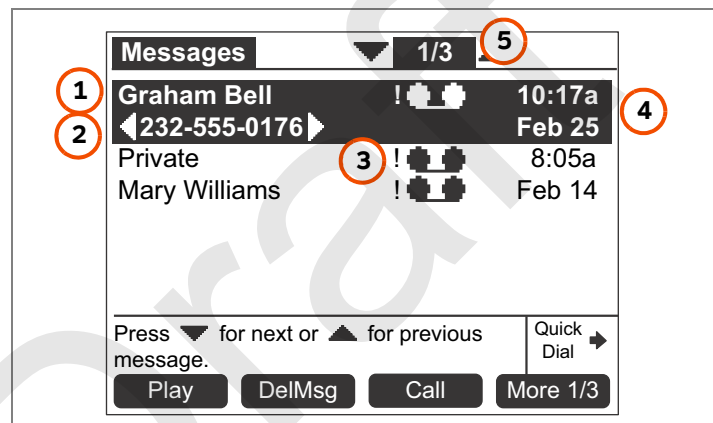


Figure 17. Messages List

1. Name and number displayed

2. Arrows

Indicate dialing options available.

3. Exclamation mark (!)

Indicates a new message.

4. Time and date when message was recorded

Both are shown for highlighted messages. Only the time appears for unhighlighted messages received on the day they are viewed, and only the date appears for unhighlighted older messages.

5. Message Counter

Highlighted message number and total number of messages.



Table 13. Messages List Soft Key Description

Key	Description	Key	Description
Play	Plays message.	DelMsg	Deletes highlighted voicemail message from Message list.
Call	Dials the selected entry.	More	Moves to the next set of soft keys. If this key appears, there are more than eight soft keys available. More 1/3 indicates that you are on page one of three.
FwdMsg	Initiates Message Forward function.	DelAll	Deletes all messages.
PlayAll	Plays all messages.	MrkNew	Marks an old message as new.
ClerNew	Marks all messages as old.		




Selecting Your Voicemail Greeting

You can have three different greetings for your voicemail. You can then choose the one that is currently appropriate. You can record a **Primary Greeting** to use most of the time and an **Alternate Greeting** for when you are out of the office. The **Pre-Set Greeting**, "Please leave a message after the tone," is used when no other greeting is recorded.

To select the current greeting:

1. Press **MENU**, then **2**, and then **1** to display the **Message Greetings** menu.

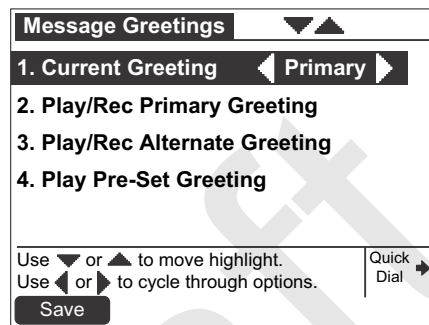


- Press \triangleleft or \triangleright to select the **Pre-Set**, **Primary**, or **Alternate** greeting to be played to external callers.
- To record a new **Primary** or **Alternate** greeting, see ["Recording a Greeting" on page 66](#).



NOTE

You cannot delete or record over the Pre-Set greeting.

2. Press **Save** to save the greeting. The system checks to see if the selected greeting has been recorded.
 - If the greeting has been recorded, the **User Settings** menu appears.
 - If a greeting has not been recorded, the **Greeting Not Recorded** screen appears and the **Pre-Set Greeting** is used. The **User Settings** menu appears.

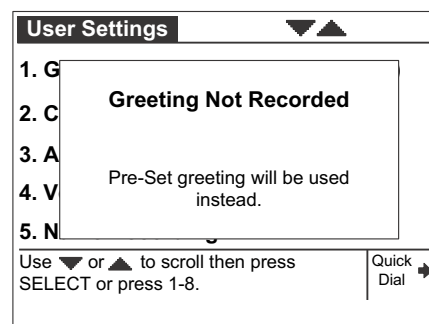

Recording a Greeting


You can record a greeting up to 60 seconds long. The procedure for recording a **Primary** or **Alternate Greeting** is the same.

To record either a Primary or Alternate greeting:


1. Press **MENU**, then **2**, and then **1** to display the Message Greetings menu.
2. Press either **2 (Primary)** or **3 (Alternate)** to select the greeting.

If you wish to record the greeting on the corded handset, lift the handset.

3. To record your greeting, press **Record**. The recording screen appears.

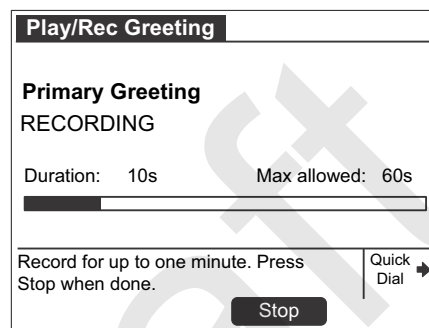

4. Press **Stop** when you are finished. The message review screen appears.

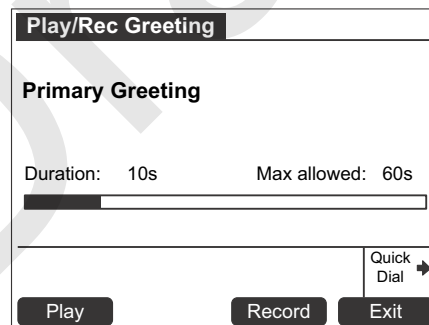

5. Press **Play** to review the message. The recording is saved until you press **Record** again.
6. Press **Exit** to return to the **Message Greetings** menu.



Accessing Your Messages

You can access just your new messages by pressing **SELECT** on the Idle screen. A list of your new messages appears. You can also access all messages (old and new) by pressing **MESSAGES**. A list of all messages appears.

You can play either a single message or all of your voicemail messages.

To access your voicemail:

1. From the Idle screen, press **MESSAGES**. If necessary, use the dial pad to enter your user password and press **SELECT**.




NOTE

Once you have entered your password, you do not have to enter it again while you are reviewing messages. However, if you exit the **Messages** screen, you will need to enter your password to access the Message list.

The **Messages** list appears.

"New Messages" appears when you press **SELECT** from the Idle screen.

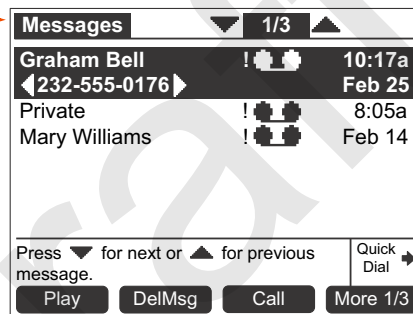


2. Press ∇ or \triangle until you highlight the desired **Messages** entry.
3. Press **CANCEL** to exit the Voicemail list.



To play new messages:

1. On the Idle screen, press **SELECT**. The **New Messages** list appears.

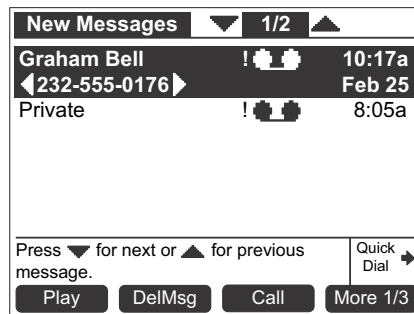


2. Press ∇ or \triangle to highlight the desired message, then press **Play**.

OR

Press **More 1/3**, then press **PlayAll**. All messages begin to play, starting with the oldest. There is a short beep between messages.

NEW appears on messages that are being played for the first time.

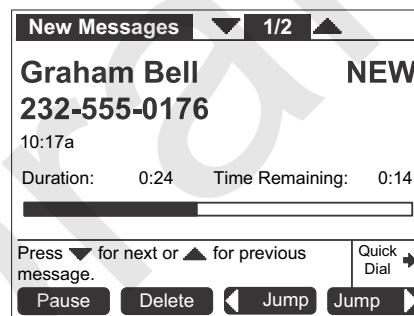

During message playback, you can pick up the handset to listen to messages privately, or press:

- **Pause** to pause message playback.
- **Delete** to delete the message. If there are more messages, the next message is highlighted.
- **◀ Jump** or **Jump ▶** to skip back or forward by 8 seconds.
- ∇ or \triangle to skip to the previous or next message.
- **CANCEL** to cancel playback and leave the highlight on the last played message.



To play old and new messages:

1. Press **MESSAGES** to view the entire **Messages** list. The list is sorted with the newest messages at the top of the list.
2. To play a specific message only, press \triangle or ∇ to highlight the desired message, then press **Play**.

OR

To play all messages, press **More 1/3** and then press **PlayAll**.

The Message Playback screen appears.



During message playback, you can pick up the handset to listen to messages privately, or press:

- **Pause** to pause message playback.
- **Delete** to delete the message. If there are more messages, the next message is selected.
- **◀ Jump** or **Jump ▶** to skip back or forward by 8 seconds.
- ∇ or \triangle to skip to the previous or next message.
- **CANCEL** to cancel playback and leave the highlight on the last played message.



Deleting Messages

You can delete a single message or all messages from the **Messages** list. You can also delete a single message during message playback as described in ["Accessing Your Messages" on page 67](#).

To delete a single message or all messages:

1. Open the **Messages** list, as described in ["Accessing Your Messages" on page 67](#).
2. Press \triangle or ∇ to highlight the desired message.
3. Press **DelMsg** to delete the message.


The system removes the message from the list and highlights the next message.

OR

To delete all messages:

- a. Press **More 1/3** and then press **DelAll**.

The confirmation screen appears.

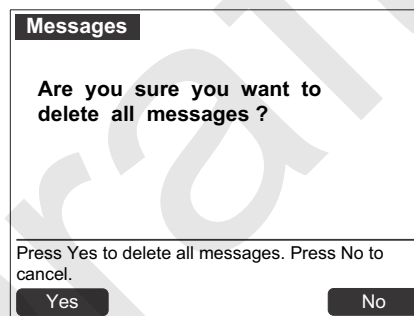

- b. Press **Yes** to confirm.



All messages are deleted, whether they are new (unheard) or not.




New Message Status Indications (! Icons)


You can add a new message indication (! icon) or delete all new indications from the **Messages** list. Messages appear with an exclamation point to indicate that the message has not been played.

To clear and restore new message indications:

1. Open the **Messages** list, as described in ["Accessing Your Messages" on page 67](#). The Messages list appears.
2. Press **More 1/3** then **More 2/3** to display the **ClerNew** and **MrkNew** soft keys.

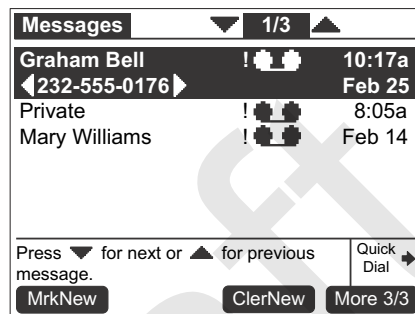

3. Press **ClerNew** to clear all new message indications. The NEW MESSAGE LED turns off.

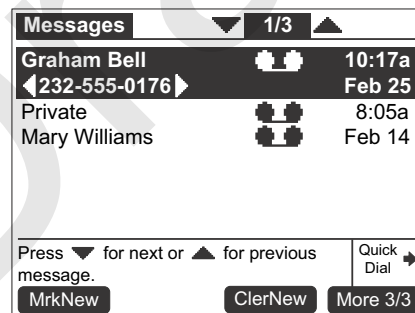

4. If desired, press **MrkNew** to restore the ! icon for a selected message, marking the message as new again. The MESSAGE WAITING LED lights up again.



Accessing Your Voicemail Remotely

Remote access allows you to listen to your messages or change the recorded greeting when you are away from your Deskset. Follow the voice prompts and press the appropriate dial-pad keys to navigate through the system. The voice prompts in a menu list are repeated three times with a 5-second pause between. After three times with no action, the voice says "Goodbye" and the remote call is disconnected.

Listening to the time/date stamp information of a message does not count as listening to the message. If you access the voicemail through remote access and skip to another message while the time or date is playing, the message is still considered new.

**NOTE**

To use this feature, your system must be set up for remote voicemail access. The Phone Line Call Forward–No Answer setting and Intercom Call Forward–No Answer setting must allow you to reach your extension's voicemail. For more information, consult your system administrator.

To access voicemail remotely:

1. Dial your company phone number.
2. After the call is answered, enter your extension number.
3. Immediately press the star twice (**). You will hear, "Enter your access code, followed by the pound sign."
4. Enter your user password (if you have created one), then enter pound (#) to listen to your messages.

Even if you have not created a password, you must still enter the pound (#).

**NOTE**

If your mailbox is full, your voicemail greeting does not play. Instead you hear "Voicemail is full" before being disconnected. To access your voicemail when your mailbox is full, quickly press the star key twice (**) just as the "Voicemail is full" announcement begins.



To access voicemail remotely – listen to messages:

Once you have accessed the system, the main menu plays. From this menu you can listen to old or new messages as illustrated in Figure 18. You have the following options:

- To listen to new messages, press **1**.
- To listen to old messages, press **2**.
- To change voicemail options, press **8**.

Once you press 1 or 2, and the messages start playing, you have the following options:

- To stop message playback and replay options, press **5**.
- To delete the current message, press **3**.
- To repeat the previous message, press **4**.
- To skip this message, press **6**.
- To jump back 8 seconds, press **7**.
- To jump forward 8 seconds, press **9**.
- To return to the previous menu, press star *****.

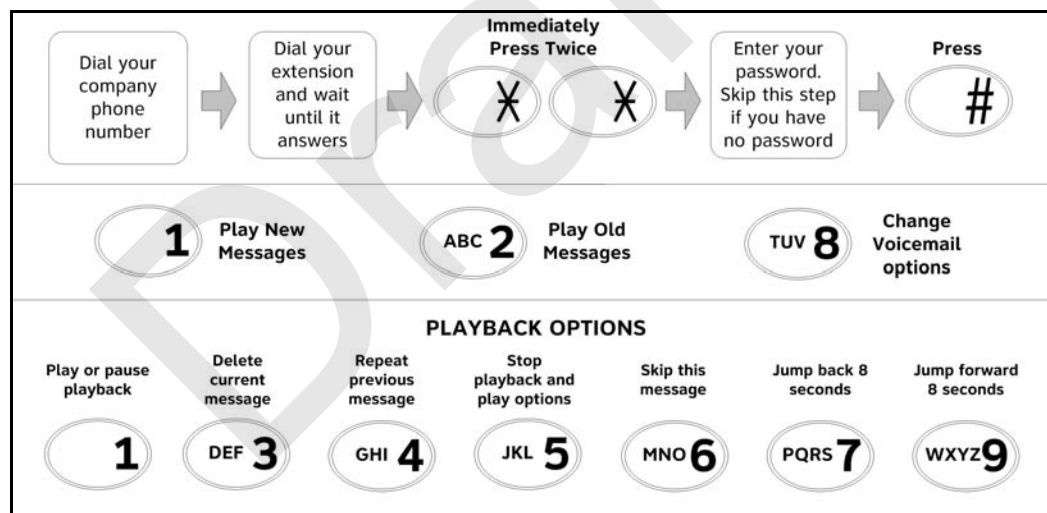


Figure 18. Remote Voicemail Access



To access voicemail remotely – voicemail greeting setup:

1. To set up the voicemail greeting, access the system and press **8**. As illustrated in the flow diagram in Figure 19, you have the following options:
 - To record a primary greeting, press **1**.
 - To record an alternate greeting, press **2**.
 - To choose the primary or alternate greeting, press **7**.
2. Begin recording after the tone.
3. To end the recording, press **5**.
4. Select one of the following options:
 - To review the recording, press **1**.
 - To record over the greeting, press **3**.
 - To accept the greeting, press **9**.

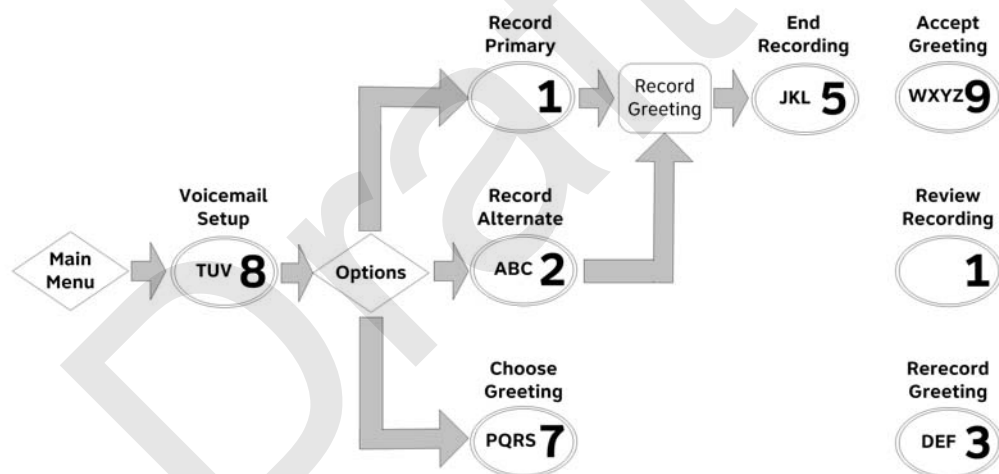


Figure 19. Remote Voicemail Greeting Setup



CHAPTER
8

CALL LOG

The Call Log provides available name and number information for the last 50 calls received. The newest entries replace the oldest.

- ["Using the Call Log" on page 76](#)
- ["Reviewing the Call Log List" on page 78](#)
- ["Storing Call Log Entries" on page 80](#)
- ["Deleting Call Log Entries" on page 81.](#)

You can view the Call Log shown in [Figure 20 on page 76](#) by pressing **CALL LOG**.



NOTE

This system has a caller ID feature that works with the caller identification service offered through your telephone service provider. There is a fee for this service, and it might not be available in all areas. This telephone can provide information only if both you and the caller are in areas offering caller identification service, and if both telephone service providers use compatible equipment.



Using the Call Log

The Call Log soft keys, as shown in Figure 20 and described in Table 14, are available whenever the Call Log has at least one entry.

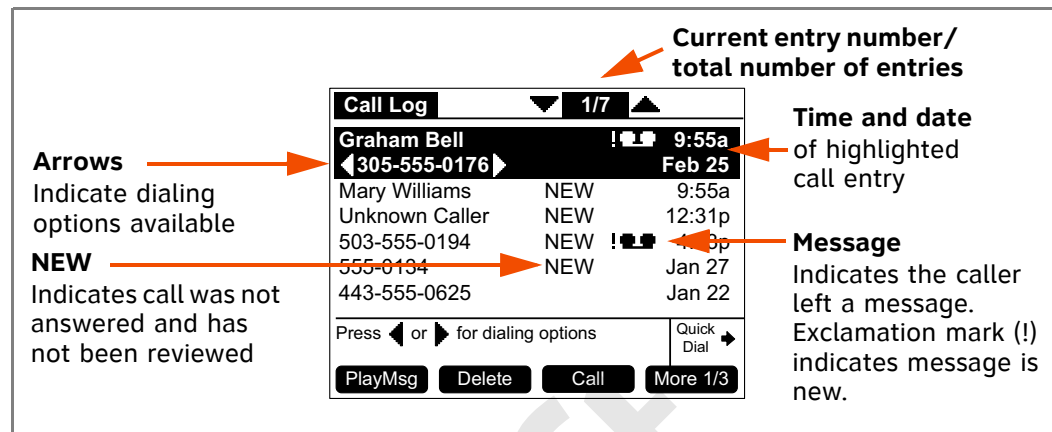


Figure 20. Call Log Functions

Table 14. Call Log Soft keys


Key	Description	Key	Description
PlayMsg	Plays message. Only present when there is a message recorded.	Delete	Deletes the highlighted entry.
Call	Dials the highlighted entry.	Store	Stores number in your Personal list.
DelAll	Deletes all entries.	ClerNew	Marks all new calls as old.
Details	Shows you more details.	More	Moves to the next set of soft keys. More 1/3 indicates that you are on page one of three.

- Entries not highlighted display the time for calls received on the current day. Calls before the current day display the date.
- If the caller ID information is absent because it is unavailable, **UNKNOWN NAME** and **UNKNOWN NUMBER** appear. If the caller chooses not to send the information, **PRIVATE NAME** and **PRIVATE NUMBER** appear.



To access the Call Log list:

1. From the Idle screen, press **CALL LOG**. The Call Log list appears with the most recent entry at the top.
 - To view details for a Call Log entry, press **More 1/3**, then **More 2/3**, then **Details**. The Call Log details screen appears.

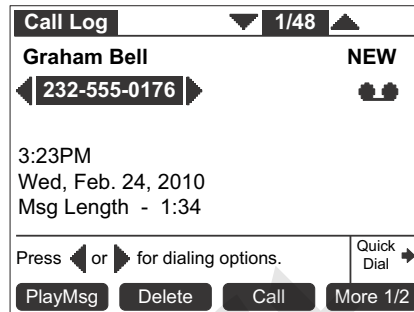




- Call Log entries may not be in the proper format for dialing. In some areas, you need to remove the area code or add or remove a 1. Press < or > to view the dialing options.
2. Press **CANCEL** to exit the Call Log.



Reviewing the Call Log List

To review the Call Log list:

1. Press **CALL LOG** to display the **Call Log**.

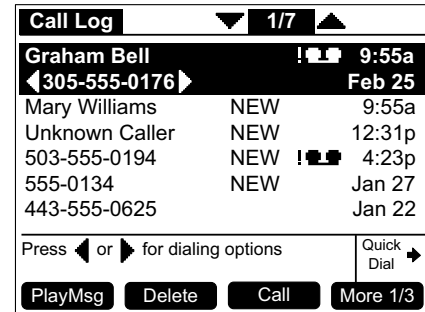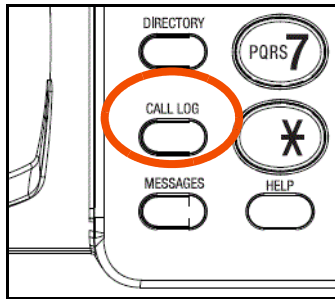

2. Press ▾ or ▴ to highlight the desired **Call Log** entry.
 - Press **Call** to dial the highlighted number in the **Call Log**.
 - **Call Log** entries may not be in the proper format for dialing. In some areas, you need to remove the area code or add or remove a 1. Press ◀ or ▶ to view the dialing options. The following dialing options are available:
 - nnn-nnnn (7 digits)
 - 1-nnn-nnnn (8 digits)
 - nnn-nnn-nnnn (10 digits)
 - 1-nnn-nnn-nnnn (11 digits).
 - Press **Delete** to delete the selected entry.
 - To view details for any entry, see ["To access the Call Log list:" on page 77.](#)
3. Press **CANCEL** to exit the **Call Log**.




Listening to Voicemail From the Call Log


If the caller left a voice message, you can play the message from the Call Log list or from Call Log Details.

To play a voice message from the Call Log:

1. Press **CALL LOG** to display the Call Log.

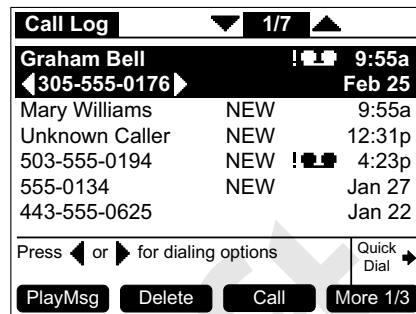

2. Press ∇ or \triangle to highlight the desired message, then press **PlayMsg**. The message review screen appears.

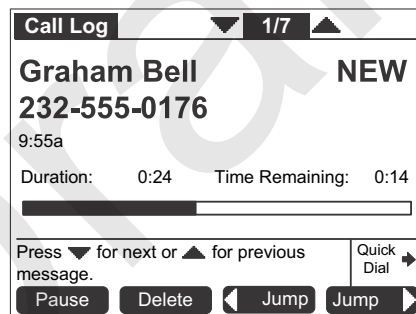

PlayMsg only appears if the call has an associated voicemail.

If necessary, use the dial pad to enter your user password and press **SELECT**.


3. Press **Delete** while the message is playing to delete the voice message. There is a slight delay until the message indicators change.
4. When the message playback completes, the **Call Log** appears.
5. Press **CANCEL** to exit the **Call Log**.



Storing Call Log Entries

To store a Call Log entry into your Personal list:

1. From the desired Call Log entry, press **More 1/3** to view the **Store** soft key.
2. Press **Store** to store the entry in your Personal list. The **Personal Entry** screen appears.

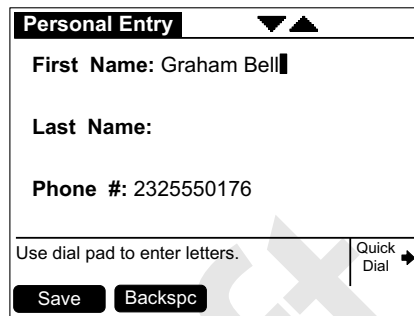

Personal Entry ▼▲	
First Name: Graham Bell	
Last Name:	
Phone #: 2325550176	
Use dial pad to enter letters.	Quick Dial →
Save	Backspc

The caller information fills in the **First Name** and **Number** fields.

3. To enter the last name, press ▼ and use the dial pad to enter letters. See [“Deskset Dial-Pad Entry” on page 18](#).
4. Press ▼ and edit the number if necessary.



The system does not check for duplicate entries.

NOTE

5. Press **Save** to store the entry and return to the **Call Log**.
6. Press **CANCEL** to exit the **Call Log**.



Deleting Call Log Entries

You can delete a single Call Log entry, or all Call Log entries.


To delete a single Call Log entry:

1. From a highlighted Call Log entry, press **Delete**. The entry is removed from the list and the next entry is highlighted.
2. Press **CANCEL** to exit the Call Log.


You can delete all entries only when viewing the Call Log list from Idle mode.

To delete all Call Log entries:


1. From the Call Log, press **More 1/3** to display the **DelAll** soft key.

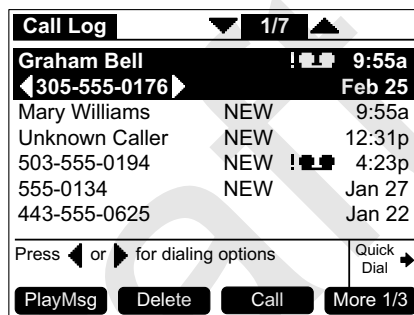

2. Press **DelAll** to delete all entries in the **Call Log**. The confirmation screen appears.

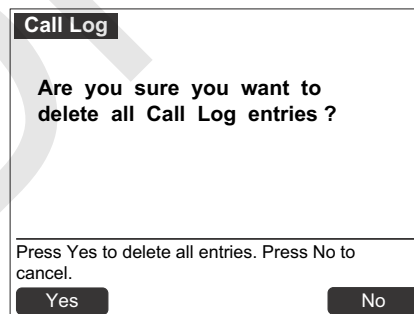

3. Press **Yes** to confirm the deletion. The empty Call Log appears.

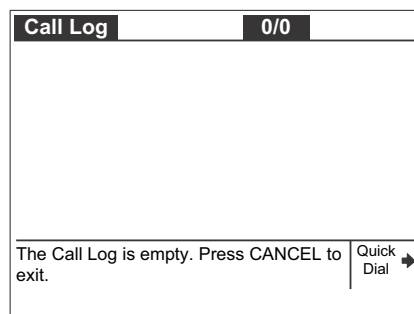

4. Press **CANCEL** to exit the **Call Log**.



CHAPTER
9

PAGING

Paging allows you to broadcast what you say to more than one extension. If your system administrator has set up paging zones, you can page all extensions or a zone.

If your Syn248 system includes an optional overhead paging (OHP) system, you may be able to page through loudspeakers. The OHP system is included when you select **All Extensions** on the **Paging Zones** menu. The OHP system may also be included in a custom Paging Zone.




Sending a Page


You can start sending a page from the **Paging Zones** menu. If your system administrator has set up paging zones, you can page all extensions or a zone.

To send a page:

1. Press **Page** . If you are on a call, press **More 1/2** to view the **Page** soft key. The **Paging Zones** screen appears.

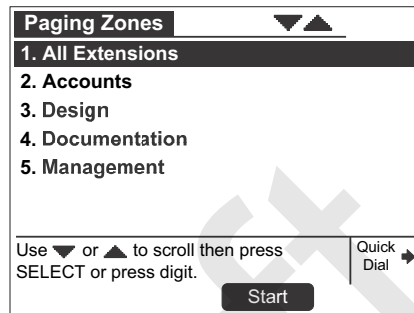

2. Highlight **All Extensions** or a paging zone.
3. Press **Start** . The system emits a short paging tone and displays the **Page** screen.

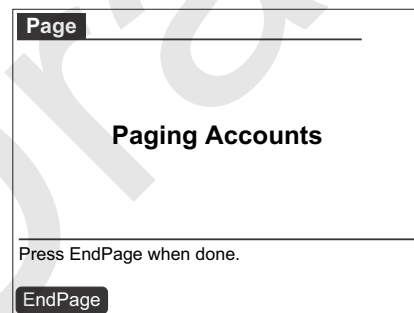

4. Speak into the speakerphone or pick up the corded handset to speak.
5. When finished, press **EndPage** , hang up the handset, or press **SPEAKER**. The Idle screen appears.

At the extensions being paged:

- Desksets involved in active calls, listening to a voicemail message, or playing or recording a name or greeting do not receive pages.
- Press the **VOL+** or **VOL-** keys to adjust the volume. This volume setting affects current and future incoming pages only.
- Lifting the handset cancels the page.



CHAPTER
10

DESKSET SETTINGS

You or your system administrator can customize your Deskset using the following menus and features:


- ["Deskset Menu" on page 85](#)
- ["Deskset Settings" on page 86](#)
- ["User Settings" on page 90](#)
- ["Setting and Changing Your Password" on page 99](#)
- ["Deskset Information" on page 101](#)
- ["Auto-Attendant Settings" on page 102](#)
- ["Using Do Not Disturb \(DND\)" on page 104.](#)




Deskset Menu

You can use the Deskset menus to set up many Deskset features. Access the menu by pressing **MENU**, and then select options by highlighting an item and pressing **SELECT**, or by pressing the dial-pad key with that option number.

To access the Deskset setup menus:

Press  (**MENU**). The Deskset **Menu** appears.

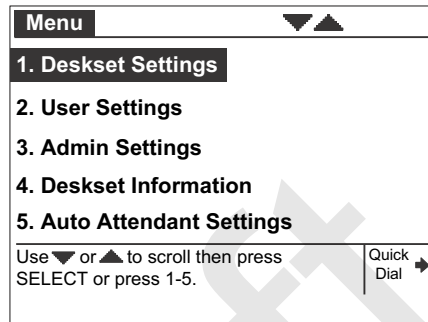


- Press **1** on the dial pad to display the **Deskset Settings** menu. See [“Deskset Settings” on page 86](#) for further instructions.
- Press **2** to display the **User Settings** menu. See [“User Settings” on page 90](#) for further instructions.
- Press **3** to display the **Admin Settings** menu. See [“Admin Settings” on page 100](#) for further instructions.
- Press **4** to display the **Deskset Information** menu. See [“Deskset Information” on page 101](#) for further instructions.
- If your system administrator has set your extension as an Auto Attendant manager, the menu has an additional item. Press **5** to change the **Auto Attendant** settings. See [“Auto-Attendant Settings” on page 102](#) for further instructions.



Deskset Settings

Use the **Deskset Settings** menu, as shown in Figure 21, to access the three functions and the related submenus listed in Table 15.

To display the Deskset Settings menu, press  (**MENU**) then **1**.

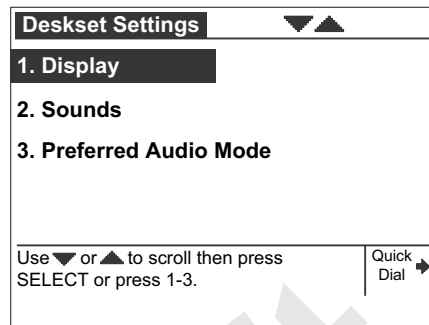


Figure 21. Deskset Settings Menu

Table 15. Deskset Settings Menu Structure


Function	See page...	Submenu
1. Display	87	1. Contrast (1–9) 2. Backlight (Lo/Hi/Off)
2. Sounds	87	1. Ring volume (0–9) 2. Ringtones (1–9) 3. Key beeps (On/Off) 4. Call Waiting Tone (On/Off)
3. Preferred Audio Mode	89	1. Speakerphone 2. Headset








Display

Use the **Display** menu to adjust your Deskset LCD contrast and backlight.

To access the Display menu:

1. Press  (**MENU**), then **1**, and then **1**. The **Display** menu appears.

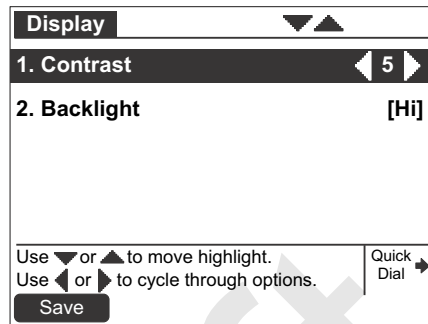


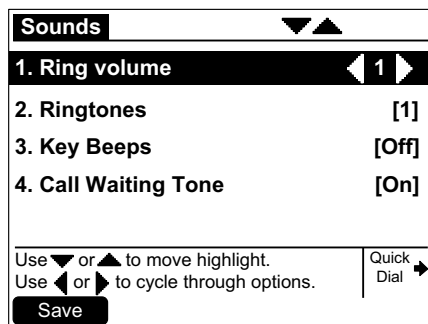
2. Press **1** to set the desired **Contrast** level.
Press  or  to adjust the level from 1 to 9. The default is 5.
3. Press **2** to set the desired **Backlight** level.
Press  or  to cycle through **Hi**, **Lo**, or **Off**. The default is **Hi**.
4. Press **Save** to accept the adjustments and return to the **Deskset Settings** menu.



Sounds

Use the **Sounds** menu to set the ring volume, delay the beginning of audible ringing, pick one of nine ringtones, or turn key beeps on and off.

To access the Sounds menu:

1. Press  (**MENU**), then **1**, and then **2**. The **Sounds** menu appears.



2. Press **1** on the dial pad to choose **Ring Volume**.
 - Press  or  to adjust the **Ring Volume** from 0 to 9. The default is 3. A ringer sample plays.
 - To turn off the ringer, decrease the volume to zero.



3. Press **2** on the dial pad to choose **Ringtones**.
Press ◀ or ▶ to select one of nine ringtones. The default is **1**. Ringtone samples play when selected.
4. Press **3** on the dial pad to choose **Key beeps**.
Press ◀ or ▶ to select **On** or **Off**. The default is **On**.
5. Press **4** on the dial pad to choose **Call Waiting Tone**.
Press ◀ or ▶ to select **On** or **Off**. The default is **On**.
The call waiting tone alerts you to an incoming call if you are already on a call. This setting does not control any call waiting alert(s) provided by your telephone service.
6. Press **Save** to accept the adjustments and return to the **Deskset Settings** menu.

Draft




Preferred Audio

When you press a Line key or **Answer**, the call is answered in the **Preferred Audio** mode. You can set the audio preferences to **Headset** or **Speakerphone** by using the **Preferred Audio** menu. Lifting the corded handset takes first priority in all instances.

To access the Preferred Audio menu:

1. Press **☰** (**MENU**), then **1**, and then **3**. The **Preferred Audio** menu appears.

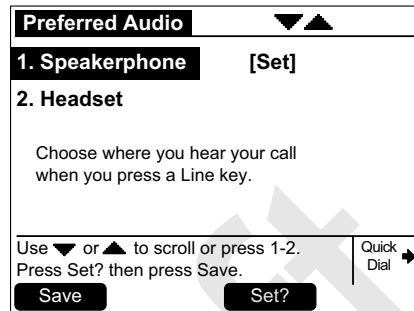

2. Select the preferred audio:
 - Press **1** to select the **Speakerphone**.
 - Press **2** to select the **Headset**.
3. Press **Set?** to set your audio preference.
4. Press **Save** to accept the adjustments and return to the Deskset Settings menu.



User Settings

Use the **User Settings** menu to modify the settings shown in Figure 22 and listed in Table 16.

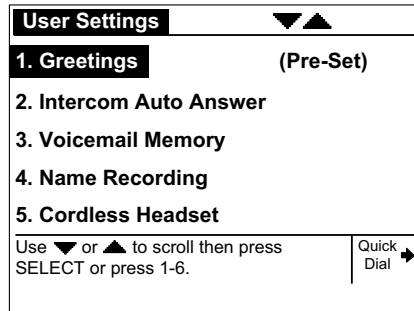


Figure 22. User Settings Menu


Table 16. Deskset Menu – User Settings

Setting	See page...
1. Greetings	65
2. Intercom Auto Answer	92
3. Voicemail Memory	93
4. Name Recording	94
5. Cordless Headset	96
6. Password	99



To display the User Settings menu:

1. Press **☰** (**MENU**) and then **2**. The **User Settings** menu appears.
2. If you have set a user password, the **User Password** screen appears before the **User Settings** menu appears.

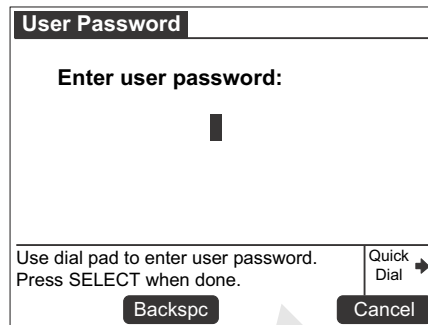

- Enter your password and press **SELECT**.
- To correct errors, use the **Backspc** key.
- To cancel your changes on that screen, press **Cancel** at any time. The Deskset will return to the previous screen.



Intercom Auto Answer

You can set the Deskset to automatically answer Intercom calls after a delay that you specify. Without touching the Deskset, you can speak to and be heard by people who call you. For example, employees in warehouses or shops may use this feature for quick conversations without having to interrupt what they are doing.



DND takes priority over Auto Answer.


NOTE

Intercom Auto Answer does not apply to outside calls that use an Intercom line after they were forwarded to your Deskset by a Phone Line Call Forward–No Answer setting.

To set Intercom Auto Answer:

1. Press **☰** (MENU), then **2**, and then **2**.

The **Intercom Auto Answer** screen appears.

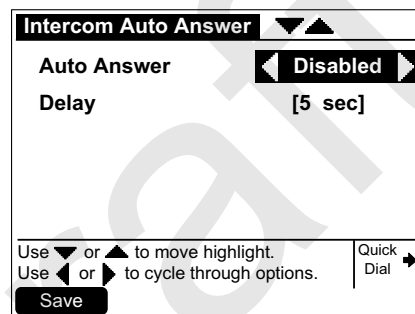

2. Press ◀ or ▶ to select either **◀ Disabled ▶** or **◀ Enabled ▶**.
3. Press ▼, and then ◀ or ▶ to select the delay before the Deskset automatically answers each Intercom call.
4. Press **Save** to confirm the change. The **User Settings** menu appears.




Voicemail Memory

Your voice messages are stored on your Deskset. You can check the amount of available memory.

To access the Voicemail Memory screen:

1. Press **☰** (MENU), then **2**, and then **3**.

The **Voicemail Memory** status screen appears.

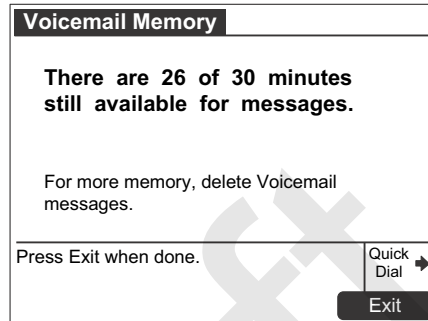

The **Voicemail Memory** screen displays the remaining minutes left for recording messages. This screen is for informational purposes only.

2. Press **Exit**. The **User Settings** menu appears.



Even when this screen says **...0 of 30 minutes still available...**, there may still be enough time to record a short message and the **VM Full** status indicator may not appear.



Name Recording


Your name recording should identify yourself to callers. If callers access the Company Directory when unanswered calls are directed to the Auto Attendant, they hear this recording upon entering your name.

To create a useful recording for incoming callers, you should say your name slowly, clearly, and at a reasonable volume. Your system administrator may also recommend that you state both your name and extension number. It is important that your recording be consistent with recordings at other extensions in the system.


To record and play a personal name:

1. Press **MENU**, then **2**, and then **4**.

The **Name Recording** menu appears.

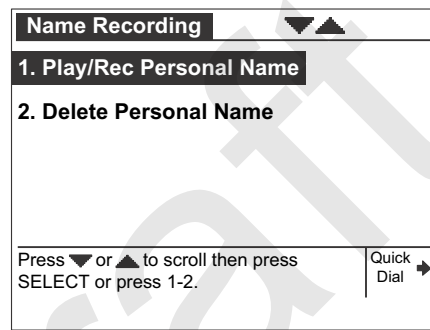

2. Press **1** to display the **Play/Rec Name** screen.

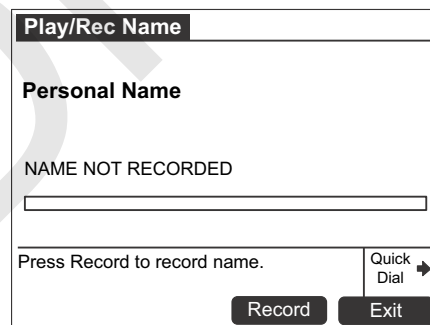

3. Press **Record** to record a personal name.



NOTE

You are limited to a 10-second recording. Recording stops automatically if the limit is exceeded.

4. When you are finished recording, press **Stop**. The screen changes to display **Play** and **Record**.



Play/Rec Name

Personal Name

Duration: 5s Max allowed: 10s

Play Record Exit Quick Dial →

5. Press **Play** to review the recorded name.
6. Press **Exit**. The **Name Recording** menu appears.

To delete a personal name:

1. From the **Name Recording** menu, press **2** to delete the personal name. A confirmation screen appears.

Name Recording

Are you sure you want to delete your recorded name?

Press Yes to delete or No to cancel.

Yes No

2. Press **Yes** to confirm.

After you delete your recorded name, the Auto Attendant will announce your extension number instead.



Registering an Optional Cordless Headset

You can register only one AT&T DECT Cordless Headset to a Deskset. When a Deskset has cordless accessories, they are all part of the same extension, and only one device can be used at a time.

To register the Cordless Headset:


1. Press **MENU**, then **2**, and then **5**.

The **Cordless Headset Registration** menu appears.



NOTE

The headset must be in the charger, otherwise registration cannot proceed.

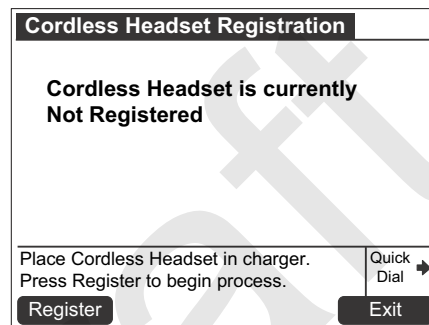

2. Remove and replace the cordless headset from its charging base.
3. Press **Register**. **Registration in Progress...** appears while the Deskset searches for the headset.
4. When registration is complete, **Cordless Headset is currently Registered** appears and the cordless headset **ON/OFF** light turns solid blue.
5. Press **Exit**. The **User Settings** menu appears.



NOTE

Registration can be terminated by pressing **CANCEL** on the Deskset.

If the cordless headset is registered to another Deskset, it must be deregistered first. See ["Deregistering a Cordless Headset" on page 97](#).




Deregistering a Cordless Headset

You must deregister cordless accessories before you can register them to different Desksets. If you remove a Deskset from the system, first deregister any cordless accessories.

To deregister a cordless accessory:


1. Press **☰** (MENU), then **2**, and then **5**.

The **Cordless Headset Registration** menu appears.

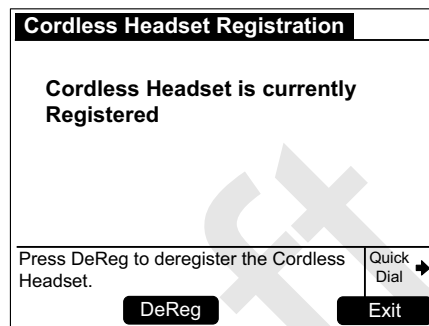

2. Press **DeReg**. The confirmation message appears.
3. Press **Yes** to confirm deregistration.

The Deskset screen then displays **Cordless Headset is currently Not Registered**.

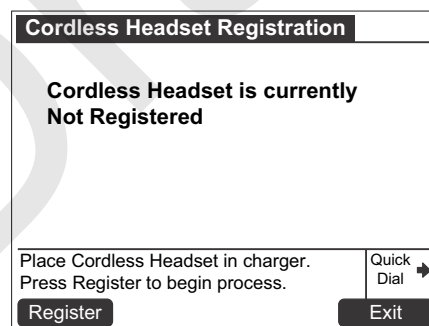

The Cordless Headset **ON/OFF** light slowly flashes.

4. Press **Exit**. The **User Settings** menu appears.



Cordless Accessory Registration and Deregistration Time-Out



If the cordless device is registered to another Deskset or telephone, it must be deregistered first. See ["Deregistering a Cordless Headset" on page 97](#).

For security reasons, the registration process on both Deskset and cordless accessory terminates after the time-out period of two minutes if registration is not successful.

If the registration process times out, the Deskset returns to the **Cordless Headset Registration** menu.

If cordless headset registration fails, the **ON/OFF** light on the headset flashes twice every five seconds. To reset the headset, remove the headset from the charger and try the registration process again, beginning with Step 1, ["To register the Cordless Headset:" on page 96](#).

Draft



Setting and Changing Your Password


Use the **Password** menu to set, change, or clear your password. This setting can also be controlled on the WebUI.

Once the password has been cleared, password entry is no longer necessary for User Settings, voicemail and the WebUI.


To set, change or clear your password:

1. Press **MENU**, then **2**, and then **6**.

The **Password** menu appears.

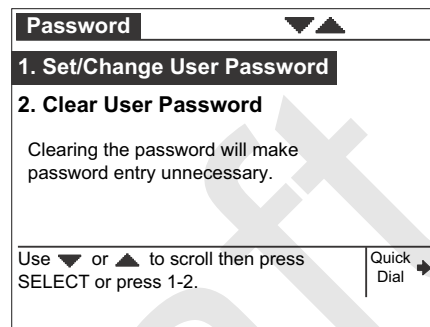

2. To set or change your password, press **1**.
 - Use the dial pad to enter a password of up to six digits.
 - To correct errors, press **Backspc**, or to start over, press **Delete**.
 - Press **▽** and enter the new password again.

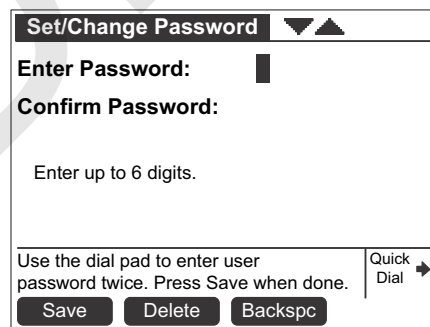

- To accept the change, press **Save**. The **Password Saved** screen appears, then the **User Settings** menu appears.
3. To clear your password, press **2**.
 - Press **Yes** to confirm that you want to clear your password. The **Password** menu appears.




Admin Settings

**NOTE**

The Admin Settings are determined by your system administrator. Only someone with access to the system administrator's password can change the Admin Settings.

To display the Admin Settings menu:

1. Press **☰** (MENU), then **3**. You then must enter the admin password before you can view the **Admin Settings** menu.

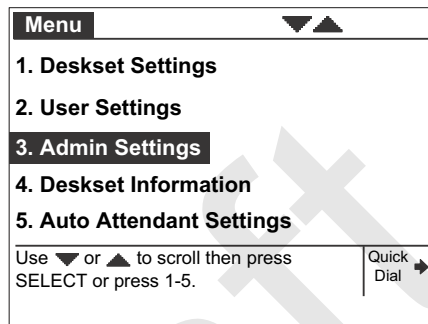

For more information on these settings, see the *Syn248 Installation and Configuration Guide*, available for download at www.smbtelephones.att.com.



Deskset Information

Use the **Deskset Information** screen, shown in Figure 23, to find the Deskset's IP Address, which you will need to access the WebUI. The other Deskset information may be used by your system administrator or the installer.

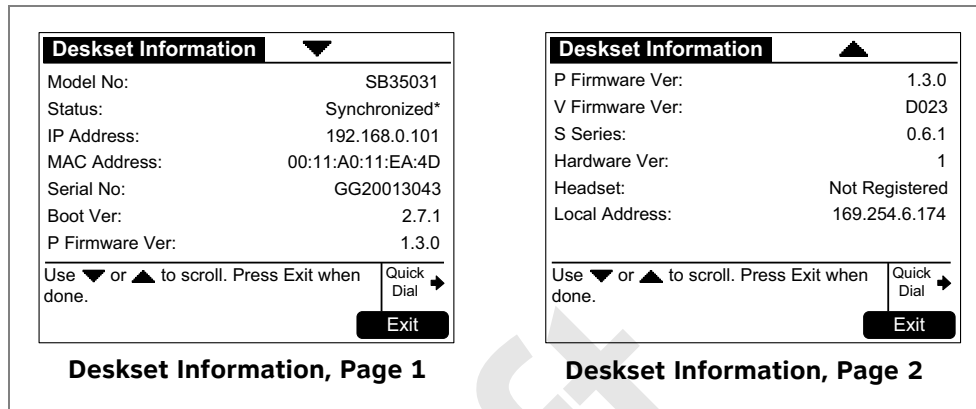


Figure 23. Deskset Information

To display Deskset Information:

1. Press **≡** (MENU) and then **4**. The **Deskset Information** screen appears.
The model number, device status, IP Address, and Firmware number are listed with other information.
2. Press **▽** to view additional information.
3. Press **Exit** to return to the main menu.




Auto-Attendant Settings


If your system administrator has set your extension as an Auto Attendant manager, you can use the Deskset to manage one or more Auto Attendants.

To manage the Auto Attendant Settings:


1. Press **≡** (MENU) to display the **Menu** with a fifth item, **Auto Attendant Settings**.

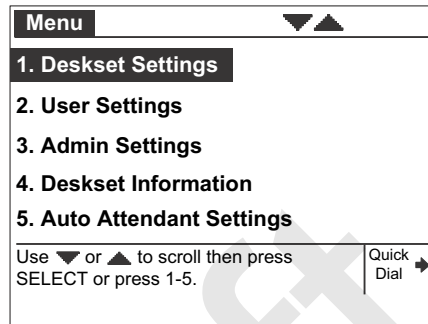

2. Press **5** to display the **Auto-Attendant Settings**. The screen displays a list of Auto Attendants that you can enable.

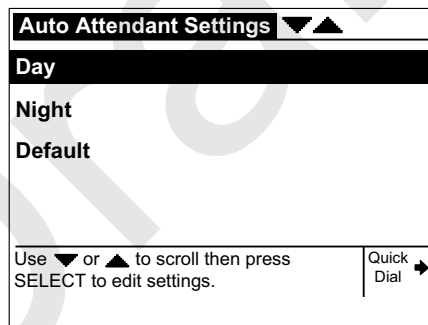

3. Highlight the name of the Auto Attendant you want to enable and press **SELECT**.
4. Press **◀** or **▶** to select **Scheduled**, **OFF**, or **Manual**.

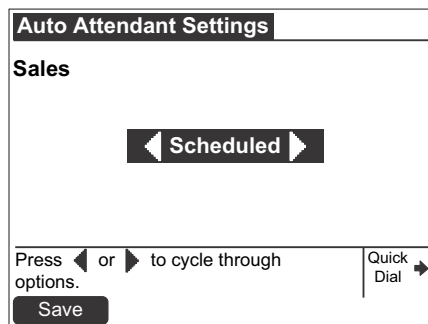

- **Scheduled:** Turns the selected Auto Attendant on. Incoming calls are forwarded to an Auto Attendant menu or destination according to the weekly schedule that the system administrator has set.



- **OFF:** Turns the Auto Attendant off. Incoming calls are forwarded to the destination that the system administrator has set.
- **Manual:** Immediately forwards incoming calls to the Auto Attendant menu that the system administrator has set. No weekly schedule applies.

**NOTE**

For these settings to come into effect, the system administrator must set the Call Forward–No Answer destination as the Auto Attendant. When the Auto Attendant is set to **Scheduled** or **Manual**, extensions may ring for incoming calls, but if the calls are not answered, they will be directed to the Auto Attendant.

5. Press **Save** to save the setting. The list of Auto Attendants appears.

Draft




Using Do Not Disturb (DND)

Do Not Disturb (DND) silences incoming ringing and paging. However, when DND is on, you can still answer incoming calls. The incoming call screen appears and the Line key LED flashes.

To enable or disable Do Not Disturb:

1. From the Idle screen, press **DND** .
DND ON appears in the top right of the Idle screen.

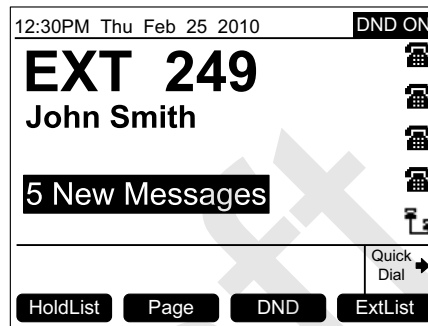

2. Press **DND** to turn DND off. **DND ON** disappears from the screen.



CHAPTER
11

WEB INTERFACE

Use an Internet browser to access the Web User Interface (WebUI) that resides on your Deskset. See [“Accessing the Web User Interface \(WebUI\)” on page 106](#). After you log in to the WebUI, you can configure the following features:


- [“Basic Settings” on page 108](#)
- [“Personal Directory” on page 109](#)
- [“Quick-Dial Keys” on page 111](#).

You can also view the Deskset Help from the WebUI. See [“Help” on page 112](#).



Accessing the Web User Interface (WebUI)

To access the WebUI:

1. Ensure that your computer is connected to the same network as the Syn248 system. In most cases, your computer will already be connected to the network through the PC port on the back of a Deskset.
2. On the Deskset, press  (MENU) then **4** to display **Deskset Information**.
3. On the **Deskset Information** screen, find the IP Address.

Deskset Information	
Model No:	SB35031
Status:	Synchronized*
IP Address:	192.168.0.101
MAC Address:	00:11:A0:11:EA:4D
Serial No:	GG20013043
Boot Ver:	2.7.1
P Firmware Ver:	1.3.0
Use ▼ or ▲ to scroll. Press Exit when done.	
	Quick Dial →
	Exit

4. On your computer, open an Internet browser.
5. Type the Deskset IP address in the browser address bar, and press **ENTER** on your computer keyboard.



6. A **Login** page appears.

Login


Login Name:

Login Name: Users should enter the extension number. Administrators should enter the Administrator ID.

Password:

Password: If there is an Extension password, the User should enter that password. If there is no Extension password, the User should leave the password field blank. Administrators should enter the administrator password.


7. Under **Login Name**, log in as a user by typing your extension number.
8. Enter your password if you have created one (see [“Setting and Changing Your Password”](#) on page 99). Otherwise, leave the password blank.
9. Click .
 - You can create or change your user password once you are logged in.
 - The **Basic Settings** page shown in [Figure 25 on page 108](#) appears.

 **CAUTION** Changing a setting does not instantly apply the new value. Clicking saves and applies all changes on that page.



Error Handling

If you type an invalid value into one of the WebUI fields and click **Apply**, the page is not saved. The WebUI displays an error message at the top of the page. The field with the incorrect value is highlighted in yellow, as shown in Figure 24. You can view a more detailed error description by resting your mouse pointer on the highlighted field.

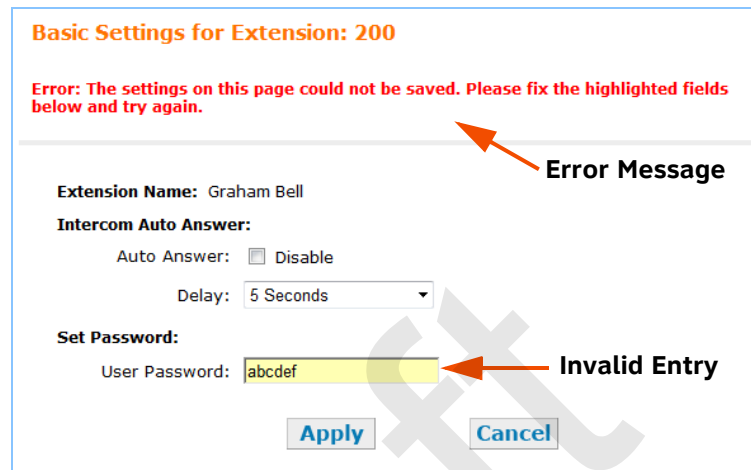

The screenshot displays a web interface titled "Basic Settings for Extension: 200". At the top, a red error message reads: "Error: The settings on this page could not be saved. Please fix the highlighted fields below and try again." Below this, the "Extension Name" is set to "Graham Bell". Under "Intercom Auto Answer", the "Auto Answer" checkbox is unchecked (labeled "Disable") and the "Delay" is set to "5 Seconds". In the "Set Password" section, the "User Password" field contains "abcdef" and is highlighted in yellow. An arrow points to this field with the label "Invalid Entry". At the bottom of the form are "Apply" and "Cancel" buttons. Another arrow points to the error message with the label "Error Message".


Figure 24. WebUI Error Indication



Basic Settings

The remaining procedures in this chapter assume that you are already logged in to the WebUI. See [“Accessing the Web User Interface \(WebUI\)” on page 106](#).

After logging in, the **Basic Settings** page appears as shown in Figure 25. Your **Extension Name**, which the system administrator enters, is displayed on internal calls.

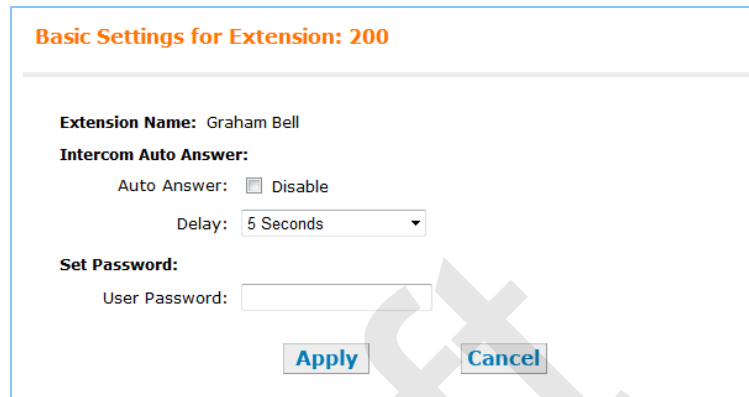

Basic Settings for Extension: 200

Extension Name: Graham Bell

Intercom Auto Answer:

Auto Answer: Disable

Delay: 5 Seconds

Set Password:

User Password:

Figure 25. Extension Basic Settings

To modify the Basic Settings:

1. If **Intercom Auto Answer** is enabled on your Deskset (see [“Intercom Auto Answer” on page 92](#)), you can:
 - a. Disable Intercom Auto Answer.



If Intercom Auto Answer is disabled from the Deskset, this setting does not appear.

- b. Set the Intercom Auto Answer **Delay** from 0 to 45 seconds. Your Deskset automatically answers Intercom calls after the delay time you select.
2. Under **User Password**, create or change your Deskset password. The password must consist of numbers only and can be up to six digits long. This password is also used for accessing Voicemail and settings on the Deskset and on the WebUI.
 3. Click to save your changes.



Personal Directory

To allow easy dialing, you can create a **Personal Directory** that is only available from your extension. You can also view and edit Personal Directory entries using the Deskset. See *"Directory" on page 53*.

To add an entry to the Personal Directory:

1. In the navigation menu at left, click **Personal Directory**. The **Directory List** page appears.

Directory List for Extension: 201

Add New Entry

Delete Selected Entries

Sort By Last Name

2. Click **Add New Entry**. The **Add Personal Directory List Entry** page appears.

Add Personal Directory List Entry

First Name:

Last Name:

Phone Number:

Apply

Cancel

3. Complete the form with the required information.
4. Click **Apply** to save. The Directory List appears with the entries added.

Directory List for Extension: 201

Add New Entry

Delete Selected Entries

Sort By Last Name

<input type="checkbox"/>	ABC Accountants	1-503-555-0194	[Edit]
<input type="checkbox"/>	Angela Martin	1-732-555-7318	[Edit]
<input type="checkbox"/>	Davis Carterer	1-317-555-0129	[Edit]
<input type="checkbox"/>	Graham Bell	1-232-555-0176	[Edit]
<input type="checkbox"/>	Mary Williams	1-888-722-7702	[Edit]
<input type="checkbox"/>	Milford Taxi	1-604-555-0182	[Edit]



To edit Personal Directory entries:

1. In the navigation menu at left, click **Personal Directory**. The **Directory List** page appears.

Directory List for Extension: 201

[Add New Entry](#)

[Delete Selected Entries](#) [Sort By Last Name](#)

<input type="checkbox"/>	ABC Accountants	1-503-555-0194	[Edit]
<input type="checkbox"/>	Angela Martin	1-732-555-7318	[Edit]
<input type="checkbox"/>	Davis Carterer	1-317-555-0129	[Edit]
<input type="checkbox"/>	Graham Bell	1-232-555-0176	[Edit]
<input type="checkbox"/>	Mary Williams	1-888-722-7702	[Edit]
<input type="checkbox"/>	Milford Taxi	1-604-555-0182	[Edit]

2. Click **[Edit]** next to the entry to be edited. The **Edit Personal Directory List Entry** page appears.

Edit Personal Directory List Entry

First Name:

Last Name:

Phone Number:

[Apply](#) [Cancel](#)

3. Complete the form with the desired information.
4. Click [Apply](#) to accept your changes or [Cancel](#) to reject the changes.

To sort and delete Personal Directory entries:

1. In the navigation menu at left, click **Personal Directory** to display the Directory List.
2. To sort entries by last name, click [Sort By Last Name](#). The button then changes to [Sort By First Name](#). This action only works during the current session. The sort order reverts to listing the names by first name when you log in the next time.
3. To delete Directory entries:
 - a. Click the check boxes for the entries you want to delete.
 - b. Click [Delete Selected Entries](#). All of the selected entries are removed.



Quick-Dial Keys


To add or edit quick-dial entries:

1. In the navigation menu at left, click **Quick Dial Keys**. The **Quick Dial Keys** page appears.

Quick Dial Keys for Extension: 201

Name	Number	
<input type="text" value="Charlie Johnson"/>	<input type="text" value="18888832445"/>	
<input type="text" value="Mary Williams"/>	<input type="text" value="18887227702"/>	
<input type="text" value="Richard"/>	<input type="text" value="13055550134"/>	
<input type="text" value="Linda"/>	<input type="text" value="17325557318"/>	
<input type="text"/>	<input type="text"/>	
<input type="text"/>	<input type="text"/>	

2. Enter names and telephone numbers or extensions in the **Name** and **Number** columns.
To edit or delete an entry, type over the entry.
3. To save the entries, click , or to reject the changes, click .
4. Press the key to the right of the **Quick Dial** label on the Deskset to verify that the entries have been added or edited.

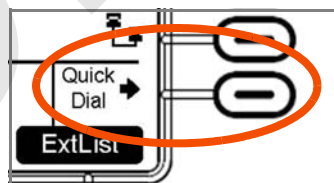


Help

To access WebUI Help:

1. In the navigation menu at left, click **Help**.

A PDF Help file opens.

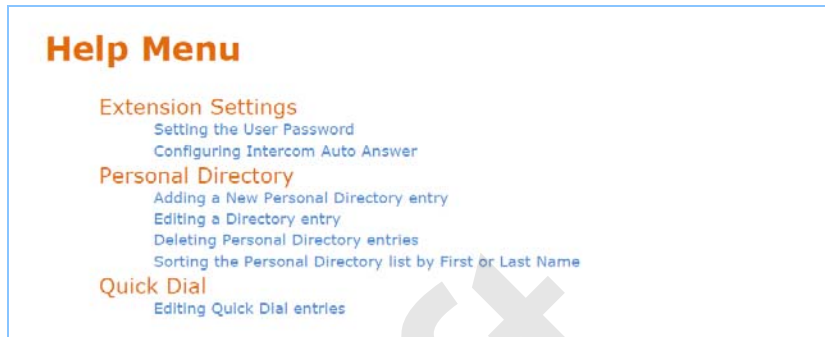

2. To view a topic, click the link for that topic. The page for that topic appears.



CHAPTER
12

TROUBLESHOOTING

If you have difficulty operating your Deskset and accessories, try the following suggestions in this section:

- ["Common Troubleshooting Procedures" on page 114](#)
- ["Display Messages" on page 116](#)
- ["Calls Generally" on page 118](#)
- ["Incoming Calls" on page 121](#)
- ["Outgoing Calls" on page 123](#)
- ["Voicemail" on page 124](#)
- ["Other Deskset Features" on page 126](#)
- ["WebUI" on page 127](#)
- ["PC/Deskset Interaction" on page 128](#)
- ["Cordless Headset" on page 129.](#)

**NOTE**

For customer service or product information, contact the person who installed your system. If your installer is unavailable, visit our web site at www.telephones.att.com/smb or call **1 (888) 386-2006**. In Canada, dial **1 (888) 469-2005**.



Common Troubleshooting Procedures

Follow these procedures to resolve common issues.


Resolving General Functional Issues


To resolve a blank screen or device that does not work at all:

- Ensure the AC plug is plugged into an electrical outlet not powered by a wall switch.
- Verify that the AC power outlet has power. Try plugging in some other AC device. If nothing works, contact an electrician or use another power outlet.
- Verify that the DC plug is plugged into the power jack on the device.
- The system devices are not immediately active when powered up and after a power interruption. Allow at least 30 seconds for the device to boot up.
- If your Deskset uses Power over Ethernet (PoE), ask your system administrator to confirm that the PoE switch is working correctly.

To resolve a sluggish, unresponsive, or unusually behaving device:

Reset the device by using a pen or paper clip to press the **RESET** button on the back of the Deskset for less than five seconds or by removing and restoring AC power.

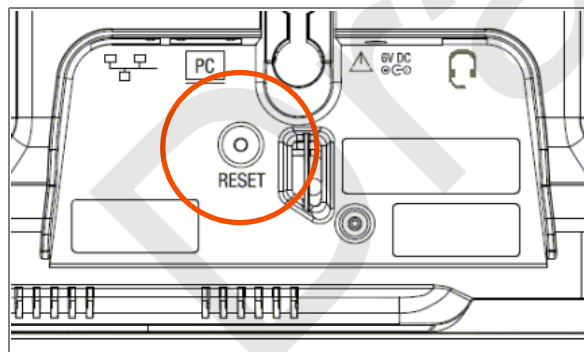

 **CAUTION** Pressing the **RESET** button for more than five seconds will erase all data and settings.



To restore a Deskset to factory defaults:

Use a pen or paper clip to press the **RESET** button on the back of the Deskset for more than five seconds.



To resolve problems with a cordless device:

For features or audio problems, make sure that the Deskset associated with the cordless device does not share the problem. If it does, look in Deskset Troubleshooting. See ["Other Deskset Features" on page 126](#).

1. Verify that the device battery has power.
 - When removed from the charger, the Cordless Headset emits a dial tone or three beeps when you press **ON/OFF**.
 -  If there is no power, see the cordless headset's user's manual.
2. Verify that the Deskset **Cordless Headset** screen indicates that the device is registered.
 - Press  (**MENU**) → **2** → **6**.
 - If the headset is not registered, register it. See ["Registering an Optional Cordless Headset" on page 96](#).

Draft



Display Messages

The screen is blank or the Deskset menu does not work.

Probable Cause	Corrective Action
There may be no power or the Deskset may need to be reset.	<ul style="list-style-type: none"> See "To resolve a blank screen or device that does not work at all:" on page 114. Reset the Deskset to factory defaults. Disconnect the LAN cable and insert a pen or paper clip into the reset hole and press for more than five seconds.

The screen displays Joining Site... for more than one minute.

Probable Cause	Corrective Action
The Gateway is failing to synchronize with a Deskset configured for a different system configuration.	<ul style="list-style-type: none"> Always disconnect the LAN cable before restoring factory defaults (by pressing the RESET button more than five seconds).

The screen displays Network Down.

Probable Cause	Corrective Action
The Ethernet cable is unplugged.	<ul style="list-style-type: none"> Ensure that one end of the Ethernet cable is plugged into the port marked LAN on the device and that the other end is plugged into your office LAN. Confirm that the Ethernet port light next to the Ethernet port is green. If it is not, unplug the cable and plug it in again.
There may be a problem with the office network.	<ul style="list-style-type: none"> Check if other network devices, such as computers, are communicating with the network. If not, then contact your IT administrator.

The screen displays Synch Failed.

Probable Cause	Corrective Action
The device synch failed when trying to connect to the system.	<ul style="list-style-type: none"> Reset the device. Insert a pen or paper clip into the reset hole and press for more than five seconds.
The maximum number of that type of device has been reached.	<ul style="list-style-type: none"> A device must be removed from the network and deleted from the system before another device can be added.



Probable Cause	Corrective Action
The same Deskset extension number already exists.	<ul style="list-style-type: none"> Disconnect the network cable and reset the Deskset to factory defaults. Insert a pen or paper clip into the reset hole and press for more than five seconds. Reconnect the Deskset.
The device software version is different than the rest of the system.	<ul style="list-style-type: none"> Ask your system administrator to update all devices to the current software version.

The device screen displays Synchronizing....

Probable Cause	Corrective Action
Not enough time has elapsed.	<ul style="list-style-type: none"> The device may display Synchronizing... for a few seconds. This is normal and does not indicate a problem.


Deskset cannot make or receive phone calls and the Deskset screen displays Synchronizing....

Probable Cause	Corrective Action
The Deskset may have an incompatible software version.	<ul style="list-style-type: none"> Ask your system administrator to update your Deskset to the current software version.





Calls Generally

Calls are dropped.

Probable Cause	Corrective Action
Restoring Deskset settings or updating software while that extension is in use will cause all calls to be dropped.	<ul style="list-style-type: none"> Your system administrator should avoid updating software or restoring Deskset settings when you are likely to be using the phone.
The network is down.	<ul style="list-style-type: none"> Ensure that the Ethernet cable is securely plugged into the Deskset network port (labeled ) and that the other end is plugged into your office LAN.
The Deskset extension was changed during the call.	<ul style="list-style-type: none"> Contact your system administrator. If changes were made to your extension while you were on a call, that call is dropped.
Maximum Call Duration was exceeded.	<ul style="list-style-type: none"> None. Outside calls that are forwarded or transferred to an outside phone number use two outside lines for the duration of the call. To avoid tying up two lines, the duration of such calls is limited by a timer that your system administrator sets.

Deskset cannot make or receive phone calls

Probable Cause	Corrective Action
Your Deskset is not synchronized.	<ul style="list-style-type: none"> Press  (MENU) → 4 to verify that the Deskset Status is Synchronized. See "Deskset cannot make or receive phone calls and the Deskset screen displays Synchronizing..." on page 117.
Your Deskset is not connected to the LAN.	<ul style="list-style-type: none"> Ensure that the Ethernet cable is securely plugged into the Deskset network port (labeled ) and that the other end is plugged into your office LAN.

On external calls, you hear an excessive echo at the Deskset.

Probable Cause	Corrective Action
The automatic Gateway line calibration did not run properly.	<ul style="list-style-type: none"> See your system administrator. There may be non-system equipment connected in parallel to the telephone line.



You hear static, sudden silences, gaps in speech, or garbled speech.

Probable Cause	Corrective Action
You may be experiencing network problems.	<ul style="list-style-type: none"> ■ Your LAN administrator should ensure the following minimum guidelines are met: <ul style="list-style-type: none"> ● A switched network topology is recommended (using standard 10/100 Ethernet switches that carry traffic at a nominal rate of 100 Mbit/s). ● The office network infrastructure should use Cat.-5 wiring. ■ Do not connect a network server PC to the PC port on the Deskset. ■ Make sure the network cable is securely plugged in. If you tug on the cable, the plug should remain inserted.

A call is forwarded or transferred to an outside telephone number and the call is disconnected.

Probable Cause	Corrective Action
"Telephone line to telephone line" call times have been restricted. Calls that are forwarded or transferred to an outside phone number use two outside lines for the duration of the call. To avoid tying up two lines, these calls are on a timer.	<ul style="list-style-type: none"> ■ Ask your system administrator to reset the Timer for Forwarded and Transferred Outside Calls.

You are unable to transfer a call to an extension.

Probable Cause	Corrective Action
The extension is unavailable.	<ul style="list-style-type: none"> ■ Check if the destination extension is disconnected from the network. ■ Ensure that the extension exists. ■ All the destination extension's lines may be busy. ■ If the party you have on hold hangs up, call back and start the transfer process again.



You are unable to transfer a call to an outside phone number.

Probable Cause	Corrective Action
Transferring to an outside phone number has been disabled for your extension, or no lines are available.	<ul style="list-style-type: none">■ Check that your system administrator has enabled transferring to an outside phone number.■ All phone lines may be in use. If so, try again later.

Unanswered Intercom calls are not automatically forwarded to an outside phone number.

Probable Cause	Corrective Action
Forwarding to an outside phone number has been disabled or the Intercom Call Forward–No Answer settings are incorrect.	<ul style="list-style-type: none">■ Ensure that a valid outside number is shown in the Intercom CFNA to Phone # field (this setting is part of the Deskset Admin Settings).■ Check that forwarding to an outside phone number has been enabled. Your system administrator must enable Fwd/Trans to line in the Deskset Admin Settings.



Incoming Calls

Your Deskset does not receive incoming calls.

Probable Cause	Corrective Action
Incoming call notifications have been suppressed or delayed, or incoming calls are redirected by the Deskset, or incoming calls are not directed to the Deskset.	<ul style="list-style-type: none"> Verify that Do Not Disturb is off. Make sure that DND ON is not in the top right corner of the Deskset display. Turn this feature off by using the Deskset Idle screen soft keys. Incoming calls on the line are being forwarded to a CFNA destination and the Seconds before Forwarding setting is 0 Seconds.

Deskset does not ring.

Probable Cause	Corrective Action
Your system administrator has set your Deskset to ignore incoming calls on selected lines. If your Deskset has one or more lines configured this way, your Deskset automatically ignores incoming calls on those lines.	<ul style="list-style-type: none"> None. Your Deskset will not ring for incoming calls on those lines, but it will display an incoming call screen. If you see the incoming call screen, you can answer the call by pressing Answer or the flashing Line key.
The ringer volume is too low.	<ul style="list-style-type: none"> Press the VOL+ key to increase ringer volume.

External caller cannot find your extension in the Auto Attendant Directory.

Probable Cause	Corrective Action
You have not recorded a Personal Name.	<ul style="list-style-type: none"> Record a name at the Deskset. See "Name Recording" on page 94.
Your system administrator has not entered your first and last name into the Extension list.	<ul style="list-style-type: none"> Consult your system administrator.
The external caller may not be waiting long enough for the search.	<ul style="list-style-type: none"> Tell callers that after spelling the name, they can press the pound (#) sign to start the search.

Deskset does not Auto Answer Intercom calls.

Probable Cause	Corrective Action
The Deskset is in DND mode.	<ul style="list-style-type: none"> Deactivate DND. On the Idle screen, press DND.



Caller ID is not working. The display shows ◀ Phone# ▶ and a digit for the name, and the same digit for the phone number.

Probable Cause	Corrective Action
Your organization does not subscribe to caller ID service or you have DSL phone lines without filters installed.	<ul style="list-style-type: none">■ Caller ID is a subscription service. You must subscribe to this service from your local telephone service provider for this feature to work on your phone.■ The caller must be calling from an area that supports caller ID.■ Both you and your caller's telephone companies must use caller ID compatible equipment.■ If you have DSL phone lines, confirm that you have a DSL filter plugged in between each Deskset and DSL wall jack. The DSL filter must be plugged into the wall jack, not the Gateway.



Outgoing Calls

No dial tone.

Probable Cause	Corrective Action
Handset cord is plugged into the wrong jack.	<ul style="list-style-type: none"> Ensure the handset cord is plugged into the handset jack on the side of the Deskset. Do not connect the handset cord to the corded headset jack on the back of the Deskset.

When you dial an outside number, you reach an extension instead.

Probable Cause	Corrective Action
You predialed a phone number with an area code that matches an extension number, then you pressed the Intercom key.	<ul style="list-style-type: none"> After predialing an outside phone number, press an available Line key to dial the number.

You cannot make calls to an outside number.

Probable Cause	Corrective Action
All outside lines may be in use.	<ul style="list-style-type: none"> If you see Phone Line Unavailable on the Deskset screen, try again later because all outside lines may be in use.

DDNs (Directory Dial Numbers) do not dial out properly from the Call Log.

Probable Cause	Corrective Action
This system does not support DDN.	<ul style="list-style-type: none"> DDNs in the Call Log are treated like all other caller ID phone numbers.



Voicemail

Voicemail is not received at the extension you called.

Probable Cause	Corrective Action
The extension's voicemail memory is full.	<ul style="list-style-type: none"> Delete messages.
Extension is unplugged.	<ul style="list-style-type: none"> Plug in the extension.

Your Deskset does not receive voicemail.

Probable Cause	Corrective Action
Calls are not being directed to voicemail.	<ul style="list-style-type: none"> Ask the system administrator to check the Phone Line Call Forward–No Answer settings or the Intercom Call Forward–No Answer settings.
Voicemail memory is full.	<ul style="list-style-type: none"> Delete messages.

Incomplete voicemail messages.

Probable Cause	Corrective Action
Recording interrupted by time-out or full memory.	<ul style="list-style-type: none"> If a caller leaves a very long message, part of it may be lost when the Deskset disconnects the call after two minutes. If an outside caller pauses for longer than six seconds, the Deskset stops recording and disconnects the call. If the Deskset's memory becomes full during a message, the Deskset stops recording and disconnects the call. If the caller's voice is very soft, the Deskset may stop recording and disconnect the call.



The system does not respond to remote voicemail commands.

Probable Cause	Corrective Action
The system cannot detect Dual-Tone Multi-Frequency (DTMF) tones, which are the signals sent when the caller presses dial-pad keys.	<ul style="list-style-type: none"><li data-bbox="776 342 1425 468">■ Confirm you have entered star, star (**) before entering your remote access code (user password). If you have no password, press star, star (**), then pound (#).<li data-bbox="776 489 1425 667">■ Confirm you are calling from a touch-tone phone. When you dial a number, you should hear tones. If you hear clicks, the phone is not a touch-tone telephone and cannot activate the answering system.<li data-bbox="776 688 1425 814">■ The answering system might not detect the star, star (**) while your announcement is playing. Try waiting until the announcement is over before entering the code.<li data-bbox="776 835 1425 907">■ There may be interference on the phone line you are using. Press the dial-pad keys firmly.




Other Deskset Features

Other Desksets do not appear in the extension list.

Probable Cause	Corrective Action
The Deskset is not connected to the same subnet as the other Desksets.	<ul style="list-style-type: none"> ■ Verify that the first two sections of the IP address (the portion before the second "dot") match the IP addresses of the other Desksets or that the subnets are set up to communicate with each other. Press ☰ (MENU) → 4 at a Deskset to find the IP address. ■ Consult your system administrator. If the other Desksets have been assigned static IP addresses, you may have to assign your Deskset a static IP address to match the other Desksets.


You are unable to add an entry to the quick-dial list.

Probable Cause	Corrective Action
All six quick-dial entries have been used.	<ul style="list-style-type: none"> ■ Edit quick-dial entries on the Deskset to write over an existing entry: <ol style="list-style-type: none"> a. Press the button to the right of . b. Press Edit List to add or edit a quick-dial entry. ■ Edit quick-dial entries on the WebUI to write over an existing entry: <ol style="list-style-type: none"> a. Log in to the WebUI and click Quick Dial Keys. b. Edit the quick-dial entries. c. Click Apply.



WebUI

Unable to access the WebUI Log-in page from my computer.

Probable Cause	Corrective Action
The computer is not connected to the same subnet (network) as the Deskset, and the subnets are not set up to communicate.	<ul style="list-style-type: none"> Verify the IP address. You must correctly enter the IP address of your Deskset into your Internet browser's address bar. At the Deskset, press ☰ (MENU) → 4 to see the IP address displayed in the third line of the information. Ensure that there is a network cable attached to the  port on the Deskset and to the LAN. If a PC at the same workstation is sharing the LAN connection, attach a network cable to your computer's Ethernet port and to the PC port on the back of the Deskset. Confirm that your computer and your Deskset are on the same subnet so that they can talk to each other. Check that the first three sections of each IP address are the same. If they are not, they may not be connected to the same subnet. Contact the installer; the subnets may not be set up to communicate.


Changes made in the WebUI are not saved.

Probable Cause	Corrective Action
Apply must be clicked on each page to confirm the changes.	<ul style="list-style-type: none"> Click Apply on each page to confirm the changes.



PC/Deskset Interaction

Internet connection or access to the local network on your computer does not work after installing the Deskset.

Probable Cause	Corrective Action
The network cables are not installed correctly.	<ul style="list-style-type: none"> Check that the network cable from the computer is plugged into the Deskset port labeled PC. A second network cable should be plugged into the port on the Deskset marked  with the other end plugged into your LAN.

Your PC is slower after connecting it to the LAN through the Deskset.

Probable Cause	Corrective Action
A computer connected through the Deskset will be limited to 100 Mbits/s.	<ul style="list-style-type: none"> Use separate network connections for the Deskset and the computer so that the computer can take advantage of the network's greater bandwidth.

Your PC, which is connected to the LAN through the Deskset, briefly loses its network connection.

Probable Cause	Corrective Action
For PCs connected to the LAN through Desksets, disruption to the Deskset operation affects the PC. For example, when the Deskset restarts (possibly due to a software upgrade) the connection to the LAN is temporarily lost.	<ul style="list-style-type: none"> If the PC is connected to the LAN through the Deskset, your system administrator should avoid updating software or restoring Deskset settings when you are using the workstation. If the PC is connected to the Deskset, and if the PC is connected to an Uninterruptible Power Supply (UPS), plug the Deskset into a UPS. Use separate network connections for the Deskset and the computer.




Cordless Headset

The headset is not responding.

Probable Cause	Corrective Action
The headset has lost connection to the Deskset.	<ol style="list-style-type: none"> 1. Disconnect the cordless headset battery. 2. Wait three minutes. 3. Install the battery again and place the cordless headset into the charger. 4. Wait for the ON/OFF light on the headset to display a blue light, indicating that the headset was able to reestablish its connection with the Deskset. Allow up to one minute for this to take place.
The headset is not registered.	<ol style="list-style-type: none"> 1. Remove and replace the headset from its charger base. 2. Register the headset at the Deskset. See "Registering an Optional Cordless Headset" on page 96.

The headset does not work at all.

Probable Cause	Corrective Action
The headset is not getting power from its battery.	<ul style="list-style-type: none"> ■ Verify that the battery is installed and charged correctly. ■ Place the headset into the accessory charger. Ensure the charger is securely plugged into an outlet not controlled by a wall switch. The headset LED will light to indicate that the headset is charging. ■ If the battery is completely depleted, it can take up to 10 minutes to charge the battery enough for the headset to work even briefly. In this case, the ON/OFF LED will remain off and you will not be able to use the device. After 10 minutes of charging, remove the headset from the charger and press ON/OFF on the headset or  (HEADSET) on the Deskset to turn on the headset. ■ Replace the headset battery.




The headset registration is not working.

Probable Cause	Corrective Action
The headset and the Deskset are not communicating with each other.	<ul style="list-style-type: none"> Confirm that you have placed the headset in the charger before you press Register on the Deskset. If registration does not start, try lifting the headset out of the charger for a few seconds before placing it back.


Poor audio quality. Speech is cutting out.

Probable Cause	Corrective Action
The headset is almost out of range or is experiencing interference.	<ul style="list-style-type: none"> You may be close to being out of range. Try moving closer to the Deskset. Other electronic products can cause interference with your headset. Try installing the Deskset far away from devices such as televisions, microwaves, or other cordless devices. If the problem persists, check audio quality on the Deskset and/or contact your system administrator.

 (HEADSET) key on Deskset does not work.

Probable Cause	Corrective Action
Headset is in the charger or powered down.	<ul style="list-style-type: none"> Confirm that the headset is out of its charger before you press HEADSET . Confirm that the headset has sufficient power. If the headset does not respond, the battery may have no charge. Charge the battery, following the instructions in the headset user's manual.

 (MUTE) key on the Deskset does not mute the headset.

Probable Cause	Corrective Action
MUTE keys on Deskset and headset operate separately.	<ul style="list-style-type: none"> None. Only the MUTE key on the headset mutes calls. The  (MUTE) key on the Deskset does not work with the headset.



No dial tone.

Probable Cause	Corrective Action
Headset cannot communicate with Deskset.	<ul style="list-style-type: none"> ■ Verify that the Deskset can make external calls. For more information, see “Outgoing Calls” on page 123 ■ You may be out of range of the Deskset; move closer. ■ At the Deskset, confirm that your headset is registered to the Deskset. See “Registering an Optional Cordless Headset” on page 96.

Batteries do not hold a charge.

Probable Cause	Corrective Action
Bad battery or bad battery connection.	<ul style="list-style-type: none"> ■ Make sure that the headset battery is installed and securely plugged into the connector. ■ Charge the battery, following the instructions in the headset user's manual. For optimum daily performance, return the cordless headset to the charger when not in use. ■ You may need a new battery. ■ Your headset might be malfunctioning. Contact the headset manufacturer.

The Deskset shows no indication that the headset is on a call.




Probable Cause	Corrective Action
The headset is registered to another Deskset. If others are using headsets in your vicinity, someone may have accidentally registered your headset to their Deskset.	<ul style="list-style-type: none"> ■ If nearby people have headsets, they may have accidentally registered your headset to one of their Desksets. <ol style="list-style-type: none"> a. Verify that a headset is registered to your Deskset. See “Registering an Optional Cordless Headset” on page 96. b. If a headset is registered, it may not be yours. Deregister your headset from the Deskset, and ask all users in the vicinity to deregister their headsets. See “Deregistering a Cordless Headset” on page 97. c. Start the registration process again, but with one user at a time registering a headset. See “Registering an Optional Cordless Headset” on page 96.



A buzzing sound on my cordless headset.

Probable Cause	Corrective Action
Noise interference.	<ul style="list-style-type: none"> ■ Move the headset at least 12 inches (30 cm) away from the Deskset. ■ Other electronic products can cause interference with your cordless headset. Try using your headset as far away from these types of electronic devices as possible: television sets, microwaves, or other cordless telephones.

Unable to deregister headset.

Probable Cause	Corrective Action
The Deskset is unavailable (powered off, out of range, or removed from the system).	<ul style="list-style-type: none"> ■ Deregister the headset at the headset. On a TL7600 model headset, press: VOL+ → MUTE → VOL- → MUTE → VOL+ → VOL- → MUTE. On a TL7800 model headset, press: VOL+ →  → VOL- →  → VOL+ → VOL- → .
You cannot identify or locate the Deskset that the headset is registered to.	<ul style="list-style-type: none"> ■ If the headset is registered to an unknown Deskset which has AC power, you must carry the headset out of range of the Deskset and perform the deregistration sequence described above. You will know when the headset is out of range when you press ON/OFF and you hear three beeps and no dial tone.



APPENDIXES

Appendix A: Deskset Soft Keys

The Syn248 Deskset features keys below the LCD screen. The bottom of the LCD displays the appropriate label for each key as the function of the key changes.

Table 17 provides an alphabetical list of the labels that appear above the Deskset soft keys.

Table 17. Deskset Soft Key Functions

Function	Description	Function	Description
Answer	Answers an incoming call.	DeReg	Deregisters cordless headset in registration menu.
Back	Goes back to Idle; in HELP menus, goes back to previous page.	Details	Shows more detail for a particular entry.
Backspc	Backspace the cursor when entering data.	DND	Turns Do Not Disturb on and off.
Call	Dials the selected entry.	Drop	Drops a selected call during a conference.
Cancel	Cancels action and returns user to previous mode.	Edit	Allows changes to previously entered information.
ClerNew	Clears NEW indications from all messages.	EndConf	Ends conference.
Conf	Initiates a conference call.	EndPage	Ends paging to all extensions.
DelAll	Deletes multiple records.	Exit	Exits the current screen and returns to the previous menu.
Delete	Deletes a record.	ExtList	Goes to the Extension list.
DelMsg	Deletes the highlighted voicemail message in the Message list.		



Table 17. Deskset Soft Key Functions (Continued)

Function	Description	Function	Description
FirstNm	Switches between first and last name sort in the Directory and Extension lists.	No	Cancels proposed action.
LastNm		Page	Initiates a page.
Flash	Initiates a hook flash.	Pause	Pauses message playback or inserts a two-second pause in a digit string.
HoldList	Displays the Calls On Hold list.	Play	Plays highlighted message from Message list.
Ignore	Silences ringer during incoming call and either goes back to previous screen or goes to next incoming call.	PlayAll	Plays all voicemail messages.
Join?	Completes conference call setup.	PlayMsg	Plays message from Call Log review.
◀ Jump	Jumps back eight seconds in playback mode.	Record	Starts recording.
Jump ▶	Jumps forward eight seconds in playback mode.	Register	Registers cordless headset.
List	Opens the sort options menu in the Directory.	Retrieve	Retrieves a held call.
MrkNew	Marks an old message as new.	Save	Saves information entered.
More 1/2	Moves to the next set of soft keys. If this key appears, there are more than four soft keys available. More 1/2 indicates page one of two. More 1/3 indicates page one of three.	Set?	Sets the selected option as the default choice.
New		Creates a new entry.	Stop
		Store	Stores number in the Personal list.
		Transfer	Initiates transfer of a call.
		Xfer?	Confirms transfer.
		Yes	Confirms proposed action.



Appendix B: Technical Specifications

Table 18 lists the technical specifications for the SB35031 Deskset.

Table 18. Technical Specifications

Feature	Specification
Frequency Control	Crystal controlled PLL synthesizer
Transmit Frequency	1921.536–1928.448 MHz
Nominal Effective Range	Maximum power allowed by FCC (Federal Communications Commission) and IC (Industry Canada). Actual operating range might vary according to environmental conditions at the time of use.
Voice Channels	5
Size	8.2" × 8.9" × 6.5" (20.8 × 22.6 × 16.5 cm) (H × W × D)
Weight	59.96 oz. (1700 g) (including adapter)
Power Requirements	5.1 V DC @ 1700 mA (AC Adapter) PoE Class 3
RJ-45 Ethernet Network Jack	(10Base-T/100Base-Tx) with auto MDI/MDIX switching
LAN Cable	Cat.-5 standard cable
Deskset Headset	Traditional corded handset jack type with 2-conductor wiring



Appendix C: Maintenance

**CAUTION**

Your system contains sophisticated electronic parts, so it must be treated with care.

Avoid Rough Treatment

Handle the unit gently. Save the original packing materials to protect your equipment if you ever need to ship it.

Avoid Water

Your unit can be damaged if it gets wet. Do not use the equipment outdoors in the rain or handle it with wet hands. Do not install the equipment near a sink, bathtub, or shower.

Electrical Storms

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, exercise caution when using electrical appliances during storms.

Cleaning Your Unit

Your unit has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap solution. Do not use excess water or cleaning solvents of any kind.



Appendix D: Important Safety Instructions



This symbol alerts you to important operating or servicing instructions in this document. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electric shock.

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury, including the following:

- Read and understand all instructions.
- Follow all warnings and instructions marked on the product.
- Unplug this product from the wall outlet before cleaning. Do not use aerosol or liquid cleaners. Use a damp cloth for cleaning.
- Do not use this product near water (for example, near a bathtub, kitchen sink, or swimming pool).
- Do not place this product on an unstable surface.
- This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company.
- Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
- Never push objects of any kind into this product through the slots in the unit because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
- To reduce the risk of electric shock, do not disassemble this product; take it to an authorized service facility. Opening or removing parts of the unit other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
- Do not overload wall outlets and extension cords.
- The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table or cabinet outlet.

Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:

- When the power supply cord or plug is damaged or frayed.
- If liquid has been spilled on the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally when following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
- If the product has been dropped and the unit has been damaged.
- If the product exhibits a distinct change in performance.



Appendix E: GPL License Information

Portions of the software associated with this product are open source, and fall within the scope of the GNU General Public License (GPL). Accordingly, those portions of code are available to the public, consistent with the requirements of the GPL, in either source code format or object code format, depending upon the nature of the code at issue. If you would like to exercise your right to receive the available code, please send a cashier's check, payable to VTech Communications, Inc., in the amount of \$15.00 (U.S.\$) to:

VTech Communications, Inc.,
9590 SW Gemini Drive, Suite 120
Beaverton OR 97008

ATTN: Information Technology Group—Syn248/Syn248 GPL code request, along with a written request for the available code. If your request does not fully comply with the foregoing requirements, VTech reserves the right to reject your request. Further, by requesting and receiving the available code, you release VTech, its affiliates, and its and their officers, directors, employees, and representatives ("VTech Parties") from any liability or responsibility relating to such code, and you acknowledge that the VTech Parties make no representations with respect to the origin, accuracy, usability, or usefulness of such code, and the VTech Parties have no responsibility to you whatsoever concerning the code, including without limitation any responsibility to provide explanation, support, upgrade, or any communication whatsoever. Your review or use of the available code is at your sole risk and responsibility.



GLOSSARY

This glossary provides definitions that apply to the Syn248 telephone system.

active call: An established telephone call that is not on hold.

analog phone: A non-Syn248 telephone that plugs directly into a normal telephone wall plug or into the Syn248 Gateway BYPASS port.

Auto Answer: You can set the Deskset to automatically answer Intercom calls after a delay that you specify. Without touching the Deskset, you can speak to and be heard by people who call you.

Auto Attendant: A system that automatically answers incoming calls and provides instructions to callers.

BYPASS port: An RJ-11 jack on the Gateway that allows for communication during power outages. Plug an analog telephone into this jack.

Call Forward–No Answer: Automatically forward unanswered calls to the Auto Attendant, voicemail, an extension, or outside phone number. The system administrator can configure a Call Forward–No Answer setting for each line connected to the Gateway, and an Intercom Call Forward–No Answer setting for your Deskset.

Cat.-5 wiring: A twisted pair data cable commonly used in offices for computer communication.

CO (Central Office): An office to which subscriber home and business lines are connected. The central office has switching equipment that can switch calls locally or to long-distance carrier phone offices.

DECT (Digital Enhanced Cordless Telecommunication): A wireless telephone technology developed specifically for cordless telephones using frequencies between 1.8 and 1.9 Gigahertz. DECT communication is resistant to interference from other electronic equipment, and has longer range and improved battery life.

default: The original product settings.

dial pad: The **0** through **9**, *****, and **#** keys on the Deskset.

direct dial: Allows callers to directly dial users' extension numbers after the Auto Attendant answers.

Directory: A list of names and phone numbers.

Display Names: The names that the system administrator enters to identify each extension number. The Auto Attendant uses these names to assist callers in forwarding calls.

DND (Do Not Disturb): A feature that suppresses audible ringing and incoming paging at the Deskset.

DND ON: An indicator in the top right corner of the Deskset display that appears when you turn on the Do Not Disturb feature.

DTMF (Dual-Tone Multi-Frequency): Telephone tones commonly known as "touch-tone".



Ethernet: A type of computer networking technology that connects devices via Local Area Networks (LANs).

Extension list: A list of names and extension numbers for the Syn248 system telephones.

extension number: The three-digit number representing each Deskset.

factory default: The original product settings.

flash memory: Reprogrammable system storage used for storing software upgrades.

FXO (Foreign Exchange Office): The Gateway telephone signaling interface between the telephone lines and the LAN.

Gateway: A network device equipped for interfacing with another network that uses different protocols.

greeting, preset: The voice message that plays to callers if the user has not recorded an outgoing message.

hard key: Any physical key on the Deskset or Gateway. Examples include  (MENU) and **1** on the Deskset; and **SELECT** and **CANCEL** on the SB35010 Gateway.

hard reset: An action that restores factory default settings.

Hold announcement: A recorded message to play while calls are on hold. It can be combined with music on hold.

hunt group: A telephone company feature that allows calls to a busy phone number to roll over to the next available line.

icon: A small picture in the display that presents status information.

Idle: The mode of a device when it is not involved in call or call setup activity.

Intercom call, internal call: A phone call made from a Syn248 system extension to another extension.

interference: Electrical signals close by that cause degraded audio performance for cordless devices.

IP address (Internet Protocol address): An individual numeric identification assigned to devices on your LAN.

key beep: When enabled, pressing a key plays a tone.

LAN (Local Area Network): A communications network that allows data devices to communicate with each other.

LCD (Liquid Crystal Display): The screen that provides instructions and feedback.

LED (Light Emitting Diode): A small light on a device that indicates status.



live dial: Dialing after the phone is off hook.

main menu, Auto Attendant: The Auto Attendant messages and actions that are available to callers before the callers take additional actions.

mute: Stops sending your voice to the other party during a phone call.

NTP (Network Time Protocol): An Internet standard protocol that assures time synchronization in a computer network.



off hook: Indicates that you are on a phone call, have lifted the corded handset, or have pressed the  (**SPEAKER**) or  (**HEADSET**) keys to answer a call or to prepare to make a call. You are off hook from the moment that you hear a dial tone to when you hang up a call.

on hook: Indicates that no Deskset is active.

operator: The extension that callers reach by dialing **0** (zero) when the Auto Attendant operator feature is enabled or that system users reach at any time by dialing **0** (zero).

outside call: A phone call between a phone not a part of your Syn248 system and an extension within your Syn248 system.

page: Broadcasts your voice to all idle extensions that do not have Do Not Disturb turned on.

paging zone: A set of extensions that can be paged as a group.

Personal Directory: A private list of names and phone numbers available to only a single extension.

POTS (Plain Old Telephone Service): Basic telephone operation. The ability to make and receive phone calls.

predial: Entering digits before going off hook to make a call.

PSTN (Public Switched Telephone Network): The world's telephone network.

Quick Dial: Provides one-touch dialing for frequently called phone numbers.

reboot: Restart a device.

Redial: Accesses the log of outgoing calls.

soft key: The Deskset features keys below the LCD screen. The bottom of the screen displays the appropriate label for each key as the function of the key changes.

switch: A network switch links electronic devices. The switch processes and routes data flexibly, allowing more data to be handled without error.

system administrator: A person to perform functions such as setting up and modifying system configurations. This system administrator can be an employee or your telephone equipment provider.

System Directory: This list of names and phone numbers is created and maintained by the system administrator. All system users can sort and view this list.

system operator: The extension that callers reach by dialing **0** (zero) when the Auto Attendant operator feature is enabled or that system users reach at any time by dialing **0** (zero).

VoIP (Voice over Internet Protocol): A transmission technology for delivery of voice communications over IP networks such as the Internet or other packet-switched networks. Other synonymous terms include IP telephony, Internet telephony, Voice Over BroadBand (VoBB), broadband telephony, and broadband phone.

WebUI (Web User Interface): A means of interacting with a product using a computer interface. Connection to the World Wide Web is not necessary.











Syn248[®]

Important Product Information

Safety Information and Limited Warranty

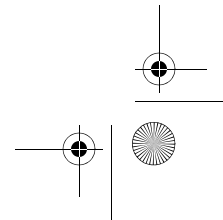

Important Product Information



This symbol alerts you to important operating or servicing instructions in this document. Always follow basic safety precautions when using this product to reduce the risk of injury, fire or electric shock.

Safety Information

- **READ AND UNDERSTAND ALL INSTRUCTIONS IN THE USER'S GUIDE.** Observe all markings on the product.
 - **AVOID USING A TELEPHONE DURING A THUNDERSTORM.** There may be a slight chance of electric shock from lightning.
 - **DO NOT USE A TELEPHONE IN THE VICINITY OF A GAS LEAK.** If you suspect a gas leak, report it immediately, but use a telephone away from the area where gas is leaking. If this product is a cordless model, make sure the base is also away from the area.
 - **DO NOT USE THIS PRODUCT NEAR WATER OR WHEN YOU ARE WET.** For example, do not use it in a wet basement or shower, or next to a swimming pool, bathtub, kitchen sink, or laundry tub. Do not use liquids or aerosol sprays for cleaning. If the product comes in contact with any liquids, unplug any line or power cord immediately. Do not plug the product back in until it has dried thoroughly.
 - **INSTALL THIS PRODUCT IN A PROTECTED LOCATION.** Protect all line and power cords from damage and abrasion and place the cords where no one can trip over them.
-

- **IF THIS PRODUCT HAS A THREE-PRONG (GROUNDING) PLUG OR A POLARIZED PLUG with one wide prong, it may not fit in non-polarized outlets.** Do not defeat the purpose of these plugs. If they do not fit in your outlet, the outlet should be replaced by an electrician.



The SB35010 Analog Gateway grounding terminal must be connected to reliable earth ground using a separate ground wire before connecting the telecommunication lines.

The connection to earth ground must be verified by qualified personnel.

Keep small metallic objects such as pins and staples away from the handset receiver.

*Use only the power adapter provided with this product. To obtain a replacement, call **1 (888) 386-2006**. In Canada, dial **1 (888) 469-2005**.*

- **IF THIS PRODUCT HAS USER-REPLACEABLE BATTERIES, REPLACE BATTERIES ONLY AS DESCRIBED IN YOUR USER'S GUIDE.** Do not burn or puncture batteries—they contain caustic chemicals.
- **IF THIS PRODUCT DOES NOT OPERATE NORMALLY, READ TROUBLESHOOTING IN THE USER'S GUIDE.** If you cannot solve the problem, or if the product is damaged, refer to "5. How do you get warranty service?" on page 15. Do not open this product except as may be directed in your user's guide. Opening the product or reassembling it incorrectly may expose you to hazardous voltages or other risks.

Especially About Corded Telephones

- **ELECTRICAL POWER:** The telephone base must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the handset if the telephone base is unplugged or if the electrical power is interrupted.
- **POWER ADAPTER:** The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

Especially About Telephone Answering Systems

- **TWO-WAY RECORDING:** This unit does not sound warning beeps to let the other party know that the call is being recorded. To ensure that you are in compliance with any federal or state regulations regarding recording a telephone call, you should start the recording process and then inform the other party that you are recording the call.

SAVE THESE INSTRUCTIONS

FCC, ACTA and IC Information

If this equipment was approved for connection to the telephone network prior to July 23, 2001, it complies with Part 68 of the Federal Communications Commission (FCC) rules. If the equipment was approved after that date, it complies with the Part 68 rules and with the Technical Requirements for Connection of Equipment to the Telephone Network adopted by the Administrative Council for Terminal Attachments (ACTA). We are required to provide you with the following information.

1. Product identifier and REN information

The label on the back or bottom of this equipment contains, among other things, an identifier indicating product approval and the Ringer Equivalence Number (REN). This information must be provided to your local telephone company upon request. For equipment approved prior to July 23, 2001, the product identifier is preceded by the phrase "FCC Reg No." and the REN is listed separately. For equipment approved after that date, the product identifier is preceded by "US" and a colon (:). The Analog Gateway has the REN encoded in the product identifier without a decimal point as the sixth and seventh characters following the colon. For example, the product identifier US:AAAEQ03T123XYZ would indicate a REN of 0.3.

The REN is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. In most, but not all areas, the sum of all RENS should be five (5.0) or less. You may want to contact your local telephone company for more information.

2. Connection and use with the nationwide telephone network

The plug and jack used to connect this equipment to the premises wiring and the telephone network must comply with the applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord with modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines, see the installation instructions in the user's guide. This equipment may not be used with coin telephone lines or with party lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure that the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable the alarm equipment, consult your telephone company or qualified installer.

Model Number	Facility Interface Code	Service Order Code	Jack Type
SB35010 Analog Gateway	N/A	N/A	RJ-11C

3. Repair instructions

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under "5. How do you get warranty service?" on page 15.

4. Rights of the telephone company

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible.

You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

5. Hearing aid compatibility

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.




6. Programming/testing of emergency numbers

If this product has memory dialing locations, you may choose to store police, fire department, and emergency medical service telephone numbers in these locations. If you do store these numbers, please keep three things in mind:

- a. We recommend that you also write the telephone number on the directory card (if applicable), so that you can still dial the emergency number manually if the memory dialing feature does not work.



-
- b. This feature is provided only as a convenience, and the manufacturer assumes no responsibility for customer reliance upon the memory feature.
 - c. Testing the emergency telephone numbers you have stored is not recommended. However, if you do make a call to an emergency number:
 - ▣ You must remain on the line and briefly explain the reason for the call before hanging up.
 - ▣ Programming/testing of emergency numbers should be performed during off-peak hours, such as in the early morning or late evening, when emergency services are usually less busy.



Part 15 of FCC Rules

Some telephone equipment generates, uses and can radiate radio frequency energy and, if not installed and used properly, may cause interference to radio and television reception. The SB35010 Analog Gateway has been tested and found to meet the standards for a Class B digital device, as specified in Part 15 of the FCC rules.

These specifications are designed to provide reasonable protection against interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

If this product causes interference to radio, VCR or television reception when it is in use, you might correct the interference with any one or all of these measures:

- Where it can be done safely, reorient the receiving radio, VCR, or television antenna.
- To the extent possible, relocate the radio, VCR, television, or other receiver to increase the separation between the equipment and the receiver.
- If this telephone product runs on AC power, plug your product into an AC outlet that's not on the same circuit as one used by your radio, VCR, or television.
- Consult a dealer or an experienced radio/TV technician for help.

Modifications to this product not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The SB35020 Deskset, SB35025 Deskset, and SB35031 Deskset have been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user is required to correct the interference at the user's expense.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended use of the product. This product has been tested and found to comply with the FCC criteria. The Deskset shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more. The handset may be safely held against the user's ear. If you choose to use a clipping device, please make sure to use only the supplied AT&T belt clip.

Industry Canada

Operation in Canada is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this telephone.

The term "IC" before the certification/registration number only signifies that the Industry Canada technical specifications have been met.

The REN for the SB35010 Analog Gateway is 0.1. The REN is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

This product meets the applicable Industry Canada technical specifications.

Ce produit est conforme aux spécifications techniques d'Industrie Canada.

SB35020 Deskset, SB35025 Deskset, and SB35031 Deskset—This Class A digital apparatus complies with Canadian requirement: CAN ICES-3 (A)/NMB-3(A).

SB35010 Analog Gateway—This Class B digital apparatus complies with Canadian requirement: CAN ICES-3 (B)/NMB-3(B).

Limited Warranty

The AT&T brand is used under license. For customer service, repair, replacement, or warranty service, and all questions about this product, contact the person who installed your system. If your installer is unavailable, visit our website at www.telephones.att.com/smb or call **1 (888) 386-2006**. In Canada, call **1 (888) 469-2005**.

1. What does this Limited Warranty cover?

The manufacturer of this AT&T-branded product warrants to the holder of a valid proof of purchase ("CONSUMER" or "you") that the product and all accessories provided in the sales package ("PRODUCT") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the PRODUCT operating instructions. This Limited Warranty extends only to the CONSUMER for products purchased and used in the United States of America and Canada.

2. What will be done if the PRODUCT is not free from defects in materials and workmanship during the Limited Warranty period ("materially defective PRODUCT")?

During the Limited Warranty period, the manufacturer's authorized service representative will repair or replace a materially defective PRODUCT at the manufacturer's option and without charge. If the manufacturer repairs the PRODUCT, they may use new or refurbished replacement






parts. If the manufacturer chooses to replace the PRODUCT, they may replace it with a new or refurbished PRODUCT of the same or similar design. The manufacturer will retain the defective parts, modules, or equipment. Repair or replacement of the PRODUCT at the manufacturer's option is your exclusive remedy. The manufacturer will return the repaired or replacement products to you in working condition. You should expect the repair or replacement to take approximately 30 days.



3. How long is the Limited Warranty period?

The Limited Warranty period for Syn248™ Products extends for TWO (2) YEARS from the date of purchase. If the manufacturer repairs or replaces a materially defective PRODUCT under the terms of this Limited Warranty, this Limited Warranty also applies to the repaired or replacement PRODUCT for a period of either (a) 90 days from the date the repaired or replacement PRODUCT is shipped to you, or (b) the time remaining on the original two-year Limited Warranty; whichever is longer.



4. What is not covered by this Limited Warranty?

This Limited Warranty does not cover:

- PRODUCT that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, fire, water or other liquid intrusion; or
- PRODUCT that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of the manufacturer; or
- PRODUCT to the extent that the problem experienced is caused by signal conditions, network reliability or cable or antenna systems; or
- PRODUCT to the extent that the problem is caused by use with non-AT&T accessories;
- PRODUCT whose warranty/quality stickers, PRODUCT serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- PRODUCT purchased, used, serviced or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to products used for rental purposes); or
- PRODUCT returned without a valid proof of purchase (see "6. What must you return with the PRODUCT to get warranty service?" on page 16); or
- Charges for installation or setup, adjustment of customer controls, and installation or repair.

5. How do you get warranty service?

To obtain warranty service, contact the person who installed your system. If your installer is unavailable, visit our website at www.telephones.att.com/smb or call **1 (888) 386-2006**. In Canada, call **1 (888) 469-2005**.



Before calling for service, please review the user's guide. A check of the PRODUCT's controls and features may save you a service call. Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the PRODUCT to the service location.

The manufacturer will return repaired or replaced PRODUCT under this Limited Warranty. Transportation, delivery or handling charges are prepaid. The manufacturer assumes no risk for damage or loss of the PRODUCT in transit. If the PRODUCT failure is not covered by this Limited Warranty, or proof of purchase does not meet the terms of this Limited Warranty, the manufacturer will notify you and request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of products not covered by this Limited Warranty.

6. What must you return with the PRODUCT to get warranty service?

You must:

1. Return the entire original package and contents, including the PRODUCT, to the service location along with a description of the malfunction or difficulty; and
2. Include a "valid proof of purchase" (sales receipt) identifying the PRODUCT purchased (PRODUCT model) and the date of purchase or receipt; and
3. Provide your name, complete and correct mailing address and telephone number.

7. Other limitations

Unless you purchase an Extended Warranty, this Limited Warranty is the complete and exclusive agreement between you and the manufacturer of this AT&T branded PRODUCT. It supersedes all other written or oral communications related to this PRODUCT. The Limited Warranty exclusively describes all of the manufacturer's responsibilities regarding the PRODUCT. There are no other express warranties. No one is authorized to make modifications to this Limited Warranty and you should not rely on any such modification.








State/Provincial Law Rights: This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.








Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the PRODUCT is fit for ordinary use), are limited to one year from date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall the manufacturer be liable for any indirect, special, incidental, consequential or similar damages (including, but not limited to lost profits or revenue, inability to use the PRODUCT or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this PRODUCT. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please retain your original sales receipt as proof of purchase.

8. Extended Warranty



At its sole discretion, Advanced American Telephones may offer an extended warranty program, which you may purchase for additional warranty protection.

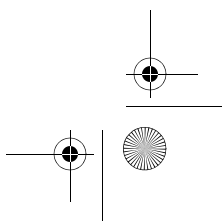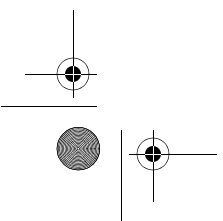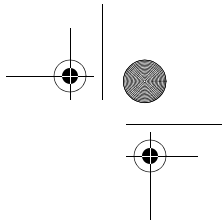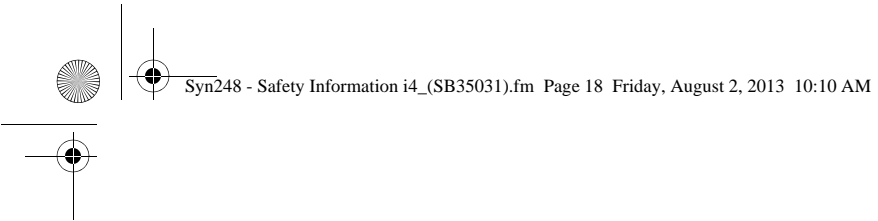

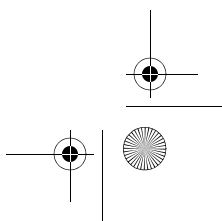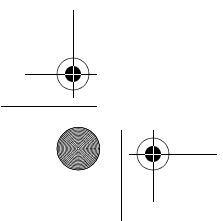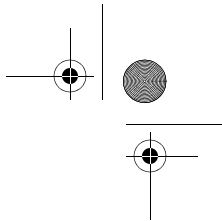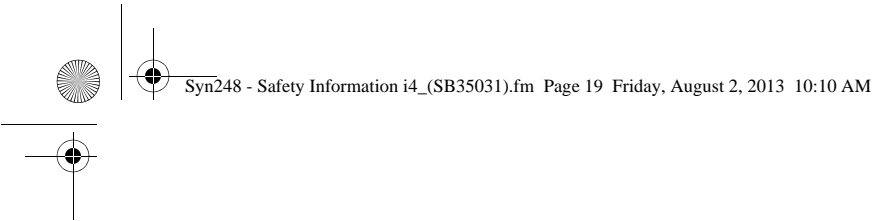



www.telephones.att.com/smb



© 2012–2013 Advanced American Telephones. All Rights Reserved.
AT&T and the AT&T logo are trademarks of AT&T Intellectual Property
licensed to Advanced American Telephones, San Antonio, TX 78219.
Syn248® is a registered trademark of Advanced American Telephones.
Printed in China Issue 4 8/13

