


DAEWOO

MICROWAVE OVEN & TOASTER

KOG-867T9

OPERATING
INSTRUCTIONS

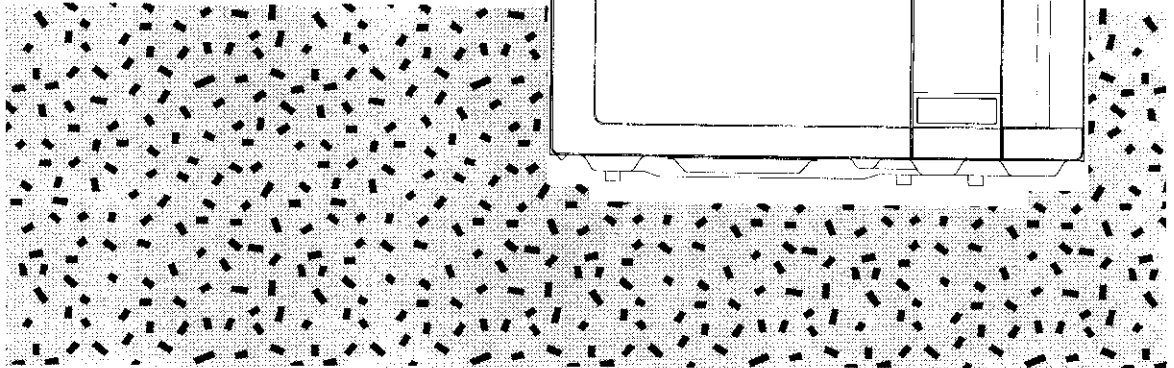

Before operating this oven, please read these instructions completely.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) **Do not attempt to operate this oven with the door open** since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) **Do not place any object** between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **WARNING** : If the door or door seals are damaged, the oven must not be operated until it has been repaired by a trained person : (1) door (bent), (2) hinges and latches(broken or loosened), (3) door seals and sealing surfaces.
- (d) **WARNING** : It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
- (e) **WARNING** : Liquids or other foods must not be heated in sealed containers since they are liable to explode.
- (f) **WARNING** : Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

TABLE OF CONTENTS

PRECAUTIONS	1
EARTHING INSTRUCTIONS	2
INSTALLATION.....	2
SPECIFICATIONS	3
IMPORTANT	3
IMPORTANT SAFETY INSTRUCTIONS.....	4
FEATURES DIAGRAM	5
OPERATION PROCEDURE.....	7
CONTROLS	8
SETTING THE CLOCK	8
TIME DEFROSTING.....	8
WEIGHT DEFROSTING	9
COOKING IN ONE STAGE	10
COOKING IN TWO STAGES	10
KITCHEN TIMER MODE	11
SPEEDY COOK.....	12
ONE TOUCH COOKING.....	12
LESS, MORE	14
CHILD SAFETY LOCK.....	14
TO STOP THE OVEN WHILE THE OVEN IS OPERATING.....	14
COOKING UTENSILS.....	15
CARE AND CLEANING	15
BEFORE YOU CALL FOR SERVICE	16
QUESTIONS AND ANSWERS	16

EARTHING INSTRUCTIONS

This appliance must be earthed. In the event of an electrical short circuit, earthing reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a earthing wire with a earthing plug. The plug must be plugged into an outlet that is properly installed and earthed.

WARNING : Improper use of the earthing plug can result in a risk of electric shock. Consult a qualified electrician or serviceman if the earthing instructions are not completely understood, or if doubt exists as to whether the appliance is properly earthed. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade earthing plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord should be equal to or greater than the electrical rating of the appliance.

INSTALLATION

1 **Steady, flat location**

This oven should be set on a steady, flat surface. This oven is designed for counter top use only.

2 **Leave space behind and side**

All air vents should be kept a clearance. If all vents are covered during operation, the oven may overheat and, eventually, oven failure.

3 **Away from radio and TV sets**

Poor television reception and radio interference may result if the oven is located close to a TV, Radio antenna, feeder and so on. Position the oven as far from them as possible.

4 **Away from heating appliance and water taps**

Keep the oven away from hot air, steam or splash when choosing a place to position it, or the insulation might be adversely affected and breakdowns occur.

5 **Power supply**

- Check your local power source. This oven requires a current of approximately 6 amperes, 230V 50Hz.
- Power supply cord is about 0.8 meters long.
- The voltage used must be the same as specified on this oven. Using a higher voltage may result in a fire or other accident causing oven damage. Using low voltage will cause slow cooking. We are not responsible for damage resulting from use of this oven with a voltage of ampere fuse other than those specified.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

6 **Examine the oven after unpacking for any damage such as:**

A misaligned door, Broken door, A dent in cavity. If any of the above are visible, DO NOT INSTALL, and notify dealer immediately.

7 **Do not operate the oven if it is colder than room temperature.**

(This may occur during delivery in cold weather.) Allow the oven to become room temperature before operating.

8 **The minimum height of free space necessary above the top surface of the oven is 100mm.**

SPECIFICATIONS

POWER SUPPLY	120V AC 60 Hz SINGLE PHASE WITH EARTHING	
MICROWAVE	POWER CONSUMPTION	MW : 1.4 KW, TOASTER : 1.0 K W
	OUTPUT POWER	1000 W
	FREQUENCY	2450 MHz
OUTSIDE DIMENSIONS (W X H X D)	583 X 301 X 376.5 mm	
CAVITY DIMENSIONS (W X H X D)	320 X 244 X 338 mm	
NET WEIGHT	APPROX. 15.7 KG	
TIMER	59 min. 99 sec.	
POWER LEVELS	10 LEVELS	

Specifications are subject to change without notice.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code.

Green-and-yellow : Earth
Blue : Neutral
Brown : Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: the wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter 'E', the earth symbol or coloured green-and-yellow. The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red.

WARNING: This appliance must be earthed.

IMPORTANT SAFETY INSTRUCTIONS

WARNING : Before using this appliance, read all instructions following.

1. Do not touch hot surfaces. Use handles or knobs.
2. To protect against electrical shock do not immerse cord, plug in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
6. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
7. Do not use outdoors.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Oversize foods or metal utensils must not be inserted in a toaster-oven as they may create a fire or risk of electric shock.
14. A fire may occur if the toaster-oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
15. Extreme caution should be exercised when using containers constructed of other than metal or glass.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
17. Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
18. Do not place any of the following materials in the oven: (List all materials - that is, paper, cardboard, plastic, and the like.
19. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
20. The manufacturer shall explain how the toaster-oven is turned of. (An off means must be provided other than unplugging the cord.



IMPORTANT SAFETY INSTRUCTIONS

WARNING : To prevent fire, burns, electric shock and other warnings:

Listed below are, as with all appliances, certain rules to follow and safeguards to assure high performance from this oven:


1. Do not use the oven for any reason other than food preparation, such as for drying clothes, paper, or any other nonfood items or for sterilizing purposes.
2. Do not use the oven when empty, this could damage the oven.
3. Do not use the oven cavity for any type of storage, such as papers, cookbook, cookware, etc.
4. Do not operate the oven without the glass tray in place. Be sure it is properly sitting on the rotating base.
5. Make sure you remove caps or lids prior to cooking when you cook food sealed in bottles.
6. Do not put foreign material between the oven surface and door. It could result in excessive leakage of microwave energy.
7. Do not use recycled paper products for cooking. They may contain impurities which could cause sparks and/or fires when used during cooking.
8. Do not pop popcorn unless popped in a microwave approved popcorn popper or unless it's commercially packaged and recommended especially for microwave ovens.
Microwave popped corn produces a lower yield than conventional popping; there will be a number of unpopped kernels. Do not use oil unless specified by the manufacturer.
9. Do not cook any food surrounded by a membrane, such as egg yolks, potatoes, chicken livers, etc., without first piercing them several times with a fork.
10. Do not pop popcorn longer than the manufacturer's directions. (popping time is generally below 3 minutes).
Longer cooking does not yield more popped corn, it can cause scorchings and fire.
Also, the cooking tray can become too hot to handle or may break.
11. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
12. When heating food in plastic or paper containers, check the oven frequently due to the possibility of ignition.
13. The contents of feeding bottles and baby food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns.
14. Always test the temperature of food or drink which has been heated in a microwave oven before you give it to somebody, especially to children or elderly people. This is important because things which have been heated in a microwave oven carry on getting hotter even though the microwave oven cooking has stopped.
15. Eggs in their shell and whole hard-boiled eggs shall not be heated in microwave ovens since they may explode.
16. Keep the waveguide cover clean at all times. Wipe the oven interior with a soft damp cloth after each use. If you leave grease or fat anywhere in the cavity it may overheat, smoke or even catch fire when next using the oven.
17. Never heat oil or fat for deep frying as you cannot control the temperature and doing so may lead to overheating and fire.
18. Microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handling the container.

FEATURES DIAGRAM

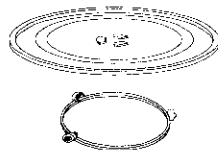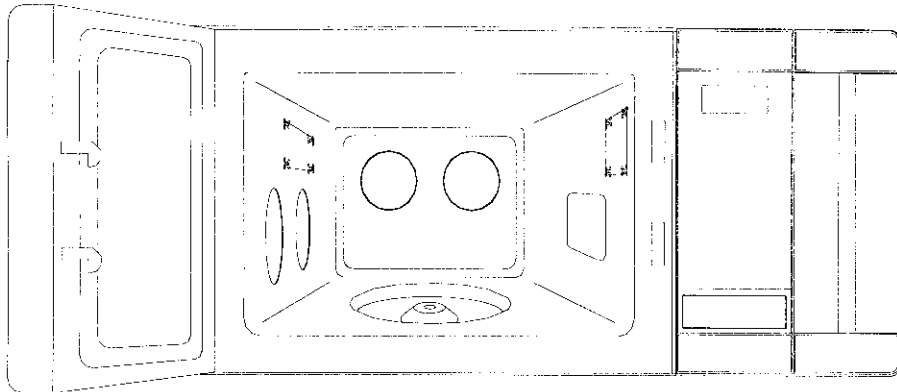

- 1. Door latch**-When the door is closed it will automatically shut off. If the door is opened while the oven is operating, the magnetron will automatically shut off.
- 2. Door seal**-The door seal maintains the microwave within the oven cavity and prevents microwave leakage.
- 3. Oven cavity**
- 4. Spatter shield**-Protects the microwave outlet from splashes of cooking foods.
- 5. Safety interlock system**-Prevents the oven from operating while the door is opened.
- 6. Door release button**-Pushing this button stops oven operation and opens the door.
- 7. Glass cooking tray**-Made of special heat resistant glass. The tray must always be in proper position before operating. Do not cook food directly on the tray.
- 8. Roller guide**-Supports the glass cooking tray.
- 9. Door screen**-Allows viewing of food. The screen is designed so that light can pass through, but not the microwaves.
- 10. Toaster-Oven**

FEATURES DIAGRAM

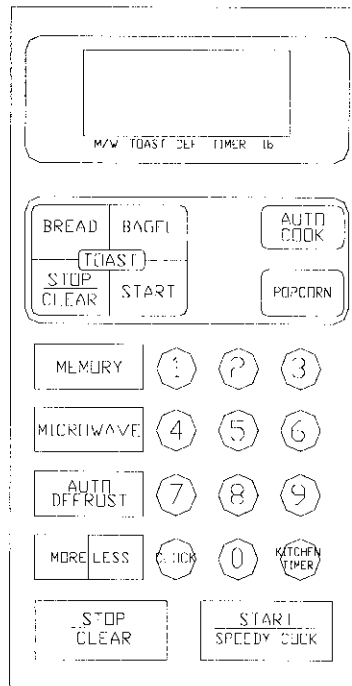

1. **Time set pad**–Used to set the cooking time and the present time.
2. **Display**–Cooking time, power level, indicators and present time are displayed.
3. **Toast Bread**–Used to bread reheat.
4. **Toast Bagel**–Used to bagel reheat.
5. **Toast Stop/Clear**–Used to stop the toast operation or to delete the toast data.
6. **Toast Start**–Used to toast start.
7. **Memory**–Used to set favorite cooking mode.
8. **One touch**–Used to cook or reheat specific quantities of food.
9. **Auto Cook**–Used to cook or reheat.
10. **More**–Used to add time to cooking.
11. **Less**–Used to remove time from cooking.
12. **Auto Defrost**–Used to select defrost menu. (for weight and time)
13. **Microwave**–Used to select microwave power level.
14. **Kitchen Timer**–Used as a minute timer, to delay the start of cooking, or to set a holding time after cooking.
15. **Clock**–Used to set clock.
16. **Stop/Clear**–Used to stop the oven operation or to delete the cooking data.
17. **Start/Speedy cook**–Used to start the oven and also used to set a reheat time.

CONTROLS

SETTING THE CLOCK

When the oven is first plugged in, the display will flash “ : 0 ” and a tone will sound.
 If the AC power ever goes off, the display shows “ : 0 ” when the power comes back on.

CLOCK

1. Touch CLOCK pad.
 This is a 12 hour clock system.

2. Touch CLOCK pad once more.
 This is a 24 hour clock system.

Note : This oven has multiple clock systems. If you want 12 hour clock system, omit this step.

3. Enter the correct time of day by touching the numbers in sequence.

4. Touch CLOCK pad. The display stops blinking, and the colon starts blinking. If you selected 12 hour clock system, this digital clock allows you to set from 1:00 to 12:59. If you selected 24 hour clock system, this digital clock allows you to set from 0:00 to 23:59.

TOAST COOKING

TOAST BREAD

1. Touch BREAD pad.

When you touch TOAST BREAD pad once, “ br-1 ” is displayed. By repeatedly touching this pad, you can select other food category as shown in the chart below.

CATEGORY	FOOD	WEIGHT	TOUCH PAD
br-1	Medium	2 ea.	Touch TOAST BREAD once
br-2	Dark	2 ea.	Touch TOAST BREAD twice
br-3	Light	2 ea.	Touch TOAST BREAD three times
: 0	Time	Max time : 2min 40sec	Touch TOAST BREAD four times

TOAST START

2. Touch TOAST START pad.

When you touch TOAST START pad, the display is changed into cooking time and the toaster starts cooking.

The TOAST indicator starts blinking and the display counts down.

**TOAST
BAGEL**

1. Touch BAGEL pad.

When you touch TOAST BAGEL pad once, " b- 0 " is displayed. By repeatedly touching this pad, you can select other food category as shown in the chart below.

CATEGORY	FOOD	WEIGHT	TOUCH PAD
b- 0	Medium	2 ea.	Touch TOAST BAGEL once
b-HI	Dark	2 ea.	Touch TOAST BAGEL twice
b-Lo	Light	2 ea.	Touch TOAST BAGEL three times

**TOAST
START**

2. Touch TOAST START pad.

When you touch TOAST START pad, the display is changed into cooking time and the toaster starts cooking.

The TOAST indicator starts blinking and the display counts down.

TO STOP THE OVEN WHILE THE TOASTER IS OPERATING

1. Press TOAST STOP/CLEAR pad.

- You can restart the oven by touching TOASTER START pad.
- Touch TOASTER STOP/CLEAR once more to erase all instructions.
- You must enter in new instructions.

2. Open the door.

- You can restart the oven by closing the door and touching START.

Note: Toaster stops operating when door is opened.

WEIGHT DEFROSTING

AUTO DEFROST lets you easily defrost food by eliminating guesswork in determining defrosting time. Follow the steps below for easy defrosting.

DEFROST

1. Touch DEFROST pad once. The DEF, lb indicator light and " DF-1 " is displayed.
2. Touch number pads for the desired defrosting time. The display will show what you touched.

Note : Your oven can be programmed for 6.5 lbs.

3. Touch START pad. MEAT DEFROSTING begins.
-

DEFROST

1. Touch DEFROST pad twice. The DEF, lb indicator light and " DF-2 " is displayed.
2. Touch number pads for the desired defrosting time. The display will show what you touched.

3. Touch START pad. POULTRY DEFROSTING begins.
-

DEFROST

1. Touch DEFROST pad three. The DEF, lb indicator light and " DF-3 " is displayed.
2. Touch number pads for the desired defrosting time. The display will show what you touched.

3. Touch START pad. FISH DEFROSTING begins.
-

TIME DEFROSTING

When DEFROST is selected, the automatic cycle divides the defrosting time into periods of alternating defrost and stand times by cycling on and off.

DEFROST

1. Touch DEFROST pad four. The DEF indicator light and " : 0 " is displayed.
2. Touch number pads for the desired defrosting time. The display will show what you touched.

Note : Your oven can be programmed for 59 minutes 99 seconds. (59 : 99)

3. Touch START pad.
-

When you touch START pad, the DEF indicator starts blinking to show the oven is in the DEF mode. The display counts down the time to show you how much defrosting time is left in the DEF mode. The oven beeps during the defrosting cycle to signal that the food needs to be turned or rearranged. When the defrosting time ends, you will hear 3 beeps.

COOKING IN ONE STAGE

MICRO
WAVE

1. Touch MICRO WAVE pad. The M/W indicator light and " P-HI " is displayed.
(Select the desired power level.)

Note : If steps 1 is omitted, the oven will cook at full power.

2. Touch number pads for the desired defrosting time. The display will show what you touched.

Note : Your oven can be programmed for 59 minutes 99 seconds. (59 : 99)

3. Touch START pad.

When you touch START pad, the M/W indicator starts blinking to show the oven is cooking. The display counts down the time to show how much cooking time is left. When the cooking time ends, you will hear 3 beeps.

NOTE: Using lower power levels increases the cooking time which is recommended for foods such as cheese, milk and slow cooking of meats.

COOKING IN TWO STAGES

All recipes require the frozen foods to be defrosted fully before cooking.

This oven can be programmed to automatically defrost foods before cooking.

DEFROST

1. Touch DEFROST pad once. The DEF. lb indicator light and " DF-1 " is displayed.
2. Touch number pads for the desired defrosting time. The display will show what you touched.

MICRO
WAVE

3. Touch MICRO WAVE pad. The M/W indicator light and " P-HI " is displayed.
(Select the desired power level.)

4. Touch number pads for the desired cooking time. The display will show what you touched.

5. Touch START pad.

When you touch START pad, the DEF and M/W indicators come on to confirm the power levels selected. The DEF indicator starts blinking to show you that the oven is in DEF mode. The display counts down the time remaining in DEF mode. When the oven beeps, turn over, break apart and/or redistribute the food. At the end of DEF mode, the oven will beep and start M/W cook. The DEF indicator goes off and the M/W indicator starts blinking. The display counts down the time remaining in M/W mode. When M/W cook ends, you will hear 3 beeps.

KITCHEN TIMER MODE

Timer operates as a minute timer, can be set to delay cooking and used to set a holding time after cooking. However delay cooking can not be programmed for defrost.

Timer operates without microwave energy.

HOW TO USE AS A MINUTE TIMER

TIMER	1. Touch TIMER pad.	The TIMER indicator lights and " : 0" is displayed.
	2. Press the amount of time you want to count down.	The display will show what you touched.
	3. Touch START pad.	

The TIMER indicator starts blinking and the display counts down the time remaining in KITCHEN TIMER mode. When KITCHEN TIMER mode ends, you will hear 3 beeps.

HOW TO USE TO DELAY THE START OF COOKING

TIMER	1. Touch TIMER pad.	The TIMER indicator lights and " : 0" is displayed.
	2. Press the amount of time you want to delay.	The display will show what you touched.
MICRO WAVE	3. Program the desired power level and cooking time for food to be cooked.	The M/W indicator lights and the selected power level & cooking time are displayed.
	4. Touch START pad.	

When you touch START pad, the TIMER indicator starts blinking and the display counts down the time remaining in KITCHEN TIMER mode. When KITCHEN TIMER mode ends, the oven will beep. The TIMER indicator goes off and M/W indicator starts blinking. The display counts down the time remaining in M/W mode. When M/W cook ends, you will hear 3 beeps.

HOW TO USE TO SET A HOLDING TIME

MICRO WAVE	1. Program the desired cooking time.	The M/W indicator lights and the selected time is displayed.
	2. Touch TIMER pad.	The TIMER indicator lights and " : 0" is displayed.
TIMER	3. Press the amount of time you want the oven to hold.	The display will show what you touched.
	4. Touch START pad.	

The M/W indicator starts blinking and the display counts down the time remaining in M/W mode. When the M/W cook ends, the oven will beep. The M/W indicator goes off and TIMER indicator starts blinking. The display counts down the time remaining in KITCHEN TIMER mode. When the KITCHEN TIMER mode ends, you will hear 3 beeps.

Note : Your oven can be programmed for 59 minutes 99 seconds. (59 : 99)

SPEEDY COOK

SPEEDY COOK allows you to reheat for 30 seconds at full power by simply touching the SPEEDY COOK pad.

By repeatedly touching the SPEEDY COOK pad, you can also extend reheating time to 5 minutes by 30 second increments.

**SPEEDY
COOK**

1. Touch SPEEDY COOK pad.

When you touch SPEEDY COOK pad, the M/W indicator light and “ :30 ” is displayed. After 1.5 seconds, the oven starts reheating.

The M/W indicator starts blinking and the display counts down.

ONE TOUCH COOKING

One touch cook allows you to cook or reheat many of your favorite foods by touching just one pad. To increase quantity, touch the chosen pad until number in display is same as the desired quantity to cook. (except for POPCORN)

POPCORN

1. Touch POPCORN pad once for 3.5 oz bag.

When you touch POPCORN pad once, the M/W indicator light and “ 3.5 ” is displayed. After 1.5 seconds, the display is changed into cooking time and the oven starts cooking.

The M/W indicator starts blinking and the display counts down.

- NOTE:
1. Use prepackaged room-temperature microwave popcorn.
 2. Place bag in oven according to manufacturer's directions.
 3. Pop only one bag at a time.
 4. After popping, open bag carefully: popcorn and steam are extremely hot.
 5. Do not reheat unpopped kernels or reuse bag.
 6. Do not leave oven unattended while popping popcorn.

CAUTION: If prepackaged popcorn is of a different weight than the recommended weight, do not use the popcorn pad. Follow the manufacturer instruction.

AUTO COOK

AUTO COOK allows you to cook or reheat many of your favorite foods by repeatedly touching auto cook pad.

**AUTO
COOK**

1. Touch AUTO COOK pad.

When you touch AUTO COOK pad once, “ AC-1 ” is displayed. By repeatedly touching this pad, you can select other food category as shown in the chart below.

CATEGORY	FOOD	WEIGHT	TOUCH PAD
AC-1	BEVERAGE	1 cup(200ml)	Touch AUTO COOK once
AC-2	BAKED POTATO	3 potatoes(7-8 oz. each)	Touch AUTO COOK twice
AC-3	FROZEN PIZZA	7 oz.	Touch AUTO COOK three times
AC-4	FRESH VEGETABLE	7 oz.	Touch AUTO COOK four times
AC-5	DINNER PLATE	12 oz.	Touch AUTO COOK five times

START

2. Touch START pad.

When you touch START pad, the display is changed into cooking time and the oven starts cooking.

The M/W indicator starts blinking and the display counts down.

MEMORY COOK

If you often cook or reheat the same types of dishes, you can store the cooking times and functions in the oven's memory, so that you do not have to reset them each time. You can store one cooking.

To use memory default data



1. Touch MEMORY pad.

The M/W & TOAST indicator lights and " 1:20 " is displayed.



2. Touch START pad.

When you touch START pad, the display is changed into cooking time and the oven starts cooking.

The M/W indicator starts blinking and the display counts down.

To set memory (microwave)

1. Set your cooking programme as usual.
(except for auto defrost, one touch cooking and auto cook function)
2. Touch MEMORY pad.
The oven will beep and " : 0 " or clock appears in the display.
Your settings are now stored in the oven's memory.

To store different settings simply repeat setting procedure.

To use memory (microwave)

1. Touch MEMORY pad.
Storing settings in the oven's memory appears in the display.
2. Touch START pad.
The oven light comes on and the turntable starts rotating.
Cooking starts and the time in the display will count down.

LESS, MORE

To alter one touch cooking or cooking time whilst oven is in operation, use LESS or MORE.
(except for defrosting)

Press LESS/MORE to decrease/increase the one touch cooking time in multiples of 10 seconds.

The overall one touch cooking time can be increased to a maximum of 59 minutes 50 seconds.

Press LESS/MORE to decrease/increase the cooking time in multiples of 1 minute.

The overall cooking time can be increased to a maximum of 59 minutes.

CHILD SAFETY LOCK

The safety lock prevents unwanted oven operation such as by small children.

To set, press and hold STOP/CLEAR for 3 seconds, a beep sounds and LOCK indicator lights.

To cancel, press and hold STOP/CLEAR for 3 seconds, a beep sounds and LOCK indicator goes off.

TO STOP THE OVEN WHILE THE OVEN IS OPERATING

1. Press STOP/CLEAR pad.

*f*You can restart the oven by touching START pad.

*f*Touch STOP/CLEAR once more to erase all instructions.

*f*You must enter in new instructions.

2. Open the door.

*f*You can restart the oven by closing the door and touching START.

NOTE: Oven stops operating when door is opened.

COOKING UTENSILS

Utensils should be checked to ensure that they are suitable for use in microwave ovens.

Microwave energy is produced by high frequency radio waves. They are reflected from metal, but will pass through most cooking utensils without heating them.

As the waves come into contact with the food, they are converted into heat energy. Listed below are the suggested cooking utensils for this microwave oven and when to use them.

1. Dishes with metal trim of any type-should not be used. This will cause sparking.
2. Glass or ceramic heat proof dishes-excellent for microwave cooking.
3. China dishes and plates-without metal trim may be used to cook and heat individual portions of food.
4. Wood or straw-use only for short period, wood contains some moisture and the microwave energy may cause the wood to dry out and crack.
5. Aluminum foil-may be used in very small pieces for shielding only.
Any aluminum foil used should never be closer than 2.5cm from side walls of oven.
6. Plastic-most heat resistant plastic dinnerware may be used for heating food. However polyethylene, melamine, phenol are unsuitable for use in the oven. They become hot in the microwave.
7. Wax paper-use as a cover to avoid spatters.
8. Metal-in general, metal utensils should not be used in microwave oven.

CARE AND CLEANING

Although your oven is provided with safety features, it is important to observe the following:

1. It is important not to defeat or tamper with safety interlocks.
2. Do not place any object between the oven front face and the door or allow residue to accumulate on sealing surfaces. Wipe the sealing area frequently with a mild detergent, rinse and dry. Never use abrasive powders or pads.
3. When opened, the door must not be subjected to strain, for example, a child hanging on an opened door or any load could cause the oven to fall forward to cause injury and also damage to the door. Do not operate the oven if it is damaged, until it has been repaired by a trained service technician. It is particularly important that the oven closes properly and that there is no damage to the:
 - i) Door(bent)
 - ii) Hinges and Hookes(broken or loosened)
 - iii) Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except a properly trained service technician.

BEFORE YOU CALL FOR SERVICE

Refer to the following checklist, you may prevent an unnecessary service call.

f **Q** The oven doesn't work;

1. Check that the power cord is securely plugged in.
2. Check that the door is firmly closed.
3. Check that the cooking time is set.
4. Check for a blown circuit fuse or tripped main circuit breaker in your house.

f **Q** Sparking in the cavity;

1. Check utensils. Metal containers or dishes with metal trim should not be used.
2. Check that metal skewers or foil does not touch the interior walls.

If there is still a problem, contact the service station.

A list of these stations is included in the oven.

DO NOT ATTEMPT TO SERVICE THE OVEN YOURSELF !

QUESTIONS AND ANSWERS

f **Q** : I accidentally ran my microwave oven without any food in it. Is it damaged?

A : Running the oven empty for a short time will not damage the oven. However, it is not recommended.

f **Q** : Can the oven be used with the glass tray or roller guide removed?

A : No. Both the glass tray and roller guide must always be used in the oven before cooking.

f **Q** : Can I open the door when the oven is operating?

A : The door can be opened anytime during the cooking operation. Then microwave energy will be instantly switched off and the time setting will maintain until the door is closed and START is touched.

f **Q** : Why do I have moisture in my microwave oven after cooking?

A : The moisture on the side of your microwave oven is normal. It is caused by steam from cooking food hitting the cool oven surface.

f **Q** : Dose microwave energy pass through the viewing screen in the door?

A : No. The metal screen bounces back the energy to the oven cavity. The holes are made to allow light to pass through. They do not let microwave energy pass through.