

# USER MANUAL



### NOTE:

For Spanish users, please go to "Control Panel", then go to "Clock, Language, and Region", then go to "Language" to change from English to Spanish Language OSD.

## Laptop

To assure the product to work in best status please read the guide carefully before operation and keep it well for future use

Thank you for purchasing iView products, for more information or to purchase new products, visit us on **[WWW.IVIEWUS.COM](http://WWW.IVIEWUS.COM)**



### Laptop with Touch - 360° Rotation

- ★ MEGATRON II (14.1" Intel Quad Core, Windows 10, 360° Rotation)
- ★ MEGATRON (14.1" Intel Quad Core, Windows 10, 360° Rotation)
- ★ ULTIMA (13.3" Intel Quad Core, Windows 10, 360° Rotation)
- ★ MAXIMUS III (11.6" Intel Quad Core, Windows 10, 360° Rotation)
- ★ MAXIMUS II (11.6" Intel Quad Core, Windows 10, 360° Rotation)
- ★ MAXIMUS (11.6" Intel Quad Core, Windows 10, 360° Rotation)



### Intel Windows Laptop

- ★ 1410NB (14.1" Intel Quad Core, BT, Windows 10)
- ★ 1330NB (13.3" Intel Quad Core, BT, Windows 10)



### Detachable Touch 2 in 1 Laptop

- ★ MAGNUS Plus (10.1" Intel Quad Core, Windows 10)
- ★ MAGNUSII (10.1" Intel Quad Core, Windows 10)
- ★ i1040QW (10.1" Intel Quad Core, Windows 10)
- ★ i896QW (8.95" Intel Quad Core, Windows 10)



### Windows Tablet

- ★ i895QW (8.95" Intel Quad Core, Windows 10, BT Keyboard Case)
- ★ OPTIMUS (8" Intel Quad Core, Windows 10)



### Intel Android Tablet

- ★ i708Q (7" Intel Quad Core, BT)



### Android Tablet

- ★ 1170TPC (10.1" Quad Core, BT)
- ★ 1070TPC (10.1" Quad Core, BT)
- ★ 1066TPC (10.1" Quad Core, BT, BT Keyboard Case)
- ★ 1060TPC (10.1" Quad Core, BT)
- ★ 930TPC (9" Quad Core, BT)
- ★ 766TPC-K (7" Quad Core, BT, BT Keyboard Case)
- ★ 744TPC Plus (7" Quad Core, BT)
- ★ 733TPC-K (7" Quad Core, USB Keyboard Case)
- ★ 733TPC (7" Quad Core)
- ★ 730TPC (7" Quad Core, BT)



### Smart Phone / Tablet with 3G / 4G

- ★ X7 (7" Quad Core with Phone, BT, GPS, 4G)
- ★ M7 (7" Quad Core with Phone, BT, GPS, 3G)
- ★ M6 (6" Quad Core with Phone, BT, GPS, 3G)



## Wearable

- ★ S5 (Smart Wrist)



## Converter Box

- ★ 3500STBII (Converter Box)
- ★ 3200STB (Converter Box)
- ★ 3200STB-A (Converter Box, with External Antenna)
- ★ 3100STB (Converter Box)



## The Smallest PC

- ★ CYBER PC Pro (Intel Quad Core, BT, Windows 10)
- ★ CYBER PC (Intel Quad Core, BT, Windows 10)

## New Product



- ★ Smart Speaker - Genie




- ★ Smart Bulb



- ★ Smart Vacuum



- ★ ATSC Receiver - Air Stick



- ★ Popup Zoo

---

The new 14.1" MEGATRON II from iVIEW is the next-generation convertible laptop with Windows 10. The MEGATRON II features a 14.1" IPS High Resolution Screen (1920 x 1080) and boasts an Intel<sup>®</sup> Atom<sup>™</sup> Processor Z8350 (Quad Core) CPU. The screen can easily be rotated to be used as a laptop or tablet. Have access to the web, news, or local business information. Access the Windows Store to download your favorite apps, games, movies, music, and more! With a built-in Bluetooth function you can seamlessly pair your MEGATRON II laptop with Bluetooth compatible devices. Store all your important documents, pictures, and movies in the laptop's 32 GB memory. The storage can also be expanded to up to 160 GB using the Micro Card Reader slot. The MEGATRON II is the answer for a full-featured all-in-one tablet.

## Notes

- \* This is a high-density electronic product; please do not dismantle it by yourself.
- \* Avoid strong beat and collision.
- \* Avoid using this product in the following environments: High and low temperature, humidity, dusty, with strong magnetic and long-term exposure to the sun.
- \* Wipe the product shell by using dry wet cotton cloth gently; the use of other chemical cleaning is prohibited. This product should keep away from water drop and water splash, so cups filled with liquids should not be placed near the product.
- \* Use the headset long time, high volume may cause permanent damage to hearing.
- \* Do not use headphones when going across a road, driving a motorcycle or bicycle, in order to avoid traffic accidents.
- \* Please use permitted battery, charger and accessories only, the use of any other type of product would be a breach of warranty regulations, and may be dangerous.
- \* Please deal with waste machinery and accessories according to local environmental regulations.
- \* If you have any questions in the process of using of the product, please contact the local dealer or contact Wiltronics customer service center directly.
- \* For any file loss caused by product damage, repair or other causes of product damage, Wiltronic shall not be responsible for it. Please follow the user's guide and timely backup your files.

---

## **FCC Caution**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2AAWC-MEGATRONII


---

# Content

1. Appearance and Button.....	2
2. Introduction to Desktop.....	3
2.1 Windows start menu .....	3
2.2 Image slide applications.....	3
2.3 Introduction to app Interface .....	5
2.4 Action center.....	6
2.5 Running programme.....	7
2.5 Dual-Screen application.....	7
3. Basic Operations.....	8
3.1 Sleep, restart and shut down.....	8
3.2 Recovery.....	8
3.3 Bluetooth.....	9
3.4 Security management.....	9
4. Features.....	10
5. Accessories.....	10

# 1. Appearance and Button


All view ID:

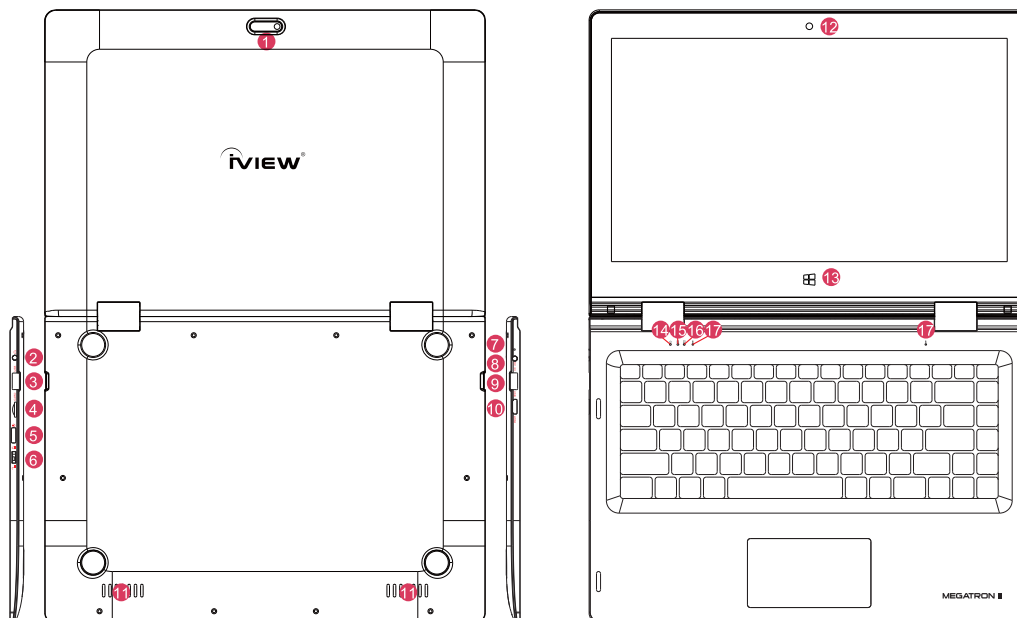

- ❶ Back Camera: Take photos, and record pictures.
- ❷ Earphone Jack: 3.5mm standard earphone jack can transmit the audio signals of laptop to earphone.
- ❸ USB 2.0 Jack: Connect the external USB device.
- ❹ Micro SD Card Slot: The built-in storage card reader slot supports Micro SD and Micro SDHC format.
- ❺ Power Button: Press it down to start or close the touch screen panel. You can also let the computer enter dormancy through this button or wake from the dormancy mode.
- ❻ Keyboard Lock and Unlock: Turn on or turn off the keyboard.
- ❼ Charging Indicator
- ❽ DC Jack: Connect the adapter for charging.
- ❾ USB 3.0 Jack: Connect the external USB device.
- ❿ HDMI: HDMI video output.
- ⓫ Loudspeaker: The built-in loudspeaker enables you to hear the sound without having to link additional device.
- ⓬ Front Camera: Take photos, and record pictures.
- ⓭ Home Button
- ⓮ Power Indicator
- ⓯ Caps Lock Indicator
- ⓰ Number Lock Indicator
- ⓱ MIC: Microphone



## 2. Introduction to Desktop

**2.1 Windows Start Menu: Press Win on the keyboard or click  on the screen, you can see the Start Menu. These application programs are displayed in the form of “magnet” and list. As long as you click them, you can easily visit them.**

You need to log on your Microsoft account before the application program completely runs.



## 2.2 Image slide applications

Slide to right



Slide to the right from the left side of the screen to start the application program in running.

Slide to left



Slide to the left from the right side of the screen to start Charm menu column.



Reduce



On the touch screen, narrow two fingers to reduce the image.

Enlarge



On the touch screen, widen two fingers to enlarge the image.

Slide downward



In start screen, slide from the top of the screen to view all application programs.

Slide with finger



In start screen, slide finger right and left to move the image.


Slide upward




In the start screen, slide upward from the bottom of the screen to visit all application program (APPS) interfaces.



## 2.3 Introduction to app Interface

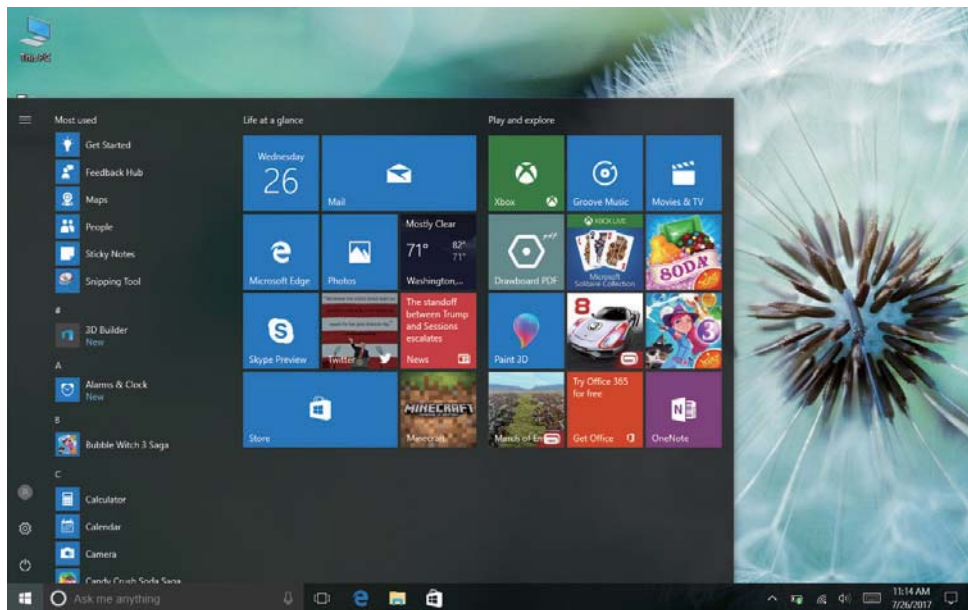
In addition to the application programs already pinned on the start menu, you can check the other application list via “Win” - “All apps”, such as other software application programs in the Laptop.

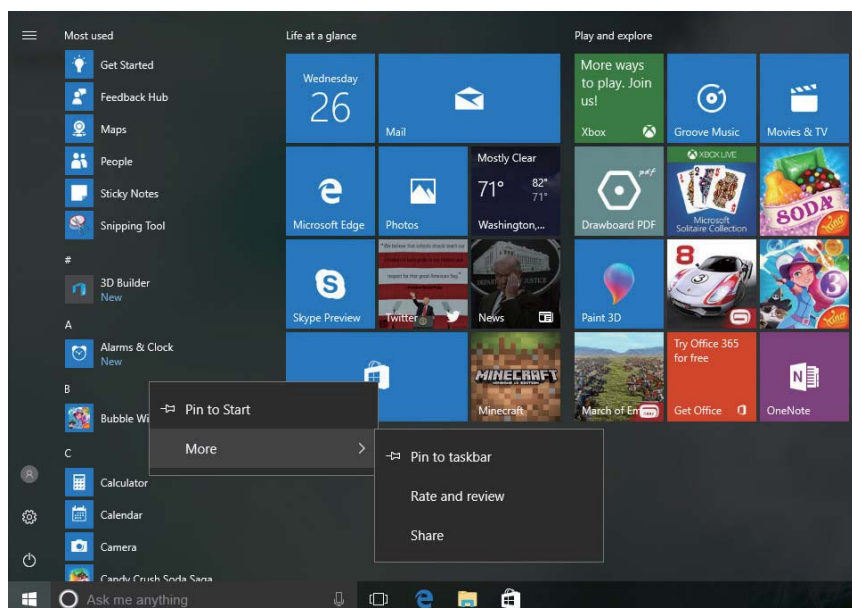


If you want to pin more application programs on the start interface, press and hold the application program for about one second, and release the magnet till the pop-up option appears, and select “Pin to Start” to fix to the start screen, or, just press and move to the start screen.




Conversely, if you want to cancel or delete a certain application in the start screen, press and hold the application program magnet for about one second, click , you can also click  to check more menu, such as resize the magnet you want.

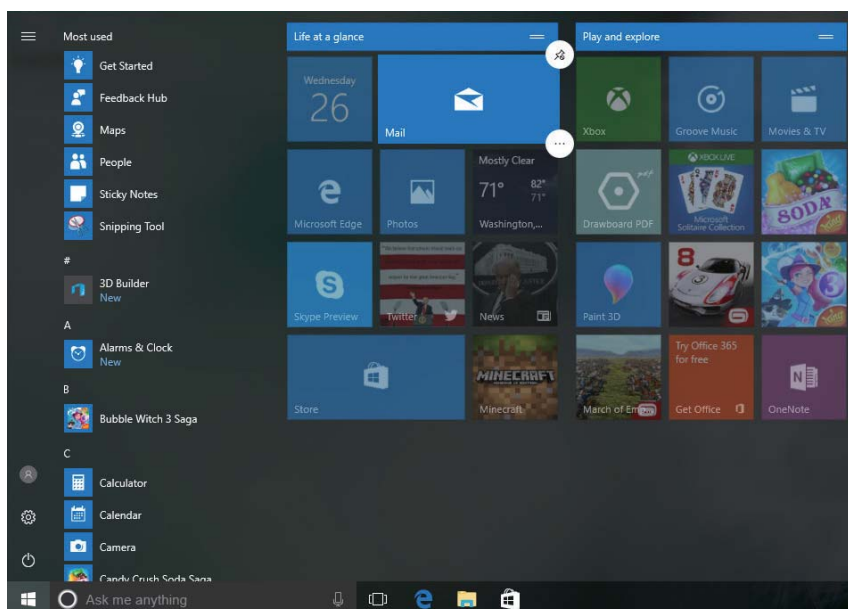


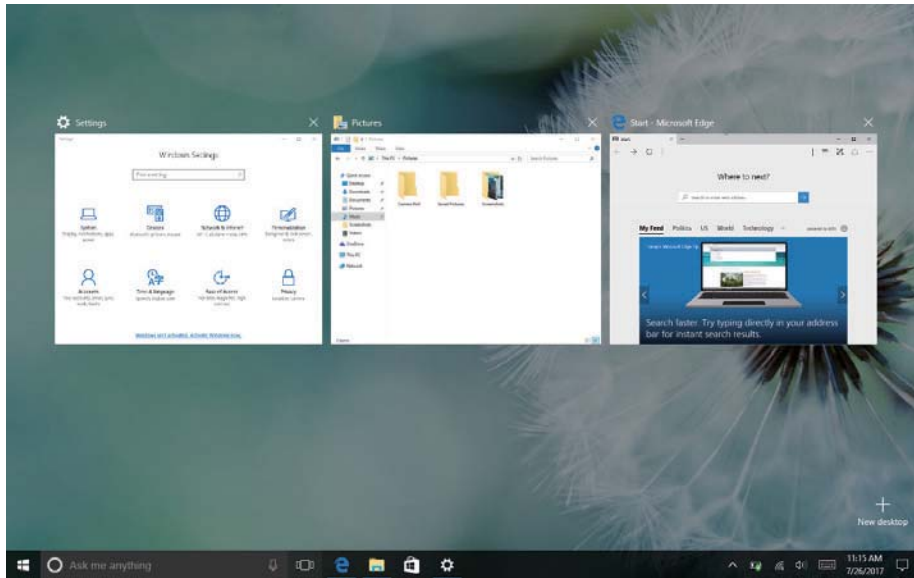
## 2.4 Action center

Tap the icon  on the taskbar to start Action Center to check the laptop status: Rotation lock, Bluetooth, Brightness, etc.

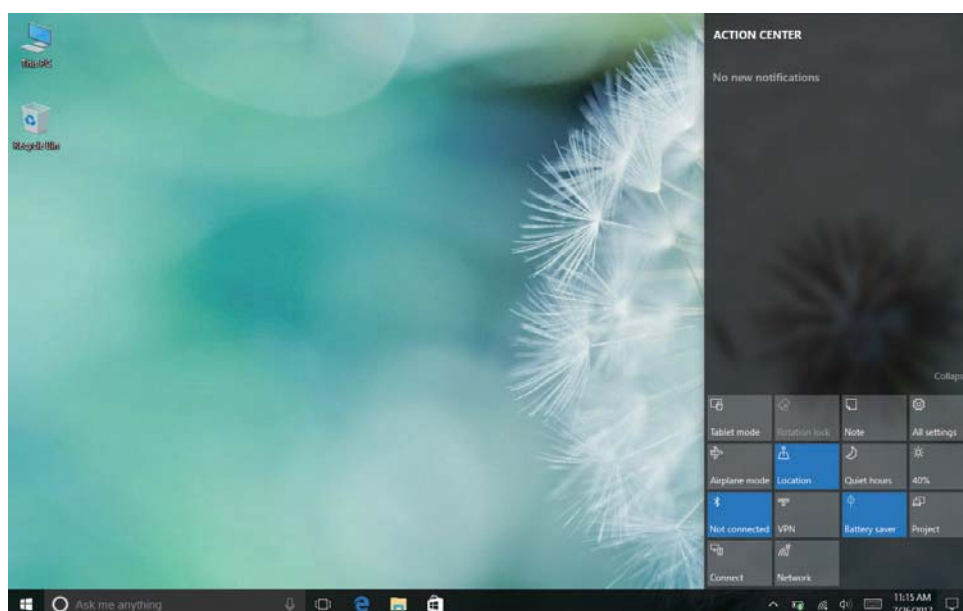


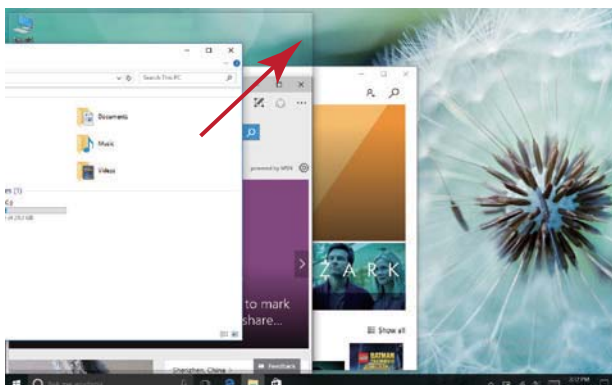
## 2.5 Running programme

Slide it to the right from the left side of the screen to scan the running program, and you can close it via click .




## 2.6 Dual-Screen application

In laptop mode, tap on the title bar of application window, slide it outward to the left or right side of the screen, drag it and hold. Let it go when seeing transparent interfaces appear (Figure 1). If drag to the corner, the application window will show as quarter of the screen. Other application windows will show (Figure 2), and tap which you want to show on the screen. In tablet mode, tap the icon  on taskbar, and drag the application window to the side will make it. Tap the partition button on the middle partition line and drag right and left to partition the display proportion of the double screens.



(Figure 1)

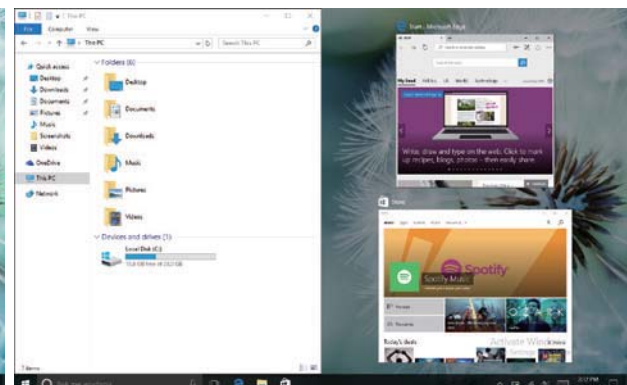


(Figure 2)



## 3. Basic Operations




### 3.1 Sleep, restart and shut down

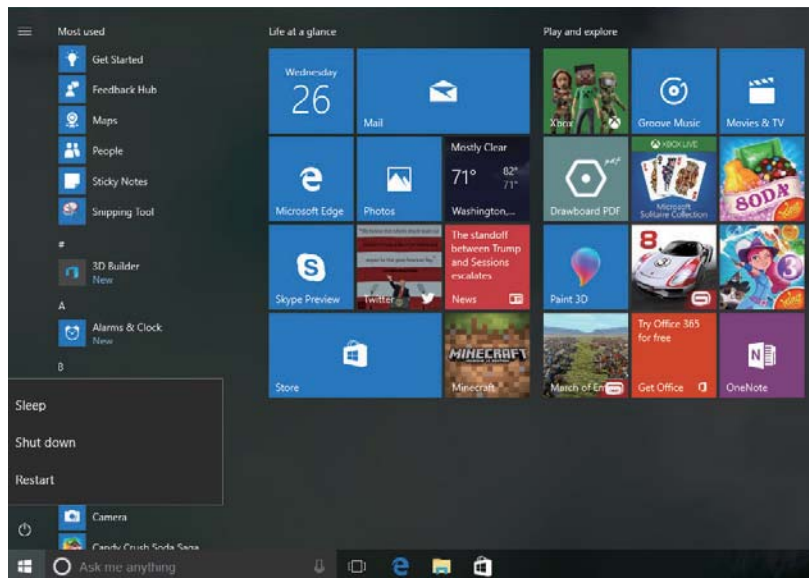

- **Reset / Shutdown forcibly**

If the tablet freezes, you can press and hold the Power button for 8~12 seconds, then the tablet will shutdown.

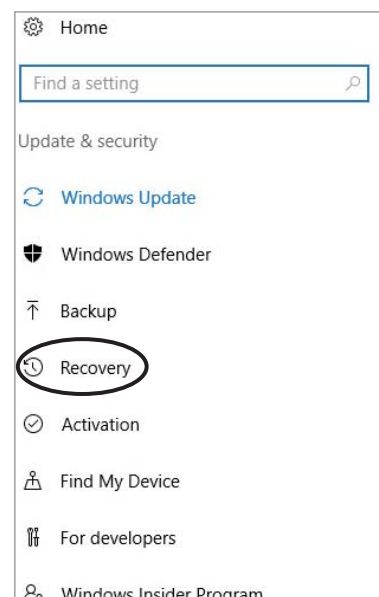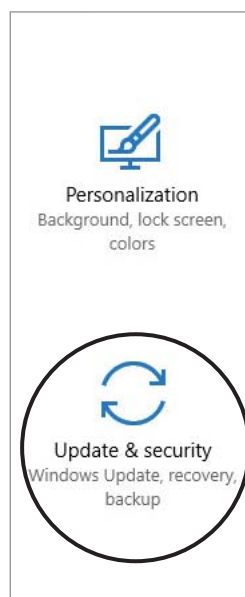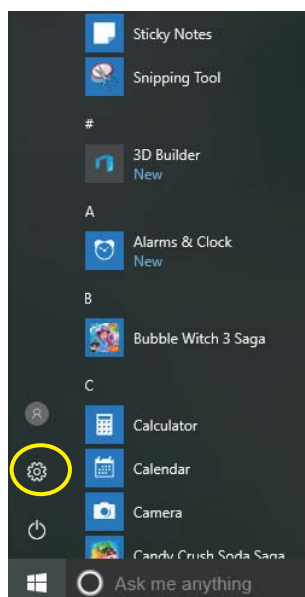

### 3.2 Recovery





### 3.3 Bluetooth


a) Turn on Bluetooth: Start Menu - Settings - Devices - Bluetooth.

After turn on bluetooth, the tablet will auto-search other device, and you can pair with your device.

b) Send a File: Before sending the files, you should open the window "Select where to send your files": Click  at lower right corner of desktop -  - Send a File.

c) Receive a File: Before receiving the files, you should open the window "Waiting for a connection": Click  at lower right corner of desktop -  - Receive a File.

### 3.4 Security management

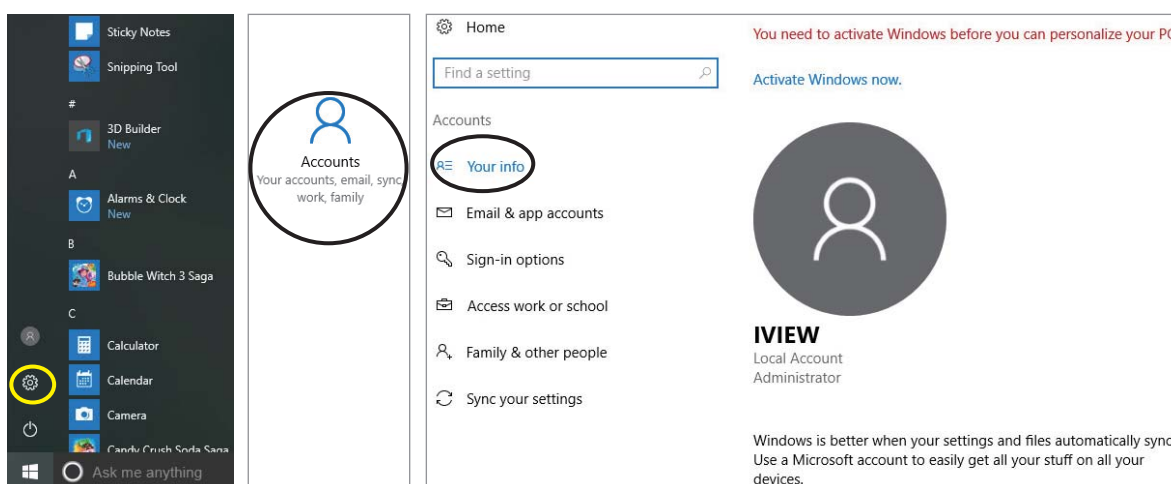

Method for quick setup:

Click the "Win" button in the lower left corner of screen, and select "Settings".

Select "Accounts" on the right and click "Create local account" in "Your account" on the right side. After inputting the password of Complete Windows Live Id Account, input username, password, confirm password and password prompt.

---

## 4. Features

---

- \* Screen: 14.1" 360° Touch Screen, 1920 x 1080 IPS High Resolution
- \* Processor: Intel® Atom™ Processor Z8350, Quad Core
- \* OS: Windows 10
- \* Memory: 2GB
- \* Storage: 32GB
- \* Wireless Connection: WIFI 802.11 b/g/n
- \* Build in Bluetooth 4.0
- \* Support Dual Camera: Front 2.0MP, Rear 5.0MP
- \* Support Skype Video Call
- \* Support 1080P Full HD Video
- \* I/O Port : USB 2.0 Port / USB 3.0 Port
- \* Card Slot: Micro SD Card (Max: 128GB)
- \* Audio Output: Stereo Speaker (8Ω 1.0w) / 3.5MM Stereo Headphone Jack
- \* Windows Store, Office Work, Internet Browser, Calendar, Calculator, E-mail, etc.
- \* Picture Viewing, Music / Video Playback, Games, etc.
- \* Supports Multi Languages
- \* Battery: Built in 10000 mAh / 3.7V Li-ion, up to 10 hours, Rechargeable
- \* Power Source: 5V  $\equiv$  3A

## 5. Accessories

---

Below items are included in your package:

- \* Laptop
- \* Power Adapter
- \* Earphone
- \* User Manual



# Basic warranty Statement

This product is warranted to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for **ninety (90) DAYS** (parts and labor) and **one (1) YEAR** (parts only) from the date of original purchase. We agree under the warranty period to replace product if it is determined to be defective at "No Charge" This limited warranty does not cover any loss or damages that occur as result of:

- Cosmetic damage.
- Shipping or improper installation or maintenance.
- Misuse.
- Neglect.
- Any cause other than ordinary commercial or industrial application.
- Adjustment by non-authorized source or any of the products firmware or hardware that you or any third party have modified or altered.
- Improper environment.
- Excessive or inadequate heating or air conditioning or electrical power failures, surges. connection to improper voltage supply or settings or other irregularities.
- Accidents, acts of God.

In the United States and Canada contact Customer Service at [www.iviewus.com](http://www.iviewus.com)

**\* Please note that in order to have your merchandise repaired and replaced by warranty, you must contact our customer service representatives by email, and get RMA number.**

To obtain factory service, the original purchaser MUST present the following:

1. A sales receipt/proof of purchase indicating date of purchase.
2. Your Name. Place of Purchase. Address. Unit Model.and Description of Problem.
3. Send the unit pre-paid to the address below in the original packaging or reasonable substitute to prevent damage. **No return will be shipped back to a PO BOX.**
4. All of the accessories that came with the product package must be sent along with the main unit.
5. Please include your check or money order in the amount of **\$25.00** to cover handling and return shipping charges We will not be responsible for delays or unprocessed claims resulting from purchaser's failure to provide any or all of the necessary information.
6. There is Additional Shipping Charge for areas outside of United States. For shipping charge please consult with our customer service.

***Please review your user  
guide carefully before  
using this product.***

*Additional troubleshooting information  
can be found on the web at:*

***[www.iviewus.com](http://www.iviewus.com) and click on “Support”  
or email us at [support@iviewus.com](mailto:support@iviewus.com)***