

User Manual

ZTE Unite™ II



ZTE

U.S. Cellular® Customer Service 1-888-944-9400

LEGAL INFORMATION

Copyright © 2014 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

4G LTE™ is not available in all areas. See uscellular.com/4G for complete coverage details. 4G LTE™ service provided through King Street Wireless, a partner of U.S. Cellular. LTE™ is a trademark of ETSI.

Version No. : 1.0

Edition Time: 1.2014

NOTE:

Do not use the device in an enclosed environment or where heat dissipation is poor. Prolonged work in such space may cause excessive heat and raise ambient temperature, which may lead to automatic shutdown of the device for your safety. In the case of such event, cool the device in a well-ventilated place before turning on for normal use.

Contents

Getting Started	1
Introduction	1
Outline and Parts	1
Indicators	1
Inserting the SIM Card and Battery	2
Inserting the microSDHC Card	3
Powering On/Off Your Device	3
Sleep Mode	4
Charging Your Device	4
Internet Access	4
Configuring Your PC	5
Connecting to Your Device	6
Accessing the Internet	8
Disconnecting from the Internet	8
Navigating the Device	8
Resetting Your ZTE Unite™ II	8
Device Info	9
Connection Info	9
Connected Device	9
Settings	9
WPS	10
Web User Interface Configuration	10
Accessing the Configuration Page	10
Login	10
Settings	11
Quick Settings	11
Network Settings	14
Wi-Fi Settings	17
Device Settings	20
Firewall	22
Router Settings	26
Dial *228	26
Information	27
Device Information	27
Statistics	27
Data Limit Settings	27
File Sharing	28
Sharing SD Card via USB Cable	28
Sharing SD Card via Web Browser	28
Messages	29
Operating Messages in Native	29
Operating Messages in SIM Card	30
Configuring Messages	30
Warning and Notice	31
To the Owner	31

Using Your Device.....	31
Using Battery	31
Limited Warranty	32
Limitation of Liability.....	32
Radio Frequency (RF) Energy (Only for US Market)	32
FCC Compliance (Only for U.S. Market).....	33
Disposal of Your Old Appliance.....	33
Troubleshooting	34


Getting Started

Introduction

ZTE Unite™ II is a 4G LTE™ mobile hotspot device, using a 4G LTE™ network. The client devices can connect to ZTE Unite™ II via Wi-Fi. The device supports data services, enabling you to communicate anytime and anywhere.

Outline and Parts



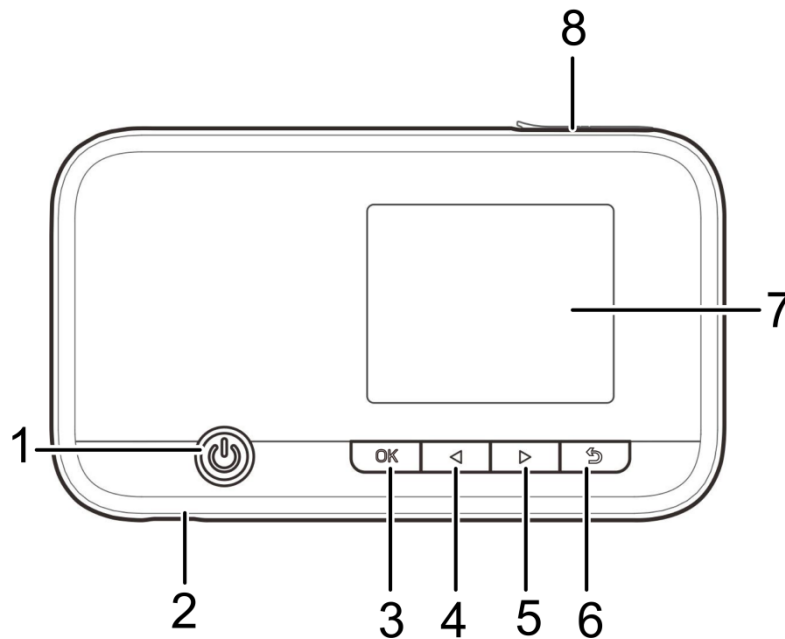













The following figure shows the appearance of the device. It is only for your reference. The actual device may be different.



1.Power Button	Press and hold the Power button to switch on/off the device.
2.Charger/USB port	Charge your device.
3.OK Key	Enter or select an item.
4.Left Key	Check the on-screen menu from right to left.
5.Right Key	Check the on-screen menu from left to right.
6.Back Key	Go back to the previous screen.
7. LCD Screen	It indicates the signal type, signal strength, battery, Wi-Fi, etc.
8.microSDHC card slot	It is where you insert the microSDHC card.


Indicators

When the device is powered on, the following icons will appear on the LCD screen, with the corresponding indicators listed in the table below:


Icon	Indication	Icon	Indication
	Network signal strength.		Roaming network indication.
	Network type. 1X/3G/4G LTE™ icons will appear on the LCD screen according to the connected network.		The device is connected to the Internet.
	Connected to the Internet manually.		There are new messages or unread messages.
	Wi-Fi Status and number of the connected users.		The message inbox is full.
	Battery is low.		Show and check the device information.
	Battery power indication.		Show and check the data connection information.
	The battery is full.		Show and check the clients connected to your device.
	Set the WPS function.		Set your device.

Inserting the SIM Card and Battery


1. Remove the back cover.

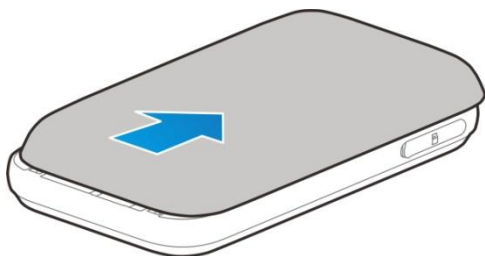


2. Insert the SIM card into the SIM card slot.

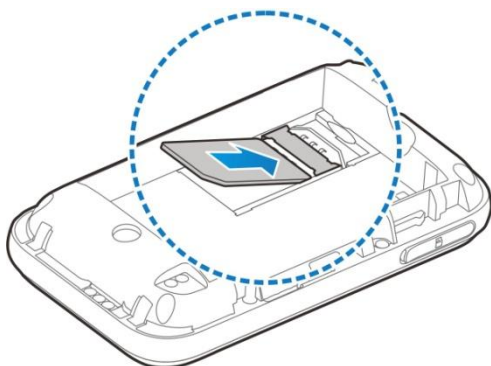

3. Insert the battery as shown with the contacts located against the metal springs, and press the battery down into the case.

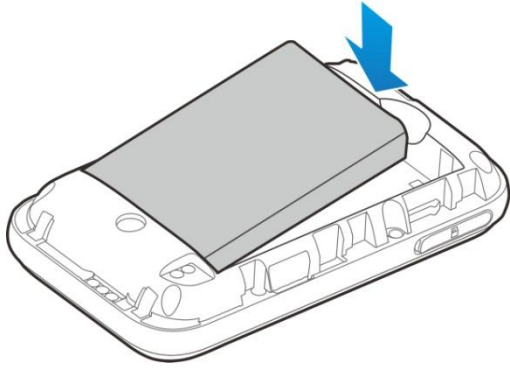

4. Close the back cover.

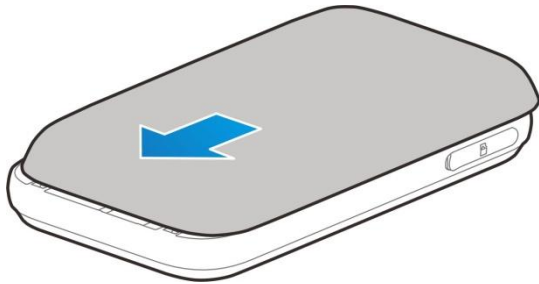

Inserting the microSDHC Card

NOTE:


- MicroSDHC logo  is a trademark of SD-3C, LLC.
- MicroSDHC card is sold separately.

1. Pull the microSDHC card cover out of the card slot.

NOTE:

Do not remove with excessive force.

2. Insert the microSDHC card into the microSDHC card slot, as shown below. You will hear a click when the microSDHC card locks in place.

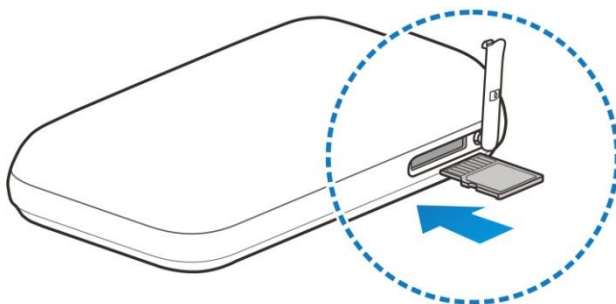

3. Close the microSDHC card cover.

Powering On/Off Your Device

Press and hold the **Power** button to switch on/off the device.

NOTE:

The device is powered on when the LCD screen lights up.

Sleep Mode

When using battery supply and no users are connected, the device will enter sleep mode after a specified time. In the sleep mode, the Wi-Fi function will be disabled. Press the **Power** button to wake up the device and enable the Wi-Fi function, and the LCD screen will be turned on.


NOTE:

Only the Wi-Fi function will be disabled when the device is connected via USB and no user is connected. Press the **Power** button to enable the Wi-Fi function.


Charging Your Device

You can charge your device by using the USB cable or adapter.

- Use the USB cable to connect your device and PC directly.

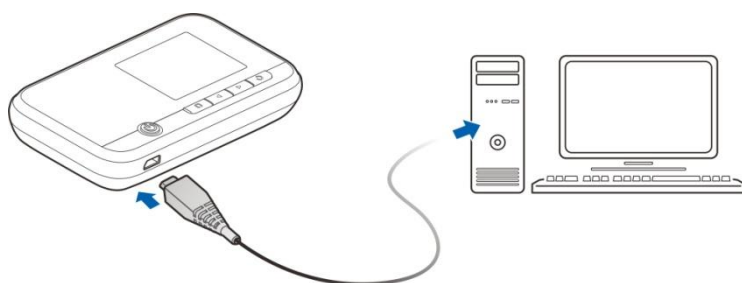


- Use the adapter and USB cable to connect the wall outlet and your device.

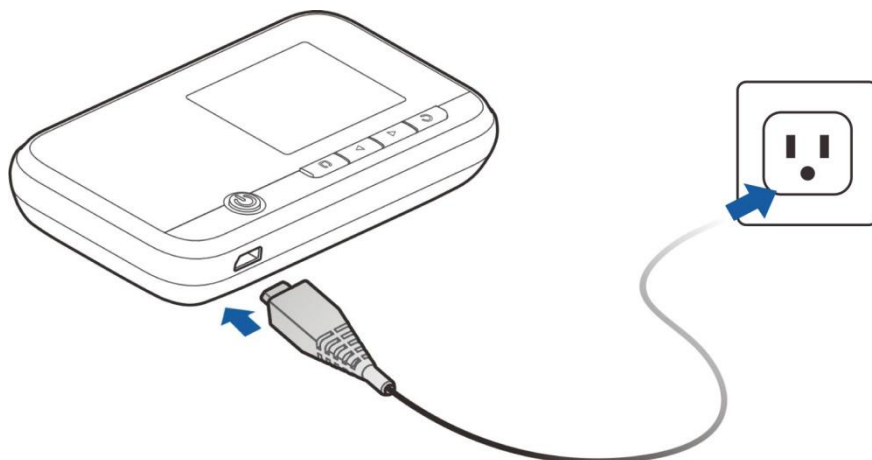**NOTE:**

Do not use excessive force to insert the plug.

Internet Access

You can connect up to 10 Wi-Fi enabled devices at one time including computers, tablets, smartphones and more.

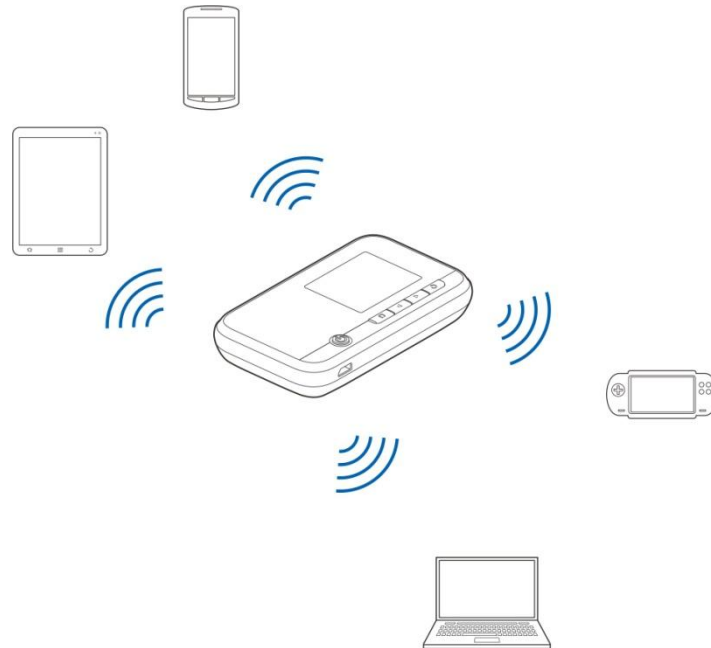


Configuring Your PC

Follow the steps for Windows XP to configure the Wireless Internet Protocol for your connection.

NOTE:

Wireless Network Connection is used for Wi-Fi connection.


1. Right-click **My Network Places** and then select **Properties**.

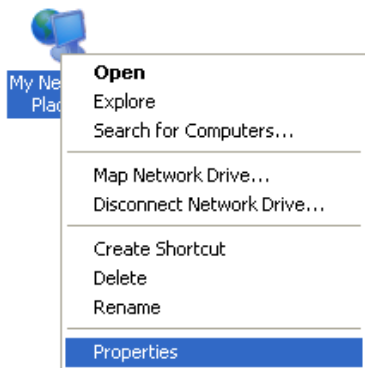


2. Right-click the **Wireless Network Connection**, and then select **Properties**.



3. Select **Internet Protocol (TCP/IP)**, and then click **Properties**.

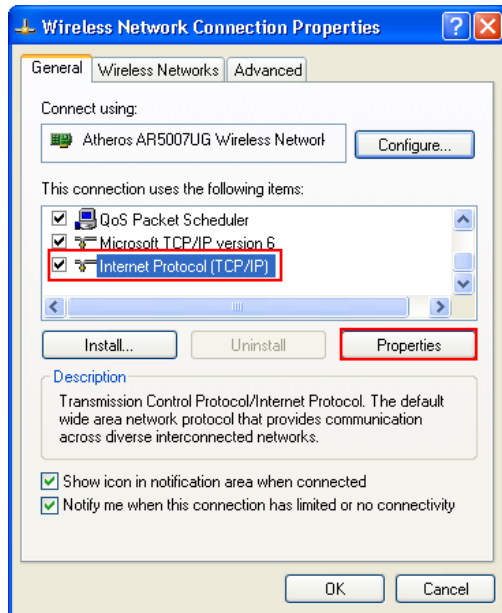

4. Select these two items, and then click **OK** to finish the configuration.

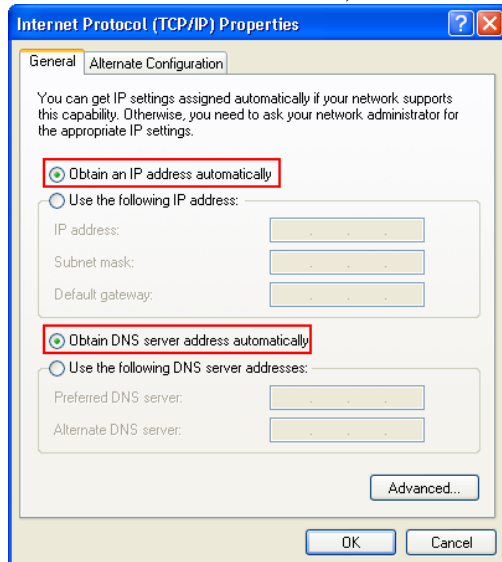


Connecting to Your Device

1. Power on your device. It will take 1-2 minutes to power up.
2. Use your Wi-Fi application on the client to search for available wireless networks.




3. Select the SSID of your device, and then click **Connect**.

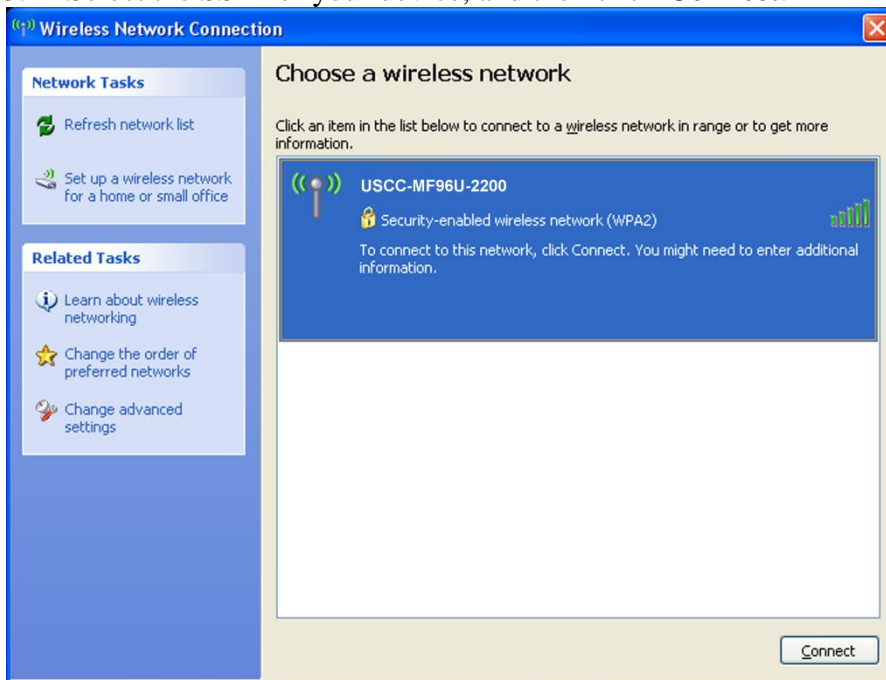

NOTE:

Please check the label on your device to get the default SSID.


4. Input the password, and then click **Connect**.

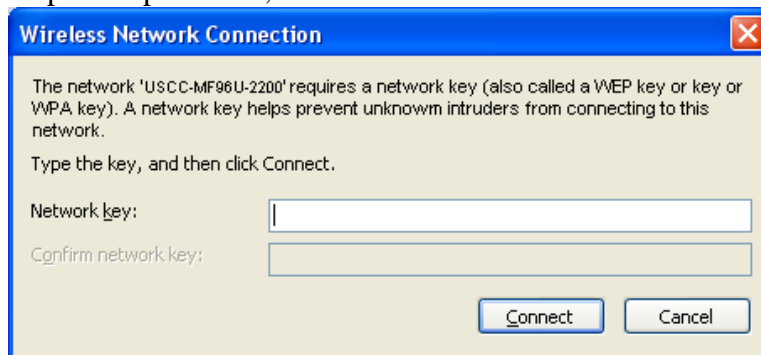

NOTE:

You may need to input the password for Wi-Fi connection. Please check the label on your device to get the default password.

5. Your client will connect to the Unite II.

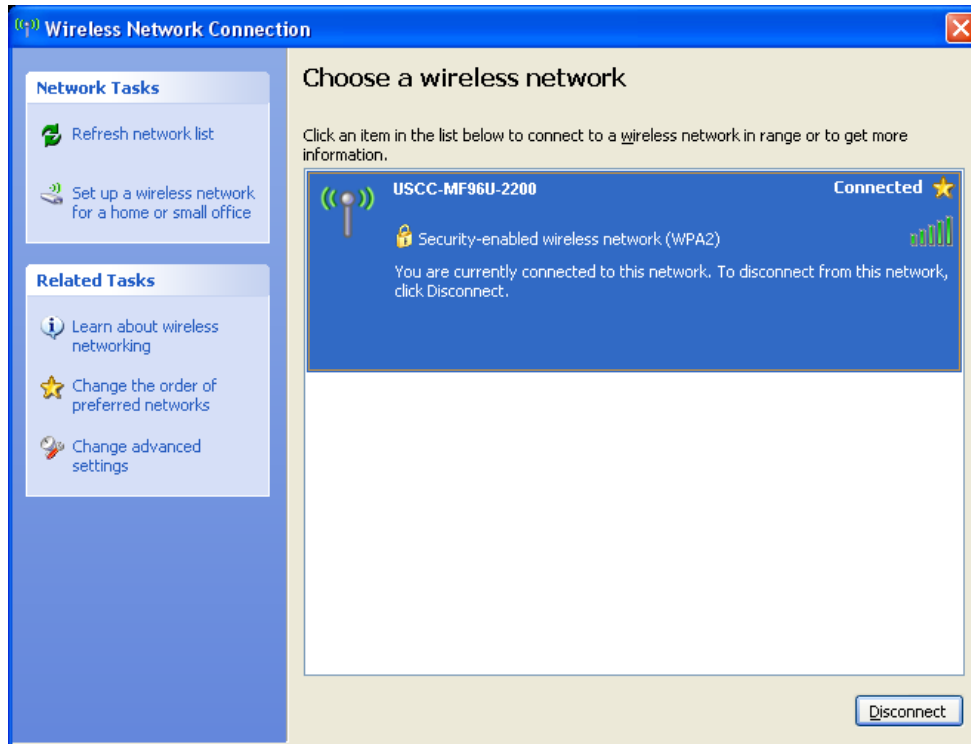

Accessing the Internet

1. Switch on the device.
2. Connect the client to your device.
3. After the client is connected to your device successfully, you can access the Internet.

Disconnecting from the Internet

Log into the Web User Interface Configuration page, click the **Disconnect** button at the **Home** page.

NOTE:

Powering off the device can also terminate the Internet connection.

Navigating the Device


Press and hold the **Power** button to turn on the ZTE Unite™ II. The screen lights up to indicate the device has turned on and the following icons will appear after initialization.



Resetting Your ZTE Unite™ II

Simply press and hold the **Reset** button on right side of the device bottom surface for 3 seconds to restore

your ZTE Unite™ II to the factory default settings, as shown below.

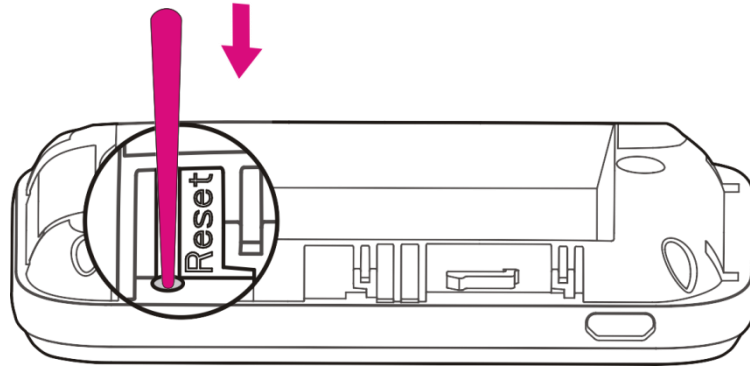


Device Info


Select the device Info icon  and press the **OK Key** to check the WAN information. Use the **Left** and **Right** key to view the following information:

- **Network Name (SSID):** Displays the default SSID.
- **Wi-Fi Password:** Displays the default Wi-Fi password.
- **Web portal Login:** Displays the login URL of the web user interface.
- **Admin Password:** Displays the default login password of the web user interface.
- **Mobile Number:** Displays your mobile number.
- **MEID (H) / IMEI (D):** Displays the MEID (H) / IMEI (D).
- **Firmware Version:** Displays the firmware version.
- **Hardware Version:** Displays the hardware version.


Connection Info

Select the connection info icon  and press the **OK Key** to check the connection information.

Connected Device

Select the connected device icon  and press the **OK Key** to check the information of the devices connected to your device.

Settings

Select settings icon  and press the **OK Key** to check the settings. Use the **Left** and **Right** key to scroll to the desired menu.

- **Wi-Fi Settings:** Enable or disable Wi-Fi function.
- **Network Select:** Select the network type.
- **Software Update:** Update the software.
- **Sound Alert:** Turn on or off the sound alert. It is on by default, so you will hear an alert when there is one or more device connected to your ZTE Unite™ II.
- **Screen Timeout:** Set time for screen timeout.
- **Dial *228:** Active your SIM card manually in 1X network.

- **Messages Settings:** Turn on or off the **Receive Messages during power up**.

NOTE: By disabling the Text Message feature you will not receive any incoming messages when the device powers up in a 4G LTE™ network. You will still receive Text Messages in 3G networks. To receive messages when the device powers on please enable the Text Messages feature.

WPS



Select the WPS icon and press the **OK Key** to launch the Wi-Fi Protection Setup.

Web User Interface Configuration


Accessing the Configuration Page

1. Make sure there is a connection between your device and the client.
2. Launch the Internet browser and enter <http://192.168.1.1> or <http://uscc.hotspot> in the address bar.

NOTE:

It is recommended that you use IE (7.0 or later), Firefox (15.0 or later), Opera (10.0 or later), Safari (4.0 or later), Google Chrome (10.0 or later).

3. The login page appears as follows. The following figure is only for your reference.

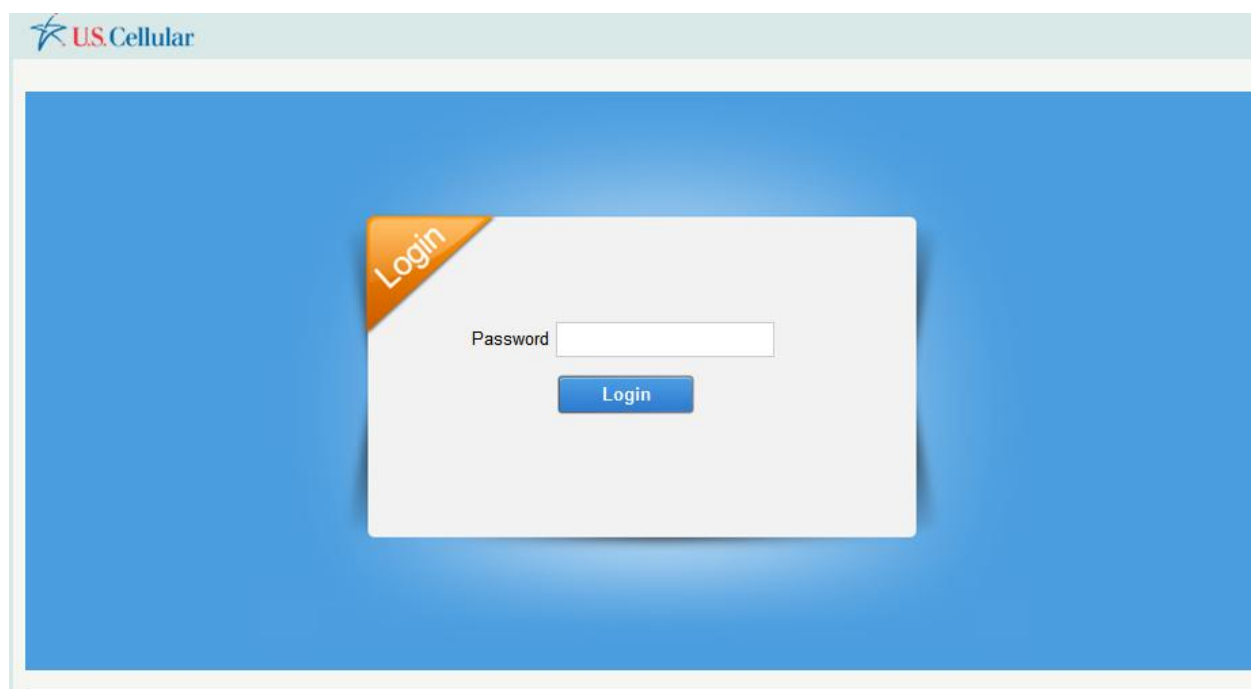

Login

On the Web User Interface Configuration page, input the password (please select **Device Info** on the LCD screen to get the default password). Click **Login** to log in the device.

The Web User Interface is divided into three parts.

- **Index:** Shows the configuration list for your device
- **Content:** Shows the detailed configuration.

- **System Information:** Shows the system status and different kinds of tips.


Battery indicator	: Shows the battery level, 4 stages from none to high .
Signal strength	: Shows the network signal intensity, 5 stages from none to strong .
Internet status	: Connected to the Internet.
	: Disconnected from the Internet.
Wi-Fi strength	: Wi-Fi status and number of the connected users. The maximum number is 10.

Settings

- Do not modify any settings unless instructed by your service provider.
- Please disconnect the device from the network before changing the settings.

Quick Settings

1. In the main interface click **Settings > Quick Settings**.
2. Read the guide carefully, and then click **Next**.

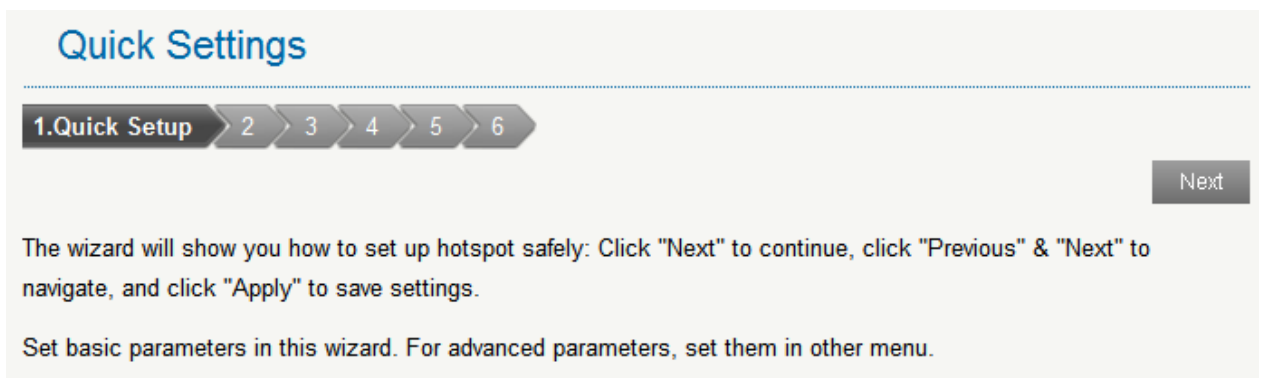

3. Set **PPP Profile Configuration** in the following figure and then click **Next**.

Quick Settings

1 > **2.PPP Profile Configuration** > 3 > 4 > 5 > 6

Previous Next

APN Settings

APN Settings Auto Manual

Profile

Profile Name

IPv4 APN *

IPv6 APN *

4. Set PPP Authentication in the following figure and then click **Next**.

Quick Settings

1 > 2 > **3.PPP Authentication** > 4 > 5 > 6

Previous Next

PPP Authentication

IPv4 Authentication

IPv6 Authentication

IPv4 User Name

IPv4 Password

IPv6 User Name

IPv6 Password

5. Set **SSID Configuration** in the following figure and then click **Next**.

The screenshot shows the 'Quick Settings' interface. At the top, a progress bar indicates the current step is '4. SSID Configuration', with steps 1, 2, and 3 completed, and steps 5 and 6 remaining. Below the progress bar, there are 'Previous' and 'Next' buttons. The main heading is 'SSID'. Underneath, there is a text input field for 'Network Name(SSID) *' containing the text 'USCC-MF96U-2200'. Below that, there is a radio button selection for 'Broadcast Network Name (SSID)', with 'Enable' selected and 'Disable' unselected.

Service Set Identifier (SSID) is used to uniquely identify your WLAN. If you enable **Broadcast Network Name (SSID)**, the gateway will broadcast the SSID, and other devices can detect and connect to it.

6. Set **Security Configuration** in the following figure and then click **Next**.

The screenshot shows the 'Quick Settings' interface. At the top, a progress bar indicates the current step is '5. Security Configuration', with steps 1, 2, 3, and 4 completed, and step 6 remaining. Below the progress bar, there are 'Previous' and 'Next' buttons. The main heading is 'Security Mode'. Underneath, there is a dropdown menu for 'Security Mode' set to 'WPA2(AES)-PSK'. Below that, there is a text input field for 'Wi-Fi Password *' containing several dots, and a checkbox labeled 'Display Password' which is currently unchecked.

Encryption will keep your traffic from being unauthorized monitored and accessed, select one encryption mode from the list, and then set key and/or algorithm for it.

7. Show the configuration in the following figure:

Quick Settings

1 2 3 4 5 6.Configuration as Follows

Previous Apply

APN Settings	Manual
Profile Name	usccinternet
IPv4 APN	usccinternet
IPv6 APN	usccinternet
IPv4 User Name	
IPv6 User Name	
IPv4 Authentication	NONE
IPv6 Authentication	NONE
Network Name(SSID)	USCC-MF96U-2200
Broadcast Network Name (SSID)	Enable
Security Mode	WPA2(AES)-PSK

Make sure that all the parameters shown in the figure are correct, and then click **Apply**.

Network Settings

Dial-up Settings

Select **Settings** > **Network Settings** > **Dial-up Settings**. The Dial-up Settings page is shown in the following figure. You can set the WAN connection mode here. The default mode is Automatic.

Dial-up Settings

WAN Connection Mode Automatic

Check here, you can connect to internet in the roaming status.

Manual

Apply

Network Selection

Select **Settings** > **Network Settings** > **Network Selection**. The Network Selection page is shown in the following figure.

Network Selection

Network Selection

LTE/CDMA

LTE/CDMA

3G Auto

Apply

- **LTE/CDMA:** Device connects to LTE/CDMA network.
- **3G Auto:** Device connects to 3G network.

Click **Apply** to confirm your configuration.

NOTE:

To change the current settings, please disconnect from the network first.

APN Setting

Select **Settings > Network Settings > APN Setting**. The APN parameters are shown in the following figure.

APN

Current APN usccinternet

Mode Auto Manual

Profile usccinternet

PDP Type IPv4 & IPv6

Profile Name * usccinternet

IPv4 APN * usccinternet

IPv4 DNS Mode Auto Manual

IPv4 Authentication NONE

IPv4 User Name

IPv4 Password

IPv6 APN * usccinternet

IPv6 DNS Mode Auto Manual

IPv6 Authentication NONE

IPv6 User Name

IPv6 Password

- Click **Set as default** to set current profile as the default profile.

• Click **Add New** to access the following figure:

Enter the related parameters (please see following table), and then click **Apply** to add a new profile.

Parameter	Function
Mode	If a fixed APN is provided by your service provider, select Manual APN. Otherwise, please select Auto APN, and the device will automatically obtain parameters.
Profile Selection	Choose one profile from the list.
PDP Type	Choose a PDP type from the drop-down list, IPv4 / IPv6 / IPv4&IPv6.
Profile Name	Type the profile name.
APN	Type the APN string.
DNS Mode	Set DNS mode.
Authentication	Password Authentication Protocol (PAP) provides a simple method without encryption for the peer to establish its identity using a 2-way handshake. Challenge-Handshake Authentication Protocol (CHAP) is used to periodically verify the identity of the peer using a 3-way handshake.

User Name	User name is used to obtain authentication from the ISP when the connection is established.
Password	Password is used to obtain authentication from the ISP when the connection is established.

Wi-Fi Settings

Basic

Select **Settings > Wi-Fi Settings > Basic Settings**, the wireless network basic parameters are shown in the following figure:

- **Multi SSID Switch:** Enable or disable this function. Two SSIDs can be used at the same time.
- **Network Name (SSID):** Service Set Identifier (SSID). Enter a string less than 32 characters as the name for your wireless local area network (WLAN).
- **Broadcast Network Name (SSID):** Disable or Enable (Default) this function. If **Enable** is selected, the device broadcasts the SSID, and other devices can search and connect to it. When you select **Disable**, other devices cannot see the SSID. If you want someone to connect, you need to tell them the SSID, and let them setup manually.

- **AP Isolation:** Enable or disable this function. If **Enable** is selected, the wireless devices connected to your device will be unable to communicate with each other.
- **Security Mode:** The security modes are described below:


Mode	Description
OPEN	You can authenticate successfully with a SSID, whether it is valid or empty.
WPA2(AES)-PSK	It is the securer version of WPA with implementation of the 802.11i standard.
WPA-PSK/WPA2-PSK	Apply both the WPA-PSK and WPA2-PSK scheme.

- **Wi-Fi Password:** Enter the password manually.
- **LTE Max Station Number:** Choose the maximum number of the stations which connect to the 4G LTE™ network simultaneously.
- **CDMA Max Station Number:** Choose the maximum number of the stations which connect to the CDMA network simultaneously.

Click **Apply** to confirm your configuration.

Advanced Settings

Select **Settings > Wi-Fi Settings > Advanced Settings**, the parameters are shown in the following figure:

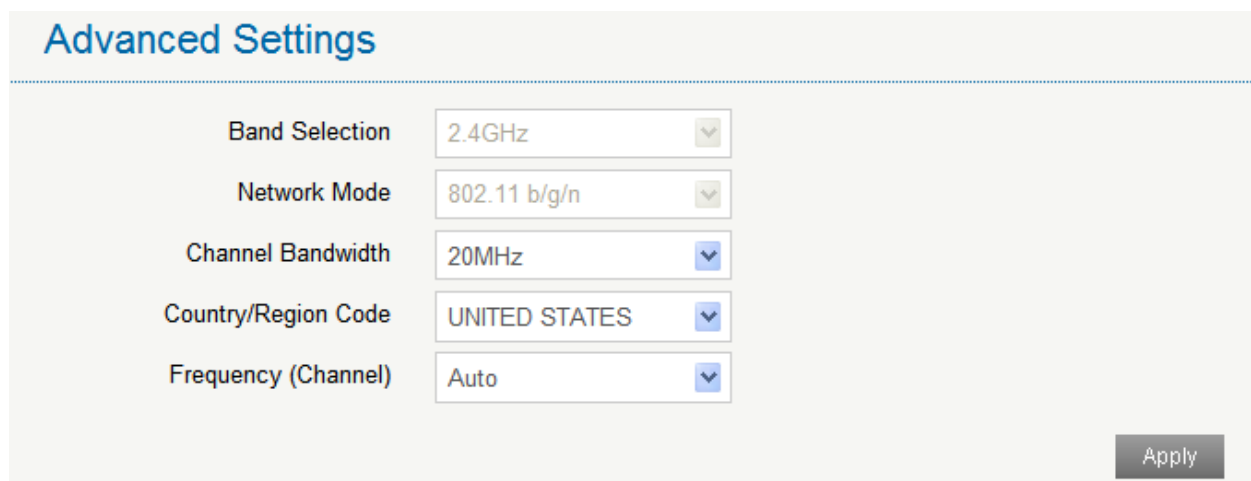


- **Band Selection:** Select a band from the drop-down list.
- **Network Mode:** If all of the wireless devices connect with this device in the same transmission mode, the performance will be improved when you choose the appropriate wireless mode.
- **Channel Bandwidth:** Select a channel bandwidth from the drop-down list.
- **Country/Region Code:** Select the right country code. When using the device internationally, please change the country/region code.

- **Frequency (Channel):** Select the appropriate channel to optimize the performance and coverage of your wireless network.

Black List

Select **Setting > Wi-Fi Settings > Black List**, the Black List configuration is shown in the following figure:

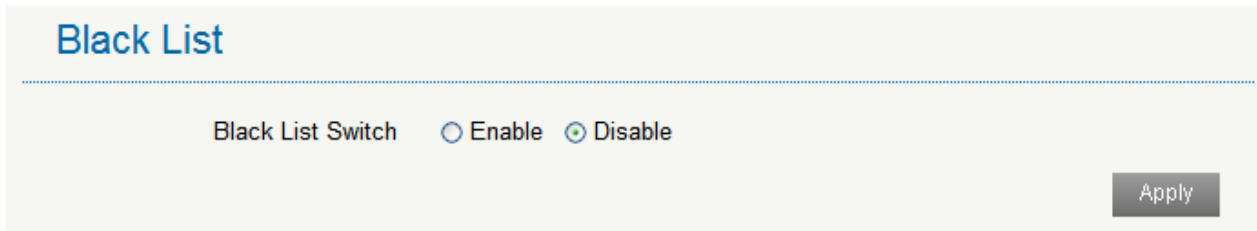

If you select **Enable**, the black list page will appear.




All the clients connected to your device are shown in the **Device Information** area. Click **Block** behind the device you want to block and then it will be added to the black list.

Click **Delete** to delete the device from the black list.

WPS

You can enable Wi-Fi Protected Setup (WPS) by PIN (PIN Code) or PBC (push-button) mode on this page. If your client device supports WPS, there's no need to enter password manually when WPS is available.

Select **Settings > Wi-Fi Settings > WPS**, the WPS configuration is shown in the following figure:

- **SSID:** Select the wireless network name that you want to connect to.
- **PIN:** Enter the PIN that is generated by wireless access client.
- **PBC:**
 1. Select the **PBC** mode in the client WPS UI;
 2. Select **PBC** mode in the WPS page of the device and submit;
 3. Select the WPS icon  on the device screen and press the OK Key to activate your device's WPS.
 4. Please press the "**next**" button on the Client WPS UI. After a few seconds the client can access the WLAN, and the result will be shown in the Client WPS UI.

Device Settings

Account Management

Select **Settings** > **Device Settings** > **Account Management**, and the administrator settings information is shown in the following figure:

You can change the administrator's password. Click **Apply** to confirm your configuration.

Reset

Select **Settings** > **Device Settings** > **Reset**, click **Reset** to set all the settings to their factory default values, and then the device will restart automatically.

Reset Factory Settings

Reset Factory Settings

Reset

Restart

Select **Settings** > **Device Settings** > **Restart**. Click **Restart** to restart the device.

Restart

Restart Device

Restart

Power Save

Select **Settings** > **Device Settings** > **Power Save**. You can set Wi-Fi performance and Wi-Fi sleep to save power.

- Wi-Fi Performance Settings

Wi-Fi Performance Settings

Wi-Fi Performance

Short Wi-Fi Range - Best battery life

Medium Wi-Fi Range

Long Wi-Fi Range

Apply

- ▶ **Short Wi-Fi Range:** Increases battery life.
- ▶ **Medium Wi-Fi Range:** Intermediates battery life and Wi-Fi range.
- ▶ **Long Wi-Fi Range:** Extends coverage of mobile hotspot, which will decrease battery life.

- Wi-Fi Sleep Settings

Wi-Fi Sleep Settings

Sleep Time

Apply

Sleep Time: Select a time from the drop-down list. When there's no Wi-Fi connection in the specified time, Wi-Fi will be unavailable and the system will turn to sleep mode for power-saving.

Firewall


You may set up firewall rules to protect your network from virus, worm and malicious activity on the Internet.

NOTE:

You can set the maximum 10 filtering items for **MAC/IP/Port Filtering** and **Port Forwarding**.

Port Filtering

Select **Settings > Firewall > Port Filtering**. The MAC/IP/Port Filtering is shown in the following figure:

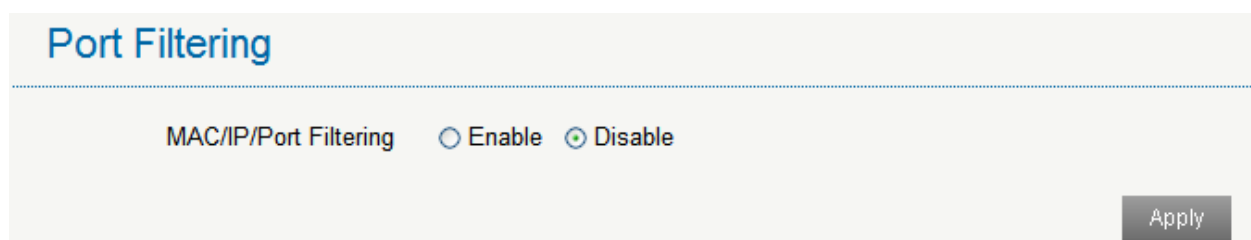

If you select **Enable**, the filter settings will appear as shown below:

Port Filtering

MAC/IP/Port Filtering Enable Disable

Default Policy Accepted Dropped

Apply



MAC/IP/Port Filtering Settings

IP Settings IPv4 IPv6

MAC Address (e.g., 00:1E:90:FF:FF:FF)

Source IP Address

Dest. IP Address

Protocol ▼

Action Accept Drop

Comment *

Apply



Current MAC/IP/Port filtering rules in system

<input type="checkbox"/>	MAC Address	IP Type	Source IP Address	Dest. IP Address	Protocol	Source Port
<div style="border: 1px solid #ccc; height: 20px; width: 100%;"></div>						

Delete

- **Default Policy:** Set how to handle the packet if none of the rules match.
- **IP Settings:** Select IPv4 or IPv6.
- **MAC Address:** Set the MAC address that will be filtered.
- **Source IP Address:** Set the source IP address that will be filtered.
- **Destination IP Address:** Set the destination IP address that will be filtered.
- **Protocol:** Set which protocol will be used for filtering.
- **Action:** Set how to handle the packet if it matches with the rule.
- **Comment:** Type comment for the filter settings.

Click **Apply** to confirm your configuration.


Click **Delete** to delete the rule which you selected.

To add a new rule:

1. Select **Enable** in the **Port Filtering** area.
2. Click **Apply**.
3. Input the detail information in the **MAC/IP/Port Filtering Settings** area.
4. Click **Apply** in the **MAC/IP/Port Filtering Settings** area.

Port Mapping


You can set up Port Mapping to enable external computers to access www, FTP or other services provided by LAN. Select **Settings > Firewall > Port Mapping** and the Port Mapping page is shown in the following figure:

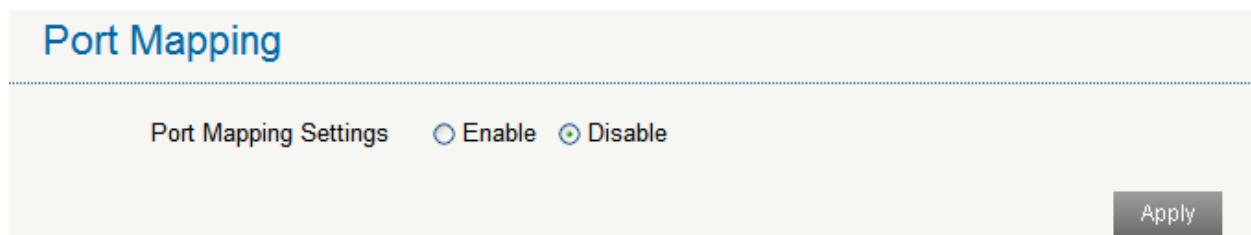

Port Mapping Settings Enable Disable

Apply

If you select **Enable**, the Port Mapping Settings will appear:

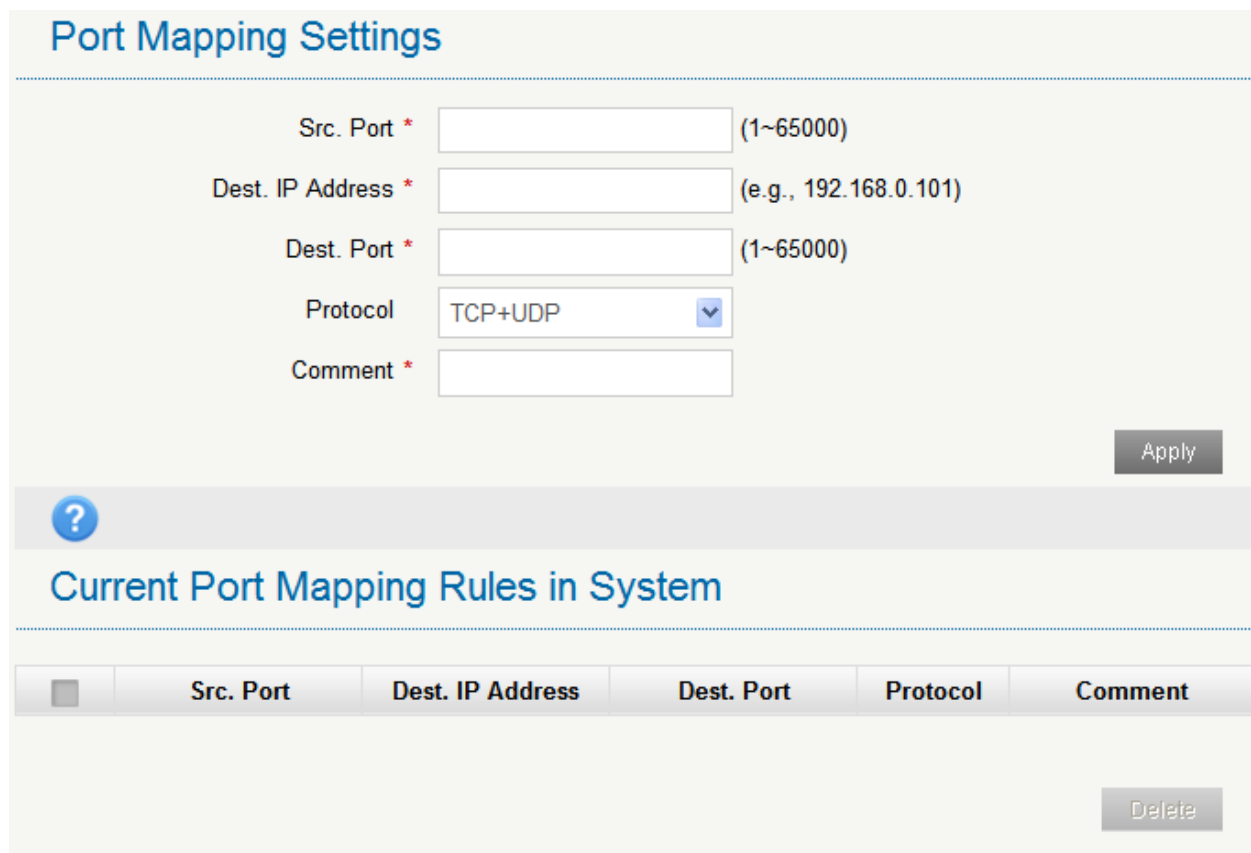

Port Mapping Settings

Src. Port * (1~65000)

Dest. IP Address * (e.g., 192.168.0.101)

Dest. Port * (1~65000)

Protocol ▼

Comment *

Apply

?

Current Port Mapping Rules in System

	Src. Port	Dest. IP Address	Dest. Port	Protocol	Comment
<input type="checkbox"/>					

Delete

- **Source Port:** Set the source port of the computer that provides services.
- **Destination IP Address:** Specify a computer located at LAN to provide services.
- **Destination Port:** Set the destination port of the computer that provides services.
- **Protocol:** Set which protocol will be applied by services.
- **Comment:** Type comment for the port mapping settings.


Click **Apply** to add a new rule.

Click **Delete** to delete the rule which you selected.

UPnP

Universal Plug Play (UPnP) is a set of networking protocols that allows network devices, such as PC, printers, Internet gateways, Wi-Fi access points and mobile devices, to seamlessly discover each other's presence on the network and establish functional network services for data sharing, communications, and entertainment.

Select **Settings > Firewall > UPnP** and the UPnP settings page is shown in the following figure:

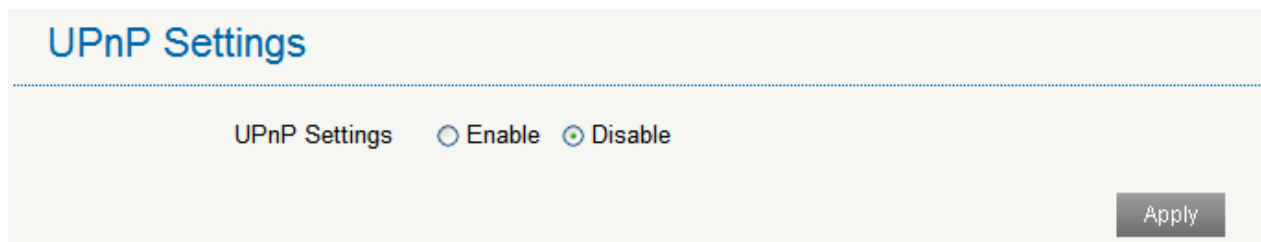


Check **Enable** and click **Apply** to enable the function.

DMZ

The DMZ host feature allows one local host be exposed to the Internet for a special-purpose service such as Internet gaming.

Select **Settings > Firewall > DMZ** and the following page will appear:

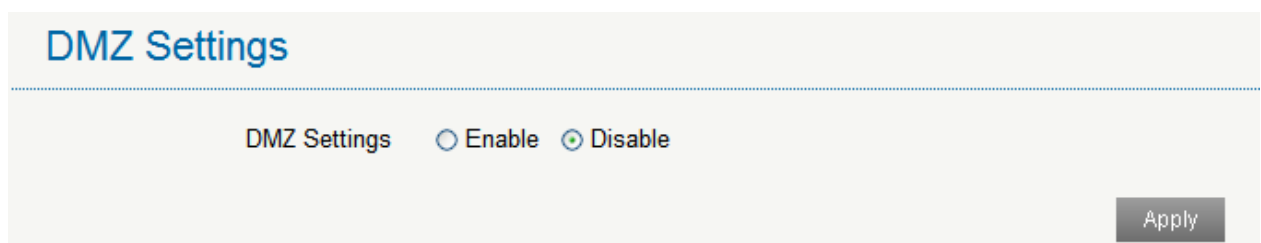

If you select **Enable**, the DMZ Settings will appear:

DMZ Settings

DMZ Settings Enable Disable

IP Address *

Enter the IP address of the device you want to communicate with the Internet, and then click **Apply** to save the settings.

Router Settings

Select **Settings > Router Settings** and the router information are shown in the following figure:

Router Settings

IP Address *

Subnet Mask *

DHCP Server Enable Disable

DHCP IP Pool * -

DHCP Lease Time * hour(s)

- **IP Address:** IP address for LAN interface.
- **Subnet Mask:** Subnet mask for the IP address.
- **DHCP Server:** Enable or disable DHCP Server function.
- **DHCP IP Pool:** Allocate begin and end IP address for IP pool.
- **DHCP Lease Time:** Define how long the leased IP address will be expired. The new IP address will be relocated after the IP address is expired.

Click **Apply** to confirm your configuration.

Dial *228

This function allows you to active your SIM card manually in a 1X network.

Select **Dial *228** and the following page will appear. Click **Dial *228** to active your SIM card.

Dial *228

Information


This function allows you to view system information.

Device Information

Select **Information** > **Device Information** and then you can view the device information.

Statistics

Select **Information** > **Statistics** and then the statistics information is shown in the following figure:

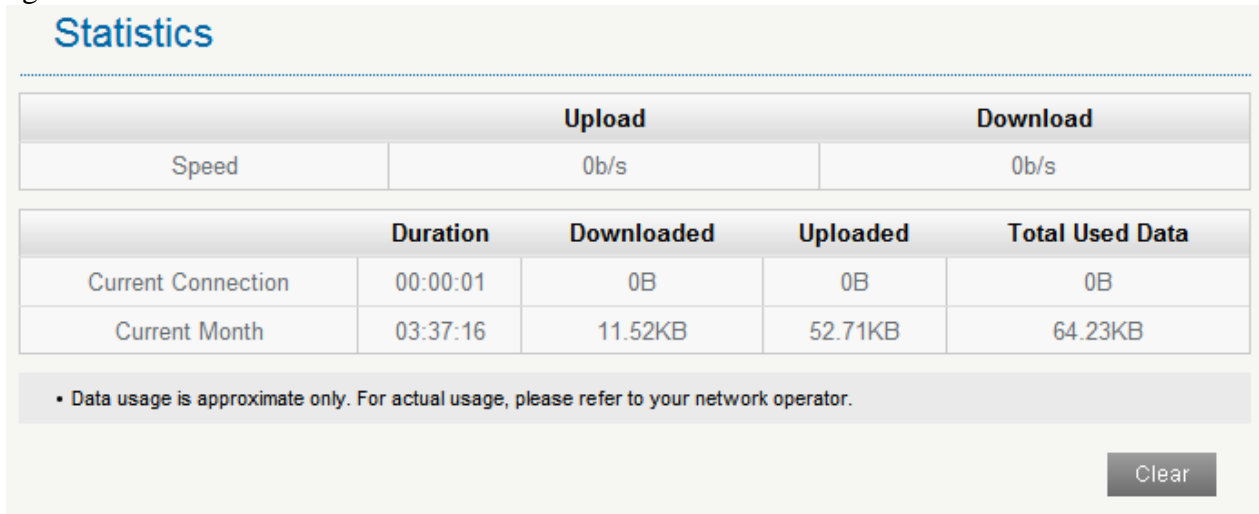


Click **Clear** to clear the information.


NOTE: Data usage is an estimate. Please see uscellular.com/myaccount for more information.

Data Limit Settings

Select **Information** > **Data Limit Settings** and then the following page is shown.

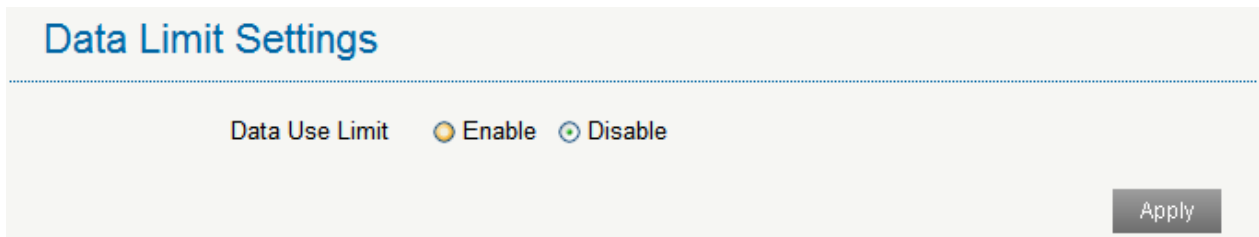

If you select **Enable**, the Data Limit Settings will appear:

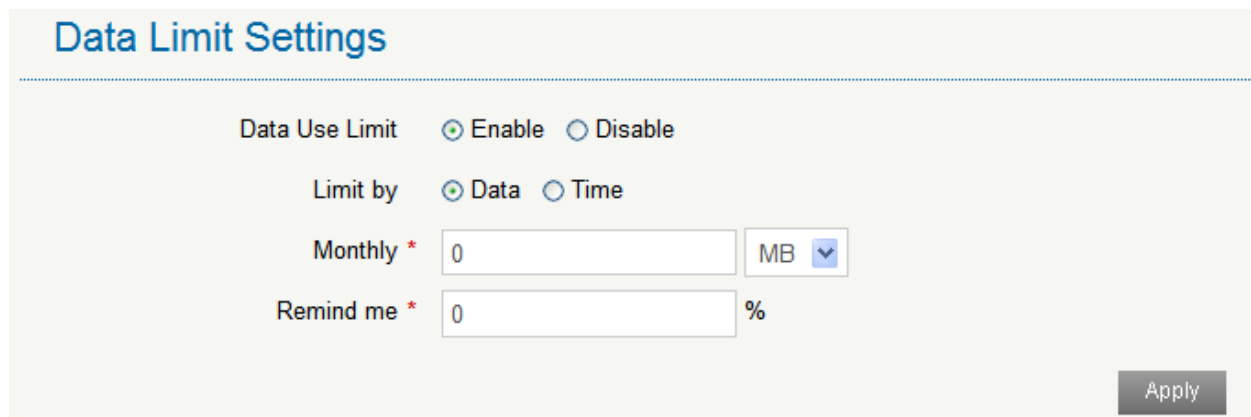


The screenshot shows the 'Data Limit Settings' interface. It features a title 'Data Limit Settings' at the top. Below the title, there are two rows of radio button options: 'Data Use Limit' with 'Enable' selected and 'Disable' unselected; and 'Limit by' with 'Data' selected and 'Time' unselected. Below these are two input fields: 'Monthly *' with the value '0' and a unit dropdown menu set to 'MB'; and 'Remind me *' with the value '0' and a '%' symbol. An 'Apply' button is located at the bottom right of the settings area.

- **Limit by:** Select a way to limit the data use, by data or time.
- **Monthly:** Set data limit for a month. You can select unit from the drop-down list.
- **Remind me:** Set a percentage to remind you when the data/time reaches the specified percentage.

File Sharing

File sharing allows you to share the files in a SD card via USB cable or web browser.

Sharing microSDHC Card via USB Cable

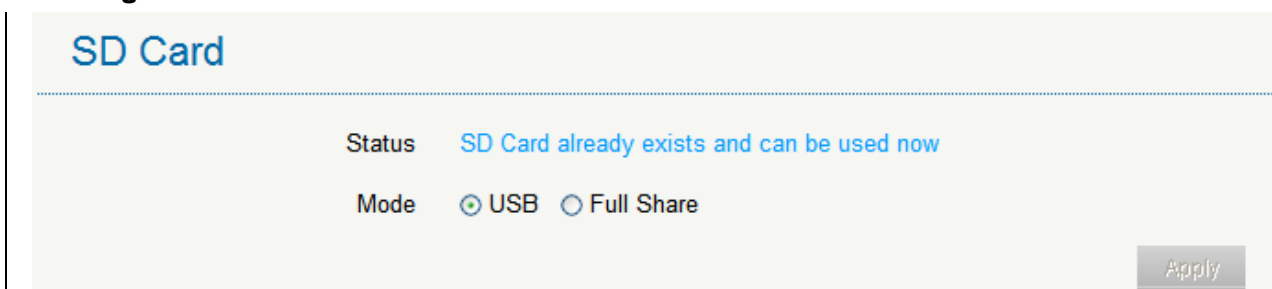

The screenshot shows the 'SD Card' sharing settings interface. It features a title 'SD Card' at the top. Below the title, there are two rows of information: 'Status' with the text 'SD Card already exists and can be used now'; and 'Mode' with 'USB' selected and 'Full Share' unselected. An 'Apply' button is located at the bottom right of the settings area.

1. Select **File Sharing** to set the sharing mode on the above page. The default mode is USB.
2. Connect the device to PC/Tablet via USB cable.
3. Go to **My Computer** of your PC/Tablet to access all files in microSDHC card.

NOTE:

You can access microSDHC card via USB cable only in USB mode. The web page of sharing microSDHC card will be disabled.

Sharing microSDHC Card via Web Browser

Select **File Sharing** and then the microSDHC card page is shown as the following figure.

SD Card

Status SD Card already exists and can be used now

Mode USB Full Share

Share Setting Enable Disable

File to Share Entire SD Card Custom

Access Type Read/Write Read Only

Path to Share *

1. Check **Full Share** mode.
2. Check **Enable** to enable share settings.
3. Set **File to Share** and **Access Type**.
4. Click **Apply** to save the settings.
5. Launch the Internet browser on your PC/Tablet/Smart phone connected to the device via Wi-Fi and enter <http://192.168.1.1> in the address bar.
6. Click **View SD Card** on the login window to access the files in microSDHC card.

The screenshot shows a login interface with a blue 'Login' button and a red 'View SD card' link. An orange banner in the top-left corner says 'Login'.

Messages


This function allows you to receive messages.

Operating Messages in Native

You can check the messages saved in your device.

Device Messaging

Select **Messages > Device Messaging** to access the following figure:

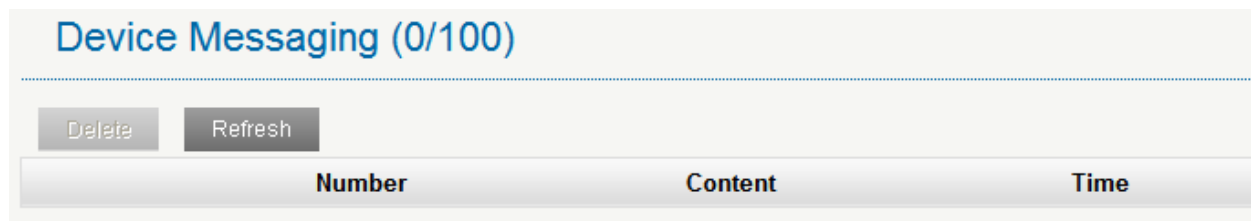

All the received messages saved in your device will be displayed here.

Click **Delete** to delete the selected messages.

Click **Refresh** to refresh manually.

Operating Messages in SIM Card

You can check the messages saved in your SIM card.

SIM Messaging

Select **Messages** > **SIM Messaging** to access the following figure:




All the received messages saved in the SIM card will be displayed here.

Click **Delete** to delete the selected messages.

Check the checkbox next to **Delete** to select all the messages in SIM card and then click **Delete** to delete them.

Configuring Messages

Select **Messages** > **Messaging Settings** to access the following figure:

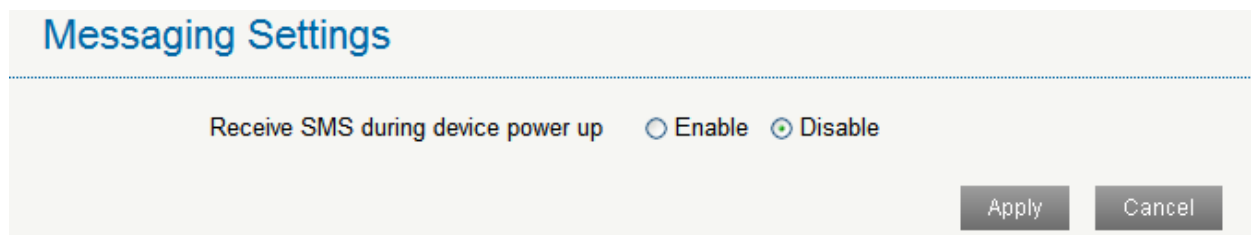

By disabling this SMS feature, you will not receive any incoming messages when the device powers up in a 4G LTE™ network but you will still receive SMS in 3G networks. To receive messages when the device powers on, please enable this feature.

Warning and Notice

To the Owner

- Some electronic devices are susceptible to electromagnetic interference sent by your device if inadequately shielded, such as the electronic system of vehicles. Please consult the manufacturer of your device before using if necessary.
- Operating your device may interfere with medical devices like hearing aids and pacemakers. Please always keep them more than 20 centimeters away from such medical devices when they are turned on. Turn your device off if necessary. Consult a physician or the manufacturer of the medical device before using your device.
- Be aware of the usage limitation when using your device at places such as oil warehouses or chemical factories, where there are explosive gases or explosive products being processed. Turn off your device if required.
- The use of electronic transmitting devices is forbidden in aircrafts, at petrol stations and in hospitals. Please observe and obey all warning signs and switch off your device in these conditions.
- Do not touch the inner antenna area if not necessary. Otherwise it will affect your device's performance.
- Store your device out of the reach of little children. Your device may cause injury if used as a toy.
- Do not touch the metallic parts of your device so as to avoid a burn, when your device is working.

Using Your Device

- Please use original accessories or accessories that are authorized. Using any unauthorized accessories may affect your device's performance, and violate related national regulations about telecom terminals.
- Avoid using your device near or inside metallic structures or establishments that can emit electromagnetic waves. Otherwise it may influence signal reception.
- Your device is not waterproof. Please keep it dry and store in a shady and cool place.
- Do not use your device immediately after a sudden temperature change. In such case, it will produce dew inside and outside your device, so don't use it until it becomes dry.
- Handle your device carefully. Do not drop, bend or strike it. Otherwise your device will be damaged.
- No dismantling by non-professionals and only qualified technicians can undertake repair work.
- Operating temperature range of 0°C ~ +35°C and humidity range of 5% ~ 95% are recommended.

Using Battery

- Do not short-circuit the battery, as this can cause excessive heat and fire.
- Do not store battery in hot areas or dispose of it in a fire to avoid explosion.
- Do not disassemble or modify the battery.
- When not using the battery for a long period, remove it from your device and store it in a cool dry place.
- Never use any charger or battery damaged or worn out.
- Return the worn-out battery to the provider or put it in the appointed recycle place. Do not dispose of the battery in the trash.

**WARNING!**

If the battery is broken, keep away from it. If it taints your skin, wash your skin with abundant fresh water and ask doctor for help if necessary.

Limited Warranty

- This warranty does not apply to defects or errors in the Product caused by:
 - i. Reasonable abrasion.
 - ii. End User's failure to follow ZTE's installation, operation or maintenance instructions or procedures.
 - iii. End User's mishandling, misuse, negligence, or improper installation, disassembly, storage, servicing or operation of the Product.
 - iv. Modifications or repairs not made by ZTE or a ZTE-certified individual.
 - v. Power failures, surges, fire, flood, accidents, and actions of third parties or other events outside ZTE's reasonable control.
 - vi. Usage of third-party products, or usage in conjunction with third-party products provided that such defects are due to the combined usage.
 - vii. Any other cause beyond the range of normal usage intended for the Product.

End User shall have no right to reject or return the Product, or receive a refund for the Product from ZTE under the above-mentioned situations.

- This warranty is End User's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using of this product, whether or not ZTE had been advised, knew or should have known of the possibility of such damages, including, but not limited to lost profits, interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost.

Radio Frequency (RF) Energy (Only for US Market)

This model device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government:

The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the position required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

The highest SAR value for the model device as reported to the FCC when worn on the body, as described in this user guide, is 1.26 W/kg (Body-worn measurements differ among device models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid/> after searching on

FCC ID: SRQ-MF96U.

FCC Compliance (Only for U.S. Market)


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Disposal of Your Old Appliance

	<ul style="list-style-type: none"> ● When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC. ● All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. ● The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
---	--

For this product's recycling information based on WEEE directive, please send an e-mail to weee@zte.com.cn

Troubleshooting

Problem	Suggested Solution
Cannot establish the Wi-Fi connection between your device and client.	<ul style="list-style-type: none"> • Refresh network list and select the correct SSID. • Check the IP address to make sure your client can obtain an IP address automatically in the Internet protocol (TCP/IP) properties. • Type the correct network key (Wi-Fi password) when you connect to the device.
The client connected to the device cannot access the Internet.	<ul style="list-style-type: none"> • Make sure your SIM card is available. • Change the location to find a place with good signal. • Contact your service provider.
Cannot visit the web user interface configuration page.	<ul style="list-style-type: none"> • Enter the correct address. The default address is http://192.168.1.1 or http://uscc.hotspot • Only use one network adapter in your PC. • Do not use any proxy server.
About the password	<ul style="list-style-type: none"> • Select Device Info on the LCD screen to check the SSID and Wi-Fi connection password or check the label on the device to get them. • Select Device Info on the LCD screen to check the default login password or check the label on the device to get it. • If you changed the password and forgot the new password, you need to restore the device to the factory default settings.

For more assistance, please:

- Send E-mail to **mobile@zte.com.cn**
- Visit **www.ztedevice.com**
- Call Service Hotline: 1-888-944-9400