



## Instruction Manual

Thank you for purchasing the RC Walking Dragon. This manual provides more information about this product, please read the instructions before using.




propella  
Dream, Everyday

8+


### Product Overview



RC Walking Dragon



Remote Controller



Instruction Manual


### Package Contents

RC Walking Dragon x 1  
Remote Controller x 1  
Instruction Manual x 1

### Specifications

RC Walking Dragon Power Supply:  
3 x "AA" 1.5V Alkaline Batteries (Not Included)  
Remote Controller Power Supply:  
2 x "AAA" 1.5V Alkaline Batteries (Not Included)  
Frequency:  
Red Dragon - 27.145 MHz


### Remote Controller

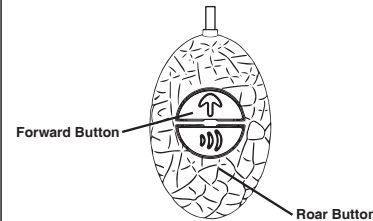

Forward Button

Roar Button

### Standard Control

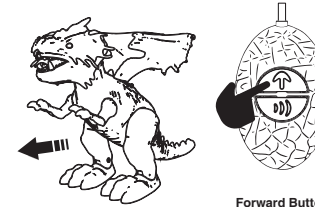


Control RC Walking Dragon to move forward



Control RC Walking Dragon to roar

### Power On/Off

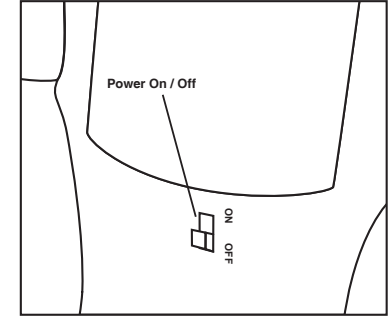


Power On / Off

### Power On/Off

Slide the ON/OFF Switch to ON to turn on the RC Walking Dragon.  
Slide the ON/OFF Switch to OFF to turn off the RC Walking Dragon.

### Batteries Installation

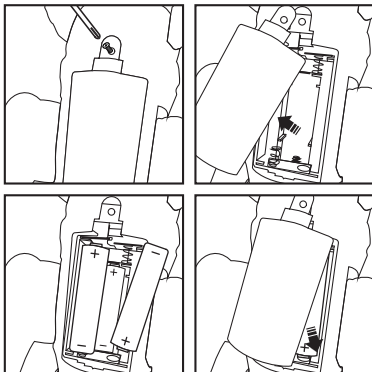


To install batteries into the RC Walking Dragon, unscrew the screw on the battery box cover to open the battery compartment. Insert 3 x "AA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram.  
Put back in place the battery box cover and tighten the screw.

#### Notice:

When inserting the batteries, you must insert according to the correct polarity, the RC Walking Dragon won't function if batteries are reversed.

### Batteries Installation

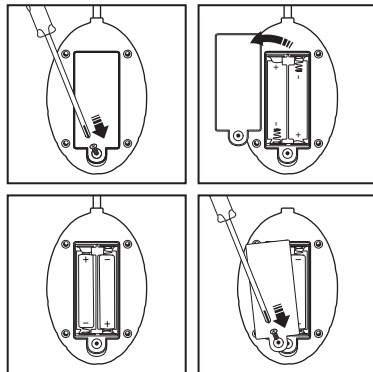

To install batteries into the Remote Controller, unscrew the screw on the battery box cover to open the battery compartment. Insert 2 x "AAA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram.  
Put back in place the battery box cover and tighten the screw.

#### Notice:

When inserting the batteries, you must insert according to the correct polarity, the Remote Controller won't function if batteries are reversed.

### Performance Tips

1. Do not drive the RC Walking Dragon on grass, sand or go through water.
2. Do not drive the RC Walking Dragon in windy or rainy weather.
3. Do not drive the RC Walking Dragon into any hard object.
4. Keep fingers, hair and loose clothing away from RC Walking Dragon.

### Care and Maintenance

Always use dry and soft cloth to clean this product.

Avoid this product from being exposed to sunlight or heat.

Avoid immersing these toys in water, otherwise, the electronic parts may be damaged.

Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired and in good working condition.

### IMPORTANT: BATTERY INFORMATION

#### CAUTION:

#### TO AVOID BATTERY LEAKAGE

1. The batteries used with this product are small parts and should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone American Association of Poison Control Centers (1-800-222-1222).
  2. Always purchase the correct size and grade of battery most suitable for intended use.
  3. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
  4. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
  5. Remove exhausted or dead batteries from the product.
  6. Remove batteries if product is not to be played with for a long time.
  7. Do not short-circuit the supply terminals.
- Should this product cause, or be affected by local electrical interference, move it away from other electrical equipment. Reset (switching ON & OFF again or removing and re-inserting batteries) if necessary.

### Warning

This product is suitable to be used by people who has operating experience in remote toy or aged no less than 8 years old.

Please do not put the product in your mouth to prevent choking hazard of small parts.

Please do not put the finger into available interspaces.

Please do not play the product in a brutal way such as throwing, crashing or twisting it.

Please store the smaller-sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents.

Avoid placing the batteries in places in high temperatures and avoid exposure to heat.

When young children are operating the product, it shall be ensured that the adults are guiding and making sure the product control is within the viewing range of the controller (or instructor) so that it makes the control of the toy more convenient.

When the product is not in use, please switch off the power supplies of the toy, and remove the batteries from the product.

Please note that we won't take any responsibility for any wrong operation as this may result in severe injury or loss of property, and we cannot control the operating process during the time when the user assembles or uses this product.

Once this product is sold, we won't be responsible for any safety responsibility during the time the user operates or uses controls this products.

"Caution": Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

### FCC Statement

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/ TV technician for help.

#### RF warning statement:









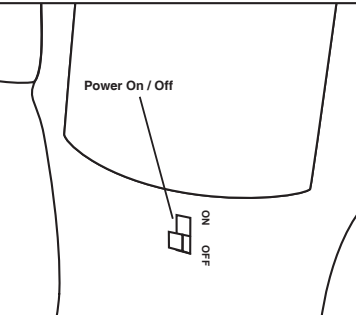
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ZT-0019




Keep all relevant information for future reference

Distributed by:  
OLD EAST MAIN CO.  
100 MISSION RIDGE  
GOODLETTSVILLE, TN 37072-2170  
MADE IN CHINA

<p><b>8+</b></p>  <h2>Instruction Manual</h2> <p>Thank you for purchasing the RC Walking Dragon. This manual provides more information about this product, please read the instructions before using.</p>  <p><b>propella</b> Dream, Everyday</p>	<h3>Product Overview</h3>  <p>RC Walking Dragon</p>  <p>Remote Controller</p>  <p>Instruction Manual</p>	<h3>Package Contents</h3> <p>RC Walking Dragon x 1 Remote Controller x 1 Instruction Manual x 1</p> <hr/> <h3>Specifications</h3> <p>RC Walking Dragon Power Supply: 3 x "AA" 1.5V Alkaline Batteries (Not Included)</p> <p>Remote Controller Power Supply: 2 x "AAA" 1.5V Alkaline Batteries (Not Included)</p> <p>Frequency: Green Dragon - 49.88 MHz</p> <hr/> <h3>Remote Controller</h3>  <p>Forward Button</p> <p>Roar Button</p>	<h3>Standard Control</h3>  <p>Forward Button</p> <p>Control RC Walking Dragon to move forward</p>  <p>Roar Button</p> <p>Control RC Walking Dragon to roar</p>	<h3>Power On/Off</h3>  <p>Power On / Off</p> <p>ON</p> <p>OFF</p> <p>Power On/Off</p> <p>Slide the ON/OFF Switch to ON to turn on the RC Walking Dragon. Slide the ON/OFF Switch to OFF to turn off the RC Walking Dragon.</p>
---	---	---	--	---


### Batteries Installation

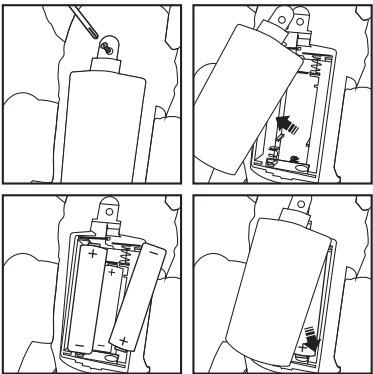

To install batteries into the RC Walking Dragon, unscrew the screw on the battery box cover to open the battery compartment. Insert 3 x "AA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram.  
Put back in place the battery box cover and tighten the screw.

**Notice:**  
When inserting the batteries, you must insert according to the correct polarity, the RC Walking Dragon won't function if batteries are reversed.

### Batteries Installation

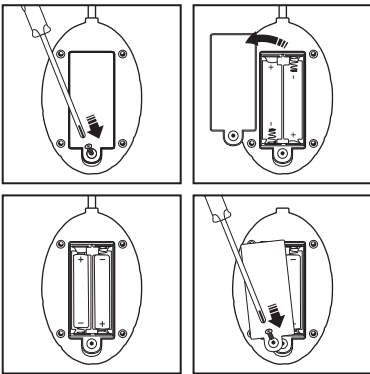

To install batteries into the Remote Controller, unscrew the screw on the battery box cover to open the battery compartment. Insert 2 x "AAA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram.  
Put back in place the battery box cover and tighten the screw.

**Notice:**  
When inserting the batteries, you must insert according to the correct polarity, the Remote Controller won't function if batteries are reversed.

### Performance Tips

- Do not drive the RC Walking Dragon on grass, sand or go through water.
- Do not drive the RC Walking Dragon in windy or rainy weather.
- Do not drive the RC Walking Dragon into any hard object.
- Keep fingers, hair and loose clothing away from RC Walking Dragon.

---

### Care and Maintenance

Always use dry and soft cloth to clean this product.

Avoid this product from being exposed to sunlight or heat.

Avoid immersing these toys in water, otherwise, the electronic parts may be damaged.

Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired and in good working condition.

---

### IMPORTANT: BATTERY INFORMATION

**CAUTION:**

TO AVOID BATTERY LEAKAGE

- The batteries used with this product are small parts and should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone American Association of Poison Control Centers (1-800-222-1222).
- Always purchase the correct size and grade of battery most suitable for intended use.
- Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- Remove exhausted or dead batteries from the product.
- Remove batteries if product is not to be played with for a long time.
- Do not short-circuit the supply terminals.

Should this product cause, or be affected by local electrical interference, move it away from other electrical equipment. Reset (switching ON & OFF again or removing and re-inserting batteries) if necessary.

### Warning

This product is suitable to be used by people who has operating experience in remote toy or aged no less than 8 years old.

Please do not put the product in your mouth to prevent choking hazard of small parts.

Please do not put the finger into available interspaces.

Please do not play the product in a brutal way such as throwing, crashing or twisting it.

Please store the smaller-sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents.

Avoid placing the batteries in places in high temperatures and avoid exposure to heat.

When young children are operating the product, it shall be ensured that the adults are guiding and making sure the product control is within the viewing range of the controller (or instructor) so that it makes the control of the toy more convenient.

When the product is not in use, please switch off the power supplies of the toy, and remove the batteries from the product.

Please note that we won't take any responsibility for any wrong operation as this may result in severe injury or loss of property, and we cannot control the operating process during the time when the user assembles or uses this product.

Once this product is sold, we won't be responsible for any safety responsibility during the time the user operates or uses controls this products.

"Caution": Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

### FCC Statement

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/ TV technician for help.

RF warning statement:  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

GREEN: FCC ID: 2ADMS-ZT-0019-49

ZT-0019



8 17498 02431 5

Keep all relevant information for future reference

Distributed by:  
OLD EAST MAIN CO.  
100 MISSION RIDGE  
GOODLETTSVILLE, TN 37072-2170  
MADE IN CHINA [E20]