

COMPAQ

PRESARIO **EZ** SERIES

CD-Rewritable (CD-RW)

The information in this guide is subject to change without notice.

COMPAQ COMPUTER CORPORATION SHALL NOT BE LIABLE FOR TECHNICAL OR EDITORIAL ERRORS OR OMISSIONS CONTAINED HEREIN; NOR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE FURNISHING, PERFORMANCE, OR USE OF THIS MATERIAL.

This guide contains information protected by copyright. No part of this guide may be photocopied or reproduced in any form without prior written consent from Compaq Computer Corporation. The software described in this guide is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of the agreement.

© 2000 Compaq Computer Corporation. All rights reserved. Compaq and Presario are registered in the U.S. Patent and Trademark Office. Microsoft, MS-DOS, and Windows are registered trademarks of Microsoft Corporation. Product names mentioned herein may be trademarks and/or registered trademarks of their respective companies.

Printed in the U.S.A., Brazil, Canada, Japan, Korea, Singapore, Taiwan, and the U.K. First Edition January 2000.



171285-001



Contents

Chapter 1 Learning About Your just!burn CD-Rewritable (CD-RW) Software

Understanding CD-R and CD-RW Media	2
Media Matrix	3
Formatting Options	4
Formatting a CD-R Disc	4
Formatting a CD-RW Disc	7
Using PacketCD	9
Sharing Data/Finalizing a Disc	9
Using <i>CD!backup</i>	11
Using just!audio	12
Planning a Successful Recording	12
Using the just!audio Editor	13
just!audio Editor Windows (CD-ROM View)	13
The just!audio Editor Icons	15
Record Settings	16
Option Settings	17
Using your CD-RW Drive to Record an Audio CD	18
Finalizing a Disc	21
Buffer Underrun Errors	21
Tips to Help Prevent Buffer Underruns	22
Adding Artwork	23
Using just!data	26
Using the Online Manual	26
Troubleshooting	27


Learning About Your *just!burn* CD-Rewritable (CD-RW) Software

just!burn is the easy way to create your own personal audio or data CDs. You can also create personalized labels, inlay cards, and booklets.

Supporting both standard CD-ROM discs, CD-R discs (write once) and CD-RW discs (rewritable), *just!burn* provides the following tools:

Tool	What you can do
<i>PacketCD</i>	Copy individual files. Drag and drop files from one drive to another.
<i>CD!backup</i>	Copy an entire CD. Create working backups of important data or your favorite CDs.
<i>just!audio</i>	Create audio CDs from your personal CDs or from downloaded MP3 files. Play your new CD on most any home or car CD, or multimedia computer.
<i>just!data</i>	Produce data CDs or copy files. Offers the highest compatibility when sharing discs between different PCs.

The *just!burn* CD Assistant is displayed when a blank, unformatted disc is inserted into the CD-RW Drive. From the *just!burn* CD Assistant screen, you can access all the tools in the software package.

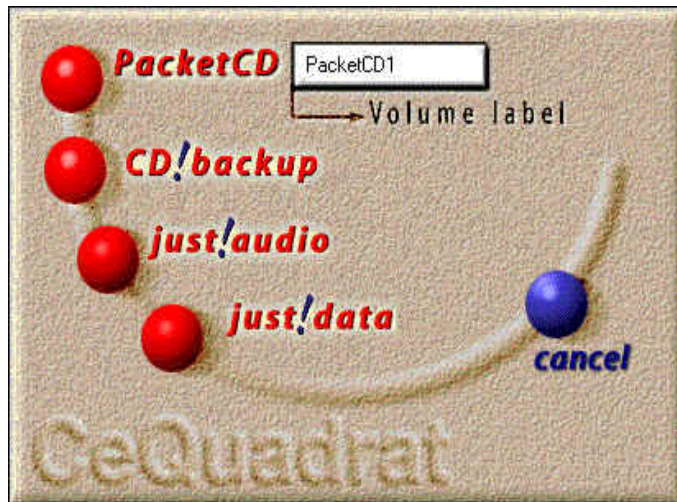

just!burn CD Assistant

Understanding CD-R and CD-RW Media

You can use either CD-R or CD-RW discs to record material, but each has distinct advantages and limitations.

The CD-R disc:

- ◆ Can be used on most any computer CD-ROM drive.
- ◆ Can be used to create CD backups of your personal CDs.
- ◆ Is recommended for creating audio discs or sharing information between computers.
- ◆ Is recommended for creating personal system backups.
- ◆ Can be written to only once.

The CD-RW disc:

- ◆ Can be used on most any computer CD-ROM drive.
- ◆ Can be used to create CD backups of your personal CDs.
- ◆ Is recommended for creating personal system backups.
- ◆ Can be erased partially or completely and then reused.



HINT: For best compatibility, CD-RW discs should be played on your CD-RW drive.

Media Matrix

Use the following guidelines when choosing the appropriate CD recording media:

Media Matrix		
Format	CD-R Media	CD-RW Media
Erasable	No	Yes
Drive	CD-R Media	CD-RW Media
Multi-read (see note below)	Yes	Yes
CD-ROM	Yes	Yes
CD audio player	Yes	No
DVD-ROM	Yes	Yes
Uses	CD-R Media	CD-RW Media
Backup	Yes	Yes
Reusable storage	No	Yes
Long-term archive	Yes	No
Audio	Yes	No
Publishing	Yes	No
Sharing files	Yes	No



NOTE: MultiRead CD-ROM drives are designed to support CD-RW discs. Most new CD-ROM drives on the market today are MultiRead compatible. To be MultiRead compatible, a CD-ROM drive must be able to read CD-R discs and CD-RW discs. Some non-MultiRead CD-ROM drives can also read UDF formatted CD-R media (but not CD-RW media).


Formatting Options

CD-R and CD-RW discs must be formatted before recording.

Formatting a CD-R Disc

To format a CD-R disc, complete the following steps:


1. Insert a CD-R disc into your disc drive. The *just!burn* CD Assistant is displayed:

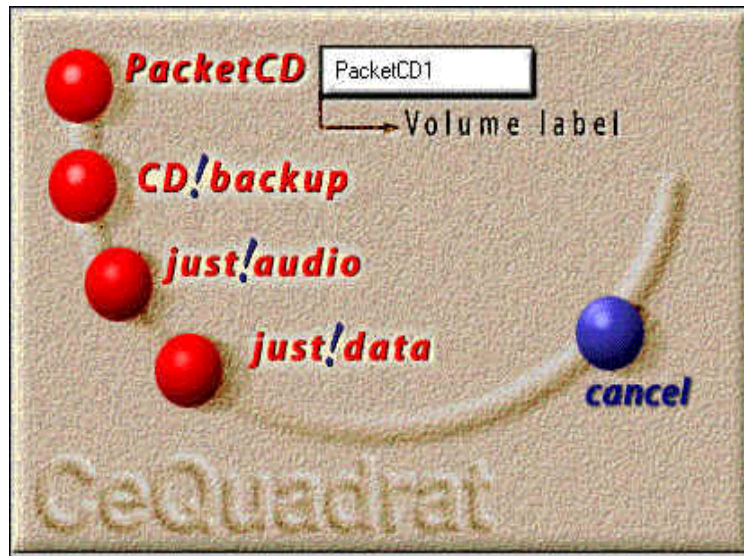

just!burn CD Assistant

2. Type a name for the CD in the **Volume label** box.

-
3. Click the *PacketCD* button. The **CD-R Format Options** screen is displayed:

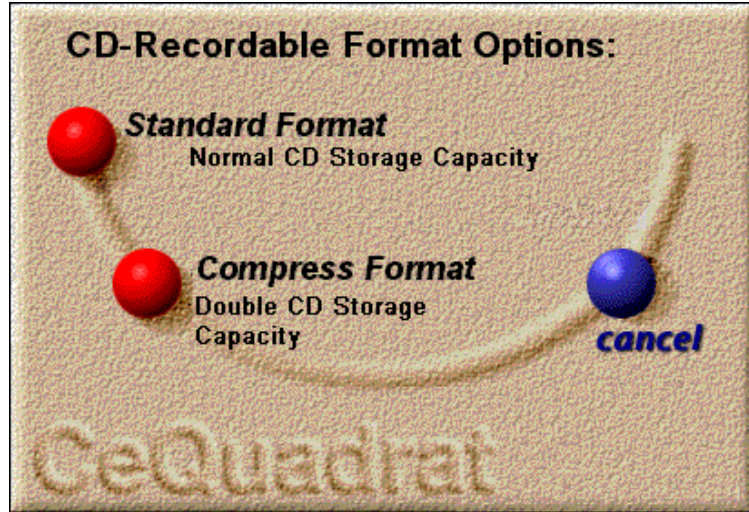


CD-Recordable Format Options screen



HINT: When formatting a CD-R or CD-RW, you can choose standard or compressed format. The **Compress Format** option doubles storage capacity and improves read and write performance. However, a compressed disc can only be read by a PC equipped with *just!burn* software.

-
4. Click **Standard Format** or **Compress Format**. The **Formatting Progress Bar** is displayed:

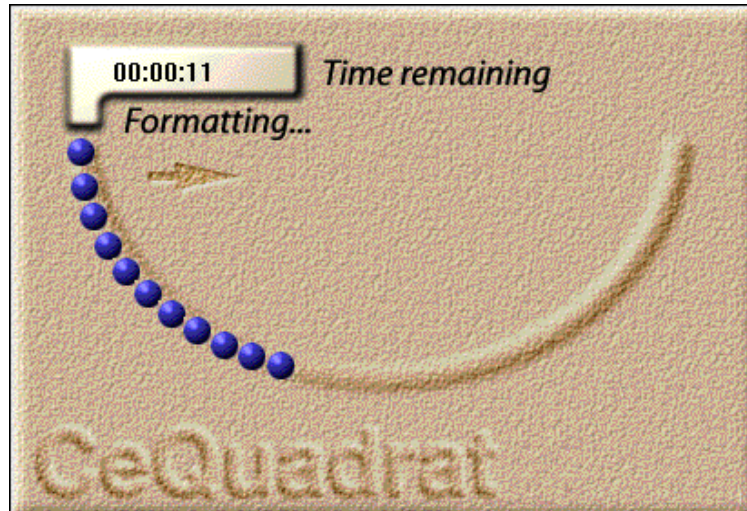


Formatting Progress Bar

Formatting a CD-RW Disc

To format a CD-RW disc, complete the following steps:

1. Insert a CD-RW disc into the CD-RW drive. The **CD-RW formatting** screen is displayed:

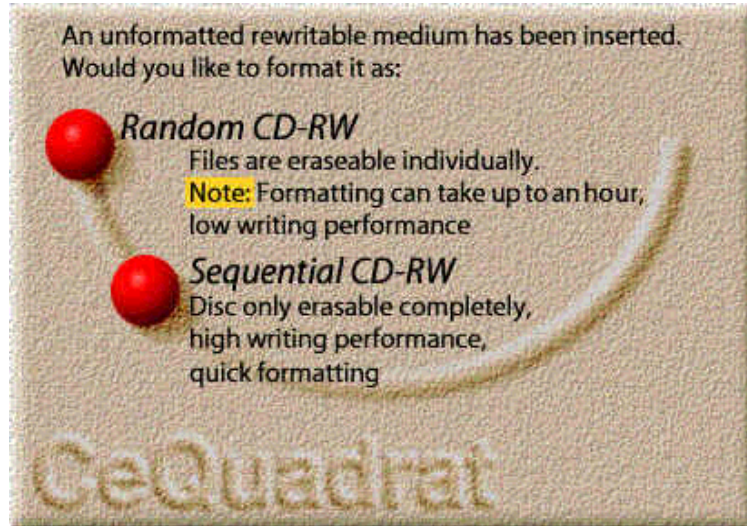


CD-RW formatting screen



NOTE: **Random CD-RW** provides all the benefits of a CD-RW, but formatting may take up to an hour. While **Sequential CD-RW** provides quicker formatting, you lose the ability to erase files individually.

-
2. Click **Random CD-RW** or **Sequential CD-RW**. The **CD-RW Format Options** screen is displayed:

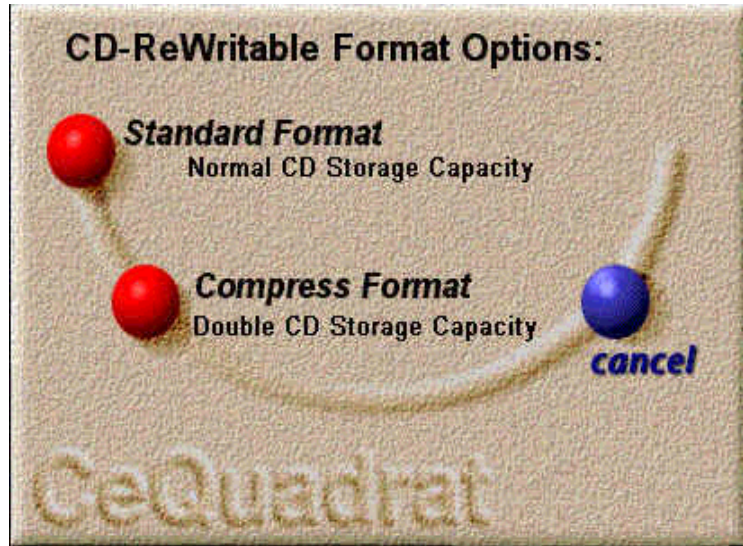

CD-ReWritable Format Options screen

3. Click **Standard Format** or **Compress Format**. The formatting is completed in about 30 seconds.

Using *PacketCD*

PacketCD allows you to use your CD-RW drive just like a hard drive or any other removable media drive (e.g., Zip). *PacketCD* makes it possible to drag-and-drop files to the letter of the CD-RW drive within **Windows Explorer** or any other **Windows** application.

If your Presario Internet PC is equipped with both a CD-ROM or DVD-ROM drive and a CD-RW drive, you can write data directly between the two drives (write “on-the-fly”).



NOTE: When recording to a CD-R or CD-RW, Compaq recommends that you disable your Presario Internet PC sleep mode. (See Planning a Successful Recording in the “Using *just!audio*” section for details.)

Sharing Data/ Finalizing a Disc

In order to share recorded data, you must first finalize your disc. To finalize your disc in *PacketCD*, complete the following steps:

1. From the **Windows** desktop, double-click the **My Computer** icon .
2. Right-click the letter of your CD-RW drive. (Your CD-RW drive might be identified as *PacketCD* (E:), for example.)
3. Click **Finalize disc**.



NOTE: When you finalize a disc in *PacketCD*, the Universal Disc Format (UDF) file system is automatically recorded to the disc. UDF allows you to use the new CD in another computer.

What is UDF?

Universal Disc Format (UDF) is a file system that supports the current generation of optical drives such as CD-RW, DVD-ROM, and DVD-Video. Standard CD-ROMs are usually formatted using a file system called ISO 9660.

UDF was designed to address the limitations of ISO 9660 for DVD-ROM, CD-RW, and other new disc formats. Specifically, UDF allows files to be added to a CD-R or CD-RW disc incrementally, one file at a time, without significant wasted space (these are functions within *PacketCD*).

UDF gives the user the ability to erase files individually on CD-RW media, freeing up space in the process. UDF also supports larger capacity discs like DVD-ROM. UDF Readers are especially useful if you are recording data to CD-RW media because you will be able to read the CD-RW disc in MultiRead CD-ROM drives. Without the UDF Reader, you can read this disc only in a CD-RW drive.

Using *CD!backup*

CD!backup allows you to create personal backups of almost any CD quickly and easily. If the CD-RW drive is the only CD-ROM or DVD-ROM drive on your Presario Internet PC, *CD!backup* uses your hard drive to temporarily store the information until recording is complete.

If your Presario Internet PC is equipped with an additional CD-ROM or DVD-ROM drive, you can write directly between the drives to create a personal CD backup (a process known as write “on-the-fly”).

To open *CD!backup*, choose **Start > Programs > CeQuadrat > CD!backup**. The *CD!backup* screen is displayed:



CD!backup screen



NOTE: A complete explanation of the **options** screen is provided in the *just!audio* section.

Using *just!audio*


Planning a Successful Recording

just!audio allows you to make professional quality CD recordings. For best results, follow these important steps *prior* to recording.

Disabling the Sleep Mode

Your Presario Internet PC is equipped with Sleep Mode. If the Sleep Mode is enabled during recording, the CD may be ruined. To ensure your computer is not in Sleep Mode, complete the following steps:

1. Choose **Start > Settings > Control Panel > Power Management**. The **Power Management Properties** dialog box is displayed:

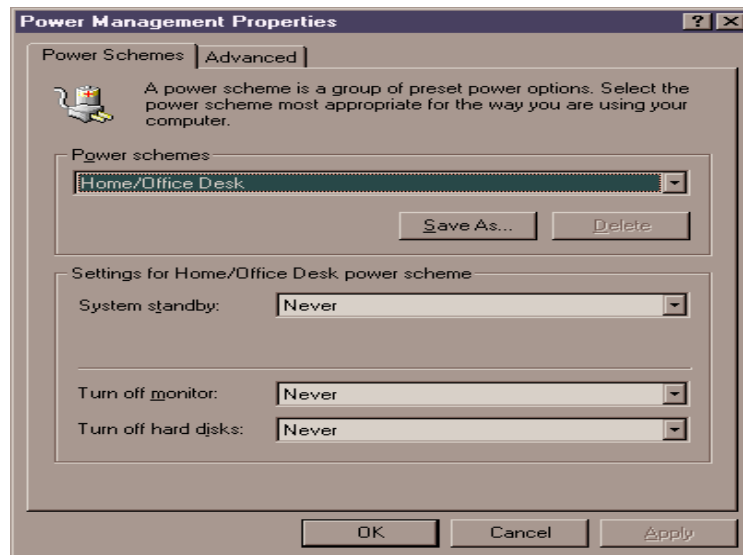

Power Management Properties dialog box

2. Verify that the **System standby**, **Turn off monitor**, and **Turn off hard disks** drop-down lists are set to **Never**.
3. Click **OK**.

Using the *just!audio* Editor

just!audio is the easy way to add songs to a CD. To open the *just!audio* editor, choose **Start > Programs > CeQuadrat > just!audio**. The default **CD-ROM** view is displayed:



just!audio editor

just!audio Editor Windows (CD-ROM View)

When you open the *just!audio* **CD-ROM** view, two windows are displayed. The **source** window (upper) is divided into two sections. The left side of the **source** window lists CD drive(s) on your computer. The right side of the **source** window provides access to audio tracks from existing CDs.

The **new CD** window (lower), is the destination window where you drag and drop audio selections. The order of tracks on your new CD is determined by dropping the tracks into their desired locations or by moving the existing tracks.

The *just!audio editor* provides four methods for bringing new tracks into a project:

- ◆ sample
- ◆ CD-ROM (default)
- ◆ database
- ◆ file system

You can access any method by clicking its tab in the **source** window.



NOTE: Refer to the Online Manual for more information about **sample**, **database**, and **file system** recording methods.


The *just!audio* Editor Icons

The *just!audio editor* provides you with all the tools you need to make a professional CD recording. The icons and their functions are described below:

Icon	When/How to Use
	Add songs to a new CD.
	Set recording levels.
	Create jewel case inlay cards, booklets, and CD labels.
	Begin recording.
	Remove unwanted pops and clicks from a track.
	Scan and remove unwanted silence from the beginning or end of source material.
	Automatically adjust peak recording levels of an audio track for highest gain.
	Preview a recorded track.

Record Settings *just!audio* checks your system performance and automatically sets up for optimal recording speed. *just!audio* simplifies options available for the recording. They can be individually selected by clicking the **detailed** tab, or the slide-bar can be used to set the options in the **easy** screen.

From the *just!audio* editor, click the **options** button. The **options** screen is displayed:

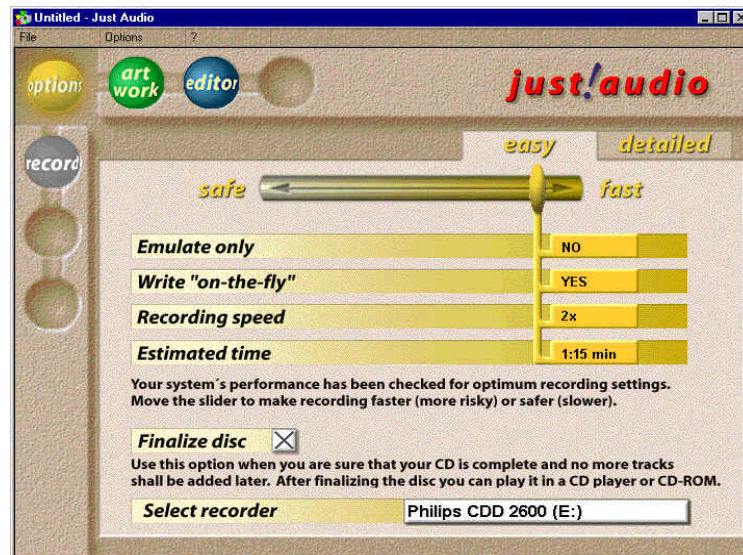

just!audio options screen

Move the slide-bar between **safe** and **fast** for instant feedback on how the different settings affect recording time and reliability.



Slide-Bar



NOTE: Once default settings have been changed, these new settings will become the default settings for future recordings.

Option Settings

Use the following guidelines when choosing record settings:

Option	What it does
Emulate only	Allows you to perform a test run before recording. To test system performance, Compaq recommends using the "Emulate Only" option when recording a CD or using a computer system for the first time.
Write "on-the-fly"	If your Presario Internet PC is equipped with a CD-ROM or DVD-ROM drive <i>and</i> a CD-RW drive, you can write data directly between drives. If system performance is low or if the source disc is scratched, it is safer to leave this option off and copy the tracks to the local hard drive first. In this case, make sure there is enough free space on the temporary drive before attempting to record.
Recording speed	Use this option to select the recording speed from source disc to destination CD-R/CD-RW disc. If system performance is in question or if the recording will be done "On-the-fly" from a slower CD-ROM, it may be safer to select a lower write speed. This will not affect the quality or speed of playback from the recorded CD.
Estimated time	Displays estimated recording time.

Using your CD-RW Drive to Record an Audio CD

just!audio allows you to create your own audio CDs. You can record over multiple recording sessions to fill your CD-R disc.

After completing the planning steps and designing your CD track list, you are ready to record. To achieve the best performance when recording an audio CD on your CD-RW drive, complete the following steps:

1. From the *just!burn CD Assistant*, click the *just!audio* button. The *just!audio editor* is displayed:



just!audio editor



NOTE: The display will show two upper (source) windows from which to drag audio selections and one lower (destination) window in which to drop them.

-
2. Insert the source disc (the disc containing the tracks you want to record) into the CD-RW drive.

3. Double-click the **CD-RW** icon  in the **source** window. The contents of the source CD are displayed:

Track	Title	Artist
CD	Graceland	Paul Simon
1	The Boy In The Bubble	Paul Simon
2	Graceland	Paul Simon
3	I Know What I Know	Paul Simon
4	Gumboots	Paul Simon
5	Diamonds On The Soles Of Her Shoes	Paul Simon
6	You Can Call Me Al	Paul Simon

just!burn CD source window

4. Drag and drop the desired tracks (songs) to the **New CD** window. This will copy the selected tracks to a temporary file on your hard drive.
5. When copying to the hard drive is complete, remove the source CD.
6. Insert the destination disc (the disc you want to record to), and *wait until the content list of the source disc clears from the source window*, or the CD-RW drive icon reads, “Free Space.” This will take approximately 10 seconds.



HINT: If you press the **record** button and the destination CD is not in the CD-RW drive, you will be prompted to insert the destination CD.

7. Click **record**. The *just!audio* record screen is displayed:



just!audio Record screen



NOTE: You can stop recording at any time during the process by pressing the **OFF** button.

8. Once recording has completed, you will be prompted to either finalize the disc or add additional tracks. If you plan to add additional tracks, **DO NOT** finalize the disc.
9. To add additional tracks, return to the **editor** and repeat steps 3 through 7.

Finalizing a Disc

When recording is complete, the disc must be finalized. Only after finalization can a disc be played in a CD player or CD-ROM drive. When you have finalized a CD-R disc, no additional tracks can be recorded.

To finalize an audio CD, complete the following steps:

1. Insert the disc into the CD-RW drive.
2. Open the *just!audio* tool.
3. Click the **options** button. The **options** screen is displayed:
4. From the **options** screen, click the **detailed** tab.
5. Verify that the **Finalize disc** option is checked.
6. Click the **record** button.

Buffer Underrun Errors

A buffer underrun error occurs when the data flow is interrupted. This type of error can occur on single or dual optical drive systems (CD-ROM, CD-RW, or DVD-ROM drive).

CD writing is a real-time process that must run constantly at the selected recording speed, without interruption. Because the CD recorder's buffer contains a reserve of data waiting to be written, small slowdowns or interruptions in the flow of data will terminate the writing process. A buffer underrun error means that for some reason the flow of data from the source (e.g., hard disc, CD-ROM drive) to the CD recorder was interrupted long enough for the CD recorder's buffer to be emptied, and writing was stopped.



WARNING: If data flow is interrupted during an actual write operation, your recordable disc may be damaged.

If you experience a buffer underrun error in the *just!burn* application, a window offering multiple options is displayed. These options include:

- ◆ Repeat Track
- ◆ Continue Track
- ◆ Next Track
- ◆ Finalize + Cancel
- ◆ Cancel

For best fidelity, Compaq recommends that you select **Repeat Track**.



NOTE: In extreme cases, some errors may render your disc unusable. If this occurs, it may be necessary to start over with a new disc and properly dispose of the old disc.

Tips to Help Prevent Buffer Underruns

Use the following guidelines to help prevent buffer underruns:

- ◆ Close all other open programs prior to recording.
- ◆ Record audio CDs by using the Track-at-once function.
- ◆ Keep the CDs, the recorder, and your source CD-ROM drive free of dust, fingerprints, and scratches.
- ◆ Ensure your harddrive is not fragmented.
- ◆ Verify correct recorder controller settings.
- ◆ Do not record across the network (a network may be too slow to maintain adequate throughput speed).
- ◆ Ensure source files are not damaged.
- ◆ Do not copy empty directories, zero byte files, or files that may be in use by the system at the time of recording.
- ◆ Ensure the temporary directory has free space at least twice the size of the largest file you are recording.
- ◆ Disable any auto-dial programs during recording sessions.



NOTE: It is highly recommended that you use the highest quality media with your CD-RW drive. Quality varies by manufacturer; therefore, if you are unsuccessful with one media brand, try another.

Adding Artwork


just!audio contains a powerful tool for creating professional-looking jewel case inlay cards, booklets, and CD labels.

To print an item, click the **Printer** icon  in the lower-right corner of the *just!audio* screen. The **art work** screen provides buttons in the lower-left corner for inserting text boxes, indices of tracks and titles, and selecting a different background for the item.

The **label** tab also provides a special tool for adding curved text that wraps around the CD label. Double-clicking on any text or graphics box allows you to modify the properties of that object. (Labels are purchased separately.)

Inlay Card


The inlay card is designed to sit behind the CD tray, providing the rear and side views for the jewel case. The card generally announces the CD artist and title, as well as a list of tracks and their respective titles.

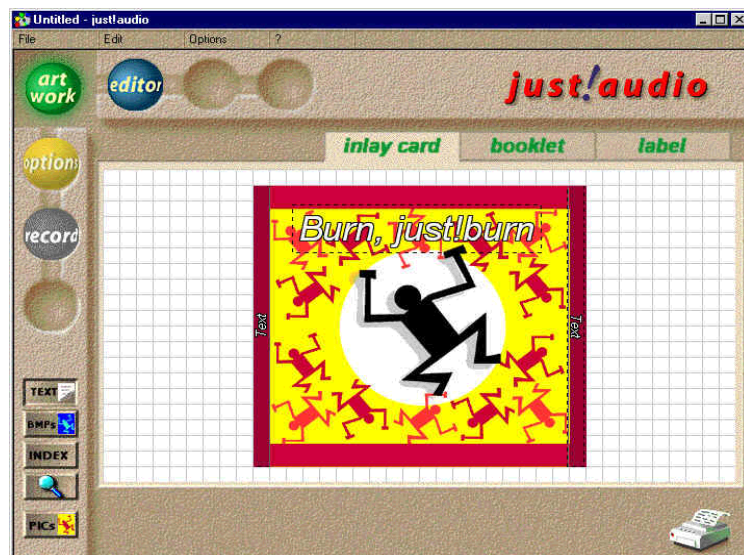

just!audio CD inlay card screen

CD Booklet


The CD booklet is held in the tabs on the front cover of the CD, providing the first impression of the CD contents. An additional index or other relevant information may be supplied as well.

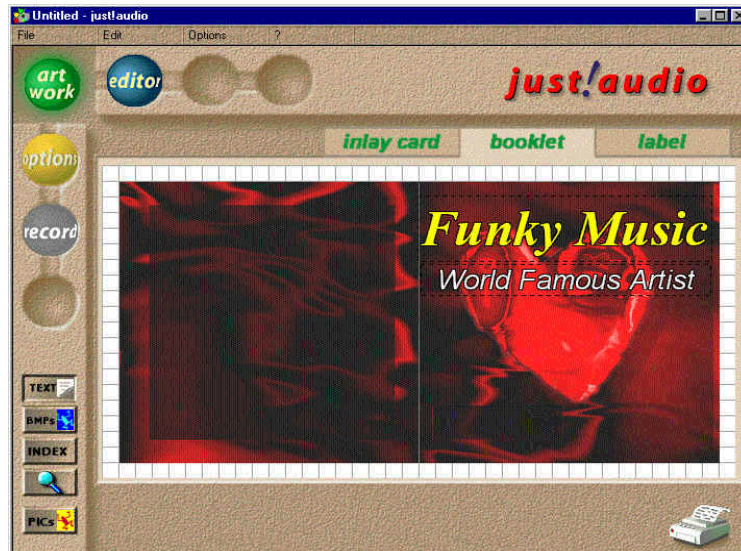

just!audio CD booklet screen

CD Label

just!audio allows you to print text and graphics directly to CD labels. In addition to the standard text and graphic tools, the curved text tool allows text to wrap around the label.

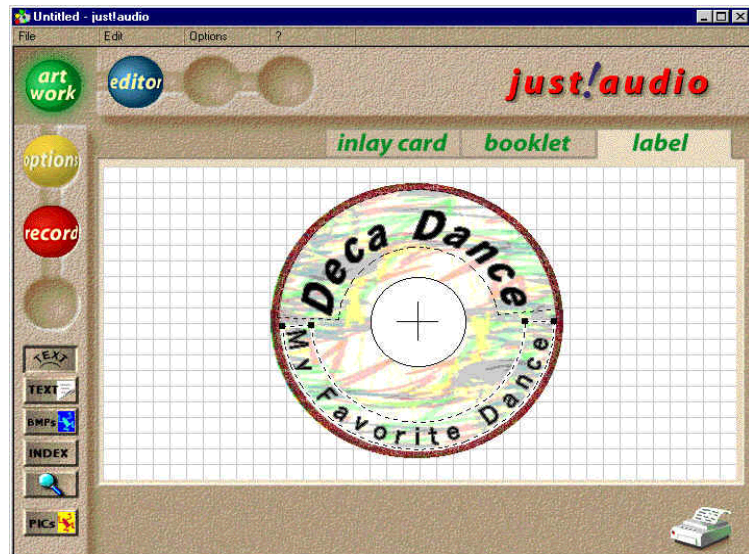

just!audio CD label screen

Using *just!data*

just!data easily creates data CDs that can be read on almost any computer and operating system. Your Presario Internet PC uses the hard drive for temporary file storage, enabling you to copy from one disc to another if you have only a CD-RW drive. Use these CDs to transfer files from one computer to another.



NOTE: The **art work** editor in *just!data* differs from the *just!audio* art work in only one detail: the index box does not display a directory tree.

Using the Online Manual

The *just!burn* software included with your Presario Internet PC comes with a complete online User Manual to answer any questions you might have about the functionality of the software with your CD-RW Drive.

To access the *just!burn* User Manual, select **Help** from the menu bar. The online manual will open for your use.

Troubleshooting

The following tables provide information for Audio, Data, and Hardware troubleshooting:

AUDIO		
Symptom	Problem	Solution
Trouble recording audio CDs	◆ Poor quality or ◆ Wrong media type	1. Ensure you are using CD-R media. 2. If CD-R media is being used, try a different brand (media quality varies by manufacturer).
Error message “End of user area encountered on disc” when recording audio CDs	◆ Trying to record too much data to the disc (maximum capacity is 74 minutes or 650 MB) or ◆ Trying to record to a used disc	1. Verify that the length of total tracks to be recorded does not exceed 74 minutes or 650 MB. 2. Try a new medium.
Unable to record music from stereo onto a CD-R/CD-RW	Attempting to use audio jack on CD-R/CD-RW drive	Audio jacks are drive-specific.
Buffer underrun when copying files from the C or D drive to the CD-R/CD-RW	Interruption in data streaming	See tips on preventing buffer underruns.
Audio CD has pops and skips	◆ Scratches or dust on source or ◆ Read speed is too high or ◆ Bad CD-R/CD-RW media	1. Clean the original or source CD. 2. Use the Declick option (de-select) in just!audio (Declick removes clicks and scratches from the source audio).

DATA

Symptom	Problem	Solution
Unable to read data from a CD-R or CD-RW disc	◆ Disc not finalized or ◆ UDF reader missing (PacketCD only)	1. Finalize the disc (see notes on how to finalize a disc). 2. Verify that the CD-ROM is a Multi-Read CD-ROM (see notes on Multi-Read CDs).
Unable to read files copied to the CD; option to close session unavailable	◆ Disc not finalized or ◆ UDF Reader missing (PacketCD only)	1. Finalize the disc (see notes on how to finalize a disc). 2. Verify that the CD-ROM is a Multi-Read CD-ROM (see notes on Multi-Read CDs).
Data cut off from the recorder interrupting the writing process	Buffer underrun while recording an audio CD	1. Follow steps on how to record an audio CD. 2. See notes on possible causes of buffer underrun.
◆ General Protection Failure (GPF) error or ◆ Error message "Write error loss of streaming"	Buffer underrun during an attempt to write "on-the-fly" in just!audio (only occurs with dual optical systems)	1. Ensure that the "Copy disc at Once" option is not checked. NOTE: The "Copy disc at Once" option does not put blank spaces between tracks. These pauses allow the source drive to refill data buffers on the CD-RW drive.

Hardware

Symptom	Problem	Solution
CD-R/CD-RW is not writing.	Error message ("ide cdr/w c12A at 4,44,85," for example).	1. Indicates a bad CD-ROM. 2. Recommend the CD-ROM be replaced.

NOTICE

The information in this guide is subject to change without notice.

COMPAQ COMPUTER CORPORATION SHALL NOT BE LIABLE FOR TECHNICAL OR EDITORIAL ERRORS OR OMISSIONS CONTAINED HEREIN; NOR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE FURNISHING, PERFORMANCE, OR USE OF THIS MATERIAL.

This guide contains information protected by copyright. No part of this guide may be photocopied or reproduced in any form without prior written consent from Compaq Computer Corporation.

©1999 Compaq Computer Corporation. All rights reserved.

Compaq is registered with the U.S. Patent and Trademark Office. Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries. Product names mentioned herein are trademarks and/or registered trademarks of their respective companies.

Printed in the U.S.A., Brazil, Canada, Japan, Korea, Singapore, Taiwan, and the U.K.

First Edition, December 1999