

**styleselections®**


Style Selections® is a registered trademark  
of LF, LLC. All rights reserved.

# WALL/CORNER MEDIA ELECTRIC FIREPLACE

MODEL #73092/26DE9301-PC72

Français p.17

Español p. 35

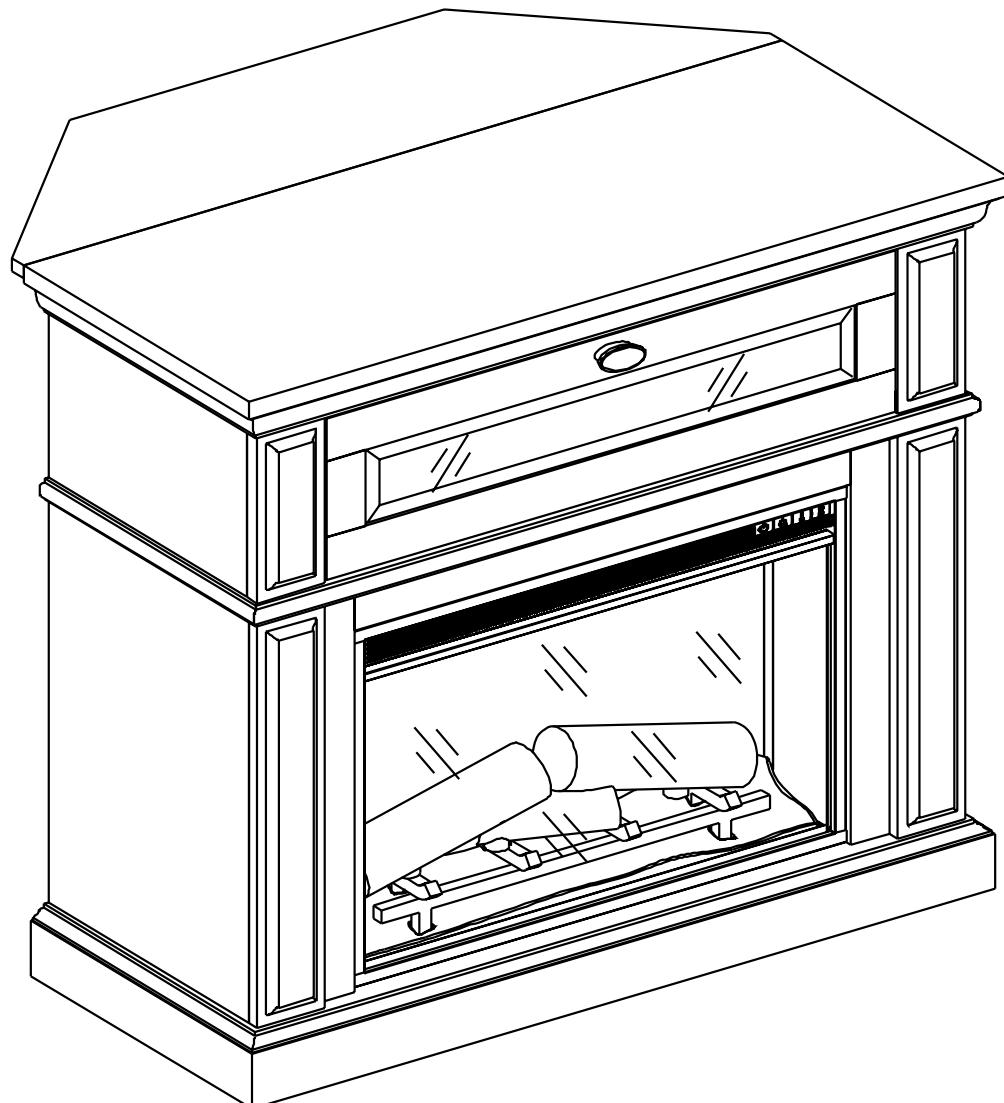

**Questions, problems, missing parts?** Before returning to your retailer, call our  
customer service department at 1-877-888-8225, 8 a.m. - 8 p.m., EST, Monday - Friday.

## TABLE OF CONTENTS

---

Product Specifications .....	2
Safety Information .....	3
Package Contents .....	6
Hardware Contents.....	7
Preparation.....	8
Assembly Instructions.....	8
Operating Instructions .....	13
Care and Maintenance .....	13
Troubleshooting.....	14
Warranty .....	15
Replacement Parts List .....	16

## PRODUCT SPECIFICATIONS

---

VOLTAGE	120 V, 60 Hz
AMPS (with heater)	11.7 Amps
AMPS (without heater)	< 0.1 Amps
WATTS (with heater)	1400 Watts
WATTS (without heater)	< 10 Watts

## **⚠ SAFETY INFORMATION**

---

Please read and understand this entire manual before attempting to assemble, operate or install the product.

### **WARNING**

- Before assembly, carefully use scissors or utility knife to cut and unwrap all parts. Make sure you do not discard the hardware.

### **CAUTION**

- Use care in assembling the fireplace. Take your time and use the hardware provided and a quality Phillips screwdriver. Never overtighten bolts.
- Do not sit on any part of the mantel.
- All panels are labeled left and right as viewed from the front of unit.

### **WARNING**

To avoid injury from unexpected starting or electrical shock, do not plug the power cord into a source of power during unpacking and assembly. The cord must remain unplugged whenever you are adjusting/assembling the fireplace.


If any part is missing or damaged, do not attempt to use or plug in the power cord until the missing or damaged part is correctly replaced. To avoid electric shock, use only identical replacement parts when servicing double-insulated tools.

**When using electrical appliances, always follow basic precautions to reduce the risk of fire, electrical shock, and injury to persons, including the following:**

1. Read all instructions before using this appliance.
2. This appliance is hot when in use. To avoid burns, do not touch hot surfaces with bare skin. If provided, use handles when moving this appliance. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 ft. from the front of this appliance.
3. The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
4. This appliance is not a toy. Supervise children playing near it.
5. If possible, always unplug this appliance when not in use.
6. Do not operate any heater with a damaged cord or plug, after the appliance malfunctions, or if it has been dropped or damaged in any manner.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Only a qualified service person should repair this product.
9. Under no circumstances should this fireplace be modified. Parts having to be removed for servicing must be replaced prior to operating this fireplace again.
10. Do not use outdoors.
11. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate this appliance where it may fall into a bathtub or other water container.
12. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
13. To disconnect this appliance, turn controls to the off position, and then remove plug from outlet.
14. Connect to properly grounded outlets only.
15. This appliance, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the current CSA C22.1 Canadian Electrical Code or for U.S.A. installations, follow local codes and the National Electrical Code, ANSI/NFPA NO.70.

## **⚠ SAFETY INFORMATION**

16. The heater must not be located immediately below a socket-outlet.
17. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the appliance.
18. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where opening may become blocked.
19. This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored. This fireplace should not be used as a drying rack for clothing. Do not hang Christmas stockings or other decorations on or near this product.
20. Use this appliance only as described in the manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
21. There is a thermostat limiter inside the heater. When inner temperature overheating or abnormal heating occurs, the thermostat protective device will cutoff the power supply to avoid damage to the fireplace or risk of fire.
22. Avoid the use of an extension cord because the extension cord may overheat and cause risk of fire. However, if you have to use an extension cord, the cord must be No.14 AWG minimum size and rated not less than 1875 watts. The extension cord must be a three-wire cord with grounding type plug and cord connection. The extension cord should not be more than 20 ft. in length.
23. See directions in Figure 1. This heater is for use on 120 volts. The cord has a plug as shown in Figure 1. See Figure 1 for grounding instruction. An adaptor as shown at C is available for connecting three-blade grounding type plugs to two-slot receptacles. The green grounding plug extending from the adaptor must be connected to a permanent ground such as a properly grounded outlet box. The adaptor should not be used if a three-slot grounded receptacle is available.

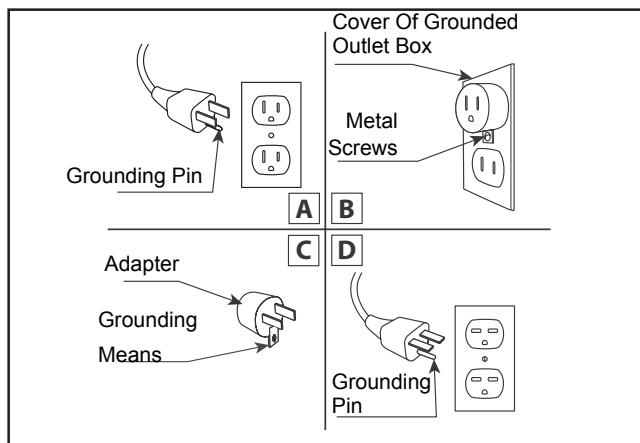

**Fig. 1**

**SAVE THESE  
INSTRUCTIONS**

## SAFETY INFORMATION



**Cold climate installation recommendation:** When installing this unit against a non-insulated exterior wall or chase, it is mandatory that the outer walls be insulated to conform to applicable insulation codes.

### ELECTRICAL CONNECTION

A 15-Amp, 120-volt, 60 Hz circuit with a properly grounded outlet is required. Preferably, the fireplace will be on a dedicated circuit as other appliances on the same circuit may cause the circuit breaker to trip or the fuse to blow when the heater is in operation. The unit comes standard with 6 ft. three-wire cord, exiting from the rear of the fireplace. Avoid using an extension cord. If an extension cord must be used, it must be a minimum 14 AWG, three-wire cord with grounding-type plug connector and rated not less than 1875 watts. The cord should not be more than 20 ft. in length.



**WARNING:** Make sure the power is turned off before proceeding. Any electrical repairs or rewiring of this unit should be carried out by a licensed electrician in accordance with national and local codes.

If repairing or replacing any electrical component or wiring, the original wire routing, color coding and securing locations must be followed.



**WARNING:** Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and injury to persons.



**WARNING:** Do not use this fireplace if any part of it has been under water. Immediately call a qualified service technician to inspect the fireplace and replace any part of the electrical system.



**WARNING:** Disconnect power before attempting any maintenance or cleaning to reduce the risk of fire, electrical shock or personal injury.



**WARNING:** During any service of this appliance, the power to the unit must be turned off. First turn the main power switch to the OFF position, then remove the electrical plug from the wall outlet.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Plug the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

NOTE: PLEASE OPERATE REMOTE TRANSMITTER AT A SLOW MEASURED PACE. PRESS THE REMOTE CONTROL BUTTONS WITH AN EVEN MOTION AND GENTLE PRESSURE. REPEATEDLY PRESSING BUTTONS IN RAPID SUCCESSION MAY CAUSE THE TRANSMITTER TO MALFUNCTION.

## PACKAGE CONTENTS

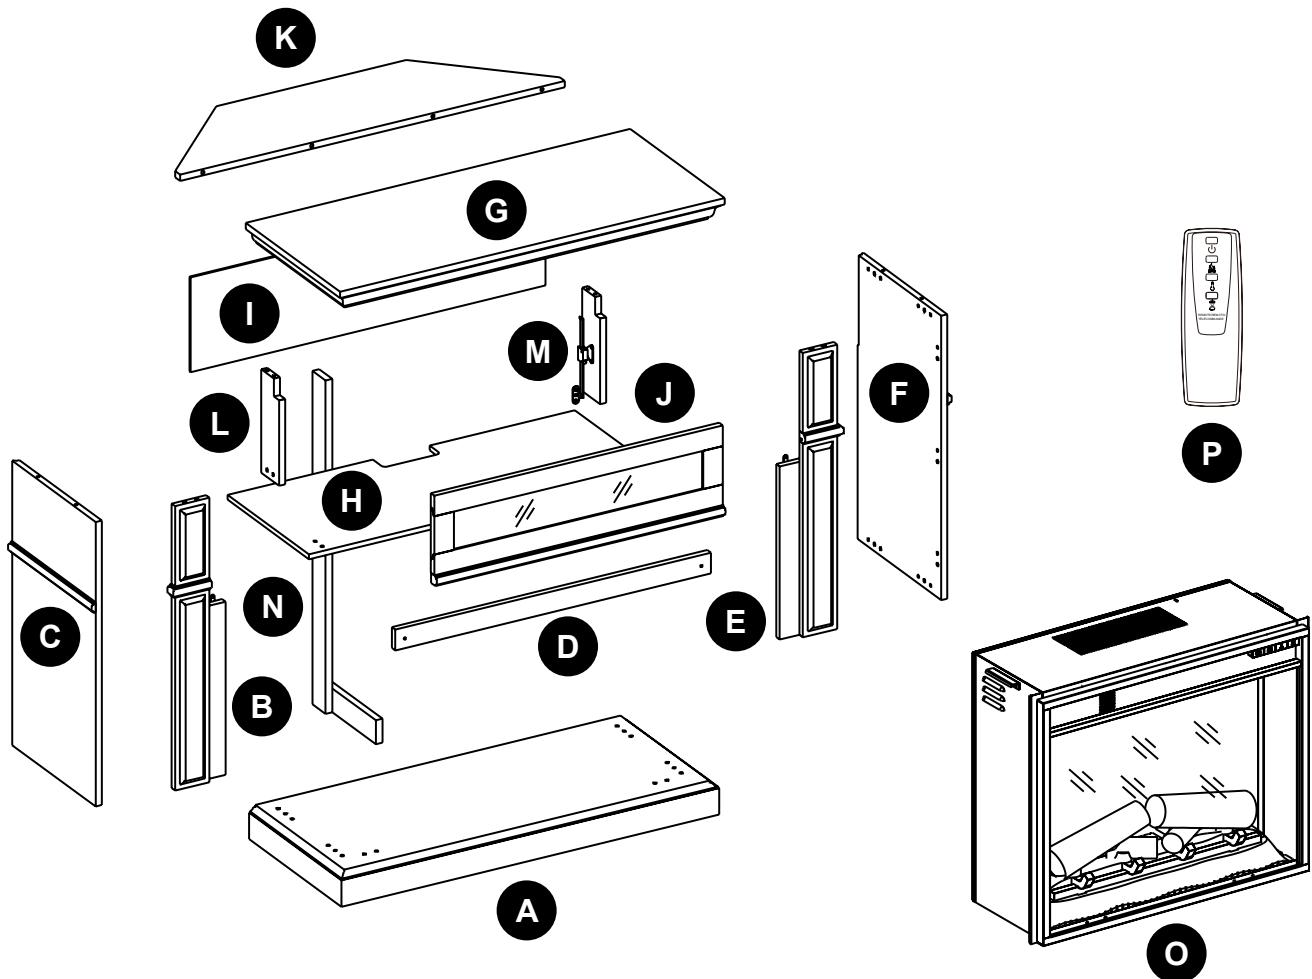

PART	DESCRIPTION	QUANTITY
A	Hearth/Base	1
B	Left Front Panel	1
C	Left Side Panel	1
D	Center Front Panel	1
E	Right Front Panel	1
F	Right Side Panel	1
G	Mantel/Top	1
H	Center Shelf	1
I	Back Panel	1
J	Front Flip Down Door	1
K	Top Corner Extension	1
L	Left Support Panel	1
M	Right Support Panel	1
N	"L" Corner Brace	1
O	Insert	1
P	Remote Control	1

## HARDWARE CONTENTS (shown actual size)

**AA**


Bolt

Qty: 68


**BB**

Long Screw


Qty: 2

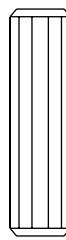**CC**

Wood Dowel

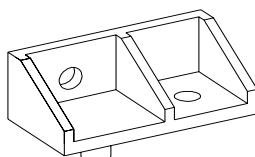**DD**Short Assembly  
Locking Block

Qty: 12

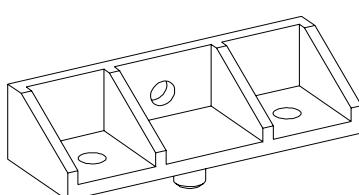**EE**Long Assembly  
Locking Block

Qty: 8

**FF**

Short Screw

Qty: 16

**GG**


Small Screw

Qty: 2

**HH**

Door Pull

Qty: 1

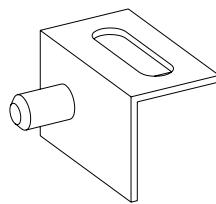**II**

Hinge

Qty: 2

**JJ**Touch-up Pen  
Model No. W3348

Qty: 1

## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the product.


### Estimated Assembly Time: 60 minutes


Tools Required for Assembly (not included): Phillips screwdriver, scissors and utility knife.

## ASSEMBLY INSTRUCTIONS

1. Set center shelf (H) and center front panel (D) face down on a scratch-free surface. Screw the bolts (AA) through the short assembly locking block (DD) and into the center front panel (D). Attach the center front panel (D) to center shelf (H) using bolts (AA) through the holes in the short assembly locking block (DD) and tighten.


### Hardware Used

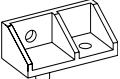
AA	Bolt		x 6
DD	Short Assembly Locking Block		x 3

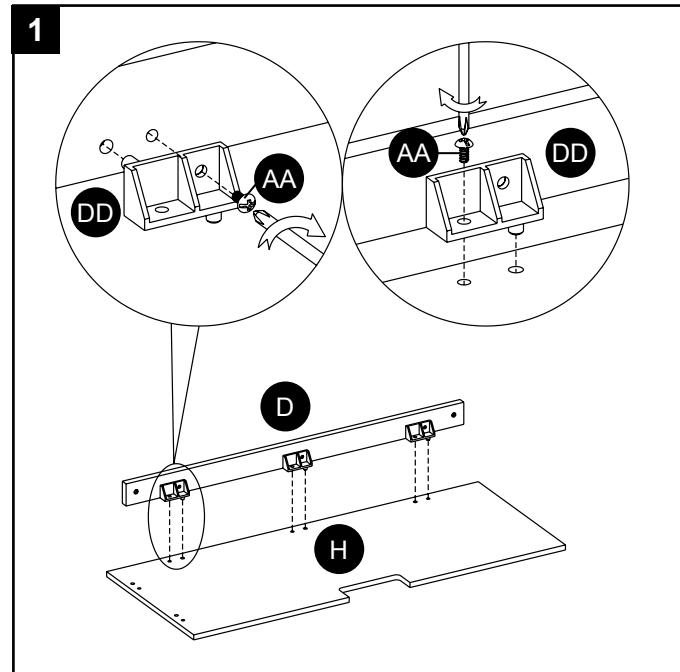

2. Screw the bolts (AA) through the short assembly locking block (DD) and into the left support panel (L). Attach the left support panel (L) to center shelf (H) using bolts (AA) through the holes in the short assembly locking block (DD) and tighten. REPEAT FOR OPPOSITE SIDE.

### Hardware Used

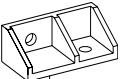AA	Bolt		x 4
DD	Short Assembly Locking Block		x 2

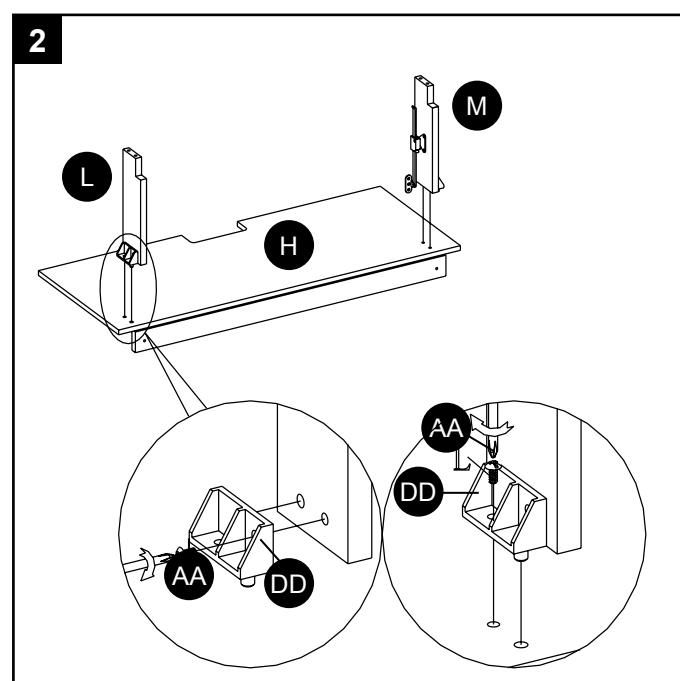


3. Set the left front panel (B), right front panel (E), left side panel (C), and right side panel (F) face down on a scratch-free surface. Screw the bolts (AA) through the short assembly locking block (DD) and into the left side panel (C). Attach the left front panel (B) to left side panel (C), using bolts (AA) through the holes in the short assembly locking block (DD) and tighten.

REPEAT FOR OPPOSITE SIDE.

#### Hardware Used

AA	Bolt	x 12
DD	Short Assembly Locking Block	x 6

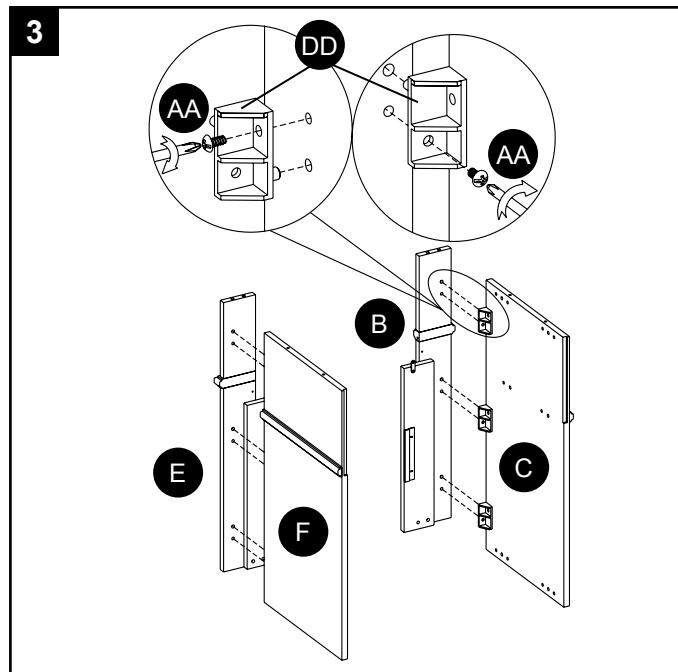


4. Attach the completed assembly from step 2 to the completed assembly from step 3. Screw the bolts (AA) through the short assembly locking block (DD) and into the center shelf (H). Attach center shelf (H) to left side panel (C) and right side panel (F) using bolts (AA) through the holes in the short assembly locking block (DD) and tighten. Connect the left side panel (C) and right side panel (F) to center shelf (H) by tightening short screws (FF) into pre-drilled holes corresponding with connection plate on center panel (D). Further secure using long screws (BB) through the pre-drilled holes in the center front panel (D).

HAND TIGHTEN ONLY.

#### Hardware Used

AA	Bolt	x 8
BB	Long Screw	x 2
DD	Short Assembly Locking Block	x 4
FF	Short Screw	x 2

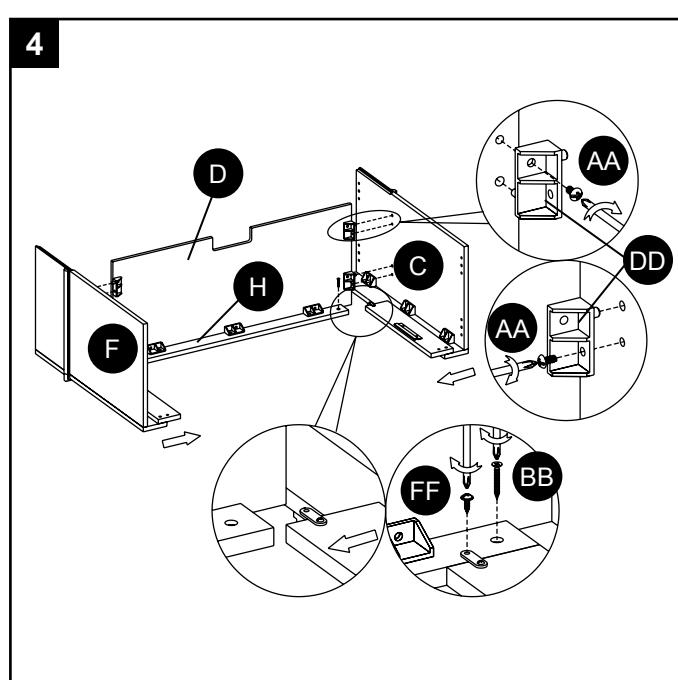


5. Place the completed assembly from step 4 on top of the hearth/base (A). Secure with bolts (AA) through the holes in the short assembly locking block (DD) and the long assembly locking block (EE).

HAND TIGHTEN ONLY.

#### Hardware Used



AA	Bolt	x 16
DD	Short Assembly Locking Block	x 2
EE	Long Assembly Locking Block	x 4

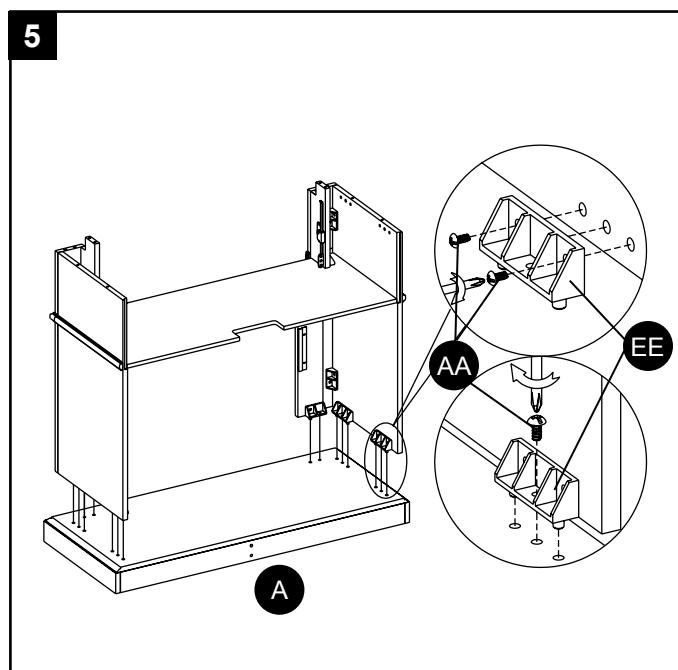

6. Insert wood dowels (CC) into each of the pre-drilled holes on the top edges of the assembly from step 5. Place the mantel/top (G) finished-side-up on top of the completed assembly. From the inside, attach the mantel/top (G) using bolts (AA) through the pre-drilled holes in the long assembly locking block (EE). **HAND TIGHTEN ONLY.**

Using a Phillips screwdriver (not included), tighten all bolts (AA), alternating top and bottom, left and right.

#### Hardware Used

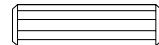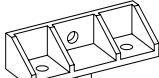AA	Bolt		x 12
CC	Wood Dowel		x 8
EE	Long Assembly Locking Block		x 4


7. Attach back panel (I) to the back of the completed assembly from step 6. Using a Phillips screwdriver, tighten short screws (FF) through the pre-drilled holes on the back panels (I).

#### Hardware Used


FF	Short Screw		x 14
----	-------------	---	------

8. Insert hinge (II) into the holes of left front panel (B) and right front panel (E). Attach front flip down door (J) to left front panel (B) and right front panel (E) using small screws (GG) through the holes in the Hinge (II) and tighten.


#### Hardware Used

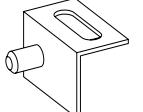GG	Small Screw		x 6
II	Hinge		x 2


6

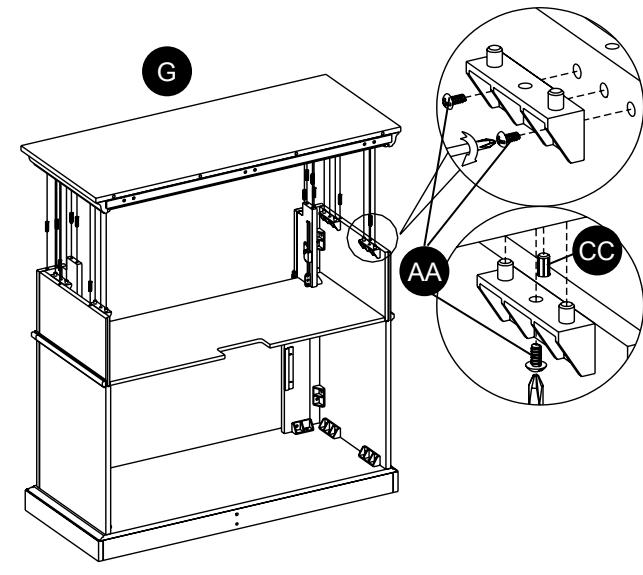

7

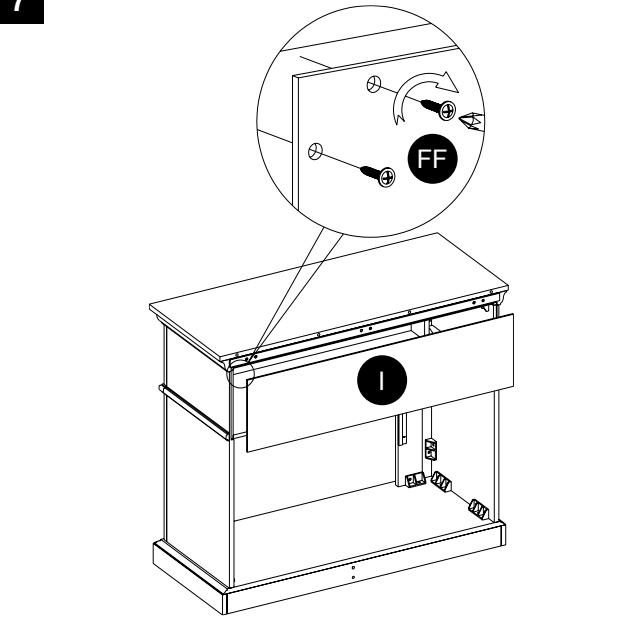

8

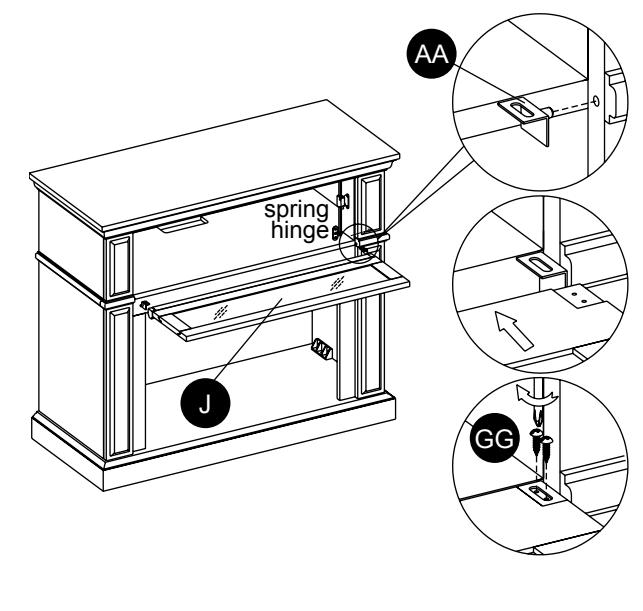


9. Stretch pre-attached piston hinge from left support panel (L) and right support panel (M) to meet front flip down door (J), then tighten small screws (GG) in the pre-drilled holes. To install door pull (HH), remove preassembled screws and then insert them into the pre-drilled holes on the front hutch (J) and back into door pull (HH) securely.

#### Hardware Used

GG

Small Screw

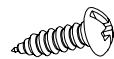

x 4


HH

Door Pull



x 1

9

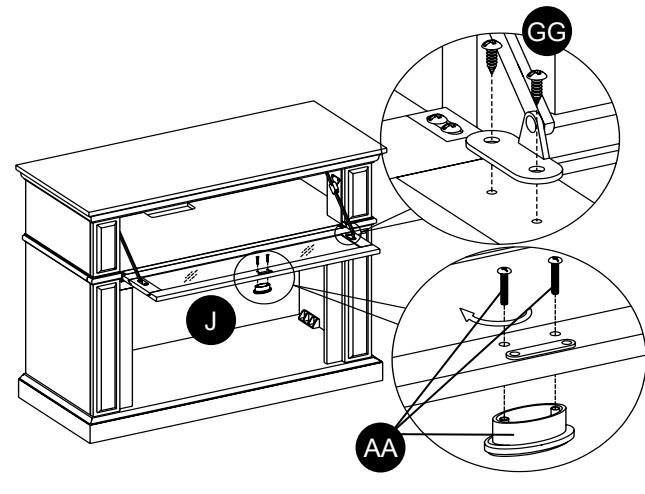


10. Remove the two mounting brackets attached to the back of the front panels by removing the two screws on each mounting bracket. Set aside. Do not install the insert (O) until the fireplace mantel has been placed close to its final resting position. Lift insert (O) carefully into the back of the unit and center in the opening. Do not drag insert (O) across hearth/base (A) as it may scratch the unit. Reinstall the mounting brackets to hold insert (O) flush against the inside of the mantel front panel.

NOTE: Move the completed unit only short distances.


NOTE: Move completed unit with great care.

It takes two people to move completed unit into final position.

10

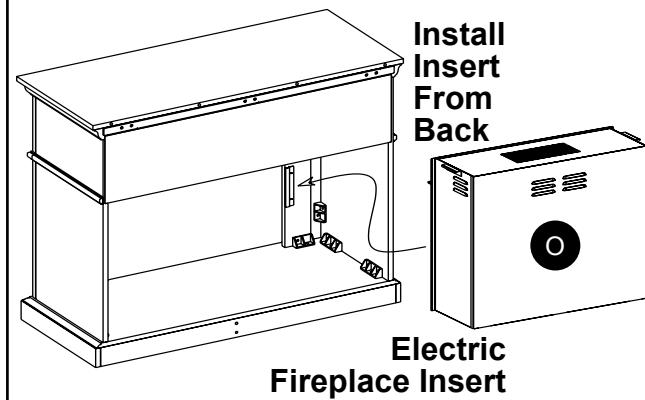


Completed Unit

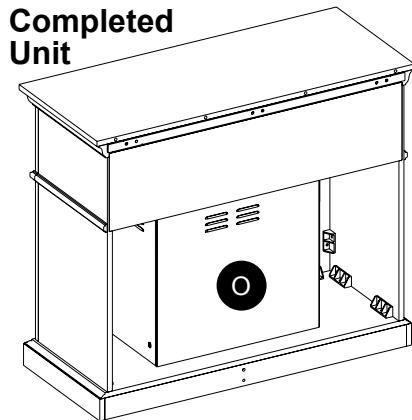


11. Set "L" corner brace (N) and top corner extension (K) face down on a scratch-free surface. Attach short assembly locking block (DD) to the top corner extension (K) using bolts (AA) through the holes in the short assembly locking block (DD) and tighten. Attach short assembly locking block (DD) to the "L" corner brace (N) using bolts (AA) through the holes in the short assembly locking block (DD) and tighten. Attach the "L" corner brace (N) to the top corner extension (K) using bolts (AA) through the holes in the short assembly locking block (DD) and tighten.

Set part aside.

#### Hardware Used


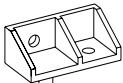
AA	Bolt		x 6
EE	Short Assembly Locking Block		x 5

11

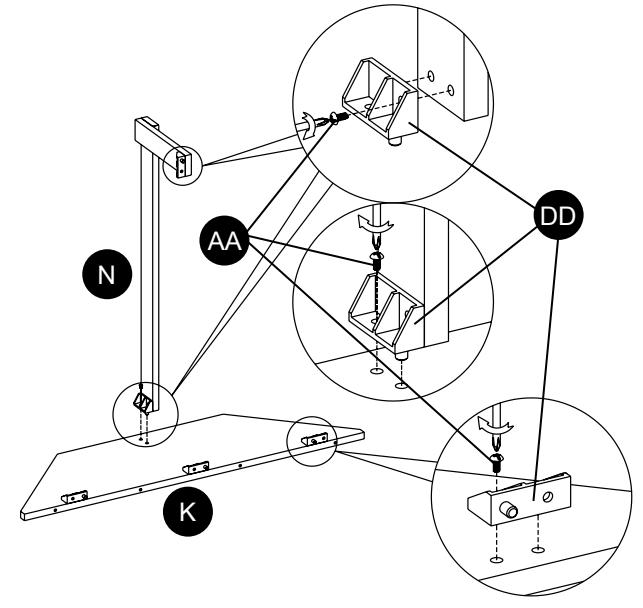


12. Insert wood dowels (CC) into each of the pre-drilled holes the back of the mantel/top (G). Attach the completed assembly from step 11 into place at the back of unit, using bolts (AA) through the pre-drilled holes in the short assembly locking block (DD) and tighten.

#### Hardware Used

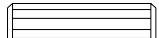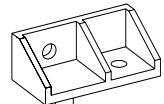AA	Bolt		x 4
CC	Wood Dowel		x 4
DD	Short Assembly Locking Block		x 4

12

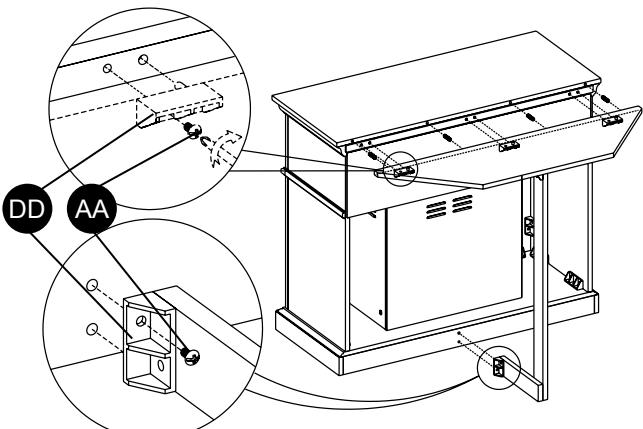

## OPERATING INSTRUCTIONS

Control panel can be accessed at upper-right corner of insert (O).

### - POWER

The power button supplies power to all the functions of the fireplace. The power button will put the fireplace in a standby mode. This will turn off all functions at once but will hold the settings in the memory. By pressing the power button again the unit will turn on at the same settings.

NOTE: Holding the power button on the control panel for 10 seconds will disable the heater function.

### - FLAME

Each time the flame button is pressed, the intensity of the flame decreases. There are 6 brightness levels to cycle through, including the OFF setting.

### - HEATER


The fireplace consists of a fan-forced wire element-type heater. The thermostat setting range is 62-82°F or always ON.

This button on the remote control only turns heater function ON and OFF.

NOTE: To change between °F and °C, press and hold the heater button on the control panel for 10 seconds.

### - TIMER

Press the timer button to cycle through 10 timer settings (30 minutes, 1 hour, 2h, 3h, 4h, 5h, 6h, 7h, 8h and 9h and the OFF setting).

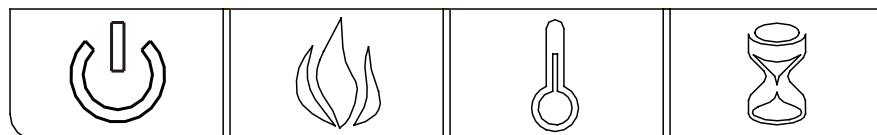

**Note:** When a function is changed from the control panel or remote control there will be a corresponding indicator (see Figure 1) on the upper-right of the projection screen. The indicator shows the function changed and the level selected by the control panel or remote control. When the function is turned off, the corresponding indicator will flash several times and then fade off.

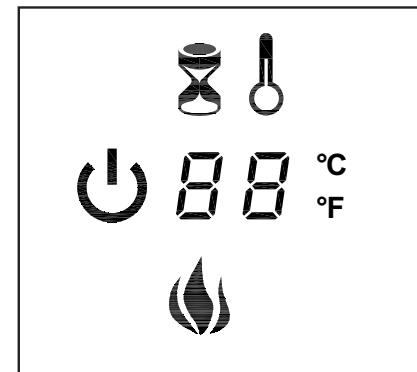


Fig . 1

## REPLACING THE REMOTE CONTROL BATTERIES

When the remote control (P) stops operating or its range seems reduced, it is time to replace the battery with a new one. Note: Battery should be removed if the product is to be left unused for a long time.

1. The battery compartment is located on the back end of the remote control (P).
2. Press and slide the battery door open and remove the old battery.
3. Insert 2 AAA batteries, checking that the + and - sides of the battery match inside the battery compartment.
4. Replace the battery compartment door.

P




Note: Do not mix old and new batteries.

Do not mix alkaline, standard (carbonzinc), or rechargeable (nicad, nimh, etc) batteries.

## DISPOSAL OF USED BATTERIES

Battery may contain hazardous substances which could be endangering to environment and human health.

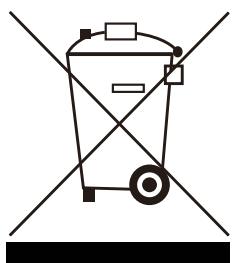

This symbol marked on the battery and/or packaging indicates that used battery shall not be treated as municipal waste. Instead it shall be left at the appropriate collection point for recycling.

By ensuring the used batteries are disposed of correctly, you will help preventing potential negative consequences for the environment and human health. The recycling of materials will help to conserve natural resources.

For more information about collection and recycling of used batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased this point.

## CARE AND MAINTENANCE

- The motors used on the fan and the flame generator assembly are pre-lubricated for extended bearing life and require no further lubrication. However, periodic cleaning/vacuuming of the fan/heater is recommended.
- Make sure the unit is turned OFF and unplugged whenever you are cleaning the heater or fireplace.



**WARNING:** Make sure the power is turned off before proceeding. Any electrical repairs or rewiring of this unit should be carried out by a licensed electrician in accordance with national and local codes.

If repairing or replacing any electrical component or wiring, the original wire routing, color coding and securing locations must be followed.



**WARNING:** Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and injury to persons.



**WARNING:** Do not use this fireplace if any part of it has been under water. Immediately call a qualified service technician to inspect the fireplace and replace any part of the electrical system.



**WARNING:** Disconnect power before attempting any maintenance or cleaning to reduce the risk of fire, electrical shock or personal injury.



**WARNING:** During any service of this appliance, the power to the unit must be turned off. First turn the main power switch to the OFF position. Then remove the electrical plug from the wall outlet.

## CARE AND MAINTENANCE

- Dust your fireplace regularly with a soft, non-lint producing cloth or household dusting product.
- Clean your fireplace with a gentle non-abrasive household cleaner. Make sure to dry your fireplace immediately with a soft cloth or towel.
- Tips for using touch-up pen (GG): For scratches, stroke in direction of scratch. For worn areas, stroke in direction of wood grain. Rub excess cororant promptly with a soft cloth.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
No power, logs do not glow.	1. Power cord was not plugged in the outlet. 2. Main power switch is not in "ON" position.	1. Check that unit is plugged into a standard 120V outlet. 2. Press power button several times, making sure power is set at "ON" position.
Logs glow, but no flame effect.	Flame button is not in "ON" position.	Press flame button several times.
Downlights do not light up.	Downlight button is not in "ON" position.	Try to turn on/off downlight switch several times to make sure downlight is at "ON" position.
Heater does not blow warm air.	The current room temperature is higher than the temperature setting.	Adjust the temperature settings to ensure that the thermostat is set higher than the current room temperature.
Heater doesn't work, but Power and Heater settings are "ON" and thermostat is set.	The product is on protected status.	Turn all switches to the "OFF" position and unplug the unit from the wall outlet for 5 minutes. After 5 minutes plug the unit back into wall outlet and operate as normal.
Flame effect works but heater function does not and the emberbed flashes when the heater button is pressed.	Heater function is locked.	Press and hold the POWER button to unlock the heater function.

## **1-YEAR LIMITED WARRANTY**

---

The manufacturer warrants this product to be free from manufacturing and material defects for a period of one year from date of purchase, subject to the following conditions and limitations.

1. Install and operate this item in accordance with the installation and operating instructions furnished with the product at all times. Any unauthorized repair, alteration, willful abuse, accident, or misuse of the product shall nullify this warranty.
2. This warranty is non-transferable, and is made to the original owner, provided that the purchase was made through an authorized supplier of the product.
3. The warranty is limited to the repair or replacement of part(s) found to be defective in material or workmanship, provided that such part(s) have been subjected to normal conditions of use and service, after said defect is confirmed by the manufacturer's inspection.
4. The manufacturer may, at its discretion, fully discharge all obligations with respect to this warranty by refunding the wholesale price of the defective part(s).
5. Any installation, labor, construction, transportation, or other related costs/expenses arising from defective part(s), repair, replacement, or otherwise of same, will not be covered by this warranty, nor shall the manufacturer assume responsibility for same.
6. The owner/user assumes all other risks, if any, including the risk of any direct, indirect or consequential loss or damage arising out of the use, or inability to use the product, except as provided by law.
7. All other warranties – expressed or implied – with respect to the product, its components and accessories, or any obligations/liabilities on the part of the manufacturer are hereby expressly excluded.
8. The manufacturer neither assumes, nor authorizes any third party to assume on its behalf, any other liabilities with respect to the sale of the product.
9. The warranties as outlined within this document do not apply to non accessories used in conjunction with the installation of this product.
10. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**This warranty is void if:**

- a. The fireplace is subjected to prolonged periods of dampness or condensation.
- b. Any unauthorized alteration, willful abuse, accident, or misuse of the product.
- c. You do not have the original receipt of purchase.


**IF WARRANTY SERVICE IS NEEDED**

Contact the manufacturer by calling the customer service department at 1-877-888-8225, 8 a.m. - 8 p.m., EST, Monday - Friday. Make sure to have the warranty, sales receipt, location of purchase and the model serial number of the product.

## REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-877-888-8225, 8 a.m. - 8 p.m., EST, Monday - Friday.

PART	DESCRIPTION	PART NO. 26EF023GRA
1	Heater/Blower Assembly	Y07-C26-P01
2	Main Circuit Board	Y11-S70-P15
3	Flame Generator Drive Motor	Y07-P10Q
4	Flame Generator/Spinner	Y10-S53-P011
5	LCD Display	Y10-C43-P70
6	Front Projection Screen	Y10-S53-P09
7	Flame Circuit Board	Y11-S70-P40
8	Emberbed with Log	Y10-S53-P02
9	Control Panel Circuit Board	Y10-S53-P32
10	Control Panel - 4 Buttons	Y10-C43-P25
11	Remote Control - 4 Buttons	P71

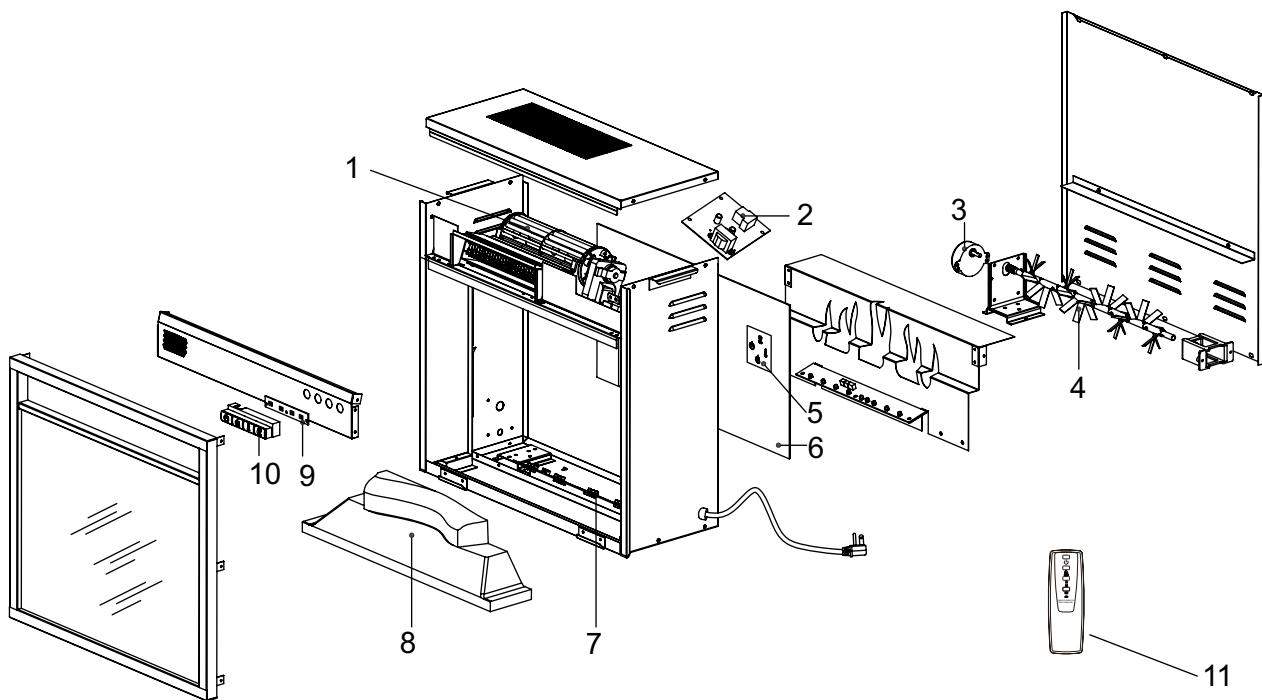

Printed in China

Style Selections® is a registered trademark  
of LF, LLC. All rights reserved.