

# PureFlow GSX

## Traffic Shaper NF7101C Command Reference

**Sixth Edition**


- For safety and warning information, please read this manual before attempting to use the equipment.
- Additional safety and warning information is provided within the NF7101C Traffic Shaper Operation Manual (NF7101-W006E). Please also refer to this document before using the equipment.
- Keep this manual with the equipment.


**ANRITSU CORPORATION**


# Safety Symbols

To prevent the risk of personal injury or loss related to equipment malfunction, Anritsu Corporation uses the following safety symbols to indicate safety-related information. Ensure that you clearly understand the meanings of the symbols BEFORE using the equipment. Some or all of the following symbols may be used on all Anritsu Corporation equipment. In addition, there may be other labels attached to products that are not shown in the diagrams in this manual.

## Symbols used in manual

 **DANGER** This indicates a very dangerous procedure that could result in serious injury or death if not performed properly.

 **WARNING** This indicates a hazardous procedure that could result in serious injury or death if not performed properly.

 **CAUTION** This indicates a hazardous procedure or danger that could result in light-to-severe injury, or loss related to equipment malfunction, if proper precautions are not taken.

## Safety Symbols Used on Equipment and in Manual

The following safety symbols are used inside or on the equipment near operation locations to provide information about safety items and operation precautions. Ensure that you clearly understand the meanings of the symbols and take the necessary precautions BEFORE using the equipment.



This indicates a prohibited operation. The prohibited operation is indicated symbolically in or near the barred circle.



This indicates an obligatory safety precaution. The obligatory operation is indicated symbolically in or near the circle.



This indicates a warning or caution. The contents are indicated symbolically in or near the triangle.



This indicates a note. The contents are described in the box.

PureFlow GSX  
Traffic Shaper NF7101C  
Command Reference

25 September 2014 (First Edition)  
15 June 2020 (Sixth Edition)

Copyright © 2014-2020, ANRITSU CORPORATION

All rights reserved. No part of this manual may be reproduced without the prior written permission of the publisher.

The contents of this manual may be changed without prior notice.

Printed in Japan

## **Anritsu Corporation Contact**

For information on this equipment, contact an Anritsu Corporation Service and Sales office. Contact information can be found on the safety manual.

## **Maintenance Contract**

Anritsu Corporation can provide a range of optional services under a maintenance contract. For details, contact your dealer.

## Notes On Export Management

---

This product and its manuals may require an Export License/Approval by the Government of the product's country of origin for re-export from your country.

Before re-exporting the product or manuals, please contact us to confirm whether they are export-controlled items or not.

When you dispose of export-controlled items, the products/manuals need to be broken/shredded so as not to be unlawfully used for military purpose.

# About This Manual

This manual describes in detail the commands used in the PureFlow GSX Traffic Shaper NF7101C (hereafter referred to as “this device”).

The manual of the NF7101C consists of the following three manuals. This document is <2>.

<1> Operation Manual (NF7101-W006E)

Describes in detail the installation and handling in the NF7101C.

<2> Command Reference (NF7101-W007E)

Describes in detail the commands used in the NF7101C.

<3> Configuration Guide (NF7101-W008E)

Describes the basic features of the NF7101C and provides specific examples of the settings required to build a network using these features.

If the following documents related to the NF7101C or other documents related to the features of the NF7101C are issued, be sure to read them:

Release notes

(For details of the issuance of release notes, contact your dealer.)

# Table of Contents

<b>About This Manual.....</b>	<b>I</b>
<b>Chapter 1 Command Input Rules .....</b>	<b>1-1</b>
1.1 Command Format Conventions.....	1-1
1.2 Logging in after Power-on.....	1-1
1.3 Common Command Errors.....	1-1
<b>Chapter 2 Explanation of Commands .....</b>	<b>2-1</b>
2.1 List of Commands .....	2-1
2.1.1 Interface management commands .....	2-1
2.1.2 ACL-related commands .....	2-1
2.1.3 Scenario-related commands.....	2-2
2.1.4 System operation-related commands.....	2-2
2.1.5 Statistics-related commands.....	2-2
2.1.6 Operation management-related commands .....	2-4
2.1.7 Configuration-related commands.....	2-6
2.1.8 SNMP-related commands.....	2-7
2.1.9 Other commands .....	2-8
2.2 Command Details .....	2-10
2.2.1 Interface management commands .....	2-10
set port autonegotiation .....	2-10
set port flow_control.....	2-12
set port duplex .....	2-13
set port speed .....	2-15
set port maxpacketlen .....	2-17
show port .....	2-19
show port <slot/port> .....	2-21
2.2.2 ACL-related commands .....	2-24
add rulelist group .....	2-24
add rulelist entry .....	2-26
delete rulelist group .....	2-28
delete rulelist entry.....	2-29
set filter mode .....	2-31
add filter .....	2-33
delete filter .....	2-39
show rulelist .....	2-40
show filter.....	2-42

2.2.3	Scenario-related commands.....	2-47
	set bandwidth mode.....	2-47
	set shaper peak burst size.....	2-48
	add scenario .....	2-49
	update scenario .....	2-55
	delete scenario .....	2-59
	show scenario.....	2-60
	show scenario tree.....	2-63
2.2.4	System operation-related commands.....	2-65
	set lpt .....	2-65
	show lpt.....	2-66
	set agingtime .....	2-67
	show agingtime.....	2-68
2.2.5	Statistics-related commands.....	2-69
	show counter .....	2-69
	show counter {<slot/port>   system} .....	2-71
	clear counter .....	2-74
	show scenario info.....	2-75
	show scenario info summary .....	2-77
	clear scenario peakhold buffer .....	2-79
	show scenario counter.....	2-80
	show scenario counter summary.....	2-82
	clear scenario counter .....	2-83
	set topcounter .....	2-84
	set topcounter config interval time.....	2-85
	add topcounter config appli port .....	2-86
	delete topcounter config appli port .....	2-87
	add topcounter config appli port static.....	2-88
	delete topcounter config appli port static.....	2-89
	add topcounter target .....	2-90
	delete topcounter target.....	2-92
	update topcounter target .....	2-93
	show topcounter target .....	2-95
	show topcounter config.....	2-98
	monitor rate.....	2-100
	show flow .....	2-102
	show resource .....	2-106
2.2.6	Operation management-related commands .....	2-108
	set ip system.....	2-108
	set ip system gateway .....	2-110
	unset ip system gateway .....	2-111
	set ip system port.....	2-112
	add ip system filter.....	2-115

delete ip system filter .....	2-118
show ip system .....	2-119
show syslog .....	2-123
show backup syslog.....	2-124
clear syslog.....	2-126
set syslog host.....	2-127
add syslog host.....	2-128
delete syslog host.....	2-129
show syslog host .....	2-130
set syslog severity .....	2-131
set syslog facility.....	2-132
set date .....	2-133
set timezone .....	2-134
set summertime .....	2-136
unset summertime .....	2-138
show date .....	2-139
show sntp.....	2-140
set sntp .....	2-141
set sntp interval.....	2-142
set sntp server .....	2-143
sync sntp.....	2-144
set password.....	2-145
set adminpassword.....	2-146
set autologout time .....	2-147
show autologout.....	2-148
set prompt.....	2-149
set pager.....	2-150
show session .....	2-151
delete session.....	2-152
show module.....	2-153
set autoreboot.....	2-156
show process.....	2-157
set radius auth .....	2-158
set radius auth timeout .....	2-159
set radius auth retransmit.....	2-160
set radius auth method .....	2-161
add radius auth server.....	2-162
update radius auth server.....	2-164
delete radius auth server .....	2-166
test radius login.....	2-167
show radius.....	2-170
show radius statistics.....	2-172
clear radius statistics .....	2-174



set ssh .....	2-175
set ssh server key.....	2-176
show ssh.....	2-177
set telnet .....	2-179
show telnet.....	2-180
set console baudrate .....	2-181
show console baudrate.....	2-182
set webapi protocol.....	2-183
show webapi .....	2-184
2.2.7 Configuration-related commands.....	2-185
init config.....	2-185
save config.....	2-186
show save status .....	2-187
show config running.....	2-188
show config startup.....	2-190
2.2.8 SNMP-related commands.....	2-191
add snmp community.....	2-191
delete snmp community.....	2-193
show snmp community .....	2-194
add snmp view .....	2-196
delete snmp view .....	2-199
show snmp view .....	2-200
add snmp group.....	2-201
delete snmp group.....	2-203
show snmp group .....	2-204
add snmp host .....	2-206
delete snmp host .....	2-209
show snmp host.....	2-210
add snmp user .....	2-212
delete snmp user .....	2-214
show snmp user.....	2-215
set snmp traps .....	2-217
set snmp syslocation .....	2-219
set snmp syscontact .....	2-220
set snmp sysname.....	2-221
show snmp system .....	2-222
2.2.9 Other commands .....	2-224
download tftp obj.....	2-224
download tftp conf.....	2-226
download ftp obj.....	2-228
download ftp conf.....	2-230
download cf obj.....	2-232
download cf patch.....	2-234

download cf conf.....	2-235
download usb obj.....	2-237
download usb patch.....	2-239
download usb conf.....	2-240
upload tftp conf .....	2-242
upload ftp conf .....	2-244
upload cf obj .....	2-246
upload cf conf .....	2-248
upload usb obj .....	2-250
upload usb conf .....	2-252
show cf list .....	2-254
show usb list .....	2-256
reboot.....	2-258
ping .....	2-259
telnet .....	2-260
arp.....	2-261
delete ndp neighbor .....	2-263
show ndp neighbor .....	2-264
?/help .....	2-265
exit/logout/quit.....	2-266
normal .....	2-267
admin .....	2-268
show history .....	2-269
upload tftp file .....	2-270
upload ftp file .....	2-272
operate cf remove.....	2-274
operate cf rename.....	2-275
operate cf copy .....	2-277
operate cf list .....	2-279
operate usb remove.....	2-281
operate usb rename.....	2-282
operate usb copy .....	2-284
operate usb list .....	2-286
set option .....	2-288
show option.....	2-289

## 1.1 Command Format Conventions

The symbols used in the description of the command format follow the rules below:

<A>	Non-optional argument A
[A]	Optional argument A
{A   B}	Select one of non-optional arguments A or B
[A   B]	Select one of optional arguments A or B

## 1.2 Logging in after Power-on

When you start NF7101C, an input request prompt for the login username appears.

The username for NF7101C is "root". By factory default, no password is set.

## 1.3 Common Command Errors

The following errors are common to all the commands:

**This Command is not available in this mode**

This command is not available in this mode.

**Command length is more than XXX characters**

The command length exceeds XXX characters.

**Command token very long**

The keyword of the command is too long.

(Blank page)

This chapter lists the commands for NF7101C and describes the overview of them.

## 2.1 List of Commands

### 2.1.1 Interface management commands

- (1) `set port autonegotiation`  
Enables/disables AutoNegotiation on the Network port and Ethernet port.
- (2) `set port flow_control`  
Sets whether to send the Network port's pause frame.
- (3) `set port duplex`  
Sets the duplex mode for the Network port.
- (4) `set port speed`  
Sets the communication speed of the Network port.
- (5) `set port maxpacketlen`  
Sets the maximum packet length for the Network port.
- (6) `show port`  
Displays the Network port and Ethernet port information.
- (7) `show port <slot/port>`  
Displays detailed information on the specified Network port or Ethernet port.

### 2.1.2 ACL-related commands

- (1) `add rulelist group`  
Adds a rule list.
- (2) `add rulelist entry`  
Adds a rule list entry.
- (3) `delete rulelist group`  
Deletes a rule list.
- (4) `delete rulelist entry`  
Deletes a rule list entry.
- (5) `set filter mode`  
Sets the flow identification mode.
- (6) `add filter`  
Sets a filter.
- (7) `delete filter`  
Deletes a filter.
- (8) `show rulelist`  
Displays rule list settings.
- (9) `show filter`  
Displays filter settings.

### 2.1.3 Scenario-related commands

- (1) `set bandwidth mode`  
Enables/disables inter-frame gaps and preambles in the communication bandwidth settings.
- (2) `set shaper peak burst size`  
Sets the peak burst size in the maximum bandwidth setting for each scenario.
- (3) `add scenario`  
Creates traffic attributes (scenario). Use this command to set the bandwidth, buffer size, queue mode (aggregate/discard), etc.
- (4) `update scenario`  
Overwrites traffic attributes (scenario) that have already been set.
- (5) `delete scenario`  
Deletes traffic attributes (scenario).
- (6) `show scenario`  
Displays traffic attributes (scenario).
- (7) `show scenario tree`  
Displays the hierarchical scenario tree.

### 2.1.4 System operation-related commands

- (1) `set lpt`  
Enables/disables the link-down transfer feature that forces the communicating device into a link-down state when a link-down is detected.
- (2) `show lpt`  
Displays the status of the link-down transfer feature.
- (3) `set agingtime`  
Sets the aging time for flows.
- (4) `show agingtime`  
Displays the aging time for flows.

### 2.1.5 Statistics-related commands

- (1) `show counter`  
Displays the Network port/system interface statistics.
- (2) `show counter {<slot/port> | system}`  
Displays statistics on the specified Network port or system interface.
- (3) `clear counter`  
Clears the Network port/system interface statistics.
- (4) `show scenario info`  
Displays the buffer information related to the scenario.
- (5) `show scenario info summary`  
Displays the list of buffer information related to the scenario.
- (6) `clear scenario peakhold buffer`  
Clears the maximum buffer usage related to the scenario.
- (7) `show scenario counter`  
Displays the statistics related to the scenario.
- (8) `show scenario counter summary`  
Displays the list of statistics related to the scenario.

- 
- (9) `clear scenario counter`  
Clears the statistics related to the scenario.
  - (10) `set topcounter`  
Enables/disables the top counter.
  - (11) `set topcounter config interval time`  
Sets the collection interval for the top counter.
  - (12) `add topcounter config appli port`  
Adds any application port number as a port number to be monitored by the top counter.
  - (13) `delete topcounter config appli port`  
Deletes an application port number monitored by the top counter.
  - (14) `add topcounter config appli port static`  
Sets any application port number to be always monitored by the top counter.
  - (15) `delete topcounter config appli port static`  
Releases the static setting of the application port number.
  - (16) `add topcounter target`  
Adds a scenario to be measured by the top counter.
  - (17) `delete topcounter target`  
Deletes a scenario measured by the top counter.
  - (18) `update topcounter target`  
Changes parameters specified for the measurement range of the top counter.
  - (19) `show topcounter target`  
Shows the measurement results of the top counter.
  - (20) `show topcounter config`  
Displays the top counter settings.
  - (21) `monitor rate`  
Measures the reception rate and transmission rate of the queue being used for traffic control.
  - (22) `show flow`  
Displays information on flows that are actually generated.
  - (23) `show resource`  
Displays the resource status of the traffic attributes (scenario), filters, the list of rules, and flows that are actually generated. This command also displays the system buffer resource status.

## 2.1.6 Operation management-related commands

- (1) `set ip system`  
Sets the IPv4 address and subnet mask of the IP network interface of the system (system interface).
- (2) `set ip system gateway`  
Sets the default gateway of the IP network interface of the system (system interface).
- (3) `unset ip system gateway`  
Cancels the default gateway settings of the IP network interface of the system (system interface).
- (4) `set ip system port`  
Sets the communication port of the IP network interface of the system (system interface).
- (5) `add ip system filter`  
Adds a filter setting (system interface filter) for packets sent to the IP network interface of the system (system interface).
- (6) `delete ip system filter`  
Deletes the filter setting (system interface filter) for packets sent to the IP network interface of the system (system interface).
- (7) `show ip system`  
Displays the settings of the communication port and filter (system interface filter) of the IP network interface of the system (system interface).
- (8) `show syslog`  
Displays the system log (syslog) records stored in NF7101C.
- (9) `show backup syslog`  
Displays the system log stored in the internal backup memory.
- (10) `clear syslog`  
Clears the system log.
- (11) `set syslog host`  
Sets whether to output the system log to the specified host.
- (12) `add syslog host`  
Adds the IPv4 address and UDP port number of the host that is to be the output destination of the system log.
- (13) `delete syslog host`  
Deletes the IPv4 address and UDP port number of the host that is to be the output destination of the system log.
- (14) `show syslog host`  
Displays the IPv4 address and UDP port number of the host that is to be the output destination of the system log.
- (15) `set syslog severity`  
Sets the Severity range for the system log that is to be output to the specified host.
- (16) `set syslog facility`  
Sets Facility of the system log.
- (17) `set date`  
Sets the system time using the Western calendar and 24-hour format.
- (18) `set timezone`  
Sets the time zone of the system time as the number of hours offset from the UTC (Coordinated Universal Time).



- 
- (19) `set summertime`  
Sets the period during which summer time is applied to the system time.
  - (20) `unset summertime`  
Cancels the application of summer time to the system time.
  - (21) `show date`  
Displays the current system time.
  - (22) `show sntp`  
Displays the SNTP settings and status.
  - (23) `set sntp`  
Enables/disables system time synchronization over SNTP.
  - (24) `set sntp interval`  
Sets the interval during which SNTP queries the time from the NTP server.
  - (25) `set sntp server`  
Sets the IPv4 address of the NTP server from which SNTP queries the time.
  - (26) `sync sntp`  
Sends time queries to the NTP server.
  - (27) `set password`  
Sets the login password.
  - (28) `set adminpassword`  
Sets the login password to switch to Administrator mode.
  - (29) `set autologout time`  
Sets the time interval for the auto logout feature.
  - (30) `show autologout`  
Displays auto logout setting information.
  - (31) `set prompt`  
Sets the prompt.
  - (32) `set pager`  
Sets whether to use the pager.
  - (33) `show session`  
Displays the status of serial, Telnet, and SSH sessions.
  - (34) `delete session`  
Deletes Telnet and SSH sessions.
  - (35) `show module`  
Displays information on each module in the system.
  - (36) `set autoreboot`  
Enables/disables auto reboot when a failure occurs.
  - (37) `show process`  
Displays the CPU and memory use rate.
  - (38) `set radius auth`  
Enables/disables RADIUS authentication.
  - (39) `set radius auth timeout`  
Sets the timeout time for communication with the RADIUS authentication server.
  - (40) `set radius auth retransmit`  
Sets the number of times to resend an authentication request.
  - (41) `set radius auth method`  
Sets the method for RADIUS authentication.

- (42) `add radius auth server`  
Adds a RADIUS authentication server.
- (43) `update radius auth server`  
Updates the preset RADIUS authentication server setting.
- (44) `delete radius auth server`  
Deletes the setting information on the RADIUS authentication server.
- (45) `test radius login`  
Tests authentication using the RADIUS protocol.
- (46) `show radius`  
Displays the RADIUS client settings and all the server information that is set.
- (47) `show radius statistics`  
Displays the RADIUS client statistics.
- (48) `clear radius statistics`  
Clears the RADIUS client statistics.
- (49) `set ssh`  
Enables/disables SSH connections.
- (50) `set ssh server key`  
Regenerates the public key (host key) for server authentication.
- (51) `show ssh`  
Displays the SSH server settings and connected client information.
- (52) `set telnet`  
Enables/disables Telnet connections.
- (53) `show telnet`  
Displays whether the Telnet connection is enabled/disabled.
- (54) `set console baudrate`  
Sets the Baud rate of the console.
- (55) `show console baudrate`  
Displays the Baud rate of the console.
- (56) `set webapi protocol`  
Sets the protocol for WebAPI.
- (57) `show webapi`  
Displays the WebAPI information.

## **2.1.7 Configuration-related commands**

- (1) `init config`  
Resets the configuration to the default values.
- (2) `save config`  
Saves the running configuration to the internal flash memory.
- (3) `show save status`  
Displays the progress of configuration saving.
- (4) `show config running`  
Displays the configuration currently running.
- (5) `show config startup`  
Displays the configuration at startup.

## 2.1.8 SNMP-related commands

- (1) `add snmp community`  
Adds the SNMP community information.
- (2) `delete snmp community`  
Deletes the SNMP community information.
- (3) `show snmp community`  
Displays the SNMP community information.
- (4) `add snmp view`  
Adds the SNMP view information.
- (5) `delete snmp view`  
Deletes the SNMP view information.
- (6) `show snmp view`  
Displays the SNMP view information.
- (7) `add snmp group`  
Adds the SNMP group information.
- (8) `delete snmp group`  
Deletes the SNMP group information.
- (9) `show snmp group`  
Displays the SNMP group information.
- (10) `add snmp host`  
Adds the SNMP host information.
- (11) `delete snmp host`  
Deletes the SNMP host information.
- (12) `show snmp host`  
Displays the SNMP host information.
- (13) `add snmp user`  
Adds the SNMP user information.
- (14) `delete snmp user`  
Deletes the SNMP user information.
- (15) `show snmp user`  
Displays the SNMP user information.
- (16) `set snmp traps`  
Enables/disables SNMP trap output.
- (17) `set snmp syslocation`  
Sets `sysLocation`, a system group object that indicates the place where NF7101C is installed.
- (18) `set snmp syscontact`  
Sets `sysContact`, a system group object that indicates the administrator of NF7101C.
- (19) `set snmp sysname`  
Sets `sysName`, a system group object that indicates the name of the management machine for NF7101C.
- (20) `show snmp system`  
Displays the `sysLocation`, `sysContact`, and `sysName` information.

## 2.1.9 Other commands

- (1) `download tftp obj`  
Downloads software from the TFTP server.
- (2) `download tftp conf`  
Downloads the configuration file from the TFTP server.
- (3) `download ftp obj`  
Downloads software from the FTP server.
- (4) `download ftp conf`  
Downloads the configuration file from the FTP server.
- (5) `download cf obj`  
Downloads software from a CF card.
- (6) `download cf patch`  
Downloads patch from a CF card.
- (7) `download cf conf`  
Downloads the configuration file from a CF card.
- (8) `download usb obj`  
Downloads software from a USB flash drive.
- (9) `download usb patch`  
Downloads patch from a USB flash drive.
- (10) `download usb conf`  
Downloads the configuration file from a USB flash drive.
- (11) `upload tftp conf`  
Uploads the configuration file to the TFTP server.
- (12) `upload ftp conf`  
Uploads the configuration file to the FTP server.
- (13) `upload cf obj`  
Uploads software in the system to a CF card.
- (14) `upload cf conf`  
Uploads the configuration file to a CF card.
- (15) `upload usb obj`  
Uploads software in the system to a USB flash drive.
- (16) `upload usb conf`  
Uploads the configuration file to a USB flash drive.
- (17) `show cf list`  
Lists the files in a CF card.
- (18) `show usb list`  
Lists the files in a USB flash drive.
- (19) `reboot`  
Restarts the system.
- (20) `ping`  
Sends the ICMP ECHO\_REQUEST packet to the specified host via the system interface.
- (21) `telnet`  
Connects to the specified host via Telnet.
- (22) `arp`  
Displays or deletes the ARP table.
- (23) `delete ndp neighbor`  
Deletes an NDP table entry.

- 
- (24) `show ndp neighbor`  
Displays the NDP table.
  - (25) `?/help`  
Displays the top-level commands available in the current mode.
  - (26) `exit/logout/quit`  
Logs out.
  - (27) `normal`  
Returns to Normal mode.
  - (28) `admin`  
Switches to Administrator mode.
  - (29) `show history`  
Displays the command input history.
  - (30) `upload tftp file`  
Uploads the files in a CF card or USB flash drive to the TFTP server.
  - (31) `upload ftp file`  
Uploads the files in a CF card or USB flash drive to the FTP server.
  - (32) `operate cf remove`  
Deletes the files in a CF card.
  - (33) `operate cf rename`  
Renames the files in a CF card.
  - (34) `operate cf copy`  
Copies the files in a CF card.
  - (35) `operate cf list`  
Lists the files in a CF card.
  - (36) `operate usb remove`  
Deletes the files in a USB flash drive.
  - (37) `operate usb rename`  
Renames the files in a USB flash drive.
  - (38) `operate usb copy`  
Copies the files in a USB flash drive.
  - (39) `operate usb list`  
Lists the files in a USB flash drive.
  - (40) `set option`  
Enables the options of the system.
  - (41) `show option`  
Displays the options enabled in the system.

## 2.2 Command Details

### 2.2.1 Interface management commands

#### set port autonegotiation

##### [Format]

```
set port autonegotiation <slot/port> {enable | disable}
set port autonegotiation system {enable | disable}
```

##### [Description]

This command enables/disables AutoNegotiation on the Network port and Ethernet port. Specify the Network port in the <slot/port> format. Multiple addresses can be specified by delimiting them with commas (.). Consecutive ports (a and b) in a slot can be specified using a hyphen (-). For example, specify <slotn/porta>-<slotn/portb>. Specify the Ethernet port by using a system parameter. This command can be executed only in Administrator mode.

Be careful about the following restrictions when setting by this command.

- This setting is not applicable to the 10GbE type network port.
- For the communication at 1 Gbit/s of 1000BASE-T, enable AutoNegotiation.
- If the link status of the "show port" command is half duplex, check that AutoNegotiation, communication speed, and duplex mode setting are suitable for the connected device. When the setting does not match, the communication does not operate correctly.

##### [Display]

```
PureFlow(A)> set port autonegotiation 1/1 enable
PureFlow(A)>
```

##### [Arguments]

slot/port

Specify the slot location and port number of the Network port.

Only 1 can be specified as the slot location. Valid port numbers are 1 and 2.

enable | disable

Specify "enable" to enable AutoNegotiation, and "disable" to disable it.

##### [Default Value]

The default value is "enable".

##### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

```
Usage : set port autonegotiation <slot/port> {enable | disable}
```

```
Usage : set port autonegotiation system {enable | disable}
```

- There is a missing argument.

An argument was missing

```
Usage : set port autonegotiation <slot/port> {enable | disable}
```

- There is a missing argument.

An argument was missing

```
Usage : set port autonegotiation system {enable | disable}
```

- There is a missing argument.

slot #N is invalid

- The specified slot is invalid.

port <slot/port> is invalid

- The specified port is invalid.

## set port flow\_control

### [Format]

```
set port flow_control <slot/port> auto
set port flow_control <slot/port>{recv | send}{on | off}
```

### [Description]

This command sets frame control by using pause frames for the Network port.

Multiple <slot/port> parameters can be specified by delimiting them with commas (,).

Consecutive ports (a and b) in a slot can be specified using a hyphen (-). For example, specify <slotn/porta>-<slotn/portb>.

If `auto` is specified and the port type is 1000BASE-T or 1000BASE-X, pause frame reception and transmission is determined by AutoNegotiation. If AutoNegotiation is disabled, both reception and transmission are enabled. If the port type is 10GBASE-R, both reception and transmission are enabled. If `on` is specified to reception or transmission, pause frame reception or transmission is enabled regardless of the AutoNegotiation result.

If `off` is specified to reception or transmission, pause frame reception or transmission is disabled regardless of the AutoNegotiation result.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> set port flow_control 1/1 recv off
PureFlow(A)> set port flow_control 1/1 send off
PureFlow(A)>
```

### [Arguments]

slot/port

Specify the slot location and port number of the Network port.

Only 1 can be specified as the slot location. Valid port numbers are 1 and 2.

auto

If the port type is 1000BASE-T or 1000BASE-X, pause frame reception and transmission is determined by AutoNegotiation. If AutoNegotiation is disabled, both reception and transmission are enabled.

If the port type is 10GBASE-R, both reception and transmission are enabled.

recv | send

To set a fixed value for pause frame reception, specify `recv`. To set a fixed value for pause frame transmission, specify `send`.

on | off

To receive/transmit pause frames, specify `on`. To not receive/transmit pause frames, specify `off`.

### [Default Value]

The default value is `auto`.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

```
Usage : set port flow_control <slot/port> auto
```

```
Usage : set port flow_control <slot/port>{recv | send}{on | off}
```

- There is a missing argument.

slot #N is invalid

- The specified slot is invalid.

port <slot/port> is invalid

- The specified port is invalid.



## set port duplex

### [Format]

```
set port duplex <slot/port>{full | half}
set port duplex system{full | half}
```

### [Description]

This command sets the duplex mode for the Network and Ethernet ports.

Specify the Network port in the <slot/port> format. Multiple addresses can be specified by delimiting them with commas (.). Consecutive ports (a and b) in a slot can be specified using a hyphen (-). For example, specify <slotn/porta>-<slotn/portb>.

Specify the Ethernet by using a system parameter.

This setting is the duplex mode setting with AutoNegotiation disabled. If AutoNegotiation is enabled, a result of AutoNegotiation is reflected and this setting is not applied, while if AutoNegotiation disabled, this setting is applied.

This command can be executed only in Administrator mode.

Be careful about the following restrictions when setting by this command.

- This setting is applicable to the Network port only when 10/100/1000BASE-T SFP is implemented.
- If the link status of the "show port" command is half duplex, check that AutoNegotiation, communication speed, and duplex mode setting are suitable for the connected device. When the setting does not match, the communication does not operate correctly.

### [Display]

```
PureFlow(A)> set port duplex 1/2 full
PureFlow(A)> set port duplex 1/1 half
PureFlow(A)>
```

### [Arguments]

slot/port

Specify the slot location and port number of the Network port.

Only 1 can be specified as the slot location. Valid port numbers are 1 and 2.

full | half

Specify the duplex mode.

full	Full duplex
half	Half duplex

### [Default Value]

The default value is full.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

```
Usage : set port duplex <slot/port>{full | half}
```

```
Usage : set port duplex system{full | half}
```

- There is a missing argument.

An argument was missing

```
Usage : set port duplex <slot/port>{full | half}
```

- There is a missing argument.

An argument was missing

Usage : set port duplex system{full | half}

- There is a missing argument.

slot #N is invalid

- The specified slot is invalid.

port <slot/port> is invalid

- The specified port is invalid.

## set port speed

### [Format]

```
set port speed <slot/port>{10M | 100M | 1G}
set port speed system {10M | 100M | 1G}
```

### [Description]

This command sets the communication speed of the Network and Ethernet ports.

Specify the Network port in the <slot/port> format. Multiple addresses can be specified by delimiting them with commas (.). Consecutive ports (a and b) in a slot can be specified using a hyphen (-). For example, specify <slotn/porta>-<slotn/portb>.

Specify the Ethernet by using a system parameter.

This setting is the communication speed setting with AutoNegotiation disabled. If AutoNegotiation is enabled, a result of AutoNegotiation is reflected and this setting is not applied, while if AutoNegotiation disabled, this setting is applied.

This command can be executed only in Administrator mode.

Be careful about the following restrictions when setting by this command.

- This setting is applicable to the Network port only when 10/100/1000BASE-T SFP is implemented.
- If the link status of the "show port" command is half duplex, check that AutoNegotiation, communication speed, and duplex mode setting are suitable for the connected device. When the setting does not match, the communication does not operate correctly.

### [Display]

```
PureFlow (A)> set port speed 1/1 100M
PureFlow (A)> set port speed 1/2 10M
PureFlow (A)>
```

### [Arguments]

slot/port

Specify the slot location and port number of the Network port.

Only 1 can be specified as the slot location. Valid port numbers are 1 and 2.

{10M | 100M | 1G}

Set the communication speed (port speed) to either 1 Gbps, 100 Mbps or 10 Mbps.

### [Default Value]

The default value is 1G.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

Usage : set port speed <slot/port> {10M | 100M | 1G}

Usage : set port speed system {10M | 100M | 1G}

- There is a missing argument.

An argument was missing

Usage : set port speed <slot/port> {10M | 100M | 1G}

- There is a missing argument.

An argument was missing

Usage : set port speed system {10M | 100M | 1G}

- There is a missing argument.

slot #N is invalid

- The specified slot is invalid.

port <slot/port> is invalid

- The specified port is invalid.

Speed is invalid

- The specified baud rate (port speed) is invalid.

## set port maxpacketlen

### [Format]

```
set port maxpacketlen {2048 | 10240}
```

### [Description]

This command sets the maximum packet length for the Network port.

The maximum packet length is a common setting for each Network port.

The setting value is the entire length of the packet including the Ethernet header and FCS. Note that the length of VLAN Tag is excluded. The VLAN Tag packet has the maximum length of the setting value plus 4 bytes; the dual VLAN Tag has the maximum length of the setting value plus 8 bytes.

Changes to this setting will be applied at the next boot. Like the `save config` command, this command saves the current operating parameters (running configuration) in the internal flash memory. When the command setting is complete, restart the system. The previous setting value will be used until the system is restarted.

### Note:

This setting value changes the following scenario parameter setting ranges: When this value is set to 10240, values are automatically rounded within their ranges for configured scenarios and the `add scenario` and `update scenario` commands.

	2048	10240
Buffer size ( <b>bufsize</b> )	2 kbyte to 100 Mbyte	11 kbyte to 100 Mbyte
Minimum bandwidth ( <b>min_bw</b> )	0 or 1 kbps to 10 Gbps in 1 kbps units	0 or 5 kbps to 10 Gbps in 5 kbps units
Peak bandwidth ( <b>peak_bw</b> )	2 kbps to 10 Gbps in 1 kbps units	10 kbps to 10 Gbps in 5 kbps units

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> set port maxpacketlen 10240
```

```
Warning
```

```
This configuration change will be take effect on next boot.
```

```
Please save the system configuration and reboot the system.
```

```
If changed to 10240, some scenario parameters will be rounded as below.
```

```
  minimum value of minimum bandwidth  1k -> 5k
  minimum value of peak bandwidth      2k -> 10k
  bandwidth resolution                  1k -> 5k
  buffer size minimum                   2k -> 11k
```

```
Do you wish to save the system configuration into the flash memory (y/n)? y
```

```
Done
```

```
Rebooting the system, ok (y/n)? y
```

**[Arguments]**

2048 | 10240

Specify the maximum packet length for the Network port.

**[Default value]**

The default value is 2048.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

Usage : set port maxpacketlen {2048 | 10240}

- There is a missing argument.

## show port

### [Format]

```
show port [<slot>]
```

### [Description]

This command displays the Network port or Ethernet port related information. This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow(A)> show port
Port      Type              Status   Link   Autonego  Speed Duplex
----      -
1/1       1000BASE-T        Enabled  Up     Enabled   1G    Full
1/2       1000BASE-T        Enabled  Up     Enabled   1G    Full
system    1000BASE-T        Enabled  Up     Enabled   100M  Full
PureFlow(A)>
```

```
PureFlow(A)> show port
Port      Type              Status   Link   Autonego  Speed Duplex
----      -
1/1       10GBASE-R         Enabled  Up     -----  10G   Full
1/2       10GBASE-R         Enabled  Up     -----  10G   Full
system    1000BASE-T        Enabled  Up     Enabled   100M  Full
PureFlow(A)>
```

The displayed items and their meanings are as follows:

- Port

Shows the slot location and port number of the Network port.  
The Ethernet port is shown as *system*.

- Type

Shows the type of the port using the following character strings:

100BASE-TX	Indicates a 100BASE-TX port.
1000BASE-T	Indicates a 1000BASE-T port.
1000BASE-X	Indicates a 1000BASE-X port.
10GBASE-R	Indicates a 10GBASE-R port.
not mounted	SFP is not mounted.
unknown	The SFP type is unknown.

- Status

Shows the state of the port using the following character strings:

Enabled	The port is enabled.
Disabled	The port is disabled.
error	An error was detected. The port cannot be used.

- Link

Shows the link status of the port using the following character strings:

Up	The port is linked up.
Down	The port is linked down.
Off	The power was turned off by the link-down transfer feature.

- Autonego  
Shows the AutoNegotiation state of the port using the following character strings:  
Enabled            AutoNegotiation is enabled.  
Disabled          AutoNegotiation is disabled.  
-----          AutoNegotiation is outside the specifications.
  
- Speed  
Shows the communication speed of the port using the following character strings:  
10G                10 gigabits per second  
1G                  1 gigabit per second  
100M               100 megabits per second  
10M                10 megabits per second
  
- Duplex  
Shows the duplex mode of the port using the following character strings:  
Full                In full duplex.  
Half                In half duplex.

**[Arguments]**

slot

Specify the slot location of the Network port.  
Only 1 can be specified as the slot location.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.



## show port <slot/port>

### [Format]

```
show port <slot/port>
show port system
```

### [Description]

This command displays detailed information on the specified Network port or Ethernet port. This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow(A)> show port 1/1
```

```
Slot/Port      : 1/1
Port type      : 1000BASE-T
Admin status   : Enabled
Oper status    : Up
AutoNegotiation : Enabled
Admin speed    : 100M
Oper speed     : 100M
Admin duplex   : Full
Oper duplex    : Full
Tx Flow control : Auto
Rx Flow control : Auto
PureFlow(A)>
```

```
PureFlow(A)> show port 1/1
```

```
Slot/Port      : 1/1
Port type      : 10GBASE-R
Admin status   : Enabled
Oper status    : Up
AutoNegotiation : -----
Admin speed    : 1G
Oper speed     : 10G
Admin duplex   : Full
Oper duplex    : Full
Tx Flow control : Auto
Rx Flow control : Auto
PureFlow(A)>
```

The displayed items and their meanings are as follows:

- Slot/Port

Shows the slot location and port number of the Network port.  
The Ethernet port is shown as *system*.

- Port type

Shows the type of the port using the following character strings:

100BASE-TX	Indicates a 100BASE-TX port.
1000BASE-T	Indicates a 1000BASE-T port.
1000BASE-X	Indicates a 1000BASE-X port.
10GBASE-R	Indicates a 10GBASE-R port.
not mounted	SFP is not mounted.
unknown	The SFP type is unknown.

- Admin status

Shows the status of the port using the following character strings:

Enabled	The port is enabled.
Disabled	The port is disabled.

- Oper status

Shows the link status of the port using the following character strings:

Up	The port is linked up.
Down	The port is linked down.
Off	The power was turned off by the link-down transfer feature.

- AutoNegotiation

Shows the AutoNegotiation setting for the port.

Enabled	AutoNegotiation is enabled.
Disabled	AutoNegotiation is disabled.
-----	AutoNegotiation is outside the specifications.

- Admin speed

Shows the communication speed setting of the port. This setting only applies to 1000BASE-T.

1G	1 gigabit per second
100M	100 megabits per second
10M	10 megabits per second

- Oper speed

Shows the communication speed of the port. In the Ethernet port, only if its link status is Up (active).

10G	10 gigabits per second
1G	1 gigabit per second
100M	100 megabits per second
10M	10 megabits per second

- Admin duplex

Shows the settings specified for the duplex mode of the port. This setting only applies to 1000BASE-T.

Full	Full duplex is specified.
Half	Half duplex is specified.

- Oper duplex

Shows the duplex mode of the port. In the Ethernet port, only if its link status is Up (active).

Full	In full duplex.
Half	In half duplex.

- Rx flow control  
Shows the settings of the port's receiving-side flow control.
  - Auto                      Flow control is set to auto.
  - On                         Flow control is set to On.
  - Off                        Flow control is set to Off.
  
- Tx flow control  
Shows the settings of the port's transmitting-side flow control.
  - Auto                      Flow control is set to auto.
  - On                         Flow control is set to On.
  - Off                        Flow control is set to Off.
  
- Admin Max Packet Len  
Shows the maximum packet length setting for the Network port.
  
- Oper Max Packet Len  
Shows the maximum packet length for the Network port.

**[Arguments]**

slot/port

Specify the slot location and port number of the Network port.

Only 1 can be specified as the slot location. Valid port numbers are 1 and 2.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

port <slot/port> is invalid

- The specified port is invalid.

slot #N is invalid

- The specified slot is invalid.

## 2.2.2 ACL-related commands

### add rulelist group

**[Format]**

```
add rulelist group <list_name> {ipv4 | ipv6 | l4port}
```

**[Description]**

This command adds a rule list.

A rule list is a group of rules for extracting traffic, such as multiple IP addresses and TCP/UDP ports.

In a rule list, you can create IPv4 address/address mask, IPv6 address/address mask, and TCP/UDP port number groups. By grouping hosts and applications for which you want to perform the same traffic control, filter criteria registration can be simplified.

Use this command to create a rule list, and then use the `add rulelist entry` command to register the addresses or TCP/UDP port numbers to be grouped.

Port numbers in the `l4port` rule list do not indicate whether the port is TCP or UDP. To distinguish between TCP and UDP, use the filter parameter when you set a filter.

Up to 1024 groups can be registered to a rule list.

This command can be executed only in Administrator mode.

**Note:**

Only the following ASCII characters can be set in the rule list.

```
1234567890
abcdefghijklmnopqrstuvwxyz
ABCDEFGHIJKLMNOPQRSTUVWXYZ
!#$%&'()*~^-^|@`[]{}:*+_/.<>
```

**[Display]**

```
PureFlow(A)> add rulelist group "v4Servers" ipv4
PureFlow(A)> add rulelist group "v6Servers" ipv6
PureFlow(A)> add rulelist group "RealtimeAppli" l4port
```

**[Arguments]**

`list_name`

Specify the rule list name. 1 to 32 characters can be specified.

If spaces are required, enclose the character string with quotation marks (" "), for example, "v4 Servers".

It cannot be specified for any name that consists only of numbers, duplicates in the equipment, or consists of only a pair of quotation marks ("").

Any rule list name consisting only of "all" cannot be specified.

`ipv4 | ipv6 | l4port`

Specify the type of the rule list. Select from IPv4 address, IPv6 address, or TCP/UDP port number as the type of objects to be grouped.

<code>ipv4</code>	IPv4 address/address mask
<code>ipv6</code>	IPv6 address/address mask
<code>l4port</code>	TCP/UDP port number

**[Default value]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

Usage : add rulelist group &lt;list\_name&gt; {ipv4 | ipv6 | l4port}

- There is a missing argument.

An argument was missing

Usage : add rulelist group &lt;list\_name&gt; {ipv4 | ipv6 | l4port}

- There is a missing argument.

Specified rulelist name is invalid.

(Number only cannot be specified. "all" cannot be specified.)

(Valid rulename length is from 1 to 32.)

- The rule list name is invalid.

Specified rulelist name is already in use.

- A rule list with the same name already exists.

Maximum number of rulelist was exceeded.

- The number of rule lists exceeded the registration limit.

## add rulelist entry

### [Format]

```
add rulelist entry <list_name> ipv4 <IP_address>
add rulelist entry <list_name> ipv6 <IP_address>
add rulelist entry <list_name> l4port <port>
```

### [Description]

This command adds a rule list entry.

An additional IP address or TCP/UDP port to be grouped is registered to a rule list created using the `add rulelist group` command.

Only entries that are of the same type (IPv4 address, IPv6 address, or TCP/UDP port number) as the target rule list can be registered.

Up to 512 rule list entries can be registered for each rule list, provided the number of entries for all rule lists is 64000 or less.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A) > add rulelist entry "v4Servers" ipv4 192.168.1.1
PureFlow(A) > add rulelist entry "v6Servers" ipv6 FE80::0001
PureFlow(A) > add rulelist entry "v4Servers" ipv4 192.168.1.2-192.168.1.255
PureFlow(A) > add rulelist entry "v6Servers" ipv6 FE80::0002-FE80::FFFF
PureFlow(A) > add rulelist entry "RealtimeAppli" l4port 10
PureFlow(A) > add rulelist entry "RealtimeAppli" l4port 100-200
```

### [Arguments]

`list_name`

Specify the name of the rule list that the rule list entries are to be registered to.

`ipv4 | ipv6 | l4port`

Specify the type of the rule list entry. Select IPv4 address, IPv6 address, or TCP/UDP port number.

You can only register entries of the same type as the target rule list.

<code>ipv4</code>	IPv4 address
<code>ipv6</code>	IPv6 address
<code>l4port</code>	TCP/UDP port number

`IP_address`

Specify an IPv4 address for `ipv4`, an IPv6 address for `ipv6`.

To specify the address, use `<address>` or `<address-address>`.

When specifying a range by using `<start-end>`, ensure the order is ascending (start < end).

**Note:** For `<address-address>`,

192.168.10.0-192.168.10.255 means the address range of 192.168.10.0 to 192.168.10.255.

`port`

Specify the TCP/UDP port number.

Enter the number directly or use `<start-end>`. Valid values are from 0 to 65535.

### [Default value]

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

```
Usage : add rulelist entry <list_name> ipv4 <IP_address>
        add rulelist entry <list_name> ipv6 <IP_address>
        add rulelist entry <list_name> l4port <port>
```

- There is a missing argument.

An argument was missing

```
Usage : add rulelist entry <list_name> ipv4 <IP_address>
        add rulelist entry <list_name> ipv6 <IP_address>
        add rulelist entry <list_name> l4port <port>
```

- There is a missing argument.

Specified rulelist name is invalid.

(Number only cannot be specified. "all" cannot be specified.)  
(Valid rulename length is from 1 to 32.)

- The rule list name is invalid.

Specified rulelist name is not used.

- The specified rule list does not exist.

The format or value of the specified IP address is invalid.

- The specified IP address is invalid.

Specified TCP/UDP port number is invalid. (Valid from 0 to 65535. Or Start - End)

- The specified TCP/UDP port number is invalid.

Maximum number of rulelist entry was exceeded.

- The number of entries for the specified rule list exceeded the limit (512 records).

Maximum number of total rulelist entry was exceeded.

- The number of entries of all rule lists exceeded the registration limit (64000 records).

Specified rulelist entry is already in use.

- The specified rule list entry had already been registered.

Rulelist entry and rulelist is not same type.

- The type is different from that of the target rule list.

## delete rulelist group

### [Format]

```
delete rulelist group {<list_name> | all}
```

### [Description]

This command deletes a rule list.

Deleting a rule list also deletes all rule list entries in the rule list.

Specify the type and name of a rule list to delete that rule list. However, if the specified rule list is set in a filter, it cannot be deleted.

Specify `all` to delete all rule lists. However, if any of the rule lists is set in a filter, all rule lists cannot be deleted by specifying `all`.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> delete rulelist group "v4Servers"  
PureFlow(A)> delete rulelist group all
```

### [Arguments]

`list_name`

Specify the name of the rule list.

`all`

Specify this to delete all rule lists.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

```
Usage : delete rulelist group {<list_name> | all}
```

- There is a missing argument.

An argument was missing

```
Usage : delete rulelist group {<list_name>|all}
```

- There is a missing argument.

Specified rulelist name is invalid.

(Number only cannot be specified. "all" cannot be specified.)

(Valid rulename length is from 1 to 32.)

- The rule list name is invalid.

Specified rulelist name is not used.

- The specified rule list does not exist.

Rulelist is used by filter.

- The rule list is set in a filter.



## delete rulelist entry

### [Format]

```
delete rulelist entry <list_name> ipv4 <IP_address>
delete rulelist entry <list_name> ipv6 <IP_address>
delete rulelist entry <list_name> l4port <port>
delete rulelist entry <list_name> all
```

### [Description]

This command deletes a rule list entry.

Only entries that are of the same type (IPv4 address, IPv6 address, or TCP/UDP port number) as the target rule list can be specified.

Specify “ipv4”, “ipv6”, or “l4port” to delete the specified rule list entry.

Specify “all” to delete all rule list entries from the target rule list.

Even if the target rule list is set in a filter, entries can be deleted.

If a rule list that has no rule list entries is set in a filter, no packets match the criteria.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> delete rulelist entry "v4Servers" ipv4 192.168.1.1
PureFlow(A)> delete rulelist entry "v6Servers" ipv6 FE80::0001
PureFlow(A)> delete rulelist entry "v4Servers" ipv4 192.168.1.2-192.168.1.255
PureFlow(A)> delete rulelist entry "v6Servers" ipv6 FE80::0002-FE80::FFFF
PureFlow(A)> delete rulelist entry "RealtimeAppli" l4port 10
PureFlow(A)> delete rulelist entry "RealtimeAppli" l4port 100-200
PureFlow(A)> delete rulelist entry "RealtimeAppli" all
```

### [Arguments]

list\_name

Specify the name of the rule list.

ipv4 | ipv6 | l4port

Specify the type of the rule list entry. Select IPv4 address, IPv6 address, or TCP/UDP port number.

You can only specify entries of the same type as the target rule list.

ipv4	IPv4 address/address mask
ipv6	IPv6 address/address mask
l4port	TCP/UDP port number

IP\_address

Specify an IPv4 address for ipv4, an IPv6 address for ipv6.

To specify the address, use <address> or <address-address>.

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

port

Specify the TCP/UDP port number.

Enter the number directly or use <start-end>. Valid values are from 0 to 65535.

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

all

Specify this to delete all rule list entries.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

```
Usage : delete rulelist entry <list_name> ipv4 <IP_address>
        delete rulelist entry <list_name> ipv6 <IP_address>
        delete rulelist entry <list_name> l4port <port>
        delete rulelist entry <list_name> all
```

- There is a missing argument.

An argument was missing

```
Usage : delete rulelist entry <list_name> ipv4 <IP_address>
        delete rulelist entry <list_name> ipv6 <IP_address>
        delete rulelist entry <list_name> l4port <port>
```

- There is a missing argument.

Specified rulelist name is invalid.

(Number only cannot be specified. "all" cannot be specified.)  
(Valid rulename length is from 1 to 32.)

- The rule list name is invalid.

Specified rulelist name is not used.

- The specified rule list does not exist.

The format or value of the specified IP address is invalid.

- The specified IP address is invalid.

Specified TCP/UDP port number is invalid. (Valid from 0 to 65535. Or Start - End)

- The specified TCP/UDP port number is invalid.

Rulelist entry and rulelist is not same type.

- The type is different from that of the target rule list.

Specified rulelist entry is not used.

- The specified rule list entry does not exist.

## set filter mode

### [Format]

```
set filter mode in <slot/port> <field>
```

### [Description]

This command sets the combination of fields to identify a flow (flow identification mode).

NF7101C uses a filter to classify packets and extract traffic. To identify the traffic, a flow is used as the minimum unit.

Fields that identify the IP flow include VLAN ID, Inner VLAN ID, CoS, Inner CoS, Source IP address (SIP), Destination IP address (DIP), ToS, protocol number, Source Port (Sport) number, and Destination Port (Dport) number.

With this command, you can transfer packets that have different fields as different flows or as the same flow.

The flow identification mode can be set for each Network port.

Changing the flow identification mode causes the flows that have been registered to be deleted.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> set filter mode in 1/1 cos
PureFlow(A)> set filter mode in 1/2 sip,dip
```

### [Arguments]

slot/port

Specify the slot location and port number of the Network port.

Only 1 can be specified as the slot location. Valid port numbers are 1 and 2.

field

Specify the field name to identify a flow. The following character strings can be specified:

default	A flow is identified based on 5tuple. The combination of sip, dip, proto, sport, and dport is used to identify the flow.
vid	Flow identification is performed based on VLAN ID. For a duplex VLAN tag, flow identification is performed based on the outer-side VLAN ID.
cos	Flow identification is performed based on CoS. For a duplex VLAN tag, flow identification is performed based on the outer-side CoS.
inner-vid	Flow identification is performed based on the inner-side VLAN ID of the duplex VLAN tag.
inner-cos	Flow identification is performed based on the inner-side Cos of the duplex VLAN tag.
sip	Flow identification is performed based on SIP.
dip	Flow identification is performed based on DIP.
tos	Flow identification is performed based on ToS.
proto	Flow identification is performed based on the protocol number.
sport	Flow identification is performed based on Sport.
dport	Flow identification is performed based on Dport.

Multiple parameters can be specified by delimiting them with commas (.). However, default cannot be specified together with other field names.

Filters that contain fields other than those specified in the flow identification mode are considered invalid. For example, when vid, sip, dip is specified to identify the flow based on the VLAN ID, SIP, and DIP fields, if cos which is not specified in the flow identification mode is specified by the add filter command, the filter is deemed inconsistent.

**[Default value]**

field

The default value is "default".

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : set filter mode in <slot/port> <field>

- There is a missing argument.

Command making ambiguity

Usage : set filter mode in <slot/port> <field>

- There is a missing argument.

Specified input physical port is invalid.

- The specified input port number is invalid.

Specified input physical slot is invalid.

- The specified input slot number is invalid.

Specified field is invalid.

Valid fields:

default, vid, cos, inner-vid, inner-cos, sip, dip, tos, proto, sport, dport  
(multiple fields can be specified with separated comma without space)

- The specified field name for flow identification is invalid.

## add filter

### [Format]

```

add filter scenario <scenario_name> filter <filter_name> bridge-ctrl
    [priority <filter_pri>]

add filter scenario <scenario_name> filter <filter_name> ethernet
    [vid {<VID> | none}] [cos <user_priority>]
    [inner-vid {<VID> | none}] [inner-cos <user_priority>]
    [ethertype <type>]
    [priority <filter_pri>]

add filter scenario <scenario_name> filter <filter_name> ipv4
    [vid {<VID> | none}] [cos <user_priority>]
    [inner-vid {<VID> | none}] [inner-cos <user_priority>]
    [sip [list] {<src_IP_address> | <list_name>}]
    [dip [list] {<dst_IP_address> | <list_name>}]
    [tos <type_of_service>] [proto <protocol>]
    [sport [list] {<sport> | <list_name>}]
    [dport [list] {<dport> | <list_name>}]
    [priority <filter_pri>]

add filter scenario <scenario_name> filter <filter_name> ipv6
    [vid {<VID> | none}] [cos <user_priority>]
    [inner-vid {<VID> | none}] [inner-cos <user_priority>]
    [sip [list] {<src_IP_address> | <list_name>}]
    [dip [list] {<dst_IP_address> | <list_name>}]
    [tos <type_of_service>] [proto <protocol>]
    [sport [list] {<sport> | <list_name>}]
    [dport [list] {<dport> | <list_name>}]
    [priority <filter_pri>]

```

### [Description]

This command sets a filter to a scenario.

A filter sorts out packets that flow through a pipe and provides rules to extract traffic.

There are three types of filters: a Bridge-Control filter that identifies packets whose destination MAC addresses are 01-80-C2-00-00-00 to 01-80-C2-00-00-FF (including the spanning tree protocol, link aggregation, and EAPoL (authentication protocol)); an Ethernet filter that targets the length/type field of the Ethernet header; and an IP filter that targets IP packets. The IP filter is further categorized into two types: one for IPv4 packets and the other for IPv6 packets. The filter precedence is based on the filter priority.

For the Ethernet filter, specify at least one parameter in addition to the filter priority.

For the Ethernet filter, IPv4 filter, and IPv6 filter, specify the field that is set by the filter identification mode “set filter mode” command. If a field that is not set by the filter identification mode is specified (except the ethertype field of the Ethernet filter), the traffic does not match the filter.

This command can be used to add a filter to a traffic attribute (scenario) to control traffic that matches the filter criteria.

Multiple filters can be added to a scenario.

To set a filter, specify “<filter\_name>” (filter name). Use the “show filter” command to confirm “<filter\_name>”.

Up to 40000 filters can be registered.

Add a scenario and a filter to each hierarchy to enable hierarchical shaping. Traffic that matches both the upper level scenario filter criteria and the lower level scenario filter criteria is controlled in the lower level hierarchy. Traffic that matches the upper level scenario filter criteria but not the lower level scenario filter criteria is controlled in the upper level. Criteria set in the lower level filter must be included in criteria set in the upper level scenario filter.

Traffic that does not match any filter is transferred on a best effort basis (queue class = 8).

This command can be executed only in Administrator mode.

**Note:**

Only the following ASCII characters can be set in the file name.

```
1234567890
abcdefghijklmnopqrstuvwxyz
ABCDEFGHIJKLMNOPQRSTUVWXYZ
!#$%&'()=~-^|@`[]{}:*+_/.<>
```

**[Display]**

```
PureFlow(A) > add filter scenario "/port1/tokyo/" filter "shibuya1" bridge-ctrl
PureFlow(A) > add filter scenario "/port1/tokyo/" filter "shibuya2"
                ethernet ethertype 0xFFFF
PureFlow(A) > add filter scenario "/port1/tokyo/" filter "shibuya3" ipv4
                sip 192.168.0.0-192.168.255.255 proto udp
PureFlow(A) > add filter scenario "/port1/tokyo/shibuya/" filter "harajukul" ipv4
                sip 192.168.48.0-192.168.48.255 proto udp sport 10-20
PureFlow(A) > add filter scenario "/port2/tokyo" filter "shibuya1" ipv6
                sip FE80::0001 proto udp sport 10
PureFlow(A) > add filter scenario "/port1/tokyo" filter "shibuya4" ipv4
                sip list "v4Servers" proto udp sport list "RealtimeAppli"
```

**[Arguments]**

`scenario_name`

Specify the absolute path of the scenario to which the filter is registered.

`filter_name`

Specify the filter name.

1 to 48 characters can be used.

The same filter can be registered to different scenarios.

If spaces are required, enclose the character string with quotation marks (" "), for example, "v4 Servers".

It cannot be specified for any name that consists only of numbers or consists of only a pair of quotation marks ("").

Any filter name consisting only of "all" cannot be specified.

`bridge-ctrl | ethernet | ipv4 | ipv6`

Specify the filter type.

<code>bridge-ctrl</code>	Destination MAC address is within the range of 01-80-C2-00-00-00 to 01-80-C2-00-00-FF. Packet (Bridge-Control filter)
<code>ethernet</code>	VLAN Tag or the length/type field of the Ethernet header (Ethernet filter)
<code>ipv4</code>	IPv4 packet (IP filter)
<code>ipv6</code>	IPv6 packet (IP filter)

ethertype <type>

Specify the type of the Ethernet header. Valid values are from 0x0000 to 0xFFFF.

vid {<VID> | none}, inner-vid {<VID> | none}

Specify the VLAN ID. If not specified, all Ethernet frames (with/without VLAN Tag) match. If none is specified, frames without VLAN Tag match.

Enter the VLAN ID value directly or use <start-end>.

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

Valid values are from 0 to 4094.

cos <user\_priority>, inner-cos <user priority>

Specify the CoS value. If not specified, all CoS values match. If the vid value is "none", this cannot be specified.

Enter the CoS value directly or use <start-end>.

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

Valid values are from 0 to 7.

sip [list] {<src\_IP\_address> | <list\_name>}

Specify the Source IPv4 address or a rule list name. If not specified, all Source IPv4 addresses match.

To specify src\_IP\_address, use <address> or <address-address>.

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

dip [list] {<dst\_IP\_address> | <list\_name>}

Specify a Destination IPv4 address or a rule list name. If not specified, all Destination IPv4 addresses match.

To specify dst\_IP\_address, use <address> or <address-address>.

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

**Note:** For <address-address>,

192.168.10.0-192.168.10.255 means the address range of 192.168.10.0 to 192.168.10.255.

sip [list] {<src\_IPv6\_address> | <list\_name>}

Specify the Source IPv6 address or a rule list name. If not specified, all Source IPv6 addresses match.

To specify src\_IPv6\_address, use <address> or <address-address> (lowercase characters can be used).

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

dip [list] {<dst\_IPv6\_address> | <list\_name>}

Specify a Destination IPv6 address or a rule list name. If not specified, all Destination IPv6 addresses match.

To specify dst\_IPv6\_address, use <address> or <address-address> (lowercase characters can be used).

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

**Note:** For <address-address>,

FE80:1111:2222:3333:4444:5555:0000:0000-

FE80:1111:2222:3333:4444:5555:FFFF:FFFF means

the address range of

FE80:1111:2222:3333:4444:5555:0000:0000 to

FE80:1111:2222:3333:4444:5555:FFFF:FFFF

.

tos <type\_of\_service>

Specify the ToS value. If not specified, all ToS values match.

Specify the ToS value directly or use <start-end>.

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

Valid values are from 0 to 255.

tos <traffic\_class>

Specify the traffic class value. If not specified, all traffic class values match.

Specify the traffic class value directly or use <start-end>.

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

Valid values are from 0 to 255.

proto <protocol>

Specify the protocol number. If not specified, all protocol numbers match.

Specify the protocol number directly or use <start-end>. tcp, udp, icmp, and icmpv6 can be entered in characters.

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

Valid values are from 0 to 255.

sport [list] {<sport> | <list\_name>}

Specify the Source port number or a rule list name. If not specified, all Source Port numbers match.

Specify the sport number directly or use <start-end>.

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

Valid values are from 0 to 65535.

dport [list] {<dport> | <list\_name>}

Specify the Destination port number or a rule list name. If not specified, all Destination Port numbers match.

Enter the dport number directly or use <start-end>.

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

Valid values are from 0 to 65535.

priority <filter\_pri>

Specify the filter priority. A smaller value means a higher priority. If omitted, 20000 is specified. When a packet is received, whether that packet matches the set filter criteria is checked in the filter order. If priorities are the same, an arbitrary search order is applied. Valid values are from 1 to 40000.

**[Default value]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

Usage : add filter scenario <scenario\_name> filter <filter\_name> bridge-ctrl  
[priority <filter\_pri>]

```
add filter scenario <scenario_name> filter <filter_name> ethernet  
[vid {<VID> | none}] [cos <user_priority>]  
[inner-vid {<VID> | none}] [inner-cos <user_priority>]  
[ethertype <type>]  
[priority <filter_pri>]
```

```
add filter scenario <scenario_name> filter <filter_name> ipv4  
[vid {<VID> | none}] [cos <user_priority>]  
[inner-vid {<VID> | none}] [inner-cos <user_priority>]  
[sip [list] {<src_IP_address> | <list_name>}]  
[dip [list] {<dst_IP_address> | <list_name>}]  
[tos <type_of_service>] [proto <protocol>]  
[sport [list] {<sport> | <list_name>}]  
[dport [list] {<dport> | <list_name>}]  
[priority <filter_pri>]
```



```

add filter scenario <scenario_name> filter <filter_name> ipv6
[vid {<VID> | none}] [cos <user_priority>]
[inner-vid {<VID> | none}] [inner-cos <user_priority>]
[sip [list] {<src_IP_address> | <list_name>}]
[dip [list] {<dst_IP_address> | <list_name>}]
[tos <type_of_service>] [proto <protocol>]
[sport [list] {<sport> | <list_name>}]
[dport [list] {<dport> | <list_name>}]
[priority <filter_pri>]

```

- There is a missing argument.

Specified Scenario Name is invalid.

- The specified scenario name is invalid.

Specified scenario name is not used.

- The specified scenario does not exist.

Specified filter Name is invalid.

(Number only cannot be specified. "all" cannot be specified.)  
(Valid Filter Name length is from 1 to 48.)

- The specified filter name is invalid.

Specified filter Name is already used.

- The specified filter name has already been used in another filter.

Specified Ether type is invalid. (Valid from 0x0000 to 0xFFFF)

- The specified Ether type is invalid.

Specified vid is invalid. (Valid from 0 to 4094, Or Start - End)

- The specified VLAN ID is invalid.

Specified cos is invalid. (Valid from 0 to 7, Or Start - End)

- The specified CoS value is invalid.

Specified inner-vid is invalid. (Valid from 0 to 4094, Or Start - End)

- The specified VLAN ID is invalid.

Specified inner-cos is invalid. (Valid from 0 to 7, Or Start - End)

- The specified CoS value is invalid.

The format or value of the specified source IP address is invalid.

- The specified Source IP address is invalid.

The format or value of the specified destination IP address is invalid.

- The specified Destination IP address is invalid.

The format or value of the specified source IPv6 address is invalid.

- The specified Source IPv6 address is invalid.

The format or value of the specified destination IPv6 address is invalid.

- The specified Destination IPv6 address is invalid.

Specified rulelist name of source IP address is invalid.

Specified rulelist name of destination IP address is invalid.

Specified rulelist name of source port is invalid.

Specified rulelist name of destination port is invalid.

- The rule list name is invalid.

Specified rulelist name of source IP address is not used.  
Specified rulelist name of destination IP address is not used.  
Specified rulelist name of source port is not used.  
Specified rulelist name of destination port is not used.

- The specified rule list does not exist.

IP Filter and rulelist of source IP address is not same type.  
IP Filter and rulelist of destination IP address is not same type.  
IP Filter and rulelist of source port is not same type.  
IP Filter and rulelist of destination port is not same type.

- The type is different from that of the target rule list.

Specified ToS is invalid. (Valid from 0 to 255, Or Start - End)

- The specified ToS or Traffic Class value is invalid.

Specified protocol number is invalid. (Valid from 0 to 255, Start - End, Or tcp/udp/icmp)

- The specified protocol number is invalid.

Specified Source TCP/UDP port number is invalid. (Valid from 0 to 65535. Or Start - End)

- The specified sport number is invalid.

Specified Destination TCP/UDP port number is invalid. (Valid from 0 to 65535. Or Start - End)

- The specified dport number is invalid.

Specified Filter Priority is invalid. (Valid from 1 to 40000)

- The specified filter priority is invalid.

maximum number of filter was exceeded.

- The number of registered filters exceeded the registration limit.

It is necessary to set one or more parameters other than Priority.

- For the Ethernet filter, specify at least one parameter in addition to Priority.

## delete filter

### [Format]

```
delete filter scenario <scenario_name> filter <filter_name>
delete filter scenario <scenario_name>
delete filter all
```

### [Description]

This command deletes a filter.

If a scenario name and a filter name are specified, the specified filter of the specified scenario is deleted.

If a scenario name is specified and a filter name is not specified, all filters of the specified scenario are deleted.

If all is specified, all filters of all registered scenarios are deleted.

Use the `show scenario` command to confirm the filters added to the scenario.

Use the `show filter` command to confirm the filter settings.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> delete filter scenario "/port1/tokyo" filter "shibuya1"
PureFlow(A)> delete filter scenario "/port1/tokyo"
PureFlow(A)> delete filter all
```

### [Arguments]

`filter_name`

Specify the filter name.

`scenario_name`

Specify the scenario name.

`all`

Deletes all registered filters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

Usage : delete filter all

Usage : delete filter scenario <scenario\_name> filter <filter\_name>

Usage : delete filter scenario <scenario\_name>

- There is a missing argument.

Specified scenario name is invalid.

- The specified scenario name is invalid.

Specified scenario name is not used.

- The specified scenario does not exist.

Specified Filter Name is invalid.

(Number only cannot be specified. "all" cannot be specified.)

(Valid Filter Name length is from 1 to 48.)

- The specified filter name is invalid.

Specified filter name is not used.

- The specified filter does not exist.

## show rulelist

### [Format]

```
show rulelist name <list_name> [next]
show rulelist all
```

### [Description]

This command displays the rule list settings.

If <list\_name> is specified, information related to the specified rule list is displayed.

If next is specified, information next to the specified rule list is displayed. The order is alphabetical based on rule list names.

If all is specified, the information of all rule lists is displayed.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow(A)> show rulelist all
Total rulelist groups: 3

ListName: RealtimeAppli
  Type           : 14port
  Rulelist Index : 3
  Number of Rules:
    Total        : 128
    Used          : 0
    Available     : 128
  Rules:
    (None)

ListName: v4Servers
  Type           : ipv4
  Rulelist Index : 14
  Number of Rules:
    Total        : 128
    Used          : 2
    Available     : 126
  Rules:
    [ 1]          : 192.168.0.0
    [ 2]          : 192.169.0.0

ListName: v6Servers
  Type           : ipv6
  Rulelist Index : 2
  Number of Rules:
    Total        : 128
    Used          : 2
    Available     : 126
  Rules:
    [ 1]          : FE80::0001
    [ 2]          : FE80::0002

Total rulelist groups: 3
PureFlow(A)>
```

### **(When there is no rule list)**

```
PureFlow(A)> show rulelist all
Total rulelist groups: 0
PureFlow(A)>
```

The displayed items and their meanings are as follows:

- ListName  
Shows the rule list name. The rule list names are listed in alphabetical order.

- **Type**  
Shows the type of the rule list.
 

ipv4	IPv4 address/address mask
ipv6	IPv6 address/address mask
l4port	TCP/UDP port number
- **Rulelist Index**  
Shows the rule list index. The rule list index is assigned automatically when it is set.
- **Number of Rules**  
This shows the total number of rule list entries, the number of entries being used, and the number of entries that can be registered in the rule list.
- **Rules**  
Shows the rule list entries.
- **Total rulelist groups**  
Shows the number of rule lists being used.

**[Arguments]**

- `list_name`  
Specify the rule list name. This displays information related to the specified rule list.
- `next`  
This displays information of the rule list next to the specified rule list.

**[Errors]**

- Invalid input at Marker
- There is an unnecessary argument.
- Specified rulelist name is invalid.  
(Number only cannot be specified. "all" cannot be specified.)  
(Valid rulename length is from 1 to 32.)
- The rule list name is invalid.
- Specified rulelist name is not used.
- The specified rule list does not exist.
- Command making ambiguity  
Usage : show rulelist name <list\_name> [next]  
Usage : show rulelist all
- There is a missing argument.
- An argument was missing  
Usage : show rulelist name <list\_name> [next]
- There is a missing argument.

## show filter

### [Format]

```
show filter scenario <scenario_name> [filter <filter_name>] [summary] [next]
show filter all [summary]
```

### [Description]

This command displays the filter settings.

If a scenario name and a filter name are specified, the specified filter of the specified scenario is displayed.

If a scenario name is specified and a filter name is not specified, all filters of the specified scenario are displayed.

If `summary` is specified, only the filter names are displayed.

If `next` is specified, the filter next to the specified filter is displayed. The display order is the same as when the filter name is specified and `next` not specified for this command.

If `next` is specified and a filter name is not specified, information of the first filter of the specified scenario is displayed. If no filters are registered to the specified scenario, information of the first filter of the next scenario is displayed.

If `all` is specified, all filters of all scenarios are displayed.

This command can be executed in the Normal and Administrator modes.

### [Display]

#### (When a scenario name and a filter name are specified)

```
PureFlow(A)> show filter scenario "/port1/Tokyo" filter "shibuya1"
Total filter entries: 5
```

```
Scenario Name: "/port1/Tokyo"
```

```
Filter Name: "shibuya1"
```

```
Filter Type: IPv4
```

```
Filter Rule:
```

```
vid           :10-100
cos           :0-7
inner-vid     :10
inner-cos     :0
Sip           :210.10.10.0-210.10.10.255
Dip           :192.168.48.0-192.168.48.255
ToS          :1-5
Proto        :udp
Sport        :100-110
Dport        :200-210
Priority      :1
```

```
Total filter entries: 5
```

```
PureFlow(A)>
```

**(When a scenario name is specified and a filter name is not specified)**

```
PureFlow(A)> show filter scenario "/port1/Tokyo"  
Total filter entries: 5
```

```
Scenario Name: "/port1/Tokyo"
```

```
Filter Name: "shibuya1"  
Filter Type: IPv4  
Filter Rule:  
  vid          :10-100  
  cos          :0-7  
  inner-vid    :10  
  inner-cos    :0  
  Sip          :210.10.10.0-210.10.10.255  
  Dip          :192.168.48.0-192.168.48.255  
  ToS         :1-5  
  Proto       :udp  
  Sport       :100-110  
  Dport       :200-210  
  Priority     :1
```

```
Filter Name: "shibuya2"  
Filter Type: IPv6  
Filter Rule:  
  vid          :10-100  
  cos          :0-7  
  inner-vid    :10  
  inner-cos    :0  
  Sip          :FE80::0001-FE80::FFFF:FFFF  
  Dip          :FE81::0001-FE81::FFFF:FFFF  
  ToS         :1-5  
  Proto       :udp  
  Sport       :100-110  
  Dport       :200-210  
  Priority     :2
```

```
Filter Name: "shibuya3"  
Filter Type: Bridge-ctrl  
Filter Rule:  
  Priority     :3
```

```
Filter Name: 4"shibuya4"  
Filter Type: Ethernet  
Filter Rule:  
  EtherType   :0x0900  
  Priority     :4
```

```
Total filter entries: 5  
PureFlow(A)>
```

**(When all is specified)**

PureFlow(A)> show filter all  
Total filter entries: 5,

Scenario Name: "/port1/Tokyo"

Filter Name: "shibuya1"  
Filter Type: IPv4  
Filter Rule:  
vid :10-100  
cos :0-7  
inner-vid :10  
inner-cos :0  
Sip :210.10.10.0-210.10.10.255  
Dip :192.168.48.0-192.168.48.255  
ToS :1-5  
Proto :udp  
Sport :100-110  
Dport :200-210  
Priority :1

Filter Name: "shibuya2"  
Filter Type: IPv6  
Filter Rule:  
vid :10-100  
cos :0-7  
inner-vid :10  
inner-cos :0  
Sip :FE80::0001-FE80::FFFF:FFFF  
Dip :FE81::0001-FE81::FFFF:FFFF  
ToS :1-5  
Proto :udp  
Sport :100-110  
Dport :200-210  
Priority :2

Filter Name: "shibuya3"  
Filter Type: Bridge-ctrl  
Filter Rule:  
Priority :3

Filter Name: "shibuya4"  
Filter Type: Ethernet  
Filter Rule:  
EtherType :0x0900  
Priority :4

Scenario Name: "/port1/Osaka"

Filter Name: "asahi1"  
Filter Type: IPv4  
Filter Rule:  
vid :10-100  
cos :0-7  
inner-vid :10  
inner-cos :0  
Sip :210.10.10.0-210.10.10.255  
Dip :192.168.48.0-192.168.48.255  
ToS :1-5  
Proto :udp  
Sport :100-110  
Dport :200-210  
Priority :5

Total parent filter entries: 5  
PureFlow(A)>



**(When summary is specified)**

```
PureFlow(A)> show filter all summary
Total filter entries: 5
```

```
Scenario Name: "/port1/Tokyo"
  Filter Name: "shibuya1"
  Filter Name: "shibuya2"
  Filter Name: "shibuya3"
  Filter Name: "shibuya4"
Scenario Name: "/port1/Osaka"
  Filter Name: "asahi1"
```

```
Total filter entries: 5
PureFlow(A)>
```

**(When there is no filter)**

```
PureFlow(A)> show filter all
Total filter entries: 0
PureFlow(A)>
```

The displayed items and their meanings are as follows:

- Filter Name  
Shows the filter name.
- Filter Type  
Shows the type of the filter.
 

Bridge-ctrl	Bridge-Control filter
Ethernet	Ethernet filter
IPv4	IPv4 filter
IPv6	IPv6 filter
- Filter Rule  
Shows the filter criteria set for the filter. Omitted filter criteria do not appear.
- Total filter entries  
Shows the number of filters.

**[Arguments]**

scenario\_name  
Specify the scenario.

filter\_name  
Specify the filter name.

summary  
Only displays a summary of the filters.

next  
Displays the filter next to the specified filter.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity  
Usage : show filter scenario <scenario\_name> [filter <filter\_name>] [summary] [next]  
Usage : show filter all [summary]

- There is a missing argument.

An argument was missing  
Usage : show filter scenario <scenario\_name> [filter <filter\_name>] [summary] [next]

- There is a missing argument.

Specified scenario name is invalid.

- The specified scenario name is invalid.

Specified scenario name is not used.

- The specified scenario does not exist.

Specified filter name is invalid.

(Number only cannot be specified. "all" cannot be specified.)

(Valid Filter Name length is from 1 to 48.)

- The specified filter name is invalid.

Specified filter name is not used.

- The specified filter does not exist.

## 2.2.3 Scenario-related commands

### set bandwidth mode

#### [Format]

```
set bandwidth mode {gap [<size>]| no_gap}
```

#### [Description]

This command enables/disables inter-frame gaps and preambles in the communication bandwidth settings.

For Ethernet, inter-frame gaps and preambles are required to continuously transmit frames. When setting the bandwidth in traffic attributes (scenario), you can select whether to control traffic including the gaps and preambles (the target will include the entire network bandwidth) or to control traffic excluding them (the target will only include packets). This command is applied to the entire system. This command can be executed only in Administrator mode.

Be careful about the following restrictions for setting by this command.

- This set value applies to each packet when receiving the packet. Change does not apply to the packet remaining in the scenario buffer when executing the command. Change of this set value is reflected after discharging the packet remaining in the scenario buffer when executing the command.

#### [Display]

```
PureFlow(A)> set bandwidth mode gap
PureFlow(A)>
```

#### [Arguments]

```
{gap [size] | no_gap}
```

If gap is specified, inter-frame gaps and preambles are included in the bandwidth.

Valid values for the size are from -100 [bytes] to 100 [bytes].

If the size is set to 0, the behavior is the same as no\_gap.

If no\_gap is specified, inter-frame gaps and preambles are not included in the bandwidth.

#### [Default value]

The default value is no\_gap.

If the size is omitted, the default value 20 [bytes] is applied.

#### [Errors]

```
Invalid input at Marker
```

- There is an unnecessary argument.

```
An argument was missing
```

```
Usage : set bandwidth mode {gap [size] | no_gap}
```

- There is a missing argument.

```
Specified size is outside the valid range. (Valid from -100 to 100)
```

- The specified size is out of range.

## set shaper peak burst size

### [Format]

```
set shaper peak burst size <size>
```

### [Description]

This command sets the peak burst size in the maximum bandwidth setting for each scenario.

This device controls the transmission burst size to be below "peak burst size + maximum packet length."

This setting is applied to all the scenarios of the entire system.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> set shaper peak burst size 1536
```

```
PureFlow(A)>
```

### [Arguments]

size

Specify the peak burst size.

The setting range depends on the setting value of the maximum packet length.

If the maximum packet length is 2048, Valid values for the size are from 1536 [bytes] to 9216 [bytes].

If the maximum packet length is 10240, Valid values for the size are from 1536 [bytes] to 46080 [bytes].

### [Default value]

The default value is 1536 [bytes].

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : set shaper peak burst size <size>

- There is a missing argument.

Specified Burst size is invalid. (Valid from 1536 to 9216)

Specified Burst size is invalid. (Valid from 1536 to 46080)

- The specified size is out of range.

## add scenario

### [Format]

```
add scenario <scenario_name> action discard [scenario <scenario_id>]

add scenario <scenario_name> action aggregate
    [min_bw <min_bandwidth>] [peak_bw <peak_bandwidth>]
    [class <class>] [bufsize <bufsize>] [scenario <scenario_id>]

add scenario <scenario_name> action individual
    [min_bw <min_bandwidth>] [peak_bw <peak_bandwidth>]
    [class <class>] [bufsize <bufsize>] [scenario <scenario_id>]
    [maxquenum <quenum>] [quedivision <field>]
    [failaction discard]

add scenario <scenario_name> action individual
    [min_bw <min_bandwidth>] [peak_bw <peak_bandwidth>]
    [class <class>] [bufsize <bufsize>] [scenario <scenario_id>]
    [maxquenum <quenum>] [quedivision <field>]
    [failaction forwardbesteffort]

add scenario <scenario_name> action individual
    [min_bw <min_bandwidth>] [peak_bw <peak_bandwidth>]
    [class <class>] [bufsize <bufsize>] [scenario <scenario_id>]
    [maxquenum <quenum>] [quedivision <field>]
    [failaction forwardattribute] [fail_min_bw <min_bandwidth>]
                                [fail_peak_bw <peak_bandwidth>]
                                [fail_class <class>]
```

### [Description]

This command sets the traffic attributes of traffic that matches the filter. Traffic attributes provide the parameters, such as bandwidth and buffer size, used to control traffic. In NF7101C, traffic attributes are called a scenario.

The discard mode, aggregate mode, and individual mode are available as actions for scenarios.

The discard scenario is a scenario for discarding traffic.

The aggregate scenario uses one queue to control traffic of all flows that match the filter.

The individual scenario uses individual queues to control traffic of flows that match the filter.

To perform hierarchical shaping, set a scenario for each hierarchy.

The maximum number of scenarios that can be registered is 40000. A total of 300000 queues can be generated for all individual scenarios.

Use an integer to set a numeric value as a traffic attribute. Decimals are not allowed.

Traffic that does not match any filter is transferred on a best effort basis.

This command can be executed only in Administrator mode.

#### **Note:**

When a scenario remaining in the buffer during communication is deleted by the `delete scenario` command, output from the buffer continues after command execution is completed. A scenario in this state cannot be re-registered by the `add scenario` command. Wait until the output from the buffer is completed, and run the `add scenario` command again.

#### **Note:**

When the scenario with the same name is re-registered after deleting the scenario, the information of the scenario is not inherited by Monitoring Manager 2.

**Note:**

Only the following ASCII characters can be set in the scenario name.

```
1234567890
abcdefghijklmnopqrstuvwxyz
ABCDEFGHIJKLMNOPQRSTUVWXYZ
!#$%&'()>
```

**[Display]**

```
PureFlow(A)> add scenario "/port1/East/" action aggregate min_bw 1G
PureFlow(A)> add scenario "/port1/East/Channell" action aggregate
    min_bw 3M class 1 bufsize 256k
PureFlow(A)> add scenario "/port1/West/" action discard
```

**[Arguments]**

<scenario\_name>

Specify the absolute path of the scenario name.

For the first level, specify /port1, /port2 for the Network port number and then specify a scenario name to be added to the second level or lower.

The scenario/port1 or/port2 cannot be added or deleted.

For the scenario/port1 or/port2, use the update scenario command to update the parameters.

If a scenario is not registered to the upper level, a scenario name cannot be registered to the lower levels.

Valid values are from 1 to 128 characters for all levels (/port1, /port2).

If spaces are required, enclose the character string with quotation marks (" "), for example, "v4 Servers".

It cannot be specified for any name that duplicates in the equipment or consists of only a pair of quotation marks ("").

action discard

Discards traffic that matches the filter in the discard mode.

action aggregate

Aggregates all flows that match the filter and assigns them to one VC queue in the aggregate queue mode.

action individual

Assigns flows that match the filter to individual queues in the individual queue mode.

min\_bw <min\_bandwidth>

Specifies the minimum bandwidth.

If min\_bw is omitted, the minimum bandwidth is not guaranteed.

Valid values are from 1k [bits/s] to 10G [bits/s] and 0. If the maximum packet length is set to 10240 [bytes], a value between 1k [bits/s] to 5k [bits/s] is rounded to 5k [bits/s].

If 0 is specified, the minimum bandwidth is not guaranteed.

The minimum unit is 1k [bits/s]. If the maximum packet length is set to 10240 [bytes], the value is rounded up in 5k [bits/s] units.

Specify the unit (k, M, G).

The letter k represents 1000, M represents 1000000, and G represents 1000000000.

**Note:**

The sum of minimum bandwidths assigned to lower levels must not exceed the guaranteed bandwidth of the upper level. If it exceeds the guaranteed bandwidth of the upper level, the minimum bandwidth of the lower level cannot be guaranteed.

`peak_bw <peak_bandwidth>`

Specifies the peak bandwidth.

If `peak_bw` is omitted, no maximum bandwidth limit is set, and all redundant bandwidth in the same level can be used.

Valid values are from 2k [bits/s] to 10G [bits/s]. If the maximum packet length is set to 10240 [bytes], a value between 2k [bits/s] to 10k [bits/s] is rounded to 10k [bits/s].

The minimum unit is 1k [bits/s]. If the maximum packet length is set to 10240 [bytes], the value is rounded up in 5 k [bits/s] units.

Specify the unit (k, M, G).

The letter k represents 1000, M represents 1000000, and G represents 1000000000.

`class <class>`

Specify the priority of the queue. The highest priority is given to class 1, the second highest priority is given to class 2, and so on. Valid values are from 1 to 8.

**Note:**

If queues with different classes are assigned to the same hierarchy, minimum bandwidth is not guaranteed for flows in queues with low priority classes.

`bufsize <bufsize>`

Specify the allowable input burst length for the traffic.

Valid values are from 2k [bytes] to 100M [bytes]. If the maximum packet length is set to 10240 [bytes], a value between 2k [bytes] to 11k [bytes] is rounded to 11k [bytes].

The minimum unit is 1k [bytes].

Specify the unit (k, M).

The letter k represents 1000, and M represents 1000000.

`scenario <scenario_id>`

Specify the scenario index. Valid values are from 1 to 40000.

`maxquenum <quenum>`

Use a parameter in the individual queue mode to specify the maximum number of queues generated for the scenario.

Valid values are from 1 to 300000.

`quedivision <field>`

Use a parameter in the individual queue mode to specify the division target of the queues to be generated. Specify a packet field in the same way as in the flow identification mode. The following strings can be specified by delimiting them with commas (,).

The specified field is identified, and an individual queue is assigned to a flow with a different field.

Only the field which specified with flow identification mode is valid for the division target of the queue.

The field which is not specified with flow identification mode is invalid for the division target of the queue.

Note that the ethertype field is valid for this setting although it cannot be specified in the flow identification mode.

If any one of 5tuple (`sip`, `dip`, `proto`, `sport`, `dport`) is specified, an unconditional failaction is applied to flows other than IP.

<code>default</code>	Divides the queues by 5tuple. The combination of <code>sip</code> , <code>dip</code> , <code>proto</code> , <code>sport</code> , and <code>dport</code> is used to divide queues.
<code>vlan</code>	Divides queues based on VLAN ID. For a duplex VLAN tag, the outer-side VLAN ID is used.
<code>cos</code>	Divides queues based on Cos. For a duplex VLAN tag, the outer-side Cos is used.
<code>inner-vlan</code>	Divides queues based on the inner-side VLAN ID of the duplex VLAN tag.
<code>inner-cos</code>	Divides queues based on the inner-side CoS of the duplex VLAN tag.
<code>ethertype</code>	Divides queues based on Ethernet Type/Length.
<code>sip</code>	Divides queues based on SIP.
<code>dip</code>	Divides queues based on DIP.
<code>tos</code>	Divides queues based on ToS.

proto	Divides queues based on the protocol number.
sport	Divides queues based on Sport.
dport	Divides queues based on Dport.

failaction {discard | forwardbesteffort | forwardattribute}

Specify the operation applied to a flow other than IP in cases when the number of queues generated exceeds the maxquenum for the scenario or exceeds 300000 for all individual scenarios, or 5tuple is included in quedivision.

Specify discard to perform discard, specify forwardbesteffort to perform best effort transfer, or specify forwardattribute to transfer with a traffic attribute specified.

When forwardattribute is specified, the minimum bandwidth, the peak bandwidth, and the class must be specified.

fail\_min\_bw, fail\_peak\_bw, fail\_class

Specify the minimum bandwidth, the peak bandwidth, and the class when forwardattribute is specified as failaction in the individual queue mode. If all of these are omitted, the operation is the same as best effort transfer forwardbesteffort with minimum/peak bandwidth not specified and class 8 specified.

#### [Default Value]

class

The default value is 2.

8 is applied in the case of fail\_class.

min\_bandwidth

The default value is no minimum bandwidth guarantee.

peak\_bandwidth

The default value is no maximum bandwidth limit.

bufsize

The default value is 1M [bytes].

10M [bytes] is applied in the case of /port1 or/port2 scenario.

maxquenum

The default value is 300000.

quedivision

The default value is default.

failaction

The default value is forwardbesteffort.

#### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

Usage : add scenario <scenario\_name> action discard

Usage : add scenario <scenario\_name> action aggregate

[min\_bw <min\_bandwidth>] [peak\_bw <peak\_bandwidth>]

[class <class>] [bufsize <bufsize>] [scenario <scenario\_id>]



```
Usage : add scenario <scenario_name> action individual
      [min_bw <min_bandwidth>] [peak_bw <peak_bandwidth>]
      [class <class>] [bufsize <bufsize>] [scenario <scenario_id>]
      [maxquenum <quenum>] [quedivision <field>]
      [failaction forwardattribute] [fail_min_bw <min_bandwidth>]
      [fail_peak_bw <peak_bandwidth>]
      [fail_class <class>]
```

- There is a missing argument.

Specified Scenario Class is invalid. It must be either of 1,2,3,4,5,6,7,8.

- The specified class is invalid.

Specified Minimum Bandwidth is invalid. (Valid from 0, 1k to 10G)

- The specified minimum bandwidth is invalid.

Specified Peak Bandwidth is invalid. (Valid from 2k to 10G)

- The specified peak bandwidth is invalid.

Peak Bandwidth should be greater than Minimum Bandwidth.

- peak\_bw must be equal to or greater than min\_bw.

Specified Buff Size is invalid. (Valid from 2k to 100M)

- The specified bufsize is invalid.

Specified Scenario Name is invalid.

- The specified scenario name is invalid.

Specified Scenario Name is already used.

- The specified scenario name has already been used in another scenario.

Specified Scenario of upper level hierarchy is not found.

- The upper level scenario does not exist.

maximum number of scenario was exceeded.

- The number of scenarios exceeded the registration limit.

Specified Scenario ID is invalid. (Valid from 1 to 40000)

- The scenario index is out of range.

Specified Scenario ID is already used.

- The specified scenario index has already been used in another scenario.

Specified Max Q Num is invalid. (Valid from 1 to 300000)

- The specified maxquenum is out of range.

Extended number of scenario is not licensed.

- It is not possible to register a scenario exceeding the limit of the scenario license.
- It is not possible to set the maxquenum parameter exceeding the limit of the scenario license.

Specified Q Division Field is invalid.

Valid fields:

default, vlan, cos, inner-vlan, inner-cos, ethertype, sip, dip, tos, proto, sport, dport

(multiple fields can be specified with separated comma without space)

- The specified quedivision field is invalid.

failaction is not specified.

- fail min bw, fail peak bw, and fail class cannot be specified without specifying failaction.

Specified Failaction is invalid.

- fail min bw, fail peak bw, and fail class can be specified only when forwardattribute is specified as failaction.

Specified scenario has packets in buffer.

Please wait until the buffer becomes empty, and try again.

- The specified scenario is sending packets. Wait until sending is complete, and try again.

## update scenario

### [Format]

```

update scenario <scenario_name> action aggregate
    [min_bw <min_bandwidth>] [peak_bw <peak_bandwidth>]
    [class <class>] [bufsize <bufsize>]

update scenario <scenario_name> action individual
    [min_bw <min_bandwidth>] [peak_bw <peak_bandwidth>]
    [class <class>] [bufsize <bufsize>]
    [maxquenum <quenum>] [quedivision <field>]
    [failaction discard]

update scenario <scenario_name> action individual
    [min_bw <min_bandwidth>] [peak_bw <peak_bandwidth>]
    [class <class>] [bufsize <bufsize>]
    [maxquenum <quenum>] [quedivision <field>]
    [failaction forwardbesteffort]

update scenario <scenario_name> action individual
    [min_bw <min_bandwidth>] [peak_bw <peak_bandwidth>]
    [class <class>] [bufsize <bufsize>]
    [maxquenum <quenum>] [quedivision <field>]
    [failaction forwardattribute] [fail_min_bw <min_bandwidth>]
                                [fail_peak_bw <peak_bandwidth>]
                                [fail_class <class>]

```

### [Description]

This command overwrites traffic attributes (scenario).

This command allows you to change traffic attributes while traffic is being controlled.

This command changes the traffic attributes of the traffic transmitted from the Network port.

Specify /port1 or /port2 for <scenario\_name> to update the parameter. Note that the /port1 or /port2 class cannot be changed.

You can omit each of the parameters but cannot omit all the parameters. Specify at least one parameter that you want to change.

Note that the scenario name and action cannot be changed.

This command can be executed only in Administrator mode.

### [Display]

```

PureFlow(A)> update scenario "/port1/tokyo" action aggregate
             min_bw 1G
PureFlow(A)> update scenario "/port1/tokyo/shibuya" action aggregate
             min_bw 100M peak_bw 500M bufsize 10M

```

### [Arguments]

scenario\_name

Specify the absolute path of the registered scenario name.

Valid values are from 1 to 128 characters for all levels (/port1, /port2).

action aggregate

Changes a scenario in the aggregate queue mode.

action individual

Changes a scenario in the individual queue mode.

`min_bw <min_bandwidth>`

Changes the minimum bandwidth.

If 0 is specified, the minimum bandwidth is not guaranteed.

Valid values are from 1k [bits/s] to 10G [bits/s] and 0. If the maximum packet length is set to 10240 [bytes], a value between 1k [bits/s] to 5k [bits/s] is rounded to 5k [bits/s].

The minimum unit is 1k [bits/s]. If the maximum packet length is set to 10240 [bytes], the value is rounded up in 5k [bits/s] units.

Specify the unit (k, M, G).

The letter k represents 1000, M represents 1000000, and G represents 1000000000.

**Note:**

The sum of minimum bandwidths assigned to lower levels must not exceed the guaranteed bandwidth of the upper level. If it exceeds the guaranteed bandwidth of the upper level, the minimum bandwidth of the lower level cannot be guaranteed.

`peak_bw <peak_bandwidth>`

Changes the peak bandwidth.

Valid values are from 2k [bits/s] to 10G [bits/s]. If the maximum packet length is set to 10240 [bytes], a value between 2k [bits/s] to 10k [bits/s] is rounded to 10k [bits/s].

The minimum unit is 1k [bits/s]. If the maximum packet length is set to 10240 [bytes], the value is rounded up in 5k [bits/s] units.

Specify the unit (k, M, G).

The letter k represents 1000, M represents 1000000, and G represents 1000000000.

`class <class>`

Changes the priority of the queue. The highest priority is given to class 1, the second highest priority is given to class 2, and so on. Valid values are from 1 to 8.

**Note:**

If queues with different classes are assigned to the same hierarchy, minimum bandwidth is not guaranteed for flows in queues with low priority classes.

`bufsize <bufsize>`

Changes an allowable input burst length for the traffic.

Valid values are from 2k [bytes] to 100M [bytes]. If the maximum packet length is set to 10240 [bytes], a value between 2k [bytes] to 11k [bytes] is rounded to 11k [bytes].

The minimum unit is 1k [bytes].

Specify the unit (k, M).

The letter k represents 1000, and M represents 1000000.

`maxquenum <quenum>`

Use a parameter in the individual queue mode to specify the maximum number of queues generated for the scenario.

Valid values are from 1 to 300000.

`quedivision <field>`

Use a parameter in the individual queue mode to specify the division target of the queues to be generated. Specify a packet field in the same way as in the flow identification mode. The following strings can be specified by delimiting them with commas (,).

The specified field is identified, and an individual queue is assigned to a flow with a different field.

Only the field which specified with flow identification mode is valid for the division target of the queue.

The field which is not specified with flow identification mode is invalid for the division target of the queue.

Note that the ethertype field is valid for this setting although it cannot be specified in the flow identification mode.

If any one of 5tuple (sip, dip, proto, sport, dport) is specified, unconditional failaction is applied to flows other than IP (such as ARP).

default	Divides the queues by 5tuple. The combination of sip, dip, proto, sport, and dport is used to divide queues.
vlan	Divides queues based on VLAN ID. For a duplex VLAN tag, the outer-side VLAN ID is used.
cos	Divides queues based on Cos. For a duplex VLAN tag, the outer-side Cos is used.
inner-vlan	Divides queues based on the inner-side VLAN ID of the duplex VLAN tag.
inner-cos	Divides queues based on the inner-side CoS of the duplex VLAN tag.
ethertype	Divides queues based on Ethernet Type/Length.
sip	Divides queues based on SIP.
dip	Divides queues based on DIP.
tos	Divides queues based on ToS.
proto	Divides queues based on the protocol number.
sport	Divides queues based on Sport.
dport	Divides queues based on Dport.

`failaction {discard | forwardbesteffort | forwardattribute}`

Specify the operation applied to a flow other than IP in cases when the number of queues generated exceeds the `maxquenum` for the scenario or exceeds 300000 for all individual scenarios, or 5tuple is included in `quedivision`.

Specify `discard` to perform discard, specify `forwardbesteffort` to perform best effort transfer, or specify `forwardattribute` to transfer with a traffic attribute specified.

When `forwardattribute` is specified, the minimum bandwidth, the peak bandwidth, and the class must be specified.

`fail_min_bw, fail_peak_bw, fail_class`

Specify the minimum bandwidth, the peak bandwidth, and the class when `forwardattribute` is specified as `failaction` in the individual queue mode. If all of these are omitted, the operation is the same as best effort transfer `forwardbesteffort` with minimum/peak bandwidth not specified and class 8 specified.

#### [Default Value]

None

#### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

```
Usage : update scenario <scenario_name> action individual
      [min_bw <min_bandwidth>] [peak_bw <peak_bandwidth>]
      [class <class>] [bufsize <bufsize>]
      [maxquenum <quenum>] [quedivision <field>]
      [failaction {discard |forwardbesteffort |forwardattribute}]
      [fail_min_bw <min_bandwidth>] [fail_peak_bw <peak_bandwidth>]
      [fail_class <class>]
```

```
Usage : update scenario <scenario_name> action aggregate
      [min_bw <min_bandwidth>] [peak_bw <peak_bandwidth>]
      [class <class>] [bufsize <bufsize>]
```

- There is a missing argument.

Specified Scenario Name is invalid.

- The specified scenario name is invalid.

Specified scenario name is not used.

- The specified scenario does not exist.

Specified Scenario Class is invalid. It must be either of 1,2,3,4,5,6,7,8.

- The specified class is invalid.

Specified Minimum Bandwidth is invalid. (Valid from 0, 1k to 10G)

- The specified Minimum Bandwidth is invalid.

Specified Peak Bandwidth is invalid. (Valid from 2k to 10G)

- The specified Peak Bandwidth is invalid.

Peak Bandwidth should be greater than Minimum Bandwidth.

- peak\_bandwidth must be equal to or greater than min\_bandwidth.

Specified Buff Size is invalid. (Valid from 2k to 100M)

- The specified buffer size is out of range.

It is necessary to set one or more parameters.

- At least one parameter must be set.

Specified Scenario Mode is invalid.

- The specified scenario mode is invalid.

Specified Max Q Num is invalid. (Valid from 1 to 300000)

- The specified maxqenum is out of range.

Extended number of scenario is not licensed.

- It is not possible to set the maxqenum parameter exceeding the limit of the scenario license.

Specified Q Division Field is invalid.

Valid fields:

default, vlan, cos, inner-vlan, inner-cos, ethertype, sip, dip, tos, proto, sport,  
dport

(multiple fields can be specified with separated comma without space)

- The specified quedivision field is invalid.

Fail Action Forward is incorrect.

- fail\_min\_bw, fail\_peak\_bw, and fail\_class can be specified only when forwardattribute is specified as failaction.

## delete scenario

### [Format]

```
delete scenario all
delete scenario <scenario_name> [recursive]
```

### [Description]

This command deletes a traffic attribute (scenario) setting.  
It also deletes filters registered to the scenario.  
This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> delete scenario "/port1/tokyo/shibuya/"
PureFlow(A)> delete scenario "/port1/tokyo/" recursive
PureFlow(A)> delete scenario all
```

### [Arguments]

scenario\_name  
Specify the absolute path of the scenario name.  
The scenario /port1 or /port2 cannot be added or deleted.  
For the scenario /port1 or /port2, use the update scenario command to update the parameters.

recursive  
Deletes the specified scenario and its sub scenarios.  
If recursive is not specified, scenarios that have lower level scenarios cannot be deleted.

all  
Deletes all registered scenarios.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing  
Usage : delete scenario {<scenario\_name>|all} [recursive]

- There is a missing argument.

Specified scenario name is invalid.

- The specified scenario name is invalid.

Specified scenario name is not used.

- The specified scenario does not exist.

Down level hierarchy scenario exists.

- A lower level scenario exists.

## show scenario

### [Format]

```
show scenario name <scenario_name> [summary] [next]
show scenario all [summary]
```

### [Description]

This command displays the settings of traffic attributes (scenario).

If `summary` is specified, no filter information is displayed.

If `next` is specified, information of the scenario next to the specified scenario is displayed. The order is based on the scenario tree order.

If `all` is specified, information of all scenarios is displayed.

This command can be executed in the Normal and Administrator modes.

### [Display]

#### (For aggregate mode)

```
PureFlow(A)> show scenario name "/port1/Tokyo"
Total scenario entries: 3
```

```
Scenario 1: "/port1/Tokyo"
Rate Control Unit:
  Create Mode      :Aggregate
  Class            :2
  Min Bandwidth    :5M[bps]
  Peak Bandwidth   :8M[bps]
Default Queue:
  Class            :8
  Buf Size         :512k[Bytes]

*Attached Filters:
  "shibuya1"
  "shinjyuku1"
```

```
Total scenario entries: 3
PureFlow(A)>
```

#### (For individual mode)

```
PureFlow(A)> show scenario name "/port1/Tokyo"
Total scenario entries: 3
```

```
Scenario 1: "/port1/Tokyo"
Rate Control Unit:
  Create Mode      :Individual
  Class            :2
  Min Bandwidth    :5M[bps]
  Peak Bandwidth   :8M[bps]
  Buf Size         :512k[Bytes]
  Max Queue Number :300000
  Queue Division   :
    vlan           :Disable
    cos             :Disable
    inner-vlan     :Disable
    inner-cos      :Disable
    ethertype      :Disable
    sip            :Enable
    dip            :Enable
    tos            :Disable
    proto          :Enable
    sport          :Enable
    dport          :Enable
  Fail Action      :Forward attribute
  Class            :8
  Min Bandwidth    :---
```



```

Peak Bandwidth :1M[bps]

*Attached Filters:
  "shibuya1"
  "shinjyuku1"

Total scenario entries: 3
PureFlow(A)>

(For discard mode)
PureFlow(A)> show scenario name "/port1/Kanagawa/discard"
Total scenario entries: 10

Scenario 1: "/port1/Kanagawa/discard"
  Rate Control Unit:
    Create Mode          :discard

*Attached Filters:
  "yokohama0"

Total scenario entries: 10
PureFlow(A)>

(When summary is specified)
PureFlow(A)> show scenario name "/port1/Tokyo" summary
Total scenario entries: 3

Scenario 1: "/port1/Tokyo"
  Rate Control Unit:
    Create Mode          :Aggregate
    Class                :2
    Min Bandwidth        :5M[bps]
    Peak Bandwidth       :8M[bps]

  Default Queue:
    Class                :8
    Buf Size              :512k[Bytes]

Total scenario entries: 3
PureFlow(A)>

(When there is no scenario)
PureFlow(A)> show scenario all
Total scenario entries: 2

Scenario 40001: "/port1"
  Rate Control Unit:
    Create Mode          :Aggregate
    Class                :1
    Min Bandwidth        :10G[bps]
    Peak Bandwidth       :-----

  Default Queue:
    Class                :8
    Buf Size              :100M[Bytes]

*Attached Filters:
  (none)

Scenario 40002: "/port2"
  Rate Control Unit:
    Create Mode          :Aggregate
    Class                :1
    Min Bandwidth        :10G[bps]
    Peak Bandwidth       :-----

  Default Queue:
    Class                :8

```

```
Buf Size          :100M[Bytes]

*Attached Filters:
  (none)

Total scenario entries: 2

PureFlow(A) >
```

The displayed items and their meanings are as follows:

- Scenario  
Shows the scenario ID and name. For the port scenario ID, 40001 is shown for port 1, and 40002 is shown for port 2.
- Rate Control Unit  
Shows the settings of bandwidth control.
- Default Queue  
Shows the default queue settings.
- Attached Filters  
Shows the names of filters added by the `add filter` command.
- Total scenario entries  
Shows the total number of scenarios.

#### [Arguments]

`scenario_name`  
Specify the absolute path of the scenario name you want to display.

`summary`  
Filter information is not displayed.

`next`  
Displays information of the scenario next to the specified scenario.

#### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity  
Usage : `show scenario name <scenario_name> [summary] [next]`  
Usage : `show scenario all [summary]`

- There is a missing argument.

An argument was missing  
Usage : `show scenario name <scenario_name> [summary] [next]`

- There is a missing argument.

Specified scenario name is invalid.

- The specified scenario name is invalid.

Specified scenario name is not used.

- The specified scenario does not exist.

Next scenario is not exist.

- The next scenario does not exist.

## show scenario tree

### [Format]

```
show scenario tree [conf] [filter]
```

### [Description]

This command displays the hierarchical scenario tree. The tree is displayed in the order of upper to lower levels. If multiple scenarios exist in the same level, these scenario names are shown in alphabetical order.

If an argument is omitted, only scenario names and types are displayed.

If `conf` is specified, scenario setting values are also displayed. Note that the setting values displayed are common to each scenario type. The values are not displayed in the Discard state.

If `filter` is specified, filter names associated with scenarios are also displayed.

This command can be executed in the Normal and Administrator modes.

### [Display]

#### (When an argument is omitted)

```
PureFlow(A)> show scenario tree
```

```
"/port1" (Aggregate)
|
2  |- "/port1/NewYork" (Aggregate)
    | |
    7  |- "/port1/NewYork/FTP" (Aggregate)
        | |
        3  |- "/port1/NewYork/HTTP" (Aggregate)
            | | |
            4  |- "/port1/NewYork/HTTP/Brooklyn" (Aggregate)
                | | | |
                5  |- "/port1/NewYork/HTTP/Brooklyn/Bedford-stuyvesant" (Aggregate)
                    | |
                    6  |- "/port1/NewYork/Ipphone" (Aggregate)
                        |
                        8  |- "/port1/Paris" (Aggregate)
                            |
                            9  |- "/port1/Roma" (Aggregate)
                                |
                                1  |- "/port1/tokyo1" (Aggregate)

"/port2" (Aggregate)

PureFlow(A)>
```

#### (If conf is specified)

```
PureFlow(A)> show scenario tree conf
```

```
"/port1" (Aggregate)
  Class:2 MinBW:----- PeakBW:1G[bps] Buff:1M[Bytes]
  |
  2  |- "/port1/NewYork" (Aggregate)
      |   Class:2 MinBW:5M PeakBW:8M Buff:1M
      | |
      | |

"/port2" (Aggregate)
  Class:2 MinBW:----- PeakBW:1G[bps] Buff:1M[Bytes]

PureFlow(A)>
```

**(If filter is specified)**

```
PureFlow(A)> show scenario tree filter
```

```
"/port1" (Aggregate)
"/port1" (Aggregate)
  Attached Filters:
    (none)
1   |
   |- "/port1/NewYork" (Aggregate)
   |   Attached Filters:
   |       "NewYorkSeg1"
   |       "NewYorkSeg2"
"/port2" (Aggregate)
  Attached Filters:
    (none)

PureFlow(A)>
```

The displayed items and their meanings are as follows:

```
Port Information
id      |
      |- Scenario Information
         Scenario Configuration
         Filter Information
```

- Port Information  
Shows the port number of the Network port.
- id  
Shows the scenario ID automatically set when adding the scenario.
- Scenario Information  
Shows the scenario name and type.
- Scenario Configuration  
Shows the setting values of the scenario.
- Filter Information  
Shows the filter information related to the scenario.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

## 2.2.4 System operation-related commands

### set lpt

**[Format]**

```
set lpt {enable | disable}
```

**[Description]**

This command enables and disables the link-down transfer feature that forces the communicating device into a link-down state when a link-down is detected.

For example, if a link-down is detected on port 1, it will force the device on port 2 into a link-down state .

This command can be executed only in Administrator mode.

**[Display]**

```
PureFlow(A)> set lpt enable  
PureFlow(A)> set lpt disable
```

**[Arguments]**

None

**[Default Value]**

The default value is disable.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing  
usage: set lpt {enable | disable}

- There is a missing argument.

## show lpt

### [Format]

show lpt

### [Description]

This command displays the status of the link-down transfer feature.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow(A)> show lpt
Link Pass Through state : disable
```

The displayed items and their meanings are as follows:

- Link Path Through state

Shows one of the following character strings that indicate whether the link-down transfer feature is enabled or disabled:

enable	The link-down transfer feature is enabled.
disable	The link-down transfer feature is disabled.

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

## set agingtime

**[Format]**

```
set agingtime <timeout>
```

**[Description]**

This command sets the aging time for flows.

Flows that no longer receive packets are deleted after the aging time has elapsed.

This command can be executed only in Administrator mode.

**[Display]**

```
PureFlow(A)> set agingtime 400  
PureFlow(A)>
```

**[Arguments]**

timeout

Specify the aging time in seconds.

Valid values are from 1 to 1800 [seconds].

**[Default Value]**

The default value is 300 [seconds].

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : set agingtime <timeout>

- There is a missing argument.

Specified agingtime is invalid. (Valid from 1 to 1800)

- The aging time is out of range.

## **show agingtime**

### **[Format]**

show agingtime

### **[Description]**

This command displays the aging time used to delete flows.

This command can be executed in the Normal and Administrator modes.

### **[Display]**

```
PureFlow(A)> show agingtime
```

```
agingtime : 300s
```

The displayed items and their meanings are as follows:

- agingtime  
Shows the aging time [seconds].

### **[Arguments]**

None

### **[Errors]**

Invalid input at Marker

- There is an unnecessary argument.



## 2.2.5 Statistics-related commands

### show counter

#### [Format]

```
show counter [brief]
```

#### [Description]

This command displays statistics.

The counter length displayed in this command is 32 bits.

This command can be executed in the Normal and Administrator modes.

Be careful about the following restrictions when executing this command.

- The Rx Octets value and Tx Octets value count the number of octets including the Ether header and FCS.
- The Rx Octets value counts the number of octets excluding the Ether header and FCS. Additionally, the Tx Octets value counts the number of octets excluding FCS.

#### [Display]

```
PureFlow(A) > show counter
```

Port	Rcv Octets	Rcv Packets	Trs Octets	Trs Packets
1/1	6400	100	0	0
1/2	0	0	0	0
system	58368	152	85424	152

Port	Rcv Broad	Rcv Multi	Trs Broad	Trs Multi
1/1	0	0	0	0
1/2	0	0	0	0
system	5	0	10	0

Port	Err Packets	Collision	Discard
1/1	0	0	0
1/2	0	0	0
system	N/A	N/A	N/A

```
PureFlow(A) >
```

```
PureFlow(A) > show counter brief
```

Port	Rcv Octets	Rcv Packets	Trs Octets	Trs Packets	Err Packets
1/1	6400	100	0	0	0
1/2	0	0	0	0	0
system	0	0	0	0	N/A

```
PureFlow(A) >
```

The displayed items and their meanings are as follows:

- Port  
Shows the slot/port of the Network port, or the system interface.
- Rcv Octets  
Shows the number of octets in the received packets.

- Rcv Packets  
Shows the number of received packets.
- Trs Octets  
Shows the number of octets in the transmitted packets.
- Trs Packets  
Shows the number of transmitted packets.
- Rcv Broad  
Shows the number of received broadcast packets.
- Rcv Multi  
Shows the number of received multicast packets.
- Trs Broad  
Shows the number of transmitted broadcast packets.
- Trs Multi  
Shows the number of transmitted multicast packets.
- Error Packet  
Shows the number of received error packets.
- Collision  
Shows the number of packet collisions detected by the Network port.
- Discard  
Shows the number of packets discarded in the system.

**[Arguments]**

brief

Displays a summary of the statistics.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

Error in getting <slot>/<port> statistics

- The specified port is invalid.

Invalid Argument

- The specified port is out of range.

**show counter {<slot/port> | system}****[Format]**

```
show counter {<slot/port> | system}
```

**[Description]**

This command displays statistics on the specified Network port or system interface. The counter length that are displayed by this command is 64 bits. This command can be executed in the Normal and Administrator modes.

Be careful about the following restrictions when executing this command.

- The Rx Octets value and Tx Octets value count the number of octets including the Ether header and FCS.
- The Rx Octets value counts the number of octets excluding the Ether header and FCS. Additionally, the Tx Octets value counts the number of octets excluding FCS.

**[Display]****(When a Network port is specified)**

```
PureFlow(A)> show counter 1/1
```

```

Rcv Packets                100
Rcv Broad                   0
Rcv Multi                   6400
Rcv Octets                  1110
Rcv Rate                    152000 [kbps]
Trs Packets                 0
Trs Broad                   0
Trs Multi                   0
Trs Octets                  0
Trs Rate                    100000 [kbps]
Collision                   0
Drop                        0
Discard                     0
Error Packets              0
    CRC Align Error        0
    Undersize Packet       0
    Oversize Packet        0
    Fragments              0
    Jabbers                 0

```

```
PureFlow(A)>
```

**(When system is specified)**

```
PureFlow(A)> show counter system
```

```

Rcv Packets                152
Rcv Broad                   N/A
Rcv Multi                   N/A
Rcv Octets                  58368
Rcv Rate                    N/A
Trs Packets                 152
Trs Broad                   N/A
Trs Multi                   N/A
Trs Octets                  85424
Trs Rate                    N/A
Collision                   N/A
Drop                        N/A
Discard                     N/A
Error Packets              N/A
    CRC Align Error        N/A
    Undersize Packet       N/A
    Oversize Packet        N/A

```

```
PureFlow(A)>
```

The displayed items and their meanings are as follows:

- Rcv Packets  
Shows the number of received packets.
- Rcv Broad  
Shows the number of received broadcast packets.
- Rcv Multi  
Shows the number of received multicast packets.
- Rcv Octets  
Shows the number of octets in the received packets.
- Rcv Rate  
Displays the average rate (kbits/s) of received packets in 10-second units.
- Trs Packets  
Shows the number of transmitted packets.
- Trs Broad  
Shows the number of transmitted broadcast packets.
- Trs Multi  
Shows the number of transmitted multicast packets.
- Trs Octets  
Shows the number of octets in the transmitted packets.
- Trs Rate  
Displays the average rate (kbits/s) of transmitted packets in 10-second units.
- Collision  
Shows the number of packet collisions detected by the Network port.
- Drop  
Shows the number of packets discarded because of insufficient resources in the system.  
The number of packets discarded in Queue Buffer is not counted.
- Discard  
Displays the number of packets discarded in the system.
- ErrorPackets
  - CRC Align Error  
Shows the number of packets received with an FCS error and abnormal alignment.
  - Undersize Packet  
Shows the number of packets received in which the FCS for the byte length is normal and the packet count is smaller than the default (64 bytes).
  - Oversize Packet  
Displays the number of packets received in which the FCS for the byte length is normal and the packet count is greater than the default (according to the maximum packet length setting).
  - Fragments  
Displays the number of packets received in which the FCS for the byte length is abnormal and the packet count is smaller than the default.
  - Jabbers  
Displays the number of packets received in which the FCS for the byte length is abnormal and the packet count is greater than the default.

**[Arguments]**

slot/port

Specify the slot location and port number of the Network port.

Only 1 can be specified as the slot location. Valid port numbers are 1 and 2.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

Error in getting <slot>/<port> statistics

- The specified port is invalid.

Invalid Argument

- The specified port is out of range.

## clear counter

### [Format]

```
clear counter [<slot/port> | system]
```

### [Description]

If no argument is specified, the counter values of all Network ports and the system interface are cleared.

If an argument is specified, the counter value of the specified Network port or the system interface is cleared.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> clear counter  
PureFlow(A)>
```

### [Arguments]

```
slot/port | system
```

Specify the slot location and port number of the Network port or the system interface.

Only 1 can be specified as the slot location. Valid port numbers are 1 and 2.

### [Errors]

```
Invalid input at Marker
```

- There is an unnecessary argument.

```
slot #N is invalid
```

- The specified slot number is out of range.

```
port <slot/port> is invalid
```

- The specified port is invalid.

## show scenario info

### [Format]

```
show scenario info name <scenario_name>
```

### [Description]

This command displays the buffer information related to the specified scenario.  
This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow(A)> show scenario info name "/port1/Tokyo"
Scenario 1:"/port1/Tokyo"
  Rate Control Unit:
    Create Mode           :Aggregate
    Class                 :2
    Min Bandwidth         :-----
    Peak Bandwidth        :3M[bps]
  Default Queue:
    Class                 :8
    Buf Size               :512k[Bytes]

  *Attached Filters:
    "shibuyal"

Scenario Rate Information
  Recent interval Tx peak   :2250098[bps]
  Recent interval Tx average :1077020[bps]

Default Queue Information
  Buffer Utilization
    Current                :2035( 1%) [Bytes(%)]
    Peak Hold               :3056( 1%) [Bytes(%)]
  Related Flow
    Flow Num                :59[flows]

Individual Queue Information
  Queue Num                :59

PureFlow(A)>
```

The displayed items and their meanings are as follows:

- Scenario  
Shows the scenario ID and name. For the port scenario ID, 40001 is shown for port 1, and 40002 is shown for port 2.
- Rate Control Unit  
Shows the settings of bandwidth control.
- Default Queue  
Shows the default queue settings.
- Attached Filters  
Shows the names of filters added by the `add filter` command.

- Scenario Rate Information  
Displays the transmission rate (bit/s) of the scenario. The value is updated every minute, and the maximum and average values over the last 1 minute are displayed.
- Default Queue Information  
Displays the buffer information assigned by the scenario, by queue type.  
For the buffer use rate, numbers after the decimal point are rounded up.

Type	Description
Buffer Utilization	Displays the buffer information of the default queue. Current Current buffer usage and use rate Peak Hold Maximum buffer usage and use rate
Related Flow	Displays information of flows related to the default queue settings. Flow Num Displays the number of flows related to the default queue.

The maximum buffer usage and use rate are retained until they are cleared by the `clear scenario peakhold buffer` command.

- Individual Queue Information  
Displays information of individual queues. This is available only for scenarios in the individual queue mode.

Type	Description
Queue Num	Displays the number of individual queues generated for the scenario.

**[Arguments]**

scenario\_name  
Specify absolute path of the scenario name.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity  
Usage : show scenario info name <scenario\_name>  
Usage : show scenario info summary

- There is a missing argument.

An argument was missing  
Usage : show scenario info name <scenario\_name>

- There is a missing argument.

Specified scenario name is invalid.

- The specified scenario name is invalid.

Specified scenario name is not used.

- The specified scenario does not exist.



## show scenario info summary

### [Format]

```
show scenario info summary
```

### [Description]

This command displays a list of information related to a scenario.  
This command can be executed in the Normal and Administrator modes.

### [Display]

```

Scenario Name
  FlowNum :      FlowNum[flows]
  Buffer   : Current[Bytes(%)]           PeakHold[Bytes(%)]
  Rate    :      TxPeak[bps],          TxAvg[bps]
  IndQue  : IndividualQueue[queues]
-----
/port1
  FlowNum :              0
  Buffer   :              0( 0%)          0( 0%)
  Rate    :              0              0
/port1/tokyo
  FlowNum :              0
  Buffer   :              0( 0%)          0( 0%)
  Rate    :              0              0
  IndQue  :              0
/port2
  FlowNum :              0
  Buffer   :              0( 0%)          0( 0%)
  Rate    :              0              0

```

The displayed items and their meanings are as follows:

- Scenario Name  
Shows the scenario name.
- FlowNum  
Displays the number of flows related to the scenario.
- Buffer  
Shows the buffer information of the queues assigned by the scenario.
  - Current  
Current buffer usage and use rate
  - Peak Hold  
Maximum buffer usage and use rate
- Rate  
Displays the rate information of the scenario..
  - Tx Peak  
Maximum transmission rate over the last 1 minute
  - Tx Avg  
Average transmission rate over the last 1 minute
- IndQue  
This is available only for scenarios in the individual queue mode.  
Displays the number of individual queues generated for the scenario.

**[Arguments]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

## clear scenario peakhold buffer

### [Format]

```
clear scenario peakhold buffer name <scenario_name>
clear scenario peakhold buffer all
```

### [Description]

This command clears the maximum buffer usage related to the specified scenario. If `all` is specified, it clears the maximum buffer usage related to all scenarios. This command can be executed in Administrator mode.

### [Display]

```
PureFlow(A)> clear scenario peakhold buffer name "/port1/Tokyo"
PureFlow(A)> clear scenario peakhold buffer all
PureFlow(A)>
```

### [Arguments]

`scenario_name`

Specify the absolute path of scenario name.

`all`

Clears the maximum buffer usage of all scenarios.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

Usage : clear scenario peakhold buffer name <scenario\_name>

Usage : clear scenario peakhold buffer all

- There is a missing argument.

An argument was missing

Usage : clear scenario peakhold buffer name <scenario\_name>

- There is a missing argument.

Specified scenario name is invalid.

- The specified scenario name is invalid.

Specified scenario name is not used.

- The specified scenario does not exist.

## show scenario counter

### [Format]

```
show scenario counter name <scenario_name> [default_queue]
```

### [Description]

This command displays the statistics related to the specified scenario.

The total amount including statistics under the specified scenario is displayed.

If `default_queue` is specified, statistics of the default queue of the specified scenario are displayed.

This command can be executed in the Normal and Administrator modes.

### [Display]

#### (When `default_queue` is not specified)

```
PureFlow(A)> show scenario counter name "/port1/Tokyo"
```

```
Scenario 1: "/port1/Tokyo"
```

```
Rate Control Unit:
```

```
  Create Mode           :Aggregate
```

```
  Class                 :2
```

```
  Min Bandwidth         :-----
```

```
  Peak Bandwidth        :3M[bps]
```

```
Default Queue:
```

```
  Class                 :8
```

```
  Buf Size              :512k[Bytes]
```

```
*Attached Filters:
```

```
  "shibuya1"
```

```
Scenario Counter
```

```
  Rx Octets             :           378297928
```

```
  Rx Packets            :           2768994
```

```
  Tx Octets             :           378297928
```

```
  Tx Packets            :           2768994
```

```
  Discard Octets        :                0
```

```
  Discard Packets       :                0
```

```
PureFlow(A)>
```

#### (When `default_queue` is specified)

```
PureFlow(A)> show scenario counter name "/port1/Tokyo" default_queue
```

```
Scenario 1: "/port1/Tokyo"
```

```
Rate Control Unit:
```

```
  Create Mode           :Aggregate
```

```
  Class                 :2
```

```
  Min Bandwidth         :-----
```

```
  Peak Bandwidth        :3M[bps]
```

```
Default Queue:
```

```
  Class                 :8
```

```
  Buf Size              :512k[Bytes]
```

```
*Attached Filters:
```

```
  "shibuya1"
```

```
Scenario Default Queue Counter
```

```
  Rx Octets             :           37829792
```

```
  Rx Packets            :           276899
```

```
  Tx Octets             :           37829792
```

```

Tx Packets      :          276899
Discard Octets  :              0
Discard Packets :              0
PureFlow(A) >

```

The displayed items and their meanings are as follows:

- Scenario  
Shows the scenario ID and name. For the port scenario ID, 40001 is shown for port 1, and 40002 is shown for port 2.
- Rate Control Unit  
Shows the settings of bandwidth control.
- Default Queue  
Shows the default queue settings.
- Attached Filters  
Displays the names of filters added to the scenario.
- Rx Octets  
Displays the number of bytes of the received packets.
- Rx Packets  
Shows the number of received packets.
- Tx Octets  
Displays the number of bytes of the transmitted packets.
- Tx Packets  
Shows the number of transmitted packets.
- Discard Octets  
Displays the number of bytes of the discarded packets.
- Discard Packets  
Displays the number of discarded packets.

#### [Arguments]

scenario\_name

Specify the absolute path of scenario name.

default\_queue

To display statistics of the default queue of the specified scenario, specify default\_queue.

#### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : show scenario counter name <scenario\_name>[default\_queue]

- There is a missing argument.

Specified scenario name is invalid.

- The specified scenario name is invalid.

Specified scenario name is not used.

- The specified scenario does not exist.

## show scenario counter summary

### [Format]

```
show scenario counter summary
```

### [Description]

This command displays a list of statistics related to a scenario.  
This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow(A) > show scenario counter summary
Scenario Name
          Rx Octets      Rx Packets      Tx Octets      Tx Packets
          Discard Octets  Discard Packets
-----
/port1/Tokyo
          14609825292      212764446      14609825292      212764446
                               0                0
/port2/Osaka
          22702372480      354724570      22702372480      354724570
                               0                0
PureFlow(A) >
```

The displayed items and their meanings are as follows:

- Scenario Name  
Shows the scenario name.
- Rx Octets  
Displays the number of bytes of the received packets.
- Rx Packets  
Shows the number of received packets.
- Tx Octets  
Displays the number of bytes of the transmitted packets.
- Tx Packets  
Shows the number of transmitted packets.
- Discard Octets  
Displays the number of bytes of the discarded packets.
- Discard Packets  
Displays the number of discarded packets.

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

## clear scenario counter

### [Format]

```
clear scenario counter name <scenario_name>
clear scenario counter all
```

### [Description]

This command clears the statistics related to the specified scenario. Specify `all` to clear the statistics related to the all scenarios. This command can be executed in Administrator mode.

### [Display]

```
PureFlow(A)> clear scenario counter name "/port1/Tokyo"
PureFlow(A)> clear scenario counter all
PureFlow(A)>
```

### [Arguments]

`scenario_name`  
Specify the absolute path of scenario name.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

Usage : show scenario counter name <scenario\_name> [default\_queue]

Usage : show scenario counter summary

- There is a missing argument.

Specified scenario name is invalid.

- The specified scenario name is invalid.

Specified scenario name is not used.

- The specified scenario does not exist.

## set topcounter

### [Format]

```
set topcounter {enable | disable}
```

### [Description]

This command enables/disables the top counter.  
This command can be executed in Administrator mode.

### [Display]

```
PureFlow(A)> set topcounter enable  
PureFlow(A)>
```

### [Arguments]

enable | disable

Specify `enable` to enable the top counter, or `disable` to disable it.

### [Default Value]

The default value is `disable`.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

Usage : set topcounter {enable | disable}

- There is a missing argument.



## set topcounter config interval time

### [Format]

```
set topcounter config interval time <time_interval>
```

### [Description]

This command sets the collection cycle of the top counter.  
This command can be executed in Administrator mode.

#### **Note:**

If the collection cycle is set to 1 minute, the traffic counter can measure a total of 100,000 entries for all scenarios to be measured. If the collection cycle is 5 or more minutes, a maximum of 1,000,000 entries can be measured.

#### **Note:**

When Monitoring Manager 2 is connected to NF7101C, the collection cycle of the top counter may be changed by Monitoring Manager 2. The collection cycle set by this command and the collection cycle set with the GUI of Monitoring Manager 2 are compared, and the longer cycle is applied. To check the operating collection cycle, use the `show topcounter config` command.

### [Display]

```
PureFlow(A)> set topcounter config interval time 5  
PureFlow(A)>
```

### [Arguments]

`time_interval`  
Specify the collection interval for the top counter in minutes.  
Valid values are 1, 5, 60, 180, and 1440 [minutes].

### [Default Value]

The default value is 5 [minutes].

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing  
Usage: set topcounter config interval time <time\_interval>

- There is a missing argument.

Specified interval time is invalid.  
(Valid values are 1, 5, 60, 180, 1440)

- The specified time is out of range.

## add topcounter config appli port

### [Format]

```
add topcounter config appli port <portno>
add topcounter config appli port <portno>-<portno>
```

### [Description]

This command adds any application port number as a port number to be monitored by the top counter. Up to 256 entries can be added. One command can add 1 entry whether it is separate specification or range specification.

If either the source port number or destination port number of the flow matches, the flow is counted. If both the source port number and destination port number match a registered entry, the flow is counted by the traffic counter for destination port numbers. It is not counted by the traffic counter for source port numbers.

Generally known application port numbers are monitored by default. To check the application port numbers set by default, use the `show topcounter config all` command.

An application port number to be registered must not be duplicate. However, the default application port number can be duplicate.

This command can be executed in Administrator mode.

### [Display]

```
PureFlow(A)> add topcounter config appli port 8192
PureFlow(A)>
PureFlow(A)> add topcounter config appli port 32768-32800
PureFlow(A)>
```

### [Arguments]

portno

portno-portno

Specify the application port number. Specify the number directly or use <start-end>.

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

Valid values are from 0 to 65535.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : add topcounter config appli port <portno>

add topcounter config appli port <portno-portno>

- There is a missing argument.

Maximum number of application port entry is exceeded.

- The maximum registration limit for application ports is exceeded.

Specified application port number is invalid. (Valid from 0 to 65535. Or Start - End)

- The specified application port is invalid.

It overlaps with the following, existing entry.

port\_from - port\_to

-----

#N - #N

-----

- The specified application port duplicates an existing one.

## delete topcounter config appli port

### [Format]

```
delete topcounter config appli port <portno>
delete topcounter config appli port <portno>-<portno>
```

### [Description]

This command deletes an application port number monitored by the top counter.

You can delete application port numbers that duplicate the default application port number, but cannot delete the default application port number. To confirm the default settings, use the `show topcounter config all` command.

This command can be executed in Administrator mode.

### [Display]

```
PureFlow(A)> delete topcounter config appli port 8192
PureFlow(A)>
PureFlow(A)> delete topcounter config appli port 32768-32800
PureFlow(A)>
```

### [Arguments]

```
portno
portno-portno
```

Specify the application port number. Specify the number directly or use `<start-end>`.

When specifying a range by using `<start-end>`, ensure the order is ascending (start < end).

Valid values are from 0 to 65535.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

```
Usage : delete topcounter config appli port <portno>
       delete topcounter config appli port <portno-portno>
```

- There is a missing argument.

Specified application port number is invalid. (Valid from 0 to 65535. Or Start - End)

- The specified application port is invalid.

Specified application port number does not exist.

- The specified application port does not exist.

## **add topcounter config appli port static**

### **[Format]**

```
add topcounter config appli port static <scenario_name> <portno>
```

### **[Description]**

This command registers any application port number as a port number to be always monitored by the top counter. Up to 25 entries can be specified for each scenario to be measured.

If an application port number is registered as static, the traffic counter is fixed to be used for the application port number. Also, the `show topcounter target` command can always show the measurement results regardless of the priority.

The entries differ from application port numbers added by the `add topcounter config appli port` command. This command can register scenarios regardless of whether they are registered by the `add topcounter config appli port` command.

This command can be executed in Administrator mode.

### **[Display]**

```
PureFlow(A)> add topcounter config appli port static /port1 8192  
PureFlow(A)>
```

### **[Arguments]**

`scenario_name`

Specify the absolute path for the name of the scenario to be measured.

`portno`

Specify the application port number to be assigned as static.

Valid values are from 0 to 65535.

### **[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : `add topcounter config appli port static <scenario_name> <portno>`

- There is a missing argument.

Specified Scenario Name is invalid.

- The scenario name is invalid.

Specified Scenario is not a target.

- The specified scenario is not set as a measurement target.

Maximum number of static application port entry is exceeded.

- The maximum registration limit for static application ports is exceeded.

Specified application port number is invalid. (Valid from 0 to 65535)

- The specified application port is invalid.

It overlaps with the existing entry.

- The specified application port number is already registered as static.

## delete topcounter config appli port static

**[Format]**

```
delete topcounter config appli port static <scenario_name> <portno>
```

**[Description]**

This command deletes the static registration of the application port number.

This command can be executed in Administrator mode.

**[Display]**

```
PureFlow(A)> delete topcounter config appli port static /port1 8192  
PureFlow(A)>
```

**[Arguments]**

scenario\_name

Specify the absolute path for the name of the scenario to be measured.

portno

Specify the application port number for which to delete the static registration.

Valid values are from 0 to 65535.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : delete topcounter config appli port static <scenario\_name> <portno>

- There is a missing argument.

Specified Scenario Name is invalid.

- The scenario name is invalid.

Specified Scenario is not a target.

- The specified scenario is not set as a measurement target.

Specified application port number is invalid. (Valid from 0 to 65535)

- The specified application port is invalid.

Specified static application port does not exist.

- The specified application port number is not registered as static.

## add topcounter target

### [Format]

```
add topcounter target scenario <scenario_name>
                               [sip <cnt_num>] [dip <cnt_num>]
                               [sip_dip <cnt_num>] [appli <cnt_num>]
```

### [Description]

This command adds a scenario to be measured by the top counter. Up to 200 measurement ranges can be added.

Unregistered scenarios can be specified. If an unregistered scenario is specified, the top counter counts the scenario when it is registered. If the related scenario is deleted, it is not deleted from the top counter measurement target.

In addition, the maximum number of traffic counters to be assigned to each measurement range can be specified. Traffic counters can be assigned automatically to each IP address or application port number of transmitted traffic up to the specified number to measure the amount of traffic. Up to 1,000,000 traffic counter entries can be assigned for all measurement targets.

This command can be executed in Administrator mode.

### [Display]

```
PureFlow(A)> add topcounter target scenario /port1 sip 1000 dip 500 sip_dip 1000
              appli 100
PureFlow(A)>
```

### [Arguments]

scenario\_name

Specify the absolute path for the name of the scenario to be measured.

sip <cnt\_num>

Specify the maximum number of traffic counters to be assigned to each Source IP address. If you do not need this value to be displayed by the top counter, specify 0.

Valid values are from 0 to 1000000.

dip <cnt\_num>

Specify the maximum number of traffic counters to be assigned to each Destination IP address. If you do not need this value to be displayed by the top counter, specify 0.

Valid values are from 0 to 1000000.

sip\_dip <cnt\_num>

Specify the maximum number of traffic counters to be assigned to each pair of Source and Destination IP addresses. If you do not need this value to be displayed by the top counter, specify 0.

Valid values are from 0 to 1000000.

appli <cnt\_num>

Specify the maximum number of traffic counters to be assigned to each application port number. If you do not need this value to be displayed by the top counter, specify 0.

Valid values are from 0 to 1000000.

**[Default Value]**

sip <cnt\_num>  
The default value is 1000000.

dip <cnt\_num>  
The default value is 1000000.

sip\_dip <cnt\_num>  
The default value is 1000000.

appli <cnt\_num>  
The default value is 1000000.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing  
Usage : add topcounter target scenario <scenario\_name>  
[sip <cnt\_num>] [dip <cnt\_num>]  
[sip\_dip <cnt\_num>] [appli <cnt\_num>]

- There is a missing argument.

Specified Scenario Name is invalid.

- The scenario name is invalid.

Specified Scenario is already a target.

- The specified scenario ID has already been set as a target.

Specified SIP flow entry is invalid. (Valid from 0 to 1000000)

- The specified number of SIP counter entries is out of range.

Specified DIP flow entry is invalid. (Valid from 0 to 1000000)

- The specified number of DIP counter entries is out of range.

Specified SIP\_DIP flow entry is invalid. (Valid from 0 to 1000000)

- The specified number of SIP\_DIP counter entries is out of range.

Specified application flow entry is invalid. (Valid from 0 to 1000000)

- The specified number of application counter entries is out of range.

Maximum number of target entry is exceeded.

- The maximum number of top counter measurement ranges that can be set in the system is exceeded.

## delete topcounter target

### [Format]

```
delete topcounter target scenario <scenario_name>
delete topcounter target all
```

### [Description]

This command deletes a scenario measured by the top counter.  
Specify `all` to delete all entries.

This command can be executed in Administrator mode.

### [Display]

```
PureFlow(A)> delete topcounter target scenario /port1
PureFlow(A)>
```

### [Arguments]

`scenario <scenario_name>`

Specify the absolute path for the name of the scenario to be measured.

`all`

Specifies all entries.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

```
Usage : delete topcounter target scenario <scenario_id>
       delete topcounter target all
```

- There is a missing argument.

Specified Scenario Name is invalid.

- The scenario name is invalid.

Specified Scenario is not a target.

- The specified scenario is not set as a measurement target.



## update topcounter target

### [Format]

```
update topcounter target scenario <scenario_name>
                               [sip <cnt_num>] [dip <cnt_num>]
                               [sip_dip <cnt_num>] [appli <cnt_num>]
```

### [Description]

This command changes parameters specified for the measurement range of the top counter.

This command can be executed in Administrator mode.

### [Display]

```
PureFlow(A) > update topcounter target scenario /port1 sip 1000 dip 500 sip_dip 1000
               appli 100
PureFlow(A) >
```

### [Arguments]

scenario\_name

Specify the absolute path for the name of the scenario to be measured.

sip <cnt\_num>

Specify the maximum number of traffic counters to be assigned to each Source IP address. If you do not need this value to be displayed by the top counter, specify 0.

Valid values are from 0 to 1000000.

dip <cnt\_num>

Specify the maximum number of traffic counters to be assigned to each Destination IP address. If you do not need this value to be displayed by the top counter, specify 0.

Valid values are from 0 to 1000000.

sip\_dip <cnt\_num>

Specify the maximum number of traffic counters to be assigned to each pair of Source and Destination IP addresses. If you do not need this value to be displayed by the top counter, specify 0.

Valid values are from 0 to 1000000.

appli <cnt\_num>

Specify the maximum number of traffic counters to be assigned to each application port number. If you do not need this value to be displayed by the top counter, specify 0.

Valid values are from 0 to 1000000.

### [Default Value]

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : update topcounter target scenario <scenario\_name>  
[sip <cnt\_num>] [dip <cnt\_num>]  
[sip\_dip <cnt\_num>] [appli <cnt\_num>]

- There is a missing argument.

Specified Scenario Name is invalid.

- The scenario name is invalid.

Specified Scenario is not a target.

- The specified scenario is not set as a measurement target.

It is necessary to set one or more parameters.

- At least one parameter must be set.

Specified SIP flow entry is invalid. (Valid from 0 to 1000000)

- The specified number of SIP counter entries is out of range.

Specified DIP flow entry is invalid. (Valid from 0 to 1000000)

- The specified number of DIP counter entries is out of range.

Specified SIP\_DIP flow entry is invalid. (Valid from 0 to 1000000)

- The specified number of SIP\_DIP counter entries is out of range.

Specified application flow entry is invalid. (Valid from 0 to 1000000)

- The specified number of application counter entries is out of range.

## show topcounter target

### [Format]

```
show topcounter target scenario <scenario_name> group {sip |dip |sip_dip |appli}
```

### [Description]

This command shows the measurement results of the top counter.

This command periodically counts the number of transmitted octets of traffic, and displays the top 25 numbers in order. Note that application port numbers that were registered as static by the `add topcounter config appli port` command are always displayed. This command displays top 25 non-static and static numbers.

The number is counted for each Source IP address, Destination IP address, pair of Source IP and Destination IP addresses, or application port number. Therefore, there are four different types.

To display the top counter results, add a measurement scenario (using the `add topcounter target` command) and enable the top counter (using the `set topcounter` command) beforehand. If necessary, set the collection interval for the top counter (using the `set topcounter config interval time` command).

This command can be executed in the Normal and Administrator modes.

### [Display]

#### (Top counter display by IP Address)

```
PureFlow(A)> show topcounter target scenario /port1 group sip
From          : 2012 Jul 25 11:31:15 To          : 2012 Jul 25 11:36:15
Total Octet   : 34297001          Total Packet : 443555
```

Order	IP Address	Tx Octet	Tx Packet
1	192.100.49.211	402952	5411
2	192.100.103.211	391129	5311
3	fe80:0000:0000:0000:0290:ccff:fe22:8b4c	378346	5079
4	fe80:0000:0000:0000:0290:ccff:fe22:8b4d	362286	4789
5	fe80:0000:0000:0000:0290:ccff:fe22:8b4e	357361	4827

```
PureFlow(A)>
```

#### (Top counter display by application port number)

```
PureFlow(A)> show topcounter target scenario /port1 group appli
From          : 2012 Jul 25 11:31:15 To          : 2012 Jul 25 11:36:15
Total Octet   : 34297001          Total Packet : 443555
```

Order	TCP/UDP Port	Type	Tx Octet	Tx Packet
1	80	static	29328338	379193
2	20000		461027	6061
3	20001		420104	5503
4	20006		398383	5267
:				
24	443	static	6340	18
25	21	static	0	0

```
PureFlow(A)>
```

The displayed items and their meanings are as follows:

- `From`  
Shows the start time of the measurement.
- `To`  
Shows the finish time of the measurement.
- `Total Octet`  
Shows the total number of transmitted octets for all flows.
- `Total Packet`  
Shows the total number of transmitted packets for all flows.
- `Order`  
Shows results in descending order of transmitted octets.  
The top 25 are displayed for `sip`, `dip`, and `sip_dip` groups.  
For the `appli` group, static-specified application port numbers are displayed on a priority basis regardless of their rank. The top 25, including static-specified application port numbers, are displayed.
- `IP Address`  
Shows the IP address.
- `TCP/UDP port`  
Shows the application port number.
- `Type`  
Shows the static setting of the application port number.
- `Tx Octet`  
Shows the number of transmitted octets for the flow.
- `Tx Packet`  
Shows the number of transmitted packets for the flow.

### [Arguments]

`scenario_name`  
Specify the absolute path for the name of the scenario to be measured.

`group {sip | dip | sip_dip | appli}`  
Specify the type of the top counter to be displayed.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

```
Usage : show topcounter target scenario <scenario_name>  
       group {sip | dip | sip_dip | appli}
```

- There is a missing argument.

Specified scenario name is invalid.

- The specified scenario name is invalid.

Specified Scenario is not a target.

- The specified scenario is not set as a measurement target.

Topcounter status is disable

- The top counter is disabled.

None Topcounter information

- There is no top counter information.

None SIP Topcounter information

- There is no SIP top counter information.

None DIP Topcounter information

- There is no DIP top counter information.

None SIP and DIP Topcounter information

- There is no SIP DIP top counter information.

None Protocol Topcounter information

- There is no Port top counter information.

Specified Group name is invalid

Please specify it from sip, dip, sip\_dip or appli.

- The specified group name is invalid.

## show topcounter config

**[Format]**

```
show topcounter config [all]
```

**[Description]**

This command displays the top counter settings.  
This command can be executed in the Normal and Administrator modes.

**[Display]**

```
PureFlow(A)> show topcounter config
Main Configuration
  Status           : enable
  Interval Time    : 5min

Resource Allocation
  Resource Name           Used   Available
  -----
  Total TOPcounter target entries      4     198
  Total user defined portno entries    3     253

Target Entries
  Target Scenario Name      : "/port1/east/channel1"
  Max Traffic Counter
  sip      dip      sip_dip appli
  -----
  1000000 1000000 1000000 1000000
  Static Application PortNo
  80, 443, 21

  Target Scenario Name      : "/port1/east/channel2"
  Max Traffic Counter
  sip      dip      sip_dip appli
  -----
  1000000 1000000 1000000 1000000
  Static Application PortNo
  (None)

Application PortNo
  User Define:
  8010
  20000-20010
  80
  443
  21

PureFlow(A)>
```

The displayed items and their meanings are as follows:

- Main Configuration
  - Shows the top counter settings.
  - Status
    - Shows the operation status of the top counter.
    - enable           The top counter is enabled.
    - disable          The top counter is disabled.
  - Interval Time
    - Shows the collection interval of the top counter. The unit is minutes.
- Resource Allocation
  - Shows the number of resources used by the top counter.
  - Resource Name
    - Shows the resource name.
    - Total TOPcounter target entries
      - Shows the number of measurement scenarios that can be set.
    - Total user defined portno entries
      - Shows the number of application port numbers that can be set.
  - Used
    - Shows the number of resources being used.
  - Available
    - Shows the remaining available resources.
- Target Entries
  - Shows the scenarios and parameters to be measured by the top counter.
  - Target Scenario Name
    - Shows the names of the scenarios to be measured by the top counter.
  - Max Traffic Counter
    - Shows the maximum number of traffic counters assigned to the measurement range.
    - sip
      - Shows the maximum number of traffic counters assigned to each Source IP address.
    - dip
      - Shows the maximum number of traffic counters assigned to each Destination IP address.
    - sip\_dip
      - Shows the maximum number of traffic counters assigned to each pair of Source and Destination IP addresses.
    - appli
      - Shows the maximum number of traffic counters assigned to each application port number.
  - Static Application PortNo
    - Shows static-specified application port numbers.
- Application PortNo.
  - Shows the number of the application port to be observed.
  - User Define
    - Shows the application port numbers added by the user.
  - default
    - Shows the application port numbers set by default.

#### [Arguments]

- all
  - Lists the application port numbers set to be observed by default.

#### [Errors]

- Invalid input at Marker
  - There is an unnecessary argument.

## monitor rate

### [Format]

```
monitor rate <scenario_name> [<num>]
```

### [Description]

This command measures the reception rate and transmission rate of the scenario being used for traffic control.

Measurement is performed every second after this command is input, and the results for the specified number of times are displayed.

This command can be executed in Administrator mode.

Be careful about the following restrictions for measuring by this command.

- The pager function of the terminal session is invalid when this command is being executed. Please note that the pager function applies to this command and stops displaying if the pager function is enabled by the "set pager" command for other terminal sessions when this command is being executed. If the pager function stops displaying according to the restrictions, press the Q key to stop displaying and perform the measurement again.

### [Display]

```
PureFlow(A)> monitor rate "/port1/Tokyo" 3  
Scenario Name : "/port1/Tokyo"
```

Times[s]	Rcv Rate[kbps]	Trs Rate[kbps]
1	3587.562	1254.531
2	3482.826	1198.426
3	3624.692	1217.879
Average	3565.026	1223.612

```
PureFlow(A)>
```

The displayed items and their meanings are as follows:

- Scenario Name  
Shows the scenario name.
- Times  
Shows the elapsed time in seconds from the start of the measurement.
- Rcv Rate  
Shows the reception rate for every second (unit: kbit/s) during the measurement to three decimal places.
- Trs Rate  
Shows the transmission rate for every second (unit: kbit/s) during the measurement to three decimal places.
- Average  
Shows the average reception and transmission rates (unit: kbit/s) to three decimal places.

### [Arguments]

scenario\_name  
Specify the absolute path of scenario name.

num



---

Specify the number of measurement times. Valid values are from 0 to 2147483647. If it is omitted or 0 is specified, rate measurement per second continues until a break by CTRL-C.

**[Default Value]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : monitor rate <scenario\_name> [<num>]

- There is a missing argument.

Specified scenario name is invalid.

- The specified scenario name is invalid.

Specified scenario name is not used.

- The specified scenario does not exist.

Specified number is invalid (Valid from 0 to 2147483647)

- The specified number of measurement times is out of range.

## show flow

### [Format]

```
show flow scenario <scenario_name> all

show flow scenario <scenario_name> best_effort

show flow scenario <scenario_name> match ipv4
[sip <src_IP_address>] [dip <dst_IP_address>]
[proto <protocol>] [sport <sport>] [dport <dport>]
[best_effort]

show flow scenario <scenario_name> match ipv6
[sip <src_IP_address>] [dip <dst_IP_address>]
[prot <protocol>] [sport <sport>] [dport <dport>]
[best_effort]
```

### [Description]

This command displays information on flows that are actually generated. Information of flows under the specified scenario (up to 4000 flows) can be displayed. Use a parameter to specify the flows to be displayed. Specify `all` to display all flows of the specified scenario. Specify `best_effort` to display all flows of the default queue of the specified scenario. Specify `match` to display flows that match the specified conditions. When `best_effort` is specified, only the flows of the default queue are displayed.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow(A)> show flow scenario "/port1/tokyo" all

Applied Scenario:
  Name           : "/port1/tokyo"
  Action          : Aggregate
  Class           : 2

*Attached Filters:
  "shibuya1"

Flow 1:
  Type            : IPv4
  vid             : 10
  cos             : 7
  inner-vid       : 20
  inner-cos       : 14
  Src Addr        : 192.168.10.10
  Dst Addr        : 192.168.20.20
  ToS             : 63
  Protocol        : UDP
  Src Port        : 100
  Dst Port        : 200
PureFlow(A)>
```

**(For IP discard flows)**

```
PureFlow(A) > show flow scenario "/port1/tokyo" all
```

```
Applied Scenario:
  Name           : "/port1/tokyo"
  Action          : Discard
  Class          : -----
```

```
*Attached Filters:
  "shibuya2"
```

```
Flow 1:
  Type           : IPv4
  vid            : 10
  cos            : 7
  inner-vid      : 20
  inner-cos      : 14
  Src Addr       : 192.168.10.10
  Dst Addr       : 192.168.20.20
  ToS            : 63
  Protocol       : UDP
  Src Port       : 100
  Dst Port       : 200
```

```
PureFlow(A) >
```

**(When match is specified)**

```
PureFlow(A) > show flow scenario "/port1/Tokyo" match ipv4 sip 192.168.10.10
```

```
Applied Scenario:
  Name           : "/port1/Tokyo"
  Action          : Aggregate
  Class          : 2
```

```
*Attached Filters:
  "shibuya1"
```

```
Flow 1:
  Type           : IPv4
  vid            : 10
  cos            : 7
  inner-vid      : 20
  inner-cos      : 14
  Src Addr       : 192.168.10.10
  Dst Addr       : 192.168.20.20
  ToS            : 63
  Protocol       : UDP
  Src Port       : 100
  Dst Port       : 200
```

```
PureFlow(A) >
```

The displayed items and their meanings are as follows: The displayed fields vary depending on the flow identification mode specified by the `set filter mode` command.

- Applied Scenario  
Shows information of the scenario.
- Attached Filters  
Shows information of the filters applied to the scenario.
- Type  
Shows the type of the flow.
 

IPv4	IPv4 flow
IPv6	IPv6 flow

- `Class`  
Displays the set Class. For discard flows, this is not shown.
- `vid, inner-vid`  
Shows the VLAN ID. For frames without VLAN Tag, none is shown.
- `cos, inner-cos`  
Shows the CoS value. For frames without VLAN Tag, no CoS value is shown.
- `Src Addr`  
Shows the Source IP address.
- `Dst Addr`  
Shows the Destination IP address.
- `ToS`  
Shows the ToS or Traffic Class value.
- `Protocol`  
Shows the protocol number.
- `Src Port`  
Shows the Source Port number.
- `Dst Port`  
Shows the Destination Port number.

### [Arguments]

`scenario_name`

Specify the absolute path of the scenario name.

`all`

Specify `all` to display all flows of the specified scenario.

`best_effort`

Specify `best_effort` to display the flows of the default queue of the specified scenario.

`sip <src_IP_address>`

Specify the Source IPv4 address or the Source IPv6 address.

If omitted, the Source IP address is not searched.

To specify `src_IP_address`, use `<address>` or `<address-address>`.

(Lowercase letters can be used for the Source IPv6 address.)

When specifying a range by using `<start-end>`, ensure the order is ascending (start < end).

`dip <dst_IP_address>`

Specify the Destination IPv4 address or the Destination IPv6 address.

If omitted, the Destination IP address is not searched.

To specify `dst_IP_address`, use `<address>` or `<address/bitmask>`.

(Lowercase letters can be used for the Destination IPv6 address.)

When specifying a range by using `<start-end>`, ensure the order is ascending (start < end).

`proto <protocol>`

Specify the protocol number. If omitted, the protocol number is not searched.

Specify the protocol number directly or use `<start-end>`.

When specifying a range by using `<start-end>`, ensure the order is ascending (start < end).

`tcp`, `udp`, and `icmp` can be entered in characters. Valid values are from 0 to 255.

sport <sport>

- Specify the Source port number. If omitted, the Source port number is not searched.
- Enter the sport number directly or use <start-end>.
- When specifying a range by using <start-end>, ensure the order is ascending (start < end).
- Valid values are from 0 to 65535.

dport <dport>

- Specify the Destination port number. If omitted, the Destination port number is not searched.
- Enter the dport number directly or use <start-end>.
- When specifying a range by using <start-end>, ensure the order is ascending (start < end).
- Valid values are from 0 to 65535.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

```
Usage : show flow scenario <scenario_name> all
       show flow scenario <scenario_name> best_effort
       show flow scenario <scenario_name> match ipv4
       [sip <src_IP_address>] [dip <dst_IP_address>]
       [proto <protocol>] [sport <sport>] [dport <dport>]
       [best_effort]
       show flow scenario <scenario_name> match ipv6
       [sip <src_IP_address>] [dip <dst_IP_address>]
       [proto <protocol>] [sport <sport>] [dport <dport>]
       [best_effort]
```

- There is a missing argument.

Specified scenario name is invalid.

- The specified scenario name is invalid.

Specified scenario name is not used.

- The specified scenario does not exist.

The format or value of the specified source IP address is invalid.

- The specified Source IP address is invalid.

The format or value of the specified destination IP address is invalid.

- The specified Destination IP address is invalid.

The format or value of the specified source IPv6 address is invalid.

- The specified Source IPv6 address is invalid.

The format or value of the specified destination IPv6 address is invalid.

- The specified Destination IPv6 address is invalid.

Specified protocol number is invalid. (Valid from 0 to 255, Start - End, Or tcp/udp/icmp)

- The specified protocol number is invalid.

Specified Source TCP/UDP port number is invalid. (Valid from 0 to 65535. Or Start - End)

- The specified sport number is invalid.

Specified Destination TCP/UDP port number is invalid. (Valid from 0 to 65535. Or Start - End)

- The specified dport number is invalid.

## show resource

### [Format]

show resource

### [Description]

This command displays the resource status of scenarios, filters and rule lists.  
 This command displays the resource status of flows that are actually generated.  
 It displays the resource status of the top counter.  
 It also displays the system buffer resource status.  
 This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow(A)> show resource
Resource information
-----
Scenario          :      40002      2      40000 [entry]
  Individual Que   :    300000      0    300000 [entry]
Filter            :      40000      0      40000 [entry]
Rulelist         :       1024      0       1024 [group]
Total Rulelist Entry :    10000      0     10000 [entry]
Flow             :   1280000      0   1280000 [flow]
Top Counter
  Target Scenario :        200      0        200 [entry]
  Application Port :         256      0         256 [entry]
  Monitoring Flow :   100000      0   100000 [entry]
System Buffer
  System Packet Buffer : 2013265920  46080 2013219840 [byte]
  Context Pool       :    202296      0    202296 [block]
  Event Message Pool :    16384      20    16364 [block]
  Output Command Pool :      1024      52      972 [block]
  Output Packet Buffer :    98304      0    98304 [byte]
```

The displayed items and their meanings are as follows:

- Scenario  
Shows the total number, used number, and remaining number of scenario entries.
- Individual Que  
Shows the total number, used number, and remaining number of queues generated for an individual scenario.
- Filter  
Shows the total number, used number, and remaining number of filter entries.
- Rulelist  
Shows the total number, used number, and remaining number of rule list groups.
- Total Rulelist Entry  
Shows the total number, used number, and remaining number of rule list entries in all rule list groups.
- Flow  
Shows the total number, used number, and remaining number of flows.
- Top Counter  
Shows the total number, used number, and remaining number of top counter resources.
- Target Scenario  
Shows the total number, used number, and remaining number of scenarios to be measured by the top counter.

- **Application Port**  
Shows the total number, used number, and remaining number of application ports of the top counter.
- **Monitoring Flow**  
Shows the total number, used number, and remaining number of flows being measured by the top counter.
- **System Buffer**  
Shows the total number, used number, and remaining number of the system buffers.

Type	Description
System Packet Buffer	A packet buffer used by the system
Context Pool	A temporary area for packets in progress
Event Message Pool	A message block for the bandwidth control engine
Output Command Pool	A packet output command area
Output Packet Buffer	A packet buffer for In-band transmitted packets

**[Arguments]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

## 2.2.6 Operation management-related commands

### set ip system

#### [Format]

```
set ip system <IP_address> netmask <netmask> [{up | down}]
```

#### [Description]

This command sets the IPv4 address and subnet mask or IPv6 Address and prefix length of the IP network interface of the system (system interface).

Executing this command may disconnect Telnet or other connections because it changes the settings of the system interface.

This command can be executed only in Administrator mode.

#### [Display]

```
PureFlow(A)> set ip system 192.168.37.110 netmask 255.255.255.0 up
PureFlow(A)> set ip system 2001:DB8::1 netmask 32 up
PureFlow(A)>
```

#### [Arguments]

IP\_address

Specify the IPv4 or IPv6 address of the system interface.

netmask <netmask>

Specify the subnet mask when setting the IPv4 address.

Specify the prefix length when setting the IPv6 address.

Valid values of prefix length are from 0 to 128.

[up | down]

Specify up (active) or down (inactive) to set the status of the system interface.

If not specified, the status does not change.

#### [Default Value]

The default values are as follows:

IPv4 address 192.168.1.1

Subnet mask 255.255.255.0

State up

IPv6 address ::192.168.1.1

Prefix length 64

State up

#### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

Usage : set ip system <IP\_address> netmask <netmask> [{up | down}]

- There is a missing argument.



`invalid IP_address`

- The format or value of the specified IP address is invalid.

`invalid netmask`

- The format or value of the specified subnet mask is invalid.
- The value of the specified prefix length is invalid.

## set ip system gateway

### [Format]

```
set ip system gateway <gateway>
```

### [Description]

This command sets the default gateway of the IP network interface of the system (system interface).

Executing this command may disconnect Telnet or other connections because it changes the settings of the system interface.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> set ip system gateway 192.168.37.3
PureFlow(A)> set ip system gateway 2001:DB8::1
PureFlow(A)>
```

### [Arguments]

gateway

Specify the destination gateway IPv4 or IPv6 address.

### [Default Value]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

Usage : set ip system <IP\_address> netmask <netmask> [{up | down}]

Usage : set ip system gateway <gateway>

- There is a missing argument.

invalid gateway

- The gateway IP address format or value is invalid.

gateway already exists

- The gateway IP address had already been set.

---

## unset ip system gateway

**[Format]**

```
unset ip system gateway
```

**[Description]**

This command cancels the default gateway settings of the IP network interface of the system (system interface). It works for both IPv4 and IPv6.

Executing this command may disconnect Telnet or other connections because it changes the settings of the system interface.

This command can be executed only in Administrator mode.

**[Display]**

```
PureFlow(A)> unset ip system gateway  
PureFlow(A)>
```

**[Arguments]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

## set ip system port

### [Format]

```
set ip system port ethernet
set ip system port network in {<slot/port> | all}
                                vid {<VID> | none} [tpid <tpid>]
                                inner-vid {<VID> | none} [inner-tpid <tpid>]
```

### [Description]

This command sets the communication port of the IP network interface of the system (system interface). Communication with the system interface can be performed via the Ethernet port or a Network port. When communication is performed via the Ethernet port, communication of packets without VLAN Tag can be performed.

When the communication is performed via a Network port, communication of packets with/without VLAN Tag and with duplex VLAN Tag can be performed. For packets with VLAN Tag or duplex VLAN Tag, you can specify the Tag Protocol ID of the VLAN Tag added to packets transmitted by NF7101C. If the Tag Protocol ID is omitted, 0x8100 is used for both VLAN Tag and duplex VLAN Tag. For the Tag Protocol ID for received packets, 0x8100 and 0x88a8 are recognized as VLAN Tag.

Executing this command may disconnect Telnet or other connections because it changes the settings of the system interface.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> set ip system port ethernet
PureFlow(A)>
PureFlow(A)> set ip system port network in 1/1 vid 10 tpid 0x88a8 inner-vid 100
PureFlow(A)>
```

### [Arguments]

ethernet | network

Specify the communication port for communication with the system interface.  
Specify ethernet to use the Ethernet port, or network to use a Network port.

in {<slot/port> | all}

This parameter can be specified only when communication with the system interface is performed via a Network port.

Specify the slot location and port number of the Network port to be used for communication with the system interface (through the Network port).

If <slot/port> is specified, communication with the system interface can only be performed via the specified Network port. If all is specified, communication with the system interface can be performed via all Network ports.

Only 1 can be set as the slot location. Valid values for the port number are 1 and 2.

vid {<VID> | none}

This parameter can be specified only when communication with the system interface is performed via a Network port.

Specify the VLAN ID of the system interface (for communication via the Network port).

If <VID> is specified, packets are transmitted with VLAN Tag. If none is specified, packets are transmitted without VLAN Tag.

Valid values are from 0 to 4094.

[tpid <tpid>]

This parameter can be specified only when communication with the system interface is performed via a Network port and <VID> is specified by the vid parameter.

Specify a hexadecimal number for the Tag Protocol ID of the VLAN Tag added to the packets transmitted (via Network port) by the system interface.

Valid values are from 0x0000 to 0xFFFF.

If omitted, 0x8100 is used.

inner-vid {<VID> | none}

This parameter can be specified only when communication with the system interface is performed via a Network port.

Specify the inner VLAN ID of the system interface (for communication via the Network port).

If <VID> is specified, packets are transmitted with duplex VLAN Tag. <VID> can be specified only if <VID> is specified by the vid parameter.

If none is specified, packets are transmitted without duplex VLAN Tag.

Valid values are from 0 to 4094.

[inner-tpid <tpid>]

This parameter can be specified only when communication with the system interface is performed via a Network port and <VID> is specified by the inner-vid parameter.

Specify a hexadecimal number for the Tag Protocol ID of the inner VLAN Tag added to the packets transmitted (via Network port) by the system interface.

Valid values are from 0x0000 to 0xFFFF.

If omitted, 0x8100 is used.

#### [Default Value]

The default values are as follows:

Communication port      ethernet

#### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

Usage : set ip system <IP\_address> netmask <netmask> [{up | down}]

Usage : set ip system port ethernet

Usage : set ip system port network in {<slot/port> | all} vid {<VID> | none} [tpid <tpid>] inner-vid {<VID> | none} [inner-tpid <tpid>]

- There is a missing argument.

Specified input physical slot is invalid.

- The specified input slot number is invalid.

Specified input physical port is invalid.

- The specified input port number is invalid.

Specified vid is invalid. (Valid from 0 to 4094, none)

- The specified VLAN ID is invalid.

Specified TPID is invalid. (Valid from 0x0000 to 0xFFFF)

- The specified Tag Protocol ID is invalid.

TPID can set only when VID is specified.

- The tpid parameter can be specified only when VLAN ID is specified.

Specified inner-vid is invalid. (Valid from 0 to 4094, none)

- The specified inner VLAN ID is invalid.

Inner-VID cannot set without VID.

- The inner VLAN ID can be specified only when VLAN ID is specified.

Specified Inner-TPID is invalid. (Valid from 0x0000 to 0xFFFF)

- The specified inner Tag Protocol ID is invalid.

Inner-TPID can set only when Inner-VID is specified.

- The inner-tpid parameter can be specified only when inner VLAN ID is specified.

## add ip system filter

### [Format]

```
add ip system filter <filter_idx>
[sip <src_IP_address>] [dip <dst_IP_address>] [tos <type_of_service>]
[proto <protocol>] [sport <sport>] [dport <dport>] {permit | deny}
```

### [Description]

This command adds a filter (system interface filter) for packets sent to the IP network interface of the system (system interface).

A system interface filter provides settings to permit or discard incoming packets sent to the system interface.

Up to 256 system interface filters can be registered.

The behavior of packets that do not match the filter is the same as when permit is specified.

#### **Note:**

A ToS value can be specified but filtering based on ToS values is not supported. Commands with tos specified can be accepted but not applied to the operation.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> add ip system filter 1 sip 192.168.0.0/255.255.0.0 permit
PureFlow(A)> add ip system filter 2 sip 2001:DB8::1/32 permit
PureFlow(A)> add ip system filter 10 sip 192.168.48.0/255.255.255.0
proto udp sport 10-20 deny
PureFlow(A)> add ip system filter 11 sip 2001:DB8::/32
proto udp sport 10-20 deny
```

#### **(When the ToS value is specified)**

```
PureFlow(A)> add ip system filter 1 sip 192.168.0.0/255.255.0.0 permit
Warning
ToS filtering is not supported. tos parameter will be ignored.
PureFlow(A)>
```

### [Arguments]

`filter_idx`

Specify the system interface filter index. Each filter criterion corresponds to this index. When a packet is received, whether that packet matches the set filter criteria is checked in the index order.

Valid values for the filter index are from 1 to 256. Specify a unique index value that is not duplicated in the system.

`sip <src_IP_address>`

Specify the Source IP address. If not specified, all Source IP addresses match.

To specify an Ipv4 address, use <address> or <address/bitmask>.

To specify an Ipv6 address, use <address> or <address/bitmask>.

`dip <dst_IP_address>`

Specify the Destination IP address. If not specified, all Destination IP addresses match.

To specify an Ipv4 address, use <address> or <address/bitmask>.

To specify an Ipv6 address, use <address> or <address/bitmask>.

`tos <type_of_service>`

Filtering based on ToS values is not supported. It is not applied to the operation when specified.

proto <protocol>

Specify the protocol number. If not specified, all protocol numbers match.

Specify the protocol number directly or use <start-end>. tcp, udp, icmp, and icmpv6 can be entered in characters.

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

Valid values are from 0 to 255.

sport <sport>

Specify the Source port number. If not specified, all Source port numbers match.

Specify the number directly or use <start-end>.

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

Valid values are from 0 to 65535.

dport <dport>

Specify the Destination port number. If not specified, all Destination Port numbers match.

Specify the number directly or use <start-end>.

When specifying a range by using <start-end>, ensure the order is ascending (start < end).

Valid values are from 0 to 65535.

{permit | deny}

If permit is specified, the packets sent to the system interface are transferred to the system. If deny is specified, the packets are discarded.

#### [Default Value]

None

#### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : add ip system filter <filter\_idx>

[sip <src\_IP\_address>] [dip <dst\_IP\_address>] [tos <type\_of\_service>]  
[proto <protocol>] [sport <sport>] [dport <dport>] {permit | deny}

- There is a missing argument.

Specified index number is invalid. (Valid from 1 to 256)

- The index is out of range.

The format or value of the specified source IP address is invalid.

- The specified Source IP address is invalid.

The format or value of the specified destination IP address is invalid.

- The specified Destination IP address is invalid.

Specified ToS is invalid. (Valid from 0 to 255, Or Start - End)

- The specified ToS value is invalid.

Specified protocol number is invalid. (Valid from 0 to 255, Start - End, Or tcp/udp/icmp)

- The specified protocol number is invalid.

Specified Source TCP/UDP port number is invalid. (Valid from 0 to 65535. Or Start - End)

- The specified sport number is invalid.



Specified Destination TCP/UDP port number is invalid. (Valid from 0 to 65535. Or Start - End)

- The specified dport number is invalid.

Specified index number is already in use. Use another index number.

- A filter with the same index already exists.

## delete ip system filter

### [Format]

```
delete ip system filter all
delete ip system filter <filter_idx>
```

### [Description]

This command deletes a system interface filter.  
This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> delete ip system filter 100
PureFlow(A)> delete ip system filter all
```

### [Arguments]

`filter_idx`

Specify the system interface filter index.  
Valid values for the filter index are from 1 to 256.

`all`

Specifies all registered filters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

```
Usage : delete ip system filter all
Usage : delete ip system filter <filter_idx>
```

- There is a missing argument.

Specified index number is invalid. (Valid from 1 to 256)

- The index is out of range.

Specified index number of the Filter does not exist.

- The specified filter does not exist.

## show ip system

### [Format]

```
show ip system
```

### [Description]

This command displays information on the IP network interface of the system (system interface) and the system interface filter.

This command can be executed in the Normal and Administrator modes.

### [Display]

#### (When the Ethernet port is used)

```
PureFlow> show ip system
Status          : Up
IP Address      : 192.168.37.110
Netmask         : 255.255.255.0
Broadcast       : 192.168.37.255
Default Gateway : 192.168.37.100
IPv6 Address    : 2001:DB8::1
Prefix         : 32
Default Gateway : 2001:DB8::FE
Port           : Ethernet

Number of system filter entries: 2
Index : 1
  Action      : Permit
  Filter Rule:
    Sip       :210.10.0.0/255.255.0.0
    Dip       :192.168.0.0/255.255.0.0
Index : 2
  Action      : Deny
  Filter Rule:
    Sip       :210.10.10.0/255.255.255.0
    Proto     :tcp
    Sport     :100-200
    Dport     :3000
Number of system filter entries: 2

PureFlow>
```

**(When Network port 1/1 is used)**

```
PureFlow> show ip system
Status      : Up
IP Address  : 10.1.1.1
Netmask     : 255.255.255.0
Broadcast   : 10.1.1.255
Default Gateway : 10.1.1.100
IPv6 Address : 2001:DB8::1
Prefix      : 32
Default Gateway : 2001:DB8::FE
Port        : Network (1/1)
VID         : 10
TPID        : 0x8100
Inner-VID   : 100
Inner-TPID  : 0x8100
```

```
Number of system filter entries: 2
Index : 1
  Action      : Permit
  Filter Rule:
    Sip        :210.10.0.0/255.255.0.0
    Dip        :192.168.0.0/255.255.0.0
Index : 2
  Action      : Deny
  Filter Rule:
    Sip        :210.10.10.0/255.255.255.0
    Proto      :tcp
    Sport      :100-200
    Dport      :3000
Number of system filter entries: 2
```

PureFlow>

**(When all Network ports are used)**

```
PureFlow> show ip system
Status      : Up
IP Address  : 20.1.1.1
Netmask     : 255.255.255.0
Broadcast   : 20.1.1.255
Default Gateway : 20.1.1.100
IPv6 Address : 2001:DB8::1
Prefix      : 32
Default Gateway : 2001:DB8::FE
Port        : Network (all)
VID         : none
TPID        : ----
Inner-VID   : none
Inner-TPID  : ----
```

```
Number of system filter entries: 2
Index : 1
  Action      : Permit
  Filter Rule:
    Sip        :210.10.0.0/255.255.0.0
    Dip        :192.168.0.0/255.255.0.0
Index : 2
  Action      : Deny
  Filter Rule:
    Sip        :210.10.10.0/255.255.255.0
    Proto      :tcp
    Sport      :100-200
    Dport      :3000
Number of system filter entries: 2
```

PureFlow>

The displayed items and their meanings are as follows:

- **Status**  
Shows the state of the system interface using one of the following character strings:
 

Up	The system interface is active.
Down	The system interface is inactive.
- **IP Address**  
Shows the IPv4 address of the system interface.
- **Netmask**  
Shows the subnet mask of the system interface. This is shown only for the IPv4 interface.
- **Broadcast**  
Shows the broadcast IPv4 address. This parameter is automatically determined based on the IPv4 address and subnet mask. It is shown only for the IPv4 interface.
- **IPv6 Address**  
Shows the IPv6 address of the system interface.  
If high-order 96 bit are all 0, low-order 32 bit shows the IPv4 address as below.  

IPv6 Address	:	::192.168.1.1
--------------	---	---------------
- **Prefix**  
Indicates the prefix length of the IPv6 address. This is shown only for the IPv6 interface.
- **Default Gateway**  
This is the IP address of the default gateway of the system interface.
- **Port**  
Shows the communication port for communicating with the system interface using the following character strings:
 

Ethernet	Via Ethernet port
Network	Via Network port

It also displays the slot location and number of the port that is used to communicate with the system interface (via the Network port).  
If all Network ports are used for communication, all is shown.
- **VID**  
Displays the VLAN ID of the system interface (for communication via the Network port). When packets are transmitted without VLAN Tag, none is shown. When communication with the system interface is performed via the Ethernet port, this is not shown.
- **TPID**  
Displays the Tag Protocol ID of the VLAN Tag transmitted by the system (via Network port). When packets are transmitted without VLAN Tag, ---- is shown. When communication with the system interface is performed via the Ethernet port, this is not shown.

- `Inner-VID`  
Displays the inner VLAN ID of the system interface (for communication via the Network port).  
When packets are transmitted without duplex VLAN Tag, `none` is shown. When communication with the system interface is performed via the Ethernet port, this is not shown.
- `Inner-TPID`  
Displays the Tag Protocol ID of the inner VLAN Tag transmitted by the system (via Network port).  
When packets are transmitted without duplex VLAN Tag, `----` is shown. When communication with the system interface is performed via the Ethernet port, this is not shown.
- `Number of system filter entries`  
Displays the total number of set system interface filters.
- `Index`  
Shows the system interface filter index.
- `Action`  
Displays action of the filter.  
`Permit` Packets that fall into the range of the filter are received.  
`Deny` Packets that fall into the range of the filter are discarded.
- `Filter Rule`  
Shows the filter criteria set for the filter. Omitted filter criteria do not appear.

**[Arguments]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

## show syslog

### [Format]

```
show syslog
```

### [Description]

This command displays system log information stored in the internal memory. This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow(A) > show syslog
```

```
-----
Date      Time      Host      Ident      [PID]      Message
-----
Jan 25 21:50:54 PureFlow System [10330]: Port 1/1 changed Up from Down.
Jan 25 21:50:54 PureFlow System [10330]: Pipe 1 changed Operate from Down.
```

The displayed items and their meanings are as follows:

- Date  
Shows the date on which the system log information is recorded, in the form of month, and day.
- Time  
Shows the time at which the system log information is recorded, in the form of hours, minutes, and seconds.  
Note that the time is shown in the 24-hour format.
- Host  
Shows the name of the host that recorded the system log information.
- Ident  
Shows the identifier of the program that recorded the system log information.  
If the log is generated by CCPU (control system) or FCPU (forwarding system), System is shown.
- [PID]  
Shows the PID for which the system log information is recorded.
- Messages  
Shows the contents of the system log information message.

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

## show backup syslog

### [Format]

```
show backup syslog [last | second_last]
```

### [Description]

This command displays the system log information stored in the internal backup memory during system operation up to the present. It can go back to the second to last system operation and display information for that period. If the message is 80 characters or longer, it is truncated.

If no argument is specified, system log information stored during the last and second to last system operation is displayed.

If an argument is specified, only system log information stored during the last or second to last system operation is displayed.

To display system log information that is currently stored, use the `show syslog` command.

When NF7101C is restarted, the oldest system log information is deleted, and new system log information generated during the current system operation is stored.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow(A)> show backup syslog
```

```
<Last system log>
```

```
System start up time : 2015 Jan 30 22:09:45
```

```
-----  
Pri Date          Time          Message  
-----
```

```
133 2015 Jan 30 22:09:49 Anritsu PureFlow NF7101-S003A Software Version 1.1.1
```

```
150 2015 Jan 30 22:09:49 Port 1/1 changed Up from Down.
```

```
150 2015 Jan 30 22:09:49 Pipe 1 changed Operate from Down.
```

```
<Second last system log>
```

```
System start up time : 2005 Jan 25 10:02:50 AM
```

```
-----  
Pri Date          Time          Message  
-----
```

```
133 2015 Jan 25 10:02:54 AM Anritsu PureFlow NF7101-S003A Software Version 1.1.1
```

```
150 2015 Jan 25 10:02:54 AM Port 1/1 changed Up from Down.
```

```
150 2015 Jan 25 10:02:54 AM Pipe 1 changed Operate from Down.
```

```
PureFlow(A)>
```



The displayed items and their meanings are as follows:

- `Last system log`  
Indicates that the character strings below are the system log that has been stored since the last startup.
- `Second last system log`  
Indicates that the character strings below are the system log that has been stored since the second to last startup.
- `System start up time`  
Shows the time that NF7101C started the last or second to last time.
- `Pri`  
Shows the priority of the system log information. For details about the priority, see the Configuration Guide.
- `Date`  
Shows the date on which the system log information is recorded, in the form of year, month, and day.
- `Time`  
Shows the time at which the system log information is recorded, in the form of hours, minutes, and seconds.  
Note that the time is shown in the 24-hour format.
- `Message`  
Shows the contents of the system log information message.

#### [Arguments]

`last | second_last`

Specify `last` to display the system log information stored during the last system operation, or `second_last` to display the system log information stored during the second to last system operation.

#### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Reading backup syslog message failed

- Failed to read the system log information from the internal backup memory.

## **clear syslog**

### **[Format]**

```
clear syslog
```

### **[Description]**

This command clears the system log information stored in the internal memory.  
This command can be executed only in Administrator mode.

### **[Display]**

```
PureFlow(A)> clear syslog  
PureFlow(A)>
```

### **[Arguments]**

None

### **[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

## set syslog host

### [Format]

```
set syslog host {enable | disable}
```

### [Description]

This command enables and disables system log output to a host.  
This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)>set syslog host enable  
PureFlow(A)>  
PureFlow(A)>set syslog host disable  
PureFlow(A)>
```

### [Arguments]

enable  
Enables system log output to a host.

disable  
Disables system log output to a host.

### [Default Value]

The default value is disable.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing  
Usage : set syslog host {enable | disable}

- There is a missing argument.

## add syslog host

### [Format]

```
add syslog host <IP_address> [<udp_port>]
```

### [Description]

This command adds the IP address and UDP port number of the destination host for system log output. If the `udp_port` argument is not specified, 514 is used as the UDP port number. Up to 16 output destination hosts can be set. This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> add syslog host 192.168.37.20 514  
PureFlow(A)>
```

### [Arguments]

`IP_address`

Specify the IP address of the destination host for system log output.

`udp_port`

Specify the UDP port of the destination host for system log output. Valid values are from 1 to 65534.

### [Default Value]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : add syslog host <IP\_address> [<udp\_port>]

- There is a missing argument.

invalid IP\_address

- The specified IP address format or value is invalid.

Specified UDP Port number is invalid.(Valid from 1 to 65534)

- The specified UDP port number is invalid.

Specified host address already exists

- The specified host IP address had already been set.

maximum number of host was exceeded

- The maximum registration limit for host IP addresses is exceeded.

## delete syslog host

### [Format]

```
delete syslog host <IP_address>
delete syslog host all
```

### [Description]

This command cancels the destination host for system log output that has the specified IP address. If `all` is specified, it cancels all destination hosts for system log output. This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> del syslog host 192.168.1.1
PureFlow(A)>
```

### [Arguments]

`IP_address`

Specify the IP address of the destination host for system log output that you want to delete.

`all`

Deletes all the registered destination hosts for system log output.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : delete syslog host {all | <IP\_address>}

- There is a missing argument.

invalid IP\_address

- The specified IP address format or value is invalid.

## show syslog host

### [Format]

```
show syslog host
```

### [Description]

This command displays settings for system log output.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow> show syslog host
Severity level      : 5 (notice)
Facility code
  CCPU              : 16
  FCPU              : 17

Host logging       : enable

Host address       : 192.168.37.20
UDP port           : 514

Host address       : 192.168.37.21
UDP port           : 514
PureFlow>
```

The displayed items and their meanings are as follows:

- Severity level  
Shows the lowest level for the system log to be sent to the host.
- Facility code  
Shows numeric values that represent the facilities of the CCPU (control system) and FCPU (forwarding system) system logs.
- Host logging  
Displays the state of the output to the host using one of the following character strings:  
enable            Output is enabled.  
disable           Output is disabled.
- Host address  
Displays the IP address of the host.
- UDP port  
Displays the UDP port number of the host.

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

## set syslog severity

### [Format]

```
set syslog severity <severity_level>
```

### [Description]

This command sets the lowest level for the system log to be sent to the syslog host (severity). Logs with a level lower than this are not sent to the syslog host.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A) > set syslog severity notice
PureFlow(A) >
```

### [Arguments]

severity

Specify the severity. Use a keyword or numeric value that represents the severity.

Keyword	Severity	Level
emergency	0	Highest
alert	1	↑ ↓
critical	2	
error	3	
warning	4	
notice	5	
informational	6	Lowest

### [Default Value]

The default value for severity is notice (logs at the notice level or higher are sent to the syslog host).

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : set syslog severity <severity\_level>

- There is a missing argument.

Specified severity keyword is invalid

- The specified severity keyword is invalid.

invalid level specified

- The specified severity is out of range.

## set syslog facility

### [Format]

```
set syslog facility {ccpu | fcpu} <facility_code>
```

### [Description]

This command sets the facility of the system logs.

If `ccpu` is specified, the facility of the system logs generated by the CCPU (control system) is set.

If `fcpu` is specified, the facility of the system logs generated by the FCPU (forwarding system) is set.

This setting applies both to logs sent to the syslog host and the system logs recorded internally in the system.

### **Note:**

The facility value can be set to 0, but 0 is reserved as a kernel message, and therefore cannot be used. If 0 is specified, 16 (local message) is used for operation.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> set syslog facility ccpu 20
```

```
PureFlow(A)> set syslog facility fcpu 20
```

```
PureFlow(A)>
```

### **(When 0 is specified for the facility code)**

```
PureFlow(A)> set syslog facility ccpu 0
```

```
Warning
```

```
Facility 0 is an object for kernel messages, and since it cannot be used from an user process,
```

```
it changes the facility to set up into 16.
```

```
PureFlow(A)>
```

### [Arguments]

`ccpu | fcpu`

Specify the system for which you want to set the facility of the system logs.

`facility_code`

Specify the facility of the system logs by using a numeric value. Valid values are from 0 to 23.

### [Default Value]

The default values for `ccpu` and `fcpu` are 16 and 17, respectively.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

```
Usage: set syslog facility {ccpu | fcpu} <facility_code>
```

- There is a missing argument.

Specified Facility Code is invalid. (Valid from 0 to 23)

- The specified facility code is out of range.



## set date

### [Format]

```
set date <yyyymmddhhmmss>
```

### [Description]

This command sets the system time, using the Western calendar and 24-hour format. This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A) > set date 20150501094530  
PureFlow(A) >
```

### [Arguments]

yyyymmddhhmmss

Specify the time to be set in the form of year (yyyy), day (dd), hour (hh), minute (mm), and second (ss). For a 1-digit value, add "0" to make it into a 2-digit number (e.g., May 1, 2015 9:45:30 = 20150501094530).

The year, month, day, hour, minute, and second elements cannot be omitted.

### [Default Value]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : set date <yyyymmddhhmmss>

- There is a missing argument.

invalid date

- The value set for the date is invalid.

invalid time

- The value set for the time is invalid.

## set timezone

### [Format]

```
set timezone <hours-offset> [<minutes-offset>]
```

### [Description]

This command sets time zone of the system time as the number of hours offset from the UTC (Coordinated Universal Time).

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> set timezone +9  
PureFlow(A)>
```

### [Arguments]

hours-offset

Specify the number of hours the time is offset from the UTC. Specify the number of hours following a plus (+) or minus (-) sign.

For details about the time zones that can be set, see the list of time zones on the following page.

minutes-offset

Specify the minutes part of the offset time.

If omitted, an offset value of 0 [minutes] is applied.

For details about the time zones that can be set, see the list of time zones on the following page.

### [Default Value]

The default value is +0 [hours].

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

```
Usage : set timezone <hours-offset> [<minutes-offset>]
```

- There is a missing argument.

hours-offset is invalid

- The offset hours specification is invalid.

minutes-offset is invalid

- The minutes specification is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## List of time zones

UTC + 2:00 PM  
UTC + 1:00 PM  
UTC + 12:45 PM  
UTC + 12:00 PM  
UTC + 11:30 AM  
UTC + 11:00 AM  
UTC + 10:30 AM  
UTC + 10:00 AM  
UTC + 9:30 AM  
UTC + 9:00 AM  
UTC + 8:45 AM  
UTC + 8:00 AM  
UTC + 7:00 AM  
UTC + 6:30 AM  
UTC + 6:00 AM  
UTC + 5:45 AM  
UTC + 5:30 AM  
UTC + 5:00 AM  
UTC + 4:30 AM  
UTC + 4:00 AM  
UTC + 3:30 AM  
UTC + 3:00 AM  
UTC + 2:00 AM  
UTC + 1:00 AM  
UTC + 12:00 AM  
UTC - 1:00 AM  
UTC - 2:00 AM  
UTC - 3:00 AM  
UTC - 3:30 AM  
UTC - 4:00 AM  
UTC - 4:30 AM  
UTC - 5:00 AM  
UTC - 6:00 AM  
UTC - 7:00 AM  
UTC - 8:00 AM  
UTC - 9:00 AM  
UTC - 9:30 AM  
UTC - 10:00 AM  
UTC - 11:00 AM  
UTC - 12:00 PM

## **set summertime**

### **[Format]**

```
set summertime from <week> <day> <month> <hh> to <week> <day> <month> <hh> [offset]
```

### **[Description]**

This command sets the period during which summer time is applied to the system time.  
This command can be executed only in Administrator mode.

### **[Display]**

```
PureFlow(A)> set summertime from 2 Sunday March 2 to 1 Sunday November 2  
PureFlow(A)>
```

### **[Arguments]**

`from <week> <day> <month> <hh>`

Specify the date and time from which summer time is applied in the form of week number (week), day (day), month (month), and hour (hh).

Specify week and hh as a number and day and month as a word.

Summer time cannot be specified to end in the same month as it starts.

Example: The setting for starting summer time at 2:00 AM on the second Sunday in March is: `from 2 Sunday March 2`.

`to <week> <day> <month> <hh>`

Specify the date and time from which summer time is no longer applied in the form of week number (week), day (day), month (month), and hour (hh).

Specify week and hh as a number and day and month as a word.

Summer time cannot be specified to end in the same month as it starts.

Example: The setting for ending summer time at 2:00 AM on the first Sunday in November is: `from 1 Sunday November 2`.

`offset`

Specify the offset to be added to the time during the summer time application period in units of minutes.

If omitted, an offset value of 60 [minutes] is applied.

Valid values are from 1 to 720 [minutes].

### **[Default Value]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : set summertime from <week> <day> <month> <hh> to <week> <day> <month> <hh> [offset]

- There is a missing argument.

week is valid from 1 to 5

- The week specification is invalid.

day is invalid

- The day specification is invalid.

month is invalid

- The month specification is invalid.
- Summer time cannot be specified to end in the same month as it starts.

hh is valid from 0 to 23

- The hour specification is invalid.

offset is valid from 1 to 720

- The offset is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## **unset summertime**

### **[Format]**

```
unset summertime
```

### **[Description]**

This command cancels the application of summer time to the system time.  
This command can be executed only in Administrator mode.

### **[Display]**

```
PureFlow(A) > unset summertime  
PureFlow(A) >
```

### **[Arguments]**

None

### **[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## show date

### [Format]

show date

### [Description]

This command displays the current system time.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow> show date
Jun 2 2014 (Mon) 11:30:45
UTC Offset      : +09:00
Summer Time    : From   Second Sunday March 02:00
                  To     First Sunday November 02:00
                  Offset 60 minutes
PureFlow>
```

The displayed items and their meanings are as follows:

- Month Day Year (Day of Week) HH:MM:SS  
Indicates the current date and time.
- UTC Offset  
Shows the offset from the UTC (Coordinated Universal Time).
- Summer Time  
Shows the summer time start and end date and time, and the offset.

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

## show sntp

### [Format]

```
show sntp
```

### [Description]

This command displays the status and settings of the SNTP client feature.  
This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow> show sntp
Status      : enable
Server      : 192.168.37.110
Interval    : 3600
Sync        : kept
PureFlow>
```

The displayed items and their meanings are as follows:

- Status

Displays the status of the SNTP client feature.

enable	The SNTP client feature is enabled.
disable	The SNTP client feature is disabled.

- Server

Shows the IP address of the NTP server.

- Interval

Shows the interval [seconds] at which time queries are sent to the NTP server.

- Sync

Displays the state of the time synchronization with the NTP server.

kept	Synchronized with the NTP server.
lost	Not synchronized with the NTP server.

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.



## set sntp

### [Format]

```
set sntp {enable | disable}
```

### [Description]

This command enables and disables the SNTP client feature.

If `enable` is specified, time queries are regularly sent to the registered NTP/SNTP server at the specified interval, and the internal Real Time Clock of NF7101C is synchronized.

For information on how to set an NTP server, see the description of the `set sntp server` command. For information on how to set the interval for queries to the NTP server, see the description of the `set sntp interval` command. When no NTP server is registered, time is not queried even if this setting is set to `enable`.

If `disable` is specified, no time queries are sent to the NTP server.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> set sntp enable  
PureFlow(A)>
```

### [Arguments]

```
enable | disable
```

Enables and disables SNTP time synchronization.

### [Default Value]

The default value is `disable`.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

Usage : set sntp {enable | disable}

- There is a missing argument.

## set sntp interval

### [Format]

```
set sntp interval <interval>
```

### [Description]

This command sets the interval at which time queries are regularly sent to the NTP server.

This setting is effective only when sending time queries to an NTP server is enabled.

For information on how to enable sending time queries to an NTP server, see the description of the `set sntp` command.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> set sntp interval 3600  
PureFlow(A)>
```

### [Arguments]

interval

Specify the interval (in seconds) at which time queries are regularly sent to the NTP server.

Valid values are from 60 to 86400 [seconds].

Valid values are as above, but the actual operation is rounded up to 60 seconds.

e.g.,

Setting value		Operation
60	→	60
61	→	120
90	→	120

### [Default Value]

The default value is 3600 [seconds].

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : set sntp interval <interval>

- There is a missing argument.

interval is valid from 60 to 86400

- The interval is out of range.

## set sntp server

### [Format]

```
set sntp server <IP_address>
```

### [Description]

This command sets the IP address of the NTP server.

This setting is effective only when sending time queries to an NTP server is enabled.

For information on how to enable sending time queries to an NTP server, see the description of the `set sntp` command.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> set sntp server 192.168.37.110  
PureFlow(A)>
```

### [Arguments]

IP\_address

Specify the IP address of the NTP server.

### [Default Value]

The default value is 0.0.0.0 (not registered).

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : set sntp server <IP\_address>

- There is a missing argument.

invalid IP\_address

- The specified IP address format or value is invalid.

## **sync sntp**

### **[Format]**

sync sntp

### **[Description]**

This command sends time queries to the NTP server.

These queries are sent only when the setting to send time queries to the NTP server is enabled. For information on how to enable sending time queries to an NTP server, see the description of the `set sntp` command.

This command can be executed only in Administrator mode.

### **[Display]**

```
PureFlow(A) > sync sntp
PureFlow(A) >
```

### **[Arguments]**

None

### **[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

Failure on transmission packet to the server.

- Failed in transmission to the server. Check the SNTP setting.

## set password

### [Format]

```
set password
```

### [Description]

This command sets the login password.

The login password can be up to 16 characters.

When the "New password" prompt appears, enter a new password. Then, enter the same new password again when a prompt to confirm the new password appears. Only when the two entries match is the new password set.

While a new password is being entered, there is no echo back and the cursor does not move.

To cancel a login password, enter no password and press the [Enter] key.

The new password set by this command is saved to the internal flash memory when the command is executed.

This command can be executed only in Administrator mode.

### Note:

The following ASCII characters can be used for the login password:

```
1234567890
abcdefghijklmnopqrstuvwxyz
ABCDEFGHIJKLMNOPQRSTUVWXYZ
!#$%&'()=~-^|¥@`[]{}:*+_/.,<>
```

### [Display]

```
PureFlow(A)> set password
New Password:
Retype the new Password:
```

### [Arguments]

None

### [Default Value]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Password string length is valid from 0 to 16

- The new password is invalid.

Retyped Password is in-correct

- The confirmation password is incorrect.

writing of Password failed

- Failed to write the password.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## set adminpassword

### [Format]

```
set adminpassword
```

### [Description]

This command sets the login password to switch to Administrator mode.

The login password can be up to 16 characters.

When the "New password" prompt appears, enter a new password. Then, enter the same new password again when a prompt to confirm the new password appears. Only when the two entries match is the new password set.

While a new password is being entered, there is no echo back and the cursor does not move.

To cancel a login password, enter no password and press the [Enter] key.

The new password set by this command is saved to the internal flash memory when the command is executed.

This command can be executed only in Administrator mode.

### **Note:**

The following ASCII characters can be used for the login password:

```
1234567890
abcdefghijklmnopqrstuvwxyz
ABCDEFGHIJKLMNOPQRSTUVWXYZ
!#$%&'()=~-^|¥@`[]{}:*;+_/.,<>
```

### [Display]

```
PureFlow(A)> set adminpassword
Changing the Password for the Administrator Mode.
New Password:
Retype the new Password:
```

### [Arguments]

None

### [Default Value]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Retyped Password is in-correct

- The confirmation password is incorrect.

Retyped Password is too long

- The confirmation password is invalid.

writing of Password failed

- Failed to write the password.

## set autologout time

### [Format]

```
set autologout time <time_interval>
```

### [Description]

This command sets the time interval for the auto logout feature.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> set autologout time 30  
PureFlow(A)>
```

### [Arguments]

```
time_interval  
Specify the time interval in minutes.  
Valid values are from 1 to 30 [minutes].
```

### [Default Value]

The default value is 10 [minutes].

### [Errors]

```
Invalid input at Marker  
• There is an unnecessary argument.
```

```
An argument was missing  
Usage : set autologout time <time_interval>  
• There is a missing argument.
```

```
time_interval is valid from 1 to 30 minutes  
• The specified time is invalid.
```

## show autologout

### [Format]

```
show autologout
```

### [Description]

This command displays auto logout setting information.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow> show autologout  
Auto logout time = 10 minute(s)  
PureFlow>
```

The displayed items and their meanings are as follows:

- Auto logout time = N minute(s)  
The auto logout time is currently set to N minute(s).

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.



## set prompt

### [Format]

```
set prompt [<prompt_string>]
```

### [Description]

This command sets a prompt used for CLI sessions.

The specified character string in < > of the <prompt\_string> parameter will actually be shown as the prompt on a terminal device.

If (A) is included in the character string in < >, it indicates that the system is in Administrator mode.

If a value that exceeds 15 characters is specified for <prompt\_string>, the first 15 characters are used as the new prompt.

If <prompt\_string> is not specified, the value is reset to the default value of PureFlow.

This command can be executed only in Administrator mode.

### Note:

Only the following ASCII characters can be set in the prompt.

```
1234567890
abcdefghijklmnopqrstuvwxyz
ABCDEFGHIJKLMNOPQRSTUVWXYZ
!#$%&'()=~-^|¥@`[]{}:*,+_/.,<>
```

### [Display]

```
PureFlow(A)> set prompt Console
Console(A)> set prompt
PureFlow(A)>
```

### [Arguments]

prompt\_string

Specify the character string to be used as the prompt.

The character string can be up to 15 characters long.

If spaces are required, enclose the character string with quotation marks (" "), for example, "My Router".

### [Default Value]

The default value is PureFlow.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

## set pager

### [Format]

```
set pager {enable | disable} [current]
```

### [Description]

This command enables and disables the pager feature of the CLI.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow(A)> set pager enable  
PureFlow(A)>  
PureFlow(A)> set pager disable  
PureFlow(A)>
```

### [Arguments]

{enable | disable}

Specify `enable` to enable the pager feature, or `disable` to disable it.

current

Set the pager function of the current CLI session.

If not specified, set the pager function for all of the CLI session.

### [Default Value]

The default value is `enable`.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : set pager {enable | disable}

- There is a missing argument.

## show session

### [Format]

```
show session
```

### [Description]

This command displays details about the terminal device that is logged in, such as connection type, mode, and login time.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow(A)> show session
  Id Terminal Type                Mode      Since
  --  -
  1 Serial
  * 2 Telnet
  3 SSH      192.168.37.185 : 2279 Admin    Dec 14 2014 14:31:44
  4 SSH      192.168.37.185 : 2280 Normal   Dec 14 2014 14:31:55
  5 Telnet
PureFlow(A)>
```

When executed, the command displays terminal sessions that are set.

One line shows one session that corresponds to the line.

Only sessions from the end of password input to logout (from login to logout) are displayed.

The displayed items and their meanings are as follows:

- id  
Shows the session number of the connected device.
- Terminal type  
Shows the connection type using the following character strings:
 

Serial	The session is connected via a serial interface.
Telnet	The session is connected via Telnet.
SSH	The session is connected via SSH.

For SSH, the IP address and the TCP port number of the client are also shown.

For the terminal session that is executing this command, \* is shown at the beginning.

- Mode  
Shows the current mode using the following character strings:
 

admin	Administrator mode
Normal	Normal mode
- Since  
Shows the login date and time.

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

## delete session

### [Format]

```
delete session <sessionId>
```

### [Description]

This command deletes a session of the connected terminal device.  
For `sessionId`, specify the ID shown by the `show session` command.  
This command can be executed in Administrator mode.

### [Display]

```
PureFlow(A)> delete session 1  
PureFlow(A)>
```

### [Arguments]

`sessionId`

Specify the number of the session to be deleted.

Valid values are from 1 to 5.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : delete session <sessionId>

- There is a missing argument.

Session Id is valid from 1 to 5

- The session number is out of range.

Specified session does not exist

- The specified session does not exist.

## show module

### [Format]

```
show module
```

### [Description]

This command displays information on each module in the system.

This command can be executed in the Normal and Administrator modes.

### [Display]

```

PureFlow> show module
Anritsu PureFlow NF7101-S003A Software Version 1.1.1
Copyright 2015-2017 ANRITSU NETWORKS CO., LTD. All rights reserved.

MAC Address                               : 00-00-91-12-34-56

Chassis Model Name                        : NF7101C
Chassis Serial Number                     : 2600010003

Control Module Version                    : A00
Shaper Module Version                     : A00
Software Version                           : 1.1.1
Management U-Boot Version                 : 1.1.1
Forwarding U-Boot Version                 : 1.1.1
MCU-C Version                             : 001
MCU-S Version                             : 001

Uptime                                    : 19 days, 08:38:59
Temperature
  Intake Temperature                       : 29C
Power Supply Unit 0
  Operation Status                         : operational
  Fan Speed                                 : 4000[rpm]
Power Supply Unit 1
  Operation Status                         : not present
  Fan Speed                                 : 0[rpm]
FAN Unit 0
  Operation Status                         : operational
  Fan Speed                                 : 5000[rpm]
FAN Unit 1
  Operation Status                         : operational
  Fan Speed                                 : 6000[rpm]
PureFlow>

```

The displayed items and their meanings are as follows:

- `MAC Address`  
Displays the MAC address of the system.
  
- `Chassis Model Name`  
Shows the model name of the main unit.
  
- `Chassis Serial Number`  
Shows the serial No. of the main unit.
  
- `Control Module Version`  
Show the hardware versions of the control module.
  
- `Shaper Module Version`  
Show the hardware versions of the shaper module.
  
- `Software Version`  
Show the versions of the installed software.
  
- `Management U-Boot Version`  
Displays the U-Boot version of the Control module.
  
- `Forwarding U-Boot Version`  
Displays the U-Boot version of the Shaper module.
  
- `MCU-C Version`
- `MCU-S Version`  
Displays the MCU version.
  
- `Uptime`  
Shows the run time from system startup.
  
- `Temperature`  
Shows the temperature of the system. The following temperature is shown:
  
- `Intake Temperature`: Shows the intake temperature.

- Power Supply Unit N  
Shows information on the internal power supply. NF7101C has a redundant power supply configuration in which the power supply can be switched by live wire, and information of each power unit is shown. If the live wire is inserted, `operational` is shown, and if the live wire is not inserted, `not present` is shown.
- Operation Status: Shows the status of the power supply.
  - `other:` Other than below
  - `operational:` Normal
  - `malfunctioning:` Abnormal
  - `notpresent:` Not inserted
- Fan Speed: Shows the fan speed. The unit is [rpm].
- FAN Unit N  
Shows information on the fan unit. Two fan units can be installed on the rear of NF7101C. Information on these fans is shown. If a fan unit is installed, `operational` is shown, and if a fan unit is not installed, `not present` is shown.
- Operation Status: Shows the status of the fan.
  - `other:` Other than below
  - `operational:` Normal
  - `malfunctioning:` Abnormal
  - `notpresent:` Not installed
- Fan Speed: Shows the fan speed. The unit is [rpm].

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

## set autoreboot

### [Format]

```
set autoreboot {enable | disable}
```

### [Description]

This command enables and disables the auto reboot feature used when a failure occurs.

With this command, you can select whether to reboot the system automatically when a fatal error is detected or to leave the system in the state in which the failure has occurred.

There are the following fatal errors:

- The operation of the Management Software has stopped
- The operation of the Forwarding Software has stopped

This command can be executed in Administrator mode.

### [Display]

```
PureFlow(A)> set autoreboot disable  
PureFlow(A)>
```

### [Arguments]

enable

Enables the auto reboot feature.

disable

Disables the auto reboot feature.

### [Default Value]

The default value is enable.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

```
Usage : set autoreboot {enable | disable}
```

- There is a missing argument.



## show process

### [Format]

```
show process {ccpu | fcpu}
```

### [Description]

This command displays the CPU and memory use rate.

If `ccpu` is specified, information on the CCPU (control system) is displayed.

If `fcpu` is specified, information on the FCPU (forwarding system) is displayed.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow> show process ccpu
CPU utilization
  for 5 seconds      : 35 %
  for 1 minute       : 16 %
  for 5 minutes      : 15 %

Memory utilization
  for 5 seconds      : 10 %
  for 1 minute       : 15 %
  for 5 minutes      : 9 %
PureFlow>
```

The displayed items and their meanings are as follows:

- CPU utilization
  - Displays the CPU use rate.
  - For CCPU, the operation rate of the control system software is shown; for FCPU, the load factor of the bandwidth control engine is shown.
- Memory utilization
  - Shows the memory use rate.
  - For CCPU, the use rate of the area used for the control system software internal messages is shown; for FCPU, the use rate of the packet buffer of the bandwidth control engine is shown.
- for 5 seconds
  - Shows the average use rate over the last 5 seconds as a percentage.
- for 1 minute
  - Shows the average use rate over the last 1 minute as a percentage.
- for 5 minutes
  - Shows the average use rate over the last 5 minutes as a percentage.

### [Arguments]

```
ccpu | fcpu
Specify the system whose information you want to view.
```

### [Errors]

```
Invalid input at Marker
  • There is an unnecessary argument.

An argument was missing
Usage : show process {ccpu | fcpu}
  • There is a missing argument.
```

## set radius auth

**[Format]**

```
set radius auth {enable | disable}
```

**[Description]**

This command enables and disables login authentication by using a RADIUS authentication server. When this setting is enabled, the user name and login password set in a RADIUS authentication server are used for login authentication to log into NF7101C.

This command can be executed only in Administrator mode.

**Note:**

The login authentication procedure varies depending on this setting as shown below:

Login authentication procedure when RADIUS authentication is enabled	Login authentication procedure when RADIUS authentication is disabled
(1) Login authentication is performed by using the user name and login password set in this system. (2) If login authentication fails, login authentication is performed by using the user name and login password set in the RADIUS server.	(1) Login authentication is performed by using the user name and login password set in this system.

**Note:**

If login authentication is performed by using a RADIUS authentication server, the login mode of the login user is changed in accordance with the service type specified by the reply packet from the RADIUS authentication server. If the service type is `LoginUser`, login is performed in Normal mode. If the service type is `Administrative`, login is performed in Administrator mode.

RADIUS service type	Login mode
<code>LoginUser</code>	Normal mode
<code>Administrative</code>	Administrator mode

**[Display]**

```
PureFlow(A)> set radius auth enable
PureFlow(A)>
```

**[Arguments]**

`enable`

Enables authentication by the RADIUS authentication server.

`disable`

Disables authentication by the RADIUS authentication server.

**[Default Value]**

The default value is `disable`.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

```
Usage: set radius auth {enable | disable}
```

- There is a missing argument.

## set radius auth timeout

**[Format]**

```
set radius auth timeout <timeout>
```

**[Description]**

This command sets the timeout time for receiving the RADIUS authentication reply packet.

This command can be executed only in Administrator mode.

**[Display]**

```
PureFlow(A)> set radius auth timeout 5  
PureFlow(A)>
```

**[Arguments]**

timeout

Set the reception timeout time in seconds. Valid values are from 1 to 30 [seconds].

**[Default Value]**

The default value is 5 [seconds].

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : set radius auth timeout <timeout>

- There is a missing argument.

Specified timeout is invalid. (Valid from 1 to 30)

- The specified reception timeout time is out of range.

## **set radius auth retransmit**

### **[Format]**

```
set radius auth retransmit <retry>
```

### **[Description]**

This command sets the number of times to resend an authentication request.

This command can be executed only in Administrator mode.

### **[Display]**

```
PureFlow(A)> set radius auth retransmit 3  
PureFlow(A)>
```

### **[Arguments]**

retry

Specify the number of transmission retries. Valid values are from 0 to 10 [times].

### **[Default Value]**

The default value is 3 [times].

### **[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : set radius auth retransmit <retry>

- There is a missing argument.

Specified retransmit is invalid. (Valid from 0 to 10)

- The specified number of transmission retries is out of range.

---

## set radius auth method

**[Format]**

```
set radius auth method {CHAP | PAP | default}
```

**[Description]**

This command sets the method for RADIUS authentication.

This command can be executed only in Administrator mode.

**[Display]**

```
PureFlow(A)> set radius auth method CHAP  
PureFlow(A)>
```

**[Arguments]**

PAP

Sets the authentication method to PAP.

CHAP

Sets the authentication method to CHAP.

default

Resets to the default value.

**[Default Value]**

The default value is "CHAP".

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

```
Usage : set radius auth method {CHAP | PAP | default}
```

- There is a missing argument.

## add radius auth server

### [Format]

```
add radius auth server <IP_address> [port <port>] key <secret> [Primary]
```

### [Description]

This command adds a RADIUS authentication server.

Set the IP address, port number, and RADIUS shared key of the RADIUS authentication server.

Specification of the port number and `Primary` is optional. Up to 16 RADIUS authentication servers can be registered.

This command can be executed only in Administrator mode.

### Note:

The following ASCII characters can be set in the RADIUS shared key.

```
1234567890
abcdefghijklmnopqrstuvwxyz
ABCDEFGHIJKLMNOPQRSTUVWXYZ
!#$%&'()=~-^|¥@`[]{}:*,+_/.,<>
```

### [Display]

```
PureFlow(A)> add radius auth server 192.168.10.100 port 1812 key "radiuskey1234"
PureFlow(A)>
```

### [Arguments]

`IP_address`

Specify the IP address of the RADIUS authentication server.

`port <port>`

Specify the port number of the RADIUS authentication server. Valid values are from 1 to 65535.

`key <secret>`

Specify the RADIUS shared key to be used for authentication by the RADIUS authentication server. 1 to 128 characters can be used. The character string can contain alphanumeric and special characters. However, it cannot contain double quotation marks (") and question marks (?).

`Primary`

Specify the primary server for authentication requests. If "Primary" is not specified, authentication requests are sent in the order of registration of RADIUS authentication servers.

Only one server can be specified as "Primary". If there is a server that has already been specified as Primary, the server that is specified as Primary this time becomes the Primary server.

### [Default Value]

`port`

The default value is "1812".

`Primary`

The default value is no specification for Primary.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : add radius auth server <IP\_address> [port <port>] key <secret> [Primary]

- There is a missing argument.

invalid RADIUS server

- The format or value of the IP address of the RADIUS authentication server is invalid.

Specified port number is invalid. (Valid from 1 to 65535)

- The port number of the RADIUS authentication server is out of range.

Specified key length is invalid. (Valid from 1 to 128)

- The number of characters for the RADIUS shared key is out of range.

maximum number of server

- The maximum registration limit for RADIUS authentication servers is exceeded.

## update radius auth server

### [Format]

```
update radius auth server <IP_address> [port <port>] [key <string>] [Primary]
```

### [Description]

This command updates the RADIUS shared key or port number of a RADIUS authentication server that has already been set.

Specification of the port number, RADIUS shared key, and `Primary` is optional, but these parameters cannot be omitted altogether. Specify at least one parameter that you want to change.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> update radius auth server 192.168.10.100 key "radiuskey1234"  
PureFlow(A)>
```

### [Arguments]

`IP_address`

Specify the IP address of the RADIUS authentication server.

`port <port>`

Specify the port number of the RADIUS authentication server. Valid values are from 1 to 65535.

`key <string>`

Specify the RADIUS shared key to be used for authentication by the RADIUS authentication server. 1 to 128 characters can be used. The character string can contain alphanumeric and special characters. However, it cannot contain double quotation marks (") and question marks (?).

`Primary`

Specify the primary server for authentication requests. If "Primary" is not specified, authentication requests are sent in the order of registration of RADIUS authentication servers.

Only one server can be specified as `Primary`. If there is a server that has already been specified as `Primary`, the server that is specified as `Primary` this time becomes the `Primary` server.

### [Default Value]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

```
Usage : update radius auth server <IP_address> [port <port>] [key <string>] [Primary]
```

- There is a missing argument.

invalid RADIUS server

- The format or value of the IP address of the RADIUS authentication server is invalid.

Specified port number is invalid. (Valid from 1 to 65535)

- The port number of the RADIUS authentication server is out of range.



Specified key length is invalid. (Valid from 1 to 128)

- The number of characters for the RADIUS shared key is out of range.

It is necessary to set one or more parameters.

- At least one parameter must be set.

Specified server is not configured.

- The specified RADIUS authentication server has not been set.

## **delete radius auth server**

### **[Format]**

```
delete radius auth server <IP_address>
```

### **[Description]**

This command deletes the setting information of a RADIUS authentication server.

This command can be executed only in Administrator mode.

### **[Display]**

```
PureFlow(A)> delete radius auth server 192.168.10.100  
PureFlow(A)>
```

### **[Arguments]**

IP\_address

Specify the IP address of the RADIUS authentication server.

### **[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : delete radius auth server <IP\_address>

- There is a missing argument.

invalid RADIUS server

- The format or value of the IP address of the RADIUS authentication server is invalid.

Specified server is not configured.

- The specified RADIUS authentication server has not been set.

## test radius login

### [Format]

```
test radius login chap <username> <password>
test radius login pap <username> <password>
```

### [Description]

This command tests authentication using the RADIUS protocol. It sends the CHAP or PAP authentication request to the RADIUS authentication server, and displays whether authentication passed or failed. In addition, it dumps all packets to and from the RADIUS authentication server.

This command can be executed in the Normal and Administrator modes.

### Note:

The following ASCII characters can be set in the user name and password.

```
1234567890
abcdefghijklmnopqrstuvwxyz
ABCDEFGHIJKLMNOPQRSTUVWXYZ
!#$%&'()*~^-^|¥@`[]{}:~*~+~/_.,<>
```

### [Display]

```
PureFlow(A)>test radius login chap user1 password
=====
Frame 1
  DIRECTION      : SEND
  UDP LENGTH     : 84 bytes
  IP Src Addr    : 192.168.37.100
  IP Dst Addr    : 192.168.37.20
  UDP Src Port   : 1901
  UDP Dst Port   : 1812
  RADIUS Protocol
    Code         : 0x01 Access Request
    Packet ID    : 0x44 (68)
    Length       : 0x4C (76)
    Authenticator: 0xMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMM
    Attribute value pairs
      ATTR :TYPE LENGTH VALUE
      0001 :0x01 0x07 0xMMMMMMMMMMMM
      0002 :0x03 0x13 0xMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMM
      0003 :0x3C 0x12 0xMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMM
      0004 :0x06 0x06 0xMMMMMMMMMMMM
      0005 :0x04 0x06 0xMMMMMMMMMMMM
=====
Frame 2
  DIRECTION      : RECEIVE
  UDP LENGTH     : 82 bytes
  IP Src Addr    : 192.168.37.20
  IP Dst Addr    : 192.168.37.100
  UDP Src Port   : 1812
  UDP Dst Port   : 1901
  RADIUS Protocol
    Code         : 0x02 Access Accept
    Packet ID    : 0x44 (68)
    Length       : 0x4C (02)
    Authenticator: 0xMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMM
    Attribute value pairs
      ATTR :TYPE LENGTH VALUE
      0001 :0x06 0x06 0xMMMMMMMMMMMM
      0002 :0x0F 0x06 0xMMMMMMMMMMMM
      0003 :0x04 0x06 0xMMMMMMMMMMMM
      0004 :0x1A 0x14 0xMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMM
      0005 :0x12 0x18 0xMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMMM
```

```
=====
Authentication succeeded
PureFlow (A) >
```

**Note:** MM represents any hexadecimal value.

The displayed items and their meanings are as follows:

- Frame  
Shows the order of the packets.
- DIRECTION  
Shows the RADIUS packet transmission/reception direction.
- UDP LENGTH  
Shows the length of the UDP frame.
- IP Src Addr  
Shows the Source IP address of the packet.
- IP Dst Addr  
Shows the Destination IP address of the packet.
- UDP Src Port  
Shows the Source Port number of the UDP frame.
- UDP Dst Port  
Shows the Destination Port number of the UDP frame.
- Code  
Shows the type code of the RADIUS frame in hexadecimal.
- Packet ID  
Shows the RADIUS frame identifier in hexadecimal and decimal.
- Length  
Shows the length of the RADIUS frame in hexadecimal and decimal.
- Authenticator  
Shows the authenticator in hexadecimal.
- Attribute value pairs  
Shows attributes contained in the packet.
- ATTR  
Shows the order of the attributes.
- TYPE  
Shows the attribute number of the attribute in hexadecimal.
- LENGTH  
Shows the length of the attribute in hexadecimal.
- VALUE  
Shows the value of the attribute in hexadecimal.

**[Arguments]**

username

Specify the user name.

password

Specify the password.

**[Default Value]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

Usage : test radius login chap <username> <password>

Usage : test radius login pap <username> <password>

- There is a missing argument.

An argument was missing

Usage : test radius login chap <username> <password>

Usage : test radius login pap <username> <password>

- There is a missing argument.

Authentication is disabled.

- RADIUS authentication is disabled.

None server configured

- No RADIUS authentication server is registered.

Access rejected

- The RADIUS authentication server rejected the authentication.

None response from server

- There is no response from the RADIUS authentication server.

Reply contain an illegal service type.

- The service type notified by the ACCEPT response from the RADIUS authentication server is invalid.

Session ID is different

- The packet ID of the RADIUS reply packet received from the RADIUS authentication server is different.

RADIUS packet data is invalid

- The contents of the RADIUS reply packet received from the RADIUS authentication server are invalid.

## show radius

### [Format]

```
show radius
```

### [Description]

This command displays RADIUS authentication setting information. RADIUS authentication servers are displayed in the order of their registration.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow>show radius
RADIUS Authentication   : Enable
RADIUS method          : PAP
RADIUS server entries  : 2
Retry retransmit       : 3
Retry timeout          : 5

Type Pri Server          Port   key
---- -- -
auth * 192.168.1.2       1812  "testing123"
auth   192.168.1.3       1813  "testing123"

PureFlow>
```

The displayed items and their meanings are as follows:

- RADIUS Authentication  
Shows whether RADIUS authentication is enabled or disabled.
- RADIUS method  
Shows the set authentication method.
- RADIUS server entries  
Shows the number of registered RADIUS authentication servers.
- Retry retransmit  
Shows the number of transmission retries for the set authentication request.
- Retry timeout  
Shows the timeout time for communication with the set RADIUS authentication server. The unit is seconds.
- Type  
Shows the type of the registered RADIUS server. auth indicates that the server is a RADIUS authentication server.
- Pri  
The RADIUS authentication server specified as the Primary server is marked by an asterisk (\*).
- Server  
Shows the IP address of the registered RADIUS authentication server.

- Port  
Shows the port number of the registered RADIUS authentication server.
- key  
Shows the RADIUS shared key of the registered RADIUS authentication server.

**[Arguments]**

None

**[Errors]**

- Invalid input at Marker
- There is an unnecessary argument.

## show radius statistics

### [Format]

```
show radius statistics
```

### [Description]

This command displays the RADIUS client statistics. The number of successful and failed login authentication attempts is displayed. In addition, the number of transmitted RADIUS protocol packets per server and the number of times a reception timeout occurred are displayed.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow(A)>show radius statistics
```

```
Authentication Success :      51
Authentication Failure :      3
```

Type	Server	Request	Accept	Reject	Timeout
auth	192.168.1.1	11	9	0	0
auth	192.168.1.2	23	20	2	1
auth	192.168.1.3	20	20	0	0

```
PureFlow(A)>
```

The displayed items and their meanings are as follows:

- Success  
Shows the number of successful authentication attempts using the RADIUS protocol.
- Failure  
Shows the number of failed authentication attempts using the RADIUS protocol.
- Type  
Shows the type of the RADIUS server. Auth indicates that the server is a RADIUS authentication server.
- Server  
Shows the IP address of the RADIUS authentication server.
- Request  
Shows the number of REQUEST packets transmitted to the RADIUS authentication server.
- Accept  
Shows the number of ACCEPT packets received from the RADIUS authentication server.
- Reject  
Shows the number of REJECT packets received from the RADIUS authentication server.
- Timeout  
Shows the number of times a communication timeout occurred.

### [Arguments]

None



**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

## **clear radius statistics**

**[Format]**

```
clear radius statistics
```

**[Description]**

This command clears the RADIUS client statistics.

This command can be executed only in Administrator mode.

**[Display]**

```
PureFlow(A)> clear radius statistics  
PureFlow(A)>
```

**[Arguments]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

## set ssh

### [Format]

```
set ssh {enable | disable}
```

### [Description]

This command enables and disables SSH connections. If the value is changed to `disable`, new SSH connections are rejected.

This command can be executed in Administrator mode.

### [Display]

```
PureFlow(A)> set ssh disable  
PureFlow(A)> set ssh enable  
PureFlow(A)>
```

### [Arguments]

```
{enable | disable}
```

Specify `enable` to enable SSH connections, or `disable` to disable them.

### [Default Value]

The default value is `enable`.

### [Errors]

```
Invalid input at Marker
```

- There is an unnecessary argument.

```
Command making ambiguity  
Usage : set ssh {enable | disable}  
Usage : set ssh server key
```

- There is a missing argument.

## set ssh server key

**[Format]**

set ssh server key

**[Description]**

This command regenerates the public key (host key) for server authentication, and replaces them. When this command is executed, a warning message that says that the existing keys will be updated appears, and all SSH connections are disconnected. NF7101C has host keys generated beforehand at factory shipment. Use this command if you want to change the host keys.

If the host keys are changed, the fingerprints of the host key that the SSH client software has saved before may need to be updated. For details, see Chapter 10 "SSH" in the Configuration Guide. This command can be executed in Administrator mode with the console connected serially.

**[Display]**

```
PureFlow(A)> set ssh server key
Current SSH session might be disconnected from the network.
It is not possible to SSH login while generate key. ok (y/n)?y
.....
Done.
PureFlow(A)>
```

**[Arguments]**

None

**[Default Value]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

This command is executed only by serial console.

- This command is executed on the serial console.

## show ssh

### [Format]

```
show ssh
```

### [Description]

This command displays the SSH server feature setting information.

Information on the currently connected SSH session and the FingerPrint of the host public key for authentication are displayed.

The SSH session information includes the IP address of the SSH client, connection user name, encryption algorithm, and MAC (Message Authentication Code) algorithm.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow(A)> show ssh
SSH Status: Enable

Server Information:
  Status: running
  RSA key fingerprint: 1a:01:6f:e8:23:b4:ef:be:ec:13:56:74:e4:db:b6:98
  DSA key fingerprint: 9d:0a:38:ac:10:37:71:4a:be:df:35:96:31:6f:81:ac

Client Information:
-----
IP Address      Username
-----
192.168.10.211  root
-----

PureFlow(A)>
```

The displayed items and their meanings are as follows:

#### SSH Status

This command shows whether SSH connection is enabled or disabled.

#### Server Information

Shows information on the SSH server.

- Status

Shows the operation status.

running

The SSH server feature is available.

key generating now

Key generation is in progress.

The SSH server feature is unavailable until the status changes to running.

- RSA key fingerprint

Shows the fingerprint of the RSA key.

- DSA key fingerprint

Shows the fingerprint of the DSA key.

#### Client Information

Shows information on the SSH client.

- IP Address

Shows the IP address of the client.

- Username

Shows the name of the user who is logged in.

**[Arguments]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

---

## set telnet

**[Format]**

```
set telnet {enable | disable}
```

**[Description]**

This command enables and disables Telnet connections. If the value is changed to `disable`, new Telnet connections are rejected.

This command can be executed in Administrator mode.

**[Display]**

```
PureFlow(A)> set telnet disable  
PureFlow(A)> set telnet enable  
PureFlow(A)>
```

**[Arguments]**

```
{enable | disable}
```

Specify `enable` to enable Telnet connections, or `disable` to disable them.

**[Default Value]**

The default value is `enable`.

**[Errors]**

```
Invalid input at Marker
```

- There is an unnecessary argument.

```
An argument was missing
```

```
Usage : set telnet {enable | disable}
```

- There is a missing argument.

## show telnet

### [Format]

show telnet

### [Description]

This command shows whether Telnet connections are enabled or disabled.

This command can be executed in Administrator mode.

### [Display]

```
PureFlow(A)> show telnet  
Telnet : Enable  
PureFlow(A)>
```

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.



## set console baudrate

### [Format]

```
set console baudrate{9600 | 19200 | 38400 | 115200}
```

### [Description]

This command sets the communication speed of the console port.

Like the `save config` command, this command saves the current operating parameters (running configuration) in the internal flash memory.

#### **Note:**

When 115200 bps is specified, the text may be corrupted or omitted depending on the environment used (device hardware, software). If this happens, lower the communication speed.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow (A)> set console baudrate 115200
Do you wish to save the system configuration into the flash memory (y/n)? y

Done
PureFlow (A)>
```

### [Arguments]

```
{9600 | 19200 | 38400 | 115200}
```

Set the communication speed (baud rate) to either 9600 bps, 19200 bps, 38400 bps, or 115200 bps.

### [Default Value]

The default value is 9600.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

```
Usage : set console baudrate {9600 | 19200 | 38400 | 115200}
```

- There is a missing argument.

Specified Baudrate is invalid. (Valid from 9600, 19200, 38400, 115200)

- The specified communication speed (baud rate) is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## **show console baudrate**

### **[Format]**

```
show console baudrate
```

### **[Description]**

This command displays the communication speed of the console port.  
This command can be executed in the Normal and Administrator modes.

### **[Display]**

```
PureFlow> show console baudrate  
baudrate : 19200bps  
PureFlow>
```

The displayed items and their meanings are as follows:

- baudrate  
Displays the communication speed (baud rate) [bps].

### **[Arguments]**

None

### **[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

## set webapi protocol

### [Format]

```
set webapi protocol{normalhttp | httpsecure}
```

### [Description]

This command sets the protocol for WenAPI.

Specify `normalhttp` to use HTTP(Hypertext Transfer Protocol) for WebAPI.

Specify `httpsecure` to use HTTPS(Hypertext Transfer Protocol Secure) for WebAPI.

When this command is executed, any running WebAPI requests result error or timeout. Since the execution results can not be determined at the request side, please do not run this command during changing configuration by WebAPI.

### **Note:**

It is not possible to simultaneously use of HTTP and HTTPS.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow (A)> set webapi protocol httpsecure  
PureFlow (A)>
```

### [Arguments]

```
{normalhttp | httpsecure}
```

Set the protocol to either HTTP or HTTPS.

### [Default Value]

The default value is `normalhttp`.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : set webapi protocol {normalhttp | httpsecure}

- There is a missing argument.

## **show webapi**

### **[Format]**

show webapi

### **[Description]**

This command displays the WebAPI setting information.

This command can be executed in the Normal and Administrator modes.

### **[Display]**

```
PureFlow> show webapi  
Protocol : HTTP  
PureFlow>
```

The displayed items and their meanings are as follows:

- Protocol  
Displays the protocol for WebAPI.

### **[Arguments]**

None

### **[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

## 2.2.7 Configuration-related commands

### `init config`

**[Format]**

```
init config
```

**[Description]**

This command resets the configuration to the default values .

Changes made by this command do not have an impact on the running configuration. To reflect the changes, restart the system.

This command can be executed only in Administrator mode.

**[Display]**

```
PureFlow(A)> init config
Do you wish to initialize flash memory (y/n)? y
The value of flash memory was set on the default value.
This set content becomes valid after the next re-start

Done
PureFlow(A)>
```

**[Arguments]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## save config

### [Format]

```
save config
```

### [Description]

This command saves the running configuration parameters in the internal flash memory. The saved configuration is loaded as the start-up configuration at the next startup time and is reflected to the operation.  
This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> save config  
Do you wish to save the system configuration into the flash memory (y/n)? y  
  
Done  
PureFlow(A)>
```

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

---

## show save status

**[Format]**

```
show save status
```

**[Description]**

This command displays the progress of saving the configuration.

If the `save config` command is running for another session (Serial console, Telnet, SSH, WebAPI), a message indicating `save config` is running for another session is displayed when you run this command.

This command can be executed in the Normal and Administrator modes.

**[Display]**

```
PureFlow> show save status  
Configuration save status : in progress  
PureFlow>
```

**[Arguments]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

## show config running

### [Format]

```
show config running [<slot/port> | <protocol> | all]
```

### [Description]

This command displays the configuration currently running.  
Only a non-default configuration is displayed.  
If <slot/port> is specified, the configuration related to the specified port is displayed.  
If <protocol> is specified, the configuration related to the specified protocol is displayed.  
If all is specified, the default and non-default configurations are displayed.  
This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow> show config running
This command shows non-default configurations only
Use 'show config running all' to show both default and non-default configurations.
begin
!
***** NON-DEFAULT CONFIGURATION *****
!
#Time: Jun 2 2014 (Mon) 18:50:57
#UTC Offset : +09:00
#Summer Time : From Second Sunday March 02:00
# To First Sunday November 02:00
# Offset 60 minutes
!
#System Configuration
!
#SNMP Configuration
!
#Port Configuration
#Current maxpacketlen : 2048
!
#System Interface Configuration
set ip system 192.168.37.11 netmask 255.255.255.0 up
!
#Rulelist Configuration
!
#Scenario, Filter Configuration
#Current shaper performance : normal
add scenario "/port1/Tokyo" action aggregate peak_bw 5G
add scenario "/port1/Tokyo/Shibuya" action aggregate class 1 min_bw 3M
bufsize 300k
add scenario "/port1/Tokyo/Shinagawa" action aggregate class 1 min_bw 5M
peak_bw 8M bufsize 200k
#SNTP Configuration
!
#Pipe Configuration
PureFlow>
```



**[Arguments]**

slot/port

Displays the configuration corresponding to the specified slot location and port number of the Network port.

Only 1 can be specified as the slot location. Valid port numbers are 1 and 2.

protocol

The following protocols can be specified:

snmp, filter, scenario

all

Displays the default and non-default configurations.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

slot #N is invalid

- The specified slot is invalid.

port <slot/port> is invalid

- The specified port is invalid.

Specified Protocol is invalid. (Valid from snmp, filter, scenario)

- The specified protocol is invalid.

## show config startup

### [Format]

```
show config startup
```

### [Description]

This command displays the configuration at startup.  
The configuration saved in the internal flash memory is displayed.  
This command can be executed in the Normal and Administrator modes.

### [Display]

Only the non-default configuration is displayed.

```
PureFlow> show config startup
!
#System Configuration
!
#SNMP Configuration
!
#Port Configuration
#Current maxpacketlen : 2048
!
#System Interface Configuration
set ip system 192.168.37.11 netmask 255.255.255.0 up
!
#Rulelist Configuration
!
#Scenario, Filter Configuration
#Current shaper performance : normal
!
#SNTP Configuration
!
#Pipe Configuration

PureFlow>
```

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

None Configuration is found

- No configuration is saved.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## 2.2.8 SNMP-related commands

### add snmp community

#### [Format]

```
add snmp community <community_string> [version {v1 | v2c}]
[view <view_name>] [permission {ro | rw}]
```

#### [Description]

This command adds a community record.

To change a registered record, first delete the record using the `delete snmp community` command, and then create a new record using this command.

Up to 16 records can be registered.

If `v1` is specified as the version, the command only adds `v1` community records. If `v2c` is specified, it adds only `v2c` communities.

If `version` is not specified, it adds both `v1` and `v2c` records.

If `ro` is specified, read-only is set. If `rw` is specified, read and write are permitted.

This command can be executed only in Administrator mode.

#### Note:

Only the following ASCII characters can be set in the community name.

```
1234567890
abcdefghijklmnopqrstuvwxyz
ABCDEFGHIJKLMNOPQRSTUVWXYZ
!#$%&'()=~^|@`[]{}:~*+_/.<>
```

#### [Display]

```
PureFlow(A)> add snmp community NetManCom view readme ro
PureFlow(A)>
```

#### [Arguments]

`community_string`

Specify the name of the community.

1 to 32 characters can be specified.

If you need to insert a space in the name, enclose it with double quotation marks (" ") as in "NetMan Com".

`view_name`

Specify the MIB view name to be assigned to the community record.

1 to 32 characters can be specified.

If you need to insert a space in the name, enclose it with double quotation marks (" ") as in "read me".

`version {v1 | v2c}`

Specify `v1` for a `v1` community, or `v2c` for a `v2c` community.

If you want to add both, specify neither `v1` nor `v2c`.

`permission {ro | rw}`

Specify `ro` for read-only permission, or `rw` for read and write permission.

**[Default Value]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : add snmp community <community\_string> [version {v1 | v2c}]  
[view <view\_name>] [permission {ro | rw}]

- There is a missing argument.

Specified community length is invalid. (Valid from 1 to 32)

- The length of the community name is out of range.

Community string is already used

- The specified community name has already been used by another community record.

Specified view name length is invalid. (Valid from 1 to 32)

- The length of the MIB view name is out of range.

maximum number of community was exceeded

- The maximum registration limit for community records is exceeded.

---

## delete snmp community

**[Format]**

```
delete snmp community <community_string>
```

**[Description]**

This command deletes the specified community record.  
This command can be executed only in Administrator mode.

**[Display]**

```
PureFlow(A)> delete snmp community NetManCom  
PureFlow(A)>
```

**[Arguments]**

community\_string  
Specify the community name.  
1 to 32 characters can be specified.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing  
Usage : delete snmp community <community\_string>

- There is a missing argument.

Specified community length is invalid. (Valid from 1 to 32)

- The length of the community name is out of range.

Specified community name is not configured

- The specified community name is not used by any community record.

## show snmp community

### [Format]

```
show snmp community [<community_string>]
```

### [Description]

This command displays the SNMP community record.

If no argument is specified, information on all community records is displayed.

If the <community\_string> parameter is specified, information on the specified community record is displayed.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow> show snmp community
-----
Community Name      : NetMan
Version             : v1
Read View           : readme
Write View          : -
-----
Community Name      : Guest
Version             : v2c
Read View           : readme
Write View          : -
-----
PureFlow>
```

The displayed items and their meanings are as follows:

- Community Name  
Shows the name of the community record.
- Version  
Shows the community version.
- Read View  
Shows the name of the MIB view that can be read.  
If no MIB view is assigned, - is shown.
- Write View  
Shows the name of the MIB view that can be written.  
If no MIB view is assigned, - is shown.

### [Arguments]

community\_string  
Specify the name of the community record.  
1 to 32 characters can be specified.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

None communities are configured

- None community name is set.

Specified community length is invalid. (Valid from 1 to 32)

- The length of the community name is out of range.

Specified community name is not configured

- The specified community name is not used by any community record.

## add snmp view

### [Format]

```
add snmp view <view_name> <oid> {included | excluded}
```

### [Description]

This command adds or changes a MIB view record.

If you access NF7101C via SNMP, make sure to create a MIB view record.

Unless the specified view name is used by an existing record, an MIB view record with the specified parameters is created. Up to 32 records can be registered.

Multiple <oid> parameters can be specified by delimiting them with commas (,).

If the specified view name is used by an existing record, the command adds the specified OID tree and the {included|excluded} parameter to the record.

When included is specified, access to the specified OID tree is possible.

When excluded is specified, access to the specified OID tree is prohibited.

To prohibit access to a certain OID tree, for example, specify included for iso, and specify excluded for the desired OID tree with the same view\_name.

If you use v2c or v3 trap transmission, add the included setting for system and snmpmodules when you specify private for the <oid> parameter.

The following characters cannot be used for <view\_name> and <oid>:

```
" \ ?
```

This command can be executed only in Administrator mode.

### Note:

Only the following ASCII characters can be set in the MIB view record name.

```
1234567890  
abcdefghijklmnopqrstuvwxyz  
ABCDEFGHIJKLMNOPQRSTUVWXYZ  
!#$%&'()*~^-^|@`[]{}:~*~+~/.<>
```

### [Display]

```
PureFlow(A)> add snmp view readme system included  
PureFlow(A)>
```

### [Arguments]

view\_name

Specify the name of the MIB view record.

1 to 32 characters can be specified.

If you need to insert a space in the name, enclose it with double quotation marks (" ") as in "read me".

oid

Specify the character string for the OID tree.

1 to 32 characters can be used for each OID.

For information on OID tree character strings that can be used with this command, see the following page.

### Note:

Although the snmpv2 group can be specified by using this command, access via SNMP is not possible.

```
{included | excluded}
```

Specify included to include the OID tree, or excluded to exclude it.



**[Default Value]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : add snmp view <view\_name> <oid> {included | excluded}

- There is a missing argument.

Specified view name length is invalid. (Valid from 1 to 32)

- The length of the MIB view name is out of range.

Specified view name is not valid

Below characters cannot be used

" \ ?

- The format or character(s) of the MIB view name is invalid.


maximum number of view was exceeded

- The maximum registration limit for MIB view records is exceeded.

OID name specified is not supported on PureFlow

- The specified OID is not supported.

OID tree character strings list

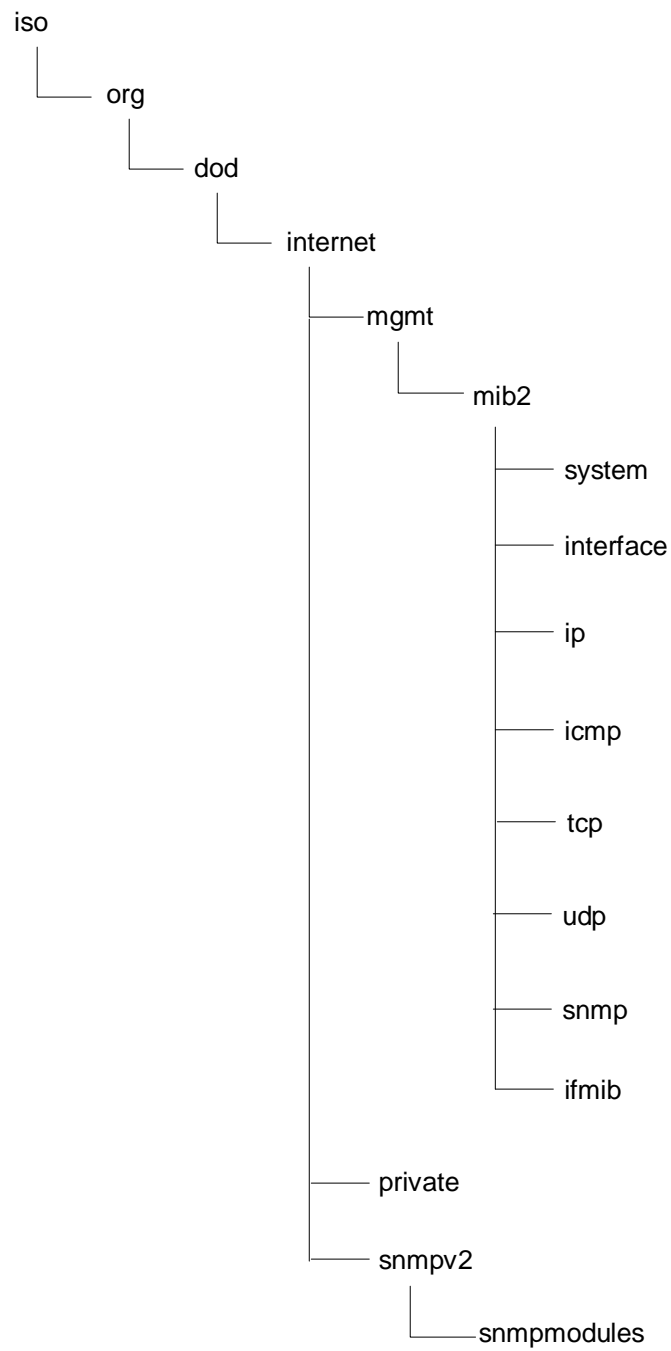

## delete snmp view

### [Format]

```
delete snmp view <view_name> [<oid>]
```

### [Description]

This command deletes or changes a MIB view record.

If the <oid> parameter is not specified, the specified MIB view record is deleted.

If the <oid> parameter is specified, the specified OID tree is deleted from the specified MIB view record.

Multiple <oid> parameters can be specified by delimiting them with commas (,).

The following characters cannot be used for <view\_name> and <oid>:

```
" \ ?
```

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> delete snmp view readme system
PureFlow(A)>
```

### [Arguments]

view\_name

Specify the name of the MIB view record.

oid

Specify the character string for the OID tree.

1 to 32 characters can be used for each OID.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : delete snmp view <view\_name> [<oid>]

- There is a missing argument.

Specified view name length is invalid. (Valid from 1 to 32)

- The length of the MIB view name is out of range.

Invalid name

Below characters cannot be used

```
" \ ?
```

- The format or character(s) of the MIB view name is invalid.

Specified view name is not configured

- The specified MIB view name is not used by any MIB view record.

OID name specified is not supported on PureFlow

- The specified OID is not supported.

## show snmp view

### [Format]

```
show snmp view [<view_name>]
```

### [Description]

This command displays the SNMP MIB view record.

If no argument is specified, information on all MIB view records is displayed.

If the <view\_name> parameter is specified, information on the specified MIB view record is displayed.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow> show snmp view
-----
View Name           : readme
Subtree             : mib2
Access State        : Included
-----
View Name           : notifyme
Subtree             : ip
Access State        : Excluded
-----
PureFlow>
```

The displayed items and their meanings are as follows:

- View Name  
Shows the name of the MIB view record.
- Subtree  
Shows the accessible (or inaccessible) MIB subtrees.
- Access State  
Shows the state of access to the MIB subtree.

Excluded	Access to MIB subtrees other than the specified one is possible.
Included	Access to the specified MIB subtree is possible.

### [Arguments]

view\_name  
Specify the name of the MIB view record.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

None MIB views are configured

- No MIB view name is set.

Specified view name length is invalid. (Valid from 1 to 32)

- The length of the MIB view name is out of range.

Specified view name is not configured

- The specified MIB view name is not used by any MIB view record.

## add snmp group

### [Format]

```
add snmp group <group_name> [auth_type {auth | noauth}]
[read <readview>] [write <writeview>] [notify <notifyview>]
```

### [Description]

This command adds a group record used to map an SNMPv3 user to an SNMP view.

To change a registered record, first delete the record using the `delete snmp group` command, and then create a new record using this command.

Up to 32 records can be registered.

Security level parameter `[auth_type {auth | noauth}]`

If `auth` is specified, authentication for the record is required. If `noauth` is specified, authentication for the record is not required.

If no MIB view parameter is specified, access to the OID tree is not restricted.

A MIB view record can be created by using the `add snmp view` command.

The following characters cannot be used for `<group_name>`, `<readview>`, `<writeview>` and `<notifyview>`:  
" \ ?

This command can be executed only in Administrator mode.

### Note:

Only the following ASCII characters can be set in the SNMP group name.

```
1234567890
abcdefghijklmnopqrstuvwxy
ABCDEFGHIJKLMNPOQRSTUVWXYZ
!#$%&'()=~-^|@`[]{}:*;+_/.<>
```

### [Display]

```
PureFlow(A)> add snmp group NetManGroup auth_type auth read readme write writeme
notify notifyme
PureFlow(A)>
```

### [Arguments]

`group_name`

Specify the name of the SNMP group.

1 to 32 characters can be specified.

If you need to insert a space in the name, enclose it with double quotation marks (") as in "NetMan Group".

`auth_type {auth | noauth}`

Specify `auth` if authentication is necessary, or `noauth` if authentication is unnecessary.

`readview`

If you set read-only permission for the group record, specify the name of the MIB view to be assigned to it.

1 to 32 characters can be specified.

If you need to insert a space in the name, enclose it with double quotation marks (") as in "read me".

writeview

If you set read and write permission for the group record, specify the name of the MIB view to be assigned to it.

1 to 32 characters can be specified.

If you need to insert a space in the name, enclose it with double quotation marks (" ") as in "write me".

notifyview

If you perform notification (Trap and Inform processing) of the group record, specify the name of the MIB view to be assigned to it.

1 to 32 characters can be specified.

If you need to insert a space in the name, enclose it with double quotation marks (" ") as in "notify me".

**[Default Value]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : add snmp group <group\_name> [auth\_type {auth | noauth}]  
[read <readview>] [write <writeview>] [notify <notifyview>]

- There is a missing argument.

Specified group name length is invalid. (Valid from 1 to 32)

- The length of the group name is out of range.

Invalid name

Below characters cannot be used

" \ ?

- The format or character(s) of the group name or MIB view name is invalid.

Group name is already used

- The specified group name has already been used by another group record.

Specified readview length is invalid. (Valid from 1 to 32)

Specified writeview length is invalid. (Valid from 1 to 32)

Specified notifyview length is invalid. (Valid from 1 to 32)

- The length of the MIB view name is out of range.

maximum number of group was exceeded

- The maximum registration limit for group records is exceeded.

## delete snmp group

### [Format]

```
delete snmp group <group_name>
```

### [Description]

This command deletes the specified group record.  
The following characters cannot be used for <group\_name>:  
" \ ?

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> delete snmp group NetManGroup  
PureFlow(A)>
```

### [Arguments]

group\_name  
Specify the name of the SNMP group.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing  
Usage : delete snmp group <group\_name>

- There is a missing argument.

Specified group name length is invalid. (Valid from 1 to 32)

- The length of the group name is out of range.

Invalid name  
Below characters cannot be used  
" \ ?

- The format or character(s) of the group name is invalid.

Specified group name is not configured

- The specified group name is not used by any SNMP group record.

## show snmp group

### [Format]

```
show snmp group [<group_name>]
```

### [Description]

This command displays an SNMPv3 group record.

If no argument is specified, information on all group records is displayed.

If the <group\_name> parameter is specified, information on the specified group record is displayed.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow> show snmp group
-----
Group Name      : NetManGroup
Security        : Authentication
Read View       : readme
Write View      : writeme
Notify View     : notifyme
-----
Group Name      : GuestGroup
Security        : None Authentication
Read View       : readme
Write View      : -
Notify View     : -
-----
PureFlow>
```

The displayed items and their meanings are as follows:

- Group Name  
Shows the name of the group record.
- Security  
Shows the security level of the SNMPv3 model.

No Authentication	Authentication is not performed
Authentication	Authentication is performed
- Read View  
Shows the MIB view name that permits read operations.  
If no MIB view is assigned, - is shown.
- Write View  
Shows the MIB view name that permits write operations.  
If no MIB view is assigned, - is shown.
- Notify View  
Shows the MIB view name for sending a notification.  
If no MIB view is assigned, - is shown.

### [Arguments]

group\_name  
Specify the name of the group record.



**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

None groups are configured

- None group record is set.

Specified group name length is invalid. (Valid from 1 to 32)

- The length of the group name is out of range.

Specified group name is not configured

- The specified group name is not used by any group record.

## add snmp host

### [Format]

```
add snmp host <host_address> version {v1 | v2c | v3 [auth_type {auth | noauth}]}
{user | community}<community_string / user_name> {trap | inform}
[udp_port <port_number>] [<notification_type>]
```

### [Description]

This command adds a host record that shows an SNMP notification destination.

To change a registered record, first delete the record using the `delete snmp host` command, and then create a new record using this command.

If the host address is the same but the UDP port number is different, they are registered as individual entries.

Up to 16 records can be registered.

If `v1` is specified, the record shows the SNMPv1 model. If `v2c` is specified, the record shows the SNMPv2c model. The SNMPv2c model provides Inform and GetBulk processing and can use the Counter64 object type. If `v3` is specified, the record shows the SNMPv3 model. The SNMPv3 model improves security and adds functionality to the SNMPv2c model.

The security model parameter `[auth_type {auth | noauth}]` can only be specified for the SNMPv3 model.

If `auth` is specified, authentication for the record is required. If `noauth` is specified, authentication for the record is not required.

If the `<port_number>` parameter is not specified, the standard UDP port number 162 is used for SNMP notification.

The `{trap | inform}` parameter specifies whether to send the TRAP notification or the INFORM notification.

If the `<notification_type>` parameter is not specified, all types of notifications are sent to the host.

The following characters cannot be used for `<community_string>` and `<user_name>`:

```
" \ ?
```

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> add snmp host 192.168.1.123 version v3 auth_type auth user NetManCom
trap udp_port 123 snmpv2
PureFlow(A)>
```

**[Arguments]**

`host_address`

Specify the IPv4 address of the host.

`version {v1 | v2c | v3}`

Specify `v1` to use the SNMPv1 model, `v2c` for the SNMPv2c model, or `v3` for the SNMPv3 model.

`[auth_type {auth | noauth}]`

This parameter can only be specified for the SNMPv3 model.

Specify `auth` if authentication is necessary, or `noauth` if authentication is unnecessary.

`{user | community} <community_string / user_name>`

Specify the user name for the SNMPv3 model, or the community name for the v1 or v2c model.

1 to 32 characters can be specified.

If you need to insert a space in the name, enclose it with double quotation marks (") as in "NetMan Com".

`{trap | inform}`

Specify whether to send the TRAP notification or the INFORM notification to the notification destination.

For the SNMPv1 model, `inform` cannot be specified.

`udp_port <port_number>`

Specify the UDP port of the host to be used.

Valid values are from 1 to 65535.

`notification_type`

Specify the type of the notification to be sent to the host. The following character strings can indicate this type:

- `snmpv2` SNMP basic notifications (cold start, warm start, link down, link up, and authentication failure)
- `private` Enterprise notification

**[Default Value]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

```
Usage : add snmp host <host_address> version {v1 | v2c | v3 [auth_type {auth | noauth}]}
        {user | community} <community_string / user_name> [{trap | inform}
        [udp_port <port_number>] [<notification_type>]
```

- There is a missing argument.

invalid host\_address

- The specified IP address format or value is invalid.

Host address is already used

- The specified host address has already been used by another host record.

Specified community length is invalid. (Valid from 1 to 32)

- The length of the community name is out of range.

Specified user name length is invalid. (Valid from 1 to 32)

- The length of the user name is out of range.

Invalid name

Below characters cannot be used

" \ ?

- The format or character(s) of the community name or user name is invalid.

Specified port number is invalid. (Valid from 1 to 65535)

- The specified UDP port number is out of range.

Specified notification type is not supported on PureFlow

- The specified notification type is not supported.

SNMPv1 hosts does not support inform

- The SNMPv1 host does not support inform.

auth\_type argument can only be given for v3 host

- auth\_type can only be specified for the SNMPv3 model.

maximum number of host was exceeded

- The maximum registration limit for host records is exceeded.

## delete snmp host

### [Format]

```
delete snmp host <host_address>
```

### [Description]

This command deletes the specified host record.  
This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> delete snmp host 192.168.1.123  
PureFlow(A)>
```

### [Arguments]

host\_address  
Specify the IPv4 address of the host.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing  
Usage : delete snmp host <host\_address>

- There is a missing argument.

invalid host\_address

- The specified IP address format or value is invalid.

Specified host address is not configured

- The specified host name is not used by any SNMP host record.

## show snmp host

### [Format]

```
show snmp host [<host_address>]
```

### [Description]

This command displays an SNMP notification destination record.

If no argument is specified, information on all host records is displayed.

If the <host\_address> parameter is specified, information on the specified host record is displayed.

This command can be executed in Normal mode.

### [Display]

```
PureFlow> show snmp host
-----
Host Address      : 192.168.1.123
Version           : v3
Security          : Authentication
Security Name     : NetManCom
UDP port          : 123
Notification Type : snmpv2
-----
Host Address      : 192.168.1.244
Version           : v3
Security          : None Authentication
Security Name     : NetManCom
UDP port          : 162
Notification Type : all
-----
PureFlow>
```

The displayed items and their meanings are as follows:

- Host Address  
Shows the IPv4 address of the host.
- Version  
Shows the version of the SNMP model.

v1	SNMPv1 model
v2c	SNMPv2c model
v3	SNMPv3 model
- Security  
Shows the security level of the SNMPv3 model.

No Authentication	Authentication is not performed
Authentication	Authentication is performed
- Security Name  
Shows the name of the community (for SNMPv1/SNMPv2c) or the name of the SNMPv3 user.
- UDP port  
Shows the UDP port number of the host to be used.

- Notification Type

Specify the type of the notification to be sent to the host. One of the following character strings is used to indicate this type:

all	All notifications
snmpv2	SNMP basic notifications (cold start, warm start, link down, link up, and authentication failure)
private	Enterprise notification

**[Arguments]**

host\_address

Specify the IPv4 address of the host.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

None hosts are configured

- None host record is set.

invalid host\_address

- The specified IP address format or value is invalid.

Specified host address is not configured

- The specified IP address is not used by any host record.

## add snmp user

### [Format]

```
add snmp user <user_name> <group_name>
[auth_type {auth | noauth}] [password <auth_password>]
```

### [Description]

A user record maps an SNMPv3 user to an SNMPv3 group. This command adds the specified user to the specified group.

To change a registered record, first delete the record using the `delete snmp user` command, and then create a new record using this command.

Up to 16 records can be registered.

The authentication parameter `[auth_type {auth | noauth}]` specifies whether authentication is required for this user. The password parameter `[password <auth_password>]` can only be specified for the user to be authenticated.

The following characters cannot be used for `<user_name>`, `<group_name>` and `<auth_password>`:  
" \ ?

This command can be executed only in Administrator mode.

### Note:

Only the following ASCII characters can be set in the SNMP user name.

```
1234567890
abcdefghijklmnopqrstuvwxyz
ABCDEFGHIJKLMNOPQRSTUVWXYZ
!#$%&'()=~-^|@`[]{}:*,+_/.<>
```

### [Display]

```
PureFlow(A) > add snmp user Jack NetManGroup auth_type auth password
PASSWORD
PureFlow(A) >
```

### [Arguments]

`user_name`

Specify the name of the SNMP user.

1 to 32 characters can be specified.

If you need to insert a space in the name, enclose it with double quotation marks (" ") as in "Jack Smith".

`group_name`

Specify the name of the SNMP group.

1 to 32 characters can be specified.

If you need to insert a space in the name, enclose it with double quotation marks (" ") as in "NetMan Group".

`auth_type {auth | noauth}`

Specify `auth` if authentication is necessary, or `noauth` if authentication is unnecessary.

`password <auth_password>`

Specify the authentication password. The password can only be provided to the user to be authenticated.

8 to 24 characters can be specified.



**[Default Value]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

```
Usage : add snmp user <user_name> <group_name>
      [auth_type {auth | noauth}] [password <auth_password>]
```

- There is a missing argument.

Specified user name length is invalid. (Valid from 1 to 32)

- The length of the user name is out of range.

Specified group name length is invalid. (Valid from 1 to 32)

- The length of the group name is out of range.

Invalid name

Below characters cannot be used

" \ ?

- The format or character(s) of the user name or group name is invalid.

Specified password length is invalid. (Valid from 8 to 24)

- The length of the password is out of range.

Invalid characters in password

Below characters cannot be used

" \ ?

- The format or character(s) of the password is invalid.

User security level should be same as of the group security level

- auth\_type specified by this command must match the authentication level of the specified group.

Password is missing

- When auth\_type is set to auth, a password must be specified.

Password cannot be accepted for noauthentication users

- When auth\_type is set to noauth, no password can be specified.

User name is already used

- The specified user name has already been used by another user record.

Specified group name is not configured

- The specified group name is not used by any group record.

maximum number of user was exceeded

- The maximum registration limit for user records is exceeded.

## delete snmp user

### [Format]

```
delete snmp user <user_name>
```

### [Description]

This command deletes the specified user record.  
The following characters cannot be used for <user\_name>:  
" \ ?

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> delete snmp user Jack  
PureFlow(A)>
```

### [Arguments]

user\_name  
Specify the name of the SNMP user.

### [Errors]

Invalid input at Marker  
• There is an unnecessary argument.

An argument was missing  
Usage : delete snmp user <user\_name>  
• There is a missing argument.

Specified user name length is invalid. (Valid from 1 to 32)  
• The length of the user name is out of range.

Invalid name  
Below characters cannot be used  
" \ ?  
• The format or character(s) of the user name is invalid.

Specified user name is not configured  
• The specified user name is not used by any user record.

## show snmp user

### [Format]

```
show snmp user [<user_name>]
```

### [Description]

This command displays an SNMPv3 user record.

If no argument is specified, information on all user records is displayed.

If the <user\_name> parameter is specified, information on the specified user record is displayed.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow> show snmp user
-----
User Name       : Jack
Group Name      : NetManGroup
Security        : Authentication
Auth Algorithm  : md5
-----
User Name       : guest
Group Name      : GuestGroup
Security        : No Authentication
Auth Algorithm  : -
-----
PureFlow>
```

The displayed items and their meanings are as follows:

- User Name  
Shows the name of the user record.
- Group Name  
Shows the name of the group to which the user belongs.
- Security  
Shows the security level of the SNMPv3 model.  
No Authentication    Authentication is not performed  
Authentication    Authentication is performed
- Auth Algorithm  
Shows the authentication algorithm for the SNMPv3 model.  
If the model is not SNMPv3, or authentication is not required, - is shown.

### [Arguments]

user\_name  
Specify the name of the user record.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

None users are configured

- No user record is set.

Specified user name length is invalid. (Valid from 1 to 32)

- The length of the user name is out of range.

Specified user name is not configured

- The specified user name is not used by any user record.

## set snmp traps

### [Format]

```
set snmp traps {authentication | linkup | linkdown | coldstart |
               modulefailurealarm | modulefailurerecovery |
               systemheatalarm | systemheatrecovery |
               powerinsert | powerextract | powerfailure | powerrecovery |
               faninsert | fanextract | fanfailure | fanrecovery |
               queuebuffalarm | queuebuffrecovery |
               systembuffalarm | systembuffrecovery |
               queueallocalarm | queueallocalrecovery |
               maxqnumalarm | maxqnumrecovery}
               {enable | disable}
```

### [Description]

This command enables and disables individual SNMP notification transmission. This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> set snmp traps authentication enable
PureFlow(A)>
```

### [Arguments]

```
{authentication | linkup | linkdown | coldstart | modulefailurealarm |
 modulefailurerecovery | systemheatalarm | systemheatrecovery | powerinsert |
 powerextract | powerfailure | powerrecovery | faninsert | fanextract | fanfailure
 | fanrecovery | queuebuffalarm | queuebuffrecovery | systembuffalarm |
 systembuffrecovery | queueallocalarm | queueallocalrecovery | maxqnumalarm |
 maxqnumrecovery }
```

When enabling/disabling individual SNMP notification transmission, specify the notification name. The following character strings can indicate this type:

authentication	Authentication error
linkup	Link up
linkdown	Link down
coldstart	Cold start
modulefailurealarm	Module error
modulefailurerecovery	Module error recovery
systemheatalarm	System temperature error
systemheatrecovery	System temperature error recovery
powerinsert	Power unit insert
powerextract	Power unit extract
powerfailure	Power unit error
powerrecovery	Power unit error recovery
faninsert	Fan unit insert
fanextract	Fan unit extract
fanfailurealarm	Fan unit error
fanfailurerecovery	Fan unit error recovery
queuebuffalarm	Queue buffer error

queuebuffrecovery	Queue buffer error recovery
systembuffalarm	System buffer error
systembuffrecovery	System buffer error recovery
queueallocalarm	Total individual queue limit reached
queueallocorecovery	Total individual queue limit recovery
maxqnumalarm	Scenario individual queue limit reached
maxqnumrecovery	Scenario individual queue limit recovery

{enable | disable}

Specify enable to enable transmission of the specified notification, or disable to disable it.

**[Default Value]**

The default value for all arguments is enable .

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : set snmp traps {authentication | linkup | linkdown | coldstart | modulefailurealarm | modulefailurerecovery | systemheatalarm | systemheatrecovery | powerinsert | powerextract | powerfailure | powerrecovery | faninsert | fanextract | fanfailure | fanrecovery | queuebuffalarm | queuebuffrecovery | systembuffalarm | systembuffrecovery | queueallocalarm | queueallocorecovery | maxqnumalarm | maxqnumrecovery} {enable | disable}

- There is a missing argument.

## set snmp syslocation

### [Format]

```
set snmp syslocation <location_string>
```

### [Description]

This command sets "sysLocation", an SNMP MIB-II system group object that indicates the place where NF7101C is installed.

The following characters cannot be used for <location\_string>:

```
" \ ?
```

This command can be executed only in Administrator mode.

### Note:

Only the following ASCII characters can be set in sysLocation.

```
1234567890
abcdefghijklmnopqrstuvwxyz
ABCDEFGHIJKLMNOPQRSTUVWXYZ
!#$%&'()=~^|@`[]{}:~*+_/.<>
```

### [Display]

```
PureFlow(A)> set snmp syslocation Factory
PureFlow(A)>
```

### [Arguments]

```
location_string
Specify the character string for sysLocation.
Zero to 233 characters can be specified.
```

### [Default Value]

The default value is Not Yet Set.

### [Errors]

```
Invalid input at Marker
  • There is an unnecessary argument.
```

```
An argument was missing
Usage : set snmp syslocation <location_string>
  • There is a missing argument.
```

```
Invalid name
Below characters cannot be used
" \ ?
  • The format or character(s) of the sysLocation string is invalid.
```

## set snmp syscontact

### [Format]

```
set snmp syscontact <contact_string>
```

### [Description]

This command sets "sysContact", an SNMP MIB-II system group object that indicates the administrator of NF7101C.

The following characters cannot be used for <contact\_string>:

```
" \ ?
```

This command can be executed only in Administrator mode.

### Note:

Only the following ASCII characters can be set in sysContact.

```
1234567890  
abcdefghijklmnopqrstuvwxyz  
ABCDEFGHIJKLMNOPQRSTUVWXYZ  
!#$%&'()=~^|@`[]{}:~*+_/.<>
```

### [Display]

```
PureFlow(A)> set snmp syscontact foo<foo@bar.co.jp>  
PureFlow(A)>
```

### [Arguments]

```
contact_string  
Specify the character string for sysContact.  
Zero to 233 characters can be specified.
```

### [Default Value]

The default value is Not Yet Set.

### [Errors]

```
Invalid input at Marker
```

- There is an unnecessary argument.

```
An argument was missing
```

```
Usage : set snmp syscontact <contact_string>
```

- There is a missing argument.

```
Invalid name
```

```
Below characters cannot be used
```

```
" \ ?
```

- The format or character(s) of the sysContact string is invalid.



## set snmp sysname

### [Format]

```
set snmp sysname <name_string>
```

### [Description]

This command sets "sysName", an SNMP MIB-II system group object that indicates the name of the local system used as the administrator's system.

The following characters cannot be used for <name\_string>:

```
" \ ?
```

This command can be executed only in Administrator mode.

### Note:

Only the following ASCII characters can be set in sysName.

```
1234567890
abcdefghijklmnopqrstuvwxyz
ABCDEFGHIJKLMNOPQRSTUVWXYZ
!#$%&'()=~^|@`[]{}:~*+_/.<>
```

### [Display]

```
PureFlow(A)> set snmp sysname shaper
PureFlow(A)>
```

### [Arguments]

```
name_string
Specify the character string for sysName.
Zero to 233 characters can be specified.
```

### [Default Value]

The default value is Not Yet Set.

### [Errors]

```
Invalid input at Marker
  • There is an unnecessary argument.
```

```
An argument was missing
Usage : set snmp sysname <name_string>
  • There is a missing argument.
```

```
Invalid name
Below characters cannot be used
" \ ?
  • The format or character(s) of the sysName string is invalid.
```

## show snmp system

### [Format]

```
show snmp system
```

### [Description]

This command displays the SNMP MIB-II sysLocation, sysContact, sysName, engine ID, and trap settings.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow> show snmp system
```

```
-----  
System Location           : Not Yet Set  
System Contact            : Not Yet Set  
System Name               : Not Yet Set  
Engine ID                 : 00:00:04:7f:00:00:00:00:91:00:01:01
```

#### Traps

```
authentication           : enable  
linkup                   : enable  
linkdown                 : enable  
coldstart                : enable  
modulefailurealarm      : enable  
modulefailurerecovery   : enable  
systemheatalarm         : enable  
systemheatrecovery      : enable  
powerinsert              : enable  
powerextract             : enable  
powerfailure            : enable  
powerrecovery           : enable  
faninsert                : enable  
fanextract               : enable  
fanfailurealarm         : enable  
fanfailurerecovery      : enable  
queuebuffalarm          : enable  
systembuffalarm         : enable  
queueallocalarm         : enable  
queueallocrecovery      : enable  
maxqnumalarm            : enable  
maxqnumrecovery         : enable
```

```
-----  
PureFlow>
```

The displayed items and their meanings are as follows:

- System Location  
Shows sysLocation, an SNMP MIB-II system group object that indicates the place where NF7101C is installed.
- System Contact  
Shows sysContact, an SNMP MIB-II system group object that indicates the administrator of NF7101C.
- System Name  
Shows sysName, an SNMP MIB-II system group object that indicates the name of the local system for managing NF7101C.
- Engine ID  
Shows the ID of the local engine.  
The engine ID is automatically generated from the MAC address of the system.
- Traps  
Shows whether a trap is enabled or disabled.  
An individual trap is enabled when enable is set, and disabled when disable is set.

**[Arguments]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

## 2.2.9 Other commands

### download tftp obj

#### [Format]

```
download tftp obj <IP_address> <file>
```

#### [Description]

This command downloads basic software over the network from the TFTP server.

For *file*, specify a file name including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

If any object file other than the proper object file specified by Anritsu is downloaded, the system may not start up. Be careful not to download a file that is not the proper object file using this command. If the wrong object file is downloaded, insert a CF card or USB flash drive with the proper object file into the CF card slot or USB port and start the system. Then, download the proper object file again.

Use a CF card which is options of Anritsu. Using incorrect CF cards will cause failure.

If a communication failure occurs during the download, downloading may not be resumed after recovery, and the session of the device may remain. Such a remaining session is displayed in the `show session` command. In this case, please login with another session, and remove the remaining session using the `delete session` command. After removing the session, try download again.

Use the TFTP server which corresponds to the `tsize` options specified to RFC 2349, because the file size of basic software is more than 32k byte.

#### [Display]

```
PureFlow(A)> download tftp obj 192.168.40.10 nf7100.bin
Download "nf7100.bin" from 192.168.40.10 (y/n)? y
Loading .....
creating Backup from Master file.....completed.
Done.
PureFlow(A)>
```

#### [Arguments]

*IP\_address*

Specify the IP address of the TFTP server.

*file*

Specify the name of the basic software file to download.

The file name including the path must be within 64 characters.

#### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : `download tftp obj <IP_address> <file>`

- There is a missing argument.

invalid *IP\_address*

- The specified IP address format or value is invalid.

---

"file": file not found

- The specified file does not exist.
- The file size of the specified file is too large .
- The connection to the TFTP server failed.

file length is valid from 1 to 64

- The length of the file name including the path should be 1 to 64 characters.

no valid header or file size exceeds flash

- The header information in the specified file is invalid.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

unknown file type

- The object file type is unknown.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## download tftp conf

### [Format]

```
download tftp conf <IP_address> <file>
```

### [Description]

This command downloads a configuration file over the network from the TFTP server.

For *file*, specify a file name including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

If any configuration file other than the proper configuration file specified by Anritsu is downloaded, the system may not start up. Be careful not to download a file that is not the proper configuration file using this command. If the wrong configuration file is downloaded, insert a CF card or USB flash drive with the proper configuration file into the CF card slot or USB port and start the system. After that, download the proper configuration file again.

Use a CF card which is options of Anritsu. Using incorrect CF cards will cause failure.

If a communication failure occurs during the download, downloading may not be resumed after recovery, and the session of the device may remain. Such a remaining session is displayed in the `show session` command. In this case, please login with another session, and remove the remaining session using the `delete session` command. After removing the session, try download again.

### [Display]

```
PureFlow(A)> download tftp conf 192.168.40.10 config.txt
Download "config.txt" from 192.168.40.10 (y/n)? y
Loading .....
Done.
PureFlow(A)>
```

### [Arguments]

*IP\_address*

Specify the IP address of the TFTP server.

*file*

Specify the name of the configuration file.

The file name including the path must be within 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : download tftp conf <IP\_address> <file>

- There is a missing argument.

invalid IP\_address

- The specified IP address format or value is invalid.

"file": file not found

- The specified file does not exist.
- The file size of the specified file is too large .
- The connection to the TFTP server failed.

file length is valid from 1 to 64

- The length of the file name including the path should be 1 to 64 characters.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## download ftp obj

### [Format]

```
download ftp obj <IP_address> <file>
```

### [Description]

This command downloads basic software over the network from the FTP server.

For *file*, specify a file name including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

When the command is executed, a message prompting you to enter your user name and password is shown. Enter the user name and password registered with the FTP server. The user name and password must be 1 to 128 characters. The following ASCII characters can be used for the user name and password:

1234567890

abcdefghijklmnopqrstuvwxyz

ABCDEFGHIJKLMNOPQRSTUVWXYZ

!#\$%&'()\*=~-^|\_{}:~\*~+~./.<>

This command can be executed only in Administrator mode.

If any object file other than the proper object file specified by Anritsu is downloaded, the system may not start up. Be careful not to download a file that is not the proper object file using this command. If the wrong object file is downloaded, insert a CF card or USB flash drive with the proper object file into the CF card slot or port and start the system. Then, download the proper object file again. Use a CF card which is options of Anritsu. Using incorrect CF cards will cause failure.

If a communication failure occurs during the download, downloading may not be resumed after recovery, and the session of the device may remain. Such a remaining session is displayed in the `show session` command. In this case, please login with another session, and remove the remaining session using the `delete session` command. After removing the session, try download again.

### [Display]

```
PureFlow(A)> download ftp obj 192.168.40.10 nf7100.bin
Name:ftpuser
Password:
Download "nf7100.bin" from 192.168.40.10 (y/n)? y
Loading .....
creating Backup from Master file.....completed.
Done.
PureFlow(A)>
```

### [Arguments]

*IP\_address*

Specify the IP address of the FTP server.

*file*

Specify the name of the basic software file to download.

The file name including the path must be within 64 characters.



**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : download ftp obj <IP\_address> <file>

- There is a missing argument.

Name length is valid from 1 to 128

- The length of the user name should be 1 to 128 characters.

password length is valid from 1 to 128

- The length of the password should be 1 to 128 characters.

invalid input character

- The character(s) of the user name is invalid.
- The character(s) of the password is invalid.

invalid IP\_address

- The specified IP address format or value is invalid.

"file": file not found

- The specified file does not exist.
- The connection to the FTP server failed.

file length is valid from 1 to 64

- The length of the file name including the path should be 1 to 64 characters.

this file is not a program

- The specified file is not the basic software file.

no valid header or file size exceeds flash

- The header information on the specified file is invalid.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

unknown file type

- The object file type is unknown.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## download ftp conf

### [Format]

```
download ftp conf <IP_address> <file>
```

### [Description]

This command downloads a configuration file over the network from the FTP server.

For *file*, specify a file name including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

```
."/\ [] : ; | = , and space
```

When the command is executed, a message prompting you to enter your user name and password is shown. Enter the user name and password registered with the FTP server. The user name and password must be 1 to 128 characters. The following ASCII characters can be used for the user name and password:

```
1234567890  
abcdefghijklmnopqrstuvwxyz  
ABCDEFGHIJKLMNOPQRSTUVWXYZ  
!#$%&'()*=~-^|_{}:~*~+~./.<>
```

This command can be executed only in Administrator mode.

If any configuration file other than the proper configuration file specified by Anritsu is downloaded, the system may not start up. Be careful not to download a file that is not the proper configuration file using this command. If the wrong configuration file is downloaded, insert a CF card or USB flash drive with the proper configuration file into the CF card slot or USB port and start the system. After that, download the proper configuration file again.

Use a CF card which is options of Anritsu. Using incorrect CF cards will cause failure.

If a communication failure occurs during the download, downloading may not be resumed after recovery, and the session of the device may remain. Such a remaining session is displayed in the `show session` command. In this case, please login with another session, and remove the remaining session using the `delete session` command. After removing the session, try download again.

### [Display]

```
PureFlow(A)> download ftp conf 192.168.40.10 config.txt  
Name:ftpuser  
Password:  
Download "config.txt" from 192.168.40.10 (y/n)? y  
Loading .....  
Done.  
PureFlow(A)>
```

### [Arguments]

*IP\_address*

Specify the IP address of the FTP server.

*file*

Specify the name of the configuration file.

The file name including the path must be within 64 characters.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : download ftp conf <IP\_address> <file>

- There is a missing argument.

Name length is valid from 1 to 128

- The length of the user name should be 1 to 128 characters.

password length is valid from 1 to 128

- The length of the password should be 1 to 128 characters.

invalid input character

- The character(s) of the user name is invalid.
- The character(s) of the password is invalid.

invalid IP\_address

- The specified IP address format or value is invalid.

"file": file not found

- The specified file does not exist.
- The connection to the FTP server failed.

file length is valid from 1 to 64

- The length of the file name including the path should be 1 to 64 characters.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## download cf obj

### [Format]

download cf obj <file>

### [Description]

This command downloads basic software from the CF card inserted in the CF card slot to the internal flash memory.

CF cards in FAT16/FAT32 format are supported. For details about the CF cards that can be used, see the "Operation Manual (NF7101-W006E)". Using other CF cards will cause failure.

Do not remove the card until the download is complete. Otherwise, the contents of the card may be destroyed.

For *file*, specify a file name including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

If any object file other than the proper object file specified by Anritsu is downloaded, the system may not start up. Be careful not to download a file that is not the proper object file using this command. If the wrong object file is downloaded, insert a CF card or USB flash drive with the proper object file into the CF card slot or USB port and start the system. Then, download the proper object file again. Use a CF card which is options of Anritsu. Using incorrect CF cards will cause failure.

### [Display]

```
PureFlow(A)> download cf obj nf7100.bin
Download "nf7100.bin" from Flash Memory Card (y/n)? y
Loading .....
creating Backup from Master file.....completed.
Done.
PureFlow(A)>
```

### [Arguments]

file

Specify the name of the software file to download from the CF card.

The file name including the path must be within 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : download cf obj <file>

- There is a missing argument.

"file": file not found

- The specified file does not exist.

external flash card is not mounted

- No card is inserted.

internal media is not mounted

- An internal flash memory access error occurred.

card access error

- A card access error occurred.

file length is valid from 1 to 64

- The length of the file name including the path should be 1 to 64 characters.

this file is invalid format

- The file format is invalid.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## download cf patch

### [Format]

download cf patch

### [Description]

This command applies patch file of basic software from the CF card inserted in the CF card slot to the internal flash memory.

CF cards in FAT16/FAT32 format are supported. For details about the CF cards that can be used, see the "Operation Manual (NF7101-W006E)". Using other CF cards will cause failure.

Do not remove the card until the application of the patch is complete. Otherwise, the contents of the card may be destroyed.

Store the patch file specified by Anritsu in the root directory of CF card and run this command. If there are two or more patch files, because this command applies all patch files, store to the CF card all patch files and run this command.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> download cf patch
Apply patch from Flash Memory Card (y/n)? y
Applying file system patch ..... done
Applying apps patch ..... done
Applying fcpu patch ..... done
creating Backup from Master file.....completed.
Done.
PureFlow(A)>
```

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

patch file not found

- The patch file does not exist.

patch file is invalid format

- The patch file format is invalid.

patch requires other patch file

- the patch file has shortage.

external flash card is not mounted

- No card is inserted.

internal media is not mounted

- An internal flash memory access error occurred.

card access error

- A card access error occurred.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## download cf conf

### [Format]

```
download cf conf <file>
```

### [Description]

This command downloads a configuration file from the CF card inserted in the CF card slot to the internal flash memory.

CF cards in FAT16/FAT32 format are supported. For details about the CF cards that can be used, see the "Operation Manual (NF7101-W006E)". Using other CF cards will cause failure.

Do not remove the card until the download is complete. Otherwise, the contents of the card may be destroyed.

For *file*, specify a file name including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

```
./\ [ ] ; | = , and space
```

This command can be executed only in Administrator mode.

If any configuration file other than the proper configuration file specified by Anritsu is downloaded, the system may not start up. Be careful not to download a file that is not the proper configuration file using this command. If the wrong configuration file is downloaded, insert a CF card or USB flash drive with the proper configuration file into the CF card slot or USB port and start the system. After that, download the proper configuration file again. Use a CF card which is options of Anritsu. Using incorrect CF cards will cause failure.

### [Display]

```
PureFlow(A)> download cf conf config.txt
Download "config.txt" from Flash Memory Card (y/n)? y
Loading .....
Done.
PureFlow(A)>
```

### [Arguments]

*file*

Specify the name of the configuration file to download.

The file name including the path must be within 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : download cf conf <file>

- There is a missing argument.

"file": file not found

- The specified file does not exist.

external flash card is not mounted

- No card is inserted.

internal media is not mounted

- An internal flash memory access error occurred.

card access error

- A card access error occurred.

file length is valid from 1 to 64

- The length of the file name including the path should be 1 to 64 characters.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.



## download usb obj

### [Format]

```
download usb obj <file>
```

### [Description]

This command downloads basic software from the USB flash drive inserted in the USB port to the internal flash memory.

FAT16/FAT32 format are supported for USB flash drives. For details about USB flash drives whose performance is confirmed by Anritsu, see the "Operation Manual (NF7101-W006E)".

Do not remove the USB flash drive until the download is complete. Otherwise, the contents of the device may be destroyed.

For *file*, specify a file name including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

If any object file other than the proper object file specified by Anritsu is downloaded, the system may not start up. Be careful not to download a file that is not the proper object file using this command. If the wrong object file is downloaded, insert a CF card or USB flash drive with the proper object file into the CF card slot or USB port and start the system. Then, download the proper object file again. Use a CF card which is options of Anritsu. Using incorrect CF cards will cause failure.

### [Display]

```
PureFlow(A)> download usb obj nf7100.bin
Download "nf7100.bin" from USB Memory (y/n)? y
Loading .....
creating Backup from Master file.....completed.
Done.
PureFlow(A)>
```

### [Arguments]

*file*

Specify the name of the software file to download from the USB flash drive.

The file name including the path must be within 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : download usb obj <file>

- There is a missing argument.

"file": file not found

- The specified file does not exist.

USB Memory is not mounted

- No USB flash drive is inserted.

internal media is not mounted

- An internal flash memory access error occurred.

USB memory access error

- A USB flash drive access error occurred.

file length is valid from 1 to 64

- The length of the file name including the path should be 1 to 64 characters.

this file is invalid format

- The file format is invalid.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## download usb patch

### [Format]

```
download usb patch
```

### [Description]

This command applies patch file of basic software from the USB flash drive inserted in the USB port to the internal flash memory.

FAT16/FAT32 format are supported for USB flash drives. For details about USB flash drives whose performance is confirmed by Anritsu, see the “Operation Manual (NF7101-W006E)”.

Do not remove the USB flash drive until the application of the patch is complete. Otherwise, the contents of the device may be destroyed.

Store the patch file specified by Anritsu in the root directory of USB flash drives and run this command. If there are two or more patch files, because this command applies all patch files, store to the USB flash drives all patch files and run this command.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> download usb patch
Apply patch from USB Memory (y/n)? y
Applying file system patch ..... done
Applying apps patch ..... done
Applying fcpu patch ..... done
creating Backup from Master file.....completed.
Done.
PureFlow(A)>
```

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

patch file not found

- The patch file does not exist.

patch file is invalid format

- The patch file format is invalid.

patch requires other patch file

- the patch file has shortage.

USB Memory is not mounted

- No USB flash drive is inserted.

internal media is not mounted

- An internal flash memory access error occurred.

USB memory access error

- A card access error occurred.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## download usb conf

### [Format]

```
download usb conf <file>
```

### [Description]

This command downloads a configuration file from the USB flash drive inserted in the USB port to the internal flash memory.

FAT16/FAT32 format are supported for USB flash drives. For details about USB flash drives whose performance is confirmed by Anritsu, see the "Operation Manual (NF7101-W006E)".

Do not remove the USB flash drive until the download is complete. Otherwise, the contents of the device may be destroyed.

For *file*, specify a file name including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

If any configuration file other than the proper configuration file specified by Anritsu is downloaded, the system may not start up. Be careful not to download a file that is not the proper configuration file using this command. If the wrong configuration file is downloaded, insert a CF card or USB flash drive with the proper configuration file into the CF card slot or USB port and start the system. After that, download the proper configuration file again. Use a CF card which is options of Anritsu. Using incorrect CF cards will cause failure.

### [Display]

```
PureFlow(A)> download usb conf config.txt
Download "config.txt" from USB Memory (y/n)? y
Loading .....
Done.
PureFlow(A)>
```

### [Arguments]

*file*

Specify the name of the configuration file to download.

The file name including the path must be within 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : download usb conf <file>

- There is a missing argument.

"file": file not found

- The specified file does not exist.

USB memory is not mounted

- No USB flash drive is inserted.

internal media is not mounted

- An internal flash memory access error occurred.

USB memory access error

- A USB flash drive access error occurred.

file length is valid from 1 to 64

- The length of the file name including the path should be 1 to 64 characters.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## upload tftp conf

### [Format]

```
upload tftp conf <IP_address> <file>
```

### [Description]

This command uploads a configuration file to the TFTP server over the network.

The contents of the configuration file to be uploaded are the contents saved by the `save config` command.

For `file`, specify a file name including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> upload tftp conf 192.168.40.10 config.txt
Upload "config.txt" to 192.168.40.10 (y/n)? y
Loading .....
Done.
PureFlow(A)>
```

### [Arguments]

`IP_address`

Specify the IP address of the TFTP server.

`file`

Specify the name of the configuration file to upload.

The file name including the path must be within 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : `upload tftp conf <IP_address> <file>`

- There is a missing argument.

invalid `IP_address`

- The specified IP address format or value is invalid.

`file` length is valid from 1 to 64

- The length of the file name including the path should be 1 to 64 characters.

time-out error occurred

- A timeout occurred.

failure on transmission packet to the server

- The connection to the TFTP server failed.
- Writing is forbidden on the TFTP server.

invalid `file`.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## upload ftp conf

### [Format]

```
upload ftp conf <IP_address> <file>
```

### [Description]

This command uploads a configuration file to the FTP server over the network.

The contents of the configuration file to be uploaded are the contents saved by the `save config` command.

For `file`, specify a file name including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

When the command is executed, a message prompting you to enter your user name and password is shown. Enter the user name and password registered with the FTP server. The user name and password must be 1 to 128 characters. The following ASCII characters can be used for the user name and password:

1234567890

abcdefghijklmnopqrstuvwxyz

ABCDEFGHIJKLMNOPQRSTUVWXYZ

!#\$%&'()\*=~-^|¥@`[]{}:~\*+\_/.<>

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> upload ftp conf 192.168.40.10 config.txt
Name:ftpuser
Password:
Upload "config.txt" to 192.168.40.10 (y/n)? y
Loading .....
Done.
PureFlow(A)>
```

### [Arguments]

IP\_address

Specify the IP address of the FTP server.

file

Specify the name of the configuration file to upload.

The file name including the path must be within 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : upload ftp conf <IP\_address> <file>

- There is a missing argument.

Name length is valid from 1 to 128

- The length of the user name should be 1 to 128 characters.

password length is valid from 1 to 128

- The length of the password should be 1 to 128 characters.



invalid input character

- The character(s) of the user name is invalid.
- The character(s) of the password is invalid.

invalid IP\_address

- The specified IP address format or value is invalid.

file length is valid from 1 to 64

- The length of the file name including the path should be 1 to 64 characters.

time-out error occurred

- A timeout occurred.

failure on transmission packet to the server

- The connection to the FTP server failed.
- Writing is forbidden on the FTP server.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## upload cf obj

### [Format]

```
upload cf obj <file>
```

### [Description]

This command uploads software in the system to the CF card inserted in the CF card slot. CF cards in FAT16/FAT32 format are supported. For details about the CF cards that can be used, see the "Operation Manual (NF7101-W006E)". Using other CF cards will cause failure.

Do not remove the card until command execution is complete. Otherwise, the contents of the card may be destroyed.

For *file*, specify a file name including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> upload cf obj nf7100.bin
Upload as "nf7100.bin" to Flash Memory Card (y/n)? y
Loading .....
Done.
PureFlow(A)>
```

### [Arguments]

*file*

Specify the name of the file to upload to the CF card.

The file name including the path must be within 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : upload cf obj <file>

- There is a missing argument.

"file": file not found

- Failed to read the software inside the system.

external flash card is not mounted

- No card is inserted.

internal memory is not mounted

- An internal flash memory access error occurred.

card access error

- A card access error occurred.

file length is valid from 1 to 64

- The length of the file name including the path should be 1 to 64 characters.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## upload cf conf

### [Format]

```
upload cf conf <file>
```

### [Description]

This command uploads a configuration file to the CF card inserted in the CF card slot.

The contents of the configuration file to be uploaded are the contents saved by the `save config` command.

CF cards in FAT16/FAT32 format are supported. For details about the CF cards that can be used, see the “Operation Manual (NF7101-W006E)”. Using other CF cards will cause failure.

Do not remove the card until command execution is complete. Otherwise, the contents of the card may be destroyed.

For `file`, specify a file name including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> upload cf conf config.txt
Upload "config.txt" to Flash Memory Card (y/n)? y
Loading .....
Done.
PureFlow(A)>
```

### [Arguments]

`file`

Specify the name of the configuration file to upload.

The file name including the path must be within 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : `upload cf conf <file>`

- There is a missing argument.

external flash card is not mounted

- No card is inserted.

internal memory is not mounted

- An internal flash card access error occurred.

card access error

- A card access error occurred.

file length is valid from 1 to 64

- The length of the file name including the path should be 1 to 64 characters.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## upload usb obj

### [Format]

```
upload usb obj <file>
```

### [Description]

This command uploads software in the system to the USB flash drive inserted in the USB port. FAT16/FAT32 format are supported for USB flash drives. For details about USB flash drives whose performance is confirmed by Anritsu, see the "Operation Manual (NF7101-W006E)".

Do not remove the USB flash drive until command execution is complete. Otherwise, the contents of the device may be destroyed.

For *file*, specify a file name including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> upload usb obj nf7100.bin
Upload as "nf7100.bin" to USB Memory (y/n)? y
Loading .....
Done.
PureFlow(A)>
```

### [Arguments]

*file*

Specify the name of the file to upload to the USB flash drive.

The file name including the path must be within 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : upload usb obj <file>

- There is a missing argument.

"file": file not found

- Failed to read the software inside the system.

USB Memory is not mounted

- No USB flash drive is inserted.

internal memory is not mounted

- An internal flash memory access error occurred.

USB memory access error

- A USB flash drive access error occurred.

file length is valid from 1 to 64

- The length of the file name including the path should be 1 to 64 characters.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## upload usb conf

### [Format]

```
upload usb conf <file>
```

### [Description]

This command uploads a configuration file to the USB flash drive inserted in the USB port. The contents of the configuration file to be uploaded are the contents saved by the `save config` command.

FAT16/FAT32 format are supported for USB flash drives. For details about USB flash drives whose performance is confirmed by Anritsu, see the "Operation Manual (NF7101-W006E)".

Do not remove the USB flash drive until command execution is complete. Otherwise, the contents of the device may be destroyed.

For `file`, specify a file name including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> upload usb conf config.txt
Upload "config.txt" to USB Memory (y/n)? y
Loading .....
Done.
PureFlow(A)>
```

### [Arguments]

`file`

Specify the name of the configuration file to upload.

The file name including the path must be within 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : `upload usb conf <file>`

- There is a missing argument.

USB Memory is not mounted

- No USB flash drive is inserted.

internal memory is not mounted

- An internal flash memory access error occurred.

USB memory access error

- A USB flash drive access error occurred,.

file length is valid from 1 to 64

- The length of the file name including the path should be 1 to 64 characters.



invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## show cf list

### [Format]

```
show cf list [<path>]
```

### [Description]

This command functions in the same way as the `operate cf list` command. Unlike the `operate cf list` command, this command can also be executed in Normal mode.

### [Display]

```
PureFlow> show cf list /  
config.txt          1248  
test.dat           45012  
temp               <DIR>  
?????????.txt     8192  
PureFlow>
```

The displayed items and their meanings are as follows:

- config.txt 1248  
Indicates that there is a file named `config.txt` whose size is 1248 bytes.
- temp <DIR>  
Indicates that there is a directory named `temp`.
- ????????.txt 8192  
Indicates that there is a file whose name contains double-byte characters or one-byte katakana characters.

### [Arguments]

path  
Specify the directory on the CF card using up to 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing  
Usage : show cf list [<path>]

- There is a missing argument.

"path": path not found

- The specified directory does not exist.

card is not mounted

- No card is inserted.

card access error

- A card access error occurred.

path length is valid from 1 to 64

- The length of the path name should be from 1 to 64 characters.

invalid path.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the directory name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## show usb list

### [Format]

```
show usb list [<path>]
```

### [Description]

This command functions in the same way as the `operate usb list` command. Unlike the `operate usb list` command, this command can also be executed in Normal mode.

### [Display]

```
PureFlow> show usb list /  
config.txt          1248  
test.dat            45012  
temp                <DIR>  
?????????.txt      8192  
PureFlow>
```

The displayed items and their meanings are as follows:

- config.txt 1248  
Indicates that there is a file named `config.txt` whose size is 1248 bytes.
- temp <DIR>  
Indicates that there is a directory named `temp`.
- ????????.txt 8192  
Indicates that there is a file whose name contains double-byte characters or one-byte katakana characters.

### [Arguments]

path  
Specify the directory on the USB flash drive using up to 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing  
Usage : show cf list [<path>]

- There is a missing argument.

"path": path not found

- The specified directory does not exist.

USB memory is not mounted

- No USB flash drive is inserted.

USB memory access error

- A USB flash drive access error occurred.

path length is valid from 1 to 64

- The length of the path name should be from 1 to 64 characters.

invalid path.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the directory name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## reboot

### [Format]

```
reboot system
```

### [Description]

This command resets (reboots) the system.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> reboot system  
Rebooting the system, ok (y/n)? y
```

### [Arguments]

```
system
```

Resets the entire system.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : reboot system

- There is a missing argument.

## ping

### [Format]

```
ping <IP_address>
```

### [Description]

This command sends an ICMP ECHO\_REQUEST packet to the specified host (IP\_address). This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow> ping 192.168.37.20
PING 192.168.37.20 (192.168.37.20) 56(84) bytes of data.
64 bytes from 192.168.37.20: icmp_seq=1 ttl=64 time=0.372 ms

--- 192.168.37.12 ping statistics ---
1 packets transmitted, 1 received, 0% packet loss, time 0ms
rtt min/avg/max/mdev = 0.372/0.372/0.372/0.000 ms
PureFlow>
PureFlow> ping 192.168.37.100
PING 192.168.37.100 (192.168.37.100) 56(84) bytes of data.

--- 192.168.37.100 ping statistics ---
1 packets transmitted, 0 received, 100% packet loss, time 100ms
PureFlow>
```

After command execution, a message that indicates the execution result appears.

- 1 packets transmitted, 1 received, 0% packet loss, time xxxms  
The specified host responded. Packets can be transmitted and received.
- 1 packets transmitted, 0 received, 100% packet loss, time xxxms  
The specified host does not respond.

### [Arguments]

IP\_address

Specify the IP address of the host to which the ICMP ECHO\_REQUEST packet is to be sent.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : ping <IP\_address>

- There is a missing argument.

invalid IP\_address

- The specified IP address format or value is invalid.

## telnet

### [Format]

```
telnet <IP_address> [<port>]
```

### [Description]

This command connects the system to the specified host (IP\_address) via Telnet.

For port, specify the TCP port number to be used for connection. If omitted, 23 is used.

While logged into an external device via Telnet, the CLI session in which this command was executed is put on hold. Upon logout, the CLI session is restored.

This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow> telnet 192.168.37.20
```

```
Entering character mode  
Escape character is '^]'.  
  
Debian GNU/Linux 5.0  
debian login:
```

### [Arguments]

IP\_address

Specify the IP address of the host to connect to via Telnet.

port

Specify the TCP port number to be used for Telnet connection.

Valid values are from 1 to 65535.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : telnet <IP\_address> [<port>]

- There is a missing argument.

invalid IP\_address

- The specified IP address format or value is invalid.

port is invalid (Valid form 1 to 65535)

- The specified TCP port number is invalid.

telnet: can't connect to remote host. (<IP\_address>): No route to host.

- Cannot connect to the remote host of the specified IP address.



## arp

### [Format]

```
arp -a
arp <IP_address>
arp -d <IP_address>
```

### [Description]

This command displays or deletes the contents of the ARP table.  
This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> arp -a
IP address      MAC address      type
-----
192.168.40.13   00-00-91-01-23-45
PureFlow(A)>

PureFlow(A)> arp -d 192.168.40.13
PureFlow(A)>
```

The following describes the items displayed when the `-a` option is specified.

- IP address  
Displays the IPv4 address of the entry registered in the ARP table.
- MAC address  
Displays the MAC address of the entry registered in the ARP table.
- type  
Displays the type of the entry registered in the ARP table.  
Entry type does not display is the entry learned by ARP reply.
 

permanent	Static Entries
publish	Entries that respond to ARP requests

### [Arguments]

`-a`  
Displays entries registered in the ARP table.

`-d`  
Deletes the specified entry from the ARP table.

`IP_address`  
Specify the IPv4 address of the entry that you want to display or delete.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : arp -a

Usage : arp <IP\_address>

Usage : arp -d <IP\_address>

- There is a missing argument.

invalid IP\_address

- The specified IP address format or value is invalid.

entry not found

- The ARP entry corresponding to the specified IP address does not exist.

Route doesn't exist to this IP Address.

- There is no accessible route to the specified IP address.

## delete ndp neighbor

### [Format]

```
delete ndp neighbor <IP_address>
```

### [Description]

This command deletes an entry of the NDP (Neighbor Discovery Protocol) cache table. When the command is executed, the specified entry is deleted after the `failed` status is set. This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> delete ndp neighbor 2001:db8::1  
PureFlow(A)>
```

### [Arguments]

`IP_address`  
Specify the IPv6 address of the entry to delete.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing  
Usage : delete ndp neighbor <IP\_address>

- There is a missing argument.

invalid IP\_address

- The specified IP address format or value is invalid.

entry not found

- The NDP entry corresponding to the specified IP address does not exist.

## show ndp neighbor

### [Format]

```
show ndp neighbor
```

### [Description]

This command displays the contents of the NDP (Neighbor Discovery Protocol) cache table. This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow> show ndp neighbor
IP address                               MAC address                               type
-----
2001:db8::1                               00-00-91-01-11-23                         reachable
fe80::d070:4751:3d86:8f06                 00-00-91-01-23-45                         stale
PureFlow>
```

The displayed items and their meanings are as follows:

- IP address  
Shows the IPv6 address of the NDP cache entry.
- MAC address  
Shows the MAC address of the NDP cache entry.
- type  
Shows the status of the NDP cache entry.

incomplete	Entry in address resolution processing
reachable	Valid and reachable entry
stale	Valid entry but reachability is unknown
delay	Valid entry but reachability is being confirmed
probe	Invalid entry with no response in delay state, and being confirmed by ND
failed	Invalid entry whose address could not resolved
noarp	Valid entry that does not require confirmation
permanent	Entry that only the administrator can delete, like noarp

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

## ?/help

### [Format]

```
?
help
```

### [Description]

This command displays the top-level commands available in the current mode. This command can be executed in the Normal and Administrator modes.

### [Display]

```
PureFlow(A)> help
Command          Description
-----
?                Lists the top-level commands available
add              Adds some parameters, use 'add ?' for more
                information
arp              Shows address resolution table and control
clear            Clears system statistics, use 'clear ?' for
                more information
delete           Deletes some parameters, use 'delete ?' for
                more information
download         Transfers programs or data from a host system,
                use 'download ?' for more information
exit             Exits the UIF session
help             Performs the same function as '?' command
init            Initializes system parameters, use 'init ?'
                for more information
logout           Performs the same function as 'exit' command
monitor          Monitor status, use 'monitor ?' for more
                information
normal           Returns to Normal
ping             Diagnoses reachability of network
quit            Performs the same function as 'exit' command
reboot           Performs the system hardware reset
save            Saves the system data into the flash memory,
                use 'save ?' for more information
set              Sets system parameters, use 'set ?' for more
                information
show            Shows status, use 'show ?'for more
                information
unset           Clears the system parameters, use 'unset ?' for
                more details
upload           Transfers programs or data to a host system,
                use 'upload ?' for more information
update          Updates some parameters, use 'update ?' for more
                information
PureFlow(A)>
```

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

## **exit/logout/quit**

### **[Format]**

```
exit  
logout  
quit
```

### **[Description]**

This command logs you out of the current session and disconnects the connection. This command can be executed in the Normal and Administrator modes.

### **[Display]**

```
PureFlow> logout  
PureFlow login:  
  
PureFlow(A)> exit  
PureFlow login:
```

### **[Arguments]**

None

### **[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

---

## normal

**[Format]**

normal

**[Description]**

This command returns the system to Normal mode.

When the mode is switched to Normal, the prompt for Normal mode appears.

This command can be executed only in Administrator mode.

**[Display]**

```
PureFlow(A) > normal  
PureFlow>
```

**[Arguments]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

## admin

### [Format]

admin

### [Description]

This command switches the system to Administrator mode.

While a password is being entered, there is no echo back and the cursor does not move.

When the mode is switched to Administrator, the prompt for Administrator mode appears.

This command can be executed only in Normal mode.

### [Display]

#### (When the wrong password was entered)

```
PureFlow> admin
Enter the Admin Password:
In-Correct Admin Password
```

#### (When the correct password was entered)

```
PureFlow> admin
Enter the Admin Password:
PureFlow(A) >
```

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

In-Correct Admin Password

- The password is invalid.



---

## show history

**[Format]**

```
show history
```

**[Description]**

This command displays the input history of up to 15 commands ranging from old ones to the latest that can be recalled using the Command Recall feature.

For a command that exceeds 76 characters, only the first 76 characters are displayed.

This command can be executed in the Normal and Administrator modes.

**[Display]**

```
PureFlow(A)> show history
save config
show config running
init config
PureFlow(A)>
```

**[Arguments]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

## upload tftp file

### [Format]

```
upload tftp file <IP_address> {cf | usb} <src_file> <dst_file>
```

### [Description]

This command uploads a file on a CF card or USB flash drive to the TFTP server over the network. CF cards in FAT16/FAT32 format are supported for the CF card or USB flash drive. For details about the CF cards that can be used, see the "Operation Manual (NF7101-W006E)". Using other CF cards will cause failure. For details about USB flash drives whose performance is confirmed by Anritsu, see the "Operation Manual (NF7101-W006E)".

Do not remove the CF card or USB flash drive until command execution is complete. Otherwise, the contents of the device may be destroyed.

For `src_file`, specify the name of the file on the USB flash drive including the path. The file name including the path must be within 64 characters.

For `dst_file`, specify the name of the file on the TFTP server including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

Use the TFTP server which corresponds to the `tsize` options specified to RFC 2349, because the file size of basic software is more than 32k byte.

### [Display]

```
PureFlow(A)> upload tftp file 192.168.40.10 cf config.txt config.bak
Upload "config.bak" to 192.168.40.10 (y/n)? y
Loading .....
Done.
PureFlow(A)>
```

### [Arguments]

`IP_address`

Specify the IP address of the TFTP server.

`cf | usb`

Specify the location from which to upload the file.

`src_file`

Specify the name of the file to upload.

The file name including the path must be within 64 characters.

`dst_file`

Specify the name of the file on the TFTP server.

The file name including the path must be within 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : `upload tftp file <IP_address> {cf | usb} <src_file> <dst_file>`

- There is a missing argument.

invalid IP\_address

- The specified IP address format or value is invalid.

file length is valid from 1 to 64

- The length of the name of the file to upload including the path should be 1 to 64 characters.

"file": file not found

- The specified file does not exist.

card is not mounted

- No CF card is inserted.

USB is not mounted

- No USB flash drive is inserted.

card access error

- A CF card access error occurred.

USB memory access error

- A USB flash drive access error occurred.

file length is valid from 1 to 64

- The length of the file name including the path on the TFTP server should be 1 to 64 characters.

time-out error occurred

- A timeout occurred.

failure on transmission packet to the server

- The connection to the TFTP server failed.
- Writing is forbidden on the TFTP server.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## upload ftp file

### [Format]

```
upload ftp file <IP_address> {cf | usb} <src_file> <dst_file>
```

### [Description]

This command uploads a file on a CF card or USB flash drive to the FTP server over the network. CF cards in FAT16/FAT32 format are supported. for the CF card or USB flash drive. For details about the CF cards that can be used, see the “Operation Manual (NF7101-W006E)”. Using other CF cards will cause failure. For details about USB flash drives whose performance is confirmed by Anritsu, see the “Operation Manual (NF7101-W006E)”.

Do not remove the CF card or USB flash drive until command execution is complete. Otherwise, the contents of the device may be destroyed.

For `src_file`, specify the name of the file on the USB flash drive including the path. The file name including the path must be within 64 characters.

For `dst_file`, specify the name of the file on the FTP server including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

```
./\ [ ] : ; | = , and space
```

When the command is executed, a message prompting you to enter your user name and password is shown. Enter the user name and password registered with the FTP server. The user name and password must be 1 to 128 characters. The following ASCII characters can be used for the user name and password:

```
1234567890  
abcdefghijklmnopqrstuvwxyz  
ABCDEFGHIJKLMNOPQRSTUVWXYZ  
!#$%&'()=~-^|¥@`[]{}:*+_/.<>
```

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> upload ftp file 192.168.40.10 cf config.txt config.bak  
Name:ftpuser  
Password:  
Upload "config.bak" to 192.168.40.10 (y/n)? y  
Loading .....  
Done.  
PureFlow(A)>
```

### [Arguments]

`IP_address`

Specify the IP address of the FTP server.

`cf | usb`

Specify the location from which to upload the file.

`src_file`

Specify the name of the file to upload.

The file name including the path must be within 64 characters.

`dst_file`

Specify the name of the file on the FTP server.

The file name including the path must be within 64 characters.

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage: upload ftp file <IP\_address> {cf | usb} <src\_file> <dst\_file>

- There is a missing argument.

Name length is valid from 1 to 128

- The length of the user name should be 1 to 128 characters.

password length is valid from 1 to 128

- The length of the password should be 1 to 128 characters.

invalid input character

- The character(s) of the user name is invalid.
- The character(s) of the password is invalid.

invalid IP\_address

- The specified IP address format or value is invalid.

file length is valid from 1 to 64

- The length of the name of the file to upload including the path should be 1 to 64 characters.

"file": file not found

- The specified file does not exist.

card is not mounted

- No CF card is inserted.

USB memory is not mounted

- No USB flash drive is inserted.

card access error

- A CF card access error occurred.

USB memory access error

- A USB flash drive access error occurred.

file length is valid from 1 to 64

- The length of the file name including the path on the FTP server should be 1 to 64 characters.

time-out error occurred

- A timeout occurred.

failure on transmission packet to the server

- The connection to the FTP server failed.
- Writing is forbidden on the TFTP server.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## operate cf remove

### [Format]

```
operate cf remove <file>
```

### [Description]

This command deletes a file on the CF card inserted in the CF card slot. Directories cannot be deleted since they cannot be specified.

CF cards in FAT16/FAT32 format are supported. For details about the CF cards that can be used, see the "Operation Manual (NF7101-W006E)". Using other CF cards will cause failure.

Do not remove the card until command execution is complete. Otherwise, the contents of the card may be destroyed.

For *file*, specify a file name including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. " / \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> operate cf remove config.txt
Remove "config.txt" to Flash Memory Card (y/n)? y
Done.
PureFlow(A)>
```

### [Arguments]

*file*

Specify the name of the file to delete.

The file name including the path must be within 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : operate cf remove <file>

- There is a missing argument.

"file": file not found

- The specified file does not exist. Directories cannot be specified.

card is not mounted

- No card is inserted.

card access error

- A card access error occurred.

file length is valid from 1 to 64

- The length of the file name including the path should be 1 to 64 characters.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## operate cf rename

### [Format]

```
operate cf rename <file> <new_name>
```

### [Description]

This command renames a file on the CF card inserted in the CF card slot. Directories cannot be renamed since they cannot be specified.

CF cards in FAT16/FAT32 format are supported. For details about the CF cards that can be used, see the "Operation Manual (NF7101-W006E)". Using other CF cards will cause failure.

Do not remove the card until command execution is complete. Otherwise, the contents of the card may be destroyed.

For `file`, specify a file name including the path.

For `new_name`, specify a file name excluding the path. The file name must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> operate cf rename config.txt config.bak
PureFlow(A)>
```

### [Arguments]

`file`

Specify a file on the CF card using up to 64 characters.

`new_name`

Specify the new name of the file.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : operate cf rename <file> <new\_name>

- There is a missing argument.

"file": file not found

- The specified file does not exist. Directories cannot be specified.

"new\_name": file or path already exists

- A file or directory with the same name exists.

card is not mounted

- No card is inserted.

card access error

- A card access error occurred.

file length is valid from 1 to 64

- The length of the file name should be from 1 to 64 characters.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.



## operate cf copy

### [Format]

```
operate cf copy <src_file> <dst_file_or_path>
```

### [Description]

This command copies a file on the CF card inserted in the CF card slot. Directories cannot be copied since they cannot be specified. Can not copy to the directory that does not exist. If you want to create a new directory, use the PC to create a directory.

CF cards in FAT16/FAT32 format are supported. For details about the CF cards that can be used, see the "Operation Manual (NF7101-W006E)". Using other CF cards will cause failure.

Do not remove the card until command execution is complete. Otherwise, the contents of the card may be destroyed.

For `src_file`, specify the name of the copy source file including the path.

For `dst_file_or_path`, specify the name of the destination file or directory including the path. When a directory is specified, the file is copied under that directory.

The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> operate cf copy config.txt temp  
PureFlow(A)>
```

### [Arguments]

`src_file`

Specify a file on the CF card using up to 64 characters.

`dst_file_or_path`

Specify the name of the file or directory to which the file is to be copied using up to 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : operate cf copy <src\_file> <dst\_file\_or\_path>

- There is a missing argument.

"src\_file": file not found

- The specified file does not exist. Directories cannot be specified.

"dst\_file\_or\_path": file already exists

- A file with the same name exists.

card is not mounted

- No card is inserted.

card access error

- A card access error occurred.

file length is valid from 1 to 64

- The length of the file name should be from 1 to 64 characters.

invalid file or path.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## operate cf list

### [Format]

```
operate cf list [<path>]
```

### [Description]

This command lists the files in the specified directory on the CF card inserted in the CF card slot. The displayed items are file, file size, and directory name. If a file name contains any double-byte characters or one-byte katakana characters, it is shown as ????????.

CF cards in FAT16/FAT32 format are supported. For details about the CF cards that can be used, see the “Operation Manual (NF7101-W006E)”. Using other CF cards will cause failure.

Do not remove the card until command execution is complete. Otherwise, the contents of the card may be destroyed.

Specify the path in *path*. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory names. The following characters cannot be used for directory names:

. "/ \ [ ] : ; | = , and space

This command can be executed in Administrator mode.

### [Display]

```
PureFlow(A)> operate cf list /
config.txt          1248
test.dat           45012
temp                <DIR>
?????????.txt      8192
PureFlow(A)>
```

The displayed items and their meanings are as follows:

- config.txt                    1248  
Indicates that there is a file named `config.txt` whose size is 1248 bytes.
- temp                            <DIR>  
Indicates that there is a directory named `temp`.
- ??????????.txt                8192  
Indicates that there is a file whose name contains double-byte characters or one-byte katakana characters.

### [Arguments]

*path*

Specify the directory on the CF card using up to 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : operate cf list [<path>]

- There is a missing argument.

"path": path not found

- The specified directory does not exist.

card is not mounted

- No card is inserted.

card access error

- A card access error occurred.

path length is valid from 1 to 64

- The length of the path name should be from 1 to 64 characters.

invalid path.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the directory name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## operate usb remove

### [Format]

```
operate usb remove <file>
```

### [Description]

This command deletes a file on the USB flash drive inserted in the USB port. Directories cannot be deleted since they cannot be specified.

FAT16/FAT32 format are supported for USB flash drives. For details about USB flash drives whose performance is confirmed by Anritsu, see the "Operation Manual (NF7101-W006E)".

Do not remove the USB flash drive until command execution is complete. Otherwise, the contents of the device may be destroyed.

For *file*, specify a file name including the path. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. " / \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> operate usb remove config.txt
Remove "config.txt" to USB Memory (y/n)? y
Done.
PureFlow(A)>
```

### [Arguments]

*file*

Specify the name of the file to delete.

The file name including the path must be within 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : operate usb remove <file>

- There is a missing argument.

"file": file not found

- The specified file does not exist. Directories cannot be specified.

USB memory is not mounted

- No USB flash drive is inserted.

USB memory access error

- A USB flash drive access error occurred.

file length is valid from 1 to 64

- The length of the file name including the path should be 1 to 64 characters.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## operate usb rename

### [Format]

```
operate usb rename <file> <new_name>
```

### [Description]

This command renames a file on the USB flash drive inserted in the USB port. Directories cannot be renamed since they cannot be specified.

FAT16/FAT32 format are supported for USB flash drives. For details about USB flash drives whose performance is confirmed by Anritsu, see the "Operation Manual (NF7101-W006E)".

Do not remove the USB flash drive until command execution is complete. Otherwise, the contents of the device may be destroyed.

For `file`, specify a file name including the path.

For `new_name`, specify a file name excluding the path. The file name must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> operate usb rename config.txt config.bak  
PureFlow(A)>
```

### [Arguments]

`file`

Specify a file on the USB flash drive using up to 64 characters.

`new_name`

Specify the new name of the file.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

Usage : operate usb rename <file> <new\_name>

- There is a missing argument.

"file": file not found

- The specified file does not exist. Directories cannot be specified.

"new\_name": file or path already exists

- A file or directory with the same name exists.

USB memory is not mounted

- No USB flash drive is inserted.

USB memory access error

- A USB flash drive access error occurred.

file length is valid from 1 to 64

- The length of the file name should be from 1 to 64 characters.

invalid file.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## operate usb copy

### [Format]

```
operate usb copy <src_file> <dst_file_or_path>
```

### [Description]

This command copies a file on the USB flash drive inserted in the USB port. Directories cannot be copied since they cannot be specified. Can not copy to the directory that does not exist. If you want to create a new directory, use the PC to create a directory.

FAT16/FAT32 format are supported for USB flash drives. For details about USB flash drives whose performance is confirmed by Anritsu, see the "Operation Manual (NF7101-W006E)".

Do not remove the USB flash drive until command execution is complete. Otherwise, the contents of the device may be destroyed.

For `src_file`, specify the name of the copy source file including the path.

For `dst_file_or_path`, specify the name of the destination file or directory including the path. If a directory is specified, files are copied under that directory.

The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory and file names. The following characters cannot be used for directory and file names:

. "/ \ [ ] : ; | = , and space

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> operate usb copy config.txt temp  
PureFlow(A)>
```

### [Arguments]

`src_file`

Specify a file on the USB flash drive using up to 64 characters.

`dst_file_or_path`

Specify the name of the file or directory to which the file is to be copied using up to 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

An argument was missing

```
Usage : operate usb copy <src_file> <dst_file_or_path>
```

- There is a missing argument.

"src\_file": file not found

- The specified file does not exist. Directories cannot be specified.

"dst\_file\_or\_path": file already exists

- A file with the same name exists.

USB memory is not mounted

- No USB flash drive is inserted.



---

USB memory access error

- A USB flash drive access error occurred.

file length is valid from 1 to 64

- The length of the file name should be from 1 to 64 characters.

invalid file or path.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the file name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## operate usb list

### [Format]

```
operate usb list [<path>]
```

### [Description]

This command lists the files in the specified directory on the USB flash drive inserted in the USB port. The displayed items are file, file size, and directory name. If a file name contains any double-byte characters or one-byte katakana characters, it is shown as ????????.

FAT16/FAT32 format are supported for USB flash drives. For details about USB flash drives whose performance is confirmed by Anritsu, see the "Operation Manual (NF7101-W006E)".

Do not remove the USB flash drive until command execution is complete. Otherwise, the contents of the device may be destroyed.

Specify the path in *path*. The file name including the path must be within 64 characters.

Use an alphanumeric character for the first character of directory names. The following characters cannot be used for directory names:

. "/ \ [ ] : ; | = , and space

This command can be executed in Administrator mode.

### [Display]

```
PureFlow(A)> operate usb list /
config.txt          1248
test.dat           45012
temp                <DIR>
?????????.txt      8192
PureFlow(A)>
```

The displayed items and their meanings are as follows:

- config.txt 1248  
Indicates that there is a file named `config.txt` whose size is 1248 bytes.
- temp <DIR>  
Indicates that there is a directory named `temp`.
- ??????????.txt 8192  
Indicates that there is a file whose name contains double-byte characters or one-byte katakana characters.

### [Arguments]

*path*

Specify the directory on the USB flash drive using up to 64 characters.

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

Command making ambiguity

Usage : operate usb list [<path>]

- There is a missing argument.

"path": path not found

- The specified directory does not exist.

---

USB memory is not mounted

- No USB flash drive is inserted.

USB memory access error

- A USB flash drive access error occurred.

path length is valid from 1 to 64

- The length of the path name should be from 1 to 64 characters.

invalid path.

Below characters cannot be used in the file/directory name.

. " / \ [ ] : ; | = , and white space

- The format or character(s) of the directory name is invalid.

system busy: another conflicting command is in progress

- Media access conflicts with other commands. Try again after completing the other commands.

## set option

### [Format]

```
set option
```

### [Description]

This command sets the license key that enables options.

The license key and system serial number are checked. If they do not match, authentication fails and the options cannot be enabled.

When entering a license key, inputting a hyphen every four characters is optional. Both input formats are recognized as the same license key.

This command can be executed only in Administrator mode.

### [Display]

```
PureFlow(A)> set option
```

```
Enter the option key:Xb3e-gXKs-6BBt-dXhC
```

```
Authentication succeed.
```

```
      Making be available : License Key NF7101-L004A (Extended Bandwidth 2Gbps)
```

```
Updation done.
```

```
Enter update scenario command to change port bandwidth.
```

```
PureFlow(A)>
```

### [Arguments]

None

### [Errors]

Invalid input at Marker

- There is an unnecessary argument.

---

## show option

**[Format]**

```
show option
```

**[Description]**

This command displays the options currently enabled in the system.  
This command can be executed in the Normal and Administrator modes.

**[Display]**

```
PureFlow(A) > show option
License Key NF7101-L004A available (2G Bandwidth License)
License Key NF7101-L004B available (4G Bandwidth License)
License Key NF7101-L004C available (10G Bandwidth License)
License Key NF7101-L004D available (2G to 4G Bandwidth License)
License Key NF7101-L004E available (2G to 10G Bandwidth License)
License Key NF7101-L004F available (4G to 10G Bandwidth License)
License Key NF7101-L005A available (10k Scenario License)
License Key NF7101-L005B available (40k Scenario License)
License Key NF7101-L005C available (10k to 40k Scenario License)
PureFlow(A) >
```

**[Arguments]**

None

**[Errors]**

Invalid input at Marker

- There is an unnecessary argument.

**Anritsu**  
ANRITSU CORPORATION

Document No.:  
NF7101-W007E  
Printed in Japan