




**SEW**  
**EURODRIVE**

# Operating Instructions

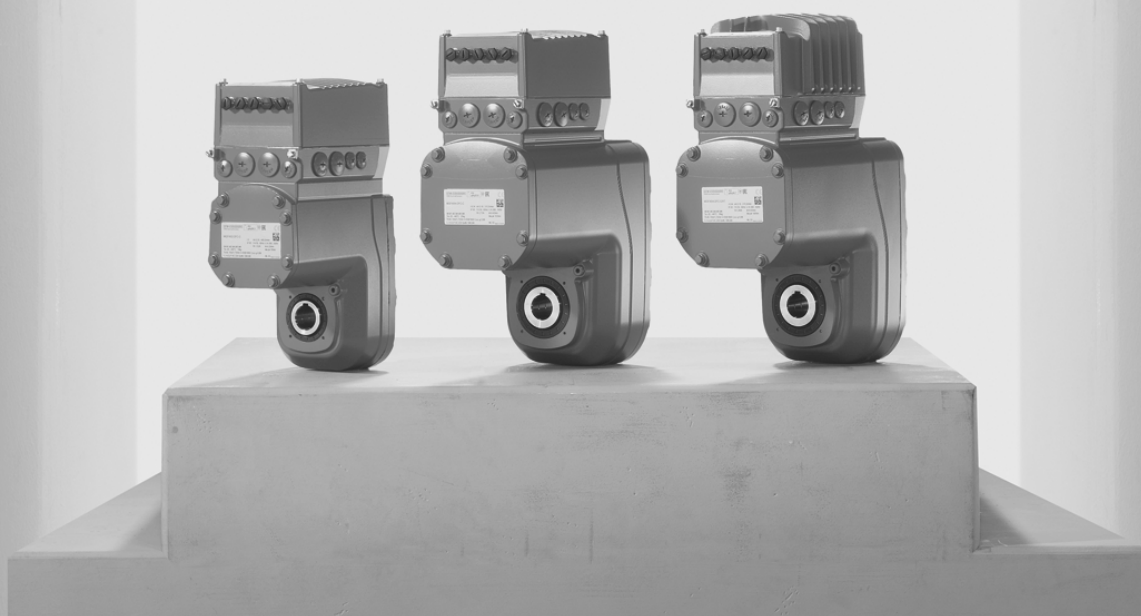

Mechatronic Drive Unit

**MOVIGEAR® performance**

MGF..-DFC-C (PROFINET IO, EtherNet/IP™, Modbus TCP)



## Table of contents

<b>1</b>	<b>General information.....</b>	<b>6</b>
1.1	About this documentation .....	6
1.2	Other applicable documentation .....	6
1.3	Structure of the safety notes .....	6
1.4	Rights to claim under limited warranty .....	7
1.5	Product names and trademarks .....	7
1.6	Copyright notice .....	8
<b>2</b>	<b>MOVIGEAR® performance safety notes.....</b>	<b>9</b>
2.1	Preliminary information .....	9
2.2	Duties of the user .....	9
2.3	Target group .....	9
2.4	Designated use .....	10
2.5	Functional safety technology .....	10
2.6	Transportation .....	11
2.7	Installation/assembly .....	12
2.8	Protective separation .....	12
2.9	Electrical installation .....	12
2.10	Startup/operation .....	13
2.11	Magnetic fields .....	13
<b>3</b>	<b>Unit structure .....</b>	<b>15</b>
3.1	Drive unit MOVIGEAR® performance .....	15
3.2	Shaft designs .....	16
3.3	Housing mounting .....	17
3.4	Threads for protective cover .....	19
3.5	Cable entry position .....	20
3.6	Nameplate position .....	21
3.7	Example nameplate and type designation of the drive unit .....	22
3.8	Examples for the optional nameplate "Electrical regulations UL/CE" (in preparation)..	24
3.9	Examples for the optional nameplate "Plug connector positions" .....	24
3.10	Electronics .....	25
3.11	Example nameplate and type designation of electronics .....	27
3.12	Example nameplate and type designation of connection unit .....	29
<b>4</b>	<b>Mechanical installation .....</b>	<b>31</b>
4.1	Installation notes .....	31
4.2	Required tools and resources .....	32
4.3	Installation requirements .....	32
4.4	Setting up the drive unit .....	33
4.5	Shaft-mounted gear unit with keyway .....	40
4.6	Shaft-mounted gear unit with TorqLOC® (customer shaft <b>without</b> contact shoulder) .	44
4.7	Shaft-mounted gear unit with TorqLOC® (customer shaft <b>with</b> contact shoulder) .....	52
4.8	Shaft-mounted gear unit with TorqLOC® – disassembly, cleaning, lubrication .....	57
4.9	Installing the protective cover .....	59
4.10	Torque arm .....	61

4.11	Tightening torques .....	63
<b>5</b>	<b>Electrical installation.....</b>	<b>66</b>
5.1	Installation planning taking EMC aspects into account.....	66
5.2	Equipotential bonding at the connection box .....	68
5.3	Installation instructions.....	68
5.4	Installation topology (example: standard installation) .....	74
5.5	Terminal assignment.....	75
5.6	Connection of the drive unit MOVIGEAR® performance .....	78
5.7	Cable routing and cable shielding.....	79
5.8	EMC cable glands.....	82
5.9	Plug connectors .....	83
5.10	Optional plug connector assignment.....	93
5.11	Plug connector assignment at the DFC.. electronics cover .....	114
5.12	PC connection.....	119
<b>6</b>	<b>Startup .....</b>	<b>126</b>
6.1	Startup notes.....	126
6.2	Startup requirements .....	127
6.3	Description of the DIP switches .....	128
6.4	Startup procedure .....	131
6.5	Process data assignment – MOVIKIT® function module "5PD Velocity" .....	134
6.6	Disabling DynaStop® for startup purposes .....	135
<b>7</b>	<b>Operation.....</b>	<b>137</b>
7.1	Manual operation with MOVISUITE® .....	137
7.2	Drive unit behavior in case of a voltage failure .....	139
7.3	DynaStop® .....	140
7.4	Deactivating DynaStop® .....	141
7.5	DynaStop® in conjunction with STO .....	142
<b>8</b>	<b>Service.....</b>	<b>147</b>
8.1	Malfunctions of the mechanical drive.....	147
8.2	Evaluating fault messages.....	148
8.3	Switch-off responses.....	149
8.4	Fault messages with parameterizable response.....	149
8.5	Resetting fault messages.....	152
8.6	Description of status and operating displays .....	153
8.7	Fault table .....	159
8.8	Device replacement .....	214
8.9	SEW-EURODRIVE Service .....	217
8.10	Shutdown .....	217
8.11	Storage .....	217
8.12	Extended storage.....	218
8.13	Waste disposal.....	220
<b>9</b>	<b>Inspection and maintenance .....</b>	<b>221</b>
9.1	Determining the operating hours.....	221
9.2	Inspection and maintenance intervals.....	222

9.3	Lubricant change intervals .....	224
9.4	Inspection and maintenance work .....	225
<b>10</b>	<b>Configuration .....</b>	<b>233</b>
10.1	Preliminary information .....	233
10.2	Drive selection data .....	233
10.3	MOVIGEAR® performance .....	235
10.4	DynaStop® – The electrodynamic deceleration function .....	243
<b>11</b>	<b>Technical data and dimension sheets .....</b>	<b>244</b>
11.1	Conformity.....	244
11.2	General information .....	245
11.3	Technical data.....	246
11.4	Braking resistors .....	252
11.5	Mounting kit for braking resistor BW...-.../..C .....	260
11.6	DynaStop® torques .....	264
11.7	Torque curves .....	268
11.8	Surface protection.....	276
11.9	Screw fittings.....	278
11.10	Mounting positions .....	280
11.11	Lubricants .....	282
11.12	Design notes for gear units with hollow shaft and key .....	289
11.13	Drive unit with hollow shafts.....	295
11.14	Dimension drawings of the drive unit .....	296
11.15	Dimension drawings of plug connectors .....	307
<b>12</b>	<b>Functional safety .....</b>	<b>309</b>
12.1	General information .....	309
12.2	Integrated Safety Technology .....	309
12.3	Safety Conditions.....	313
12.4	Connections variants .....	318
12.5	Safety characteristics.....	331
<b>13</b>	<b>Address list .....</b>	<b>332</b>
	<b>Index .....</b>	<b>343</b>

## 1 General information

### 1.1 About this documentation

**The current version of the documentation is the original.**

This documentation is an integral part of the product. The documentation is intended for all employees who perform work on the product.

Make sure this documentation is accessible and legible. Ensure that persons responsible for the systems and their operation as well as persons who work on the product independently have read through the documentation carefully and understood it. If you are unclear about any of the information in this documentation, or if you require further information, contact SEW-EURODRIVE.

### 1.2 Other applicable documentation

Observe the corresponding documentation for all further components.

### 1.3 Structure of the safety notes

#### 1.3.1 Meaning of signal words

The following table shows the grading and meaning of the signal words for safety notes.

Signal word	Meaning	Consequences if disregarded
<b>▲ DANGER</b>	Imminent hazard	Severe or fatal injuries
<b>▲ WARNING</b>	Possible dangerous situation	Severe or fatal injuries
<b>▲ CAUTION</b>	Possible dangerous situation	Minor injuries
<b>NOTICE</b>	Possible damage to property	Damage to the product or its environment
<b>INFORMATION</b>	Useful information or tip: Simplifies handling of the product.	

#### 1.3.2 Structure of section-related safety notes

Section-related safety notes do not apply to a specific action but to several actions pertaining to one subject. The hazard symbols used either indicate a general hazard or a specific hazard.

This is the formal structure of a safety note for a specific section:



##### **SIGNAL WORD**







Type and source of hazard.

Possible consequence(s) if disregarded.

- Measure(s) to prevent the hazard.

## Meaning of the hazard symbols

The hazard symbols in the safety notes have the following meaning:

Hazard symbol	Meaning
	General hazard
	Warning of dangerous electrical voltage
	Warning of hot surfaces
	Warning of risk of crushing
	Warning about suspended load
	Warning of automatic restart

### 1.3.3 Structure of embedded safety notes

Embedded safety notes are directly integrated into the instructions just before the description of the dangerous action.

This is the formal structure of an embedded safety note:

**▲ SIGNAL WORD** Type and source of hazard. Possible consequence(s) if disregarded. Measure(s) to prevent the hazard.

## 1.4 Rights to claim under limited warranty

Read the information in this documentation. This is essential for fault-free operation and fulfillment of any rights to claim under limited warranty. Read the documentation before you start working with the product.

## 1.5 Product names and trademarks

The brands and product names in this documentation are trademarks or registered trademarks of their respective titleholders.

**1.6 Copyright notice**

© 2018 SEW-EURODRIVE. All rights reserved. Unauthorized reproduction, modification, distribution or any other use of the whole or any part of this documentation is strictly prohibited.



## 2 MOVIGEAR® performance safety notes

### 2.1 Preliminary information

The following general safety notes serve the purpose of preventing injury to persons and damage to property. They primarily apply to the use of products described in this documentation. If you use additional components, also observe the relevant warning and safety notes.

### 2.2 Duties of the user

As the user, you must ensure that the basic safety notes are observed and complied with. Make sure that persons responsible for the machinery and its operation as well as persons who work on the device independently have read through the documentation carefully and understood it.

As the user, you must ensure that all of the work listed in the following is carried out only by qualified specialists:

- Setup and installation
- Installation and connection
- Startup
- Maintenance and repairs
- Shutdown
- Disassembly

Ensure that the persons who work on the product pay attention to the following regulations, conditions, documentation, and information:

- National and regional safety and accident prevention regulations
- Warning and safety signs on the product
- All other relevant project planning documents, installation and startup instructions, and wiring diagrams
- Do not assemble, install or operate damaged products
- All system-specific specifications and conditions

Ensure that systems in which the product is installed are equipped with additional monitoring and protection devices. Observe the applicable safety regulations and legislation governing technical work equipment and accident prevention regulations.

### 2.3 Target group

Specialist for mechanical work

Any mechanical work may only be performed by adequately qualified specialists. Specialists in the context of this documentation are persons familiar with the design, mechanical installation, troubleshooting, and maintenance of the product who possess the following qualifications:

- Qualification in the mechanical area in accordance with the national regulations
- Familiarity with this documentation

Specialist for electrotechnical work	Any electrotechnical work may only be performed by electrically skilled persons with a suitable education. Electrically skilled persons in the context of this documentation are persons familiar with electrical installation, startup, troubleshooting, and maintenance of the product who possess the following qualifications: <ul style="list-style-type: none"> <li>• Qualification in the electrotechnical area in accordance with the national regulations</li> <li>• Familiarity with this documentation</li> </ul>
Additional qualification	In addition to that, these persons must be familiar with the valid safety regulations and laws, as well as with the requirements of the standards, directives, and laws specified in this documentation. The persons must have the express authorization of the company to operate, program, parameterize, label, and ground units, systems, and circuits in accordance with the standards of safety technology.
Instructed persons	All work in the areas of transportation, storage, operation and waste disposal must be carried out by persons who are trained appropriately. The purpose of the instruction is that the persons are capable of performing the required tasks and work steps in a safe and correct manner.

## 2.4 Designated use

The product is intended for installation in electrical plants or machines.

In case of installation in electrical systems or machines, startup of the product is prohibited until it is determined that the machine meets the requirements stipulated in the local laws and directives. For Europe, Machinery Directive 2006/42/EC as well as the EMC Directive 2014/30/EU apply. Observe EN 60204-1 (Safety of machinery - electrical equipment of machines). The product meets the requirements stipulated in the Low Voltage Directive 2014/35/EU.

The standards given in the declaration of conformity apply to the product.

Technical data and information on the connection conditions are provided on the nameplate and in chapter "Technical data" in the documentation. Always comply with the data and conditions.

Unintended or improper use of the product may result in severe injury to persons and damage to property.

Do not use the product as a climbing aid.

### 2.4.1 Lifting applications

The product may not be used for lifting applications.

For applications with inclining tracks, you must only use the product after a risk assessment is performed by the user. For further information, consult the information in the documentation.

## 2.5 Functional safety technology

The product must not perform any safety functions without a higher-level safety system, unless explicitly allowed by the documentation.

## 2.6 Transportation

Inspect the shipment for damage as soon as you receive the delivery. Inform the shipping company immediately about any damage. If the product is damaged, it must not be assembled, installed or started up.


Observe the following notes when transporting the device:

- Ensure that the product is not subject to mechanical impact.
- Do not attach any additional loads.

If necessary, use suitable, sufficiently dimensioned handling equipment.

Observe the information on climatic conditions in chapter "Technical data" of the documentation.

The following figure shows the position of the lifting eye.

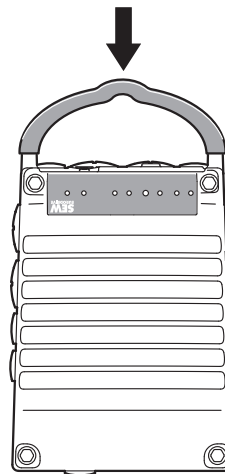

9007224557044491

Remove the lifting eye before connecting the PE cable, see chapter "Electrical installation" > "Installation instructions".

Store the lifting eyes for future service work, see chapter "Service" > "Unit replacement".

## 2.7 Installation/assembly

Ensure that the product is installed and cooled according to the regulations in the documentation.

Protect the product from strong mechanical strain. The product and its mounting parts must never protrude into the path of persons or vehicles. Ensure that components are not deformed and insulation spaces are not changed, particularly during transportation and handling. Electric components must not be mechanically damaged or destroyed.

Observe the notes in chapter Mechanical installation in the documentation.

### 2.7.1 Restrictions of use

The following applications are prohibited unless the device is explicitly designed for such use:

- Use in potentially explosive atmospheres
- Use in areas exposed to harmful oils, acids, gases, vapors, dust, and radiation
- Operation in applications with impermissibly high mechanical vibration and shock loads in excess of the regulations stipulated in EN 61800-5-1
- Use at an elevation of more than 3800 m above sea level

The product can be used at altitudes above 1000 m above sea level up to 3800 m above sea level under the following conditions:

- The reduction of the nominal output current and/or the line voltage is considered according to the data in chapter Technical data in the documentation.
- Above 2000 m above sea level, the air and creeping distances are only sufficient for overvoltage class II according to EN 60664. At altitudes above 2000 m above sea level limiting measures must be taken, which reduce the line side overvoltage from category III to category II for the entire system.
- If a protective electrical separation (in accordance with EN 61800-5-1 and EN 60204-1) is required, then implement this outside the product at altitudes of more than 2000 m above sea level

## 2.8 Protective separation

The product meets all requirements for protective separation of power and electronics connections in accordance with EN 61800-5-1. To ensure protective separation, all connected circuits must also meet the requirements for protective separation.

## 2.9 Electrical installation

Ensure that all of the required covers are correctly attached after carrying out the electrical installation.

Make sure that preventive measures and protection devices comply with the applicable regulations (e.g. EN 60204-1 or EN 61800-5-1).

### 2.9.1 Stationary application

Necessary preventive measure for the product is:

Type of energy transfer	Preventive measure
Direct power supply	<ul style="list-style-type: none"> <li>• Ground connection</li> </ul>

### 2.9.2 Regenerative operation

The drive is operated as a generator due to the kinetic energy of the system/machine. Before opening the connection box, secure the output shaft against rotation.

## 2.10 Startup/operation

Observe the safety notes in the chapters Startup and Operation in this documentation. Make sure the connection boxes are closed and screwed before connecting the supply voltage.

Depending on the degree of protection, products may have live, uninsulated, and sometimes moving or rotating parts, as well as hot surfaces during operation.

When the device is switched on, dangerous voltages are present at all power connections as well as at any connected cables and terminals. This also applies even when the product is inhibited and the motor is at standstill.

Do not separate the connection to the product during operation. This may result in dangerous electric arcs damaging the product.

If you disconnect the product from the voltage supply, do not touch any live components or power connections because capacitors might still be charged. Observe the following minimum switch-off time:

5 minutes.

Observe the corresponding information signs on the product.

The fact that the operation LED and other display elements are no longer illuminated does not indicate that the product has been disconnected from the supply system and no longer carries any voltage.

Mechanical blocking or internal protective functions of the product can cause a motor standstill. Eliminating the cause of the problem or performing a reset may result in the drive restarting automatically. If, for safety reasons, this is not permitted for the drive-controlled machine, first disconnect the product from the supply system and then start troubleshooting.

Risk of burns: The surface temperature of the product can exceed 60 °C during operation. Do not touch the product during operation. Let the product cool down before touching it.

### 2.11 Magnetic fields


The device contains permanent magnets that create strong magnetic fields even when de-energized. Magnetic fields may pose a health risk. This especially applies to persons with active medical implants. During operation, additional electromagnetic fields are generated.

Observe DGUV (German Social Accident Insurance) regulation 15 – "Electromagnetic fields" for use in industrial workplaces. In other countries, the corresponding national and local regulations and provisions must be complied with.

### 3 Unit structure

#### 3.1 Drive unit MOVIGEAR® performance

MOVIGEAR® performance drive units are made up of 3 core components: Gear unit, motor and drive electronics in combination. These 3 core components are included in one die-cast aluminum housing (see following figure).

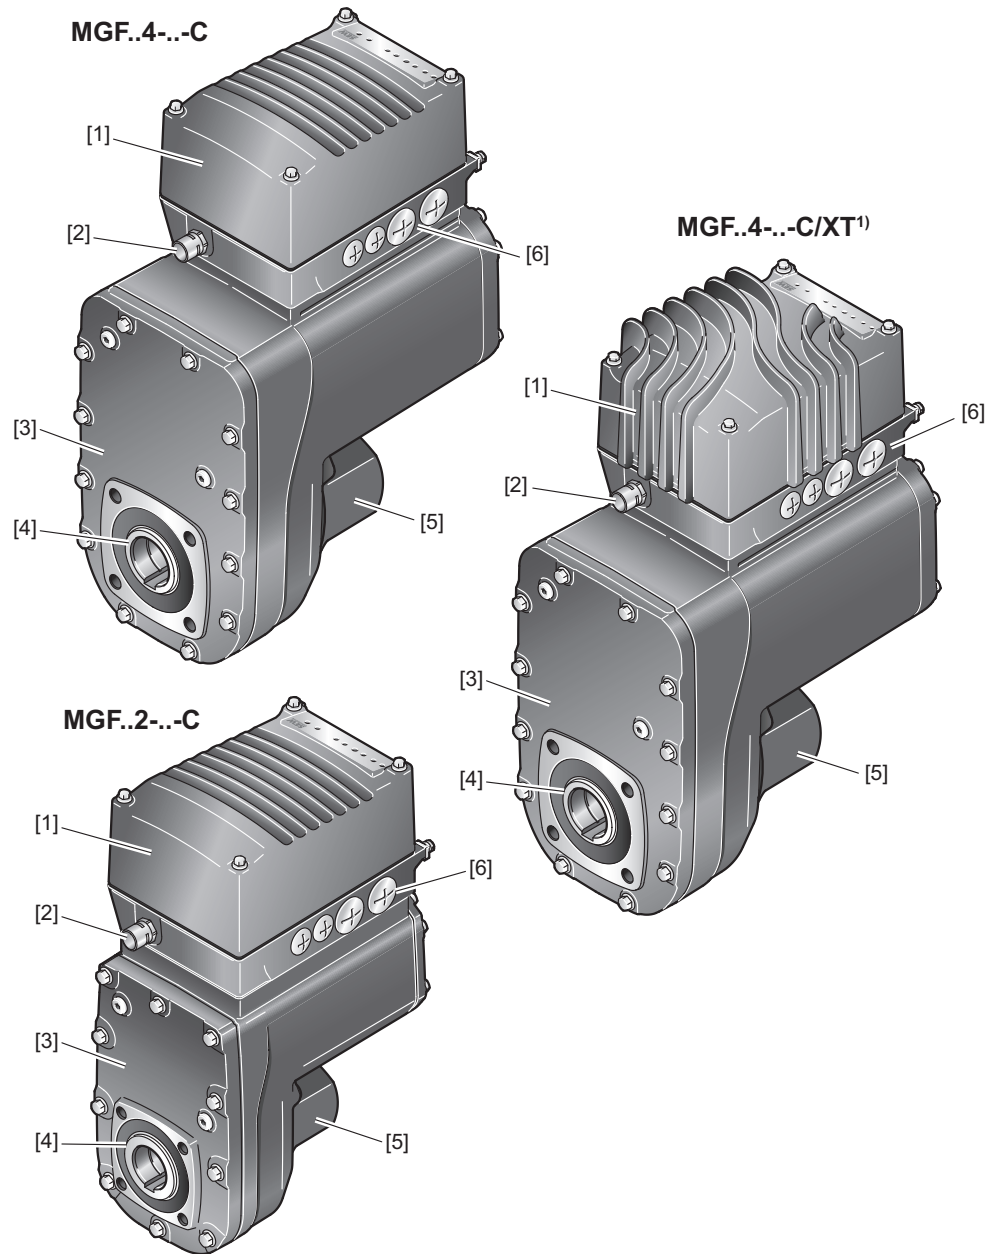

9007224581812747

1) In preparation


- [1] Electronics cover
- [2] Option /PE (pressure compensation fitting electronics)
- [3] Gear unit cover
- [4] Output shaft variant (pictured here: hollow shaft with keyway)
- [5] Optional safety cover
- [6] Connection box for cable glands

### 3.2 Shaft designs

MOVIGEAR® performance is available with the following shaft variants:

#### 3.2.1 MOVIGEAR® performance with hollow shaft and keyway (MGFA....-C)


The following figure shows a MOVIGEAR® performance unit with hollow shaft and keyway:

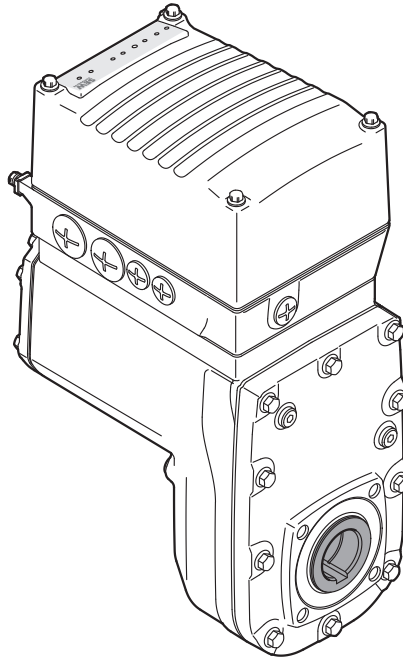

25331854475

#### 3.2.2 MOVIGEAR® performance with TorqLOC® hollow shaft mounting system (MGFT....-C)<sup>1)</sup>

The following figure shows a MOVIGEAR® performance unit with TorqLOC® hollow shaft mounting system:

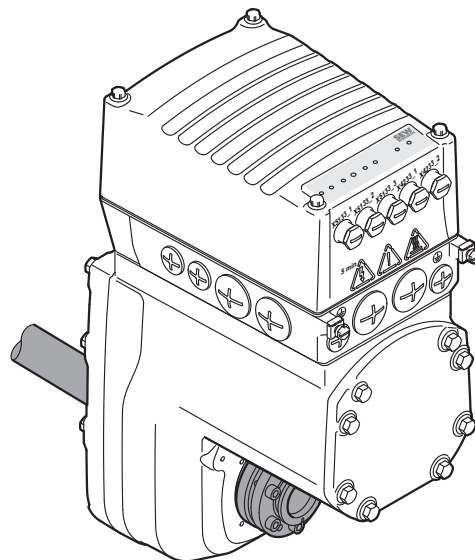

25331856907


1) In preparation



### 3.3 Housing mounting

#### 3.3.1 Torque arm (MGF.T-...-C)

The following figure shows the torque arm for MOVIGEAR® performance:

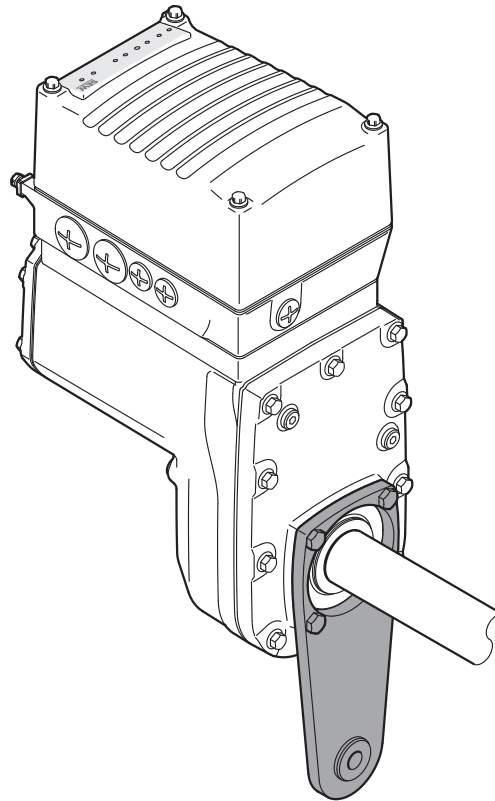

25331847179

## 3.3.2 Housing with threads (MGF.S...-C)


**▲ WARNING**

Improper installation of the drive unit without torque arm.

Severe or fatal injuries.

- Only mount the drive units to the plant structure together with a torque arm. Installation without a torque arm is not permitted.

The following figure shows the design "housing with threads" for mounting a torque arm. This type does not include a centering shoulder, which means it is not suitable for direct installation to the plant structure:

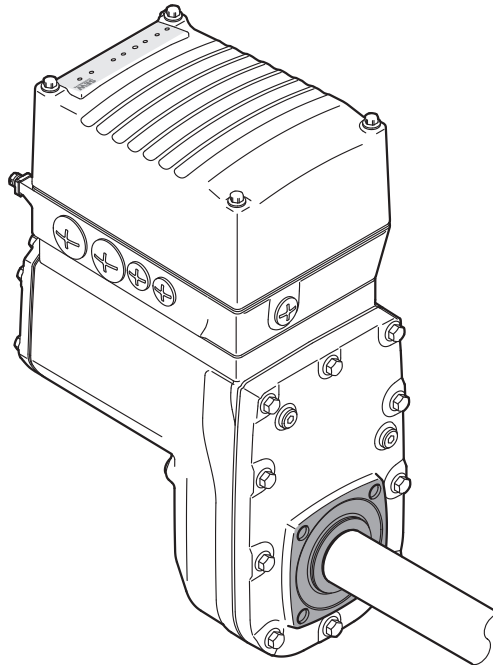

25331849611

### 3.4 Threads for protective cover




#### NOTICE

Impermissible use of the threads.

Damage to the drive unit.

- The threads may only be used for other applications after consultation with SEW-EURODRIVE.
- SEW-EURODRIVE assumes no guarantee or liability for resulting product damages.

The following figure shows the threads used for fastening the protective cover:

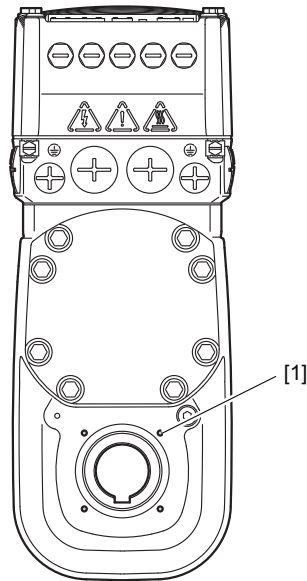

25331852043

[1] Threads for protective cover (5×)


### 3.5 Cable entry position

The following cable entries are possible for the drive unit MOVIGEAR® performance MGF...-DFC-C:

- Position X + 1 + 2 + 3
  - X: 2 x M25 x 1.5 + 2 x M16 x 1.5
  - 1: 1 x M16 x 1.5 (only for option /PE)
  - 2: 2 x M25 x 1.5 + 2 x M16 x 1.5
  - 3: 2 x M25 x 1.5 + 2 x M16 x 1.5

#### 3.5.1 Overview

The following figure shows the possible cable entries:

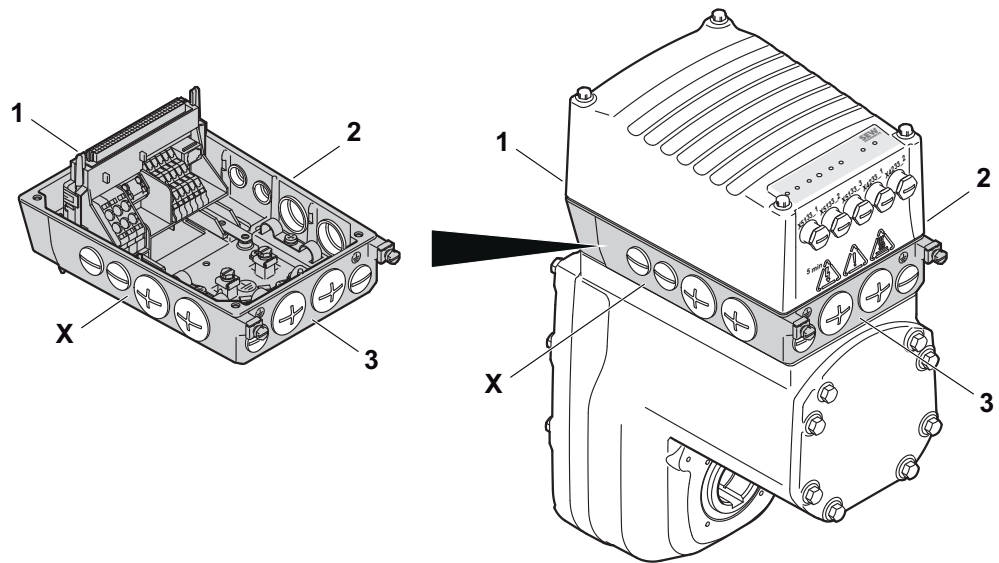

25127403915


### 3.6 Nameplate position

The following nameplate positions are possible for MOVIGEAR® performance and MOVIGEAR® classic:

- X
- 2
- 3 (standard position)

#### 3.6.1 Overview

The following figure shows the possible positions:

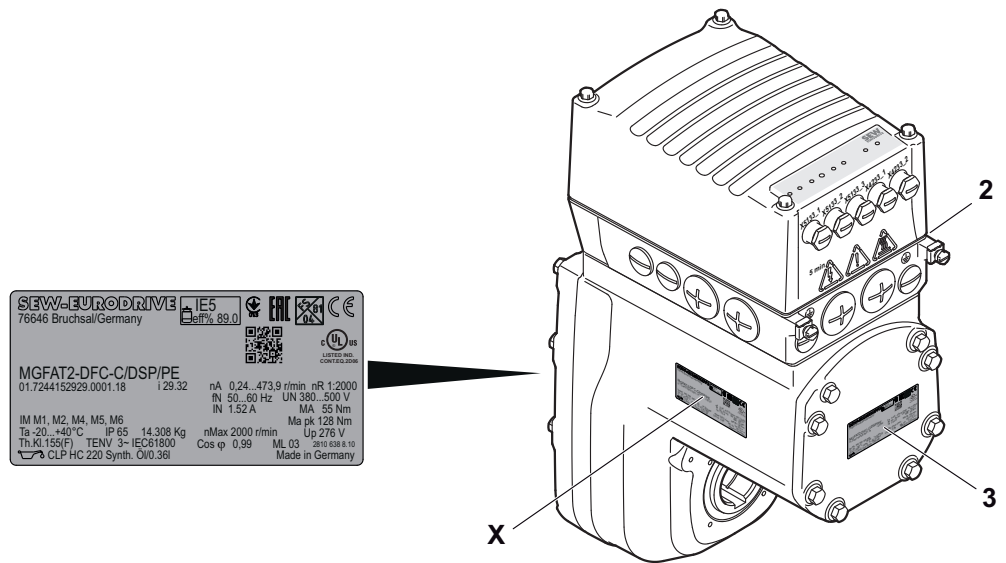


25128306827

### 3.7 Example nameplate and type designation of the drive unit

#### 3.7.1 Nameplate

The following figure gives an example of a nameplate for MOVIGEAR® performance. For the structure of the type designation, refer to chapter "Type designation".

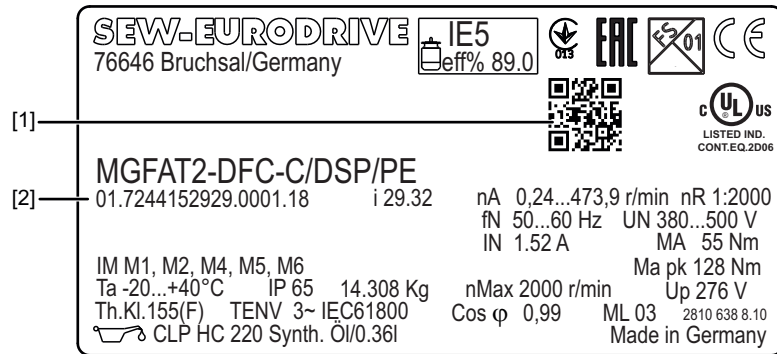

25132898443

- [1] The 2D code on the nameplate indicates the unique serial number.
- [2] Unique serial number

#### 3.7.2 Type designation

The following table shows the type designation of MOVIGEAR® performance:



<b>MG</b>	<b>Product family</b> MG = MOVIGEAR®
<b>F</b>	<b>Gear unit type</b> F = Parallel-shaft helical gear unit
<b>A</b>	<b>Shaft design</b> A = Shaft-mounted gear unit (hollow shaft with key) T = TorqLOC® hollow shaft mounting system <sup>1)</sup>
<b>S</b>	<b>Housing mounting</b> T = Drive with torque arm S = Housing with threads for mounting a torque arm
<b>2</b>	<b>Size</b> 2 = Torque class 200 Nm 4 = Torque class 400 Nm
<b>-</b>	
<b>DFC</b>	<b>Communication variant</b> DFC = <b>D</b> irect <b>F</b> ieldbus <b>C</b> ommunication
<b>-</b>	
<b>C</b>	<b>MOVIGEAR® version</b>
<b>/</b>	

DSP	MOVIGEAR® option
	XT = increased torque <sup>1)</sup> (only in connection with size 4)
	DI = digital interface (MOVILINK® DDI)
	AZ1Z = Multi-turn encoder with MOVILINK® DDI connection
	DSP = DynaStop® electrodynamic retarding function
	IV = Plug connector
	PE = Pressure compensation fitting electronics

1) In preparation

### 3.8 Examples for the optional nameplate "Electrical regulations UL/CE" (in preparation)

The following figure shows an example of the optional nameplate for drive units according to the electrical regulations UL/CE:

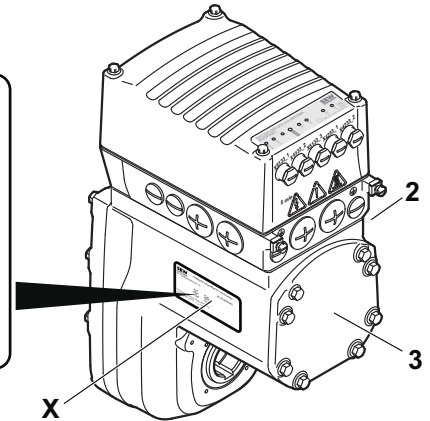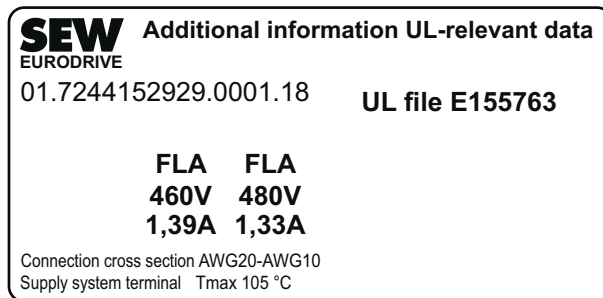



25128393483

Positions X, 2 or 3 are possible for this nameplate.

Maximally 2 nameplates are attached to the drive unit. In cases that require 3 nameplates, an additional nameplate is included in the delivery.

### 3.9 Examples for the optional nameplate "Plug connector positions"

The following figure shows an example of the optional nameplate "Plug connector positions":

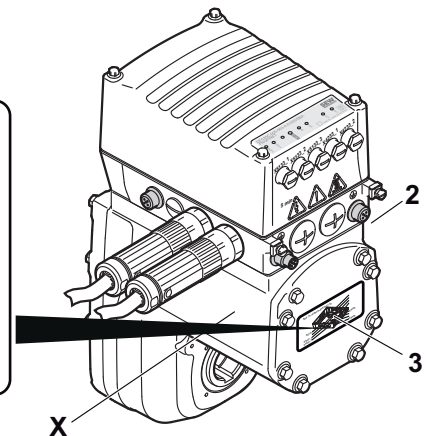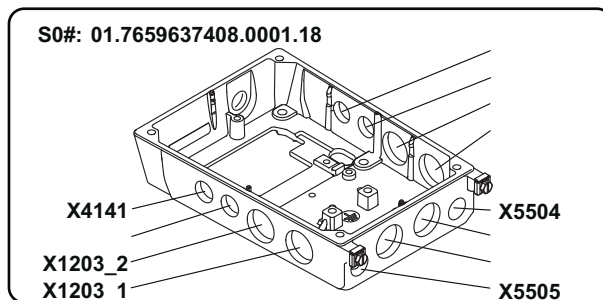

25680052619

The nameplate shows the designations and positions of the plug connectors at the terminal box.

Positions X, 2 or 3 are possible for this nameplate.


Maximally 2 nameplates are attached to the drive unit. In cases that require 3 nameplates, an additional nameplate is included in the delivery.



### 3.10 Electronics

#### 3.10.1 MOVIGEAR® electronics cover (inside) and connection box

The following figure shows the connection box and the bottom side of the electronics cover:

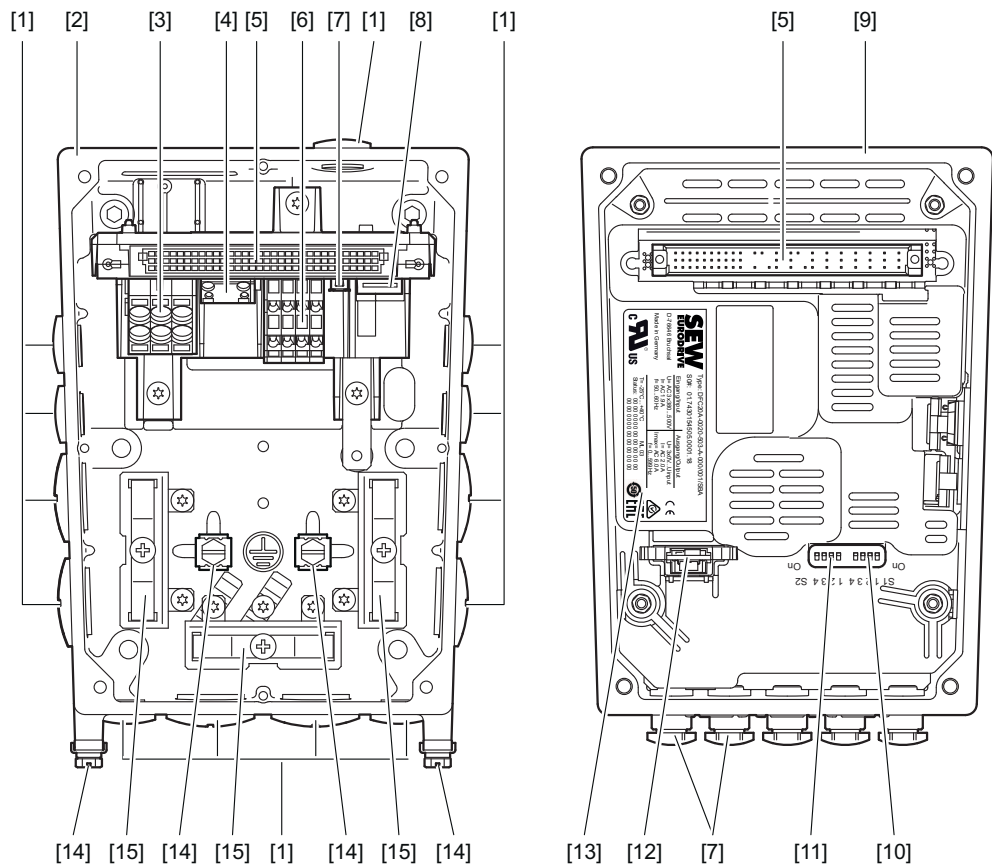


25128453131

- [1] Cable glands
- [2] Connection box
- [3] Line connection L1, L2, L3
- [4] Braking resistor connection
- [5] Plug connector connection unit for electronics cover
- [6] Electronics terminal strips
- [7] Fieldbus connection (depends on the configured connections)
- [8] Engineering interface
- [9] Electronics cover
- [10] DIP switches S1/1 – S1/4
- [11] DIP switches S2/1 – S2/4
- [12] Replaceable memory module
- [13] Electronics cover nameplate
- [14] Screws for PE connection
- [15] Shield clamp

### 3.10.2 Electronics cover (outside)

The following figure shows one of the electronics cover designs using one size as an example:

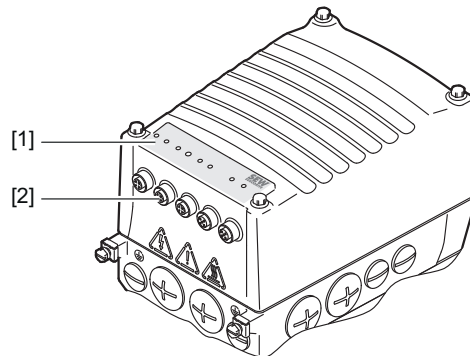


25131167371

- [1] LED displays
- [2] Plug connector

### 3.11 Example nameplate and type designation of electronics

#### 3.11.1 Nameplate

The following figure gives an example of a nameplate of the connection unit. For the structure of the type designation, refer to chapter "Type designation"

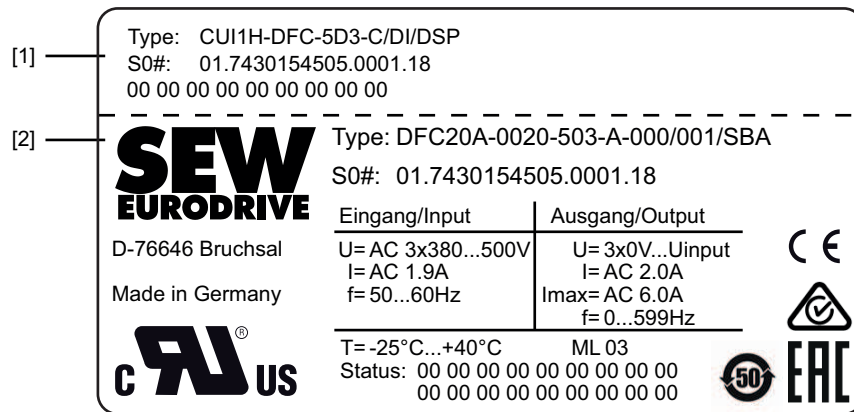

25686871179

- [1] Nameplate of connection unit  
[2] Electronics cover nameplate

#### 3.11.2 Type designation of electronics cover

The following table shows the type designation of the electronics cover:

<b>DFC</b>	<b>Product family</b> DFC = <b>D</b> irect <b>F</b> ieldbus <b>C</b> ommunication electronics cover
<b>2</b>	<b>Communication type</b> 2 = PROFINET IO 3 = EtherNet/IP™, Modbus TCP 4 = POWERLINK (in preparation)
<b>0</b>	<b>Port configuration</b> 0 = M12 plug connector on electronics cover (standard) 1 = Communication connection in the connection box (in preparation)
<b>A</b>	<b>Communication version</b>
<b>-</b>	
<b>0020</b>	<b>Nominal current drive unit</b> 0020 = 2.0 A 0025 = 2.5 A 0032 = 3.2 A 0040 = 4.0 A 0055 = 5.5 A
<b>-</b>	
<b>5</b>	<b>Connection voltage</b> 5 = AC 500 V

# 3

## Unit structure

Example nameplate and type designation of electronics

<b>0</b>	<b>Power section variant EMC</b> 0 = Without basic interference suppression
<b>3</b>	<b>Connection type</b> 3 = 3-phase
–	
<b>A</b>	<b>Version</b>
–	
<b>000</b>	<b>Electronics cover design</b> 000 = Standard (process data communication) E.. = (in preparation) .0. = Technology level 0 (standard) ..0 = Application level 0 ..1 = Application level 1 ..2 = Application level 2
/	
<b>000</b>	<b>Application level design</b> 000 = Controller with freely configurable process data interface 001 = MOVIKIT® velocity (standard) 002 = MOVIKIT® positioning
/	
<b>SBA</b>	<b>Safety option</b> (in preparation) SBA = Safe communication

### 3.12 Example nameplate and type designation of connection unit

#### 3.12.1 Nameplate

The following figure gives an example of a nameplate of the connection unit. For the structure of the type designation, refer to chapter "Type designation".

Type: CUI1H-DFC-5D3-C/DI/DSP
S0#: 01.7430154505.0001.18
00 00 00 00 00 00 00 00

9007224958369803

#### 3.12.2 Type designation of connection unit

The following table shows the type designation of the connection unit:

<b>CU</b>	<b>Product family</b> CU = Connection unit (motor with electronics) CB = Connection board (motor without electronics)
<b>I</b>	<b>Hardware design</b> I = Integrated into the motor C = Electronics mounted close to the motor
<b>1</b>	<b>Flange dimensions for relevant cover size</b> 0 = Suitable for MOVIGEAR® MGF..1-..-C 1 = Suitable for MOVIGEAR® MGF..2-..-C, MGF..4-..-C, MGF..4-..-C/XT
<b>H</b>	<b>Fieldbus connection configuration</b> H = Hybrid (fieldbus connection with mini IO at the electronics cover DFC.1..) X = Without fieldbus connection
–	
<b>DFC</b>	<b>Communication variant</b> DFC = Direct Fieldbus Kommunikation (only with CU) DSM = Drive unit without electronics (only with CB)
–	
<b>5</b>	<b>Connection voltage</b> 5 = AC 500 V
<b>D</b>	<b>EMC variant</b> 0 = Without basic interference suppression D = EMC filter with limit value category C3 (EN 61800-3)
<b>3</b>	<b>Connection type</b> 3 = 3-phase
–	
<b>C</b>	<b>Version</b>
/	

# 3

## Unit structure

Example nameplate and type designation of connection unit

DI	Option
	DI = Digital interface (MOVILINK® DDI)
	CO = Digital interface (MOVILINK® DDI) via coaxial element
	DSP = DynaStop® electrodynamic retarding function

## 4 Mechanical installation

### 4.1 Installation notes



#### INFORMATION

Adhere to the safety notes during installation.



#### ▲ WARNING

Improper installation/disassembly of drive unit and mount-on components.

Serious injuries.

- Adhere to the notes about installation and disassembly.
- Before releasing shaft connections, make sure that there are no active torsional moments present (tensions within the system).



#### ▲ WARNING

Improper installation of the drive unit without torque arm.

Severe or fatal injuries.

- Only mount the drive units to the plant structure together with a torque arm. Installation without a torque arm is not permitted.



#### ▲ WARNING

Risk of injury if the drive unit starts up unintentionally and danger of electrical voltage.

Dangerous voltages may still be present for up to 5 minutes after disconnection from the line voltage.

- Disconnect the drive unit from the power supply with suitable external measures before you start working on the unit and secure it against unintentional reconnection to the voltage supply.
- Secure the output shaft against rotation.
- Wait for at least the following time before removing the electronics cover: **5 minutes.**



#### ▲ WARNING

Risk of injury caused by rapidly moving output elements.

Serious injuries.

- Disconnect the drive unit from the power supply and safeguard it against unintentional power up before you start working on it.
- Equip the input and output elements (e.g. customer shaft with contact shoulder or clamping ring, shrink disk) with a touch guard.

## 4.2 Required tools and resources

- Set of wrenches, set of screwdrivers, set of socket wrenches
- Torque wrench
- Mounting device
- Compensation elements (shims and spacing rings), if necessary
- Fasteners for output elements
- Lubricant (e.g. NOCO® fluid)
- Standard parts are not included in the delivery

### 4.2.1 Installation tolerances for shaft ends

Diameter tolerance in accordance with DIN 748:

- ISO H7 for hollow shafts

### 4.2.2 Tolerances for torque ratings

The specified torques must be adhered to with a tolerance of +/- 10%.

## 4.3 Installation requirements

Check that the following conditions have been met:

- The information on the drive unit's nameplate must match the voltage supply system.
- The drive unit is undamaged (no damage caused by shipping or storage).
- Ambient temperature according to the operating instructions, nameplate and lubricant table in chapter "Technical data" > "Lubricants".
- The drive unit must not be installed in the following ambient conditions:
  - Potentially explosive atmosphere
  - Oils
  - Acids
  - Gases
  - Vapors
  - Radiation
- For special designs: The drive is designed in accordance with the actual ambient conditions.
- Clean the output shafts and flange surfaces thoroughly to ensure they are free of anti-corrosion agents, contamination or similar. Use a commercially available solvent. Do not expose the sealing lips of the oil seals to the solvent – damage to the material.
- When the drive is installed in abrasive ambient conditions, protect the output end oil seals against wear.



## 4.4 Setting up the drive unit

### 4.4.1 Notes

- Only mount the drive units to the plant structure together with a torque arm. Installation without a torque arm is not permitted.
- Clean the shaft ends thoroughly to ensure they are free of anti-corrosion agents (use a commercially available solvent). Do not expose the bearings and sealing rings to the solvent – damage to the material.
- Carefully align the drive unit and the driven machine to avoid placing any unacceptable strain on the shaft ends.
- Do not butt or hammer the shaft end.
- Ensure that cooling air supply is unobstructed and that air discharged by other units does not influence cooling.
- Use suitable cable glands for the supply leads (use reducing adapters if necessary).
- Seal the cable entry well.
- Clean the sealing faces of the cover well before reassembling the unit.
- Restore the corrosion protection if necessary.
- Check the validity of the degree of protection using the information in the operating instructions and the data on the nameplate.

### Changing the mounting position

Observe the following information when you operate the drive unit in a mounting position other than the one indicated in the order:

- **Mounting position M3 is only possible after consultation with SEW-EURODRIVE.**
- **Adjust the position of the breather valve.**
- **If present, adjust the position of the pressure compensation fitting.**

### 4.4.2 Electronics cover



#### ▲ WARNING

Risk of burns due to hot surfaces.

Serious injuries.

- Let the devices cool down before touching them.



#### NOTICE

Loss of the guaranteed degree of protection.

Possible damage to property.


- When the electronics cover is removed from the connection box, you have to protect the electronics cover and the wiring space from humidity, dust or foreign particles.
- Make sure that the electronics cover is mounted properly.

# 4 Mechanical installation

## Setting up the drive unit

### Installing the electronics cover


- Use only electronics covers that match the size.
- Be careful not to tilt the electronics cover when placing it on the connection box:

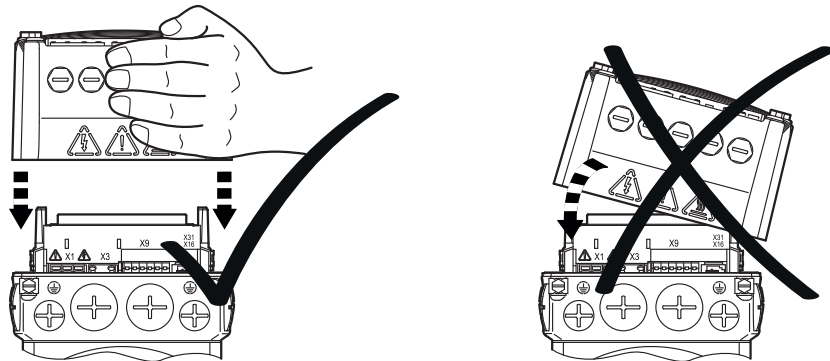

25337980043

### Minimum installation clearance


Note the minimum installation clearance (see following figure) required to remove the electronics cover. For detailed dimension drawings, see the section "Technical Data and Dimension Sheet".

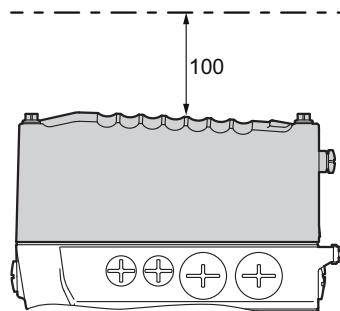

25337982475

### Removing the electronics cover

The following figure shows how you can lever off the electronics cover in the intended places:

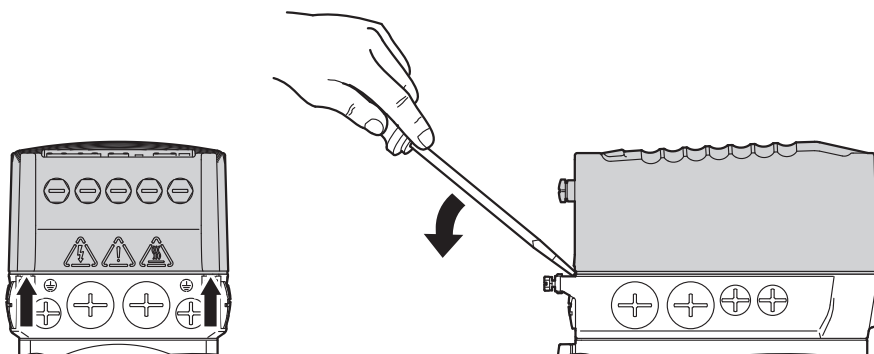


25337977611

#### 4.4.3 Installation in damp areas or in the open

Drives are supplied in corrosion-resistant versions for use in damp areas or in the open. Repair any damage to the paint work if necessary.

#### 4.4.4 Derating depending on the installation altitude

The following diagram shows the factor  $f_{AH}$  (according to IEC 60034-1:2017, Table 12) by which the thermal motor torque has to be reduced depending on the installation altitude  $H$ . Observe the additional chapter "Technical Data and Dimension Drawings" > "Derating depending on the ambient temperature".

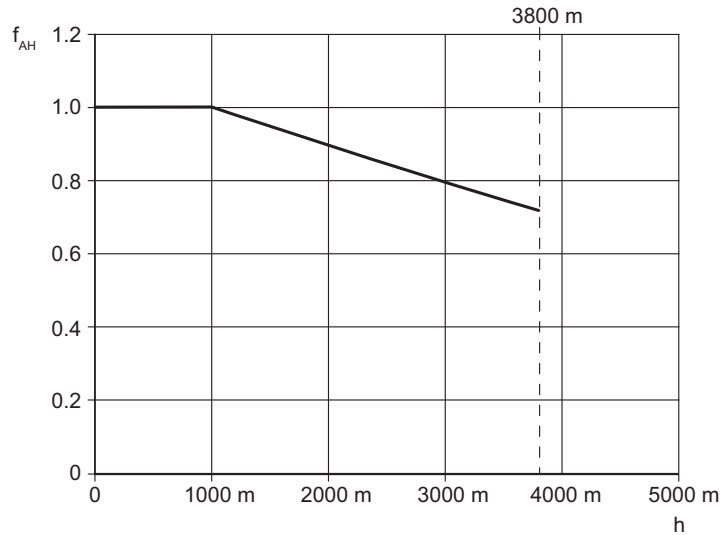

25852074635

#### 4.4.5 Painting drive units



### NOTICE

Breather valves and oil seals may be damaged during painting or re-painting.

Potential damage to property.

- Clean the surface of the drive unit and make sure it is free from grease.
- Thoroughly cover the breather valves and sealing lip of the oil seals with strips prior to painting.
- Remove the masking strips after painting.

# 4 Mechanical installation

## Setting up the drive unit

### 4.4.6 Gear unit venting

#### Drive units with installed breather valve

Except for the mounting position M3, SEW-EURODRIVE delivers all drive units ordered for a specific mounting position with a breather valve that is activated and installed according to the specific mounting position.

#### Drive units with separately included breather valve



#### NOTICE

The breather valve cannot be used for drive units in mounting position M3.

Possible damage to property

- You may only install the drive units in the mounting position M3 after consultation with SEW-EURODRIVE.

SEW-EURODRIVE delivers drive units ordered for universal operation in mounting positions M1, M2, M4, M5, M6 with an enclosed breather valve.


In this case, the breather valve is delivered in the hollow shaft of the drive unit. Before startup, you must replace the highest oil screw plug with the provided breather valve.

#### Tightening torque

Tighten the breather valve from SEW-EURODRIVE included in the delivery with 8.0 Nm.

The following figure shows an example. The position of the breather valve is dependent on the mounting position used. Observe chapter "Technical data and dimension sheets" > "Mounting positions".

Example: Mounting position M1

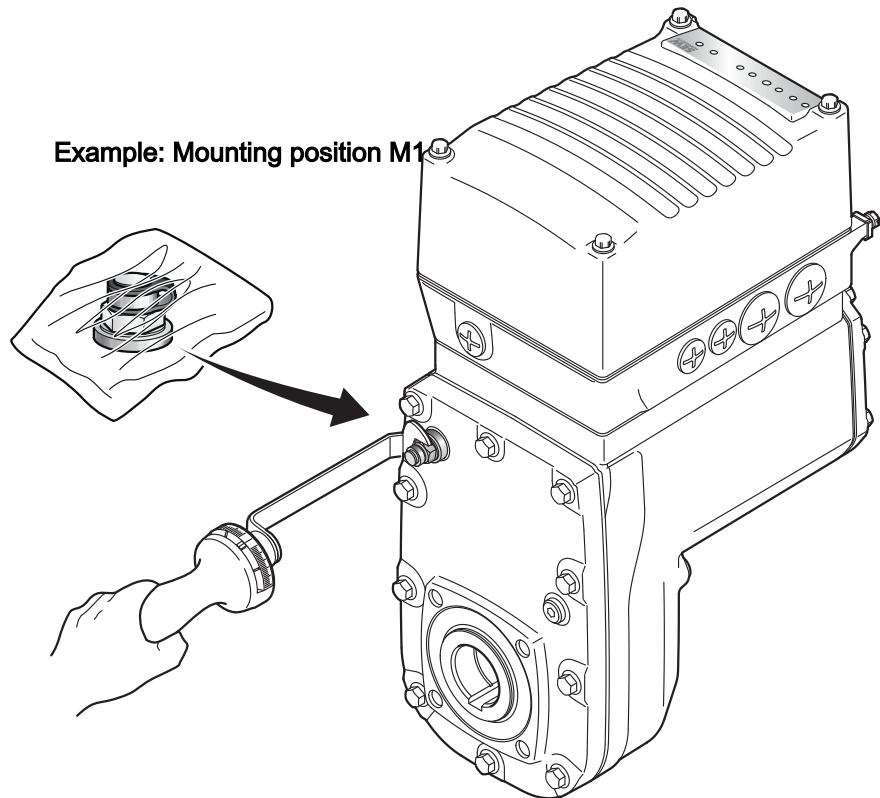

25343401227


# 4 Mechanical installation

Setting up the drive unit

## Activating the breather valve


After installing the breather valve, activate it as follows. For designs with the breather valve screwed in: Check whether the breather valve is activated. If not, you have to remove the transport fixture of the breather valve before you start up the drive unit.

1. Breather valve with transport protection

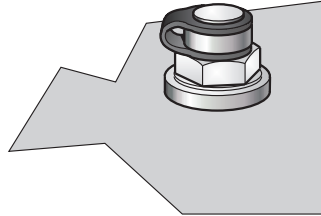


22858542859

2. Remove transport fixture

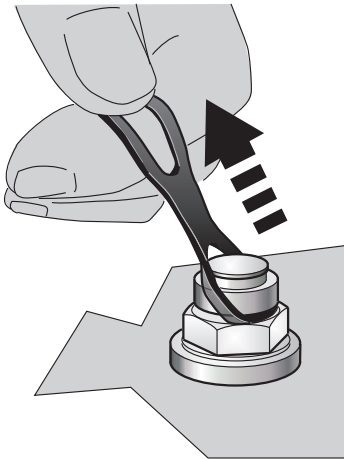

22858631819

3. Activated breather valve

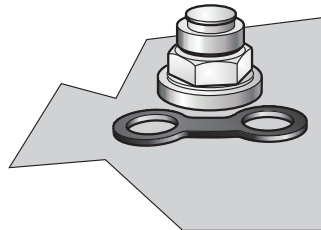

22858720011


**4.4.7 Pressure compensation on electronics (option /PE)**

**Designs with included pressure compensation fitting (option /PE)**

On designs with an included pressure compensation fitting (option /PE), you must install the fitting depending on the mounting position used. The tightening torque is 4.0 Nm.

The following table shows the installation positions depending on the mounting positions:

*Mounting positions*

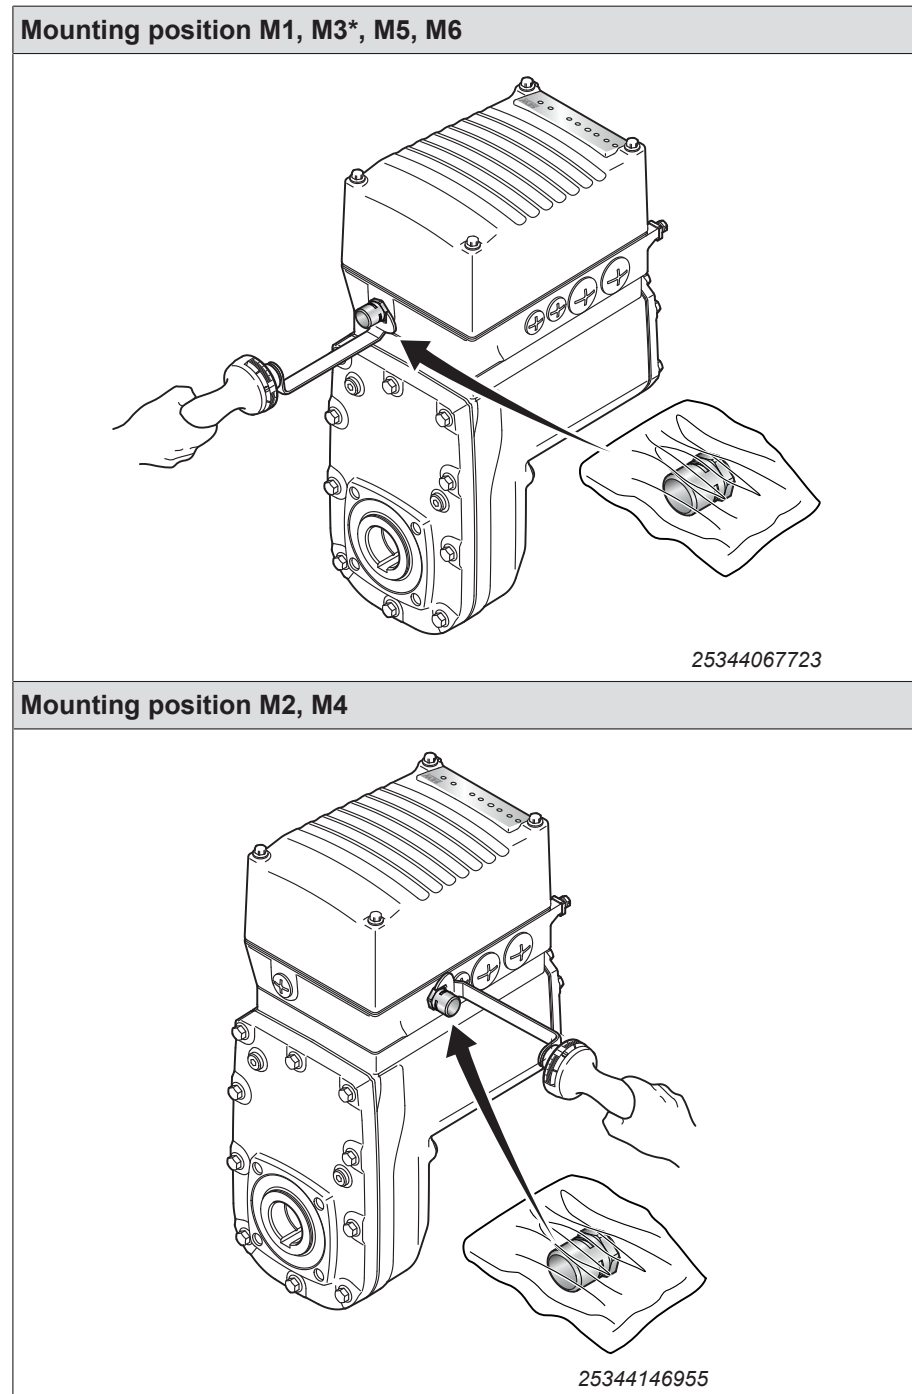

\* Mounting position M3 only possible after consultation with SEW-EURODRIVE.

# 4

## Mechanical installation

Shaft-mounted gear unit with keyway

### 4.5 Shaft-mounted gear unit with keyway



#### INFORMATION

Observe the design notes in chapter "Technical data and dimension sheets" for the customer shaft design.




#### INFORMATION


To avoid contact corrosion, SEW-EURODRIVE recommends that the customer shaft should additionally be lathed down between the 2 contact surfaces.

#### 4.5.1 Installation notes

1. Apply NOCO® fluid and spread it thoroughly.

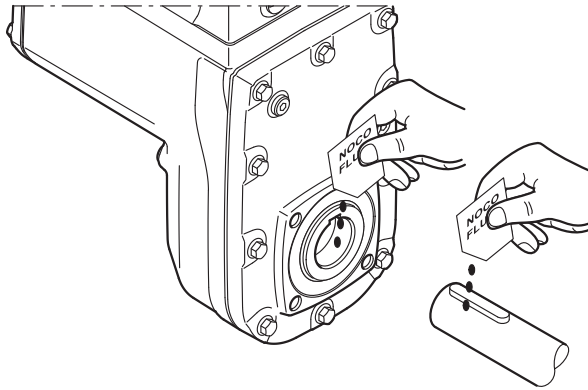

9007220768357259

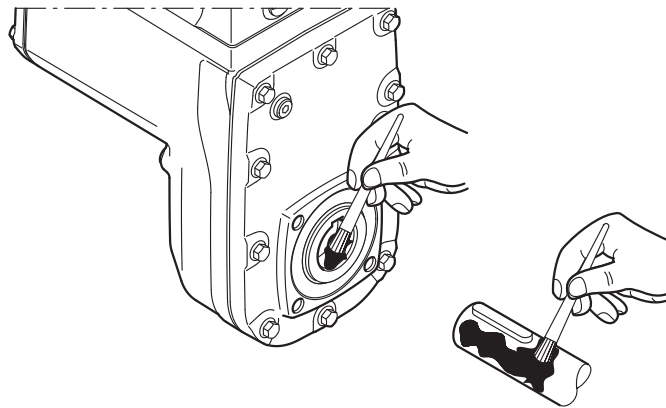


9007220768359691



2. Mount the shaft and secure it axially (using a mounting device makes installation easier). The three mounting types are described below:


⇒ 2A: Standard scope of delivery

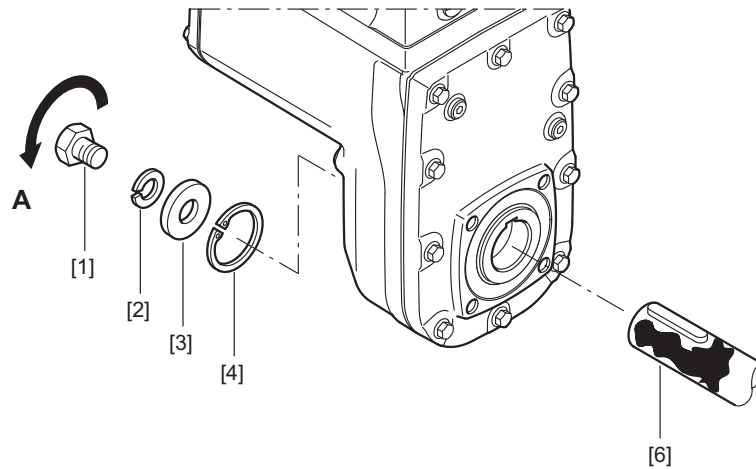

9007220768364043

- [1] Short retaining screw (standard scope of delivery)
- [2] Lock washer
- [3] Washer
- [4] Retaining ring
- [6] Customer shaft

⇒ 2B: Assembly/disassembly kit for customer shaft **with** contact shoulder. Observe chapter "Technical data and dimension sheets" > "Design notes for gear units with hollow shaft and key".

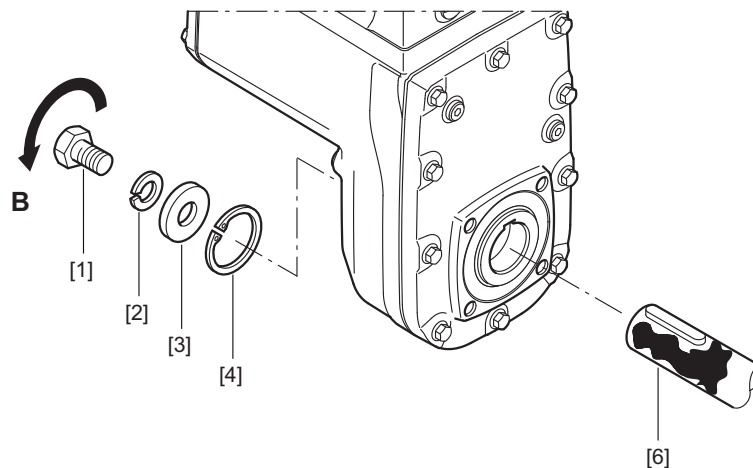

9007220768367499


- [1] Retaining screw
- [2] Lock washer
- [3] Washer
- [4] Retaining ring
- [6] Customer shaft with contact shoulder

⇒ 2C: Assembly/disassembly kit for customer shaft **without** contact shoulder. Observe chapter "Technical data and dimension sheets" > "Design notes for gear units with hollow shaft and key".

# 4


## Mechanical installation

### Shaft-mounted gear unit with keyway

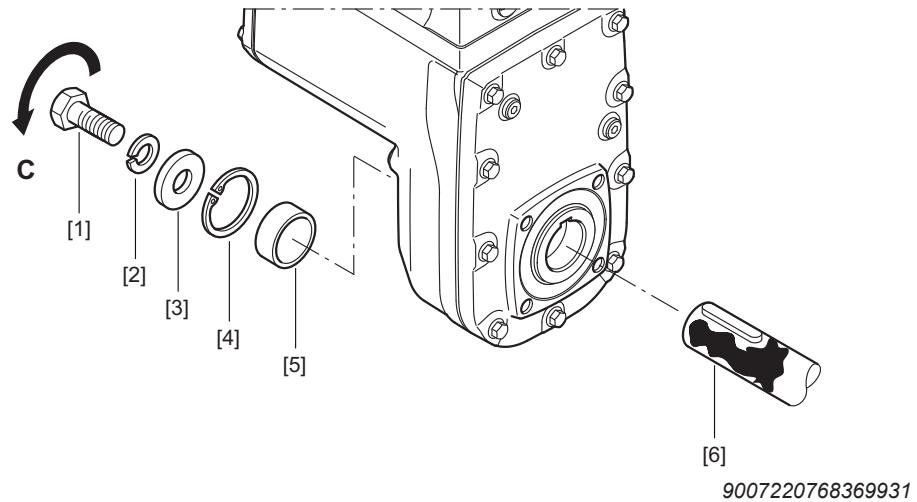

- [1] Retaining screw
- [2] Lock washer
- [3] Washer
- [4] Retaining ring
- [5] Spacer tube
- [6] Customer shaft without contact shoulder

3. Tighten the retaining screw with the specified torque (see chapter "Tightening torques for retaining screws").

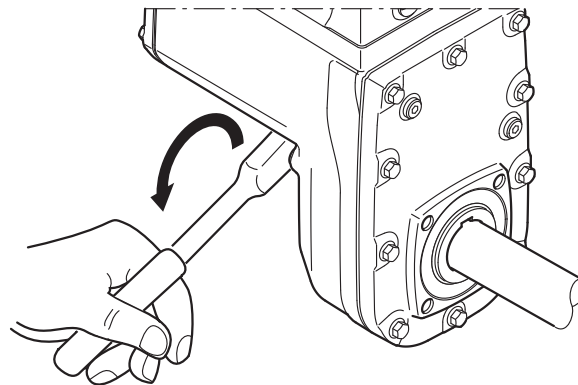

9007220768463371

#### 4.5.2 Tightening torques for retaining screws

Drive	Screw	Tightening torque
MGFA.2-..-C	M10	20 Nm
MGFA.4-..-C	M16	40 Nm

#### 4.5.3 Disassembly notes



#### **▲ WARNING**

Risk of burns due to hot surfaces.

Serious injuries.

- Let the devices cool down before touching them.

25887130/EN – 11/2018




## INFORMATION

For information on the SEW-EURODRIVE assembly/disassembly kit, see chapter "Technical data and dimension sheets" > "Design notes".


The following description only applies when the drive is assembled using the SEW-EURODRIVE assembly/disassembly kit (see previous description, points 2B or 2C).

1. Loosen the retaining screw [1].
2. Remove parts [2] to [4] and, if applicable, the spacer tube [5].

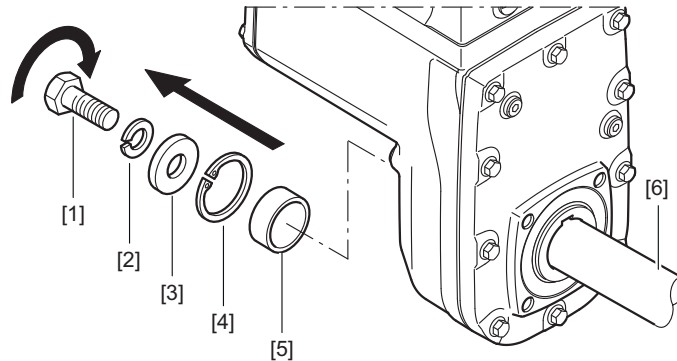

- [1] Retaining screw
- [2] Lock washer
- [3] Washer
- [4] Retaining ring
- [5] Spacer tube
- [6] Customer shaft

3. Insert the forcing washer [8] and the fixed nut [7] from the SEW-EURODRIVE assembly/disassembly kit between the customer shaft [6] and the retaining ring [4].
4. Re-install the retaining ring [4].
5. Screw the retaining screw [1] back in. Now you can force the drive off the shaft by tightening the bolt.

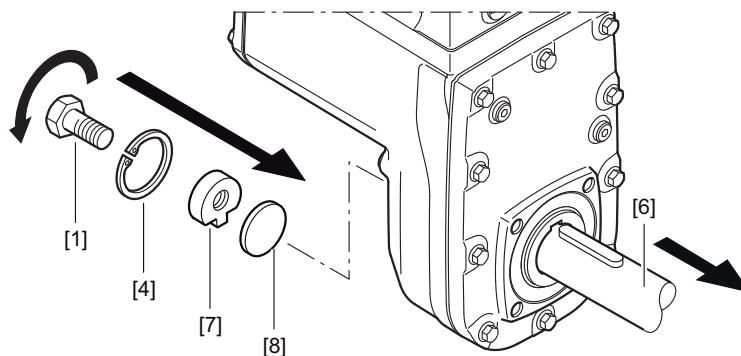


- [1] Retaining screw
- [4] Retaining ring
- [6] Customer shaft
- [7] Fixed nut
- [8] Forcing washer

# 4 Mechanical installation

Shaft-mounted gear unit with TorqLOC® (customer shaft without contact shoulder)


## 4.6 Shaft-mounted gear unit with TorqLOC® (customer shaft without contact shoulder)

1. Clean the customer shaft and the inside of the hollow shaft. Ensure that all traces of grease or oil are removed.
2. Install the stop ring and the bushing on the customer shaft.

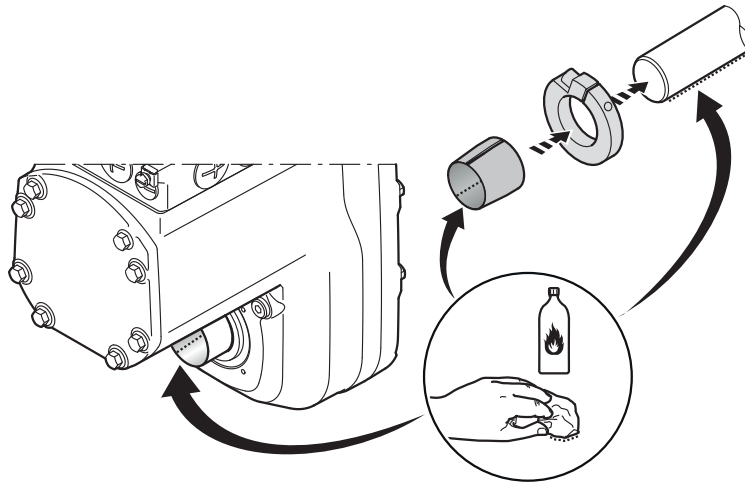


9007220783051915

3. Fasten the torque arm on the drive unit; observe chapter "Torque arm".

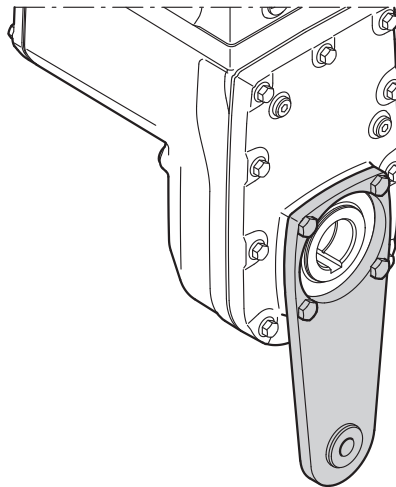


9007220783641867

4. Apply NOCO® fluid on the bushing and spread thoroughly.

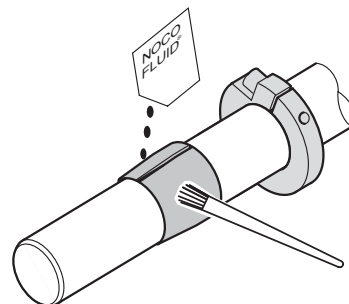


21528905739

5. Push the gear unit onto the customer shaft.

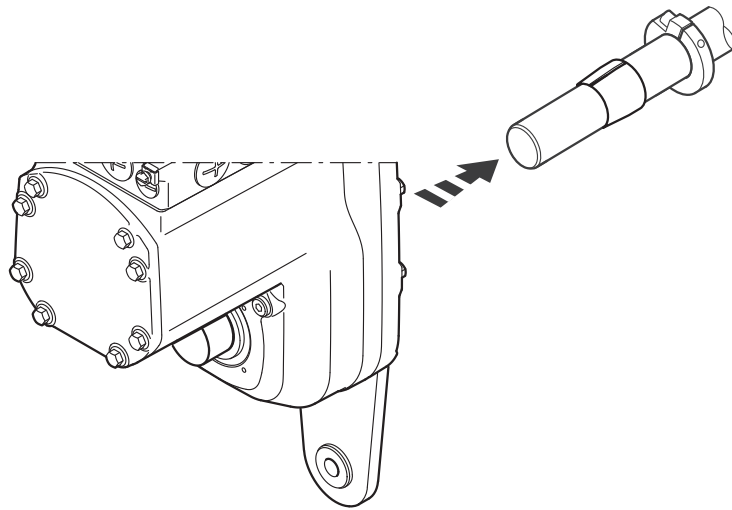

9007220783649163

6. Preassemble the torque arm on the plant structure / holding fixture (do not tighten the screws).

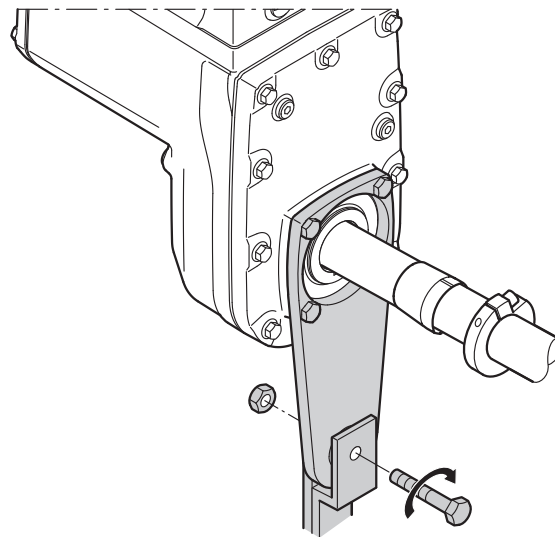


9007220783651595

# 4

## Mechanical installation


Shaft-mounted gear unit with TorqLOC® (customer shaft without contact shoulder)

7. Push the bushing into the gear unit up to the stop.

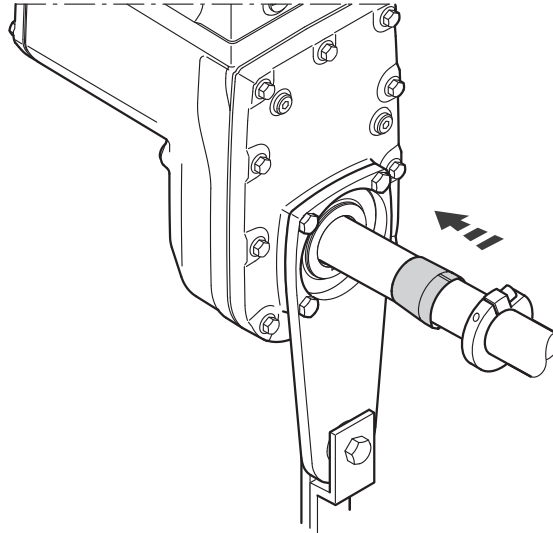


9007220783654027

8. Push the stop ring to the bushing. Mark the position of the stop ring.

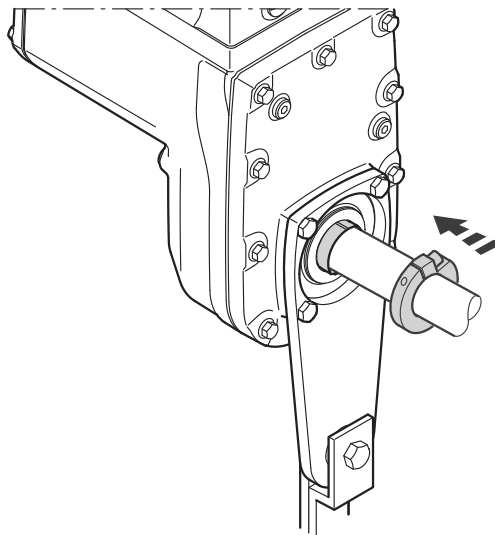


9007220783656459

9. Remove the torque arm from the holding fixture / plant structure.

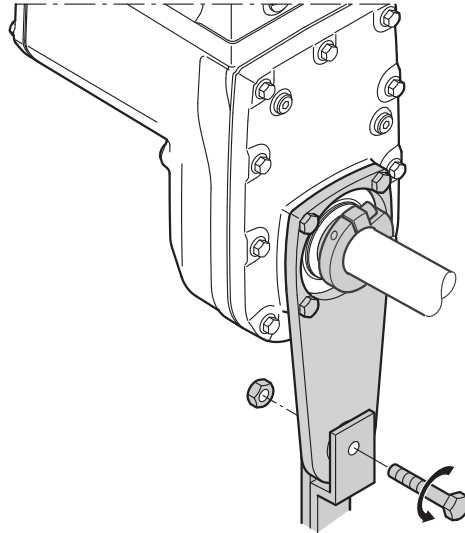

9007220783658891

10. Pull the gear unit off the customer shaft until the stop ring is accessible for fastening.

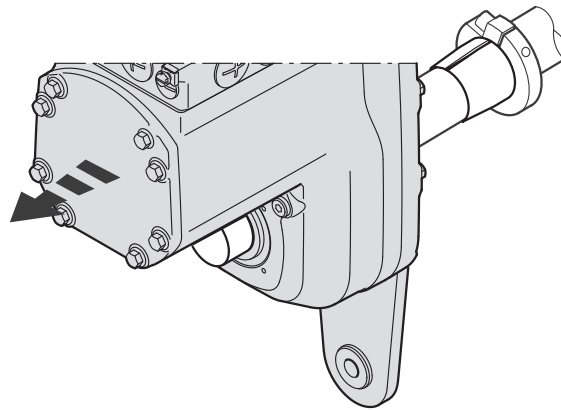


9007220783661323

11. Make sure that the position of the stop ring has not changed (see marking).
12. Tighten the stop ring to the appropriate torque.
- ⇒ Standard design: 18 Nm
  - ⇒ Stainless steel: 7.5 Nm

# 4


## Mechanical installation

Shaft-mounted gear unit with TorqLOC® (customer shaft without contact shoulder)

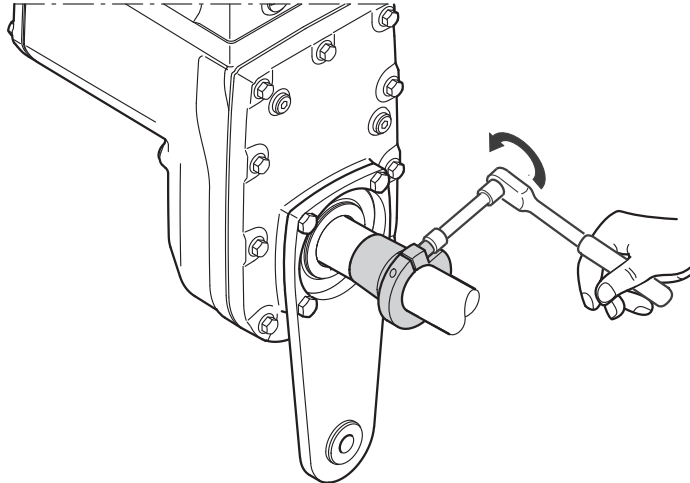


18014420037795339

13. Push the bushing and the gear unit onto the customer shaft up to the fixed stop ring.

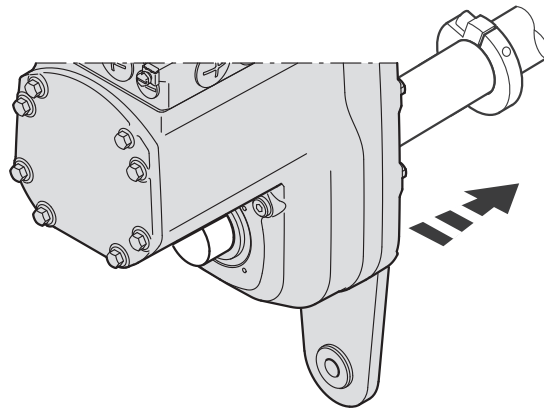

9007220783619979


14. Preassemble the torque arm on the plant structure / holding fixture again (do not tighten the screws).

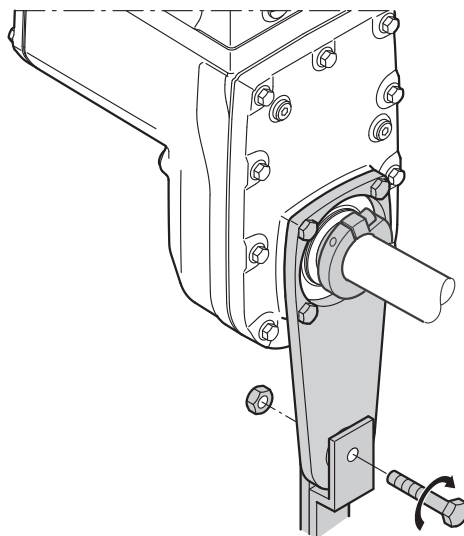

9007220783622411




15. Make sure that all screws are loosened and slide the shrink disk onto the hollow shaft.

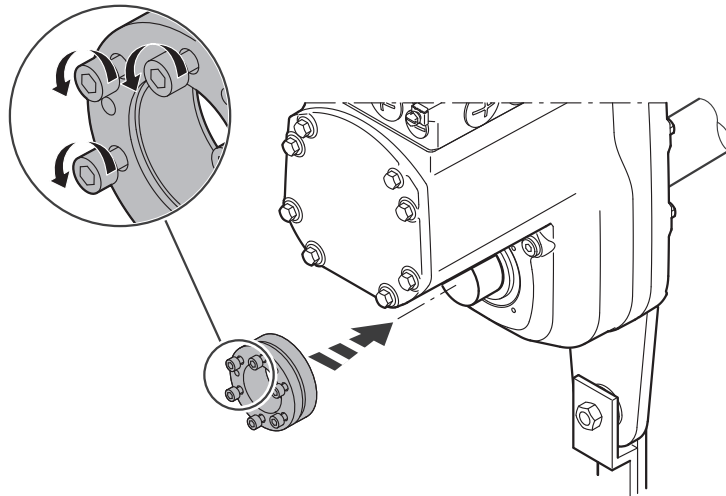

18014420038365835


16. Slide the counter bushing onto the customer shaft and into the hollow shaft.

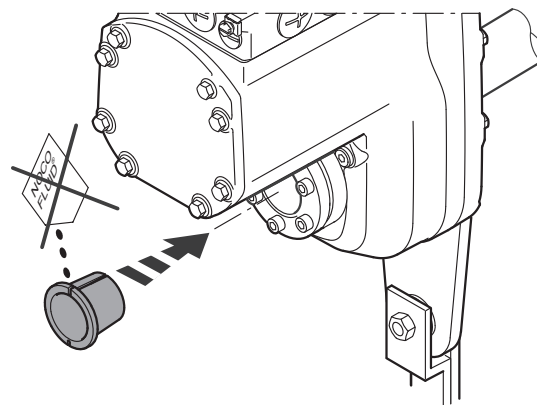

18014420038368267

17. In the case of a gear unit **with shaft shoulder**, mount the shrink disk at the shaft shoulder up to the stop. In the case of a gear unit **without shaft shoulder**, mount the shrink disk at a distance of 1 mm to 2 mm from the gear unit housing.

18. Tap lightly on the flange of the counter bushing to ensure that the bushing is fitted securely in the hollow shaft.

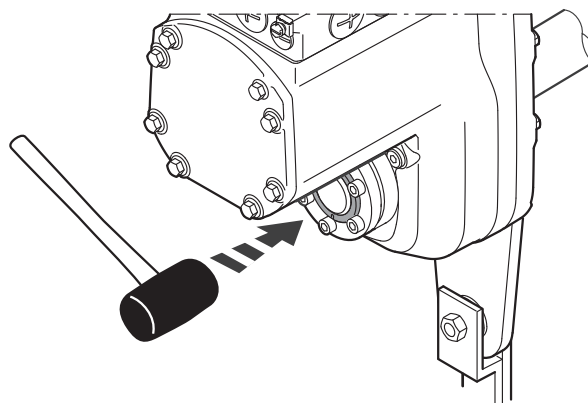


18014420038370699

# 4

## Mechanical installation




Shaft-mounted gear unit with TorqLOC® (customer shaft without contact shoulder)

19. Make sure that the customer shaft is seated in the counter bushing.

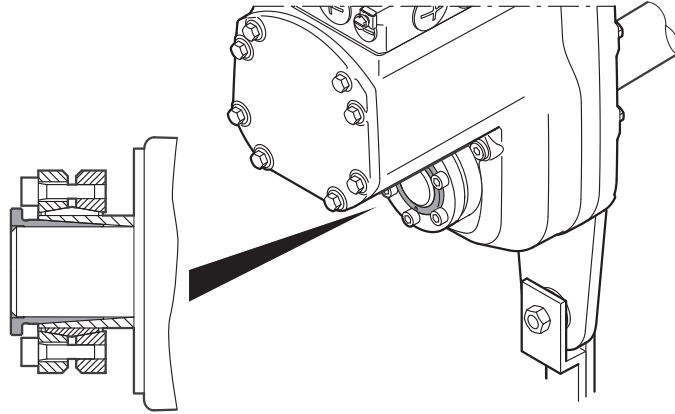

18014420038373131






20. Only tighten the screws of the shrink disk hand-tight and ensure that the outer rings of the shrink disk are parallel.

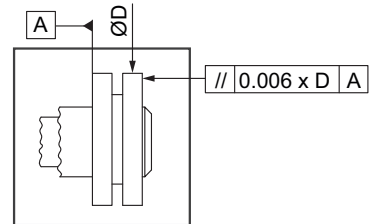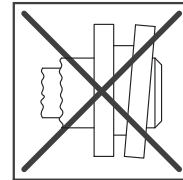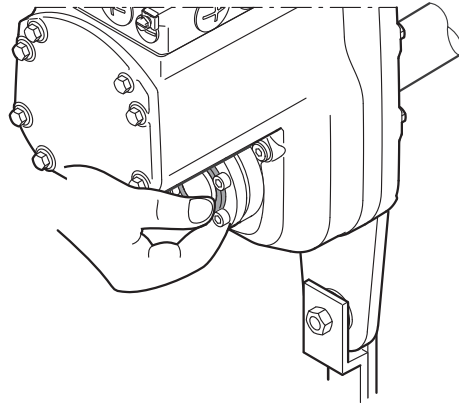

18014420038375563

21. Tighten the locking screws by working round several times from one bolt to the next (not in diametrically opposite sequence):


⇒ The exact values for the tightening torques are shown on the shrink disk.

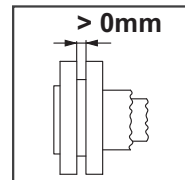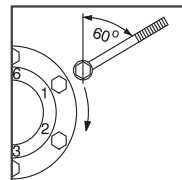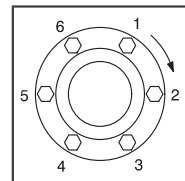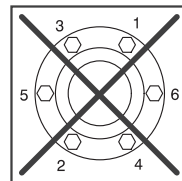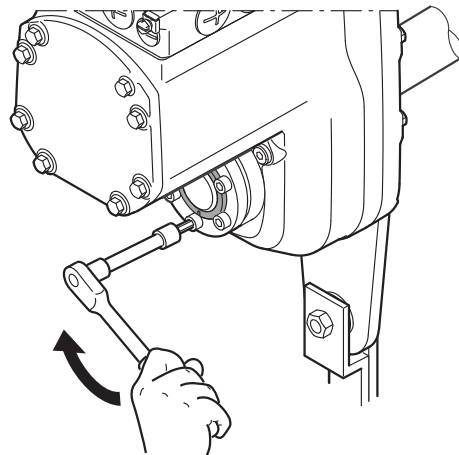

18014420038377995


25887130/EN – 11/2018

22. After installation, make sure the remaining gap  $s$  between the outer rings of the shrink disks is  $> 0$  mm.
- ⇒ The remaining gap between counter bushing and hollow shaft end as well as bushing and stop ring must be  $> 0$  mm.

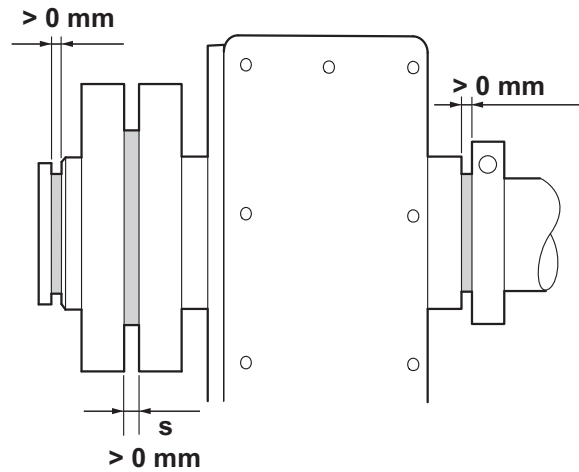

21528898443

23. Securely tighten the torque arm; observe chapter "Torque arm".

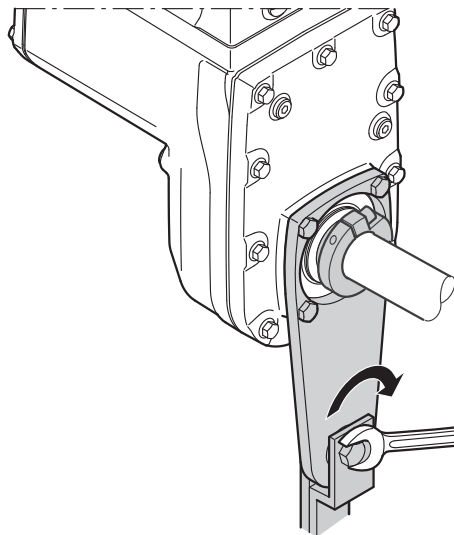


9007220783644299

# 4 Mechanical installation

Shaft-mounted gear unit with TorqLOC® (customer shaft with contact shoulder)


## 4.7 Shaft-mounted gear unit with TorqLOC® (customer shaft with contact shoulder)

1. Clean the customer shaft and the inside of the hollow shaft. Ensure that all traces of grease or oil are removed.

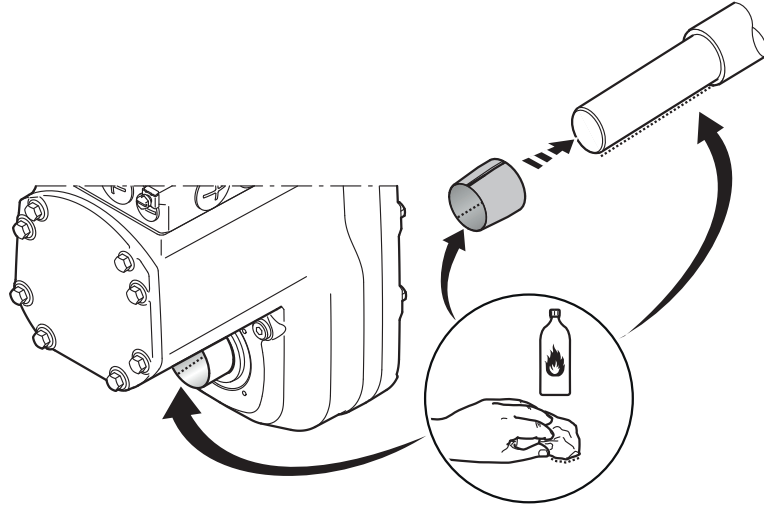


9007220783669131

2. Fasten the torque arm on the drive unit; observe chapter "Torque arm".

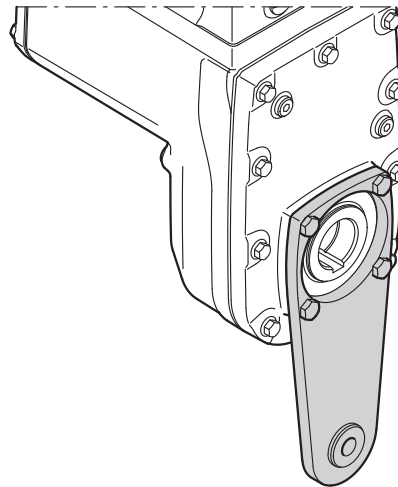


9007220783732491

3. Slide the bushing onto the customer shaft.

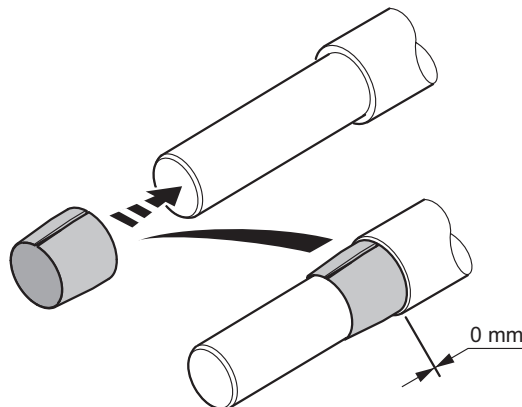


21528993931

4. Apply NOCO® fluid on the bushing and spread thoroughly.

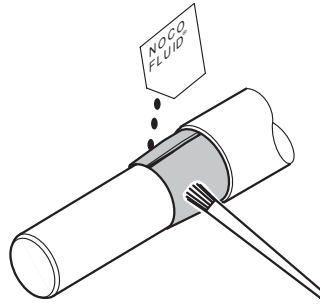


21528996363

5. Push the gear unit onto the customer shaft.

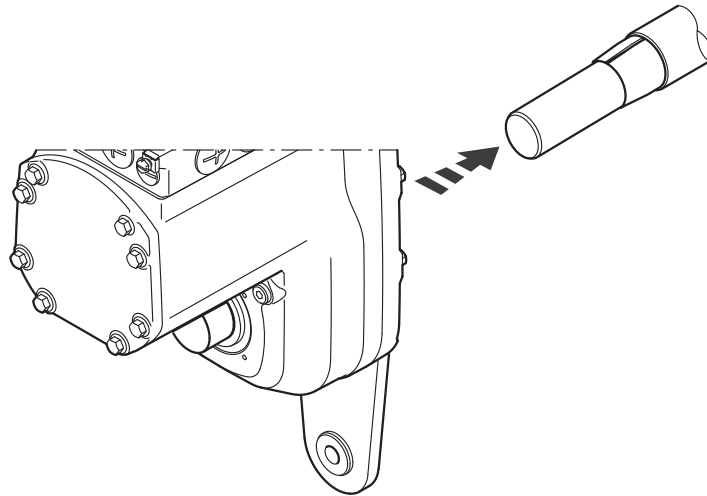

9007220783739787

6. Make sure that all screws are loosened and slide the shrink disk onto the hollow shaft.

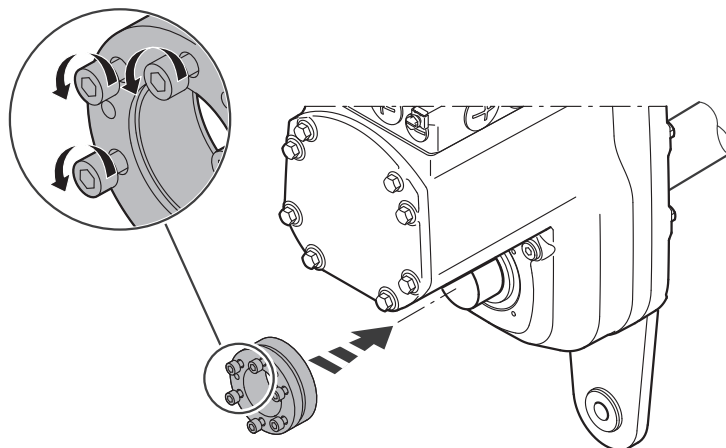


18014420038483211

# 4 Mechanical installation


Shaft-mounted gear unit with TorqLOC® (customer shaft with contact shoulder)

7. Slide the counter bushing onto the customer shaft and into the hollow shaft.

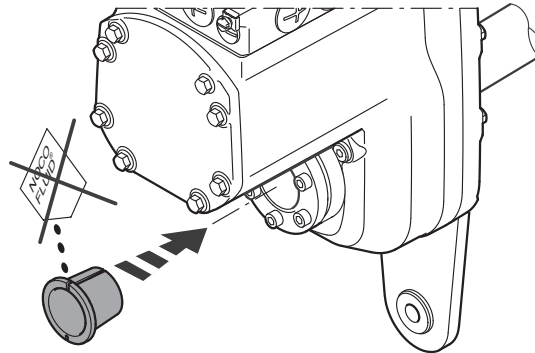


18014420038485643

8. In the case of a gear unit **with shaft shoulder**, mount the shrink disk at the shaft shoulder up to the stop. In the case of a gear unit **without shaft shoulder**, mount the shrink disk at a distance of 1 mm to 2 mm from the gear unit housing.
9. Tap lightly on the flange of the counter bushing to ensure that the bushing is fitted securely in the hollow shaft.

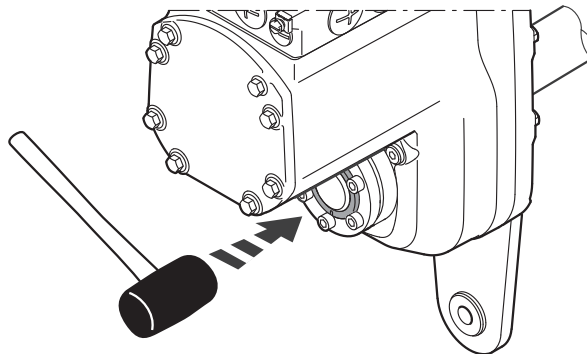


18014420038488075

10. Make sure that the customer shaft is seated in the counter bushing.

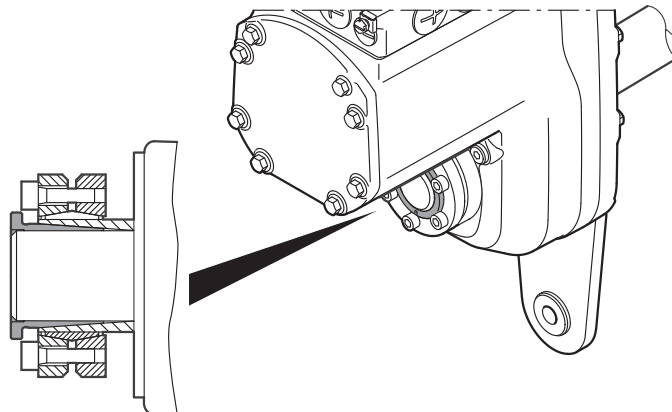

18014420038490507


11. Only tighten the screws of the shrink disk hand-tight and ensure that the outer rings of the shrink disk are parallel.

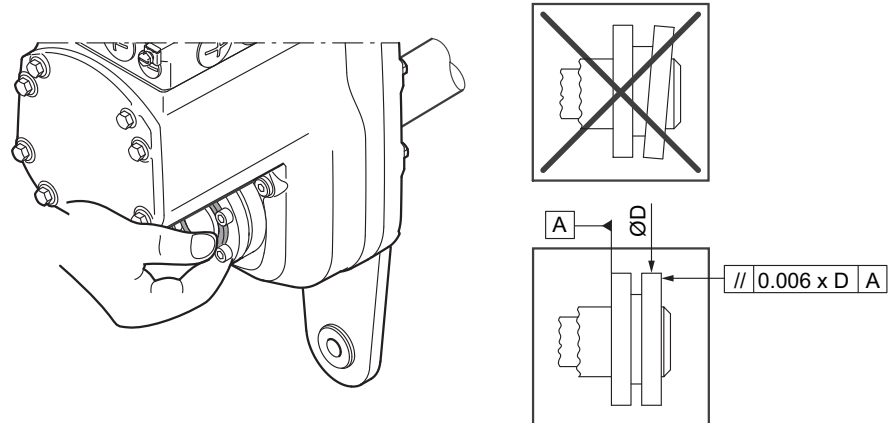

18014420038463755

12. Tighten the locking screws by working round several times from one bolt to the next (not in diametrically opposite sequence).

⇒ The exact values for the tightening torques are shown on the shrink disk.

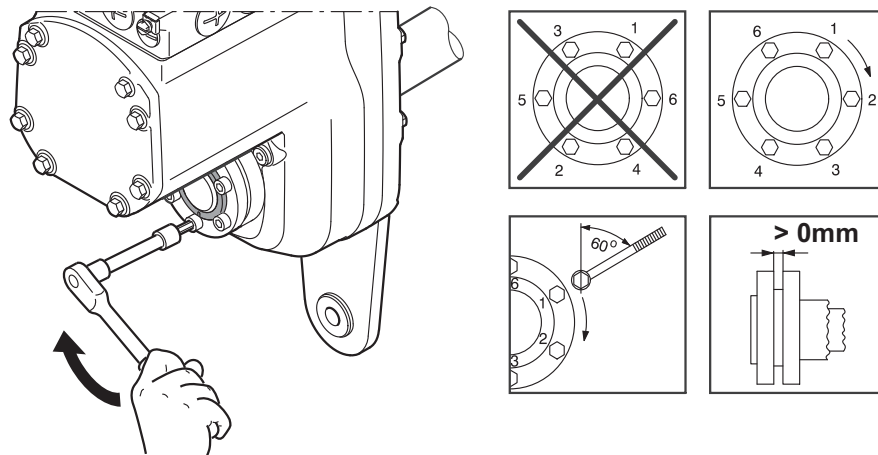


18014420038466187

13. After installation, make sure the remaining gap  $s$  between the outer rings of the shrink disks is  $> 0$  mm.

# 4 Mechanical installation


Shaft-mounted gear unit with TorqLOC® (customer shaft with contact shoulder)

14. The remaining gap between counter bushing and hollow shaft end must be  $> 0$  mm.

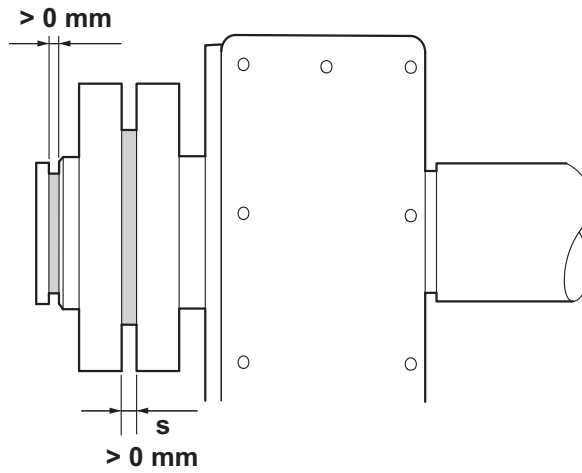

21528986635

15. Mount the torque arm and tighten it securely; observe chapter "Torque arm".

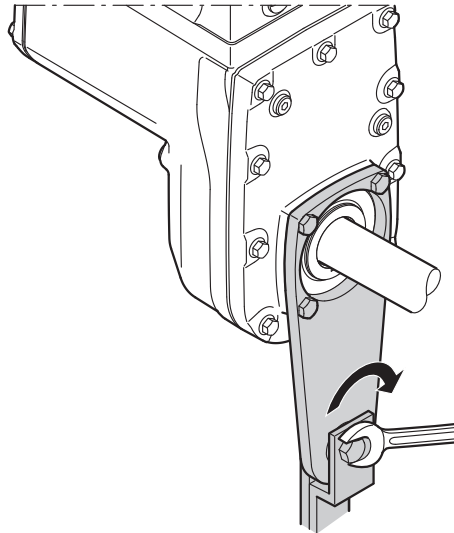

9007220783730059



## 4.8 Shaft-mounted gear unit with TorqLOC® – disassembly, cleaning, lubrication

### 4.8.1 Removal notes

#### ▲ WARNING




Risk of burns due to hot surfaces.

Serious injuries.


- Let the devices cool down before touching them.

1. Loosen the locking screws one after the other by a quarter rotation each to avoid tilting the outer rings.

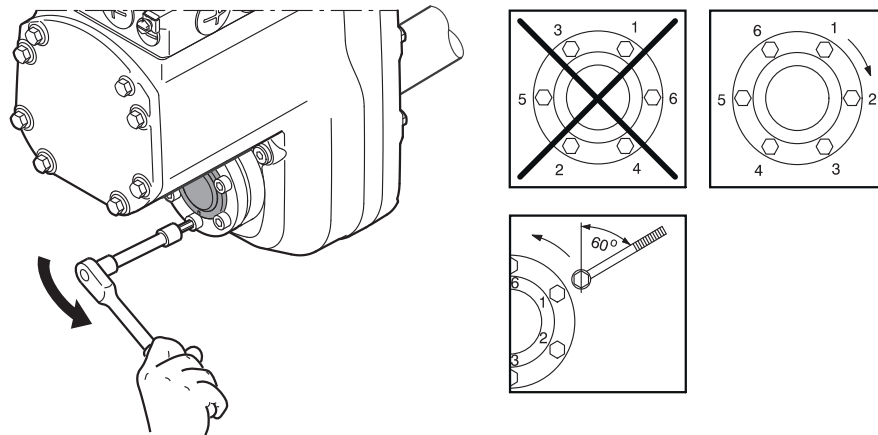

9007220782951563

2. Unscrew the locking screws evenly one after the other. Do not remove the locking screws completely.
3. Dismantle the conical steel bushing. If required, use the outer rings as pullers as follows:
  - ⇒ Remove all the locking screws.
  - ⇒ Screw the respective number of screws in the tapped holes of the shrink disk.
  - ⇒ Support the inner ring against the gear unit housing.
  - ⇒ Pull off the conical steel bushing by tightening the screws.
4. Remove the gear unit from the shaft.

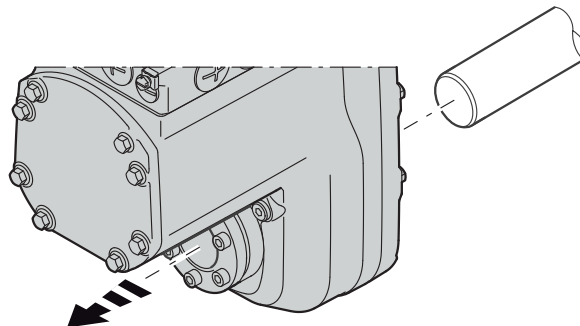

9007220783043595

5. Remove the shrink disk from the hub.

# 4

## Mechanical installation

Shaft-mounted gear unit with TorqLOC® – disassembly, cleaning, lubrication

### 4.8.2 Cleaning and lubrication

There is no need to dismantle removed shrink disks before they are reinstalled.

Clean and lubricate the shrink disk if it is dirty.

Lubricate the tapered surfaces with one of the following solid lubricants:

Lubricant (Mo S2)	Sold as
Molykote 321 (lube coat)	Spray
Molykote spray (powder spray)	Spray
Molykote G Rapid	Spray or paste
Aemasol MO 19P	Spray or paste
Aemasol DIO-sétral 57 N (lube coat)	Spray

Grease the locking screws with a multipurpose grease such as Molykote BR 2 or similar.

## 4.9 Installing the protective cover



### ⚠ WARNING


Risk of injury caused by rapidly moving output elements.

Serious injuries.

- Disconnect the drive unit from the power supply and safeguard it against unintentional power up before you start working on it.
- Equip the input and output elements (e.g. customer shaft with contact shoulder or clamping ring, shrink disk) with a touch guard.

### 4.9.1 Installing the fixed cover

1. Place the safety cover offset by 15° counterclockwise.

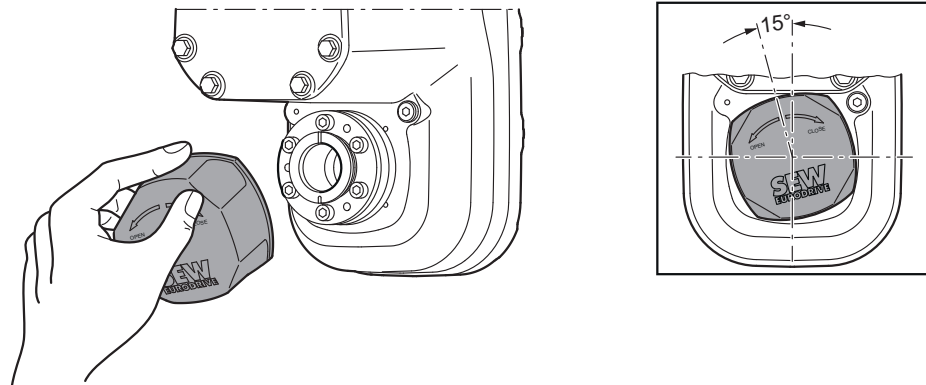


9007220768946955

2. Turn the safety cover clockwise until it locks in position.



9007220768949387

3. The following figure shows the installed safety cover.

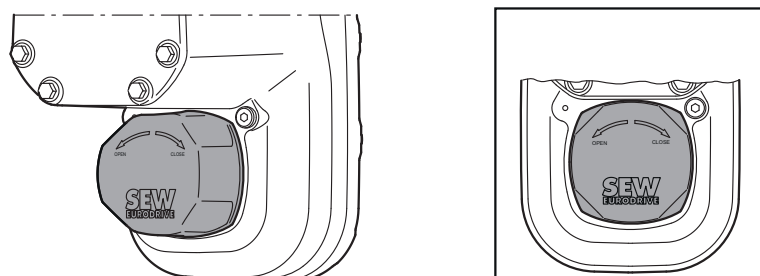


9007220768944523

# 4 Mechanical installation

## Installing the protective cover

4. Fasten the locking (in preparation) at the designated bore using the screws included in the delivery. The permitted tightening torque for the screw M4x10 is 3.3 Nm.

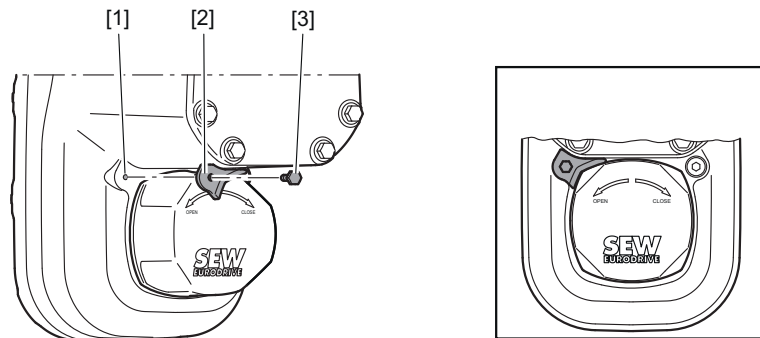

25346456459

- [1] Bore for locking (in preparation)
- [2] Locking (in preparation)
- [3] M4x10 screw (in preparation)

### 4.9.2 Installation without cover

In certain individual cases (e.g. through-shaft), you cannot install the safety cover. In these cases, the safety cover is not necessary if the system or unit manufacturer provides corresponding components to guarantee for the compliance with the required degree of protection.

If this results in additional maintenance, you have to describe this in the operating instructions for the system or component.

## 4.10 Torque arm



### NOTICE

Improper assembly may damage the drive unit.

Possible damage to property.

- Do not place torque arms under strain during installation.
- Always use bolts of quality 8.8 to fasten torque arms.



### INFORMATION


The bolts required can be enclosed with delivery, when required.

# 4 Mechanical installation

## Torque arm

### 4.10.1 Installation options

The following figure shows the possible mounting positions of the torque arm:

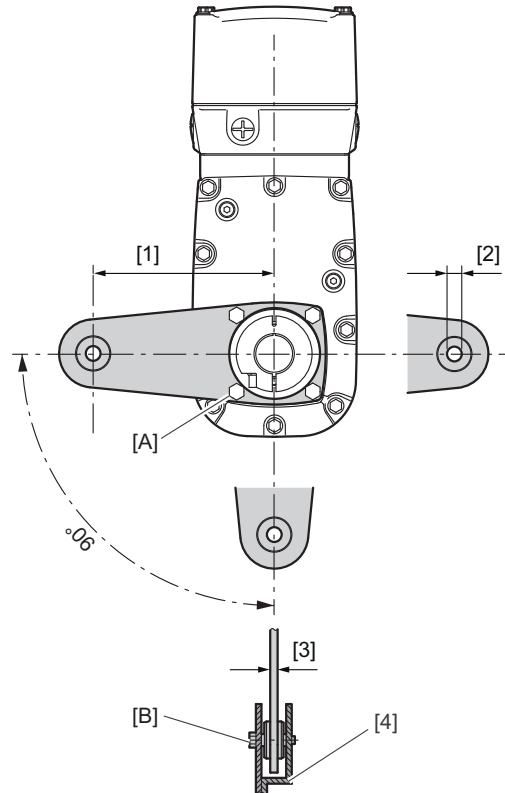

25347868811

- [1] Torque arm axis length
- [2] Bore diameter
- [3] Torque arm thickness
- [4] Bush with bearings on both ends

The following table shows the required tightening torques:

Drive	Torque arm				Tightening torque			
	Part number	[1] Axis length	[3] Thickness	[2] Bore Ø	Screw [A]		Screw [B]	
<b>MGF.T2-...-C</b>	24850497	130 mm	6 mm	13 mm	M10	48 Nm	M10	20 Nm
<b>MGF.T2-...-C</b>	24850357	160 mm	10 mm	17 mm	M10	48 Nm	M10	20 Nm
<b>MGF.T4-...-C</b>	24849405	160 mm	10 mm	17 mm	M12	70 Nm	M10	20 Nm

25887130/EN – 11/2018

## 4.11 Tightening torques



### ▲ WARNING

Risk of burns due to hot surfaces.

Serious injuries.


- Let the devices cool down before touching them.

### 4.11.1 Blanking plugs

Tighten the plastic blanking plugs **included in the delivery** by SEW-EURODRIVE with 2.5 Nm:

#### Example

The following figure shows an example. The number and position of the cable entries depends on the ordered variant.

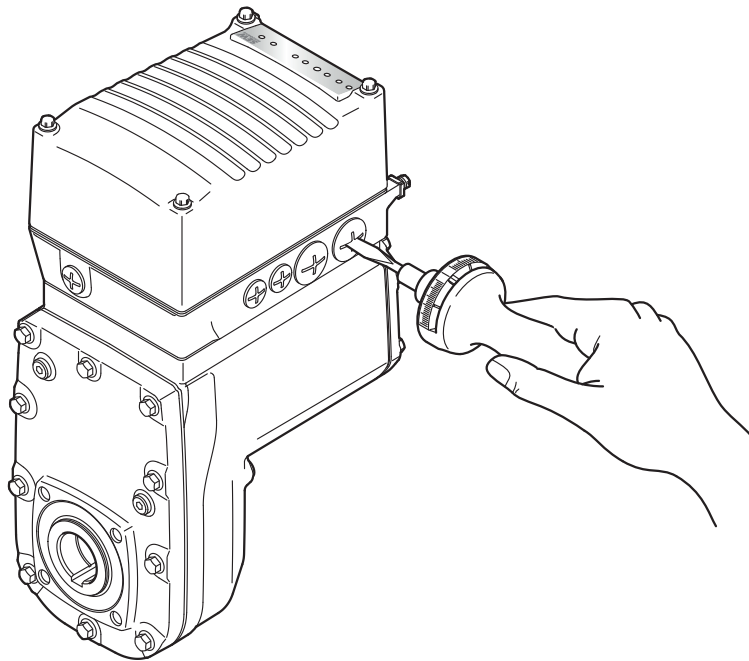

25351083019

# 4 Mechanical installation

## Tightening torques

### 4.11.2 Cable glands

#### Tightening torques

Tighten the EMC cable glands **optionally** supplied by SEW-EURODRIVE to the following torques:


Screw fitting	Part number	Contents	Size	Outer cable diameter	Tightening torque
<b>EMC cable glands (nickel-plated brass)</b>	18204783	10 pieces	M16 × 1.5	5 to 9 mm	4.0 Nm
	18204805	10 pieces	M25 × 1.5	11 to 16 mm	7.0 Nm
<b>EMC cable glands (stainless steel)</b>	18216366	10 pieces	M16 × 1.5	5 to 9 mm	4.0 Nm
	18216382	10 pieces	M25 × 1.5	11 to 16 mm	7.0 Nm

The cable retention in the cable gland must withstand the following removal force of the cable from the cable gland:

- Cable with outer diameter > 10 mm: ≥ 160 N
- Cable with outer diameter < 10 mm: = 100 N

#### Example

The following figure shows an example. The number and position of the cable entries depends on the ordered variant.

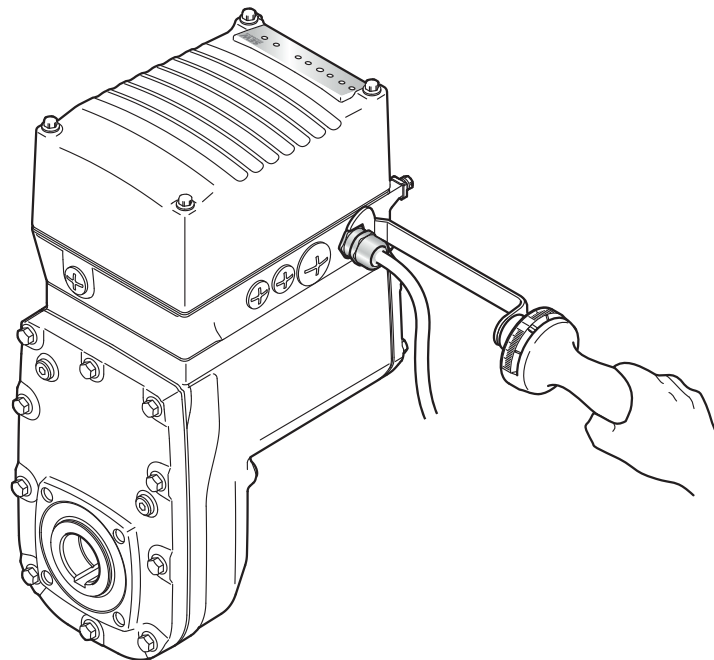




25351080587

25887130/EN – 11/2018



4.11.3 MOVIGEAR® electronics cover

Proceed as follows when installing the electronics cover: Insert the screws and tighten them in diametrically opposite sequence **step by step** with a tightening torque of 6.0 Nm.

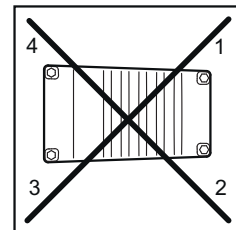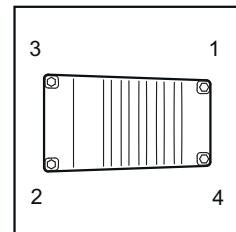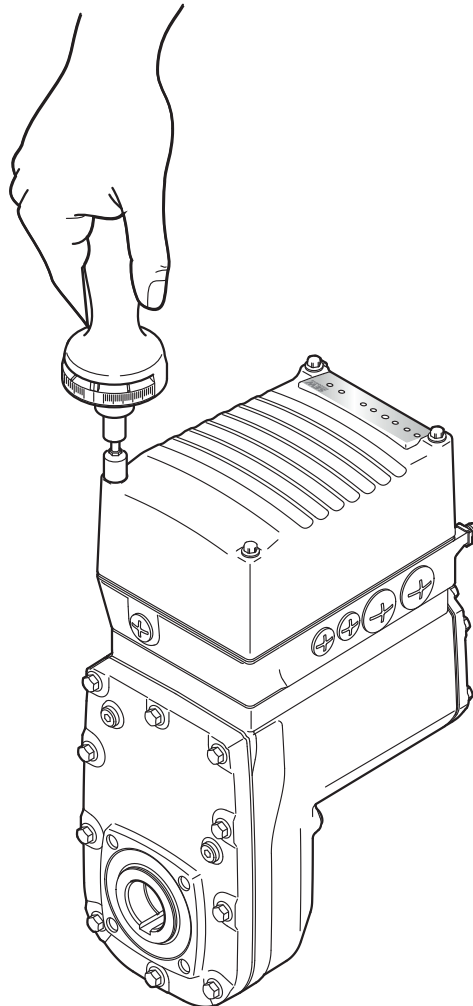

25351078155

## 5 Electrical installation

### INFORMATION



Adhere to the safety notes during installation.

---

## 5.1 Installation planning taking EMC aspects into account

### 5.1.1 Notes on arranging and routing installation components

The correct operation of decentralized drives depends on selecting the correct cables, providing correct grounding and a functioning equipotential bonding.

Always apply the **relevant standards**.

Note the following:

### 5.1.2 EMC-compliant installation

#### INFORMATION



This drive system is not designed for operation on a public low voltage supply system that supplies residential areas.

This is a product with restricted availability in accordance with IEC 61800-3. This product may cause EMC interference. In this case, it is recommended for the user to take suitable measures.

---

With respect to the EMC regulation, frequency inverters and compact drives cannot be seen as stand-alone units. They can only be evaluated in terms of EMC when they are integrated in a drive system. Conformity is declared for a described, CE-typical drive system. These operating instructions contain further information.

### 5.1.3 Cable selection, routing and shielding



#### ⚠ WARNING

Electric shock caused by faulty installation.

Severe or fatal injuries.

- Take the utmost care when installing the units.
  - Observe the connection examples.
- 


For more information on cable selection, routing and shielding, refer to chapter "Cable routing and shielding".

### 5.1.4 Equipotential bonding

Regardless of the PE connection, it is essential that **low-impedance, HF-capable equipotential bonding** is provided (see also EN 60204-1 or DIN VDE 0100-540):

- Establish a connection over a wide surface area between the drive unit and the mounting rail.
- To do so, use a ground strap (HF litz wire), for example, to connect the drive unit and the grounding point of the plant.

#### Example

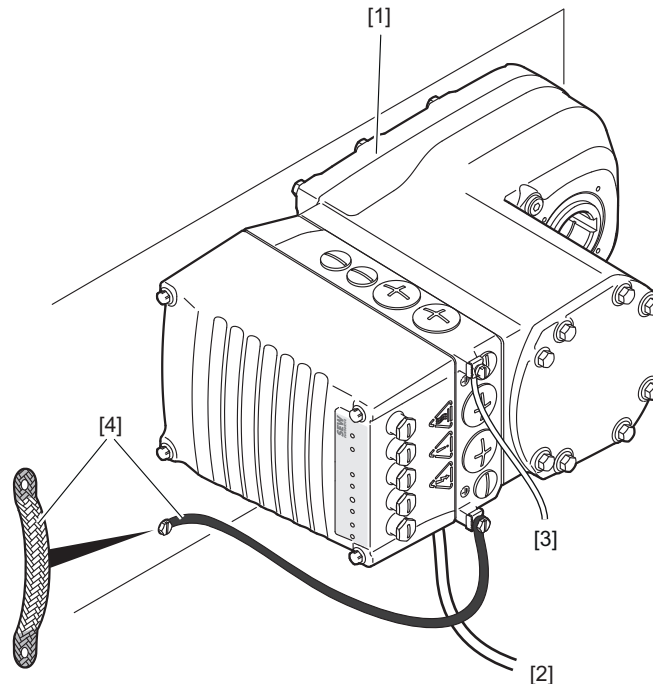

25167264651

- [1] The mechanical installation of a drive unit with hollow shaft does **not** create a conductive connection of drive unit and mounting plate (e.g. in case of MOVIGEAR® performance).
  - [2] PE conductor in the supply system cable
  - [3] 2nd PE conductor via separate terminals
  - [4] EMC-compliant equipotential bonding, for example using a ground strap (HF litz wire)  
The contact surfaces must be free of paint.
- Do not use the cable shields of data lines for equipotential bonding.


### INFORMATION



For further information on equipotential bonding for decentralized inverters and drive units, refer to the publication "Equipotential Bonding of Decentralized Inverters" by SEW-EURODRIVE.

## 5.2 Equipotential bonding at the connection box

Another option for HF-capable equipotential bonding at a connection box is the following cable gland with M6 stud bolt:

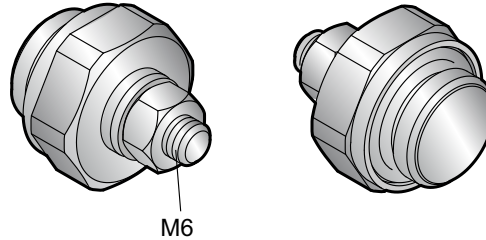

3884960907

	Tightening torque of the cable gland	Tightening torque of the M6 nut for stud bolt	Part number
<b>M16 cable gland with M6 stud bolt</b>	4.0 Nm	3.0 Nm	08189234
<b>M25 cable gland with M6 stud bolt</b>	7.0 Nm	3.0 Nm	08192685

You can install this cable gland at a connection box that still has a free cable entry of size M16 or M25.

Screw the cable gland into the free cable entry and install the grounding cable (with ring cable lug) or the HF litz wire at the M6 stud bolt.

## 5.3 Installation instructions

### 5.3.1 Permitted voltage systems

Information on the voltage systems	Information on permissibility
TN and TT systems – voltage systems with directly grounded star point	Can be used without restrictions
IT systems – voltage systems with non-grounded star point	Contact SEW-EURODRIVE
Voltage systems with grounded outer conductor	This is not permitted

### 5.3.2 Connecting supply system cables

- The rated voltage and rated frequency of the drive unit must correspond with the supply system data.
- Dimension the cable cross section according to the input current  $I_{line}$  for rated power (see chapter "Technical data and dimension sheets").
- Install safety features F11/F12/F13 for line fuses at the beginning of the power supply cable behind the supply bus junction, see chapter "Connecting MOVIGEAR® performance".  
Size the safety features according to the cable cross section.
- Use only copper conductors with a minimum temperature range of 90 °C as connection cable.

### 5.3.3 Permitted cable cross section of terminals

#### Line terminals X1

Observe the permitted cable cross sections for installation:

Line terminals X1	without conductor end sleeve	With conductor end sleeves (with or without plastic collar)
Connection cross section (mm <sup>2</sup> )	0.5 mm <sup>2</sup> – 6 mm <sup>2</sup>	0.5 mm <sup>2</sup> – 6 mm <sup>2</sup>
Stripping length	13 mm – 15 mm	
Current carrying capacity	24 A (max. loop-through current)	

#### Terminals X3 for braking resistor

Observe the permitted cable cross sections for installation:

Terminals X3 for braking resistor	without conductor end sleeve	With conductor end sleeves (with or without plastic collar)
Connection cross section	0.08 mm <sup>2</sup> – 4.0 mm <sup>2</sup>	0.25 mm <sup>2</sup> – 2.5 mm <sup>2</sup>
Stripping length	8 mm – 9 mm	

#### Control terminals X9


Observe the permitted cable cross sections for installation:

Control terminals X9	without conductor end sleeve	With conductor end sleeve (without plastic collar)	With conductor end sleeves (with plastic collar)
Connection cross section	0.08 mm <sup>2</sup> – 2.5 mm <sup>2</sup>	0.25 mm <sup>2</sup> – 2.5 mm <sup>2</sup>	0.25 mm <sup>2</sup> – 1.5 mm <sup>2</sup>
Stripping length	5 mm – 6 mm		

Control terminals X9	without conductor end sleeve	With conductor end sleeve (without plastic collar)	With conductor end sleeves (with plastic collar)
Current carrying capacity	3.5 A (max. loop-through current)		


#### 5.3.4 Activating line terminals X1

Adhere to the following sequence when actuating the line terminals:

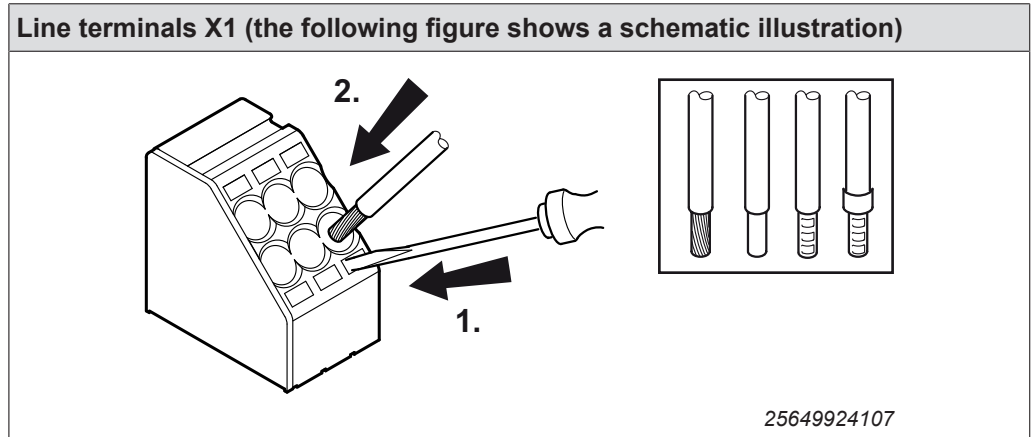


#### 5.3.5 Activating terminals X3 for the braking resistor

Adhere to the following sequence when you activate the terminals X3 for the braking resistor:

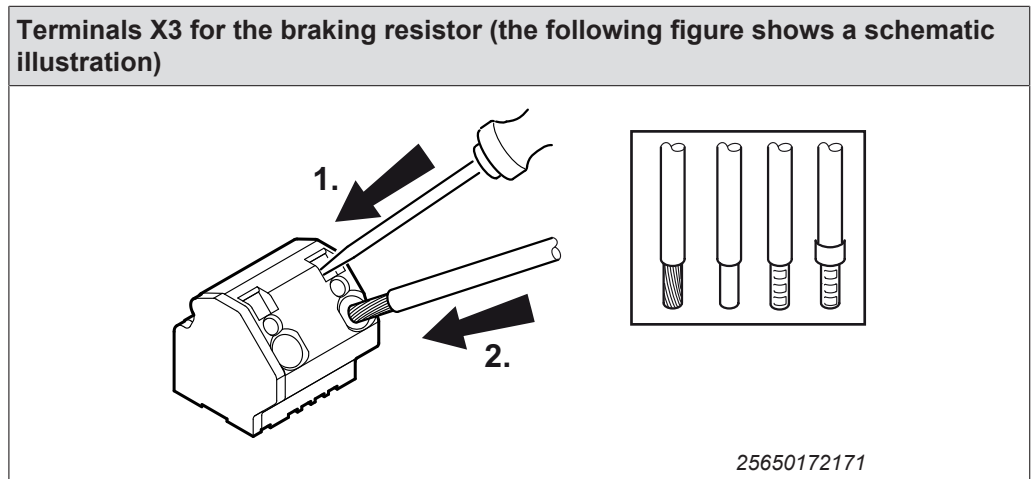

### 5.3.6 Activating control terminals X9

Adhere to the following sequence when actuating the X9 control terminals:

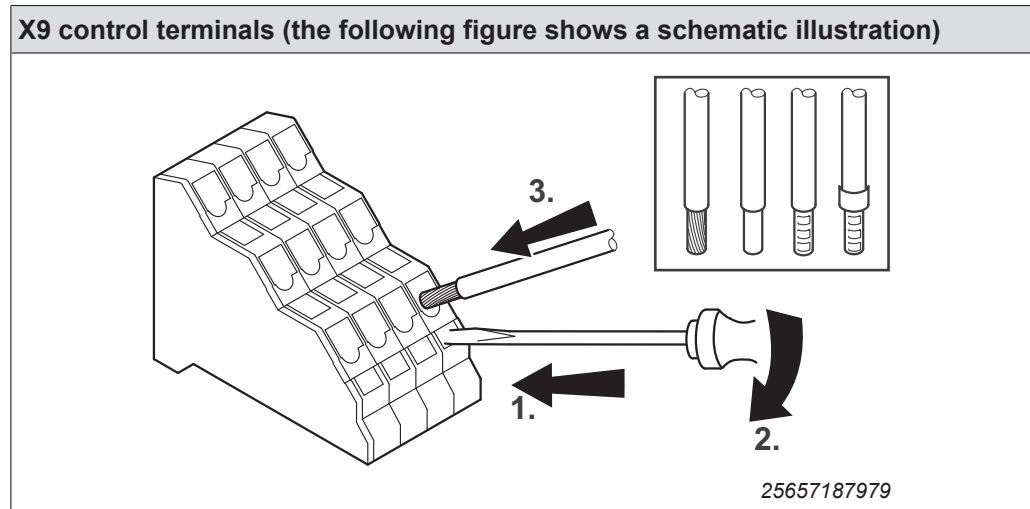

### 5.3.7 Residual current device



#### ▲ WARNING

No protection against electric shock if an incorrect type of residual current device is used.

Severe or fatal injuries.

- The product can cause direct current in the PE conductor. If a residual current device (RCD) or a residual current monitoring device (RCM) is used for protection in the event of a direct or indirect contact, only a type B RCD or RCM is permitted on the supply end of the product.
- If the use of a residual current device is not mandatory according to the standards, SEW-EURODRIVE recommends not to use a residual current device.

### 5.3.8 Line contactor



#### NOTICE

Non-compliance with the minimum switch-on/switch-off times.

Inverter damage.

- Keep the supply system switched off for 10 s before switching the power back on.
- Do not switch the supply system off and on more than once per minute.
- Use only a contactor of utilization category AC3 (EN 60947-4-1) as a line contactor.

## 5.3.9 Notes on PE connection



### ▲ WARNING


Electric shock due to incorrect connection of PE.

Severe or fatal injuries.

- The permitted tightening torque for the screw is 2.0 – 2.4 Nm.
- Observe the following notes regarding PE connection.

Make sure the lifting eye has been removed before you connect the PE cable.

Store the lifting eyes for future service work.

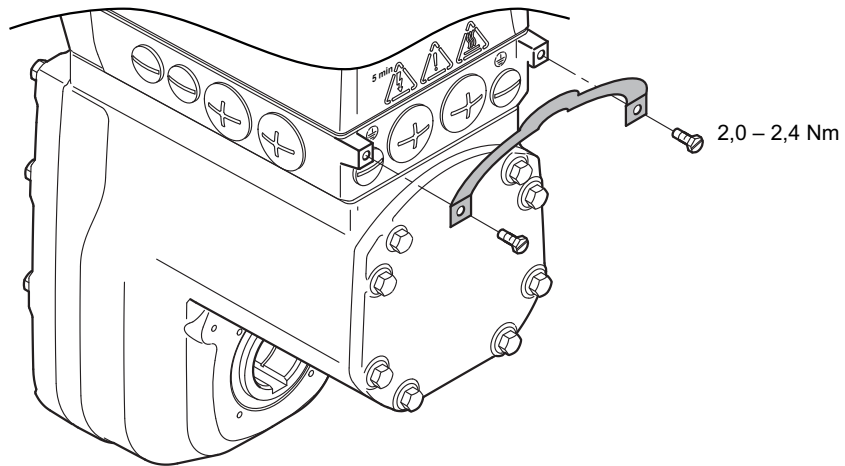

25771924875

Prohibited assembly	Recommendation: Assembly with cable lug <sup>1)</sup> Permitted for all cross sections	Assembly with solid connecting wire <sup>1)</sup> Permitted for cross sections up to max. 2.5 mm <sup>2</sup>
	<p style="text-align: center;">9007201632429067</p>	<p style="text-align: center;">9007201632413579</p>

1) Use the specified material for the assembly that is included in the accessory bag.

[1] Forked cable lug suitable for M5 PE screws

25887130/EN – 11/2018



## Leakage currents

Earth-leakage currents  $\geq 3.5$  mA may occur during normal operation. In order to fulfill EN 61800-5-1, observe the following notes:

- The protective earth (PE) connection must meet the requirements for plants with high earth-leakage currents.
- This usually means
  - installing a PE connection cable with a minimum cross section of  $10 \text{ mm}^2$  (copper conductor)
  - or installing a second PE connection cable in parallel with the original PE connection.

The 2nd PE connection is not required according to DIN EN 61800-5-1, if the line connection is equipped with a plug connector for industrial applications (according to IEC 60309) and if the supply system cable has a diameter  $\geq 2.5 \text{ mm}^2$ .

## INFORMATION



The round M23 plug connector of the 723 series by TE Connectivity - Intercontec products meet the requirements according to IEC 60309 "Plug connectors for industrial applications".

### 5.3.10 Installation above 1000 m amsl

You can install the drive units at altitudes from 1000 m to a maximum of 3800 m above sea level<sup>1)</sup> provided the following conditions are met:

- The nominal motor current  $I_N$  is reduced due to the reduced cooling above 1000 m (see chapter "Technical data and dimension sheets").
- Above 2000 m above sea level, the air and creeping distances are only sufficient for overvoltage class II. If the installation requires overvoltage category III, you will have to install additional external overvoltage protection to limit overvoltage peaks to 1.5 kV phase-to-phase and 2.5 kV phase-to-ground.
- If safe electrical disconnection is required, it must be implemented outside the unit for altitudes of 2000 m above sea level and higher (safe electrical disconnection in accordance with EN 61800-5-1).
- At installation altitudes between 2000 m and 3800 m above sea level, the permitted rated power supply voltages are reduced as follows:
  - By 6 V per 100 m

1) The maximum altitude is limited by the reduced electric strength due to the lower air density.

### 5.3.11 Protection devices


- Drive units are equipped with integrated protection devices against overload.
- Cable protection for the power cable must be implemented using external overload devices.
- Observe the relevant standards concerning the cable cross section, voltage drop and installation type.

### 5.3.12 UL-compliant installation (in preparation)

UL and cUL approval for the MOVIGEAR® performance series is in preparation.

### 5.4 Installation topology (example: standard installation)

The following figure shows a basic installation topology with MOVIGEAR® performance:

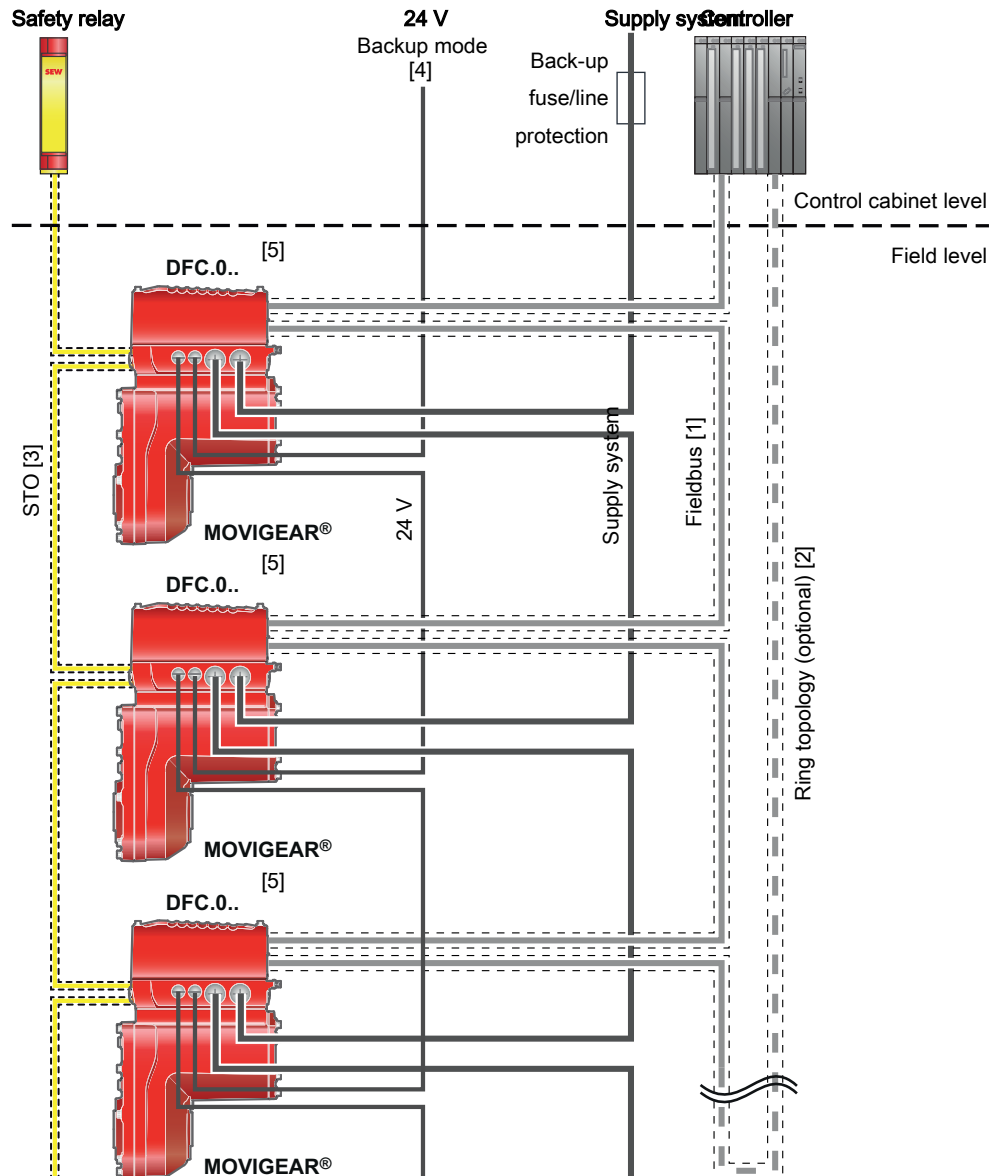

25266769291

- [1] The maximum permitted cable length of the Ethernet fieldbus cable between the drive units is 100 m. The maximum permitted cable length between controller and drive unit is 100 m. The permitted length may be reduced due to technical data of the controller.
- [2] The fieldbus can also be installed in ring topology.
- [3] The STO cable between the safety relay and the last drive unit may not be longer than 100 m.
- [4] The drive unit is equipped with an integrated DC 24 V supply. As an option, the electronics of the drive unit may be supported by an external DC 24 V supply.
- [5] Electronics cover DFC.0.. with 2 x M12 fieldbus connection

## 5.5 Terminal assignment

### ⚠ WARNING



Electric shock due to regenerative operation when the shaft is turning.

Severe or fatal injuries.

- Secure the output shaft against rotation when the electronics cover is removed.

### INFORMATION




The terminals X3 for connecting the braking resistor can be connected to an optional, internal braking resistor. As an alternative, you can connect an external braking resistor if the power rating of this braking resistor is not sufficient.

Proceed as follows to do so:

- Loosen the connections of the internal braking resistor.
- Insulate and fasten the connections of the internal braking resistor. Make sure all connections leading to other components are electrically insulated.
- Connect the external braking resistor again. Observe the installation instructions of the device and of the external braking resistor.


The following figure shows the terminal assignment of MOVIGEAR® ..-DFC-C:

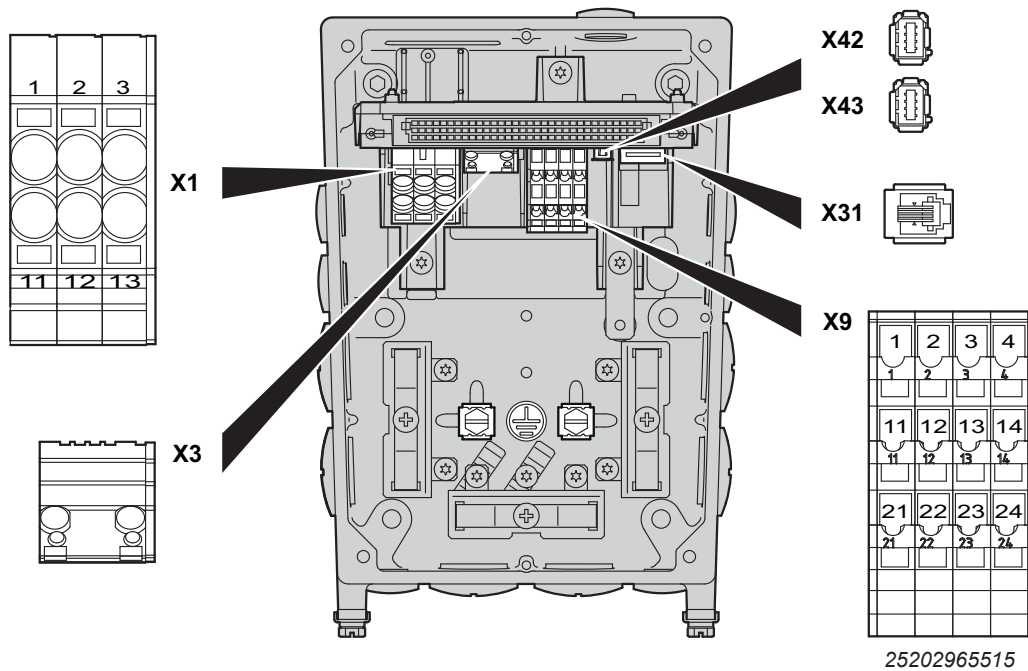

Assignment				
Terminal	No	Name	Marking	Function
<b>X1 Line terminals</b>	1	L1	Brown	Line connection phase L1 – IN
	2	L2	Black	Line connection phase L2 – IN
	3	L3	Gray	Line connection phase L3 – IN
	11	L1	Brown	Line connection phase L1 – OUT
	12	L2	Black	Line connection phase L2 – OUT
	13	L3	Gray	Line connection phase L3 – OUT
	⊕	–	PE	–
<b>X3 Braking resistor terminals</b>	1	BW	–	Braking resistor connection
	2	BW	–	Braking resistor connection
<b>X9 Control terminals</b>	1	F_STO_P1	Yellow	Input STO+
	2	F_STO_P1	Yellow	Input STO+ (to loop through)
	3	0V24_OUT	–	0V24 reference potential for DC 24 V auxiliary output
	4	24V_OUT	–	DC 24 V auxiliary output
	11	F_STO_M	Yellow	Input STO_ground
	12	F_STO_M	Yellow	Input STO_ground (to loop through)
	13	24V_IN	–	DC 24 V supply
	14	24V_IN	–	DC 24 V supply (for further looping)
	21	F_STO_P2	Yellow	Input STO+
	22	F_STO_P2	Yellow	Input STO+ (for further looping)
	23	0V24_IN	–	0V24 reference potential for DC 24 V supply
	24	0V24_IN	–	0V24 reference potential for DC 24 V supply (for further looping)
<b>X42 fieldbus interface for port 1</b>	1	TX+	–	Transmit line +
	2	TX-	–	Transmit line -
	3	RX+	–	Receive line +
	6	RX-	–	Receiving cable -
<b>X43 fieldbus interface for port 2</b>	1	TX+	–	Transmit line +
	2	TX-	–	Transmit line -
	3	RX+	–	Receive line +
	6	RX-	–	Receiving cable -


Assignment				
Terminal	No	Name	Marking	Function
<b>X31 Engineering interface</b>	1	0V24_OUT	–	0V24 reference potential for DC 24 V auxiliary output
	2	CAN_L	–	CAN Low connection
	3	CAN_H	–	CAN High connection
	4	24V_OUT	–	DC 24 V auxiliary output

The following figure shows how terminals X9 were jumpered at the factory (only applicable to designs without plug connectors with STO function). For additional information, refer to chapter "Functional safety":

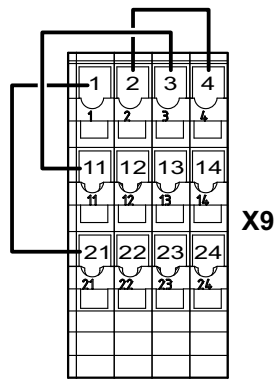

9007221264582283

#### 5.6 Connection of the drive unit MOVIGEAR® performance

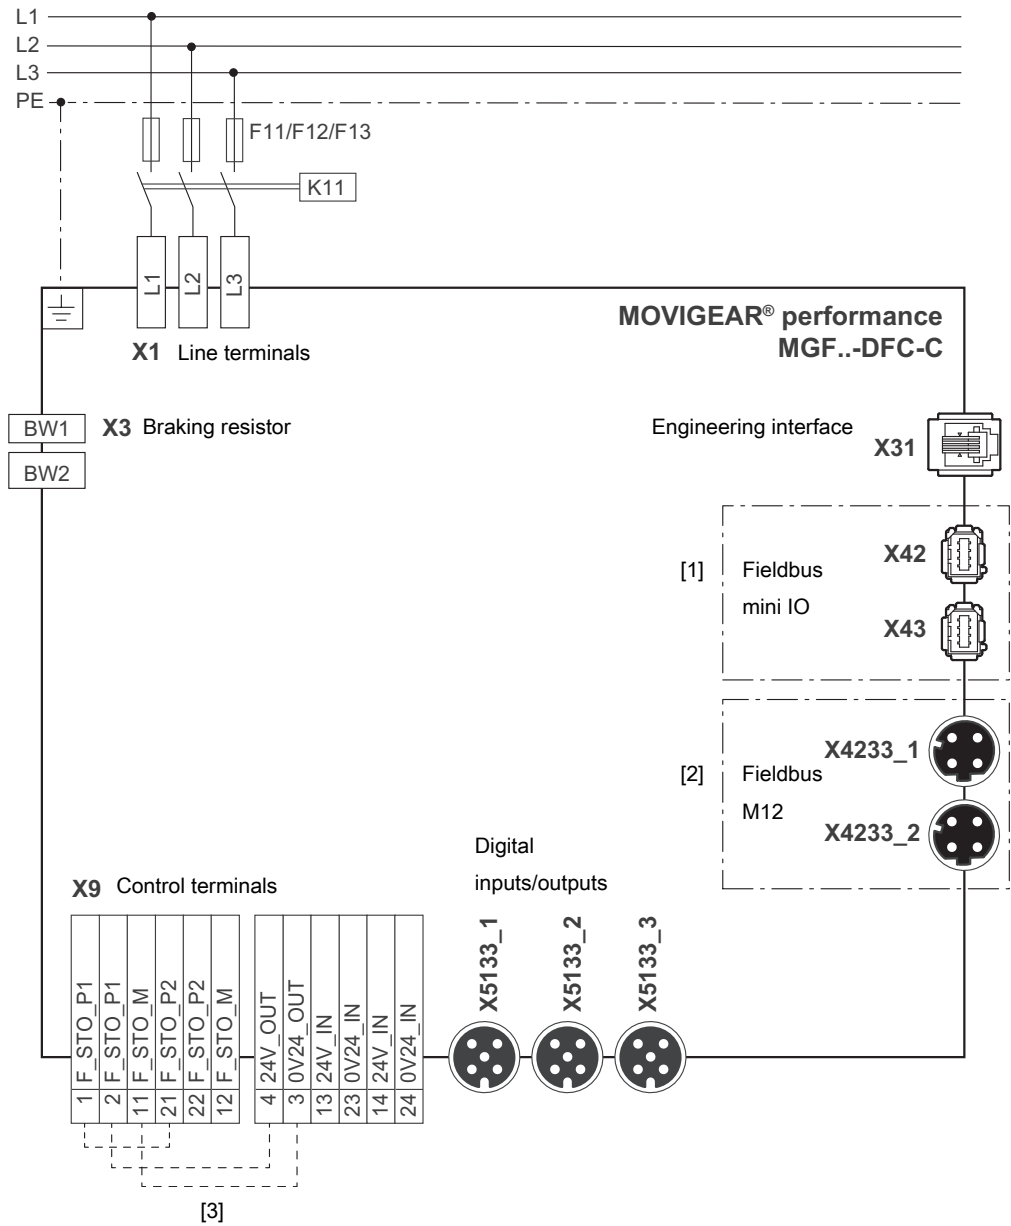

25571474187

- [1] Only for designs with electronics cover DFC.1..
- [2] Only for designs with electronics cover DFC.0..
- [3] Jumpers installed at the factory (only applicable to designs without plug connectors with STO function). For additional information, refer to chapter "Functional safety".

For the terminal assignment, refer to chapter "Terminal assignment".

For the plug connector assignment, refer to chapter "Plug connectors".

## 5.7 Cable routing and cable shielding

### 5.7.1 Accessory bag with installation equipment (part number 18241395)


#### INFORMATION



For some installation variants, you do not need all the parts of the accessory kit.


Each MOVIGEAR® drive unit is delivered with an accessory bag that contains installation equipment for cable shielding (except for when the order didn't include all possible connections as plug connector design):

- **A1: Installation material for line and hybrid cables:**  
2 x shield clamps with shield plate and screws to connect the shield of line cables or hybrid cables (outer shield).
- **A2: Conductive film:**  
2 x pieces of conductive film to wind around the braid shield. Use the conductive film if required.
- **B: Installation equipment for signal lines:**  
3 x shield clamps with screw to connect the shield of line cables (e.g. STO).

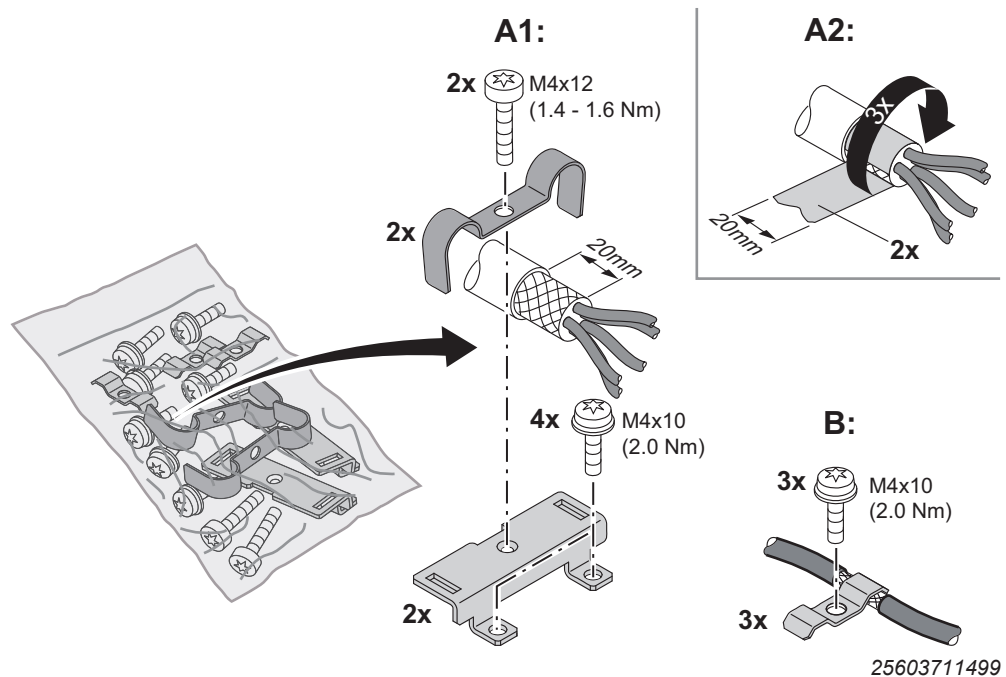

### 5.7.2 General installation options

The following figure shows the general installation options. The following chapters show common examples and contain important notes on cable selection and cable routing.

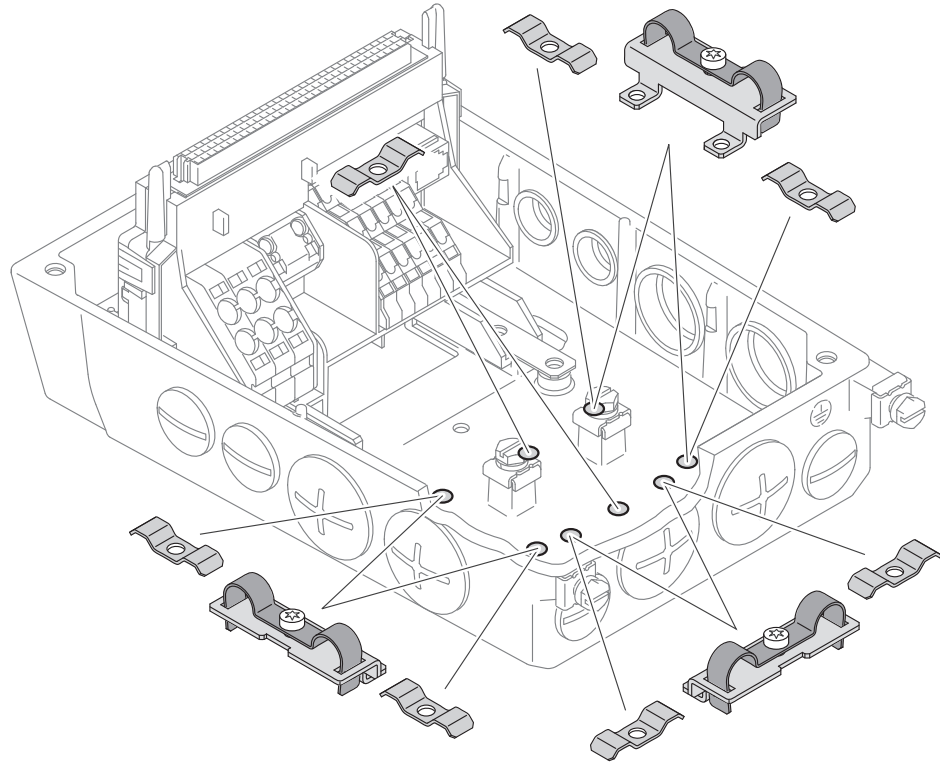

25205817355




### 5.7.3 Installation with separately routed Ethernet cable

#### Notes on cable routing and shielding – Recommended cable routing

Note the following when routing and shielding the cables:

- Cable selection
  - For cable selection, note chapter "Technical data and dimension sheets / Specification of recommended Ethernet connection cable" in the operating instructions.
  - You can use unshielded cables for the supply system connection.
- Cable shielding – signal lines
  - Connect the shields of the signal lines to the metal housing of the unit using the shield clamps of the installation equipment kit. To do so, strip off the cable sheath around the shield connection surface.
  - As an alternative, you can use optionally available EMC cable glands to connect the shield of signal lines, see chapter "Cable glands".
- External braking resistor
  - Also observe the notes in chapter "terminal assignment".
- Observe the permitted bending radii of the installed cables for cable routing.

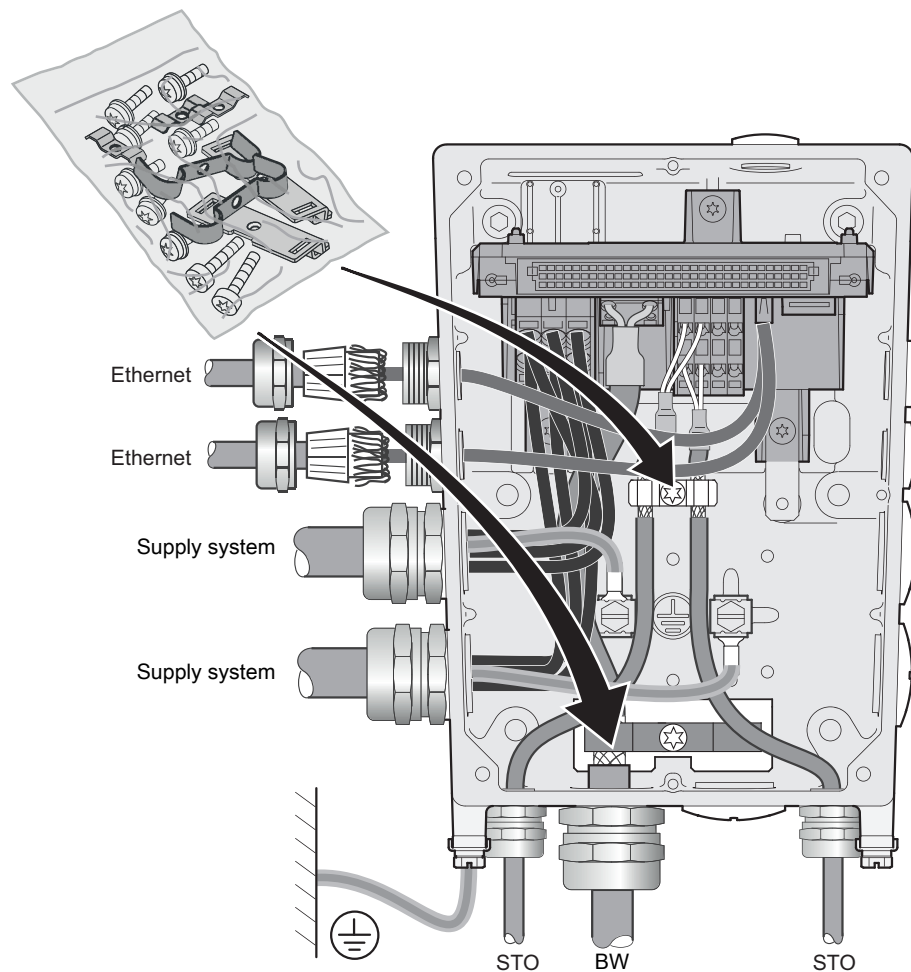


25207545995

### 5.8 EMC cable glands

#### 5.8.1 Cable shielding (alternative) – Control cables


As an alternative to using shield clamps for control cables (STO, binary signals), you can use EMC cable glands, which are available as an option, to connect the shield.

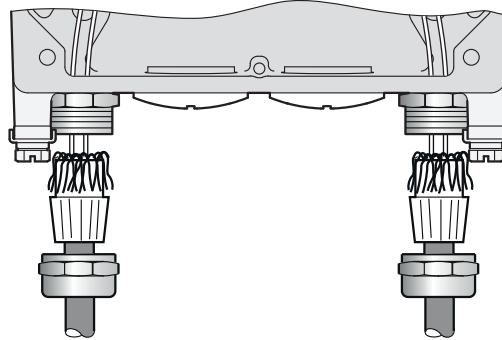

25216680843

#### 5.8.2 Assembly of EMC cable glands

Fit the EMC screw fittings supplied by SEW-EURODRIVE according to the following picture:

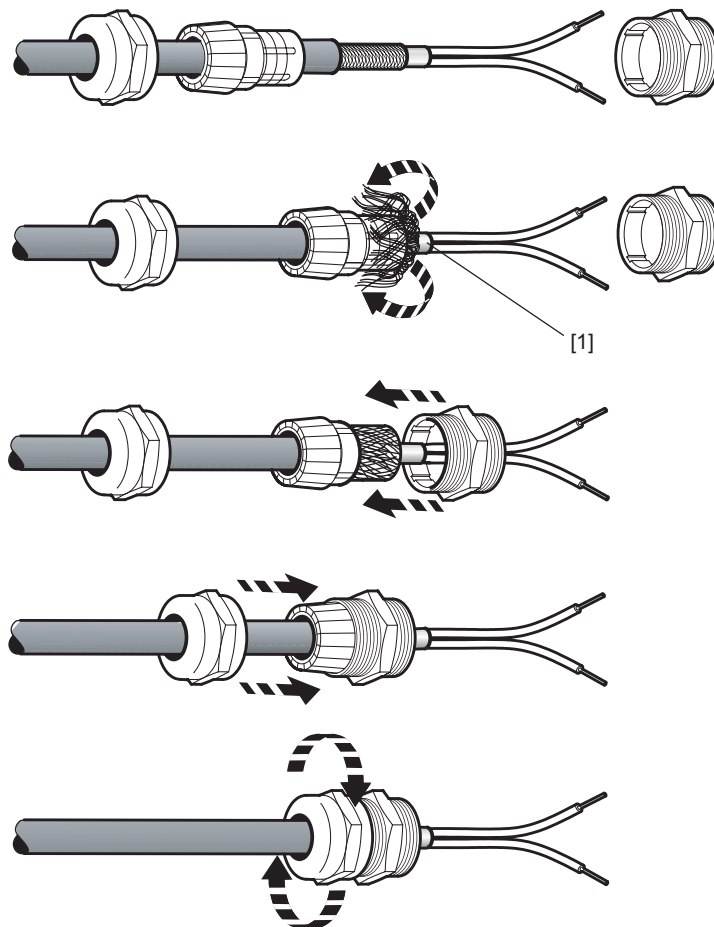

[1] Cut off insulation foil and fold it back.

18014401170670731

25887130/EN – 11/2018

## 5.9 Plug connectors

### 5.9.1 Representation of connections

The wiring diagrams of the plug connectors depict the contact end of the connections.

### 5.9.2 Designation key

The designation of plug connectors is specified according to the following key:

<b>X</b>	<b>Terminal</b>
<b>2</b>	<b>Group</b> 1 = Power input 2 = Power output 3 = Encoder 4 = Bus 5 = Inputs and outputs
<b>01</b>	<b>Function</b> Function of the plug connector within a group
<b>2</b>	<b>Type</b> Wiring diagram of the plug connector within a function
<b>–</b>	
	<b>Group number (optional)</b> for several plug connectors with the same function
	<b>Sequence number (optional)</b> In case of several plug connectors in one group

### 5.9.3 Connection cables

#### INFORMATION



For more information on cable types, refer to the chapter "Technical data".


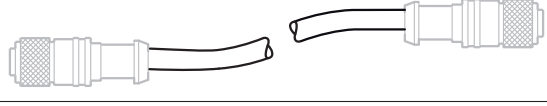


Connection cables are not included in the scope of delivery.

Prefabricated cables for connecting SEW-EURODRIVE components can be ordered. For each connection, the available prefabricated cables are listed. Specify the part number and length of the required cable in your order.

The number and design of the required connection cables depend on the type of the device and the components to be connected. This is why you do not need all listed cables.

#### Cable types

The table below shows the depiction and what they mean:

Representation	Meaning
	Fixed length
	Variable length
	Suitable for cable carriers
	Not suitable for cable carriers

#### Cable routing

Observe the permitted bending radii of the installed cables for cable routing. For detailed information, refer to chapter "Technical data / Dimension sheets / Plug connectors including mating connectors".

#### Using prefabricated cables with plug connectors

SEW-EURODRIVE uses prefabricated cables for certifications, type tests and approval of the devices. The cables provided by SEW-EURODRIVE fulfill all requirements necessary to ensure that the device and all connected components function properly. The devices under consideration are always the basic devices including all connected components and corresponding connection cables.

This is why SEW-EURODRIVE recommends to use only the prefabricated cables specified in the documentation.

When using devices with integrated safety functions according to EN ISO 13849, you also have to adhere to all the conditions and requirements for the installation and routing of cables described in the documentation for the devices concerning functional safety.

### *Using third-party cables with plug connectors*

If third-party cables are used – even if these cables are technically adequate – SEW-EURODRIVE does not accept any liability and cannot guarantee unit properties or functions.

When using third-party cables to connect the device and/or device components, make sure to comply with all applicable national regulations. Note that the technical features of the unit or system of units might be affected inadvertently when using non-SEW cables. This concerns in particular the following properties:

- Mechanical properties (e.g. IP degree of protection, cable carrier suitability)
- Chemical properties (e.g. silicone and halogen free, resistance to substances)
- Thermal properties (e.g. thermal stability, increase in unit temperature, flammability class)
- EMC behavior (such as interference emission limit values, compliance with interference immunity values stipulated in standards)
- Functional safety (approvals according to EN ISO 13849-1)

Third-party cables not explicitly recommended by SEW-EURODRIVE must meet at least the requirements of the following standards and have been permitted according to these plug connector standards:


- IEC 60309
- IEC 61984

# 5 Electrical installation

## Plug connectors

### 5.9.4 Plug connector positions at MOVIGEAR® performance

The following figure shows possible plug connector positions:

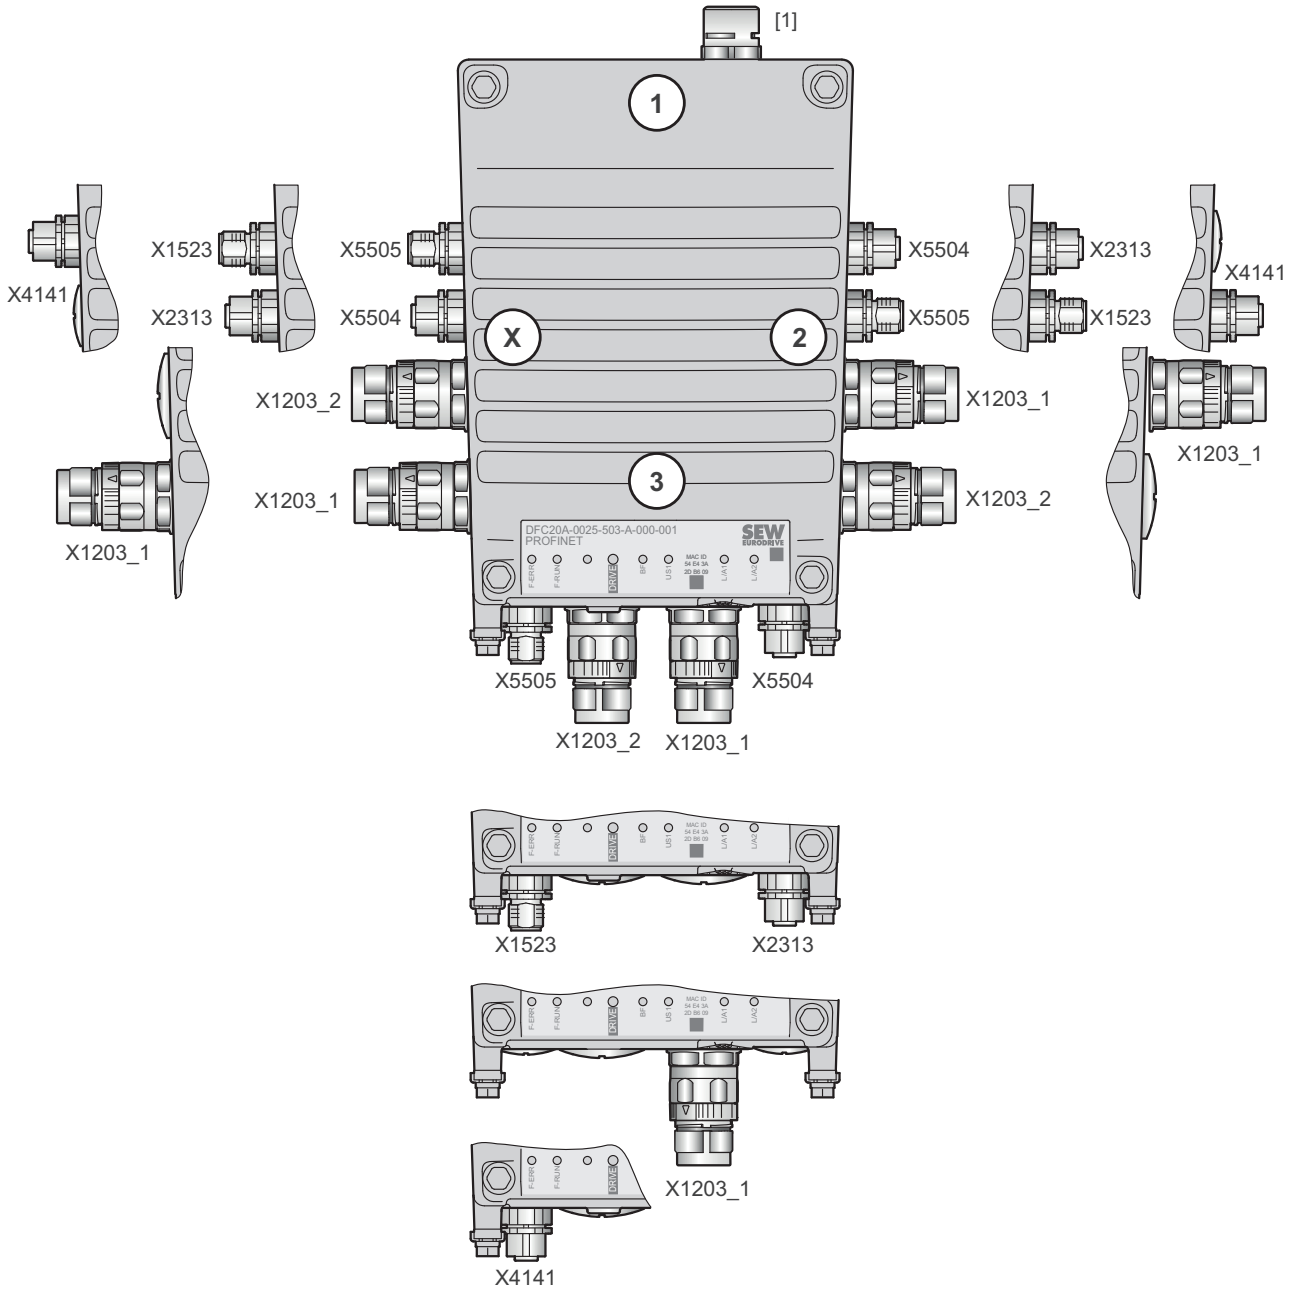

25217258379

Plug connector				Not together at a position with the plug connector:
Designation	Coding ring/ color	Function	Position	
X1203_1	Black	AC 400 V connection <sup>1)</sup>	X, 2 or 3	–
X1203_2	Black	AC 400 V connection	X, 2 or 3	–
X5504	Yellow	STO (3-core connection) <sup>2)</sup>	X, 2 or 3	• X2313
X5505	Yellow	STO (3-core connection) <sup>2)</sup>	X, 2 or 3	• X1523 • X4141


Plug connector				Not together at a position with the plug connector:
Designation	Coding ring/ color	Function	Position	
X1523	Black	DC 24 V input backup voltage	X, 2 or 3	<ul style="list-style-type: none"> <li>• X5505</li> <li>• X4141</li> </ul>
X2313	Black	DC 24 V output backup voltage	X, 2 or 3	<ul style="list-style-type: none"> <li>• X5504</li> </ul>
X4141	Black	Engineering interface	X, 2 or 3	<ul style="list-style-type: none"> <li>• X5505</li> <li>• X1523</li> </ul>
–	–	[1] Optional pressure compensation	1	–

1) Plug connector X1203\_1 can also be ordered separately (i.e. without plug connector X1203\_2).

2) Plug connectors X5504 and X5505 can only be ordered together.

### 5.9.5 Plug connector positions at the electronics cover

The following figure shows the plug connector positions:

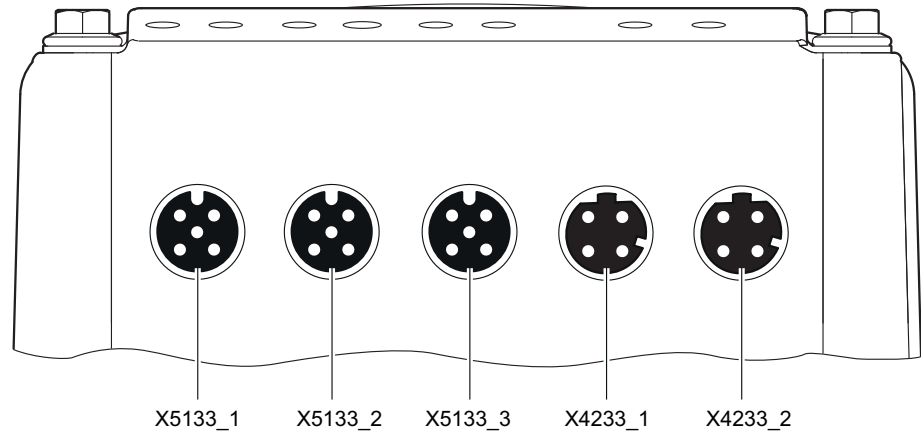

18014420217585035

Plug connector	Function
X5133_1	Digital inputs DI01 and DI02
X5133_2	Digital inputs DI03 and DI04
X5133_3	Digital inputs/outputs DIO01 and DIO02
X4233_1	Fieldbus/Ethernet interface, port 1
X4233_2	Fieldbus/Ethernet interface, port 2




### 5.9.6 Plug connector variant

#### M12 plug connector

M12 plug connectors at the connection box are pre-installed so they match the connection cables provided by SEW-EURODRIVE. Customers can adjust the orientation of plug connectors if required.

The following figure shows a schematic illustration with the permitted tightening torques:

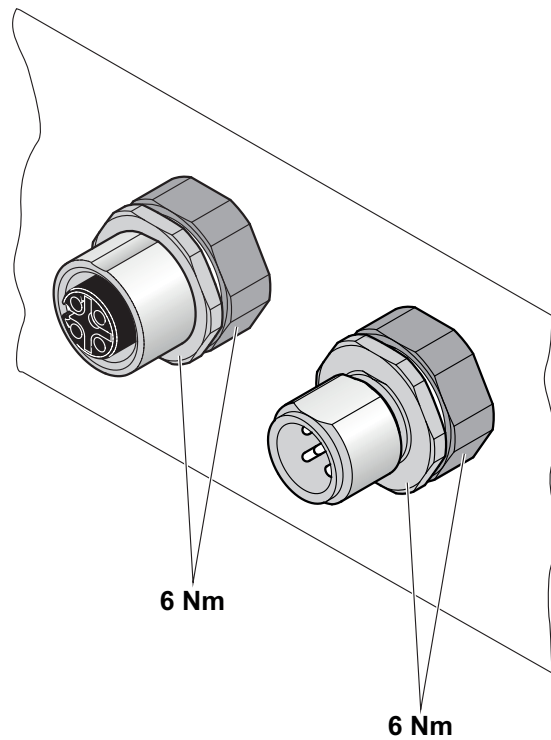

19443420299

## M23 plug connector

**▲ CAUTION**

Possible damage of the right-angle connector when rotated without mating connector.

Irreparable damage to the thread, damage to the sealing surface.

- Do not use pliers to adjust the right-angle connector before connecting it.

**▲ CAUTION**

Loss of the guaranteed degree of protection.

Potential damage to property.

- Remove the union nut from the M23 plug connector using 3 Nm.
- Between plug connector and bushing is a gap of 2 mm.

**▲ CAUTION**

Adjusting the right-angle connector too often can damage it.

Potential damage to property.


- Adjust the plug connector only when installing and connecting the drive unit.
- Do not turn the plug connector regularly once it has been installed.

The M23 plug connectors are available in the following variants:

- [1] "Straight" plug connector
- [2] "Right-angle" plug connector

Once the mating connector has been plugged in, the "right-angle" connector can be adjusted without using additional tools.

Example of MOVIGEAR® performance

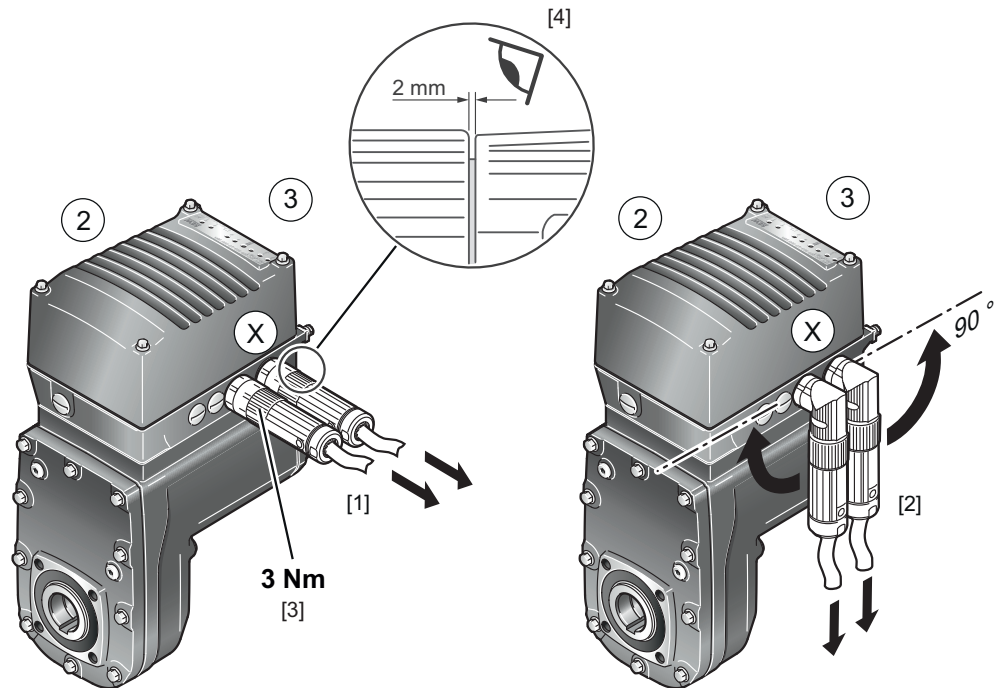

25221728907

- [1] "Straight" design
- [2] "Angled" design
- [3] The tightening torque for the union nut is 3 Mn.  
You can order suitable tools from TE Connectivity - Intercontec products using the following order number:
  - Socket wrench 3 Nm, 1/4" external square driver: C1.020.00
  - Hook wrench 1/4" square socket, suitable to the 923/723 series with SpeedTec equipment: C6.216.00
- [4] Between plug connector and bushing is a gap of 2 mm.



### 5.9.7 Using plug connectors assembled by yourself

The power plug connectors for assembling connection cables yourself, and the corresponding assembly tool set is available for order from TE Connectivity - Intercontec products.

Contact TE Connectivity - Intercontec products if the order designation is not available in the online order system of Intercontec.

#### Order information

The table below shows the order designations for connectors by TE Connectivity - Intercontec products with the matching coding for assembly by the customer:

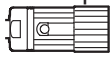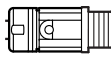Plug connector type		Designation for order from the supplier TE Connectivity - Intercontec products
Coding ring: Black	Cable plug (male) 	H 51 A 019 MR 02 59 0102 000
	Cable socket (female) 	H 52 A 013 FR 02 59 0102 000

## 5.10 Optional plug connector assignment



### ⚠ WARNING

Electric shock when disconnecting or connecting voltage-carrying plug connectors.

Severe or fatal injuries

- Switch off the line voltage.
- Never plug or unplug plug connectors while they are energized.

### 5.10.1 X1203\_1 and X1203\_2: AC 400 V connection

The following table shows information about this connection:

Function		
AC 400 V connection for supplying the device/for looping through		
Connection type		
M23, SEW insert, 723 series, SpeedTec-capable, company: TE/Intercontec, female, coding ring: black, protected against contact		
Connection diagram		
Assignment		
No.	Name	Function
A	L1	Line connection phase L1
B	L2	Line connection phase L2
C	L3	Line connection phase L3
D	n.c.	Not connected
PE	PE	PE connection
1	Res.	Reserved
2	Res.	Reserved
3	Res.	Reserved
4	Res.	Reserved
5	Res.	Reserved
6	Res.	Reserved

# 5



## Electrical installation

### Optional plug connector assignment



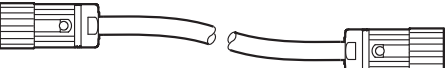
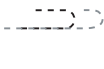
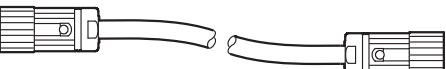

#### Connection cables

The following tables list the cables available for this connection:



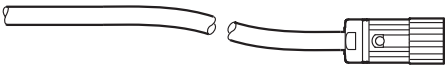

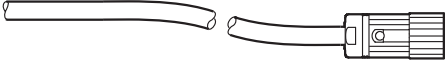

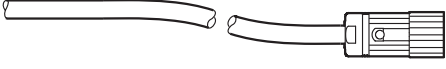


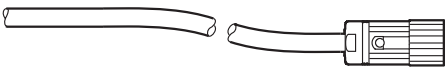
#### Cable cross-section 1.5 mm<sup>2</sup>

Connection cables	Conformity/ part number	Cable type	Length/in- stallation type	Cable cross-sec- tion/operat- ing voltage
 <p>Open</p> <p>M23, coding ring: black, male</p>	CE: 18180094	HELUKABEL® JZ-600	Variable 	1.5 mm <sup>2</sup> / AC 500 V
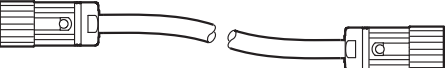
#### Cable cross-section 2.5 mm<sup>2</sup>

Connection cables	Conformity/ part number	Cable type	Length/in- stallation type	Cable cross-sec- tion/operat- ing voltage
 <p>M23, coding ring: black, male</p> <p>M23, coding ring: black, male</p>	CE: 18127460	HELUKABEL® TOPFLEX® – 600-PVC	Variable 	2.5 mm <sup>2</sup> / AC 500 V
 <p>M23, coding ring: black, male</p> <p>M23, coding ring: black, male</p>	CE: 18133959	HELUKABEL® TOPFLEX® – 611-PUR (Halogen-free)	Variable 	2.5 mm <sup>2</sup> / AC 500 V
 <p>M23, coding ring: black, male</p> <p>M23, coding ring: black, male</p>	UL: 18153267	HELUKABEL® – JZ-602	Variable 	2.5 mm <sup>2</sup> / AC 500 V

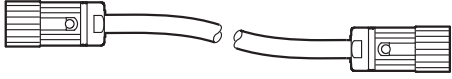25887130/EN – 11/2018

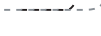Connection cables	Conformity/ part number	Cable type	Length/in- stallation type	Cable cross-sec- tion/operat- ing voltage
 <p>M23, coding ring: black, male</p> <p>M23, coding ring: black, male</p>	UL: 18153275	HELUKABEL® MULTIFLEX® – 512	Variable 	2.5 mm <sup>2</sup> / AC 500 V
 <p>Open</p> <p>M23, coding ring: black, male</p>	CE: 18127479	HELUKABEL® TOPFLEX® – 600-PVC	Variable <del></del>	2.5 mm <sup>2</sup> / AC 500 V
 <p>Open</p> <p>M23, coding ring: black, male</p>	CE: 18133967	HELUKABEL® TOPFLEX® – 611-PUR (Halogen-free)	Variable 	2.5 mm <sup>2</sup> / AC 500 V
 <p>Open</p> <p>M23, coding ring: black, male</p>	UL: 18153283	HELUKABEL® – JZ-602	Variable <del></del>	2.5 mm <sup>2</sup> / AC 500 V
 <p>Open</p> <p>M23, coding ring: black, male</p>	UL: 18153291	HELUKABEL® MULTIFLEX® – 512	Variable 	2.5 mm <sup>2</sup> / AC 500 V



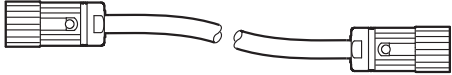
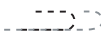
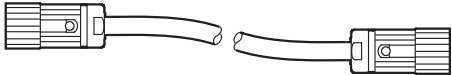

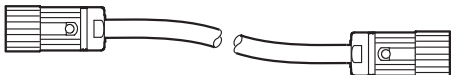



25887130/EN – 11/2018

# 5

## Electrical installation





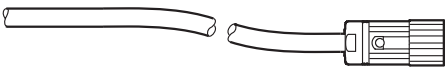
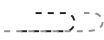
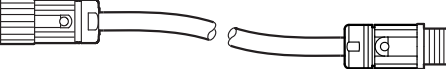
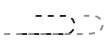
### Optional plug connector assignment

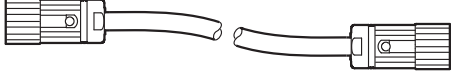Cable cross-section 4 mm<sup>2</sup>

Connection cables	Conformity/ part num- ber	Cable type	Length/in- stallation type	Cable cross-sec- tion/operat- ing voltage
 <p>M23, coding ring: black, male</p> <p>M23, coding ring: black, male</p>	CE: 18127487  CE: 18133975	HELUKABEL® TOPFLEX® – 600-PVC	Variable 	4 mm <sup>2</sup> / AC 500 V
 <p>M23, coding ring: black, male</p> <p>M23, coding ring: black, male</p>	CE: 18133975	HELUKABEL® TOPFLEX® – 611-PUR (Halogen-free)	Variable 	4 mm <sup>2</sup> / AC 500 V
 <p>M23, coding ring: black, male</p> <p>M23, coding ring: black, male</p>	UL: 18153305	HELUKABEL® – JZ-602	Variable 	4 mm <sup>2</sup> / AC 500 V
 <p>M23, coding ring: black, male</p> <p>M23, coding ring: black, male</p>	UL: 18153313	HELUKABEL® MULTIFLEX® – 512	Variable 	4 mm <sup>2</sup> / AC 500 V
 <p>Open</p> <p>M23, coding ring: black, male</p>	CE: 18127495	HELUKABEL® TOPFLEX® – 600-PVC	Variable 	4 mm <sup>2</sup> / AC 500 V

25887130/EN – 11/2018

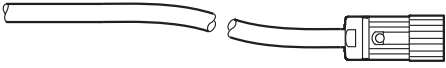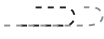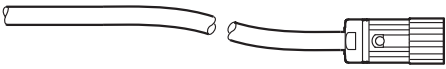

Connection cables		Conformity/ part num- ber	Cable type	Length/in- stallation type	Cable cross-sec- tion/operat- ing voltage
Open	 M23, coding ring: black, male	CE: 18133983	HELUKABEL® TOPFLEX® – 611-PUR (Halogen-free)	Variable 	4 mm <sup>2</sup> / AC 500 V
Open	 M23, coding ring: black, male	UL: 18153321	HELUKABEL® – JZ-602	Variable <del></del>	4 mm <sup>2</sup> / AC 500 V
Open	 M23, coding ring: black, male	UL: 18153348	HELUKABEL® MULTIFLEX® – 512	Variable 	4 mm <sup>2</sup> / AC 500 V
M23, coding ring: black, male	 M23, coding ring: black, fe- male	UL: 18166318	HELUKABEL® MULTIFLEX® – 512	Variable 	4 mm <sup>2</sup> / AC 500 V

*Connection of cables with open end*

The following table shows the conductor assignment of the cables with the following part numbers:

Part number	Signal name	Core color	Identification	Assembly
18180094	L1	Black	1	Cut off
18127479	L2	Black	2	
18133967	L3	Black	3	
18153283	PE	Green/yellow	–	
18153291				
18127495				
18133983				
18153321				
18153348				

5.10.2 X5504: STO (3 cores)



**▲ WARNING**

No safety-related disconnection of the drive unit.  
Severe or fatal injuries.

- Do not use the 24 V output (pins 1 and 3) for safety-related applications with drive units.
- You may only jumper the STO connection with 24 V when the drive unit is not used to fulfill any safety functions.

The following table shows information about this connection:

Function		
Connection for Safe Torque Off (STO).		
Connection type		
M12, 5-pole, female, A-coded, color: yellow		
Connection diagram		
Assignment		
No.	Name	Function
1	24V_OUT	DC 24 V auxiliary output
2	F_STO_P2	F_STO_P2 connection
3	0V24_OUT	0V24 reference potential for DC 24 V auxiliary output
4	F_STO_P1	F_STO_P1 connection
5	F_STO_M	F_STO_M connection



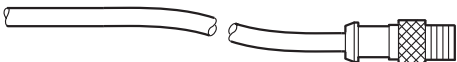

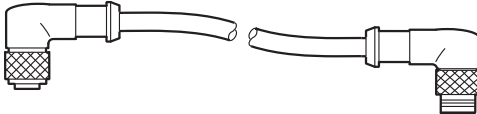

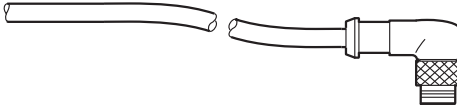

#### Connection cables









### INFORMATION



Use only shielded cables for this connection and only suitable plug connectors that connect the shield with the device in an HF-capable manner.

The following table provides an overview of the cables available for this connection:

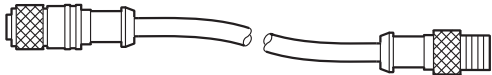Connection cables	Conformity/ part number	Cable type	Length/in- stallation type	Cable cross-sec- tion/operat- ing voltage
 <p>M12, -5-pin, A-coded, fe- male</p> <p>M12, 5-pin, A-coded, male</p>	CE/UL: 28110935	HELUKABEL LiYCY	Variable 	3 × 0.75 mm <sup>2</sup> / DC 60 V
 <p>Open</p> <p>M12, 5-pin, A-coded, male</p>	CE/UL: 28110943	HELUKABEL LiYCY	Variable 	3 × 0.75 mm <sup>2</sup> / DC 60 V
 <p>M12, 5-pin, A-coded, fe- male</p> <p>M12, 5-pin, A-coded, male</p>	CE/UL: 28110951	HELUKABEL LiYCY	Variable 	3 × 0.75 mm <sup>2</sup> / DC 60 V
 <p>Open</p> <p>M12, 5-pin, A-coded, male</p>	CE/UL: 28110978	HELUKABEL LiYCY	Variable 	3 × 0.75 mm <sup>2</sup> / DC 60 V

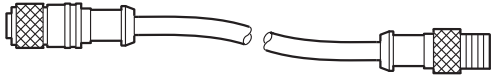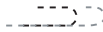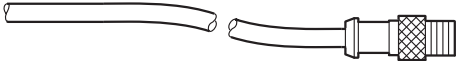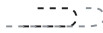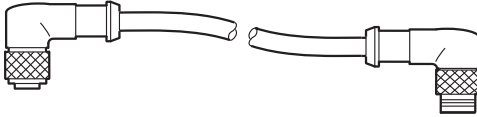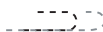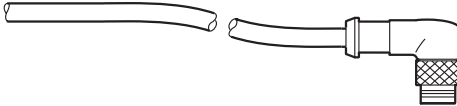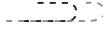Connection cables	Conformity/ part num- ber	Cable type	Length/in- stallation type	Cable cross-sec- tion/operat- ing voltage
 <p>M12, -5-pin, A-coded, fe- male</p> <p>M12, 5-pin, A-coded, male</p>	CE/UL: 28110994	igus chainflex CF78.UL	Variable 	4 × 0.5 mm <sup>2</sup> / DC 60 V
 <p>Open</p> <p>M12, 5-pin, A-coded, male</p>	CE/UL: 28111001	igus chainflex CF78.UL	Variable 	4 × 0.5 mm <sup>2</sup> / DC 60 V
 <p>M12, 5-pin, A-coded, fe- male</p> <p>M12, 5-pin, A-coded, male</p>	CE/UL: 28111028	igus chainflex CF78.UL	Variable 	4 × 0.5 mm <sup>2</sup> / DC 60 V
 <p>Open</p> <p>M12, 5-pin, A-coded, male</p>	CE/UL: 28111036	igus chainflex CF78.UL	Variable 	4 × 0.5 mm <sup>2</sup> / DC 60 V

### Connection of cables with open end

The following tables show the conductor assignment of cables with the following part numbers:


Part number	Signal name	Core color	Identification	Assembly
28110978	24V_OUT	– <sup>1)</sup>	–	Cut off
28110943	F_STO_P2	White	–	
	0V24_OUT	– <sup>1)</sup>	–	
	F_STO_P1	Brown	–	
	F_STO_M	Green	–	

Part number	Signal name	Core color	Identification	Assembly
28111001	24V_OUT	– <sup>1)</sup>	–	Cut off
28111036	F_STO_P2	Black	1	
	0V24_OUT	– <sup>1)</sup>	–	
	F_STO_P1	Black	2	
	F_STO_M	Black	3	

1) Do not connect this core in the plug connector.

5.10.3 X5505: STO (3 cores)

The following table shows information about this connection:

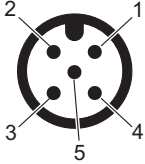Function		
Connection for Safe Torque Off (STO).		
Connection type		
M12, 5-pole, male, A-coded, color: yellow		
Connection diagram		
		
Assignment		
No.	Name	Function
1	Res.	Reserved
2	F_STO_P2	F_STO_P2 connection
3	Res.	Reserved
4	F_STO_P1	F_STO_P1 connection
5	F_STO_M	F_STO_M connection



**▲ WARNING**

Disabling of safety-related disconnection of other drive units due to parasitic voltages when using an STO jumper.

Severe or fatal injuries.

- You may only use the STO jumper when all incoming and outgoing STO connections have been removed from the drive unit.





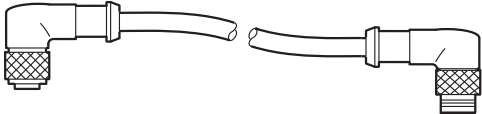



#### Connection cables

### INFORMATION




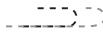
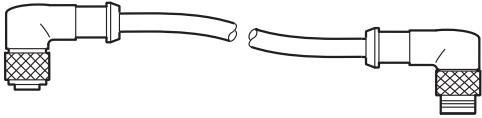

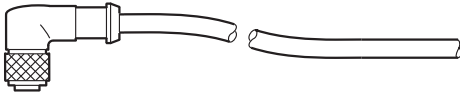
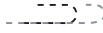


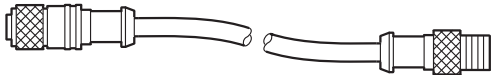Use only shielded cables for this connection and only suitable plug connectors that connect the shield with the device in an HF-capable manner.

The following table provides an overview of the cables available for this connection:

Connection cables	Conformity/ part number	Cable type	Length/in- stallation type	Cable cross-sec- tion/operat- ing voltage
 <p>M12, -5-pin, A-coded, fe- male</p> <p>M12, 5-pin, A-coded, male</p>	CE/UL: 28110935	HELUKABEL LiYCY	Variable 	3 × 0.75 mm <sup>2</sup> / DC 60 V
 <p>M12, 5-pin, A-coded, fe- male</p> <p>Open</p>	CE/UL: 28117808	HELUKABEL LiYCY	Variable 	3 × 0.75 mm <sup>2</sup> / DC 60 V
 <p>M12, 5-pin, A-coded, fe- male</p> <p>M12, 5-pin, A-coded, male</p>	CE/UL: 28110951	HELUKABEL LiYCY	Variable 	3 × 0.75 mm <sup>2</sup> / DC 60 V
 <p>M12, 5-pin, A-coded, fe- male</p> <p>Open</p>	CE/UL: 28110986	HELUKABEL LiYCY	Variable 	3 × 0.75 mm <sup>2</sup> / DC 60 V

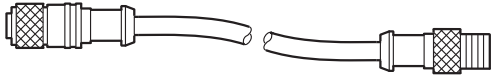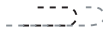

Connection cables	Conformity/ part number	Cable type	Length/in- stallation type	Cable cross-sec- tion/operat- ing voltage
 <p>M12, -5-pin, A-coded, fe- male</p> <p>M12, 5-pin, A-coded, male</p>	CE/UL: 28110994	igus chainflex CF78.UL	Variable 	4 × 0.5 mm <sup>2</sup> / DC 60 V
 <p>M12, 5-pin, A-coded, fe- male</p> <p>Open</p>	CE/UL: 28117816	igus chainflex CF78.UL	Variable 	4 × 0.5 mm <sup>2</sup> / DC 60 V
 <p>M12, 5-pin, A-coded, fe- male</p> <p>M12, 5-pin, A-coded, male</p>	CE/UL: 28111028	igus chainflex CF78.UL	Variable 	4 × 0.5 mm <sup>2</sup> / DC 60 V
 <p>M12, 5-pin, A-coded, fe- male</p> <p>Open</p>	CE/UL: 28111044	igus chainflex CF78.UL	Variable 	4 × 0.5 mm <sup>2</sup> / DC 60 V

### Connection of cables with open end

The following tables show the conductor assignment of cables with the following part numbers:

Part number	Signal name	Core color	Identification	Assembly
28117808	24V_OUT	– <sup>1)</sup>	–	Cut off
28110986	F_STO_P2	White	–	
	0V24_OUT	– <sup>1)</sup>	–	
	F_STO_P1	Brown	–	
	F_STO_M	Green	–	

Part number	Signal name	Core color	Identification	Assembly
28117816	24V_OUT	– <sup>1)</sup>		Cut off
28111044	F_STO_P2	Black	1	
	0V24_OUT	– <sup>1)</sup>	–	
	F_STO_P1	Black	2	
	F_STO_M	Black	3	

1) Do not connect this core in the plug connector.

#### 5.10.4 STO jumper plug (3-core)



#### ▲ WARNING

Safe disconnection of the drive unit is not possible when the STO jumper plug is used.

Severe or fatal injuries.

- You may only use the STO jumper plug if the drive unit is not used to fulfill any safety function.



#### ▲ WARNING


Disabling of safety-related disconnection of other drive units due to parasitic voltages when using an STO jumper.

Severe or fatal injuries.

- You may only use the STO jumper when all incoming and outgoing STO connections have been removed from the drive unit.

The STO jumper plug can be connected to the STO plug connector X5504 of the drive unit. The STO jumper plug deactivates the safety functions of the drive unit.


The following figure shows the STO jumper plug with the printed **red** tag, part number 28105419:

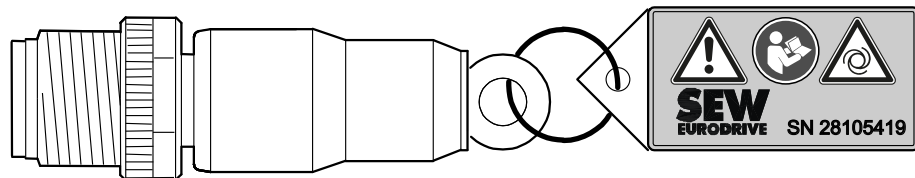

25247142411





## 5.10.5 X1523: DC 24 V backup voltage, input

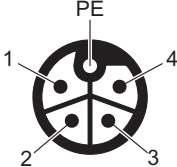The following table shows information about this connection:

Function		
24 V backup voltage input		
Connection type		
M12, 5-pole, male, L-coded, color: black		
Connection diagram		
		
Assignment		
No.	Name	Function
1	+24V/L1	DC 24 V input/L1 (for backup mode)
2	0V24/N2	0V24 reference potential/N2 (looped through. not used in the device)
3	0V24/N1	0V24 reference potential/N1 (for backup mode)
4	+24V/L2	DC 24 V connection/L2 (looped through. not used in the device)
PE	FE	Functional earth

### Connection cables

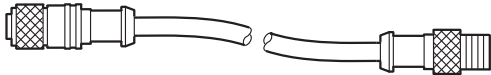The following table provides an overview of the cables available for this connection:

Connection cables	Conformity/ part num- ber	Cable type	Length/in- stallation type	Cable cross-sec- tion/operat- ing voltage
 <p>M12, -5-pole, L-coded, fe- male</p> <p>M12, 5-pin, L-coded, male</p>	CE/UL: 28114345	HELUKABEL JZ-500	Variable 	5 × 2.5 mm <sup>2</sup> / DC 60 V
 <p>M12, 5-pole, L- coded, female</p> <p>Open</p>	CE/UL: 28117786	HELUKABEL JZ-500	Variable 	5 × 2.5 mm <sup>2</sup> / DC 60 V


### Connection of cables with open end

The following table shows the conductor assignment of the cables with the following part numbers:

Part number	Signal name	Core color	Identification
28117786	0V24/N1	Black	3
	+24V/L1	Black	1
	0V24/N2	Black	2
	+24V/L2	Black	4
	FE	Black	5



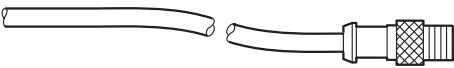

## 5.10.6 X2313: DC 24 V output backup voltage

The following table shows information about this connection:

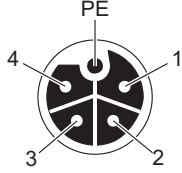Function		
DC 24 V output backup voltage		
Connection type		
M12, 5-pole, female, L-coded, color: black		
Connection diagram		
		
Assignment		
No.	Name	Function
1	+24V/L1	DC 24 V output/L1 (for backup mode)
2	0V24/N2	0V24 reference potential/N2 (looped through. not used in the device)
3	0V24/N1	0V24 reference potential/N1 (for backup mode)
4	+24V/L2	DC 24 V connection/L2 (looped through. not used in the device)
PE	FE	Functional earth

**Connection cables**

The following table provides an overview of the cables available for this connection:

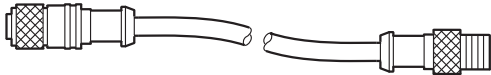Connection cables	Conformity/ part num- ber	Cable type	Length/in- stallation type	Cable cross-sec- tion/operat- ing voltage
 <p>M12, -5-pole, L-coded, fe- male</p> <p>M12, 5-pin, L-coded, male</p>	CE/UL: 28114345	HELUKABEL JZ-500	Variable 	5 × 2.5 mm <sup>2</sup> / DC 60 V
 <p>Open</p> <p>M12, 5-pin, L-coded, male</p>	CE/UL: 28117751	HELUKABEL JZ-500	Variable 	5 × 2.5 mm <sup>2</sup> / DC 60 V


**Connection of cables with open end**

The following table shows the conductor assignment of the cables with the following part numbers:

Part number	Signal name	Core color	Identification
28117751	0V24/N1	Black	3
	+24V/L1	Black	1
	0V24/N2	Black	2
	+24V/L2	Black	4
	FE	Black	5

## 5.10.7 X4141: Engineering interface

The following table shows information about this connection:

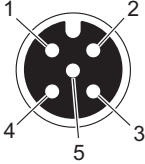



Function		
Engineering interface (CAN)		
Connection type		
M12, 5-pole, female, A-coded, color: black		
Connection diagram		
		
Assignment		
No.	Name	Function
1	Res.	Reserved
2	24V_OUT	DC 24 V auxiliary output <sup>1)</sup>
3	0V24_OUT	0V24 reference potential <sup>1)</sup>
4	CAN_H	CAN High connection
5	CAN_L	CAN Low connection

1) Only use this output to supply components by SEW-EURODRIVE.



Connection cables


The following table provides an overview of the cables available for this connection:

Connection cables	Conformity/ part num- ber	Length/in- stallation type	Operating voltage
<p>Connection to interface adapter USM21A:</p>  <p>M12, 5-pin, A-coded, male</p> <p>RJ10</p>	<p>CE: 28111680</p>	<p>3.0 m</p> 	<p>DC 60 V</p>
<p>Connection to CBG.. keypad :</p>  <p>M12, 5-pin, A-coded, male</p> <p>D-sub, 9-pole, male, angled</p>	<p>CE: 28117840</p>	<p>3.0 m</p> 	<p>DC 60 V</p>

## 5.11 Plug connector assignment at the DFC.. electronics cover


### 5.11.1 X5133\_1: Digital inputs

The following table shows information about this connection:

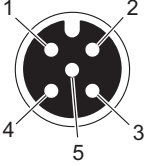Function		
Digital inputs		
Connection type		
M12, 5-pole, female, A-coded, color: black		
Connection diagram		
		
Assignment		
No.	Name	Function
1	+24V	DC 24 V sensor supply
2	DI02	Sensor input DI02
3	0V24	0V24 reference potential for sensors
4	DI01	Sensor input DI01
5	FE	Functional earth


5.11.2 X5133\_2: Digital inputs

The following table shows information about this connection:

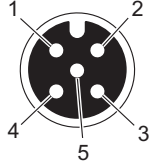Function		
Digital inputs		
Connection type		
M12, 5-pole, female, A-coded, color: black		
Connection diagram		
		
Assignment		
No.	Name	Function
1	+24V	DC 24 V sensor supply
2	DI04	Sensor input DI04
3	0V24	0V24 reference potential for sensors
4	DI03	Sensor input DI03
5	FE	Functional earth


## 5.11.3 X5133\_3: Digital inputs/outputs

The following table shows information about this connection:

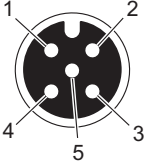Function		
Digital inputs/outputs		
Connection type		
M12, 5-pole, female, A-coded, color: black		
Connection diagram		
		
Assignment		
No.	Name	Function
1	+24V	DC 24 V sensor/actuator supply
2	DIO02	Sensor input DIO02/actuator output DIO02
3	0V24	0V24 reference potential for sensors/actuators
4	DIO01	Sensor input DIO01/actuator output DIO01
5	FE	Functional earth


5.11.4 X4233\_1: Fieldbus/Ethernet interface, port 1

The following table shows information about this connection:

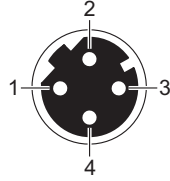Function		
Fieldbus/Ethernet interface, port 1		
Connection type		
M12, 4-pole, female, D-coded, color: black		
Connection diagram		
		
Assignment		
No.	Name	Function
1	TX+	Transmit line (+)
2	RX+	Receive line (+)
3	TX-	Transmit line (-)
4	RX-	Receive line (-)

## 5.11.5 X4233\_2: Fieldbus/Ethernet interface, port 2

The following table shows information about this connection:

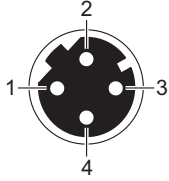Function		
Fieldbus/Ethernet interface, port 2		
Connection type		
M12, 4-pole, female, D-coded, color: black		
Connection diagram		
		
Assignment		
No.	Name	Function
1	TX+	Transmit line (+)
2	RX+	Receive line (+)
3	TX-	Transmit line (-)
4	RX-	Receive line (-)

## 5.12 PC connection

Connect the PC to the drive unit before you start the engineering software MOVISUITE®.

You have several options to connect a PC to the drive unit.

### 5.12.1 Connection via interface adapter USM21A

Use the interface adapter USM21A to connect the PC and the engineering interface of the drive unit.

The data is transferred according to the USB 2.0 standard. It is also possible to work with a USB 3.0 interface.


You need the following components for the connection:

Component	Part number
Interface adapter USM21A The following connection cables are included in the scope of delivery: <ul style="list-style-type: none"> <li>• USB 2.0 connection cable                             <ul style="list-style-type: none"> <li>– USB type A/USB type B,</li> <li>– Length: 1.5 m</li> </ul> </li> <li>• RJ10/RJ10 connection cable                             <ul style="list-style-type: none"> <li>For connection to the engineering interface X31</li> <li>– With 2 RJ10 plug connectors</li> <li>– Length: 3 m</li> </ul> </li> </ul>	28231449
Connection cable RJ10/M12 For connection to the engineering interface X4141 <ul style="list-style-type: none"> <li>• With RJ10 plug connector</li> <li>• With M12 plug connector, 5-pin, male, A-coded</li> <li>• Length: 3 m</li> </ul>	28111680
Retrofit set for M12 engineering interface X4141 <sup>1)</sup>	28258185

1) In preparation

### Connection to X4141 (M12 at the connection box)

The engineering interface X31 in the connection box of the drive unit is assigned to the internal wiring of plug connector X4141.

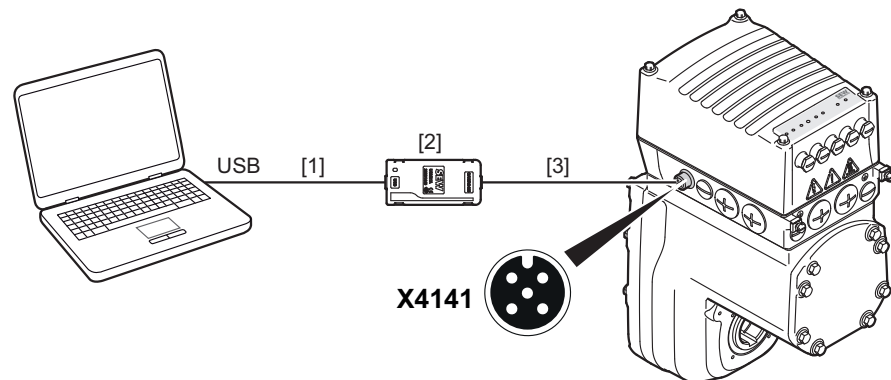

25564445323

- [1] USB 2.0 connection cable  
(commercial, included of the USM21A delivery)
- [2] Interface adapter USM21A
- [3] Connection cable RJ10/M12  
(available for delivery from SEW-EURODRIVE, part number: 28111680)


### Installing the included engineering plug connector X4141

The engineering plug connector X4141 is usually delivered in an accessory bag (part number: 28258185) together with the drive unit by SEW-EURODRIVE. In this case, install the engineering plug connector X4141 to the connection box of the drive unit as follows:

1. It is essential that you observe the startup instructions.
2. Switch off the voltage supply and wait for at least 5 minutes.
3. Loosen the screws and remove the electronics cover from the connection box.
4. Plug in the plug connector RJ10 from outside through one of the permitted cable entry bores (for the permitted positions, see chapter "Plug connector positions"). Push the cable completely into the connection box.
5. Screw plug connector M12 into the cable entry bore. Fasten the nuts of the M12 plug connector (tightening torque: 6 Nm).



6. Insert the RJ10 plug connector into plug connector X31 in the connection box. The following figure shows an example of the cable routing:

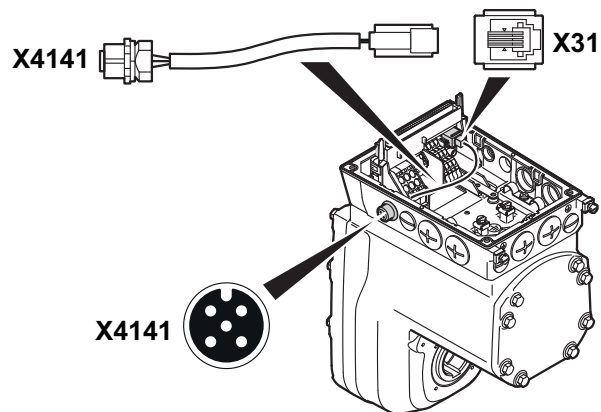

25790072715


7. Plug the electronics cover onto the connection box. Screw on the electronics cover with 4 screws (tightening torque: 6 Nm).

## Connection to X31 (RJ10 in the connection box)

**NOTICE**

Connector X31 provides a 24 V supply voltage for operating the connected options. Damage to connected options with low nominal voltage.

- Only connect options with a nominal voltage of 24 V to connector X31, such as:
  - Interface adapter USM21A,
  - CBG.. keypad
- Do **not** connect the following options with 5 V nominal voltage to the X31 connector:
  - Interface adapters USB11A, UWS11A, UWS21A
  - Keypads DBG..., GBG21A.

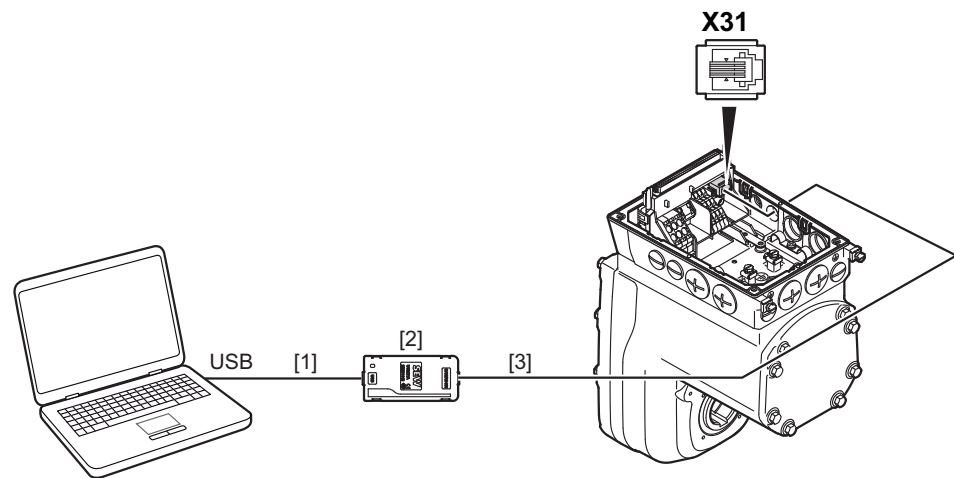

25564036363

- [1] USB 2.0 connection cable  
(commercial, included of the USM21A delivery)
- [2] Interface adapter USM21A
- [3] RJ10/RJ10 connection cable  
(included in the USM21A interface adapter delivery)


### 5.12.2 Connection via Ethernet

You can connect the PC an drive unit via Ethernet.

The Ethernet connection allows you to access the implemented electronics web server.

#### Connection to X4233\_1 or X4233\_2 (M12 at the electronics cover)

(Only for designs with electronics cover DFC.0..)

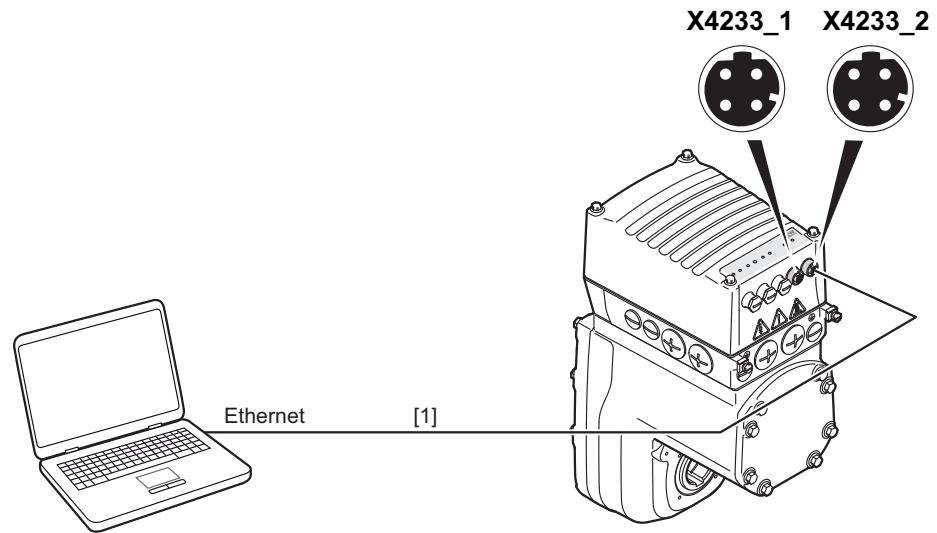


25564039947

- [1] Ethernet connection cable RJ45/M12 (commercial)  
With M12 plug connector, 4-pole, male, D-coded

#### Connection to X42 or X43 (Mini IO in the connection box)

(Only for designs with electronics cover DFC.1..)

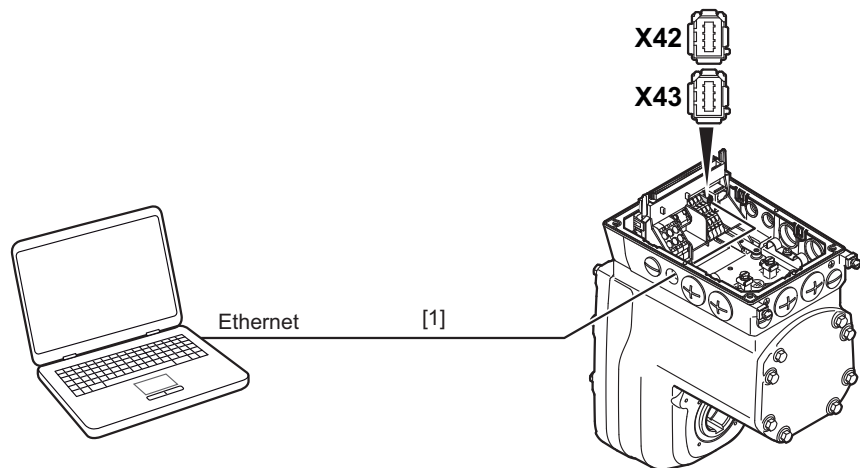

25564043531

- [1] Ethernet connection cable RJ45/Mini IO

### 5.12.3 Connection via CBG21A or CBG11A keypad (in preparation)


Use the keypad CBG21A or CBG11A to connect the PC and the engineering interface of the drive unit.

The data is transferred according to the USB 2.0 standard. It is also possible to work with a USB 3.0 interface.

You need the following components for the connection:

Component	Part number
CBG21A operator panel	28238133
CBG11A operator panel	28233646
CBG.. connection cable D-Sub/M12 For connecting the X4141 engineering interface to the 24 V supply voltage <ul style="list-style-type: none"> <li>• With D-sub plug connector 9-pin, male</li> <li>• With M12 plug connector, 5-pin, male, A-coded</li> <li>• Length: 3 m</li> </ul>	28117840
CBG.. connection cable D-Sub/RJ10 For connecting the X31 engineering interface to the 24 V supply voltage <ul style="list-style-type: none"> <li>• With D-sub plug connector 9-pin, male</li> <li>• With RJ10 plug connector</li> <li>• Length: 3 m</li> </ul>	28117832

#### Connection to X4141 (M12 at the connection box)

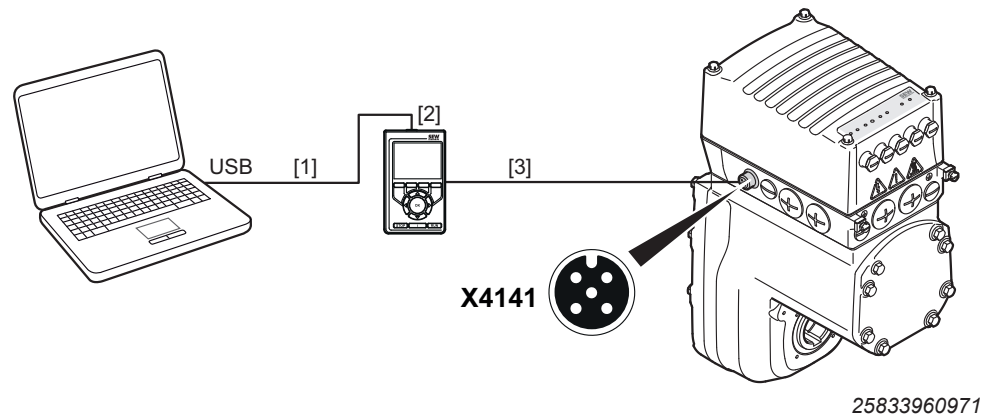

- [1] USB A/USB 2.0 Mini B connection cable (commercial)  
 [2] CBG21A or CBG11A keypad  
 [3] D-Sub/M12 connection cable  
 (available for delivery from SEW-EURODRIVE, part number: 28117840)


Connection to X31 (RJ10 in the connection box)

**NOTICE**



Connector X31 provides a 24 V supply voltage for operating the connected options.  
Damage to connected options with low nominal voltage.

- Only connect options with a nominal voltage of 24 V to connector X31, such as:
  - Interface adapter USM21A,
  - CBG.. keypad
- Do **not** connect the following options with 5 V nominal voltage to the X31 connector:
  - Interface adapters USB11A, UWS11A, UWS21A
  - Keypads DBG..., GBG21A.

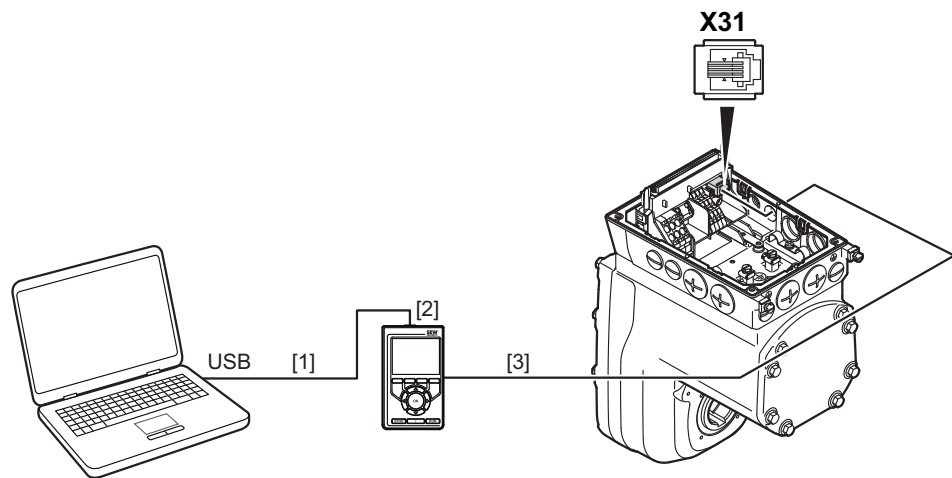

25625496075

- [1] USB A/USB 2.0 Mini B connection cable (commercial)
- [2] CBG21A or CBG11A keypad
- [3] D-Sub/RJ10 connection cable  
(available for delivery from SEW-EURODRIVE, part number: 28117832)

## 6 Startup

### 6.1 Startup notes

#### INFORMATION



It is essential to comply with the safety notes during startup.



#### ⚠ WARNING

Risk of injury due to missing or defective protective covers.

Severe or fatal injuries.

- Install the protective covers of the system according to the instructions.
- Never start the drive unit if the protective covers are not installed.



#### ⚠ WARNING

Electric shock caused by dangerous voltages in the connection box. Dangerous voltages may still be present for up to 5 minutes after disconnection from the power supply system.

Severe or fatal injuries.

- Before removing the electronics cover, de-energize the drive units via a suitable external disconnection device.
- Secure the drive unit against unintended re-connection of the voltage supply.
- Secure the output shaft against rotation.
- Wait for at least the following time before removing the electronics cover:  
**5 minutes**



#### ⚠ WARNING

Risk of burns due to hot surfaces.

Serious injuries.

- Let the devices cool down before touching them.



#### ⚠ WARNING

Device malfunction due to incorrect device setting.

Severe or fatal injuries.

- Observe the startup instructions.
- Always have the installation carried out by trained specialists.
- Only use settings that are correct for the function.

**NOTICE**

Undercutting the minimum switch-off time of the line contactor.

Irreparable damage to the inverter or unforeseen malfunctions.

- You must observe a minimum switch-off time of 10 s after switching off the voltage supply.
- Do not switch the voltage supply on or off **more often than once per minute**.

**INFORMATION**

- Before startup, remove the paint protection cap from the LED displays.
- Before startup, remove the paint protection film from the nameplates.

**INFORMATION**

- To ensure fault-free operation, do not disconnect or connect signal cables during operation.

## 6.2 Startup requirements

The following requirements apply to startup:

- The drive unit is installed correctly, both mechanically and electrically.
- The drive unit has been correctly configured.
- Safety measures prevent accidental startup of the drive unit.
- Safety measures prevent danger to persons or machines.

Required hardware components:

- PC or laptop with USB or Ethernet interface, see chapter "PC connection".

Required software:

- MOVISUITE® standard engineering software from SEW-EURODRIVE.

## 6.3 Description of the DIP switches

### 6.3.1 Overview




#### NOTICE

Damage to the DIP switches caused by unsuitable tools.

Possible damage to property.

- To set the DIP switches, use only suitable tools, such as a slotted screwdriver with a blade width of no more than 3 mm.
- The force used for setting the DIP switches must not exceed 5 N.

The following figure shows the DIP switches of the drive unit:

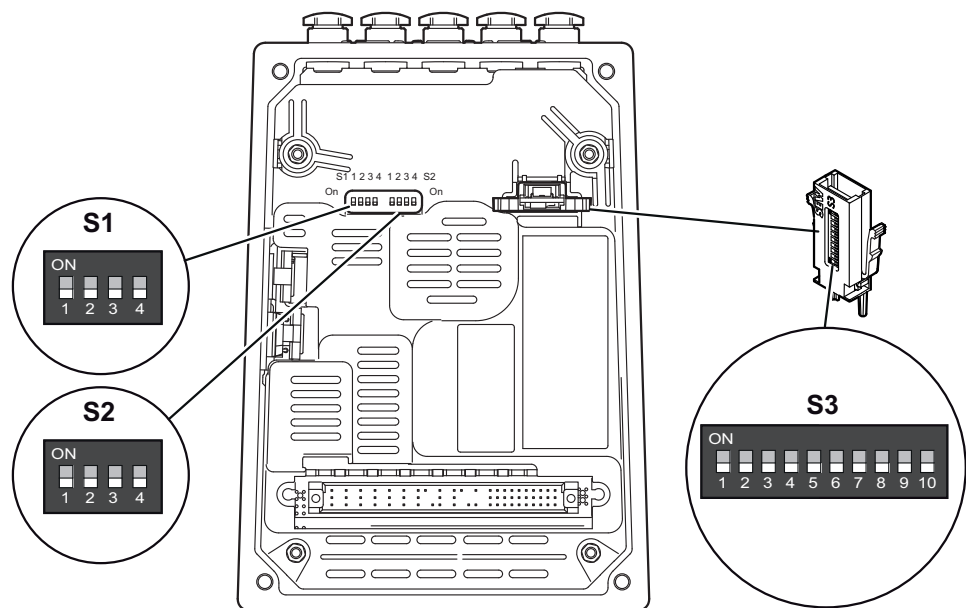

25255124107

#### DIP switch S1

The following table shows the functions of DIP switch S1:

DIP switch	S1			
	1	2	3	4
Meaning	<b>Direction of rotation reversal</b>	<b>Disable holding function without enable</b>	<b>Deactivating the speed monitoring</b>	<b>Reserved</b>
<b>ON</b>	On	On	Speed monitoring Off	On
<b>OFF</b>	<b>Off<sup>1)</sup></b>	<b>Off<sup>1)</sup></b>	<b>Speed monitoring On<sup>1)</sup></b>	<b>Off<sup>1)</sup></b>

1) The factory settings are shown in boldface.

You must not alter the factory setting of the S1/4 DIP switch = OFF.



### DIP switch S2

The following table shows the functions of DIP switch S2:

DIP switch	S2			
	1	2	3	4
Meaning	<b>Local mode</b>	<b>Reserved</b>	<b>Reserved</b>	<b>Reserved</b>
<b>ON</b>	Local mode can be activated in every drive status.	–	–	–
<b>OFF</b>	<b>Local mode can only be activated when the output stage is inhibited<sup>1)</sup></b>	–	–	–

1) Factory settings are indicated by bold text.

You must not alter the factory setting of the DIP switches S2/2 to S24 = OFF.

### DIP switch S3

The S3 DIP switches on the memory module are reserved.

You must not alter the factory setting of the S3 DIP switches = OFF.

### 6.3.2 Description of DIP switches

#### DIP switch S1/1: Direction of rotation reversal

You can reverse the direction of rotation of the drive via this DIP switch.

- OFF (S1/1 = OFF): The drive turns CW for a positive setpoint and CCW for a negative setpoint.
- ON (S1/1 = ON): The drive turns CCW for a positive setpoint and CW for a negative setpoint.

#### DIP switch S1/2: Disable holding function without enable



#### ⚠ WARNING

Risk from falling loads.

Severe or fatal injuries.

- Do not activate the function "Disable holding function without enable" for hoist applications and applications with potentially falling loads.



#### INFORMATION

For more information about disabling DynaStop® without drive enable, refer to chapter "Operation".

Use this DIP switch to disable the holding function (DynaStop®) even if the drive is not enabled.

- OFF (S1/2 = OFF): You cannot deactivate the holding function without drive enable.
- ON (S1/2 = ON): You can deactivate the holding function without drive enable. The control of the holding function then proceeds via a digital input or a process data bit.

#### DIP switch S1/3: Deactivating the speed monitoring

You can deactivate the speed monitoring function at this DIP switch.

- Speed monitoring OFF (S1/3 = ON): Speed monitoring is not active.
- Speed monitoring ON (S1/3 = OFF): Speed monitoring is active.

Speed monitoring is used to protect the drive in case of blockage.

When speed monitoring is active and the drive operates at the current limit for longer than one second, the drive unit triggers the fault "Speed monitoring". The drive unit signals the fault for example via the status LED. The current limit must be reached permanently for the duration of the delay time before the monitoring function trips.

#### DIP switch S2/1 local mode

Use this DIP switch to set in which drive status you want to activate the local mode.

- Automatic mode has priority (S2/1 = OFF): Local mode can only be activated when the output stage is enabled.
- Local mode has priority (S2/1 = ON): Local mode can be enabled in every drive state.







## 6.4 Startup procedure






Perform the drive unit startup using the MOVISUITE® engineering software by SEW-EURODRIVE.



25882306443




The startup is functionally divided into segments. The following steps illustrate an example of the startup procedure for a drive unit.

Drive train segment	Drive train		Configuring drive trains.
	Interfaced interfaces		Basic settings of the installed interfaces <ul style="list-style-type: none"> <li>• EtherCAT®</li> <li>• Standard I/O</li> <li>• Encoder 1</li> </ul>
Functions segment	Options		Basic settings of the options <ul style="list-style-type: none"> <li>• Fieldbus</li> <li>• I/O card</li> <li>• Encoder 2</li> <li>• DriveSafety®</li> </ul>
	I/O configuration		<ul style="list-style-type: none"> <li>• Standard I/O</li> <li>• I/O card DI/DO</li> <li>• I/O card AI/AO</li> </ul>
	PO configuration		<ul style="list-style-type: none"> <li>• Basic settings</li> <li>• PO data</li> <li>• Setpoint buffer</li> <li>• Fixed setpoints</li> <li>• Control word 1 – 3</li> </ul>
	PI configuration		<ul style="list-style-type: none"> <li>• PI data</li> <li>• Status word 1 – 3</li> </ul>

Drive functions		<ul style="list-style-type: none"> <li>• FCB 05 Speed control</li> <li>• FCB 06 Interpolated speed control</li> <li>• FCB08 Interpolated torque control</li> <li>• FCB 09 Positioning</li> <li>• FCB10 Interpolated position control</li> <li>• FCB12 Reference travel</li> </ul>
Advanced drive functions		<ul style="list-style-type: none"> <li>• FCB01 Output stage inhibit</li> <li>• FCB 20 Jog mode</li> <li>• FCB21 Brake test</li> <li>• FCB 26 Stop at user limit</li> </ul>
Event-driven functions		<ul style="list-style-type: none"> <li>• Touchprobe 1</li> <li>• Touchprobe 2</li> <li>• Cam switch</li> </ul>
Monitoring functions		<ul style="list-style-type: none"> <li>• Reference signals</li> <li>• Limit values 1</li> <li>• Limit values 2</li> <li>• Monitoring functions 1</li> <li>• Monitoring functions 2</li> <li>• Energy-saving function</li> </ul>
User units		Converting system units into user units.

Information on the drive unit

Device data is available via the project nodes.

Device data		<ul style="list-style-type: none"> <li>• Device identification</li> <li>• Main component</li> <li>• Subcomponent</li> <li>• Production label</li> </ul>
Fault responses Overview		<ul style="list-style-type: none"> <li>• Axis module</li> <li>• Power supply monitoring</li> <li>• Functions</li> </ul>
Setup		<ul style="list-style-type: none"> <li>• Selecting the parameter set</li> <li>• Access rights</li> <li>• Resetting device parameters.</li> </ul>

### 6.4.1 Check list for startup

The following checklist lists the necessary steps for complete startup.

Step	Startup step	Finished
1	Install the drive unit.	
2	Install the MOVI-C® component.	
3	Start MOVISUITE®.	
4	Start up the drive train.	
5	Parameterize the setpoints.	
6	Parameterize the function blocks (FCBs).	
7	Configure digital inputs and outputs.	
8	Configure the process data (PD).	
9	Configure the software modules (MOVIKIT®).	
10	Test the drive unit/application.	

## 6.5 Process data assignment – MOVIKIT® function module "5PD Velocity"

In the standard design, the drive unit is delivered with the MOVIKIT® function module "5PD Velocity".

In automatic mode, the drive unit is controlled using the following process data configuration:

PO	Function		PI	Function
PO1	Control word		PI1	Status word
PO2	Speed setpoint		PI2	Actual speed
PO3	Acceleration		PI3	Drive status/drive fault
PO4	Delay		PI4	Actual torque
PO5	Digital outputs		PI5	Digital inputs

For further information on the function and process data scaling of the MOVIKIT® function module "5PD Velocity", refer to the relevant documentation or the MOVISUITE® startup software.

## 6.6 Disabling DynaStop® for startup purposes

### 6.6.1 Important notes on disabling DynaStop®



#### ⚠ WARNING

Removing the electronics cover will disable DynaStop®.

Severe or fatal injuries.

- If it is not permitted to deactivate the system, additional measures are required (e.g. mechanical stake-out)



#### ⚠ WARNING

Electric shock due to regenerative energy created by moving system or machine. The regenerative energy can cause dangerous voltages at the terminals or plug connectors, even when the supply voltage is disconnected.

Severe or fatal injuries.

- Never touch the wiring space with wiring board and plug connector.
- If you cannot rule out that the wiring space is touched, provide for suitable protection covers.



#### NOTICE

Damage to the connector plug between drive unit and electronics cover due to regenerative energy created by movement of the system or machine.

Potential damage to property.

- To disable DynaStop®, you have to remove the electronics cover completely to prevent damage to the plug connector (destroyed contacts).

The parameter index Stop standard AS1 (index 8563.1) determines if the retarding function DynaStop® is activated when the enable is revoked, or if the drive units generates a motor holding torque. The setting of parameter index Stop standard AS1 is effective with function blocks FCB02, FCB13 and FCB14.

- **Stop standard AS1 = 0** (Brake released/drive energized):  
The drive unit decelerates along the preset ramp when the enable signal is revoked. When the speed reaches "0", the drive unit changes to the state "No enable". DynaStop® is not enabled. The drive unit generates a motor holding torque.
- **Stop standard AS1 = 1** (Brake applied/drive not energized):  
The drive unit decelerates along the preset ramp when the enable signal is revoked. When the speed reaches "0", the drive unit changes to the state "No enable". DynaStop® is enabled. The drive unit doesn't generate a motor holding torque.
- **Stop standard AS1 = 2** (No brake available/drive not energized):  
The drive unit decelerates along the preset ramp when the enable signal is revoked. When the speed reaches "0", the drive unit changes to the state "No enable". DynaStop® is **not** enabled. The drive unit doesn't generate a motor holding torque.

### 6.6.2 Steps for disabling DynaStop®

#### INFORMATION



For more information about the DynaStop® function, refer to chapters "Operation" and "Technical data and dimension sheets".

---

#### Disabling DynaStop® by lifting the electronics cover

Disable the DynaStop® function as follows:

1. Observe chapter "Startup notes".
2. Observe chapter "Important notes on disabling DynaStop®".
3. Disconnect all components from the voltage supply and use an external disconnecting device to avoid an unintentional re-connection.
4. Completely remove the electronics cover.

The DynaStop® function is disabled. The plant/machine can now be moved mechanically observing the notes in chapter "Important notes on disabling DynaStop®".

#### Disabling DynaStop® using the control signal

As an alternative, you can disable the DynaStop® function using a control signal (process data or digital input). Observe the instructions in chapter "Operation" > "Disabling DynaStop®".




## 7 Operation

### 7.1 Manual operation with MOVISUITE®

For manual operation of the drive unit, you can use the manual operation function of the MOVISUITE® engineering software.

1. First connect the PC to the drive unit, see chapter "PC connection".
2. Start the MOVISUITE® software and link the drive unit in MOVISUITE®.
3. After successful linkage, click the "Tools" [2] choice box. Select the "Manual mode" [1] menu item.

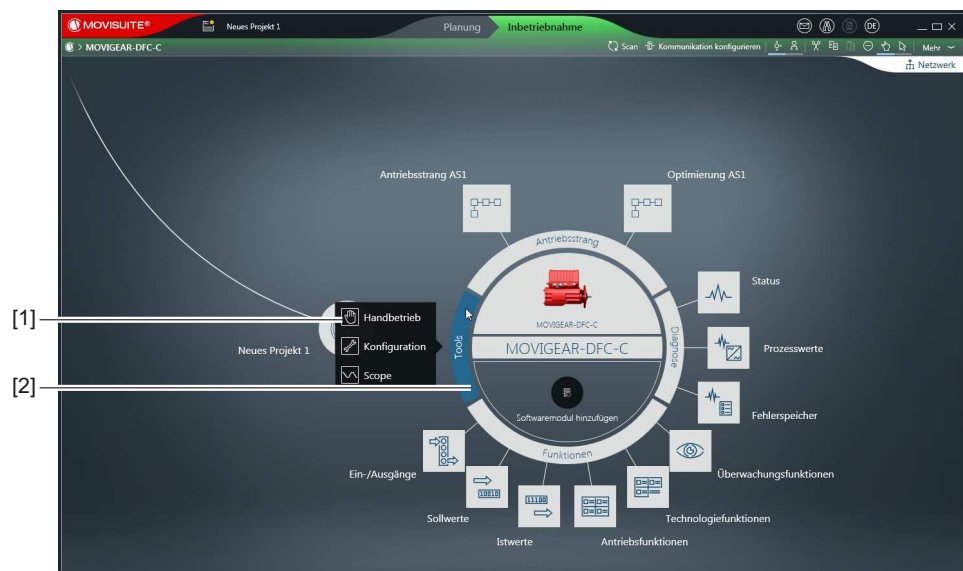

9007221236904715

⇒ MOVISUITE® opens the "Manual mode" window.

#### 7.1.1 Activating/deactivating manual operation

##### Activation

Manual operation can be activated only when the drive unit is inhibited.

To activate manual operation, click on the [Activate manual operation] button [1].



9007221236908043

Manual mode remains active even after a fault reset.

## Deactivation



### ▲ WARNING

Risk of injury due to unintended startup of the drive unit.

Severe or fatal injuries.

- Before deactivating manual mode, take measures to prevent the drive unit from starting up unintentionally.
- Take additional safety precautions depending on the application to avoid injury to people and damage to machinery.


Manual operation is deactivated:

- When you click on the [Deactivate manual operation] button
- or when you close the "Manual operation" window.

### 7.1.2 Control in manual mode

#### Manual operation window

Once manual operation has been successfully activated, you can control the drive unit using the controls in the MOVISUITE® "Manual operation" window.

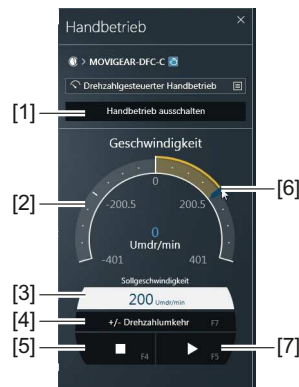

9007221236910987





#### Controller

1. Set the setpoint speed at the edit box [3] or with the graphic input [6].
2. Establish the direction of rotation with the button [4].
3. Enable the drive unit with the button [7].
4. Stop the drive unit with the button [5].

The "Velocity" group [2] displays the actual speed of the drive unit.

**Advanced functions and displays of manual mode**

The following functions are available in manual mode with MOVISUITE®:

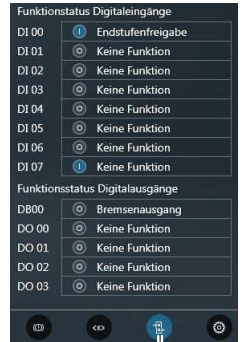Release brake Dis-able output stages	Actual values	Digital inputs and outputs	Acceleration Reference travel Timeout
 <p>[1]</p>	 <p>[2]</p>	 <p>[3]</p>	 <p>[4]</p>
Key [1]	Key [2]	Key [3]	Key [4]

**7.2 Drive unit behavior in case of a voltage failure**

The motor of the drive unit has the following function when the drive is in motion:

In case of a voltage failure, the drive unit used the motion energy (energy recovery) to supply the electronics cover with voltage. The inverter in the electronics cover realizes a controlled motor deceleration.

If the regenerated energy is not sufficient, the inverter activates the holding function.

## 7.3 DynaStop®

### 7.3.1 Functional description



#### ⚠ WARNING

The DynaStop® electrodynamic retarding function does not allow for a definite stop at a position.

Severe or fatal injuries.

- DynaStop® must not be used for hoists.
- When DynaStop® is used on inclining/downward slopes or for vertical conveyors without free hanging loads, adhere to the basic safety and health requirements (e.g. the EG Machinery Directive 2006/42/EG).
- To use DynaStop®, perform a risk assessment to determine the required safety measures.



#### NOTICE

Setting the controller inhibit when the drive unit is running will activate DynaStop®. This can cause high torque loads, which may damage the drive unit and the application.

Possible damage to property

- Activate the controller inhibit only when the speed is "0".

The DynaStop® function allows for generating a speed-dependent torque which opposes the rotational movement.

Within the permitted operating range, this torque prevents an excessive acceleration of the application by use of an external force (e.g. lowering at inclining tracks).

### 7.3.2 DynaStop® torques



#### INFORMATION

For the possible DynaStop® torques, refer to chapter "Technical data and dimension sheets" > "DynaStop® torques".

## 7.4 Deactivating DynaStop®

### INFORMATION




For information on how to disable the DynaStop® function for startup and assembly purposes, refer to chapter "Startup".

#### 7.4.1 Activating the function

The brake/DynaStop® function can be released/disabled without enabling the drive. This function is only available in function block FCB01.

Before activating the function, make the following settings in MOVISUITE®:

1. Activate the function "Release brake/DynaStop® with inhibited output stage – enable". As an alternative, you can also enable the function as follows:
  - ⇒ Set DIP switch S1/2 = ON.
  - ⇒ If DIP switch S1/2 is deactivated (see menu [Functions] > [Inputs/outputs] > [Basic unit] > [DIP switch functions] > [Index 88521.1 bit0 = 1]) set the parameter "Release brake/DynaStop® with inhibited output stage – enable" = 1 [1].
2. Configure the function via a digital input [2] or via a process data bit [3].

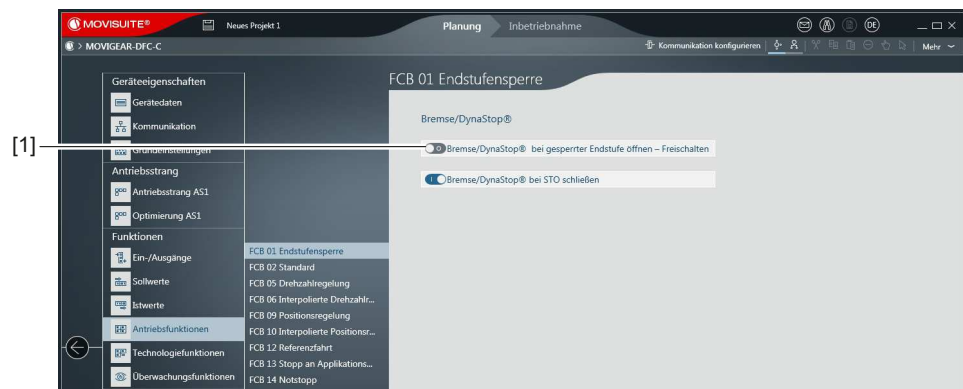

9007221229618187



9007221229621131

25887130/EN – 11/2018



18014420484365067

With the configured digital input/process data bit, you can:

- Deactivate the DynaStop® function of MOVIGEAR® performance without deactivating the drive enable in function block FCB01.

## 7.5 DynaStop® in conjunction with STO



### ⚠ WARNING

The DynaStop® electrodynamic retarding function does not allow for a definite stop at a position.

Severe or fatal injuries.

- DynaStop® must not be used for hoists.
- When DynaStop® is used on inclining/downward slopes or for vertical conveyors without free hanging loads, adhere to the basic safety and health requirements (e.g. the EG Machinery Directive 2006/42/EG).
- To use DynaStop®, perform a risk assessment to determine the required safety measures.



### INFORMATION

Observe chapter "Functional safety" for using the STO function.

The optional DynaStop® function is not safety-related. It is not part of the safety functions described in chapter "Functional safety".

**7.5.1 Using the DynaStop® function in connection with the STO function**

To use the DynaStop® function in connection with the STO function, SEW-EURODRIVE recommends control according to SS1(c).


To do so, the parameter setting "Stop standard AS1" = 1 (Brake applied/drive not energized) is required (standard setting).

The following table shows the behavior of the DynaStop® function depending on the parameter setting:

Index	Parameter/setting	Meaning
<b>8563.1</b>	Stop standard AS1 <b>0 = brake not applied/drive energized</b>	The drive decelerates along the set ramp. When the drive reaches speed "0", DynaStop® is <b>not</b> activated.
	Stop standard AS1 <b>1 = Brake applied/drive not energized</b>	The drive decelerates along the set ramp. When the drive reaches speed "0", DynaStop® is not activated safety-relatedly.
<b>8501.3</b>	Apply brake/ DynaStop® in STO state <b>0 = NO</b>	The DynaStop® status remains unchanged when STO is triggered.
	Apply brake/ DynaStop® in STO state <b>1 = Yes</b>	DynaStop® is activated (not safety-related) when STO is triggered.

Required settings  
 Recommended setting

The following figure shows the use of the DynaStop® function in connection with the STO function:

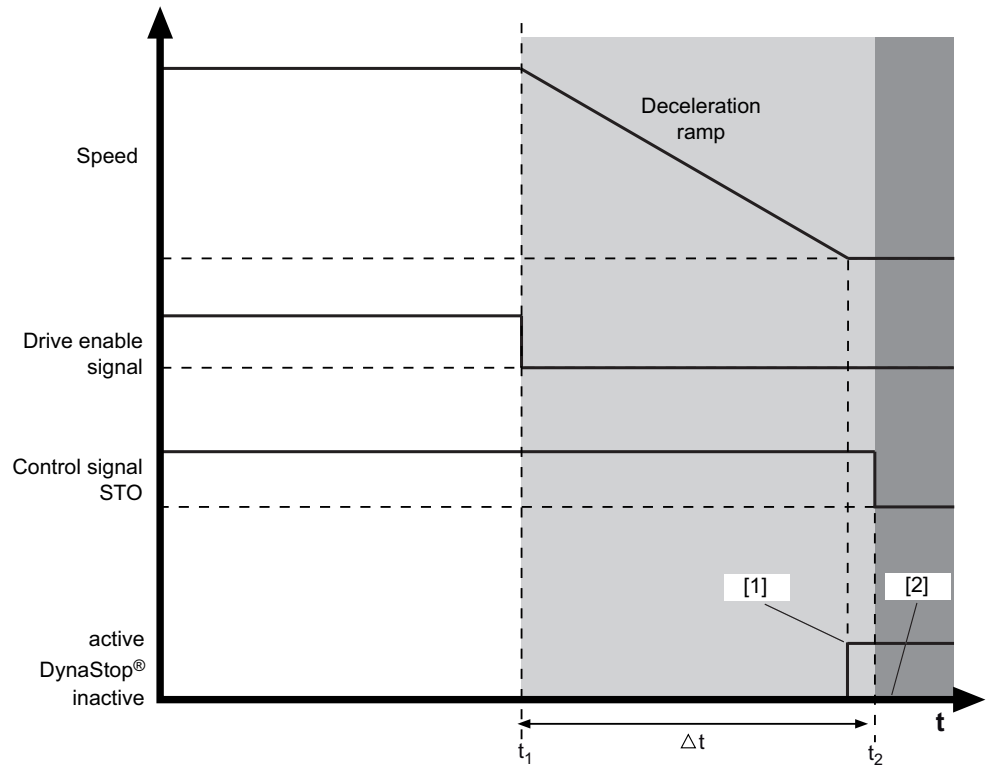

9007201718955403

- [1] Parameter setting 8563.1 = 1 (brake applied/drive not energized) factory settings.
- [2] Parameter setting 8563.1 = 0 (brake not applied/drive energized)

- t Time
- $t_1$  Point of time when brake ramp is initiated
- $t_2$  Point of time when STO is triggered
- $\Delta t$  Time between initiating the brake ramp and STO
- Safe time delay range
- Disconnection range



### 7.5.2 Behavior when STO is activated before standstill (rotational speed = 0)



#### NOTICE

Depending on the settings of parameter "8501.3, bit 0 "Apply brake/DynaStop® in STO state", the DynaStop® function can be activated at values outside of the permitted operating range.

This can cause a high torque load/high motor currents, which may damage the drive unit and the application.

- Use the factory settings or recommended settings.

If STO is activated before the motor has come to standstill, the DynaStop® function behaves as set in parameter Parameter 8501.3, bit 0 "Apply brake/DynaStop® in STO state":

**Parameter 8501.3, bit 0 "Apply brake/DynaStop® in STO state" = 1 = YES**

- DynaStop® is activated when STO is triggered.

**Parameter 8501.3, bit 0 "Apply brake/DynaStop® in STO state" = 0 = NO**

**(Factory setting/recommended setting)**

The DynaStop® status remains unchanged when STO is triggered.


- Depending on the application, the motor coasts to a halt or even accelerates.
- The stopping distance is not defined.

### Factory setting/recommended settings



The following figure shows the behavior when STO is activated before the motor is at standstill in connection with the following parameter setting:

Parameter 8501.3, bit 0 "Apply brake/DynaStop® in STO state" = 0 = NO

(Factory setting/recommended settings):

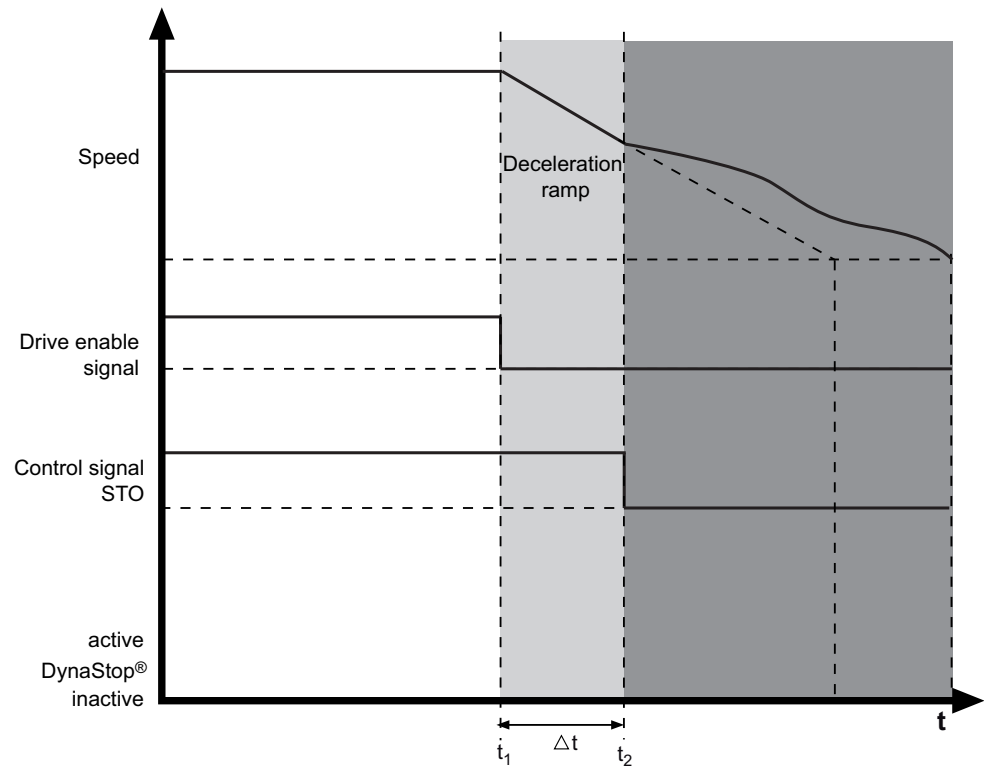

9007201718958603

t	Time
$t_1$	Point of time when brake ramp is initiated
$t_2$	Point of time when STO is triggered
$\Delta t$	Time between initiating the brake ramp and STO
	Safe time delay range
	Disconnection range

Activating the STO function during the execution of the ramp aborts the controlled ramp-down:

Possible reasons for premature activation of STO:

- Deceleration time  $\Delta t$  too short
- Extension of the deceleration ramp due to the current limit  
e.g. when load is too high

## 8 Service



### NOTICE

Improper work on the drive units can lead to damage.

Possible damage to property.

- Note that only qualified personnel is permitted to repair drives from SEW-EURODRIVE.
- Consult SEW-EURODRIVE Service department.

### 8.1 Malfunctions of the mechanical drive

The following table shows troubleshooting options for malfunctions of the mechanical drive:

Fault	Possible cause	Measure
<b>Unusual, regular running noise</b>	Meshing/grinding noise: Bearing damage	Contact SEW-EURODRIVE Service
<b>Unusual, regular running noise</b>	Knocking noise: Irregularity in the gearing	Contact SEW-EURODRIVE Service
<b>Unusual, irregular running noise</b>	Foreign objects in the oil	Stop the drive and contact SEW-EURODRIVE SERVICE
<b>Oil leaking from the gear unit cover</b>	Gear unit cover seal leaking	Contact SEW-EURODRIVE Service
<b>Oil leaking from the connection box</b>	Internal seal defective	Contact SEW-EURODRIVE Service
<b>Oil leaking from the output-side oil seal</b>	Oil seal defective  Short-term oil and/or grease leakage at the oil seal is possible in the run- in phase (24 hours running time).	Replace oil seal
<b>Oil leaking from the output-side oil seal</b>	Too much oil  Short-term oil and/or grease leakage at the oil seal is possible in the run- in phase (24 hours running time).	Correct the oil quantity


Fault	Possible cause	Measure
<b>Oil leaking from the output-side oil seal</b>	Drive installed in the wrong mounting position or breather valve installed in wrong position.  Short-term oil and/or grease leakage at the oil seal is possible in the run-in phase (24 hours running time).	Install the breather valve correctly
<b>Drive shaft does not turn although the motor is running (see chapter "Meaning of LEDs")</b>	Shaft-hub connection in the gear unit interrupted	Send in the drive unit for repair

## 8.2 Evaluating fault messages

### 8.2.1 MOVISUITE®

The following section shows a sample evaluation of a fault message in MOVISUITE®:

1. Open the parameter tree in MOVISUITE®.
2. Select the "Status" node in the parameter tree [6].
  - ⇒ The **current fault messages** can be found in the "Fault status" [5] group.
  - ⇒ **Additional information** on the causes of the "Not ready" status can be found in the "Unit status" [4] group.
  - ⇒ Information on the **history of the fault messages** can be found in the "Fault memory" [7] node.

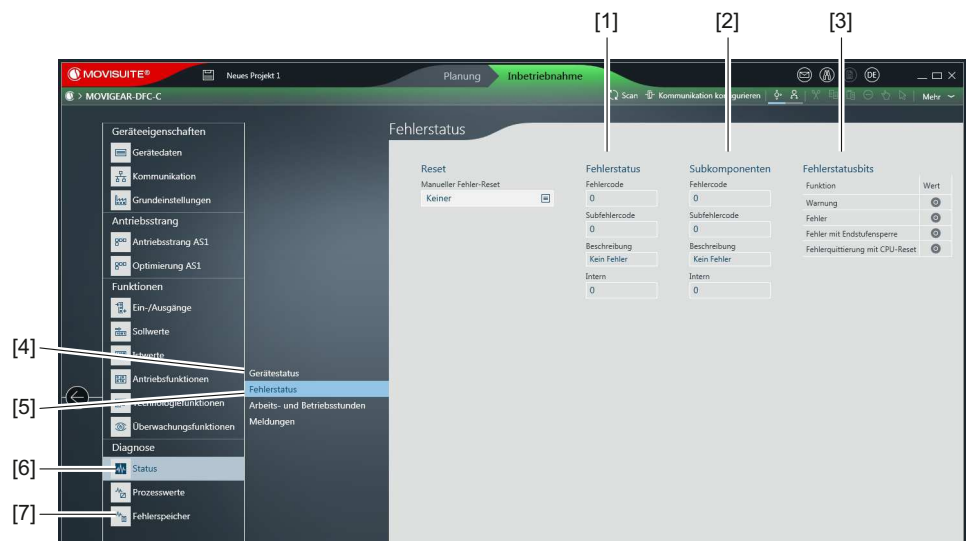

9007221229799307

- [1] Fault status of the main component
- [2] Fault status of the subcomponent
- [3] Display of the status bits

### 8.3 Switch-off responses

Fault response	Description
No response	The inverter ignores the event.
Warning with self reset	The inverter sends a warning message with self-reset.
Warning	The inverter issues a warning message.
Application stop (with output stage inhibit)	The inverter stops with the deceleration set for the application limit. For n=0: Brake "applied" and output stage "off".
Application stop (with output stage inhibit) with self reset	
Emergency stop (with output stage inhibit)	The inverter stops with the set emergency stop deceleration.
Emergency stop (with output stage inhibit) with self-reset	
Inhibit output stage with self re-set	The output stage is deactivated and the brake is applied.
Inhibit output stage	

Self-reset means: Eliminating the cause of the fault acknowledges the fault. The inverter automatically resumes the operation performed before the fault. The drive re-starts automatically.

### 8.4 Fault messages with parameterizable response

Fault	Description	Index no.	Possible fault response
Manual mode – timeout response	This parameter is used to set the response to a bus timeout during manual mode.	8504.3	<ul style="list-style-type: none"> <li>• Application stop (with output stage inhibit)</li> <li>• Emergency stop (with output stage inhibit)</li> <li>• Inhibit output stage</li> </ul>
Heat sink overtemperature – prewarning	Here, you can set the unit response when the prewarning threshold for heat sink utilization is exceeded (index 8336.1).	8622.2	<ul style="list-style-type: none"> <li>• No response</li> <li>• Warning</li> </ul>
Positioning lag error	This parameter is used to set the unit response to a lag fault (lag fault window exceeded, index 8509.4).	8622.3	<ul style="list-style-type: none"> <li>• No response</li> <li>• Warning</li> <li>• Application stop (with output stage inhibit)</li> <li>• Emergency stop (with output stage inhibit)</li> <li>• Inhibit output stage</li> </ul>

Fault	Description	Index no.	Possible fault response
Line phase failure	This parameter is used to set the unit response to a line phase failure (values below threshold defined by the user, index 8351.5).	8622.4	<ul style="list-style-type: none"> <li>• No response</li> <li>• Warning</li> <li>• Application stop (with output stage inhibit)</li> <li>• Emergency stop (with output stage inhibit)</li> <li>• Inhibit output stage</li> </ul>
External fault	This parameter is used to set the device response to an external fault (e.g. triggered by terminal or control word).	8622.5	<ul style="list-style-type: none"> <li>• No response</li> <li>• Warning</li> <li>• Application stop (with output stage inhibit)</li> <li>• Emergency stop (with output stage inhibit)</li> <li>• Inhibit output stage</li> </ul>
Fieldbus – timeout	Here one can set how the unit is to respond to a timeout on the EtherCAT®/SBus <sup>PLUS</sup> (timeout period, Index 8455.3).	8622.6	<ul style="list-style-type: none"> <li>• Warning</li> <li>• Application stop (with output stage inhibit)</li> <li>• Emergency stop (with output stage inhibit)</li> <li>• Inhibit output stage</li> <li>• Warning with self reset</li> <li>• Application stop (with output stage inhibit) with self reset</li> <li>• Emergency stop (with output stage inhibit) with self reset</li> <li>• Inhibit output stage with self reset</li> </ul>
External synchronization	This parameter is used to set the unit response to loss of external synchronization.	8622.7	<ul style="list-style-type: none"> <li>• No response</li> <li>• Warning</li> <li>• Application stop (with output stage inhibit)</li> <li>• Emergency stop (with output stage inhibit)</li> <li>• Inhibit output stage</li> <li>• Warning with self reset</li> <li>• Application stop (with output stage inhibit) with self reset</li> <li>• Emergency stop (with output stage inhibit) with self reset</li> <li>• Inhibit output stage with self reset</li> </ul>

Fault	Description	Index no.	Possible fault response
Motor temperature pre-warning – current parameter set	Motor temperature active parameter set – prewarning.	8622.8	<ul style="list-style-type: none"> <li>• No response</li> <li>• Warning</li> <li>• Application stop (with output stage inhibit)</li> <li>• Emergency stop (with output stage inhibit)</li> <li>• Inhibit output stage</li> </ul>
Electromechanical capacity utilization – prewarning	This parameter is used to set the unit response to an exceeded prewarning threshold for electromechanical capacity utilization (index 8336.2).	8622.10	<ul style="list-style-type: none"> <li>• No response</li> <li>• Warning</li> <li>• Application stop (with output stage inhibit)</li> <li>• Emergency stop (with output stage inhibit)</li> <li>• Inhibit output stage</li> </ul>
HW limit switches – current parameter set		8622.11	<ul style="list-style-type: none"> <li>• No response</li> <li>• Emergency stop (with output stage inhibit)</li> <li>• Emergency stop (with output stage inhibit) with self-reset</li> </ul>
SW limit switches – current parameter set		8622.12	<ul style="list-style-type: none"> <li>• No response</li> <li>• Emergency stop (with output stage inhibit)</li> <li>• Emergency stop (with output stage inhibit) with self-reset</li> </ul>
Encoder – warning	This parameter is used to set the unit response to an encoder warning.	8622.13	<ul style="list-style-type: none"> <li>• Warning</li> <li>• Application stop (with output stage inhibit)</li> <li>• Emergency stop (with output stage inhibit)</li> <li>• Inhibit output stage</li> </ul>
Encoder – fault	This parameter is used to set the unit response to an encoder fault.	8622.14	<ul style="list-style-type: none"> <li>• Application stop (with output stage inhibit)</li> <li>• Emergency stop (with output stage inhibit)</li> <li>• Inhibit output stage</li> </ul>
Response to external braking resistor fault	External braking resistor fault	8622.20	<ul style="list-style-type: none"> <li>• No response</li> <li>• Warning</li> <li>• Application stop (with output stage inhibit)</li> <li>• Emergency stop (with output stage inhibit)</li> <li>• Inhibit output stage</li> </ul>

Fault	Description	Index no.	Possible fault response
Application heartbeat timeout	This parameter is used to set the unit response to a timeout of the application heartbeat.	8622.21	<ul style="list-style-type: none"> <li>• Warning</li> <li>• Application stop (with output stage inhibit)</li> <li>• Emergency stop (with output stage inhibit)</li> <li>• Inhibit output stage</li> </ul>

## 8.5 Resetting fault messages



### ⚠ WARNING

Eliminating the cause of the problem or performing a reset may result in the drive re-starting automatically.

Severe or fatal injuries.

- Prevent unintended startup.

Acknowledge fault message by:


- Switch the supply system off and on again.
- Via the controller/PLC: Send "reset command".



## 8.6 Description of status and operating displays

### 8.6.1 PROFINET IO LED displays

The following image depicts the LEDs at the PROFINET IO design:

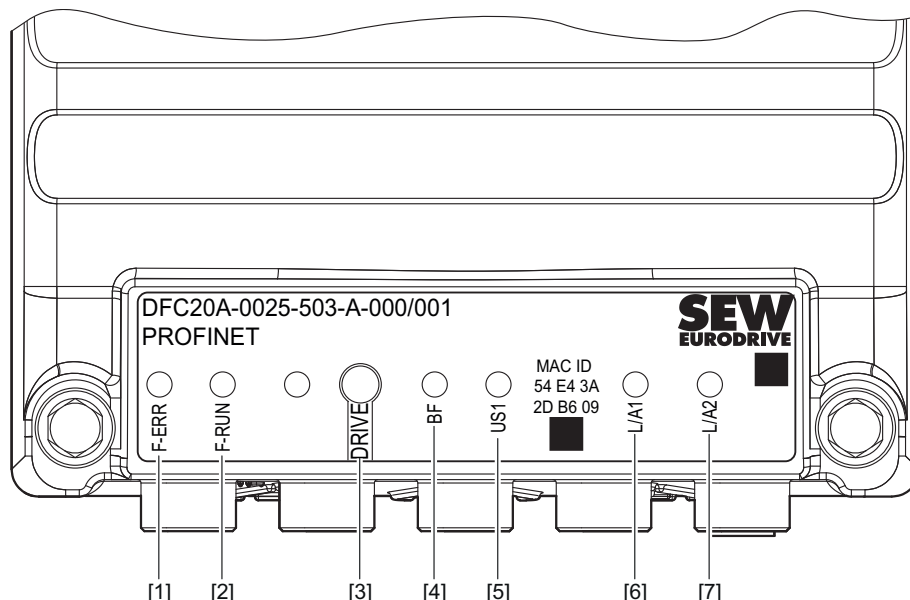


25742699787

- |                        |                |                |
|------------------------|----------------|----------------|
| [1] "F-ERR" LED        | [4] "BF" LED   | [7] "L/A1" LED |
| [2] "F-RUN" LED        | [5] "US1" LED  |                |
| [3] "DRIVE" status LED | [6] "L/A1" LED |                |

### 8.6.2 LEDs on EtherNet/IP™, Modbus TCP design

The following image depicts the LEDs at the EtherNet/IP™, Modbus TCP design:

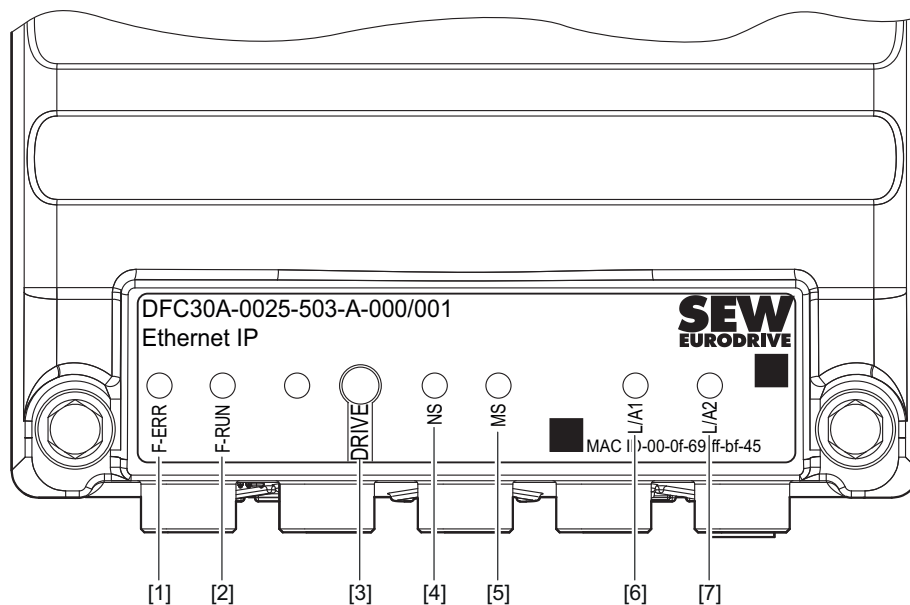

25846570635

- |                        |              |                |
|------------------------|--------------|----------------|
| [1] "F-ERR" LED        | [4] "NS" LED | [6] "L/A1" LED |
| [2] "F-RUN" LED        | [5] "MS" LED | [7] "L/A2" LED |
| [3] "DRIVE" status LED |              |                |

## 8.6.3 General LEDs

## "F-ERR" LED

LED	Meaning
Off, illuminated, or flashes	Reserved The "F-ERR" LED has no function.

## "F-RUN" LED

LED	Meaning
Off, illuminated, or flashes	Reserved The "F-RUN" LED has no function.

## "DRIVE" status LED

LED	Operating status/		Meaning	Measure
	Fault code	Subfault code		
– Off	Not ready for operation		Line voltage absent.	Switch on the line voltage.
Yellow Flashes very rapidly, 4 Hz	Not ready for operation		Initialization phase	Wait for the initialization to be completed.
Yellow Flashes 1 Hz	Ready but unit inhibited		The "STO" signal is active.	Deactivate the "STO" signal.
Yellow Flashes slowly, 0.5 Hz	Ready for operation, but manual mode/local mode, unit inhibited		Line voltage is OK.	–
Yellow Flashes rapidly, 2 Hz	Ready		Deactivation of DynaStop® without drive enable is active.	–
Yellow Steady light	Ready but unit inhibited		Line voltage is OK. The output stage is locked.	–
Green Flashes slowly, 0.5 Hz	Unit enabled, but condition manual operation/local mode		The output stage is enabled. The motor is in operation.	–
Green Flashes very rapidly, 4 Hz	Unit enabled, but current limit active.		The drive is at the current limit.	Reduce the load.
Green Steady light	Unit enabled.		The output stage is enabled. The motor is in operation.	–

LED	Operating status/		Meaning	Measure
	Fault code	Subfault code		
<b>Yellow/red</b> Flashes with changing colors, 1 Hz (2 x yellow, 2 x red)	Ready		A displaying fault is present. The output stage is locked.	Consult the "Fault table" chapter for possible measures to be taken.
<b>Green/red</b> Flashes with changing colors, 1 Hz (2 x green, 2 x red)	Ready		A displaying fault is present. The output stage is enabled. The motor is in operation.	Consult the "Fault table" chapter for possible measures to be taken.
<b>Red</b> Flashes 1 Hz	3	1	Ground fault	Consult the "Fault table" chapter for possible measures to be taken.
	4	1	Brake chopper fault	
	6	1	Line fault	
	7	1	DC link fault	
	8	1, 2, 3	Speed monitoring fault	
	9	1, 2, 5, 6, 9, 10	Control mode fault	
	10	1, 3 – 11	Data Flexibility fault	
	11	1 – 6	Temperature monitoring fault	
	12	1, 2	Fault Brake	
	13	5, 24	Encoder 1 fault	
	16	5 – 8, 10, 20 – 27	Startup fault	
	19	1 – 9	Process data fault	
	20	2, 11	Fault Device monitoring	
	23	4	Power section fault	
	25	2 – 7, 20, 21, 30, 31, 61, 70	Parameter memory monitoring	
	26	1, 3	External fault	
	28	1 – 12, 14	FCB drive function fault	
	29	1 – 4	Hardware limit switch fault	
	30	1 – 3	Software limit switch fault	
	31	1 – 4, 7, 9	Thermal motor protection fault	
32	2 – 6, 12	Communication fault		
33	11, 12, 13	System initialization fault		
34	1	Process data configuration fault		
35	1 – 5	Function activation fault		
42	1 – 3	Lag fault		
46	2, 3, 50, 51, 52	Safety card fault		
51	1	Analog processing fault		

LED	Operating status/		Meaning	Measure
	Fault code	Subfault code		
Red Steady light	1	1, 2	Output stage monitoring fault	Contact SEW-EURODRIVE Service.
	4	2	Brake chopper fault	
	7	2	DC link fault	
	9	3, 4, 8	Control mode fault	
	10	2, 99	Data Flexibility fault	
	11	7, 8	Temperature monitoring fault	
	13	1, 3, 6, 7, 8, 9, 11, 13, 15, 22, 23	Encoder 1 fault	
	16	2, 11, 12. 30	Startup fault	
	17	7	Internal processor fault	
	18	1, 3,4, 7, 8, 9, 10, 12, 13	Software fault	
	20	1, 7	Fault Device monitoring	
	21	1	S-Drive 1 fault	
	23	5, 6, 7, 8	Power section fault	
	25	10, 12 – 19, 50, 51, 81	Parameter memory monitoring	
	28	13	FCB drive function fault	
33	1, 2, 6, 7, 8, 10	System initialization fault		
46	1	Safety card fault		

## "L/A1" LEDs

LED	Meaning
Green Illuminated	There is <b>no</b> Ethernet connection to Ethernet port 1.
Yellow Illuminated	An Ethernet connection exists from Ethernet port 1 to an additional Ethernet consumer.

## "L/A2" LEDs

LED	Meaning
Green Illuminated	There is <b>no</b> Ethernet connection to Ethernet port 2.
Yellow Illuminated	An Ethernet connection exists from Ethernet port 2 to an additional Ethernet consumer.

### 8.6.4 Bus-specific LEDs for PROFINET IO

#### "BF" LED

LED	Meaning	Measure
– Off	The unit has detected a connection to the PROFINET master.	–
Red Illuminated	The connection to the PROFINET master has failed.	• Check the PROFINET connection of the unit.
	The device detects no connection to the PROFINET master (bus error).	• Check all the cables in the PROFINET network.
	The PROFINET master is not in operation.	• Check the PROFINET master.
	Faulty process data configuration.	• Check the process data configuration.

#### "US1" LED

LED	Meaning	Measure
Yellow Flashing	The unit is in the initialization phase.	• Wait for the initialization to be completed.
Green Illuminated	The unit works in normal operation.	–
Green Flashing	Reserved	–
Red Illuminated	Unit has detected an internal fault.	• Observe the instructions in the chapter "Fault table".

### 8.6.5 Bus-specific LEDs for EtherNet/IP™ and Modbus TCP

#### "NS" LED

LED	Meaning	Measure
– Off	Device is switched off.	• Check the DC 24 V voltage supply.
	No DC 24 V supply.	• Switch on the device again.
	The IP address is not set.	• Set the IP address.
Green Flashing	The connection to the Ethernet master has failed.	• Check the Ethernet connection of the device.
	The device detects no connection to the Ethernet master (bus error).	• Check the Ethernet connection.
Green Illuminated	The IP address is set. The Ethernet connection has been established.	–
Red Flashing	Timeout delay of the controlling connection has expired. The state is reset by restarting communication.	• Check the bus connection. • Check the master/scanner. • Check the Ethernet connection.

LED	Meaning	Measure
<b>Red Illuminated</b>	Conflict detected while assigning the IP address. Another station in the network uses the same IP address.	<ul style="list-style-type: none"> <li>• Check whether there is a unit with the same IP address within the network.</li> <li>• Change the IP address of the device.</li> <li>• Check the DHCP settings for assigning an IP address of the DHCP server (only when a DHCP server is used).</li> </ul>
<b>Red/green Flashing</b>	The device performs an LED test. This status may only be active for a short time during startup.	–

**"MS" LED**

LED	Meaning	Measure
<b>– Off</b>	No line or DC 24 V supply.	<ul style="list-style-type: none"> <li>• Check the voltage supply.</li> </ul>
<b>Green Flashing</b>	The device has not been configured yet.	<ul style="list-style-type: none"> <li>• Configure the device.</li> <li>• Check the DHCP server connection (only if DHCP is activated and the status continues).</li> </ul>
<b>Green Illuminated</b>	The component hardware is OK.	–
<b>Red Flashing</b>	A correctable fault has occurred at the component hardware.	<ul style="list-style-type: none"> <li>• Check whether there is a device with the same IP address within the network.</li> <li>• Change the IP address of the device.</li> <li>• Check the DHCP settings for assigning an IP address of the DHCP server (only when a DHCP server is used).</li> </ul>
<b>Red Illuminated</b>	A non-correctable fault has occurred at the component hardware.	<ul style="list-style-type: none"> <li>• Switch on the device again.</li> <li>• Reset the device to the factory settings.</li> <li>• If this fault occurs repeatedly, replace the device or contact SEW-EURODRIVE Service.</li> </ul>
<b>Red/green Flashing</b>	The device performs an LED test. This status may only be active for a short time during startup.	–

## 8.7 Fault table

### 8.7.1 Fault 1 Output stage monitoring

<b>Subfault: 1.1</b>		
<b>Description: Short circuit in motor output terminals</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Overcurrent in output stage or faulty output stage control detected, and output stage inhibited by hardware.	Possible causes for overcurrent are short circuit at the output, excessive motor current, or a defective power output stage.

<b>Subfault: 1.2</b>		
<b>Description: Overcurrent in output stage</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Motor current too high.	Connect a smaller motor.
	Current supply	Check the current supply.
	Current transformer	Check the current transformer.
	Ramp limit deactivated and set ramp time too short.	Increase the ramp time.
	Phase module defective.	Check the phase module.
	DC 24 V supply voltage instable.	Check the DC 24 V supply voltage.
	Interruption or short circuit on signal lines of phase modules.	Check the signal lines.

### 8.7.2 Fault 3 Ground fault

<b>Subfault: 3.1</b>		
<b>Description: Ground fault</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Ground fault in the motor lead.	Eliminate ground fault in motor lead.
	Ground fault in the inverter.	Eliminate ground fault in inverter.
	Ground fault in the motor.	Eliminate ground fault in motor.
	Ground fault in line components.	Eliminate ground fault in line components.

## 8.7.3 Fault 4 Brake chopper

<b>Subfault: 4.1</b>		
<b>Description: Brake chopper overcurrent</b>		
Response: Output stage inhibit		
Cause		Measure
Excessive regenerative power.		Extend the deceleration ramps.
Short circuit detected in braking resistor circuit		Check supply cable to braking resistor.
Braking resistance too high.		Check the technical data of the braking resistor.

<b>Subfault: 4.2</b>		
<b>Description: Brake chopper defective</b>		
Response: Output stage inhibit		
Cause		Measure
Output stage of brake chopper defective		Replace the defective brake chopper.

## 8.7.4 Fault 6 line fault

<b>Subfault: 6.1</b>		
<b>Description: Line phase failure</b>		
Response: Line phase failure		
Cause		Measure
Missing line phase detected.		Check the power supply cable.
DC link voltage periodically too low.		Check the configuration of the supply system.
Inadequate line voltage quality.		Check supply (fuses, contactor).

## 8.7.5 Fault 7 DC link

<b>Subfault: 7.1</b>		
<b>Description: DC link overvoltage</b>		
Response: Output stage inhibit		
Cause		Measure
Maximum permitted DC link voltage limit exceeded and output stage inhibited by hardware.		<ul style="list-style-type: none"> <li>– Extend deceleration ramps.</li> <li>– Check supply cable to the braking resistor.</li> <li>– Check the technical data of the braking resistor.</li> </ul>



8.7.6 Fault 8 Speed monitoring

**Subfault: 8.1**

**Description: Speed monitoring – motor mode**

Response: Output stage inhibit	
Cause	Measure
Speed controller operates at setting limit (mechanical overload or phase failure in supply system or motor).	Increase the delay time set for speed monitoring, or reduce the load.
Encoder not connected correctly.	Check encoder connection and direction of rotation. If necessary, increase current limiting or reduce acceleration values.
Encoder has incorrect direction of rotation.	<ul style="list-style-type: none"> <li>– Check encoder connection and direction of rotation. If necessary, increase current limiting or reduce acceleration values.</li> <li>– Check motor lead and motor, check line phases.</li> </ul>

**Subfault: 8.2**

**Description: Speed monitoring – generator mode**

Response: Output stage inhibit	
Cause	Measure
Speed controller operates at setting limit (mechanical overload or phase failure in supply system or motor).	Increase the delay time set for speed monitoring, or reduce the regenerative load.
Encoder not connected correctly.	Check encoder connection and direction of rotation. If necessary, increase current limiting or reduce deceleration values.
Encoder has incorrect direction of rotation.	<ul style="list-style-type: none"> <li>– Check encoder connection and direction of rotation. If necessary, increase current limiting or reduce deceleration values.</li> <li>– Check motor cable and motor. Check line phases.</li> </ul>

**Subfault: 8.3**

**Description: Maximum speed at motor shaft**

Response: Output stage inhibit	
Cause	Measure
Actual speed exceeded "Maximum speed at motor shaft" limit value (index 8360.9 / 8361.9). This limit value is set at startup matching motor and gear unit.	Reduce the maximum rotational speed.

25887130/EN – 11/2018

## 8.7.7 Fault 9 Control mode

<b>Subfault: 9.1</b>		
<b>Description: Magnetization of motor not possible.</b>		
Response: Output stage inhibit		
	Cause	Measure
	User-defined current limit or output stage monitoring reduced possible maximum current to such a degree that required magnetizing current cannot be set.	Reduce output stage utilization, e.g., by reducing the PWM frequency or reducing the load. – Increase user-defined current limit.
<b>Subfault: 9.2</b>		
<b>Description: Requested operating mode not possible with active control mode</b>		
Response: Output stage inhibit		
	Cause	Measure
	The current FCB has activated an operating mode. The active control mode does not support this operating mode, for example "position control" or "torque control" with V/f control mode.	Start up control mode that supports the required operating mode. Connect encoder if necessary. Select an operating mode that is supported by the current control mode.
<b>Subfault: 9.3</b>		
<b>Description: Absolute rotor position not available</b>		
Response: Output stage inhibit		
	Cause	Measure
	The current control mode requires an absolute rotor position. The encoder selected for "Source is actual speed" does not provide an absolute rotor position.	Use an absolute encoder, or identify the rotor position using FCB 18.
<b>Subfault: 9.4</b>		
<b>Description: Correct current supply of motor not possible</b>		
Response: Output stage inhibit		
	Cause	Measure
	Failed to set required current during premagnetization.	Check the cabling, or disable the function "current monitoring during premagnetization".
<b>Subfault: 9.5</b>		
<b>Description: Maximum output frequency exceeded.</b>		
Response: Output stage inhibit		
	Cause	Measure
	Maximum output frequency exceeded.	Reduce the maximum rotational speed.

**Subfault: 9.6**  
**Description: Maximum model speed exceeded.**

Response: Output stage inhibit	
Cause	Measure
Speed of drive calculated in ELSM® control mode too high for motor control.	If possible minimize the "Speed/position controller sampling cycle", or reduce the speed.

**Subfault: 9.8**  
**Description: Flux model error**

Response: Output stage inhibit	
Cause	Measure
Rotor flux calculated by motor model not plausible, or calculated internal voltage too small.	<ul style="list-style-type: none"> <li>– Check configuration data.</li> <li>– Check motor data.</li> <li>– Check machine: Idle state or too low speed.</li> <li>– Check the connection cable between inverter and motor</li> <li>– Contact SEW-EURODRIVE Service.</li> </ul>

**Subfault: 9.9**  
**Description: Parameter measurement not possible with active motor type**

Response: Output stage inhibit	
Cause	Measure
Parameter measurement is only possible with "a-synchronous" and "synchronous" motor types. No magnetic reluctance and LSPM motors.	Select the correct motor type.

**Subfault: 9.10**  
**Description: Rotor stall monitoring**

Response: Output stage inhibit	
Cause	Measure
The current control cannot hold the load torque. The deviation between stationary setpoint voltage and actual voltage is too large.	Reduce the load torque (hoist) in the controlled system.

**Subfault: 9.11**  
**Description: Standstill current function**

Response: Output stage inhibit	
Cause	Measure
With the ELSM method, the standstill current function is only possible in combination with rotor position measurement.	<ul style="list-style-type: none"> <li>– Enable rotor position measurement</li> <li>– Check motor data.</li> </ul>

25887130/EN – 11/2018

## 8.7.8 Fault 10 Data Flexibility

<b>Subfault: 10.1</b>		
<b>Description: Initialization</b>		
	Response: Application stop + output stage inhibit	
	Cause	Measure
	Init task error.	The init task has issued a return code != 0. Check the program.
<b>Subfault: 10.2</b>		
<b>Description: Illegal operation code</b>		
	Response: Application stop + output stage inhibit	
	Cause	Measure
	Illegal opcode in Data Flexibility program.	Contact SEW-EURODRIVE Service.
<b>Subfault: 10.3</b>		
<b>Description: Memory access</b>		
	Response: Application stop + output stage inhibit	
	Cause	Measure
	Memory area violated while accessing array	For example an array access results in writing beyond the permitted memory range. Check the program.
<b>Subfault: 10.4</b>		
<b>Description: Stack</b>		
	Response: Application stop + output stage inhibit	
	Cause	Measure
	Overflow of Data Flexibility stack detected.	Check the program.
<b>Subfault: 10.5</b>		
<b>Description: Division by 0</b>		
	Response: Application stop + output stage inhibit	
	Cause	Measure
	Division by 0	Check the program.
<b>Subfault: 10.6</b>		
<b>Description: Runtime</b>		
	Response: Application stop + output stage inhibit	
	Cause	Measure
	Runtime error/watchdog	Check the program. The program execution time exceeds the permitted time.
	PDI or PDO tasks.	Check the program. The execution time of the PDI or PDO task exceeds the permitted time.

**Subfault: 10.7**  
**Description: Calculation result of multiplication/division command too large**

Response: Application stop + output stage inhibit	
Cause	Measure
Calculation result of multiplication/division command exceeds 32 bits.	Check the program.
Failed to write calculation result of multiplication/division command into result variable.	Check the program.

**Subfault: 10.8**  
**Description: Illegal connection**

Response: Application stop + output stage inhibit	
Cause	Measure
Index used in connect not allowed.	Check the program. The index used either does not exist or is not permitted for access via process data, see parameter list.

**Subfault: 10.9**  
**Description: CRC code**

Response: Application stop + output stage inhibit	
Cause	Measure
Wrong CRC checksum of code	Load the program again. The program memory is corrupt. An unauthorized write access has been carried out on the program memory.

**Subfault: 10.10**  
**Description: Setpoint cycle time not supported**

Response: Application stop + output stage inhibit	
Cause	Measure
Non-supported setpoint cycle time parameterized	Set the setpoint cycle time to the default value 1 ms.

**Subfault: 10.11**  
**Description: No application program loaded**

Response: Output stage inhibit	
Cause	Measure
No Data Flexibility application program loaded.	Load the program or disable Data Flexibility.

**Subfault: 10.99**  
**Description: Unknown error**

Response: Application stop + output stage inhibit	
Cause	Measure
Unknown Data Flexibility error.	Contact SEW-EURODRIVE Service.

25887130/EN – 11/2018

## 8.7.9 Fault 11 Temperature monitoring

<b>Subfault: 11.1</b>		
<b>Description: Heat sink overtemperature</b>		
Response: Output stage inhibit		
Cause	Measure	
Maximum permitted heat sink temperature exceeded. The capacity utilization is possibly too high.	<ul style="list-style-type: none"> <li>– Reduce the load.</li> <li>– Reduce the rms value of the current.</li> <li>– Reduce the PWM frequency.</li> <li>– Ensure sufficient cooling.</li> <li>– Reduce the ambient temperature.</li> </ul>	
<b>Subfault: 11.2</b>		
<b>Description: Heat sink utilization – prewarning</b>		
Response: Heat sink utilization – prewarning		
Cause	Measure	
High thermal load on heat sink of device, and prewarning threshold reached.	<ul style="list-style-type: none"> <li>– Reduce the load.</li> <li>– Reduce the rms value of the output current.</li> <li>– Reduce the PWM frequency.</li> <li>– Ensure sufficient cooling.</li> <li>– Reduce the ambient temperature.</li> </ul>	
<b>Subfault: 11.3</b>		
<b>Description: Device utilization</b>		
Response: Output stage inhibit		
Cause	Measure	
The temperature has reached or exceeded the switch-off threshold. Possible causes: Mean output current too high.	Reduce the load.	
PWM frequency too high.	Reduce the PWM frequency.	
Ambient temperature too high.	Ensure sufficient cooling.	
Unfavorable air convection.	Check air convection.	
Fan defective.	Check the fan and replace if necessary.	
<b>Subfault: 11.5</b>		
<b>Description: Electromechanical utilization</b>		
Response: Output stage inhibit		
Cause	Measure	
Electromechanical components of device overloaded by excessive continuous current.	Reduce the load. If necessary, reduce the rms value of the current.	

<b>Subfault: 11.6</b>		
<b>Description: Electromechanical utilization – prewarning</b>		
	Response: Electromechanical utilization – prewarning	
	Cause	Measure
	High load on electromechanical components of device due to high continuous current. Prewarning threshold reached.	<ul style="list-style-type: none"> <li>– Reduce the load.</li> <li>– Reduce the PWM frequency.</li> <li>– Reduce the rms value of the current.</li> <li>– Reduce the ambient temperature.</li> </ul>
<b>Subfault: 11.7</b>		
<b>Description: Wire break at temperature sensor of heat sink.</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Wire break at temperature sensor of heat sink.	Contact SEW-EURODRIVE Service.
<b>Subfault: 11.8</b>		
<b>Description: Short circuit at temperature sensor of heat sink.</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Short circuit at temperature sensor of heat sink.	Contact SEW-EURODRIVE Service.
<b>Subfault: 11.9</b>		
<b>Description: Signal electronics overtemperature</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Maximum permitted signal electronics temperature exceeded.	<ul style="list-style-type: none"> <li>– Reduce the load.</li> <li>– Reduce the ambient temperature.</li> </ul>
<b>Subfault: 11.10</b>		
<b>Description: Wire break at temperature sensor of signal electronics</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Wire break at temperature sensor of signal electronics	Contact SEW-EURODRIVE Service.
<b>Subfault: 11.11</b>		
<b>Description: Short circuit at temperature sensor of signal electronics.</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Short circuit at temperature sensor of signal electronics.	Contact SEW-EURODRIVE Service.

25887130/EN – 11/2018

## 8.7.10 Fault 12 Brake

<b>Subfault: 12.1</b>		
<b>Description: Brake output</b>		
Response: Application stop + output stage inhibit		
Cause		Measure
No brake connected.		Check the connection of the brake.
Brake cable disconnected in switched-on state.		Check the connection of the brake.
Overload due to overcurrent > 2 A		Check the sequential profile of brake control.
Overload due to excessive connection (> 0.5 Hz)		Check the sequential profile of brake control.
Monitoring works only with parameter setting "Brake installed" and "Brake applied"		Make sure that the connected brake is permitted.

<b>Subfault: 12.2</b>		
<b>Description: DC 24 V brake voltage</b>		
Response: Application stop + output stage inhibit		
Cause		Measure
DC 24 V supply voltage not within permitted tolerance of $\pm 10\%$ .		Check the DC 24 V supply voltage.
Monitoring is only active with parameter settings "Brake installed" and "Brake applied"		Check parameter setting.

<b>Subfault: 12.4</b>		
<b>Description: Brake control module missing</b>		
Response: Output stage inhibit		
Cause		Measure
HV brake control has been activated although the hardware does not have a corresponding module.		Select another brake type or brake connection

## 8.7.11 Fault 13 Encoder 1

<b>Subfault: 13.1</b>		
<b>Description: Position comparison check</b>		
Response: Encoder 1 – latest critical fault		
Cause		Measure
Faulty comparison between raw position and track counter of absolute encoders.		<ul style="list-style-type: none"> <li>– Check the track signal wiring.</li> <li>– Check interference sources (e.g. from EMC).</li> <li>– Replace encoder.</li> <li>– Replace card.</li> </ul> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>



<b>Subfault: 13.2</b>		
<b>Description: Unknown encoder type</b>		
	Response: Encoder 1 – latest critical fault	
	Cause	Measure
	Encoder type not known and not supported by in-verter.	<ul style="list-style-type: none"> <li>– Check encoder type.</li> <li>– Contact SEW-EURODRIVE Service.</li> </ul> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>

<b>Subfault: 13.3</b>		
<b>Description: Invalid data</b>		
	Response: Encoder 1 – latest critical fault	
	Cause	Measure
	Invalid encoder nameplate data (measuring steps/pulses per revolution/multi-turn).	<ul style="list-style-type: none"> <li>– Check startup parameters.</li> <li>– Replace encoder.</li> </ul> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>

<b>Subfault: 13.4</b>		
<b>Description: Track measurement error</b>		
	Response: Encoder 1 – latest critical fault	
	Cause	Measure
	Error during track measurement.	<ul style="list-style-type: none"> <li>– Switch the device off and on again.</li> <li>– Check the wiring.</li> <li>– Check interference sources (e.g., from EMC).</li> <li>– Check the encoder. Replace if necessary.</li> </ul> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>

<b>Subfault: 13.5</b>		
<b>Description: Internal warning</b>		
	Response: Encoder – warning	
	Cause	Measure
	Encoder signaled warning.	<ul style="list-style-type: none"> <li>– Check the wiring.</li> <li>– Check interference sources (light beam interrupted, reflector, data cables, etc.).</li> <li>– Clean sensor.</li> </ul>

25887130/EN – 11/2018

<b>Subfault: 13.6</b>		
<b>Description: Signal level too low</b>		
	Response: Encoder 1 – latest critical fault	
	Cause	Measure
	Vector below permitted limit during signal level monitoring	<ul style="list-style-type: none"> <li>– Check the wiring.</li> <li>– Check interference sources (e.g. from EMC).</li> <li>– Check the encoder.</li> </ul> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>
<b>Subfault: 13.7</b>		
<b>Description: Signal level too high</b>		
	Response: Encoder 1 – latest critical fault	
	Cause	Measure
	Vector exceeds permitted limit during signal level monitoring	<p>Check the gear ratio of the resolver in use.</p> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>
<b>Subfault: 13.8</b>		
<b>Description: Signal level monitoring</b>		
	Response: Encoder 1 – latest critical fault	
	Cause	Measure
	Vector exceeds permitted limit during signal level monitoring	<p>Check the resolver mounting position.</p> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>
<b>Subfault: 13.9</b>		
<b>Description: Quadrant check</b>		
	Response: Encoder 1 – latest critical fault	
	Cause	Measure
	Error checking quadrants (sine encoder).	<ul style="list-style-type: none"> <li>– Switch the device off and on again.</li> <li>– Check the wiring.</li> <li>– Check interference sources (e.g. from EMC).</li> <li>– Check the encoder. Replace if necessary.</li> </ul> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>

<b>Subfault: 13.10</b>		
<b>Description: Position tolerance range monitoring</b>		
	Response: Encoder 1 – latest critical fault	
	Cause	Measure
	Position outside tolerance range	<ul style="list-style-type: none"> <li>– Check startup parameters.</li> <li>– Check the wiring.</li> <li>– Check interference sources (light beam interrupted, reflector, data cables, etc.).</li> <li>– Replace encoder.</li> </ul> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>

<b>Subfault: 13.11</b>		
<b>Description: Data timeout</b>		
	Response: Encoder 1 – latest critical fault	
	Cause	Measure
	Encoder process data timeout.	<ul style="list-style-type: none"> <li>– Check interference sources (e.g. from EMC).</li> <li>– Check startup parameters.</li> </ul> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>

<b>Subfault: 13.12</b>		
<b>Description: Emergency</b>		
	Response: Encoder 1 – latest critical fault	
	Cause	Measure
	Encoder signaled emergency.	<ul style="list-style-type: none"> <li>– Check interference sources (e.g. from EMC).</li> <li>– Check startup parameters.</li> </ul> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>

<b>Subfault: 13.13</b>		
<b>Description: Error during initialization.</b>		
	Response: Encoder 1 – latest fault	
	Cause	Measure
	Communication error during initialization.	<ul style="list-style-type: none"> <li>– Check parameterization.</li> <li>– Check baud rate.</li> <li>– Ensure that the CANopen interface on the encoder (Node-ID) is correctly adjusted.</li> <li>– Check the wiring.</li> </ul> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>
<b>Subfault: 13.14</b>		
<b>Description: Communication:</b>		
	Response: Encoder 1 – latest fault	
	Cause	Measure
	Faulty communication with encoder.	<ul style="list-style-type: none"> <li>– Check voltage supply.</li> <li>– Check interference sources (e.g. from EMC).</li> <li>– Check the wiring.</li> </ul> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>
<b>Subfault: 13.15</b>		
<b>Description: System error</b>		
	Response: Encoder 1 – latest critical fault	
	Cause	Measure
	System error while evaluating encoder	<ul style="list-style-type: none"> <li>– Ensure that the multi-turn encoder is within the projected path range.</li> <li>– Check limits.</li> <li>– Check correct settings of encoder numerator/denominator factors.</li> <li>– Check interference sources (e.g. from EMC).</li> <li>– Check startup parameters.</li> <li>– Switch the device off and on again.</li> <li>– If the fault occurs repeatedly, contact SEW-EURODRIVE Service.</li> </ul> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>

<b>Subfault: 13.16</b>		
<b>Description: Permanent high level in data line – critical</b>		
	Response: Encoder 1 – latest critical fault	
	Cause	Measure
	Permanent high level of data signal	– Check the wiring. – Check the encoder.  Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.

<b>Subfault: 13.17</b>		
<b>Description: Permanent high level in data line</b>		
	Response: Encoder 1 – latest fault	
	Cause	Measure
	Permanent high level of data signal	– Check the wiring. – Check the encoder.  Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.

<b>Subfault: 13.18</b>		
<b>Description: Permanent low level in data line – critical</b>		
	Response: Encoder 1 – latest critical fault	
	Cause	Measure
	Permanent low level of data signal	– Check the wiring. – Check the encoder.  Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.

<b>Subfault: 13.19</b>		
<b>Description: Permanent low level in data line</b>		
	Response: Encoder 1 – latest fault	
	Cause	Measure
	Permanent low level of data signal	– Check the wiring. – Check the encoder.  Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.

25887130/EN – 11/2018

<b>Subfault: 13.20</b>		
<b>Description: SSI error bit – critical</b>		
	Response: Encoder 1 – latest critical fault	
	Cause	Measure
	Error bit set in SSI protocol.	<ul style="list-style-type: none"> <li>– Check startup parameters.</li> <li>– Check the settings at the SSI encoder (fault bit).</li> <li>– Check the wiring.</li> <li>– Check interference sources (light beam interrupted, reflector, data cables, etc.).</li> <li>– Replace encoder.</li> </ul> <p>Note: In the "emergency mode" manual mode, you can move the drive even with a fault in the external position encoder.</p>
<b>Subfault: 13.21</b>		
<b>Description: SSI error bit</b>		
	Response: Encoder 1 – latest fault	
	Cause	Measure
	Error bit set in SSI protocol.	<ul style="list-style-type: none"> <li>– Check startup parameters.</li> <li>– Check the settings at the SSI encoder (fault bit).</li> <li>– Check the wiring.</li> <li>– Check interference sources (light beam interrupted, reflector, data cables, etc.).</li> <li>– Replace encoder.</li> </ul> <p>Note: In the "emergency mode" manual mode, you can move the drive even with a fault in the external position encoder.</p>
<b>Subfault: 13.22</b>		
<b>Description: Internal fault – critical</b>		
	Response: Encoder 1 – latest critical fault	
	Cause	Measure
	Encoder signaled internal fault.	<ul style="list-style-type: none"> <li>– Check the wiring.</li> <li>– Check interference sources (light beam interrupted, reflector, data cables, etc.).</li> <li>– Replace encoder.</li> </ul> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>

**Subfault: 13.23**  
**Description: Internal fault**

Response: Encoder 1 – latest fault	
Cause	Measure
Encoder signaled internal fault.	<ul style="list-style-type: none"> <li>– Check the wiring.</li> <li>– Check interference sources (light beam interrupted, reflector, data cables, etc.).</li> <li>– Replace encoder.</li> </ul> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>

**Subfault: 13.24**  
**Description: Travel range exceeded**

Response: Encoder 1 – latest fault	
Cause	Measure
Current position mode (index 8381.10) does not allow for larger travel range.	<p>Check travel range.</p> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>

**Subfault: 13.25**  
**Description: Error during encoder startup.**

Response: Output stage inhibit	
Cause	Measure
Fatal error during encoder startup.	<p>Switch the device off and on again.</p> <p>Note: In "emergency mode" manual mode, you can move the drive using the motor encoder if the external position encoder is faulty.</p>

**Subfault: 13.26**  
**Description: Digital motor integration fault – critical**

Response: Encoder 1 – latest critical fault	
Cause	Measure
Encoder of "digital motor integration" signaled a component fault.	<ul style="list-style-type: none"> <li>– Check interference sources.</li> <li>– Replace encoder.</li> </ul>

**Subfault: 13.27**  
**Description: Digital motor integration fault**

Response: Encoder 1 – latest fault	
Cause	Measure
Encoder of "digital motor integration" signaled a component fault.	<ul style="list-style-type: none"> <li>– Check interference sources.</li> <li>– Replace encoder.</li> </ul>

25887130/EN – 11/2018

<b>Subfault: 13.28</b>		
<b>Description: Digital motor integration warning</b>		
	Response: Encoder – warning	
	Cause	Measure
	Encoder of "digital motor integration" signaled a warning.	– Check interference sources.

### 8.7.12 Fault 16 Startup

<b>Subfault: 16.1</b>		
<b>Description: Motor not started up yet</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Motor not yet started up completely.	Perform complete motor startup.

<b>Subfault: 16.2</b>		
<b>Description: Cannot calculate controller parameters.</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Dead time of encoder in use too long to calculate required filter coefficients.	Use an encoder with a shorter dead time, or contact SEW-EURODRIVE Service.

<b>Subfault: 16.3</b>		
<b>Description: Thermal motor model not possible</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Invalid parameters for thermal motor model or for drive enable although starting up thermal model not yet completed.	Check the parameters of the thermal motor model, and perform startup.

<b>Subfault: 16.5</b>		
<b>Description: Current limit smaller than magnetizing current of the motor.</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Current limit smaller than magnetizing current of the motor calculated by active control mode.	Increase current limit. Required magnetizing current: See diagnostics parameters of control mode.

<b>Subfault: 16.6</b>		
<b>Description: Control mode not possible</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Wrong control mode selected for motor.	Choose a control mode that matches the selected motor.



<b>Subfault: 16.7</b>		
<b>Description: PWM frequency not possible</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Specified PWM frequency not allowed for this power output stage.	Select different PWM frequency. Possible PWM frequencies; see device configuration data.
<b>Subfault: 16.8</b>		
<b>Description: Temperature sensor motor 1</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Faulty startup of temperature sensor of motor 1.	Perform startup again.
<b>Subfault: 16.9</b>		
<b>Description: Temperature sensor motor 2</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Faulty startup of temperature sensor of motor 2.	Perform startup again.
<b>Subfault: 16.10</b>		
<b>Description: Actual position source not assigned.</b>		
	Response: Application stop + output stage inhibit	
	Cause	Measure
	Active control mode requires encoder for position mode.	<ul style="list-style-type: none"> <li>– Assign actual position source in encoder assignment of the active drive train (Index 8565.3 or 8566.3).</li> <li>– If no encoder is installed, activate the FCBs only using "torque control" or "speed control" operating mode.</li> </ul>
<b>Subfault: 16.11</b>		
<b>Description: Motor data calculation error</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Motor startup not possible because of inconsistent motor data or wrong device configuration data.	Check the motor data for plausibility, or contact SEW-EURODRIVE Service.
<b>Subfault: 16.12</b>		
<b>Description: Motor data write sequence</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Subindex 1 not written to zero before writing electrical startup parameters (index 8357, 8360, 8394, 8420 or 8358, 8361, 8395, 8421).	Reset fault. Set parameters 8360/1 or 8361/1 to "0" before writing additional parameters.

25887130/EN – 11/2018

<b>Subfault: 16.20</b>		
<b>Description: Nominal rotational speed too high or nominal frequency too low.</b>		
Response: Output stage inhibit		
	Cause	Measure
	During startup using nameplate data: Nominal speed too high or nominal frequency too low. The resulting number of pole pairs is 0.	Enter plausible motor data (nominal rotational speed and nominal frequency).
<b>Subfault: 16.21</b>		
<b>Description: Nominal slip negative</b>		
Response: Output stage inhibit		
	Cause	Measure
	During startup using nameplate data, the calculated nominal slip is negative: Nominal frequency too low or nominal speed too high or number of pole pairs too high.	Enter plausible motor data (nominal frequency, nominal rotational speed, number of pole pairs).
<b>Subfault: 16.22</b>		
<b>Description: Specify the number of pole pairs.</b>		
Response: Output stage inhibit		
	Cause	Measure
	During startup using nameplate data: It is not possible to calculate the number of pole pairs accurately from nominal frequency and nominal speed.	Enter the number of pole pairs.
<b>Subfault: 16.23</b>		
<b>Description: Plausibility check failed.</b>		
Response: Output stage inhibit		
	Cause	Measure
	During startup using nameplate data: the estimated nominal power does not match the entered nominal power.	Check entered nameplate data for plausibility.
<b>Subfault: 16.24</b>		
<b>Description: Speed controller sampling cycle not possible with current PWM frequency or current control mode.</b>		
Response: Application stop + output stage inhibit		
	Cause	Measure
	At PWM frequency "2.5 kHz", only the speed controller sampling cycle of 2 ms is permitted. For the ELSM® control mode, the only permitted speed controller sampling cycles are 1 ms and 2 ms.	Increase PWM frequency or increase sampling cycle of speed controller to 2 ms. Set the sampling cycle to 1 ms or 2 ms for ELSM® control mode.

**Subfault: 16.25**  
**Description: User-defined current limit too low for standstill current.**

Response: Output stage inhibit		
	Cause	Measure
	User-defined current limit value too small for minimum standstill current.	Increase the user-defined current limit, or disable the standstill current function.

**Subfault: 16.26**  
**Description: Nominal values incomplete or implausible**

Response: Output stage inhibit		
	Cause	Measure
	During startup using nameplate data: Nominal voltage, nominal current, nominal speed or nominal torque are not entered or not plausible.	Enter or check nominal voltage, nominal current, nominal rotational speed, and nominal torque.

**Subfault: 16.27**  
**Description: Maximum current or maximum torque not plausible.**

Response: Output stage inhibit		
	Cause	Measure
	During startup using nameplate data: Maximum current or maximum torque not entered, or maximum current and maximum torque not plausible.	Check the maximum current and maximum torque.

**Subfault: 16.30**  
**Description: Faulty EtherCAT® EEPROM configuration status.**

Response: Warning		
	Cause	Measure
	Faulty EtherCAT®/SBusPLUS EEPROM configuration status. EEPROM not loaded, binary file not loaded.	Contact SEW-EURODRIVE Service.
	Faulty EEPROM loading procedure.	Contact SEW-EURODRIVE Service.
	Faulty EEPROM checksum.	Contact SEW-EURODRIVE Service.

**Subfault: 16.40**  
**Description: Data of selected motor not valid**

Response: Output stage inhibit		
	Cause	Measure
	Startup data set on replaceable memory module not valid for this motor.	Replace the memory module.

25887130/EN – 11/2018

<b>Subfault: 16.41</b>		
<b>Description: Data of selected motor do not exist</b>		
	Response: Output stage inhibit	
	Cause	Measure
	No startup data set found on the replaceable memory module for the selected motor.	Check the selection and, if necessary, start up another motor or replace the memory module.

### 8.7.13 Fault 17 Internal processor fault

<b>Subfault: 17.7</b>		
<b>Description: Exception error</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Exception trap in CPU.	Contact SEW-EURODRIVE Service.

### 8.7.14 Fault 18 Software error

<b>Subfault: 18.1</b>		
<b>Description: Motor management</b>		
	Response: Output stage inhibit	
	System state: Fault acknowledgement with CPU reset	
	Cause	Measure
	Error detected at motor management interface.	<ul style="list-style-type: none"> <li>– Switch the device off and on again.</li> <li>– Contact the SEW-EURODRIVE Service if the fault persists.</li> </ul>

<b>Subfault: 18.3</b>		
<b>Description: Task system warning</b>		
	Response: Warning	
	Cause	Measure
	A fault was detected during the processing of the internal task system. This can for example be a timeout for cyclic tasks.	<ul style="list-style-type: none"> <li>– Acknowledge the warning.</li> <li>– Contact SEW-EURODRIVE Service if the warning occurs regularly.</li> </ul>

<b>Subfault: 18.4</b>		
<b>Description: Task system</b>		
	Response: Output stage inhibit	
	System state: Fault acknowledgement with CPU reset	
	Cause	Measure
	A fault was detected during the processing of the internal task system. This can for example be a timeout for cyclic tasks.	<ul style="list-style-type: none"> <li>– Switch the device off and on again.</li> <li>– Contact the SEW-EURODRIVE Service if the fault persists.</li> </ul>

<b>Subfault: 18.7</b>		
<b>Description: Fatal error</b>		
	Response: Output stage inhibit System state: Fault acknowledgement with CPU reset	
	Cause	Measure
	Fatal software error.	<ul style="list-style-type: none"> <li>– Switch the device off and on again.</li> <li>– If the fault occurs repeatedly, replace the device and send it together with the fault number to SEW-EURODRIVE. For further support, contact SEW-EURODRIVE Service.</li> </ul>
<b>Subfault: 18.8</b>		
<b>Description: Invalid fault code</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Invalid fault code requested.	<ul style="list-style-type: none"> <li>– Switch the device off and on again.</li> <li>– Contact the SEW-EURODRIVE Service if the fault persists.</li> </ul>
<b>Subfault: 18.9</b>		
<b>Description: Internal software error</b>		
	Response: Output stage inhibit System state: Fault acknowledgement with CPU reset	
	Cause	Measure
	The software signals an unexpected event.	<ul style="list-style-type: none"> <li>– Switch the device off and on again.</li> <li>– If the fault occurs repeatedly, replace the device and send it together with the fault number to SEW-EURODRIVE. For further support, contact SEW-EURODRIVE Service.</li> </ul>
<b>Subfault: 18.10</b>		
<b>Description: Watchdog</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Software no longer operates within intended cycle time.	<ul style="list-style-type: none"> <li>– Switch the device off and on again.</li> <li>– Contact the SEW-EURODRIVE Service if the fault persists.</li> </ul>

<b>Subfault: 18.12</b>		
<b>Description: Configuration data</b>		
Response: Output stage inhibit System state: Fault acknowledgement with CPU reset		
Cause		Measure
Configuration data not plausible or cannot be interpreted by active firmware version.		Perform a firmware update or load valid configuration data.

<b>Subfault: 18.13</b>		
<b>Description: Calibration data</b>		
Response: Output stage inhibit System state: Fault acknowledgement with CPU reset		
Cause		Measure
Calibration data not plausible.		Load valid calibration data.

#### 8.7.15 Fault 19 Process data

<b>Subfault: 19.1</b>		
<b>Description: Torque setpoint violation</b>		
Response: Application stop + output stage inhibit		
Cause		Measure
Implausible values specified as torque setpoints.		Adjust torque setpoints.

<b>Subfault: 19.2</b>		
<b>Description: Position setpoint violation</b>		
Response: Application stop + output stage inhibit		
Cause		Measure
Position setpoint outside software limit switches.		Check the position setpoint.
Position setpoint outside modulo range.		Check the position setpoint.
Position in user unit generates number overflow in system unit.		Check position in user unit.

<b>Subfault: 19.3</b>		
<b>Description: Speed setpoint violation</b>		
Response: Application stop + output stage inhibit		
Cause		Measure
Specified rotational speed setpoints not plausible.		Adjust rotational speed setpoints.

<b>Subfault: 19.4</b>		
<b>Description: Acceleration setpoint violation</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	The specified acceleration setpoints are not plausible. Only a value range of $\geq 0$ is permitted.	Adjust acceleration setpoints.

<b>Subfault: 19.5</b>		
<b>Description: Drive function does not exist</b>		
	Response: Application stop + output stage inhibit	
	Cause	Measure
	Non-existing drive function (FCB) selected via process data.	Specify an existing FCB number for FCB activation via process data.

<b>Subfault: 19.6</b>		
<b>Description: Mass moment of inertia setpoint violation</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Implausible values specified as mass moment of inertia setpoints. Only a value range of $\geq 0$ is permitted.	Adjust the setpoints for the mass moment of inertia.

<b>Subfault: 19.7</b>		
<b>Description: Referencing missing</b>		
	Response: Application stop + output stage inhibit	
	Cause	Measure
	Activated function only permitted with referenced encoder.	Reference the encoder first, then activate the function.

<b>Subfault: 19.8</b>		
<b>Description: Drive train changeover not allowed</b>		
	Response: Application stop + output stage inhibit	
	Cause	Measure
	Drive train changeover requested while output stage is enabled.	Inhibit the output stage before changing to another drive train.

<b>Subfault: 19.9</b>		
<b>Description: Jerk setpoint violation</b>		
	Response: Application stop + output stage inhibit	
	Cause	Measure
	Jerk values not plausible.	Adjust jerk setpoints.

25887130/EN – 11/2018

## 8.7.16 Fault 20 Device monitoring

<b>Subfault: 20.1</b>		
<b>Description: Supply voltage fault</b>		
Response: Output stage inhibit System state: Fault acknowledgement with CPU reset		
Cause		Measure
Internal electronics supply voltage or externally connected DC 24 V standby supply voltage outside permitted voltage range.		Check the voltage level of the external DC 24 V standby supply voltage and check for correct port. If required, correct.  – Acknowledge the fault.  – If fault occurs repeatedly, replace device. For further support, contact SEW-EURODRIVE Service.
<b>Subfault: 20.2</b>		
<b>Description: Supply voltage overload</b>		
Response: Output stage inhibit		
Cause		Measure
For MOVIDRIVE® system, the current load of the current paths of the DC 24 V standby supply voltage inside the device is too high. The device signal output of the device was de-energized because of the fault message.		Identify consumers which are overloading the internal supply voltage:  1. Remove all external consumers: – At the digital outputs of the basic device. - at options that may be present. - at all encoder connections. - at other consumers at the DC 24 V output voltage terminals.  2. Acknowledge the fault.  3. Reconnect the consumers with the device, one after the other, until the fault message appears once again.  4. To eliminate the fault, connect a consumer with a lower current consumption or eliminate the short circuit.
<b>Subfault: 20.7</b>		
<b>Description: Internal hardware fault</b>		
Response: Output stage inhibit		
Cause		Measure
Error in device hardware.		– Acknowledge the fault.  – If fault occurs repeatedly, replace device. For further support, contact SEW-EURODRIVE Service.



<b>Subfault: 20.8</b>		
<b>Description: Fan warning</b>		
	Response: Warning with self reset	
	Cause	Measure
	Fan function impaired.	Check fan for proper functioning.
<b>Subfault: 20.9</b>		
<b>Description: Fan fault</b>		
	Response: Application stop + output stage inhibit	
	Cause	Measure
	Fan defective.	Contact SEW-EURODRIVE Service.
<b>Subfault: 20.10</b>		
<b>Description: Fan supply voltage fault</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Supply voltage of fan missing	Check the connection or establish a connection.
<b>Subfault: 20.11</b>		
<b>Description: STO – switching delay</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Switching delay between STO signals F-STO_P1 and F-STO_P2	<ul style="list-style-type: none"> <li>– Check STO wiring.</li> <li>– Check the STO wiring before acknowledging the fault, make sure that both STO signals are switched to low level.</li> </ul>

### 8.7.17 Fault 21 Digital motor integration 1

<b>Subfault: 21.1</b>		
<b>Description: Communication error</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Communication error detected on the interface of "digital motor integration".	Check the cabling.
<b>Subfault: 21.2</b>		
<b>Description: Slave required</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Device started up with a drive with "digital motor integration" but no drive with "digital motor integration" is connected.	Connect a drive with "digital motor integration" matching startup, or perform a new startup.

25887130/EN – 11/2018

<b>Subfault: 21.3</b>		
<b>Description: Incompatible drive motor</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Connected drive not compatible with started up drive.	Connect a drive that matches startup, or perform a new startup.

<b>Subfault: 21.4</b>		
<b>Description: Invalid label</b>		
	Response: Output stage inhibit	
	Cause	Measure
	The connected drive contains invalid data.	Replace the drive.

<b>Subfault: 21.5</b>		
<b>Description: Incompatible slave</b>		
	Response: Output stage inhibit	
	Cause	Measure
	The connected slave of "digital motor integration" cannot be used with this inverter firmware.	Update the inverter or the slave.

<b>Subfault: 21.6</b>		
<b>Description: Overload/short circuit on the interface</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Short circuit in the cabling of components of "digital motor integration".	Check the cabling of the component of "digital motor integration".
	Voltage too low of "digital motor integration" component.	Check the voltage supply of the component.

#### 8.7.18 Fault 22 Digital motor integration 2

<b>Subfault: 22.1</b>		
<b>Description: Communication error</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Communication error detected on the interface of "digital motor integration".	Check the cabling.

8.7.19 Fault 23 Power section

<b>Subfault: 23.1</b>		
<b>Description: Warning</b>		
	Response: Warning with self reset	
	Cause	Measure
	Power section fault with fault response of the type "warning".	See also "power section subcomponent" fault status.

<b>Subfault: 23.2</b>		
<b>Description: Fault</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Power section fault with fault response of the type "standard".	See also "power section subcomponent" fault status.

<b>Subfault: 23.3</b>		
<b>Description: Critical fault</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Power section fault with fault response of the type "critical fault".	See also "power section subcomponent" fault status.

<b>Subfault: 23.4</b>		
<b>Description: Hardware fault</b>		
	Response: Output stage inhibit	
	Cause	Measure
	A fault occurred in a hardware component of the power section, e.g.: Overcurrent hardware comparator.	<ul style="list-style-type: none"> <li>– Check current supply.</li> <li>– Increase ramp time.</li> <li>– Check for correct motor size (the motor current is too high).</li> <li>– Contact SEW-EURODRIVE Service.</li> </ul>
	Switched-mode power supply fault, hardware fault.	<ul style="list-style-type: none"> <li>– Check current supply.</li> <li>– Check the DC 24 V supply voltage.</li> </ul>
	Fault at the gate driver of an IGBT.	Defect in the power output stage. Contact SEW-EURODRIVE Service.
	Invalid process data configuration. Status of control section and power section are not compatible.	Contact SEW-EURODRIVE Service.

<b>Subfault: 23.5</b>		
<b>Description: Invalid process data configuration</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Invalid process data configuration.	Contact SEW-EURODRIVE Service.

25887130/EN – 11/2018

<b>Subfault: 23.6</b>		
<b>Description: Process data timeout</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Power section communication interface detected process data timeout.	If the fault occurs repeatedly, contact SEW-EURODRIVE Service.

<b>Subfault: 23.7</b>		
<b>Description: Parameter communication timeout</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Power section communication interface detected timeout in parameter communication.	If the fault occurs repeatedly, contact SEW-EURODRIVE Service.

<b>Subfault: 23.8</b>		
<b>Description: Parameter communication error</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Power section communication interface detected error in parameter communication.	If the fault occurs repeatedly, contact SEW-EURODRIVE Service.

#### 8.7.20 Fault 25 Parameter memory monitoring

<b>Subfault: 25.2</b>		
<b>Description: NV memory — runtime error</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Runtime error of non-volatile memory system.	– Reset the device. If this occurs repeatedly, replace device. Contact SEW-EURODRIVE Service.

<b>Subfault: 25.6</b>		
<b>Description: NV memory – incompatible data</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Incompatible data detected while reading non-volatile memory.	The data on the (mobile) non-volatile memory might have been formatted for another unit. You can rectify the fault by reformatting the data (basic initialization).

**Subfault: 25.7**  
**Description: NV memory initialization – error**

Response: Emergency stop + output stage inhibit	
Cause	Measure
Error initializing non-volatile memory system.	– Reset the device. If this occurs repeatedly, replace device. Contact SEW-EURODRIVE Service.

**Subfault: 25.10**  
**Description: Power section configuration data – version conflict**

Response: Emergency stop + output stage inhibit	
Cause	Measure
Wrong version of configuration data of power section.	Contact SEW-EURODRIVE Service.

**Subfault: 25.12**  
**Description: Power section configuration data – CRC error**

Response: Emergency stop + output stage inhibit	
Cause	Measure
Faulty configuration data of power section.	Contact SEW-EURODRIVE Service.

**Subfault: 25.13**  
**Description: Control electronics configuration data – CRC error**

Response: Emergency stop + output stage inhibit	
Cause	Measure
Faulty configuration data of control electronics.	Contact SEW-EURODRIVE Service.

**Subfault: 25.14**  
**Description: Calibration data of power section – version conflict**

Response: Emergency stop + output stage inhibit	
Cause	Measure
Wrong version of calibration data of power section.	Contact SEW-EURODRIVE Service.

**Subfault: 25.15**  
**Description: Calibration data of control electronics – version conflict**

Response: Emergency stop + output stage inhibit	
Cause	Measure
Wrong version of calibration data of control electronics.	Contact SEW-EURODRIVE Service.

25887130/EN – 11/2018

<b>Subfault: 25.16</b>		
<b>Description: Power section calibration data – CRC error</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Faulty calibration data of power section.	Contact SEW-EURODRIVE Service.
<b>Subfault: 25.17</b>		
<b>Description: Calibration data of control electronics – CRC error</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Faulty calibration data of control electronics.	Contact SEW-EURODRIVE Service.
<b>Subfault: 25.18</b>		
<b>Description: QA data power section – CRC error</b>		
	Response: Warning	
	Cause	Measure
	Faulty quality assurance data of power section	Contact SEW-EURODRIVE Service.
<b>Subfault: 25.19</b>		
<b>Description: QA data control electronics – CRC error</b>		
	Response: Warning	
	Cause	Measure
	Faulty quality assurance data of control electronics.	Contact SEW-EURODRIVE Service.
<b>Subfault: 25.20</b>		
<b>Description: Initialization error – basic unit memory</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Initialization error of the basic unit memory.	Contact SEW-EURODRIVE Service.
<b>Subfault: 25.21</b>		
<b>Description: Runtime error – basic unit memory</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Runtime error in memory of basic unit.	Contact SEW-EURODRIVE Service.

**Subfault: 25.30**  
**Description: Initialization error – replaceable memory module**

Response: Output stage inhibit	
Cause	Measure
The formatting of the replaceable memory module does not match.	Restore delivery state? NOTICE: All the data on the replaceable memory module will be reset to the default.
Initialization error of replaceable memory module after delivery state.	Contact SEW-EURODRIVE Service.

**Subfault: 25.31**  
**Description: Runtime error – replaceable memory module**

Response: Output stage inhibit	
Cause	Measure
Runtime error of replaceable memory module.	Contact SEW-EURODRIVE Service.

**Subfault: 25.32**  
**Description: Replaceable memory module not compatible**

Response: Output stage inhibit System state: Fault acknowledgement with CPU reset	
Cause	Measure
The inserted replaceable memory module cannot be used.	Replace the memory module.

**Subfault: 25.50**  
**Description: Runtime error – replaceable safety memory module**

Response: Output stage inhibit System state: Fault acknowledgement with CPU reset	
Cause	Measure
Runtime error of the replaceable safety memory module.	Contact SEW-EURODRIVE Service.

**Subfault: 25.51**  
**Description: Initialization error – replaceable safety memory module**

Response: Warning	
Cause	Measure
Initialization error of the replaceable safety memory module.	Contact SEW-EURODRIVE Service.

**Subfault: 25.61**  
**Description: Error – restore point**

Response: Emergency stop + output stage inhibit	
Cause	Measure
Failed to create restore point.	Delete restore point.

25887130/EN – 11/2018

<b>Subfault: 25.70</b>		
<b>Description: NV memory – incompatible option card configuration</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Incompatible option card configuration detected. The current configuration of the option card does not match the state of the stored startup. An option card that was installed during startup has been removed, for example.	– Restore initial option setup. – Acknowledge changed configuration in MOVI-SUITE®: Diagnostics/Status/Fault status/Reset = "With parameter acceptance". Reset the device to delivery state in MOVI-SUITE®: Setup/reset device parameters/delivery state = "Yes".

<b>Subfault: 25.81</b>		
<b>Description: Runtime error – digital motor integration label</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Runtime error in the label of digital motor integration.	Contact SEW-EURODRIVE Service.

### 8.7.21 Fault 26 External fault

<b>Subfault: 26.1</b>		
<b>Description: Terminal</b>		
	Response: External fault	
	Cause	Measure
	Fault message of external fault source.	Programmable via 8622.5 (Default: Application stop (+ES)).

<b>Subfault: 26.2</b>		
<b>Description: Emergency shutdown</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Another module bus station requested external emergency shutdown.	Check other module bus stations for faults.

<b>Subfault: 26.3</b>		
<b>Description: Power section emergency shutdown</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Power section requested external emergency shutdown because it detected critical fault.	Contact SEW-EURODRIVE Service.



<b>Subfault: 26.4</b>		
<b>Description: External braking resistor fault</b>		
	Response: Response to external braking resistor fault	
	Cause	Measure
	External braking resistor's temperature switch connected to terminal tripped	<ul style="list-style-type: none"> <li>– Check the resistor mounting position.</li> <li>– Clean the resistor.</li> <li>– Check the project planning of the resistor.</li> <li>– Install a larger resistor.</li> <li>– Check the trip switch settings.</li> <li>– Optimize travel cycle so that less regenerative operation energy arises.</li> </ul>

### 8.7.22 Fault 28 FCB drive functions

<b>Subfault: 28.1</b>		
<b>Description: FCB 11/12 – Timeout while searching zero pulse</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Failed to find zero pulse of encoder's C track within specified search time during reference travel.	Check the encoder wiring.

<b>Subfault: 28.2</b>		
<b>Description: FCB 11/12 – Hardware limit switch before reference cam</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	The hardware limit switch was reached during reference travel. The reference cam was not detected.	Make sure that the reference cam is not installed behind the hardware limit switch.

<b>Subfault: 28.3</b>		
<b>Description: FCB 11/12 – Hardware limit switch and reference cam not flush</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Hardware limit switch and reference cam not mounted properly.	Make sure that reference cam and hardware limit switch are installed so they overlap.

<b>Subfault: 28.4</b>		
<b>Description: FCB 11/12 – Reference offset error</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Error determining reference offset.	<p>– Make sure that the reference offset is not set to a larger value than the "Modulo maximum" limit value.</p> <p>When using a single-turn absolute encoder, make sure that the reference offset is not set to a larger value than one encoder revolution.</p>
<b>Subfault: 28.5</b>		
<b>Description: FCB 11/12 – Referencing not possible</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	In the active drive train, the "Actual position source" parameter is set to "No encoder".	Assign "Actual position source", or do not perform referencing.
<b>Subfault: 28.6</b>		
<b>Description: FCB 11/12 – Limit switch/reference cam not flush/overlapping with fixed stop</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Hardware limit switch or reference cam that has not been selected was hit during reference travel to fixed stop.	Check whether the parameters set for reference travel are correct.
	During reference travel to fixed stop with selected hardware limit switch or reference cam, the fixed stop has been reached without hitting the hardware limit switch or reference cam.	Check whether the parameters set for reference travel are correct.
<b>Subfault: 28.7</b>		
<b>Description: FCB 21 – Test torque greater than maximum torque at motor shaft</b>		
	Response: Output stage inhibit	
	Cause	Measure
	The required test torque for the brake test is higher than the maximum torque. It cannot be generated by the motor/inverter combination.	Reduce the test torque.
<b>Subfault: 28.8</b>		
<b>Description: FCB 21 – Test torque not reached</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Test torque required for brake test exceeds valid limit values	<p>– Reduce the test torque.</p> <p>– Check limit values.</p>

<b>Subfault: 28.9</b>		
<b>Description: FCB 18 – Rotor position identification not possible</b>		
Response: Output stage inhibit		
Cause		Measure
Rotor position identification started with incremental encoder but aborted prematurely		<ul style="list-style-type: none"> <li>– Restart the rotor position identification.</li> <li>– Check whether the encoder is connected correctly.</li> <li>– Check whether encoder is defective.</li> </ul>
Result of rotor position identification cannot be stored in encoder		Select "inverter" as storage location.
Combination of "Automatic" mode and "Encoder" storage location not permitted		Set the operating mode to "Manual" or the storage location to "Inverter".

<b>Subfault: 28.10</b>		
<b>Description: FCB 25 – Unbalanced motor phases</b>		
Response: Output stage inhibit		
Cause		Measure
Significantly different values determined in the three phases while measuring stator resistances		<ul style="list-style-type: none"> <li>– Check whether the motor is connected correctly.</li> <li>– Check all contact points on the motor and inverter.</li> <li>– Check the motor and motor cable for damage.</li> </ul>

<b>Subfault: 28.11</b>		
<b>Description: FCB 25 – At least one phase with high resistance</b>		
Response: Output stage inhibit		
Cause		Measure
At least one motor phase could not be measured during motor parameter measurement		<ul style="list-style-type: none"> <li>– Check whether the motor is connected correctly.</li> <li>– Check all contact points on the motor and inverter.</li> <li>– Check the motor and motor cable for damage.</li> </ul>

<b>Subfault: 28.12</b>		
<b>Description: FCB 25 – Timeout during stator resistance measurement</b>		
Response: Output stage inhibit		
Cause		Measure
Motor parameter measurement activated while motor is turning		<ul style="list-style-type: none"> <li>– Stop motor.</li> <li>– Start motor parameter measurement when the motor is at standstill.</li> </ul>

25887130/EN – 11/2018

<b>Subfault: 28.13</b>		
<b>Description: FCB 25 – Characteristic curve identification not possible</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Motor parameter measurement does not allow for unique identification of the characteristic curve.	Contact SEW-EURODRIVE Service.
<b>Subfault: 28.14</b>		
<b>Description: Modulo min. and max. swapped</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	In active data set, value for "Modulo minimum" is greater than value for "Modulo maximum", see Monitoring functions\Limit values 1 or Monitoring functions\Limit values 2.	Swap the values for modulo minimum and modulo maximum.
<b>Subfault: 28.15</b>		
<b>Description: FCB 25 – Timeout</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Measuring rotor resistance, LSigma, or stator inductance not completed.	Contact SEW-EURODRIVE Service.
<b>Subfault: 28.16</b>		
<b>Description: FCB 04 – Local mode stopped by STO</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Drive stopped by activating STO in local mode.	Acknowledge the fault. Doing so prevents restart after revoking STO.

### 8.7.23 Fault 29 HW limit switch

<b>Subfault: 29.1</b>		
<b>Description: Positive limit switch hit</b>		
	Response: HW limit switch – current drive train	
	Cause	Measure
	Positive hardware limit switch hit.	<ul style="list-style-type: none"> <li>– Check hardware limit switch wiring.</li> <li>– Check target position.</li> <li>– Move clear of hardware limit switch with negative speed.</li> </ul>

<b>Subfault: 29.2</b>		
<b>Description: Negative limit switch hit</b>		
	Response: HW limit switch – current drive train	
	Cause	Measure
	Negative hardware limit switch hit.	<ul style="list-style-type: none"> <li>– Check hardware limit switch wiring.</li> <li>– Check target position.</li> <li>– Move clear of hardware limit switch with positive speed.</li> </ul>

<b>Subfault: 29.3</b>		
<b>Description: Limit switch missing</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Both hardware limit switches (positive and negative) were hit at the same time.	<ul style="list-style-type: none"> <li>– Check hardware limit switch wiring.</li> <li>– Check the parameter setting of digital inputs.</li> <li>– Check the parameter setting of PO data.</li> </ul>

<b>Subfault: 29.4</b>		
<b>Description: Limit switches swapped</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Positive hardware limit switch hit at negative speed, or negative hardware limit switch hit at positive speed.	Check whether hardware limit switch connections are swapped.

**8.7.24 Fault 30 software limit switch**

<b>Subfault: 30.1</b>		
<b>Description: Positive limit switch hit</b>		
	Response: SW limit switches – current drive train	
	Cause	Measure
	Positive software limit switch hit.	<ul style="list-style-type: none"> <li>– Check software limit switch position.</li> <li>– Check target position.</li> <li>– Move clear of software limit switch with negative speed.</li> </ul>

<b>Subfault: 30.2</b>		
<b>Description: Negative limit switch hit</b>		
	Response: SW limit switches – current drive train	
	Cause	Measure
	Negative software limit switch hit.	<ul style="list-style-type: none"> <li>– Check software limit switch position.</li> <li>– Check target position.</li> <li>– Move clear of software limit switch with positive speed.</li> </ul>

<b>Subfault: 30.3</b>		
<b>Description: Limit switches swapped</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Position value of negative software limit switch greater than position value of positive software limit switch.	Check software limit switch positions.

### 8.7.25 Fault 31 Thermal motor protection

<b>Subfault: 31.1</b>		
<b>Description: Temperature sensor wire break – motor 1</b>		
	Response: Application stop + output stage inhibit	
	Cause	Measure
	Connection to temperature sensor of motor 1 interrupted.	Check the temperature sensor wiring.

<b>Subfault: 31.2</b>		
<b>Description: Temperature sensor short circuit – motor 1</b>		
	Response: Application stop + output stage inhibit	
	Cause	Measure
	Short circuit in connection to temperature sensor of motor 1.	Check the temperature sensor wiring.

<b>Subfault: 31.3</b>		
<b>Description: Temperature sensor overtemperature – motor 1</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Temperature sensor of motor 1 signals overtemperature.	<ul style="list-style-type: none"> <li>– Allow motor to cool down.</li> <li>– Check for motor overload.</li> <li>- Check whether the correct temperature sensor KY (KTY) has been parameterized instead of PK (PT1000).</li> </ul>

**Subfault: 31.4**  
**Description: Temperature model overtemperature – motor 1**

Response: Output stage inhibit	
Cause	Measure
Temperature model of motor 1 signals overtemperature.	<ul style="list-style-type: none"> <li>– Allow motor to cool down.</li> <li>– Check for motor overload.</li> <li>– Check whether the correct temperature sensor KY (KTY) has been parameterized instead of PK (PT1000).</li> </ul>

**Subfault: 31.5**  
**Description: Temperature sensor prewarning – motor 1**

Response: Thermal motor protection 1 – prewarning threshold	
Cause	Measure
Temperature signaled by temperature sensor of motor 1 exceeds prewarning threshold.	Check for motor overload.

**Subfault: 31.6**  
**Description: Temperature model prewarning – motor 1**

Response: Thermal motor protection 1 – prewarning threshold	
Cause	Measure
Temperature signaled by temperature sensor of motor 1 exceeds prewarning threshold.	Check for motor overload.

**Subfault: 31.7**  
**Description: UL temperature monitoring**

Response: Output stage inhibit	
Cause	Measure
Temperature model of active motor signals overtemperature.	Check for motor overload.

**Subfault: 31.9**  
**Description: Temperature too low – temperature sensor – motor 1**

Response: Warning with self reset	
Cause	Measure
Temperature signaled by temperature sensor of motor 1 below -50 C.	<ul style="list-style-type: none"> <li>– Check if a KTY temperature sensor is installed in the motor but the parameterization has been carried out for a PT1000 temperature sensor.</li> <li>– Heat the motor.</li> </ul>

25887130/EN – 11/2018

<b>Subfault: 31.11</b>		
<b>Description: Temperature sensor wire break – motor 2</b>		
	Response: Application stop + output stage inhibit	
	Cause	Measure
	Connection to temperature sensor of motor 2 interrupted.	Check the temperature sensor wiring.
<b>Subfault: 31.12</b>		
<b>Description: Temperature sensor short circuit – motor 2</b>		
	Response: Application stop + output stage inhibit	
	Cause	Measure
	Short circuit in connection to temperature sensor of motor 2.	Check the temperature sensor wiring.
<b>Subfault: 31.13</b>		
<b>Description: Temperature sensor overtemperature – motor 2</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Temperature sensor of motor 2 signals overtemperature.	<ul style="list-style-type: none"> <li>– Allow motor to cool down.</li> <li>– Check for motor overload.</li> <li>- Check whether the correct temperature sensor KY (KTY) has been parameterized instead of PK (PT1000).</li> </ul>
<b>Subfault: 31.14</b>		
<b>Description: Temperature model overtemperature – motor 2</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Temperature model of motor 2 signals overtemperature.	<ul style="list-style-type: none"> <li>– Allow motor to cool down.</li> <li>– Check for motor overload.</li> <li>– Check whether the correct temperature sensor KY (KTY) has been parameterized instead of PK (PT1000).</li> </ul>
<b>Subfault: 31.15</b>		
<b>Description: Temperature sensor prewarning – motor 2</b>		
	Response: No response	
	Cause	Measure
	Temperature signaled by temperature sensor of motor 2 exceeds prewarning threshold.	Check for motor overload.



<b>Subfault: 31.16</b>		
<b>Description: Temperature model prewarning – motor 2</b>		
Response: No response		
	Cause	Measure
	Temperature signaled by temperature sensor of motor 2 exceeds prewarning threshold.	Check for motor overload.

<b>Subfault: 31.19</b>		
<b>Description: Temperature too low – temperature sensor – motor 2</b>		
Response: Warning with self reset		
	Cause	Measure
	Temperature signaled by temperature sensor of motor 2 below -50 C.	<ul style="list-style-type: none"> <li>– Check if a KTY temperature sensor is installed in the motor but the parameterization has been carried out for a PT1000 temperature sensor.</li> <li>– Heat the motor.</li> </ul>

**8.7.26 Fault 32 Communication**

<b>Subfault: 32.2</b>		
<b>Description: EtherCAT®/SBusPLUS process data timeout</b>		
Response: Fieldbus – timeout response		
	Cause	Measure
	Process data timeout during EtherCAT®/SBusPLUS communication.	<ul style="list-style-type: none"> <li>– Check the wiring of the system bus and module bus.</li> <li>– Check that the EtherCAT®/SBusPLUS configuration is correctly set in the MOVI-C® CONTROLLER.</li> <li>– Check EtherCAT®/SBusPLUS timeout configuration in the device.</li> </ul>

<b>Subfault: 32.3</b>		
<b>Description: Faulty synchronization signal</b>		
Response: External synchronization		
	Cause	Measure
	Faulty synchronization signal period.	Check for correct setting of the EtherCAT®/SBusPLUS configuration in the MOVI-C® CONTROLLER.

<b>Subfault: 32.4</b>		
<b>Description: No synchronization signal</b>		
Response: External synchronization		
	Cause	Measure
	No synchronization signal present.	Check for correct setting of the EtherCAT®/SBusPLUS configuration in the MOVI-C® CONTROLLER.

25887130/EN – 11/2018

<b>Subfault: 32.5</b>		
<b>Description: Synchronization timeout</b>		
	Response: External synchronization	
	Cause	Measure
	Timeout while synchronizing to synchronization signal.	Check for correct setting of the EtherCAT®/SBus-PLUS configuration in the MOVI-C® CONTROLLER.
<b>Subfault: 32.6</b>		
<b>Description: Copy parameter set</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Error while downloading parameter set to device.	<ul style="list-style-type: none"> <li>– Check the wiring of the system bus and module bus.</li> <li>– Restart download.</li> </ul>
<b>Subfault: 32.7</b>		
<b>Description: Application heartbeat timeout</b>		
	Response: Application heartbeat – timeout response	
	Cause	Measure
	Communication interrupted between IEC program in MOVI-C® CONTROLLER and device.	<ul style="list-style-type: none"> <li>– Check status of the IEC program.</li> <li>– Restart IEC program.</li> </ul>
<b>Subfault: 32.8</b>		
<b>Description: User-timeout timeout</b>		
	Response: User timeout timeout response	
	Cause	Measure
	The timeout time of the user timeout function has elapsed.	Write the parameter for triggering the user timeout function cyclically before the timeout time elapses.
<b>Subfault: 32.11</b>		
<b>Description: Local mode timeout</b>		
	Response: Local mode – timeout response	
	Cause	Measure
	Communication connection to device interrupted in local mode.	– Increase the timeout setting in local mode.
	New Scope project created.	<ul style="list-style-type: none"> <li>– Reset fault.</li> <li>– Restart local operation.</li> </ul>
	Scope measurement loaded from device.	<ul style="list-style-type: none"> <li>– Reset fault.</li> <li>– Restart local operation.</li> </ul>

<b>Subfault: 32.12</b>		
<b>Description: Manual mode timeout</b>		
	Response: Manual mode – timeout response	
	Cause	Measure
	Communication connection to device interrupted in manual mode.	– Check whether too many programs are open on the operator PC. – Increase the timeout time in manual mode.
	New Scope project created.	– Reset fault. – Restart manual operation.
	Scope measurement loaded from device.	– Reset fault. – Restart manual operation.

**8.7.27 Fault 33 System initialization**

<b>Subfault: 33.1</b>		
<b>Description: Motor current measurement</b>		
	Response: Output stage inhibit	
	System state: Fault acknowledgement with CPU reset	
	Cause	Measure
	Motor current measurement detected a fault.	Contact SEW-EURODRIVE Service.

<b>Subfault: 33.2</b>		
<b>Description: Firmware CRC check</b>		
	Response: Output stage inhibit	
	System state: Fault acknowledgement with CPU reset	
	Cause	Measure
	Error checking firmware.	Contact SEW-EURODRIVE Service.

<b>Subfault: 33.6</b>		
<b>Description: FPGA configuration</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Error checking FPGA configuration.	Contact SEW-EURODRIVE Service.

<b>Subfault: 33.7</b>		
<b>Description: Function block compatibility error.</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Error checking compatibility of function block.	Contact SEW-EURODRIVE Service.

25887130/EN – 11/2018

<b>Subfault: 33.8</b>		
<b>Description: SW function block configuration</b>		
Response: Output stage inhibit		
System state: Fault acknowledgement with CPU reset		
	Cause	Measure
	Error detected while checking configuration of software function block.	Contact SEW-EURODRIVE Service.
<b>Subfault: 33.9</b>		
<b>Description: Hardware compatibility fault power section</b>		
Response: Output stage inhibit		
System state: Fault acknowledgement with CPU reset		
	Cause	Measure
	Firmware does not match hardware of power section.	Contact SEW-EURODRIVE Service.
<b>Subfault: 33.10</b>		
<b>Description: Boot timeout</b>		
Response: Output stage inhibit		
System state: Fault acknowledgement with CPU reset		
	Cause	Measure
	Timeout during system boot.	Contact SEW-EURODRIVE Service.
<b>Subfault: 33.11</b>		
<b>Description: Hardware compatibility fault</b>		
Response: Output stage inhibit		
System state: Fault acknowledgement with CPU reset		
	Cause	Measure
	Firmware does not match device.	Contact SEW-EURODRIVE Service.
<b>Subfault: 33.12</b>		
<b>Description: Memory module plugged</b>		
Response: Output stage inhibit		
System state: Fault acknowledgement with CPU reset		
	Cause	Measure
	A plugged in memory module was detected during device start. The setting for the device parameter source is set to "Internal memory".	<ul style="list-style-type: none"> <li>– Switch off the device. Remove the memory module and restart the device.</li> <li>– Change the parameter "Non-volatile memory source" to "Arbitrary" or "Replaceable memory module". Switch the device off and on again.</li> </ul>

<b>Subfault: 33.13</b>	
<b>Description: Memory module removed</b>	
Response: Output stage inhibit System state: Fault acknowledgement with CPU reset	
Cause	Measure
The device was started without a memory module. The setting for the device parameter source is set to "Replaceable memory module".	Switch off the device. Insert the memory module and restart the device.
Replaceable memory module removed during on-going operation.	Change parameter "Non-volatile memory source" to "Internal memory". Switch the device off and on again.

<b>Subfault: 33.14</b>	
<b>Description: EtherCAT® slave controller cannot be accessed</b>	
Response: Output stage inhibit System state: Fault acknowledgement with CPU reset	
Cause	Measure
EtherCAT® slave controller cannot be accessed.	Contact SEW-EURODRIVE Service.

<b>Subfault: 33.15</b>	
<b>Description: Firmware configuration</b>	
Response: Output stage inhibit System state: Fault acknowledgement with CPU reset	
Cause	Measure
The Device Update Manager detected a modified variant of the application firmware.	Acknowledge the fault. Doing so will update the configuration data of the Device Update Manager.
The fault occurs repeatedly several times. The Device Update Manager is outdated and cannot save the configuration.	Update the Device Update Manager.

**8.7.28 Fault 34 Process data configuration**

<b>Subfault: 34.1</b>	
<b>Description: Changed process data configuration</b>	
Response: Application stop + output stage inhibit	
Cause	Measure
Process data configuration changed during active process data operation.	<ul style="list-style-type: none"> <li>– Stop the process data and make your changes. Then start the process data again.</li> <li>– Perform a reset. Doing so will stop the process data, apply the changes, and restart the process data.</li> </ul>

25887130/EN – 11/2018

## 8.7.29 Fault 35 Function activation

<b>Subfault: 35.1</b>		
<b>Description: Invalid TAN</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Incorrect TAN entered.	Enter TAN again.
	The TAN was not created for this device.	Check the TAN.
	When using a double axis, the TAN was generated for the wrong subaddress in the device.	Enter a TAN for the assigned subaddress.

<b>Subfault: 35.2</b>		
<b>Description: Application requires a higher license</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Activated application module requires higher license.	Enter a TAN for higher application activation.

<b>Subfault: 35.3</b>		
<b>Description: Technology activation missing</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	An activated technology function requires a technology activation that is not available.	<ul style="list-style-type: none"> <li>– Enter a TAN to activate the required technology function.</li> <li>– Activate technology function that can be operated with the current technology activation.</li> </ul>

<b>Subfault: 35.4</b>		
<b>Description: Technology activation for wrong device variant</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	This device does not support the technology activation included in this TAN.	<ul style="list-style-type: none"> <li>– Enable a technology function that is supported by this device.</li> <li>– Use a device that supports the required technology function.</li> </ul>

8.7.30 Fault 42 Lag fault

**Subfault: 42.1**

**Description: Positioning lag error**

Response: Positioning lag error	
Cause	Measure
A lag fault occurred during positioning. Incorrect encoder connection.	Check the connection of the encoder.
Position encoder inverted or not installed correctly at the track.	Check the installation and connection of the position encoder.
Wiring faulty.	Check the wiring of encoder, motor, and line phases.
Acceleration ramps too short.	Extend acceleration ramps.
P component of position controller too small.	Set P component of position controller to a larger value.
Incorrectly set speed controller parameters.	Check controller parameters.
Value of lag error tolerance too small.	Increase the lag error tolerance.
Mechanical components cannot move freely or are blocked.	Make sure mechanical parts can move freely, check whether they are blocked.

**Subfault: 42.2**

**Description: Jog mode lag error**

Response: Output stage inhibit	
Cause	Measure
A lag fault occurred in jog mode (FCB 20). Incorrect encoder connection.	Check the connection of the encoder.
Position encoder inverted or not installed correctly at the track.	Check the installation and connection of the position encoder.
Wiring faulty.	Check the wiring of encoder, motor, and line phases.
Acceleration ramps too short.	Extend acceleration ramps.
P component of position controller too small.	Set P component of position controller to a larger value.
Incorrectly set speed controller parameters.	Check controller parameters.
Value of lag error tolerance too small.	Increase the lag error tolerance.
Mechanical components cannot move freely or are blocked.	Make sure mechanical parts can move freely, check whether they are blocked.

25887130/EN – 11/2018

<b>Subfault: 42.3</b>		
<b>Description: Standard lag error</b>		
	Response: Output stage inhibit	
	Cause	Measure
	A lag fault has occurred outside a positioning process. Incorrect encoder connection.	Check the connection of the encoder.
	Position encoder inverted or not installed correctly at the track.	Check the installation and connection of the position encoder.
	Wiring faulty.	Check the wiring of encoder, motor, and line phases.
	Acceleration ramps too short.	Extend acceleration ramps.
	P component of position controller too small.	Set P component of position controller to a larger value.
	Incorrectly set speed controller parameters.	Check controller parameters.
	Value of lag error tolerance too small.	Increase the lag error tolerance.

### 8.7.31 Fault 45 Fieldbus interface

<b>Subfault: 45.1</b>		
<b>Description: No response</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Basic unit detects a plugged fieldbus card, which does not respond because it does not boot correctly.	<ul style="list-style-type: none"> <li>– Switch the power off and on again/perform a reset.</li> <li>– If the fault occurs repeatedly, replace the fieldbus card and send it to SEW-EURODRIVE together with the fault number. For further support, contact SEW-EURODRIVE Service.</li> </ul>

<b>Subfault: 45.2</b>		
<b>Description: Option interface</b>		
	Response: Fieldbus – timeout response	
	Cause	Measure
	Basic unit detects fault on internal interface for fieldbus connection.	<ul style="list-style-type: none"> <li>– Switch the power off and on again/perform a reset.</li> <li>– If the fault occurs repeatedly, replace the fieldbus card and send it to SEW-EURODRIVE together with the fault number. For further support, contact SEW-EURODRIVE Service.</li> </ul>



**Subfault: 45.3**  
**Description: Process output data timeout**

Response: Fieldbus – timeout response	
Cause	Measure
Fieldbus card detected timeout of process output data on fieldbus interface.	<ul style="list-style-type: none"> <li>– Check master communication routine.</li> <li>– Check the communication connection between process data producer (master) and fieldbus option. The data line might be interrupted.</li> <li>– Extend the fieldbus timeout time.</li> <li>– Switch off monitoring.</li> </ul>

**Subfault: 45.5**  
**Description: Engineering interface**

Response: Warning	
Cause	Measure
Engineering interface no longer works, or works only to a limited extent.	<ul style="list-style-type: none"> <li>– Switch the power off and on again/perform a reset.</li> <li>– If the fault occurs repeatedly, replace the fieldbus card and send it to SEW-EURODRIVE together with the fault number. For further support, contact SEW-EURODRIVE Service.</li> </ul>

**Subfault: 45.7**  
**Description: Invalid process output data**

Response: Fieldbus – timeout response	
Cause	Measure
<ul style="list-style-type: none"> <li>– The producer of the process output data reports that the data is invalid.</li> <li>– Process data is exchanged via the fieldbus but the data is invalid.</li> </ul>	<ul style="list-style-type: none"> <li>– Check whether the PLC is in "Stop" state.</li> <li>– Restart the PLC.</li> </ul>

**Subfault: 45.9**  
**Description: Fieldbus interface – warning**

Response: Warning	
Cause	Measure
Basic unit detects non-critical fault on internal interface for fieldbus connection.	<ul style="list-style-type: none"> <li>– Reset the fault.</li> <li>– If the fault occurs repeatedly, replace the fieldbus card and send it to SEW-EURODRIVE together with the fault number. For further support, contact SEW-EURODRIVE Service.</li> </ul>

25887130/EN – 11/2018

<b>Subfault: 45.50</b>		
<b>Description: Fieldbus card – warning</b>		
	Response: Warning with self reset	
	Cause	Measure
	Fieldbus interface signals subcomponent fault of the type "warning".	Refer to the subcomponent fault of the fieldbus interface and perform the action required for eliminating the fault.
<b>Subfault: 45.51</b>		
<b>Description: Fieldbus card – fault</b>		
	Response: Fieldbus – timeout response	
	Cause	Measure
	Fieldbus interface signals subcomponent fault of the type "standard".	Refer to the subcomponent fault of the fieldbus interface and perform the action required for eliminating the fault.
<b>Subfault: 45.52</b>		
<b>Description: Fieldbus card – critical fault</b>		
	Response: Fieldbus – timeout response	
	Cause	Measure
	Fieldbus interface signals subcomponent fault of the type "critical fault".	Refer to the subcomponent fault of the fieldbus interface and perform the action required for eliminating the fault.

### 8.7.32 Fault 46 Safety card

<b>Subfault: 46.1</b>		
<b>Description: No response</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Failed to synchronize with subcomponent.	<ul style="list-style-type: none"> <li>– Check device assignment of basic device and option.</li> <li>– Check card slot and installation and correct if necessary.</li> <li>– Restart the device.</li> <li>– Contact SEW-EURODRIVE Service.</li> </ul>

**Subfault: 46.2**  
**Description: Invalid variant**

Response: Output stage inhibit	
Cause	Measure
Plugged safety card variant does not match inverter type.	– Remove safety card. – Use the correct safety card design.
For double axes, only variants without encoder interface can be used.	– Remove option. – Use the design without encoder interface.
For double axes, no encoder option must be plugged in.	Remove the option.

**Subfault: 46.3**  
**Description: Internal communication timeout**

Response: Output stage inhibit	
Cause	Measure
Communication interrupted between inverter and safety card.	Check card slot and installation and correct if necessary. Contact the SEW-EURODRIVE Service if the fault is still present.
Safety card signals subcomponent fault of the type "warning".	Check card slot and installation and correct if necessary. Contact the SEW-EURODRIVE Service if the fault is still present.

**Subfault: 46.50**  
**Description: Warning**

Response: Warning with self reset	
Cause	Measure
Safety card signals subcomponent fault of the type "warning".	For the exact cause of the fault and for information on how to correct the cause of the problem, refer to the fault reported by the subcomponent (index 8365.3).

**Subfault: 46.51**  
**Description: Fault**

Response: Emergency stop + output stage inhibit with self reset	
Cause	Measure
Safety card signals subcomponent fault of the type "standard fault".	For the exact cause of the fault and for information on how to correct the cause of the problem, refer to the fault reported by the subcomponent (index 8365.3).

25887130/EN – 11/2018

<b>Subfault: 46.52</b>		
<b>Description: Critical fault</b>		
	Response: Output stage inhibit with self reset	
	Cause	Measure
	Safety card signals subcomponent fault of the type "critical fault".	<ul style="list-style-type: none"> <li>– For the exact cause of the fault and for information on how to correct the cause of the problem, refer to the fault reported by the subcomponent (index 8365.3).</li> <li>– If the jumper plug is plugged at terminal "X6", remove the jumper plug.</li> </ul>

### 8.7.33 Fault 48 Module bus

<b>Subfault: 48.2</b>		
<b>Description: Timeout</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Timeout detected by module bus.	Check cable connections and voltage supply of module bus stations.

### 8.7.34 Fault 51 Analog processing

<b>Subfault: 51.1</b>		
<b>Description: Analog current input 4 mA limit</b>		
	Response: Warning with self reset	
	Cause	Measure
	Input current below 4 mA.	Check input current.

### 8.7.35 Fault 52 Explosion protection category 2 function

<b>Subfault: 52.1</b>		
<b>Description: Startup fault</b>		
	Response: Output stage inhibit	
	Cause	Measure
	No valid startup available.	Perform startup.

<b>Subfault: 52.2</b>		
<b>Description: Illegal system function</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Illegal system function activated.	Disable impermissible functions when Ex protection function is active, such as "Activate standstill current" = "On" in the active control mode.

<b>Subfault: 52.3</b>		
<b>Description: Inverter too large</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Ratio of inverter current and nominal motor current too large	– Check the assignment of motor and inverter. – Check the dimensioning of the system.
<b>Subfault: 52.4</b>		
<b>Description: Parameterization of current limit characteristic</b>		
	Response: Output stage inhibit	
	Cause	Measure
	Fault setting parameters for current limit characteristic.	– Parameterize the current limit characteristic. – Perform startup again.
<b>Subfault: 52.5</b>		
<b>Description: Time duration exceeded <math>f &lt; 5</math> Hz</b>		
	Response: Emergency stop + output stage inhibit	
	Cause	Measure
	Duration of 60 s for $f < 5$ Hz exceeded.	Check the dimensioning of the system: If speed control = FCB05, increase the speed. If speed = 0, inhibit output stage / with stop FCBs, activate the brake function if a brake is installed.

## 8.8 Device replacement



### ⚠ WARNING

Removing the electronics cover will disable DynaStop®.

Severe or fatal injuries.

- If it is not permitted to deactivate the system, additional measures are required (e.g. mechanical stake-out)



### ⚠ WARNING

Electric shock caused by dangerous voltages in the connection box. Dangerous voltages may still be present for up to 5 minutes after disconnection from the power supply system.

Severe or fatal injuries.

- Before removing the electronics cover, de-energize the drive units via a suitable external disconnection device.
- Secure the drive unit against unintended re-connection of the voltage supply.
- Secure the output shaft against rotation.
- Wait for at least the following time before removing the electronics cover:  
**5 minutes**



### ⚠ WARNING

Improper installation/disassembly of drive units and mount-on components.

Risk of injury.

- Adhere to the notes about installation and disassembly.
- Before releasing shaft connections, make sure that there are no active torsional moments present (tensions within the system).

### 8.8.1 Replacing the electronics cover

1. Observe the safety notes.
2. Remove the screws and take off the electronics cover from the connection box.
3. Compare the data on the nameplate of the previous electronics cover with the data on the nameplate of the new electronics cover.

#### INFORMATION



Always replace the electronics cover with an electronics cover with the same type designation.

4. Set all the controls (e.g. DIP switches, see "Startup" chapter) on the new electronics cover in the same way as the controls of the previous electronics cover.
5. Remove the replaceable memory module from the old electronics cover. Insert the replaceable memory module in the new electronics cover.
6. Place the new electronics cover onto the connection box and screw it on.
7. Supply voltage to the drive.
8. Check the function of the new electronics cover.

### 8.8.2 Replacing the memory module

1. Observe the safety notes.
2. Remove the screws and take off the electronics cover from the connection box.
3. Remove the memory module from the old electronics cover.
4. Insert the new memory module in the new electronics cover.
5. Compare the type designation of the memory module.

#### INFORMATION



The new memory module must have the same type designation as the old memory module.

6. Check the startup of the drive unit.
  - ⇒ If required, perform the startup again or load the saved startup onto the drive unit.
7. Place the electronics cover onto the connection box and screw it on.
8. Supply voltage to the drive.
9. Check the function of the new electronics cover.

### 8.8.3 Replacing the drive unit

1. Observe the safety notes.
2. Install the lifting eyes to the drive unit, see chapter "Service" > "Unit replacement" > "Installing the lifting eyes".
3. Disassemble the drive unit. Observe the notes in chapter "Mechanical Installation".
4. Compare the data on the nameplates of the old drive unit to the data on the nameplates of the new drive unit.

## INFORMATION




Always replace the drive unit with a drive unit that has the same properties.

5. Mount the drive unit. Observe the "Mechanical installation" chapter.
6. Remove the lifting eyes from the new drive unit. Store the lifting eyes for future service work.
7. Perform the installation according to the "Electrical Installation" chapter.
8. Set all the controls (e.g. DIP switches, see "Startup" chapter) on the new electronics cover in the same way as the controls of the previous electronics cover.
9. Remove the memory module from the old electronics cover. Insert this memory module in the new electronics cover.
10. Place the electronics cover onto the connection box and screw it on.
11. Supply voltage to the drive.
12. Check the functions of the new drive unit.

### 8.8.4 Installing the lifting eyes

1. Remove the PE connection cable.
2. Install the lifting eye for transportation as depicted in the following image:

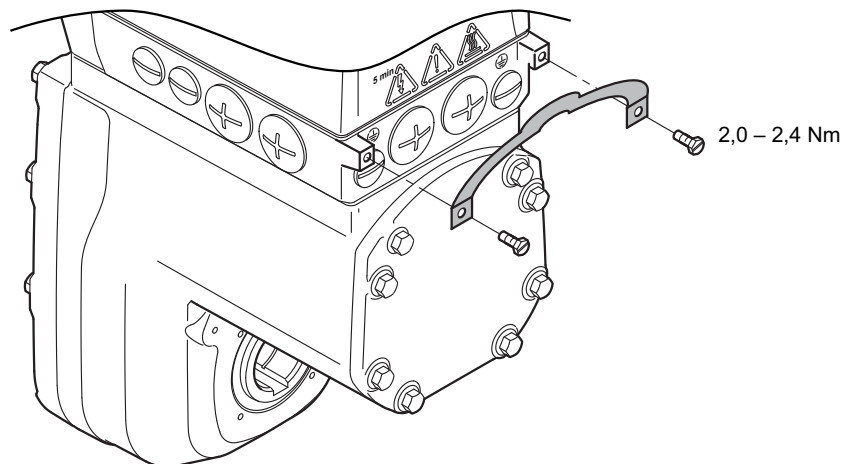

25771924875



## 8.9 SEW-EURODRIVE Service

### 8.9.1 Sending in a unit for repair

If a fault cannot be rectified, please contact the SEW-EURODRIVE Electronics Service (see chapter "Address list").

When you contact the SEW Electronics Service, always quote the digits on the status label so that our service personnel can assist you more effectively.

**Provide the following information when sending the unit in for repair:**

- Serial number (see nameplate)
- Type designation
- Unit variant
- Short description of the application (application, control mode, etc.)
- Nature of the fault
- Accompanying circumstances
- Your own presumptions as to what has happened
- Any unusual events preceding the problem, etc.

## 8.10 Shutdown



### ▲ WARNING

Electric shock caused by dangerous voltages in the connection box. Dangerous voltages may still be present for up to 5 minutes after disconnection from the power supply system.

Severe or fatal injuries.

- Before removing the electronics cover, de-energize the drive units via a suitable external disconnection device.
- Secure the drive unit against unintended re-connection of the voltage supply.
- Secure the output shaft against rotation.
- Wait for at least the following time before removing the electronics cover:  
**5 minutes**

To shut down the drive unit, disconnect the unit using appropriate measures.

## 8.11 Storage

Observe the following instructions when shutting down or storing the drive unit:

- If you shut down and store the drive unit for a longer period, you must close open cable bushings and cover ports with protective caps.
- Make sure that the unit is not subject to mechanical impact during storage.

Observe the notes on storage temperature in chapter "Technical data".

## 8.12 Extended storage

### 8.12.1 Drive



#### NOTICE

Volatilization of the VCI anti-corrosion agent

Possible damage to property

- Drive units must be kept tightly closed until they are started up.



#### INFORMATION

For storage periods longer than 9 months, SEW-EURODRIVE recommends the "Extended storage" design. Drive units in this design are designated with a corresponding label.

The lubricant of those drive units is then mixed with a VCI anti-corrosion agent (volatile corrosion inhibitors). Please note that this VCI anti-corrosion agent is only effective in a temperature range of -25 °C to +50 °C. The shaft ends are also treated with an anti-corrosion agent. Drive units of the "extended storage" design are equipped with OS2 surface protection without further notice. Instead of OS2, you can order OS3. For further information refer to chapter "Surface protection".

### 8.12.2 Storage conditions

Observe the storage conditions specified in the following table for extended storage:

Climate zone	Packaging <sup>1)</sup>	Storage location <sup>2)</sup>	Storage duration
Temperate (Europe, USA, Canada, China and Russia, excluding tropical zones)	Packed in containers, with desiccant and moisture indicator sealed in the plastic wrap.	Under roof, protected against rain and snow, no shock loads.	Up to 3 years with regular checks of the packaging and moisture indicator (relative humidity < 50%).
	Open	Under roof and enclosed at constant temperature and atmospheric humidity (5 °C < $\vartheta$ < 50 °C, < 50% relative humidity).  No sudden temperature fluctuations. Controlled ventilation with filter (free from dust and dirt). No aggressive va- pors, no shocks.	2 years or more with regular inspections. Check for cleanness and mechanical damage during the inspection. Check corrosion protection.

Climate zone	Packaging <sup>1)</sup>	Storage location <sup>2)</sup>	Storage duration
Tropical (Asia, Africa, Central and South America, Australia, New Zealand excluding temperate zones)	Packed in containers, with desiccant and moisture indicator sealed in the plastic wrap.  Protected against insect damage and mildew by chemical treatment.	Under roof, protected against rain and shocks.	Up to 3 years with regular checks of the packaging and moisture indicator (rel. humidity < 50%).
	Open	Under roof and enclosed at constant temperature and atmospheric humidity (5 °C < θ < 50 °C, < 50% relative humidity).  No sudden temperature fluctuations. Controlled ventilation with filter (free from dust and dirt). No aggressive vapors, no shocks. Protected against insect damage.	2 years or more with regular inspections. Check for cleanness and mechanical damage during the inspection. Check corrosion protection.

1) The packaging must be carried out by an experienced company using the packaging materials that have been explicitly specified for the particular application.

2) SEW-EURODRIVE recommends storing the drive according to the mounting position.

### 8.12.3 Electronics

## INFORMATION



For electronics components, adhere to the following notes in addition to the notes in chapters "Extended storage" > "Drive" and "Extended storage" > "Storage conditions".

If the device is in extended storage, connect it to the line voltage for at least 5 minutes every 2 years. Otherwise, the device's service life may be reduced.

### Procedure in case maintenance has been neglected

Electrolytic capacitors are used in the inverters. They are subject to aging effects when de-energized. This effect can damage the capacitors if the device is connected directly to the nominal voltage after a longer period of storage. If you have not performed maintenance regularly, SEW-EURODRIVE recommends that you increase the line voltage slowly up to the maximum voltage. This can be done, for example, by using a variable transformer for which the output voltage has been set according to the following overview. After you have completed the regeneration process, the device can be used immediately or stored again for an extended period with maintenance.

The following graduations are recommended:

AC 400/500 V units:

- Stage 1: AC 0 V to AC 350 V within a few seconds
- Stage 2: AC 350 V for 15 minutes
- Stage 3: AC 420 V for 15 minutes
- Stage 4: AC 500 V for 1 hour

### 8.13 Waste disposal

Dispose of the product and all parts separately in accordance with their material structure and the national regulations. Put the product through a recycling process or contact a specialist waste disposal company. If possible, divide the product into the following categories:

- Iron, steel or cast iron
- Stainless steel
- Magnets
- Aluminum
- Copper
- Electronic parts
- Plastics

The following materials are hazardous to health and the environment. These materials must be collected and disposed of separately.

- Oil and grease

Collect used oil and grease separately according to type. Ensure that the used oil is not mixed with solvent. Dispose of used oil and grease correctly.

- Capacitors

## 9 Inspection and maintenance


### 9.1 Determining the operating hours

#### 9.1.1 Via MOVISUITE®

The drive unit can read out the operating hours performed in order to assist with inspection and maintenance tasks.

To determine the operating hours performed, proceed as follows:

1. Open the parameter tree of the drive unit in MOVISUITE®.
2. Select the "Status" node in the parameter tree [4].
  - ⇒ The **operating hours** performed can be found in the "Work and operating hours" [3] group.

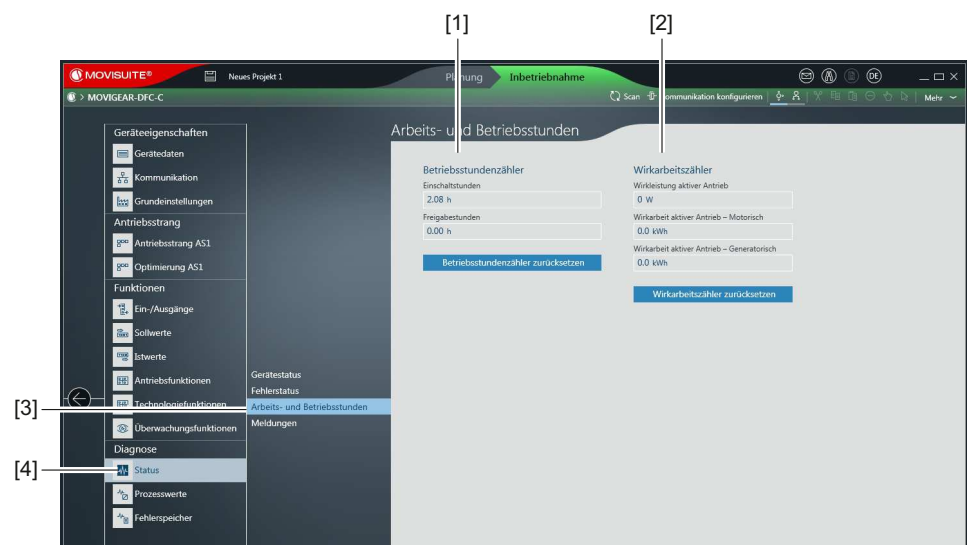

9007221229802251

- [1] Display of operating and drive running hours performed
- [2] Display of active power and active energy performance

## 9.2 Inspection and maintenance intervals

The following table shows the inspection and replacement intervals for the drive units:


Time interval	What to do?	Who is permitted to perform the work?
Every 3000 operating hours, at least every 6 months	Check running noise for possible bearing damage	Specialists at customer site
	In the event of a bearing damage: Have the bearing replaced by SEW-EURODRIVE Service or qualified personnel trained by SEW-EURODRIVE.	SEW-EURODRIVE Service Qualified personnel trained by SEW-EURODRIVE
	Visual inspection of the seals for leakage:	Specialists at customer site
	<ul style="list-style-type: none"> <li>In the event of a leakage at the output oil seal: Change the oil seal</li> </ul>	Specialists at customer site
	<ul style="list-style-type: none"> <li>In the event of any other leakage:</li> </ul>	
	<ul style="list-style-type: none"> <li>– Replace the drive unit</li> </ul>	Specialists at customer site
	<ul style="list-style-type: none"> <li>– Recommendation: Contact SEW-EURODRIVE Service.</li> </ul>	SEW-EURODRIVE Service
	For gear units with a torque arm: Check rubber buffers and replace them if necessary	Specialists at customer site
Every 20 000 operating hours <sup>1)</sup>	Have the motor inspected by SEW-EURODRIVE Service or qualified personnel trained by SEW-EURODRIVE.	SEW-EURODRIVE Service
		Qualified personnel trained by SEW-EURODRIVE
The drive units are equipped with long-term lubrication. Depending on the operating conditions and the oil temperature, the oil must be changed at least every 5 years (see chapter "Lubricant change intervals").	Change synthetic oil	Specialists at customer site
	Replace oil seal on output end (do not install it in the same track)	Specialists at customer site

Time interval	What to do?	Who is permitted to perform the work?
When the cover / electronics cover is removed after an operating period of $\geq 6$ months.	When the cover / electronics cover is opened after an operating period of $\geq 6$ months, the gasket between the connection box and the cover / electronics cover must always be replaced.  The 6-month period can be shortened by harsh ambient/operating conditions, e.g. cleaning with aggressive chemicals or frequent temperature fluctuations.	Specialists at customer site
Each time the cover / electronics cover is removed	Visual inspection of the gasket between connection box and cover / electronics cover: The gasket must be replaced in the event of damage.	Specialists at customer site
Varying (depending on external factors)	Touch up or renew the surface/ anti-corrosion coating	Specialists at customer site
	To prevent permanent water accumulation in the B-side safety cover, you must clean it at regular intervals.	Specialists at customer site

1) Wear times are influenced by many factors. The system manufacturer must calculate the required inspection/maintenance intervals individually in accordance with the project planning documents.

### 9.3 Lubricant change intervals

The following figure shows the lubricant change intervals for normal ambient conditions. In case of severe/aggressive ambient conditions, the lubricant must be changed more frequently:

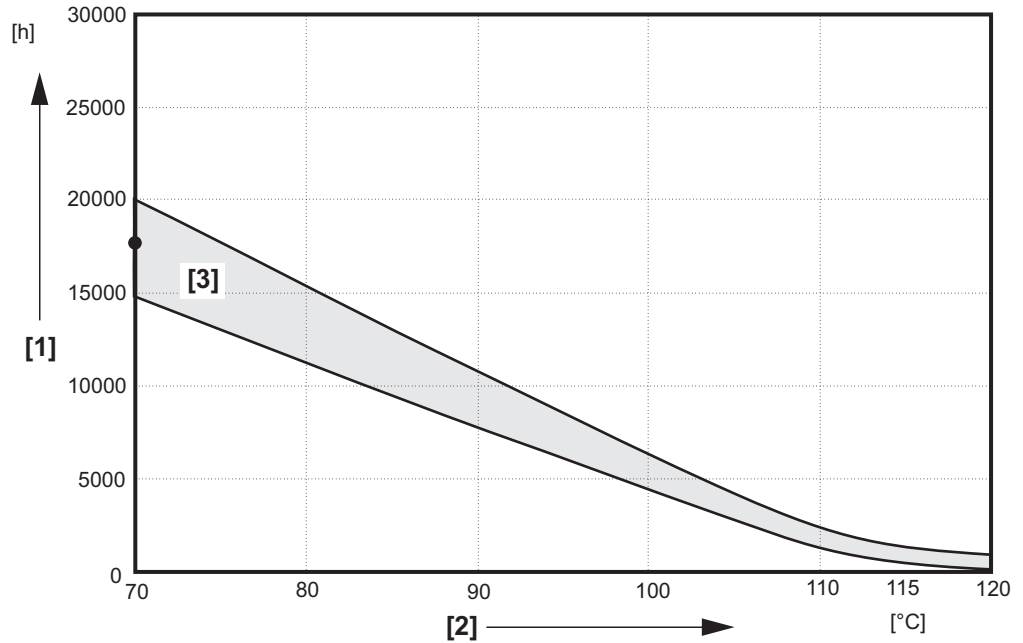

9007222159768715

- [1] Operating hours
- [2] Sustained oil bath temperature
- [3] CLP HC
- Average value per oil type at 70 °C



## 9.4 Inspection and maintenance work

### 9.4.1 Preliminary work regarding inspection and maintenance

Observe the following notes before you start with inspection/maintenance work on the MOVIGEAR® performance:



#### ⚠ WARNING

Risk of injury if the drive unit starts up unintentionally and danger of electrical voltage.

Dangerous voltages may still be present for up to 5 minutes after disconnection from the line voltage.

- Disconnect the drive unit from the power supply with suitable external measures before you start working on the unit and secure it against unintentional reconnection to the voltage supply.
- Secure the output shaft against rotation.
- Wait for at least the following time before removing the electronics cover: **5 minutes.**



#### ⚠ WARNING

Risk of burns due to hot surfaces and hot gear unit oil.

Serious injuries.

- Let the devices cool down before touching them.
- Remove the screw plugs and the breather valve carefully.
- The gear unit must still be warm, otherwise the high viscosity of excessively cold oil will make it more difficult to drain the oil correctly.



#### NOTICE

Damage to the drive unit.

Potential damage to property.

- Make sure that only the SEW-EURODRIVE Service or qualified personnel trained by SEW-EURODRIVE opens the gear unit cover.



#### NOTICE

Filling in the wrong oil may result in significantly different lubricant characteristics.

Potential damage to property.

- Do not mix different synthetic lubricants and do not mix synthetic and mineral lubricants.
- Synthetic oil is used as the standard lubricant.


### 9.4.2 Changing the oil

#### Draining the oil

1. Observe the notes in chapter "Preliminary work for inspection and maintenance".
2. **▲ WARNING!** Risk of burns due to hot surfaces. Serious injuries. Let the devices cool down before touching them.  
Remove the drive unit from the system, otherwise it is not possible to change the oil.
3. SEW-EURODRIVE recommends that you drain the oil in the position depicted in the figure below:
4. Place an adequate container underneath the oil drain plug [2].
5. **▲ WARNING!** Risk of burns due to hot gear oil. Serious injuries. Let the devices cool down before touching them.  
Remove the lowest screw plug [2] or the breather valve installed there (depends on the mounting position used according to the mounting position sheet).
6. It is easier to drain the oil when you also remove the upper screw plug [3] or breather valve installed there (flowing in of air).
7. Drain the oil. Completely remove the residual oil [1] in the drive with a suitable device.

#### Recommended position

The following figure shows the position recommended for draining the oil:

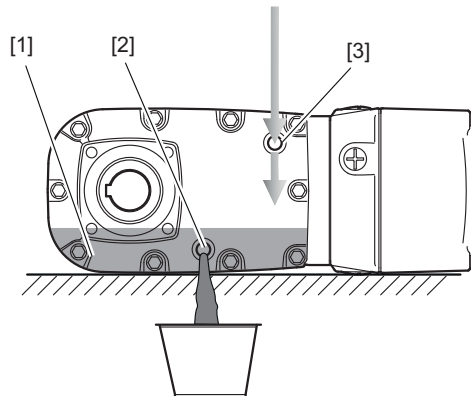


25402426635

### Filling in the oil

1. Observe the notes in chapter "Preliminary work for inspection and maintenance".
2. SEW-EURODRIVE recommends that you fill in the new oil in the position depicted in the figure below.
3. **NOTICE!** Filling in the wrong oil may result in significantly different lubricant characteristics. Potential damage to property. Do not mix different synthetic lubricants and do not mix synthetic and mineral lubricants. Synthetic oil is used as the standard lubricant.  
Fill in new oil of the same type via the lower bore hole [2].
  - ⇒ The oil viscosity and type (synthetic) that are to be used are determined by SEW-EURODRIVE specifically for each order. This information is noted in the order confirmation and on the drive unit's nameplate.
  - ⇒ It is easier to fill in the oil when you also remove the upper breather plug [1] or breather valve installed there (air can flow out).
  - ⇒ For the required oil quantity, refer to the nameplate or the chapter "Technical data and dimension sheets / Lubricants" depending on the mounting position.
4. Re-insert the screw plug and the breather valve. Depending on the mounting position used, observe the mounting position sheet.
5. Touch up or renew the surfaces / anti-corrosion coating.

### Recommended position

The following figure shows the position recommended for filling in the new oil:

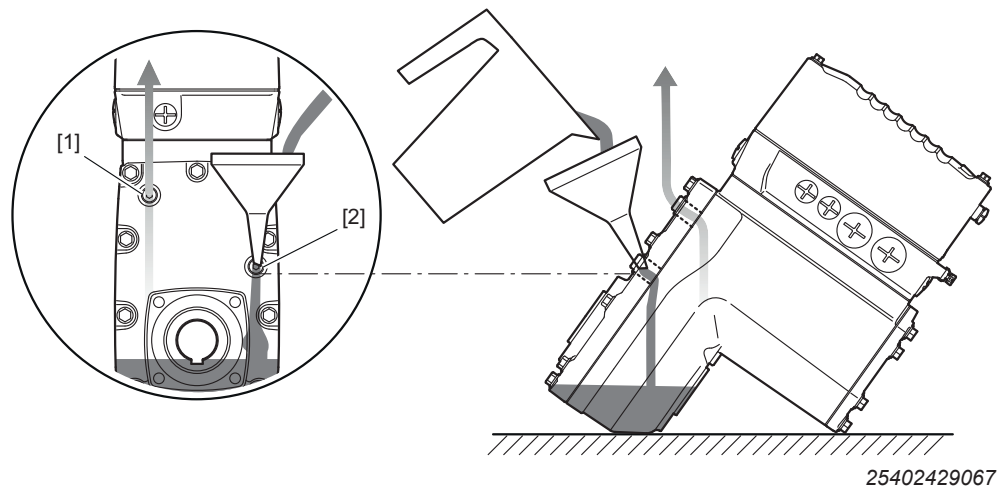

### 9.4.3 Replacing the output oil seal

1. Observe the notes in chapter "Preliminary work for inspection and maintenance".
2. Remove the drive unit from the system.
3. **NOTICE!** Oil seals with a temperature below 0 °C may get damaged during installation. Potential damage to property. Store oil seals at ambient temperatures over 0 °C. Warm up the oil seals before you install them, if necessary.  
When changing the oil seal, ensure that there is a sufficient grease reservoir between the dust lip and sealing lip, depending on the type of gear unit.
  - ⇒ If you use double oil seals, fill one-third of the gap with grease.
  - ⇒ Do not install the oil seal on the same track.
4. Touch up or renew the surfaces / anti-corrosion coating.

### 9.4.4 Painting the drive unit

1. Observe the notes in chapter "Preliminary work for inspection and maintenance".
2. **NOTICE!** Breather valves and oil seals may be damaged during painting or re-painting. Potential damage to property. Thoroughly cover the breather valves and sealing lip of the oil seals with strips prior to painting.  
Clean the surface of the drive unit and make sure it is free from grease.
3. Remove the strips after painting.

### 9.4.5 Cleaning the drive unit

Observe the notes in chapter "Preliminary work for inspection and maintenance".

Excessive dirt, dust or shavings can have a negative impact on the function of synchronous motors; in extreme cases, these factors can cause the motor to break down.

For this reason, you must clean the drives at regular intervals (after one year at the latest) to ensure a sufficiently large area for heat dissipation.

Insufficient heat dissipation can have unwanted consequences. The bearing service life is reduced through operation at impermissibly high temperatures (bearing grease degrades).

### 9.4.6 Connection cables

Observe the notes in chapter "Preliminary work for inspection and maintenance".

Check the connection cable for damage at regular intervals and replace if necessary.

### 9.4.7 Replacing the gasket between connection box and electronics cover

#### Spare part kit

The gasket is available as a spare part (1, 10 or 50 pieces) from SEW-EURODRIVE.

#### Steps




#### NOTICE

Loss of the guaranteed degree of protection.

Possible damage to property.

- When the electronics cover is removed from the connection box, you have to protect the electronics cover and the wiring space from humidity, dust or foreign particles.
- Make sure that the electronics cover is mounted properly.


1. Observe the notes in chapter "Preliminary work for inspection and maintenance".
2. Loosen the screws of the electronics cover and remove it.

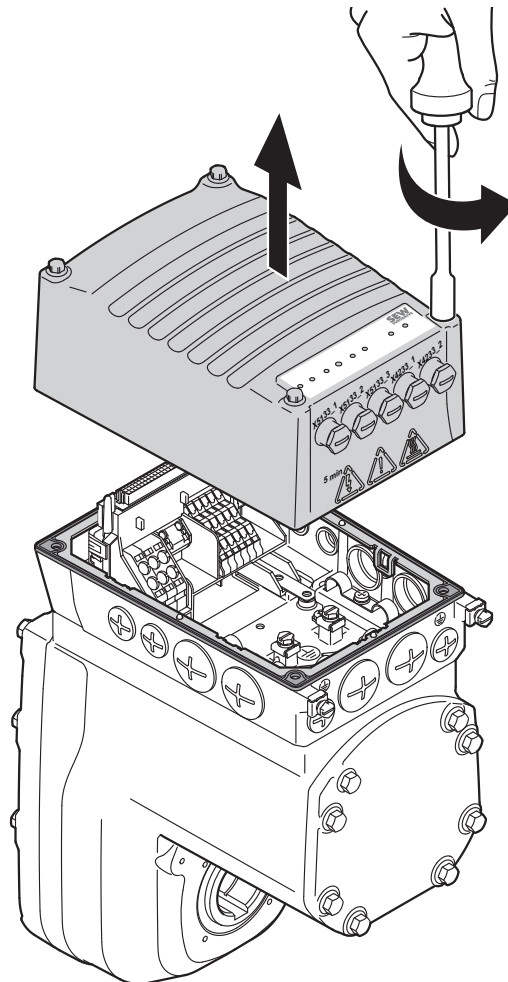

25402432267


3. **NOTICE!** Loss of the guaranteed degree of protection. Possible damage to property. Make sure not to damage the sealing surfaces when removing the gasket. Loosen the used gasket by levering it off the retaining cams.

⇒ This becomes easier when you keep to the sequence shown in the figure below.

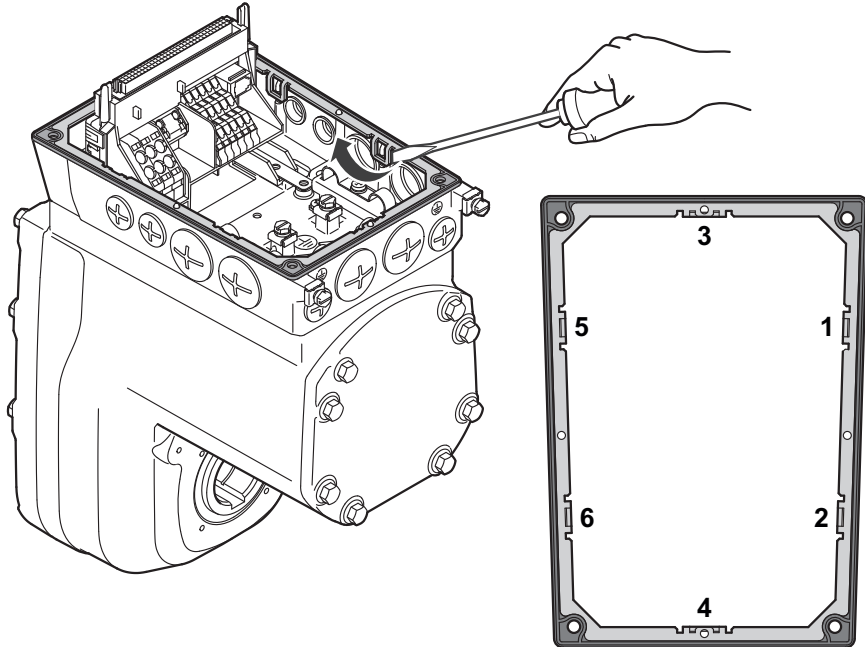


25402434699

4. Remove the old gasket completely from the connection box.

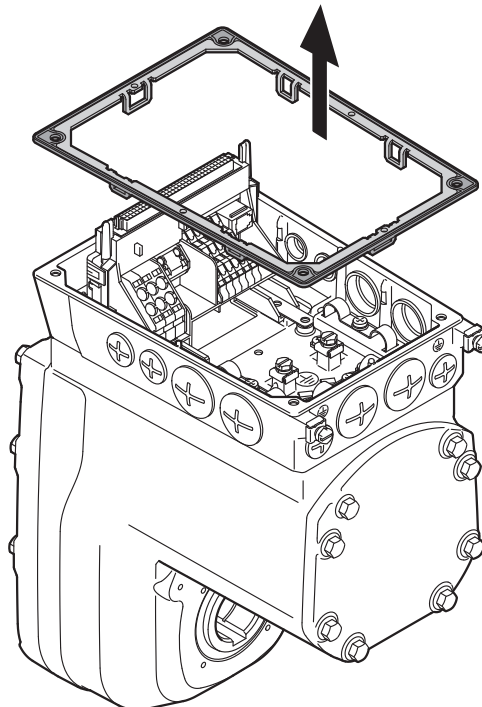


25402437131

5. **⚠ CAUTION!** Risk of injury due to sharp edges. Cuts. Use protective gloves for cleaning. Work may only be carried out by qualified personnel.  
Clean the sealing surfaces of the connection box and the electronics cover carefully.

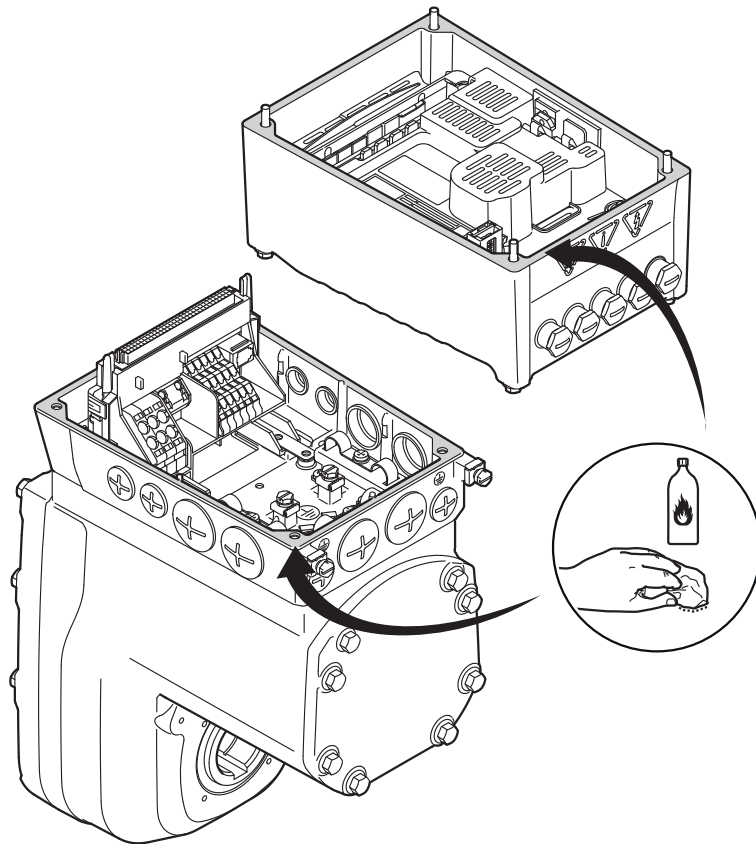


25402593163

6. Place the new gasket on the connection box and fix it in position with the retaining cams. This becomes easier when you keep to the sequence shown in the figure below.

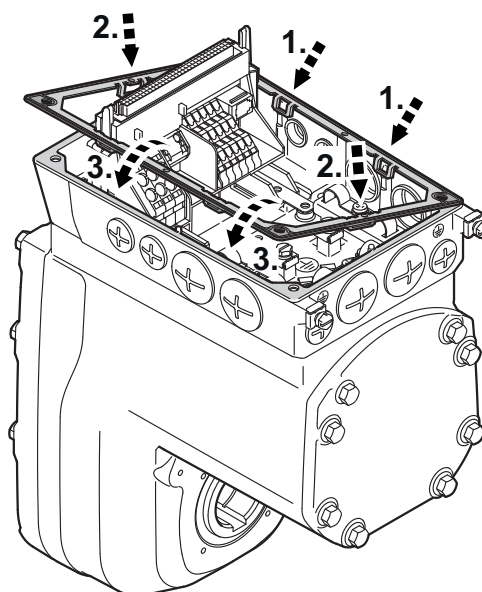

25402595595

7. Check the installation and startup of the drive unit using the applicable operating instructions.
8. Place the electronics cover on the connection box again and fasten it.
  - ⇒ Proceed as follows when screwing on MOVIGEAR® the electronics cover: Insert the screws and tighten them in diametrically opposite sequence **step by step** with a tightening torque of 6.0 Nm.

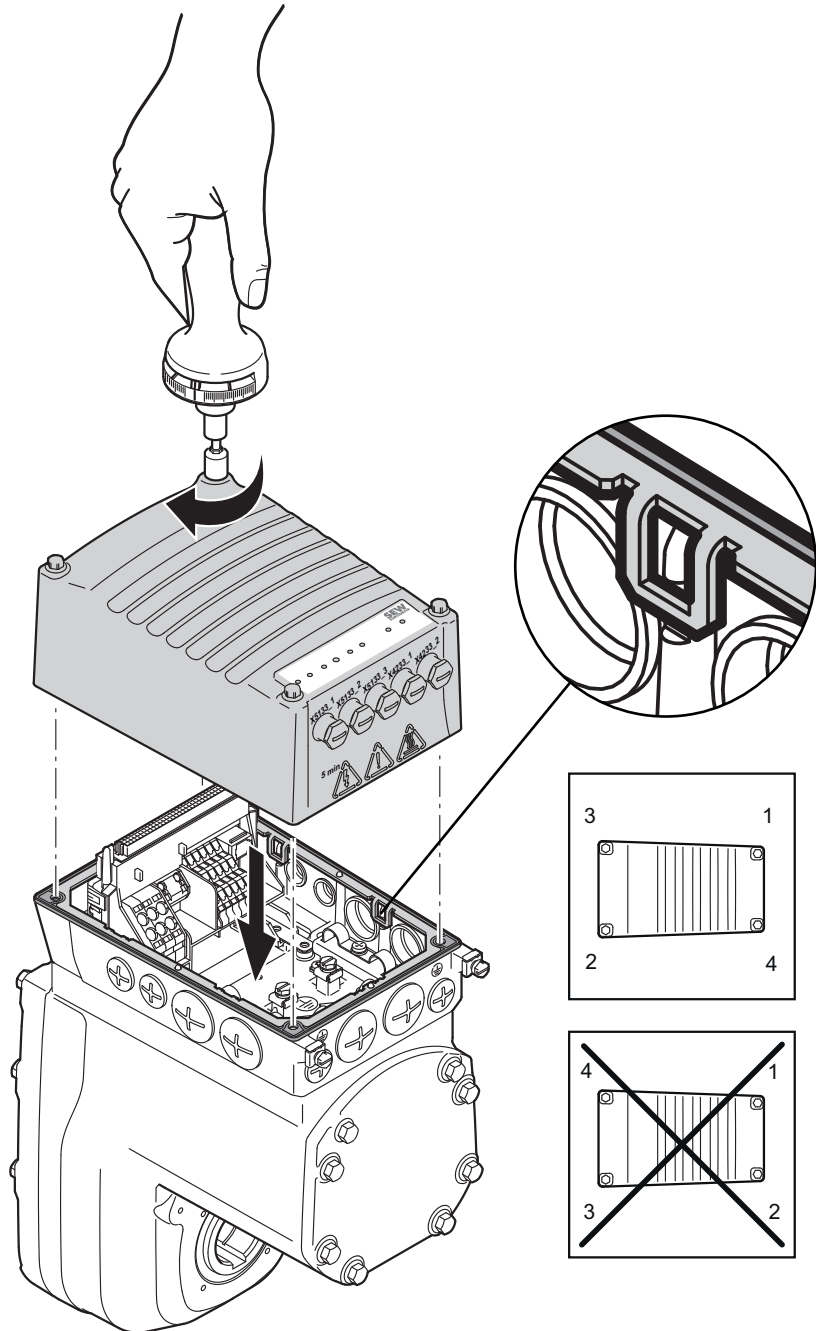

25449213323

25887130/EN – 11/2018



## 10 Configuration

### 10.1 Preliminary information

#### INFORMATION



Data may differ due to continuous product development.

#### 10.1.1 Abbreviation key

The following table provides a description of abbreviations used in this section:

Abbreviation	Description
$M_a$	MOVIGEAR® continuous output torque
$M_{apk}$	Maximum permitted torque for short-time duty
$M_{a\_EmergOff}$	Maximum permitted torque for non-cyclical special loads, maximum 1000 cycles
$M_{DSP}$	Maximum torque DynaStop® (base torque DynaStop®)
$M_{DSP}$	Maximum deceleration torque
$M_{ar}$	Retrodriving application torque
$n_a$	Output speed
$n_e$	Motor speed
$n_{amin}$	Minimum output speed
$n_{amax}$	Maximum output speed
$n_{DSP}$	Gear shaft speed
$W$	Mean braking work
$\eta_{load}$	Efficiency of the application

### 10.2 Drive selection data

Certain data is required to be able to precisely define the components for your drive. These specifications include:

Drive selection data			Your entry
$n_{amin}$	Minimum output speed	$\text{min}^{-1}$	
$n_{amax}$	Maximum output speed	$\text{min}^{-1}$	
$n_{max}$	Highest application speed	$\text{min}^{-1}$	
$n_{min}$	Lowest application speed	$\text{min}^{-1}$	
$M_{max}$	Maximum application torque	Nm	
$M_a$ at $n_{amin}$	Output torque at minimum output speed	Nm	
$M_a$ at $n_{amax}$	Output torque at maximum output speed	Nm	
S..., ..% cdf	Duty type and cyclic duration factor (cdf) or exact load cycle can be entered.		

Drive selection data			Your entry
Z	Starting frequency; alternatively, exact load cycle can be specified	1/h	
M4, M1..M6	Mounting position		
IP..	Required degree of protection		
$\vartheta_{amb}$	Ambient temperature	°C	
H	Installation altitude	m	

### 10.2.1 Determining the motor data

To select the proper drive, you first need the data (weight, speed, setting range, etc.) of the machine to be driven.

This determines the torque and the rotational speed. Refer to the documentation "Drive Engineering – Practical Implementation, Project Planning" or the SEW-Workbench project planning software for assistance.


### 10.2.2 Selecting the proper drive

Based on the calculated values for torque and rotational speed, the suitable drive can now be configured under adherence of any other mechanical requirements.

### 10.3 MOVIGEAR® performance

#### 10.3.1 Project planning procedure

The following flow diagram illustrates the project planning procedure for MOVIGEAR® performance:

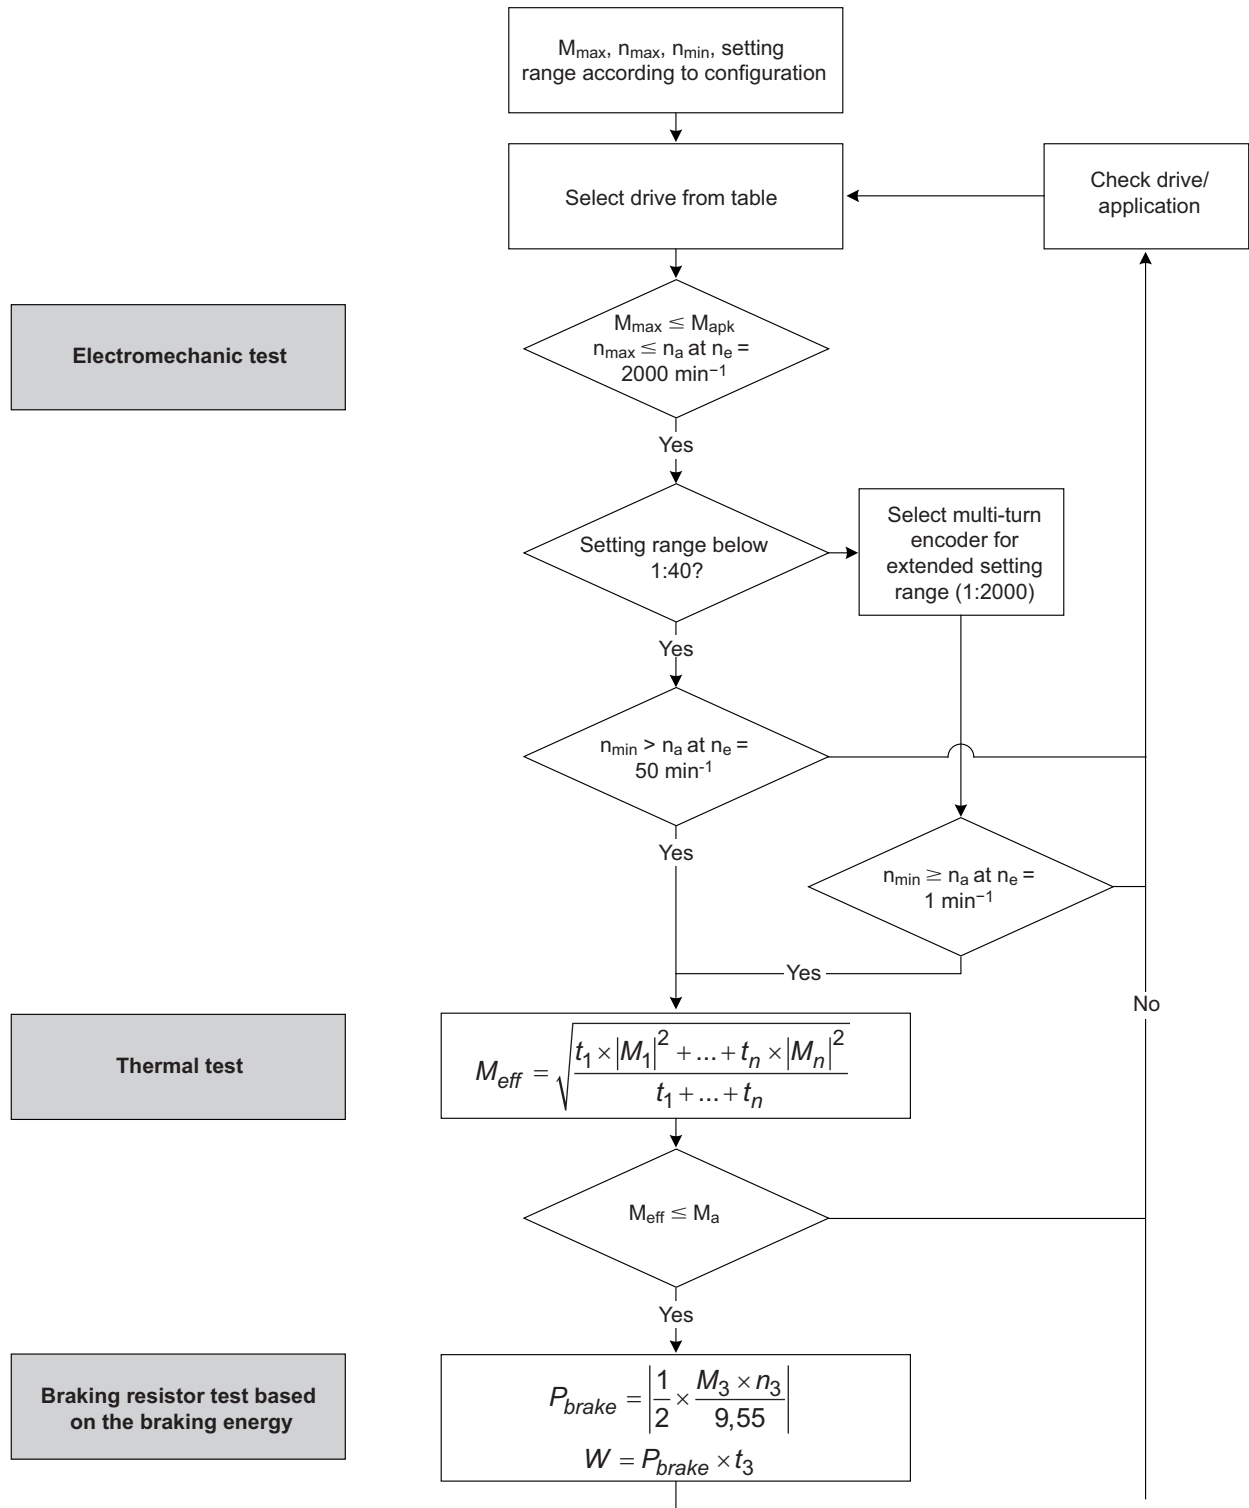


Electromechanic test

Thermal test

Braking resistor test based on the braking energy

25887130/EN – 11/2018

25222426251

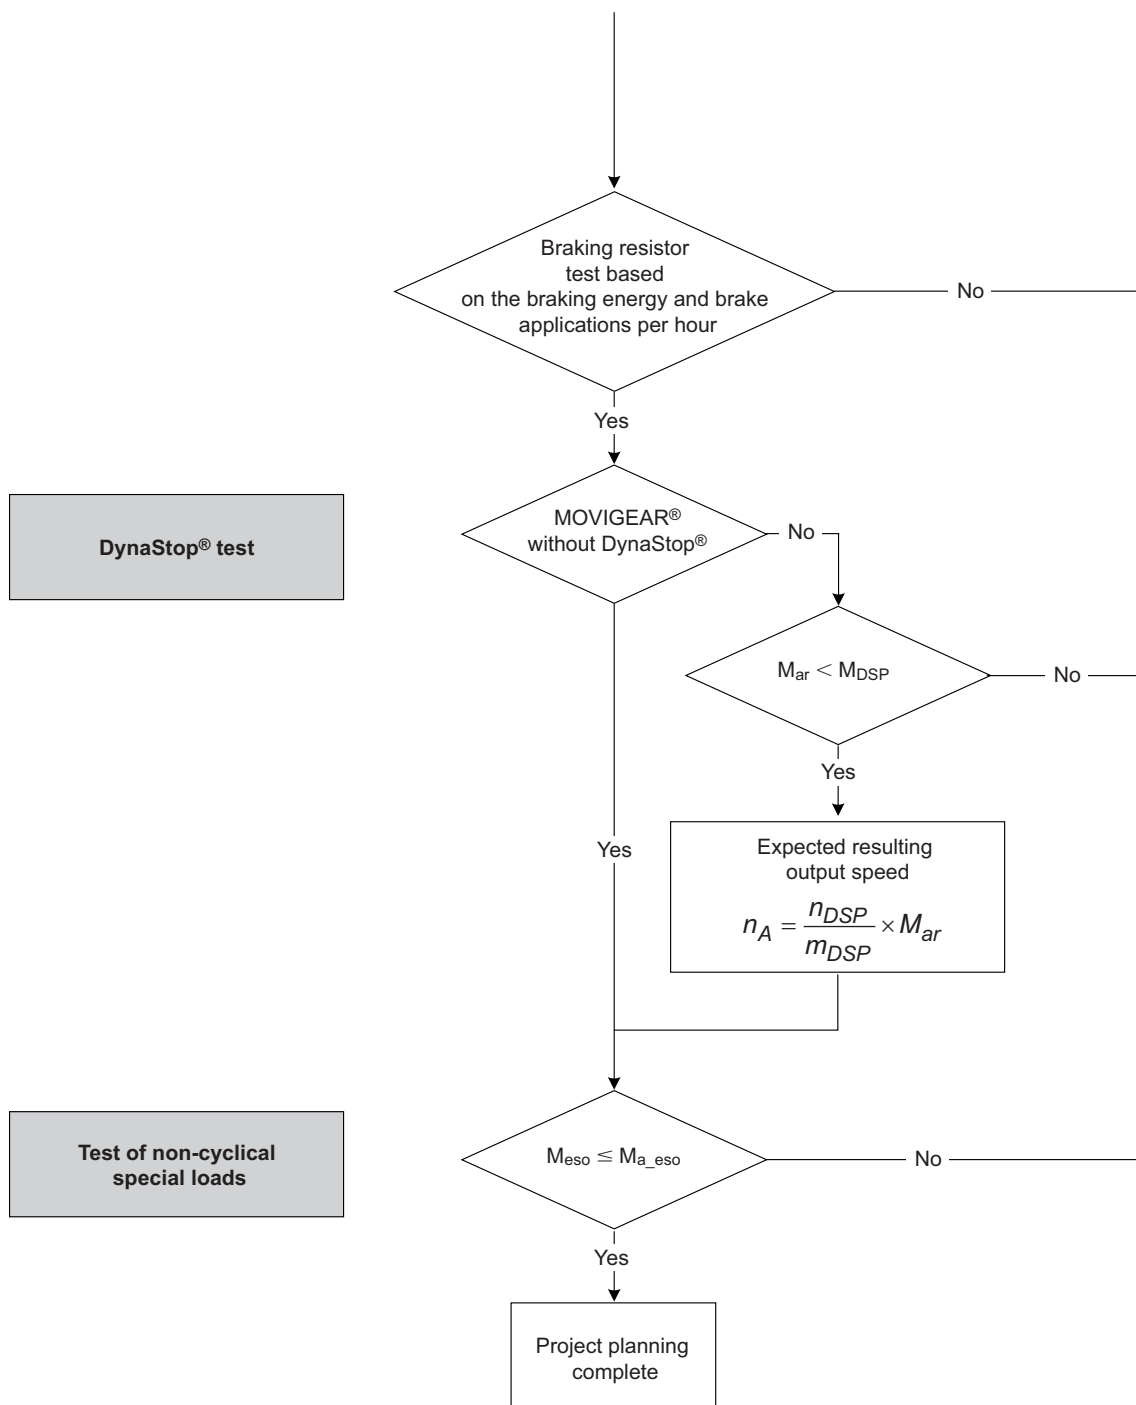

25222432907

25887130/EN – 11/2018


### 10.3.2 Drive selection using the example of a roller conveyoyr

#### Description of the application

This chapter illustrates the selection of a MOVIGEAR® performance drive unit using the example of a roller conveyoyr for transporting wooden pallets with the following specifications:

Load weight	m	2500 kg
Conveying speed	v	22 m/min
Positioning speed		5 m/min
Acceleration	a	0.4 m/s <sup>2</sup>
Number of rollers		8
Efficiency of the application with rollers	$\eta_{app}$	0.7
Roller diameter	D	140 mm
Lever arm of the rolling friction (wood/steel)	f	1.2
Bearing diameter	d	28 mm
Bearing friction value	$\mu_{bearing}$	0.005
Switching frequency		6 times/hour
Maximum external force at standstill	$F_{ext}$	800 N


The following figure shows a schematic illustration:

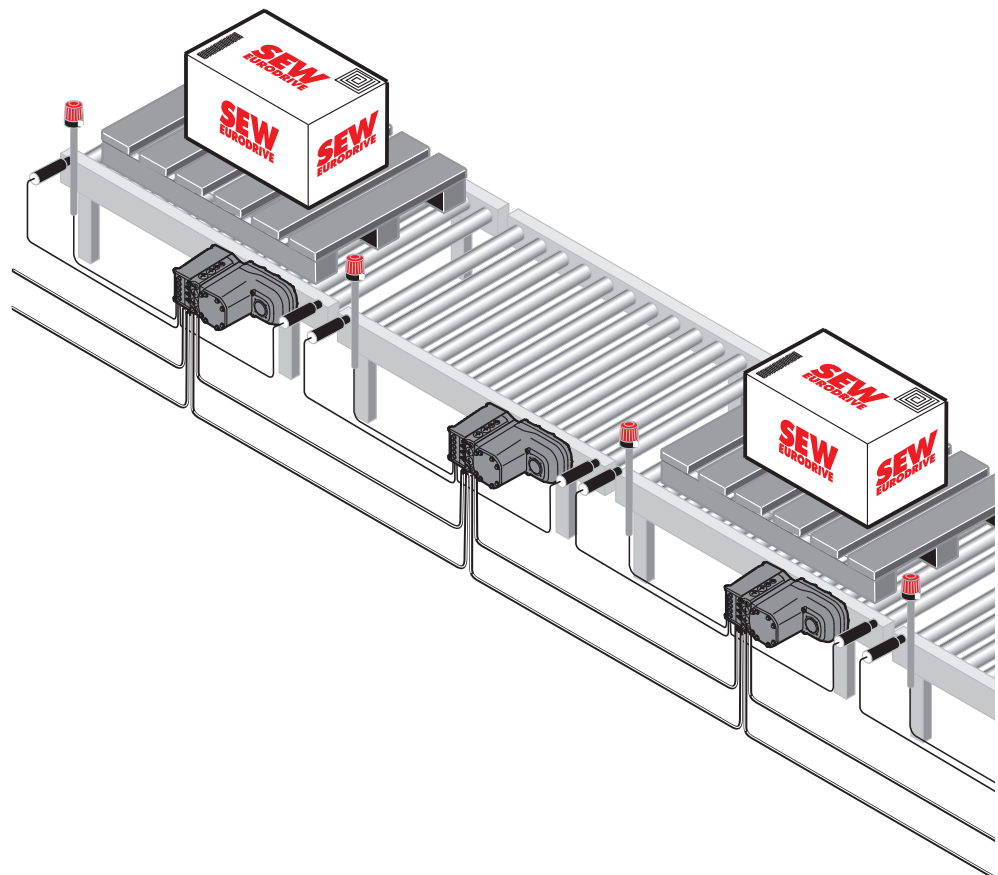

25283066507

### Calculating the application

The travel profile consists of the 3 travel sections acceleration, constant movement, and deceleration.

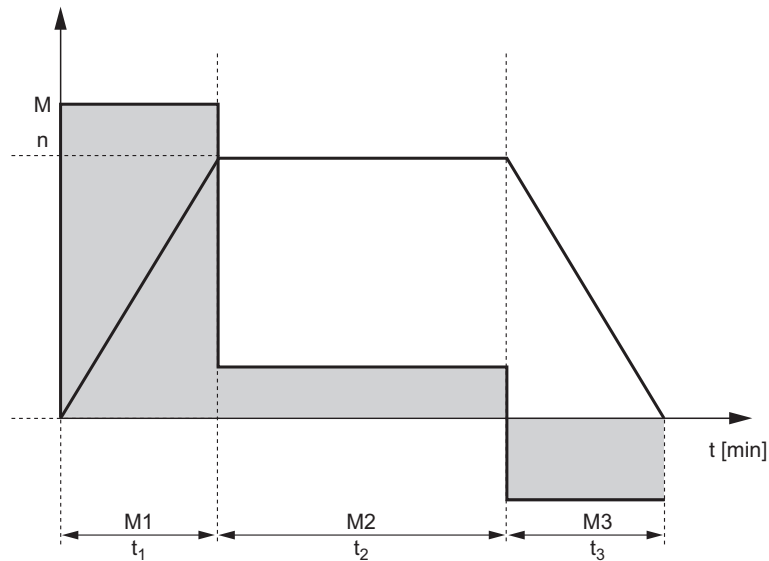

25222494347

The following table shows the calculations for the application that are required in order to determine the MOVIGEAR® drive units:

Calculation	
Static travel resistance	$F_R = \mu \times m \times g$ $\mu = \left[ \frac{2}{D} \times \left( \mu_{bearing} \times \frac{d}{2} + f \right) + c \right]$ $\mu = \left[ \frac{2}{140mm} \times \left( 0.005 \times \frac{28mm}{2} + 1.2 \right) + 0 \right]$ $\mu = 0.01814$ $F_R = 0.01814 \times 2500kg \times 9.81$ $F_R = 445N$ <p style="text-align: right;">25222496907</p>
Dynamic travel resistance	$F_{Dyn} = m \times a$ $F_{Dyn} = 2500kg \times 0.4 m/s^2$ $F_{Dyn} = 1000N$
Torque in range M1	$M_1 = \frac{(F_R + F_{Dyn}) \times D}{2 \times \eta}$ $M_1 = \frac{(445N + 1000N) \times 0.14m}{2 \times 0.7} = 145.5Nm$
Torque in range M2	$M_2 = \frac{F_R \times D}{2 \times \eta} = 45.5Nm$

Calculation	
Torque in range M3	$M_3 = \left( \frac{F_R}{\eta} - F_{Dyn} \times \eta \right) \times \frac{D}{2}$ $M_3 = \left( \frac{445N}{0.7} - 1000 \times 0.7 \right) \times \frac{0.14m}{2} = -4.5Nm$
Output speed	$n_{amin} = \frac{v_{min}}{\pi \times D} = \frac{5 m/min}{\pi \times 0.14m} = 11.4 min^{-1}$ $n_{amax} = \frac{v_{max}}{\pi \times D} = \frac{22 m/min}{\pi \times 0.14m} = 50.0 min^{-1}$

### Selecting the drive unit MOVIGEAR® performance

Observe the following procedure when selecting the drive unit MOVIGEAR® performance:

1. Which torque class (size) is required?

**Requirement:** The maximum possible startup torque of the drive unit MOVIGEAR® performance must be higher than the maximum application torque:

$$M_{\max} \leq M_{\text{apk}}$$

Due to the application calculations, the maximum application torque is  $M_{\max} = 145$  Nm

MGF..2-...-C drive units with  $i > 10.37$  meet these requirements.

**Result:** A MOVIGEAR® of torque class MGF..2 is selected.

2. Selecting the ratio with the output speed:

**Requirement:** The application calculations result in an output speed of  $n_a = 50 \text{ min}^{-1}$ . To achieve a high setting range and an optimum efficiency, the required output speed should be achieved as precisely as possible at an input speed of  $n_e = 2000 \text{ min}^{-1}$ .

**Result:** The drive with a ratio of  $i_{\text{tot}} = 37.24$  and an output speed of  $n_a = 53.7$  at  $n_e = 2000 \text{ min}^{-1}$  is selected from the table in chapter "Technical data" > "Selection tables":

MGF..2-...-C									
	$n_a$	$n_a$	$M_a$	$M_{\text{apk}}$			$M_{a_{\text{eso}}}$	$i_{\text{tot}}$	Weight
	at	at	at	at	at	at			
	$n_e =$ 50 $\text{min}^{-1}$	$n_e =$ 2000 $\text{min}^{-1}$	$n_e =$ 500 to 2000 $\text{min}^{-1}$	$n_e =$ 200 to 1500 $\text{min}^{-1}$	$n_e =$ 1750 $\text{min}^{-1}$	$n_e =$ 2000 $\text{min}^{-1}$			
	$\text{min}^{-1}$	$\text{min}^{-1}$	Nm	Nm	Nm	Nm	Nm		kg
2-stage	14.8	593.5	13	40	30	22	65	3.37	15
	...	...	...	...	...	...	...	...	
	...	...	...	...	...	...	...	...	
	...	...	...	...	...	...	...	...	
3-stage	1.8	71.3	113	220	220	185	330	28.07	16
	1.5	60.6	133	220	220	218	330	33.02	
	1.3	53.7	149	220	220	220	330	37.24	
	1.2	47.4	169	220	220	220	330	42.19	
	1.1	44.4	181	220	220	220	330	45.03	
	1.0	38.8	200	220	220	220	330	51.51	
	0.9	36.2	200	220	220	220	330	55.25	



3. Checking the setting range and minimum speed

Setting range 5 m/min: 22 m/min  $\approx$  1:4.4.

This means the standard setting range of 1:50 is sufficient. The option /AZ1Z (multi-turn encoder with MOVILINK® DDI connection) needs not be selected.

$n_a$  at  $n_e$  40 min<sup>-1</sup> = 1.1 min<sup>-1</sup> <  $n_{min}$  = 11.4 min<sup>-1</sup>.

4. Thermal check of MOVIGEAR®:

**Requirement:** In order to avoid thermal problems, the effective torque of the application must be smaller than the continuous output torque of the MOVIGEAR® drive unit:  $M_{eff} < M_a$

$$t_1 = t_3 = \frac{v}{a} = \frac{22 \text{ m/min}}{0.4 \frac{\text{m}}{\text{s}^2} \times 60} = 0.92 \text{ s}$$

$$t_2 = 10 \text{ min} \times 60 \frac{\text{s}}{\text{min}} - t_1 - t_3 = 598.16 \text{ s}$$

$$M_{eff} = \sqrt[2]{\frac{t_1 \times |M_1|^2 + t_2 \times |M_2|^2 + t_3 \times |M_3|^2}{t_1 + t_2 + t_3}}$$

$$M_{eff} = \sqrt[2]{\frac{0.92 \text{ s} \times |145.5 \text{ Nm}|^2 + 598.16 \text{ s} \times |45.5 \text{ Nm}|^2 + 0.92 \text{ s} \times |-4.5 \text{ Nm}|^2}{0.92 \text{ s} + 598.16 \text{ s} + 0.92 \text{ s}}} = 45.1 \text{ Nm}$$

25291306891

The application calculation results in an effective torque of  $M_{eff} = 45.1 \text{ Nm}$ . The continuous output torque of the selected MOVIGEAR® drive unit is  $M_a$  at  $n_e$  2000 min<sup>-1</sup> = 149 Nm.

If applicable, observe derating factors (derating for installation altitude and ambient temperature).

**Result:** The requirements are met.

5. Checking the braking resistance

Calculating the regenerative braking power during deceleration:


$$P_{brake} = \left| \frac{1}{2} \times \frac{M_3 \times n_3}{9.55} \right|$$

$$P_{brake} = \left| \frac{1}{2} \times \frac{4.5 \text{ Nm} \times 50 \frac{1}{\text{min}}}{9.55} \right| = 11.8 \text{ W}$$

Proceed according to chapter "Regenerative load capacity – integrated braking resistor".

### 10.3.3 Regenerative load capacity of the integrated braking resistor

The following diagram shows the load capacity per braking operation of the BW1 braking resistor integrated in MOVIGEAR® as standard:

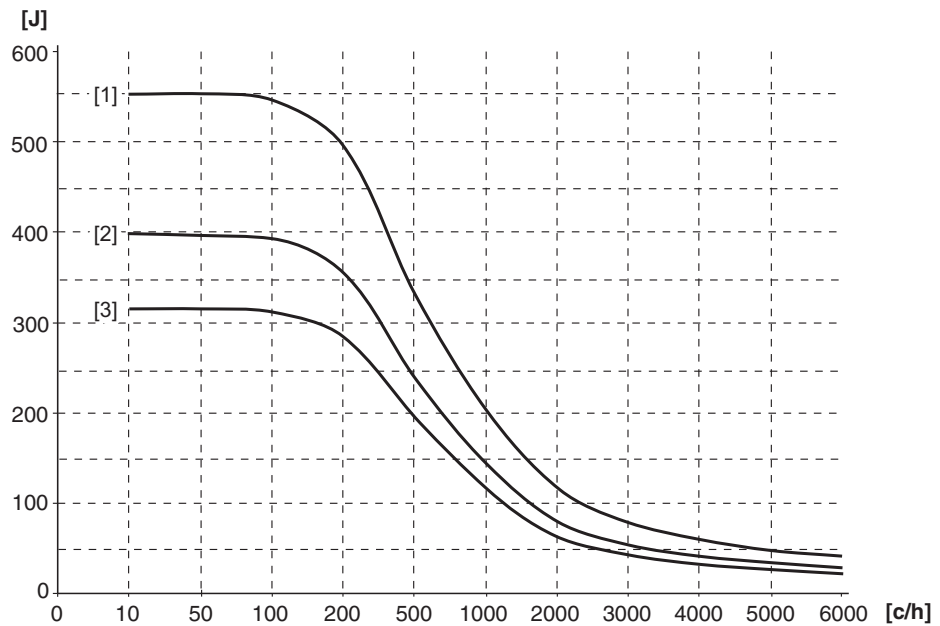

25291390987

- [1] Brake ramp 10 s
- [2] Brake ramp 4 s
- [3] Brake ramp 0.2 s
- c/h Cycles/hour

#### Calculation example

The known values are:

- Average braking power: 11.8 W
- Brake ramp: 0.92 s
- 6 brake applications per hour

Calculating the energy from the power of the brake ramp:  
 $W = P \times t = 11.8W \times 0.92s = 10.9J$

The specified brake ramp in seconds refers to a speed change of 3000 min<sup>-1</sup>.

Calculation of the brake ramp for MOVIGEAR®:  $a_{\text{down}} = 3000 \text{ min}^{-1} \times 0.92 \text{ s} / 1863 \text{ min}^{-1} = 1.5 \text{ s}$ .

For the brake ramp of 1.5 s, you can use brake ramp [3] (0.2 s) in the diagram. Use the characteristic curve with the shorter brake ramp because a shorter brake ramp means more braking energy.

The diagram permits 310 J of braking energy for the 0.2 s brake ramp at 6 cycles per hour. In this case, the required 10.9 J can be dissipated via BW1.

## 10.4 DynaStop® – The electrodynamic deceleration function

### 10.4.1 Functional description

#### INFORMATION



For a functional description of DynaStop® refer to chapter "Operation" > "DynaStop®"

### 10.4.2 Checking whether DynaStop® can be used

#### Requirement:

To use DynaStop®, the retrodriving torque  $M_{ar}$  must be smaller than the maximum deceleration torque  $M_{DSP}$ :

$$M_{ar} < M_{DSP}$$

#### Calculating the retrodriving torque:

Known values of the application:

$$F_{ex} = 800 \text{ N}$$

$$F_R = 445 \text{ N}$$

$$M_{ar} = (F_{ex} - F_R) \times \eta \times \frac{D}{2}$$

$$M_{ar} = (800 \text{ N} - 445 \text{ N}) \times 0.7 \times \frac{0.14 \text{ m}}{2} = 17 \text{ Nm}$$

#### Result:

In the application, an MGF2 unit with  $i_{tot} = 37.24$  is used.

The maximum deceleration torque  $M_{DSP}$  143 Nm at  $n_{DSP}$  3.08 min<sup>-1</sup> for this design can be found in chapter "Technical data and dimension drawings" > "Deceleration torques DynaStop®":

The retrodriving torque  $M_{ar}$  is smaller than the maximum deceleration torque. This means DynaStop® can be used:

$$M_{ar} < M_{DSP}$$

$$17 \text{ Nm} < 143 \text{ Nm}$$

#### Checking the application velocity:

$$n_A = \frac{n_{DSP}}{M_{DSP}} \times M_{ar}$$

$$n_A = \frac{3.08 \frac{1}{\text{min}}}{143 \text{ Nm}} \times 17 \text{ Nm} = 0.37 \frac{1}{\text{min}}$$

$$v = n_a \times D \times \pi = 0.37 \frac{1}{\text{min}} \times 0.14 \times \pi = 0.16 \frac{\text{m}}{\text{min}}$$

25295191435

#### Result:

Due to the external force, the velocity for the application example is 0.16 m/min.

## 11 Technical data and dimension sheets

### 11.1 Conformity

#### 11.1.1 CE marking

- Low voltage directive:

The documented units series fulfills the regulations of the low voltage directive 2014/35/EU.

- Electromagnetic compatibility (EMC):

The units are designed for use as components for installation in machinery and systems. They comply with the EMC product standard EN 61800-3 "Variable-speed electrical drives". Provided that the installation notes are followed, the requirements for CE marking of the entire machine/system equipped with these units on the basis of the EMC Directive 2014/30/EU are met. For detailed information about EMC-compliant installation, refer to the publication "Electromagnetic Compatibility in Drive Technology" from SEW-EURODRIVE.



The CE mark on the nameplate represents conformity with the Low Voltage Directive 2014/35/EU and the EMC Directive 2014/30/EU.

#### 11.1.2 UL approval (in preparation)



The certification mark UL Listed on the nameplate confirms the UL and cUL approval (USA). cUL is equal to the approval according to CSA.

#### 11.1.3 EAC



The documented unit series fulfills the requirements of the technical regulations of the Customs Union of Russia, Kazakhstan, and Belarus.

The EAC marking on the nameplate certifies the conformity with the safety requirements of the Custom Union.

#### 11.1.4 UkrSEPRO (Ukrainian Certification of Products)



The UkrSEPRO mark on the nameplate certifies adherence to the technical regulations of Ukraine for the documented unit series.

#### 11.1.5 RCM approval



The RCM approval has been granted for the documented unit series.

The RCM mark on the nameplate certifies the conformity with ACMA (Australian Communication and Media Authority).

## 11.2 General information

### 11.2.1 Power and torque ratings

The power and torque ratings listed in this documentation refer to mounting position M1 and similar mounting positions in which the input stage is not completely submerged in oil. In addition, the values are based on standard versions with standard lubrication under normal ambient conditions.

### 11.2.2 Speed ratings

The specified output speeds are recommended values. You can calculate the output speed based on the speed of the motor and the gear unit ratio.

### 11.2.3 Noise levels

All MOVIGEAR® units are well within the maximum permissible noise levels set forth in ISO 8579-1 for gear units and EN 60034-9 for motors.

### 11.2.4 Paint

MOVIGEAR® units are coated with "blue-gray" (RAL 7031 according to DIN 1843) machine paint as standard. Special paintings are available on request.

### 11.2.5 Surface and corrosion protection

All drive units can also be supplied with special surface protection for applications in extremely humid or chemically aggressive environments upon request.

### 11.2.6 Weight information

Note that all weights listed in this catalog are calculated without the lubricant fill. The weights vary according to design and size. The lubricant fill depends on the mounting position selected, which means that in this case no universally applicable information can be given. Refer to chapter "Design and operating notes" > "Lubricants" for recommended lubricant fill quantities depending on the mounting position. For the exact weight, refer to the order confirmation.

### 11.2.7 Air admission and accessibility

When installing the driven machine, make sure there is enough space in axial and radial direction for a sufficient supply of cooling air and unobstructed heat dissipation.

### 11.3 Technical data

#### 11.3.1 General technical data of MOVIGEAR® performance

Type MOVIGEAR® performance		MGF..2-.-C	MGF..4-.-C	MGF..4-.-C/XT <sup>1)</sup>
Torque class	M	200 Nm	400 Nm	
Nominal line voltage Permitted range	$V_{line}$	3 x AC 380 V -5% to AC 500 V +10%		3 x AC 400 V -5% to AC 500 V +10%
Line frequency	$f_{line}$	50 – 60 Hz ± 10%		
Nominal line current	$I_{line}$	1.8 A	2.8 A	3.7 A
	$I_{max}$	5.1 A	8.2 A	10.7 A
Nominal output current of the electronics cover	$I_{N\ inverter}$	2.0 A (DFC..-0020..)	3.2 A (DFC..-0032..)	4.0 A (DFC..-0040..)
Nominal motor current	$I_N$	2.0 A	3.1 A	3.7 A
Motor efficiency		89.0% ± IE5	92.4% ± IE5	94.0% ± IE5
Overload capacity		300% $I_N$ ELSM® control mode: 150%		
Current carrying capacity of terminals		See operating instructions, chapter "Electrical Installation / Installation instructions / Permitted cable cross section of terminals"		
Motor's mass moment of inertia	$J_{mot}$	$7.64\text{ kgm}^2 \times 10^{-4}$	$23.30\text{ kgm}^2 \times 10^{-4}$	$30.40\text{ kgm}^2 \times 10^{-4}$
PWM frequency		4/8/16 kHz		
Interference immunity		EN 61800-3; 2. Environment (industrial environment)		
Interference emission		EN 61800-3 category C3		
Proof of mechanical strength		According to DIN EN 60721-3-3/-5, class 3M5, 5M1		
Degree of protection	IP	Standard: IP65 according to EN 60529 (MOVIGEAR® housing closed and all cable entries sealed)		
Operating mode		S1, DB (EN 60034-1)		
Type of cooling		Natural cooling to DIN 41751 and EN 61800-5-1		
Signaling functions		Display elements on housing to indicate the unit state		
Minimal braking resistance value	$R_{BW\_min}$	100 Ω		
Continuous power brake chopper		550 W	900 W	900 W
Pollution class		2 in accordance with IEC 60664-1		
Ambient temperature		See chapter "Environmental conditions"		
Overvoltage category		III in accordance with IEC 60664-1		

Type MOVIGEAR® performance		MGF..2-.-C	MGF..4-.-C	MGF..4-.-C/XT <sup>1)</sup>
<b>Installation altitude</b>	h	Up to $h \leq 1000$ m without restrictions. The following restrictions apply to heights $> 1000$ m: <ul style="list-style-type: none"> <li>• From 1000 m to max. 3800 m: <math>I_N</math> reduction by 1% per 100 m</li> <li>• From 2000 m to max. 3800 m: To maintain protective separation and the air gaps and to comply with creepage distances according to EN 61800-5-1, an overvoltage protection device must be connected upstream to reduce the overvoltages from category III to category II.</li> </ul>		
<b>Required preventive measures</b>		Grounding the device		

1) In preparation

### 11.3.2 Environmental conditions


Environmental conditions	
<b>Climatic requirements</b>	<ul style="list-style-type: none"> <li>• Extended storage: EN 60721-3-1 class 1K2 ambient temperature <math>-25</math> °C to <math>+70</math> °C</li> <li>• Transportation: EN 60721-3-2 class 2K3 ambient temperature <math>-25</math> °C to <math>+70</math> °C</li> <li>• Operation (fixed installation, weatherproof): EN 60721-3-3 class 3K3 ambient temperature <math>-25</math> °C to <math>+60</math> °C Non-condensing, no moisture condensation. <math>I_{N\ motor}</math> reduction: 3% <math>I_N</math> per K at <math>40</math> °C to <math>60</math> °C</li> </ul>
<b>Chemically active substances</b>	<ul style="list-style-type: none"> <li>• Extended storage: EN 60721-3-1 class 1C2</li> <li>• Transportation: EN 60721-3-2 class 2C2</li> <li>• Operation (fixed installation, weatherproof): EN 60721-3-3 class 3C2</li> </ul>
<b>Mechanically active substances</b>	<ul style="list-style-type: none"> <li>• Extended storage: EN 60721-3-1 class 1S1</li> <li>• Transportation: EN 60721-3-1 class 2S1</li> <li>• Operation (fixed installation, weatherproof): EN 60721-3-3 class 3S1</li> </ul>

25887130/EN – 11/2018

### 11.3.3 Derating factors

#### Derating depending on the ambient temperature

The following figure shows the  $I_N$  reduction depending on the ambient temperature:

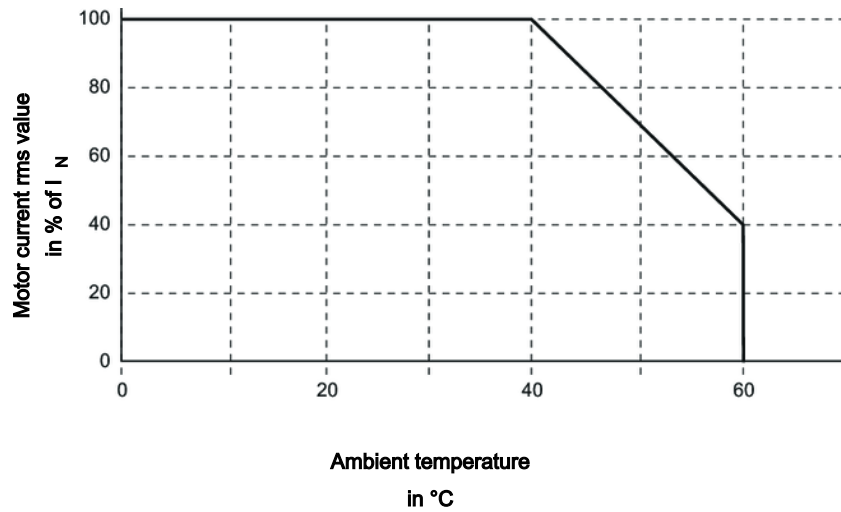

25580747147

$I_N$  reduction: 3%  $I_N$  per K at 40 °C to 60 °C

#### Derating depending on the installation altitude

Observe the derating according to chapter "Mechanical installation" > "Setting up the drive unit" > "Derating depending on the installation altitude".

#### Notes

### INFORMATION



Derating is based on typical operating conditions with a supply voltage of 24 V (sensor supply, input voltage of STO input).

### 11.3.4 Current carrying capacity of terminals and plug connectors

Current carrying capacity of terminals and plug connectors		
Line terminals	X1	24 A (max. loop-through current)
Control terminals	X9	10 A (max. loop-through current)



11.3.5 DC 24 V supply

Input for the independent backup voltage supply of the electronics		
DC 24 V input	24V_IN	$U_{IN} = \text{DC } 24 \text{ V } -10\%/+20\%$ according to EN 61131-2 Current consumption: $I_E \leq 500 \text{ mA}$ , typically 250 mA for electronics <ul style="list-style-type: none"> <li>• Plus up to 100 mA for the safety option</li> <li>• Plus up to 100 mA for 2 digital outputs (50 mA each)</li> <li>• Plus up to 500 mA, for sensor supply</li> </ul>
	0V24_IN	

11.3.6 DC 24 V auxiliary output

Internal voltage supply, only for non-safety-related enable signal via STO input		
DC 24 V output X9	24V_OUT	$U_{OUT} = \text{DC } 24 \text{ V } -10\%/+20\%$ according to EN 61131-2 external-voltage-proof and short-circuit proof Permitted output current: $I_{OUT} \leq 50 \text{ mA}$
	0V24_OUT	

11.3.7 Digital inputs

Digital inputs	
Number of inputs	4 (+ 2)
Input type	PLC-compatible according to EN 61131-2 (digital inputs type 3) DI01 – DI04: $R_i \approx 4.5 \text{ k}\Omega$ , sampling cycle $\leq 2 \text{ ms}$ DIO01 – DIO02: $R_i \approx 4.0 \text{ k}\Omega$ , sampling cycle $\leq 2 \text{ ms}$ Signal level: DC +11 to +30 V = "1" = Contact closed DC -3 to +5 V = "0" = Contact open
Sensor/actuator supply	DC 24 V to EN 61131-2, external-voltage-proof and short-circuit proof
Maximum line length	30 m
Permitted total current for internal supply	250 mA (total of all connected sensors/actuators, maximum individual load: 250 mA)

11.3.8 Digital outputs

Digital outputs	
Number of outputs	(2)
Output type	PLC-compatible in accordance with EN 61131-2, external-voltage-proof and short-circuit proof
Rated current	50 mA (current per output)
Maximum line length	30 m
Permitted total current	100 mA

25887130/EN – 11/2018

## 11.3.9 Technical data for PROFINET IO interface

PROFINET IO	
Manufacturer ID	010A <sub>hex</sub>
Device ID	14 <sub>dec</sub>
Connection technology	M12 plug connector
Supported baud rate	100 MBd (full duplex)
Application protocols	PROFINET IO, HTTP, SNMP, SEW Application Services
Port numbers used	80, 161, 310, PROFINET DCE/RPC Ports (dynamic via end point mapper)
Conformance class	C
Application profiles	PROFIsafe, PROFlenergy
Permitted cable types	Category 5 and higher, class D according to IEC 11801
Maximum cable length (from switch to switch)	100 m
GSD file name	GSDML-V2.33-SEW-MOVI-C-Decentralized-Electronics-YYYYM-MDD-TTTTTT.xml
Bitmap file name	GSDML-010A-000E-MOVI-C-Decentralized-Electronics.bmp

## 11.3.10 Technical data of EtherNet/IP™, Modbus TCP interface

EtherNet/IP™, Modbus TCP	
Manufacturer ID	013B <sub>hex</sub>
Device ID	19 <sub>hex</sub>
Connection technology	M12 plug connector
Supported baud rate	100 MBd/10 MBd (full duplex, half duplex)
Application protocols	EtherNet/IP™, Modbus TCP, HTTP, SNMP, DHCP, SEW Application Services
Port numbers used	67/68, 80, 161, 310, 502, 2222, 44818
Application profiles	CIP Safety (in preparation)
Permitted cable types	Category 5 and higher, class D according to IEC 11801
Maximum cable length (from switch to switch)	100 m
EDS file name	SEW MOVI-C Decentralized Electronics.eds

**11.3.11 Electronics data – Drive safety functions**

The table below shows the technical data for the drive unit relating to the integrated safety technology.

The safe digital inputs comply with type 3 according to IEC 61131-2.

Reference potential for the F\_STO\_P1 and F\_STO\_P2 is F\_STO\_M (contact at terminal X9:11).

	Terminal designation	General electronics data		
		Minimum	Typical	Maximum
Safety contact STO	X9			
<b>Electrical data of inputs F_STO_P1, F_STO_P2</b>				
Input voltage range	X9:1 and X9:21	DC -3 V	DC 24 V	DC 30 V
Input capacitance against STO_M		–	300 pF	500 pF
Input capacitance against GND		–	300 pF	500 pF
Power consumption at DC 24 V	F_STO_P1	–	150 mW	200 mW
	F_STO_P2	–	150 mW	200 mW
	Sum <sup>1)</sup>	–	300 mW	400 mW
Input voltage for ON status (STO)		DC 11 V	–	-
Input voltage for OFF status (STO)		-	–	DC 5 V
Permitted leakage current of the external safety controller		–	–	1 mA
<b>Technical data</b>				
Time from disconnecting the safety voltage until the deactivation of the rotating field		–	1.5 ms	10 ms 2 ms <sup>2)</sup>
Time from connecting the safety voltage until the activation of the rotating field		–	–	110 ms

1) Each drive unit always requires a power consumption of 300 mW.

2) Only when a safety card by SEW-EURODRIVE is used

## 11.3.12 System characteristics of encoder option /AZ1Z

System characteristics of the encoder option	Single-turn resolution (Position resolution per motor revolution)		Multi-turn resolution (Max. counter for complete motor revolutions)		Interface connection:
	16 Bit	65536 inc.	32 Bit	+2147483647 -2147483648	
/AZ1Z Multiturn absolute encoder					MOVILINK® DDI, coaxial



## 11.3.13 Technical data of the CBG.. keypads

Keypad	CBG11A	CBG21A
Part number	28232646	28238133
Interfaces	D-Sub, 9-pin, female (CAN interface) USB 2.0 Mini B, female (PC connection)	
Degree of protection	IP 40 to EN 60529	
Dimensions H x W x D	110 x 65 x 20 mm	100 x 45 x 20 mm

## 11.4 Braking resistors


## 11.4.1 Overview

MOVIGEAR® performance is equipped with a brake chopper. The following table shows their possible use in regenerative mode:

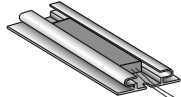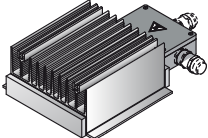Application	Drive unit	Dissipation of regenerative energy
		Brake chopper
Small amount of regenerative energy	MOVIGEAR® performance	Integrated braking resistor 
Medium/large amount of regenerative energy	MOVIGEAR® performance	External braking resistor 

11.4.2 Integrated BW1 braking resistor

The following diagram shows the load capacity of the BW1 braking resistor per braking operation:

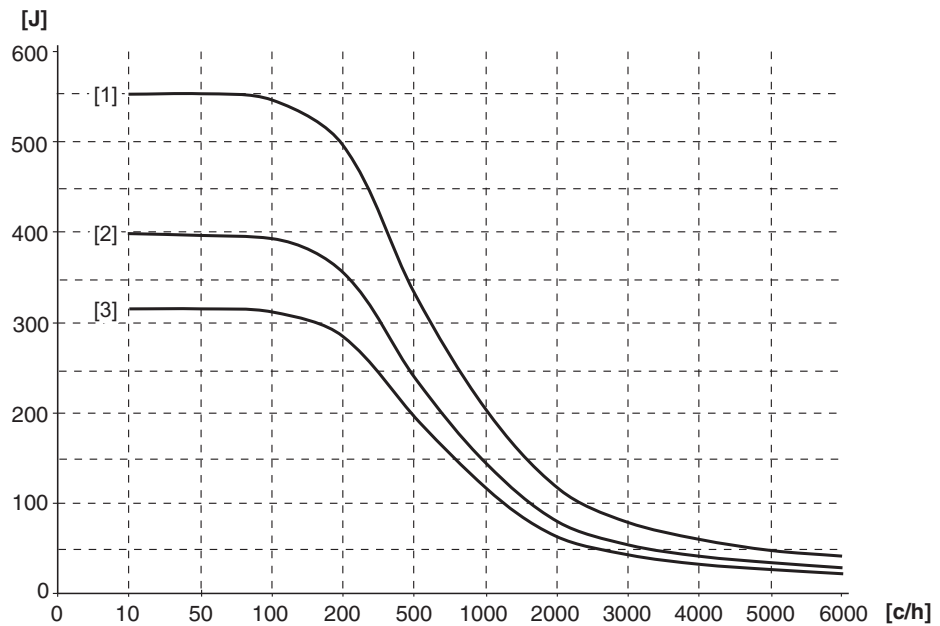

25291390987

- [1] Brake ramp 10 s
- [2] Brake ramp 4 s
- [3] Brake ramp 0.2 s
- c/h Cycles/hour

Calculation example

The known values are:

- Average braking power: 144 W
- Brake ramp: 2 s
- 200 brake applications per hour

Calculating the energy from the power of the brake ramp:

$$W = P \times t$$

$$W = 144 \text{ W} \times 2 \text{ s}$$

$$W = 288 \text{ J}$$

25296909835

For the brake ramp of 2 s, you can use brake ramp [3] (0.2 s) in the diagram. Use the characteristic curve with the shorter brake ramp because a shorter brake ramp means more braking energy.


The diagram permits 290 J of braking energy for the 0.2 s brake ramp and 200 cycles per hour. In this case, the required 288 J can be dissipated via BW1.

## 11.4.3 External braking resistor

The operation with external braking resistor is necessary for applications with a large amount of regenerative energy.


The following table shows the external braking resistors.

## BW...../K-1.5

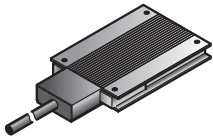

Type	BW100-005/K-1.5	BW150-003/K-1.5
Part number	08282862	08282927
Function	Dissipating the regenerative energy	
Degree of protection	IP65	IP65
Resistance	100 Ω	150 Ω
Power rating in S1, 100% cdf	200 W	100 W
Dimensions W x H x D	252 x 15 x 80 mm	146 x 15 x 80 mm
Cable length	1.5 m	1.5 m
Assigned grids	BS-005 (part number: 0813152X)	

## BW.....-T

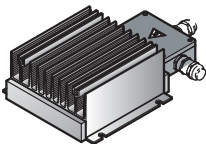


Type	BW150-006-T	BW100-009-T
Part number	17969565	17969573
Function	Dissipating the regenerative energy	
Degree of protection	IP66	IP66
Resistance	150 Ω	100 Ω
Power rating in S1, 100% cdf	600 W	900 W
Dimensions W x H x D	285 x 75 x 174 mm	435 x 75 x 174 mm
Prescribed connection cables	Shielded cables with a temperature resistance of $T_{amb} \geq 90 \text{ °C}$ (194 °F)	
Maximum permitted cable length	15 m	15 m

Type	BW68-006-T	BW68-012-T
Part number	17970008	17970016
Function	Dissipating the regenerative energy	
Degree of protection	IP66	IP66
Resistance	68 Ω	68 Ω
Power rating in S1, 100% cdf	600 W	1200 W
Dimensions W x H x D	285 x 75 x 174 mm	635 x 75 x 174 mm
Prescribed connection cables	Shielded cables with a temperature resistance of $T_{amb} \geq 90 \text{ °C}$ (194 °F)	
Maximum permitted cable length	15 m	15 m

11.4.4 Technical data of BW100-005/K-1.5 and BW150-003/K-1.5

Power diagrams

The following figure shows the rating diagrams of the braking resistors BW100-005/K-1.5, BW150-003/K-1.5:

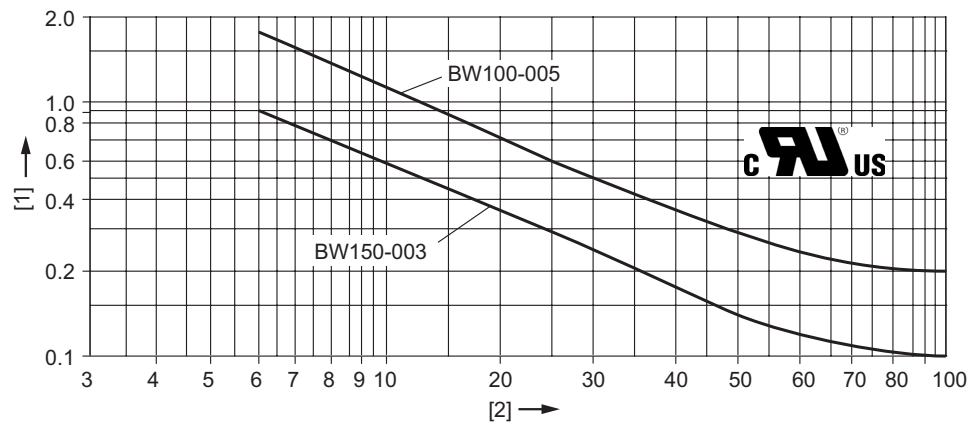


25298658059

- [1] Power in KW
- [2] Cyclic duration factor cdf in %

#### Dimension drawing of BW150-003/K-1.5


The following figure shows the dimensions of the external braking resistor BW150-003/K-1.5:

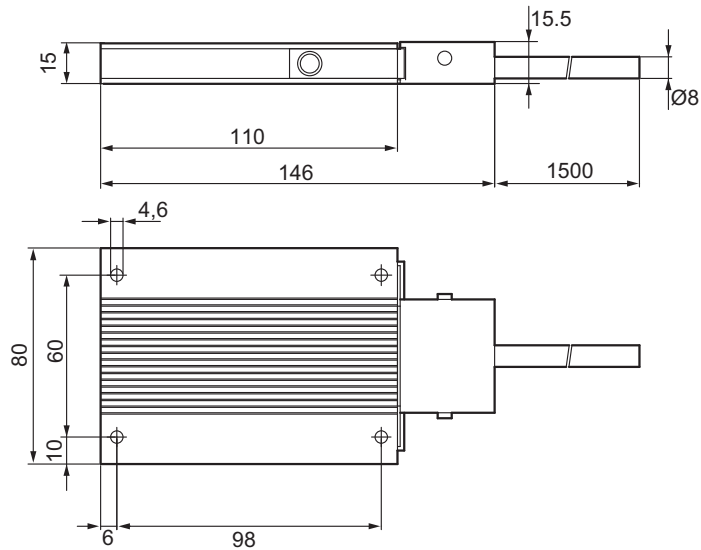

25298773259

#### Dimension drawing of BW100-005/K-1.5

The following figure shows the dimensions of the external braking resistor BW100-005/K-1.5:

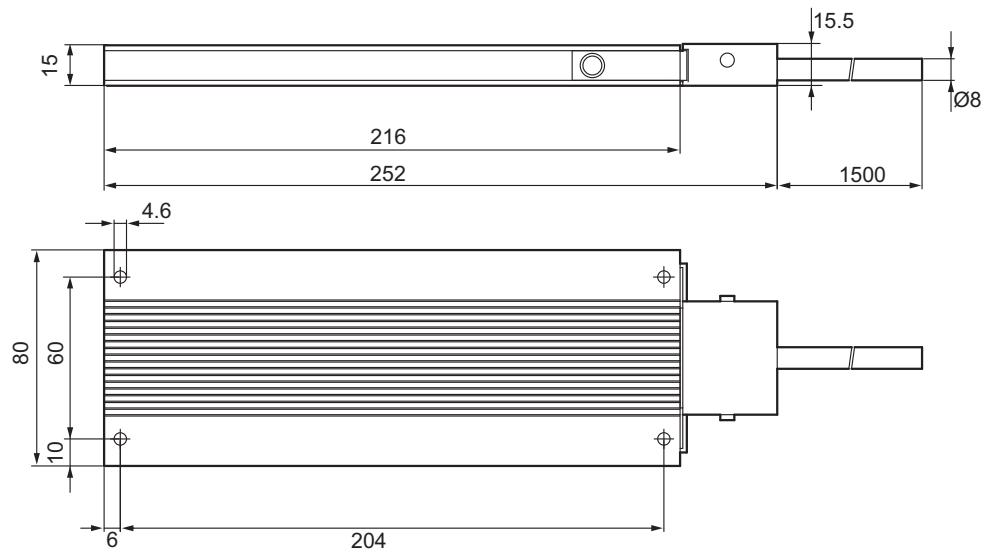


25298780043



**Dimension drawing for the BS-005 protective grid**

The following figure shows the dimensions of the BS-005 protective grid:

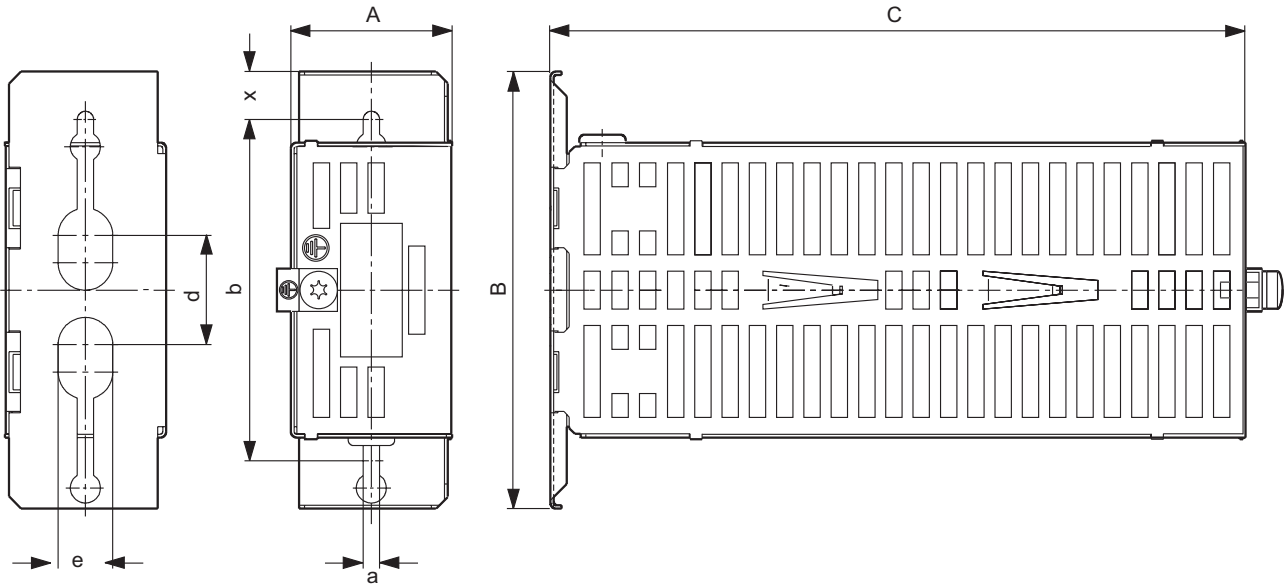


25842294795

Type	Main dimensions in mm			Mounting dimensions mm					Mass kg
	A	B	C	b	d	e	a	x	
BS-005	60	160	252	125	4	20	6	17.5	0.5

**11.4.5 Technical data of BW150-006-T and BW100-009-T**

**Power diagrams**

The following figure shows the rating diagrams of the braking resistors BW150-006-T and BW100-009-T:

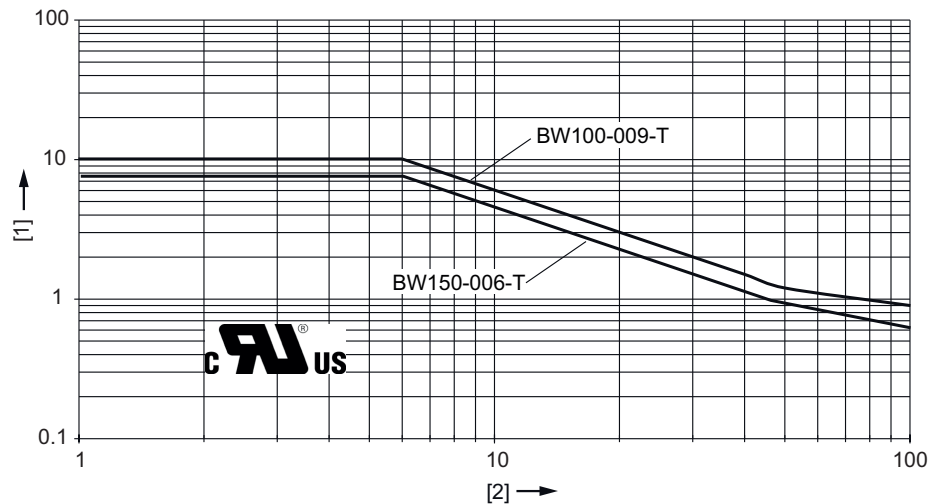


25298798219

- [1] Power in KW
- [2] Cyclic duration factor cdf in %
- ED Cyclic duration factor of the braking resistor, based on a cycle time of 120 s.


#### Dimension drawing of BW150-006-T

The following figure shows the dimensions of the external braking resistor BW150-006-T:

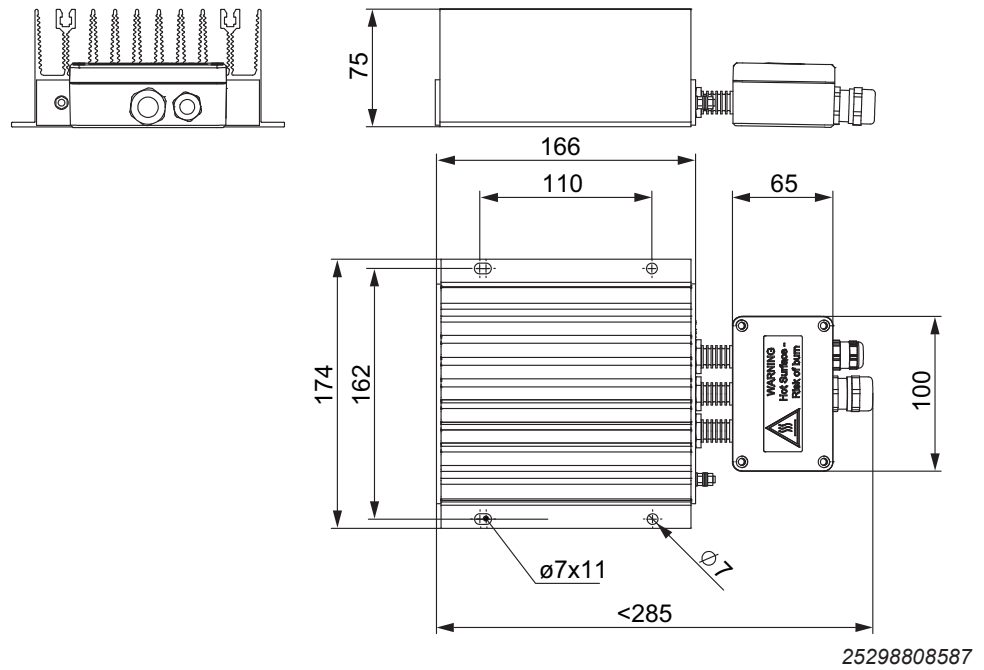


#### Dimension drawing of BW100-009-T

The following figure shows the dimensions of the external braking resistor BW100-009-T:

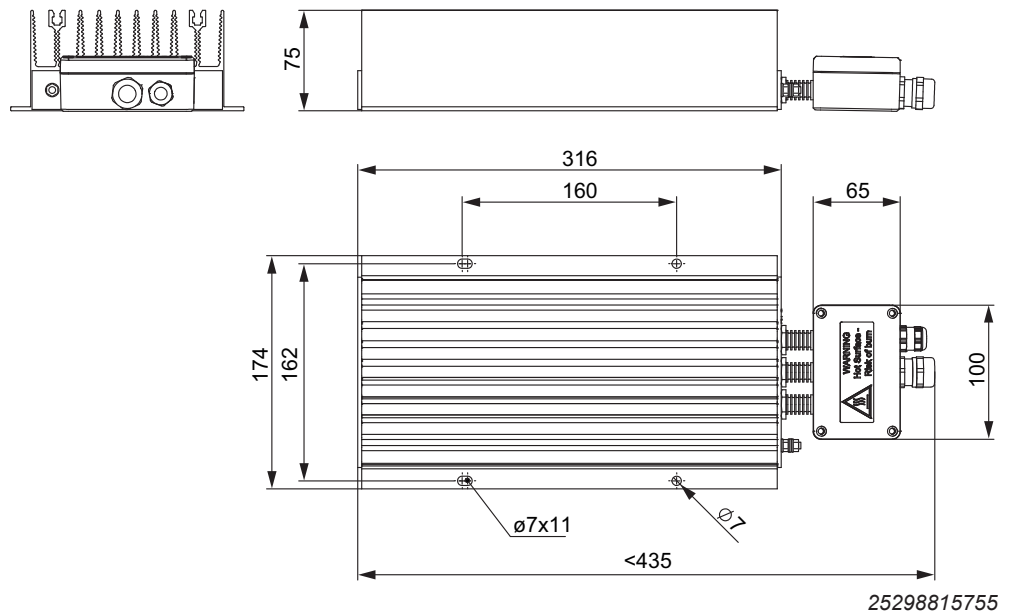

Dimension drawing of BW068-012-T

The following figure shows the dimensions of the external braking resistor BW068-012-T:

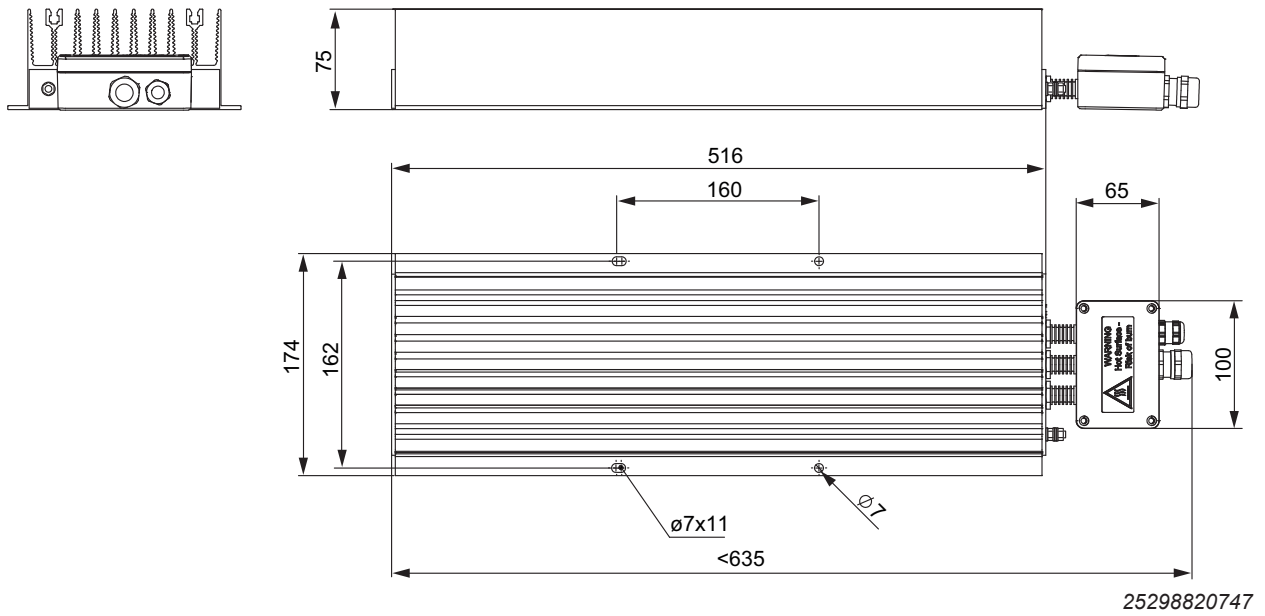


## 11.5 Mounting kit for braking resistor BW...-.../..C

## INFORMATION



- The BW...-.../..C braking resistor must always be mounted and installed by the customer.
- Observe the installation instructions "Braking resistor BW...-.../..C".

The following figure shows the mounting kit for braking resistor BW...-.../..C:

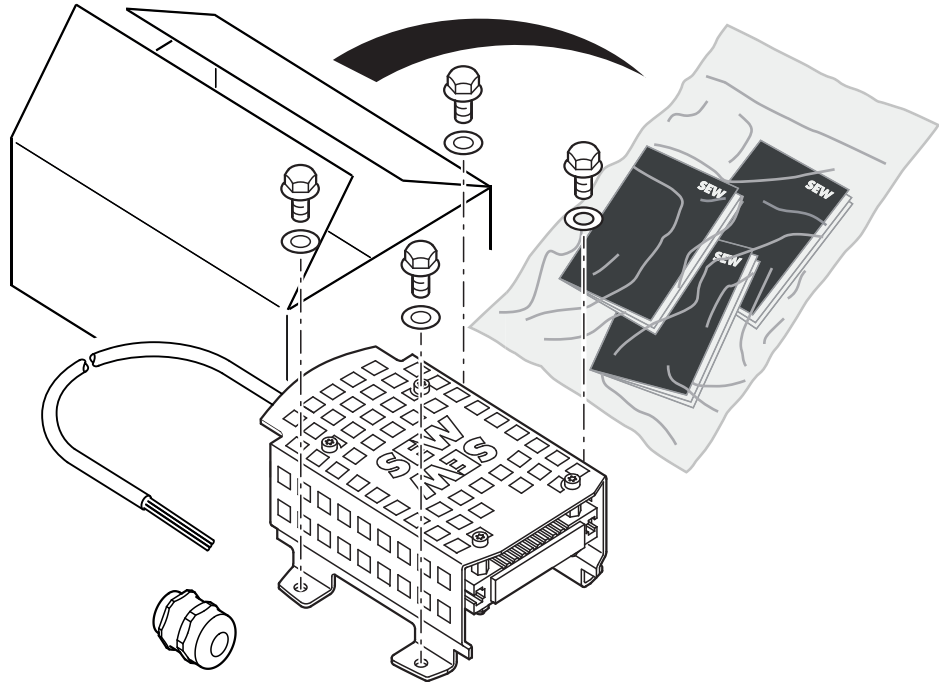

9007224553569547



## 11.5.1 Assignment

Drive unit	Mounting kit	
	Part number	Type
MGF..2.-C	18272886	BW100-001/K-1.5/M2C
	18272908	BW100-002/K-1.5/M2C
MGF..4.-C	18272894	BW100-001/K-1.5/M4C
MGF..4.-C/XT	18272916	BW100-002/K-1.5/M4C

11.5.2 Technical data

Type	BW100-001/.../...	BW100-002/.../...
Nominal continuous power at $T_{amb} \sim 40\text{ °C}$	100 W	200 W
Resistance value $R_{BW}$	100 $\Omega \pm 10\%$	100 $\Omega \pm 10\%$
Design	Flat design	
Connections	3 x AWG 20; l = 150 cm	
Degree of protection (EN 60529)	IP66	
Operating temperature range	-25 to +40 °C	
Type of cooling	Natural convection	
Housing temperature at nominal continuous power at $T_{amb} \sim 40\text{ °C}$	< 300 °C	
Conformity	CE/UL/CSA	
Derating at $T_U > 40\text{ °C}$	5% per 10 K to 60 °C	

#### 11.5.3 Current-carrying capacity

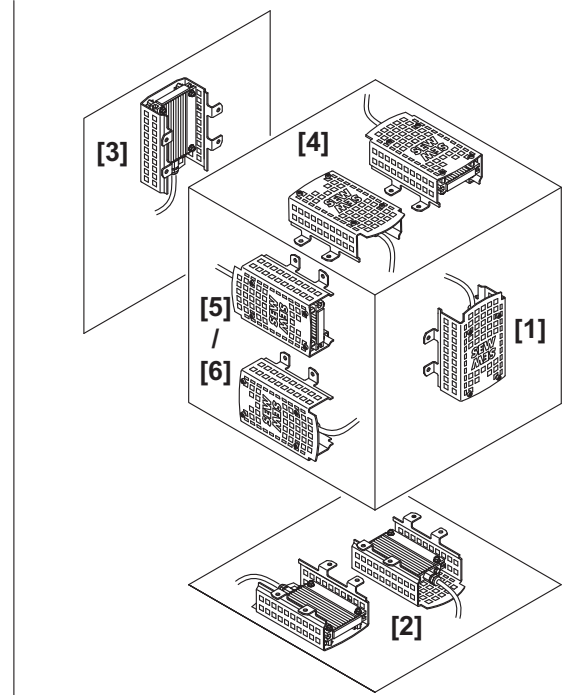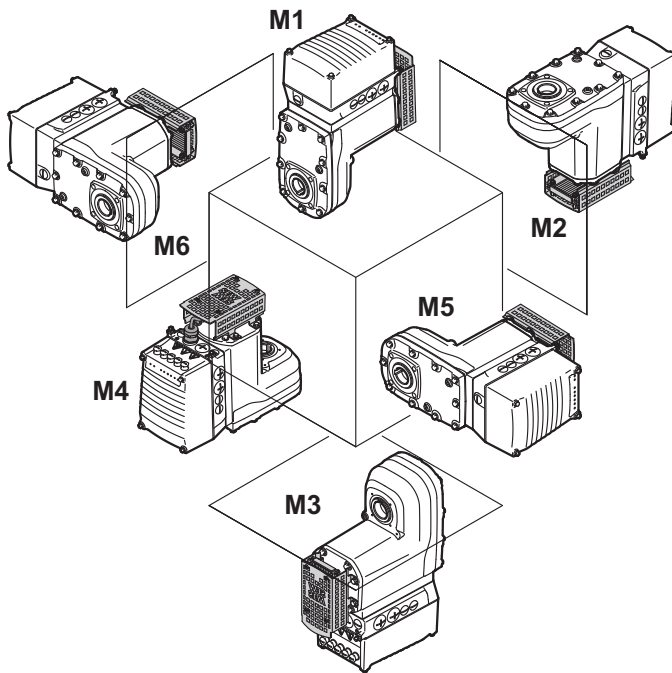

9007224553593099

BW100-001/.../. ..		Load capacity at % cdf in W				
ED	M1 [1]	M2 [2]	M3 [3]	M4 [4]	M5/M6 [5]/[6]	
100%	100	100	100	100	100	
50%	150	150	150	150	150	
25%	250	250	250	250	250	
12%	300	300	300	300	300	
6%	500	500	500	500	500	


cdf = Cyclic duration factor of the braking resistor in relation to a cycle duration TD ≤ 120 s

BW100-002/.../. ..		Load capacity at % cdf in W				
ED	M1 [1]	M2 [2]	M3 [3]	M4 [4]	M5/M6 [5]/[6]	
100%	200	200	200	160	160	
50%	300	300	300	240	240	
25%	500	500	500	400	400	
12%	600	600	600	480	480	
6%	1000	1000	1000	800	800	

cdf = Cyclic duration factor of the braking resistor in relation to a cycle duration TD ≤ 120 s

25887130/EN – 11/2018

11.5.4 Dimension drawing

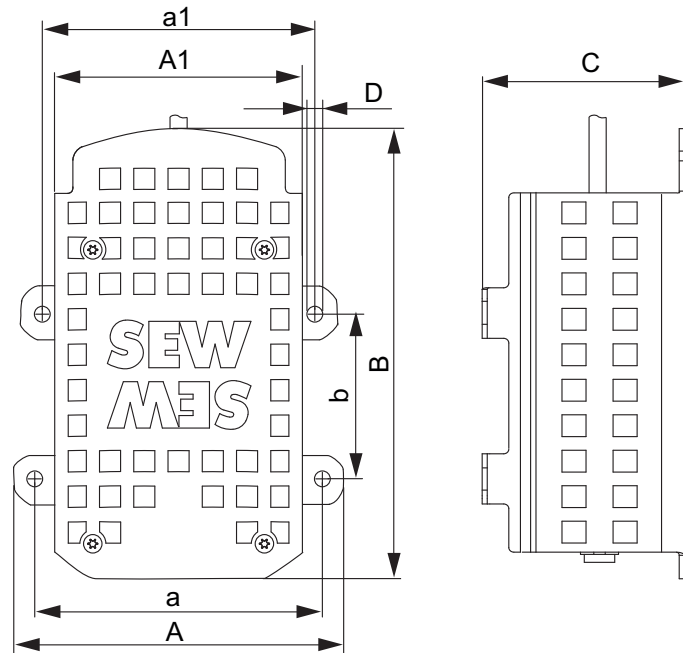

9007224554230283

	A	A1	B	C	D	a	a1	b
	mm	mm	mm	mm	mm	mm	mm	mm
18272886 (BW100-001/K-1.5/M2C)	126.0	89.0	148.2	61.8	7	111.0	106.0	54.7
18272908 (BW100-002/K-1.5/M2C)								
18272894 (BW100-001/K-1.5/M4C)	158.0	94.0	149.0	61.8	7	144.0	142.0	82.0
18272916 (BW100-002/K-1.5/M4C)								

## 11.6 DynaStop® torques

### 11.6.1 Notes


#### INFORMATION



For a functional description of DynaStop® refer to chapter "Operation" > "DynaStop®"

### 11.6.2 Operating range

The following figure depicts the permissible/impermissible operating range of DynaStop®:

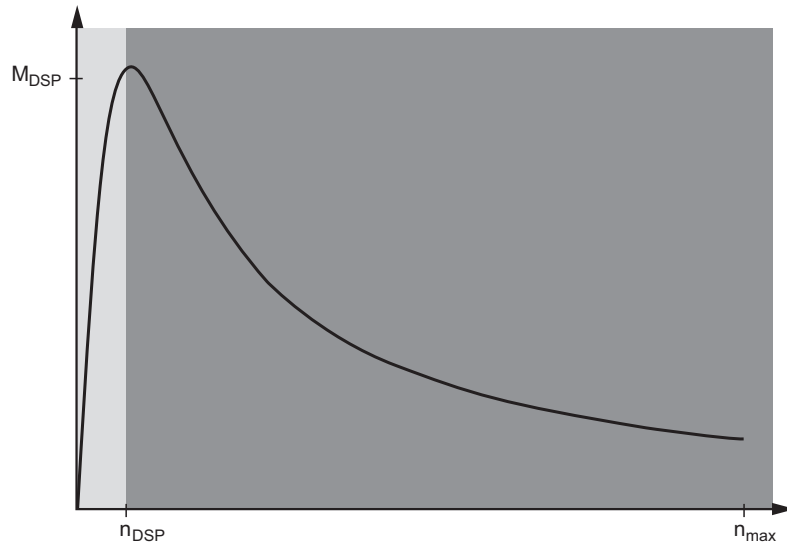

25449728907

- = Operating range of DynaStop®
- = Impermissible operating range of DynaStop®



## 11.6.3 MGF..2-...-C

MGF..2-...-C	$i_{tot}$	DynaStop® torque	
		$M_{DSP}$	at $n_{DSP}$ (gear shaft speed)
		Nm	min <sup>-1</sup>
2-stage	3.37	15	44.63
	4.22	19	35.64
	5.00*	22	30.08
	5.34	23	28.16
	6.25*	28	24.06
	7.00*	31	21.49
	8.24	36	18.25
	9.71	43	15.49
	10.37	46	14.50
	12.14	53	12.39
	13.60*	60	11.06
	16.00	70	9.40
	18.52	81	8.12
	19.81	87	7.59
22.86	101	6.58	
3-stage	28.07	124	5.36
	33.02	145	4.55
	37.24	164	4.04
	42.19	186	3.56
	45.03	198	3.34
	51.51	200	2.92
	55.25	200	2.72

= Preferred gear ratio

\* = Ultimate gear unit ratio

## 11.6.4 MGF..4-...-C

MGF..4-...-C	$i_{tot}$	DynaStop® torque	
		$M_{DSP}$	at $n_{DSP}$ (gear shaft speed)
		Nm	min <sup>-1</sup>
<b>2-stage</b>	3.53*	27	14.12
	4.34*	33	11.49
	4.99	38	9.99
	5.76	44	8.65
	6.34	49	7.86
	7.44*	57	6.70
	7.88	61	6.33
	8.96	69	5.56
	10.97	85	4.54
	12.66	98	3.94
	13.93	107	3.58
	16.36	126	3.05
	17.33	134	2.88
	19.70	152	2.53
	21.82	168	2.28
25.72	198	1.94	
<b>3-stage</b>	28.88	223	1.73
	34.29	264	1.45
	36.61	282	1.36
	42.86	330	1.16
	48.00*	370	1.04
	56.49	400	0.88

= Preferred gear ratio

\* = Ultimate gear unit ratio

## 11.6.5 MGF..4-...C/XT

MGF..4-...C/XT	$i_{tot}$	DynaStop® torque	
		$M_{DSP}$	at $n_{DSP}$ (gear shaft speed)
		Nm	min <sup>-1</sup>
2-stage	3.53*	38	12.65
	4.34*	47	10.29
	4.99	54	8.95
	5.76	62	7.76
	6.34	69	7.05
	7.44*	81	6.00
	7.88	85	5.67
	8.96	97	4.99
	10.97	119	4.07
	12.66	137	3.53
	13.93	151	3.21
	16.36	177	2.73
	17.33	188	2.58
	19.70	213	2.27
	21.82	236	2.05
25.72	278	1.74	
3-stage	28.88	312	1.55
	34.29	371	1.30
	36.61	396	1.22
	42.86	400	1.04
	48.00*	400	0.93
	56.49	400	0.79


= Preferred gear ratio

\* = Ultimate gear unit ratio

## 11.7 Torque curves

### 11.7.1 Control range 1:40

The following figure shows schematic characteristic curves. The tables below list the exact values.

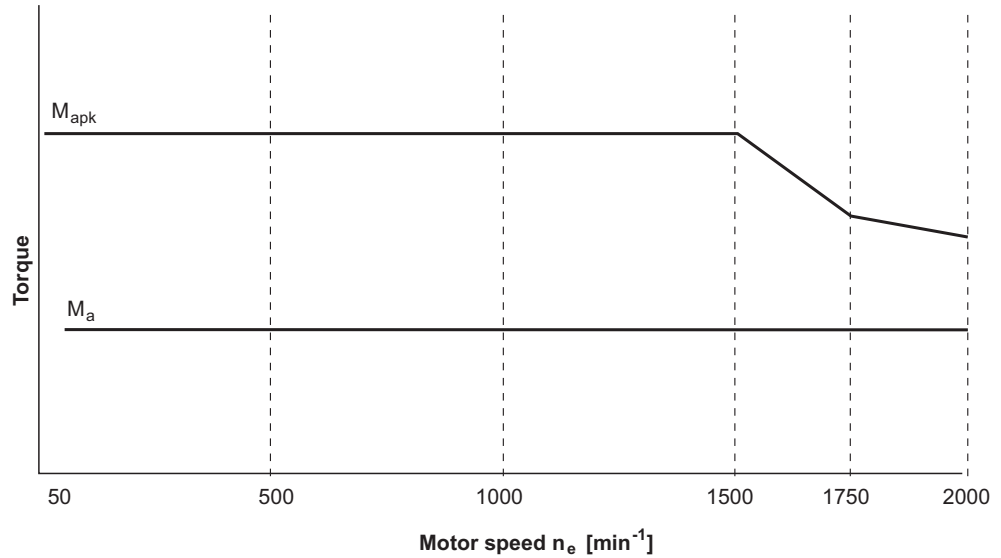

26580422667

### Key

	= Preferred gear ratio
*	= Ultimate gear unit ratio
$M_{apk}$	= Maximum permitted torque for short-time duty. If $M_{apk}$ occurs more often than 10 times per hour, a detailed project planning must be carried out using the SEW Workbench.
$M_{a\_eso}$	= Maximum permitted torque for non-cyclical special loads, maximum 1000 cycles
$M_a$	= Continuous output torque of MOVIGEAR®
$n_a$	= Output speed
$n_e$	= Motor speed

MOVIGEAR® performance MGF..2...-C

MGF..2...-C									
	$n_a$	$n_a$	$M_a$	$M_{apk}$			$M_a$ EmergOff	$i_{tot}$	Weigh t
	at $n_e=$ 50 $min^{-1}$	at $n_e=$ 2000 $min^{-1}$	at $n_e=$ 50 to 2000 $min^{-1}$	at $n_e=$ 50 to 1500 $min^{-1}$	at $n_e=$ 1750 $min^{-1}$	at $n_e=$ 2000 $min^{-1}$			
	$min^{-1}$	$min^{-1}$	Nm	Nm	Nm	Nm	Nm	kg	
2- stage	14.8	593.5	13	40	30	22	65	3.37	16
	11.8	473.9	17	51	38	28	85	4.22	
	10.0	400.0	20	60	45	33	210	5.00*	
	9.4	374.5	21	63	48	35	215	5.34	
	8	320.0	25	75	56	41	225	6.25*	
	7.1	285.7	28	84	63	46	235	7.00*	
	6.1	242.7	33	99	74	54	245	8.24	
	5.1	206.0	39	117	87	64	330	9.71	
	4.8	192.9	42	126	93	68	330	10.37	
	4.1	164.7	49	147	109	80	330	12.14	
	3.6	147.1	55	165	122	90	330	13.6*	
	3.1	125.0	64	192	144	106	330	16.00	
	2.6	108.0	74	220	167	122	330	18.52	
	2.5	101.0	80	220	178	131	330	19.81	
2.2	87.5	92	220	206	151	330	22.86		
3- stage	1.8	71.3	113	220	220	185	330	28.07	17
	1.5	60.6	133	220	220	218	330	33.02	
	1.3	53.7	149	220	220	220	330	37.24	
	1.2	47.4	169	220	220	220	330	42.19	
	1.1	44.4	181	220	220	220	330	45.03	
	1.0	38.8	200	220	220	220	330	51.51	
	0.9	36.2	200	220	220	220	330	55.25	

25887130/EN – 11/2018

## MOVIGEAR® performance MGF..4...-C

MGF..4...-C									
	$n_a$	$n_a$	$M_a$	$M_{apk}$			$M_a$ EmergOff	$i_{tot}$	Weigh t
	at $n_e=$ 50 min <sup>-1</sup>	at $n_e=$ 2000 min <sup>-1</sup>	at $n_e=$ 50 to 2000 min <sup>-1</sup>	at $n_e=$ 50 to 1500 min <sup>-1</sup>	at $n_e=$ 1750 min <sup>-1</sup>	at $n_e=$ 2000 min <sup>-1</sup>			
	min <sup>-1</sup>	min <sup>-1</sup>	Nm	Nm	Nm	Nm	Nm	kg	
2- stage	14.2	566.6	24	73	68	53	147	3.53*	26
	11.5	460.8	30	90	84	66	165	4.34*	
	10.0	400.8	34	102	95	75	420	4.99	
	8.7	347.2	39	117	109	86	450	5.76	
	7.9	315.5	43	129	120	95	470	6.34	
	6.7	268.8	51	153	141	112	515	7.44*	
	6.3	253.8	54	162	150	118	525	7.88	
	5.6	223.2	61	183	170	134	560	8.96	
	4.6	182.3	75	225	208	165	675	10.97	
	3.9	158.0	87	261	241	190	710	12.66	
	3.6	143.6	95	285	265	209	710	13.93	
	3.1	122.2	112	336	311	245	710	16.36	
	2.9	115.4	119	357	329	260	710	17.33	
	2.5	101.5	135	405	374	296	710	19.70	
	2.3	91.7	149	447	415	327	710	21.82	
1.9	77.8	176	475	475	386	710	25.72		
3- stage	1.7	69.3	198	475	475	433	710	28.88	27
	1.5	58.3	235	475	475	475	710	34.29	
	1.4	54.6	250	475	475	475	710	36.61	
	1.2	46.7	293	475	475	475	710	42.86	
	1.0	41.7	328	475	475	475	710	48.00*	
	0.9	35.4	386	475	475	475	710	56.49	


MOVIGEAR® performance MGF..4-...-C/XT<sup>1)</sup>

MGF..4-.../XT (increased torque)									
	$n_a$	$n_a$	$M_a$	$M_{apk}$			$M_a$ EmergOff	$i_{tot}$	Weigh t
	at	at	at	at	at	at			
	$n_e=$ 50 $min^{-1}$	$n_e=$ 2000 $min^{-1}$	$n_e=$ 50 to 2000 $min^{-1}$	$n_e=$ 50 to 1500 $min^{-1}$	$n_e=$ 1750 $min^{-1}$	$n_e=$ 2000 $min^{-1}$	Nm	Nm	kg
2- stage	14.2	566.6	35	105	69	52	147	3.53*	28
	11.5	460.8	43	130	85	65	165	4.34*	
	10.0	400.8	50	150	100	75	420	4.99	
	8.7	347.2	57	171	115	86	450	5.76	
	7.9	315.5	63	189	127	95	470	6.34	
	6.7	268.8	74	222	149	112	515	7.44*	
	6.3	253.8	78	234	158	118	525	7.88	
	5.6	223.2	89	267	179	134	560	8.96	
	4.6	182.3	109	327	219	165	675	10.97	
	3.9	158.0	126	378	253	190	710	12.66	
	3.6	143.6	139	417	279	209	710	13.93	
	3.1	122.2	163	475	327	245	710	16.36	
	2.9	115.4	173	475	347	260	710	17.33	
	2.5	101.5	197	475	394	296	710	19.70	
	2.3	91.7	218	475	436	327	710	21.82	
1.9	77.8	257	475	475	386	710	25.72		
3- stage	1.7	69.3	288	475	475	433	710	28.88	29
	1.5	58.3	342	475	475	475	710	34.29	
	1.4	54.6	366	475	475	475	710	36.61	
	1.2	46.7	400	475	475	475	710	42.86	
	1.0	41.7	400	475	475	475	710	48.00*	
	0.9	35.4	400	475	475	475	710	56.49	

1) In preparation

#### 11.7.2 Extended control range 1:2000 (/AZ1Z option)

The following figure shows schematic characteristic curves. The tables below list the exact values.

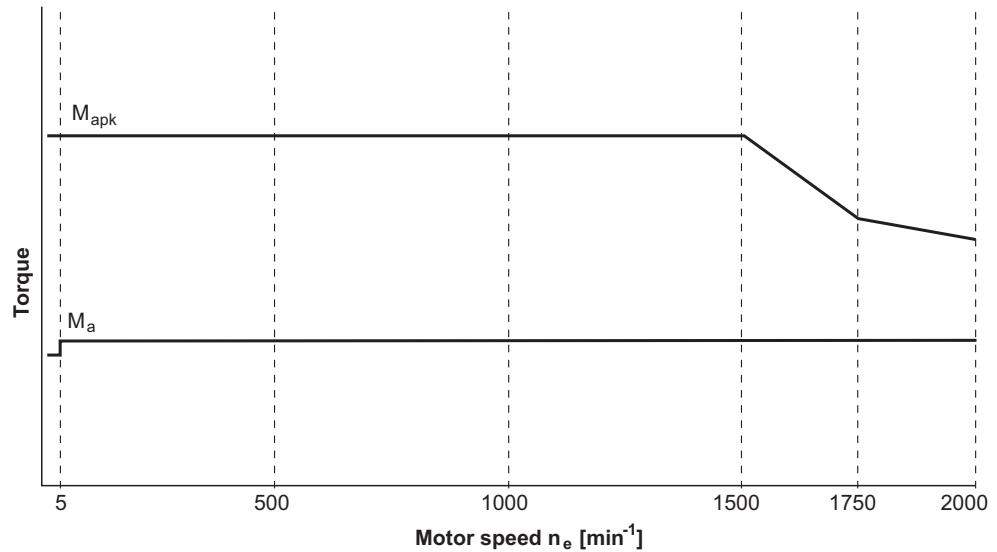

26580479755

#### Key

	=	Preferred gear ratio
*	=	Ultimate gear unit ratio
$M_{apk}$	=	Maximum permitted torque for short-time duty. If $M_{apk}$ occurs more often than 10 times per hour, a detailed project planning must be carried out using the SEW Workbench.
$M_{a\_eso}$	=	Maximum permitted torque for non-cyclical special loads, maximum 1000 cycles
$M_a$	=	Continuous output torque of MOVIGEAR® For motor speeds $n_e < 5$ rpm, you have to reduce the output torque $M_a$ to 90%.
$n_a$	=	Output speed
$n_e$	=	Motor speed



MOVIGEAR® performance MGF..2...C/AZ1Z

MGF..2...C/AZ1Z (extended control range)									
	n <sub>a</sub>		M <sub>a</sub>	M <sub>apk</sub>			M <sub>a_eso</sub>	i <sub>tot</sub>	Weight
	at n <sub>e</sub> = 1 min <sup>-1</sup>	at n <sub>e</sub> = 2000 min <sup>-1</sup>	at n <sub>e</sub> = 5 to 2000 min <sup>-1</sup>	at n <sub>e</sub> = 1 to 1500 min <sup>-1</sup>	at n <sub>e</sub> = 1750 min <sup>-1</sup>	at n <sub>e</sub> = 2000 min <sup>-1</sup>			
	min <sup>-1</sup>	min <sup>-1</sup>	Nm	Nm	Nm	Nm			
<b>2-stage</b>	0.29	593.5	13	40	30	22	65	3.37	16
	0.24	473.9	17	51	38	28	85	4.22	
	0.20	400.0	20	60	45	33	210	5.00*	
	0.19	374.5	21	63	48	35	215	5.34	
	0.16	320.0	25	75	56	41	225	6.25*	
	0.14	285.7	28	84	63	46	235	7.00*	
	0.12	242.7	33	99	74	54	245	8.24	
	0.10	206.0	39	117	87	64	330	9.71	
	0.10	192.9	42	126	93	68	330	10.37	
	0.08	164.7	49	147	109	80	330	12.14	
	0.07	147.1	55	165	122	90	330	13.6*	
	0.06	125.0	64	192	144	106	330	16.00	
	0.05	108.0	74	220	167	122	330	18.52	
	0.05	101.0	80	220	178	131	330	19.81	
0.04	87.5	92	220	206	151	330	22.86		
<b>3-stage</b>	0.04	71.3	113	220	220	185	330	28.07	17
	0.03	60.6	133	220	220	218	330	33.02	
	0.03	53.7	149	220	220	220	330	37.24	
	0.02	47.4	169	220	220	220	330	42.19	
	0.02	44.4	181	220	220	220	330	45.03	
	0.02	38.8	200	220	220	220	330	51.51	
	0.02	36.2	200	220	220	220	330	55.25	

25887130/EN – 11/2018

## MOVIGEAR® performance MGF..4-...C/AZ1Z

MGF..4-...C/AZ1Z (extended control range)									
	$n_a$		$M_a$	$M_{apk}$			$M_{a\_eso}$	$i_{tot}$	Weight
	at $n_e=$ 1 $min^{-1}$	at $n_e=$ 2000 $min^{-1}$	at $n_e=$ 5 to 2000 $min^{-1}$	at $n_e=$ 1 to 1500 $min^{-1}$	at $n_e=$ 1750 $min^{-1}$	at $n_e=$ 2000 $min^{-1}$			
	$min^{-1}$	$min^{-1}$	Nm	Nm	Nm	Nm			
<b>2- stage</b>	0.30	566.6	24	73	68	53	147	3.53*	26
	0.23	460.8	30	90	84	66	165	4.34*	
	0.20	400.8	34	102	95	75	420	4.99	
	0.17	347.2	39	117	109	86	450	5.76	
	0.16	315.5	43	129	120	95	470	6.34	
	0.13	268.8	51	153	141	112	515	7.44*	
	0.13	253.8	54	162	150	118	525	7.88	
	0.11	223.2	61	183	170	134	560	8.96	
	0.09	182.3	75	225	208	165	675	10.97	
	0.08	158.0	87	261	241	190	710	12.66	
	0.07	143.6	95	285	265	209	710	13.93	
	0.06	122.2	112	336	311	245	710	16.36	
	0.06	115.4	119	357	329	260	710	17.33	
	0.05	101.5	135	405	374	296	710	19.70	
	0.05	91.7	149	447	415	327	710	21.82	
0.04	77.8	176	475	475	386	710	25.72		
<b>3- stage</b>	0.03	69.3	198	475	475	433	710	28.88	27
	0.03	58.3	235	475	475	475	710	34.29	
	0.03	54.6	250	475	475	475	710	36.61	
	0.02	46.7	293	475	475	475	710	42.86	
	0.02	41.7	328	475	475	475	710	48.00*	
	0.02	35.4	386	475	475	475	710	56.49	

MOVIGEAR® performance MGF..4-...C/XT/AZ1Z<sup>1)</sup>

MGF..4-...C/XT/AZ1Z (extended control range /AZ1Z and increased torque /XT)									
	n <sub>a</sub>		M <sub>a</sub>	M <sub>apk</sub>			M <sub>a_eso</sub>	i <sub>tot</sub>	Weight
	at n <sub>e</sub> = 1 min <sup>-1</sup>	at n <sub>e</sub> = 2000 min <sup>-1</sup>	at n <sub>e</sub> = 5 to 2000 min <sup>-1</sup>	at n <sub>e</sub> = 1 to 1500 min <sup>-1</sup>	at n <sub>e</sub> = 1750 min <sup>-1</sup>	at n <sub>e</sub> = 2000 min <sup>-1</sup>			
	min <sup>-1</sup>	min <sup>-1</sup>	Nm	Nm	Nm	Nm			
<b>2- stage</b>	0.30	566.6	35	105	69	52	147	3.53*	28
	0.23	460.8	43	130	85	65	165	4.34*	
	0.20	400.8	50	150	100	75	420	4.99	
	0.17	347.2	57	171	115	86	450	5.76	
	0.16	315.5	63	189	127	95	470	6.34	
	0.13	268.8	74	222	149	112	515	7.44*	
	0.13	253.8	78	234	158	118	525	7.88	
	0.11	223.2	89	267	179	134	560	8.96	
	0.09	182.3	109	327	219	165	675	10.97	
	0.08	158.0	126	378	253	190	710	12.66	
	0.07	143.6	139	417	279	209	710	13.93	
	0.06	122.2	163	475	327	245	710	16.36	
	0.06	115.4	173	475	347	260	710	17.33	
	0.05	101.5	197	475	394	296	710	19.70	
	0.05	91.7	218	475	436	327	710	21.82	
0.04	77.8	257	475	475	386	710	25.72		
<b>3- stage</b>	0.03	69.3	288	475	475	433	710	28.88	29
	0.03	58.3	342	475	475	475	710	34.29	
	0.03	54.6	366	475	475	475	710	36.61	
	0.02	46.7	400	475	475	475	710	42.86	
	0.02	41.7	400	475	475	475	710	48.00*	
	0.02	35.4	400	475	475	475	710	56.49	

1) In preparation

## 11.8 Surface protection

### 11.8.1 General information



SEW-EURODRIVE offers the following optional protective measure for operating drive units under special environmental conditions.

- OS surface protection

In addition, special optional protective measures for the output shafts are also available.

### 11.8.2 Surface protection

Instead of the standard surface protection, the drive units are optionally available with the OS1 surface protection.

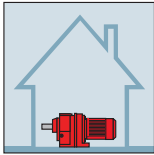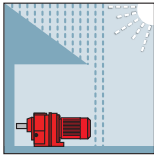Surface protection	Ambient conditions	Sample applications
<b>Standard</b> 	Suitable for machines and systems in buildings and enclosed rooms with neutral atmospheres. Similar to corrosivity category <sup>1)</sup> : <ul style="list-style-type: none"> <li>• C1 (negligible)</li> </ul>	<ul style="list-style-type: none"> <li>• Machines and systems in the automotive industry</li> <li>• Conveyor systems in logistics areas</li> <li>• Conveyor systems at airports</li> </ul>
<b>OS1</b> 	Suited for environments prone to condensation and atmospheres with low humidity or contamination, such as applications outdoors under roof or with protection. Similar to corrosivity category <sup>1)</sup> : <ul style="list-style-type: none"> <li>• C2 (low)</li> </ul>	<ul style="list-style-type: none"> <li>• Systems in saw mills</li> <li>• Hall gates</li> <li>• Agitators and mixers</li> </ul>

1) According to DIN EN ISO 12 944-2

**11.8.3 Special protective measures**

Output shafts can be treated with special optional protective measures for operation subject to severe environmental pollution or in particularly demanding applications.

Measure	Protection principle	Suited for
<b>Standard with MOVIGEAR®: FKM oil seal (fluorocarbon rubber)</b>	High-quality material	Drives subject to chemical contamination
<b>Surface treatment on output shaft end</b>	Surface treatment on the contact surface of the oil seal	Severe environmental impact and in conjunction with FKM oil seal (fluorocarbon rubber)
<b>Output shaft made of stainless steel (standard when using the design for use in wet areas)</b>	Surface protection with high-quality material	Particularly demanding applications in terms of surface protection

**11.8.4 NOCO® fluid**





As standard, SEW-EURODRIVE supplies NOCO® fluid corrosion protection and lubricant with every drive unit with hollow shaft. Use NOCO® fluid when installing gear units with hollow shafts. Using this fluid can help prevent contact corrosion and makes it easier to disassemble the drive at a later time. NOCO® fluid is also suitable for protecting machined metal surfaces that do not have corrosion protection, such as parts of shaft ends or flanges. You can also order NOCO® fluid in larger quantities from SEW-EURODRIVE.

NOCO® fluid is a food grade substance according to NSF-H1. You can tell that NOCO® fluid is a food grade oil by the NSF-H1 identification label on its packaging.

## 11.9 Screw fittings

The following tables show the screw connections available from SEW-EURODRIVE.
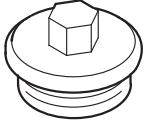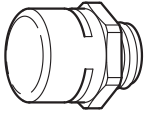
### 11.9.1 Cable glands / screw plugs / pressure compensation




Type of screw fitting	Image	Contents	Size	Tightening torque <sup>1)</sup>	Outer cable diameter	Part number
Screw plugs external hexagon (made of stainless steel)		10 pieces	M16 × 1.5	6.8 Nm	–	18247342
		10 pieces	M25 × 1.5	6.8 Nm	–	18247350
Pressure compensation screw fittings (made of stainless steel)		1 piece	M16 × 1.5	4 Nm	–	28214617
EMC cable gland (brass, nickel-plated)		10 pieces	M16 × 1.5	4 Nm	5 to 9 mm	18204783
		10 pieces	M25 × 1.5	7 Nm	11 to 16 mm	18204805
EMC cable gland (made of stainless steel)		10 pieces	M16 × 1.5	4 Nm	5 to 9 mm	18216366
		10 pieces	M25 × 1.5	7 Nm	11 to 16 mm	18216382

1) The specified torques must be adhered to with a tolerance of +/- 10%.

The cable retention in the cable gland must withstand the following removal force of the cable from the cable gland:

- Cable with outer diameter > 10 mm: ≥ 160 N
- Cable with outer diameter < 10 mm: = 100 N

11.9.2 Screw fittings: Plug connectors

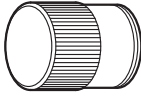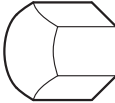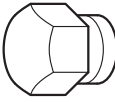Type of screw fitting	Image	Con- tents	Size	Tighten- ing torque <sup>1)</sup>	Part num- ber
<b>M23 plug (made of stainless steel)</b>		1 pieces	M23 x 1.5	Tighten fully	19094558
<b>M12 plug for plug connector with female outer thread (made of stainless steel)</b>		10 pieces	M12 x 1.0	2.3 Nm	18202799
<b>M12 plug for plug connector with female thread (made of stainless steel)</b>		10 pieces	M12 x 1.0	2.3 Nm	18202276

1) The specified torques must be adhered to with a tolerance of +/- 10%.

## 11.10 Mounting positions


### 11.10.1 Description of mounting positions

The following mounting positions are possible for the drive units:

- Specified mounting position: M1 or M2 or M3\* or M4 or M5 or M6
- Universal operation in mounting positions M1, M2, M4, M5, M6

### Mounting positions M1 to M6

The following figure shows the position of the drive unit when installed in mounting positions M1 to M6:

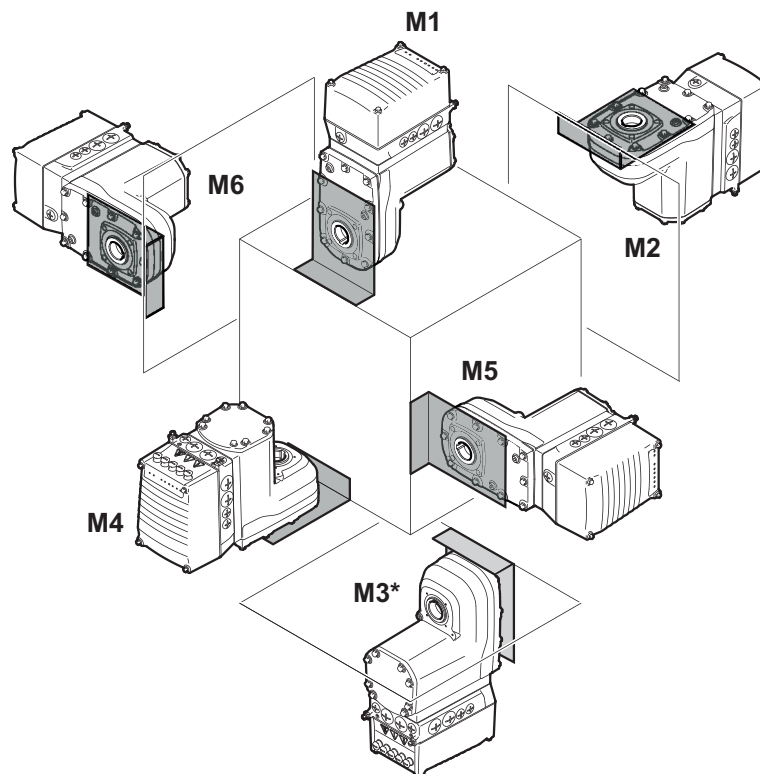



25417913227

\* = Mounting position M3 only possible after consultation with SEW-EURODRIVE.




11.10.2 Mounting position sheet

03 015 00 18

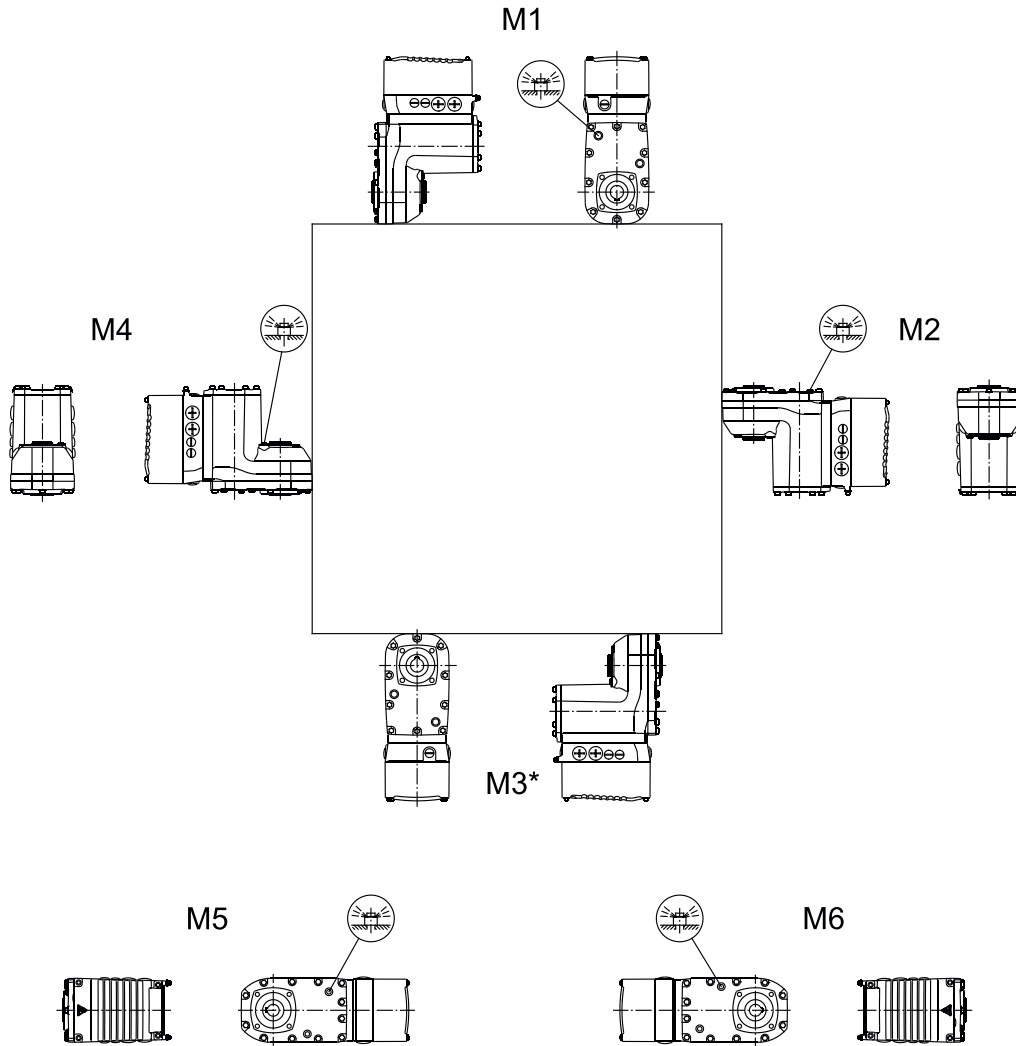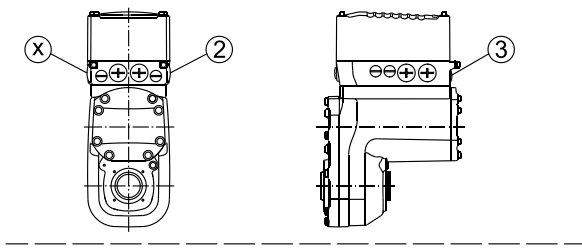

25447227019


\* = Mounting position M3 only possible after consultation with SEW-EURODRIVE.

 = Breather valve

## 11.11 Lubricants

### 11.11.1 Roller bearing greases

The rolling bearings are filled with the following greases at the factory.

	Ambient temperature	Manufacturer	Type
Gear unit rolling bearings	-40 °C to +80 °C	Fuchs	Renolit CX-TOM 15
	-40 °C to +80 °C	Klüber	Petamo GHY 133 N
	-40 °C to +40 °C	Bremer & Leguil	Cassida Grease GTS 2

11.11.2 Lubricant fill quantities

Unless a special arrangement is made, SEW-EURODRIVE supplies the drives with a lubricant fill adapted for the specific gear ratio.

MGF..2-...C/MGF..4-...C

MGF..2-...C		MGF..4-...C	
Gear ratio	Fill quantities in liters	Gear ratio	Fill quantities in liters
i	for mounting positions M1, M2, M3**, M4, M5, M6	i	for mounting positions M1, M2, M3**, M4, M5, M6
55.25	0.68 l	56.49	1.69 l
51.51		48.00*	
45.03		42.86	
42.19		36.6	
37.24		34.29	
33.02		28.89	
28.07		25.72	
22.86	0.71 l	21.82	
19.81		19.70	
18.52		17.33	
16.00		16.36	
13.60*		13.93	
12.14		12.66	
10.37		0.76 l	10.97
9.71	8.96		
8.24	7.88		
7.00*	7.44*		
6.25*	6.34		
5.34	5.76		
5.00*	4.99		
4.22	4.34*	3.53*	
3.37	3.53*		

\* = Ultimate gear unit ratio

\*\* = Mounting position M3 only possible after consultation with SEW-EURODRIVE.

■ = Preferred gear ratio

25887130/EN – 11/2018

## 11.11.3 Lubricant table

**NOTICE**

Selecting improper lubricants may damage the gear unit.

Possible damage to property.

- Observe the following information.

**Notes**

- The oil viscosity and type (synthetic) that are to be used are determined by SEW-EURODRIVE specifically for each order. This information is noted in the order confirmation and on the gear unit's nameplate.

If you use other lubricants for the gear units and/or use the lubricants at temperatures outside the recommended temperature range, SEW-EURODRIVE does not assume liability.


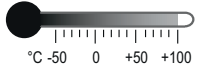

The lubricant recommendation in the lubricant table in no way represents a guarantee regarding the quality of the lubricant delivered by each respective supplier. Each lubricant manufacturer is responsible for the quality of their product.

- Do not mix synthetic lubricants.
- Do not mix synthetic and mineral lubricants.
- Oils of the same viscosity class from different manufacturers do not have the same characteristics. In particular, the minimally and maximally permitted oil bath temperatures are manufacturer-specific. These temperatures are specified in the lubricant tables.
- The values specified in the lubricant tables apply as of the time of printing of this document. The data of the lubricants is subject to dynamic change on the part of the lubricant manufacturers. For up-to-date information about the lubricants, visit:

**[www.sew-eurodrive.de/lubricants](http://www.sew-eurodrive.de/lubricants)**

Information on table structure

The specified **ambient temperatures** are **guide values for the preselection** of a suitable lubricant. The exact upper and lower temperature limits for project planning are specified in the table with the respective trade name.

			CLP HC - NSF H1 - PSS	ISO, SAE NLGI
				-15                      +40
-25                      +30	VG 220			

9007221408728459

- [1] Device type
- [2] Ambient temperature range
- [3] Viscosity class
- [4] Note on special approvals
- [5] Lubricant type

## Information on the various lubricants

			[4]
[1]	-15	+100	[5]
[2]	XYZ460		
[3]	DE, FR, US, BR, CN		
	SEW070040013		[6]

22153985035

- [1] Lowest oil sump temperature in °C,  
**may not be undershot in operation**
- [2] Trade name
- [3] Factory filling for these countries  
BR = Brazil  
CN = China  
DE = Germany  
FR = France  
US = United States
- [4] Manufacturer
- [5] Highest oil sump temperature in °C<sup>1)</sup>
- [6] Approvals regarding compatibility of the lubricant with approved oil seals

1) Service life is significantly reduced when exceeded. The lubricant change intervals in the chapter "Inspection and maintenance" must be observed.

**Lubricant compatibility with oil seal**

Approval	Explanation
SEW07004__13:	A lubricant especially recommended with regard to compatibility with the approved oil seal. The lubricant exceeds the state-of-the-art requirements concerning elastomer compatibility.

**Approved application temperature range of the oil seals**

Oil seal Material class	Permitted Oil sump temperature
FKM	-25°C to +115°C
FKM-PSS	-25°C to +115°C

**Limitations of use** of oil seals with the specific lubricant are described in the following table:



Material class			Manufacturer		Material		Approved oil sump temperature
S	2	FKM	1	Freudenberg	1	75 FKM 585	-25 °C to +115 °C
			2	Trelleborg	1	VCBVR	

**Examples:**

**S2:** Only the elastomer FKM meets the requirements of the approval in conjunction with the specific lubricant.

**Key to lubricant tables**

The following table shows the abbreviations and icons used in the lubricant table and explains what they mean:

Abbreviation/ icon	Meaning
	Synthetic lubricant (marked gray)
CLP HC	Synthetic hydrocarbons – polyalphaolefin (PAO)
	Lubricant for the food processing industry – NSF-H1-compliant
4)	Observe the critical starting behavior at low temperatures
Oil seal	Oil seal
PSS	"Premium Sine Seal" oil seal. The addendum "PSS" at the lubricant type signals compatibility with the sealing system.

#### Lubricant table

The lubricant table is valid as of the time of printing of this document. Refer to [www.sew-eurodrive.de/lubricants](http://www.sew-eurodrive.de/lubricants) for the latest tables.

Observe the thermal limits of the oil seal materials, see chapter "Lubricant compatibility with oil seals".

MGF... ..C	[1]	[2]	[3]	ISO, SAE NLGI	SEW EURODRIVE	b bremer & egul	Castrol	FUCHS	Mobil®	KLUBER LUBRICATION	Shell	TOTAL
	[4] -25		CLP HC - NSF H1 - PSS	VG 220	SEW EURODRIVE	b bremer & egul	Castrol	FUCHS	Mobil SHC 630 DE, FR, US, BR, CN	Klubersynthol	Shell	TOTAL
	[4] -30			VG 150 <sup>4)</sup>								
	[4] -15		CLP HC - NSF H1 - PSS	VG 460	SEW EURODRIVE	b bremer & egul	Castrol	FUCHS	Mobil SHC 629 DE, FR, US, BR, CN	Klubersynthol	Shell	TOTAL
	[4] -25			VG 220								

- [1] Ambient temperature range
- [2] Note on special approvals
- [3] Oil type
- [4] Standard

25449755531

25887130/EN – 11/2018



## 11.12 Design notes for gear units with hollow shaft and key



### INFORMATION

Always use the supplied NOCO® fluid for assembly. The fluid prevents contact corrosion and makes disassembly at a later time easier.

---



### INFORMATION

The key dimension L12 is determined by the customer and depends on the requirements of the application, as well as on the used materials. See figure "Customer shaft with [A] and without [B] contact shoulder".

---



### INFORMATION

For dimensioning the keyed connection, observe that the hollow gear shaft (hub) is made of the material C45R(1.1201) or X17CrNi16-2+QT900(1.4057+QT900) depending on the ordered variant.

---

### 11.12.1 Installation

SEW-EURODRIVE recommends **2 variants for installing** the hollow shaft and key on the input shaft of the driven machine (= customer shaft):

1. Use the provided fastening parts for installation.
2. Use the optional assembly/disassembly kit for installation.

The following sections describe the two options.


## 11.12.2 Mounting using supplied fastening parts

The following fastening parts are provided as standard:

- Retaining screw with washer [2]
- Retaining ring [3]

## Customer shaft

03 001 01 17

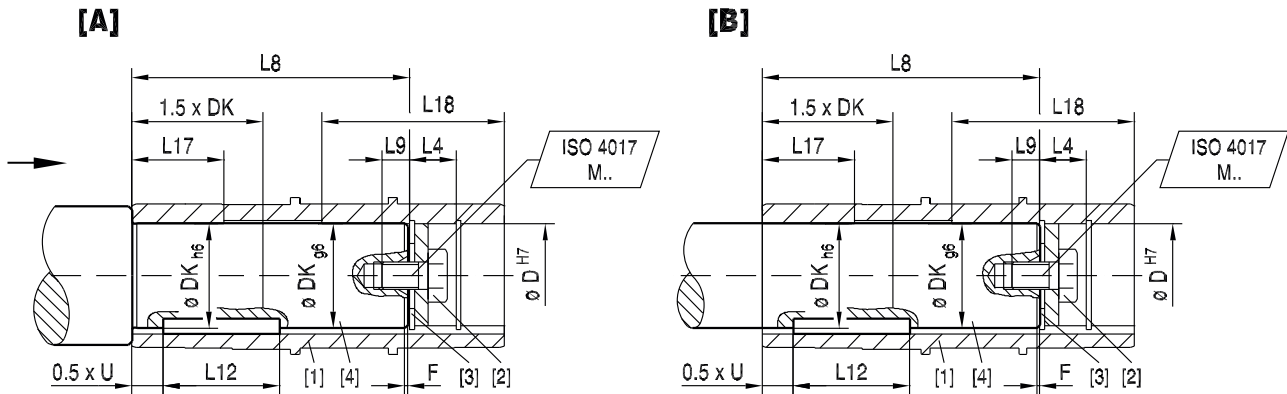

- [1] Hollow shaft  
 [2] Retaining screw with washer  
 [3] Retaining ring  
 [4] Customer shaft  
 L8 Length of customer shaft (With retaining ring positioned outside: Length of customer shaft L8+L4)  
 L12 Key length  
 U Key width  
 F Chamfer at the shaft end (always 1 mm with MOVIGEAR®)  
 DK Customer shaft diameter  
 D Hollow shaft diameter  
 L9 Screw-in depth of the included retaining screw  
 L17/L18 Cylinder section length with dimension H7

**Dimensions and tightening torque for MGFA.2-...-C/MGFA.4-...-C**

The retaining screw [2] must be tightened to the tightening torque MS given in the following table.

Gear unit type	D <sup>H7</sup>	DK <sup>1)</sup>	L8 <sup>2)</sup>	L4 <sup>3)</sup>	L17	L18	F	U	L9	Supplied retaining screw	MS
	mm	mm	mm	mm	mm	mm	mm	mm	mm	ISO 4017	Nm
MGFA.2-...-C	20	20	84.6	16.4	35	55	1	6 <sup>4)</sup>	10	M6 × 16-8.8	8
	25	25	83.8	16.2	35	55	1	8 <sup>4)</sup>	17	M10 × 25-8.8	20
	30	30	83.8	16.2	35	55	1	8 <sup>4)</sup>	17	M10 × 25-8.8	20
	35	35	80	17.9	45	45	1	10 <sup>4)</sup>	22	M12x30-8.8	20
	40	40	89	12.85	35	55	1	12 <sup>5)</sup>	30	M16x40-8.8	40
MGFA.4-...-C	30	30	107.3	16.2	40	60	1	8 <sup>4)</sup>	17	M10 × 25-8.8	20
	35	35	105.6	17.9	40	60	1	10 <sup>4)</sup>	22	M12x30-8.8	20
	40	40	105.5	17.65	40	60	1	12 <sup>4)</sup>	29	M16x40-8.8	40

**Key**

- Up to a distance of at least  $1.5 \times DK$ , the diameter of the customer shaft must be  $\varnothing DK_{h6}$ , and with the other length  $\varnothing DK_{g6}$ .
- Position of retaining ring: **INSIDE**  
The installation length of the customer shaft **with** contact shoulder [A] must be **L8 -1 mm**.  
The installation length of the customer shaft **without** contact shoulder [B] must be **equal L8**.  
With this configuration, the customer shaft can be pressed out using the optional assembly/disassembly kit (doesn't apply to MGF.2-C and 40 mm hollow shaft).
- Position of retaining ring: **OUTSIDE**  
The installation length of the customer shaft **with** contact shoulder [A] must be **(L8 + L4) -1 mm**.  
The installation length of the customer shaft **without** contact shoulder [B] must be equal to **L8 + L4**.
- For keyway types: DIN6885-1 (domed type)
- For keyway types: DIN6885-3 (low type)

### 11.12.3 Mounting/dismounting with SEW-EURODRIVE assembly and disassembly kit

You can also use the optional assembly/disassembly kit for mounting. You can order the kit for the specific size by quoting the part numbers in the table below. The scope of delivery includes:

- Spacer tube for installation without contact shoulder [5]
- Retaining screw for assembly [2]
- Forcing washer for disassembly [7]
- Fixed nut for disassembly [8]


The short retaining screw delivered as standard is not required.

#### Customer shaft

- The installation length of the customer shaft must be L8. **Do not use the spacer tube if the customer shaft has a contact shoulder [A].**
- The installation length of the customer shaft must be L8. **Use the spacer tube if the customer shaft has no contact shoulder [B].**

The following figure shows the customer shaft with contact shoulder [A] and without contact shoulder [B].

03 002 01 17

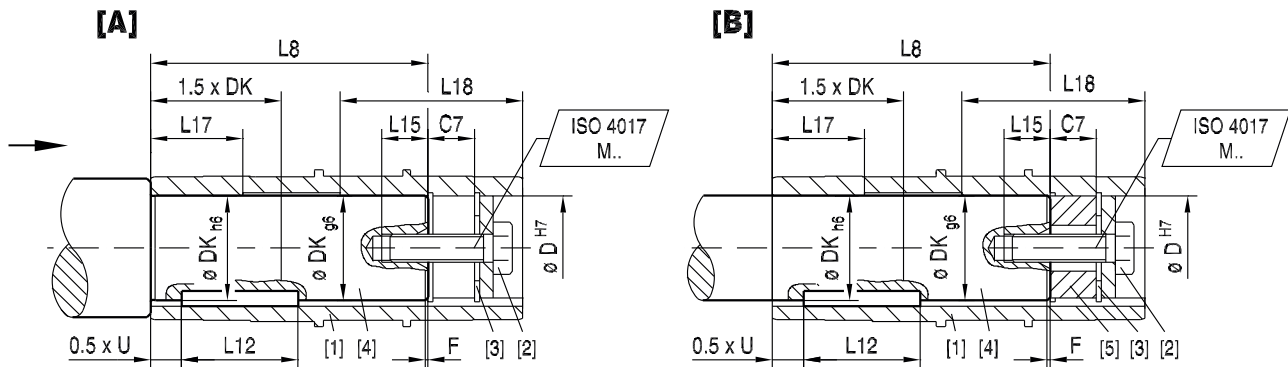

- |         |  |
|---------|--|
| [1]     | Hollow shaft   |
| [2]     | Retaining screw with washer  |
| [3]     | Retaining ring   |
| [4]     | Customer shaft   |
| [5]     | Spacer tube  |
| L8      | Customer shaft length  |
| L12     | Key length   |
| U       | Key width  |
| F       | Chamfer at the shaft end (always 1 mm with MOVIGEAR®)                            |
| DK      | Customer shaft diameter  |
| D       | Hollow shaft diameter  |
| L15     | Screw-in depth of the retaining screws included in the assembly/disassembly kit. |
| C7      | Dimension of the included spacer, or the included ejector plate and fixed nut.   |
| L17/L18 | Cylinder section length with dimension H7  |

**Dimensions, tightening torques and part numbers for MGFA.2-...-C/MGFA.4-...-C**

The retaining screw [2] must be tightened to the tightening torque MS given in the following table.

Gear unit type	D <sup>H7</sup>	DK <sup>1)</sup>	L8	C7	L17	L18	F	U	L15 <sup>+2</sup>	Retaining screw [2] from the assembly/ disassembly kit	MS	Installation/ removal kit
	mm	mm	mm	mm	mm	mm	mm	mm	mm	ISO 4017	Nm	Part number
<b>MGFA.2-...-C</b>	20	20	84.6	16	35	55	1	6 <sup>2)</sup>	16	M6 × 25 - 8.8	8	06436838
	25	25	83.8	16	35	55	1	8 <sup>2)</sup>	22	M10 × 35 - 8.8	20	06436846
	30	30	83.8	16	35	55	1	8 <sup>2)</sup>	22	M10 × 35 - 8.8	20	06436854
	35	35	80	18	45	45	1	10 <sup>2)</sup>	28	M12 × 45 - 8.8	20	06436862
	40	40	89	13	35	55	1	12 <sup>3)</sup>	36	M16 × 50 - 8.8	40	— <sup>4)</sup>
<b>MGFA.4-...-C</b>	30	30	107.3	16	40	60	1	8 <sup>2)</sup>	22	M10 × 35 - 8.8	20	06436854
	35	35	105.6	18	40	60	1	10 <sup>2)</sup>	28	M12 × 45 - 8.8	20	06436862
	40	40	105.5	18	40	60	1	12 <sup>2)</sup>	36	M16 × 50 - 8.8	40	06436870

- 1) Up to a distance of at least 1.5 × DK, the diameter of the customer shaft must be ØDKh6, and with the other length ØDKg6.
- 2) For keyway types: DIN6885-1 (domed type)
- 3) For keyway types: DIN6885-3 (low type)
- 4) Not with the assembly/disassembly kit by SEW-EURODRIVE

### Disassembly




### INFORMATION

The depicted assembly kit for attaching the customer shaft is a recommendation by SEW-EURODRIVE.

- Check whether this design can compensate the present axial loads.
- You may need to use another construction for axial securing in certain applications.

The following figure shows the SEW-EURODRIVE assembly/disassembly kit.

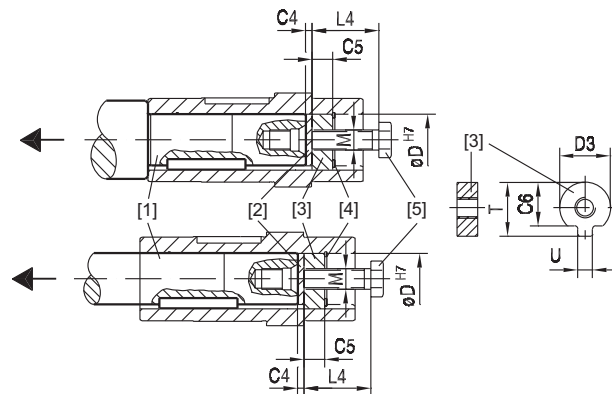

25843977355

- [1] Customer shaft
- [2] Forcing washer
- [3] Fixed nut for disassembly
- [4] Retaining ring
- [5] Retaining screw

The following table lists the dimensions and part numbers of the assembly/disassembly kit:

Gear unit type	D <sup>H7</sup>	M <sup>1)</sup>	C4	C5	C6	U <sup>-0.5</sup>	T <sup>-0.5</sup>	D3 <sup>-0.5</sup>	L4	Part number Installation/ removal kit
	mm		mm	mm	mm	mm	mm	mm	mm	
MGFA.1-.-C <sup>2)</sup>	20	M6	5	6	15.5	5.5	22.5	19.7	25	6436838
MGFA.1-.-C MGFA.2-.-C	25	M10	5	10	20	7.5	28	24.7	35	6436846
MGFA.2-.-C MGFA.4-.-C	30	M10	5	10	25	7.5	33	29.7	35	6436854
MGFA.2-.-C MGFA.4-.-C	35	M12	5	12	29	9.5	38	34.7	45	6436862
MGFA.2-.-C MGFA.4-.-C	40	M16	5	12	34	11.5	41.9	39.7	50	6436870


1) Retaining screw

2) Only with MOVIGEAR® classic

## 11.13 Drive unit with hollow shafts

### 11.13.1 Hollow shaft chamfer

The following figure illustrates the hollow shaft chamfer:

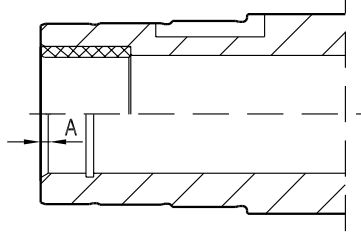

25844033035

The following table shows the dimensions of the chamfer:

Gear unit type	Design with hollow shaft (A)
MGFA.1-...-C <sup>1)</sup>	2 × 30°
MGFA.2-...-C	2 × 30°
MGFA.4-...-C	2 × 30°

1) Only with MOVIGEAR® classic

## 11.14 Dimension drawings of the drive unit

### 11.14.1 Dimension sheet notes

#### Scope of delivery



= Standard parts supplied by SEW-EURODRIVE.



= Standard parts not supplied by SEW-EURODRIVE.

#### Tolerances

##### Shaft ends

Diameter tolerance:

∅ ≤ 50 mm → ISO k6

∅ > 50 mm → ISO m6

Center holes according to DIN 332, shape DR:

∅ = 7 to 10 mm → M3

∅ > 10...13 mm → M4

∅ > 13...16 mm → M5

∅ > 16...21 mm → M6

∅ > 21...24 mm → M8

∅ > 24...30 mm → M10

∅ > 30...38 mm → M12

∅ > 38...50 mm → M16

Keys: according to DIN 6885 (domed type).

##### Hollow shafts

Diameter tolerance:

∅ → ISO H7 measured with plug gauge

#### Breather valves and cable glands









The dimension drawings always show the screw plugs. The contour dimensions may vary slightly due to preinstalled breather valves, plug connectors or pressure compensation fittings (in conjunction with the design for wet areas).



11.14.2 MGF..2-...C

03 002 00 18


**MGFAS2...-C**

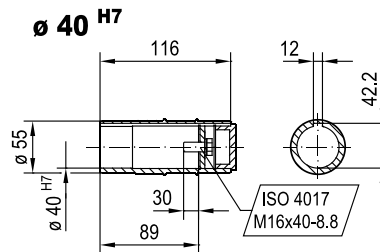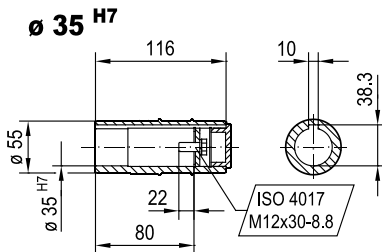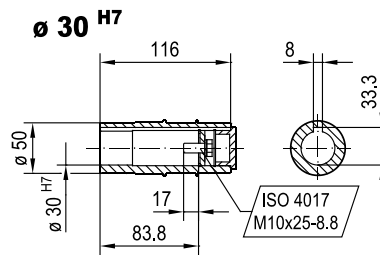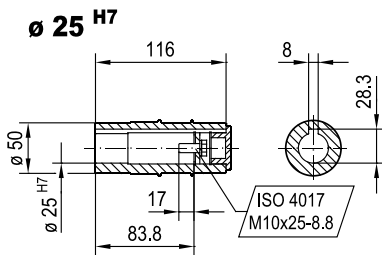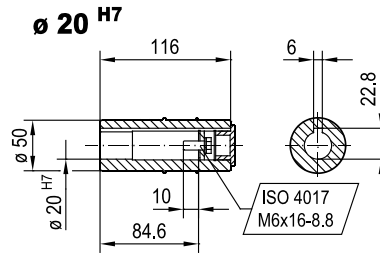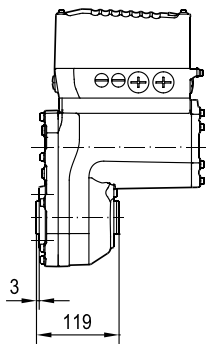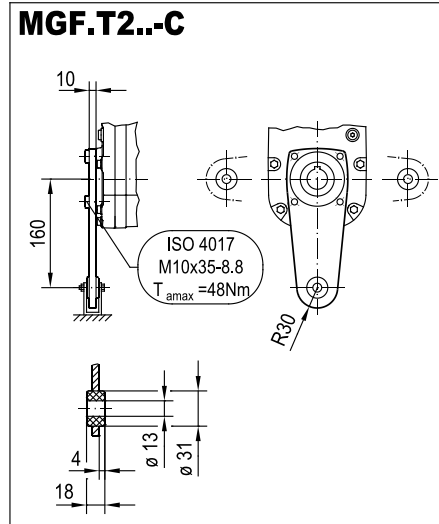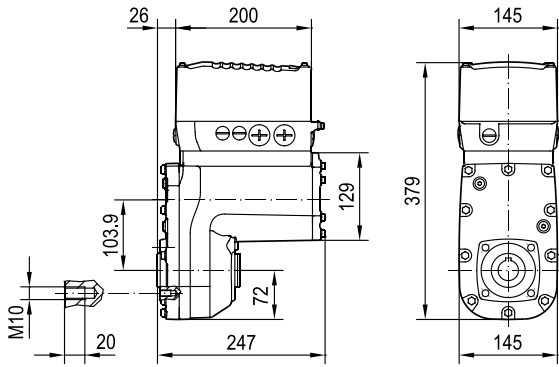





25887130/EN – 11/2018

03 004 00 18

### MGFTS2...-C

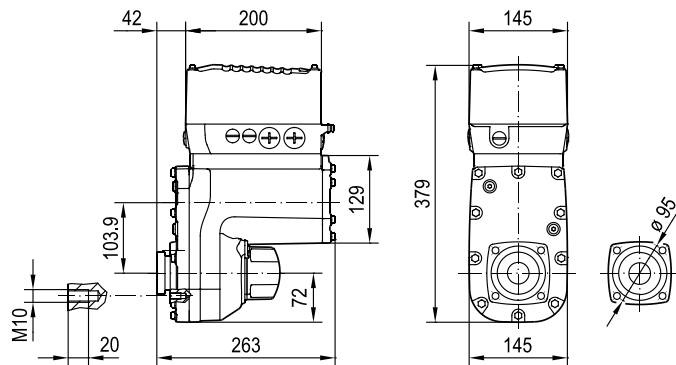







### MGF.T2...-C

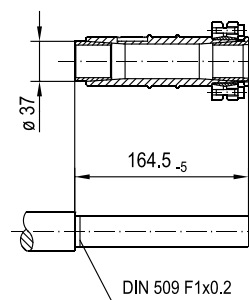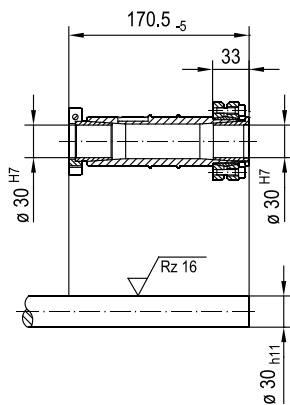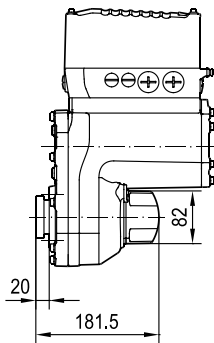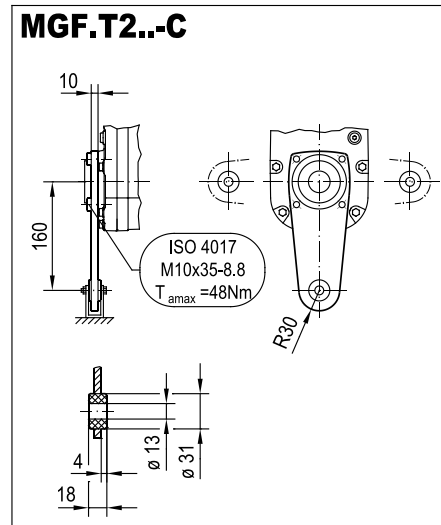

11.14.3 MGF..4...-C

03 006 00 18






**MGFAS4...-C**

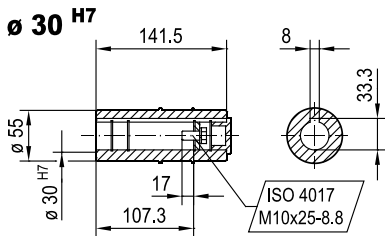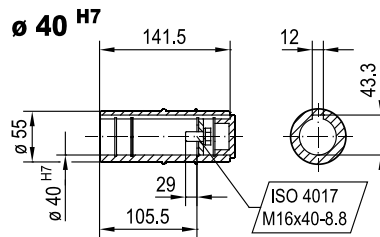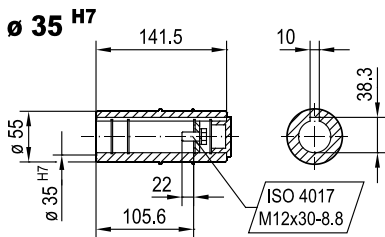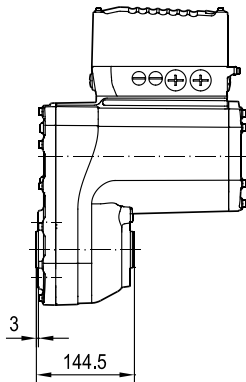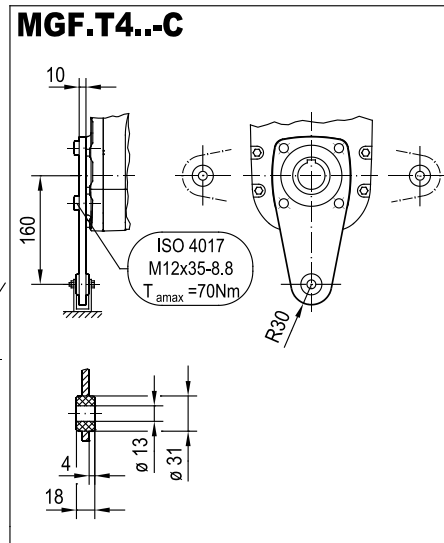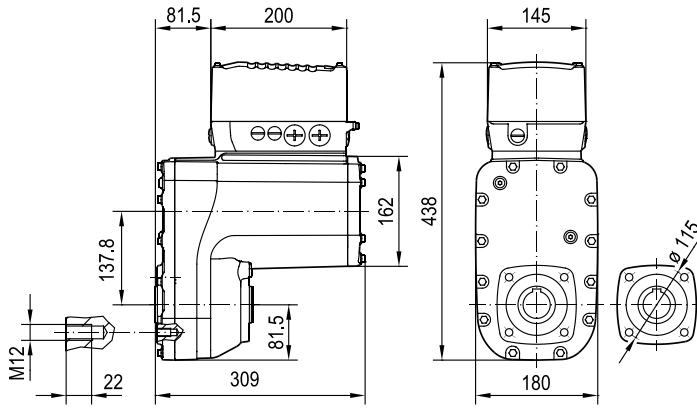

25887130/EN – 11/2018

03 007 00 18







### MGFTS4..-C

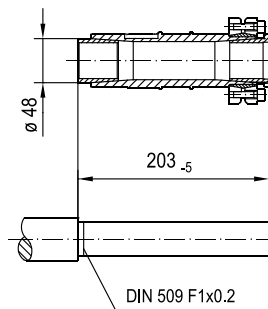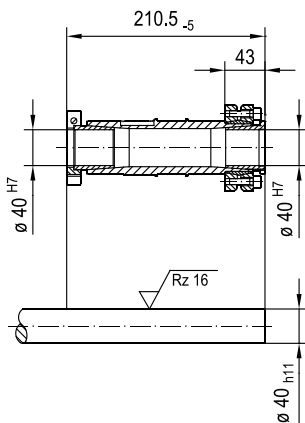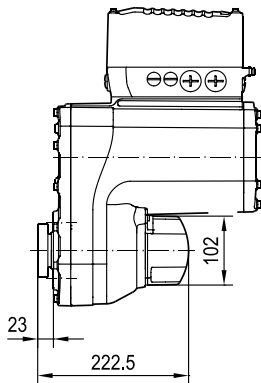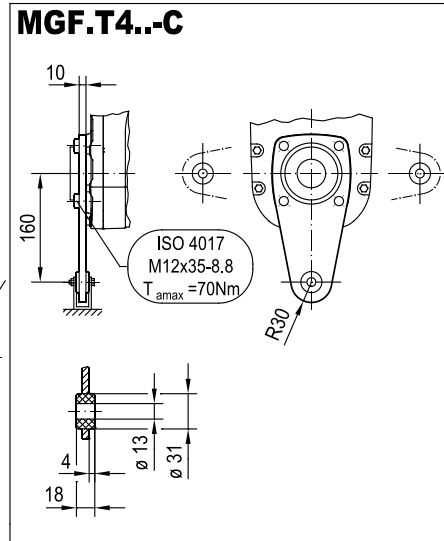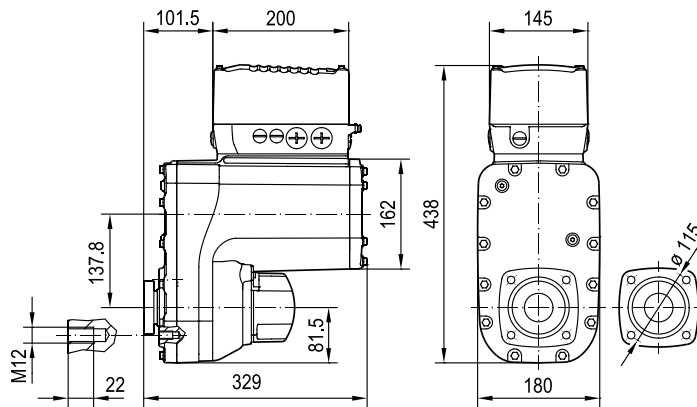

11.14.4 MGF..4...C/XT with increased torque (in preparation)

03 008 00 18






**MGFAS4...C/XT**

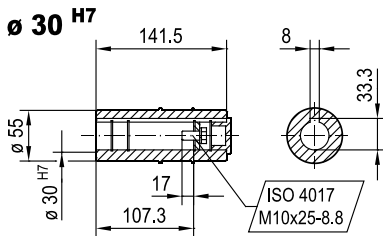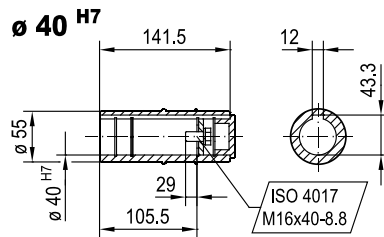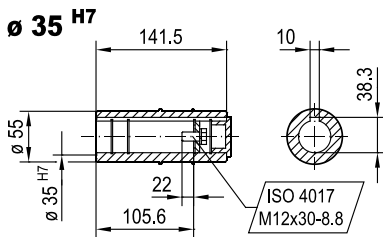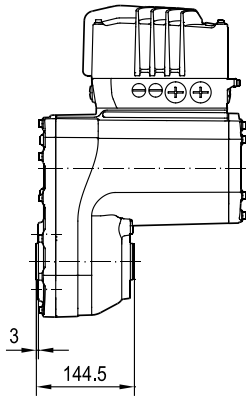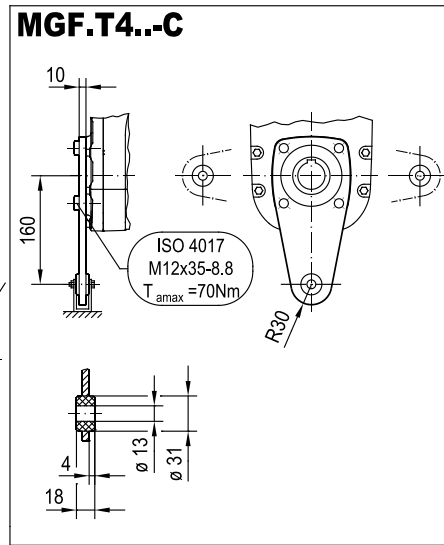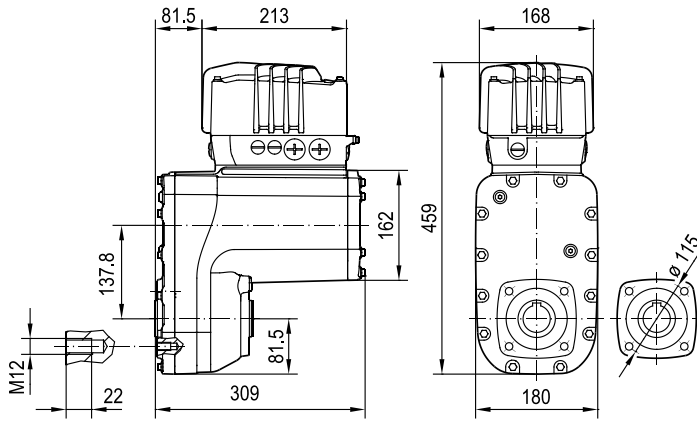

25887130/EN – 11/2018

03 009 00 18

### MGFTS4..-C/XT

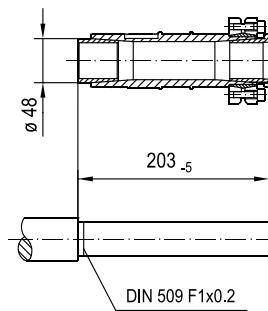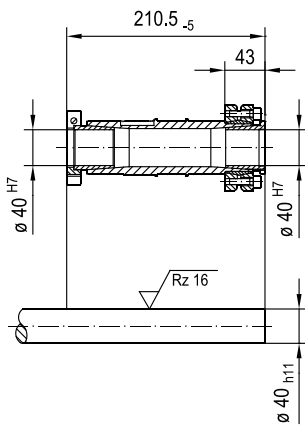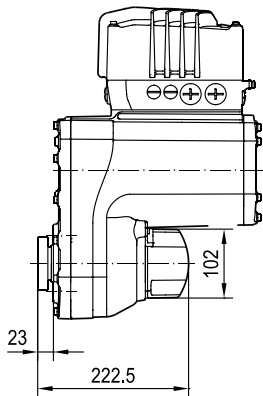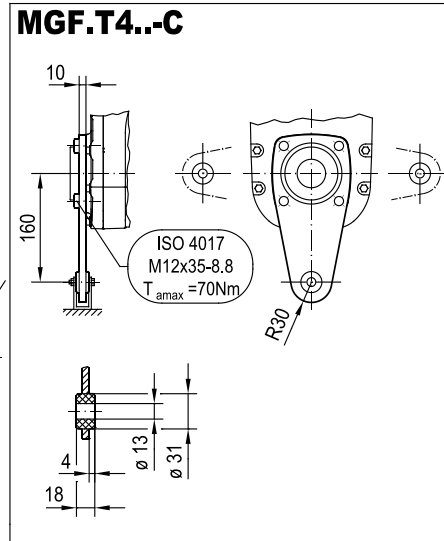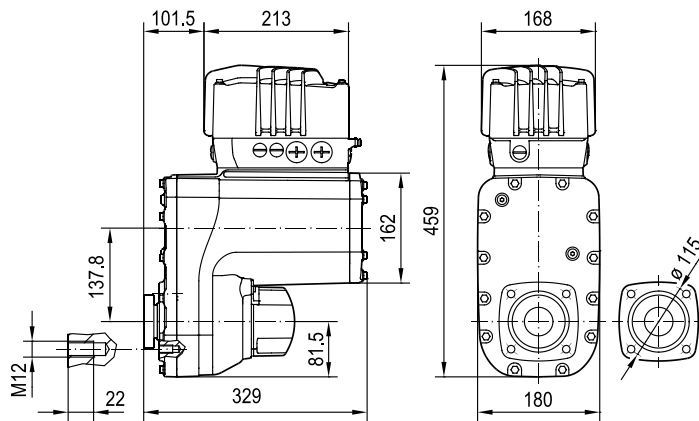


11.14.5 Shaft designs


MGFAS..C/mm (MGFAS1..C only with MOVIGEAR® classic)

03 016 02 17

**MGF.1-2-C..**

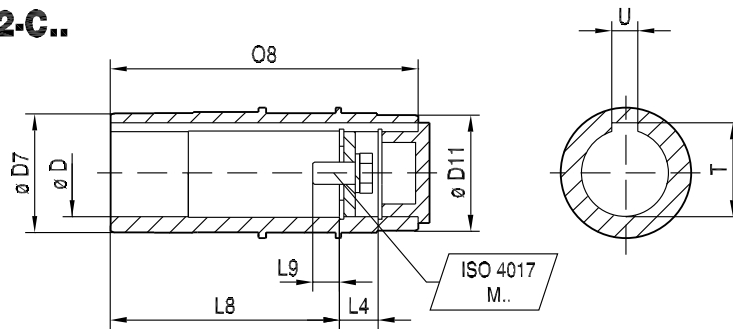

**MGF.4-C..**

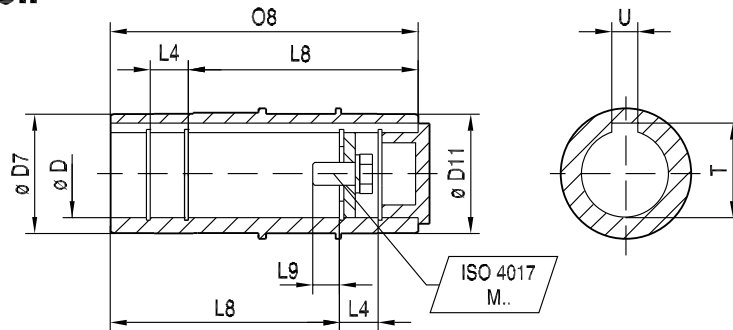


	ø D <sup>H7</sup>	ø D7	ø D11	L4	L8	L9	O8	T	U	ISO 4017
MGFAS1..C	20	35	38	16.4	73.6	10	106	22.8	6	M6x16-8.8
MGFAS1..C	25	35	38	16.2	73.8	17	106	27	8	M10x25-8.8
	ø D <sup>H7</sup>	ø D7	ø D11	L4	L8	L9	O8	T	U	ISO 4017
MGFAS2..C	20	50	45	16.4	84.6	10	116	22.8	6	M6x16-8.8
MGFAS2..C	25	50	45	16.2	83.8	17	116	28.3	8	M10x25-8.8
MGFAS2..C	30	50	45	16.2	83.8	17	116	33.3	8	M10x25-8.8
MGFAS2..C	35	55	50	17.9	80	22	116	38.3	10	M12x30-8.8
MGFAS2..C	40	55	50	12.85	89	30	116	42.2	12	M16x40-8.8
	ø D <sup>H7</sup>	ø D7	ø D11	L4	L8	L9	O8	T	U	ISO 4017
MGFAS4..C	30	55	55	16.2	107.3	17	141.5	33.3	8	M10x25-8.8
MGFAS4..C	35	55	55	17.9	105.6	22	141.5	38.3	10	M12x30-8.8
MGFAS4..C	40	55	55	17.65	105.5	29	141.5	43.3	12	M16x40-8.8

#### MGFTS..C/mm<sup>1</sup> (MGFTS1..C only with MOVIGEAR® classic)

1) In preparation

03 017 00 17

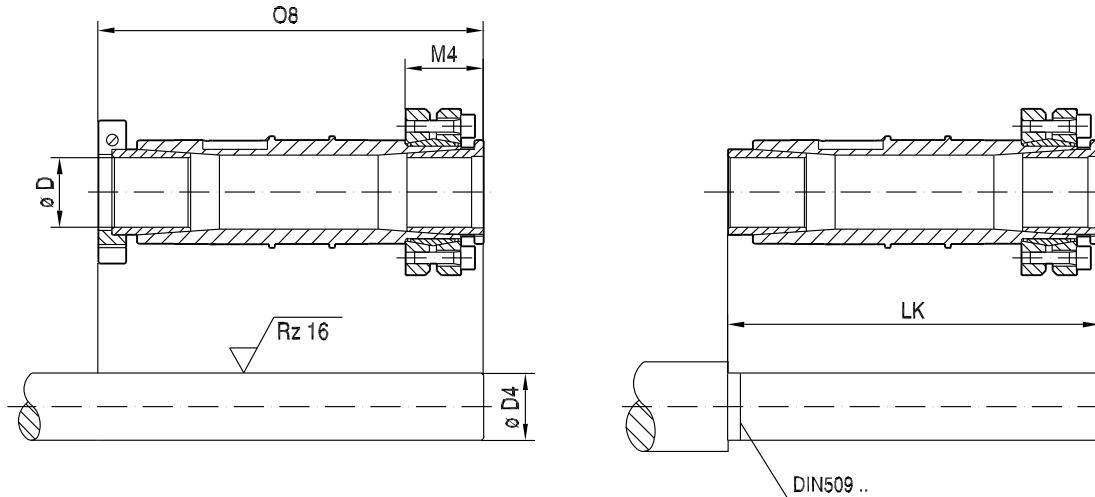


	$\varnothing D4_{h11}$	$\varnothing D^{+0.1}$	M4	O8 <sub>.5</sub>	LK <sub>.5</sub>	DIN 509
MGFTS1..C	20	20.1	28	157	151	F1x0.2
MGFTS2..C	25	25.1	33	170.5	164.5	F1x0.2
MGFTS2..C	30	30.26	33	170.5	164.5	F1x0.2
MGFTS4..C	35	35.03	43	210.5	203	F1x0.2
MGFTS4..C	40	40.1	43	210.5	203	F1x0.2




MGFAS..C/inch (MGFAS1..C only with MOVIGEAR® classic)

03 016 00 18

**MGF.1-2-C..**

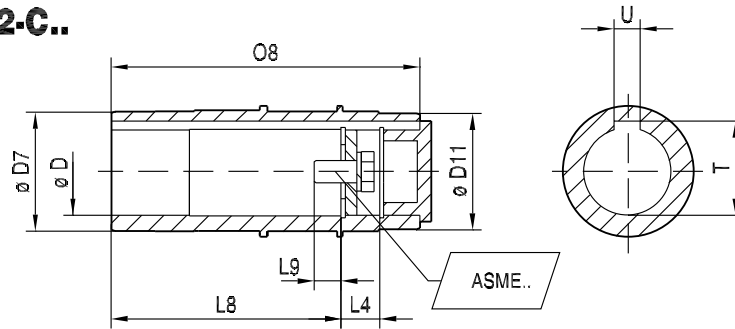

**MGF.4-C..**

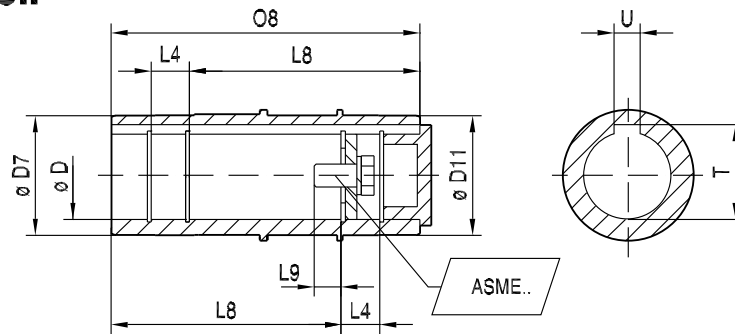


	$\varnothing D^{H7}$	$\varnothing D7$	$\varnothing D11$	L4	L8	L9	O8	T	U	ASME
MGFAS1..C	0.750	1.378	1.496	0.646	2.898	0.347	4.173	0.846	0.187	1/4-20x0.625
MGFAS1..C	0.875	1.378	1.496	0.646	2.937	0.347	4.173	0.965	0.187	1/4-20x0.625
MGFAS1..C	1.000	1.378	1.496	0.638	2.906	0.695	4.173	1.122	0.250	3/8-16x1.00
	$\varnothing D^{H7}$	$\varnothing D7$	$\varnothing D11$	L4	L8	L9	O8	T	U	ASME
MGFAS2..C	1.000	1.969	1.969	0.638	3.339	0.69	4.567	1.122	0.250	3/8-16x1.00
MGFAS2..C	1.250	1.969	1.969	0.638	3.339	0.69	4.567	1.374	0.250	7/16-14x1.00
MGFAS2..C	1.4375	2.165	1.969	0.516	3.494	1.39	4.567	1.610	0.375	5/8-11x1.75
	$\varnothing D^{H7}$	$\varnothing D7$	$\varnothing D11$	L4	L8	L9	O8	T	U	ASME
MGFAS4..C	1.250	2.165	2.165	0.717	4.146	0.69	5.571	1.374	0.250	7/16-14x1.00
MGFAS4..C	1.437	2.165	2.165	0.705	4.154	1.39	5.571	1.610	0.375	5/8-11x1.75
MGFAS4..C	1.500	2.165	2.165	0.705	4.154	1.39	5.571	1.669	0.375	5/8-11x1.75

#### MGFTS..C/inch<sup>1)</sup> (MGFTS1..C only with MOVIGEAR® classic)

1) In preparation

03 017 00 18

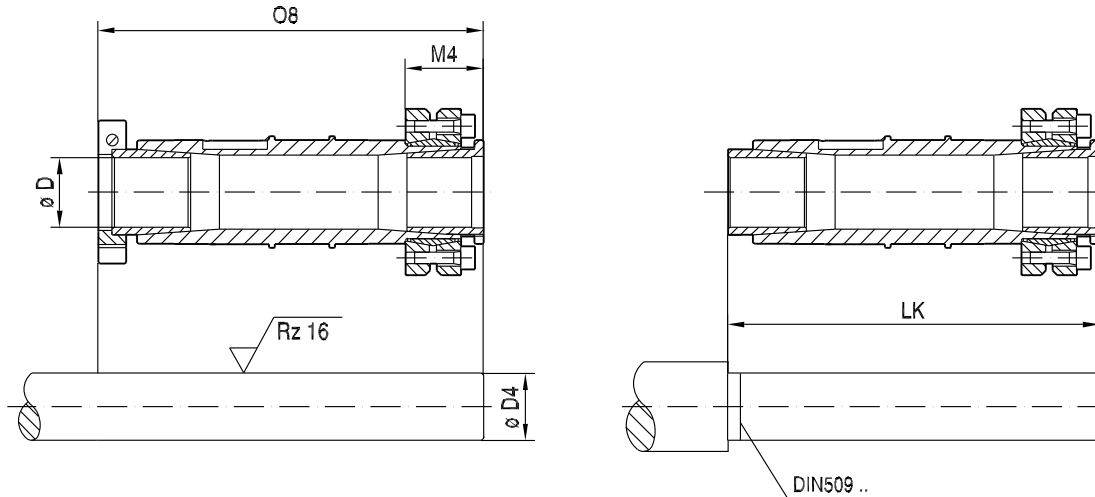

	$\varnothing D4_{h11}$	$\varnothing D^{+0.004}$	M4	O8 <sub>-0.197</sub>	LK <sub>-0.197</sub>	DIN 509
MGFTS1..C	0.750	0.754	1.102	6.181	5.945	F1x0.2
MGFTS2..C	1.000	1.004	1.299	6.713	6.476	F1x0.2
MGFTS2..C	1.1875	1.191	1.299	6.713	6.476	F1x0.2
MGFTS2..C	1.250	1.254	1.299	6.713	6.476	F1x0.2
MGFTS4..C	1.250	1.250	1.693	8.287	7.992	F1x0.2
MGFTS4..C	1.375	1.379	1.693	8.287	7.992	F1x0.2
MGFTS4..C	1.4375	1.441	1.693	8.287	7.992	F1x0.2
MGFTS4..C	1.500	1.504	1.693	8.287	7.992	F1x0.2
MGFTS4..C	1.625	1.629	1.693	8.287	7.992	F1x0.2

## 11.15 Dimension drawings of plug connectors


### 11.15.1 MOVIGEAR® performance MGF...-DFC-C/IV

#### Plug connectors

#### INFORMATION



- The following figure shows an example of the additional dimensions of the optional plug connectors for a possible plug connector configuration.
- For more information, refer to the chapter "Plug connector positions".

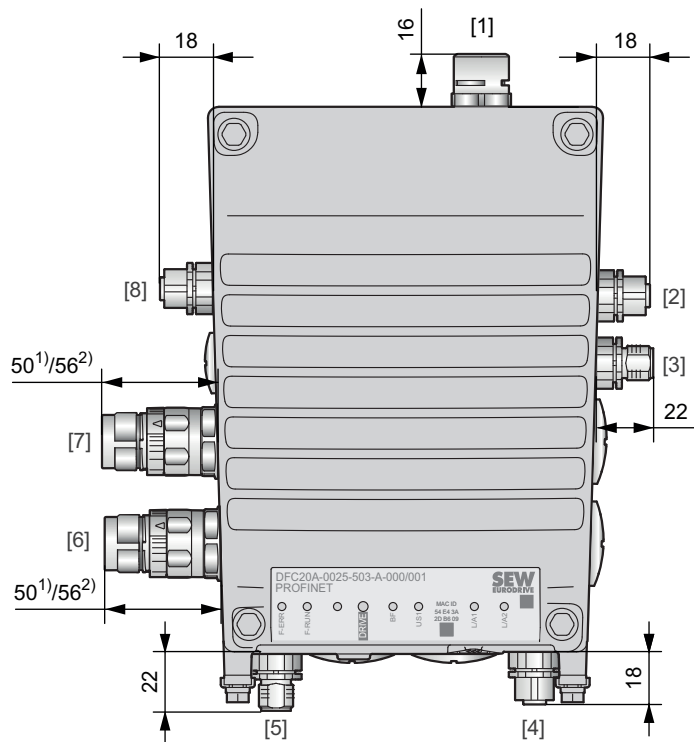

25299648779


- 1) "Straight" plug connector variant
- 2) "Right-angle" plug connector variant
- [1] Optional pressure compensation
- [2] X2313: DC 24 V output backup voltage
- [3] X1523: DC 24 V input backup voltage
- [4] X5504: STO (3-core, female)
- [5] X5505: STO (3-core, male)
- [6] X1203\_1: AC 400 V connection
- [7] X1203\_2: AC 400 V connection
- [8] X4141: Engineering interface

## Plug connector including mating connector

## INFORMATION



- The following figure shows the additional dimensions/bending radii of the optional plug connectors including mating connector in connection with prefabricated cables from SEW-EURODRIVE.
- For more information, refer to the chapter "Plug connector positions".

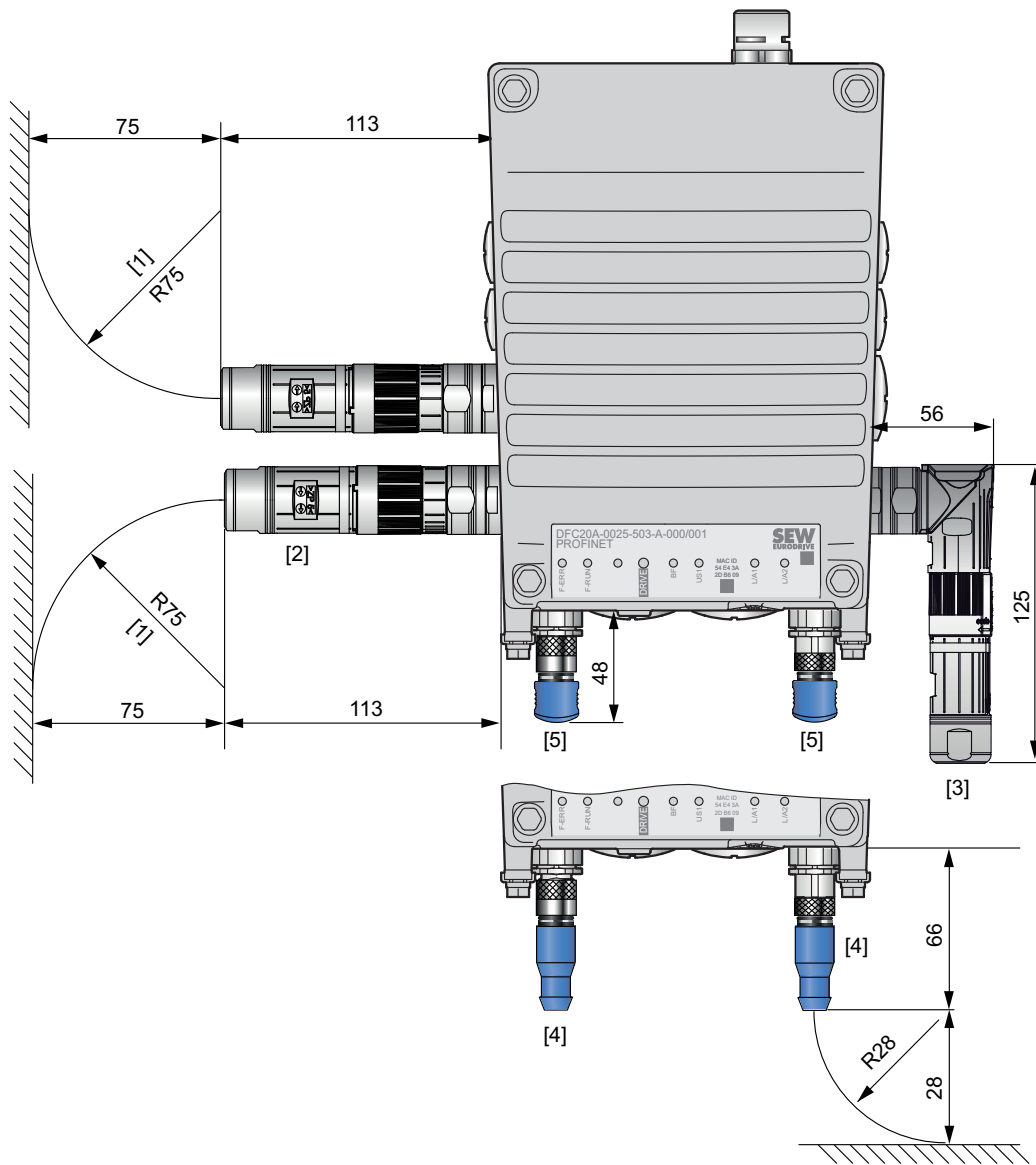

25299686795

- [1] Bending radius  
 [2] "Straight" plug connector variant M23  
 [3] "Right-angle" plug connector variant M23  
 [4] "Straight" plug connector variant M12  
 [5] "Right-angle" plug connector variant M12

## 12 Functional safety

### 12.1 General information

#### 12.1.1 Underlying standards

The safety assessment of the electronics cover is based on the following standards and safety classes:

Underlying standards	
Safety class/underlying standard	<ul style="list-style-type: none"> <li>• Performance level (PL) according to EN ISO 13849-1:2015</li> <li>• Safety Integrity Level (SIL) according to EN 61800-5-2:2017</li> <li>• Safety Integrity Level Claim Limit (SIL<sub>CL</sub>) according to EN 62061:2005/A1:2013</li> </ul>

### 12.2 Integrated Safety Technology

#### 12.2.1 Drive unit MOVIGEAR® performance

The safety technology of the drive unit described below has been developed and tested in accordance with the following safety requirements:

- Safety Integrity Level 3 according to EN 61800-5-2:2017, EN 61508:2010.
- PL e according to EN ISO 13849-1: 2015.

This was certified by TÜV Rheinland. Copies of the TÜV certificate and the corresponding report are available from SEW-EURODRIVE on request.

#### 12.2.2 Safe condition


For safety-related operation of the drive unit, Safe Torque Off is defined as safe state (see STO drive safety function). The safety concept is based on this definition.

### 12.2.3 Safety concept

The drive unit is supposed to be able to perform the drive safety function "Safe Torque Off" according to EN 61800-5-2:

- The drive unit can be connected to an external safety controller or safety relay. This external safety controller/safety relay disconnects the safety-related STO input via a 2-pole 24 V switching signal (sourcing/sinking) when a connected command device (e.g. emergency stop button with latching function) is activated. This activates the STO function of the drive unit.
- An internal, dual-channel structure with diagnostics prevents the generation of pulse trains at the power output stage (IGBT).
- Instead of galvanic isolation of the drive from the supply system by means of contactors or switches, the disconnection of the STO input described here safely prevents the control of the power semiconductors in the output stage. The rotary-field generation for the respective motor is deactivated even though the line voltage is still present.
- When the STO drive safety function is activated, the PWM signals generated by the drive unit are interrupted and not transmitted to the IGBTs.
- If the STO function detects a discrepancy between both channels, the PWM signals are inhibited. The inhibit can be revoked by a 24 V reset, or by a device reset if F\_STO\_P1 and F\_STO\_P2 are not controlled with 24 V.
- The STO drive safety function can be activated externally e.g. via an external safety device via the STO input.

### 12.2.4 Schematic representation of the safety concept

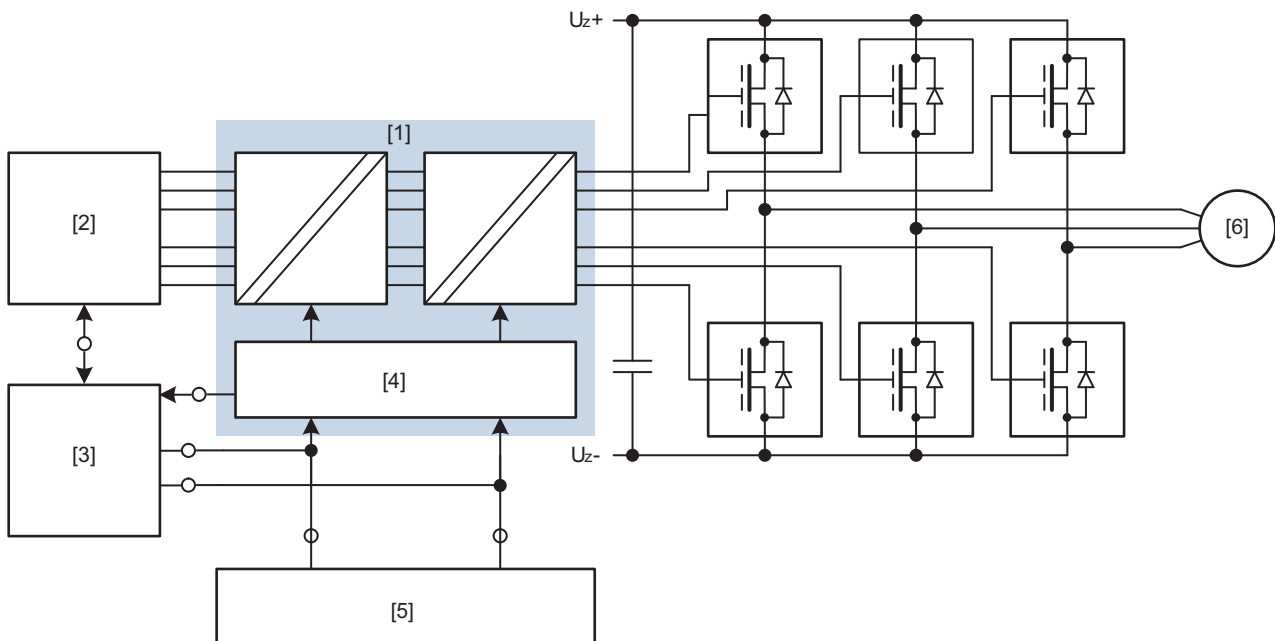

- [1] STO function
- [2] drive control
- [3] Internal safety card (optional)
- [4] Diagnostics and inhibiting unit
- [5] External safety controller (optional)
- [6] Motor

23543720971

25887130/EN – 11/2018

### 12.2.5 Drive safety functions


The following drive-related safety functions can be used:

- **STO** (Safe Torque Off according to EN 61800-5-2) by disconnecting the STO input.


If the STO function is activated, the frequency inverter no longer supplies power to the motor for generating torque. This drive safety function corresponds to a non-controlled stop according to EN 60204-1, stop category 0.

The STO input must be disabled by a suitable external safety controller/safety relay.

The following figure shows the STO function:

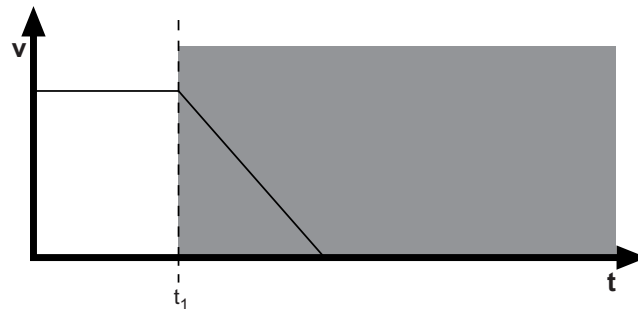

2463228171

v	Speed
t	Time
$t_1$	Point of time when STO is triggered
	Disconnection range


- **SS1(c) (SS1-t)** (safe stop 1, with time control according to EN 61800-5-2) by means of suitable external control (e.g. safety relay with delayed disconnection).

The following sequence is mandatory:

- Decelerate the drive using an appropriate deceleration ramp specified via set-points.
- Disconnect the STO input (= triggering the STO function) after a specified safety-related time delay.



This drive safety function corresponds to a controlled stop according to EN 60204-1, stop category 1.

The following figure illustrates the SS1(c) function (SS1-t):

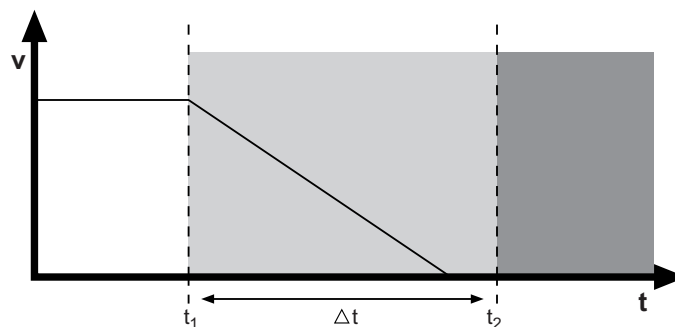

2463226251

v	Speed
---	-------

$t$	Time
$t_1$	Point of time when brake ramp is initiated
$t_2$	Point of time when STO is triggered
$\Delta t$	Delay time until STO is triggered
	Safe time delay range
	Disconnection range



### 12.2.6 Restrictions

- Note that if the drive does not have a mechanical brake, or if the brake is defective, the drive may coast to a halt (depending on the friction and mass moment of inertia of the system). In case of regenerative loads, or with axes that are loaded with gravitational forces or driven externally, the drive can even accelerate. This must be taken into account in a risk assessment of the system/machine. Additional safety measures might have to be implemented (e.g. safety brake system).

The drive unit cannot be used without an additional brake system for application-specific drive safety functions that require active deceleration (braking) of the dangerous movement.

- When using the SS1(c) function (SS1-t) as described in chapter "Drive safety functions" (→ 311), the deceleration ramp of the drive is not monitored with respect to safety. In case of a fault, the drive might not be decelerated after the delay time, or it might be accelerated in the worst case. In this case, the STO function is only activated after the set time delay has passed, see chapter "Drive safety functions" (→ 311). The resulting danger must be taken into account in the risk assessment of the system/machine. Additional safety measures might have to be implemented.
- The STO function cannot prevent a possible jerk or DC braking.

#### ⚠ WARNING



The safety concept is only suitable for performing mechanical work on driven system/machine components.

Severe or fatal injuries.

Hazardous voltages are present in the connection box when the STO signal is disconnected.

- Before working on the electric part of the drive system, disconnect it from the supply voltage using an appropriate external disconnecting device and secure it against unintentional reconnection to the voltage supply.

#### ⚠ WARNING



Electric shock due to incompletely discharged capacitors.

Severe or fatal injuries.

- Observe a minimum switch-off time of 5 minutes after disconnecting the power supply.

#### ℹ INFORMATION



In case the DC 24 V supply voltage at the STO port is disconnected for safety reasons, and if parameter *Apply brake/DynaStop® in STO state* (index 8501.3) is active, the brake/DynaStop® is switched off. The brake control in the drive unit is not safety-related.

## 12.3 Safety Conditions

The requirement for safe operation is that the drive safety functions of the drive unit are properly integrated into an application-specific higher-level drive safety function. A system/machine-specific risk assessment must be carried out by the system/machine manufacturer and taken into account for the use of the drive system with the drive unit.

The system/machine manufacturer and the operator are responsible for compliance of the system/machine with applicable safety regulations.

The following requirements are mandatory when installing and operating the drive unit in safety-related applications:

- Approved devices.
- Installation requirements.
- Requirements on external safety controllers and safety relays.
- Startup requirements.
- Operation requirements.

### 12.3.1 Approved devices

The following device variants are permitted for safety-related applications:

Drive unit	Nominal output current
MOVIGEAR® performance	2.0 – 5.5 A

### 12.3.2 Requirements on the installation

- The wiring technology used must comply with the standard EN 60204-1.
- The STO control cables must be routed according to EMC guidelines and as follows:
  - Inside an electrical installation space: Single conductors can be routed.
  - Outside a closed installation space: Shielded cables must be routed permanently (fixed) and protected against external damage, or equivalent measures have to be taken.
  - Adhere to the regulations in force for the application.
  - The sinking and sourcing cables from the external safety device to the axis must be routed right next to each other with a cable length of  $\leq 100$  m.
  - The sinking and sourcing cables from the external safety device to the axis must have the same cable length. A difference in length  $\leq 3\%$  of the two cables is permitted.
  - Using suitable measures, the user must ensure that STO control cable is routed separately from the power lines of the drive. This does not apply to cables approved by SEW-EURODRIVE specifically for this case of application.
- The STO function does not detect short circuits or interference voltage in the supply line. For this reason, one of the following 2 requirements must always be met:
  - No parasitic voltages can occur in the STO control cables.
  - The external safety controller can detect a crossfault from an external potential to the STO control lines.
- Observe the values specified for safety components when designing the safety circuits.
- The STO signal (F\_STO\_P1, F\_STO\_P2, and F\_STO\_M) may not be used for feedback.
- For safety controller/safety relays, you must only use grounded voltage sources with protective electrical separation (PELV) according to EN 61131-2 and EN 60204-1.

- If several voltage sources are used, each voltage source must be connected to a PE system.
- When planning the installation, observe the technical data of the electronics cover.
- When the STO control cables are routed to Terminal X9 in the electronics cover, the cable ends must be covered with conductor end sleeves and the cables must be fixed close to the terminal X9 using cable ties. Other the low-voltage signals can be bundled together with the STO signals.
- Do not use the port 24 V\_OUT of the electronics cover for safety-related applications. This voltage is only permitted to supply the M12 plug connector X5504 when the STO jumper is plugged in.
- To use the drive unit in safety-related applications, remove the jumpers labeled with "Caution, remove jumper for safety operation" from the STO terminal X9. No labeled jumpers are available for those designs where the STO connection is performed using plug connectors. The installed jumper is relevant to the function.

### 12.3.3 Requirements on the external safety controller

A safety relay can be used as an alternative to a safety controller. The following requirements apply analogously.

- The safety controller and all other safety-related subsystems must be approved for at least that safety class which is required in the overall system for the respective, application-related drive safety function.

The following table shows an example of the required safety class of the safety controller:

Application	Safety controller requirements
Performance level d according to EN ISO 13849-1, SIL 2 according to EN 62062	Performance level d according to EN ISO 13849-1 SIL 2 according to EN 61508
Performance level e according to EN ISO 13849-1, SIL 3 according to EN 62061	Performance level e according to EN ISO 13849-1, SIL 3 according to EN 61508

- The wiring of the safety controller must be suitable for the required safety class, (see manufacturer documentation). The STO input of the electronics cover can be switched with 2 poles (sourcing output, sourcing/sinking, or serial sourcing) or with 1 pole (sourcing).
- The values specified for the safety controller must be strictly adhered to when designing the circuit.
- Electro-sensitive protective equipment (such as light grid or scanner) according to EN 61496-1 and emergency stop buttons must not be directly connected to the STO input. The connection must be realized using safety relays, safety controllers etc.
- To ensure protection against unintended restart in accordance with EN 1037, the safe control system must be designed and connected in such a way that resetting the command device alone does not lead to a restart. A restart may only be carried out after a manual reset of the safety circuit.
- If no fault exclusion is used for the STO wiring according to EN ISO 13849-2 or DIN EN 61800-5-2, the external safety device must detect the following faults in the STO wiring within 20 s depending on the connection type:
  - 2-pole sourcing output:

Short circuit of 24 V at F\_STO\_P1 or F\_STO\_P2 (Stuck-at 1)

Crossfault between F\_STO\_P1 and F\_STO\_P2

- 2-pole sourcing/sinking:
  - Short circuit of 24 V at F\_STO\_P1 (Stuck-at 1)
  - Short circuit of 0 V at F\_STO\_M (Stuck-at 0)
- 2-pole serial sourcing:
  - Fault exclusion is mandatory
- 1-pole sourcing output:
  - Short circuit of 24 V at F\_STO\_P (Stuck-at 1)

#### **2-pole sourcing output:**

- Test pulses can be used when the device is switched on or off.
  - The test pulses on both sourcing channels must be switched with a time delay. However, additional switch-off test pulses may occur simultaneously.
  - The test pulses in both sourcing channels must not exceed 1 ms.
  - The next switch-off test pulse in one sourcing channel must only occur after a 2 ms time period.
  - A maximum of 3 switch-on test pulses may be generated in sequence at an interval of 2 ms. Wait for at least 500 ms before you generate the next 1 or 3 switch-on test pulses.
  - The signal levels must be played back by the safety controller and compared to the expected value.

#### **2-pole sourcing/sinking:**

- Test pulses can be used when the device is switched on or off.
  - The test pulses in the sourcing and sinking channel must not exceed 1 ms.
  - The next switch-off test pulse in the sourcing or sinking channel must only occur after a 2 ms time period.
  - A maximum of 3 switch-on test pulses may be generated in sequence at an interval of 2 ms. Wait for at least 500 ms before you generate the next 1 or 3 switch-on test pulses.
  - The signal levels must be played back by the safety controller and compared to the expected value.

#### **2-pole serial sourcing:**

- Fault exclusion in the connection lead is mandatory if no external test pulses are possible.

#### **1-pole sourcing output:**


- Test pulses can be used when the device is switched on or off.
  - The test pulse in the sourcing channel must not exceed 1 ms.
  - The next switch-off test pulse may only occur after a time period of 2 ms.
  - A maximum of 3 switch-on test pulses may be generated in sequence at an interval of 2 ms. Wait for at least 500 ms before you generate the next 1 or 3 switch-on test pulses.
  - The signal levels must be played back by the safety controller and compared to the expected value.

### 12.3.4 Requirements on startup

- To validate the implemented drive safety functions, they must be documented and checked after successful startup.
- Observe the restrictions for drive safety functions in chapter "Restrictions" for the validation of the safety functions. Non-safety-related parts and components that affect the result of the test (e.g. motor brake) must be deactivated, if necessary.
- For using the drive unit in safety-relevant applications, it is essential that you perform and record startup checks for the disconnecting device and correct wiring.

### 12.3.5 Requirements on operation

- Operation is only allowed within the limits specified in the data sheets. This principle applies to the external safety controller as well as to the drive unit.
- The built-in diagnostic function is limited in case of a permanently enabled or permanently disabled STO input. Only with a level change of the STO signal, extended diagnostic functions are performed. This is why the drive safety function via STO input must be triggered with connected line voltage at least once every 12 months for PL d according to EN ISO 13849-1 and SIL 2 according to EN 61800-5-2, and at least once every 3 months for PL e according to EN ISO 13849-1 and SIL 3 according to EN 61800-5-2 to achieve a complete test coverage. Adhere to the following test procedure.

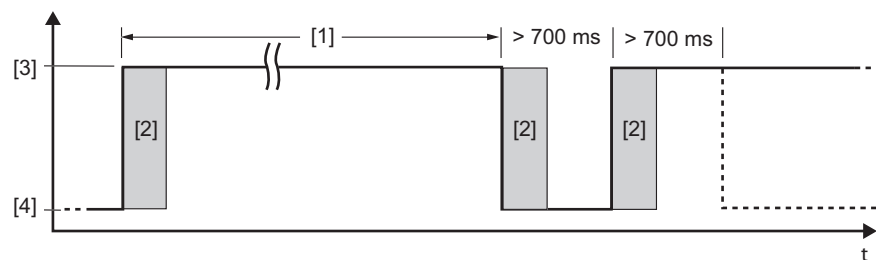

15205932683

- [1] Maximum 12 months with PL d/SIL 2  
Maximum 3 months with PL e/SIL 3

[2] Internal diagnostics

[3] High: No STO

[4] Low: STO active

- To achieve complete test coverage after a device reset (e.g. after connecting the line voltage), the test transition (STO active → not active) can only be started > 700 ms later. The device signals "ready for operation" or "STO – Safe Torque Off" if it is not in fault state.
- A detected hardware fault in the internal switch-off channels for STO will lead to a locking fault state of the drive unit. If the fault is reset (e.g. by switching the line voltage on/off or by a low level at the STO input for at least 30 ms), a complete test with internal diagnostics according to the above mentioned test procedure must be performed. If the fault occurs again, replace the device or contact the SEW-EURODRIVE Service.

## 12.4 Connections variants

### 12.4.1 General information

Generally, all the connection variants listed in this documentation are permitted for safety-relevant applications as long as the basic safety concept is met. This means you have to make sure that the DC 24 V safety inputs are operated by an external safety relay or a safety controller, thus preventing an automatic restart.

All safety conditions mentioned in chapters "Integrated Safety Technology" (→ 309), "Safety Conditions" (→ 313) and "Connection variants" must be met for the basic selection, installation, and application of the safety components, such as safety relay, emergency stop switch, etc., and the approved connection variants.

The wiring diagrams are block diagrams whose only purpose is to show the drive safety function(s) with the relevant components. For reasons of clarity, circuit-related measures that usually always have to be implemented are not shown in the diagram. These measures are e.g.:

- Ensuring touch guards.
- Handling overvoltages and undervoltages.
- Avoiding installation errors.
- Detecting ground faults or short circuits in externally installed lines.
- Guaranteeing the required interference immunity against electromagnetic interference.

### 12.4.2 Requirements

#### Use of safety relays


The requirements of the manufacturers of safety relays (such as protecting the output contacts against welding) or other safety components must be strictly observed. For cable routing, the basic requirements apply as described in this documentation.

For connecting the drive unit with the safety relays, observe the installation requirements in chapter "Requirements on the installation" (→ 314).

All instructions by the manufacturer on the use of safety relays for specific applications must also be observed.

### Use of safety controllers

The switch-off test pulse of the used safe digital outputs (F-DO) must be  $\leq 1$  ms and another switch-off test pulse must only occur 2 ms later.

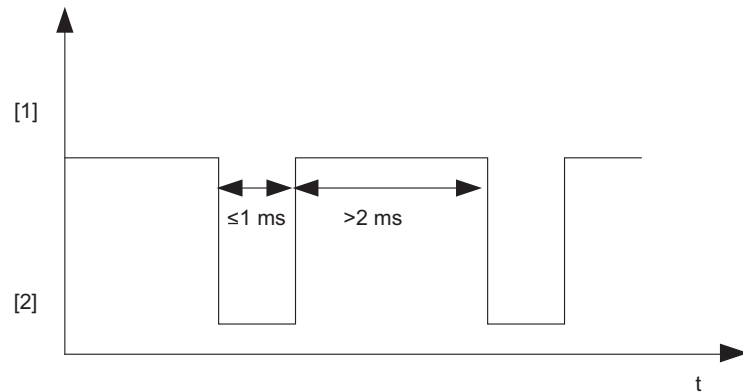

15214338827

[1] High

[2] Low

### INFORMATION



If the safety-related control voltage at the STO input is switched off (STO activated), the specifications in chapter "Requirements on the external safety controller" (→ 315) must be adhered to in regard to the test pulses.

### INFORMATION



If F\_STO\_P1, F\_STO\_P2 are connected to DC 24 V, and F\_STO\_M is connected to GND, STO is deactivated.

**Switching off the STO signal for several drive units (STO group disconnection)**

The STO signal for several drive units can be provided by a single safety relay. The following requirements must be met:

- The total cable length is limited to 100 m. Other instructions published by the manufacturer on the use of the safety device (for the respective application) must also be observed.
- The maximum output current and the maximally permitted contact load of the safety device must be observed.
- You must comply with the permitted signal levels at the STO input and all other technical data of the electronics cover. The routing of the STO control cables and the voltage drop must be considered.
- Other requirements of the safety manufacturer (such as protecting the output contacts against welding) must be strictly observed. The basic cable routing requirements apply.
- A calculation based on the technical data of the electronics cover must be performed separately for each case of STO group disconnection.
- A maximum of 20 drive units must be used in an STO group disconnection.




### 12.4.3 Connection variant 1: Terminal X9 in the connection box

For detailed information on terminal X9, refer to chapter "Electrical Installation" > "Terminal assignment".

#### Wiring diagrams

##### Delivery state


In delivery state, the terminals at the connection for safe disconnection X9 are jumpered. The jumpers are marked with the text "Caution, remove jumper for safety operation". To use the drive unit in safety-related applications, remove the jumpers from the STO terminal X9.

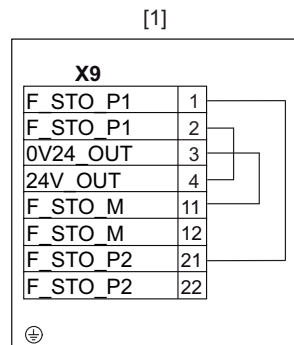

9007222815498379

[1] Drive unit


##### 2-pole sourcing

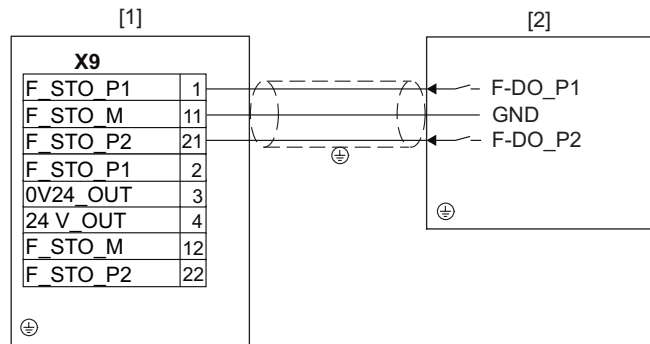

9007222818851979

[1] Drive unit  
[2] External safety device


#### 2-pole sourcing/sinking

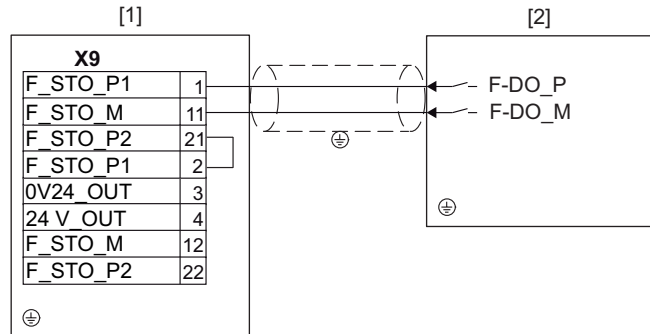

9007222818872587

- [1] Drive unit
- [2] External safety device


#### 2-pole serial sourcing

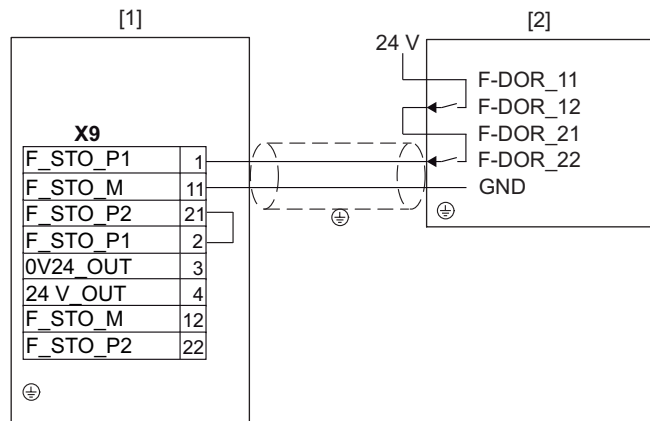

9007222818944907

- [1] Drive unit
- [2] External safety device


#### 1-pole sourcing

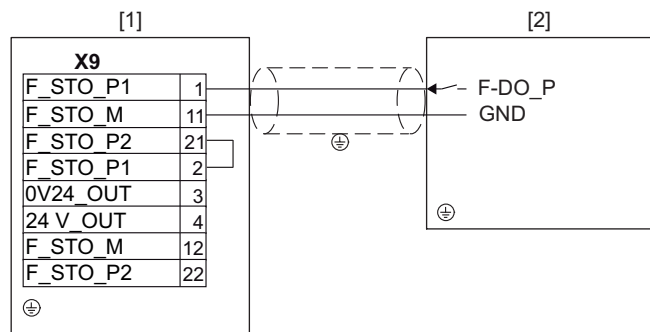

9007222819398155

- [1] Drive unit
- [2] External safety device


STO group disconnection, 2-pole, sourcing

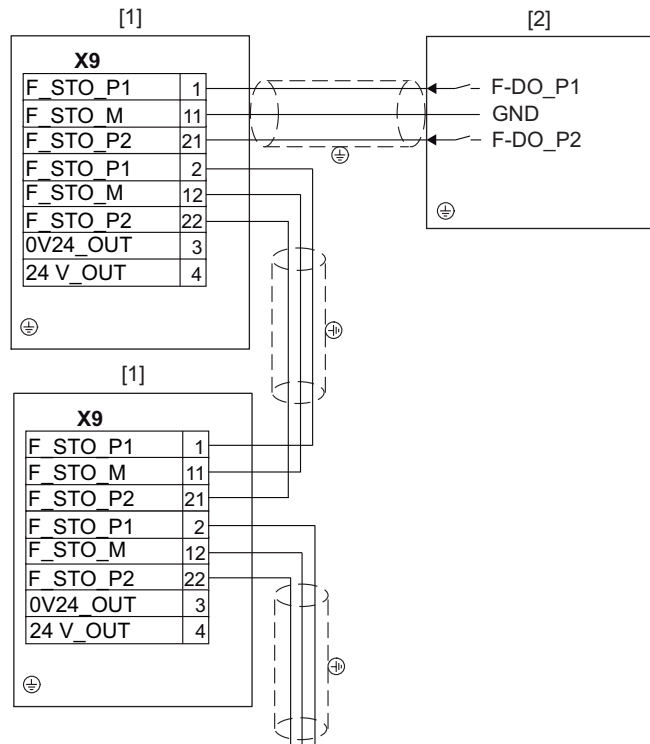

25228151435

- [1] Drive unit
- [2] External safety controller


STO group disconnection, 2-pole, sourcing/sinking

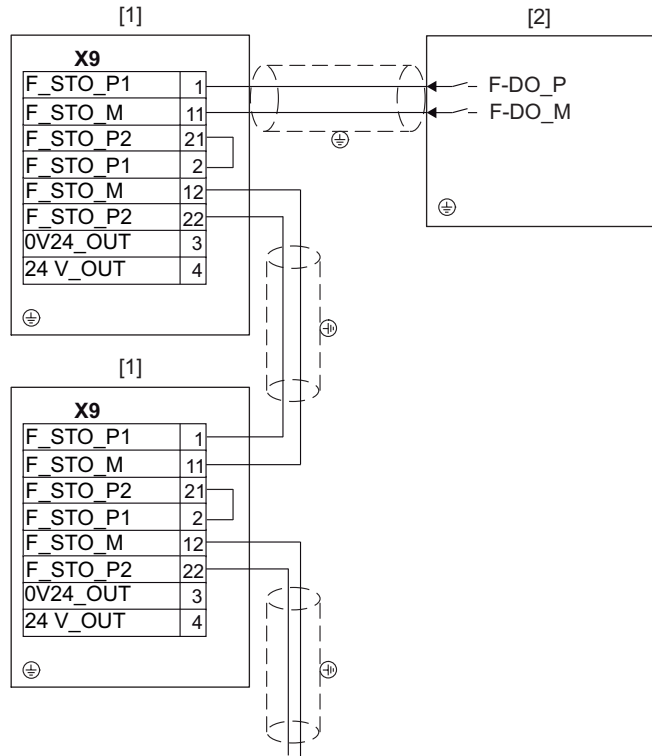

25228157067

- [1] Drive unit
- [2] External safety controller


STO group disconnection, 2-pole, serial sourcing

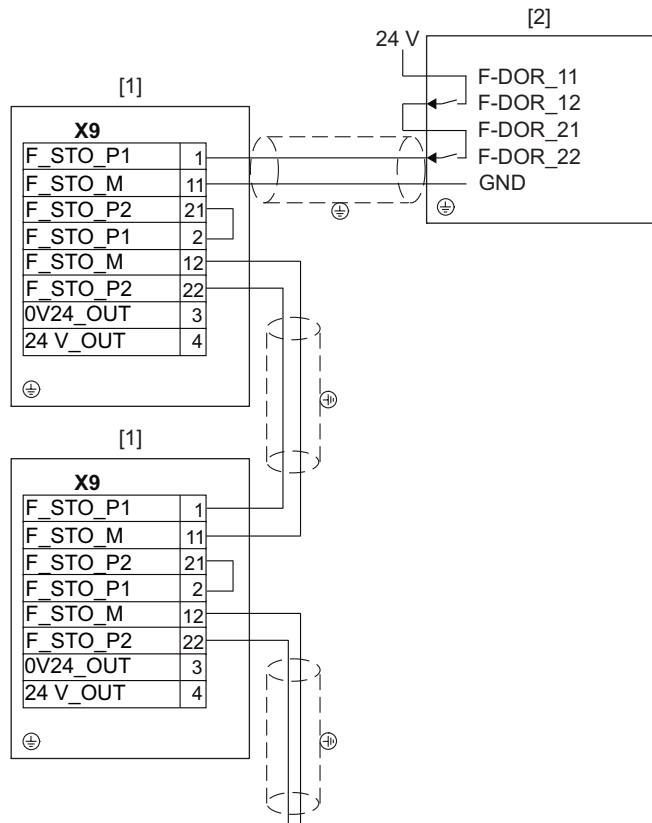

25229441035

- [1] Drive unit
- [2] External safety controller

STO group disconnection, 1-pole, sourcing

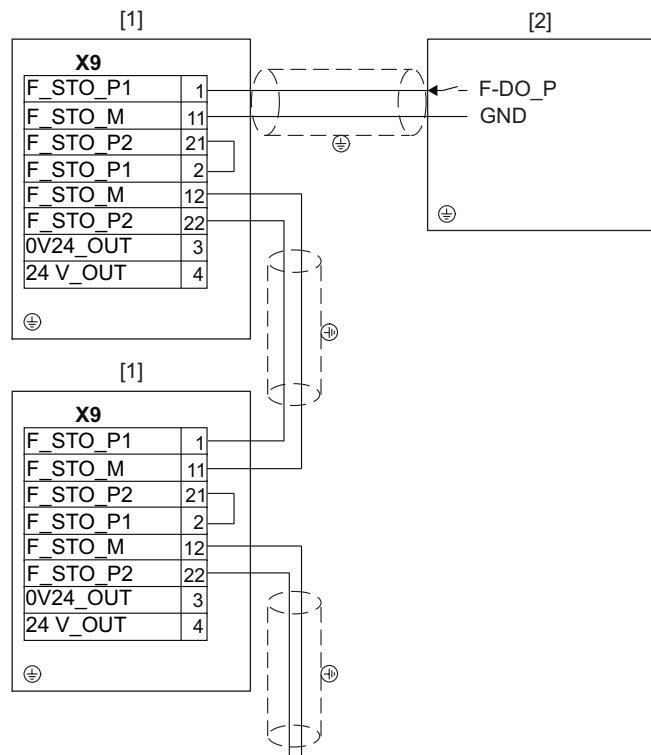

25229445003

- [1] Drive unit
- [2] External safety controller

12.4.4 Connection variant 2: M12 plug connector X5504/X5505 at the connection box


For further information on the connection of X5504/X5505, refer to chapter "Electrical installation" > "Assignment of optional plug connectors".

Wiring diagrams

Delivery state

In the delivery state, plug connector X5504 is not connected, this means the STO input is active. According to the safety concept, X5504 must be connected or temporarily jumpered using the optionally available STO jumper plug for starting up the unit.


2-pole sourcing

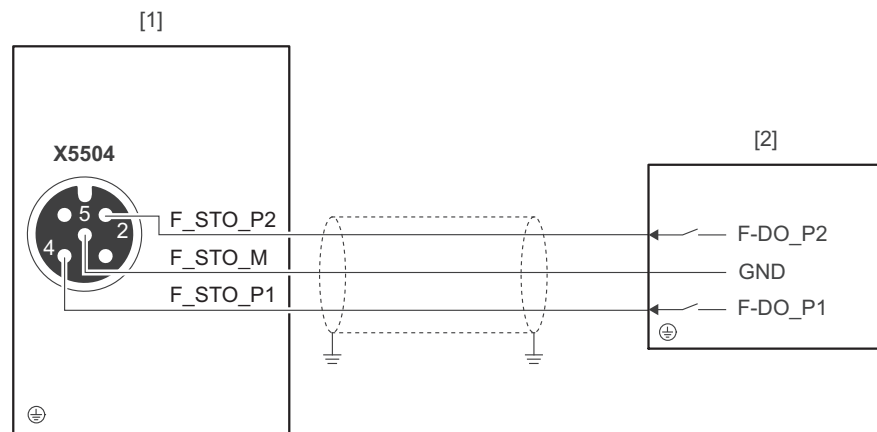

23876274315

- [1] Drive unit
- [2] External safety device


2-pole sourcing/sinking

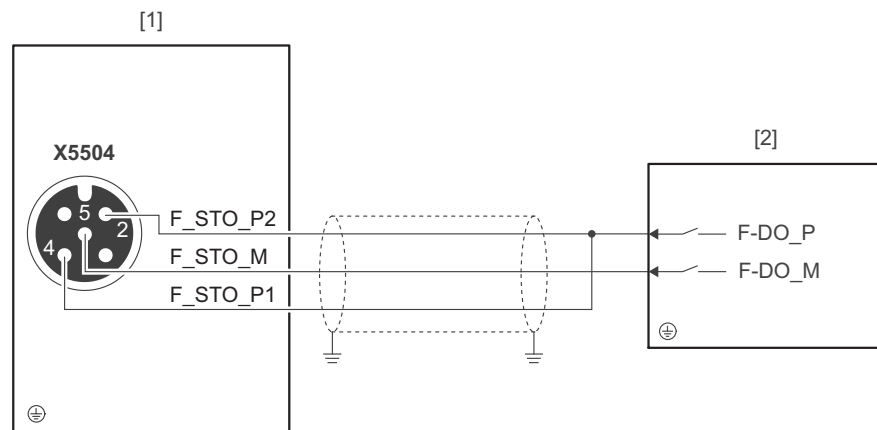

23876260491

- [1] Drive unit
- [2] External safety device


### 2-pole serial sourcing

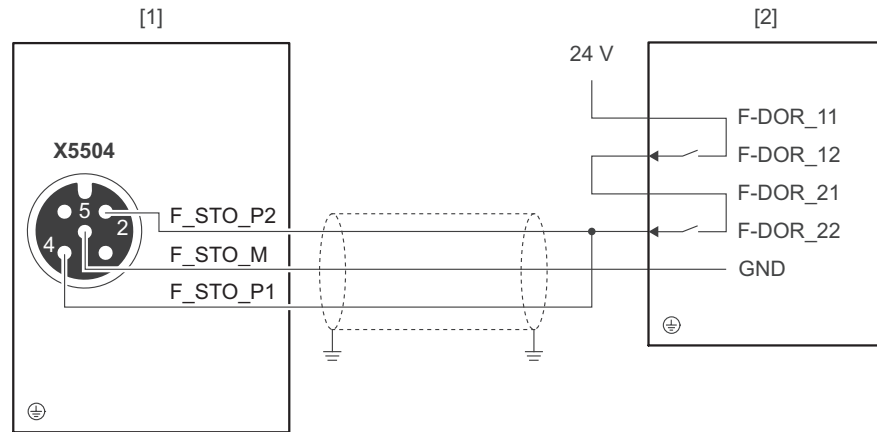

23875551243

- [1] Drive unit
- [2] External safety device

### 1-pole sourcing

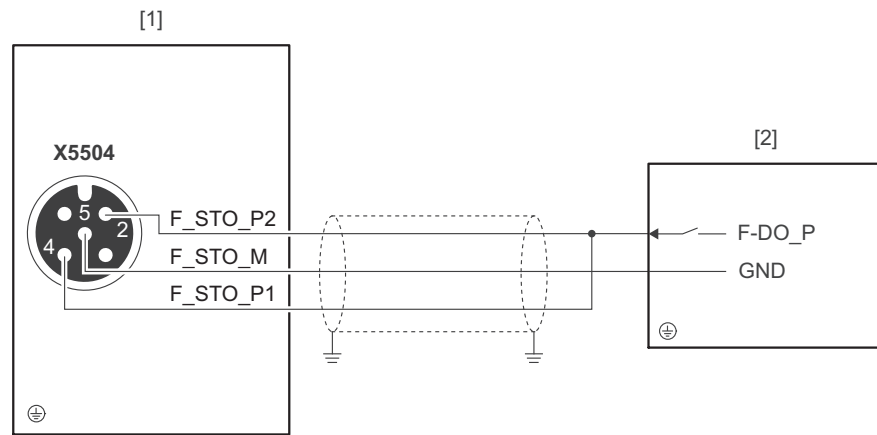


23875545995

- [1] Drive unit
- [2] External safety device



STO group disconnection, 2-pole, sourcing/sinking

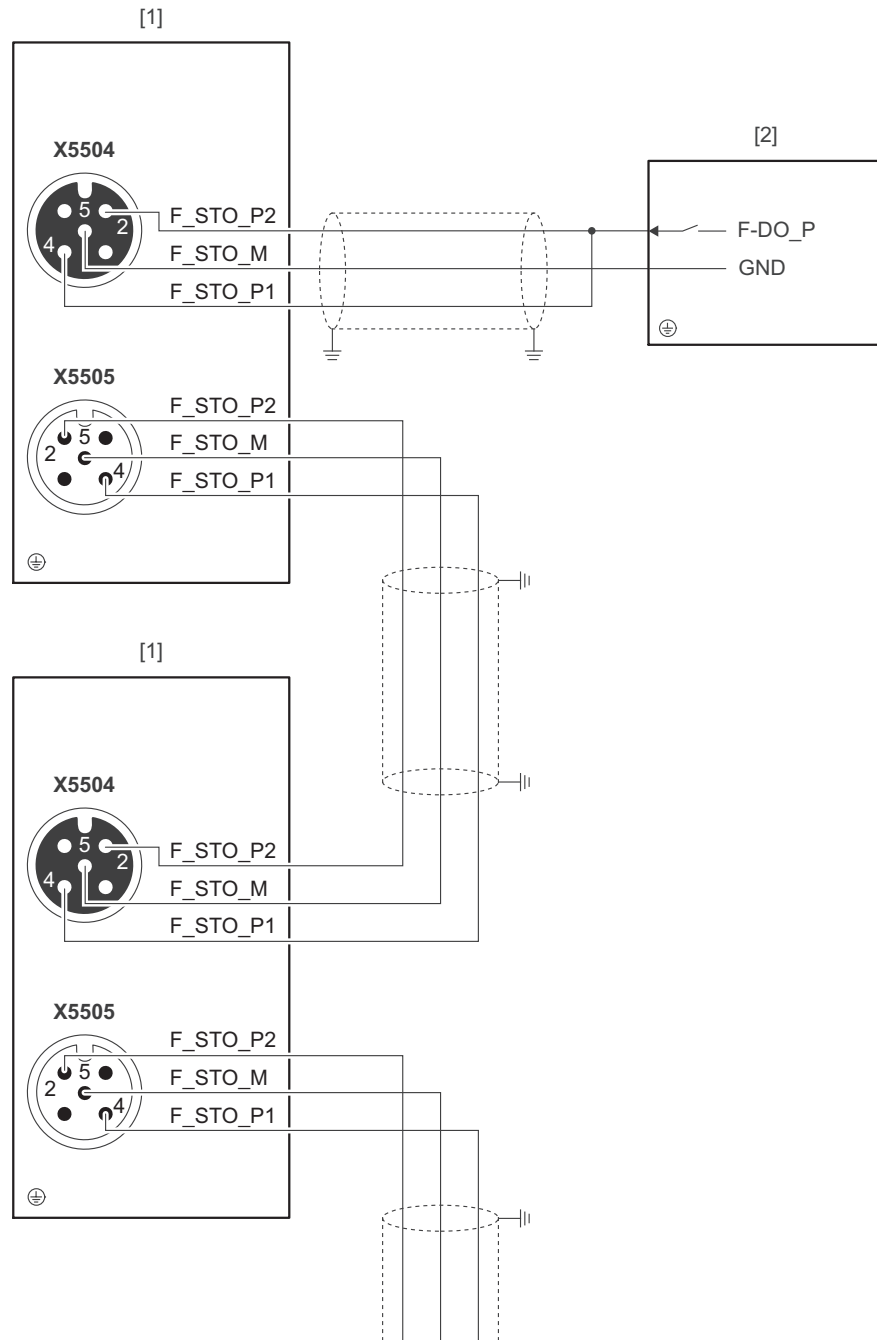


23887421195

- [1] Drive unit
- [2] External safety device

## STO jumper plug

A printed red tag is attached to the STO jumper plug. The STO jumper plug can be connected to the M12 plug connector X5504 of the drive unit. The STO jumper plug deactivates the safety functions of the drive unit.

The following figure shows the STO jumper plug with the printed **red** tag, part number 28105419:

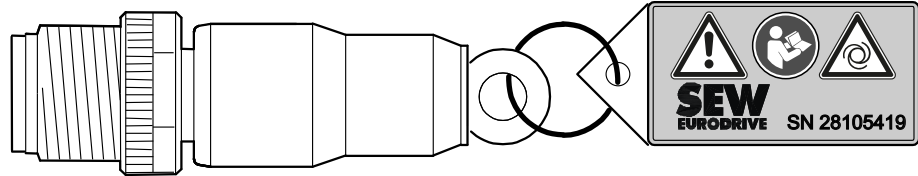

25247142411



### ⚠ WARNING

Safe disconnection of the drive unit is not possible when the STO jumper plug is used.

Severe or fatal injuries.

- You may only use the STO jumper plug if the drive unit is not used to fulfill any safety function.



### ⚠ WARNING

Disabling of safety-related disconnection of other drive units due to parasitic voltages when using an STO jumper plug.

Severe or fatal injuries.

- You may only use the STO jumper plug when all incoming and outgoing STO connections have been removed from the drive unit.

## 12.5 Safety characteristics

	Characteristic values according to	
	EN 61800-5-2	EN ISO 13849-1
Tested safety class/underlying standards	Safety integrity level 3	Performance level e
Probability of a dangerous failure per hour (PFH value)	$2.5 \times 10^{-9}$ 1/h	
Service life	20 years, after which the component must be replaced with a new one.	
Proof test interval	> 20 years	-
Safe state	Safe Torque Off (STO)	
Drive safety function	STO, SS1 <sup>1)</sup> according to EN 61800-5-2	

1) With suitable external control

### INFORMATION



With 1-pole wiring, the realizable performance level according to EN ISO 13849 is reduced to PL d. For the wiring between safety relay and STO input, a fault exclusion is necessary.

## 13 Address list

<b>Algeria</b>			
Sales	Algiers	REDUCOM Sarl 16, rue des Frères Zaghroune Bellevue 16200 El Harrach Alger	Tel. +213 21 8214-91 Fax +213 21 8222-84 <a href="http://www.reducom-dz.com">http://www.reducom-dz.com</a> <a href="mailto:info@reducom-dz.com">info@reducom-dz.com</a>
<b>Argentina</b>			
Assembly Sales	Buenos Aires	SEW EURODRIVE ARGENTINA S.A. Ruta Panamericana Km 37.5, Lote 35 (B1619IEA) Centro Industrial Garín Prov. de Buenos Aires	Tel. +54 3327 4572-84 Fax +54 3327 4572-21 <a href="http://www.sew-eurodrive.com.ar">http://www.sew-eurodrive.com.ar</a> <a href="mailto:sewar@sew-eurodrive.com.ar">sewar@sew-eurodrive.com.ar</a>
<b>Australia</b>			
Assembly Sales Service	Melbourne	SEW-EURODRIVE PTY. LTD. 27 Beverage Drive Tullamarine, Victoria 3043	Tel. +61 3 9933-1000 Fax +61 3 9933-1003 <a href="http://www.sew-eurodrive.com.au">http://www.sew-eurodrive.com.au</a> <a href="mailto:enquires@sew-eurodrive.com.au">enquires@sew-eurodrive.com.au</a>
	Sydney	SEW-EURODRIVE PTY. LTD. 9, Sleigh Place, Wetherill Park New South Wales, 2164	Tel. +61 2 9725-9900 Fax +61 2 9725-9905 <a href="mailto:enquires@sew-eurodrive.com.au">enquires@sew-eurodrive.com.au</a>
<b>Austria</b>			
Assembly Sales Service	Vienna	SEW-EURODRIVE Ges.m.b.H. Richard-Strauss-Straße 24 1230 Wien	Tel. +43 1 617 55 00-0 Fax +43 1 617 55 00-30 <a href="http://www.sew-eurodrive.at">http://www.sew-eurodrive.at</a> <a href="mailto:sew@sew-eurodrive.at">sew@sew-eurodrive.at</a>
<b>Bangladesh</b>			
Sales	Bangladesh	SEW-EURODRIVE INDIA PRIVATE LIMITED 345 DIT Road East Rampura Dhaka-1219, Bangladesh	Tel. +88 01729 097309 <a href="mailto:salesdhaka@seweurodrivebangladesh.com">salesdhaka@seweurodrivebangladesh.com</a>
<b>Belarus</b>			
Sales	Minsk	Foreign unitary production enterprise SEW- EURODRIVE RybalkoStr. 26 220033 Minsk	Tel. +375 17 298 47 56 / 298 47 58 Fax +375 17 298 47 54 <a href="http://www.sew.by">http://www.sew.by</a> <a href="mailto:sales@sew.by">sales@sew.by</a>
<b>Belgium</b>			
Assembly Sales Service	Brussels	SEW-EURODRIVE n.v./s.a. Researchpark Haasrode 1060 Evenementenlaan 7 3001 Leuven	Tel. +32 16 386-311 Fax +32 16 386-336 <a href="http://www.sew-eurodrive.be">http://www.sew-eurodrive.be</a> <a href="mailto:info@sew-eurodrive.be">info@sew-eurodrive.be</a>
Service Competence Center	Industrial Gears	SEW-EURODRIVE n.v./s.a. Rue du Parc Industriel, 31 6900 Marche-en-Famenne	Tel. +32 84 219-878 Fax +32 84 219-879 <a href="http://www.sew-eurodrive.be">http://www.sew-eurodrive.be</a> <a href="mailto:service-IG@sew-eurodrive.be">service-IG@sew-eurodrive.be</a>
<b>Brazil</b>			
Production Sales Service	São Paulo	SEW-EURODRIVE Brasil Ltda. Estrada Municipal José Rubim, 205 – Rodovia Santos Dumont Km 49 Indaiatuba – 13347-510 – SP	Tel. +55 19 3835-8000 <a href="mailto:sew@sew.com.br">sew@sew.com.br</a>
Assembly Sales Service	Rio Claro	SEW-EURODRIVE Brasil Ltda. Rodovia Washington Luiz, Km 172 Condomínio Industrial Conpark Caixa Postal: 327 13501-600 – Rio Claro / SP	Tel. +55 19 3522-3100 Fax +55 19 3524-6653 <a href="mailto:montadora.rc@sew.com.br">montadora.rc@sew.com.br</a>
	Joinville	SEW-EURODRIVE Brasil Ltda. Rua Dona Francisca, 12.346 – Pirabeiraba 89239-270 – Joinville / SC	Tel. +55 47 3027-6886 Fax +55 47 3027-6888 <a href="mailto:filial.sc@sew.com.br">filial.sc@sew.com.br</a>
<b>Bulgaria</b>			
Sales	Sofia	BEVER-DRIVE GmbH Bogdanovetz Str.1 1606 Sofia	Tel. +359 2 9151160 Fax +359 2 9151166 <a href="mailto:bever@bever.bg">bever@bever.bg</a>

<b>Cameroon</b>			
Sales	Douala	SEW-EURODRIVE S.A.R.L. Ancienne Route Bonabéri P.O. Box B.P 8674 Douala-Cameroun	Tel. +237 233 39 02 10 Fax +237 233 39 02 10 sew@sew-eurodrive-cm
<b>Canada</b>			
Assembly Sales Service	Toronto	SEW-EURODRIVE CO. OF CANADA LTD. 210 Walker Drive Bramalea, ON L6T 3W1	Tel. +1 905 791-1553 Fax +1 905 791-2999 <a href="http://www.sew-eurodrive.ca">http://www.sew-eurodrive.ca</a> l.watson@sew-eurodrive.ca
	Vancouver	SEW-EURODRIVE CO. OF CANADA LTD. Tilbury Industrial Park 7188 Honeyman Street Delta, BC V4G 1G1	Tel. +1 604 946-5535 Fax +1 604 946-2513 b.wake@sew-eurodrive.ca
	Montreal	SEW-EURODRIVE CO. OF CANADA LTD. 2001 Ch. de l'Aviation Dorval Quebec H9P 2X6	Tel. +1 514 367-1124 Fax +1 514 367-3677 n.paradis@sew-eurodrive.ca
<b>Chile</b>			
Assembly Sales Service	Santiago de Chile	SEW-EURODRIVE CHILE LTDA Las Encinas 1295 Parque Industrial Valle Grande LAMPA Santiago de Chile P.O. Box Casilla 23 Correo Quilicura - Santiago - Chile	Tel. +56 2 2757 7000 Fax +56 2 2757 7001 <a href="http://www.sew-eurodrive.cl">http://www.sew-eurodrive.cl</a> ventas@sew-eurodrive.cl
<b>China</b>			
Production Assembly Sales Service	Tianjin	SEW-EURODRIVE (Tianjin) Co., Ltd. No. 78, 13th Avenue, TEDA Tianjin 300457	Tel. +86 22 25322612 Fax +86 22 25323273 <a href="http://www.sew-eurodrive.cn">http://www.sew-eurodrive.cn</a> info@sew-eurodrive.cn
Assembly Sales Service	Suzhou	SEW-EURODRIVE (Suzhou) Co., Ltd. 333, Suhong Middle Road Suzhou Industrial Park Jiangsu Province, 215021	Tel. +86 512 62581781 Fax +86 512 62581783 suzhou@sew-eurodrive.cn
	Guangzhou	SEW-EURODRIVE (Guangzhou) Co., Ltd. No. 9, JunDa Road East Section of GETDD Guangzhou 510530	Tel. +86 20 82267890 Fax +86 20 82267922 guangzhou@sew-eurodrive.cn
	Shenyang	SEW-EURODRIVE (Shenyang) Co., Ltd. 10A-2, 6th Road Shenyang Economic Technological Development Area Shenyang, 110141	Tel. +86 24 25382538 Fax +86 24 25382580 shenyang@sew-eurodrive.cn
	Taiyuan	SEW-EURODRIVE (Taiyuan) Co., Ltd. No.3, HuaZhang Street, TaiYuan Economic & Technical Development Zone ShanXi, 030032	Tel. +86-351-7117520 Fax +86-351-7117522 taiyuan@sew-eurodrive.cn
	Wuhan	SEW-EURODRIVE (Wuhan) Co., Ltd. 10A-2, 6th Road No. 59, the 4th Quanli Road, WEDA 430056 Wuhan	Tel. +86 27 84478388 Fax +86 27 84478389 wuhan@sew-eurodrive.cn
	Xi'An	SEW-EURODRIVE (Xi'An) Co., Ltd. No. 12 Jinye 2nd Road Xi'An High-Technology Industrial Development Zone Xi'An 710065	Tel. +86 29 68686262 Fax +86 29 68686311 xian@sew-eurodrive.cn
Sales Service	Hong Kong	SEW-EURODRIVE LTD. Unit No. 801-806, 8th Floor Hong Leong Industrial Complex No. 4, Wang Kwong Road Kowloon, Hong Kong	Tel. +852 36902200 Fax +852 36902211 contact@sew-eurodrive.hk

<b>Colombia</b>			
Assembly Sales Service	Bogota	SEW-EURODRIVE COLOMBIA LTDA. Calle 17 No. 132-18 Interior 2 Bodega 6, Manzana B Santafé de Bogotá	Tel. +57 1 54750-50 Fax +57 1 54750-44 <a href="http://www.sew-eurodrive.com.co">http://www.sew-eurodrive.com.co</a> <a href="mailto:sew@sew-eurodrive.com.co">sew@sew-eurodrive.com.co</a>
<b>Croatia</b>			
Sales Service	Zagreb	KOMPEKS d. o. o. Zeleni dol 10 10 000 Zagreb	Tel. +385 1 4613-158 Fax +385 1 4613-158 <a href="mailto:kompeks@inet.hr">kompeks@inet.hr</a>
<b>Czech Republic</b>			
Assembly Sales Service	Hostivice	SEW-EURODRIVE CZ s.r.o. Floriánova 2459 253 01 Hostivice	Tel. +420 255 709 601 Fax +420 235 350 613 <a href="http://www.sew-eurodrive.cz">http://www.sew-eurodrive.cz</a> <a href="mailto:sew@sew-eurodrive.cz">sew@sew-eurodrive.cz</a>
	Drive Service Hotline / 24 Hour Service	+420 800 739 739 (800 SEW SEW)	Service Tel. +420 255 709 632 Fax +420 235 358 218 <a href="mailto:servis@sew-eurodrive.cz">servis@sew-eurodrive.cz</a>
<b>Denmark</b>			
Assembly Sales Service	Copenhagen	SEW-EURODRIVEA/S Geminivej 28-30 2670 Greve	Tel. +45 43 95 8500 Fax +45 43 9585-09 <a href="http://www.sew-eurodrive.dk">http://www.sew-eurodrive.dk</a> <a href="mailto:sew@sew-eurodrive.dk">sew@sew-eurodrive.dk</a>
<b>Egypt</b>			
Sales Service	Cairo	Copam Egypt for Engineering & Agencies Building 10, Block 13005, First Industrial Zone, Obour City Cairo	Tel. +202 44812673 / 79 (7 lines) Fax +202 44812685 <a href="http://www.copam-egypt.com">http://www.copam-egypt.com</a> <a href="mailto:copam@copam-egypt.com">copam@copam-egypt.com</a>
<b>Estonia</b>			
Sales	Tallin	ALAS-KUUL AS Reti tee 4 75301 Peetri küla, Rae vald, Harjumaa	Tel. +372 6593230 Fax +372 6593231 <a href="http://www.alas-kuul.ee">http://www.alas-kuul.ee</a> <a href="mailto:veiko.soots@alas-kuul.ee">veiko.soots@alas-kuul.ee</a>
<b>Finland</b>			
Assembly Sales Service	Hollola	SEW-EURODRIVE OY Vesimäentie 4 15860 Hollola	Tel. +358 201 589-300 Fax +358 3 780-6211 <a href="http://www.sew-eurodrive.fi">http://www.sew-eurodrive.fi</a> <a href="mailto:sew@sew.fi">sew@sew.fi</a>
Service	Hollola	SEW-EURODRIVE OY Keskikankaantie 21 15860 Hollola	Tel. +358 201 589-300 Fax +358 3 780-6211 <a href="http://www.sew-eurodrive.fi">http://www.sew-eurodrive.fi</a> <a href="mailto:sew@sew.fi">sew@sew.fi</a>
Production Assembly	Karkkila	SEW Industrial Gears Oy Santasalonkatu 6, PL 8 03620 Karkkila, 03601 Karkkila	Tel. +358 201 589-300 Fax +358 201 589-310 <a href="http://www.sew-eurodrive.fi">http://www.sew-eurodrive.fi</a> <a href="mailto:sew@sew.fi">sew@sew.fi</a>
<b>France</b>			
Production Sales Service	Hagenau	SEW-USOCOME 48-54 route de Soufflenheim B. P. 20185 67506 Haguenau Cedex	Tel. +33 3 88 73 67 00 Fax +33 3 88 73 66 00 <a href="http://www.usocom.com">http://www.usocom.com</a> <a href="mailto:sew@usocom.com">sew@usocom.com</a>
Production	Forbach	SEW-USOCOME Zone industrielle Technopôle Forbach Sud B. P. 30269 57604 Forbach Cedex	Tel. +33 3 87 29 38 00
	Brumath	SEW-USOCOME 1 Rue de Bruxelles 67670 Mommenheim Cedex	Tel. +33 3 88 37 48 00
Assembly Sales Service	Bordeaux	SEW-USOCOME Parc d'activités de Magellan 62 avenue de Magellan – B. P. 182 33607 Pessac Cedex	Tel. +33 5 57 26 39 00 Fax +33 5 57 26 39 09

France			
	Lyon	SEW-USOCOME 75 rue Antoine Condorcet 38090 Vaulx-Milieu	Tel. +33 4 74 99 60 00 Fax +33 4 74 99 60 15
	Nantes	SEW-USOCOME Parc d'activités de la forêt 4 rue des Fontenelles 44140 Le Bignon	Tel. +33 2 40 78 42 00 Fax +33 2 40 78 42 20
	Paris	SEW-USOCOME Zone industrielle 2 rue Denis Papin 77390 Verneuil l'Étang	Tel. +33 1 64 42 40 80 Fax +33 1 64 42 40 88
Gabon			
Sales	Libreville	SEW-EURODRIVE SARL 183, Rue 5.033.C, Lalala à droite P.O. Box 15682 Libreville	Tel. +241 03 28 81 55 +241 06 54 81 33 <a href="http://www.sew-eurodrive.cm">http://www.sew-eurodrive.cm</a> <a href="mailto:sew@sew-eurodrive.cm">sew@sew-eurodrive.cm</a>
Germany			
Headquarters Production Sales	Bruchsal	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 42 76646 Bruchsal	Tel. +49 7251 75-0 Fax +49 7251 75-1970 <a href="http://www.sew-eurodrive.de">http://www.sew-eurodrive.de</a> <a href="mailto:sew@sew-eurodrive.de">sew@sew-eurodrive.de</a>
Production / Industrial Gears	Bruchsal	SEW-EURODRIVE GmbH & Co KG Christian-Pähr-Str. 10 76646 Bruchsal	Tel. +49 7251 75-0 Fax +49 7251 75-2970
Production	Graben	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 1 76676 Graben-Neudorf	Tel. +49 7251 75-0 Fax +49 7251-2970
	Östringen	SEW-EURODRIVE GmbH & Co KG, Werk Östringen Franz-Gurk-Straße 2 76684 Östringen	Tel. +49 7253 9254-0 Fax +49 7253 9254-90 <a href="mailto:oesstringen@sew-eurodrive.de">oesstringen@sew-eurodrive.de</a>
Service Competence Center	Mechanics / Mechatronics	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 1 76676 Graben-Neudorf	Tel. +49 7251 75-1710 Fax +49 7251 75-1711 <a href="mailto:scc-mechanik@sew-eurodrive.de">scc-mechanik@sew-eurodrive.de</a>
	Electronics	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 42 76646 Bruchsal	Tel. +49 7251 75-1780 Fax +49 7251 75-1769 <a href="mailto:scc-elektronik@sew-eurodrive.de">scc-elektronik@sew-eurodrive.de</a>
Drive Technology Center	North	SEW-EURODRIVE GmbH & Co KG Alte Ricklinger Straße 40-42 30823 Garbsen (Hannover)	Tel. +49 5137 8798-30 Fax +49 5137 8798-55 <a href="mailto:dtc-nord@sew-eurodrive.de">dtc-nord@sew-eurodrive.de</a>
	East	SEW-EURODRIVE GmbH & Co KG Dänkritzer Weg 1 08393 Meerane (Zwickau)	Tel. +49 3764 7606-0 Fax +49 3764 7606-30 <a href="mailto:dtc-ost@sew-eurodrive.de">dtc-ost@sew-eurodrive.de</a>
	South	SEW-EURODRIVE GmbH & Co KG Domagkstraße 5 85551 Kirchheim (München)	Tel. +49 89 909552-10 Fax +49 89 909552-50 <a href="mailto:dtc-sued@sew-eurodrive.de">dtc-sued@sew-eurodrive.de</a>
	West	SEW-EURODRIVE GmbH & Co KG Siemensstraße 1 40764 Langenfeld (Düsseldorf)	Tel. +49 2173 8507-30 Fax +49 2173 8507-55 <a href="mailto:dtc-west@sew-eurodrive.de">dtc-west@sew-eurodrive.de</a>
Drive Center	Berlin	SEW-EURODRIVE GmbH & Co KG Alexander-Meißner-Straße 44 12526 Berlin	Tel. +49 306331131-30 Fax +49 306331131-36 <a href="mailto:dc-berlin@sew-eurodrive.de">dc-berlin@sew-eurodrive.de</a>
	Ludwigshafen	SEW-EURODRIVE GmbH & Co KG c/o BASF SE Gebäude W130 Raum 101 67056 Ludwigshafen	Tel. +49 7251 75 3759 Fax +49 7251 75 503759 <a href="mailto:dc-ludwigshafen@sew-eurodrive.de">dc-ludwigshafen@sew-eurodrive.de</a>
	Saarland	SEW-EURODRIVE GmbH & Co KG Gottlieb-Daimler-Straße 4 66773 Schwalbach Saar – Hülzweiler	Tel. +49 6831 48946 10 Fax +49 6831 48946 13 <a href="mailto:dc-saarland@sew-eurodrive.de">dc-saarland@sew-eurodrive.de</a>
	Ulm	SEW-EURODRIVE GmbH & Co KG Dieselstraße 18 89160 Dornstadt	Tel. +49 7348 9885-0 Fax +49 7348 9885-90 <a href="mailto:dc-ulm@sew-eurodrive.de">dc-ulm@sew-eurodrive.de</a>

# 13 Address list

Germany			
	Würzburg	SEW-EURODRIVE GmbH & Co KG Nürnbergerstraße 118 97076 Würzburg-Lengfeld	Tel. +49 931 27886-60 Fax +49 931 27886-66 dc-wuerzburg@sew-eurodrive.de
Drive Service Hotline / 24 Hour Service			0 800 SEWHELP 0 800 7394357
Great Britain			
Assembly Sales Service	Normanton	SEW-EURODRIVE Ltd. DeVilliers Way Trident Park Normanton West Yorkshire WF6 1GX	Tel. +44 1924 893-855 Fax +44 1924 893-702 <a href="http://www.sew-eurodrive.co.uk">http://www.sew-eurodrive.co.uk</a> info@sew-eurodrive.co.uk
Drive Service Hotline / 24 Hour Service			Tel. 01924 896911
Greece			
Sales	Athens	Christ. Boznos & Son S.A. 12, K. Mavromichali Street P.O. Box 80136 18545 Piraeus	Tel. +30 2 1042 251-34 Fax +30 2 1042 251-59 <a href="http://www.boznos.gr">http://www.boznos.gr</a> info@boznos.gr
Hungary			
Sales Service	Budapest	SEW-EURODRIVE Kft. Csillaghegyi út 13. 1037 Budapest	Tel. +36 1 437 06-58 Fax +36 1 437 06-50 <a href="http://www.sew-eurodrive.hu">http://www.sew-eurodrive.hu</a> office@sew-eurodrive.hu
Iceland			
Sales	Reykjavik	Varma & Vélaverk ehf. Knarrarvogi 4 104 Reykjavik	Tel. +354 585 1070 Fax +354 585)1071 <a href="http://www.varmaverk.is">http://www.varmaverk.is</a> vov@vov.is
India			
Registered Office Assembly Sales Service	Vadodara	SEW-EURODRIVE India Private Limited Plot No. 4, GIDC POR Ramangamdi • Vadodara - 391 243 Gujarat	Tel. +91 265 3045200 Fax +91 265 3045300 <a href="http://www.seweurodriveindia.com">http://www.seweurodriveindia.com</a> salesvadodara@seweurodriveindia.com
Assembly Sales Service	Chennai	SEW-EURODRIVE India Private Limited Plot No. K3/1, Sipcot Industrial Park Phase II Mambakkam Village Sriperumbudur - 602105 Kancheepuram Dist, Tamil Nadu	Tel. +91 44 37188888 Fax +91 44 37188811 saleschennai@seweurodriveindia.com
	Pune	SEW-EURODRIVE India Private Limited Plant: Plot No. D236/1, Chakan Industrial Area Phase- II, Warale, Tal- Khed, Pune-410501, Maharashtra	Tel. +91 21 35 628700 Fax +91 21 35 628715 salespune@seweurodriveindia.com
Indonesia			
Sales	Medan	PT. Serumpun Indah Lestari Jl.Pulau Solor no. 8, Kawasan Industri Medan II Medan 20252	Tel. +62 61 687 1221 Fax +62 61 6871429 / +62 61 6871458 / +62 61 30008041 sil@serumpunindah.com serumpunindah@yahoo.com <a href="http://www.serumpunindah.com">http://www.serumpunindah.com</a>
	Jakarta	PT. Cahaya Sukses Abadi Komplek Rukan Puri Mutiara Blok A no 99, Sunter Jakarta 14350	Tel. +62 21 65310599 Fax +62 21 65310600 csajkt@cbn.net.id
	Jakarta	PT. Agrindo Putra Lestari Jl.Pantai Indah Selatan, Komplek Sentra In- dustri Terpadu, Pantai indah Kapuk Tahap III, Blok E No. 27 Jakarta 14470	Tel. +62 21 2921-8899 Fax +62 21 2921-8988 aplindo@indosat.net.id <a href="http://www.aplindo.com">http://www.aplindo.com</a>

25887130/EN – 11/2018



**Indonesia**

Surabaya	PT. TRIAGRI JAYA ABADI Jl. Sukosemolo No. 63, Galaxi Bumi Permai G6 No. 11 Surabaya 60111	Tel. +62 31 5990128 Fax +62 31 5962666 sales@triagri.co.id <a href="http://www.triagri.co.id">http://www.triagri.co.id</a>
Surabaya	CV. Multi Mas Jl. Raden Saleh 43A Kav. 18 Surabaya 60174	Tel. +62 31 5458589 Fax +62 31 5317220 sianhwa@sby.centrin.net.id <a href="http://www.cvmultimas.com">http://www.cvmultimas.com</a>

**Ireland**

Sales Service	Dublin	Alperton Engineering Ltd. 48 Moyle Road Dublin Industrial Estate Glasnevin, Dublin 11	Tel. +353 1 830-6277 Fax +353 1 830-6458 <a href="http://www.alperton.ie">http://www.alperton.ie</a> info@alperton.ie
------------------	--------	--	--

**Israel**

Sales	Tel Aviv	Liraz Handasa Ltd. Ahofer Str 34B / 228 58858 Holon	Tel. +972 3 5599511 Fax +972 3 5599512 <a href="http://www.liraz-handasa.co.il">http://www.liraz-handasa.co.il</a> office@liraz-handasa.co.il
-------	----------	---	--

**Italy**

Assembly Sales Service	Milan	SEW-EURODRIVE di R. Blickle & Co.s.a.s. Via Bernini,14 20020 Solaro (Milano)	Tel. +39 02 96 980229 Fax +39 02 96 980 999 <a href="http://www.sew-eurodrive.it">http://www.sew-eurodrive.it</a> milano@sew-eurodrive.it
------------------------------	-------	--	--

**Ivory Coast**

Sales	Abidjan	SEW-EURODRIVE SARL Ivory Coast Rue des Pêcheurs, Zone 3 26 BP 916 Abidjan 26	Tel. +225 21 21 81 05 Fax +225 21 25 30 47 info@sew-eurodrive.ci <a href="http://www.sew-eurodrive.ci">http://www.sew-eurodrive.ci</a>
-------	---------	---	---

**Japan**

Assembly Sales Service	Iwata	SEW-EURODRIVE JAPAN CO., LTD 250-1, Shimoman-no, Iwata Shizuoka 438-0818	Tel. +81 538 373811 Fax +81 538 373814 <a href="http://www.sew-eurodrive.co.jp">http://www.sew-eurodrive.co.jp</a> sewjapan@sew-eurodrive.co.jp hamamatsu@sew-eurodrive.co.jp
------------------------------	-------	---	---

**Kazakhstan**

Sales	Almaty	SEW-EURODRIVE LLP 291-291A, Tole bi street 050031, Almaty	Tel. +7 (727) 350 5156 Fax +7 (727) 350 5156 <a href="http://www.sew-eurodrive.kz">http://www.sew-eurodrive.kz</a> sew@sew-eurodrive.kz
	Tashkent	SEW-EURODRIVE LLP Representative office in Uzbekistan 96A, Sharaf Rashidov street, Tashkent, 100084	Tel. +998 71 2359411 Fax +998 71 2359412 <a href="http://www.sew-eurodrive.uz">http://www.sew-eurodrive.uz</a> sew@sew-eurodrive.uz
	Ulaanbaatar	IM Trading LLC Olympic street 28B/3 Sukhbaatar district, Ulaanbaatar 14230	Tel. +976-77109997 Fax +976-77109997 imt@imt.mn

**Kenya**

Sales	Nairobi	SEW-EURODRIVE Pty Ltd Transnational Plaza, 5th Floor Mama Ngina Street P.O. Box 8998-00100 Nairobi	Tel. +254 791 398840 <a href="http://www.sew-eurodrive.co.tz">http://www.sew-eurodrive.co.tz</a> info@sew.co.tz
-------	---------	--	---

**Latvia**

Sales	Riga	SIA Alas-Kuul Katlakalna 11C 1073 Riga	Tel. +371 6 7139253 Fax +371 6 7139386 <a href="http://www.alas-kuul.lv">http://www.alas-kuul.lv</a> info@alas-kuul.com
-------	------	--	--

<b>Lebanon</b>			
Sales (Lebanon)	Beirut	Gabriel Acar & Fils sarl B. P. 80484 Bourj Hammoud, Beirut	Tel. +961 1 510 532 Fax +961 1 494 971 ssacar@inco.com.lb
Sales (Jordan, Kuwait , Beirut Saudi Arabia, Syria)		Middle East Drives S.A.L. (offshore) Sin El Fil. B. P. 55-378 Beirut	Tel. +961 1 494 786 Fax +961 1 494 971 <a href="http://www.medrives.com">http://www.medrives.com</a> info@medrives.com
<b>Lithuania</b>			
Sales	Alytus	UAB Irseva Statybininku 106C 63431 Alytus	Tel. +370 315 79204 Fax +370 315 56175 <a href="http://www.irseva.lt">http://www.irseva.lt</a> irmantas@irseva.lt
<b>Luxembourg</b>			
Representation: Belgium			
<b>Macedonia</b>			
Sales	Skopje	Boznos DOOEL Dime Anicin 2A/7A 1000 Skopje	Tel. +389 23256553 Fax +389 23256554 <a href="http://www.boznos.mk">http://www.boznos.mk</a>
<b>Malaysia</b>			
Assembly Sales Service	Johor	SEW-EURODRIVE SDN BHD No. 95, Jalan Seroja 39, Taman Johor Jaya 81000 Johor Bahru, Johor West Malaysia	Tel. +60 7 3549409 Fax +60 7 3541404 sales@sew-eurodrive.com.my
<b>Mexico</b>			
Assembly Sales Service	Quéretaro	SEW-EURODRIVE MEXICO S.A. de C.V. SEM-981118-M93 Tequisquiapan No. 102 Parque Industrial Quéretaro C.P. 76220 Querétaro, México	Tel. +52 442 1030-300 Fax +52 442 1030-301 <a href="http://www.sew-eurodrive.com.mx">http://www.sew-eurodrive.com.mx</a> scmexico@seweurodrive.com.mx
Sales Service	Puebla	SEW-EURODRIVE MEXICO S.A. de C.V. Calzada Zavaleta No. 3922 Piso 2 Local 6 Col. Santa Cruz Buenavista C.P. 72154 Puebla, México	Tel. +52 (222) 221 248 <a href="http://www.sew-eurodrive.com.mx">http://www.sew-eurodrive.com.mx</a> scmexico@seweurodrive.com.mx
<b>Mongolia</b>			
Technical Office	Ulaanbaatar	IM Trading LLC Olympic street 28B/3 Sukhbaatar district, Ulaanbaatar 14230	Tel. +976-77109997 Tel. +976-99070395 Fax +976-77109997 <a href="http://imt.mn/">http://imt.mn/</a> imt@imt.mn
<b>Morocco</b>			
Sales Service	Bouskoura	SEW-EURODRIVE Morocco Parc Industriel CFCIM, Lot 55 and 59 Bouskoura	Tel. +212 522 88 85 00 Fax +212 522 88 84 50 <a href="http://www.sew-eurodrive.ma">http://www.sew-eurodrive.ma</a> sew@sew-eurodrive.ma
<b>Namibia</b>			
Sales	Swakopmund	DB Mining & Industrial Services Einstein Street Strauss Industrial Park Unit1 Swakopmund	Tel. +264 64 462 738 Fax +264 64 462 734 anton@dbminingnam.com
<b>Netherlands</b>			
Assembly Sales Service	Rotterdam	SEW-EURODRIVE B.V. Industrieweg 175 3044 AS Rotterdam Postbus 10085 3004 AB Rotterdam	Tel. +31 10 4463-700 Fax +31 10 4155-552 Service: 0800-SEWHELP <a href="http://www.sew-eurodrive.nl">http://www.sew-eurodrive.nl</a> info@sew-eurodrive.nl

**New Zealand**

Assembly Sales Service	Auckland	SEW-EURODRIVE NEW ZEALAND LTD. P.O. Box 58-428 82 Greenmount drive East Tamaki Auckland	Tel. +64 9 2745627 Fax +64 9 2740165 <a href="http://www.sew-eurodrive.co.nz">http://www.sew-eurodrive.co.nz</a> sales@sew-eurodrive.co.nz
	Christchurch	SEW-EURODRIVE NEW ZEALAND LTD. 30 Lodestar Avenue, Wigram Christchurch	Tel. +64 3 384-6251 Fax +64 3 384-6455 sales@sew-eurodrive.co.nz

**Nigeria**

Sales	Lagos	Greenpeg Nig. Ltd Plot 296A, Adeyemo Akapo Str. Omole GRA Ikeja Lagos-Nigeria	Tel. +234-701-821-9200-1 <a href="http://www.greenpeg ltd.com">http://www.greenpeg ltd.com</a> bolaji.adekunle@greenpeg ltd.com
-------	-------	---	---

**Norway**

Assembly Sales Service	Moss	SEW-EURODRIVE A/S Solgaard skog 71 1599 Moss	Tel. +47 69 24 10 20 Fax +47 69 24 10 40 <a href="http://www.sew-eurodrive.no">http://www.sew-eurodrive.no</a> sew@sew-eurodrive.no
------------------------------	------	--	--

**Pakistan**

Sales	Karachi	Industrial Power Drives Al-Fatah Chamber A/3, 1st Floor Central Com- mercial Area, Sultan Ahmed Shah Road, Block 7/8, Karachi	Tel. +92 21 452 9369 Fax +92-21-454 7365 sew eurodrive@cyber.net.pk
-------	---------	---	---

**Paraguay**

Sales	Fernando de la Mora	SEW-EURODRIVE PARAGUAY S.R.L De la Victoria 112, Esquina nueva Asunción Departamento Central Fernando de la Mora, Barrio Bernardino	Tel. +595 991 519695 Fax +595 21 3285539 sewpy@sew-eurodrive.com.py
-------	---------------------	--	---

**Peru**

Assembly Sales Service	Lima	SEW EURODRIVE DEL PERU S.A.C. Los Calderos, 120-124 Urbanizacion Industrial Vulcano, ATE, Lima	Tel. +51 1 3495280 Fax +51 1 3493002 <a href="http://www.sew-eurodrive.com.pe">http://www.sew-eurodrive.com.pe</a> sewperu@sew-eurodrive.com.pe
------------------------------	------	--	--

**Philippines**

Sales	Makati	P.T. Cerna Corporation 4137 Ponte St., Brgy. Sta. Cruz Makati City 1205	Tel. +63 2 519 6214 Fax +63 2 890 2802 mech_drive_sys@ptcerna.com <a href="http://www.ptcerna.com">http://www.ptcerna.com</a>
-------	--------	---	--

**Poland**

Assembly Sales Service	Łódź	SEW-EURODRIVE Polska Sp.z.o.o. ul. Techniczna 5 92-518 Łódź	Tel. +48 42 293 00 00 Fax +48 42 293 00 49 <a href="http://www.sew-eurodrive.pl">http://www.sew-eurodrive.pl</a> sew@sew-eurodrive.pl
	Service	Tel. +48 42 293 0030 Fax +48 42 293 0043	24 Hour Service Tel. +48 602 739 739 (+48 602 SEW SEW) serwis@sew-eurodrive.pl

**Portugal**

Assembly Sales Service	Coimbra	SEW-EURODRIVE, LDA. Av. da Fonte Nova, n.º 86 3050-379 Mealhada	Tel. +351 231 20 9670 Fax +351 231 20 3685 <a href="http://www.sew-eurodrive.pt">http://www.sew-eurodrive.pt</a> info sew@sew-eurodrive.pt
------------------------------	---------	---	---

**Romania**

Sales Service	Bucharest	Sialco Trading SRL str. Brazilia nr. 36 011783 Bucuresti	Tel. +40 21 230-1328 Fax +40 21 230-7170 sialco@sialco.ro
------------------	-----------	--	---

**Russia**

Assembly Sales Service	St. Petersburg	ЗАО «СЕВ-ЕВРОДРАЙФ» а. я. 36 195220 Санкт-Петербург	Tel. +7 812 3332522 / +7 812 5357142 Fax +7 812 3332523 <a href="http://www.sew-eurodrive.ru">http://www.sew-eurodrive.ru</a> sew@sew-eurodrive.ru
------------------------------	----------------	---	---

<b>Senegal</b>			
Sales	Dakar	SENEMECA Mécanique Générale Km 8, Route de Rufisque B.P. 3251, Dakar	Tel. +221 338 494 770 Fax +221 338 494 771 <a href="http://www.senemeca.com">http://www.senemeca.com</a> <a href="mailto:senemeca@senemeca.sn">senemeca@senemeca.sn</a>
<b>Serbia</b>			
Sales	Belgrade	DIPAR d.o.o. Ustanicka 128a PC Košum, IV floor 11000 Beograd	Tel. +381 11 347 3244 / +381 11 288 0393 Fax +381 11 347 1337 <a href="mailto:office@dipar.rs">office@dipar.rs</a>
<b>Singapore</b>			
Assembly Sales Service	Singapore	SEW-EURODRIVE PTE. LTD. No 9, Tuas Drive 2 Jurong Industrial Estate Singapore 638644	Tel. +65 68621701 Fax +65 68612827 <a href="http://www.sew-eurodrive.com.sg">http://www.sew-eurodrive.com.sg</a> <a href="mailto:sewsingapore@sew-eurodrive.com">sewsingapore@sew-eurodrive.com</a>
<b>Slovakia</b>			
Sales	Bratislava	SEW-Eurodrive SK s.r.o. Rybničná 40 831 06 Bratislava	Tel.+421 2 33595 202, 217, 201 Fax +421 2 33595 200 <a href="http://www.sew-eurodrive.sk">http://www.sew-eurodrive.sk</a> <a href="mailto:sew@sew-eurodrive.sk">sew@sew-eurodrive.sk</a>
	Košice	SEW-Eurodrive SK s.r.o. Slovenská ulica 26 040 01 Košice	Tel. +421 55 671 2245 Fax +421 55 671 2254 Mobile +421 907 671 976 <a href="mailto:sew@sew-eurodrive.sk">sew@sew-eurodrive.sk</a>
<b>Slovenia</b>			
Sales Service	Celje	Pakman - Pogonska Tehnika d.o.o. Ul. XIV. divizije 14 3000 Celje	Tel. +386 3 490 83-20 Fax +386 3 490 83-21 <a href="mailto:pakman@siol.net">pakman@siol.net</a>
<b>South Africa</b>			
Assembly Sales Service	Johannesburg	SEW-EURODRIVE (PROPRIETARY) LIMITED Eurodrive House Cnr. Adcock Ingram and Aerodrome Roads Aeroton Ext. 2 Johannesburg 2013 P.O.Box 90004 Bertsham 2013	Tel. +27 11 248-7000 Fax +27 11 248-7289 <a href="http://www.sew.co.za">http://www.sew.co.za</a> <a href="mailto:info@sew.co.za">info@sew.co.za</a>
	Cape Town	SEW-EURODRIVE (PROPRIETARY) LIMITED Rainbow Park Cnr. Racecourse & Omuramba Road Montague Gardens Cape Town P.O.Box 36556 Chempet 7442	Tel. +27 21 552-9820 Fax +27 21 552-9830 Telex 576 062 <a href="mailto:bgriffiths@sew.co.za">bgriffiths@sew.co.za</a>
	Durban	SEW-EURODRIVE (PROPRIETARY) LIMITED 48 Prospecton Road Isipingo Durban P.O. Box 10433, Ashwood 3605	Tel. +27 31 902 3815 Fax +27 31 902 3826 <a href="mailto:cdejager@sew.co.za">cdejager@sew.co.za</a>
	Nelspruit	SEW-EURODRIVE (PROPRIETARY) LIMITED 7 Christie Crescent Vintonia P.O.Box 1942 Nelspruit 1200	Tel. +27 13 752-8007 Fax +27 13 752-8008 <a href="mailto:robermeyer@sew.co.za">robermeyer@sew.co.za</a>
<b>South Korea</b>			
Assembly Sales Service	Ansan	SEW-EURODRIVE KOREA CO., LTD. 7, Dangjaengi-ro, Danwon-gu, Ansan-si, Gyeonggi-do, Zip 425-839	Tel. +82 31 492-8051 Fax +82 31 492-8056 <a href="http://www.sew-eurodrive.kr">http://www.sew-eurodrive.kr</a> <a href="mailto:master.korea@sew-eurodrive.com">master.korea@sew-eurodrive.com</a>
	Busan	SEW-EURODRIVE KOREA CO., LTD. 28, Noksansandan 262-ro 50beon-gil, Gangseo-gu, Busan, Zip 618-820	Tel. +82 51 832-0204 Fax +82 51 832-0230

<b>Spain</b>			
Assembly Sales Service	Bilbao	SEW-EURODRIVE ESPAÑA, S.L. Parque Tecnológico, Edificio, 302 48170 Zamudio (Vizcaya)	Tel. +34 94 43184-70 <a href="http://www.sew-eurodrive.es">http://www.sew-eurodrive.es</a> sew.spain@sew-eurodrive.es
<b>Sri Lanka</b>			
Sales	Colombo	SM International (Pte) Ltd 254, Galle Raod Colombo 4, Sri Lanka	Tel. +94 1 2584887 Fax +94 1 2582981
<b>Swaziland</b>			
Sales	Manzini	C G Trading Co. (Pty) Ltd PO Box 2960 Manzini M200	Tel. +268 2 518 6343 Fax +268 2 518 5033 engineering@cgtrading.co.sz
<b>Sweden</b>			
Assembly Sales Service	Jönköping	SEW-EURODRIVE AB Gnejsvägen 6-8 553 03 Jönköping Box 3100 S-550 03 Jönköping	Tel. +46 36 34 42 00 Fax +46 36 34 42 80 <a href="http://www.sew-eurodrive.se">http://www.sew-eurodrive.se</a> jonkoping@sew.se
<b>Switzerland</b>			
Assembly Sales Service	Basel	Alfred Imhof A.G. Jurastrasse 10 4142 Münchenstein bei Basel	Tel. +41 61 417 1717 Fax +41 61 417 1700 <a href="http://www.imhof-sew.ch">http://www.imhof-sew.ch</a> info@imhof-sew.ch
<b>Taiwan</b>			
Sales	Taipei	Ting Shou Trading Co., Ltd. 6F-3, No. 267, Sec. 2 Tung Huw S. Road Taipei	Tel. +886 2 27383535 Fax +886 2 27368268 Telex 27 245 sewtwn@ms63.hinet.net <a href="http://www.tingshou.com.tw">http://www.tingshou.com.tw</a>
	Nan Tou	Ting Shou Trading Co., Ltd. No. 55 Kung Yeh N. Road Industrial District Nan Tou 540	Tel. +886 49 255353 Fax +886 49 257878 sewtwn@ms63.hinet.net <a href="http://www.tingshou.com.tw">http://www.tingshou.com.tw</a>
<b>Tanzania</b>			
Sales	Daressalam	SEW-EURODRIVE PTY LIMITED TANZANIA Plot 52, Regent Estate PO Box 106274 Dar Es Salaam	Tel. +255 0 22 277 5780 Fax +255 0 22 277 5788 <a href="http://www.sew-eurodrive.co.tz">http://www.sew-eurodrive.co.tz</a> info@sew.co.tz
<b>Thailand</b>			
Assembly Sales Service	Chonburi	SEW-EURODRIVE (Thailand) Ltd. 700/456, Moo.7, Donhuaroh Muang Chonburi 20000	Tel. +66 38 454281 Fax +66 38 454288 sewthailand@sew-eurodrive.com
<b>Tunisia</b>			
Sales	Tunis	T. M.S. Technic Marketing Service Zone Industrielle Mghira 2 Lot No. 39 2082 Fouchana	Tel. +216 79 40 88 77 Fax +216 79 40 88 66 <a href="http://www.tms.com.tn">http://www.tms.com.tn</a> tms@tms.com.tn
<b>Turkey</b>			
Assembly Sales Service	Kocaeli-Gebze	SEW-EURODRIVE Hareket Sistemleri San. Ve TIC. Ltd. Sti Gebze Organize Sanayi Böl. 400 Sok No. 401 41480 Gebze Kocaeli	Tel. +90 262 9991000 04 Fax +90 262 9991009 <a href="http://www.sew-eurodrive.com.tr">http://www.sew-eurodrive.com.tr</a> sew@sew-eurodrive.com.tr
<b>Ukraine</b>			
Assembly Sales Service	Dnipropetrovsk	OOO «СЕВ-Евродрайв» ул. Рабочая, 23-В, офис 409 49008 Днепр	Tel. +380 56 370 3211 Fax +380 56 372 2078 <a href="http://www.sew-eurodrive.ua">http://www.sew-eurodrive.ua</a> sew@sew-eurodrive.ua

## United Arab Emirates

Sales Service	Dubai	SEW-EURODRIVE FZE PO Box 263835 Office No. S3A1SR03 Jebel Ali Free Zone – South, Dubai, United Arab Emirates	Tel. +971 (0)4 8806461 Fax +971 (0)4 8806464 <a href="http://www.sew-eurodrive.ae">http://www.sew-eurodrive.ae</a> <a href="mailto:info@sew-eurodrive.ae">info@sew-eurodrive.ae</a>
---------------	-------	--	--

## Uruguay

Assembly Sales	Montevideo	SEW-EURODRIVE Uruguay, S. A. Jose Serrato 3569 Esquina Corumbe CP 12000 Montevideo	Tel. +598 2 21181-89 Fax +598 2 21181-90 <a href="mailto:sewuy@sew-eurodrive.com.uy">sewuy@sew-eurodrive.com.uy</a>
----------------	------------	--	---

## USA

Production Assembly Sales Service	Southeast Region	SEW-EURODRIVE INC. 1295 Old Spartanburg Highway P.O. Box 518 Lyman, S.C. 29365	Tel. +1 864 439-7537 Fax Sales +1 864 439-7830 Fax Production +1 864 439-9948 Fax Assembly +1 864 439-0566 Fax Confidential/HR +1 864 949-5557 <a href="http://www.seweurodrive.com">http://www.seweurodrive.com</a> <a href="mailto:cslyman@seweurodrive.com">cslyman@seweurodrive.com</a>
Assembly Sales Service	Northeast Region	SEW-EURODRIVE INC. Pureland Ind. Complex 2107 High Hill Road, P.O. Box 481 Bridgeport, New Jersey 08014	Tel. +1 856 467-2277 Fax +1 856 845-3179 <a href="mailto:csbridgeport@seweurodrive.com">csbridgeport@seweurodrive.com</a>
	Midwest Region	SEW-EURODRIVE INC. 2001 West Main Street Troy, Ohio 45373	Tel. +1 937 335-0036 Fax +1 937 332-0038 <a href="mailto:cstroy@seweurodrive.com">cstroy@seweurodrive.com</a>
	Southwest Region	SEW-EURODRIVE INC. 3950 Platinum Way Dallas, Texas 75237	Tel. +1 214 330-4824 Fax +1 214 330-4724 <a href="mailto:csdallas@seweurodrive.com">csdallas@seweurodrive.com</a>
	Western Region	SEW-EURODRIVE INC. 30599 San Antonio St. Hayward, CA 94544	Tel. +1 510 487-3560 Fax +1 510 487-6433 <a href="mailto:cshayward@seweurodrive.com">cshayward@seweurodrive.com</a>
	Wellford	SEW-EURODRIVE INC. 148/150 Finch Rd. Wellford, S.C. 29385	Tel. +1 864 439-7537 Fax +1 864 661 1167 <a href="mailto:IGOrders@seweurodrive.com">IGOrders@seweurodrive.com</a>

Additional addresses for service provided on request!

## Vietnam

Sales	Ho Chi Minh City	Nam Trung Co., Ltd Huế - South Vietnam / Construction Materials 250 Binh Duong Avenue, Thu Dau Mot Town, Binh Duong Province HCM office: 91 Tran Minh Quyen Street District 10, Ho Chi Minh City	Tel. +84 8 8301026 Fax +84 8 8392223 <a href="mailto:khanh-nguyen@namtrung.com.vn">khanh-nguyen@namtrung.com.vn</a> <a href="http://www.namtrung.com.vn">http://www.namtrung.com.vn</a>
	Hanoi	MICO LTD Quảng Trị - North Vietnam / All sectors except Construction Materials 8th Floor, Ocean Park Building, 01 Dao Duy Anh St, Ha Noi, Viet Nam	Tel. +84 4 39386666 Fax +84 4 3938 6888 <a href="mailto:nam_ph@micogroup.com.vn">nam_ph@micogroup.com.vn</a> <a href="http://www.micogroup.com.vn">http://www.micogroup.com.vn</a>

## Zambia

Representation: South Africa

## Index

### Icons

/AZ1Z ..... 272

### A

Abbreviation key ..... 233  
 Actuator outlets ..... 249  
 Air admission and accessibility ..... 245  
 Ambient temperature ..... 247  
 Area of validity ..... 309  
 AZ1Z ..... 252

### B

Braking resistor  
     BW1 ..... 242  
     Calculation example ..... 242  
     Current-carrying capacity ..... 253  
     Regenerative current-carrying capacity ..... 242  
     Technical data ..... 253  
 Braking resistor, external ..... 254  
     BW068-006-T ..... 255  
     BW068-012-T ..... 255  
     BW100-005/K-1.5 ..... 254  
     BW100-009-T ..... 254  
     BW150-003/K-1.5 ..... 254  
     BW150-006-T ..... 254  
 Braking resistors, overview ..... 252  
 Breather valve  
     Activate ..... 38  
     Installation ..... 38  
 BW068-012-T ..... 259  
 BW1 ..... 253  
 BW100-005/K-1.5 ..... 255, 256  
 BW100-009-T ..... 257, 258  
 BW150-003/K-1.5 ..... 255, 256  
 BW150-006-T ..... 257, 258

### C

Cable cross section ..... 69  
 Cable entry, position ..... 20  
 Cable glands ..... 82, 278  
 Cable routing ..... 66, 79  
 Cable shielding ..... 66, 79  
 CE marking ..... 244  
 Changing the mounting position ..... 33

Changing the oil ..... 226  
 Changing the oil seal ..... 228  
 Circuit breaker ..... 71  
 Cleaning ..... 228  
 Coating ..... 228  
 Configuration ..... 235  
     Abbreviation key ..... 233  
     Data for drive selection ..... 233  
     DynaStop® ..... 243  
     Example pallet conveyor ..... 237  
     Load capacity of the integrated braking resistor  
       ..... 242  
     Project planning sequence ..... 235  
 Connection  
     Cable routing ..... 79  
     Cable shielding ..... 79  
     EMC aspects ..... 66  
     EMC cable glands ..... 82  
     Installation instructions ..... 68  
     Installation topology ..... 74  
     MOVIGEAR® wiring diagram ..... 78  
     PC ..... 119  
     Plug connector ..... 83  
     Plug connector assignment ..... 93  
     Representation ..... 83  
     Terminal assignment ..... 75  
 Connection box ..... 25  
 Connection cables  
     Notes ..... 84  
 Connection cables, inspection and maintenance  
     ..... 228  
 Connections ..... 83  
 Control range, extended ..... 272  
 Cooling  
     Derating ..... 12  
     Installation altitude ..... 12  
 Copyright notice ..... 8  
 CSA ..... 244  
 cUL ..... 244  
 Current carrying capacity of terminals/plug connect-  
     ors ..... 248  
**D**  
 DC 24 V auxiliary output ..... 249  
 Deactivating DynaStop® ..... 141

Derating .....	12	Technical data .....	252
Derating factors .....	248	Equipotential bonding .....	67
Design notes .....	289	At the connection box (option).....	68
Determining the operating hours .....	221	Error	
Device replacement.....	214	Evaluating fault messages .....	148
Diagnostics		Fault table.....	159
Evaluating fault messages .....	148	Reset.....	152
Fault table.....	159	Switch-off responses .....	149
LED displays .....	153	EtherNet/IP™	
Malfunctions of the mechanical drive .....	147	Technical data .....	250
MOVISUITE® .....	148	Extended control range /ECR.....	272
Digital inputs .....	249	Extended storage .....	218
Digital outputs.....	249	<b>F</b>	
Dimension drawings .....	296, 307	Fault	
BS-005 protective grid.....	257	Fault messages with parameterizable response	
BW068-012-T .....	259	.....	149
BW100-005/K-1.5.....	256	Fault messages with parameterizable response	149
BW100-009-T .....	258	Fluorocarbon rubber oil seal.....	277
BW150-003/K-1.5.....	256	Functional safety .....	309
BW150-006-T .....	258	Approved devices.....	314
MGF..2 .....	297	Characteristic safety values .....	331
MGF..4 .....	299	Connection variants.....	318
MGF..4.. /XT .....	301	Installation .....	314
Notes .....	296	Installation requirements .....	314
Plug connector with mating connector .....	308	Integrated safety technology .....	309
Plug connectors.....	307	Representation of the safety concept.....	310
DIP switches S1 and S2.....	128	Requirements for operation.....	317
Drive safety functions – Electronics data .....	251	Requirements for the external safety controller	
Drive selection (example pallet conveyor).....	237	.....	315
DynaStop® .....	140	Requirements on connection variants .....	318
Disabling for the startup procedure .....	135	Restrictions.....	313
DynaStop® torques .....	264	Safe state .....	309
Functional description .....	140	Safe torque off (STO).....	311
<b>E</b>		Safety concept.....	310
EAC .....	244	Safety conditions .....	313
Electrical installation .....	12	Safety controller, external.....	315
Safety notes .....	12	Safety controllers, requirements.....	319
Electronics cover .....	25	Safety relays, requirements.....	318
Embedded safety notes.....	7	Standards .....	309
EMC.....	66, 82	Startup .....	317
EMC cable glands		Startup, requirements.....	317
Installation .....	82	STO (safe torque off).....	311
Overview .....	278	STO signal for group disconnection .....	320
Encoder		Wiring diagrams .....	321, 327
AZ1Z.....	252		



Functional safety technology		
Safety note .....	10	
<b>G</b>		
Gear unit venting .....	36	
<b>H</b>		
Hazard symbols		
Meaning.....	7	
Hollow shaft with keyway (MGFA.).....	40, 289	
Housing mounting .....	17	
Housing with threads (MGF.S-...-C).....	18	
Torque arm (MGF.T-...-C) .....	17	
<b>I</b>		
Inspection .....	221	
Connection cable.....	228	
Determining the operating hours.....	221	
Inspection intervals.....	222	
Preliminary work.....	225	
Installation		
Blanking plugs .....	63	
Breather valve .....	38	
Electronics cover .....	33, 65	
EMC cable glands .....	64	
Prerequisites .....	32	
Protective cover.....	59	
Safety notes .....	12	
Setting up the drive unit.....	33	
Shaft-mounted gear unit with keyway .....	40	
Shaft-mounted gear unit with TorqLOC® (customer shaft with contact shoulder) .....	52	
Shaft-mounted gear unit with TorqLOC® (customer shaft without contact shoulder) .....	44	
Torque arm.....	61	
Installation (electrical).....	66	
Cable cross section .....	69	
Cable routing .....	66, 79	
Cable selection.....	79	
Cable shielding.....	66, 79	
EMC aspects .....	66	
EMC cable glands .....	82	
EMC-compliant installation.....	66	
Equipotential bonding.....	67	
Installation altitude.....	73	
Installation instructions .....	68	
Installation topology.....	74	
Line contactor.....	71	
Line protection.....	71	
MOVIGEAR® wiring diagram .....	78	
Optional plug connector assignment.....	93	
PC connection .....	119	
PE connection .....	72	
Plug connector .....	83	
Protection devices .....	73	
Residual current device.....	71	
Supply system cables.....	69	
Terminal activation .....	70, 71	
Terminal assignment .....	75	
Installation (mechanical)		
Electronics cover .....	33	
Installation notes .....	31	
Installing the protective cover .....	59	
Prerequisites .....	32	
Required tools and resources .....	32	
Setting up the drive unit.....	33	
Shaft-mounted gear unit with keyway .....	40	
Shaft-mounted gear units with TorqLOC® .....	44, 52	
Tightening torques.....	63	
Torque arms .....	61	
Installation altitude.....	73	
Installation instructions .....	68	
Installation notes		
Derating.....	12	
Installation altitude > 1000 m .....	12	
Installation requirements .....	32	
Installation topology.....	74	
Installing the electronics cover .....	33	
Integrated safety technology .....	309	
Interface adapter USM21A		
Scope of delivery .....	119	
<b>L</b>		
LED displays .....	153	
"BF" LED .....	157	
"DRIVE" status LED .....	154	
"F-ERR" LED .....	154	
"F-RUN" LED.....	154	
"L/A1" LED .....	156	
"L/A2" LED .....	156	
"MS" LED .....	158	
"NS" LED.....	157	
"US1" LED .....	157	

Line contactor ..... 71  
 Line protection ..... 71  
 Lubricant change intervals ..... 224  
 Lubricants ..... 282  
     Bearing greases ..... 282  
     Compatibility with oil seal ..... 287  
     Fill quantities ..... 283  
     Key ..... 287  
     Lubricant table ..... 288  
     Notes ..... 284

**M**

Maintenance ..... 221  
     Changing the oil ..... 226  
     Cleaning the drive unit ..... 228  
     Connection cable ..... 228  
     Determining the operating hours ..... 221  
     Lubricant change intervals ..... 224  
     Maintenance intervals ..... 222  
     Painting the drive unit ..... 228  
     Preliminary work ..... 225  
     Replacing the output oil seal ..... 228  
 Malfunctions of the mechanical drive ..... 147  
 Manual mode with MOVISUITE®  
     Activation/deactivation ..... 137  
     Control ..... 138  
 Modbus TCP  
     Technical data ..... 250  
 Mounting positions ..... 280  
 MOVISUITE®  
     Evaluating fault messages ..... 148  
     Manual mode ..... 137  
     Startup procedure ..... 131

**N**

Nameplate  
     Drive unit ..... 22  
     Electronics ..... 27  
 Nameplate, position ..... 21  
 NOCO® fluid ..... 277  
 Noise ..... 245  
 Notes  
     Designation in the documentation ..... 6  
     Meaning of the hazard symbols ..... 7

**O**

Oil seal  
     Lubricant compatibility ..... 287  
 Operation ..... 137  
     Deactivating DynaStop® ..... 141  
     DynaStop® ..... 140  
     Manual mode with MOVISUITE® ..... 137  
     Safety notes ..... 13  
 Options  
     /AZ1Z ..... 252

**P**

Paint protection cap ..... 127  
 Paint protection film ..... 127  
 Painting ..... 245  
 PC connection ..... 119  
     Using the keypad ..... 124  
     Via Ethernet ..... 123  
     With interface adapter ..... 119  
 PE connection ..... 72  
 Plug connector ..... 83  
     Assignment ..... 93  
     Connection cables ..... 84  
     Designation key ..... 83  
     Plug connector positions ..... 86, 88  
     Plug connector variant ..... 89  
 Plug connectors  
     Dimension drawing ..... 307, 308  
 Power and torque ..... 245  
 Product names ..... 7  
 PROFINET  
     Technical data ..... 250, 252  
 Project planning sequence ..... 235  
 Protection cover ..... 126  
 Protection devices ..... 73  
 Protective cover ..... 59  
 Protective measures, special ..... 277  
 Protective separation ..... 12

**R**

RCM ..... 244  
 Releasing the brake without drive enable  
     Activating the function ..... 141  
 Removing the electronics cover ..... 33  
 Repair ..... 217

Replacing the connection box / electronics cover gasket.....	229	Setting up the drive unit.....	33
Representation		Shaft designs.....	16
Connections .....	83	Hollow shaft and keyway (MGFA...-C).....	16
Required tools and resources .....	32	TorqLOC® hollow shaft mounting system (MGFT...-C).....	16
Reset.....	152	Shaft-mounted gear unit with keyway	
Residual current device.....	71	Installation notes .....	40
Restriction of use.....	12	Removal notes .....	42
Rights to claim under limited warranty .....	7	Shaft-mounted gear units with TorqLOC®	
Rotational speeds.....	245	Customer shaft with contact shoulder .....	52
<b>S</b>		Customer shaft without contact shoulder .....	44
Safety functions.....	10	Disassembly.....	57
Safety notes		Shutdown .....	217
Designation in the documentation .....	6	Signal words in safety notes.....	6
Installation .....	12	Startup.....	126
Installation altitude > 1000 m .....	12	Checklist.....	133
Magnetic fields .....	13	Description of the DIP switches.....	128
Meaning of the hazard symbols .....	7	Process data assignment.....	134
Operation.....	13	Requirements for startup.....	127
Preliminary information.....	9	Safety notes .....	13
Regenerative operation .....	13	Startup notes .....	126
Setup .....	12	Startup procedure.....	131
Startup.....	13	STO	
Structure of embedded.....	7	Jumper plug.....	330
Structure of the section-related .....	6	STO jumper plug .....	107, 330
Transportation .....	11	Storage.....	217
Screw fittings .....	278	Storage conditions.....	218
Plug connector .....	279	Supply system cables.....	69
Pressure compensation.....	278	Surface and corrosion protection .....	245
Screw plugs.....	278	Surface protection .....	276
Section-related safety notes .....	6	Switch-off responses .....	149
Sensor inputs .....	249	<b>T</b>	
Separation, protective .....	12	Target group.....	9
Service		Technical data .....	244
Device replacement.....	214	Current carrying capacity of terminals/plug connectors.....	248
Evaluating fault messages .....	148	DC 24 V auxiliary output.....	249
Extended storage .....	218	Derating factors .....	248
Fault messages with parameterizable response .....	149	Design notes .....	289
LED displays .....	153	Digital inputs.....	249
Malfunctions of the mechanical drive .....	147	Digital outputs.....	249
MOVISUITE®.....	148	Dimension drawings .....	296, 307
Resetting error messages .....	152	DynaStop® torques .....	264
SEW-EURODRIVE Service.....	217	Encoder .....	252
Switch-off responses .....	149	Environmental conditions .....	247

EtherNet/IP™ interface .....	250
General technical data .....	246
Integrated BW1 braking resistor.....	253
Lubricants.....	282
Modbus TCP interface.....	250
Mounting positions .....	280
PROFINET interface .....	250, 252
Screw fittings .....	278
Surface protection .....	276
Torque curves .....	268
Terminal activation .....	70, 71
Terminal assignment.....	75
Tightening torques.....	63
Blanking plugs.....	63
Electronics cover.....	65
EMC cable glands .....	64
Torque arm.....	62
TorqLOC® hollow shaft mounting system (MGFT..)	44
Torque arm.....	61
Torque curves .....	268
Extended control range (/ECR option) .....	272
MGF..2-.-C .....	269
MGF..2-.-C/AZ1Z.....	273
MGF..4-.-C .....	270
MGF..4-.-C/AZ1Z.....	274
MGF..4-.-C/XT.....	271
MGF..4-.-C/XT/AZ1Z.....	275
Standard control range.....	268
Trademarks .....	7
Type designation	
Drive unit .....	22
Electronics.....	27
Plug connector .....	83

**U**

UkrSEPRO .....	244
UL approval .....	244
UL-compliant installation (in preparation).....	73
Unit structure .....	15
Cable entry position.....	20
Drive unit MOVIGEAR® performance .....	15
Electronics.....	25
Housing mounting .....	17

Nameplate and type designation of electronics .....	27
Nameplate and type designation of the drive unit .....	22
Nameplate position.....	21
Shaft designs.....	16

**V**


Voltage systems, permitted .....	68
----------------------------------	----


**W**


Waste disposal .....	220
Weight information .....	245
Wiring diagrams .....	83


**X**

X1203_1	
Assignment.....	93
Connection cables, available.....	94
X1203_2	
Assignment.....	93
Connection cables, available.....	94
X1523	
Assignment.....	108
Connection cables, available.....	109
X2313	
Assignment.....	110
Connection cables, available.....	111, 113
X4141	
Assignment.....	112
X4233_1	
Assignment.....	117
X4233_2	
Assignment.....	118
X5133_1	
Assignment.....	114
X5133_2	
Assignment.....	115
X5133_3	
Assignment.....	116
X5504	
Assignment.....	99
Connection cables, available.....	100
X5505	
Assignment.....	103
Connection cables, available.....	104

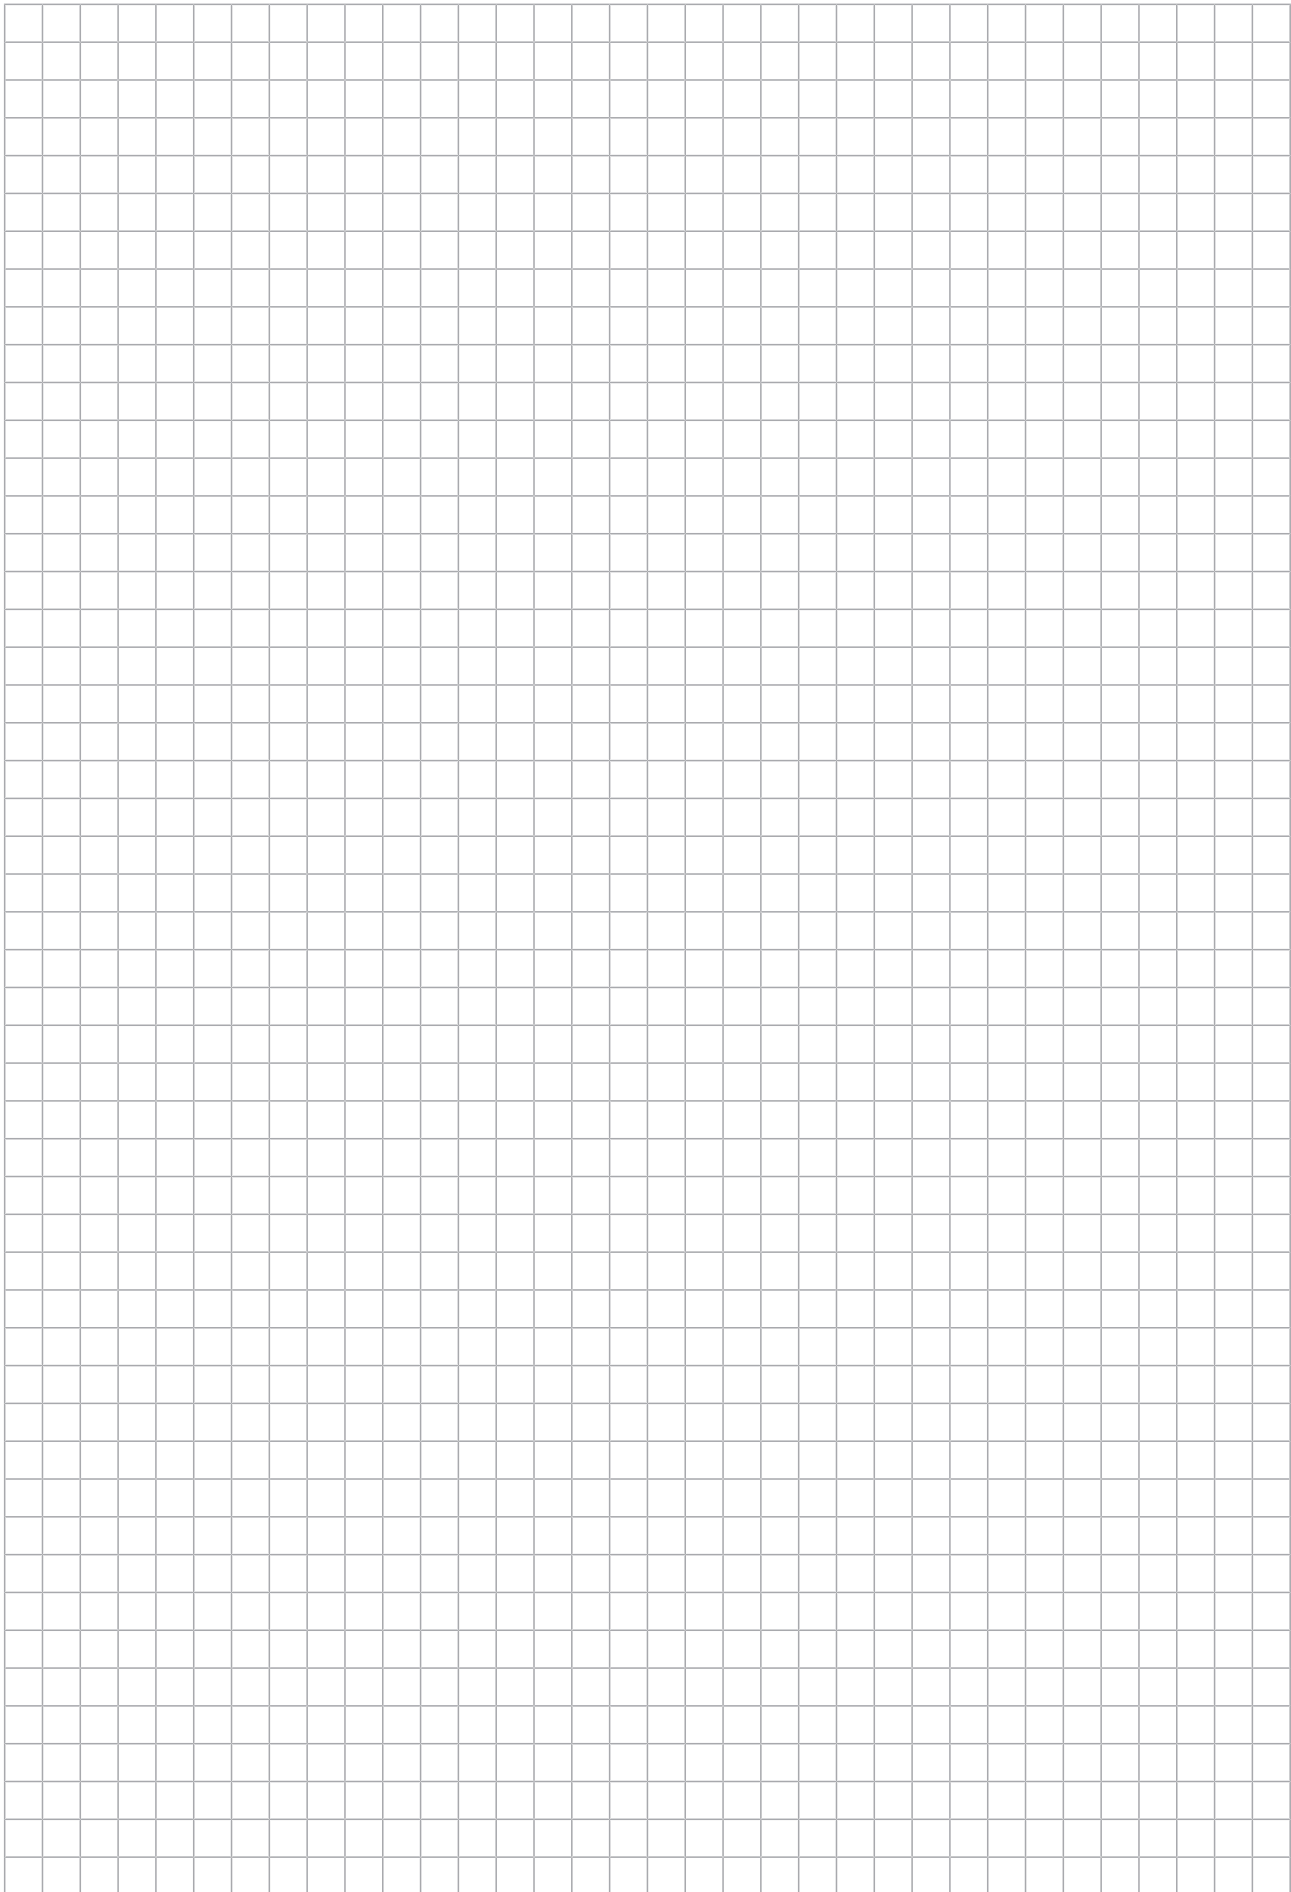

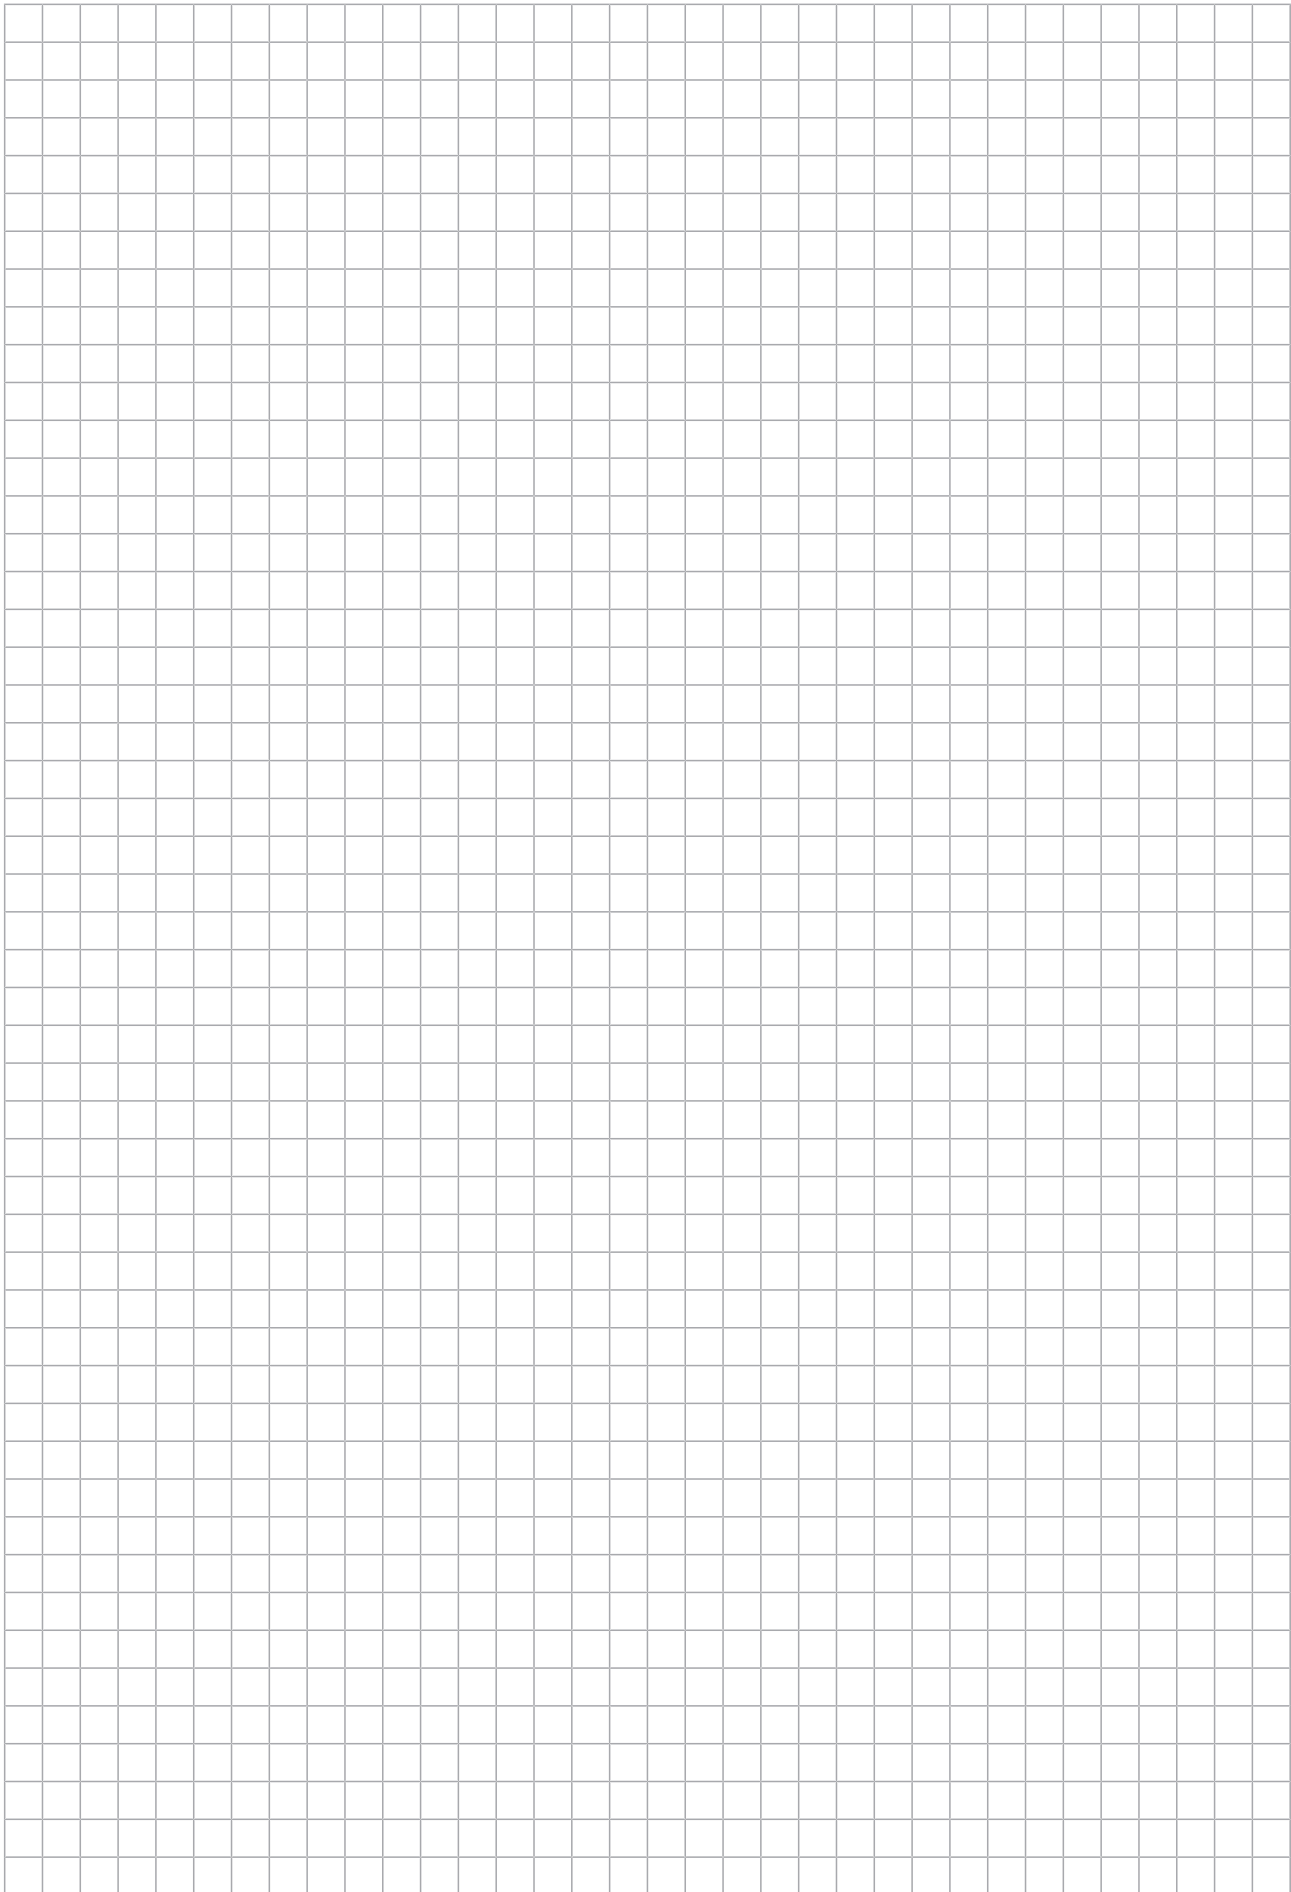

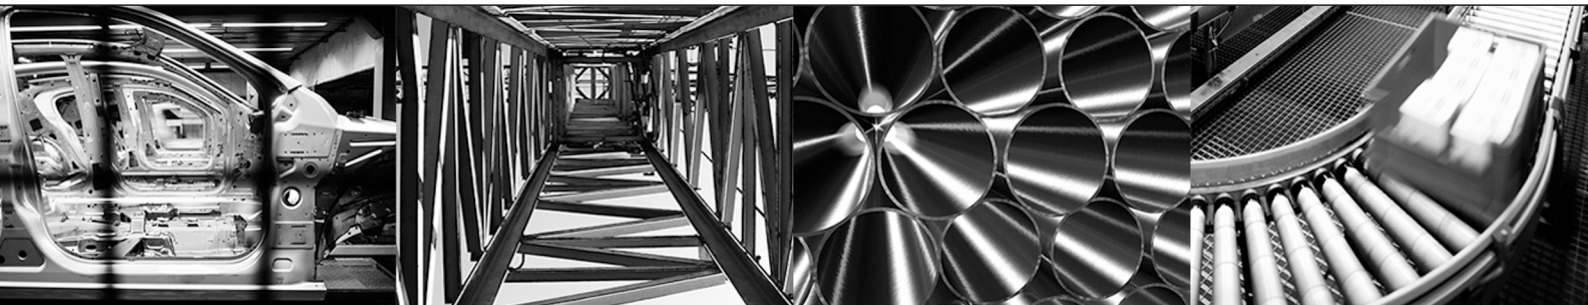

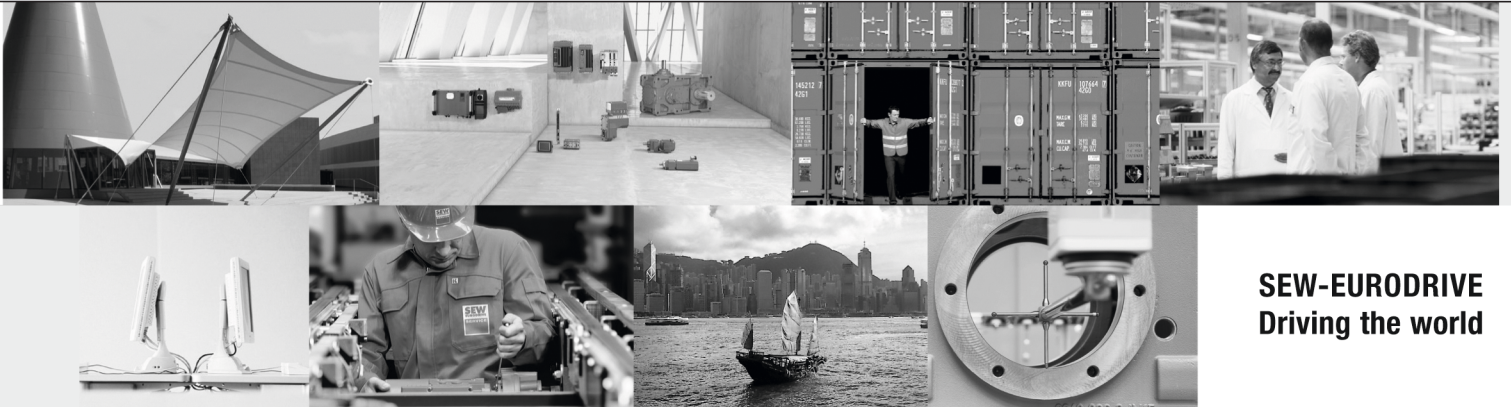

**SEW-EURODRIVE**  
Driving the world

**SEW**  
**EURODRIVE**

SEW-EURODRIVE GmbH & Co KG  
Ernst-Blickle-Str. 42  
76646 BRUCHSAL  
GERMANY  
Tel. +49 7251 75-0  
Fax +49 7251 75-1970  
sew@sew-eurodrive.com  
→ [www.sew-eurodrive.com](http://www.sew-eurodrive.com)