



SecureBox® SDS1101/2101 Device Server User Guide

Intellectual Property

© 2020 Lantronix. All rights reserved. No part of the contents of this book may be transmitted or reproduced in any form or by any means without the written permission of Lantronix.

Lantronix and *SecureBox* are registered trademarks of Lantronix, Inc. in the United States and other countries. *DeviceInstaller* is a trademark of Lantronix, Inc.

Patented: <http://patents.lantronix.com>; additional patents pending.

Ethernet is a trademark of XEROX Corporation. *UNIX* is a registered trademark of The Open Group. *Windows* is a trademark of Microsoft Corp

Warranty

For details on the Lantronix warranty replacement policy, please go to our Web site at www.lantronix.com/support/warranty.

Contacts

Lantronix

7535 Irvine Center Drive
Suite 100
Irvine, CA 92618 USA
Toll Free: 800-526-8766
Phone: 949-453-3990
Fax: 949-453-3995

Technical Support Online: www.lantronix.com/support .

Sales Offices

For a current list of our domestic and international sales offices, go to the Lantronix Web site at <http://www.lantronix.com/about/contact/index.html> .

Disclaimer

All information contained herein is provided "AS IS." Lantronix undertakes no obligation to update the information in this publication. Lantronix does not make, and specifically disclaims, all warranties of any kind (express, implied or otherwise) regarding title, non-infringement, fitness, quality, accuracy, completeness, usefulness, suitability or performance of the information provided herein. Lantronix shall have no liability whatsoever to any user for any damages, losses and causes of action (whether in contract or in tort or otherwise) in connection with the user's access or usage of any of the information or content contained herein. The information and specifications contained in this document are subject to change without notice.

Operation of this equipment in a residential area is likely to cause interference, in which case the user, at his or her own expense, will be required to take whatever measures may be required to correct the interference.

See the compliance section of this document for more information on conformance to international standards.

Revision History

| Date | Rev. | Comments |
|----------------|------|---|
| August 2006 | A | Initial document |
| January 2009 | B | Include SDS2101 product; updated to firmware version 6.5.0.0. |
| February 2010 | C | Update document with corrections. |
| June 2015 | D | Update document for firmware version 6.11.0.0. |
| December 2017 | E | Update enhanced password information. |
| September 2018 | F | Updated disclaimer, technical specifications, and compliance section. |
| February 2020 | G | Updated for firmware 7.0.0.1. Updated with new default password and security information. |

Table of Contents

| | |
|--|-----------|
| 1: Using This Guide | 10 |
| Purpose and Audience _____ | 10 |
| Chapter Summary _____ | 10 |
| Additional Documentation _____ | 11 |
| 2: Introduction | 12 |
| Applications _____ | 12 |
| Application Examples _____ | 12 |
| Protocol Support _____ | 14 |
| Additional Features _____ | 14 |
| Configuration Methods _____ | 14 |
| Product Information Label _____ | 15 |
| 3: Getting Started | 16 |
| Package Contents _____ | 16 |
| Installing the SDS _____ | 17 |
| Required Information _____ | 18 |
| Hardware Address _____ | 18 |
| IP Address _____ | 18 |
| Assigning the IP Address: DeviceInstaller _____ | 18 |
| Installing DeviceInstaller _____ | 19 |
| Assigning an IP Address _____ | 19 |
| Adding the Unit to the Manage List _____ | 20 |
| Accessing the SDS1101/2101 Using DeviceInstaller _____ | 20 |
| Viewing the Current Configuration _____ | 20 |
| Next Step _____ | 23 |
| Assigning the IP Address: Serial Port Login _____ | 24 |
| 4: Configuration Using Web Manager | 25 |
| Accessing SDS1101/2101 Using DeviceInstaller _____ | 25 |
| Network Configuration _____ | 26 |
| Network Mode _____ | 27 |
| Automatic IP Address Configuration _____ | 27 |
| Static IP Address Configuration _____ | 28 |
| Ethernet Configuration _____ | 29 |
| Server Configuration _____ | 30 |
| Host List Configuration _____ | 31 |
| Channel 1 & Channel 2 Configuration _____ | 32 |
| Serial Settings _____ | 33 |
| Connection Settings - TCP _____ | 36 |
| Connection Settings - UDP _____ | 38 |
| Apply Settings _____ | 40 |
| Apply Defaults _____ | 40 |

| | |
|--|-----------|
| 5: Configuration via Telnet or Serial Port (Setup Mode) | 41 |
| Accessing Setup Mode _____ | 41 |
| Telnet Connection _____ | 41 |
| Serial Port Connection _____ | 42 |
| Exiting Setup Mode _____ | 43 |
| 6: Setup Mode: Server Configuration | 44 |
| Server Configuration (Option 0) _____ | 44 |
| IP Address _____ | 44 |
| Set Gateway IP Address _____ | 45 |
| Netmask: Number of Bits for Host Part _____ | 45 |
| Set DNS Server IP Address _____ | 45 |
| Change Telnet/Web Configuration Password _____ | 46 |
| DHCP Name _____ | 46 |
| 7: Setup Mode: Channel Configuration | 47 |
| Channel 1 (Option 1) & Channel 2 (Option 2) _____ | 47 |
| Baudrate _____ | 47 |
| I/F (Interface) Mode _____ | 48 |
| Flow _____ | 48 |
| Port Number _____ | 49 |
| Connect Mode _____ | 49 |
| a) Incoming Connection _____ | 50 |
| b) Response _____ | 51 |
| c) Active Startup _____ | 51 |
| d) Datagram Type _____ | 54 |
| e) Modem Mode _____ | 54 |
| Send the Escape Sequence (+++) in Modem Mode _____ | 57 |
| Show IP addr after 'RING' _____ | 57 |
| Auto Increment Source Port _____ | 57 |
| Remote IP Address _____ | 57 |
| Remote Port _____ | 57 |
| DisConnMode _____ | 58 |
| Flush Mode (Buffer Flushing) _____ | 59 |
| Pack Control _____ | 59 |
| Packing Interval _____ | 60 |
| Trailing Characters _____ | 60 |
| Send Characters _____ | 60 |
| DisConnTime (Inactivity Timeout) _____ | 60 |
| Send Characters _____ | 61 |
| Telnet Terminal Type _____ | 61 |
| Channel (Port) Password _____ | 61 |
| 8: Setup Mode: Advanced Settings | 62 |
| Expert Settings (Option 5) _____ | 62 |
| ARP Cache timeout in seconds _____ | 62 |
| CPU Performance (SDS2101 only) _____ | 62 |
| Disable Monitor Mode at Bootup _____ | 63 |

| | |
|---|-----------|
| HTTP Port Number _____ | 63 |
| MTU Size _____ | 63 |
| TCP Re-Transmission Timeout _____ | 63 |
| Enable Alternate MAC _____ | 63 |
| Ethernet Connection Type _____ | 63 |
| Security Settings (Option 6) _____ | 64 |
| Disable SNMP _____ | 64 |
| SNMP Community Name _____ | 64 |
| Disable Telnet Setup _____ | 64 |
| Disable TFTP Firmware Update _____ | 65 |
| Disable Port 77FE (Hex) _____ | 65 |
| 77FEh Access Mode _____ | 65 |
| Disable Web Server _____ | 65 |
| Disable Web Setup _____ | 66 |
| Disable ECHO Ports _____ | 66 |
| Enable Encryption _____ | 66 |
| Enable Enhanced Password _____ | 67 |
| Default Settings (Option 7) _____ | 67 |
| Channel 1 Configuration Defaults _____ | 67 |
| Channel 2 Configuration Defaults (SDS2101 only) _____ | 68 |
| Expert Settings Defaults _____ | 68 |
| Security Settings Defaults _____ | 68 |
| 9: Firmware Upgrades | 70 |
| Obtaining Firmware _____ | 70 |
| Reloading Firmware _____ | 70 |
| Using TFTP: Graphical User Interface _____ | 70 |
| Using TFTP: Command Line Interface _____ | 71 |
| Recovering the Firmware Using the Serial Port and DeviceInstaller _____ | 72 |
| 10: Monitor Mode | 73 |
| Entering Monitor Mode Using the Serial Port _____ | 73 |
| Entering Monitor Mode Using the Network Port _____ | 73 |
| Monitor Mode Commands _____ | 73 |
| A: Troubleshooting and Contact Information | 76 |
| SDS1101 LEDs _____ | 76 |
| SDS2101 LEDs _____ | 77 |
| Problems and Error Messages _____ | 77 |
| Lantronix Technical Support _____ | 80 |
| B: SDS1101 Connections and Pinouts | 81 |
| Serial Port _____ | 81 |
| Serial Connector Pinouts _____ | 81 |
| Modem Cable _____ | 82 |

| | |
|--|------------|
| Network Port | 83 |
| Ethernet Connector Pinouts | 84 |
| Power Plug | 84 |
| C: SDS2101 Connections and Pinouts | 85 |
| SDS2101 Serial Ports | 85 |
| Serial Connector Pinouts | 85 |
| Network Port | 86 |
| Reset Button | 86 |
| Ethernet Connector Pinouts | 86 |
| Power Plug | 86 |
| D: SDS1101 Technical Specifications | 87 |
| E: SDS2101 Technical Specifications | 89 |
| F: Alternative Ways to Assign an IP Address | 91 |
| DHCP | 91 |
| AutoIP | 91 |
| BOOTP | 92 |
| ARP and Telnet | 92 |
| G: Binary to Hexadecimal Conversions | 93 |
| Converting Binary to Hexadecimal | 93 |
| Conversion Table | 93 |
| Scientific Calculator | 94 |
| H: Compliance | 95 |
| RoHS, REACH and WEEE Compliance Statement | 99 |
| Index | 100 |

Figures

| | |
|--|----|
| Figure 2-1. Serial Tunneling Example | 13 |
| Figure 2-2. Direct TCP/IP or Redirector Configuration | 13 |
| Figure 2-3. Product Label | 15 |
| Figure 2-4. Product Label with Bar Code | 15 |
| Figure 3-1. SDS1101 Connected to Serial Device and Network | 17 |
| Figure 4-1. Lantronix Web Manager | 26 |
| Figure 4-2. Network Settings | 27 |
| Figure 4-3. Server Settings | 30 |
| Figure 4-4. Hostlist Settings | 32 |
| Figure 4-5. Channel Serial Settings | 33 |
| Figure 4-6. TCP Connection Settings | 36 |
| Figure 4-7. UDP Connection Settings | 39 |
| Figure 5-1. MAC Address | 42 |
| Figure 5-2. Setup Menu Options | 42 |
| Figure 6-1. Network Settings | 44 |
| Figure 6-2. Change Telnet Configuration Password | 46 |
| Figure 7-1. Serial Port Settings | 47 |
| Figure 7-2. Hostlist Option | 53 |
| Figure 8-1. Expert Settings | 62 |
| Figure 8-2. Security Settings | 64 |
| Figure 8-3. Encryption Keys | 66 |
| Figure 9-1. TFTP Window | 71 |
| Figure 10-1. Serial Interface | 81 |
| Figure B-2. DB25 Female DCE Interface RS232 | 81 |
| Figure B-3. DB25 Female Interface RS422 (4 wire mode) | 82 |
| Figure C-4. Serial Interface | 85 |
| Figure C-5. DB9 Male RS232 Serial DTE Connector | 85 |
| Figure C-6. Network Interface | 86 |

Tables

| | |
|--|----|
| Table 6-1. BootP/DHCP/AutoIP options | 44 |
| Table 6-2. Standard IP Network Netmasks | 45 |
| Table 7-1. Interface Mode Options | 48 |
| Table 7-2. Common Interface Mode Settings | 48 |
| Table 7-3. Flow Control Options | 49 |
| Table 7-4. Reserved Port Numbers | 49 |
| Table 7-5. Connect Mode Options | 50 |
| Table 7-6. Manual Connection Address Example | 52 |
| Table 7-7. Modem Mode Messages | 55 |
| Table 7-8. Modem Mode Commands | 56 |
| Table 7-9. Disconnect Mode Options | 58 |
| Table 7-10. Flush Mode Options | 59 |
| Table 7-11. Pack Control Options | 59 |
| Table 9-1. Firmware Files | 70 |
| Table 10-1. Monitor Mode Commands | 74 |
| Table 10-2. Command Response Codes | 75 |
| Table A-1. SDS1101 LEDs | 76 |
| Table A-2. SDS2101 LEDs | 77 |
| Table A-3. Problems and Error Messages | 77 |
| Table D-1. -SDS1101 Technical Specifications | 87 |

| | |
|--|----|
| Table E-1. -SDS2101 Technical Specifications _____ | 89 |
| Table I-1: Europe – EU Declaration of Conformity _____ | 98 |

1: Using This Guide

Purpose and Audience

This guide provides the information needed to configure, use, and update the Lantronix® SecureBox® SDS1101 and SDS2101 device servers. It is for system administrators and those responsible for installing and maintaining the SDS.

Chapter Summary

The remaining chapters in this guide include:

| Chapter | Description |
|---|--|
| 2: Introduction | Describes the main features of the SDS and the protocols it supports. |
| 3: Getting Started | Provides information for installing your unit and getting it up and running using the DeviceInstaller™ application or a serial port connection. |
| 4: Configuration Using Web Manager | Details using the Web Manager to set parameters such as port and server properties. |
| 5: Configuration via Telnet or Serial Port (Setup Mode) | Provides instructions for accessing Setup Mode (command line interface) using a Telnet connection through the network or a terminal or terminal emulation program through the serial port. |
| 6: Setup Mode: Server Configuration | Details the network (server) settings |
| 7: Setup Mode: Channel Configuration | Details the serial port settings. |
| 8: Setup Mode: Advanced Settings | Details expert and security settings and explains how to reset the unit to factory default values. |
| 9: Firmware Upgrades | Provides instructions for obtaining the latest firmware and updating the SDS. |
| 10: Monitor Mode | Provides instructions for accessing and using the command line interface to monitor the network and diagnose problems. |
| 1)a)i)(1)A: Troubleshooting and Contact Information | Describes common problems and error messages and how to contact Lantronix Technical Support. |
| B: SDS1101 Connections and Pinouts | Provides descriptions and illustrations of connection hardware. |
| 1)a)i)(1)C: SDS2101 Connections and Pinouts | Provides descriptions and illustrations of connection hardware. |

| Chapter | Description |
|---|--|
| <i>1)a)i)(1)D: SDS1101 Technical Specifications</i> | Lists technical specifications for the SDS1101. |
| <i>1)a)i)(1)E: SDS2101 Technical Specifications</i> | Lists technical specifications for the SDS2101. |
| <i>F: Alternative Ways to Assign an IP Address</i> | Provides detailed information about using DHCP, AutoIP, BOOTP ARP, and Telnet to assign an IP address. |
| <i>G: Binary to Hexadecimal Conversions</i> | Provides instructions for converting binary values to hexadecimals. |
| <i>1)a)i)(1)H: Compliance</i> | Provides compliance and disclaimer information for the SDS2101 and the SDS1101 device servers. |

Additional Documentation

Visit the Lantronix web site at www.lantronix.com/support/documentation for the latest documentation and the following additional documentation:

| | |
|--|--|
| <i>SDS1101 & SDS2101 Quick Start</i> | Provides the steps for getting the SDS1101/2101 up and running. |
| <i>DeviceInstaller Online Help</i> | Provides instructions for using the Windows-based utility to configure the SDS1101/2101 and other Lantronix device servers. |
| <i>“Live” Tutorials on the Lantronix Web Site (English)</i> | Explains and demonstrates assigning an IP address to the SDS device server and setting it up with the Com Port Redirector. See http://ltxfaq.custhelp.com/app/answers/detail/a_id/1119 . |
| <i>Com Port Redirector User Guide</i> | Provides information on using the Windows application-based utility to create a virtual com port. |

2: Introduction

The SecureBox SDS1101 is a single-port device server and the SDS2101 is a dual port device server that provide a quick, simple, and cost-effective way to bring the advantages of data accessibility and remote management to devices not currently connected to a network.

Applications

The SDS family of Device Servers allows serial devices, such as those listed below, to connect and communicate over Ethernet networks using the IP protocol family (TCP for connection-oriented stream applications and UDP for datagram applications).


The SDS1100/2101 Secure Device Server offers secure data communications using Rijndael Advanced Encryption Standards (AES) and is certified by the National Institute of Standard and Technology (NIST) to meet Federal Information Processing Standards (FIPS) required for data communication on US government and government contractor's networks.

- ◆ Security alarms
- ◆ Access control devices
- ◆ Fire control panels
- ◆ Time/attendance clocks and terminals
- ◆ ATM machines
- ◆ Data collection devices
- ◆ RFID readers
- ◆ Universal Power Supply (UPS) management units
- ◆ Telecommunications equipment
- ◆ Data display devices
- ◆ Virtually any asynchronous RS-232, RS422, or RS485 device

Application Examples


Using a method called serial tunneling, the SDS encapsulates serial data into packets and transports them over Ethernet. Using two SDS units, connected by a network, virtual serial connections can extend across a facility or around the world.

Figure 2-1. Serial Tunneling Example

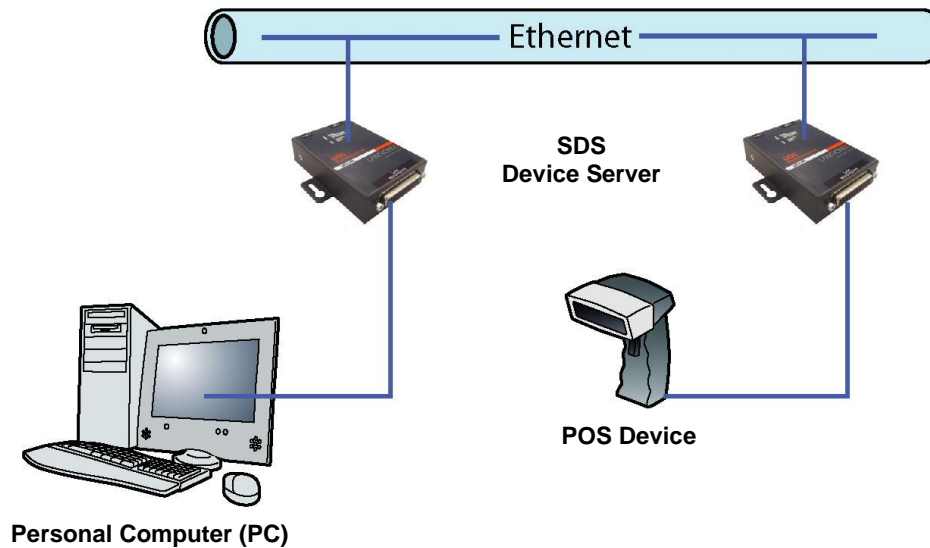

The Com Port Redirector software available for download at www.lantronix.com/support/downloads simplifies the integration process by extending the functionality of COM-port-based Windows™ applications. Virtual COM ports, mapped to remote device servers on the network, can replace direct serial connections.

Figure 2-2. Direct TCP/IP or Redirector Configuration

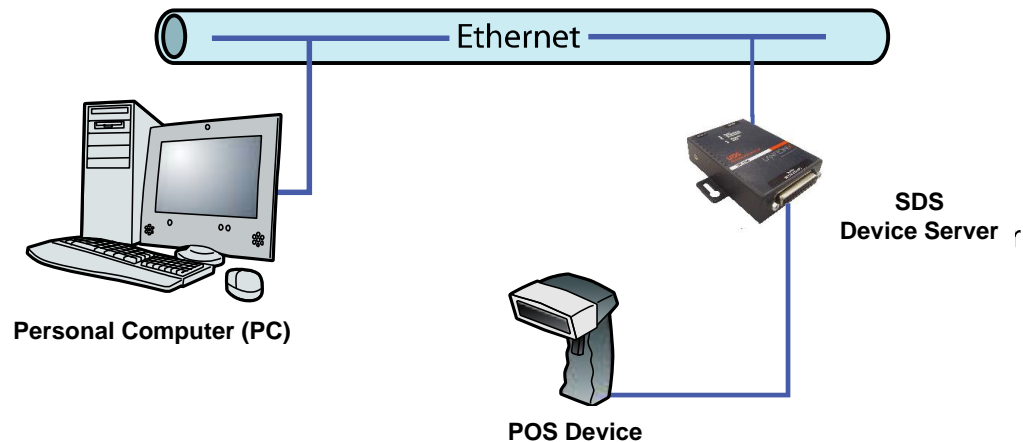

Note: For step-by-step instructions on configuring the SDS for serial tunneling or for use with the Com Port Redirector, see SDS Configuration Tutorials on the Lantronix web site: www.lantronix.com/support.

Protocol Support

The SDS uses the Internet Protocol (IP) for network communications and the Transmission Control Protocol (TCP) to assure that no data is lost or duplicated and that everything sent to the connection arrives correctly at the target.

Supported protocols include:

- ◆ ARP, UDP, TCP, ICMP, Telnet, TFTP, AutoIP, DHCP, HTTP, and SNMP for network communications.
- ◆ TCP, UDP, and Telnet for connections to the serial port.
- ◆ TFTP for firmware updates.
- ◆ IP for addressing, routing, and data block handling over the network.
- ◆ User Datagram Protocol (UDP) for typical datagram applications in which devices interact with other devices without a point-to-point connection.

Additional Features

Modem Emulation In modem emulation mode, the SDS can replace dial-up modems. The unit accepts modem AT commands on the serial port and then establishes a network connection to the end device. This arrangement leverages network connections and bandwidth to eliminate dedicated modems and phone lines.

Built-in Web Server: The SDS includes a built-in web server for configuring the unit and displaying operating and troubleshooting information on the attached links to online support.

Configuration Methods

After installation, the SDS requires configuration. For the unit to operate correctly on a network, it must have a unique IP address on the network. There are three basic methods for logging into the SDS and assigning IP addresses and other configurable settings:

DeviceInstaller: Configure the IP address and other network settings on the SDS using a Graphical User Interface (GUI) on a PC attached to a network. (See [Assigning the IP Address: DeviceInstaller](#))

Web Manager: Through a web browser, configure the SDS settings using the Lantronix Web Manager. (See [4: Configuration Using Web Manager](#).)

Serial and Telnet Ports: Use Setup Mode, a command line interface. There are two approaches to accessing Setup Mode: making a Telnet connection to the network port (9999) or connecting a terminal (or a PC running a terminal emulation program) to the unit's serial port. (See [5: Configuration via Telnet or Serial Port \(Setup Mode\)](#).)

Product Information Label

The product information label on the underside of the unit contains the following information about your specific unit:

- ◆ QR code or bar code
- ◆ Serial number
- ◆ Product ID (name)
- ◆ Product description
- ◆ Hardware address (also referred to as the Ethernet or MAC address)
- ◆ Device ID (not shown)

Figure 2-3 Product Label



Figure 2-4. Product Label with Bar Code



3: Getting Started

This chapter describes how to get your SDS up and running in the shortest possible time.


Package Contents

Verify and inspect the contents of the SDS1101/2101 package using the following list. If any item is missing or damaged, contact your place of purchase immediately.

- ◆ SDS1101 or SDS2101
- ◆ Six-foot DB9F-to-DB25M modem cable (SDS1101) or DB9F to DB9F Null Modem Cable (SDS2101)
- ◆ Power supply
- ◆ Fastening kit
- ◆ SecureBox® SDS1101/2101 Quick Start Guide

Installing the SDS

Figure 3-1. SDS1101 Connected to Serial Device and Network

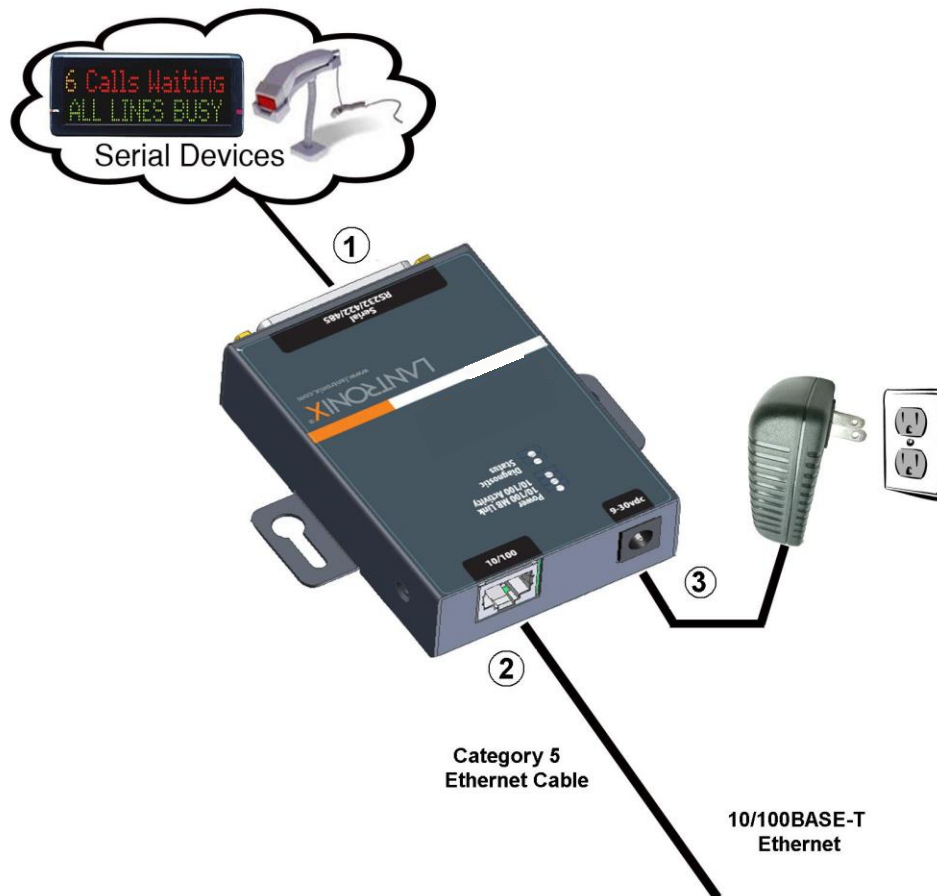

To install the unit:

Complete the following steps in order. Refer to the numbers in the figure above.

Note: See the sections that follow for details about connectors and pinouts.

1. Connect a serial device to your unit.
2. Connect an Ethernet cable to the RJ45 port.
3. Supply power to your unit using the power supply that was included in the packaging.

Note: The required input voltage is 9-30 VDC (center +) or 10-24 VAC (1.5W maximum power required).

4. Supply power to the serial device.

Note: If you encounter a problem, please see [LEDs](#) for diagnostic information.

Required Information

Before configuring the SDS, have the following information available:

Hardware Address

Take note of the unit's hardware address (also known as the Ethernet or MAC address). It is on the product label in one of the following formats (see [Product Information Label](#)).

Hardware Address: 00 – 80 - A3 - _____ - _____ - _____

Or

Hardware Address: 00 – 20 - 4a - _____ - _____ - _____

Note: Make note of the MAC address. It is needed to locate the SDS module using DeviceInstaller.

IP Address

The SDS must have a unique IP address on your network. This address references the specific unit. By default, the unit is DHCP-enabled and automatically assigned an IP address on DHCP-enabled networks. If you are assigning a static IP address, the systems administrator generally provides the IP address, subnet mask, and gateway.

Note: The factory default IP address is 0.0.0.0 to enable ...AutoIP. When the units boots, it sends a DHCP broadcast to try and get an IP address. If it receives no reply from a DHCP server, the SDS tries BOOTP. If the SDS does not receive a response from BOOTP, it reverts to an AutoIP address.

IP Address: _____ - _____ - _____ - _____

Subnet Mask: _____ - _____ - _____ - _____

Gateway: _____ - _____ - _____ - _____

You have several options for assigning an IP address and related network settings to your unit. This chapter provides information about using the DeviceInstaller (graphical user interface) and serial port login (command line interface) methods.

Note: For information about other methods of assigning the IP address, such as DHCP, AutoIP, ARP, and Telnet, see [Alternative Ways to Assign an IP Address](#)**Error! Reference source not found.**

Assigning the IP Address: DeviceInstaller

This chapter covers the steps for getting the SDS1101/2101 device server online and for viewing its current configuration.

Note: The Lantronix® DeviceInstaller™ application is a free utility program provided by Lantronix that discovers, configures, upgrades, and manages Lantronix Device Servers. It can be downloaded from the Lantronix website at www.lantronix.com/support/downloads.

For instructions on using the DeviceInstaller application to configure the IP address and related settings or for more advanced features, see the DeviceInstaller Online Help.

By default, the username is left blank and the password is the last 8 characters of the Device ID (for devices manufactured after January 1, 2020) or is left blank (for all older devices).

Installing DeviceInstaller

To install DeviceInstaller:


1. Download the latest version of the DeviceInstaller application from <http://www.lantronix.com/support/downloads>.
2. Run the executable to start the installation process.
3. Respond to the installation wizard prompts. (If prompted to select an installation type, select **Typical**).

Assigning an IP Address

The unit's IP address must be configured before it can work correctly on a network. The unit's IP address is normally set to 0.0.0.0 at the factory. The hardware address is on the product label. The unit is DHCP enabled as the default.

To assign an IP address manually:

1. Click **Start** → **Programs** → **Lantronix** → **DeviceInstaller** → **DeviceInstaller**. If your PC has more than one network adapter, a message displays. Select an adapter and click **OK**.

Note: If the unit already has an IP address (e.g., DHCP has assigned an IP address), click the **Search** icon  and select the unit from the list of Lantronix device servers on the local network.


2. Click **Tools** → **Enter Global Credentials**. Select **Prompt with a dialog box to login** and click **OK**.
3. Note the IP address. You can put the IP address in the address bar of a browser to access Web Manager and proceed to assign an IP address in the network settings. See Network Configuration for more information. Alternatively, continue with these steps.

4. Click the **Assign IP** icon .

5. If prompted, enter the hardware address (on the product label) and click **Next**.
6. Select **Assign a specific IP address** and click **Next**.
7. Enter the **IP address**. The **Subnet mask** displays automatically based on the IP address; if desired, you may change it. On a local network, you can leave the **Default gateway** blank (all zeros). Click **Next**.
8. Click the **Assign** button and wait several seconds until a confirmation message displays. Click **Finish**.
9. Select the device from the main window list and select **Ping** from the **Tools** menu. The Ping Device dialog box shows the IP address of the selected unit.
10. From the **Tools** menu, click the **Ping** button. The results display in the Status window. Click the **Clear Status** button to clear the window so you can ping the device again.

Note: If you do not receive "Reply" messages, make sure the unit is attached to the network properly and the IP address assigned is valid for the particular network segment you are working with. If you are not sure, check with your systems administrator.
11. Click the **Close** button to close the dialog box and return to the main window.

Adding the Unit to the Manage List

Now add the unit to the list of similar Lantronix devices on the network so you can manage and configure it. To perform this step, click the **Search**  on.

DeviceInstaller locates the unit and adds it to the list. Now you can manage (configure) the unit so it works with the serial device on the network.

Accessing the SDS1101/2101 Using DeviceInstaller

1. Click **Start**→**Programs** → **Lantronix**→**DeviceInstaller 4.4** →**DeviceInstaller**.
2. Click the SDS folder. The list of available Lantronix SDS1101 & SDS2101 devices displays.
3. Expand the list of SDS1101s or SDS2101s by clicking the **+** symbol next to the SDS1101 or SDS2101 icon. Select the SDS unit by clicking on its IP address to view its configuration.

Viewing the Current Configuration

DeviceInstaller provides a view of the unit's configuration.

To view the unit's current settings:

1. Follow the instructions above to locate the SDS1101 or SDS2101.

2. In the right pane, click the **Device Details** tab. The current SDS1101/2101 configuration displays:

| | |
|----------------------------------|--|
| Name | Configurable field. A name that identifies the SDS. Double-click the field, type in the value, and press Enter to complete. This name is not visible on other PCs or laptops using DeviceInstaller. |
| DHCP Device Name | Non-configurable field. Displays the name associated with SDS device's current IP address, if the IP address was obtained dynamically. |
| Group | Configurable field. A group name to categorize the SDS. Double-click the field, type in the value, and press Enter to complete. This group name is not visible on other PCs or laptops using DeviceInstaller. |
| Comments | Configurable field. Information about the SDS. Double-click the field, type in the value, and press Enter to complete. This description or comment is not visible on other PCs or laptops using DeviceInstaller. |
| Device Family | Non-configurable field. Displays the SDS1101's and SDS2101's device family type as SDS. |
| Type | Non-configurable field. Displays the device type as SDS1101 or SDS2101. |
| ID | Non-configurable field. Displays the SDS's ID embedded within the box. |
| Hardware Address | Non-configurable field. Displays the SDS's hardware (or MAC) address. |
| Firmware Version | Non-configurable field. Displays the firmware currently installed on the SDS. |
| Extended Firmware Version | Non-configurable field. Displays the full version nomenclature of the firmware. |
| Online Status | Non-configurable field. Displays the SDS status as online, offline, unreachable (the SDS is on a different subnet), or busy (the SDS is currently performing a task). |
| IP Address | <p>Non-configurable field. Displays the SDS's current IP address. To change the IP address, see To install DeviceInstaller:</p> <ol style="list-style-type: none"> 4. Download the latest version of the DeviceInstaller application from http://www.lantronix.com/support/downloads. 5. Run the executable to start the installation process. 6. Respond to the installation wizard prompts. (If prompted to select an installation type, select Typical). <p>Assigning an IP Address.</p> |

| | |
|---|--|
| IP Address was obtained | <p>Non-configurable field. Displays "Dynamically" if the SDS automatically received an IP address (e.g., from DHCP). Displays "Statically" if the IP address was configured manually. If the IP address was assigned dynamically, the following fields appear:</p> <ul style="list-style-type: none"> ◆ Obtain via DHCP with value of True or False ◆ Obtain via BOOTP with value of True or False ◆ Obtain via RARP with value of True or False ◆ Obtain via Auto IP with value of True or False |
| Subnet Mask | <p>Non-configurable field. Displays the SDS's current subnet mask. To change the subnet mask, see To install DeviceInstaller:</p> <ol style="list-style-type: none"> 7. Download the latest version of the DeviceInstaller application from http://www.lantronix.com/support/downloads. 8. Run the executable to start the installation process. 9. Respond to the installation wizard prompts. (If prompted to select an installation type, select Typical). <p>Assigning an IP Address.</p> |
| Gateway | <p>Non-configurable field. Displays the SDS's current gateway. To change the gateway, see To install DeviceInstaller:</p> <ol style="list-style-type: none"> 10. Download the latest version of the DeviceInstaller application from http://www.lantronix.com/support/downloads. 11. Run the executable to start the installation process. 12. Respond to the installation wizard prompts. (If prompted to select an installation type, select Typical). <p>Assigning an IP Address.</p> |
| Number of COB partitions supported | <p>Non-configurable field. Displays the number of COB partitions supported.</p> |
| Number of Serial Ports | <p>Non-configurable field. Displays the number of ports on the SDS.</p> |
| TCP Keepalive | <p>Non-configurable field. Displays the SDS's TCP keepalive value. The value is in the range 1-65s, and the default setting is 45.</p> |
| Telnet Supported | <p>Non-configurable field. Permits Telnet sessions.</p> |
| Telnet Port | <p>Non-configurable field. Displays the SDS port for telnet sessions.</p> |
| Web Port | <p>Non-configurable field. Displays the SDS port for Web Manager configuration.</p> |

| | |
|------------------------------------|--|
| Maximum Baud Rate Supported | Non-configurable field. Displays the SDS's maximum baud rate. <i>Note: The SDS1101/2101 may not currently be running at this rate.</i> |
| Firmware Upgradeable | Non-configurable field. Displays True , indicating the SDS's firmware is upgradeable as newer version become available. |
| Supports Configurable Pins | Non-configurable field. Displays False . |
| Supports Email Triggers | Non-configurable field. Displays False . |
| Supports AES Data Stream | Non-configurable field. Displays True . |
| Supports 485 | Non-configurable field. Displays True . The SDS supports the RS-485 protocol. |
| Supports 921K Baudrate | Non-configurable field. Displays False for SDS1101 which supports baud rates up to 230400. Displays True for SDS2101 which supports a baud rate of 921600. |
| Supports HTTP Server | Non-configurable field. Displays True . |
| Supports HTTP Setup | Non-configurable field. Displays True . |
| Supports 230K Baud Rate | Non-configurable field. Displays True . SDS supports a baud rate of 230400. |
| Supports GPIO | Non-configurable field. Displays False . |

Next Step

Now that the SDS has an IP address and other initial settings, you can configure it. You have the following options:

To configure the unit using a Web browser:

1. Click the Web Configuration tab.
2. Do one of the following:
 - ◆ To view the Web Manager in the current DeviceInstaller window, click the **Go** button.
 - ◆ To open the Web Manager in a web browser, click the **External Browser** button.

The Web Manager displays. A user and password dialog box displays.
3. Continue with [4: Configuration Using Web Manager](#).

Note: To assign Security settings, you must use the Setup Mode window in a Telnet session.

To configure the unit using a Telnet session:

1. Click the **Telnet Configuration** tab. The Setup Mode window displays.
2. **Press Enter within 5 seconds.**

3. Continue with step 4 in [5: Configuration via Telnet or Serial Port \(Setup Mode\)](#).

Assigning the IP Address: Serial Port Login

To assign the IP address and other network settings using a serial connection:

1. Connect a console terminal or a PC running a terminal emulation program to the unit's serial port. The default serial port settings are **9600 baud, 8 bits, no parity, 1 stop bit, no flow control**.
2. To enter Setup Mode, cycle the unit's power (power off and back on). After power-up, the self-test begins and the red Diagnostic LED starts blinking. **You have one second** to enter three lowercase **x** characters.

Note: *The easiest way to enter Setup Mode is to hold down the **x** key at the terminal (or emulation) while powering up the unit.*

3. Select **0** (Server Configuration) and follow the prompts until you get to **IP address**.
4. Enter the new IP address, subnet mask, and gateway (if applicable).
5. Do one of the following:
 - ◆ Continue with [5: Configuration via Telnet or Serial Port \(Setup Mode\)](#).
 - ◆ Select **9** to save and exit Setup Mode. The unit performs a power reset.

4: Configuration Using Web Manager

You must configure the unit so it can communicate on a network with your serial device. For example, you must set the way the unit will respond to serial and network traffic, how it will handle serial packets, and when to start or close a connection.

The unit's configuration is stored in nonvolatile memory and is retained without power. You can change the configuration at any time. The unit performs a reset after you change and store the configuration.

In this chapter, we describe how to configure the SDS using Web Manager, Lantronix's browser-based configuration tool. (For information on using Setup Mode, our command line configuration interface, see [5: Configuration via Telnet or Serial Port \(Setup Mode\)](#).)

Note: *The examples in this section show a typical device. Your device may have different configuration options.*

By default, the username is left blank and the password is the last 8 characters of the Device ID (for devices manufactured after January 1, 2020) or is left blank (for all older devices).

Accessing SDS1101/2101 Using DeviceInstaller


Note: *Make note of the hardware (MAC) address. You will need it to locate the SDS using DeviceInstaller. For more information on the hardware address, see [Hardware Address](#).*

1. Run DeviceInstaller and search for the list of available Lantronix device servers.
2. Click **Tools > Enter Global Credentials**. Select **Prompt with a dialog box to login** and click **OK**.
3. Click the **SDS** folder. The list of available SDS products displays.
4. Expand the list of SDS1101s by clicking the **+** symbol next to the SDS1101 icon. Likewise, expand the list of SDS2101s by clicking the **+** symbol next to the SDS2101 icon.
5. Select the specific SDS unit by clicking its hardware address.
6. In the right pane, click the **Web Configuration** tab.
7. To view the SDS's Web Manager in the current DeviceInstaller window, click the **Go** button. To open the Web Manager in a web browser, click the **External Browser** button. The Web Manager displays.

Note: Alternatively, to open Web Manager, open your web browser and enter the IP address of the SDS.

A user and password dialog box displays. By default, the username is left blank and the password is the last 8 characters of the Device ID (for devices manufactured after January 1, 2020) or is left blank (for all older devices).

Figure 4-1. Lantronix Web Manager

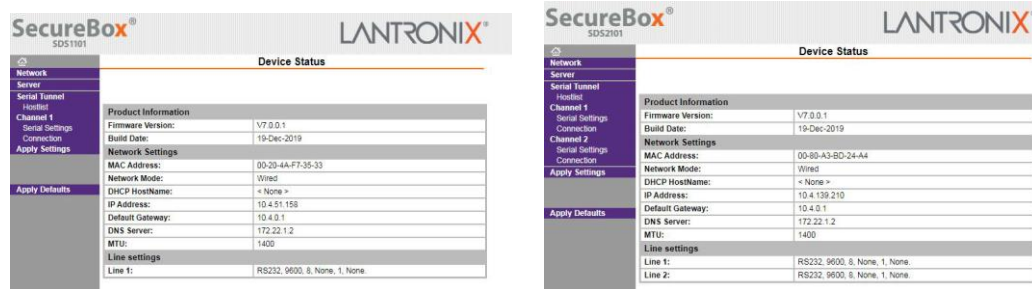

The main menu is in the left pane of the Web Manager window for both the SDS1101 and SDS2101. The device configuration options represented in the left pane main menu pictured above are the same for both SDS1101 and SDS2101 units with the exception of the additional Channel 2 available on SDS2101.

Network Configuration

The unit's network values display when you select **Network** from the main menu. The following sections describe the configurable parameters on the Network Settings page.

Figure 4-2. Network Settings

Network Settings

Network Mode: Wired Only ▾

IP Configuration

Obtain IP address automatically

Auto Configuration Methods

BOOTP: Enable Disable

DHCP: Enable Disable

AutoIP: Enable Disable

DHCP Host Name:

Use the following IP configuration:

IP Address:

Subnet Mask:

Default Gateway:

DNS Server:

Ethernet Configuration

Auto Negotiate

Speed: 100 Mbps 10 Mbps

Duplex: Full Half

Network Mode

1. Click **Network** from the main menu.
2. Note the following:

| | |
|---------------------|---|
| Network Mode | Wired Only is the only choice. It enables the Ethernet network connectivity. |
|---------------------|---|

Automatic IP Address Configuration

An IP address can be assigned automatically. You then enter related network settings.

To assign an IP address automatically:

1. On the main menu, click **Network**.
2. Select **Obtain IP address automatically**.
3. Enter the following (as necessary):

| | |
|----------------|--|
| BOOTP | Select Enable to permit the Bootstrap Protocol (BOOTP) server to assign the IP address from a pool of addresses automatically. Enable is the default. |
| DHCP | Select Enable to permit the Dynamic Host Configuration Protocol (DHCP) to assign a leased IP address to the SDS unit automatically. Enable is the default. |
| AutoIP | Select Enable to permit the SDS to generate an IP in the 169.254.x.x address range with a Class B subnet. Enable is the default. |
| DHCP Host Name | Enter the name of the host on the network providing the IP address. |

Note: Disabling *BOOTP*, *DHCP*, and *AutoIP* (all three checkboxes) is not advised as the only available IP assignment method will then be *ARP* or *serial port*.

- When you are finished, click the **OK** button.
- On the main menu, click **Apply Settings**.

Static IP Address Configuration

You can manually assign an IP address to the unit and enter related network settings.

To assign an IP address manually:

- On the main menu, click **Network**.
- Select **Use the following IP configuration**.
- Enter the following (as necessary):

| | |
|-----------------|---|
| IP Address | If DHCP is not used to assign IP addresses, enter it manually in decimal-dot notation. The IP address must be set to a unique value in the network. |
| Subnet Mask | A subnet mask defines the number of bits taken from the IP address that are assigned for the host part. |
| Default Gateway | The gateway address, or router, allows communication to other LAN segments. The gateway address should be the IP address of the router connected to the same LAN segment as the unit. The gateway address must be within the local network. |
| DNS Server | The DNS server allows the name of a remote machine to be resolved automatically. Enter the IP address of the DNS server. If the device is DHCP enabled, the DHCP server provides the DNS server IP address, which will override this configured value. Note: This setting is applicable only in Manual Connection mode. |

- When you are finished, click the **OK** button.
- On the main menu, click **Apply Settings**.

Ethernet Configuration

You must specify the speed and direction of data transmission.

To specify how data will be transmitted:

1. On the main menu, click **Network**.
2. Enter the following (as necessary):

| | |
|----------------|---|
| Auto Negotiate | <p>With this option, the Ethernet port auto-negotiates the speed and duplex with the hardware endpoint to which it is connected. This is the default.</p> <p>If this option is not selected, complete the fields that become available:</p> <ul style="list-style-type: none"> ◆ Speed: The speed of data transmission. The default setting is 100 Mbps. ◆ Duplex: The direction of data transmission. The default setting is Full. |
|----------------|---|

3. When you are finished, click the **OK** button.
4. On the main menu, click **Apply Settings**.

Server Configuration

The unit's server values display when you select **Server** from the main menu. The following sections describe the configurable parameters on the Server Settings page.

Figure 4-3. Server Settings

To configure the SDS's device server settings:

1. On the main menu, click **Server**.
2. Configure or modify the following fields:

Server Configuration

| | |
|-----------------------------|---|
| Enhanced Password | Select whether to enable advanced password: <ul style="list-style-type: none"> ◆ Enable: selecting this option enables advanced password creation, allowing you to create passwords up to 16 bytes in length. ◆ Disable: selecting this option disables advanced password creation, allowing you to create basic passwords up to 4 bytes in length. |
| Telnet/Web Manager Password | Enter the password required for Telnet configuration and Web Manager access. |
| Retype Password | Re-enter the password required for Telnet configuration and Web Manager access. |

Advanced

| | |
|----------------------------------|---|
| ARP Cache Timeout (secs) | When the unit communicates with another device on the network, it adds an entry into its ARP table. ARP Cache timeout defines the number of seconds (1-600) before it refreshes this table. The default setting is 600 . |
| TCP Keepalive (secs) | TCP Keepalive time defines how many seconds the unit waits during an inactive connection before checking its status. If the unit does not receive a response, it drops that connection. Enter a value between 0 and 60 seconds. 0 disables keepalive. The default setting is 45 . |
| Monitor Mode @ Bootup | Select Disable to disable entry into the monitor mode using the yyy or xx1 key sequence at startup. This field prevents the unit from entering monitor mode by interpreting the stream of characters that are received during the device server's initialization at startup. The default setting is Enable . |
| HTTP Server Port | This option allows the configuration of the web server port number. The valid range is 1-65535 . The default setting is 80 . |
| Config Server Port | Not applicable for this product. |
| MTU Size | The Maximum Transmission Unit (MTU) is the largest physical packet size a network can transmit for TCP and UDP. Enter between 512 and 1400 bytes. The default setting is 1400 bytes . |
| TCP Re-transmission timeout (ms) | The desired TCP re-transmission timeout value. If the ACK is not received for a packet sent from the SDS device, then the unit will retransmit the data. The valid range is 500-4000 msec. |

3. When you are finished, click the **OK** button.
4. On the main menu, click **Apply Settings**.

Host List Configuration

The SDS scrolls through the host list until it connects to a device listed in the host list table. After a successful connection, the unit stops trying to connect to any others. If this connection fails, the unit continues to scroll through the table until the next successful connection.

The host list supports a minimum of 1 and a maximum of 12 entries. Each entry contains an IP address and a port number.

Note: *The host list is disabled for Manual and Modem Mode. The unit does not accept a data connection from a remote device when the hostlist option is enabled.*

To configure the host list:

1. On the main menu, click **Hostlist**.

Figure 4-4. Hostlist Settings

Hostlist Settings

Retry Settings

Retry Counter: Retry Timeout:

Host Information

| No. | Host Address | Port | No. | Host Address | Port |
|-----|--------------------------------------|--------------------------------|-----|--------------------------------------|--------------------------------|
| 1 | <input type="text" value="0.0.0.0"/> | <input type="text" value="0"/> | 2 | <input type="text" value="0.0.0.0"/> | <input type="text" value="0"/> |
| 3 | <input type="text" value="0.0.0.0"/> | <input type="text" value="0"/> | 4 | <input type="text" value="0.0.0.0"/> | <input type="text" value="0"/> |
| 5 | <input type="text" value="0.0.0.0"/> | <input type="text" value="0"/> | 6 | <input type="text" value="0.0.0.0"/> | <input type="text" value="0"/> |
| 7 | <input type="text" value="0.0.0.0"/> | <input type="text" value="0"/> | 8 | <input type="text" value="0.0.0.0"/> | <input type="text" value="0"/> |
| 9 | <input type="text" value="0.0.0.0"/> | <input type="text" value="0"/> | 10 | <input type="text" value="0.0.0.0"/> | <input type="text" value="0"/> |
| 11 | <input type="text" value="0.0.0.0"/> | <input type="text" value="0"/> | 12 | <input type="text" value="0.0.0.0"/> | <input type="text" value="0"/> |

- Enter or modify the following fields:

Retry Settings

| | |
|---------------|---|
| Retry Counter | Enter the value for the number of times the SDS should attempt to retry connecting to the host list. The default setting is 3. |
| Retry Timeout | Enter the duration (in milliseconds) the SDS should abandon attempting a connection to the host list. The default setting is 250. |

Host Information

| | |
|--------------|--|
| Host Address | Enter or modify the host's IP address. |
| Port | Enter the target port number. |

- When you are finished, click the **OK** button.
- On the main menu, click **Apply Settings**.

Channel 1 & Channel 2 Configuration

Channel configuration defines how the serial port responds to network and serial communication for Channel 1 on both the SDS1101 and SDS2101 units and for Channel 2 for SDS2101 model.

Note: Screenshots below show configuration settings for Channel 1, which is available for both SDS1101 and SDS2101 units. However, an additional Channel 2 with the same configuration settings (as Channel 1) is additionally available on all SDS2101 device servers.

Serial Settings

To configure the channel's serial settings:

1. On the main menu, click **Serial Settings** (under **Channel 1** or **Channel 2**) to display the Serial Settings window.

Figure 4-5. Channel Serial Settings

Serial Settings

Channel 1

Disable Serial Port

Port Settings

Protocol: RS232 Flow Control: None

Baud Rate: 9600 Data Bits: 8 Parity: None Stop Bits: 1

Pack Control

Enable Packing

Idle Gap Time: 12 msec

Match 2 Byte Sequence: Yes No Send Frame Immediate: Yes No

Match Bytes: 0x00 0x00 (Hex) Send Trailing Bytes: None One Two

Flush Mode

Flush Input Buffer

With Active Connect: Yes No

With Passive Connect: Yes No

At Time of Disconnect: Yes No

Flush Output Buffer

With Active Connect: Yes No

With Passive Connect: Yes No

At Time of Disconnect: Yes No

OK

2. In the available fields, enter the following information:

Channel 1

| | |
|---------------------|--|
| Disable Serial Port | When selected, disables communication through the serial port. The serial port is enabled by default. Note: This feature is not available on single port device servers. |
|---------------------|--|

Port Settings

| | |
|--------------|---|
| Protocol | From the drop-down menu, select the protocol type for the selected channel. The default setting is RS232 . |
| Flow Control | Flow control manages data flow between devices in a network to ensure it is processed efficiently. Too much data arriving before a device is prepared to manage it causes lost or retransmitted data. None is the default. |

| | |
|-----------|--|
| Baud Rate | The unit and attached serial device, such as a modem, must agree on a speed or baud rate to use for the serial connection. Valid baud rates are 300, 600, 1200, 2400, 4800, 9600 (default), 19200, 38400, 57600, 115200, and 230400 baud. The SDS2101 also supports 460800 and 921600 baud. The default setting is 9600 . |
| Data Bits | Indicates the number of bits in a transmitted data package. The default setting is 8 . |
| Parity | Checks for the parity bit. The default setting is None . |
| Stop Bits | The stop bit follows the data and parity bits in serial communication. It indicates the end of transmission. The default setting is 1 . |

Pack Control

| | |
|-----------------------|--|
| Enable Packing | <p>Select to enable packing on the SDS.</p> <p>Two firmware-selectable packing algorithms define how and when packets are sent to the network.</p> <p>The standard algorithm is optimized for applications in which the unit is used in a local environment, allowing for very small delays for single characters, while keeping the packet count low.</p> <p>The alternate packing algorithm minimizes the packet count on the network and is especially useful in applications in a routed Wide Area Network (WAN). Adjusting parameters in this mode can economize the network data stream.</p> <p>Disabled by default.</p> |
| Idle Gap Time | Select the maximum time for inactivity. The default time is 12 milliseconds . |
| Match 2 Byte Sequence | Use to indicate the end of a series of data to be sent as one group. The sequence must occur sequentially to indicate end of the data collection to the SDS. The default setting is No . |
| Match Bytes | Use to indicate the end of a series of data to be sent as one group. Set this value to 00 if specific functions are not needed. |
| Send Frame Immediate | After the detection of the byte sequence, indicates whether to send the data frame or the entire buffer. Select Yes to send only the data frame. The default setting is No . |
| Send Trailing Bytes | Select the number of bytes to send after the end-of-sequence characters. The default setting is None . |

Flush Input Buffer (Serial to Network)

| | |
|---------------------|--|
| With Active Connect | Select Yes to clear the input buffer with a connection that is initiated from the device to the network. The default setting is No . |
|---------------------|--|

| | |
|-----------------------|---|
| With Passive Connect | Select Yes to clear the input buffer with a connection initiated from the network to the device. The default setting is No . |
| At Time of Disconnect | Select Yes to clear the input buffer when the network connection to or from the device is disconnected. The default setting is No . |

Flush Output Buffer (Network to Serial)

| | |
|-----------------------|---|
| With Active Connect | Select Yes to clear the output buffer with a connection that is initiated from the device to the network. The default setting is No . |
| With Passive Connect | Select Yes to clear the output buffer with a connection initiated from the network to the device. The default setting is No . |
| At Time of Disconnect | Select Yes to clear the output buffer when the network connection to or from the device is disconnected. The default setting is No . |

3. When you are finished, click the **OK** button.
4. On the main menu, click **Apply Settings**.

Connection Settings - TCP

To configure a channel's TCP settings:

1. On the main menu, click **Connection**. The Connection Settings window for the channel displays.

Figure 4-6. TCP Connection Settings

Connection Settings

Channel 1

Connect Protocol
Protocol: TCP ▾

Connect Mode

Passive Connection:

Accept Incoming: Yes ▾

Password Required: Yes No

Password:

Modem Escape Sequence Pass Through: Yes No

Active Connection:

Active Connect: None ▾

Start Character: 0x0D (in Hex)

Modem Mode: None ▾

Show IP Address After RING: Yes No

Endpoint Configuration:

Local Port: 10001 Remote Port: 0

Auto increment Local Port for active connect Remote Host: 0.0.0.0

Common Options:

Telnet Com Port Cntrl: Disable ▾ Connect Response: None ▾

Terminal Name: Use Hostlist: Yes No LED: Blink ▾

Disconnect Mode

On Mdm_Ctrl_In Drop: Yes No Hard Disconnect: Yes No

Check EOT(Ctrl-D): Yes No Inactivity Timeout: 0 : 0 (mins : secs)

OK

2. In the available fields, enter or modify the following information:

Connect Protocol

| | |
|----------|--|
| Protocol | From the drop-down menu, select TCP . |
|----------|--|

Connect Mode: Passive Connection

| | |
|-----------------|---|
| Accept Incoming | Select Yes to accept incoming connections. The default setting is Yes. |
|-----------------|---|

| | |
|------------------------------------|--|
| Password Required | Determines whether a password is required for an incoming passive connection. This field is not available when a password is set for Telnet mode. The default setting is No . |
| Password | If Password Required was set to Yes , enter the password for passive connections. |
| Modem Escape Sequence Pass Through | Disable or enable the unit's ability to send the escape sequence. The default is Y (Yes) (send the escape sequence). |

Connect Mode: Active Connection

| | |
|----------------------------|--|
| Active Connect | Select None (default) to disable Active Connect . Otherwise, indicate the connection type from the drop-down list: <ul style="list-style-type: none"> ◆ With Any Character: Attempts to connect when any character is received from the serial port. ◆ With Active Mdm Ctrl In: Accepts external connection requests only when the Modem Control In input is asserted. ◆ With Start Character: Attempts to connect when it receives a specific start character from the serial port. The default start character is carriage return. ◆ Manual Connection: Attempts to connect when directed by a command string received from the serial port. ◆ Auto Start: Automatically connects to the remote IP address and port after booting up. |
| Start Character | If Active Connect is set to With Start Character, enter the start character in this field. The default setting is 0D . |
| Modem Mode | Indicates the on-screen response type when in Modem Mode (if Modem Mode is enabled). The default setting is None . |
| Show IP Address After RING | Indicates whether to display the remote IP address upon connection. The default setting is Yes . |

Endpoint Configuration

| | |
|--|---|
| Local Port | Enter the local port number. |
| Auto increment Local Port for active connect | Select to auto-increment the local port number for new outgoing connections. The range of auto-incremented port numbers is 50,000 to 59,999 and loops back to the beginning when the maximum range is reached. Disabled by default. |
| Remote Port | Enter the remote port number. |
| Remote Host | Enter the IP address of the remote device. |

Common Options

| | |
|-----------------------|---|
| Telnet Com Port Cntrl | This field is available for configuration only when Active Connect is set to None . Select Enable to permit Telnet communication to the SDS unit. The Telnet Com Port Cntrl feature is used in conjunction with the Com Port Redirector (CPR) utility. (See the CPR online Help for details.) |
|-----------------------|---|

| | |
|------------------|--|
| Terminal Name | This field is available for configuration only when Telnet Com Port Cntrl is set to Enable . Use the terminal name for the Telnet terminal type. Enter only one name. When this option is enabled, the unit also reacts to the end of record (EOR) and binary options, which can be used for applications such as terminal emulation to IBM hosts. |
| Connect Response | A single character is transmitted to the serial port when there is a change in connection state. The default setting is None . |
| Use Hostlist | If this option is set to Yes , the device server scrolls through the host list until it connects to a device listed in the host list table. Once it connects, the unit stops trying to connect to any others. If this connection fails, the unit continues to scroll through the table until it connects to another IP in the host list. The host list is disabled for Manual Mode and for Modem Mode. The unit will not accept a data connection from a remote device when the host list option is enabled. |
| LED | Select Blink for the status LEDs to blink upon connection, or select None for no LED output. The default setting is Blink . |

Disconnect Mode

| | |
|---------------------|--|
| On Mdm_Ctrl_In Drop | Set to Yes for the network connection to or from the serial port to disconnect (drop) when Modem Control In transitions from an asserted state to not asserted state. The default setting is No . |
| Hard Disconnect | When set to Yes , the TCP connection closes even if the remote site does not acknowledge the disconnect request. |
| Check EOT (Ctrl-D) | Select Yes to drop the connection when Ctrl-D or Hex 04 is detected. Both Telnet Com Port Cntrl and Check EOT (Ctrl+ D) must be enabled for Disconnect with EOT to function properly. Ctrl+D is only detected going from the serial port to the network. The default setting is No . |
| Inactivity Timeout | Use this parameter to set an inactivity timeout. The unit drops the connection if there is no activity on the serial line before the set time expires. Enter time in the format mm:ss, where m is the number of minutes and s is the number of seconds. To disable the inactivity timeout, enter 00:00 . |

- When you are finished, click the **OK** button.
- On the main menu, click **Apply Settings**.

Connection Settings - UDP

To configure a channel's UDP settings:

- On the main menu, click **Connection**. The Connection Settings window for the selected channel displays.
- In the available fields, enter or modify the following information:

Figure 4-7. UDP Connection Settings

Channel 1

Connect Protocol
Protocol:

Datagram Mode:
Datagram Type: Accept Incoming:

Endpoint Configuration:
Local Port: Remote Port:
Remote Host: Use Broadcast

Device Address Table:

| No. | Dev Addr | No. | Dev Addr | No. | Dev Addr | No. | Dev Addr |
|-----|--------------------------------|-----|--------------------------------|-----|--------------------------------|-----|--------------------------------|
| 0 | <input type="text" value="0"/> | 1 | <input type="text" value="0"/> | 2 | <input type="text" value="0"/> | 3 | <input type="text" value="0"/> |
| 4 | <input type="text" value="0"/> | 5 | <input type="text" value="0"/> | 6 | <input type="text" value="0"/> | 7 | <input type="text" value="0"/> |
| 8 | <input type="text" value="0"/> | 9 | <input type="text" value="0"/> | 10 | <input type="text" value="0"/> | 11 | <input type="text" value="0"/> |
| 12 | <input type="text" value="0"/> | 13 | <input type="text" value="0"/> | 14 | <input type="text" value="0"/> | 15 | <input type="text" value="0"/> |

Connect Protocol

| | |
|----------|--|
| Protocol | Select UDP from the drop-down menu. |
|----------|--|

Datagram Mode

| | |
|-----------------|---|
| Datagram Type | Configures the remote IP or network broadcast address and the remote port. Enter 01 for directed or broadcast UDP. The default setting is 00. |
| Accept Incoming | Select Yes to accept incoming UDP datagrams. The default setting is Yes. |

Endpoint Configuration

| | |
|----------------------|---|
| Local Port | Enter the local port number. |
| Remote Port | Enter the port number of the remote device. |
| Remote Host | Enter the IP address of the remote device. |
| Use Broadcast | Select to broadcast the UDP datagram. Datagrams of type 01 can be sent as a broadcast by enabling this option. The default is not to broadcast. Note: Datagrams are sent as subnet-directed broadcasts. |
| Device Address Table | The table is enabled when Datagram Type is set to FD. Enter values between 1 and 255 to identify units on the local network of device servers. Note: Lantronix Tech Support supports Datagram type 01. Datagram Type FD is for OEM use. |

3. When you are finished, click the **OK** button.
4. On the main menu, click **Apply Settings**.

Apply Settings

1. To save and apply the configuration changes to the device server, click the **Apply Settings** button.

Note: Clicking **OK** on each page does not change the configuration on the device. Clicking the **OK** button tells the SDS what changes to use; the **Apply Settings** button makes the changes permanent and reboots the SDS device.

Apply Defaults

1. Click the **Apply Defaults** button to set the device server back to the default settings. For details see [Default Settings \(Option 7\)](#).
2. Click **Yes** to set factory settings, or click **No** to cancel.

5: Configuration via Telnet or Serial Port (Setup Mode)

You must configure the unit so it can communicate on a network with your serial device. As an alternative to using a web browser, as described in the previous chapter, you can use the following procedures remotely or locally:

- ◆ Use a Telnet connection to configure the unit over the network.
- ◆ Use a terminal or terminal emulation program to access the serial port locally.

The series of prompts at which you enter configuration settings is called **Setup Mode**.

Note: Detailed information about other setup methods is available from your Lantronix Sales Associate.

The unit's configuration is stored in nonvolatile memory and is retained without power. You can change the configuration at any time. The unit performs a reset after the configuration has been changed and stored.

This chapter tells you how to access Setup Mode and the general procedure for using it. To complete the configuration, continue with [6: Setup Mode: Server Configuration](#), [7: Setup Mode: Channel Configuration](#), and [8: Setup Mode: Advanced Settings](#).

Note: The menus in the configuration chapters show a typical device. Your device may have different configuration options.

Accessing Setup Mode

Telnet Connection

To configure the unit over the network, establish a Telnet connection to port 9999.

Note: You can also use *DeviceInstaller* to access Telnet. Select the device from the main window list, and click the **Telnet Configuration** tab. Skip steps 1 and 2.

To establish a Telnet connection:

1. From the Windows **Start** menu, click **Run** and type the following command, where x.x.x.x is the IP address, and 9999 is the unit's fixed network configuration port number:

```
Windows: telnet x.x.x.x 9999
UNIX: telnet x.x.x.x:9999
```

- Click **OK**. The following information displays.

Figure 5-1. MAC Address

```

*** Lantronix SDS1101 Device Server ***
Serial Number   MAC address 00204AF73533
Device ID:      I345678123456781234567812345678
Software version V7.0.0.1 (191219)
AES library version 1.8.2.1
Press Enter for Setup Mode

```

- By default, the password is the last 8 characters of the Device ID (for devices manufactured after January 1, 2020) or is left blank (for all older devices).
- To enter Setup Mode, press **Enter** within 5 seconds. The configuration settings display, followed by the **Change Setup** menu.

Note: Channel 2 setup option is only available for the SDS2101 device server.

Figure 5-2. Setup Menu Options

```

Change Setup:
0 Server
1 Channel 1
2 Channel 2
5 Expert
6 Security
7 Defaults
8 Exit without save
9 Save and exit
Your choice ? 0

```

- Select an option on the menu by entering the number of the option in the **Your choice ?** field and pressing **Enter**.
- To enter a value for a parameter, type the value and press **Enter**, or to confirm a current value, just press **Enter**.
- When you are finished, save the new configuration (option 9). The unit reboots.

Serial Port Connection

To configure the unit through a serial connection:

- Connect a console terminal or PC running a terminal emulation program to your unit's serial port. The default serial port settings are **9600 baud, 8 bits, no parity, 1-stop bit, no flow control**.

Note: The SDS always uses the above serial settings at bootup.

- Reset the SDS unit by cycling the unit's power (turning the power off and back on). Immediately upon resetting the device, enter three lowercase **x** characters (**xxx**).

Note: The easiest way to enter Setup Mode is to hold down the **x** key at the terminal (or emulation) while resetting the unit. **You must do this within three seconds of resetting the SDS.**

At this point, the screen display is the same as when you use a Telnet connection. To continue, go to step 3 in [Telnet Connection](#), above.

Exiting Setup Mode

To exit setup mode, use one of the following two options:

- ◆ To save all changes and reboot the device, select option **9 Save and exit** from the Change Setup menu. All values are stored in nonvolatile memory.
- ◆ To exit the configuration mode without saving any changes or rebooting, select option **8 Exit without save** from the Change Setup menu.

6: Setup Mode: Server Configuration

This chapter explains how to configure the network settings.

Note: Current values display in parentheses.

Server Configuration (Option 0)

The unit's basic network parameters display when you select **Server configuration** (option 0). The **IP Address**, **Set Gateway IP Address**, and **Netmask** fields display the current values.

Figure 6-1. Network Settings

```
IP Address : (172) . (019) . (203) . (005)
Set Gateway IP Address (Y) ?
Gateway IP addr (172) . (019) . (000) . (001)
Netmask: Number of Bits for Host Part (0=default) (0)
Set DNS Server IP addr (N) ?
Change Telnet/Web Manager password (N) ?
```

IP Address

If DHCP is not used to assign IP addresses, enter the IP address manually. The IP address must be set to a unique value in the network. Enter each octet and press **Enter** between each section. The current value displays in parentheses.

```
IP Address : (000) (000) (000) (000) _
```

If DHCP is used, the third octet of the IP address sets the BootP/DHCP/AutoIP options. The following table shows the bits you can manually configure to force the SDS to disable AutoIP, DHCP, or BootP. To disable an option, set the appropriate bit.

Table 6-1. BootP/DHCP/AutoIP options

| Options | Bit | Value |
|---------|-----|-------|
| AutoIP | 0 | 1 |
| DHCP | 1 | 2 |
| BootP | 2 | 4 |

For example, if the third octet is 0.0.5.0, the AutoIP and BootP options are disabled; only DHCP is enabled. (The value 5 results from adding the binary equivalents of 0 and 2.) This is the most common setting when using DHCP.

Set Gateway IP Address

The gateway address, or router, allows communication to other LAN segments. The gateway address should be the IP address of the router connected to the same LAN segment as the unit. The gateway address must be within the local network. The default setting is **N** (No), meaning the gateway address has not been set. To set the gateway address, type **Y** and enter the address.

```
Set Gateway IP Address (Y) ?
Gateway IP addr (000) (000) (000) (000) _
```

Netmask: Number of Bits for Host Part

A netmask defines the number of bits taken from the IP address that are assigned for the host part.

```
Netmask: Number of Bits for Host Part (0=default) (0) _
```

Note: Class A: 24 bits; Class B: 16 bits; Class C: 8 bits

The unit prompts for the number of host bits to be entered, then calculates the netmask, which appears in standard decimal-dot notation (for example, 255.255.255.0) when the saved parameters display. The default setting is **0**.

Table 6-2. Standard IP Network Netmasks

| Network Class | Host Bits | Netmask |
|---------------|-----------|---------------|
| A | 24 | 255.0.0.0 |
| B | 16 | 255.255.0.0 |
| C | 8 | 255.255.255.0 |

Set DNS Server IP Address

The DNS server allows the name of a remote machine to be resolved automatically. The default is **N** (No), indicating the DNS server address has not been set. To set the DNS server address, type **Y**. At the prompt, enter the DNS server address. If the device is DHCP enabled, the DHCP server provides the DNS server IP address, which will override this configured value.

Note: This setting is applicable only in Manual Connection mode.

```
Set DNS Server IP addr (N) ? _
```

Change Telnet/Web Configuration Password

Setting the Telnet configuration password prevents unauthorized access to the setup menu through a Telnet connection to port 9999 or through web pages. Please protect your device from unauthorized access and follow the instructions below:

- ◆ Always select Y to enable Telnet/Web Manager password
- ◆ Select Y to enable Telnet Authentication. This will require authentication for Telnet access.
- ◆ Enable the enhanced password setting and create a strong 16-character password. For details, see [Security Settings \(Option 6\)](#) on page 62.

Note: We do not recommend that you only use the 4-character basic password as it does not offer sufficient security. Using no password is very dangerous.

Figure 6-2. Change Telnet Configuration Password

```
Change telnet config password (N) ? _
```

DHCP Name

If a DHCP server has automatically assigned the IP address and network settings, you can discover the unit by using the DeviceInstaller network search feature or Monitor Mode (see [10: Monitor Mode](#)).

Note: When you enter Monitor Mode from the serial port with network connection enabled and issue the **NC** (Network Communication) command, you see the unit's IP configuration.

There are three methods for assigning DHCP names to the unit.

- ◆ **Default DHCP Name:** If you do not change the DHCP name, and you are using an IP of 0.0.0.0, then the DHCP name defaults to XX.XX.XX.XX (XXXXXX is the last 6 digits of the MAC address shown on the label on the bottom/side of the unit). For example, if the MAC address is 00-20-4A-12-34-56, then the default DHCP name is C123456.
- ◆ **Custom DHCP Name:** You can create your own DHCP name. If you are using an IP address of 0.0.0.0, then the last option in Server configuration is **Change DHCP device name**. This option allows you to change the DHCP name to an alphanumeric name (LTX in our example).

```
Change DHCP device name (not set) ? (N) Y
Enter new DHCP device name : LTX
```

- ◆ **Numeric DHCP Name:** You can change the DHCP name by specifying the last octet of the IP address. When you use this method, the DHCP name is LTXYY where YY is what you chose for the last octet of the IP address. If the IP address you specify is 0.0.0.12, then the DHCP name is LTX12. This method only works with 2 digit numbers (01-99).

7: Setup Mode: Channel Configuration

This chapter explains how to configure the serial port.

Notes:

- ◆ Current values display in parenthesis.
- ◆ You must enter some values in hexadecimal notation. (See **Error! Reference source not found. Error! Reference source not found..**)

Channel 1 (Option 1) & Channel 2 (Option 2)

Select **Channel 1** (option 1) or **Channel 2** (option 2 on only SDS2101) from the Change Setup menu to define how the serial port responds to network and serial communications. The following sections describe the configurable parameters within the **Channel** configuration menu.

Figure 7-1. Serial Port Settings

```
Baudrate (9600) ?
I/F Mode (4C) ?
Flow (00) ?
Port No (10001) ?
ConnectMode (C0) ?
Send '+++ ' in Modem Mode (Y) ?
Show IP addr after 'RING' (Y) ?
Auto increment source port (N) ?
Remote IP Address : (000) . (000) . (000) . (000)
Remote Port (0) ?
DisConnMode (00) ?
FlushMode (00) ?
DisConnTime (00:00) ?:
SendChar 1 (00) ?
SendChar 2 (00) ?
```

Baudrate

The unit and attached serial device, such as a modem, must agree on a speed or baud rate to use for the serial connection. Valid baud rates are 300, 600, 1200, 2400, 4800, 9600 (default), 19200, 38400, 57600, 115200, and 230400 baud. The SDS2101 also supports 460800 and 921600 baud.

```
Baudrate (9600) ? _
```

I/F (Interface) Mode

The Interface (I/F) Mode is a bit-coded byte entered in hexadecimal notation. The default setting is **4C**.

I/F Mode (4C) ? _

The following table displays available I/F Mode options:

Note: All bit positions in the table that are blank represent “don’t care” bits for that particular option, which can be set to either a 0 or 1 value.

Table 7-1. Interface Mode Options

| I/F Mode Option | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|----------------------------|---|---|---|---|---|---|---|---|
| RS-232C ⁽¹⁾ | | | | | | | 0 | 0 |
| RS-422/485 4-wire | | | | | | | 0 | 1 |
| RS-485 2-wire | | | | | | | 1 | 1 |
| 7 Bit | | | | | 1 | 0 | | |
| 8 Bit | | | | | 1 | 1 | | |
| No Parity | | | 0 | 0 | | | | |
| Even Parity | | | 1 | 1 | | | | |
| Odd Parity | | | 0 | 1 | | | | |
| 1 stop bit | 0 | 1 | | | | | | |
| 2 stop bits ⁽¹⁾ | 1 | 1 | | | | | | |

⁽¹⁾ 2 stop bits are implemented by the software. This might influence performance.

The following table demonstrates how to build some common Interface Mode settings:

Table 7-2. Common Interface Mode Settings

| Common I/F Mode Setting | Binary | Hex |
|---|-----------|-----|
| RS-232C, 8-bit, No Parity, 1 stop bit | 0100 1100 | 4C |
| RS-232C, 7-bit, Even Parity, 1 stop bit | 0111 1000 | 78 |
| RS-485 2-wire, 8-bit, No Parity, 1 stop bit | 0100 1111 | 4F |
| RS-422, 8-bit, Odd Parity, 1 stop bit | 0101 1101 | 5D |

Flow

Flow control sets the local handshaking method for stopping serial input/output. The default setting is **00**.

Flow (00) ? _

Use the following table to select flow control options:

Table 7-3. Flow Control Options

| Flow Control Option | Hex |
|---------------------------------------|-----|
| No flow control | 00 |
| XON/XOFF flow control | 01 |
| Hardware handshake with RTS/CTS lines | 02 |
| XON/XOFF pass characters to host | 05 |

Port Number

The setting represents the source port number in TCP connections. It is the number that identifies the channel for remote initiating connections.

```
Port No (10001) ? _
```

The default setting for Port 1 is **10001**, and for Port 2 is **10002** (SDS2101 only). The range is **1-65535**, except for the following reserved port numbers:

Table 7-4. Reserved Port Numbers

| Port Numbers | Reserved for |
|--------------|-----------------------------|
| 1 – 1024 | Reserved (well known ports) |
| 9999 | Telnet setup |
| 14000-14009 | Reserved for Redirector |
| 30704 | Reserved (77F0h) |
| 30718 | Reserved (77FEh) |

Warning: We recommend that you not use the reserved port numbers for this setting as incorrect operation may result.

Use Port **0** for the outgoing local port to change with each connection. The port range is **50,000-59,999**. Each subsequent connection increments the number by 1 (it wraps back around to 50,000).

Only use this automatic port increment feature to initiate a connection using TCP. Set the port to a non-zero value when the unit is in a passive mode or when using UDP instead of TCP.

Connect Mode

Connect Mode defines how the unit makes a connection, and how it reacts to incoming connections over the network.

```
ConnectMode (C0) ? _
```

Enter Connect Mode options in hexadecimal notation. The default setting is **C0**.

Note: All bit positions in the table that are blank represent “don’t care” bits for that particular option, which can be set to either a 0 or 1 value.

Table 7-5. Connect Mode Options

| Connect Mode Option | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|---|---|---|---|---|---|---|---|---|
| a) Incoming Connection | | | | | | | | |
| Never accept incoming | 0 | 0 | 0 | | | | | |
| Accept with active Modem Control In | 0 | 1 | 0 | | | | | |
| Always Accept | 1 | 1 | 0 | | | | | |
| b) Response | | | | | | | | |
| Nothing (quiet) | | | | 0 | | | | |
| Character response (C=connect, D=disconnect, N=unreachable) | | | | 1 | | | | |
| c) Active Startup | | | | | | | | |
| No active startup | | | | | 0 | 0 | 0 | 0 |
| With any character | | | | | 0 | 0 | 0 | 1 |
| With active Modem Control In | | | | | 0 | 0 | 1 | 0 |
| With a specific start character | | | | | 0 | 0 | 1 | 1 |
| Manual connection | | | | | 0 | 1 | 0 | 0 |
| Autostart | | | | | 0 | 1 | 0 | 1 |
| Hostlist | 0 | 0 | 1 | 0 | | | | |
| d) Datagram Type | | | | | | | | |
| Directed UDP | | | | | 1 | 1 | 0 | 0 |
| e) Modem Mode | | | | | | | | |
| No Echo | | | 0 | 0 | | 1 | 1 | |
| Data Echo & Modem Response (Numeric) | | | 0 | 1 | | 1 | 1 | 1 |
| Data Echo & Modem Response (Verbose) | | | 0 | 1 | | 1 | 1 | 0 |
| Modem Response Only (Numeric) | | | 0 | 0 | 1 | 1 | 1 | 1 |
| Modem Response Only (Verbose) | | | 0 | 0 | 1 | 1 | 1 | 0 |

a) Incoming Connection

| | |
|-----------------------|---|
| Never Accept Incoming | Rejects all external connection attempts. |
|-----------------------|---|

| | |
|-------------------------------------|---|
| Accept with active Modem Control In | Accepts external connection requests only when the DTR input is asserted. Cannot be used with Modem Mode. |
| Always Accept | Accepts any incoming connection when a connection is not already established. Default setting. |

b) Response

| | |
|--------------------|--|
| Character Response | <p>A single character is transmitted to the serial port when there is a change in connection state:</p> <p>C = connected, D = disconnected, N = host unreachable.</p> <p>The IP address of the host connecting to the CoBos device will be provided when you use verbose mode.</p> <p>This option is overridden when the Active Start Modem Mode or Active Start Host List is in effect. Default setting is Nothing (quiet).</p> |
|--------------------|--|

c) Active Startup

| | |
|---------------------------------|--|
| No Active Startup | Does <i>not</i> attempt to initiate a connection under any circumstance. Default setting. |
| With Any Character | Attempts to connect when any character is received from the serial port. |
| With active Modem Control In | Attempts to connect when the active Modem Control In input changes from not asserted to asserted. |
| With a Specific Start Character | Attempts to connect when it receives a specific start character from the serial port. The default start character is carriage return. |
| Manual Connection | <p>Attempts to connect when directed by a command string received from the serial port. The first character of the command string must be a C (ASCII 0x43), and the last character must be either a carriage return (ASCII 0x0D) or a line feed (0x0A). No blanks or space characters may be in the command string. Between the first and last command string characters must be a full or partial destination IP address and may be a destination port number.</p> <p>The IP address must be in standard decimal-dot notation and may be a partial address, representing the least significant 1, 2, or 3 bytes of the remote IP address. The period is required between each pair of IP address numbers.</p> <p>If present, the port number must follow the IP address, must be presented as a decimal number in the range 1-65535, and must be preceded by a forward slash (ASCII 0x2F). The slash separates the IP address and the port number. If you omit the port number from a command string, the internally stored remote port number starts a connection.</p> <p>If a partial IP address is presented in a command string, it is interpreted to be the least significant bytes of the IP address and uses the internally stored remote IP address to provide the most significant bytes of the IP address. If the IP address entered is 0.0.0.0/0, the device server enters Monitor Mode.</p> <p>For example, if the remote IP address already configured in the unit is 129.1.2.3, then an example command string would be C3/7. (This would connect to 129.1.2.3 and port 7.) You may also use a different ending for the connection string. For example, C50.1/23 would connect you to 129.1.50.1 and port 23.</p> |

| | |
|--|---|
| | If an IP address does not follow the first command string character (which is "C"), the subsequent character string is interpreted as the host name and domain to be used in DNS lookup. This character string can include a destination port number as well. The port number can be preceded by either a forward slash (/) or a colon (:). |
|--|---|

Table 7-6. Manual Connection Address Example

| Command String | Result if remote IP is 129.1.2.3 and remote port is 1234 |
|----------------------------------|--|
| C121.2.4.5/1 | Complete override; connection is started with host 121.2.4.5, port 1. |
| C5 | Connects to 129.1.2.5, port 1234. |
| C28.10/12 | Connects to 129.1.28.10, port 12. |
| C0.0.0.0/0 | Enters Monitor Mode. |
| Cwww.lantronix.com/80 | Tries to connect to the Lantronix web server if the <hostname:domain> (www.lantronix.com) is configured in the DNS server database. |
| Autostart (Automatic Connection) | If you enable Autostart, the unit automatically connects to the remote IP address and remote port specified when the firmware starts. |
| Hostlist | <p>If you enable this option, the device server scrolls through the hostlist until it connects to a device listed in the hostlist table. Once it connects, the unit stops trying to connect to any others. If this connection fails, the unit continues to scroll through the table until it is able to connect to another IP in the hostlist.</p> <p>Hostlist supports a minimum of 1 and a maximum of 12 entries. Each entry contains the IP address and the port number.</p> <p>The hostlist is disabled for Manual and Modem Modes. The unit does not accept a data connection from a remote device when the hostlist option is enabled.</p> |

Figure 7-2. Hostlist Option

```

Baudrate (9600) ?
I/F Mode (4C) ?
Flow (00) ?
Port No (10001) ?
ConnectMode (25) ?
Send '+++ ' in Modem Mode (Y) ?
Auto increment source port (N) ?

Hostlist :
01. IP : 172.019.000.001 Port : 00023
02. IP : 172.019.000.002 Port : 03001
03. IP : 172.019.000.003 Port : 10001

Change Hostlist ? (N) ? Y
01. IP address : (172) .(019) .(000) .(001) Port : (23) ?
02. IP address : (172) .(019) .(000) .(002) Port : (3001) ?
03. IP address : (172) .(019) .(000) .(003) Port : (10001) ?
04. IP address : (000) .(000) .(000) .(000)

Hostlist :
01. IP : 172.019.000.001 Port : 00023
02. IP : 172.019.000.002 Port : 03001
03. IP : 172.019.000.003 Port : 10001

Change Hostlist ? (N) ? N
Hostlist Retrycounter (3) ?
Hostlist Retrytimeout (250) ?
DisConnMode (00) ?
FlushMode (00) ?
DisConnTime (00:00) ? :
SendChar 1 (00) ?
SendChar 2 (00) ? _

```

To enable the hostlist:

1. Enter a **Connect Mode** of 0x20 (**2X**), where X is any digit. The menu shows you a list of current entries already defined in the product.
2. To delete, modify, or add an entry, select **Yes**. If you enter an IP address of **0.0.0.0**, that entry and all others after it are deleted.
3. After completing the hostlist, repeat the previous step if necessary to edit the hostlist again.
4. For **Retrycounter**, enter the number of times the Lantronix unit should try to make a good network connection to a hostlist entry that it has successfully ARPed. The range is **1-15**, with the default set to **3**.
5. For **Retrytimeout**, enter the number of seconds the unit should wait before failing an attempted connection. The time is stored as units of milliseconds in the range of **10-65535**. The default setting is **250**.

d) Datagram Type

| | |
|--------------|--|
| Directed UDP | <p>When selecting this option, the prompt requests the Datagram type. Enter 01 for directed or broadcast UDP. Datagrams of type 01 can be sent as a broadcast by enabling the Send as Broadcast option. The default is not to broadcast.</p> <p>Note: Datagrams are sent as subnet-directed broadcasts.</p> <p>When the UDP option is in effect, the unit never attempts to initiate a TCP connection because it uses UDP datagrams to send and receive data.</p> |
|--------------|--|

e) Modem Mode

In Modem (Emulation) Mode, the unit presents a modem interface to the attached serial device. It accepts AT-style modem commands and handles the modem signals correctly.

Normally, there is a modem connected to a local PC and a modem connected to a remote machine. A user must dial from the local PC to the remote machine, accumulating phone charges for each connection. Modem Mode allows you to replace modems with SDSs, and to use an Ethernet connection instead of a phone call. By not having to change communications applications, you avoid potentially expensive phone calls.

To select Modem Mode, set the Connect Mode to **C6** (no echo), **D6** (echo with full verbose), **D7** (echo with numeric response), **CF** (modem responses only, numeric response), or **CE** (modem responses only, full verbose).

Note: *If the unit is in Modem Mode, and the serial port is idle, the unit can still accept network TCP connections to the serial port if Connect Mode is set to **C6** (no echo), **D6** (echo with full verbose), **D7** (echo with numeric response), **CF** (modem responses only, numeric response), or **CE** (modem responses only, full verbose).*

| | |
|----------------------------|---|
| Without Echo | In Modem Mode, echo refers to the echo of all of the characters entered in command mode; it does <i>not</i> mean to echo data that is transferred. Quiet Mode (without echo) refers to the modem <i>not</i> sending an answer to the commands received (or displaying what was typed). |
| Data Echo & Modem Response | <ul style="list-style-type: none"> ◆ Full Verbose: The unit echoes modem commands and responds to a command with a message string shown in the table below. ◆ Numeric Response: The unit echoes modem commands and responds to a command with a numeric response. |
| Modem Responses Only | <ul style="list-style-type: none"> ◆ Full Verbose: The unit does not echo modem commands and responds to a command with a message string shown in the table below. ◆ Numeric Response: The unit does not echo modem commands and responds to a command with a numeric response. |

Table 7-7. Modem Mode Messages

| Message | Meaning |
|------------------|---|
| Full Verbose | |
| OK | Command was executed without error. |
| CONNECT | A network connection has been established. |
| NO CARRIER | A network connection has been closed. |
| RING n.n.n.n. | A remote device, having IP address n.n.n.n, is connecting to this device. |
| Numeric Response | |
| 0 | OK |
| 1 | Connected |
| 2 | Ring |
| 3 | No Carrier |
| 4 | Error |

Received commands must begin with the two-character sequence **AT** and be terminated with a carriage return character.

The unit ignores any character sequence received *not* starting with **AT**, and only recognizes and processes single **AT**-style commands. The unit treats compound **AT** commands as unrecognized commands.

If the **Full Verbose** option is in effect, the unit responds to an unrecognized command string that is otherwise formatted correctly (begins with **AT** and ends with carriage return) with the "OK" message and takes no further action.

If the **Numeric Response** option is in effect, the unit responds to an unrecognized command string that is otherwise formatted correctly with a "0" message and takes no further action.

When an active connection is in effect, the unit transfers data and does not process commands received from the serial interface.

When a connection is terminated or lost, the unit reverts to command mode.

When an active connection is in effect, the unit terminates the connection if it receives the following sequence from the attached serial device:

- ◆ No serial data is received for one second.
- ◆ The character sequence +++ is received, with no more than one second between each two characters.
- ◆ No serial data is received for one second after the last + character. At this time, the unit responds affirmatively per the selected echo/response mode.
- ◆ The character string **ATH** is received, terminated with a carriage return. The unit responds affirmatively according to the selected echo/response mode and drops the network connection. The serial interface reverts to accepting command strings.

If this sequence is not followed, the unit remains in data transfer mode.

Table 7-8. Modem Mode Commands

| Modem Mode Command | Function |
|---|--|
| ATDTx.x.x.x,pppp or ATDTx.x.x.x/pppp or ATDTx.x.x.x:pppp | Makes a connection to an IP address (x.x.x.x) and a remote port number (pppp). |
| ATDTx.x.x.x | Makes a connection to an IP address (x.x.x.x) and the remote port number defined within the unit. |
| ATD0.0.0.0 | Forces the unit into Monitor Mode if a remote IP address and port number are defined within the unit. |
| ATD or ATDT | Forces the unit into Monitor Mode if a remote IP address and port number are not defined within the unit. |
| ATDx.x.x.x | Makes a connection to an IP address (x.x.x.x) and the remote port number defined within the unit. |
| ATH | Hangs up the connection (Entered as +++ATH). |
| ATS0=n | Enables or disables connections from the network going to the serial port. n=0 disables the ability to make a connection from the network to the serial port. n=1-9 enables the ability to make a connection from the network to the serial port. n>1-9 is invalid. |
| ATEn | Enables or disables character echo and responses. n=0 disables character echo and responses. n=1 enables character echo and responses. |

| Modem Mode Command | Function |
|--------------------|---|
| ATVn | Enables numeric response or full verbose. n=0 enables numeric response. n=1 enables full verbose. |

Note: The unit recognizes these AT commands as single commands such as ATE0 or ATV1; it does not recognize compound commands such as ATE0V.

Send the Escape Sequence (+++) in Modem Mode

```
Send '+++' in Modem Mode (Y) ? _
```

Disable or enable the SDS's ability to send the escape sequence. The default setting is Y (Yes) (send the escape sequence).

Show IP addr after 'RING'

```
Show IP addr after 'RING' <Y> ?
```

Disable or enable the SDS's ability to show the IP address after RING in Modem Mode. The default is Y (Yes), to show the IP address.

Auto Increment Source Port

```
Auto increment source port (N) ? _
```

Y (Yes) auto increment the source port. The SDS increments the port number used with each new connection.

Remote IP Address

This is the destination IP address used with an outgoing connection.

```
Remote IP Address : (000) (000) (000) (000) _
```

Note: This option does not display when Hostlist is enabled from the **ConnectMode** prompt (see [Connect Mode](#) for more information).

Remote Port

You must set the remote TCP port number for the unit to make outgoing connections. This parameter defines the port number on the target host to which a connection is attempted.

```
Remote Port (0) ? _
```

To connect an ASCII terminal to a host using the unit for login purposes, use the remote port number 23 (Internet standard port number for Telnet services).

Note: This option does not display when Hostlist is enabled from the ConnectMode prompt (see [Connect Mode](#) for more information).

DisConnMode

This setting determines the conditions under which the unit will cause a network connection to terminate. The default setting is **00**.

```
DisConnMode (00) ? _
```

Notes:

- ◆ In DisConnMode (Disconnect Mode), Modem Control In drop either drops the connection or is ignored.
- ◆ All bit positions in the table that are blank represent “don’t care” bits for that particular option, which can be set to either a 0 or 1 value.

Table 7-9. Disconnect Mode Options

| Disconnect Mode Option | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|---|---|---|---|---|---|---|---|---|
| Disconnect when Modem Control In is not asserted ⁽⁶⁾ | 1 | | | | | | | |
| Ignore Modem Control In | 0 | | | | | | | |
| Telnet Com Port Cntrl and terminal type setup ⁽¹⁾ | | 1 | | | | | | |
| Channel (port) password ⁽²⁾ | | | | 1 | | | | |
| Hard disconnect ⁽³⁾ | | | | | 0 | | | |
| Disable hard disconnect | | | | | 1 | | | |
| State LED off with connection ⁽⁴⁾ | | | | | | | | 1 |
| Disconnect with EOT (^D) ⁽⁵⁾ | | | 1 | | | | | |

- (1) The Telnet Com Port Control feature is used in conjunction with Com Port Redirector. The SDS sends the "Terminal Type" upon an outgoing connection.
- (2) A password is required for a connection to the serial port from the network.
- (3) The TCP connection closes even if the remote site does not acknowledge the disconnection.
- (4) When there is a network connection to or from the serial port, the state LED turns off instead of blinking.
- (5) When **Ctrl+D** or **Hex 04** is detected, the connection is dropped. Both **Telnet Com Port Cntrl** and **Disconnect with EOT** must be enabled for **Disconnect with EOT** to function properly. **Ctrl+D** is only detected going from the serial port to the network.
- (6) When **Modem Control In** transitions from a high state to a low state, the network connection to or from the serial port drops.

Flush Mode (Buffer Flushing)

Using this parameter, you can control line handling and network buffers with connection startup and disconnect. The default setting is **00**.

```
FlushMode (00) ? _
```

You can also select between two different packing algorithms.

Note: All bit positions in the table that are blank represent “don’t care” bits for that particular option, which can be set to either a 0 or 1 value.

Table 7-10. Flush Mode Options

| Function | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|---|---|---|---|---|---|---|---|---|
| Input Buffer (Serial to Network) | | | | | | | | |
| Clear with a connection initiated from the device to the network | | | | 1 | | | | |
| Clear with a connection initiated from the network to the device | | | 1 | | | | | |
| Clear when the network connection to or from the device is disconnected | | 1 | | | | | | |
| Output Buffer (Network to Serial) | | | | | | | | |
| Clear with a connection initiated from the device to the network | | | | | | | | 1 |
| Clear with a connection initiated from the network to the device | | | | | | | 1 | |
| Clear when the network connection to or from the device is disconnected | | | | | | 1 | | |
| Alternate Packing Algorithm (Pack Control) | | | | | | | | |
| Enable | 1 | | | | | | | |

Pack Control

The packing algorithms define how and when packets are sent to the network. The standard algorithm is optimized for applications in which the unit is used in a local environment, allowing for very small delays for single characters, while keeping the packet count low. The alternate packing algorithm minimizes the packet count on the network and is especially useful in applications in a routed Wide Area Network (WAN). Adjusting parameters in this mode can economize the network data stream.

Pack control settings are enabled in Flush Mode. Set this value to **00** if you do not need specific functions.

Note: All bit positions in the table that are blank represent “don’t care” bits for that particular option, which can be set to either a 0 or 1 value.

Table 7-11. Pack Control Options

| Option | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------------------|---|---|---|---|---|---|---|---|
| Packing Interval | | | | | | | | |
| Interval: 12 ms | | | | | | | 0 | 0 |

| Option | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|-----------------------------------|---|---|---|---|---|---|---|---|
| Interval: 52 ms | | | | | | | 0 | 1 |
| Interval: 250 ms | | | | | | | 1 | 0 |
| Interval: 5 sec | | | | | | | 1 | 1 |
| Trailing Characters | | | | | | | | |
| None | | | | | 0 | 0 | | |
| One | | | | | 0 | 1 | | |
| Two | | | | | 1 | 0 | | |
| Send Characters | | | | | | | | |
| 2-Byte Send Character Sequence | | | | 1 | | | | |
| Send Immediately After Send chars | | | 1 | | | | | |

Packing Interval

Packing Interval defines how long the unit should wait before sending accumulated characters. This wait period is between successive network segments containing data. For alternate packing, the default interval is **12 ms**.

Trailing Characters

In some applications, CRC, Checksum, or other trailing characters follow the end-of-sequence character; this option helps to adapt frame transmission to the frame boundary. The default setting is **00** (none).

Send Characters

- ◆ If **2-Byte Send Character Sequence** is enabled, the unit interprets the sendchars as a 2-byte sequence; if this option is not enabled, the unit interprets them independently. The default setting is **0** (disabled).
- ◆ If **Send Immediately After Characters** is *not* set, any characters already in the serial buffer are included in the transmission after a "transmit" condition is found. If this option is set, the unit sends immediately after recognizing the transmit condition (sendchar or timeout). The default setting is **0**.

Note: A transmission might occur if status information needs to be exchanged or an acknowledgment needs to be sent.

DisConnTime (Inactivity Timeout)

Use this parameter to set an inactivity timeout. The unit drops the connection if there is no activity on the serial line before the set time expires. Enter time in the format mm:ss, where m is the number of minutes and s is the number of seconds.

DisConnTime (00:00) ?:

To disable the inactivity timeout, enter **00:00**. Range is 0 (disabled) to 5999 seconds (99 minutes, 59 seconds). Default setting is **0**.

Send Characters

Enter up to two characters in hexadecimal representation in sendchar.

```
SendChar 1 (00) ? _
SendChar 2 (00) ? _
```

If the unit receives a character on the serial line that matches one of these characters, it sends the character immediately, along with any awaiting characters, to the TCP connection. This action minimizes the response time for specific protocol characters on the serial line (for example, ETX, EOT). Setting the first sendchar to **00** disables the recognition of the characters. Alternatively, the unit can interpret two characters as a sequence (see [Pack Control](#)). The default setting is **00**.

Telnet Terminal Type

This parameter displays only if you enabled the terminal type option in Disconnect Mode. With this option enabled, you can use the terminal name for the Telnet terminal type. Enter only one name.

With terminal type option enabled, the unit also reacts to the EOR (end of record) and binary options, useful for applications like terminal emulation to IBM hosts.

Channel (Port) Password

This parameter appears only if the channel (port) password option is enabled in Disconnect Mode. With this option enabled, you can set a password on the serial port. The default setting is all **0s**.

8: Setup Mode: Advanced Settings

Expert Settings (Option 5)

Note: You can change these settings using Telnet or serial connections, not on the Web Manager.

Caution: Changing the expert settings can drastically affect the performance and access to the product. These settings should only be changed by an experienced network administrator.

Select **5** to configure expert settings.

Note: The CPU performance setting is only available for the SDS2101 model.

Figure 8-1. Expert Settings

```
TCP Keepalive time in s (1s - 65s; 0s=disable): (45) ?
ARP Cache timeout in s (0s - 600s) : (600) ?
CPU performance (0=Regular, 1=Low, 2=High): (0)
Disable Monitor Mode @ bootup (N) ?
HTTP Port Number : (80) ?
MTU Size (512 - 1400): (1400) ?
TCP Re-transmission Timeout (500 - 4000) (ms): (500) ?
Enable alternate MAC (N) ?
Ethernet connection type: (0) ?
```

This option allows you to change how many seconds the unit waits during a silent connection before attempting to see if the currently connected network device is still on the network. If the unit gets no response, it drops that connection. The default setting is **45**.

```
TCP Keepalive time in s (1s - 65s; 0s=disable): (45)? _
```

ARP Cache timeout in seconds

Whenever the unit communicates with another device on the network, it adds an entry into its ARP table. The ARP Cache timeout option allows you to define how many seconds (1-600) the unit will wait before timing out this table. The default setting is **600**.

```
ARP Cache timeout in s (1s - 600s): (600)? _
```

CPU Performance (SDS2101 only)

Select the SDS2101's performance mode. Higher performance settings require more energy. **Low** is 26 Mhz; **Regular** is 48 Mhz; **High** is 88 Mhz. The default is **Regular**.

```
CPU performance (0=Regular, 1=Low, 2=High): (0)
```

Disable Monitor Mode at Bootup

This option allows you to disable all entries into Monitor Mode during startup, except for the 'xxx' sequence. This prevents entry using **yyy**, **zzz**, **xx1**, and **yy1** key sequences (only during the bootup sequence). The default for Disable Monitor Mode at bootup is **N** (No). (See [10: Monitor Mode](#).)

```
Monitor Mode @ bootup : enabled
```

HTTP Port Number

This option allows the configuration of the web server port number. The valid range is **1-65535**. The default HTTP port number is **80**.

```
HTTP Port Number : (80) ? _
```

MTU Size

The Maximum Transmission Unit (MTU) is the largest physical packet size a network can transmit for TCP and UDP. Enter between **512** and **1400** bytes. The default setting is **1400** bytes.

```
MTU Size: (1400) ? _
```

TCP Re-Transmission Timeout

This feature allows the configuration of the desired TCP re-transmission timeout value. If the ACK is not received for a packet sent from the SDS device, then the unit will retransmit the data. The valid range is 500-4000 msec.

```
TCP Re-transmission Timeout <500 - 4000> <ms>: <500> ?
```

Enable Alternate MAC

If necessary, enable the alternate MAC address (if specified in the OEM setup record). The default setting is **N** (No).

```
Enable alternate MAC (N) ? _
```

Ethernet Connection Type

The SDS allows for the Ethernet speed and duplex to be manually configured. Enter **0** for auto-negotiation (default). To select the speed and duplex, enter one of the following: **2** (10Mbit/half duplex), **3** (10Mbit/full duplex), **4** (100Mbit/half duplex), or **5** (100Mbit/full duplex).

```
Ethernet connection type: (0) ? _
```

Security Settings (Option 6)

You can change security settings by means of Telnet or serial connections only, not on the Web Manager. We recommend that you set security over the dedicated network or over the serial setup to prevent eavesdropping.

Caution: *Disabling both Telnet Setup and Port 77FE will prevent users from accessing the setup menu from the network. Disabling Port 77FE also disables the Web from configuring the device.*

Select **6** to configure security settings.

Figure 8-2. Security Settings

```

Disable SNMP <N> ?
SNMP Community Name <public>:
Disable Telnet Setup <N> ?
Disable TFTP Firmware Update <N> ?
Disable Port 77FEh <N> ?
77FEh Access Mode <0=Read & Write, 1=Read Only>: <0> ?
Disable Web Server <N> ?
Disable Web Setup <N> ?
Disable ECHO ports <Y> ?
Enable Encryption <N> ?
Enable Enhanced Password <Y> ?
Change the Password <N> ?
Enable Telnet Authentication <N> ? █

```

Disable SNMP

This setting allows you to disable the SNMP protocol on the unit for security reasons. The default setting is **N** (No).

```
Disable SNMP (N) ?
```

SNMP Community Name

The SNMP Community Name is a required field for NMS to read or write to a device. Enter a string of **1** to **13** characters. The default setting is **public**.

```
SNMP Community Name (public):
```

The default entry is **public**. The current value is displayed in parentheses.

Disable Telnet Setup

Note: *If you choose to disable this option, keep in mind that disabling both Telnet Setup and Port 77FE will prevent users from accessing the setup menu from the network.*

This setting defaults to the **N** (No) option. The **Y** (Yes) option disables access to Setup Mode by Telnet (port 9999). It only allows access locally using the web pages and the serial port of the unit.

```
Disable Telnet Setup (N) ?
```

Disable TFTP Firmware Update

This setting defaults to the **N** (No) option. The **Y** (Yes) option disables the use of TFTP to perform network firmware upgrades. With this option, you can download firmware upgrades over the serial port using DeviceInstaller's Recover Firmware procedure. (See [9: Firmware Upgrades](#).)

```
Disable TFTP Firmware Update (N) :
```

Disable Port 77FE (Hex)

Note: If you choose to disable this option, keep in mind that disabling both Telnet Setup and Port 77FE will prevent users from accessing the setup menu from the network.

Port 77FE is a setting that allows DeviceInstaller, Web Manager, and custom programs to configure the unit remotely. You may wish to disable this capability for security purposes.

```
Disable Port 77FEh (N) ?
```

The default setting is the **N** (No) option, which enables remote configuration. You can configure the unit by using DeviceInstaller, web pages, Telnet, or serial configuration.

The **Y** (Yes) option disables remote configuration and web sites.

77FEh Access Mode

Configuring this setting is available if port 77FE is enabled. This option will not be listed if port 77FE is disabled.

Set 0 for Read & Write mode, and 1 for Read Only mode. Default value of this setting is Read-Write(0).

If access mode is Read-only, then read operation can be done through port 77FE, if Read-Write access is selected, then both read and write of data can be done through port 77FE.

```
77FEh Access Mode (0=Read & Write, 1=Read Only): (0) ? _
```

Disable Web Server

This setting defaults to the **N** (No) option. The **Y** (Yes) option disables the web server.

```
Disable Web Server (N) ?
```

Disable Web Setup

The **Y** (Yes) option disables configuration using the Web Manager. This setting defaults to the **N** (No) option.

```
Disable Web Setup (N) ?
```

Enable Telnet Authentication

This settings controls whether authentication is required for Telnet access.

```
Enable Telnet Authentication (N) ?
```

Disable ECHO Ports

This setting controls whether port 7 echoes characters it receives. The default setting is **Y** (Yes), which disables ECHO ports.

```
Disable ECHO ports (Y) ?
```

Enable Encryption

Rijndael is the block cipher algorithm chosen by the National Institute of Science and Technology (NIST) as the Advanced Encryption Standard (AES) to be used by the US government. The SDS supports 128-, 192-, and 256-bit encryption key lengths.

NOTE: Configuring encryption should be done through a local connection to the serial port of the SDS, or via a secured network connection. Initial configuration information including the encryption key are sent in clear text over the network.

To configure AES encryption on the SDS:

Figure 8-3. Encryption Keys

```
Enable Encryption (N) &
Key l length in bits (0): 128
Change Keys (N) Y
Enter Keys: **_*_*_*_*_*_*_*_*_*_*_*_*_*_*_*_*_*_*_*_*_*_*_*_*_*_*_*_**
```

1. When prompted to enable encryption, press **Y**.
2. Enter the encryption key length when prompted. The SDS supports 128-, 192-, and 256-bit encryption key lengths.
3. When prompted to change keys, press **Y**.
4. At the **Enter Keys** prompts, enter your encryption key. The encryption keys are entered in hexadecimal. The hexadecimal values are echoed as asterisks to prevent onlookers from seeing the key. Hexadecimal values are 0-9 and A-F.
 - ◆ For a 128-bit key length, enter 32 hexadecimal characters.
 - ◆ For a 192-bit key length, enter 48 hexadecimal characters.

- ◆ For a 256-bit key length, enter 64 hexadecimal characters
- 5. Continue pressing **Enter** until you return to the Change Setup menu.
- 6. At the Change Setup menu, select option **9** to save and exit.

Encryption only applies to the port selected for data tunneling (default 10001), regardless of whether you are using TCP or UDP.

Generally, one of these situations applies:

- ◆ Encrypted SDS-to-SDS communication. Be sure to configure both SDS devices with the same encryption key.
- ◆ Third-party application to SDS-encrypted communication: SDS uses standard AES encryption protocols. To communicate successfully, products and applications on the peer side must use the same protocols and the same encryption key as the SDS. Developers can license the Lantronix Encryption Library suite.
- ◆ Lantronix Secure Com Port Redirector provides an encrypted connection from Windows-based applications to the SDS. A 30-day trial version of SCPR is included on the CD.

NOTE: For more information about the Lantronix Encryption Library Suite and SCPR see www.lantronix.com/device-networking/utilities-tools/.

Enable Enhanced Password

The Enhanced Password setting allows you to set a password of up to 16 characters for protecting Telnet and Web Page access. We recommend that you select the Y (Yes) option and enable the enhanced password setting.

Avoid using either the 4 character basic password setting or no password at all as they are not secure options.

```
Enable Enhanced Password (Y) ?
```

Default Settings (Option 7)

Select **7** to reset the unit's Channel 1 configuration and expert settings to the default settings. The server configuration settings for IP address, gateway IP address, and netmask remain unchanged. The specific settings that this option changes are listed below:

Channel 1 Configuration Defaults

| | |
|-------------|--|
| Baudrate | 9600 |
| I/F Mode | 4C (1 stop bit, no parity, 8 bit, RS-232C) |
| Flow (00) | 00 |
| Port Number | 10001 |

| | |
|--------------------------------------|--|
| Connect Mode | C0 (always accept incoming connection; no active connection startup) |
| Hostlist retry counter | 3 |
| Hostlist retry timeout | 250 (msec) |
| Start character for serial channel 1 | 0x0D (CR) |
| All other parameters | 0 |

Channel 2 Configuration Defaults (SDS2101 only)

| | |
|--------------------------------------|--|
| Baudrate | 9600 |
| I/F Mode | 4C (1 stop bit, no parity, 8 bit, RS-232C) |
| Own TCP port number | 10002 |
| Connect Mode | C0 (always accept incoming connection; no active connection startup) |
| Hostlist retry counter | 3 |
| Hostlist retry timeout | 250 (msec) |
| Start character for serial channel 2 | 0x0D (CR) |
| All other parameters | 0 |

Expert Settings Defaults

| | |
|--|------------------------------|
| TCP Keepalive time in s | 45 |
| ARP Cache timeout in s | 600 |
| Disable Monitor Mode @ bootup | No |
| HTTP Port Number (1-65535) | 80 |
| MTU Size (512 – 1400) | 1400 |
| TCP Re-transmission Timeout (500-4000) | 500 (ms) |
| Alternate MAC | Disabled (for OEM use only) |
| Ethernet Connection Type | 0 (auto-negotiate) |

Security Settings Defaults

| | |
|---------------------|--------|
| Disable SNMP | No |
| SNMP community name | public |

| | |
|------------------------------|-----|
| Disable Telnet setup | No |
| Disable TFTP Firmware Update | No |
| Disable Port 77FEh | No |
| Disable Web Server | No |
| Disable Web Setup | No |
| Disable ECHO ports | Yes |
| Enable Encryption | No |
| Enable Enhanced Password | Yes |
| Enable Telnet Authentication | No |

9: Firmware Upgrades

Obtaining Firmware

You can obtain the most up-to-date firmware and release notes for the unit from the Lantronix web site (www.lantronix.com/support/downloads) or by using anonymous FTP ([ftp.lantronix.com/pub](ftp://lantronix.com/pub)).

Reloading Firmware

There are several ways to update the unit's internal operational code (*.ROM): using DeviceInstaller (the preferred way), using TFTP, or using the serial port. You can also update the unit's internal Web interface (*.COB) using TFTP or DeviceInstaller.

Here are *typical* names for those files. Check the Lantronix web site for the latest versions and release notes.

Table 9-1. Firmware Files

| ROM File | COB |
|-------------------|-----------------------|
| SDS1101_61100.rom | SDS1101_webm_2007.cob |
| SDS2101_61100rom | SDS2101_webm_2007.cob |

Please refer to the DeviceInstaller online Help for information about reloading firmware using DeviceInstaller. The other methods are discussed below.

Using TFTP: Graphical User Interface


To download new firmware from a computer:

1. Use a TFTP client to send a binary file to the unit (*.ROM to upgrade the unit's internal operational code and *.COB to upgrade its internal Web interface).

Note: TFTP requires the .ROM (binary) version of the unit's internal operational code.

2. In the **TFTP server** field, enter the IP address of the unit being upgraded.
3. Select **Upload** operation and **Binary** format.
4. Enter the full path of the firmware file in the **Local file name** field.
5. In the **Remote file name** field, enter the current internal operational code (**D3** for SDS1101 or **D4** for SDS2101) or **WEB1** for the internal Web interface.
6. Click the **Upload Now** button to transfer the file to the unit.

Figure 9-1. TFTP Window

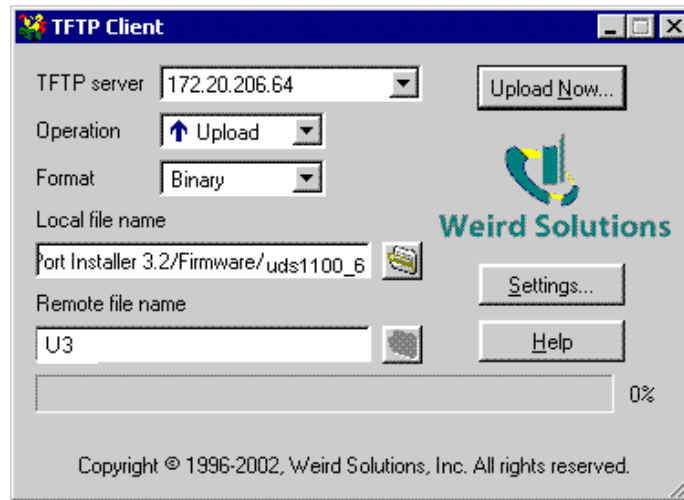

After the firmware has been loaded and stored (approximately 8 seconds to complete) the unit performs a power reset.

Using TFTP: Command Line Interface

To download new firmware from a computer, enter the following from a TFTP command line interface:

```
tftp -i <ip address> put <local filename> <destination file name>
```

The following examples demonstrate the TFTP command sequence to download the .rom file and the .cob file:

SDS1101

```
tftp -i 192.168.1.111 put SDS1101_61100.rom D3
```

```
tftp -i 192.168.1.111 put SDS1101_webm_2007.cob WEB1
```

SDS2101

```
tftp -i 192.168.1.121 put SDS2101_61100.rom D4
```

```
tftp -i 192.168.1.121 put SDS2101_webm_2007.cob WEB1
```

Recovering the Firmware Using the Serial Port and DeviceInstaller

If for some reason the firmware is damaged, you can recover the firmware file by using DeviceInstaller to download the *.ROM file over the serial port.

To recover firmware:

1. Start DeviceInstaller. If your PC has more than one network adapter, a message displays. Select an adapter and click **OK**.
2. From the **Tools** menu, select **Advanced/Recover Firmware**. The Serial Port Firmware Upgrade window displays.
3. For **Port on PC**, enter the COM port on the PC that is connected to the serial port of the Lantronix unit.
4. For **Device Model**, be sure the appropriate device (e.g. SDS1101) displays.
5. For **Firmware File**, click the **Browse** button and go to the location where the firmware file resides.

Note: Make sure the SDS1101/2101 on which you are recovering firmware is connected to this selected port on your PC.

6. Click **OK** to download the file.
7. When prompted, reset the device. Status messages and a progress bar at the bottom of the screen show the progress of the file transfer. When the file transfer completes, the message "**Successful, Click OK to Close**" displays.
8. Click the **OK** button to complete this procedure.

Note For more information, see *Recovering Firmware in the DeviceInstaller online Help*.

10: Monitor Mode

Monitor Mode is a command-line interface used for diagnostic purposes.

There are two ways to enter Monitor Mode: locally using the serial port or remotely using the network.

By default, the password is the last 8 characters of the Device ID (for devices manufactured after January 1, 2020) or is left blank (for all older devices).

Entering Monitor Mode Using the Serial Port

To enter Monitor Mode locally:

1. Follow the same steps used for setting the serial configuration parameters (see [Serial Port](#)).
2. Instead of typing three **x** keys, however:
 - a) Type **zzz** (or **xx1**) to enter Monitor Mode with network connections.
 - b) Type **yyy** (or **yy1**) to enter Monitor Mode without network connections.

A **0>** prompt indicates that you have successfully entered Monitor Mode.

Entering Monitor Mode Using the Network Port

To enter Monitor Mode using a Telnet connection:

1. Establish a Telnet session to the configuration port (9999). The following message that appears:

```
MAC address 00204A9C26CD
Software version V6.11.0.0RC2 (150406)
AES library version 1.8.2.1

Press Enter for Setup Mode
```

2. Type **M** (upper case) immediately.

A **0>** prompt indicates that you have successfully entered Monitor Mode.

Monitor Mode Commands

The following commands are available in Monitor Mode. Many commands have an IP address as an optional parameter (xxx.xxx.xxx.xxx). If you enter the IP address, the command is applied to another unit with that IP address. If you do not enter the IP address, the command is executed locally.

Note: All commands must be in capital letters. Responses to some of the commands are in Intel Hex format.

Table 10-1. Monitor Mode Commands

| Command | Command Name | Function |
|----------------------|---|--|
| VS x.x.x.x | Version | Queries software header record (16 bytes) of unit with IP address x.x.x.x. |
| GC x.x.x.x | Get Configuration | Gets configuration of unit with IP address x.x.x.x as hex records (120 bytes). |
| SC x.x.x.x | Send Configuration | Sets configuration of unit with IP address x.x.x.x from hex records. |
| PI x.x.x.x | Ping | Pings unit with IP address x.x.x.x to check device status. |
| AT | ARP Table | Shows the unit's ARP table entries. |
| TT | TCP Connection Table | Shows all incoming and outgoing TCP connections. |
| NC | Network Connection | Shows the unit's current IP address, gateway, subnet mask, and DNS server. |
| RS | Reset | Resets the unit's power. |
| QU | Quit | Exits diagnostics mode. |
| G0, G1,,Ge, Gf | Get configuration from memory page | Gets a memory page of configuration information from the device for setup record 0 to15. |
| S0, S1,.....,Se, Sf | Set configuration to memory page | Sets a memory page of configuration information on the device for setup record 0 to 15. |
| R0, R1,,Rb, Rc | Get configuration from memory page | Gets a memory page of configuration information from the device for setup record 16 to28. |
| W0, W1,,Wb, Wc | Set configuration to memory page | Sets a memory page of configuration information on the device for setup record 16 to 28. |
| GM | Get MAC address | Shows the unit's 6-byte MAC address. |
| SS | Set Security record | Sets the Security record without the encryption key and length parameters. The entire record must still be written, but the encryption-specific bytes do not need to be provided (they can be null since they are not overwritten). |
| SA | Scan | Initiates a wireless scan if the wireless interface is enabled. Reports any stations found, including BSSID, SSID, and RSSI. If SA is followed by a string, the string is used to filter SSIDs before reporting. If the BSS does not broadcast its SSID, only the BSSID and RSSI are returned. |
| NS | Network Status | Reports the network interfaces' statuses. Includes potentially negotiated parameters like speed/duplex for Ethernet or BSSID, encryption, authentication for wireless interfaces. |
| co | Set IP address, host bits, gateway, and DNS server IP | Example: co 192.168.0.10 8 192.168.0.1 10001 192.168.1.10 with 192.168.0.10 = IP address of the SDS 8 = number of host bits 192.168.0.1 = gateway IP address 10001 = port number of the SDS |

| Command | Command Name | Function |
|---------|-----------------------------|--|
| | | 192.168.1.10 = IP address of the DNS Server The SDS stores the setup and performs a reset. It sends an X before the reset if the command was OK. |
| VN | Query full firmware version | This command queries and displays full firmware version in readable string format. |

Note: Entering any of the commands listed above generates one of the following command response codes:

Table 10-2. Command Response Codes

| Response | Meaning |
|----------|---|
| 0> | OK; no error |
| 1> | No answer from remote device |
| 2> | Cannot reach remote device or no answer |
| 8> | Wrong parameter(s) |
| 9> | Invalid command |

A: Troubleshooting and Contact Information

This chapter discusses how you can diagnose and fix errors quickly without having to contact a dealer or Lantronix. It helps to connect a terminal to the serial port while diagnosing an error to view summary messages that may display. When troubleshooting, always ensure that the physical connections (power cable, network cable, and serial cable) are secure.

Note: Some unexplained errors might be caused by duplicate IP addresses on the network. Make sure that your unit's IP address is unique.

When troubleshooting the following problems, make sure that the SDS is powered up. Confirm that you are using a good network connection.

SDS1101 LEDs

The SDS1101 has the following LEDs, which help you diagnose problems.

- ◆ Power LED (green)
- ◆ Ethernet 10/100 Link (yellow = 10 Mb/green = 100 Mb)
- ◆ Ethernet Half/Full Duplex Activity (yellow = Half Duplex/green = Full Duplex)
- ◆ Diagnostic (red)
- ◆ Status (green)

Simultaneously lit Diagnostic (red) and Status (green) LEDs mean something is wrong. If the Diagnostic LED is lit or blinking, count the number of times the Status LED blinks between its pauses. The following table explains the LED functions:

Table A-3. SDS1101 LEDs

| Condition | Diagnostic LED | Channel 1 Status LED |
|--------------------------------------|------------------|---|
| No Errors | OFF | N/A |
| Network controller error | ON | Blinks 3x/4 seconds |
| Serial number storage checksum error | ON | Blinks 4x/4 seconds |
| Duplicate IP address present | ON | Blinks 5x/4 seconds |
| No DHCP response | Blinks 2x/second | Blinks 5x/4 seconds |
| Setup menu active | Blinks 2x/second | Follows Diagnostic LED for 2 seconds, off for 2 seconds |

SDS2101 LEDs

The following LEDs are on the top of the SDS2101:

- ◆ Power / Diagnostic (Blue)
- ◆ RX Serial 1 Activity LED (Green)
- ◆ TX Serial 1 Activity LED (Yellow)
- ◆ RX Serial 2 Activity LED (Green)
- ◆ TX Serial 2 Activity LED (Yellow)

The following LEDs are on the RJ45 Ethernet connector:

- ◆ Ethernet Link LED on the left (Bi-color, 10Mbps = Yellow, 100 Mbps = Green)
- Ethernet Activities LED on the right (Bi-color, Half Duplex = Yellow, Full Duplex = Green)

Table A-4. SDS2101 LEDs

| LEDs | Meaning |
|---|---|
| Power/Diagnostic (Blue) | Steady On = Power OK Blinking 2x = No DHCP response Blinking 2x = Setup Menu active |
| RX Serial 1 Activity LED (Green) | Off = No data activity Blinking = Data being received by SDS2101 on channel 1 |
| TX Serial 1 Activity LED (Yellow) | Off = No data activity Blinking = data being transmitted from SDS2101 on channel 1 |
| RX Serial 2 Activity LED (Green) | Off = No data activity Blinking = data being received by SDS2101 on channel 2 |
| TX Serial 2 Activity LED (Yellow) | Off = No data activity Blinking = Data being transmitted from SDS2101 on channel 2 |
| Ethernet Link LED on the left (Bi-color) | Off = No Ethernet link established Solid Yellow = 10Mbps Ethernet link established Solid Green = 100 Mbps Ethernet Link established |
| Ethernet Activity LED on the right (Bi-color) | Off = No data activity Blinking Yellow = Half Duplex data activity Blinking Green = Full Duplex data activity |

Problems and Error Messages

Table A-5. Problems and Error Messages

| Problem/Message | Reason | Solution |
|-----------------|--------|----------|
|-----------------|--------|----------|

| Problem/Message | Reason | Solution |
|--|---|--|
| When you issue the ARP -S command in Windows, the "ARP entry addition failed: 5" message displays. | Your currently logged-in user does not have the correct rights to use this command on this PC. | Have someone from your IT department log you in with sufficient rights. |
| When you attempt to assign an IP address to the unit by the ARP method, the "Press Enter to go into Setup Mode" error "(described below) message displays. Now when you Telnet to the device server, the connection fails. | When you Telnet to port 1 on the device server, you are only assigning a temporary IP address. When you Telnet into port 9999 and do not press Enter quickly, the device server reboots, causing it to lose the IP address. | Telnet back to Port 1. Wait for it to fail, then Telnet to port 9999 again. Make sure you press Enter quickly. |
| When you Telnet to port 9999, the "Press Enter to go into Setup Mode" message displays. However, nothing happens when you press Enter, or your connection is closed. | You did not press Enter quickly enough. You only have 5 seconds to press Enter before the connection is closed. | Telnet to port 9999 again, but press Enter as soon as you see the "Press Enter to go into Setup Mode" message. |
| When you Telnet to port 1 to assign an IP address to the device server, the Telnet window does not respond for a long time. | You may have entered the Ethernet address incorrectly with the ARP command. | Confirm that the Ethernet address that you entered with the ARP command is correct. The Ethernet address may only include numbers 0-9 and letters A-F. In Windows and usually in Unix, the segments of the Ethernet address are separated by dashes. In some forms of Unix, the Ethernet address is segmented with colons. |
| | The IP address you are trying to assign is not on your logical subnet. | Confirm that your PC has an IP address and that it is in the same logical subnet that you are trying to assign to the device server. |
| | The device server may not be plugged into the network properly. | Make sure that the Link LED is lit. If the Link LED is not lit, then the device server is not properly plugged into the network. |
| When you try to assign an IP with DeviceInstaller, you get the following : "No response from device! Verify the IP, Hardware Address and Network Class. Please try again." | The cause is most likely one of the following: The hardware address you specified is incorrect. The IP address you are trying to assign is not a valid IP for your logical subnet. You did not choose the correct subnet mask. | Double-check the parameters that you specified. Note: You cannot assign an IP address to a device server through a router. |

| Problem/Message | Reason | Solution |
|--|--|--|
| The device server is not communicating with the serial device to which it is attached. | The most likely reason is the wrong serial settings were chosen. | The serial settings for the serial device and the device server must match. The default serial settings for the device server are RS-232, 9600 baud, 8 character bits, no parity, 1 stop bit, no flow control. |
| When you try to enter the setup mode on the device server using the serial port, you get no response. | The issue is most likely something covered in the previous problem, or possibly, you have Caps Lock on. | Double-check everything in the problem above. Confirm that Caps Lock is not on. |
| You can ping the device server, but not Telnet to the device server on port 9999. | <p>There may be an IP address conflict on your network</p> <p>You are not Telnetting to port 9999.</p> <p>The Telnet configuration port (9999) is disabled within the device server security settings.</p> | <p>Turn the device server off and then issue the following commands at the DOS prompt of your computer:</p> <p>ARP -D X.X.X.X (X.X.X.X is the IP of the device server).</p> <p>PING X.X.X.X (X.X.X.X is the IP of the device server).</p> <p>If you get a response, then there is a duplicate IP address on the network. If you do not get a response, use the serial port to verify that Telnet is not disabled.</p> |
| With DeviceInstaller, you get the <i>Wrong Password</i> error when you try to upgrade the firmware. | The file you are attempting to load is the incorrect firmware file for the SDS. | Download the correct firmware file from the Lantronix website. |
| The device server appears to be set up correctly, but you are not communicating with your device attached to the device server across the network. | <p>If you are sure that the serial port setting is correct, then you may not be connecting to the correct socket of the device server.</p> <p>Another possibility is that the device server is not set up correctly to make a good socket connection to the network.</p> | <p>On SDS1101 you can check to see whether there is a socket connection to or from the SDS by looking at the Status LED.</p> <p>If the Status LED is blinking consistently, then there is a good socket connection.</p> <p>If the Status LED is solid green, then the socket connection does not exist. Use the Connect Mode option C0 for making a connection to the SDS from the network. Use Connect Mode option C1 or C5 for a connection to the network from the SDS.</p> |
| When connecting to the Web Manager within the device server, the "No Connection With The Device Server" message displays. | Your computer is not able to connect to port 30718 (77FEh) on the device server. | Make sure that port 30718 (77FEh) is not blocked with any router that you are using on the network. Also, make sure that port 77FEh is not disabled within the Security settings of the device server. |

Lantronix Technical Support

Lantronix Technical Support offices are located worldwide. Contact your office at <http://www.lantronix.com/about/contact.html>. When you report a problem, please provide the following information:

- ◆ Your name, company name, address, and phone number
- ◆ Lantronix model number and serial number/MAC address
- ◆ Firmware version
- ◆ Description of the problem including the status of the unit when the problem occurred (please try to include information on user and network activity at the time of the problem)

B: SDS1101 Connections and Pinouts

Serial Port

The SDS1101 has a female DCE DB25 serial port that supports RS-232 and RS-485/422 serial standards (software selectable) up to 230 Kbaud.

Figure 10-1. Serial Interface



Serial Connector Pinouts

The unit's female DB25 connector provides an RS-232C, RS-485, or RS-422 DCE serial port. The default serial port settings are 9600 baud, 8 bits, no parity, and 1 stop bit.

Figure B-2. DB25 Female DCE Interface RS232


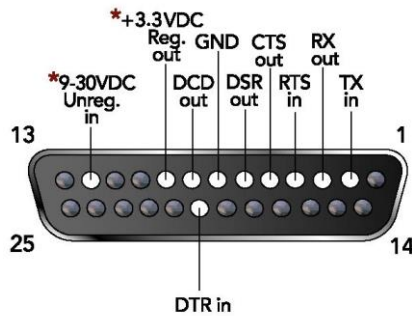



Figure B-3. DB25 Female Interface RS422 (4 wire mode)

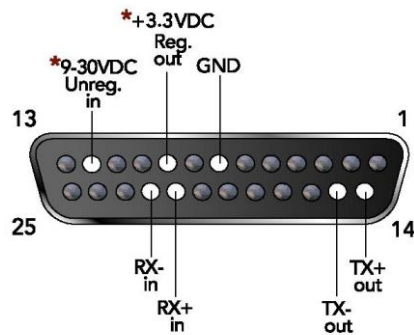

DB25 Female DCE Interface RS485/422

*Optional power connection

Figure B-4. DB25 Female Interface RS485 (2 wire mode)

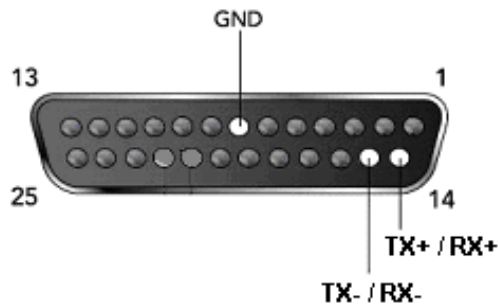


Modem Cable

When attaching the DB25 of the SDS1101 to the DB9 com port on a PC, use a standard straight-through serial cable. The figure below shows the pinouts for a DB25 to DB9 straight-through cable, often referred to as a "Modem Cable".

To configure the SDS using the DB9 serial port, you need only pin out the TXD, RXD, and GND signals.


Figure B-5. Modem Cable

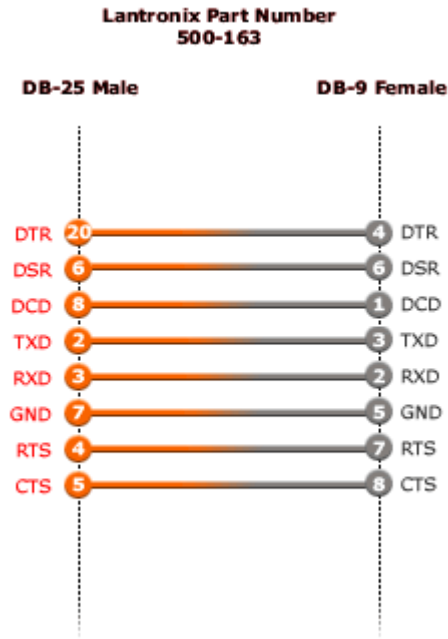

Network Port

The unit's back panel contains a power plug and an RJ45 (10/100) Ethernet port.


Figure B-6. Network Interface

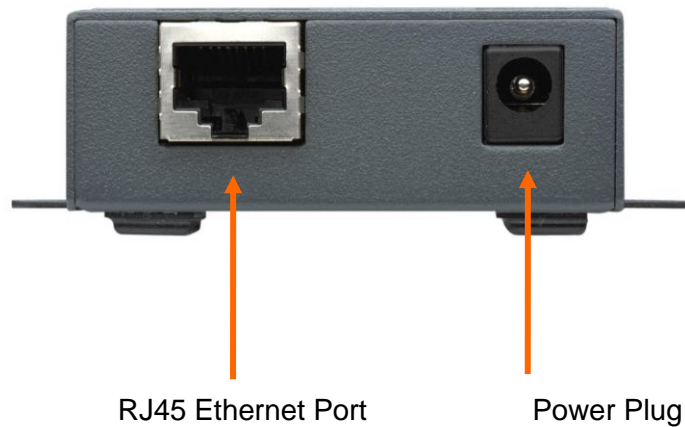

Ethernet Connector Pinouts

The SDS1101 supports 10/100 Mbps half or full duplex Ethernet through an RJ45 connector.

Figure B-7. RJ45 Ethernet Connector

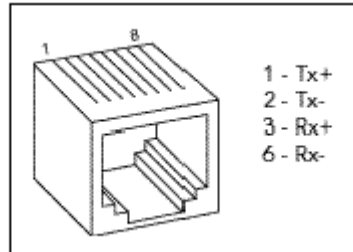

Power Plug

Power input on the power plug is 9 -30 VDC (center +) or 10-24 VAC (1.5W maximum power required).

C: SDS2101 Connections and Pinouts

SDS2101 Serial Ports

The SDS2101 has two male DB9 DTE serial ports that support RS-232C/RS-422 (4-wire)/RS-485 (2-wire) serial standards up to 230 Kbps (and up to 921 Kbps if high performance is selected).


Figure C-4. Serial Interface



Serial Connector Pinouts

The two Male DB9 DTE connectors provide an RS-232C/RS-422 (4-wire)/RS-485 (2-wire) interface. The default serial port settings are 9600 baud, 8 bits, no parity, 1 stop bit, no flow control.


Figure C-5. DB9 Male RS232 Serial DTE Connector

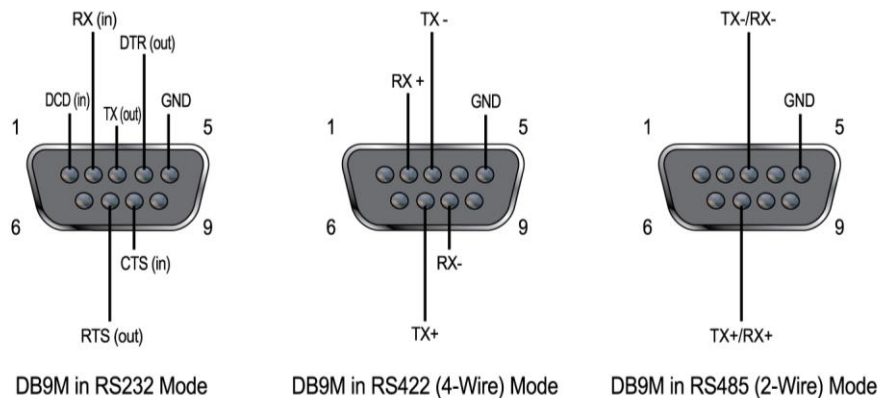

Network Port

The unit's back panel contains a 9-30VDC power plug and an RJ45 (10/100) Ethernet port.

Figure C-6. Network Interface

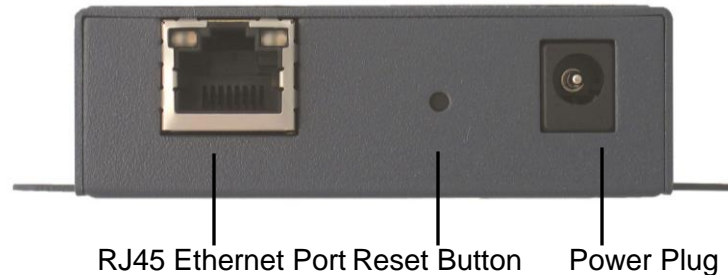


Reset Button

You can reset the unit to factory defaults, including clearing the network settings (IP address, gateway, and netmask are set to 00s).

To reset the unit to factory defaults:

1. Place the end of a paper clip or similar object into the reset opening and press for a minimum of 3 seconds.
2. Release the button and remove the paper clip. The firmware restores factory default settings to the configuration and invokes a reset (internally).

Ethernet Connector Pinouts

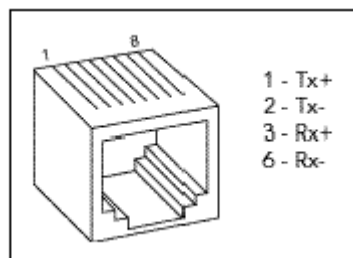

Power Plug

Power input on the power plug is 9-30 VDC (center +) (1.8W maximum power).

D: SDS1101 Technical Specifications

Table D-6. 10-7SDS1101 Technical Specifications

| Category | Description |
|----------------------------------|--|
| CPU | Lantronix DSTNI-EX 48 MHz clock |
| Internal CPU Memory | 256 KB zero wait state SRAM |
| Flash | 2 MB Flash |
| EEPROM | 2 or 4 KB EEPROM |
| Serial Interface | 1 DB25F DCE serial port Software-selectable baud rate from 300 to 230 Kbaud Software-selectable RS232, RS422 or RS485 (2 and 4 wire support) |
| Serial Line Formats | Characters: 7 or 8 data bits Stop bits: 1 or 2 Parity: odd, even, none |
| Modem Control | DTR, DSR |
| Flow Control | Hardware: CTS/RTS Software: XON/XOFF |
| Power Input | 9-30 VDC or 9-24 VAC on barrel connector (1.5 Watts maximum consumption) 9-30 VDC on DB25F serial interface |
| Network Interface | 1 RJ45 10Base-T/100Base-TX Ethernet port Software selectable Ethernet speed 10/100/Auto Software selectable Half/Full/Auto duplex |
| Dimensions | Height: 2.3 cm (0.9 in) Width: 6.4 cm (2.5 in) Depth: 9.0 cm (3.5 in) |
| Weight | 0.20 kg (0.45 lb) |
| Temperature | Operating range: 0° to 60° C (32° to 140° F) Note: Operating range for SDS1101-IAP only: -40° to 70° C (-40° to 158° F) Storage -40° to 85° C (-40 to 185° F) |
| Relative Humidity | Operating 10% to 90% non-condensing, 40% to 60% recommended Storage 10% to 90% non-condensing |
| Case | Metal enclosure with integrated wall mounts Optional 35 mm Din Rail mount available |
| Protocols Supported | ARP, UDP/IP, TCP/IP, Telnet, ICMP, SNMP, DHCP, BOOTP, TFTP, and HTTP |
| Installable Industrial Protocols | ModBus TCP, ModBus ASCII/RTU, DF1 Multi-Master (IAP version only) |
| Management | Internal web server SNMP (read only) Serial login Telnet loginS DeviceInstaller software |

| Category | Description |
|-----------------|--|
| System Software | DeviceInstaller, Windows® 95/98/ME/NT/2000/XP-based configuration software Com Port Redirector, Windows® 98/NT/2000/XP-based virtual com port software |
| LEDs | Power 10/100 Mb Link 10/100 Activity Diagnostic Status |
| Isolation | Designed with protections against transients and ESD for use under harsh environments Serial Port: 15 KV ESD protection on RS232 and RS422/485 transceivers Power Input: Up to non-repeated 600 W 10/100 usec pulse protection against transient over voltages Ethernet Port: 1500 VAC isolation shielded with shield connected to chassis ground for signal integrity and ESD protection |

E: SDS2101 Technical Specifications

Table E-8. 10-9SDS2101 Technical Specifications

| Category | Description |
|----------------------------------|--|
| CPU | Lantronix DSTNI-EX 48 MHz clock |
| Internal CPU Memory | 256 KB zero wait state SRAM |
| Flash | 2 MB Flash |
| EEPROM | 2 or 4 KB EEPROM |
| Serial Interface | 2 DB9M DTE serial ports Software-selectable baud rate from 300 to 921K baud (when High Performance is selected) Software-selectable RS232, RS422 or RS485 (2 and 4 wire support) |
| Serial Line Formats | Characters: 7 or 8 data bits Stop bits: 1 or 2 Parity: odd, even, none |
| Modem Control | DTR, Modem Control In |
| Flow Control | Hardware: CTS/RTS Software: XON/XOFF |
| Power Input | 9-30 VDC on barrel connector (1.8W maximum consumption) |
| Network Interface | 1 RJ45 10Base-T/100Base-TX Ethernet port Software selectable Ethernet speed 10/100/Auto Software selectable Half/Full/Auto duplex |
| Dimensions | Height: 2.3 cm (0.9 in) Width: 7.3 cm (2.9 in) Length : 9.5 cm (3.75 in) |
| Weight | 0.26 kg (0.6 lb) |
| Temperature | Operating range: 0° to 60° C (32° to 140° F) Note: Operating range for SDS2101-IAP only: -40° to 70° C (-40° to 158° F) Storage -40° to 85° C (-40 to 185° F) |
| Relative Humidity | Operating 10% to 90% non-condensing, 40% to 60% recommended Storage 10% to 90% non-condensing |
| Case | Metal enclosure with integrated wall mounts Optional 35 mm Din Rail mount available |
| Protocols Supported | ARP, UDP/IP, TCP/IP, Telnet, ICMP, SNMP, DHCP, BOOTP, TFTP, and HTTP |
| Installable Industrial Protocols | ModBus TCP, ModBus ASCII/RTU, DF1 Multi-Master (IAP version only) |

| Category | Description |
|-----------------|--|
| Management | Internal web server SNMP (read only) Serial login Telnet login DeviceInstaller software |
| System Software | DeviceInstaller, Windows® 95/98/ME/NT/2000/XP-based configuration software Com Port Redirector, Windows® 98/NT/2000/XP-based virtual com port software |
| LEDs | Power 10/100 Mb Link on RJ45 10/100 Activity on RJ45 Diagnostic RX Serial 1 Activity TX Serial 1 Activity RX Serial 2 Activity TX Serial 2 Activity |
| Isolation | Designed with protections against transients and ESD for use under harsh environments Serial Port: 15 KV ESD protection on RS232 and RS422/485 transceivers Power Input: Up to non-repeated 600 W 10/100 usec pulse protection against transient over voltages Ethernet Port: 1500 VAC isolation shielded with shield connected to chassis ground for signal integrity and ESD protection |

F: Alternative Ways to Assign an IP Address

Earlier chapters describe how to assign a static IP address using DeviceInstaller, Web Manager, and Setup Mode (through a Telnet or serial connection). This section covers other methods for assigning an IP address over the network.

By default, the password is the last 8 characters of the Device ID (for devices manufactured after January 1, 2020) or is left blank (for all older devices).

DHCP

The unit ships with a default IP address of 0.0.0.0, which automatically enables DHCP. If a DHCP server exists on the network, it provides the unit with an IP address, gateway address, and subnet mask when the unit boots up.

You can use the DeviceInstaller software to search the network for the DHCP-assigned IP address and add it to the list of devices retrieved.

Note: *This DHCP address does **not** appear in the unit's Setup Mode or in Web Manager. You can determine your unit's DHCP-assigned IP address in Monitor Mode. When you enter Monitor Mode from the serial port with network connection enabled and issue the **NC** (Network Communication) command, you see the unit's IP configuration.*

AutoIP

The unit ships with a default IP address of 0.0.0.0, which automatically enables Auto IP within the unit. AutoIP is an alternative to DHCP that allows hosts to obtain an IP address automatically in smaller networks that may not have a DHCP server. A range of IP addresses (from 169.254.0.1 to 169.254.255.1) has been explicitly reserved for AutoIP-enabled devices. Do not use this range of Auto IP addresses over the Internet.

- ◆ If your unit cannot find a DHCP server, and you have not manually assigned an IP address to it, the unit automatically selects an address from the AutoIP reserved range. Then, your unit sends out a (ARP) request to other nodes on the same network to see whether the selected address is being used.
- ◆ If the selected address is not in use, then the unit uses it for local subnet communication. □□
- ◆ If another device is using the selected IP address, the unit selects another address from the AutoIP range and reboots. After reboot, the unit sends out another ARP request to see if the selected address is in use, and so on.

AutoIP does not replace DHCP. The unit continues to look for a DHCP server on the network. If it finds a DHCP server, the unit switches to the DHCP server-provided address and reboots.

Note: If a DHCP server is found, but it denies the request for an IP address, the unit does not attach to the network, but waits and retries.

AutoIP can be disabled by setting the unit's IP address to 0.0.1.0. This setting enables DHCP but disables AutoIP.

BOOTP

Similar to DHCP, but for smaller networks. Automatically assigns the IP address for a specific duration of time.

ARP and Telnet

If the unit has no IP address, you can use Address Resolution Protocol (ARP) method from UNIX and Windows-based systems to assign a temporary IP address.

To assign a temporary IP address:

1. On a UNIX or Windows-based host, create an entry in the host's ARP table using the intended IP address and the hardware address of the unit (on the product label on the bottom of the unit).

```
arp -s 191.12.3.77 00:20:4a:xx:xx:xx (Unix)
```

```
arp -s 191.12.3.77 00-20-4a-xx-xx-xx (Windows)
```

Note: For the ARP command to work on Windows 95, the ARP table on the PC must have at least one IP address defined other than its own.

2. If you are using Windows 95, type `ARP -A` at the DOS command prompt to verify that there is at least one entry in the ARP table. If the local machine is the only entry, ping another IP address on your network to build a new entry in the ARP table; the IP address must be a host other than the machine on which you are working. Once there is at least one additional entry in the ARP table, use the following command to ARP an IP address to the unit:

```
arp -s 191.12.3.77 00-20-4a-xx-xx-xx
```

3. Open a Telnet connection to port 1. The connection fails quickly, but the unit temporarily changes its IP address to the one designated in this step.

```
telnet 191.12.3.77 1
```

4. Open a Telnet connection to port 9999, and press **Enter** within **five seconds** to go into Setup Mode. If you wait longer than five seconds, the unit reboots.

```
telnet 191.12.3.77 9999
```

Note: The IP address you just set is temporary and reverts to the default value when the unit's power is reset, unless you configure the unit with a static IP address and store the changes permanently.

G: Binary to Hexadecimal Conversions

Many of the unit's configuration procedures require assembling a series of options (represented as bits) into a complete command (represented as a byte). Convert the resulting binary value to a hexadecimal representation.

Converting Binary to Hexadecimal

Following are two simple ways to convert binary numbers to hexadecimals.

Conversion Table


Hexadecimal digits have values ranging from 0 to F, which are represented as 0-9, A (for 10), B (for 11), etc. To convert a binary value (for example, 0100 1100) to a hexadecimal representation, the upper and lower four bits are treated separately, resulting in a two-digit hexadecimal number (in this case, 4C). Use the following table to convert values from binary to hexadecimal.

| Decimal | Binary | Hex |
|---------|--------|-----|
| 0 | 0000 | 0 |
| 1 | 0001 | 1 |
| 2 | 0010 | 2 |
| 3 | 0011 | 3 |
| 4 | 0100 | 4 |
| 5 | 0101 | 5 |
| 6 | 0110 | 6 |
| 7 | 0111 | 7 |
| 8 | 1000 | 8 |
| 9 | 1001 | 9 |
| 10 | 1010 | A |
| 11 | 1011 | B |
| 12 | 1100 | C |
| 13 | 1101 | D |
| 14 | 1110 | E |
| 15 | 1111 | F |

Scientific Calculator

Another simple way to convert binary to hexadecimal is to use a scientific calculator, such as the one available on Windows' operating systems. For example:

1. On the Windows' Start menu, click **Programs**→**Accessories**→**Calculator**.
2. On the **View** menu, select **Scientific**. The scientific calculator displays.
3. Select **Bin** (Binary), and type the number to convert.

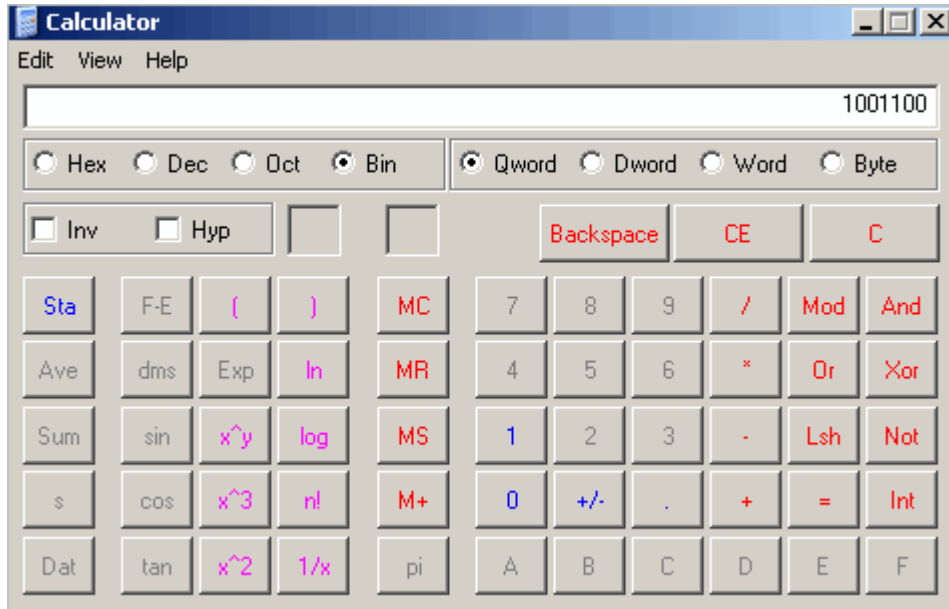

4. Click **Hex**. The hexadecimal value displays.

H: Compliance

Manufacturer's Name & Address

Lantronix
7535 Irvine Center Drive
Suite 100
Irvine, CA 92618 USA

Declares that the following product:

Product Name Model: SDS1101 and SDS2101 Device Servers

Note:

This equipment has been tested and found to comply with the limits for Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this user guide, may cause interference to radio communications. Operation of this equipment in a residential area is likely to cause interference, in which case the user will be required to correct the interference at his own expense.

User Information

Class A Equipment (Broadcasting and communication equipments for office work)

Seller and user shall be noticed that this equipment is suitable for electromagnetic equipments for office work (Class A) and it can be used outside home.

Changes or modifications made to this device that are not explicitly approved by Lantronix will void the user's authority to operate this device.

This class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Conforms to the following standards or other normative documents:

North America

Safety:

- UL 60950-1, 2nd Ed., 2007
- UL 62368-1, 2nd Ed, 2014
- CAN/CSA -C22.2 No. 60950-1-07, 2nd Ed.
- CAN/CSA C22.2 No. 62368-1-14

Emissions:

- CFR Title 47 FCC Part 15, Subpart B, Class A
- ICES-003 Issue 4

- **Australia**

- CISPR 32: 2015, Class A Emissions
- CISPR 22: 2002, Class A Emissions
- CISPR 11

- **Japan**

- VCCI V-3/2005.04, Class A Emissions

LANTRONIX®



EU DECLARATION OF CONFORMITY

Manufacturer's Name: LANTRONIX INC.
Manufacturer's Address: 7535 Irvine Center Drive, Suite 100
Irvine, CA. 92618. USA

Product Type: Serial Device Server
Product Family: UDS1100, SDS1101
UDS2100, SDS2101
Rated: UDS1100, SDS1101: 9-30 Vdc or 9-24 Vac
UDS2100, SDS2101: 9-30 Vdc
Intended use: Commercial installations, indoor use

Manufacturer's Quality System:



ISO 9001:2015 Certificate No. 74 300 4282 TUV Rheinland

Category of Equipment: Class 3 (powered by SELV LPS or Class 2 Power Supply)

Applicable EU Directives:

Safety: Directive 2014/35/EU for Low Voltage

- IEC 60950-1: 2005+A1:2009+A2:2013
- EN 60950-1: 2006 + A11:2009 + A1:2010 + A12:2011 + A2:2013
- IEC/EN 62368-1:2014

EMC: Directive (2014/30/EU)

- EN 55032:2012/AC: 2013, Class A Emissions
- EN 55022:1998+ A1:2000 + A2:2003, Class A Emissions
- EN 55024: 2010
- EN 61000-3-2: 2014
- EN 61000-3-3: 2014
- EN 61000-4-2: 1995 + A2: 2001
- EN 61000-4-3: 2006 + A1: 2008
- EN 61000-4-4: 2004
- EN 61000-4-5: 2006
- EN 61000-4-6: 2007
- EN 61000-4-8: 1994 + A1: 2001
- EN 61000-4-11: 2004
- EN 61000-6-2: 2005
- EN 61000-6-4: 2007

EU Directive 2011/65/EU for Restriction of Hazardous Substance (RoHS2) with exemption 7(c)-I

Statement of Conformity: The product specified above complies with applicable EU directive referenced, including the application of sound engineering practice.

Signature:  Date: 09-12-2018

Name: Fathi Hakam Title: VP of Engineering

CERT-DOC-UDS rev E

Table I-1: Europe – EU Declaration of Conformity

| | | |
|-----------|------------------------|--|
| cs | Česky [Czech] | Lantronix tímto prohlašuje, že tento UDS1100 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 2014/35/EU, 2014/30/EU. |
| da | Dansk [Danish] | Undertegnede Lantronix erklærer herved, at følgende udstyr UDS1100 overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/35/EU, 2014/30/EU. |
| de | Deutsch [German] | Hiermit erkläre Lantronix, dass sich das Gerät UDS1100 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2014/35/EU, 2014/30/EU befindet. |
| et | Eesti [Estonian] | Käesolevaga kinnitab Lantronix seadme UDS1100 vastavust direktiivi 2014/35/EU, 2014/30/EU põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele. |
| en | English | Hereby, Lantronix, declares that this UDS1100 is in compliance with the essential requirements and other relevant provisions of Directive 2014/35/EU, 2014/30/EU. |
| es | Español [Spanish] | Por medio de la presente Lantronix declara que el UDS1100 module cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 2014/35/EU, 2014/30/EU. |
| el | Ελληνική [Greek] | ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Lantronix ΔΗΛΩΝΕΙ ΟΤΙ UDS1100 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/35/EU, 2014/30/EU. |
| fr | Français [French] | Par la présente Lantronix déclare que l'appareil UDS1100 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/35/EU, 2014/30/EU. |
| it | Italiano [Italian] | Con la presente Lantronix dichiara che questo UDS1100 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/35/EU, 2014/30/EU. |
| | Latviski [Latvian] | Ar šo Lantronix deklarē, ka UDS1100 atbilst Direktīvas 2014/35/EU, 2014/30/EU būtiskajām prasībām un citiem ar to saistītajiem noteikumiem. |
| | Lietuvių [Lithuanian] | Šiuo Lantronix deklaruoja, kad šis UDS1100 atitinka esminius reikalavimus ir kitas 2014/35/EU, 2014/30/EU Direktyvos nuostatas. |
| nl | Nederlands [Dutch] | Hierbij verklaart Lantronix dat het toestel UDS1100 overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/35/EU, 2014/30/EU. |
| mt | Malti [Maltese] | Hawnhekk, Lantronix, jiddikjara li dan UDS1100 jikkonforma malhtigijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Dirrettiva 2014/35/EU, 2014/30/EU. |
| hu | Magyar [Hungarian] | Alulírott, Lantronix nyilatkozom, hogy a UDS1100 megfelel a vonatkozó alapvető követelményeknek és az 2014/35/EU, 2014/30/EU irányelv egyéb előírásainak. |
| pl | Polski [Polish] | Niniejszym Lantronix oświadcza, że UDS1100 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 2014/35/EU, 2014/30/EU. |
| pt | Português [Portuguese] | Lantronix declara que este UDS1100 está conforme com os requisitos essenciais e outras disposições da Directiva 2014/35/EU, 2014/30/EU. |
| sl | Slovensko [Slovenian] | Lantronix izjavlja, da je ta UDS1100 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 2014/35/EU, 2014/30/EU. |
| | Slovensky [Slovak] | Lantronix týmto vyhlasuje, že UDS1100 enterprise Wi-Fi IoT module spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 2014/35/EU, 2014/30/EU. |
| fi | Suomi [Finnish] | Lantronix vakuuttaa täten että UDS1100 tyyppinen laite on direktiivin 2014/35/EU, 2014/30/EU oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen. |

| | |
|-----------------------------|--|
| sv Svenska [Swedish] | Härmed intygar Lantronix att denna UDS1100 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/35/EU, 2014/30/EU. |
|-----------------------------|--|

RoHS, REACH and WEEE Compliance Statement

Please visit <http://www.lantronix.com/legal/rohs/> for Lantronix's statement about RoHS, REACH and WEEE compliance.

Index

- Applications, 12
- ARP and Telnet, 92
- AutoIP, 18, 91
- Binary to hexadecimal conversions, 94
- BOOTP, 18, 92
- Channel settings, 32, 47
- Command line interface, 41
- Configuration methods, 14
- Connect Mode, 49
- Connection settings
 - TCP, 36
 - UDP, 38
- Connectors, 81, 85
- Contacts, 2
- CPU Performance, 62
- Default settings
 - applying in Setup Mode, 67
 - applying in Web-Manager, 40
- DeviceInstaller
 - accessing the unit, 25
 - assigning the IP address, 18
- DHCP, 18, 91
- DHCP name. *See*
- Error messages, 78
- Expert settings, 62
- Firmware
 - recovering, 72
 - upgrading, 70
- Gateway * MERGEFORMAT, 45
- Getting started, 16
- Hardware address, 18
- Host list settings
 - Setup Mode, 52
 - Web-Manager, 31
- Installation, 17
- Installing DeviceInstaller, 19, 21, 22
- Internal web server, 14
- IP address
 - assigning, 19, 28, 44
 - automatic assignment, 27
 - factory default, 18
 - gateway, 45
 - other ways to assign, 91
 - requirement, 18
 - searching for on the network, 20
 - show after ring, 57
- Label, 15
- LEDs, 76, 77
- Modem emulation, 14
- Modem Mode, 54
- Monitor Mode, 73
- Netmask, 45
- Network settings, 26
- Null modem cable, 82
- Package contents, 16
- Password for Telnet configuration, 46
- Pinouts, 81, 85
 - Ethernet connector, 84
 - serial connector, 81
- Power plug, 83
- Problems, 78
- Protocols, 14
- Redirection Software, 13
- Required information, 18
- RJ45 Ethernet port, 83
- RS-232 and RS-485/422 standards, 81
- Security settings, 64
- Serial port
 - accessing Setup Mode, 24
 - login, 24
- Serial tunneling, 12
- Server settings
 - Setup Mode, 44
 - Web-Manager, 30
- Setup Mode, 41
 - accessing by serial port connection, 42
 - accessing by Telnet. *See*
- SNMP, 64
- TCP settings, 36
- Technical specifications
 - * MERGEFORMAT, 87, 89
- TFTP, 70
- Troubleshooting, 76
- UDP settings, 38
- Web-Manager, 25