

2017



# CUE INFOTAINMENT SYSTEM

[cadillac.com](http://cadillac.com) (U.S.)  
[cadillac.gm.ca](http://cadillac.gm.ca) (Canada)



---

# Contents

Introduction .....	2
Radio .....	12
Audio Players .....	18
OnStar System .....	26
Rear Seat Infotainment .....	27
Navigation .....	56
Voice Recognition .....	88
Phone .....	94
Settings .....	102
Trademarks and License Agreements .....	108
Index .....	118

## Introduction



The names, logos, emblems, slogans, and vehicle body designs appearing in this manual including, but not limited to, GM, the GM logo, CADILLAC, CADILLAC Emblem, and CADILLAC CUE are registered trademarks of General Motors LLC., its subsidiaries, affiliates, or licensors.

For vehicles first sold in Canada, substitute the name General Motors of Canada Company for Cadillac Motor Division, whenever it appears in this manual.

This manual describes features that may or may not be on the vehicle because of optional equipment that was not purchased on the vehicle, model variants, country specifications, features/applications that may not be available in your region, or changes subsequent to the printing of this manual.

Keep this manual with the owner manual in the vehicle, so it will be there if it is needed. If the vehicle is sold, leave this manual in the vehicle.

### Overview

Read the following pages to become familiar with the infotainment system features.

### Warning

Taking your eyes off the road for too long or too often while using any infotainment feature can cause a crash. You or others could be injured or killed. Do not give extended attention to infotainment tasks while driving. Limit your glances at the vehicle displays and focus your attention on driving. Use voice commands whenever possible.

The infotainment system has built-in features intended to help avoid distraction by disabling some functions when driving. These functions may gray out when they are unavailable. Many infotainment features are also available through the instrument cluster and steering wheel controls.

Before driving:

- Become familiar with the operation, faceplate buttons, and screen buttons.
- Set up the audio by presetting favorite stations, setting the tone, and adjusting the speakers.
- Set up phone numbers in advance so they can be called easily by pressing a single button or by using a single voice command if equipped with Bluetooth phone capability.

See “Defensive Driving” in the owner manual.

### Customer Assistance

Assistance is available to help with Bluetooth pairing, other mobile device interface, and operation support of the CUE infotainment system. Specialists are available when calling this Customer Assistance number.

U.S.: 1-855-428-3669 (855 4 CUE NOW)



Canada: 1-888-446-2000 (Canadian Cadillac Customer Care Centre)


### Infotainment System



The infotainment system is controlled by using the infotainment display, the buttons on the radio faceplate, steering wheel controls, and voice recognition.








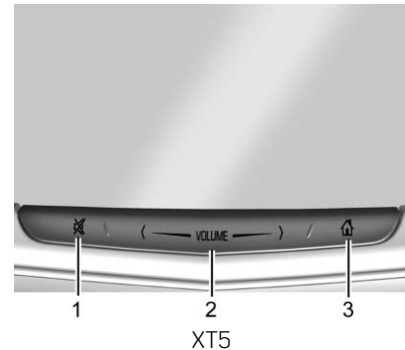
Radios Except XT5



1.  (Power and Mute)
2. VOLUME
3.  (Home Page)



1.  (Mute and Power)
2. VOLUME
3.  (Home Page)
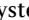
### Power (On/Off/Mute)

- When off, press  (1) /  (1) to turn the system on. Press and hold to turn off.
- When on, press  /  to mute the system. Press  /  again to unmute the system.

When the power is on and the system is not muted, a quick status pane will display when  is pressed. Pressing  will mute the system and trigger this pane to show a long press is required to actually power down the system.


## Volume





The black area above the chrome bar (2) is used to increase or decrease the volume. There are three ways to adjust the volume:

- Slide a finger.
- Press.
- Press and hold.
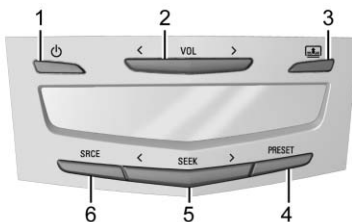
## Rear Seat Armrest Control Panel (If Equipped)


If equipped, there is a control panel in the center of the rear seatback. See “Rear Seat” in the owner manual.



1. : Press to turn the power on or off the sourced audio or media playback and sunshade control button (if equipped).
2. : Press the left or right arrow to adjust the volume of current playback.
3. : If equipped, press and release the switch to control the rear window sunshade. See “Rear Seats” in the owner manual.
4. PRESET: Press to go to a saved favorite.
5. : Press the left or right arrow to go to the previous or next station on the radio or track on a media source.



6. SRCE: Press to change the source of playback.


## Home Page

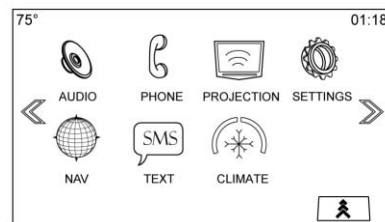


The Home Page is where application icons are accessed. Some features are disabled when the vehicle is moving.

The Home Page can be set up to have up to five pages with eight icons per page.

Touch  or , or slide a finger left/right across the screen to access the pages of icons.

: Touch to go to the next Home Page.


: Touch to go to the previous Home Page.

: Touch to display the favorites list.

Touch and hold a location within the favorites area to begin the process of saving a favorite application.

Touch the application icon to store as a favorite, and the name of the application will be shown in favorites.


### Managing Home Page Icons


1. Touch and hold any of the Home Page icons to edit that icon.
2. Drag the icon to a new location on the Home Page or to save it to the applications tray.
3. Press  to exit edit mode.


## Steering Wheel Controls (Except XT5)

The infotainment steering wheel controls can be used to control the infotainment features displayed in the instrument cluster.



When in Valet Mode, if equipped, access to the infotainment functions is disabled. See *Settings* ⇨ 102.

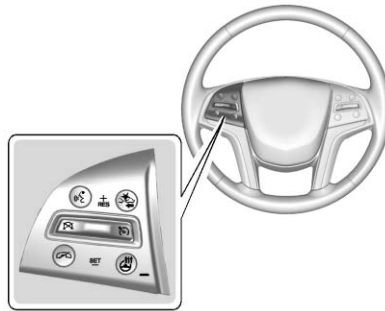



 : Press to answer an incoming call or start voice recognition. See *Bluetooth (Overview)* ⇨ 94 or *Bluetooth (Infotainment Controls)* ⇨ 94 or *Bluetooth (Voice Recognition)* ⇨ 98 and “OnStar Overview” in the owner manual.



 : Press to decline an incoming call or end a current call. Press to mute or unmute the infotainment system when not on a call.



 or  : Press the five-way control to the left or right to go to the previous or next area in the display or to the previous or next menu on the instrument cluster.

 or  : Press the five-way control up or down to go up or down in a list on the instrument cluster.

**SEL** : Press to select a highlighted menu item.


 or  : Press to go to the next or previous favorite when listening to the radio. Press to go to the next or previous track when listening to a media source.

$\square$  + or  $\square$  - : Press to increase or decrease the volume.

## Steering Wheel Controls (XT5)


The infotainment steering wheel controls can be used to control the infotainment features displayed in the instrument cluster.

When in Valet Mode, if equipped, access to the infotainment functions is disabled. See *Settings* ⇨ 102.

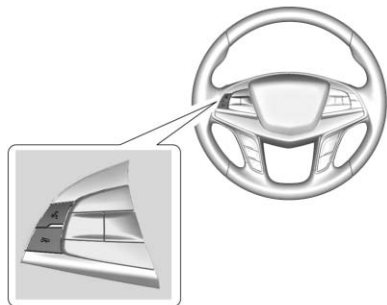

$\text{☎}$  : Press to answer an incoming call or to start voice recognition. See *Bluetooth (Overview)* ⇨ 94 or *Bluetooth (Infotainment Controls)* ⇨ 94 or *Bluetooth (Voice Recognition)* ⇨ 98.

$\text{🚫}$  : Press to decline an incoming call or end a current call. Press to mute or unmute the infotainment system when not on a call.

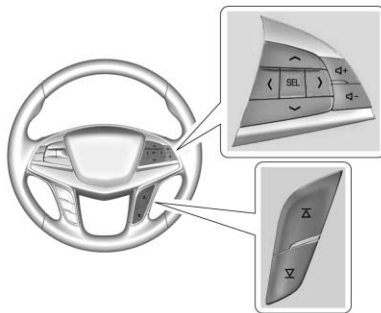

$\langle$  or  $\rangle$  : Press the five-way control to the left or right to go to the previous or next area in the display or to the previous or next menu on the instrument cluster.

$\wedge$  or  $\vee$  : Press the five-way control up or down to go up or down in a list or page on the instrument cluster.

**SEL** : Press to select a highlighted menu item.

$\square$  or  $\square$  : Press to go to the next or previous favorite when listening to the radio. Press to go to the next or previous track when listening to a media source.

$\square$  + or  $\square$  - : Press to increase or decrease volume.

## Using the System

### Audio

Touch the AUDIO icon to display the active audio source page. Available sources are AM, FM, SXM, CD (if equipped), My Media, USB, Bluetooth, and AUX Input.

### Phone

Touch the PHONE icon to display the Phone main page. See *Bluetooth (Overview)* ⇨ 94 or *Bluetooth (Infotainment Controls)* ⇨ 94 or *Bluetooth (Voice Recognition)* ⇨ 98.

## Projection

Touch the PROJECTION icon to activate Android Auto™ or Apple CarPlay™ (if equipped) after a supported device is connected. See *Apple CarPlay and Android Auto* ⇨ 100.

## APPS

If equipped, in-vehicle Apps are available for download to the radio through the COLLECTION icon on the Home Page. Touch the COLLECTION icon to begin.

Downloading and using Apps requires Internet connectivity and a data plan which can be accessed through the vehicle's OnStar 4G LTE Wi-Fi hotspot, if equipped, or a mobile device hotspot. On most mobile devices, activation of the Wi-Fi hotspot is in the Settings menu under Mobile Network Sharing, Personal Hotspot, Mobile Hotspot, or similar.

Availability of Apps and OnStar 4G LTE Wi-Fi hotspot varies by vehicle and by country. For more information, see [my.cadillac.com/learn](http://my.cadillac.com/learn).

## NAV/ OnStar NAV

Touch the NAV icon to display the navigation map or OnStar® Turn-by-Turn Navigation. See *Using the Navigation System* ⇨ 56 or “OnStar Navigation” in the owner manual.

## TEXT

Touch the TEXT icon to display the Text Messaging main page. See *Text Messaging* ⇨ 99.

## Settings

Touch the SETTINGS icon to display the Settings menu. See *Settings* ⇨ 102.

## Weather

If equipped, touch the WEATHER icon to display the Weather main page. See “SiriusXM Travel Link (If Equipped)” under *Satellite Radio* ⇨ 16.

## OnStar

If equipped, touch the ONSTAR icon to display the OnStar main page and start OnStar voice recognition. See “OnStar Overview” in the owner manual.

## Climate

Touch the CLIMATE icon to display the Climate main page. See “Dual Automatic Climate Control System” in the owner manual.

## Rear Climate

If equipped, touch the R. CLIMATE icon to display the Rear Climate main page. See “Rear Climate Control System” in the owner manual.

## Video

If equipped, touch the VIDEO icon to display the video Rear Seat Infotainment (RSI) main page. See *Rear Seat Infotainment (RSI) System* ⇨ 27 or *Rear Seat Infotainment (RSI) System (Platinum)* ⇨ 45.



## Applications Tray



The applications tray is at the top center of the screen. It can have three to five applications.

To add an application from the Home Page to the applications tray:

1. Touch and hold any icon on the Home Page to enter edit mode.
2. Drag the icon to the applications tray.

To remove an item from the applications tray, drag the icon from the applications tray back to the Home Page.

Adding or removing applications from the applications tray will not remove them from the Home Page.

## Infotainment Display Buttons

Infotainment display buttons show on the screen when available. When a function is unavailable, the button may gray out. When a function is selected, the button may highlight.

### Proximity Sensing

The infotainment system uses proximity sensing. When enabled, certain screen buttons and features will become visible when a hand approaches the screen. When the hand is removed, these features fade. Proximity sensing can be disabled in the Settings applications in the Display menu options.


### Haptic Feedback

Haptic feedback is a pulse that occurs when a button is touched on the screen or when buttons below the screen are pressed.


## Infotainment Gestures

Use the following finger gestures to control the infotainment system.


### Touch/Tap

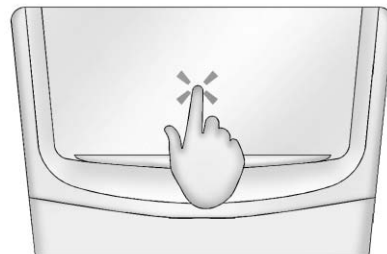


Touch/Tap is used to select a button or option, activate an application, or change the location inside a map.

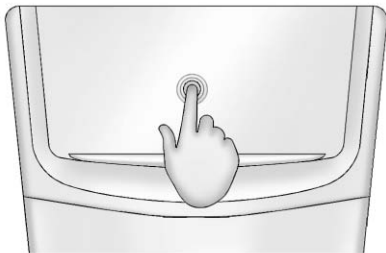**Touch and Hold**


Touch and hold can be used to start another gesture, or to move or delete an application.

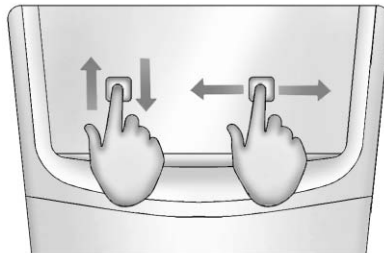**Drag**


Drag is used to move applications on the Home Page, or to pan the map. To drag the item, it must be held and moved along the screen to the new location. This can be done up, down, right, or left.

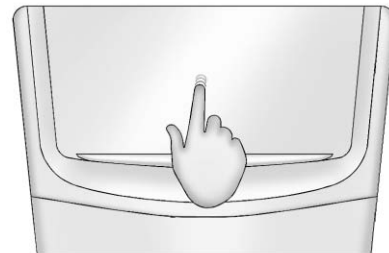**Nudge**


Nudge is used to move items a short distance on a list or a map. To nudge, hold and move the selected item up or down to a new location.

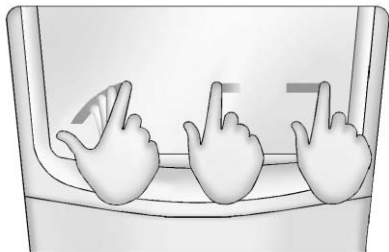**Fling or Swipe**

Fling or swipe is used to scroll through a list, pan the map, or change page views. Do this by placing a finger on the screen then moving it rapidly up and down or right and left.

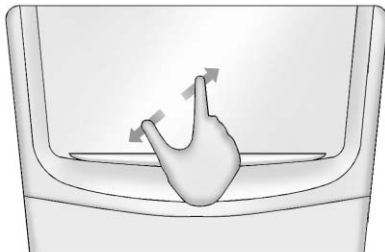**Spread**

Spread is used to zoom in on a map, certain images, or a web page. Place finger and thumb together on the screen, then move them apart.

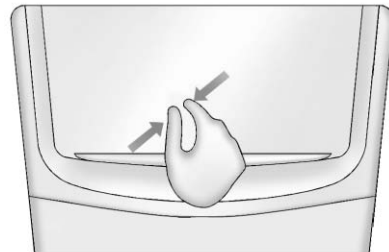**Pinch**

Pinch is used to zoom out on a map, certain images, or a web page. Place finger and thumb apart on the screen, then move them together.

**Cleaning High Gloss Surfaces and Vehicle Information and Radio Displays**

For vehicles with high gloss surfaces or vehicle displays, use a microfiber cloth to wipe surfaces. Before wiping the surface with the microfiber cloth, use a soft bristle brush to remove dirt that could scratch the surface. Then use the microfiber cloth by gently rubbing to clean. Never use window

cleaners or solvents. Periodically hand wash the microfiber cloth separately, using mild soap. Do not use bleach or fabric softener. Rinse thoroughly and air dry before next use.

## **Software Updates**

### **Over-the-Air Software Updates**

See *Settings* ⇨ 102 for details on software updates.

## Radio

### AM-FM Radio

#### Playing the Radio

While on the audio main page, the available sources are AM, FM, SXM (if equipped), CD (if equipped), My Media, USB, Bluetooth, and AUX Input.

- Touch the RADIO screen button to scroll through AM, FM, and SXM (if equipped).
- Touch the MEDIA screen button to scroll through CD (if equipped), My Media, USB, Bluetooth, and AUX Input.

#### Infotainment System Settings

Touch the RADIO screen button to access broadcast sources.

Touch the MENU screen button to display the following menus:

#### Tone Settings:

- Bass, Midrange, and Treble: Touch + or - to adjust.

- Surround Control: If equipped, press + or - to adjust the volume of the seat speakers.
- Balance: Touch < or > for more sound from the left or right speakers. The middle position balances the sound between the left and right speakers.
- Fade: Touch ^ or v for more sound from the front or rear speakers. The middle position balances the sound between the front and rear speakers.


**EQ:** If equipped with a Bose sound system, the Equalizer settings are selected through the tone settings menu. Touch the left or right arrows to cycle through the EQ options. The available choices are Custom or Talk.

#### DSP Modes (If Equipped):

- Bose® Centerpoint® surround sound system have four DSP modes:
  - Normal: Adjusts the audio to provide the best sound for all seating positions.

- Driver: Adjusts the audio to provide the best sound for the driver.
- Rear: Adjusts the audio to provide the best sound for the rear seat occupants.
- Centerpoint: Turns on Bose Centerpoint surround technology. This setting creates a surround sound listening experience from nearly any audio source: existing stereo, CD collection, satellite radio, and MP3 players. For more information on Bose Centerpoint surround technology, see [www.bose.com/centerpoint](http://www.bose.com/centerpoint).

**Categories :** Touch Categories under the Audio menu to access the categories list for AM-FM. The list contains names associated with the AM-FM channels. Touch a category name to display a list of channels for that category. Selecting a station from the list tunes the radio to that channel and returns the display to Now Playing.


**Auto Volume (If Equipped)** : This feature adjusts the volume based on vehicle speed. Select the level between Off, Low, Medium - Low, Medium, Medium - High, or High. Touch  to go back to the previous menu.


**Bose® AudioPilot® noise compensation technology (If Equipped)** : This feature adjusts the volume based on the noise in the vehicle and speed. When turned on, AudioPilot technology detects ambient noise and vehicle speed to continuously adjust many aspects of the audio signal so that your music will sound the same at a set volume level.

The options are On and Off.

This feature is most effective at lower radio volume settings where background noise can affect how well you hear the music being played through your vehicle's audio system. At higher volume settings, where the music is much louder than the background noise, there may be little or no adjustments by AudioPilot.


For more information on Bose AudioPilot noise compensation technology, see [www.bose.com/audiopilot](http://www.bose.com/audiopilot).

**HD Radio™ (If Equipped)** : For AM and FM only, touch to turn HD reception on or off. Touch  to go back to the previous menu.

**Update Station List** : For AM and FM only, touch to update the station list. Touch  to go back to the previous menu.

## Finding a Station

### Seeking a Station

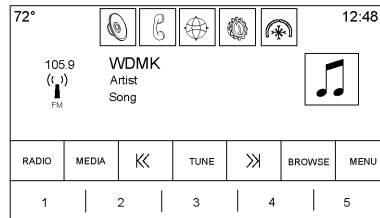


Touch << or >> to search for the previous or next strongest station.

## Tuning a Station


Touch the interaction selector SEEK screen button to switch to TUNE. Touch again to change back.

### Direct Tune

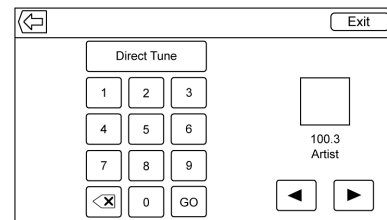

Access Direct Tune by touching the interaction selector TUNE screen button to bring up the keypad. Navigate up and down through all frequencies or directly enter a station using the keypad. When a new station is entered, the information about that station displays on the right side. This information will update with each new valid frequency tuned to.

The keypad will gray out entries that do not contribute to a valid frequency and will automatically place a decimal point within the frequency number, as needed.

A valid station will automatically tune to the new frequency but not close the direct tune display. Touch  or Exit screen buttons.

The tune arrows on the right side of the direct tune display tune through the complete station list one station step at a time per touch. A touch and hold advances 10 frequency steps per second.


Touch (X) to delete one character at a time. Touch and hold (X) to delete all characters.

In AM-FM modes, touch  $\lll$  or  $\ggg$  for the radio to go to the next or previous strong station. Touch Direct Tune to advance to the next or previous frequency step in AM or FM mode or directly enter or tune to the frequency on the keypad.

HD radio multicast stations cannot be tuned directly through the direct tune feature. Only the analog or

HD1 station can use that feature. Use the SEEK/TUNE button to adjust to the multicast stations.

## AM-FM Categories

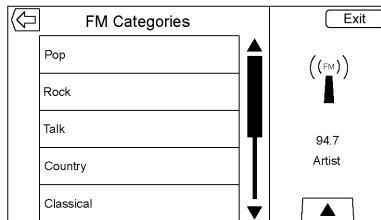

AM-FM Categories are available under the AM-FM audio menu. Touch AM-FM Categories to gain access to the AM-FM Categories list.

The categories list contains category names associated with AM-FM Channels. Selecting a given category name displays a list of channels for that category.

## Storing Radio Station Presets


Favorites are stored in the area at the bottom of the screen.

Up to 60 preset stations can be stored under the following:

**AM, FM, and SXM (if equipped) HD Radio Stations :** Touch and hold a favorite button to save the current station as a favorite. Touch a favorite button to recall a favorite station.


## Mixed-Audio Favorites

Favorites that can be stored include radio stations, navigation, applications, contacts, tone settings, artists, songs, albums, podcasts, etc.

72°										12:48				
< >														
100.3	104.3	105.1	106.7	95.5										
99.5	98.3	97.1	92.3	88.7										
92.3	101.1	93.1	93.9	108.1										
< >					●○○○○									

To scroll through the favorites:

- Drag up along the top of the favorites. To close the favorites, drag them down.

- Slide a finger to the right or left to scroll through each page of favorites. A  indicates which page is being viewed.

**Tone Settings :** While viewing the tone settings and lifting up the favorite buttons, touch and hold to store a tone setting. Touch a screen button in the favorite area to recall a favorite tone setting.



The number of favorites displayed is automatically adjusted by default, but can be manually adjusted in the Settings menu under Radio and then Number of Favorites Shown.

## HD Radio Technology

If equipped, HD Radio™ Technology is a free service with features such as static-free sound, more stations built onto the frequency such as HD2 and HD3, and on-screen information such as artist and song title.

## Channel Access

To access HD Radio channels:

1. Tune the radio to the channel. If the channel is broadcasting HD Radio Technology, the radio will automatically switch to digital audio, indicated with an HD logo if HD Radio is turned on.
2. Touch  or  to tune to the previous or next HD Radio channel.

There may be a delay before the channel starts playing.

The HD Radio channel number is indicated next to the logo.

HD Radio channels can be saved as favorites. Songs can be tagged for download.

When connected to iTunes®, the Sync button on the device may need to be touched to transfer the tags to iTunes.

See *AM-FM Radio* ⇨ 12 or *USB Port* ⇨ 20.

For a list of all channels, see [www.hdradio.com](http://www.hdradio.com).

## Troubleshooting

A few cases for troubleshooting delayed, weak, or loss of HD Radio signals are:

**Digital Audio Delay :** Wait for the signal to process. This can take several seconds.

**Volume Change, Audio Skip, Echo, Digital Audio Lost :** Channel signal strength may be weak or the channel is out of range. Verify proper reception on another channel.

If the HD Radio signal loses reception while listening to channel HD1, the radio will go back to the main non-HD Radio channel.


If the HD Radio signal loses reception while listening to channels HD2 to HD8, the radio mutes until the signal can be recovered or until the channel is changed.

HD can be disabled if driving in a weak signal area. Touch Menu from the AM/FM screens, then touch HD Radio to toggle HD on and off.



## Satellite Radio

### SiriusXM Satellite Radio Service

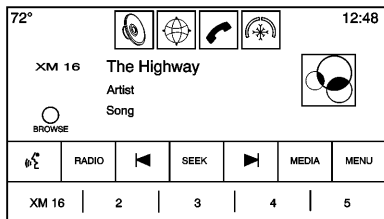

If equipped, vehicles with a valid SiriusXM satellite radio subscription can receive SiriusXM programming.

SiriusXM satellite radio has a wide variety of programming and commercial-free music, coast to coast, and in digital-quality sound. In the U.S., see [www.siriusxm.com](http://www.siriusxm.com) or call 1-888-601-6296. In Canada, see [www.siriusxm.ca](http://www.siriusxm.ca) or call 1-877-438-9677.

When SiriusXM is active, the station name, number, category name, song title, and artist display on the screen.

### SiriusXM Menu

Pressing the MENU screen button may display the following:

**Tone Settings :** Touch + or - to adjust the tone settings. See *AM-FM Radio* ⇨ 12.

**TuneSelect :** For SiriusXM only, this feature allows alerts to be set for artists or songs that are played on any other channel. Press TuneSelect on the menu during playback of a desired song or artist to set an alert. Press Manage TuneSelect to turn the alerts On and Off or manage the saved selection of Artists or Songs. To unselect an alert, press the Song or Artist. To delete an alert, press -. Touch ↶ to go back to the previous menu.

**Auto Volume (If Equipped) :** This feature adjusts the volume based on the vehicle speed. See *AM-FM Radio* ⇨ 12.

**Bose AudioPilot noise compensation technology (If Equipped) :** This feature adjusts the volume based on the noise in the vehicle and speed. See *AM-FM Radio* ⇨ 12.

## Radio Reception

Unplug electronic devices from the accessory power outlets if there is interference or static in the radio.

### FM

FM signals only reach about 16 to 65 km (10 to 40 mi). Although the radio has a built-in electronic circuit that automatically works to reduce interference, some static can occur, especially around tall buildings or hills, causing the sound to fade in and out.

### AM

The range for most AM stations is greater than for FM, especially at night. The longer range can cause station frequencies to interfere with each other. Static can also occur when things like storms and power lines interfere with radio reception. When this happens, try reducing the treble on the radio.

## SiriusXM Satellite Radio Service

If equipped, SiriusXM Satellite Radio Service provides digital radio reception. Tall buildings or hills can interfere with satellite radio signals, causing the sound to fade in and out. In addition, traveling or standing under heavy foliage, bridges, garages, or tunnels may cause loss of the SiriusXM signal for a period of time.

## Cell Phone Usage

Cell phone usage, such as making or receiving phone calls, charging, or just having the phone on may cause static interference in the radio. Unplug the phone or turn it off if this happens.

## Backglass Antenna

The AM-FM antenna is integrated with the rear window defogger in the rear window. Do not scratch the inside surface or damage the lines in the

glass. If the inside surface is damaged, it could interfere with radio reception. For proper radio reception, the antenna connector needs to be properly attached to the post on the glass.

If attaching a cell phone antenna to the glass, attach it between the grid lines.

### Caution

Using a razor blade or sharp object to clear the inside rear window can damage the rear window antenna and/or the rear window defogger. Repairs would not be covered by the vehicle warranty. Do not clear the inside rear window with sharp objects.

### Caution

Do not apply aftermarket glass tinting with metallic film. The metallic film in some tinting materials will interfere with or distort the incoming radio reception. Any damage caused to the backglass antenna due to metallic tinting materials will not be covered by the vehicle warranty.

## Multi-Band Antenna

The roof antenna is for OnStar, SiriusXM Satellite Radio (U.S. and Canada only), and GPS (Global Positioning System). Keep clear of obstructions for clear reception. If the vehicle has a sunroof, and it is open, reception can also be affected.

## Audio Players

### Avoiding Untrusted Media Devices

When using media devices such as CDs, DVDs, Blu-Ray Discs®, SD cards, USB drives, and mobile devices, consider the source. Untrusted media devices could contain files that affect system operation or performance. Avoid use if the content or origin cannot be trusted.

### CD Player

If equipped, the player can be used for CD and MP3 audio.

The system is capable of playing:

- Most audio CDs
- CD-R
- CD-RW
- MP3 or unprotected WMA formats

When playing any compatible recordable disc, the sound quality can be reduced due to disc quality, the method of recording, the quality of the music that has been recorded, or the way the disc has been handled.

There can be increased skipping, difficulty in finding tracks, and/or difficulty in loading and ejecting. If these problems occur, check the disc for damage or try a known good disc.


To avoid damage to the CD player:

- Do not use scratched or damaged discs.
- Do not apply labels to discs. The labels could get caught in the player.
- Insert only one disc at a time.
- Keep the loading slot free of foreign materials, liquids, and debris.
- Use a marking pen to label the top of the disc.

### Loading and Ejecting Discs

To load a disc:

1. Turn the vehicle on.
2. Insert a disc into the slot, label side up. The player pulls it in the rest of the way. If the disc is damaged or improperly loaded, there is an error and the disc ejects.

Press  on the faceplate to eject a disc from the CD player. If the disc is not removed within a short period of time, it is automatically pulled back into the player.

### Playing an Audio MP3 or CD

Touch the MEDIA screen button until CD Audio view displays, touch to select.

On the CD main page, a track number displays at the beginning of each track, or Song, Artist, and Album information displays when available.

Use the following controls to play the disc:

⏮:

- Touch to seek to the beginning of the current or previous track. If the track has been playing for less than 10 seconds, it seeks to the previous track. If longer than five seconds, the current track starts from the beginning.
- Touch and hold to fast reverse through a track. Release the button to return to playing speed. Elapsed time displays.

⏭:

- Touch to seek to the next track.
- Touch and hold to fast forward through a track. Release the button to return to playing speed. Elapsed time displays.

When a Blu-Ray<sup>®</sup> or DVD disc, if equipped, is loaded, and the CD button is touched, a message displays, "Go to video application to play DVD/BD."

## Error Messages

If Disc Error displays and/or the disc comes out, it could be for one of the following reasons:

- The disc has an invalid or unknown format.
- The road is very rough. Try the disc again when the road is smoother.
- The disc is dirty, scratched, wet, or upside down.
- The air is very humid. Try the disc again later.
- There was a problem while burning the disc.
- The label is caught in the CD player.

If Disc Player Error displays, it could be for one of the following reasons:

- The player temperature is too high.
- There are load or eject errors.

If the CD is not playing correctly, for any other reason, try a known good CD.

If any error continues, contact your dealer.

## MP3/CD Menu

Touch the MENU screen button while that source is active to access the menu.

Touch any of the following buttons on the MP3/CD Menu:

**Shuffle** : Touch to play the tracks randomly. Touch again to stop shuffle.

**Auto Volume (If Equipped)** : This feature adjusts the volume based on the speed of the vehicle. See *AM-FM Radio* ⇨ 12.

**Bose AudioPilot noise compensation technology (If Equipped)** : This feature adjusts the volume based on the noise in the vehicle and speed. See *AM-FM Radio* ⇨ 12.

**Tone Settings** : Touch + or - to adjust Bass, Midrange, Treble, or Surround (if equipped). See *AM-FM Radio* ⇨ 12.

## MP3 Guidelines

- Sampling rate: 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, and 48 kHz.

- Bit rates supported: 8, 16, 24, 32, 40, 48, 56, 64, 80, 96, 112, 128, 144, 160, 192, 224, 256, and 320 kbps.
- Recorded on a CD-R or CD-RW.

### **MP3 Folder Information**

Touch anywhere between the top applications tray or the bottom menu to display the browse screen.

**Root Directory :** To access, touch anywhere in the center area of the screen. The root directory is treated as a folder. All files contained directly under the root directory are accessed prior to any root directory folders.

**No Folder :** When the CD only contains compressed audio files without any folders or playlists, all files are under the root folder.

**File System and Naming :** The song titles, artists, albums, and genres are taken from the file's ID3 tag and are only displayed if present in the tag. If a song title is not present in the ID3 tag, the radio displays the file name as the track name.

### **USB Port**

Audio from videos stored on a USB device may be listened to while the vehicle is in a forward gear. Videos can be watched while the vehicle is in P (Park). Use play/pause or next/previous to control the video or touch the browse screen to display a list of the current video filters.

This vehicle has two USB ports in the center console. These ports are for data and charging. There are also two USB ports on the rear seat trim panel. These rear seat ports are for charging only.

If equipped with Rear Seat Infotainment (RSI), there may be two USB ports in the rear media console storage area.

### **Playing from a USB**

A USB mass storage device can be connected to the USB port.

Audio extensions supported by the USB are:

- MP3
- WMA

- AAC
- OGG
- AIFF
- 3GPP

### **Gracenote®**

When plugging in a USB device, Gracenote service builds voice tags for music. Voice tags allow artists, albums with hard to pronounce names, and nicknames to be used to play music through voice recognition.

While indexing, infotainment features are available.

### **My Media Library**

My Media is only available when more than one indexed device is connected. It allows access to content from all indexed media sources. Touch the MEDIA screen button to scroll through the options until My Media is selected. Touch anywhere in the central area of the screen to browse the content.

## USB MP3 Player and USB Drives

The USB MP3 players and USB drives connected must comply with the USB Mass Storage Class specification (USB MSC).

To play a USB device:

1. Connect the USB.
2. Touch MEDIA until the connected device is shown.

Use the following when playing an active USB source:

▶ : Touch to play the current media source.

⏸ : Touch to pause play of the current media source.

⏮ :

- Touch to seek to the beginning of the current or previous track. If the track has been playing for less than 10 seconds, the previous track plays. If playing longer than five seconds, the current track restarts.

- Touch and hold to reverse quickly through playback. Release to return to playing speed. Elapsed time displays.

⏭ :

- Touch to seek to the next track.
- Touch and hold to advance quickly through playback. Release to return to playing speed. Elapsed time displays.

🔀 : Touch the shuffle icon on the interaction selector to shuffle through the available media.

🔁 : Touch the replay icon on the interaction selector to display the time bar. Move the time bar to interact with the currently playing song.

**TONE** : Touch TONE on the interaction selector to access the Tone Settings screen. Set the Bass, Midrange, Treble, Balance, and Fade.

## USB Menu

Touch Menu to display the USB menu. The following may be available:

**Shuffle** : Touch to play the tracks randomly. Touch again to stop shuffle.

**Tone Settings** : Touch + or - to adjust Bass, Midrange, Treble, or Surround (if equipped). See *AM-FM Radio* ⇨ 12.

**Auto Volume (If Equipped)** : This feature adjusts the volume based on vehicle speed.. See *AM-FM Radio* ⇨ 12.

**Bose AudioPilot noise compensation technology (If Equipped)** : This feature adjusts the volume based on the noise in the vehicle and speed. See *AM-FM Radio* ⇨ 12.

## USB Browse Menu

Touch the BROWSE screen button to view the browse menu and the following options are displayed along the bottom of the screen:

**Playlists:**

Supported Playlist extensions are: m3u, pls, wpl, asx, b4s, and xspf.

1. Touch to view the playlists stored on the USB.
2. Select a playlist to view the list of all songs in that playlist.
3. Select a song from the list to begin playback.

**Artists:**

1. Touch to view the list of artists stored on the USB.
2. Select an artist name to view a list of all albums by the artist.
3. To select a song, press All Songs or press an album and then select a song from the list.

**Albums:**

1. Touch to view the albums on the USB.
2. Select the album to view a list of all songs on the album.
3. Select a song from the list to begin playback.

**Songs:**

1. Touch to display a list of all songs on the USB.
2. To begin playback, select a song from the list.

**Genres:**

1. Touch to view the genres on the USB.
2. Select a genre to view a list of artists.
3. Select an artist to view albums by that artist.
4. Select an album to view songs on the album.
5. Select a song to start playback.

Podcasts, Composers, Audiobooks, Videos, and Folder View are shown when More is selected from the bottom of the screen.

**Podcasts:**

1. Touch to view the podcasts on the USB.
2. Select Podcast to get a list of podcast episodes.

**Composers:**


1. Touch to view the composers on the USB.
2. Select Composer to view a list of albums by that composer. Select an album or all songs to view a list of songs.
3. Select a song from the list to begin playback.

**Audiobooks:**

1. Touch to view the audiobooks stored on the device. Select an audiobook to get a list of chapters.
2. Select the chapter from the list to begin playback.

**Folder View (If Equipped):**

1. Touch to view the directories on the USB.
2. Select a folder to view a list of all files.
3. Select a file from the list to begin playback.

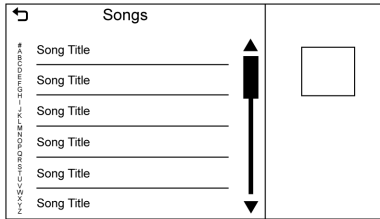

When a list of songs, albums, artists, or other types of media display, a vertical keyboard appears on one side of the list and a scroll bar on the other side. When using the vertical keyboard, touch the beginning character of the desired name to display the zoom bubble of that character. Release the finger from the touch screen and the zoom bubble disappears.

Touch the scroll bar to move the list up and down.

### File System and Naming

File systems supported by the USB are:

- FAT32
- NTFS
- HFS+

The songs, artists, albums, and genres are taken from the file's song information and are only displayed if present. The radio displays the file name as the track name if the song information is not available.

### Supported Apple® Devices

To view supported devices, see [my.cadillac.com/learn](http://my.cadillac.com/learn).

### Loss of Audio

Do not pair the Bluetooth of an iPhone that is connected and using the iPod feature under vehicle media sources. If an attempt to pair the Bluetooth of the same connected phone is made, the system will automatically mute the iPhone audio.

If there is a loss of audio, playback can be resumed by changing the audio flow from Bluetooth to USB cable.

Source USB from the Audio MEDIA screen button to resume playback.

Other phones such as the Droid phones may have a similar reaction.

### Bluetooth Streaming Audio and Voice Recognition

See *Bluetooth Audio* ⇨ 25 for information on using voice recognition with Bluetooth streaming audio.

Make sure all devices have the latest software downloaded.

### Storing and Recalling Media Favorites

To recall media favorites, touch the Media screen button to access the Media main page. Touch and hold to display a list of media types. Select from the list.

The media types that may display are:

**Genres :** Touch to store the current genre as a favorite. Touch a screen button in the favorite area to recall a favorite genre. The first song of the genre begins to play.

**Artists :** Touch to store the current artist as a favorite. Touch a screen button in the favorite area to recall a favorite artist. The first song in the artist list begins to play.



**Albums** : Touch to store the current album as a favorite. Touch a screen button in the favorite area to recall a favorite album. The first song in the album list begins to play.

**Playlists** : Touch to store the current playlist as a favorite. Touch a screen button in the favorite area to recall a favorite playlist. The first song in the playlist begins to play.

**Songs** : Touch to store the current song as a favorite. Touch a screen button in the favorite area to recall a favorite song.

**Podcasts or Podcast Episode** : Touch and hold a screen button to store the current podcast as a favorite. Touch a screen button in the favorite area to recall a favorite podcast or podcast episode. The podcast or podcast episode begins to play.

**Audiobooks** : Touch and hold a screen button to save the current audiobook as a favorite. Touch a screen button in the favorite area to recall a favorite audiobook. The first chapter in the audiobook begins to play.

**Videos** : Touch and hold a screen button to store the current video as a favorite. Touch a screen button in the favorite area to recall a favorite video. The first episode in the video begins to play. Not all formats are supported.

### **Media Playback and Mute**

USB playback will be paused if the system is muted. If the steering wheel mute button is pressed again, playback will resume.

If the source is changed while in mute, playback resumes and audio will unmute.

### **Auxiliary Jack**

This vehicle has an auxiliary input jack in the center console under the armrest and in the rear media console if equipped with Rear Seat Infotainment (RSI). Possible auxiliary audio sources include:

- Laptop computer
- Audio music player

This jack is not an audio output. Do not plug headphones into the auxiliary input jack. Set up an auxiliary device while the vehicle is in P (Park).

Connect a 3.5 mm (1/8 in) cable from the auxiliary device to the auxiliary input jack. When a device is connected, the system can play audio from the device over the vehicle speakers.

If an auxiliary device has already been connected, but a different source is currently active, touch the MEDIA screen button to scroll through audio source screens, until AUX Input source screen displays.

Shuffle is not available in the AUX source menu.

## Bluetooth Audio

If equipped, music may be played from a paired Bluetooth device. See *Bluetooth (Overview)* ⇨ 94 or *Bluetooth (Infotainment Controls)* ⇨ 94 or *Bluetooth (Voice Recognition)* ⇨ 98 for help pairing a device.

Volume and song selection may be controlled by using the infotainment controls or the phone/device.

If Bluetooth Audio is selected and no volume is present, check the volume setting on both your phone/device and the infotainment system.

Music can be launched by touching AUDIO on the Home Page.


To play music via Bluetooth:

1. Power on the device, and pair to connect the device.
2. Once paired, go into the audio application from the Home Page or via the applications tray. Select MEDIA until Bluetooth displays.

## Bluetooth Audio Menu

Touch the MENU screen button to display the Bluetooth Audio menu. The following may be available:

**Tone Settings** : Touch + or - to adjust Bass, Midrange, Treble, or Surround (if equipped). See *AM-FM Radio* ⇨ 12.


Touch  to go back to the previous menu.

**Auto Volume (If Equipped)** : This feature adjusts the volume based on the speed of the vehicle. See *AM-FM Radio* ⇨ 12.

**Bose AudioPilot noise compensation technology (If Equipped)** : This feature adjusts the volume based on the noise in the vehicle and speed. See *AM-FM Radio* ⇨ 12.

**Manage Bluetooth Devices** : Touch to go to the Bluetooth page to add or delete devices or to pair.

When selecting Bluetooth audio, the radio may not be able to launch the audio player on the connected device to start playing. When the vehicle is not moving, use the phone to begin playback.

All devices launch audio differently. When selecting Bluetooth audio as a source, the radio may show as paused on the screen. Press play on the device or touch  on the screen to begin playback.

Some phones support sending Bluetooth music information to display on the radio. When the radio receives this information, it will check to see if any is available and display it. For more information about supported Bluetooth features, see [www.gm.com/bluetooth](http://www.gm.com/bluetooth).

## OnStar System

### **OnStar 4G LTE**



If equipped with OnStar 4G LTE, up to seven devices, such as smartphones, tablets, and laptops, can be connected to high-speed Internet through the vehicle's built-in Wi-Fi hotspot.

1-888-4-ONSTAR to connect to an OnStar Advisor for assistance. See [www.onstar.com](http://www.onstar.com) for vehicle availability, details, and system limitations. Services and connectivity may vary by make, model, year, carrier, availability, and conditions. 4G LTE service is available in select markets. 4G LTE performance is based on industry averages and vehicle systems design. Some services require a data plan.

## Rear Seat Infotainment

### Rear Seat Infotainment (RSI) System

If equipped, the system includes a Blu-ray/DVD/CD player, two USB ports, HDMI/MHL input, wireless headphones, and a remote control.

The remote control is used to select the same or a different source for each screen from the rear seats.

Video can be viewed from the front by touching the Video screen icon, if the vehicle is in P (Park). Audio will be heard over the speakers. If another screen icon is selected, the video on the rear screen will continue to play but the audio on the speakers will change to the source selected.

To resume play of the video where it left off, Pseudo Resume must be on. See "Player Setup BD/DVD" later in this section.

The RSI system may not operate properly until the temperature is above  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ) and below  $55^{\circ}\text{C}$  ( $131^{\circ}\text{F}$ ).

### System Operation

The video screens are overhead in the second or third row (if equipped).



To use:

1. Press the release button in front of the overhead screen. Do not pull on the sides of the screen.



2. Move the screen to the viewing position. Remove the remote from the storage location to use.

### Caution

When storing the remote, place it in the storage area with the buttons facing toward you or damage to the screen could occur.

3. Opening a screen will turn the system on. If the screens are open with the system off, press the power button on the remote to turn the system on.

The system can also be turned on from the front infotainment system by touching the VIDEO icon and then touching the On/Off button.

If RSI audio is desired without video being displayed, stow the display in the closed position.

To turn the audio off, press the power button on the remote or press the On/Off button on the front infotainment Video page.

Push the video screen into the locked position when it is not in use. The screen turns off automatically.

### Caution

Avoid directly touching the video screen, as damage may occur.


## Sources

Sources include AM, FM, SXM (if equipped), HDMI/MHL, CD/DVD/Blu-Ray, and USB.

## Menus and Features


### AM/FM Menu

Press RADIO on the remote control, then select AM or FM.

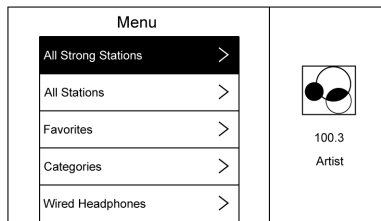


Press MENU on the remote control to select All Strong Stations, All Stations, Favorites, Categories, Wired Headphones, or other RSI functions.

Only one tuner source may be active at a time.

To close, press MENU or  (Back), or wait for the time out.


### SiriusXM Menu (If Equipped)

Press RADIO on the remote control, then select SXM.

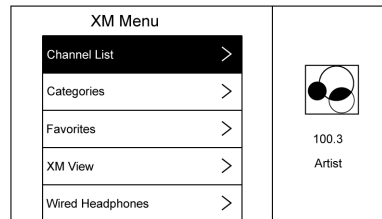


Touch Menu to select Channel List, Categories, Favorites, SXM View, Wired Headphones, or other RSI functions.

Only one tuner source may be active at a time.

To close, press MENU or  (Back), or wait for the time out.

### Disc Menu BD (Blue-Ray Disc)

With a Blu-Ray disc in the player, press MEDIA on the remote control and then select Blue-Ray.

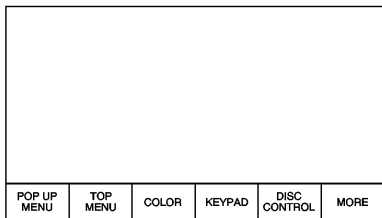

Press MENU on the remote control once to display menus based on the media.

Choose from POP UP MENU (BD Only), TOP MENU, COLOR, KEYPAD, DISC CONTROL, and MORE (SETTINGS, PREVIOUS, NEXT, STILL OFF).


To close, press MENU or (Back), or wait for the time out.

### Disc Menu DVD

Press MENU on the remote control once to select from TOP MENU, KEYPAD, STOP DISC, PHOTO, and SETTINGS.

To close, press MENU or (Back), or wait for the time out.

### CD Menu

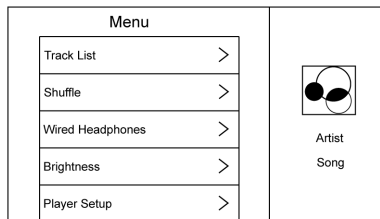

Select from:

- Track List
- Shuffle
- Disc Information (if available)
- Wired Headphones
- Brightness
- Player Setup: Audio Compression, Auto Enter (if available)
- Title Search (if available)
- Software Information

If no disc is present, not all choices are available.

To close, press MENU or (Back), or wait for the time out.


### Pop Up Menu (BD Only)

Select to display the on-screen menu options. To exit the Pop Up menu, make a selection or wait for the timeout. When the Pop Up menu is opened, the overlay/interaction selector menu will be closed.

### Top Menu BD/DVD

Select to display the DVD or BD menu. Make a selection to exit the Top menu. TOP MENU is not available for BDAV, DVD-VR, and AVCREC discs.


### Color (BD Only)

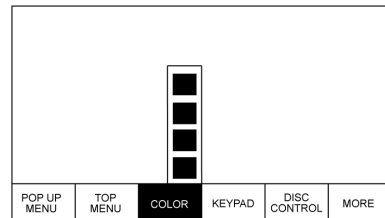


Select COLOR to display the four color button options: blue, yellow, red, and green. Highlight a color and press ENTER and the appropriate action will be carried out. Press (Back)

or MENU, or wait for the time out to close the menu. Press the down arrow on the yellow color to keep the overlay menu up, but close the color menu. The color menu is disc dependent; selecting colors for discs that do not support this feature will have no function.

### Keypad BD/DVD

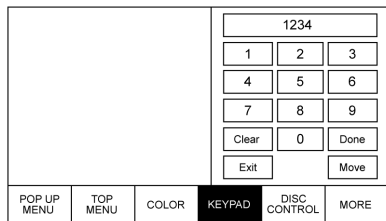



Select to display. To close, press  (Back) or MENU, wait for the menu to time out, or press the down arrow from the 0 or Done buttons. The keypad is disc dependent and may have no function.

The keypad input is limited to four digits.

Select Clear to clear one digit at a time. Press and hold to clear all entered digits.

### Disc Control (BD/AV and BDMV Only)

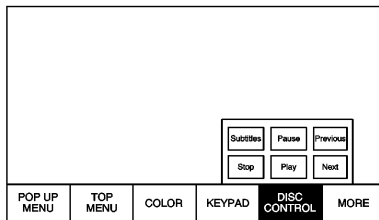

Select to display the disc options Subtitles, Play, Pause, Next, Previous, and Stop. Press  (Back) or MENU, or wait for the time out to close. Press the down arrow from Stop, Play, or Next to keep the overlay up but close the menu. The Disc Control menu is disc dependent and may have no function.

### Stop Disc (DVD Only)

Select to close the overlay menu. Touch Menu on the screen to open the Disc Stopped menu.


Select from:

- Resume Playback: Returns to the current position on the disc and resumes play.
- Title Search (if available)
- Restart Disc
- Screen Mode
- Wired Headphones
- Brightness
- Player Setup: Audio Compression, Auto Enter (if available)
- Software Information

Not all options are available while the disc is playing.


Browse Media (AVCREC, BDAV, DVD-A, DVD-VR discs only) allows the media on the disc to be searched in a list format.

## More

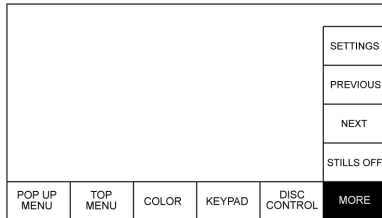


The MORE submenu includes SETTINGS and items related to still pictures.

### Previous/Next/Stills Off

Select PREVIOUS to turn off or advance to the prior still picture. NEXT advances to the next picture. Select STILLS OFF to return to the home still, if available. Press  (Back) or MENU, or wait for the time out to close the menu. Press the down arrow on the bottom option to close the next still pop-up. The still picture feature is disc dependent.

This feature can also be accessed by selecting Photo on the DVD Disc menu.

## Settings BD/DVD

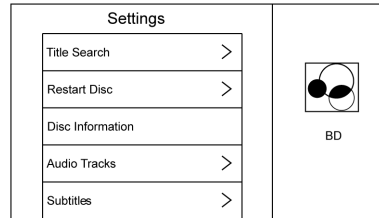


Select to access:

- Resume Playback: Returns to the current position on the disc and resumes play.
- Browse Media (BD-DAV, AVCREC, DVD-A, DVD-VR discs only): Allows browsing by Video List or Playlist.
- Title Search (AVCHD, DVD-V, BDMV only): Allows the titles provided by the disc to be searched. Select this option to bring up a keypad to search for specific titles.
- Top Menu
- Restart Disc: Restarts the disc from the beginning.
- Disc Information (if available)
- Audio Tracks
- Subtitles
- Angle (BDMV, DVD-V, DVD-A only): Select an angle by using the up and down arrows to highlight the option and press ENTER or the right arrow.
- Screen Mode: Adjusts the framing on the RSI display. Select Normal, Wide, or Zoom. Screen Mode only applies to video sources and should be maintained if the disc is ejected.
- Wired Headphones: Use to listen to audio on the wired headphones. The headphone audio plays depending on which screen is selected. The default is screen 1 audio.
- Brightness: Increase the brightness by using the up or right arrow and decrease the brightness by using the down or left arrow. Each screen brightness can be adjusted separately.



- Player Setup: See "Player Setup BD/DVD" following.
- Software Information


### Player Setup BD/DVD

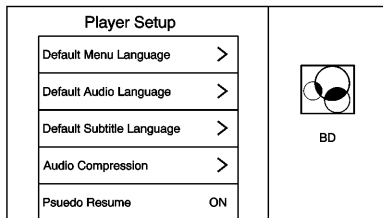

Player Setup may include:

- **Default Menu Language:** With no disc inserted, select from a list of languages or enter a language code.
- **Default Audio Language:** With no disc inserted, select from a list of languages or enter a language code.
- **Default Subtitle Language:** With no disc inserted, select from a list of languages or enter a language code.

- **Audio Compression:** When on, the RSI will attempt to reduce the difference between the audio highs and lows. CUSTOM will increase dialog volume.
- **Pseudo Resume:** When on, the RSI will attempt to resume play of the video where it left off after the vehicle has been turned off. This can be turned on or off.
- **Auto Enter:** When on, the RSI will attempt to start play of the video when the disc is inserted. This feature can be turned on or off. Not all discs support this feature.
- **Audio Channel (AVCREC, DBAV, DVD-VR discs only)** contains: Stereo, Left Mono, and Right Mono. Audio Channel is available from the Settings menu. Default will be determined by the disc.
- **Format Internal User Memory:** Only shown when no disc is inserted. To format internal user memory, select OK. A message and the activity indicator display. A message displays when the

format is complete. To close, press  (Back) or MENU, or wait for the time out.

### Errors

Errors can occur if the local storage area has been broken or if the ignition is turned off during formatting. Closing the screen during formatting will not interrupt it. If the screen is opened again, the current state of format will be displayed. If an error occurs, the Error screen will display when the ignition is turned on.

### Enter Language Code

Enter the desired language code.

Language/Code		User Code
Japanese	JPN	7465
English	ENG	6978
French	FRA	7082
German	DEU	6869
Italian	ITA	7384
Spanish	SPA	6983
Dutch	NLD	7876

Russian	RUS	8285
Chinese	ZHO	9072
Korean	KOR	7579
Greek	ELL	6976
Afar	AAR	6565
Abkhazian	ABK	6566
Afrikaans	AFR	6570
Amharic	AMH	6577
Arabic	ARA	6582
Assamase	ASM	6583
Aymara	AYM	6589
Azerbaijani	AZE	6590
Bashkir	BAK	6665
Byelorussian	BEL	6669
Bulgarian	BUL	6671
Bihari	BIH	6672
Bislama	BIS	6673
Bengali	BEN	6678
Tibetan	BOD	6679
Breton	BRE	6682

Catalan	CAT	6765
Corsican	COS	6779
Czech	CES	6783
Welsh	CYM	6789
Danish	DAN	6865
Bhutani	DZO	6890
Esperanto	EPO	6979
Estonian	EST	6984
Basque	EUS	6985
Persian	FAS	7065
Finnish	FIN	7073
Fiji	FIJ	7074
Faroese	FAO	7079
Friesian	FRY	7089
Irish	GLE	7165
Scots-Gaelic	GLA	7168
Galician	GLG	7176
Guarani	GRN	7178
Gujarati	GUJ	7185
Hausa	HAU	7265

Hindi	HIN	7273
Croatian	HRV	7282
Hungarian	HUN	7285
Armenian	HYE	7289
Interlingua	INA	7365
Interlingue	ILE	7369
Inupiak	IPK	7375
Indonesian	IND	7368
Icelandic	ISL	7383
Hebrew	HEB	7269
Yiddish	YID	8973
Javanese	JAV	7487
Georgian	KAT	7565
Kazakh	KAZ	7575
Greenlandic	KAL	7576
Cambodian	KHM	7577
Kannada	KAN	7578
Kashmiri	KAS	7583
Kurdish	KUR	7585
Kirghiz	KIR	7589


Latin	LAT	7665
Lingala	LIN	7678
Laothian	LAO	7679
Lithuanian	LIT	7684
Latvian	LAV	7686
Malagasy	MLG	7771
Maori	MRI	7773
Macedonian	MKD	7775
Malayalam	MAL	7776
Mongolian	MON	7778
Moldavian	MOL	7779
Marathi	MAR	7782
Malay	MSA	7783
Maltese	MLT	7784
Burmese	MYA	7789
Nauru	NAU	7865
Nepali	NEP	7869
Norwegian	NOR	7879
Occtian	OCI	7967
Oromo	ORM	7977

Oriya	ORI	7982
Panjabi	PAN	8065
Polish	POL	8076
Pashto, Pushto	PUS	8083
Portuguese	POR	8084
Quechua	QUE	8185
Rhaeto-Romance	ROH	8277
Kirundi	RUN	8278
Romanian	RON	8279
Kinyarwanda	KIN	8287
SanSkrit	SAN	8365
Sindhi	SND	8368
Sangho	SAG	8371
Serbo-Croatian	SCR	8372
Singhalese	SIN	8373
Slovak	SLK	8375
Uzbek	UZB	8590
Vietnamese	VIE	8673
Volapuk	VOL	8679
Wolof	WOL	8779

Xhosa	XHO	8872
Yoruba	YOR	8979
Zulu	ZUL	9085
Slovenian	SLV	8376
Samoan	SMO	8377
Shona	SNA	8378
Somali	SOM	8379
Albanian	SQI	8381
Serbian	SRP	8382
Siswaiti	SSW	8383
Sesotho	SOT	8384
Sundanese	SUN	8385
Swedish	SWE	8386
Swahili	SWA	8387
Tamil	TAM	8465
Telugu	TEL	8469
Tajik	TGK	8471
Thai	THA	8472
Tigrinya	TIR	8473
Turkmen	TUK	8475

Tagalog	TGL	8476
Setswana	TSN	8478
Tonga	TON	8479
Turkish	TUR	8482
Tsonga	TSO	8483
Tatar	TAT	8484
Twi	TWI	8487
Ukrainian	UKR	8575
Urdu	URD	8582

### Wired Headphones

Select from the Settings menu, then select the headphone audio for the wired headphone jack based on screen 1 or screen 2 and press ENTER or the right arrow. Press  (Back) to exit.

The headphones are set to screen 1 by default.

### Title Search (CD-DA Only)

This displays a list of titles to select by using the up and down arrows.

### Disc Information (CD-DA Only)

If the inserted disc is BDMV, BDAV, AVCHD, AVCREC, DVD-Video, or DVD-VR the disc title should display. If the inserted disc is DVD-Audio, DTS-CD, CDDA, or Mixed-CD the track number will display.

### Software Information

This allows access to Version information, Save Vehicle Info to USB, and Open Source Info.

Save Vehicle Info to USB allows the current version to be saved to a jump drive, which must be done before an update can be performed.

Open Source Info shows where software information can be found.

### Changing Between SCREEN 1 and SCREEN 2

For single overhead screen systems only:

Although two audio sources can be listened to at one time, only one video source can be viewed on the overhead screen at a time.

Press SCREEN 1 or SCREEN 2 on the remote control to change which source will display on the overhead screen.

When SCREEN 1 is displayed and SCREEN 2 on the remote control is pressed, the source for SCREEN 2 will display. The audio for SCREEN 1 is available on channel 1 of the headphones and the audio for SCREEN 2 is available on channel 2 of the headphones. Change the channel on the headphones to the desired screen source.

One user can listen to the audio from SCREEN 1 and view the source on the overhead display while another user can listen to a separate audio source by changing the channel on the wireless headphones or setting their wired headphones to SCREEN 2 in the MENU.

### RSI Controls Available from the Front Screen

To access the RSI, select Video from the HOME screen. The Video app may also be selected from the applications tray if it has been stored in one of the five locations.

## Sourcing to DVD/BD

This allows for watching a DVD/BD video on the front screen when the vehicle is in P (Park).

After a disc is inserted, it will automatically begin playing. To resume play of the video where it left off, Pseudo Resume must be on. See "Player Setup BD/DVD" previously in this section.

With the vehicle in P (Park), icons display along the bottom of the front screen. When a DVD, VCD, USB, or HDMI source is inserted:



When a BD is inserted:



## Rear Media

This allows for transitioning between Disc, USB, and HDMI sources for the rear screens. Sources selected will be automatically sourced for both rear screens and will begin playback from the first available file.

The video will only appear on the front screen with the vehicle in P (Park). In any other gear, the front infotainment displays the active media source.

## DVD/BD Disc Menu

With the vehicle in P (Park), select DISC MENU to access the DVD/BD disc menu.

## Next Track/Previous Track

Use >> to skip ahead or << to skip back chapters. Press << less than five seconds into the current track to start at the beginning of the previous track. Press << more than five seconds into the current track to start at the beginning of the current track.

## Fast Forward/Fast Rewind

With the vehicle in P (Park), hold << or >> for approximately one and one-half seconds to fast forward or fast rewind. If << or >> are held for approximately six seconds, the rate of fast forward or fast rewind will increase.

## Play/Pause

Touch ► to play or || to pause, depending on the current selection.

## Keypad for DVD/VCD/SD/USB

With the vehicle in P (Park), select to display the DVD keypad. DVD keypad functionality is disc dependent and may not be available on all DVDs.

Up to four digits can be entered. Select Clear to remove one digit in the entry field. Touch and hold Clear to remove all digits in the entry field.

**Pop Up Menu (BD Only)**

This displays the pop up menu contents for the BD. Make a selection or use the interaction selector to exit pop up menu view.

**Cursor**

Use to navigate and select items in the disc menu. Press the up, down, right, or left arrows, or ENTER. Touch cursor to close the interaction selector and display a vertical menu of cursor buttons. The cursor will time out and close.

**Sourcing USB/VCD/HDMI with Video**

This allows for watching videos on the front screen from devices plugged into the rear module when in P (Park).

With the vehicle in P (Park), icons display:



These features will function the same as in DVD/BD sources, with the following exceptions:

- KEYPAD is only available for VCD in P (Park).
- DISC MENU is only available for disc sources such as VCD. The system displays the menu provided by the disc.

**Sourcing DVD/BD/USB/VCD/AUX**

With the vehicle in D (Drive), the following icons display along the bottom of the front screen when one of these sources is active:



DVD/BD/USB/VCD: All buttons are available.

HDMI: Only REAR MEDIA and MENU are available.

**Rear Media**

Use to select Disc, USB, or HDMI sources. Both rear screens will be sourced and will begin playback of the first available file. The video will only display on the front screen if the vehicle is in P (Park). In any other gear, the front infotainment displays the active media source.

**Previous Track/Next Track**

Press << or >> to select the previous or next track on the current media.

**Play/Pause**

Press ▶ to play or || to pause, depending on the current selection.

**Menu (DVD/BD/USB/HDMI/VCD)**

Only available in D (Drive). Press MENU to display these options:

- **Tone Settings:** Use to set bass, mid, and treble on speakers only. Once set, tone settings are for all sources.
- **Auto Volume Control:** Adjusts the volume of the audio based on the speed or ambient noise of the vehicle. Some vehicles may be equipped with the Bose AudioPilot system. In these cases, the Auto Volume main menu item is replaced with the Bose AudioPilot menu item. AVC or Bose AudioPilot is available to use with any source mode.
- **Traffic Announcements:** Displays traffic alerts in the RSI system. The video will continue to play and the audio will mute, depending on the alert.

**Closing the Menu (DVD/BD)**

Touch Back or Exit to close a menu. This will return to the previously viewed screen.

**Power**

Press the power button on the front screen to turn the RSI screen on or off. The front screen will continue to operate when the overhead screen(s) are turned off. A red lit power button indicates the rear screens are on. A white lit power button indicates the rear screens are off.

**Headphones**

1. Power Indicator Light
2. Channel 1 or 2 Switch
3. Volume Control
4. Power Button
5. Battery Cover

RSI includes two or four 2-channel new digital wireless headphones, depending on the vehicle model. The

headphones are used to listen to various multimedia. The wireless headphones have a power button, Channel 1 or 2 switch, and a volume control. The digital headphones cannot be interchanged with previous models of GM headphones.

Press the power button to turn on the headphones. A light on the headphones comes on. A flashing light indicates the headphones are not in range. Move them closer to the forward overhead screen until the light stops flashing. If the light does not come on, check the batteries. Intermittent sound or static can also indicate weak batteries. See "Battery Replacement" later in this section.

Turn the headphones off when not in use.

Press the center of the right side of the headphone to change the channel. Channel 1 will provide audio associated with screen 1 and channel 2 will provide audio associated with screen 2.

Infrared transmitters are in front of the second overhead screen. The headphones shut off automatically to

save the battery power if the RSI system is off or if the headphones are out of range of the transmitters for more than three minutes. Moving too far forward or stepping out of the vehicle can cause the headphones to lose the signal or have static.

Use the volume control on the headphones to adjust the volume.

For best audio performance, wear the headphones as indicated with L (Left) and R (Right) on the ear pads. Do not let anything cover the ear pads.

### Caution

Do not store the headphones in heat or direct sunlight. This could damage the headphones and repairs would not be covered by the vehicle warranty. Storage in extreme cold can weaken the batteries. Keep the headphones stored in a cool, dry place.

If the foam ear pads become worn or damaged, the pads can be replaced separately. To purchase replacement ear pads, contact your dealer.

### Battery Replacement

To change the batteries:

1. Loosen the screw to the battery door on the left side of the headphones.
2. Slide the battery door open.
3. Replace the two AAA batteries.
4. Replace the battery door and tighten the screw.

Remove the batteries if the headphones will not be used for a long time.

### Rear Seat Infotainment (RSI) Wi-Fi (If Equipped)

The RSI WiFi allows the user to access music, videos and pictures that are saved or taken with a smart device to the RSI system through Digital Living Network Alliance (DLNA) applications. Only one smart device can be connected to the RSI at one time.

### Placement for Optimal Performance

The RSI Wi-Fi antenna is near the RSI disc player. The smart device connection is stronger when it is near the Wi-Fi antenna.

If the network is not operating at its maximum effectiveness, try the following:

- Disconnect the smart device from any other connected network to improve the audio/video performance.
- Switch the band. While in any Wi-Fi screen, select Menu, then select Switch Band to access a band that is available. Some marketing regions will only support a single band.

### Digital Living Network Alliance (DLNA) (If Equipped)

To establish an initial connection:

1. From the RSI Wireless Display menu, select DLNA. The RSI screen will display a WiFi network name, such as "DIRECT-xx-Rear Seat", as well as the required password necessary to complete the connection.
2. Make sure the smart device's WiFi is enabled, and open the device's WiFi menu.



- From the smart device's WiFi menu, select the "DIRECT-xx-Rear Seat" network. If this network is not shown at the smart device, it will be necessary to re-scan for available networks.
- Enter the RSI Password at the smart device to complete the connection. Once entered, the "DIRECT-xx-CUE" network will display as connected.
- From the smart device's DLNA application, select Rear Seat 1 or 2 as the screen to display the desired video, audio, or picture files on the RSI.

Once the connection process is done for the first time, the Wi-Fi connection will be made whenever the device is within Wi-Fi range or the smart device Wi-Fi is turned on.

Select Menu from the remote control to access the options to switch WiFi band, disconnect the smart device from the RSI WiFi, or to remove all DLNA passwords that have been saved.

Supported DLNA media types are:

- Video: .mp4 and .mpg
- Audio: .mp3 and .aac
- Picture: .jpeg and .jpg

### Viewing the Other Display

While the left or right screen is connected by DLNA, the other screen can access the same source by selecting View Screen 1 or View Screen 2 in the Wireless Display menu.

### Connecting Wireless Android™ Devices


Many Android devices come with pre-installed audio and video players that support WiFi streaming; consult your smart device manual for more information. Android devices will also support various DLNA applications to allow the device to connect to the RSI wirelessly. Search the Google Play™ store for ArkMC or other DLNA applications to install on the Android device.

### Connecting Wireless Apple™ Devices

Apple will support various DLNA apps to allow the device to connect to the RSI wirelessly. Search the iTunes® store for ArkMC or other DLNA applications to install on the Apple device.

### Auxiliary Inputs

#### Rear Media Connections

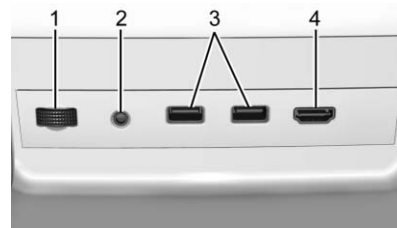

1. Volume Control for Wired Headphones
2. Wired Headphone Jack
3. USB Ports
4. HDMI Input

If equipped with RSI, the features above will be in the rear of the center console. These ports are for the

primary use of the rear passengers and not all media is available to the front passengers.

### HDMI Input

An HDMI cable is required to connect an HDMI device to the RSI hub. The RSI HDMI input allows connection to:

- Video games, disc players, cameras, smartphones, tablets, and A/V dongles that have HDMI (version 1.4a) outputs.
- Smart devices that support Mobile High-Definition Link (MHL) version 2.0.
- Apple devices. A supporting HDMI cable from Apple is required.

Power for the auxiliary devices is not supplied by the infotainment system.

To use the HDMI input of the RSI system:

1. Connect the auxiliary device with an HDMI cable.
2. Power on both the auxiliary device and the RSI video screen.

3. Press MEDIA on the remote control and use the arrows to change the source to HDMI.

### USB

There are two USB ports to provide the RSI system audio/video from supported devices, as well as to provide device charging.

Audio from these ports can only be heard and controlled by the rear seat passengers. Video can be heard, shown, and controlled by the rear and front passengers.

To use the USB:

1. Insert the device into one of the two ports.
2. Select the source (USB 1 or USB 2) via the rear screen menu with the remote control MEDIA button.
3. Select the source via the front by touching on the VIDEO screen button.

### Audio Output

Audio from a Blu-ray/DVD/CD player or HDMI inputs can be heard through:

- Wireless headphones: Available for any source depending on the selected channel.
- Vehicle speakers: Touch the VIDEO screen button. Select any other source to stop the speaker audio; rear audio will continue to play.
- Vehicle wired headphone jack: See “Wired Headphone Jack” following.


The RSI system transmits the audio signal to the wireless headphones if an audio signal is available. See “Headphones” earlier in this section.

Front seat passengers can listen to playback from the attached rear device through the vehicle speakers by selecting that source from the Video Application on the front display Home screen.

## Wired Headphone Jack

Select MENU on the remote control, then select Settings and then Wired Headphones to listen to audio on the wired headphones. The headphone audio plays depending on which screen is selected. The default is screen 1 audio.

## Remote Control

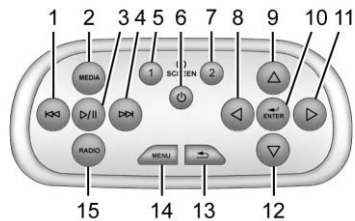

## Remote Control Buttons




### 1. ⏮ (Previous/Reverse)




- Radio: Press to seek the previous radio station.
- CD: Press to seek the previous track.
- Blu-ray/DVD: Press to seek the previous chapter.

- Press and hold for fast reverse.
2. MEDIA
    - Press to scroll through the menus including: BD/DVD/CD, USB 1, USB 2, HDMI.
  3. ⏸ (Play/Pause)
    - Press to start playing. Press to pause. Press again to continue playing.
  4. ⏭ (Next/Fast Forward)
    - Radio: Press to seek the next radio station.
    - CD: Press to seek the next track.
    - Blu-ray/DVD: Press to seek the next chapter.
    - Press and hold to fast forward.
  5. SCREEN 1
    - For single overhead screens: Press to change the source displayed on the overhead screen to SCREEN 1 selected source. Select audio sources.

- Only one video can be played on the screen at a time. Audio for both sources will continue on the headphones. Once pressed, all remote control commands will correspond to SCREEN 1.
  - For dual overhead screens: Press to select the second row overhead screen. Once pressed, all remote control commands will correspond to SCREEN 1.
6. ⏻ (Power)
    - Press to turn the video screens on and off.
  7. SCREEN 2
    - For single overhead screens: Press to change the source displayed on the overhead screen to SCREEN 2 selected source. Only one video can be played on the screen at a time. Audio for both sources will continue on the


headphones. Once pressed, all remote control commands will correspond to SCREEN 2.

- For dual overhead screens:  
Press to select the optional third row overhead screen. Once pressed, all remote control commands will correspond to SCREEN 2.
8.  (Previous/Reverse/Decrease)
    - Radio and CD: Press to go to the previous station or track.
    - Press to go to the previous menu.
    - Press to decrease the brightness of the RSI screen.
  9.  (Up Arrow)
    - Press to scroll up a list.
  10.  /ENTER
    - Press to select the highlighted choice in any menu.
    - Press and hold for quick play.

11.  (Next/Forward/Increase)
  - Radio and CD: Press to go to the next station or track.
  - Press to go to the next menu.
  - Press to increase the brightness of the RSI screen.
12.  (Down Arrow)
  - Press to go down a list.
13.  (Back)
  - Press to go back to the previous menu.
  - Press and hold to go back to the now playing screen.
14. MENU
  - Press to go to the menu of the now playing screen.
15. RADIO
  - Press to scroll through the radio sources including AM and FM.

To use the remote control, aim it at the receiver window at the forward overhead screen and press the buttons firmly. Direct sunlight or very bright

light could affect the ability of the RSI receiver to receive signals from the remote control. Check the batteries if the remote control does not seem to be working. See “Battery Replacement” following. Objects blocking the line of sight could also affect the function of the remote control.

If a CD, Blu-Ray/DVD, or MP3 disc is in the CD slot, the remote control  button can be used to turn on the video screen display and start the disc. The infotainment system can also turn on the video screen display.

### Caution

Storing the remote controls in a hot area or in direct sunlight can damage them, and the repairs would not be covered by the vehicle warranty. Storage in extreme cold can weaken the batteries. Keep the remote controls stored in a cool, dry place.

## Battery Replacement

To change the remote control batteries:

1. Insert a coin or key to pull up the rear cover on the remote control.
2. Replace the two AAA batteries in the compartment.
3. Replace the battery cover.

Remove the batteries from the remote control if it will not be used for an extended period of time.

## Video Voice Over

If equipped, the RSI system has a Video Voice Over feature to benefit the visually and hearing impaired.

When activated, the RSI will read aloud menu titles, menu listings, pop-ups, alerts, and file titles from audio and video media. Titles with gibberish, special characters, or foreign text may not be read aloud.

Use one of the following to turn Video Voice Over on or off:

- Select Video Voice Over from the Front Display menu.

- Select Video Voice Over from the RSI menu.
- Press and hold the Remote Control Menu and Play/Pause buttons for five seconds.

Video Voice Over will remain active over ignition cycles until it is turned off.

## RSI Troubleshooting

**No power :** The ignition might not be in ON/RUN or ACC/ACCESSORY.

**The picture does not fill the screen. There are black borders on the top and bottom or on both sides, or it looks stretched out :** Press MENU on the remote control to change the display mode setting.

**The remote control does not work :** Check to make sure the remote control is programmed to the correct screen. Make sure there is no obstruction between the remote control and the transmitter window and check the batteries to make sure they are not dead or installed incorrectly.

**There is no sound from the headphones with the indicator light on :** If the batteries are good, make sure the headphones are programmed to the correct screen and on the correct channel for the screen being viewed.

**The HDMI source is running but there is no picture or sound :** Check that the RSI video screen is in the HDMI mode by pressing MEDIA on the remote control. Check the HDMI connections at both devices.

**Sometimes the wireless headphone audio cuts out or buzzes :** Check for obstructions, low batteries, reception range, and interference from cell phone towers or from cellular telephone use in the vehicle. Check that the headphones are on correctly using the L (Left) and R (Right) on the headphones. Check that the headphones are positioned properly with the headband across the top of the head.

**I lost the remote and/or the headphones :** See your dealer for assistance.

**The Blu-Ray/DVD is playing, but there is no picture or sound :** Check that the RSI video screen is sourced to the Blu-Ray/DVD player by pressing MEDIA on the remote control.

### Video Display Error Messages

The video screen may display one of the following:

**Disc Error :** There are disc load or eject problems, the disc is inserted with the disc label wrong side up, the disc is damaged, or the disc is not from the correct region.

**No Disc Inserted :** No disc is present.

**Disc Player Error :** The temperature is outside the operating range of the RSI system. If the temperature is within range, see your dealer.

### Video Distortion

Video distortion can occur when operating cellular phones, scanners, CB radios, Global Positioning Systems (GPSs), two-way radios, mobile faxes, or walkie talkies.

It might be necessary to turn off the video player when operating one of these devices in or near the vehicle.

## Rear Seat Infotainment (RSI) System (Platinum)

Vehicles with this system have two headrest video display screens with integrated DVD players, auxiliary inputs, and a talking remote control. This system works independently from the vehicle's Overhead DVD RSI system. See Rear Seat Infotainment (RSI) System for information about the Overhead DVD RSI system.

The RSI system comes with two or four digital wireless headphones which work with both the overhead display(s) and the rear seat headrest displays. By repeatedly pressing the Channel button on the headphone, it can receive audio content from any of the displays.

With Retained Accessory Power (RAP), the RSI system can be played even after the ignition is turned off. See "Retained Accessory Power (RAP)" in the owner manual.

### Video Display Screens

The video display screens are on the back of each headrest.

### Caution

Avoid directly touching the video screen, as damage can occur. See "Cleaning the Video Screens" later in this section.

### RSI System Overview

The loading slot for the DVD player is at the top of the headrest. Insert the disc partially into the loading slot with the printed side facing the rear of the vehicle. The DVD player automatically draws the disc in, "Loading" displays on the screen along with a disc indicator, and playback starts. If the disc is inserted incorrectly, the DVD player ejects the disc and "No Disc" displays.

Some DVDs do not allow fast forwarding or skipping of the copyright information or previews. If the DVD does not begin playing at the main title, refer to the on-screen instructions.


The DVD player can be controlled by using the buttons below the video display screen or by using the buttons on the system's remote control. See "Remote Controls" later in this section.

The following discs are compatible with the DVD player:

- DVD-Video: A DVD that has video.
- CD-DA: A CD that has music or sound content only.
- CD-Video: A CD that has a movie.
- CD-R/RW: A disc that has audio files such as CD-R with downloaded MP3 files, MPEG, or JPEG files.

The DVD player and discs are coded by global region. The DVD players are set to Region 1. Discs with other region codes will not work in the players.

While the vehicle is moving, passengers should not unfasten their safety belts to make adjustments to the video screen buttons. See "Safety Belts" in the owner manual. Use the remote control for any necessary adjustments. See "Remote Controls" later in this section.

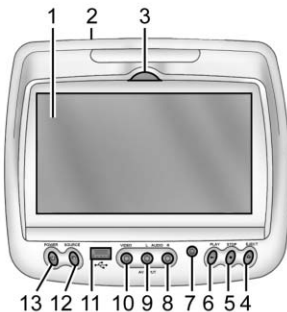


1. Video Screen
  - Located behind the front seat headrest.
2. CD/DVD Slot
  - The loading slot for the DVD player is at the top of the headrest. Insert the disc partially into the loading slot with the printed side facing the rear of the vehicle. The DVD player automatically draws the disc in, "Loading" displays on the screen along with a disc indicator, and playback starts. If the disc is

inserted incorrectly, the DVD player ejects the disc and "No Disc" displays.


3. Lever Lock and Release Latch
  - The viewing angle of the video screen can be adjusted.
4. EJECT ▲
  - Press to eject a disc from the DVD slot.
 

If a disc is ejected from the player, but not removed, it will automatically reload into the player. Another way to reload a disc that has been ejected, but not removed from the DVD player, is to press EJECT ▲ or PLAY ►.
5. STOP ■
  - Press once to stop playing a DVD.
 

There is a pre-stop feature for DVD and video CD only. This feature resumes playback of the disc where it was stopped. Press stop ■ once during disc playback and ■

displays on the DVD startup screen. This icon disappears after a few seconds. Press stop  a second time, or eject the disc, to cancel the pre-stop feature and to clear the disc position memory.

#### 6. PLAY

- Press to start playback of a disc. On DVDs and video CDs with playback control (PBC), menu screens can display automatically. It might be necessary to press PLAY  again to begin play. There is a play position memory feature for DVD and video CD only. If the DVD player is turned off and then turned back on, the DVD player resumes playback where the disc stopped. The play position memory is erased if the disc is removed.

#### 7. 3.5 mm (1/8 in) Output Jack

- Wired headphones (not supplied) can be plugged in with a 3.5 mm (1/8 in) jack.

#### 8. Right Audio Input

- Use the red connector is used for the right side audio.

#### 9. Left Audio Input

- Use the white connector is used for the left side audio.

#### 10. Video Input

- Use the yellow connector is used for video input.

#### 11. USB Port

- Connect the USB drive to listen to music or view pictures. To charge devices, connect to the USB port. Not all devices are able to be charged. For playback, the formats available are:

- JPEG
- JPG
- M2V
- MP3

- MPE
- MPEG-1
- MPEG-2
- MPG
- OGG
- WMA

#### 12. SOURCE

- Press to select between Monitor 3, Monitor 4, or the AV INPUT. Each video display screen can be adjusted independently, and can display information from both DVD players and both A/V inputs.

#### 13. POWER

- Press to turn the power on or off. Each video screen can be powered on or off independently.

**Infrared Remote Sensor** : This is at the top center of the video display screen. Do not block the signal from the remote to the sensor.



**Infrared Transmitters :** These are at the top center of the video display screen. Do not block the signal from the headphones to the transmitters.

### Using the RSI On-Screen Display (OSD) Menus

Use the OSD setup display menus for:

- General Setup
- Audio Setup
- Video Setup
- Preference Setup

To use the OSD menus while using the DVD player or an auxiliary device:

1. Press SETUP on the remote control to display the icons and pages on the menu.
2. Select the desired page by using the left/right navigation arrows to move the cursor.
3. Press SETUP again to cancel use of the setup display.

Not all DVDs support all of the feature defaults in the setup menus. If a feature is not supported, the defaults are provided by the DVD media.

### General Setup Menu

To set the language for the OSD:

1. Press SETUP on the remote control.
2. Use the left/right navigation arrows to navigate the General Setup Page, then use the down navigation arrow to select the OSD language.
3. Press ENTER and then use the right or left navigation arrows to select English, Simple/Traditional Chinese, French, German, Italian, Spanish, Portuguese, or Korean. Press the left navigation arrow to go back to the previous menu.

The angle mark allows different viewing angles on the DVD player. To set the angle mark:

1. Press SETUP on the remote control.
2. Use the left/right navigation arrows to navigate the General Setup Page, then use the down navigation arrow to select Angle Mark.

3. Press ENTER and then use the right or left navigation arrows to select On or Off. Press the left navigation arrow to go back to the previous menu.

### Audio Setup Menu

The Audio Setup Menu is available when a disc is not loaded.

To set the speaker setup:

1. Press SETUP on the remote control.
2. Use the left/right navigation arrows to navigate the Audio Setup Page.
3. Press the down navigation arrow to select the Speaker Setup sub-menu and to adjust the speakers setting. Choose from LT/RT, Stereo, V SURR, and OFF.
4. Press ENTER and then use the left or right navigation arrows to select a speaker option. Press the left navigation arrow to go back to the previous menu.

The Dolby Digital Setup Menu speaker options are Stereo, L-Mono, R-Mono, and Mix-Mono.

### Video Quality Setup Menu

To set up the video quality setup menu:

1. Press SETUP on the remote control.
2. Use the left/right and down navigation arrows on the remote control to select the Video Quality Setup sub-menu.
3. Press ENTER, and use the left or right navigation arrows to adjust the following:

**Sharpness** : Adjust to soften or sharpen the picture. Use the right or left navigation arrows to choose from Low, Med, or High.

**Brightness** : Adjust to brighten or darken the picture. Use the right or left navigation arrows to choose from -20 to +20.

**Contrast** : Adjust to increase or decrease the picture contrast. Use the right or left navigation arrows to choose from -16 to +16.

**Hue** : Adjust to increase or decrease the color hue. Use the right or left navigation arrows to choose from -9 to +9.

**Saturation** : Adjust to increase or decrease color intensity. Use the right or left navigation arrows to choose from -9 to +9.

### Preference Setup Menu

To set the audio playback language:

1. Press SETUP on the remote control.
2. Use the left/right and down navigation arrows on the remote control to select the Audio sub-menu under the Preference Page.

To turn the Subtitles on or off:

1. Press SETUP on the remote control.
2. Use the left/right and down navigation arrows on the remote control to select the Subtitle sub-menu under the Preference Page and use the left or right navigation arrows to choose On

or Off. Press the left navigation arrow to go back to the previous menu.

To set the disc menu language:

1. Press SETUP on the remote control.
2. Use the left/right and down navigation arrows on the remote control to select the Disc sub-menu under the Preference Page. Use the left or right navigation arrows to select the language. Press the left navigation arrow to go back to the previous menu.

To set up the Parental Control:

1. Press SETUP on the remote control.
2. Use the left/right and down navigation arrows on the remote control to select the Parental sub-menu under the Preference Page.
3. Press SETUP, and use the right and up/down navigation arrows to select any one of the available Rating settings from the display menu.

The Rating settings are:

- Kid SAFE (Children)
  - G
  - PG
  - PG 13
  - PG R
  - R
  - NC 17
  - ADULT
4. Press the left navigation arrow to confirm the selection.

If a disc is inserted into the DVD slot and it exceeds the Parental Setting, the following message appears on the display:

*The Parental Setting of this player prohibits play. Would you like to allow this disc to play?*

If yes is selected, the six-digit password must be entered for the disc to play. If the wrong password is entered, the following message appears:

*This movie will not play due to the Parental Setting of the player.*

To create a six-digit password, use the numeric keypad on the remote control. Press ENTER to confirm. *The default password is 136900.*

To change the Parental Control Password:

1. Press SETUP on the remote control.
2. Navigate to the Password sub-menu under the Preference Menu and press ENTER.
3. At the Old Password option, enter the old password or the default password (136900).
4. At the New Password option, enter the new password (six digits) using numeric buttons.
5. At the Confirm PWD option, confirm the new password by entering the new password again.
6. Scroll to the OK button and press ENTER. The message "Your password has been changed" displays.

To reset the system to the factory default settings:

1. Press SETUP on the remote control.
2. Use the left/right and down navigation arrows on the remote control to select the Default sub-menu under the Preference Page and press ENTER to reset the settings. The Parental Setting will not be affected.

## Vehicle Speakers

Audio from the DVD player or an auxiliary device can be heard through the vehicle speakers or the wireless/wired headphones, while the radio is tuned to one of the frequencies selected on the Sound Around portion of the system's remote control. See "Remote Controls" later in this section.

Only one audio source can be heard through the vehicle's speakers at a time. The audio source being used is specified by the A/V (audio/video) source selected on the driver side headrest video display screen.

To turn the RSI system audio output to the vehicle's speakers, press SOUND AROUND ON/OFF, on the remote control. The audio from the RSI system can be heard through the wireless/wired headphones and the vehicle's speakers at the same time. Radio volume can vary when switching between the radio, CD, DVD, MP3, or an auxiliary device.

### 100 Channel FM-Modulation Control

#### For Monitor "3" Only:

To activate the FM modulation feature, press SOUND AROUND ON/OFF on the remote control until "FM CH XX.XMH2" is displayed on the monitor.

Press SOUND AROUND SELECT on the remote control to cycle through a pre-established list of six channels (88.3MHz, 88.7MHz, 89.1MHz, 89.5MHz, 89.9MHz, and 90.3MHz).

If none of these stations are suitable for FM modulation, use the Fine Tune option. To Fine Tune the modulator to a specific target station while the display is active, press the up or down

navigation arrows on the remote control to change the channel by 0.2MHz. Hold down the up or down navigation arrows to cycle quickly through the stations. When the end (107.9MHz) or beginning (87.5MHz) of the FM band is reached, the channels will continue from the beginning (87.5MHz) or end (107.9MHz), respectively.

To deactivate the FM modulation feature, press SOUND AROUND ON/OFF on the remote control until FM OFF is displayed on the monitor.

#### Caution

Do not store the headphones in heat or direct sunlight. This could damage the headphones and repairs would not be covered by the vehicle warranty. Storage in extreme cold can weaken the batteries. Keep the headphones stored in a cool, dry place.

### Remote Controls

The Platinum RSI system includes a talking remote control and a non-talking remote control. The talking remote controls the rear seat headrest displays and has an Audible Feedback feature to benefit the visually and hearing impaired. To use the remote control, aim it at the remote sensor at the top center of the video display screen and press the desired button. See Rear Seat Infotainment (RSI) System for information about the non-talking remote.

Objects blocking the line of sight can affect the function of the remote control. Direct or very bright light can affect the ability of the transmitter to receive signals from the remote control. If the remote control does not seem to be working, the batteries might need to be replaced. See "Battery Replacement" later in this section.

The remote control provided with the platinum RSI system is not a universal remote control and will not control other equipment.

**Caution**

Storing the remote controls in a hot area or in direct sunlight can damage them, and the repairs would not be covered by the vehicle warranty. Storage in extreme cold can weaken the batteries. Keep the remote controls stored in a cool, dry place.

**Talking Remote Control Buttons**


**POWER** : Press to turn the platinum RSI system on and off.

**SOURCE** : Press to select between Monitor 3, Monitor 4, or AV INPUT. Any video equipment connected to the AV inputs automatically overrides the source selection.

**SETUP** : Press to change the default settings. See “Using the RSI On-Screen Display (OSD) Menus” earlier in this manual. Each of these four main menu screens displays a menu to select different setting options:

- General Setup — adjusts screen settings.
- Audio Setup — sets the language.
- Preference Screen — sets the subtitles and parental controls.
- Password Setup — allows a password to be set.


Press SETUP again to exit.

**EJECT**  : Press to eject or reload a disc.

**3** : Press to transmit infrared codes for DVD mode on Video Screen 3.

**4** : Press to transmit infrared codes for DVD mode on Video Screen 4.

**SOUND AROUND ON/OFF** : Press to turn the FM transmitter power on or off.

**MUTE**  **(DVD Only)** : Press to turn off the headphone sound. Press again to turn the sound on again.

**PIX** : Press to adjust the picture's On-Screen Display (OSD). Each time PIX is pressed, the picture adjustment OSD cycles through bars for BRIGHTNESS, CONTRAST, COLOR, and TINT. Use the right/left navigation arrows to adjust the setting. This feature automatically shuts off if another button is pressed or adjustments are not made within six seconds.

**SOUND AROUND SELECT** : Press to select an FM transmitter channel. SOUND AROUND SELECT lets the DVD audio play over the vehicle's sound system by tuning the radio to one of the FM frequencies.

**MENU** : Press to enter the DVD disc menu while the disc is playing.

**▲, ▼, ◀, ▶** : Press to navigate through menus.

**CH + :** Press to change the channel to a higher level in sequential order.

**CH - :** Press to change the channel to a lower level in sequential order.

**VOL + :** Press to adjust the sound louder.

**VOL - :** Press to adjust the sound lower.

**ENTER :** Press to enter a selected function or to begin playback of the disc.

**REPEAT ↻ :** Press to repeat part or all of a chapter, title, track, or the entire disc after using the 3-4 button to set up repeat preset sections.

**TITLE :** Press to enter the disc title mode. The title feature is disc-specific, and may not be available on all discs.

**SUBTITLE :** Press to change the subtitle language to another available language or to turn subtitles off.

**AUDIO :** Press to select a different language for discs that are recorded with different languages.

**DISPLAY :** Press to scroll through display information on the upper left corner of the screen, such as title, chapter/track, time elapsed, and time remaining, or to turn off the display.

**RANDOM :** Press to play titles randomly.

**PLAY ▶ :** Press to start playback of the disc.

**STOP ■ :** Press to stop playback of a disc.

**PAUSE || :** Press to pause playback of a disc.

- To resume disc playback, press PLAY.
- To start playback from the beginning of the disc, press STOP, STOP, PLAY.

**FR ◀◀ :** Press to fast reverse the disc. Press multiple times to choose between 2X, 4X, 8X, 16X, and 32X speeds.

**FF ▶▶ :** Press to fast forward the disc. Press multiple times to choose between 2X, 4X, 8X, 16X, and 32X speeds.

**PREV ◀◀ :** Press to play the previous chapter or track. To return to previous chapters or tracks one at a time, press and release multiple times until the desired chapter or track is reached.

**NEXT ▶▶ :** Press to play the next chapter or track. To go to the next chapter or track one at a time, press and release multiple times until the desired chapter or track is reached.

**Aud. ON/OFF :** Press to turn the feature On or Off. When On, the remote control will audibly announce the name of each button as it is pressed.

### Battery Replacement

To change batteries in the remote control:

1. Turn the remote control face down.
2. Press down on the ridged area of the battery cover and slide it off.
3. Install two AAA batteries into the battery compartment.
4. Slide the cover back on until it clicks.

If the remote control is to be stored for a long period of time, remove the batteries and keep it in a cool, dry place.

### Playing an Audio CD

When an audio CD is playing, the display shows the current track and the amount of time that track has been playing, the total amount of time on the disc, and the current time running on the disc.

**DISPLAY** : Press to choose from the following display options:

- Press DISPLAY once and Single Elapsed appears along with the current track playing and the length of time for that track.
- Press DISPLAY twice and Single Remain appears along with the current track playing and the amount of time left on the track.
- Press DISPLAY three times and Total Elapsed appears along with the current track playing and the total time that has played on the CD.

- Press DISPLAY four times and Total Remain appears along with the current track playing and the amount of time left on the CD.

**REPEAT** : Press to toggle between Track and All. The default for repeat is OFF.

- Track repeats the track that is playing.
- All repeats the disc that is playing.

### Playing an MP3 CD

MP3 is the format for storing digital audio. An audio CD quality song can be compressed into the MP3 format with very little loss of quality, while taking up much less space. CD-R/RW discs that have been encoded in MP3 format can be played on the DVD player.

### Selecting Folders and Songs

When an MP3 disc is inserted in the player, the navigation screen appears. The folders and songs can be changed by navigating through the file system. The DVD player plays the songs in the order they were burned to the disc.

1. Press STOP if a disc is playing. Press the up or down navigation arrows on the remote control to go through the folder list on the left side of the screen.
2. Press ENTER when the desired folder is highlighted.
3. Press the up or down navigation arrows to go through the song list and highlight the desired song. Press ENTER to begin playback of the selected song.

### Skipping a Song

NEXT

Press to go to the next song.

PREV

Press to return to the beginning of the song that is currently playing. Press PREV twice to go to the previous song.

### Selecting a Play Mode

The order the songs are played can be temporarily chosen on a disc. The Folder play mode is the default. Press REPEAT to access the play mode options:

- Single — Plays a selected song.

- Folder — Plays the folder in the order the songs were recorded.
- Shuffle — Plays the songs in random order, from within the selected folder.

### Using the REPEAT Feature

#### REPEAT

Press to change between Repeat One and Repeat Folder.

- Repeat One — Repeats the song that is playing.
- Repeat Folder — Repeats the folder that is playing.

### Tips and Troubleshooting

**Infrared Sensor Inoperative :** Check that the batteries are good in the remote control. Check that the remote control infrared sensor is not blocked. Aim the remote control toward the infrared sensor being controlled. Select the correct screen, 3 or 4.

**No Picture :** Check that the correct video input mode is selected. Check that the video cable is plugged into the jack securely.

**No Sound :** Check that the correct audio input mode is selected. Check that the audio cable is securely plugged into the jack.

### Cleaning the Video Screens

The video display screens are made of a specially coated glass and can be scratched or damaged by abrasive products, solvents, or ammonia-based window cleaners. Clean with a soft, lint-free cotton cloth that has been slightly dampened with warm water. Dry the screens by wiping with a clean, dry cotton cloth.

### Cleaning the Components

Use care when touching or cleaning the components such as the DVD player or the discs.

Do not use DVD lens cleaners for DVD players because the lens of the DVD optics can become contaminated by lubricants.

Handle CDs and DVDs carefully. Store them in their original cases or other protective cases and away from direct sunlight and dust. The DVD player scans the bottom surface of the disc. If the surface of a CD or DVD is damaged, such as cracked, broken, or scratched, the CD or DVD may not play properly or may not play at all. If the surface of a CD or DVD is soiled, take a soft, lint-free cloth or dampen a clean, soft cloth in a mild, neutral detergent solution mixed with water, and clean it. Make sure the wiping process starts from the center to the edge.


Do not touch the bottom side of a CD or DVD while handling it; this could damage the surface. Pick up CDs or DVDs by grasping the outer edges or the edge of the hole and the outer edge.



## Navigation

### Using the Navigation System


Touch NAV on the Home Page or the NAV icon in the applications tray to access the navigation application.

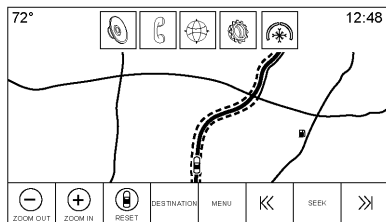

Touch MENU from the map view to access the Navigation Menu. Features displayed in the Navigation Menu can be selected to adjust navigation preferences.

To exit out of a list, touch the Exit screen button in the top right corner of the map to return to the main map view.

It is advised to set up preferences before setting a destination. To set a destination, see *Destination* ⇨ 65.

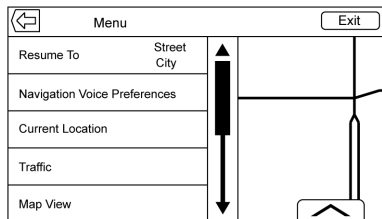


Additional navigation features are:

- Cancel Route/Resume To
- Navigation Voice Preferences
- Current Location
- Traffic
- Map View
- Routing Preferences
- Display “Places of Interest” Icons
- Personal Data

### Cancel Route/Resume To

- While under route guidance, this screen button displays Cancel Route. Touch Cancel Route to cancel route guidance. No further prompts will be given. The list item then changes to Resume To.
- Touch the Resume To screen button to resume route guidance to the last entered destination.
- The last location that the system has provided guidance to can be resumed by touching on this list item.
- If the route includes waypoints, the entire route can be suspended using the Cancel Route list item. When Resume To is touched, all waypoints are resumed for guidance.

## Navigation Voice Preferences

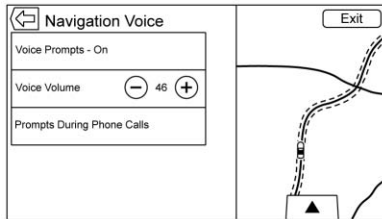

If equipped, touch the Navigation Voice Preferences list item to adjust the following voice preferences:

- Voice Prompts On/Off
- Voice Volume
- Prompts During Phone Calls On/Off

### Voice Prompts

Touch the Voice Prompts list item to toggle voice prompts On and Off.

### Voice Volume

Adjust the loudness of the audio feedback by touching - or +. If a maneuver prompt is being played, and


the main volume is adjusted, the prompt volume will update and be saved.

### Prompts During Phone Calls

When enabled, the system plays a shorter prompt while on a phone call. This setting can be configured as to whether a prompt would be heard during a phone conversation.

When this setting is Off, only the short alert tone is played when approaching the maneuver.


### Voice Prompts Mute Icon

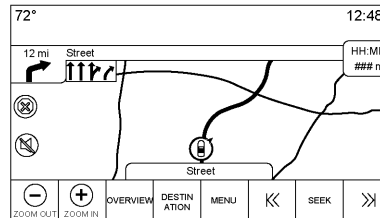

Press the Mute Icon on the left side of the map while in mapview to turn voice prompts On or Off.

## Current Location

Touch the Current Location list item to display a Current Location list.

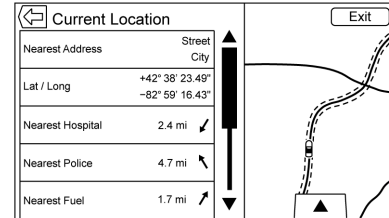

The following information is displayed on the Current Location list:

- Nearest Address
- Lat/Long
- Nearest Hospital
- Nearest Police
- Nearest Fuel
- Nearest Service

Touching on any of the options will display the destination details view for that location to allow you to begin guidance to the selected location.


Touch the Nearest Address button and then the Save screen button to store the current location to the Address Book.

### Traffic (If Equipped)

Touch to browse the traffic in the area as well as adjust the traffic settings. Where traffic information is available, it is displayed on the map.


Where live traffic flow data is available, it is displayed as a solid line adjacent to the road. The road is displayed in colors to show the flow rate as:

- Black – Stopped or Closed
- Red – Poor
- Yellow – Slow
- Green – Normal

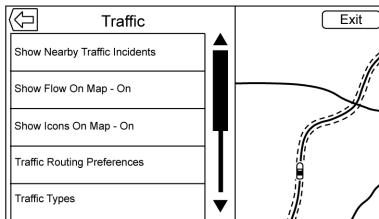


There are several options on the Traffic menu:

- Show Nearby Traffic Incidents
- Show Flow On Map On-Off
- Show Icons On Map On-Off
- Traffic Routing Preferences
- Traffic Types

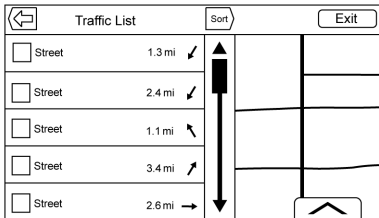

1. Touch Show Nearby Traffic Incidents to access the Traffic List menu. This menu displays the incident symbol and highway name, along with the distance and heading to the incident.
2. Touch on the incident to display additional details about the incident as well as an option to avoid that particular incident if it is along the current route.

### Traffic Routing Preferences

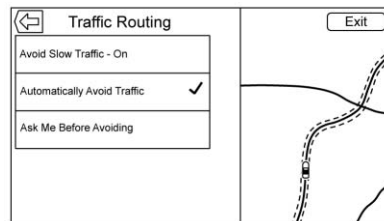

The system can be configured as to how it reacts when receiving traffic information. Touch Traffic Routing Preferences to access the Traffic Routing menu.


When this setting is Off, the system will never take traffic conditions into account when creating routes. In addition, the two options below are grayed out. If one of the grayed-out options is touched, it automatically turns the traffic avoidance feature On and performs the desired selection.

The two options, Ask Me Before Avoiding and Automatically Avoid Traffic will adjust the system as follows:

- If the Automatically Avoid Traffic list item is touched, the system will automatically adjust the route based on traffic without notifying the driver.
- If the Ask Me Before Avoiding list item is touched, the system will always use Alerts to show when there is an incident and allow it to be avoided by touching the avoid button.

If the Traffic list item is touched from the Map Menu and Traffic is not available because the SiriusXM subscription is not valid, a pop-up will display with information on how to reactivate the subscription along with the SiriusXM radio ID.

### Traffic Types

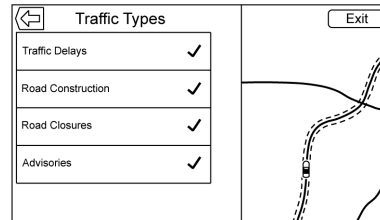


Touch to access the Traffic Types menu.

The system can be configured to filter out certain types of traffic events. If a particular type has been turned off, the system does not display it on the map, and does not alert the driver.

### Map View

Touch to select the desired map view.

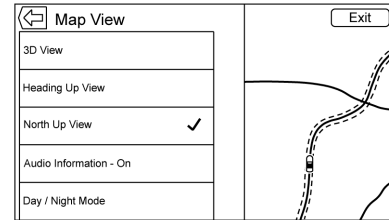

A checkmark appears to indicate a view has been selected.

### 3D View

The 3D View is a Heading Up view but it includes perspective. Map items will appear larger as the vehicle comes closer.

### Heading Up View

The Heading Up View keeps the vehicle's current heading at the top of the view. The vehicle icon always faces the top of the view as the map rotates.

## North Up View

The North Up View keeps north at the top of the view. The vehicle icon is placed in the center of the view and rotates to indicate the heading for the vehicle.

## Audio Information On/Off

Touch to turn the audio information view on or off from the main map view. When on, the audio information becomes an audio status screen. This allows for two lines of audio information in the status pane and enables the use of some interaction selector controls.


The audio status screen contains the following elements:

- Station Frequency
- Artist Information
- Song Information
- **▶ / ||** or **◀◀** or **▶▶** Station and Channel Controls

Touch **◀◀** or **▶▶** Station controls to go to the next or previous strong signal station or digital channel.

When the audio status pane displays Artist and Song Information, touch **◀◀** or **▶▶** to go to the next or previous track based on the current media mode.

## Day/Night Mode

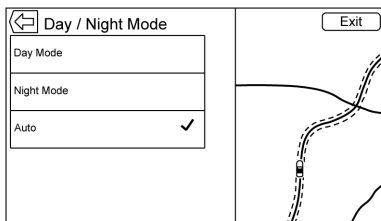

Touch to access the Day/Night Mode menu.

The options are:

- Day Mode: Brightens the map background.
- Night Mode: Darkens the map background.
- Auto: Adjusts the screen background automatically depending on the exterior lighting conditions.

## 3D Buildings On/Off


When 3D building information is available for a particular area, the icons are shown at a zoomed level. If the current vehicle position would be hidden by another building, the building is shown as see through so the vehicle icon is visible. Touch to turn the 3D Buildings feature On or Off.

## Autozoom On/Off

At certain zoom levels, street detail is removed to keep the view uncluttered. Touch to turn the Autozoom feature On or Off.

## Display Places of Interest Icons

Places of Interest (POI) icons can be displayed on the map using this view.

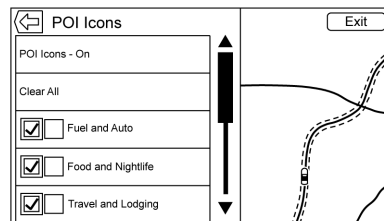

- The POI icons can be turned On and Off. Touch the check box next to the POI icon to display the icon.
- Touch Clear All to reset the icons that are displayed on the map.
- A subcategory can be selected instead of the entire category. Touch the list item itself rather than the check box. The subcategories will display. Select any of those categories to navigate down the hierarchy.
- When a higher-level category has some of its subcategories selected, the checkmark next to it is grayed out. This indicates that only some of the categories below are shown. Touch the grayed-out checkmark to turn all of the icons for that category on or off.

**Routing Preferences**

Touch the Routing Preferences list item to access the Routing Preferences menu. Options on how the routes are created for route guidance are listed on this menu.

**Route Style**


Touch this list item to change the route type preferences.

The options are:

- Fast (default)
- Eco Friendly (if equipped)
- Short
- Edit Eco Profile

The Edit Eco Profile can be used to configure two parameters for the Eco Friendly route. These parameters are Roof Load and Trailer. For each parameter, the options are None, Small, Medium, and Large. Touch to scroll through the list. The default for both is None.

These preferences are used for all routes generated.

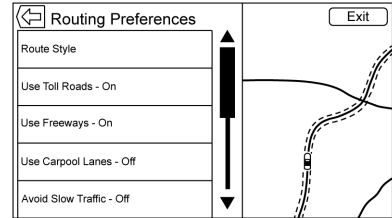


Route segment preferences are other options showing on the Routing Preferences menu.

These include:

- Use Toll Roads On/Off
- Use Freeways On/Off
- Use Carpool Lanes On/Off
- Avoid Slow Traffic On/Off
- Use Tunnels On/Off
- Use Time Restricted Roads On/Off

## Personal Data

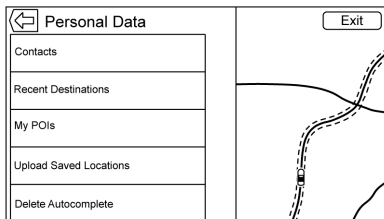

Data that the system has saved during the course of using the navigation system can be managed through:

- Contacts
- Recent Destinations
- My POIs (if equipped)
- Upload Saved Locations
- Delete Autocomplete

### Contacts

1. Touch Delete All Entries to delete the entire list of contacts. A pop-up displays to confirm.
2. Touch Edit Contacts List to display the Contacts to edit.

## Recent Destinations

- Touch Delete All Destinations to delete the entire recent destination list. A pop-up displays asking to confirm the deletion.
- Touch Delete Individual Destinations to display a recent destinations list. Select the individual entry to delete.

## My POIs


- Touch My POIs to display a menu of other options.
- Select Delete Individual Categories. A My POIs category list displays.
- Select the individual entry to delete.
- Touch Delete All My POIs to delete the entire list of categories. A pop-up displays asking to confirm the deletion.
- To exit out of a list, touch the Exit screen button in the top right corner of the map to return to the main map view.

## Upload Saved Locations

- Touch the Upload screen button on the Upload Saved Locations menu to save the Vehicle Contacts list and any My POIs that have been saved to the vehicle.
- Once saved locations have been uploaded to a USB, they can be transferred to a different vehicle or restored to the current contacts list.

## Delete Autocomplete

Touch the Delete screen button on the Delete Autocomplete History menu to clear personal data from the keyboard.

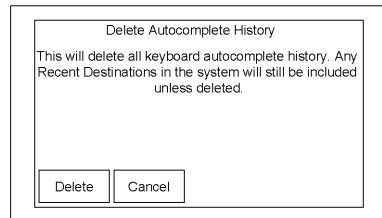

A pop-up displays a message to Delete all keyboard autocomplete history. The system clears all navigation addresses, POIs, etc. The autocomplete will not delete recent destinations. Touch Cancel to stop the process.

## Map Adjustments


ZOOM +/- can be used to adjust the scale of view on the map. When the end of the zoom level is reached, ZOOM +/- will gray out.

Use the pinch/spread hand gesture to zoom the scale of view on the map.

- ZOOM - (minus): Pinch fingers together to zoom out.
- ZOOM + (plus): Spread fingers apart to zoom in.


The zoom scales can be configured for English or metric units. To change from English to metric, see “Instrument Cluster” in the owner manual.

## Scroll Features

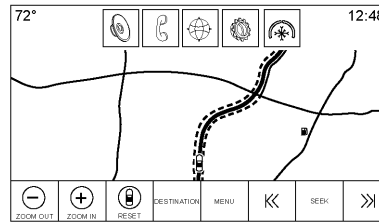

- To scroll within the map, touch anywhere on the map screen.
- Nudge or slide a finger on the map; the map moves in the direction of the finger.
- Fling a finger on the map; the map will start scrolling in a short continuous scroll.
- Touch a finger on the location on the map; the map recenters to the location that was touched on.
- Touch a finger twice on a location on the map; the map zooms in one level to the location that was touched twice on.

- When the map is recentered away from being locked to the vehicle position, the crosshairs will show in the center of the map. As the map continues to be recentered, the crosshairs will remain on the screen. When the crosshairs are shown on the screen, a callout with more information displays. If the map is moved from the current location, the crosshairs will disappear along with the callout.

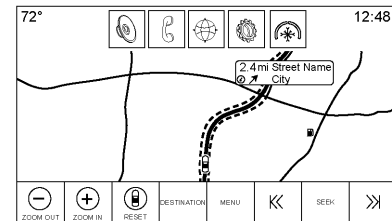

- Touch a finger on the callout next to the crosshairs and the destination details view displays. From this view, route guidance can be received or saved to the vehicle's contact list.



- When the map is recentered, the straight-line distance from the vehicle to the selected point is displayed in the callout. In addition, a heading direction in the form of an arrow is displayed to indicate the direction. The arrow is shown in relation to the current vehicle heading.
- Touch a finger on a POI icon shown on the map; the name of the POI is shown in the address callout, along with the city name and state. If the callout is selected, the destination details view for the POI is shown.
- After panning the map away from the vehicle, touch Reset to return the map to the current position.
- Touch the Overview button to quickly get a view of the entire route. The route Overview button takes the place of the Reset button while under route guidance. Touch Reset to return the map to the current position.

## Maps


The map database is stored in the internal flash memory that is used in the navigation system.

## Detailed Areas

Road network attributes are contained in the map database for detailed areas. Attributes include information such as street names, street addresses, and turn restrictions. A detailed area includes all major highways, service roads, and residential roads. The detailed areas include Places of Interest (POIs) such as restaurants, airports, banks, hospitals, police stations, gas stations, tourist attractions, and historical monuments. The map database may not include data for newly constructed areas or map database corrections that are completed after production. The navigation system provides full route guidance in the detailed map areas.

## Navigation Symbols

Following are the most common symbols that appear on a map screen.

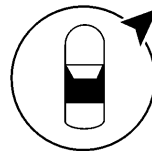

or




The symbol indicates the current position and heading direction of the vehicle on the map. When under route guidance, a circle with an arrow is added to the symbol which indicates the direction to the destination.

## Vehicle Address Callout


Tap on the vehicle icon to overlay the current address of the vehicle next to the vehicle icon in a callout. Tap again to tap hide the information on the map.

Any address information about the vehicle's current location will be shown, including the street, city, and state names.

Tap on this callout to save the current address to the vehicle address book.

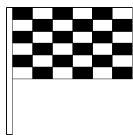


The destination symbol marks the final destination after a route has been planned.

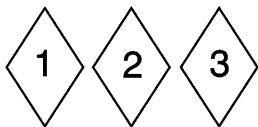

The waypoint symbol marks one or more set waypoints.

A waypoint is a stopover destination point added to the planned route.



The estimated time to the destination displays. Touch the Arrival button to toggle to duration and to the distance of the destination.



This symbol indicates the recommended maneuver that should be performed. Touch it to display the turn list or waypoint list.



The No GPS symbol appears when there is no Global Positioning System (GPS) satellite signal. When the GPS is gone, the vehicle position on the map may not be accurate.

**Autozoom**

As a maneuver is being approached, the map automatically zooms in to give greater detail.

If lane guidance is available for the maneuver, this is also shown.


When the system begins to autozoom, it zooms in to its minimum level. After the maneuver is performed, the system slowly zooms back out.

**Destination**

If route guidance is not active, touch the NAV screen button on the Home Page to access the map view. Touch the Destination icon from the map view to enter a destination. Available methods of entering a destination are Address, Intersection, POIs, Recent, and Contacts. Several options can be selected to plan a route. Some


destination items may be grayed out if no destination was previously entered or saved.

Another way to enter a destination is to push the blue OnStar button and ask an OnStar Advisor to download a destination into the embedded navigation system. See *OnStar® System* ⇨ 83.

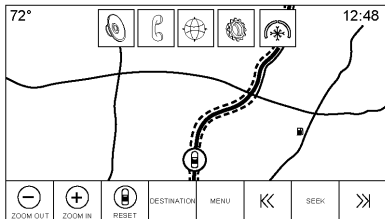

Touch the DESTINATION button to go to the destination entry views.

## Available Methods of Search

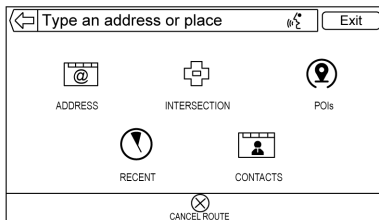

- Address (entries by hierarchy)
- Intersection
- Places of interest (POIs)
- Recent (destinations)
- Contacts

Touch any of the icons to enter a method of search, or touch the input field along the top to go to the keyboard and enter a search term.

## Navigation Next Turn Maneuver Alert

The navigation system may need to get the attention of the driver in certain situations.

If not in the navigation application when a near maneuver prompt is given, it is shown as an alert. The alert contains the turn indicator and button to display the main navigation view or dismiss the alert.

## Auto-Capitalization

The shift key is automatically enabled when a period is entered on the keyboard. Once the first character is typed after the period, the next character will change to lower-case.

## Alpha-Numeric Keyboard

The keyboard is used in multiple locations throughout the system and can be used with many features. The navigation system uses the alpha-numeric system keyboard which includes 1 through 0, A through Z in QWERTY layout, hyphen, comma, period, SPACE, and SYM which would show additional characters needed.

The keyboard can also be modified to include characters appropriate for the region configured in the vehicle settings.

✓ : Touch to search for the destination details of an address or place of interest entered in the text field. Once ✓ is touched, the activity indicator displays in the list of possible matches.

▽ : Touch to display a list of matches.

When there are multiple matches, a dropdown arrow is shown after the autocompleted text. This dropdown displays an entire list of matches. Touch the appropriate match without having to enter more text.

X : Touch to delete the last typed character. Touch and hold this screen button to clear the entire text field. If the entire text field has been deleted, this screen button becomes an Undo button. Touching Undo will restore the deleted text.

**EXIT** : Touch to return to the previous Map view.

**SYM** : Touch to show the symbol keyboard.

**SPACE** : Touch to enter a space between characters or the words of a name.

▲ : Touch to display the interaction selector.

🌐 : Touch to switch between Alpha-Numeric Keyboard and Character Recognition.

### Special Characters

As the characters are typed on the keyboard, a pop-up of the letter touched displays above the key that was touched.

Continue to touch and hold, and any additional special characters associated with that letter are displayed around the current letter. To select one of the special characters, slide a finger left or right to adjust the highlight of the special character.

When the alternate keyboard is used, the system remembers it the next time it is viewed.

### Special Character List

The following characters have special characters beneath them:

E - É Ê Ë Ì Í Î Ï	More Characters:
Y - Ÿ	0 - °
U - Ū Ū Ū Ū Ū	! - ¡
I - İ İ İ İ İ	\$ - ¥ £ ¢
O - Ō Ō œ Ŏ Ŏ Ŏ Ŏ	& - §
A - Å Å Å Å Å Æ Å Å Å	" - « »
S - ß (for lowercase s) Š Š	? - ¿
L - Ł	{ - { {
Z - Ž Ž Ž	} - }
C - Ć Ć Ć	.com -.net .org
N - Ñ Ñ Ñ	
· - · · ·	

### Character Handwriting Recognition

Character handwriting recognition is offered as an alternative to using a keyboard. This character input method allows the drawing out of characters instead of picking them out from the keyboard. Character handwriting recognition has two main modes, Upper Case and Mixed Case. The Upper Case mode is used for Destination Entry while Mixed Case is used for all other character entry modes. This feature is available by touching the globe button from the keyboard screen.

The Handwriting Recognition screen is split into different zones:

- Drawing Pad
- Prioritized Guess List
- Character Entry
- **Drawing Pad:** This is the area to draw a character. Draw a character in the display area.

When the first character is complete, a representation of that character can be seen, and there is an audible response. If the character is correct, the next character can be started immediately.


- To delete the last entered character, draw a line from left to right across the character field.
- To create a space, draw a line from right to left across the character field.
- **Prioritized Guess List:** This area displays a list of guesses for the character drawn. If character recognition displays the incorrect character, look at this list and see

if the desired character is available to select. Scroll up or down the list, then highlight the desired character. Selecting a character from the list will replace the incorrect character with the desired character. The character is displayed in the character entry section of the screen.

- **Character Entry:** This is the area across the top of the screen. This section can look different depending on which feature is being used.

### Option Settings

This section is an area on the right side of the Character Recognition screen. This section will only look different if the characters displayed on the screen are in upper case or mixed case.

- : Select from the touch screen. The draw speed setting will adjust the speed of the character recognition feature. The settings are: Faster, Default, and Slower.
- **Audio Feedback:** Touch to turn Audio Feedback On or Off.

Audio feedback is an audible response to an action that has occurred while using the Character Recognition.

- **ABC/abc:** Select from the touch screen to view the available character sets. Select a character set to change. Multiple character sets may not be supported by some regions. This button also displays the sentence case of upper or lower case characters that are currently active in a mixed case mode. If only one character set is available for the desired region, touching the character recognition will only open and close the character recognition window.

If mixed case character mode is supported, the last buttons of character recognition will be upper and lower case.

### One-Shot Search

Enter a full or partial Address, Contact, or POI into the search bar and the system will search and display all of the matches.

The contacts that are searched include both the connected phone's contacts list and the vehicle's contacts list.

### Search Process

The process of prioritizing the search is to help shorten the length of time at finding the results. If there is a 100% match found when a search type is carried out, the remaining searches abort.

The system conducts the search in the following order:

1. Vehicle Contacts List
2. Connected Phone Contacts List
3. POIs
4. Addresses

The Contacts are done first because the list will be relatively short and can be done quickly.

POIs are done next because the amount of time it takes to search for the average POI is consistent. The less deviation during a search would mean an average of less time taken.

The Addresses are last because the standard deviation for an address search is very large. Some address searches are very quick, but others may take very long. Because of this, the address search would not be conducted unless a good match could not be found in either Contacts or POIs.

### Autocomplete

The autocomplete is preloaded with all recent destinations and POI category names. Previous POI name searches are remembered.

If only one type of result is found, the single type result screen is shown. Within each group, they are listed in confidence order. This means the highest confidence result will be at the top.

If multiple types of matches are found, the result list with the highest confidence match displays.

Address and Contact matches are shown in full width list format. The match results will display unique

icons for full addresses, streets, intersections, cities, states, and countries.

POIs show in a split list format with the map on the right displaying the locations of the matches. The brand icon or category icon will display for the match results.

When a list displays, the results for a particular type can be filtered by touching the filter buttons along the top of the screen. If there are no particular results for a selected type, a message is indicated in the list.

For example:

- For no addresses: "No Addresses Found Within <state/region>"
- For no POIs: "No POIs Found Within<75 km/50 mi/800 km/500 mi>." This distance is shown depending on what radius is completed and what current units are selected.
- For no contacts: "No Contacts Found."

The system performs partial searches on contacts, so typing a first name or last name would find a match. The

entire contact name does not need to be entered for it to be found in a search.

Touching a contact listed on the results list displays the standard contact details view to select an item, such as an address to start routing, or a phone number to place a call.

### Address

- A destination can be searched by typing out the address, intersection, highway, or freeway entrance ramps on the keyboard. This information is typed and displayed in the information field. Touch the search icon to start the search.

For example:

**City:** Crawford

**Street:** Main Rd

**House #:** 12334

- State information does not have to be included in the search field if entering an address that is located in the same state.
- Whenever the keyboard view is entered, the last text that was typed, even if it was not searched on, will display.
- A partial or complete address can be typed in the search field. If a partial address is typed, the system attempts to use local knowledge to fill in additional information. For example, if no city name or state are given, the system assumes a search for something in the current city or a nearby city in the current state. The system is also capable of recognizing address formats according to other regions.

If a destination address or location being entered is outside of the country, the country abbreviation must be added after the address.

### Spelling Mistakes

The system is able to offer alternatives if the searched term is not found exactly. The system uses the closest term it finds and provides those results.

The system first searches the entered term exactly. If no matches are found, partial words are used.

### Search in Process

Touch the Search button, and the results screen displays with the activity indicator. There is a non-selectable List item in the list that says "Searching" to indicate that it is in process.

Once the results are found, the correct list screen will display.

## No Results Found


If no results are found from an entered search term, a pop-up displays indicating there are no results found. Touch the OK screen button to return to the keyboard view.

## Results Display

If only a single match is found at the end of a search, the list is not shown but the Destination Details view is shown. Touch Back from the Destination Details view to go back to the results list screen. If it was a POI search, the Continue POI Search button is available in case that was not the desired POI.

## Places of Interest (POI)

While at the Home Page, touch NAV on the Home Page to display a view of the map. Touch the DESTINATION screen button to go to the destination entry views.

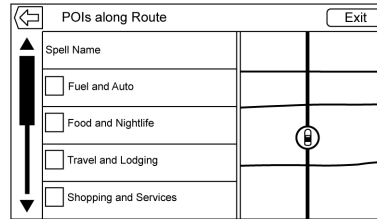

1. Touch the POIs screen button to display a list of POI categories.

The first list item in every POI list is a search function. For the highest level of categories, touch the Spell Name screen button or select a category and search within that selection.

2. Select a POI category to display subcategories.
3. If a selected subcategory has no results in the surrounding area, the search is expanded until a result is found.
4. If a high-level category is selected, such as restaurants, the map zooms in to the region near the vehicle's position to show the nearest matches. When a list displays, it can be filtered for a

particular type by touching the filter button along the top of the screen. If there are no particular results for a selected filter type, it is indicated in the list.


5. Pan or zoom the map using the finger gestures to minimize the POI list and to interact with the map. The icons that were shown before continue to be displayed and updated. The list is also updated based on where the map was panned or zoomed. The search for POIs is constrained to where the map has been moved to.
6. If the search map is touched to recenter, the crosshairs are shown to indicate the center of the new search location. If a POI icon is touched on while in the full expanded map, a callout for that location displays. Touch the callout to display the destination details view.
7. Touch the map reset button to return the map to automatic zooming and searching. It is recentered around the vehicle's



position, the route, the destination, or another location that was specified for the search. The map RESET button is only displayed if the map was manually adjusted.

If multiple types of matches are found, the All list is shown with the results sorted by confidence order with the highest confidence result at the top.

### Using the Keyboard

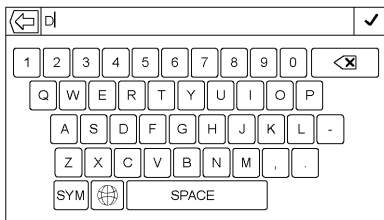

The POI can be searched by entering a POI name, category, name and category, or phone number on the keyboard.

For example, enter the information as:

**POI Name:** Worldwide Food

**POI Category:** Restaurants

**POI Name and Category:** Worldwide Food Restaurants

**POI Phone Number:** 0001222555


Additionally, a location may be entered if the POI is not nearby. This search will then be made around the location that is given.

For example, enter the information as:

**POI Name and Location:** Worldwide Food Chicago IL

The POI keyboard search results will display in the order in which they were found.

### POI Search Location

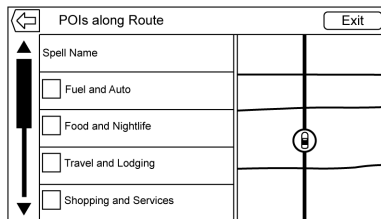

If browsing for POIs or searching for results on a keyboard in a different location than what was searched

previously, touch the Search Options button on the map view to specify a different location.

Touch an option displayed on the Select Search Area menu.

- POIs Along Route
- POIs Nearby
- POIs Near Destination
- POIs at Another Location

### Favorite POIs

Locations, categories, or a particular POI chain ID can be saved as Favorites in the POIs view.

Tap on the ▲ up arrow to reveal the interaction selector, then drag up on it to reveal the Favorites locations.

Touch and hold on a favorite location, then touch on the category to be saved. Whenever a set of POIs is grouped, such as in a category, the whole category is saved in the favorites for recall. Whenever a set of POIs that belong to the same chain ID is saved in the favorites, a POI chain saving pop-up message displays asking to save only that location, or to

save the entire chain. POIs are only grouped by chain when the sorting order is Alphabetical. Touch the Sort button to change the sorting order.

### Recalling a POI Category or Chain

If a POI category or chain favorite is recalled, the system displays a list of matching results defaulting to nearby, but allows a search of other locations. Touch the Search Options button to specify a different location.

### Creating and Downloading Predefined POIs (My POIs)

In addition to the POIs already stored in the infotainment system, predefined POIs can be created.

While creating a predefined POI, the GPS coordinates for longitude and latitude of the POI's location and a descriptive name will need to be entered.

After creating the predefined POIs, they can be downloaded to the infotainment system from a USB stick.

Once downloaded, the POI data becomes a selectable destination in the My POIs menu.

### Creating a Text File with Information

Create a text file by using a simple text editor software. Save this file with a name and extension of .csv, for example, "TomsPOI.csv."

Enter the POI information into the text file in the following format:

- Longitude coordinate, Latitude coordinate, "Name of POI," "Additional information," "Phone number."

Example: 7.0350000, 50.6318040, "Michaels Home," "123 Maple Lane," "02379234567."

- The GPS coordinates must be expressed in decimal degrees and can be taken from a geographical map. The additional information and phone number strings are optional.
- The POI name and the additional information string may not exceed 60 characters.
- POI information for each destination address must be entered in a single separate line.

### Storing the POI on a USB Drive

In the root directory of a USB drive, create a folder name "myPOIs." For example, "F:\\" is the root directory of the USB drive.

In the "myPOIs" folder, store the text file with your POIs, for example, "F:\myPOIs\TomsPOIs.csv."

### Downloading the POI to the Infotainment System

Connect the USB drive containing the POI information to the USB port of the infotainment system. A message displays prompting whether or not to download the POI information from the USB stick. All POIs found are saved even if they are in multiple folders.

Subfolders can also be created to organize the POIs into categories, for example, "F:\myPOIs\Restaurants\TomsPOIs.csv."

If the message is dismissed or ignored, no POI information is downloaded. This prompt will not reoccur for the current ignition cycle.

When the system is finished downloading, a pop-up displays asking to specify a category for the new POIs, if desired.

### **Importing and Overwriting Categories**

When POIs are found on a media device, the date of the file is examined and compared to the date for the files already in the system. If the file being downloaded is newer than the one on the system, that particular category of POIs is overwritten. Any other POIs that had previously been saved in other categories are not affected.

### **Address Book Download**

If an Address Book is found on the connected USB device, the same alert is used to indicate that locations have been found and they can be downloaded. If there is already content in the vehicle Contacts List, the system prompts if the stored content should be overwritten. Select Save to overwrite the existing Contacts information. Select Cancel to abort the import of information.

### **Browsing Downloaded POIs**

Access the downloaded POIs by selecting My POIs under Personal Data from the Menu list.

### **Edit My POIs**

Downloaded POIs can be edited at a category level. These POIs can either be deleted as an entire category or reassigned as another category. To edit the categories:

- Select the Edit button at the main category view to edit the POIs. Edit buttons display next to each category name. There is no POI browsing in this mode; only edit functions are available.
- Once an action such as deleting or reassigning has been selected, the changes are saved immediately.

### **Changing POI Categories**

POI Categories can be assigned to a different category by using the same method as assigning a category for a Contact entry. When editing, the right side of the infotainment displays the current category name.

### **Deleting POI Categories**

POI Categories can be deleted by selecting Edit and then Delete. A pop-up displays to confirm the deletion.


### **Saved Destinations**

Select a saved destination from the Contacts or Recent screen.

### **Contacts**

Select the Contacts button to view the vehicle's contact list or a connected Bluetooth device. If a particular contact has a single address associated with it, that contact has a Quick Route list item function button next to it. Contacts without this Quick Route button either have multiple addresses or no address at all. Touch the Quick Route button to go to the Destination Details view.

Touch on an address, either from the Quick Route on the contact list or a specific address from the contact detail list, to go to the destination view showing that address on the map.

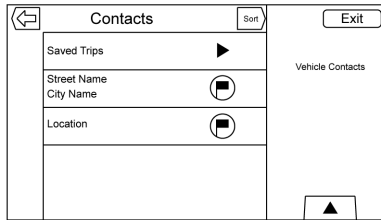

Trips from Contacts can be saved and recalled. The order is based on when the trip was last used. When the trips are saved, they are given a default title of the final destination name. If there are no saved trips, this list item is hidden.

### Adding New Contact

When creating a new contact, the navigation system automatically saves all data from the selected location into a new contact.

The information saved will store as:

- Location Name saved as First Name
- Phone Number saved as Work
- Address saved as Work
- POI Information Saved as Notes

- Category saved in Category Field
- After touching the Create New Contact screen button, the newly created contact is then displayed.

### Favorite Destinations


- Destinations can be saved as Favorites for recall later. Depending on the favorite, when an address or POI favorite is recalled, the Destination Details View is shown.
- When a favorite address is being routed to, it is shown active. Touch on the active favorite to suspend that route.
- Save locations as Favorites for recall later in the Destination Details View.
- Save trips from the Contacts List.

### Storing Favorites from the Contact Details List

A contact name or any of the contact's information such as phone number, e-mail address, or address from Contact Details can be stored as a Favorite.

- Touch and drag up on the row of interaction selector buttons to reveal the Favorite buttons.
- Touch and hold on the favorite location while viewing a contact on the Contact Details List. The contact name and all contact information can be stored.
- Touch to save as a favorite. The favorite label will be the name of the contact.
- Touch on the Favorite to display the destination view.

### Storing Favorites from Map

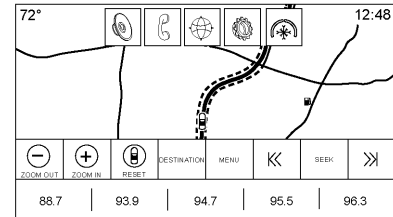


Favorite locations can be stored from the Map View.

If not under route guidance, the current vehicle location will be saved as a Favorite. If under route guidance, the final destination will be saved.

Touch and drag up on the row of interaction selector buttons to reveal the Favorite buttons. Touch and hold on the favorite location from the Map View to save it.

### Route Guidance

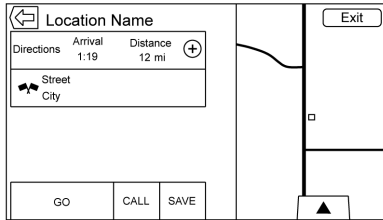

- Touch Go to go to the main navigation view and to start route guidance.
- If the system has an active route, a pop-up will display, “What would you like to do with this destination?” The options are: Add As Waypoint, Set New Destination, or Cancel.

- If a waypoint is added, it is placed in the location that leads to the most efficient route.
- There is a maximum number of waypoints that can be added to the system. When the maximum number of waypoints has been reached, a pop-up displays indicating that a waypoint must first be deleted before a new one can be added. The system will hold this waypoint into a Pending Waypoints list and will automatically be added to the route once a position is available, either by arriving at a waypoint, or by deleting one.
- To save a location, tap on the ▲ to display the Favorite buttons. Touch and hold on a favorite location to save the shown location as a Favorite.

### Estimated Time of Arrival (ETA) and Distance

- When under route guidance, the system shows the ETA or travel time, or the driving distance.


- The ETA and travel time are calculated using any available traffic information.
- If in a waypoint trip, the ETA, travel time, and driving distance are all shown relative to the final destination.
- The final ETA is shown taking into consideration any time zone crossings that the route has traveled through.
- Touch the ETA information area to switch between the estimated arrival time, total driving time resulting, and driving distance.

### Current Street Name

The current street name that the vehicle is driving on is displayed along the bottom center of the display.

When driving off-road or on an unknown road, “Off Road Location” displays.


## City Lane Guidance

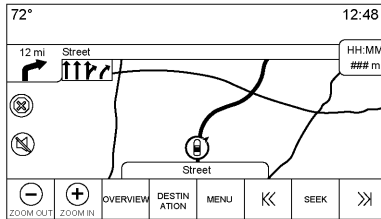

When a maneuver is approached that has city lane guidance information, it replaces the normal maneuver indicator.

The arrows will expand toward the center of the screen so that the maneuvers can be identified in an easier way.

## Highway Lane Guidance

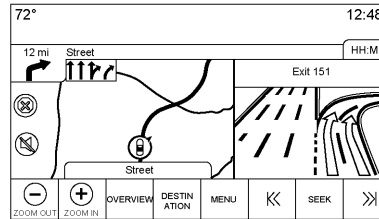

The junction view image displays on the right edge of the screen and temporarily covers the Distance information. The current vehicle position and street name is moved left and centered in the available map display when this is displayed.

## Off-Road Mode

When the vehicle is off-road, the system displays the off-road arrow in the turn indicator and displays “Off Road Location” in the street name field.

## Destination Arrival

The route review information displays in the turn indicator location and the destination address displays in the street name field.

## Audio Information

The audio information remains in the same position in the lower right corner of the display.

The current street name information remains in the same location, but will truncate if needed.

## Turn List

Touch on the next turn indicator shown on the map to display the turn list or waypoint list. The interaction selector is minimized automatically.

Touch ▲ to reveal the following options:

## Destination

Touch the Destination screen button to add a waypoint or change the destination while viewing the turn list. When the Destination screen button is touched, the display shows the Destination screens.


## End Guidance

Touch the End screen button to suspend the current route in the turn list. When the End screen button is touched, the turn list is exited and the display returns to the main map view.

## Avoid Areas

Touch the Avoid Areas screen button to select the highway name that is to be avoided. The system shows a pop-up asking how many miles or if the entire road should be avoided.

## Turn List

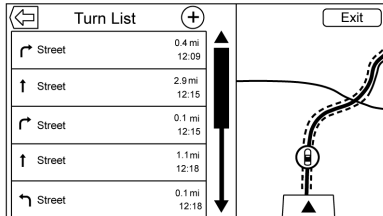

- When under a waypoint trip, touch on the Turn List interaction selector button to show the turn list. When entering a turn list, the next maneuver instruction is spoken.


- The turn list title is the name or address of the destination. Touch on the information button next to the name of the destination to display the destination information.
- The turn list is sorted in order with the next maneuver at the top of the list and the subsequent maneuvers listed below it. The next maneuver is always highlighted upon entry into the Turn List to quickly show what the next maneuver is.
- Each maneuver indicates the distance between it and the previous maneuver or the vehicle's current location. The next maneuver at the top will count down until the maneuver is reached, and then the next maneuver will begin to count down.
- Each maneuver has an estimated time of arrival based on the current driving conditions.

## Saved Trips

Waypoint trips can be saved for later recall. Touch the Add button in the waypoints list to save the trip to the Saved Trips list in the vehicle's contacts list. When trips are saved, they are given a default title of the final destination. Saved trips can be edited by selecting the Edit list item button to access the edit screen for the saved entry. The only field that can be edited is the name field. Touch on the name field to access the keyboard view. Type the name change. This change is automatically saved when executed by the keyboard.

The saved trip can also be deleted from the edit mode. Touch the delete button and a delete confirmation pop-up will display.

## Waypoints

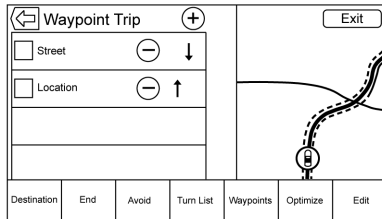

- When under a waypoint trip, touch on the next turn indicator to bring up the waypoint list. The last waypoint view is shown, which could be Waypoints, Turn List, or Edit.
- The waypoint list is sorted in order with the next waypoint at the top of the list. Each waypoint is indicated with a numbered icon, starting with the next waypoint.
- To indicate what segment of the route is for the next waypoint, and what is for the remainder of the route, they appear in different colors.

## Optimized Route

- Touch the Optimize screen button to optimize the current waypoint trip.
- The optimization is done according to how the preferences are set for new routes; for example, fastest route, shortest distance, or eco friendly.
- While the system is optimizing the route, the waypoint trip has the activity indicator displayed over top of it. If the system is calculating the ETA and travel distance for a waypoint, the activity indicator is displayed in the list header.
- When either a waypoint trip is first created, or additional waypoints are added to an existing waypoint trip, they are added in the location that would lead to an optimized route.
- If a destination is already planned and a waypoint is added, it is either added before or after the current destination, whichever leads to the most optimal route.

- If under an existing waypoint trip consisting of two or more destinations, any additional waypoints are added in the location that would lead to the most optimal route.

## Edit Route

- Touch the Edit screen button to modify the order or remove a waypoint from the route. Touch the delete screen button to remove a waypoint from the route.
- A pop-up displays asking for confirmation of the waypoint deletion.

## SiriusXM Travel Link Weather

If equipped, SiriusXM Travel Link Weather is available on the navigation system through a service fee subscription.

Touch WEATHER on the Home Page. The system displays a weather page with a default view of the hourly forecast. The other available views are tabs in the interaction selector on the bottom of the display.




These weather option displays are:

1. **Hourly:** The Hourly Forecast view shows the current day's forecast split into 3-hour increments.
2. **5-day:** The 5-day view shows the current day's forecast as well as the next four days.
3. **On Route:** The On Route view shows the forecasted weather for the route. This feature is only available while under route guidance.
4. **Location:** The Location view is where the city can be selected to receive and display weather data.
5. **Map:** The Map view shows three levels of zoom on the left side of the map. These zoom views are Near, Mid, and Far. Touch any one to change the zoom level.
6. **Menu**

Allow approximately 15 minutes for the current weather in the area to display.

### Weather Screen Not Under Guidance

The weather application uses the navigation system to provide the appropriate information for the guidance route. When not under guidance, it defaults to the current location.

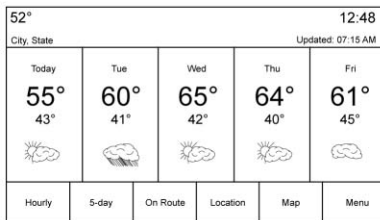


**City and State/province :** The city and state/province are displayed for the view currently shown. The default is the current city and state/province that the vehicle is in.

### Forecast Information

- The map can be panned to another location. The forecast information is updated to the new location.

- The city and state/province update to reflect the current location.

### Location

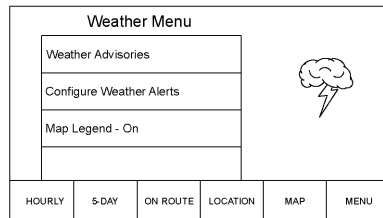

Under the Location view there are options to select for displaying the desired location.

These options are:

1. Search

Touch the Search screen button to access the keyboard. The city or zip code can be typed in. If there is a single match, the map view returns to the last known view before clicking on the location tab. If there are multiple matches, there is a list with the possible choices. Select one to return to the last known view.


2. Recent

Recent locations are a standard list. The Recent Locations are chronologically ordered.

3. Nearby

Nearby locations are a standard list. The Nearby Locations are based on how many miles away.

**Map**

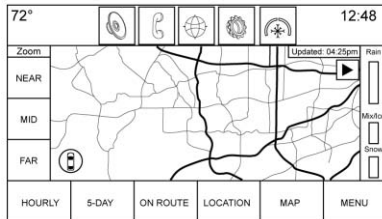


The Map view shows three levels of zoom on the left side of the map. There is also a play screen button to start the weather map moving. For the moving map, the other interaction elements will fade away except or the time an a pause button. Touch anywhere on the display to return the view to pause. There is a reset button

in the lower left corner of the map. Touch the reset button to reset back to the current vehicle position.

**Weather Menu**

Touch MENU on the Weather interaction selector along the bottom of the map screen to display the Weather Menu.

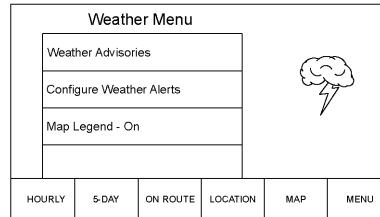

The options are:

- **Weather Advisories:** Any weather advisories that are in effect for the local area or while on route are displayed in a list. Touch on an advisory from the list to display a screen that gives additional details about the advisory and shows the advisory location on the map.

- **Configure Weather Alerts:** Touch to access the Weather Alerts menu. Touch the Weather Alerts line item to turn the alerts On or Off. Touch to select any one of the other line items such as High Alert, Low Alert, Informational Alert to filter the selected alerts for display, while the others will be suppressed.
- **Map Legend:** Touch to display the Map Legend.

**Interaction Selector**

The interaction selector at the bottom of the screen can be used to switch between different views within the weather screen.

These buttons are:

- **ZOOM:** Touch to zoom the map in or out.
- **HOURLY:** Touch to display the hourly forecast for the current vehicle location. A forecast icon is shown for each period available.

- **5 DAY:** Touch to display the current weather, six-hour forecast, and tomorrow's weather. A forecast icon is shown for each period available.
- **LOCATION:** Touch to select a city to receive and display weather data..
- **MAP:** Touch to display a map view of the current weather around the area of the vehicle's position.
- **MENU:** Touch to display the current advisories, turn weather alerts on or off, and view the map legend.

The map legend explains each type of color or symbol on the map.

### SiriusXM NavTraffic

If equipped, the infotainment system may have SiriusXM NavTraffic<sup>®</sup>. It is a subscription service provided through SiriusXM Satellite Radio. A service fee is required to receive the SiriusXM NavTraffic service.

Detailed traffic information is delivered to the vehicle's navigation system by the SiriusXM Radio


satellites. SiriusXM NavTraffic provides continuously updated traffic information.

The service may be available in more cities in the future. See [www.siriusxm.com/navtraffic/marketcoverage](http://www.siriusxm.com/navtraffic/marketcoverage) for more details on local coverage.

To access the traffic features, touch the Traffic screen button on the Map Menu.

If traffic is not available because there is no valid SiriusXM subscription, a pop-up displays information on how to reactivate the subscription and SiriusXM radio ID.

### Traffic Alert While Under Guidance

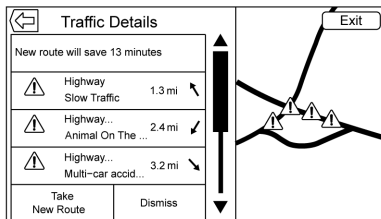


If data is received about a traffic development on the route ahead, a search for a better route is performed. If a better route is found, information may be displayed in an alert. This alert displays the route information and how much time may be saved. If the alternative route is accepted, the current route will be altered.

If the alert is not acknowledged, the alert automatically times out and does not modify the route.

The detail view of the incident shows any data about the incident as well as how much time could be saved by avoiding it. The map view shows the incident, the original route, and the suggested route. If voice prompts are enabled, the incident information is spoken. Touch the Take New Route screen button to change to the new route.

## Traffic Alert While Not Under Guidance

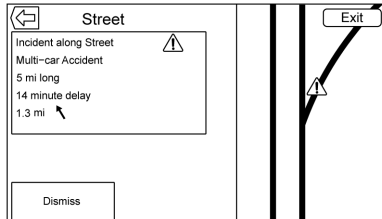

While driving and not under guidance, the system can receive data indicating an accident or slow traffic flow. The information about the incident or slow traffic is displayed as an alert when the incident is 5 km (3 mi) ahead. The incident can be viewed on the map. Touch the Dismiss screen button to return to the previous map.

## SiriusXM Travel Link Movie Listings

A movie theater POI can be searched through a POI search or browsed through the POI category structure. When SiriusXM Travel Link Movie Listings information is available for

the selected theater, this detailed information is shown in the additional details area of the display.

The details that are shown depend on the source of the information.

Details shown include:

- Movie Names
- Parental Ratings (G, PG-13, R, etc.)
- Showtimes
- Runtime

## SiriusXM Travel Link Fuel Pricing

When SiriusXM Travel Link Fuel Pricing information is available for a particular fuel station, the price displays for the regular unleaded or diesel fuel, depending on the fuel type configured in the system.

This fuel station POI can either be searched for through a POI search or browsed through the POI category structure.

- Touch the Sort button to change the sort method. The default sort method is based on distance with the closest fuel stations shown at the top of the list.

- Touch the Sort button to cycle through the sorting options of distance, price, or name. The last viewed sorting method is displayed and is retained over ignition cycles.

If the sorting method of price has been selected, the fuel stations in the list will appear from the lowest to the highest price based on the fuel type selected. For gasoline, the price shown is for regular unleaded. When diesel is selected as the fuel type, the diesel price is shown.

## OnStar<sup>®</sup> System

With an OnStar subscription to the Guidance Plan, an OnStar Advisor can download a destination to the vehicle or into the built-in navigation system. If an OnStar Turn-by-Turn route is in progress, all other internal navigation functions are disabled until the route is completed.

When navigation is selected, the OnStar Turn-by-Turn screens display.

## Turn-by-Turn Navigation

Touch the MENU button to go to the Turn-by-Turn Menu.

The following options display:

- Plan Route (if the vehicle is off the route)
- Cancel

## Plan Route

Select My Destination to display a special version of the Maneuver View. The Destination Address is displayed in the Street Name and the total distance to the destination is displayed in the Distance to Maneuver View. Touch the Done button to return to the Maneuver View.

## Cancel a Route

If a route is in progress using either the vehicle navigation system or the OnStar Turn-by-Turn route, and a new route is requested, the current route in progress will be canceled.

An OnStar Advisor can cancel the vehicle navigation system route. Route guidance can be resumed by selecting the Resume To screen button in the Map Menu.

## Settings

Touch SETTINGS on the Home Page to adjust features and preferences, such as Time and Date, Driving Mode, Language, Valet Mode, or Radio. For setting options, see *Settings* ⇨ 102.

A few of the setting options change the way the navigation system displays or reacts while in use.

1. Touch SETTINGS on the Home Page.
2. Touch the scroll bar until the desired option displays. Select the desired settings to change.

## Driving Mode

If equipped, touch Driving Mode on the Home Page to access the Driving Mode visualization screen. From the visualization screen, Driving Mode shows the current driving configuration. See “Driving Mode” in the owner manual.

## Voice

Voice recognition allows for hands-free operation within the navigation, audio, phone, and weather applications. See *Voice Recognition* ⇨ 88.

Touch the voice screen button to display the Voice menu.

**Confidence Threshold :** Touch to change the sensitivity of the voice recognition system.

**Prompt Length :** Touch to change the prompt length to Short or Long.

**Audio Feedback Speed :** Touch to change the audio feedback speed to Slow, Medium, or Fast.

## Display

Touch to access display options:

**Proximity Sensing :** Touch to turn the sensing On and Off, or to turn sensing On for Map Only.

**Calibrate Touchscreen :** Touch to display the infotainment display Calibration Screen.

**Turn Display Off :** Touch to turn the Display option off.

## Rear Camera


Touch to access the rear camera options:

- **Guidance Lines** – Touch to turn the guidance lines option On or Off.
- **Rear Park Assist Symbols** – Touch to turn the rear park assist symbols option On or Off.
- **Return to Factory Settings** – Touch to access options such as:
  - Restore Vehicle
  - Clear All Private Data
  - Restore Radio Settings

See the owner manual.

## Low Fuel Alert

If the vehicle reaches a low fuel level, the system displays an alert about the low fuel condition. Touch the More Info screen button to view nearby gas stations and start guidance, if desired.

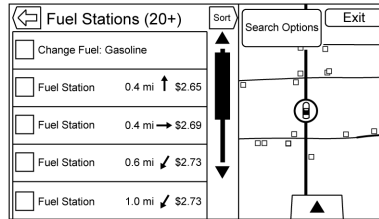

If the remaining driving distance is available from the system, this is included in the alert.

## Global Positioning System (GPS)

The position of the vehicle is determined by using satellite signals, various vehicle signals, and map data.

At times, other interference such as the satellite condition, road configuration, condition of the vehicle, and/or other circumstances can affect the navigation system's ability to determine the accurate position of the vehicle.

The GPS shows the current position of the vehicle using signals sent by GPS satellites. When the vehicle is not

receiving signals from the satellites, a symbol appears on the map screen. See *Navigation Symbols* ⇨ 64.

This system might not be available or interference can occur if any of the following are true:

- Signals are obstructed by tall buildings, trees, large trucks, or a tunnel.
- Satellites are being repaired or improved.

For more information if the GPS is not functioning properly, see *Problems with Route Guidance* ⇨ 86 and *If the System Needs Service* ⇨ 87.

## Vehicle Positioning

At times, the position of the vehicle on the map could be inaccurate due to one or more of the following reasons:

- The road system has changed.
- The vehicle is driving on slippery road surfaces such as sand, gravel, or snow.
- The vehicle is traveling on winding roads or long, straight roads.

- The vehicle is approaching a tall building or a large vehicle.
- The surface streets run parallel to a freeway.
- The vehicle has been transferred by a vehicle carrier or a ferry.
- The current position calibration is set incorrectly.
- The vehicle is traveling at high speed.
- The vehicle changes directions more than once, or the vehicle is turning on a turn table in a parking lot.
- The vehicle is entering and/or exiting a parking lot, garage, or a lot with a roof.
- The GPS signal is not received.
- A roof carrier is installed on the vehicle.
- Tire chains have been installed.
- The tires are replaced or worn.
- The tire pressure for the tires is incorrect.

- This is the first navigation use after the map data is updated.
- The 12-volt battery has been disconnected for several days.
- The vehicle is driving in heavy traffic where driving is at low speeds, and the vehicle is stopped and started repeatedly.

## Problems with Route Guidance

Inappropriate route guidance can occur under one or more of the following conditions:

- The turn was not made on the road indicated.
- Route guidance might not be available when using automatic rerouting for the next right or left turn.
- The route might not be changed when using automatic rerouting.
- There is no route guidance when turning at an intersection.
- Plural names of places might be announced occasionally.

- It could take a long time to operate automatic rerouting during high-speed driving.
- Automatic rerouting might display a route returning to the set waypoint if heading for a destination without passing through a set waypoint.
- The route prohibits the entry of a vehicle due to a regulation by time or season or any other regulation which may be given.
- Some routes might not be searched.
- The route to the destination might not be shown if there are new roads, if roads have recently changed, or if certain roads are not listed in the map data. See *Maps* ⇨ 64.

To recalibrate the vehicle's position on the map, park with the vehicle running for two to five minutes, until the vehicle position updates. Make sure the vehicle is parked in a location that is safe and has a clear view of the sky and away from large obstructions.

## If the System Needs Service

If the navigation system needs service and the steps listed here have been followed but there are still problems, see *Problems with Route Guidance* ⇨ 86.

## Map Data Updates

The map data in the vehicle is the most up-to-date information available when the vehicle was produced. The map data is updated periodically, provided that the map information has changed.

For questions about the operation of the navigation system or the update process, contact the GM Nav Disc Center toll-free phone number, 1-877-NAV-DISC (1-877-628-3472) or go to the center's website, [www.gmnavdisc.com](http://www.gmnavdisc.com). If updates are needed, call the GM Nav Disc Center or order online.

To order, have the vehicle's Vehicle Identification Number (VIN) available to ensure the correct and most

up-to-date map data for the vehicle is sent. See "Vehicle Identification Number (VIN)" in the owner manual.

## Database Coverage Explanations

Coverage areas vary with respect to the level of map detail available for any given area. Some areas feature greater levels of detail than others. If this happens, it does not mean there is a problem with the system. As the map data is updated, more detail can become available for areas that previously had limited detail. See *Map Data Updates* ⇨ 87.



## Voice Recognition

Voice recognition allows for hands-free operation within the navigation, audio, phone, and weather applications. This feature can be started by pressing  $\mathbb{K}$  on the steering wheel or  $\mathbb{K}$  on the infotainment display.

However, not all features within these areas are supported by voice commands. Generally, only complex tasks that require multiple manual interactions to complete are supported by voice commands.

For example, tasks that take more than one or a two button touch such as selecting a song or artist to play from a media device would be supported by voice commands. Other tasks, like adjusting the volume or seeking up or down, are audio features that are easily performed by touching one or two buttons, and are not supported by voice commands.

In general there are flexible ways to speak commands for completing the tasks. Most of them, except destination entry and voice keypad,

can be completed in a single command. If the task takes more than one command to complete, the first command should be to indicate the kind of task to be performed, like “Navigation Destination Entry.” The system replies with prompts that lead you through a dialog to enter the necessary information. For example, if a destination for route guidance is needed, say “Navigation” or “Destination Entry.”

If your language supports it, try stating a One-Shot command, such as “Navigate to Address one two three Main Street, Lansing Michigan.” This type of destination entry command is supported in some languages. Another example of a One-Shot Destination Entry command is, “Navigate to Place of Interest – Hotels.” If these commands do not work, try saying, “Navigate to Place of Interest” or “Navigate to Address” and the system will do the rest.


Voice recognition can be used when the ignition is on or when Retained Accessory Power (RAP) is active. See “Retained Accessory Power (RAP)” in the owner manual.


## Using Voice Recognition

Voice recognition becomes available once the system has been initialized. This begins when the ignition is turned on. Initialization may take a few moments.

1. Press  $\mathbb{K}$  on the steering wheel controls to activate voice recognition, or touch  $\mathbb{K}$  on the infotainment display.
  - If voice recognition is started from the steering wheel control, the instrument cluster displays the selections and visual dialog content.
  - If voice recognition is started from the infotainment display, the selections and visual dialog content are displayed on both the infotainment display and the instrument cluster display.
2. The audio system mutes and the system plays a prompt followed by a beep.

- Wait until after the beep completes, then clearly speak one of the commands described in this section.

A voice recognition system prompt can be interrupted while it is playing by pressing  again.

For example, if the prompt seems to be taking too long to finish, press  again and the beep should happen right away.

There are two voice prompt modes supported:

- Long verbal prompts: The longer prompts provide more information regarding the supported actions.
- Short prompts: The short prompts provide simple instructions about what can be stated.

If a command is not spoken, the voice recognition system says a help prompt.

### Prompts and Infotainment Displays


While a voice recognition session is active, there will be corresponding buttons on screens displayed. Manual

interaction in the voice recognition session is permitted. Interaction during a voice session may be completed entirely using voice commands, or some selections may expedite a session. If a selection is made using a manual control, the dialog will progress in the same way as if the selection was made through a voice command. Once the system is able to complete the task, or the session is terminated, the voice recognition dialog stops.

An example of this type of manual intervention is touching on an entry of a displayed number list instead of speaking the number associated with the entry desired.

### Canceling Voice Recognition

- Touch the Home screen button. Touching this button will terminate the voice recognition session.
- Touch or say “Cancel” or “Exit” to terminate the voice recognition session and display the screen from which voice recognition was initiated.


- Press  on the steering wheel controls to terminate the voice session and display the screen from which voice recognition was initiated.

Most languages do not support natural language commands in sentence form. For those languages, use direct commands like the examples shown on the display.

### Helpful Hints for Speaking Commands

Voice recognition can understand commands that are either naturally stated in sentence form or direct commands that state the application and the task.

For best results:

- Listen for the prompt and wait for the beep before saying a command or reply.
- Say “Help” or look at the infotainment display for example commands.
- A voice recognition system prompt can be interrupted while it is playing by pressing  again.

For example, if the prompt seems to be taking too long to finish, to speak the command without waiting for the prompt to complete, press  $\text{⏏}$  again and wait for the beep.

- Speak the command naturally, not too fast, not too slow. Use direct commands without a lot of extra words.
- Usually Phone and Audio commands can be spoken in a single command.

For example, “Call Dave Smith at work,” “Play” followed by the artist or song name, or “Tune” followed by the radio station number.

- Navigation destinations are too complex for a single command. First, state a command that explains the type of destination needed, such as I want directions to an “Address,” “Navigate to an intersection,” “I need to find a Place of Interest or POI,” or “Directions to a Contact.” The system responds with requesting more details. After saying “Place of Interest,” only major chains are

available by name. Chains are businesses with at least 20 locations. For other POIs, say the name of a category like “Restaurants,” “Shopping Malls,” or “Hospitals.”

Some languages support complete destination requests in a single command. If your language supports it, try stating a One-Shot command such as, “Navigate to Address one two three Main Street, Lansing Michigan.” Another example of a One-Shot Destination Entry command is, “Navigate to Place of Interest – Hotels.” If these commands do not work, try saying “Navigate to Place of Interest” or “Navigate to Address” and the system will come back and ask for details of your destination.

Most languages do not support natural language commands in sentence form. For those languages, use direct commands like the examples shown on the display.

There is no need to memorize specific command words. Direct commands might be more clearly understood by the system. An example of a direct


command would be “Call 555-1212.” Examples of these direct commands are displayed on most of the screens while a voice session is active. If “Phone” or “Phone Commands,” is stated, the system understands that a phone call is requested and will respond with questions until enough details are gathered.

If the phone number has been saved with a name and a place, the direct command should include both, for example “Call Dave Smith at work.”

### **Using Voice Recognition for List Options**


When a list is displayed, a voice prompt will ask to confirm or select an option from that list. A selection can be made by manually selecting the item, or by speaking the line number for the item to select.

When a screen contains a list, there may be options that are available but not displayed. The list on a voice recognition screen functions the same as a list on other screens. Scrolling or flinging can be used to help display other entries from the list.

Manually scrolling or paging the list on a screen during a voice recognition session suspends the current voice recognition event and plays the prompt “Make your selection from the list using the manual controls, touch  to try again.”

If manual selection takes more than 15 seconds, the session terminates and prompts that it has timed out. The screen returns back to the screen where voice recognition was initiated.

### The Back Command


Say “Back” or touch  to go to the previous screen.

If in voice recognition, and “Back” is stated all the way through to the initial screen, then “Back” is stated one more time, the voice recognition session will cancel.


### Help

Say “Help” on any voice recognition screen and the help prompt for the screen is played. Additionally, a pop-up displays a text version of the help prompt. Depending on how voice recognition was initiated, the Help

pop-up will either display on the instrument cluster or the infotainment display. Touch the Dismiss screen button to make the pop-up go away.

Touching  while the help prompt is playing will terminate the prompt and a beep will be heard. Doing this will stop the help prompt so that a voice command can be used.

### Voice Recognition for the Radio

All audio screens have a voice recognition button () to launch audio voice recognition. If the voice button is touched in a radio screen, the voice commands for radio and media features are available.

“**Switch to AM**” : Switch bands to AM and tune to the last AM radio station.

“**Switch to FM**” : Switch bands to FM and tune to the last FM radio station.

“**Switch to SXM**” : Switch bands to SiriusXM and tune to the last SiriusXM channel.

### “**Tune to <AM frequency> AM**” :

Tune to the radio station whose frequency is identified in the command (like “nine fifty”).

### “**Tune to <FM frequency> FM**” :

Tune to the radio station whose frequency is identified in the command (like “one oh one point one”).

### “**Tune to <AM frequency> AM HD**” :

Tune to the HD Radio station whose frequency is identified in the command.

### “**Tune to <FM frequency> FM HD**” :

Tune to the HD Radio station whose frequency is identified in the command.

### “**Tune to <FM frequency> FM HD <HD channel number>**” :

Tune to the HD Radio station whose frequency and HD channel is identified in the command.

“**Tune to SXM <SXM channel number>**” : Tune to the SiriusXM radio station whose channel number is identified in the command.

**“Tune to SXM <SXM channel name>”** : Tune to the SiriusXM radio station whose channel name is identified in the command.

## Voice Recognition for Navigation

**“Navigation”** : Begin a dialog to enter specific destination information.

**“Navigation Commands”** : Begin a dialog to enter specific destination information.

**“Destination Address”** : Begin a dialog to enter a specific destination address, which includes the entire address consisting of the house number, street name, and city and state.

**“Destination Intersection”** : Begin a dialog to enter a specific destination intersection.

**“Destination Place of Interest”** : Begin a dialog to enter a destination Place of Interest category or major brand name (if equipped).

Not all brand names of businesses are available for voice entry. Most major chains, such as chains with more than

20 locations, should be available to search for by name, but the name must be precisely spoken. Nicknames or short names for the businesses will not likely be found. Lesser known businesses might have to be located by category, such as fast food, hotels, or banks.

**“Destination Contact”** : Begin a dialog to enter a specific destination contact name.

**“Cancel Route”** : End route guidance.

If your language supports it, try stating a One-Shot command to enter a destination, such as “Navigate to address one two three Main Street, Lansing Michigan.” Another example of a One-Shot Destination Entry command is “Navigate to Place of Interest – Hotels.” If these commands do not work, try saying “Navigate to Place of Interest” or “Navigate to Address” and the system will come back and ask for details of your destination.

## Voice Recognition for the Phone

**“Call <contact name>”** : Initiate a call to an entered contact. The command may include location if the contact has location numbers stored.

**“Call At Home <contact name> ,” “At Work,” “On Mobile,” or “On Other”** : Initiate a call to an entered contact and location at home, at work, on mobile device, or on another phone.

**“Call <phone number>”** : Initiate a call to a standard phone number or emergency number.

**“Pair Phone”** : Begin the Bluetooth pairing process. Follow instructions on the radio display.

**“Redial”** : Initiate a call to the last dialed number.


**“Switch Phone”** : Select a different phone for outgoing calls.

**“Voice Keypad”** : Begin a dialog to enter special numbers like international numbers. The numbers can be entered in groups of digits with each group of digits being repeated back by the system. If the group of

digits is not correct, the command “Delete” will remove the last group of digits and allow them to be re-entered. Once the entire number has been entered, the command “Call” will start dialing the number.

**“Voice Mail”** : Initiate a call to voice mail numbers.

### **Voice Pass-Thru**

Voice pass-thru/Siri<sup>®</sup> Eyes Free allows access to the voice recognition commands on the cell phone, for example, Siri or Voice Command. See the cell phone manufacturer's user guide to see whether the cell phone supports this feature. To activate the phone voice recognition system, press and hold  on the steering wheel controls for a few seconds.

This enhances the normal use of Siri. Siri allows access to text messages, calendars, and audio sources such as Pandora or iTunes.

### **Voice Recognition for OnStar (If Equipped)**

**“OnStar”** : Begin OnStar Voice Recognition.

### **Voice Recognition for Weather (If Equipped)**

**“Weather”** : Begin a dialog to enter a weather location.

## Phone

### Bluetooth (Overview)

The Bluetooth-capable system can interact with many cell phones, allowing:

- Placement and receipt of calls in a hands-free mode.
- Sharing of the cell phone's address book or contact list with the vehicle.

To minimize driver distraction, before driving, and with the vehicle parked:


- Become familiar with the features of the cell phone. Organize the phone book and contact lists clearly and delete duplicate or rarely used entries. If possible, program speed dial or other shortcuts.
- Review the controls and operation of the infotainment system.
- Pair cell phone(s) to the vehicle. The system may not work with all cell phones. See "Pairing" in this section.


Vehicles with a Bluetooth system can use a Bluetooth-capable cell phone with a Hands-Free Profile to make and receive phone calls. The infotainment system and voice recognition are used to control the system. The system can be used while in ON/RUN or ACC/ACCESSORY. The range of the Bluetooth system can be up to 9.1 m (30 ft). Not all phones support all functions and not all phones work with the Bluetooth system. See [www.gm.com/bluetooth](http://www.gm.com/bluetooth) for more information about compatible phones.

### Controls

Use the buttons on the infotainment system and the steering wheel controls to operate the Bluetooth system.

### Steering Wheel Controls

 : Press to answer incoming calls and start voice recognition.

 : Press to end a call, decline a call, or cancel an operation. Press to mute or unmute the infotainment system when not on a call.

### Infotainment System Controls

For information about how to navigate the menu system using the infotainment controls, see *Introduction* ⇨ 2.

**PHONE** : Touch PHONE on the Home Page to enter the phone main menu.

### Audio System

When using the Bluetooth phone system, sound comes through the vehicle's front audio system speakers and overrides the audio system. Press just above the chrome volume bar during a call to change the volume level. The adjusted volume level remains in memory for later calls. The system maintains a minimum volume level.

### Bluetooth (Infotainment Controls)

For information about how to navigate the menu system using the infotainment controls, see *Introduction* ⇨ 2.

## Pairing

A Bluetooth-enabled cell phone must be paired to the Bluetooth system and then connected to the vehicle before it can be used. See the cell phone manufacturer's user guide for Bluetooth functions before pairing the cell phone.

### Pairing Information

- A Bluetooth phone with music capability can be paired to the vehicle as a phone and a music player at the same time.
- Up to 10 devices can be paired to the Bluetooth system.
- The pairing process is disabled when the vehicle is moving.
- Pairing only needs to be completed once, unless the pairing information on the cell phone changes or the cell phone is deleted from the system.
- If multiple paired cell phones are within range of the system, the system connects to the paired cell phone in the order that they were last used in the system. To link to

a different paired phone, see “Linking to a Different Phone” later in this section.

### Pairing a Phone

1. Touch PHONE on the Home Page.
2. Select Phones and select Pair Device.
3. A four-digit Personal Identification Number (PIN) appears on the display. The PIN, if required, may be used in Step 5.
4. Start the pairing process on the cell phone to be paired to the vehicle. See the cell phone manufacturer's user guide for information on this process.
5. Locate “Cadillac CUE” on the display. Follow the instructions provided in Step 3 on the cell phone to enter the PIN or confirm the six-digit code shown on the display. After the PIN is successfully entered or the code is confirmed, the system responds with “<Device name>

has been successfully paired” when the pairing process is complete.

6. If “Cadillac CUE” does not appear, turn the phone off or remove the phone battery and retry.
7. If the phone prompts to accept connection or allow phone book download, select Always Accept and Allow. The phone book may not be available if not accepted.
8. Repeat Steps 1–7 to pair additional phones.

### Listing All Paired and Connected Phones

1. Touch PHONE on the Home Page.
2. Select Phones.


### Disconnecting a Connected Phone

1. Touch PHONE on the Home Page.
2. Select Phones.
3. Touch the **X** next to the phone to disconnect.



### Deleting a Paired Phone

Only disconnected phones can be deleted.

1. Touch PHONE on the Home Page.
2. Select Phones.
3. Touch the  next to the phone to delete and follow the on screen prompts.

### Linking to a Different Phone

To link to a different phone, the new phone must be in the vehicle and paired to the Bluetooth system.

1. Touch PHONE on the Home Page.
2. Select Phones.
3. Select the new phone to link to from the not connected device list.

### Switching to Handset or Handsfree Mode

To switch between handset or handsfree mode, touch PHONE on the Home Page to display “Call View.”

- While the active call is hands-free, touch the Handset screen button to switch to the handset mode. The screen button changes to Handsfree once the Bluetooth device confirms it is operating as handset.
- While the active call is on the handset, touch the Handsfree screen button to switch to the hands-free mode. The screen button changes to Handset once the Bluetooth device confirms it is operating as hands-free.

### Making a Call Using Contacts and Recent Calls

Calls can be made through the Bluetooth system using personal cell phone contact information for all phones that support the Phone Book feature. Become familiar with the phone settings and operation. Verify the cell phone supports this feature.

When supported, the Contacts and Recent Calls menus are automatically available.

The Contacts menu accesses the phone book stored in the cell phone.

The Recent Calls menu accesses the recent call list(s) from your cell phone.

To make a call using the Contacts menu:

1. Touch PHONE on the Home Page.
2. Select Contacts.
3. Select the name to call.
4. Select the desired contact number to call.

To make a call using the Recent Calls menu:

1. Touch PHONE on the Home Page.
2. Select Recent.
3. Select the name or number to call.
4. If necessary, select between Missed, Recent, and Sent calls by selecting the View button in the top right corner of the list.

## Making a Call Using the Keypad

To make a call by dialing the numbers:


1. Touch PHONE on the Home Page.
2. Select Keypad and enter a phone number.
3. Select Call to start dialing the number.

## Accepting or Declining a Call

When an incoming call is received, the infotainment system mutes and a ring tone is heard in the vehicle.


### Accepting a Call

There are three ways to accept a call:

- Press  on the steering wheel controls.
- Press Answer on the infotainment display.
- Press Answer on the instrument cluster using the select button.

### Declining a Call

There are three ways to decline a call:


- Press  on the steering wheel controls.
- Press Ignore on the infotainment display.
- Press Ignore on the instrument cluster using the select button.

### Call Waiting

Call waiting must be supported on the Bluetooth phone and enabled by the wireless service carrier to work.


### Accepting a Call

There are three ways to accept a call-waiting call:

- Press  on the steering wheel controls.
- Press Switch on the infotainment display.
- Press Switch on the instrument cluster using the select button.

### Declining a Call

There are three ways to decline a call-waiting call:

- Press  on the steering wheel controls.
- Press Ignore on the infotainment display.
- Press Ignore on the instrument cluster using the select button.

### Switching Between Calls (Call Waiting Calls Only)

To switch between calls, press the phone icon on the Home Page to display “Call View.” While in Call View, press the call information of the call on hold to change calls.

### Three-Way Calling

Three-way calling must be supported on the Bluetooth phone and enabled by the wireless service carrier to work.


To start a three-way call while in a current call:

1. In the Call View, select Add to add another call.

2. Initiate the second call by selecting from Recent, Contacts, or Keypad.
3. When the second call is active, press the merge icon to conference the three-way call together.
4. Once all calls are merged, the merge icon button becomes an unmerge icon button. Press to unmerge the calls.

Some wireless service carriers may not allow a merged call to become unmerged.

### Ending a Call

- Press  on the steering wheel controls.
- Press End on the infotainment display to end all existing calls, or touch End next to a call to end only that call.
- Press End on the instrument cluster using the select button.

### Dual Tone Multi-Frequency (DTMF) Tones

The in-vehicle Bluetooth system can send numbers during a call. This is used when calling a menu-driven phone system.

1. Touch PHONE on the Home Page.
2. While in the Call View, touch the up arrow to raise the interaction selector.
3. Select Keypad and enter the number.

### Voice Mail


The default voice mail number is the phone number of the outgoing phone source. The voice mail number can be changed in Bluetooth settings.

To dial a voice mail number:

1. Touch PHONE on the Home Page.
2. Select Voice Mail.
3. Select Call.
4. Enter the DTMF tones using the keypad if needed.

### Bluetooth (Voice Recognition)

#### Using Bluetooth Voice Recognition


To use voice recognition, press  on the steering wheel controls. Use the commands below for the various voice features. For additional information, say “Help” while in a voice recognition menu. See *Voice Recognition* ⇨ 88 for help using voice recognition commands.

#### Making a Call

Calls can be made using the following commands.

#### Using the “Dial” or “Call” Command

To call a number:

1. Press . The system responds “Command Please,” followed by a tone.
2. Say “Dial” or “Call” followed by the complete phone number.

Use the “Voice Keypad” command for international numbers or special numbers which include \* or #.

Once connected, the person called will be heard through the audio speakers.

To call using a contact from your phone book:

1. Press . The system responds “Command Please,” followed by a tone.
2. Say “Dial” or “Call” and then say the contact name. For example, say “Call John at Work.”

Once connected, the person called will be heard through the audio speakers.

### Calling Local Emergency Numbers

1. Press . The system responds “Command Please,” followed by a tone.
2. Say “Call <emergency number>.”

Once connected, the person called will be heard through the audio speakers.

### Using the “Switch Phone” Command

1. Press . The system responds “Command Please,” followed by a tone.

2. After the tone, say “Switch Phone.” The system displays a list of phones to select.

### Using the “Voice Keypad” Command

1. Press . The system responds “Command Please,” followed by a tone.
2. After the tone, say “Voice Keypad.” The system allows entry of special numbers and characters.

### Using the “Voice Mail” Command

1. Press . The system responds “Command Please,” followed by a tone.
2. After the tone, say “Voice Mail.” The system dials the voice mail number of the connected phone.

### Clearing the System

Unless information is deleted out of the vehicle Bluetooth system, it will be retained. This includes phone pairing information. For directions on how to delete this information, see “Deleting a Paired Phone.”

## Text Messaging

If equipped, the infotainment system may allow text messages to be received and replied to. Received messages can also be read aloud.

Before using the text messaging feature, check to see if the phone is compatible.

To view compatible phones, see your dealer.

### Text Menu

**Inbox** : Press to display incoming messages. To view a message, touch on the name of the sender. Touch to listen to the text message.

Touch to go back to the previous menu.

**Settings** : See “Text Settings” later in this section.

**Reply** : Touch to reply using a predefined text message. See “Text Settings.”

**Call** : Touch to place a call to the sender of the text message.

## Viewing a Text Message

While viewing a text message:

- Touch Reply to reply using a predefined text message.
- Touch Call to place a call to the sender of the text message.

## Viewing Sender Information

If equipped, touch the name of the sender to view sender information if this information matches contact information already stored.

**Select a Predefined Message :** Touch to select from a set of quick messages. Touch the message to send.


## Predefined Messages

These are short text messages that can be used to send so responses will not have to be typed.

The messages can be deleted or a new message can be added.

To add a new message:

1. Touch Text Settings, then touch Manage Predefined Messages.

2. While in the predefined messages list view, select Add New Predefined Message and a keyboard displays.
3. Type a new message and touch NEW MSG when done to add the message. Touch  to go back to the predefined messages list. Touch **X** to delete one character at a time.

## Memory Full

This message may display if there is no more room on the phone to store messages.

## Text Settings

**Text Alerts :** When on, this feature will display an alert when a new text message has been received. Touch to turn on or off.

**Manage Predefined Messages :** Touch to add, change, or delete predefined messages.

## Apple CarPlay and Android Auto

If equipped, Android Auto™ and/or Apple CarPlay™ capability may be available through a compatible smartphone. If available, PROJECTION will appear on the Home Page of the infotainment display.

To use Android Auto and/or Apple CarPlay:

1. Download the Android Auto app to your phone from the Google™ Play store. There is no app required for Apple CarPlay.
2. Connect your Android phone or Apple iPhone by using the compatible phone USB cable and plugging into a USB data port. For best performance, use the device's factory-provided USB cable. Aftermarket or third-party cables may not work.

PROJECTION on the Home Page will change to Android Auto or Apple CarPlay depending on the phone. Android Auto and/or Apple CarPlay may automatically launch upon USB

connection. If not, press the ANDROID AUTO and/or APPLE CARPLAY icon on the Home Page to launch.

For further information on how to set up Android Auto and Apple CarPlay in the vehicle, see [my.cadillac.com](http://my.cadillac.com) or see “Customer Assistance” in the owner manual.

Android Auto is provided by Google and is subject to Google’s terms and privacy policy. CarPlay is provided by Apple and is subject to Apple’s terms and privacy policy. For Android Auto support see <https://support.google.com/androidauto> or Apple CarPlay support at <https://www.apple.com/ios/carplay/> for more information. Apple or Google may change or suspend availability at any time. Android Auto is a trademark of Google Inc.; Apple CarPlay is a trademark of Apple Inc.

## Settings


The Settings menu allows adjustment of different vehicle and radio features. The menu may contain the following:

### Time and Date

See “Clock” in the owner manual.

### Language

This will set the display language in the radio, instrument cluster, and voice recognition. Touch Language and select the appropriate language.

Touch  to go back to the previous menu.


### Valet Mode

If equipped, this will lock the infotainment system and steering wheel controls. It may also limit top speed, power, and access to vehicle storage locations (if equipped).

To enable Valet Mode:


1. Enter a four-digit code on the keypad.
2. Touch Enter to go to the confirmation screen.



3. Re-enter the four-digit code.

Touch LOCK or UNLOCK to lock or unlock the system. Touch  to go back to the previous menu.

### Radio

Touch to display the Radio Menu and the following may display:

- **Manage Favorites:** Touch a displayed Favorite to select that favorite to edit. Touch Rename to rename the favorite or Delete to delete it. Touch and hold the station to drag it to a new location. Touch Done to go back to the previous menu.
- **Number of Favorites Shown:** Touch to set the number of favorites to display. Select Auto, 5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 55, or 60. Auto will automatically add or hide additional Favorite pages based on the number of Favorites stored. Touch  to go back to the previous menu.


- **Auto Volume (If Equipped):** This feature adjusts the volume based on the vehicle speed. See *AM-FM Radio* ⇨ 12.
- **Bose AudioPilot noise compensation technology (If Equipped):** This feature adjusts the volume based on the noise in the vehicle and speed. See *AM-FM Radio* ⇨ 12.
- **Maximum Startup Volume:** This feature sets the maximum startup volume. If the vehicle is started and the volume is greater than this level, the volume is adjusted to this level. To set the maximum startup volume, touch + or - to increase or decrease. Touch  to go back to the previous menu.
- **Audio Cue Volume (If Equipped):** This feature adjusts the startup and shutdown sounds. To adjust the volume, touch + or - to increase or decrease. This feature can be turned on or off. Touch  to go back to the previous menu.


## Vehicle Settings

See “Vehicle Personalization” in the owner manual.

## Bluetooth



From the Bluetooth screen button, the following may be displayed:

- **Pair New Device:** Touch to add a new device.
- **Device Management:** Touch to connect to a different phone source, disconnect a phone, or delete a phone.
- **Ringtones:** Touch to change the ring tone for the specific phone. The phone does not need to be connected to change the ring tone.
- **Voice Mail Numbers:** This feature displays the voice mail number for all connected phones. The voice mail number may be changed by touching the Edit button, typing in the new number, and touching Save. Touch  to go back to the previous menu.

- **Text Message Alerts (If Equipped):** This feature will turn text message alerts on or off. Touch Text Message Alerts and then select Off or On. Touch  to go back to the previous menu. See *Text Messaging* ⇨ 99.



## Voice

From the Voice screen button, the following may be displayed:

- **Confidence Threshold:** Select Confirm More or Confirm Less for the system to confirm more or less before acting on a command.
- **Prompt Length:** Select Short or Long for shorter or longer voice prompts that are played during voice recognition sessions. Touch  to go to the previous menu.
- **Audio Feedback Speed:** Touch Slow, Medium, or Fast for feedback speed. Touch  to go back to the previous menu.

## Display

From the Display screen button, the following may be displayed:

- **Mode:** Touch Auto, Day, or Night to adjust the display. Touch  to go to the previous menu.
- **Calibrate Touchscreen:** Touch to calibrate the infotainment display and follow the prompts. Touch  to go back to the previous menu.
- **Turn Display Off:** Touch to turn the display off. Touch anywhere on the display area or any faceplate button again to turn the display on.

## Rear Camera




Touch to display the Rear Camera menu. See “Driver Assistance Systems” in the owner manual.



## Return to Factory Settings

Touching Continue restores all factory settings.

Select Return to Factory Settings and the following list may display:

- **Restore Vehicle Settings:** Restores factory vehicle personalization settings. Touch Restore Vehicle Settings. Touch Cancel or Continue. Touch  to go back to the last menu.
- **Clear All Private Data:** If available, use to erase personal private data before loaning or selling the vehicle. Touch Clear All Private Data. Touch Cancel or Continue. Touch  to go back to the last menu.
- **Restore Radio Settings:** Restores factory radio settings. Touch Restore Radio Settings. Touch Cancel or Continue. A confirmation pop-up will appear indicating the radio settings have been restored if Continue is touched. Touch  to go back to the last menu.

## Over-the-Air Software Updates

If equipped, the infotainment system can download and install software updates over a wireless connection. The system will prompt high priority updates to be downloaded and installed, while others can be manually accessed. To manually check for updates, touch Settings on the Home Screen, followed by Software Information, and then System Update. Follow the on-screen prompts. Steps for downloading and installing updates may vary by vehicle.

Downloading Over-the-Air software updates requires Internet connectivity, which can be accessed through the vehicle's OnStar Wi-Fi hotspot, if equipped. Optionally, a secured Wi-Fi hotspot such as a mobile device hotspot, a home hotspot, or a public hotspot can be used. To connect the infotainment system to a secured mobile device hotspot, home hotspot, or public hotspot, touch Settings on the Home Screen, followed by Wi-Fi, and then Manage Wi-Fi Networks. Select the appropriate Wi-Fi network, and follow the on-screen prompts. Download speeds may vary. On most

mobile devices, activation of the Wi-Fi hotspot is in the Settings menu under Mobile Network Sharing, Personal Hotspot, Mobile Hotspot, or similar.

Availability of Over-the-Air software updates varies by vehicle and country. For more information on this feature, see [my.cadillac.com/learn](http://my.cadillac.com/learn).

## English and Metric Unit Conversion

To change the display units between English and metric units, see "Instrument Cluster" in the owner manual.

## Teen Driver

If equipped, this allows multiple keys to be registered for beginner drivers to encourage safe driving habits. When the vehicle is started with a Teen Driver key, it will automatically activate certain safety systems, allow setting of some features, and limit the use of others. The Report Card will record vehicle data about driving behavior that can be viewed later. When the vehicle is started with a

registered key, the Driver Information Center (DIC) displays a message that Teen Driver is active.

**To access:**

1. Touch SETTINGS on the Home Page, then touch Teen Driver.
2. Create a Personal Identification Number (PIN) by choosing a four-digit PIN. Re-enter the PIN to confirm. To change the PIN, select Change PIN.

**The PIN is required to:**

- Register or unregister keys.
- Change Teen Driver settings.
- Change or clear the Teen Driver PIN.
- Access or delete Report Card data.

**Register keys to activate:**

Any vehicle key can be registered, up to a maximum of eight keys. Label the key to tell it apart from the other keys.

**For a pushbutton start system:**

1. Start the engine.

2. For automatic transmissions, the vehicle must be in P (Park). For manual transmissions, the vehicle must be stopped with the parking brake set.
3. From the Settings menu, select Teen Driver.
4. Enter the PIN.
5. Place the Remote Keyless Entry (RKE) transmitter key in the transmitter pocket. See “Remote Keyless Entry (RKE) System Operation” in the owner manual for transmitter pocket location.
6. From the Teen Driver Menu, select Key Registration.
  - If the transmitter key is in the transmitter pocket, it will identify whether the transmitter key is registered or unregistered.
  - If the transmitter key is not registered, the option to register displays. Select Register and a confirmation message displays.

- If the transmitter key is already registered, the option to unregister displays. If Unregister is selected, the transmitter key is no longer registered and a confirmation message displays.

In vehicles with a pushbutton start system, if a Teen Driver transmitter key and a non-Teen Driver transmitter key are both present at start up, the vehicle will recognize the non-Teen Driver transmitter key to start the vehicle. The Teen Driver settings will not be active.

**For a keyed ignition system:**

1. Start the engine.
2. For automatic transmissions, the vehicle must be in P (Park). For manual transmissions, the vehicle must be stopped with the parking brake set.
3. From the Settings menu, select Teen Driver.
4. Enter the PIN.

5. Select Key Registration. The system displays instructions for registering or unregistering a key. A confirmation message displays.

### Manage Settings

Use the PIN to change the following settings:

**Audio Volume Limit** : Allows a maximum radio volume to be set. Turn the audio volume limit On or Off, and if equipped, choose the maximum level for the audio volume.

**Teen Driver Speed Warning** : Allows for setting a visual and audible warning when a certain speed is exceeded. The speed warning is selectable from 64 km/h (40 mph) to 121 km/h (75 mph). The speed warning does not limit the speed of the vehicle.

**Teen Driver Speed Limiter (If Equipped)** : Allows the maximum speed of the vehicle to be limited to 137 km/h (85 mph). When the speed limiter is turned On and the vehicle is started with a Teen Driver key, the DIC displays a message that the top speed is limited to 137 km/h (85 mph).

When Teen Driver is Active:

- The radio will mute when the driver safety belt is not fastened, and in some vehicles, when the right front passenger safety belt is not fastened. The audio from any device paired to the vehicle will also be muted.
- Certain electronic devices placed on the front passenger seat could cause the passenger sensing system to falsely sense an unbuckled front passenger and mute the radio. See “Passenger Sensing System” in the owner manual.
- Some safety systems, such as Forward Automatic Braking, if equipped, cannot be turned off.
- The gap setting for the Forward Collision Alert and Adaptive Cruise Control, if equipped, cannot be changed.

### Report Card

The vehicle owner must secure the driver’s consent to record certain vehicle data when the vehicle is driven with a registered Teen Driver key.

There is one Report Card per vehicle. Data is not recorded when Teen Driver is not active.

The Report Card data is collected from the time Teen Driver is activated or the last time the Report Card was reset. The following items may be recorded:

- Distance Driven – the total distance driven.
- Maximum Speed – the maximum vehicle speed recorded.
- Overspeed Warnings – the number of times the speed warning setting was exceeded.
- Forward Collision Alerts – the number of times the driver was notified when approaching a vehicle ahead too quickly and at potential risk for a crash.
- Forward Collision Avoidance Braking – Also referred to as Forward Automatic Braking, this is the number of times the vehicle detected that a forward collision was imminent and applied the brakes.

- Stability Control – the number of events which required the use of electronic stability control.
- ABS Active – the number of Antilock Brake System activations.
- Tailgating Alerts – the number of times the driver was alerted for following the vehicle ahead too closely.
- Traction Control – the number of times the traction control system activated to reduce wheel spin or loss of traction.
- Wide Open Throttle – the number of times the accelerator pedal is pressed nearly all the way down.

### **Delete Report Card Data**

Data is saved for all trips until the data is deleted using the PIN or until the maximum count is exceeded. Each item will report a maximum of 1,000 counts. The distance driven will report a maximum of 64,374 km (40,000 mi).

To delete Report Card data, do one of the following:

- From the Report Card screen, select Reset.
- Select Clear All Teen Keys/PIN from the Teen Driver menu. This will also unregister any Teen Driver keys and delete the PIN.

### **Forgotten PIN**

See your dealer to reset the PIN.

## Trademarks and License Agreements

### FCC Information

See "Radio Frequency Statement" in the owner manual.

Made for



iPod



iPhone

"Made for iPod," and "Made for iPhone," mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPhone®, iPod®, iPod classic®, iPod nano®, iPod shuffle®,

and iPod touch® are trademarks of Apple Inc., registered in the U.S. and other countries.



Fees and Taxes: Subscription fee, taxes, one time activation fee, and other fees may apply. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions subject to Customer Agreement available at [www.siriusxm.com](http://www.siriusxm.com). SiriusXM® service only available in the 48 contiguous United States and Canada.

In Canada: Some deterioration of service may occur in extreme northern latitudes. This is beyond the control of SiriusXM® Satellite Radio.

Explicit Language Notice: Channels with frequent explicit language are indicated with an "XL" preceding the

channel name. Channel blocking is available for SiriusXM Satellite Radio receivers by notifying SiriusXM:

- USA Customers — See [www.siriusxm.com](http://www.siriusxm.com) or call 1-888-601-6296.
- Canada Customers — See [www.siriusxm.ca](http://www.siriusxm.ca) or call 1-877-438-9677.

It is prohibited to copy, decompile, disassemble, reverse engineer, hack, manipulate, or otherwise make available any technology or software incorporated in receivers compatible with the SiriusXM® Satellite Radio System or that support the SiriusXM website, the Online Service or any of its content. Furthermore, the AMBER voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc.

General Requirements:

1. A License Agreement from SiriusXM® is required for any product that incorporates SiriusXM Technology and/or for

use of any of the SiriusXM marks to be manufactured, distributed, or marketed in the SiriusXM Service Area.

2. For products to be distributed, marketed, and/or sold in Canada, a separate agreement is required with Canadian Satellite Radio Inc. (operating as SiriusXM Canada).



TouchSense<sup>®</sup> Technology and TouchSense<sup>®</sup> System 1000 Series Licensed from Immersion Corporation. TouchSense<sup>®</sup> System 1000 protected under one or more of the U.S. Patents at the following address [www.immersion.com/patent-marking.html](http://www.immersion.com/patent-marking.html) and other patents pending.

### **Bose<sup>®</sup>**

Bose AudioPilot and Bose Centerpoint surround are registered trademarks of Bose Corporation in the U.S. and other countries.

### **HD Radio Technology**



HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign patents. HD Radio<sup>®</sup> and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.

### **DTS**

Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS, and

the Symbol together are registered trademarks, and DTS 2.0 Channel is a trademark of DTS, Inc. ©DTS, Inc. All Rights Reserved.

### **Dolby**

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



DivX<sup>®</sup>, DivX Certified<sup>®</sup>, and associated logos are trademarks of DivX, LLC and are used under license.

This DivX Certified<sup>®</sup> device has passed rigorous testing to ensure it plays DivX<sup>®</sup> video.

To play purchased DivX movies, first register your device at [vod.divx.com](http://vod.divx.com). Find your registration code in the DivX VOD section of your device setup menu.

**BDA**

“Blu-ray Disc, Blu-ray, Blu-ray 3D, BD-Live, BONUSVIEW, BDXL, AVCREC, and the logos are trademarks of the Blu-ray Disc Association.”

**AVCHD**

AVCHD and the AVCHD logo are trademarks of Panasonic Corporation and Sony Corporation.

**AVCREC**

Blu-ray Disc, Blu-ray, Blu-ray 3D, BD-Live, BONUSVIEW, BDXL, AVCREC, and the logos are trademarks of the Blu-ray Disc Association.

**Java**

Java is a registered trademark of Oracle and/or its affiliates.

**Cinavia**

Cinavia Notice: This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized

copy is detected, a message will be displayed or copying will be interrupted.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2010 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.

**RMVB**

Portions of this software are included under license from RealNetworks, Inc. Copyright 1995-2011, RealNetworks, Inc. All rights reserved.

**Bluetooth**

The Bluetooth® word mark and logos are owned by the Bluetooth® SIG, Inc. and any use of such marks by General Motors is under license. Other trademarks and trade names are those of their respective owners.

**Schedule I: Gracenote EULA**

Music recognition technology and related data are provided by Gracenote<sup>®</sup>. Gracenote is the industry standard in music recognition technology and related content delivery. For more information visit [www.gracenote.com](http://www.gracenote.com).

Music-related data from Gracenote, Inc., copyright © 2000 to present Gracenote. Gracenote Software, copyright © 2000 to present Gracenote. One or more patents owned by Gracenote may apply to this product and service. See the Gracenote website for a non-exhaustive list of applicable Gracenote patents. Gracenote, CDDb, MusicID, MediaVOCS, the Gracenote logo and logotype, and the "Powered by Gracenote" logo are either

registered trademarks or trademarks of Gracenote in the United States and/or other countries.

**Gracenote Terms of Use**

This application or device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to do disc or file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases (collectively, "Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

This application or device may contain content belonging to Gracenote's providers. If so, all of the restrictions set forth herein with respect to Gracenote Data shall also apply to such content and such content providers shall be entitled to

all of the benefits and protections set forth herein that are available to Gracenote.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide.



You agree that Gracenote may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional

data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

© 2014. Gracenote, Inc. All Rights Reserved.

#### **MPEG4-AVC (H.264)**

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC

STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

#### **VC-1**

THIS PRODUCT IS LICENSED UNDER THE VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE VC-1 STANDARD ("VC-1 VIDEO") AND/OR (ii) DECODE VC-1 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL

INFORMATION MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

### **MPEG4–Visual**

USE OF THIS PRODUCT IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE BY A CONSUMER ENGAGING IN PERSONAL AND NON-COMMERCIAL ACTIVITIES.

### **MP3**

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

### **WMV/WMA**

This product includes technology owned by Microsoft Corporation and under a license from Microsoft Licensing, GP. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft Corporation and/or Microsoft Licensing, GP as applicable.

## **Map End User License Agreement**

### **END USER TERMS**

The Map Data Disc (“Data”) is provided for your personal, internal use only and not for resale. It is protected by copyright, and is subject to the following terms (this “End User License Agreement”) and conditions which are agreed to by you, on the one hand, and HERE North America, LLC (“HERE”) and its licensors (including their licensors and suppliers) on the other hand.

The Data for areas of Canada includes information taken with permission from Canadian authorities, including:

© Her Majesty the Queen in Right of Canada, © Queen's Printer for Ontario, © Canada Post Corporation, GeoBase®.

HERE holds a nonexclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

© United States Postal Service® 2013. Prices are not established, controlled, or approved by the United States Postal Service®. The following

trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4.

### **TERMS AND CONDITIONS**

**Personal Use Only:** You agree to use this Data for the solely personal, noncommercial purposes for which you were licensed, and not for service bureau, timesharing or other similar purposes. Except as otherwise set forth herein, you agree not to otherwise reproduce, copy, modify, decompile, disassemble or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. You may transfer the Data and all accompanying materials on a permanent basis if you retain no copies and the recipient agrees to the terms of this End User License Agreement. Multi-disc sets may only be transferred or sold as a complete set as provided to you and not as a subset thereof.

**Restrictions**

Except where you have been specifically licensed to do so by HERE and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with, or in communication with, including without limitation, cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

**Warning**

This Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used, and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results.

**No Warranty**

This Data is provided to you “as is,” and you agree to use it at your own risk. HERE and its licensors (and their licensors and suppliers) make no guarantees, representations, or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error free.

**Disclaimer of Warranty**

THE DATABASE IS PROVIDED ON AN “AS IS” AND “WITH ALL FAULTS BASIS” AND BOSCH (AND THEIR LICENSORS AND SUPPLIERS) EXPRESSLY DISCLAIM ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, SATISFACTORY QUALITY, ACCURACY, TITLE AND FITNESS FOR A PARTICULAR PURPOSE. NO ORAL OR WRITTEN

ADVICE OR INFORMATION PROVIDED BY BOSCH (OR ANY OF THEIR LICENSORS, AGENTS, EMPLOYEES, OR THIRD PARTY PROVIDERS) SHALL CREATE A WARRANTY, AND YOU ARE NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION. THIS DISCLAIMER OF WARRANTIES IS AN ESSENTIAL CONDITION OF THIS AGREEMENT.

**Disclaimer of Liability**

HERE AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THIS DATA; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS DATA, ANY

DEFECT IN THIS DATA, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF HERE OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories, and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

#### **Export Control**

You agree not to export from anywhere any part of the Data provided to you or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations. Entire Agreement: These terms and conditions constitute the entire agreement between HERE (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

#### **Governing Law**

The above terms and conditions shall be governed by the laws of the State of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of the State of Illinois for any and all disputes, claims, and actions arising from or in connection with the Data provided to you hereunder.

#### **Government End Users**

If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a “commercial item” as that term is defined at 48 C.F.R. (“FAR”) 2.101, is licensed in accordance with this End User License Agreement, and each copy of Data delivered or otherwise furnished shall be marked and embedded as appropriate with the

following “Notice of Use,” and be treated in accordance with such Notice:

The word "here" is written in a bold, black, sans-serif font, tilted at an angle of approximately 45 degrees clockwise.

**Maps for Life**

#### **NOTICE OF USE**

CONTRACTOR (MANUFACTURER/  
SUPPLIER)

NAME:

**HERE North America, LLC**

CONTRACTOR (MANUFACTURER/  
SUPPLIER)

ADDRESS:

**425 West Randolph Street, Chicago,  
IL 60606.**

This Data is a commercial item as defined in FAR 2.101 and is subject to the End User License Agreement under which this Data was provided.

© 2014 HERE North America, LLC. All rights reserved.

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify HERE prior to seeking additional or alternative rights in the Data.

### Unicode

Copyright © 1991-2010 Unicode, Inc. All rights reserved. Distributed under the Terms of Use in <http://www.unicode.org/copyright.html>.

### Free Type Project

Portions of this software are copyright © 2010 The FreeType Project (<http://www.freetype.org>). All rights reserved.

### Open Source SW

The open source code used in this device can be downloaded at the webpage shown in the information at the infotainment display. Further

information concerning the OSS licenses is shown in the infotainment display.

### QNX

Portions of this software are copyright © 2008-2011, QNX Software Systems. All rights reserved.

### Part C – EULA

Copyright 2011, Software Systems GmbH & Co. KG. All Rights Reserved.

The product you have purchased ("Product") contains Software (Runtime Configuration No. 505962; "Software") which is distributed by or on behalf of the Product manufacturer "Manufacturer") under license from Software Systems Co. ("QSSC"). You may only use the Software in the Product and in compliance with the license terms below.

Subject to the terms and conditions of this License, QSSC hereby grants you a limited, non-exclusive, non-transferable license to use the Software in the Product for the purpose intended by the Manufacturer. If permitted by the Manufacturer, or by applicable law,

you may make one backup copy of the Software as part of the Product software. QSSC and its licensors reserve all license+C31 rights not expressly granted herein, and retain all right, title and interest in and to all copies of the Software, including all intellectual property rights therein. Unless required by applicable law you may not reproduce, distribute or transfer, or de-compile, disassemble or otherwise attempt to unbundle, reverse engineer, modify or create derivative works of, the Software. You agree: (1) not to remove, cover or alter any proprietary notices, labels or marks in or on the Software, and to ensure that all copies bear any notice contained on the original; and (2) not to export the Product or the Software in contravention of applicable export control laws.

EXCEPT TO THE EXTENT OTHERWISE REQUIRED BY APPLICABLE LAW, QSSC AND ITS LICENSORS PROVIDE THE SOFTWARE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED INCLUDING,

WITHOUT LIMITATION, ANY WARRANTIES OR CONDITIONS OF TITLE, NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY WARRANTIES OR OTHER PROVISIONS OFFERED BY THE MANUFACTURER OR ITS DISTRIBUTOR(S) THAT DIFFER FROM THIS LICENSE ARE OFFERED BY THE MANUFACTURER OR ITS DISTRIBUTOR(S) ALONE AND NOT BY QSSC, ITS AFFILIATES OR THEIR LICENSORS. YOU ASSUME ANY RISKS ASSOCIATED WITH YOUR USE OF THE SOFTWARE UNDER THIS LICENSE.

EXCEPT TO THE EXTENT OTHERWISE REQUIRED BY APPLICABLE LAW (SUCH AS IN THE CASE OF DELIBERATE OR GROSSLY NEGLIGENT ACTS), IN NO EVENT SHALL QSSC, ITS AFFILIATES OR THEIR LICENSORS BE LIABLE TO YOU UNDER ANY LEGAL THEORY, WHETHER IN TORT (INCLUDING NEGLIGENCE), CONTRACT OR OTHERWISE, FOR DAMAGES, INCLUDING ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR

CONSEQUENTIAL DAMAGES OF ANY CHARACTER ARISING AS A RESULT OF THIS LICENSE OR OUT OF THE USE OR INABILITY TO USE THE PRODUCT (INCLUDING BUT NOT LIMITED TO DAMAGES FOR LOSS OF GOODWILL, WORK STOPPAGE, PRODUCT FAILURE OR MALFUNCTION, OR ANY AND ALL OTHER COMMERCIAL DAMAGES OR LOSSES), EVEN IF QSSC, ITS AFFILIATES OR THEIR LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

#### **WMA**

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

For more information on the Software, including any open source software license terms (and available source code) as well as copyright attributions applicable to the Runtime Configuration indicated above, please contact the Manufacturer or contact

QSSC at 175 Terence Matthews Crescent, Kanata, Ontario, Canada K2M 1W8 (licensing@qnx.com).

#### **Linotype**

Helvetica is a trademark of Linotype Corp. registered in the U.S. Patent and Trademark Office and may be registered in certain other jurisdictions in the name of Linotype Corp. or its licensee Linotype GmbH.

Usage in text form of each of the Licensed Trademarks is:

The trademark attribution requirements for the Licensed Trademarks may be viewed at <http://www.linotype.com/2061-19414/trademarks.html>.

#### **END USER NOTICE**

The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

## Index

**1**

- 100 Channel FM-Modulation Control ..... 51

**A**

- Accepting or Declining a Call ..... 97
- Agreements
  - Trademarks and License..... 108
- AM ..... 16
- AM-FM Categories ..... 14
- AM-FM Radio ..... 12
- Antenna
  - Backglass.....17
  - Multi-band.....17
- Apple CarPlay and
  - Android Auto ..... 100
- Applications Tray .....8
- APPS .....7
- Audio .....6
  - Bluetooth .....25
- Audio Output ..... 41
- Audio Players
  - CD.....18
- Audio System ..... 94
- Auxiliary Inputs ..... 40
- Auxiliary Jack ..... 24
- Avoiding Untrusted Media
  - Devices..... 18

**B**

- Backglass Antenna..... 17
- Bluetooth ..... 103
  - Overview.....94, 98
- Bluetooth Audio ..... 25

**C**

- Call Waiting ..... 97
- Canceling Voice Recognition ..... 89
- CD Player ..... 18
- Cell Phone Usage ..... 17
- Cleaning High Gloss Surfaces and Vehicle Information and
  - Radio Displays ..... 10
- Cleaning the Components ..... 55
- Cleaning the Video Screens ..... 55
- Clearing the System ..... 99
- Climate .....7
- Controls ..... 94
  - Steering Wheel ..... 5, 6
- Coverage Explanations ..... 87
- Customer Assistance .....3

**D**

- Database Coverage Explanations ... 87
- Destination ..... 65
- Detailed Areas ..... 64
- Digital Living Network Alliance (DLNA) (If Equipped) ..... 39

Display .....	84, 103
Driver	
Teen.....	104
Driving Mode .....	84
Dual Tone Multi-Frequency (DTMF) Tones .....	98
<b>E</b>	
Ending a Call .....	98
English and Metric Unit	
Conversion .....	104
Error Messages .....	19
<b>F</b>	
Finding a Station .....	13
FM .....	16
<b>G</b>	
Global Positioning System (GPS) ...	85
Guidance	
Problems with the Route .....	86
<b>H</b>	
Haptic Feedback .....	8
HD Radio Technology .....	15
Headphones .....	38
Helpful Hints for Speaking	
Commands .....	89
Home Page .....	4

<b>I</b>	
If the System Needs Service .....	87
Infotainment Display Buttons .....	8
Infotainment Gestures .....	8
Infotainment System .....	3
Rear Seat.....	27, 45
Infotainment System Settings .....	12
Introduction .....	2
<b>J</b>	
Jack	
Auxiliary.....	24
<b>L</b>	
Language .....	102
Loading and Ejecting Discs .....	18
Low Fuel Alert .....	85
<b>M</b>	
Making a Call .....	98
Making a Call Using Contacts	
and Recent Calls .....	96
Making a Call Using the Keypad ...	97
Map Adjustments .....	63
Map Data Updates .....	87
Map End User License	
Agreement .....	113
Maps .....	64

<b>Media</b>	
Avoiding Untrusted Devices.....	18
Media Playback and Mute.....	24
Menus and Features .....	28
Messaging	
Text.....	99
Mixed-Audio Favorites .....	14
MP3 Guidelines .....	19
Multi-band Antenna .....	17
<b>N</b>	
NAV/ OnStar NAV .....	7
Navigation	
Destination.....	65
Using the System.....	56
Navigation Symbols .....	64
<b>O</b>	
OnStar .....	7
OnStar 4G LTE .....	26
OnStar System .....	26
OnStar® System .....	83
Over-the-Air Software	
Updates .....	11, 104
Overview .....	2



**P**

Pairing .....	95
Phone .....	6
Apple CarPlay and Android Auto .....	100
Bluetooth .....	94, 98
Playing an Audio CD .....	54
Playing an Audio MP3 or CD .....	18
Playing an MP3 CD .....	54
Playing from a USB .....	20
Playing the Radio .....	12
Port	
USB .....	20
Positioning	
Vehicle .....	85
Power (On/Off/Mute) .....	3
Problems with Route Guidance .....	86
Projection .....	7
Proximity Sensing .....	8

**R**

Radio .....	102
HD Technology .....	15
Radio Reception .....	16
Radios	
AM-FM Radio .....	12
Satellite .....	16
Rear Camera .....	85, 103
Rear Climate .....	7

Rear Seat Armrest Control Panel (If Equipped) .....	4
Rear Seat Infotainment (RSI) System .....	27, 45
Rear Seat Infotainment (RSI) Wi-Fi (If Equipped) .....	39
Recognition	
Voice .....	88
Remote Control .....	42
Remote Controls .....	51
Return to Factory Settings .....	104
RSI Controls Available from the Front Screen .....	35
RSI System Overview .....	45

**S**

Satellite Radio .....	16
Schedule I: Gracenote EULA .....	111
Scroll Features .....	63
Servicing System .....	87
Settings .....	84, 102, 7
SiriusXM Menu .....	16
SiriusXM NavTraffic .....	82
SiriusXM Satellite Radio	
Service .....	16, 17
SiriusXM Travel Link Fuel Pricing .....	83
SiriusXM Travel Link Movie Listings .....	83

SiriusXM Travel Link Weather .....	79
Software Updates .....	11
Sources .....	28
Steering Wheel Controls .....	5, 6
Storing and Recalling Media	
Favorites .....	23
Storing Radio Station Presets .....	14
Switching to Handset or Handsfree Mode .....	96
Symbols	
Navigation .....	64
System	
Global Positioning .....	85
OnStar® .....	83
Rear Seat Infotainment (RSI) .....	27, 45
System Operation .....	27

**T**

Teen Driver .....	104
TEXT .....	7
Text Menu .....	99
Text Messaging .....	99
Text Settings .....	100
Three-Way Calling .....	97
Time and Date .....	102
Tips and Troubleshooting .....	55

Trademarks and License		Viewing a Text Message .....	100
Agreements .....	108	Viewing Sender Information .....	100
Turn List .....	77	Voice .....	84, 103
<b>U</b>		Voice Mail .....	98
Updates		Voice Pass-Thru .....	93
Map Data .....	87	Voice Recognition .....	88
Software .....	11	Voice Recognition for	
USB Port .....	20	Navigation .....	92
Using Bluetooth Voice		Voice Recognition for OnStar (If	
Recognition .....	98	Equipped) .....	93
Using the Navigation System .....	56	Voice Recognition for the Phone ...	92
Using the RSI On-Screen Display		Voice Recognition for the Radio ....	91
(OSD) Menus .....	48	Voice Recognition for Weather	
Using the System .....	6	(If Equipped) .....	93
Using Voice Recognition .....	88	Volume .....	4
Using Voice Recognition for List		<b>W</b>	
Options .....	90	Weather .....	7
<b>V</b>			
Valet Mode .....	102		
Vehicle Positioning .....	85		
Vehicle Settings .....	103		
Vehicle Speakers .....	50		
Video .....	7		
Video Display Error Messages .....	45		
Video Display Screens .....	45		
Video Distortion .....	45		
Video Voice Over .....	44		