


Tutorial SIMARIS design

Software for efficient dimensioning of power distribution systems

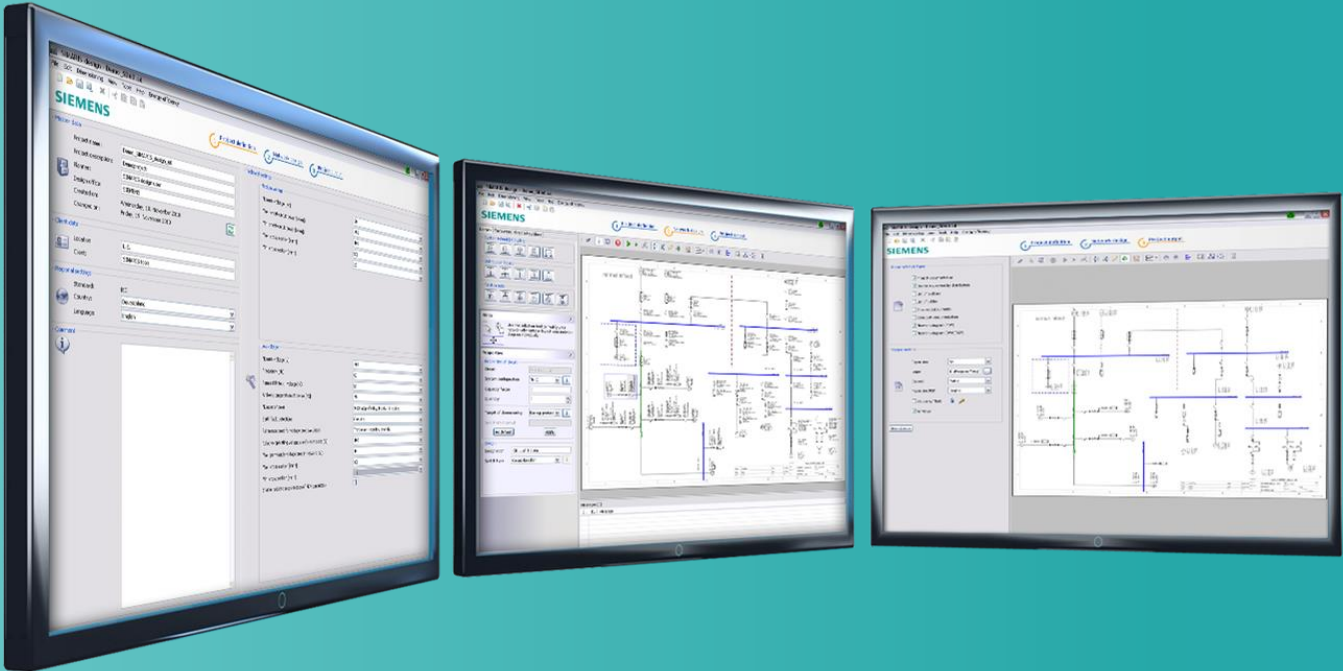


Software for efficient dimensioning of power distribution systems

- 1
- 2
- 3
- 4
- 5
- 6
- Introduction
- Getting started
- Network design
- Dimensioning
- Project output
- More about SIMARIS

Tutorial SIMARIS design

SIEMENS
Ingenuity for life

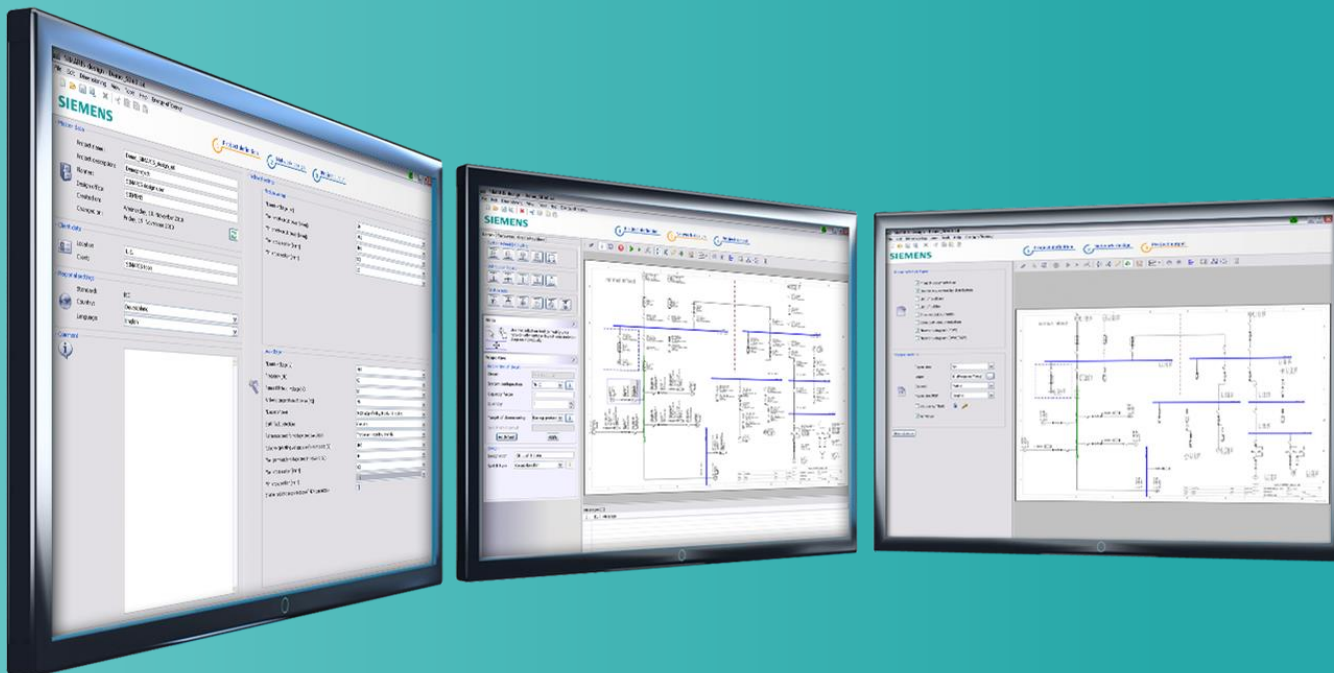

Introduction

- > SIMARIS planning tools
- > SIMARIS design
- > Additional functions in
SIMARIS design professional

1

Introduction

2

Getting started

3

Network design

4

Dimensioning

5

Project output

6

More about SIMARIS

Unrestricted © Siemens 2020

Page 3

July 2020



Start

1

2

3

4

5

6



[siemens.com/simaris](https://www.siemens.com/simaris)

The **SIMARIS planning tools** provide efficient support for dimensioning an electric power distribution system and determining the equipment and distribution boards for it.

- **SIMARIS design** for network calculation and dimensioning
- **SIMARIS project** for determining the space requirements of distribution boards, the budget, and for generating specifications (bills of quantities) and BIM data
- **SIMARIS curves** to display tripping characteristics, as well as cut-off current characteristics and let-through energy curves
- **SIMARIS Online Toolbox** with practical calculation tools for the daily business

The advantages of SIMARIS planning tools:


- Intuitive and easy handling with user-friendly documentation options for the planning results
- End-to-end planning for all devices and systems from the medium-voltage level to the power consumer
- Automatic selection of matching components and distribution board systems
- High degree of planning reliability plus flexibility in the planning and implementation process

SIMARIS design enables electric networks to be dimensioned which are based on real products ranging from the medium-voltage down to the load level including automatic selection of suitable equipment.

- The equipment is dimensioned according to the accepted rules of good installation practice and all applicable standards (VDE, IEC).
- Network operating modes and switching conditions can be defined as desired.
- Automatic selection of suitable equipment in radial networks
- Calculation of short-circuit currents, symmetrical load flows, voltage drops, and energy balances in radial networks
- Consideration of required personal, short-circuit, and overload protection
- Consideration of functional endurance as well as lightning and overvoltage protection possible
- Busbar trunking systems for power transmission and distribution can also be integrated in your planning.
- Isolated networks can be planned and displayed
- Distribution boards can be mapped as equivalent impedances which can be incorporated into the calculation, acting as substitutes for parts of the network which cannot yet be specified more precisely
- To document results, a wide variety of output options is provided, e.g. for analysis and optimization of the energy efficiency of the planned network
- One useful output variant is the export file of your project for further processing in **SIMARIS project**. This facilitates determining the space requirements for the distribution boards and makes it easy for you to create a basis for budget finding.

In addition, **SIMARIS design professional** provides the following options:

- Thanks to the option to visualize and calculate parallel network operation, different power sources such as transformers and generators can be operated in the same network.
- In the context of automatic selectivity evaluation, selectivity thresholds are displayed in addition to the characteristic current-time curve and the corresponding envelope curves.
- Configuration of a switchover facility for emergency power supply is possible in sub-distributions
- Infeed on all distribution levels (e.g. transformer, generator, etc.)
- Automatic selection of suitable equipment in ring and meshed networks
- Calculation of short-circuit currents, asymmetrical load flows, voltage drops, and energy balances in ring and meshed networks.

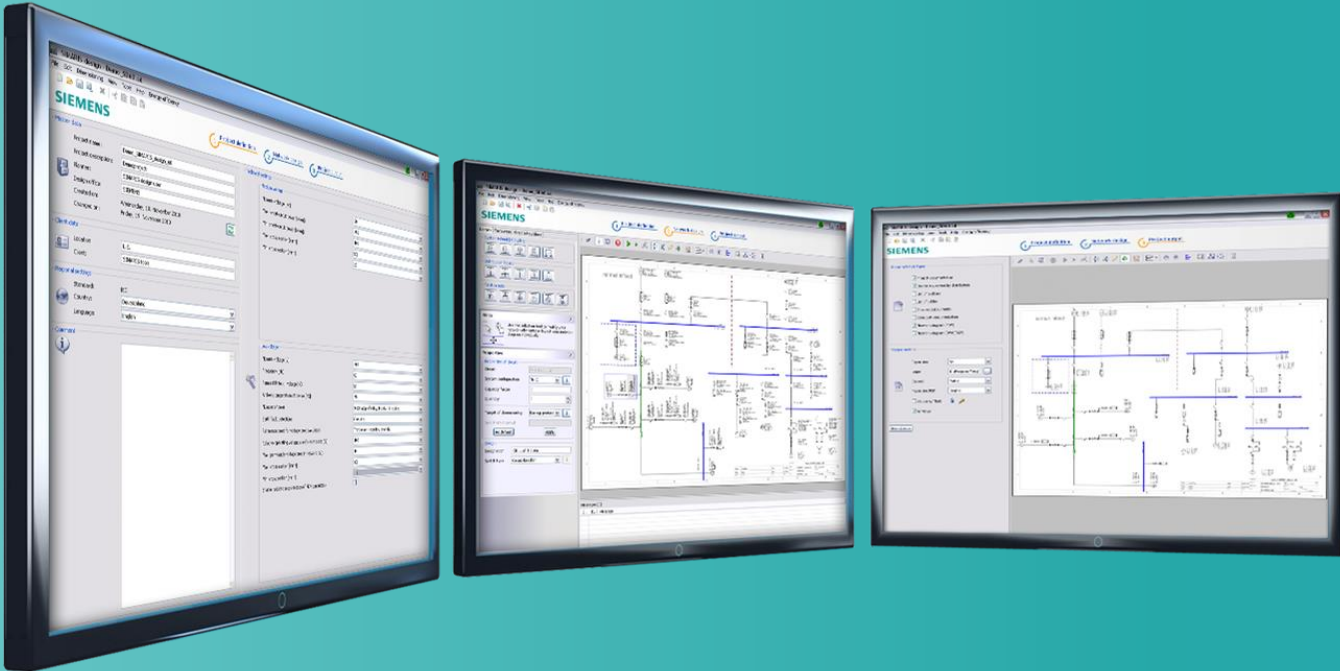

Getting started

1

Introduction

2

Getting started

3

Network design

4

Dimensioning

5


Project output

6

More about SIMARIS

Getting Started Project definition

Learn here, how to create a project and familiarize with the workflow from project definition to network design and project output.

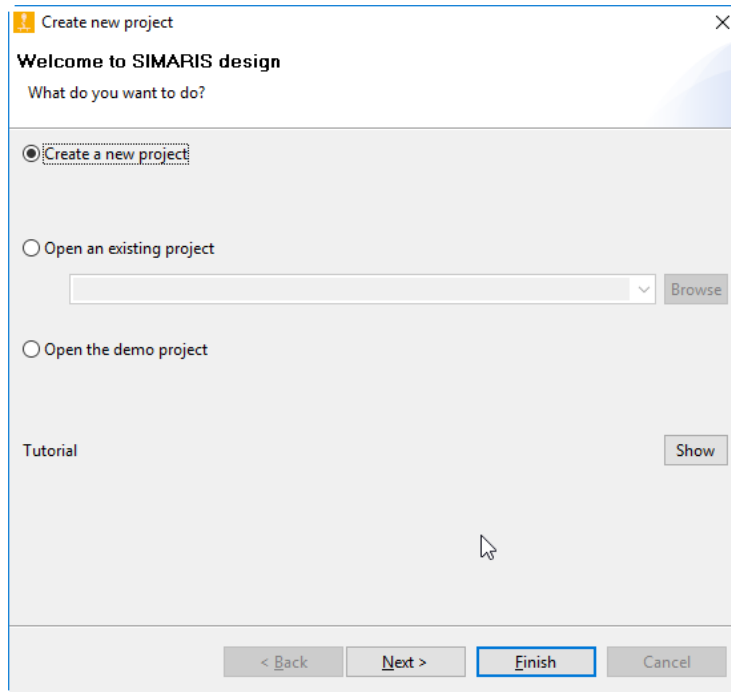


After program start you have the following options:

- Create a new project
- Open an existing project
- Open the demo project

When you select "Create new project" and click "Next" you can then...

Getting Started

Project definition

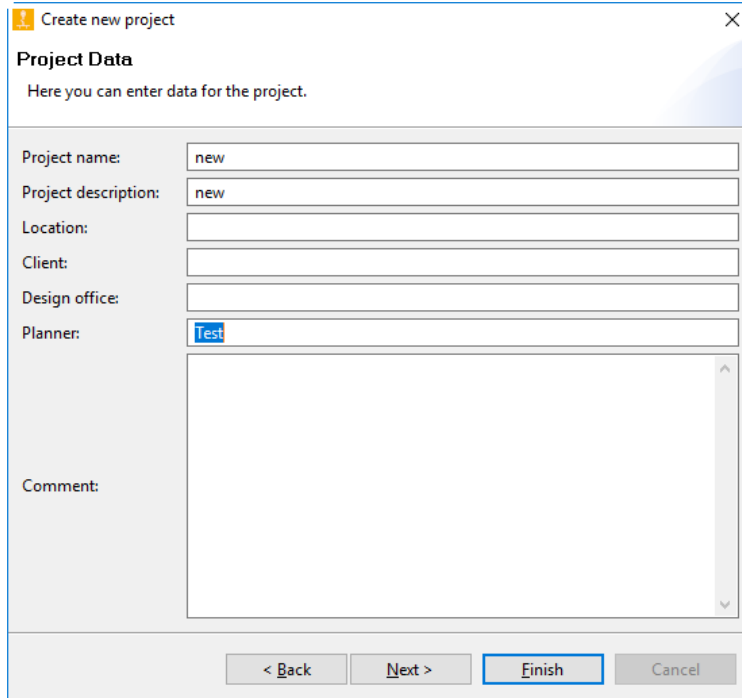

The screenshot shows a 'Create new project' dialog box with a title bar containing a warning icon and a close button. The main section is titled 'Project Data' and includes the instruction 'Here you can enter data for the project.' Below this, there are several input fields: 'Project name:' with the value 'new', 'Project description:' with the value 'new', 'Location:', 'Client:', 'Design office:', and 'Planner:' with the value 'Test'. A large text area for 'Comment:' is located below the 'Planner' field. At the bottom of the dialog, there are four buttons: '< Back', 'Next >', 'Finish' (which is highlighted with a blue border), and 'Cancel'.

... enter master data for the project ...

The screenshot shows a software dialog box titled 'Create new project' with a close button (X) in the top right corner. Below the title bar, the section is labeled 'Medium voltage' with a subtitle 'Here you can enter technical settings for medium voltage.' The main area contains six input fields, each with a dropdown arrow on the right:

- Nominal voltage [kV]: 20
- Relative operating voltage at feeding point [%]: 100
- Max. short-circuit power [MVA]: 250
- Min. short-circuit power [MVA]: 100
- Max. cross section [mm²]: 500
- Min. cross section [mm²]: 25

At the bottom of the dialog, there are four buttons: '< Back' (highlighted with a blue border), 'Next >', 'Finish', and 'Cancel'.

... and technical data for the medium-voltage system...

Create new project [X]

Low voltage
Here you can enter technical settings for low voltage.

Nominal voltage [V]:	400
Frequency [Hz]:	50
Permissible touch voltage [V]:	50
Load flow calculation:	unbalanced
Reference point for voltage drop calculation:	Transformer-secondary terminals
Max. permissible voltage drop in network [%]:	8
Ambient temperature of device [°C]:	45
Number of poles:	3-contact preferably, 4-contact if required
Earth fault detection:	if required
Max. cross section [mm²]:	240
Min. cross section [mm²]:	2,5
Enable reduced cross-section of PEN-conductors:	☐


< Back Next > Finish Cancel

...and select the low-voltage level.

- To facilitate your choice, some data input fields have been pre-set with default values that can, however, be changed at any time by selecting appropriate data from the drop-down boxes.
- By clicking the "Finish" button, you get to the program step "**Network Design**" and can start planning the network.

Getting Started

Project definition

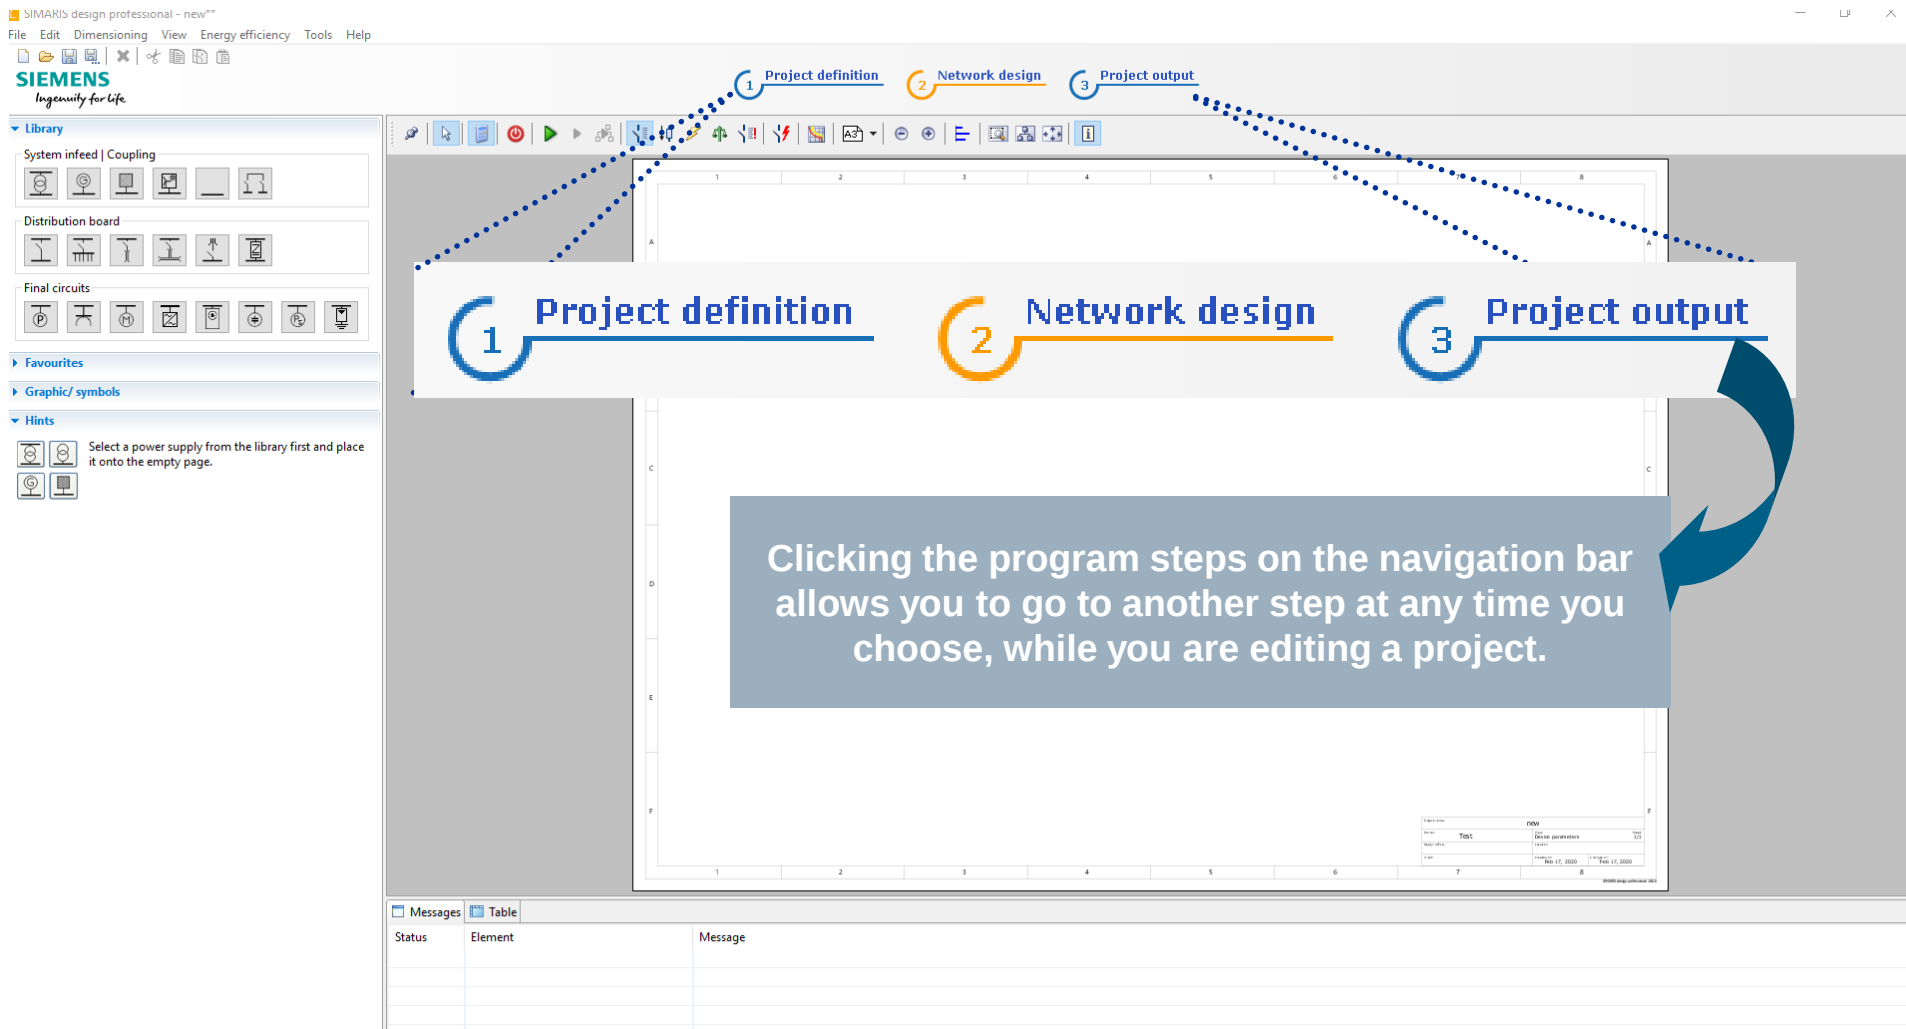

Getting Started

Project definition

This means that you can later view and modify the entries you made in the start wizard, when you are in the step "**Project definition**".

Overview of Project definition

Master data

Project name: new
Created on: Friday, 24. July 2020
Changed on: Friday, 24. July 2020

Customer data

Location:
Client:

Locale

Standard: IEC
Country: Deutschland
Language: English

Technical data for medium voltage

Technical settings

Medium voltage

Nominal voltage [kV]: 20
Relative operating voltage at feeding point [%]: 100
Max. short-circuit power [MVA]: 250
Min. short-circuit power [MVA]: 100
Max. cross section [mm²]:
Min. cross section [mm²]:

Technical data for low voltage

Low voltage


Nominal voltage [V]: 400
Frequency [Hz]: 50
Permissible touch voltage [V]: 50
Load flow calculation: unbalanced
Reference point for voltage drop calculation:
Max. permissible voltage drop in network [%]:
Ambient temperature of device [°C]:
Number of poles:
Earth fault detection:
Max. cross section [mm²]: 240
Min. cross section [mm²]: 2,5
Enable reduced cross-section of PEN-conductors: ☐




In this context, please note that the edited network must be redimensioned after every change in the technical settings.

In addition, you can "localise" the Regional settings made in the Project definition step, i.e. choose the country-specific product portfolio relevant for your planning by selecting a country and a language matching this country, or English as the project language.

All settings defined in this step – this includes both technical data and country and language settings – will be automatically saved for future projects, but can be changed again if necessary, which greatly facilitates working and collaborating at international projects.

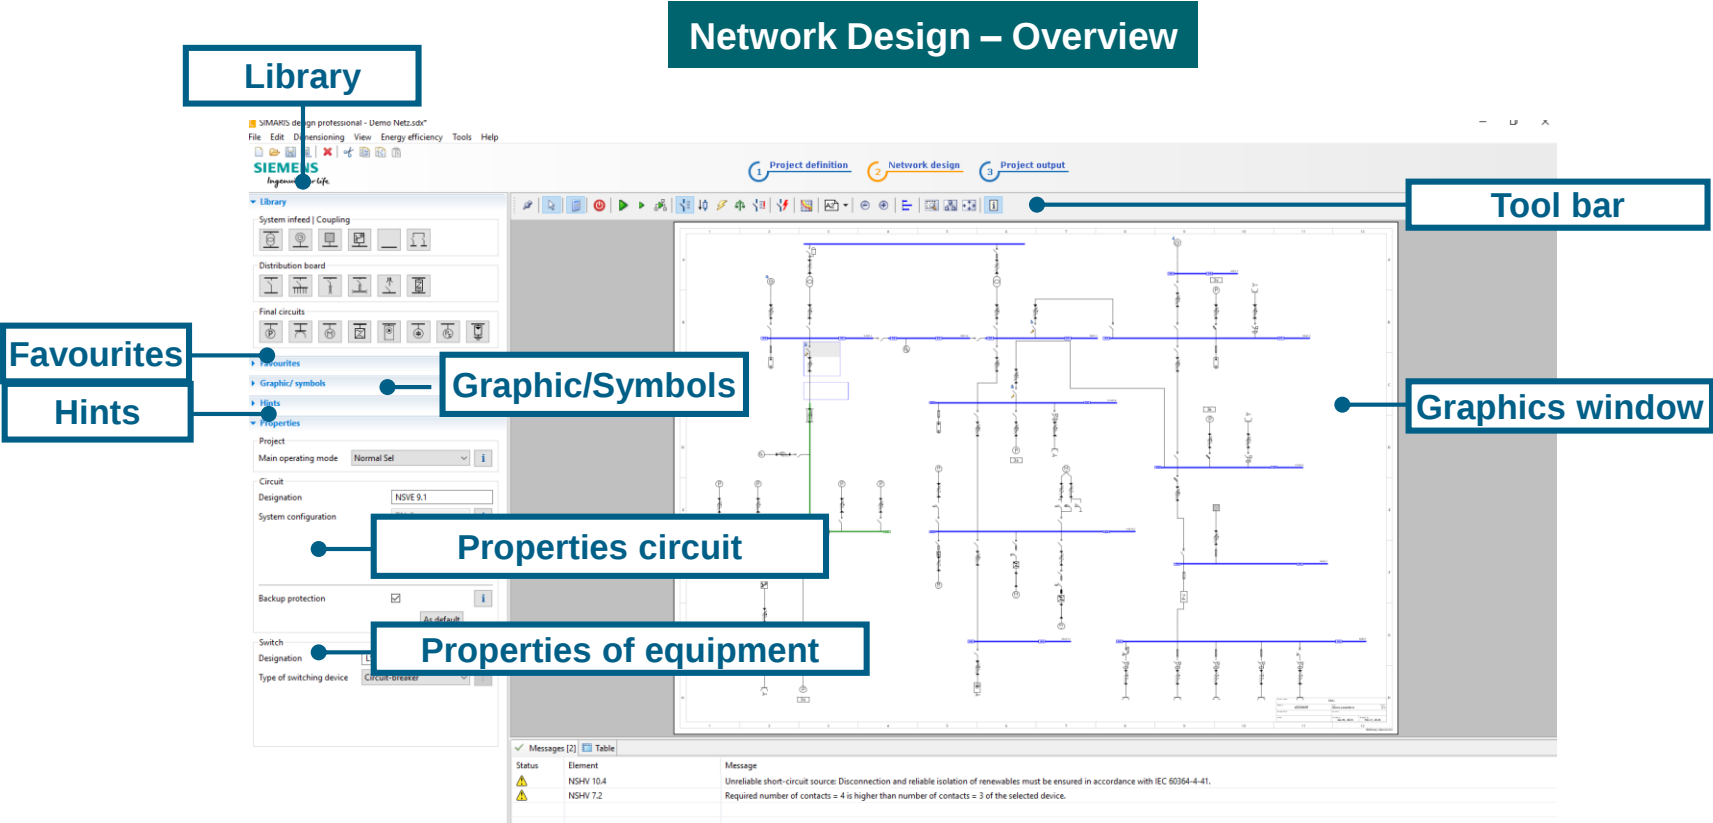

In the "**Network design**" step, there are the following sections:

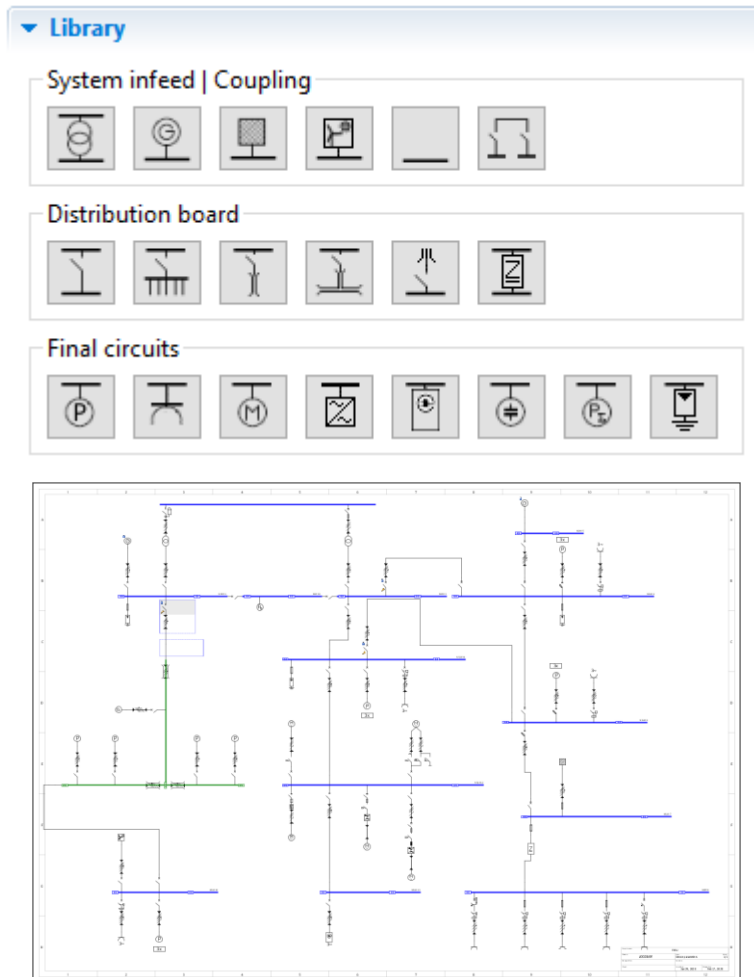

The **Library** (top left) provides all elements required for creating a network diagram. You can either rely on Favourites, or integrate symbols into the network diagram.


The network diagram is built up in the **graphics window** (on the right of the screen display) from Library elements and/or Favourites.

Getting Started

Introduction to network design




The **tool bar** above the graphics window contains all important functions for editing the network diagram.

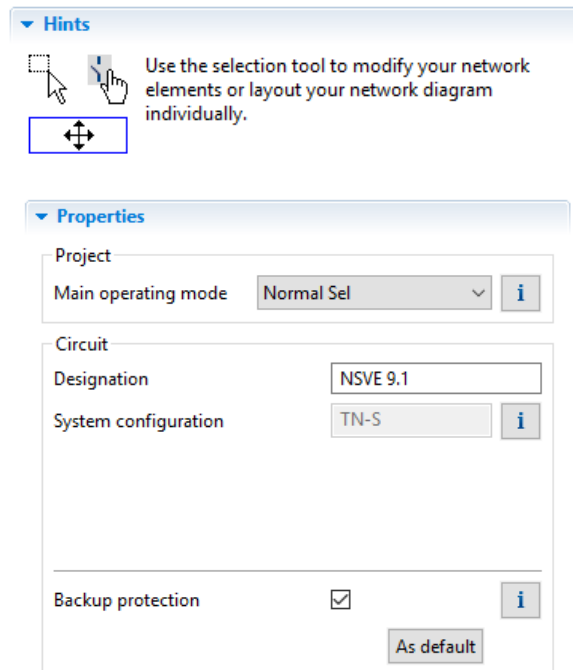


Hints and tips how to edit the network, and the **Properties** of the elements marked on the graphics, i.e. circuits and equipment, can be found below the Library on the left.

Thus you can easily and quickly view the most important information about the network diagram elements you are editing.

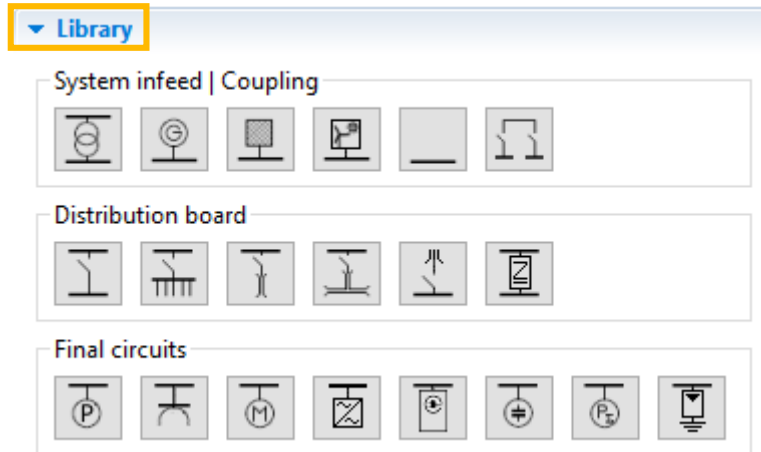


In the "**Network design**" step, you build up the network step by step with the aid of elements from the **Library**, this means

- System infeeds
- Couplings
- Distribution boards
- and final circuits.

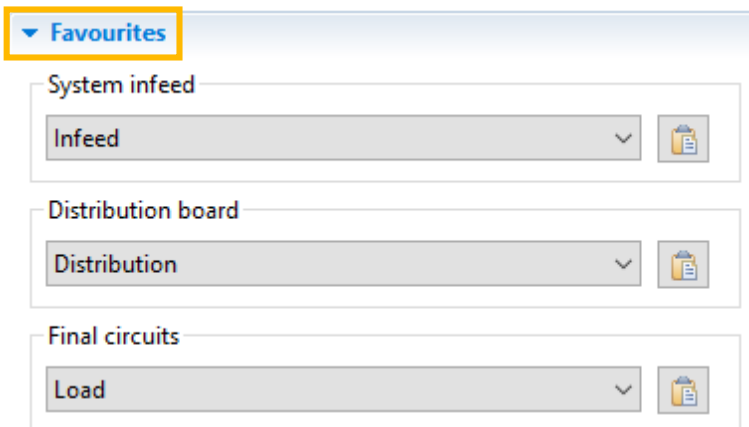

Elements saved as **Favourites** can also be used to build up the network diagram.

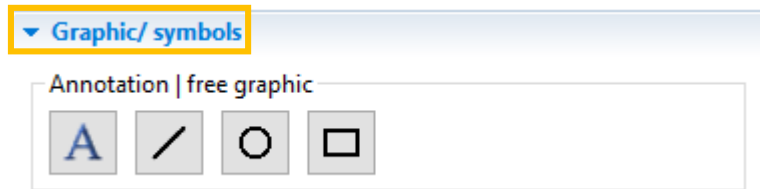

It is also possible to add graphic elements, symbols and annotations to structure the network diagram and add suitable captions and labels.




Various editing options for the network diagram, which can be called up

- using the tool bar,
- the menu,
- and sometimes the context menu (right mouse click) as well, support you in creating and editing a network diagram



Please also refer to the sections "[How to create network elements](#)" and "[Working in the network diagram](#)" in "[Network Design](#)".

In the "[Network Design](#)" step, the components shown on the network diagram are automatically or manually dimensioned. More about this in "[Dimensioning](#)".

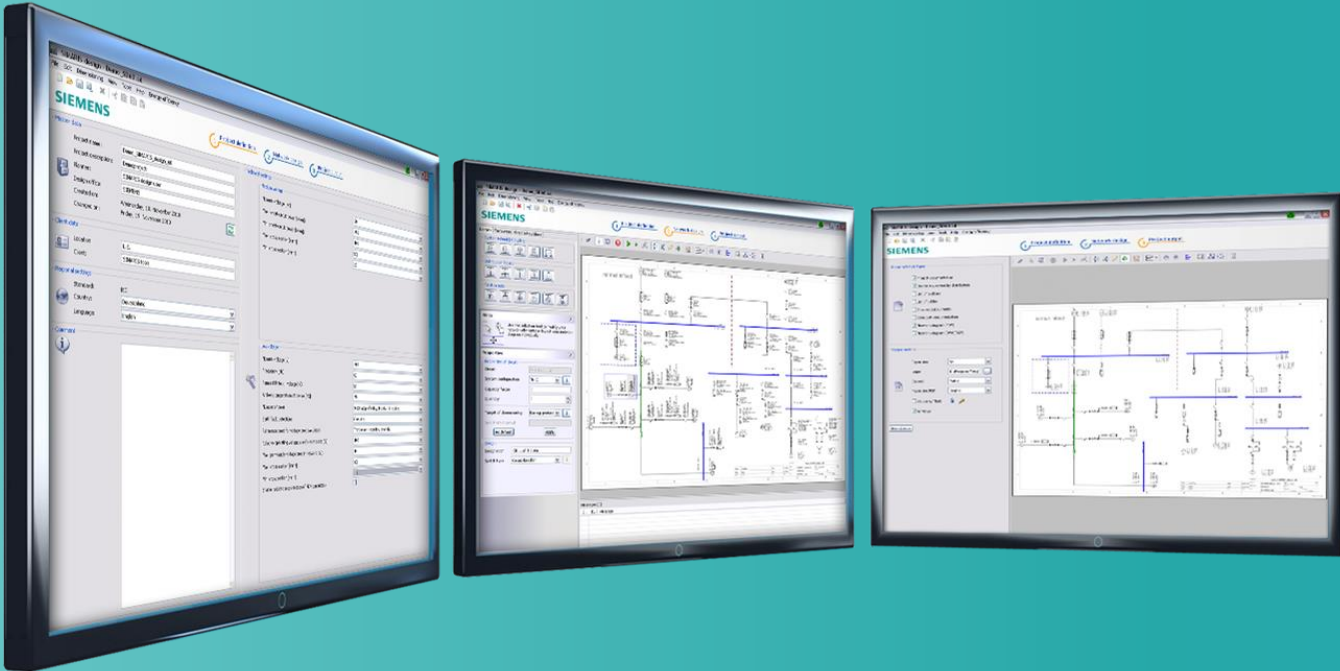

Network design

- > How to create network elements
- > Working in the network diagram
- > Couplings

1
Introduction

2
Getting started


3
Network design

4
Dimensioning

5
Project output

6
More about SIMARIS

Tutorial SIMARIS design – Network Design

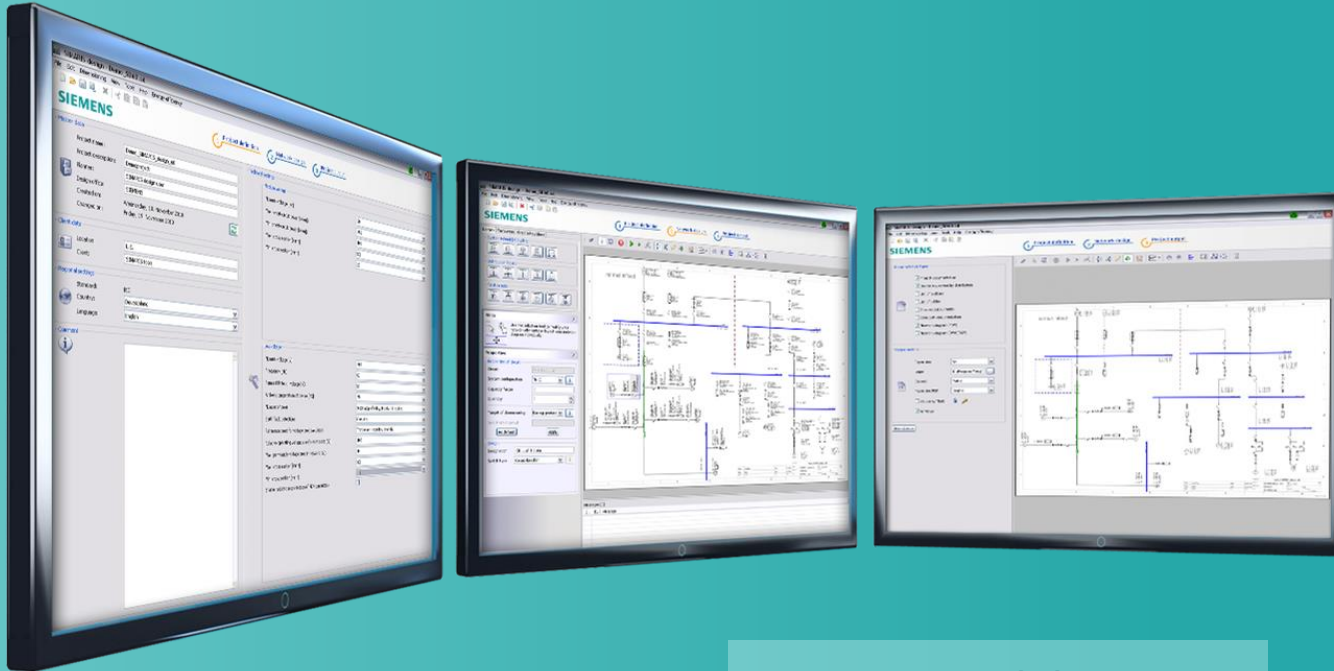

How to create network elements

How to create network elements

- > System infeeds
- > Distribution board
- > Loads
- > Separate networks
- > Busbar systems and loads

Working in the network diagram

Couplings

1

Introduction

2

Getting started

3

Network design

4

Dimensioning

5

Project output


6

More about SIMARIS



Network Design

How to create network elements

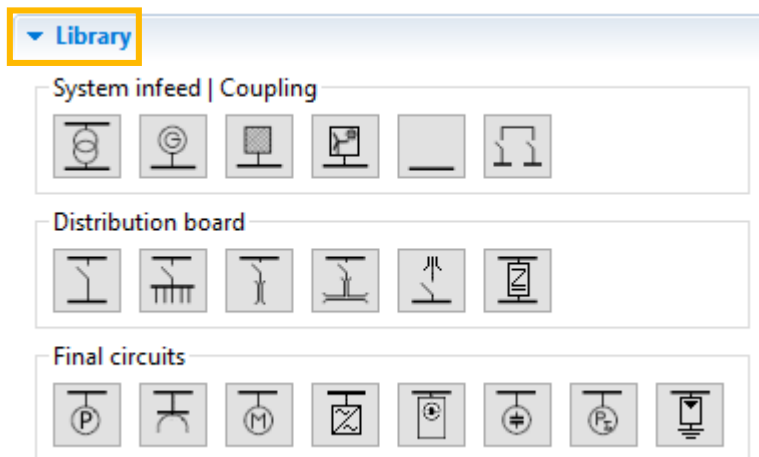


This is an easy, fast, and safe way to build up your network:

- To insert an element into the drawing please enable the desired icon in the **Library** on the left by clicking on it. The enabled icon is marked by a yellow frame.
- The meaning of the individual icons is explained in the tooltip, which can be displayed by hovering the mouse over this icon for a moment.

Network Design

How to create network elements – system infeeds

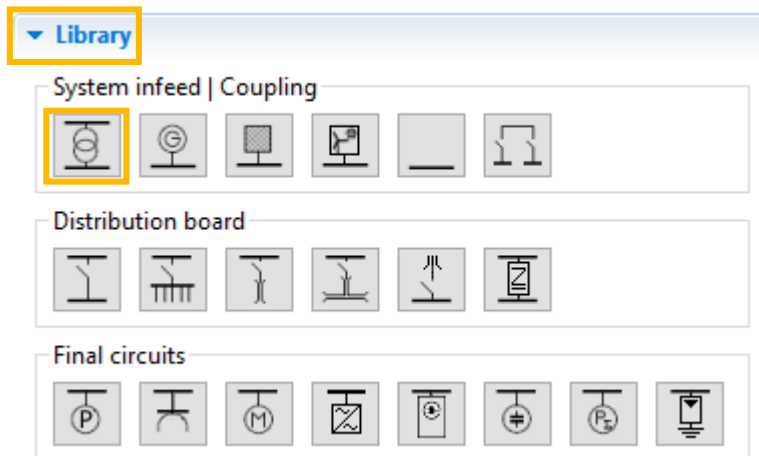

At first, enable an icon in the **Library**,
e.g. for a **Transformer** (yellow frame visible).

Network Design

How to create network elements – system infeeds

Infeed: Transformer

Add transformer
Specify the required parameters inside the infeed-circuit.



Type of switching device: Circuit-breaker CB-f NAR

Type of connection: Cable/Line

Length [m]: 0

System configuration: TN-S

Type of switching device: None

Type of connection: Cable/Line


Busbar system:

Length [m]: 0

Type of switching device: Circuit-breaker


Finish Cancel

Result shown in the network diagram, when a transformer (without medium voltage) is created:

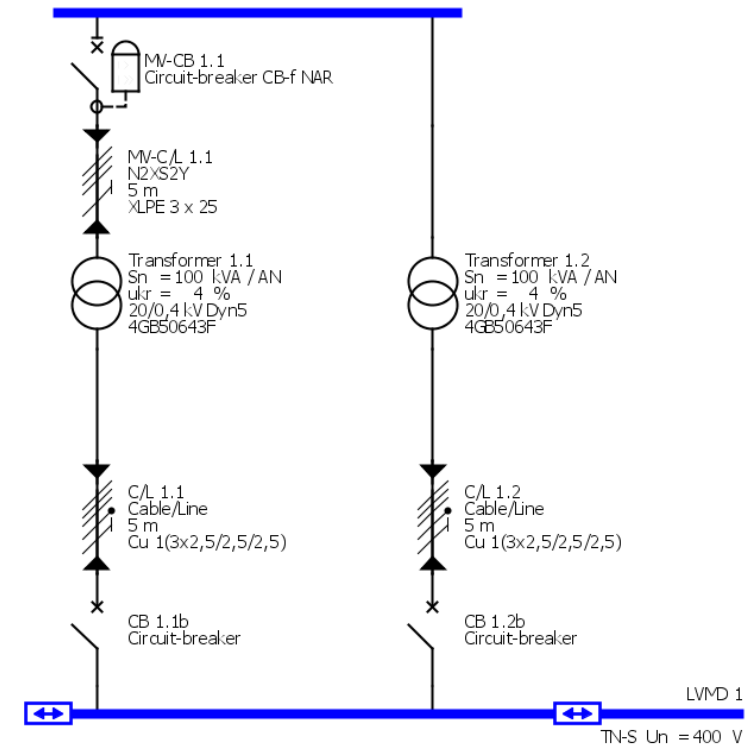

Network Design

How to create network elements – system infeeds

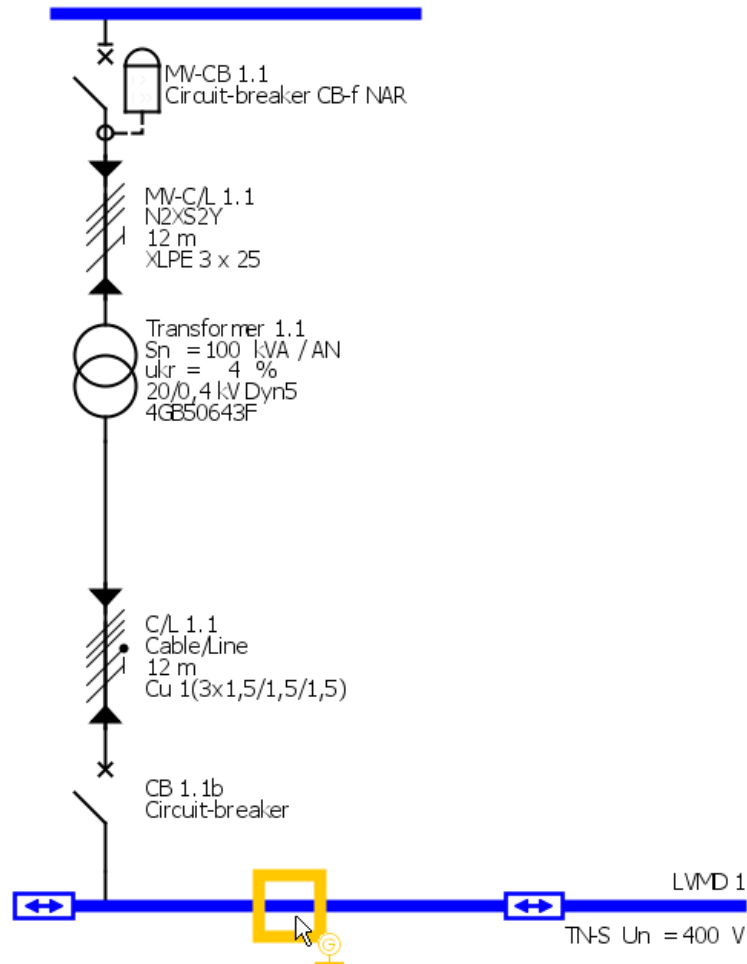


In principle, other types of infeed components are created in the same way.

Parallel infeed using several power sources can be mapped by placing more infeed components at an insert point on the busbar and specifying them in the dialog displayed afterwards.

Network Design

How to create network elements – system infeeds

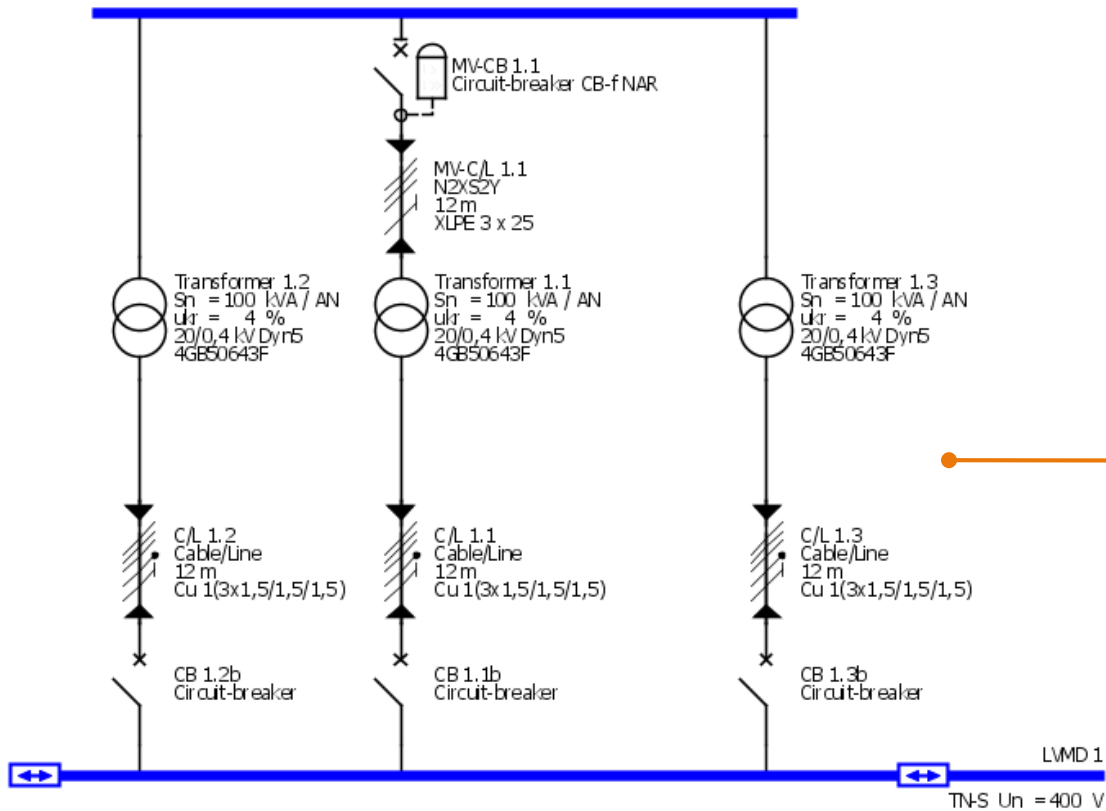


The result for linking infeed components is shown here.

A detailed description on how to create couplings can be found in the "[Couplings](#)" section.

Network Design



How to create network elements – distribution boards

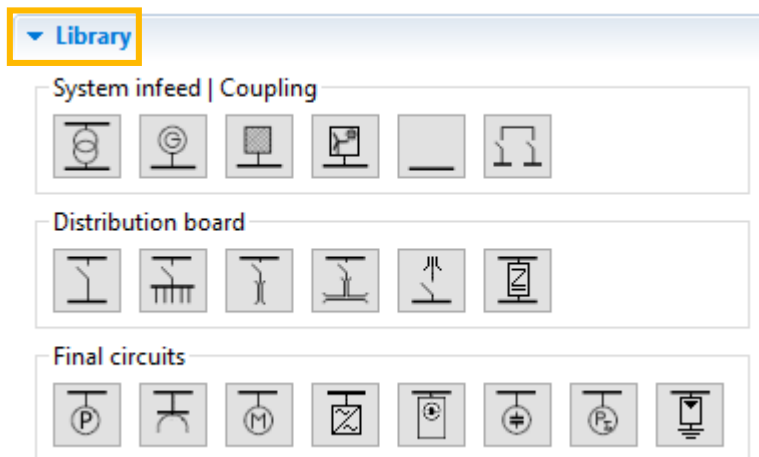

Distribution boards are created in the same way:
At first enable an icon in the **Library**,
e.g. for a **sub-distribution board** (yellow frame visible).

Network Design

How to create network elements – distribution boards

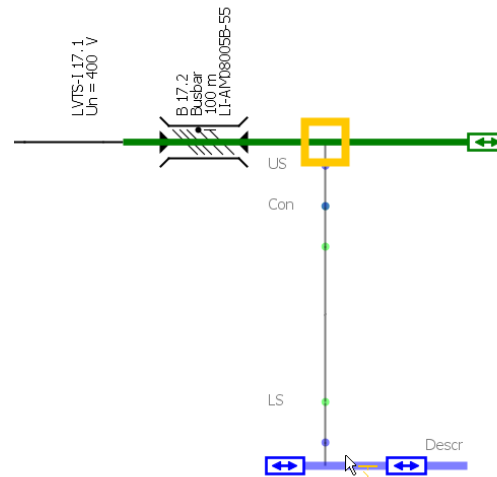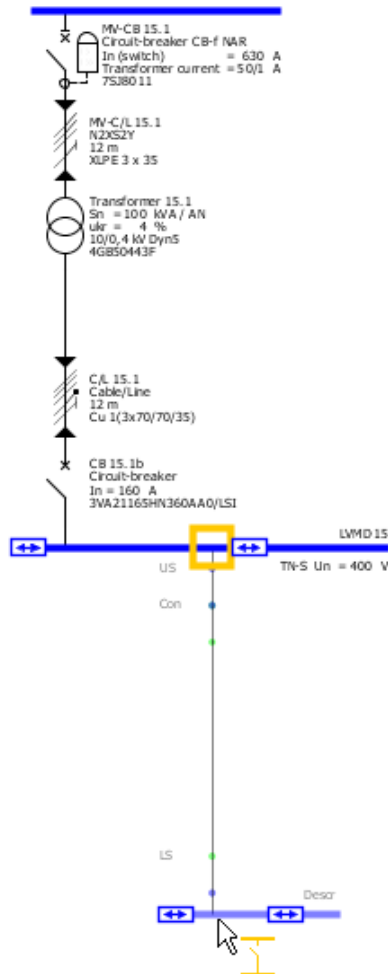

- Possible insert points in the network diagram are marked by a yellow rectangle, when hovering the mouse over it.
- You can find insert points on the graphs representing distribution boards (blue lines) and the busbar trunking systems (green lines).
- To add elements, left-click such an insert point, keep the mouse key pressed and drag the mouse away from the insert point at a right angle to the blue or green line.
- After you release the mouse button, another dialog is automatically displayed, where you can specify parameters of the element that was just placed.

Network Design

How to create network elements – distribution boards

Sub-distribution board

Add distribution board
Specify the required parameters inside the distribution circuit.



System configuration: TN-S i

Type of switching device: Circuit-breaker

Type of connection: Cable/Line

Busbar system: i

Length [m]: 0


Type of switching device: None

Finish Cancel

Network Design

How to create network elements – distribution boards

Result in the network diagram


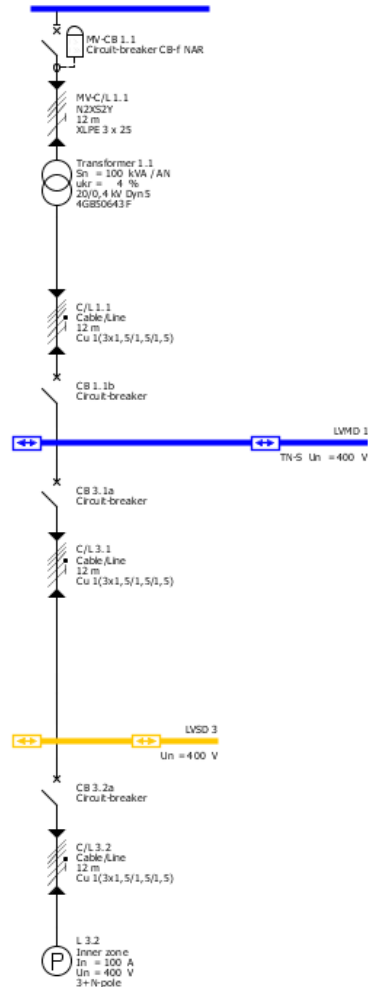


In principle, other distribution boards are created in the same way. A detailed description on how to add busbar trunking systems can be found in the **"Busbar systems and loads"** section.

Network Design

How to create network elements – loads


Also **loads** are created in the similar way. Hereby you can connect them either directly to an infeed or to a distribution board / busbar trunking system.

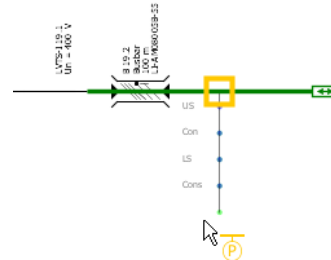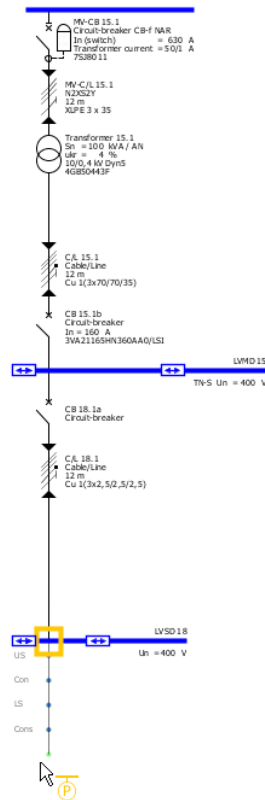

- Possible insert points in the network diagram are marked by a yellow rectangle, when hovering the mouse over it.
- You can find insert points on the graphs representing distribution boards (blue lines) and the busbar trunking systems (green lines).
- To add elements, left-click such an insert point, keep the mouse key pressed and drag the mouse away from the insert point at a right angle to the blue or green line.
- After you release the mouse button, another dialog is automatically displayed, where you can specify parameters of the element that was just placed.

Network Design

How to create network elements – loads

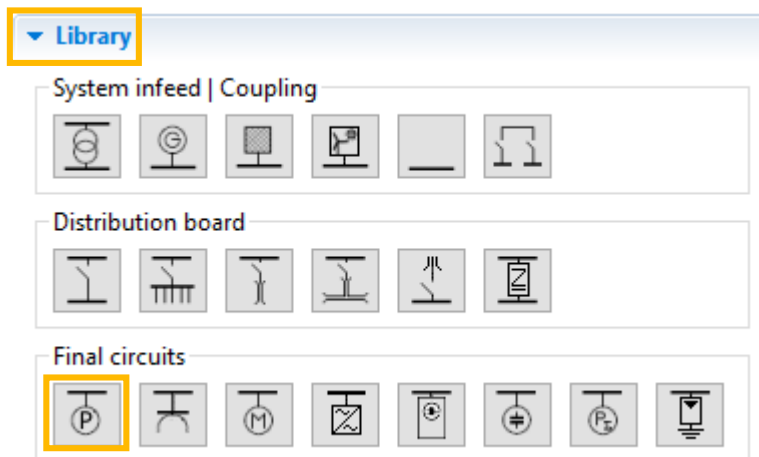

To add a **stationary load**, you must at first enable the corresponding icon in the Library again.

Network Design

How to create network elements – loads

Add stationary load

Specify the required parameters inside the consumer-circuit.

System configuration: TN-S

Type of switching device: Circuit-breaker

Type of connection: Cable/Line

Busbar system:

Length [m]: 0

Type of switching device: None

Number of poles (type of network): 3+N

Nominal current [A]: 100

Active power [kW]: 55,426

Quantity: 5


Place of installation: Inner zone

Finish Cancel

When the element is placed at a suitable insert point on the network diagram, a dialog for specifying technical data for connecting the load circuit is displayed.

Network Design

How to create network elements – loads

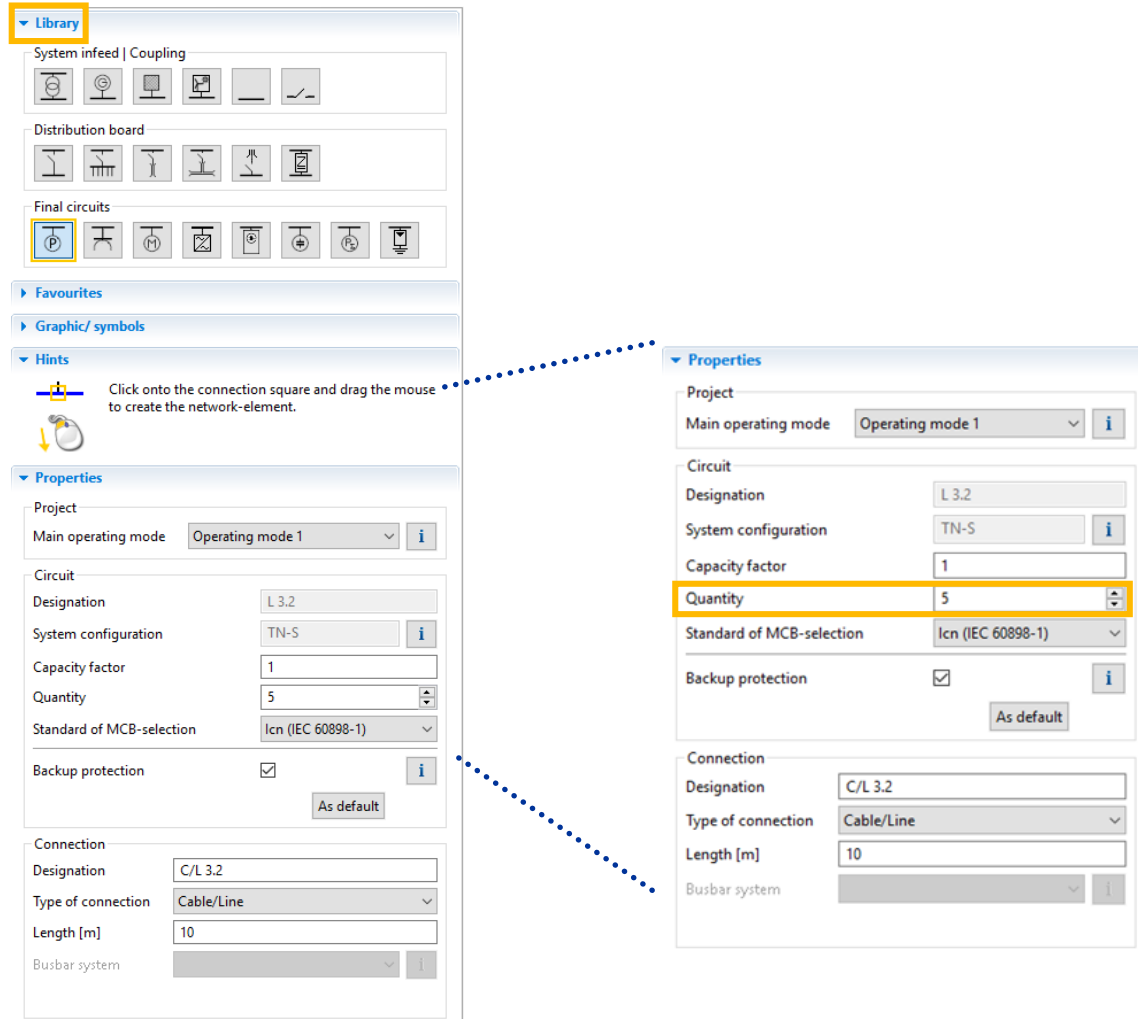


To simplify planning work for larger projects and maintain a straightforward structure of the network diagram, you can create **load groups**

- by entering the desired number of identical loads into the specification immediately ([see previous page](#))
- or later, by marking the corresponding element in the network diagram and modifying the quantity shown in the Properties dialog at the bottom left.

Network Design



How to create network elements – loads

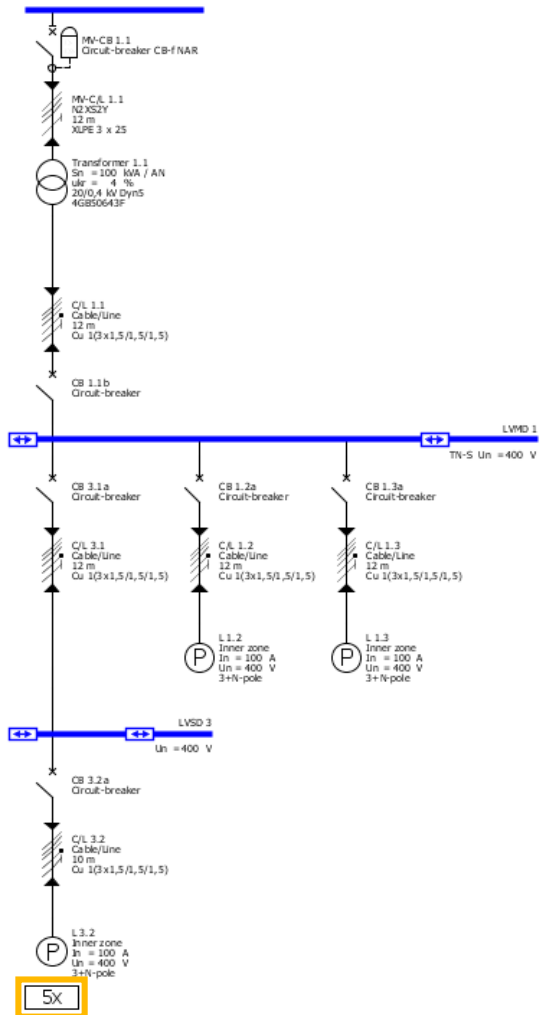

The selected number of identical loads is of course marked in the network diagram and automatically factored in during a subsequent dimensioning cycle.

Network Design

How to create network elements – loads

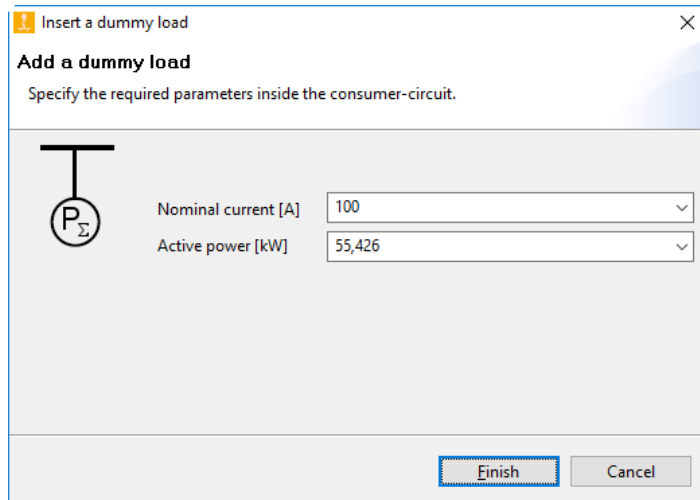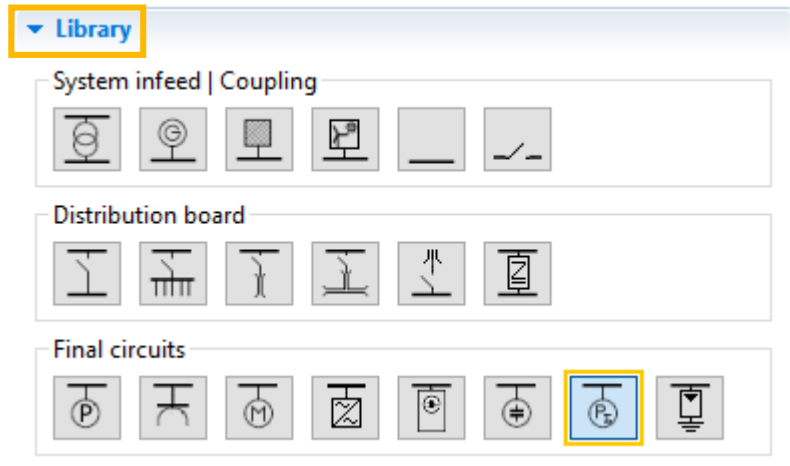


If the data for the load circuits to be planned is not known in detail, you can still create them on the network diagram as **cumulated or dummy loads**.

A dummy load is specified by its nominal current and the active power. Thus it also influences the energy balance during dimensioning.


But switching devices or cables/lines are not dimensioned for a dummy load circuit!

Representation in the network diagram:

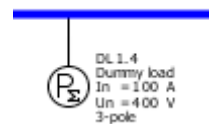


Network Design

How to create network elements – loads

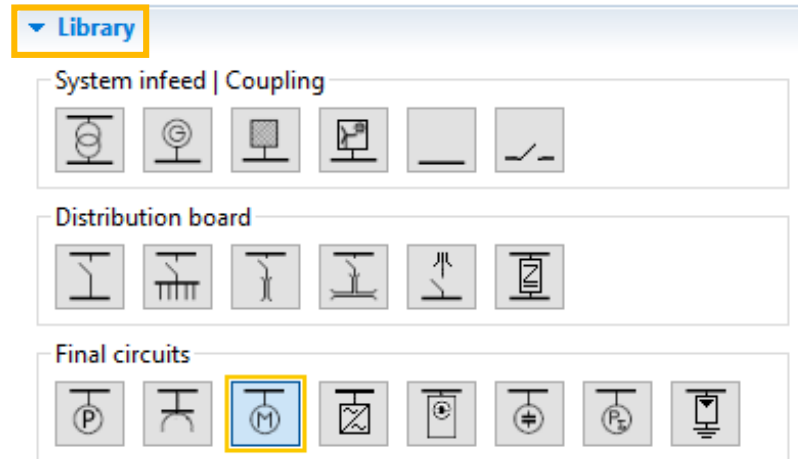


The "Motor" icon allows a **motor** or a **motor group** (several identical motors) to be connected to a main or sub-distribution board.

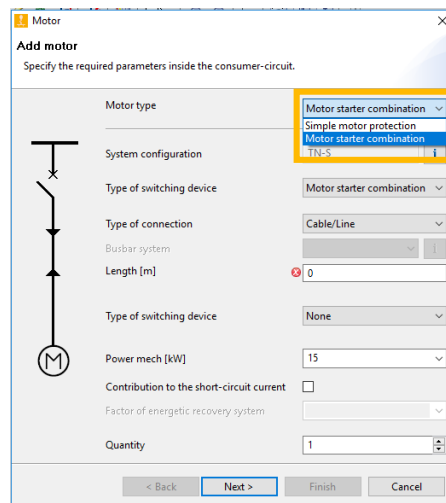

Besides mapping simple standard motor protection, you can also select and dimension **motor starter combinations** which are protected by circuit-breakers or fuses.

Network Design


How to create network elements – loads

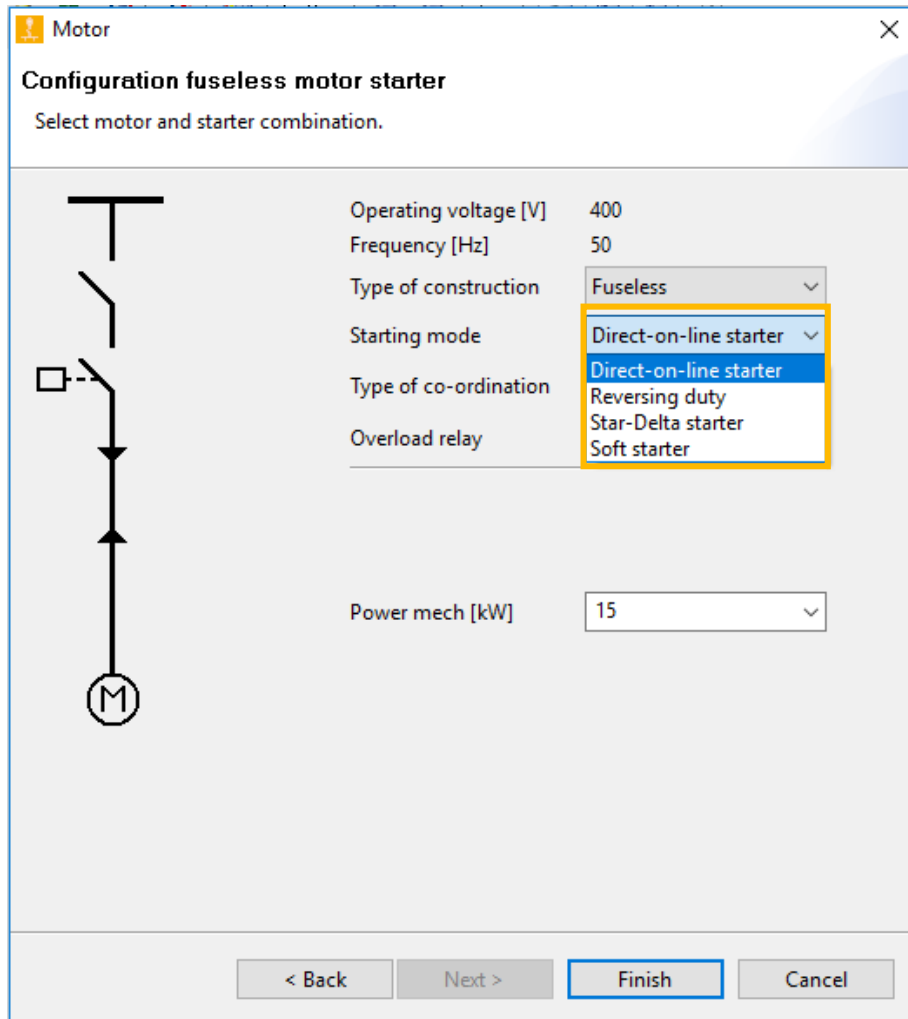

If "Motor starter combination" was selected, the next dialog (Starting mode) allows to choose between


- Direct-on-line starter
- Starter for reversing mode
- Star-delta starter
- Soft starter.

Representation of a star-delta starter on the network diagram:

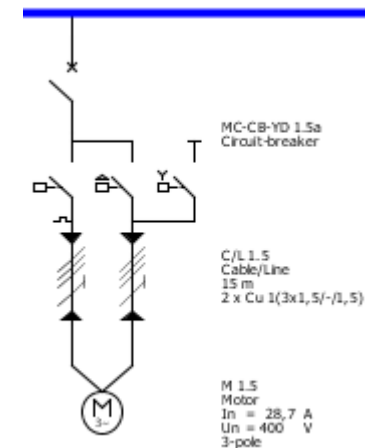


Network Design

How to create network elements – loads

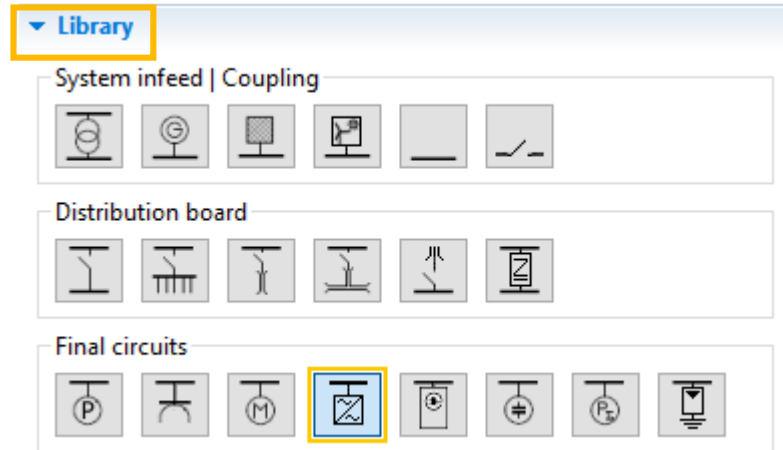

The "**Frequency converter**" icon allows a frequency converter to be connected to a main or sub-distribution board.

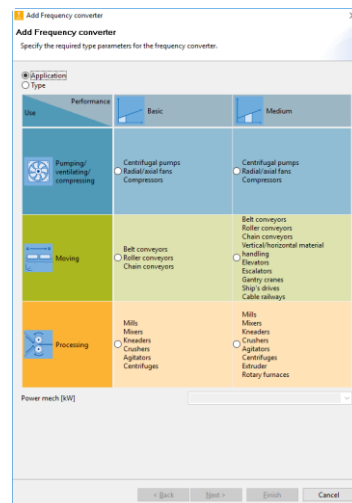

The type of **frequency converter** will be determined automatically by selection of classification, application and power.

Network Design

How to create network elements – loads

Add Frequency converter

Specify the required parameters inside the frequency converter-circuit.

Installation type

☒ Built-in unit ☐ Cabinet ☐ Distributed

System configuration TN-S

Type of switching device None

Type of connection Cable/Line

Length [m]

Preferred type of construction Fuseless

EMC provision No requirement

Type of connection Shielded cable

Length [m] 0

Power mech [kW] 15


Quantity 1

< Back Next > Finish Cancel

- Having selected "Frequency converter" you can choose at "type of construction" between
- Built-in unit
 - Cabinet unit.
 - The lengths of the shielded cable between frequency converter and motor can be determined.
 - As cable cross-section the maximum connectable one is selected by default.

Network Design

How to create network elements – Separated Networks

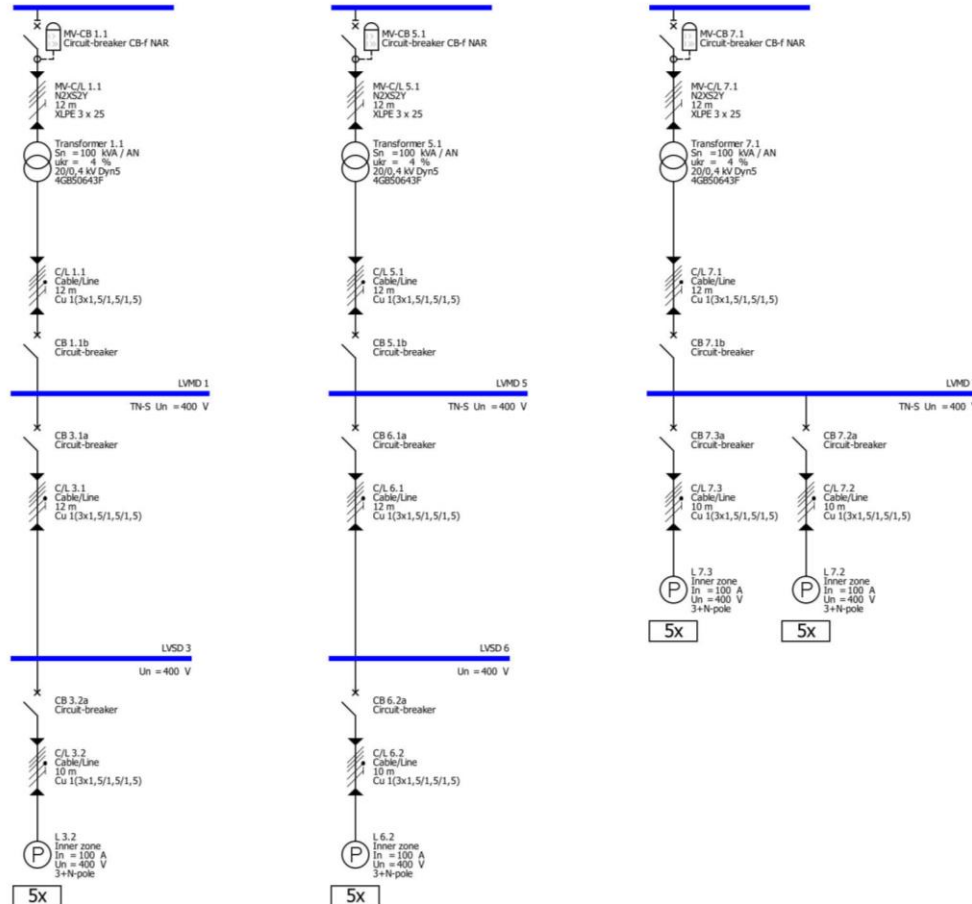

SIMARIS design professional allows to create several separate networks on the network diagram. The same medium-voltage specifications apply to these separate networks that were already made in the project definition.



Such **isolated networks** are either created within a project

- by building up individual networks separately,
- or by copying an existing network. To do so, place the mouse pointer on the main distribution board, call up the context menu (right mouse button), select "Copy" and then "Paste" in the context menu to place the network at the desired position on the network diagram with a left mouse click.

SIMARIS design also helps you integrate **busbar systems** for power transmission and distribution into your planning concept and displays them on the network diagram.


First, enable the "Busbar trunking system" icon in the Library,

- place the system at a suitable connection/insert point,
- specify the data that is still missing
- And select the matching busbar system

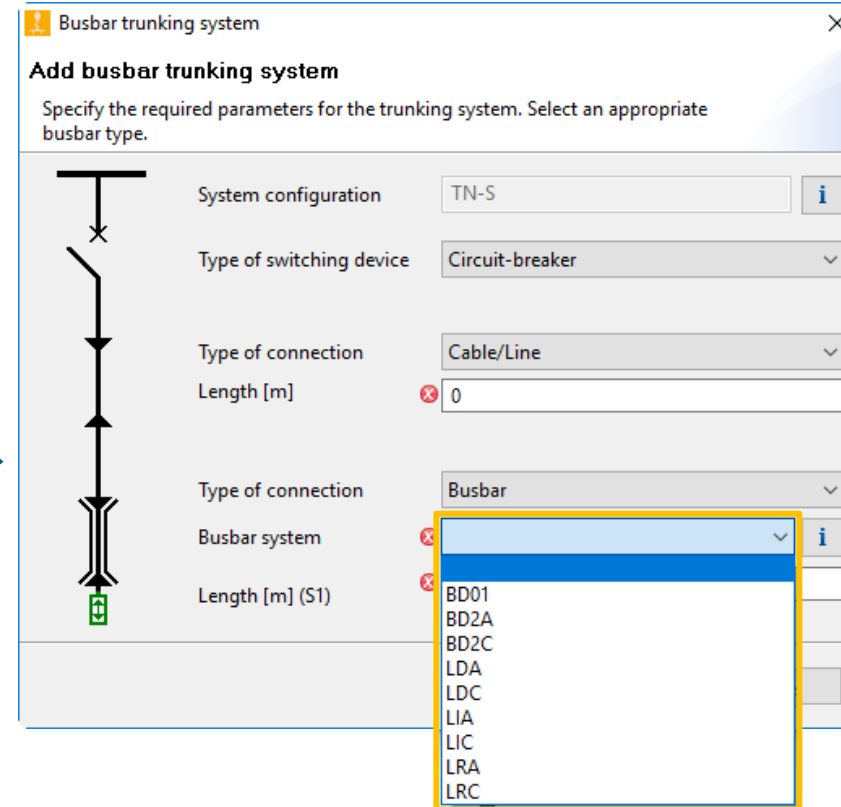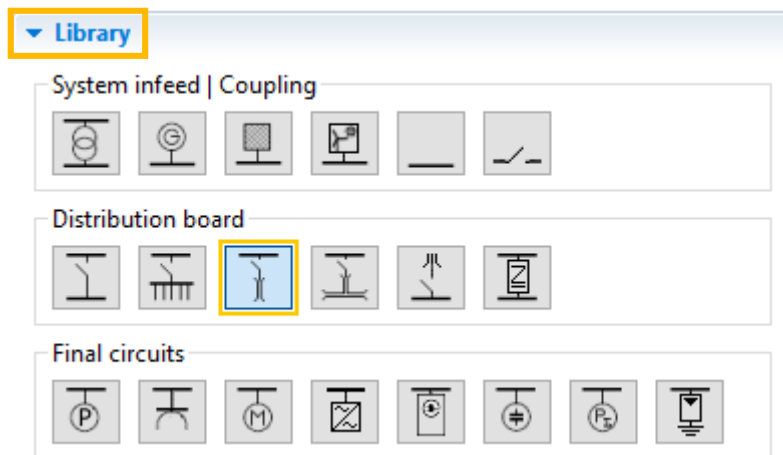

Network Design

How to create network elements – busbar systems and loads

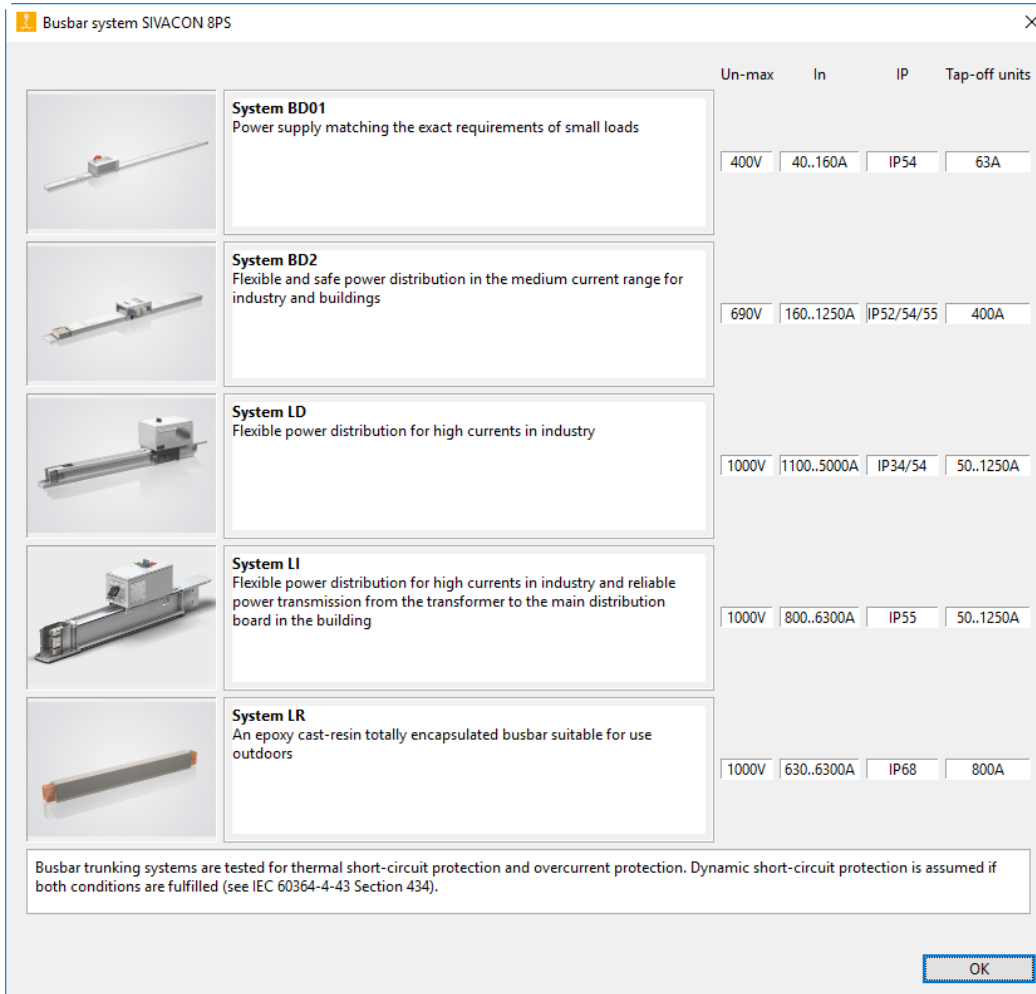

Having selected the busbar trunking system and defined its length, you can graphically edit it on the network diagram, e.g. by dragging the gripper with the mouse, thus elongating the busbar in the diagram.



Attention:
This elongation is just a graphical representation. The real busbar length, which is to be considered in network design, can only be changed in the Properties.

Network Design

How to create network elements – busbar systems and loads

Busbar connection

☒ Automatic dimensioning

Designation: B 9.2

Functional endurance: none

Busbar system: LIA

Material for conductor: Al

Mounting type: horizontal on edge

Degree of protection:

Ie [A]:

Busbar configuration: L1, L2, L3, N, PE=chassis

Reduction factor f tot: 1

Un-max [V]: 1,000

Iz [A]: 800

Icw [kA]: 35

Permissible voltage drop/section [%]: 4

Temperatures [°C]: ΔU: 55; Ikmin: 80

Length [m]: 5


Longest fire area [m]: 0 m

OK Cancel

More busbar properties, such as degree of protection and mounting type, can be modified at any time.

To do so, position the mouse pointer on the item of equipment to be edited, e.g. the busbar, so that

- you can either change the equipment properties directly which are displayed on screen to the bottom left of the network diagram,
- or call up detailed properties using the context menu (right-click) and make the desired changes in the dialog now displayed according to project requirements.

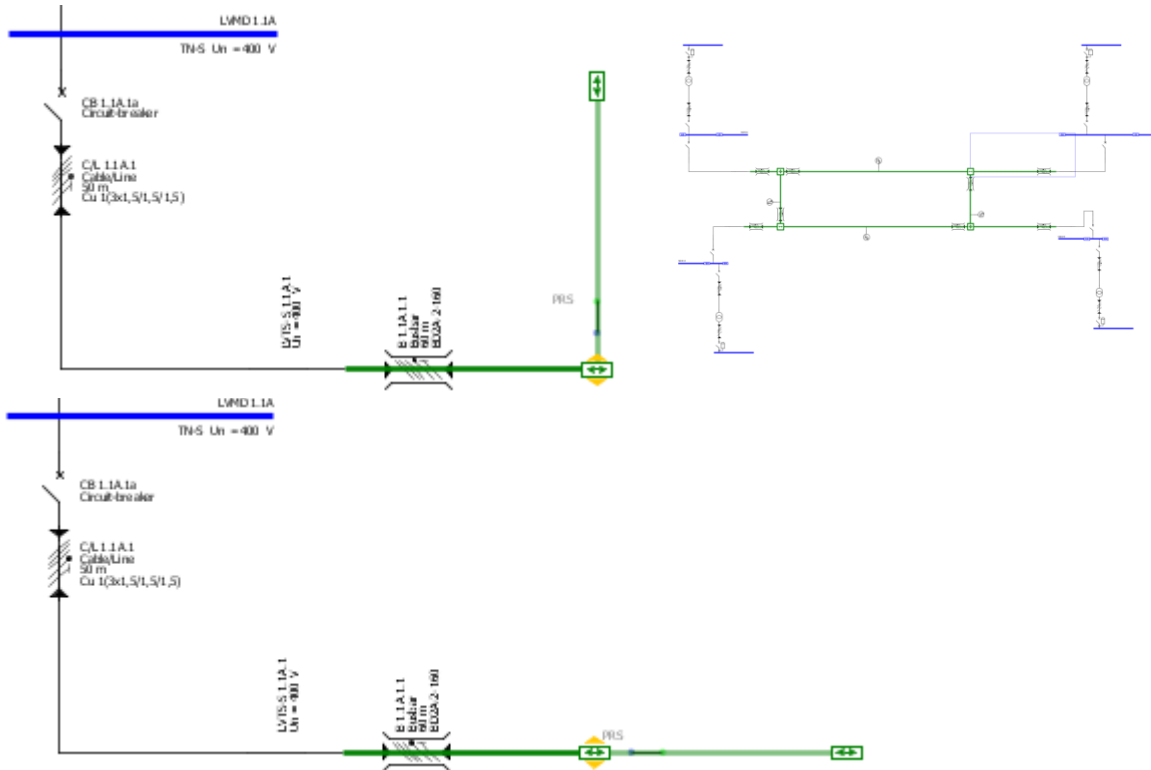



- As required, you can also add more busbar sections of the same system by first dragging the gripper vertically to the busbar which was drawn.
- Then, the new busbar section can be aligned in the same direction as the original one by dragging the mouse towards the elongated line of the first busbar while keeping the mouse button pressed.


Network Design

How to create network elements – busbar systems and loads


As soon as the new busbar section has been created and properly positioned on the diagram by releasing the mouse button, the length of the new busbar section must be specified.

Having clicked "**Finish**", the following image can be seen on the network diagram.

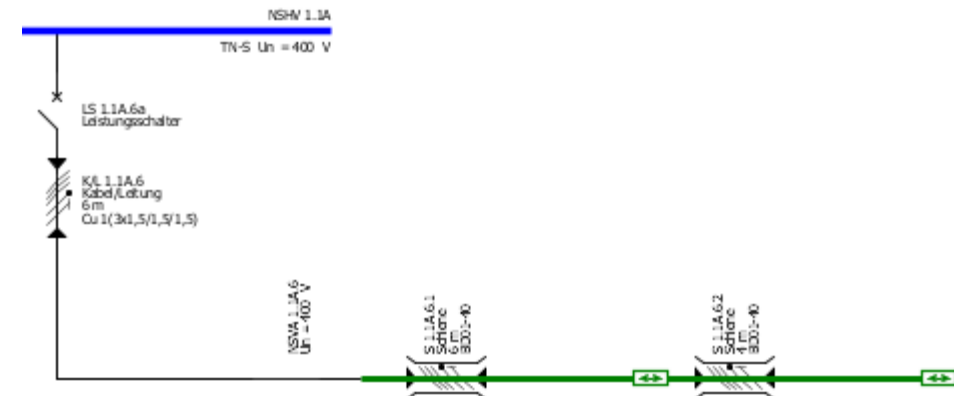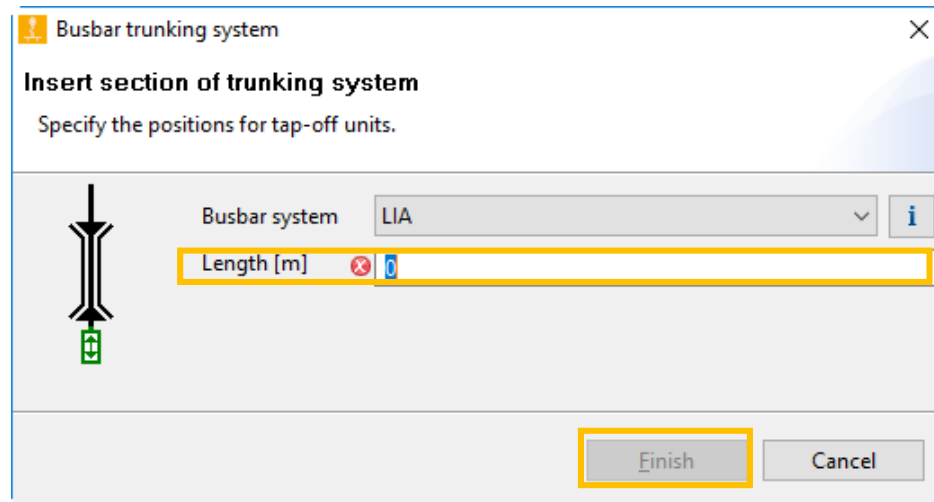

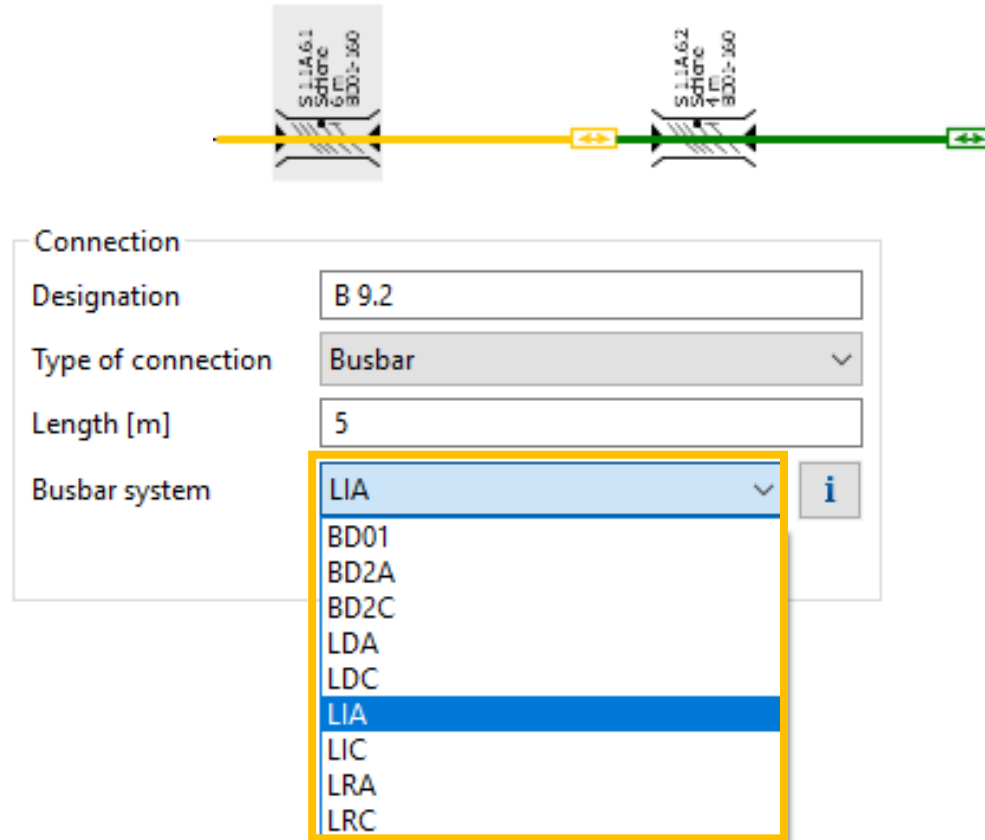


If you wish to change the type of a busbar system already drawn on the network diagram at a later stage in the planning process, because requirements have changed in the meantime, you can do so in the drop-down menu of the properties displayed at the bottom left on screen if you have marked the respective busbar (**yellow line**) in the graphics window.

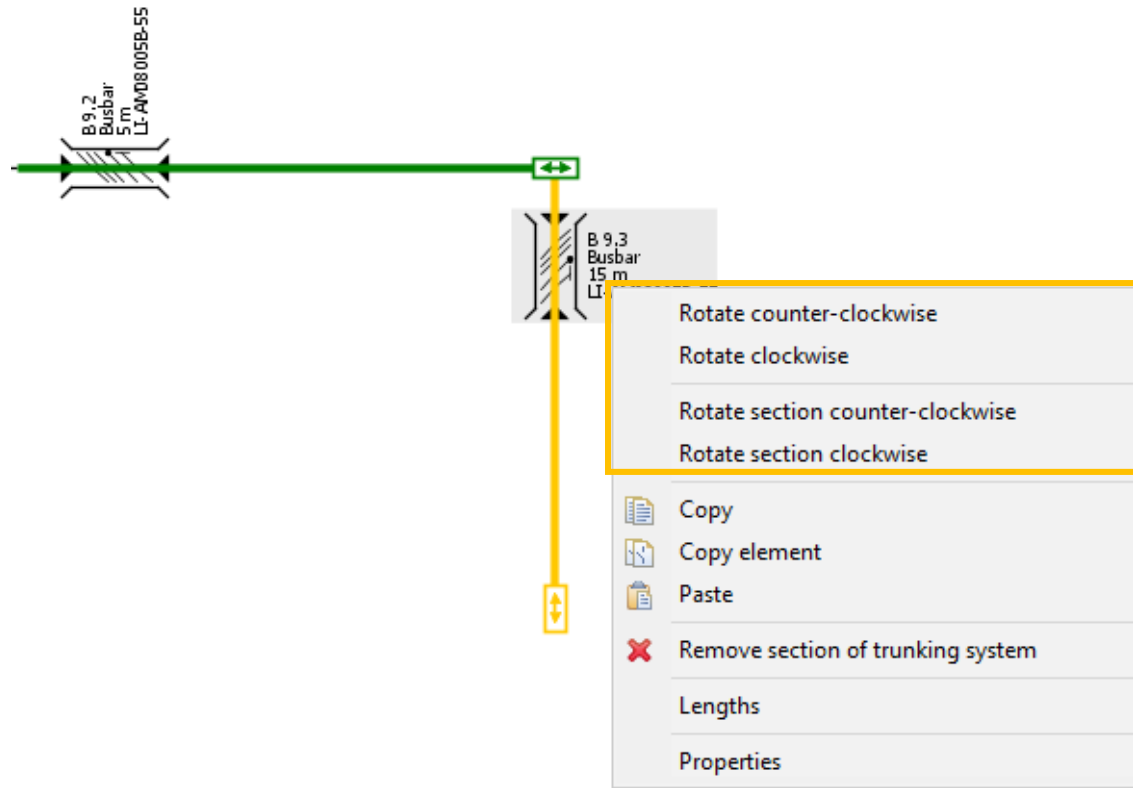


You can also adjust the graphical layout of busbars by calling up the corresponding functions for rotating the marked section, or rotating the entire busbar layout, from the context menu with a right mouse click.

Network Design

How to create network elements – busbar systems and loads

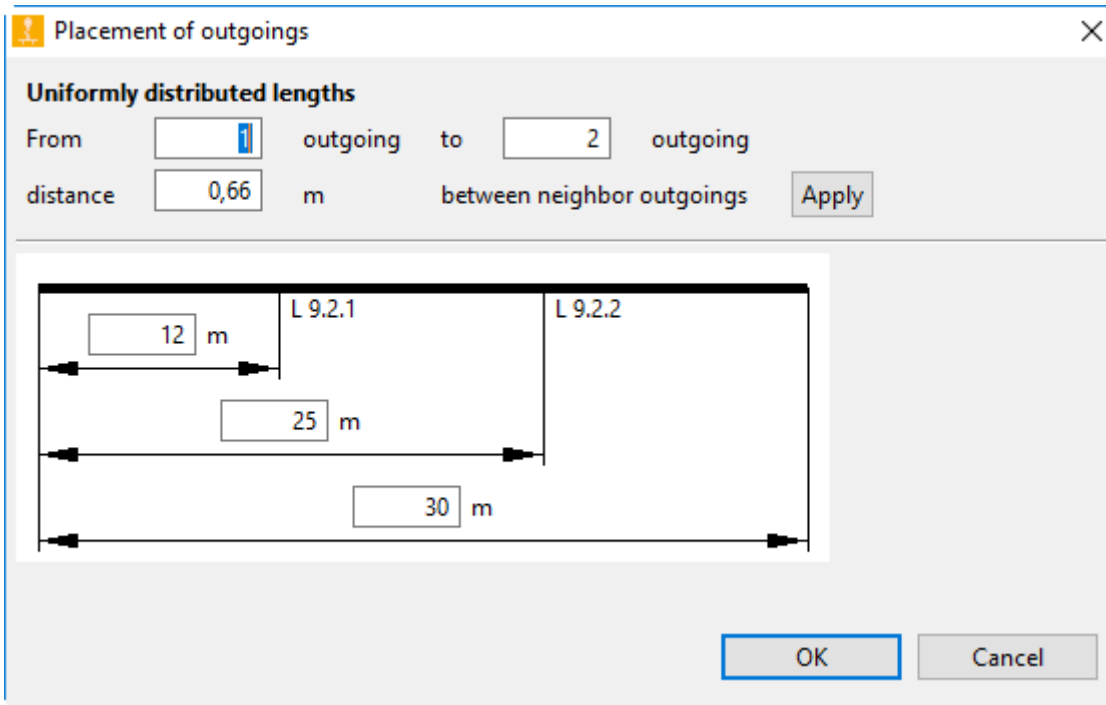


- After you have added and specified busbar trunking systems, load circuits can be connected to the busbars in the manner described above.
- If you connect more than one load circuit, the distance of circuits from the starting point of the busbar section must be defined for every load circuit.

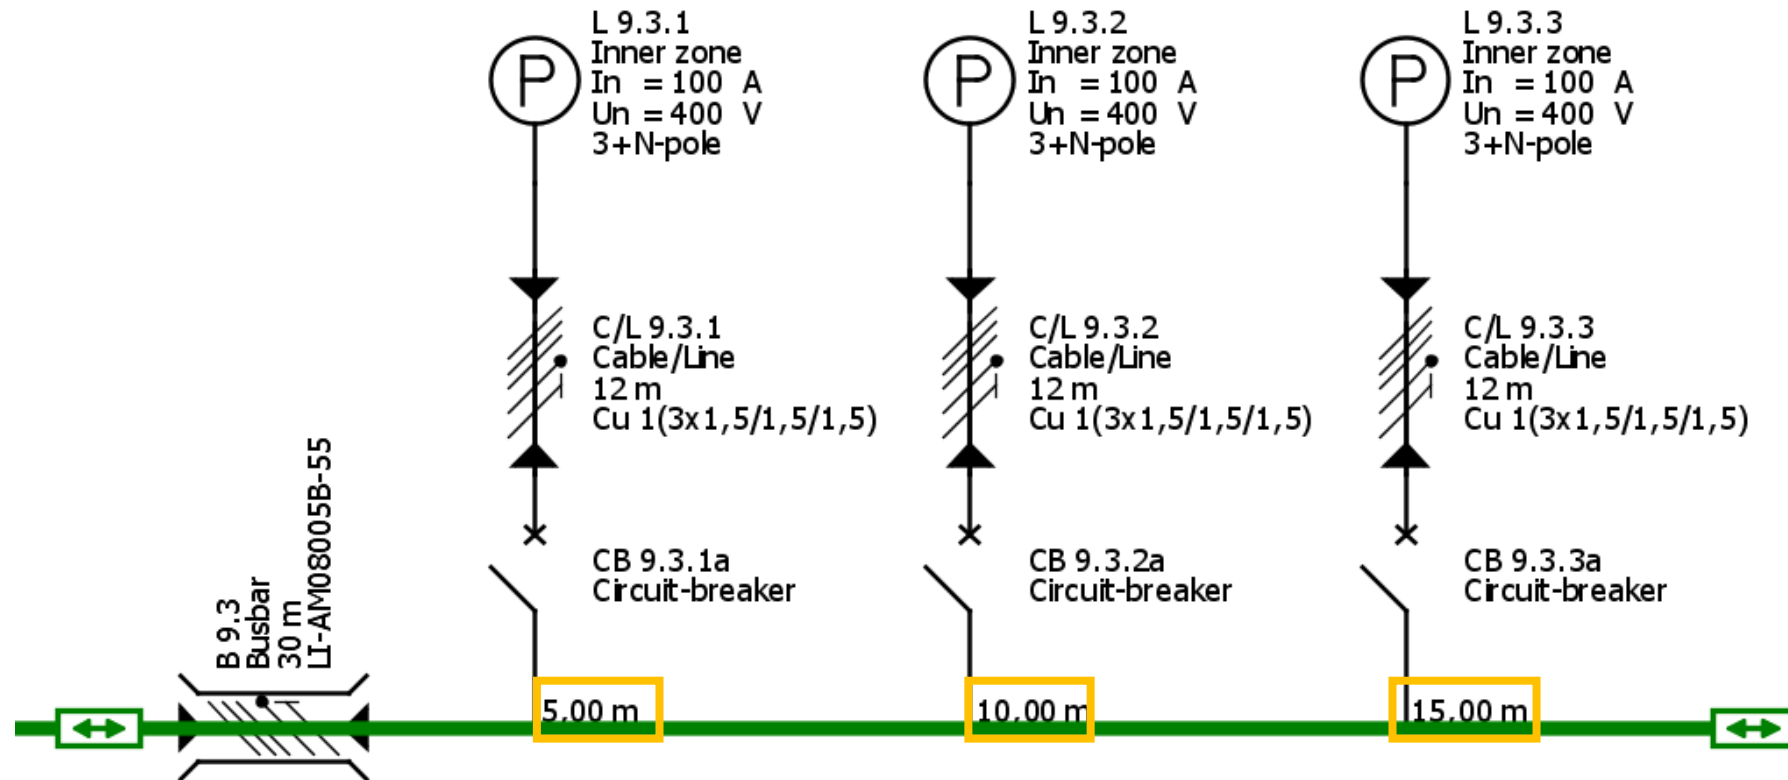

The real distances are indicated in the graphics as busbar labels.

Tutorial SIMARIS design – Network design

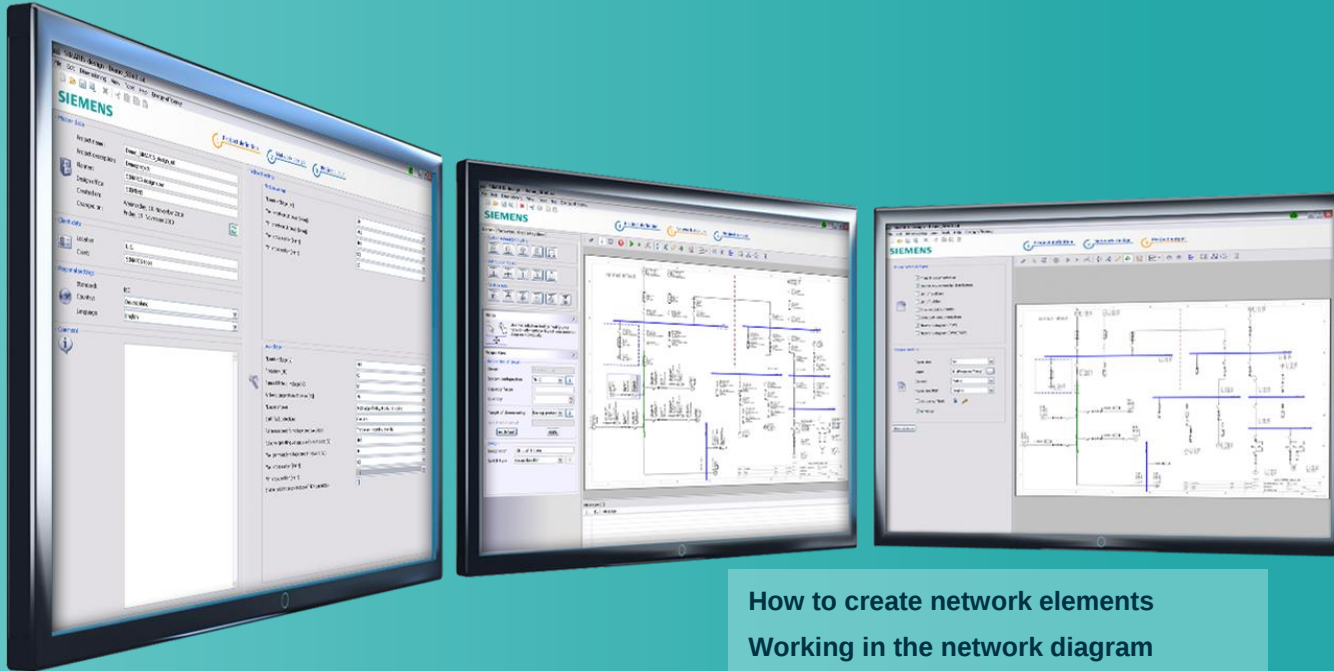

Working in the network diagram

How to create network elements

Working in the network diagram

- > Properties
- > Moving and aligning network elements
- > Cross reference
- > Copying and pasting
- > Favourites
- > Annotations and graphic elements
- > Table

Couplings

1

Introduction

2

Getting started

3

Network design

4

Dimensioning

5

Project output

6

More about SIMARIS



Network Design

Working in the network diagram – properties

Properties

Project

Main operating modeOperating mode 1

Circuit

DesignationLVTS-S 9.3

System configurationTN-S

Simultaneity factor1

Backup protection☒

As default

Connection

DesignationB 9.3

Type of connectionBusbar


Length [m]30

Busbar systemLIA

The **properties** of each element on the network diagram can be modified by marking the element and adjusting its characteristics in the Properties section (bottom left screen area) by appropriate selections or value input.

Network Design

Working in the network diagram – properties

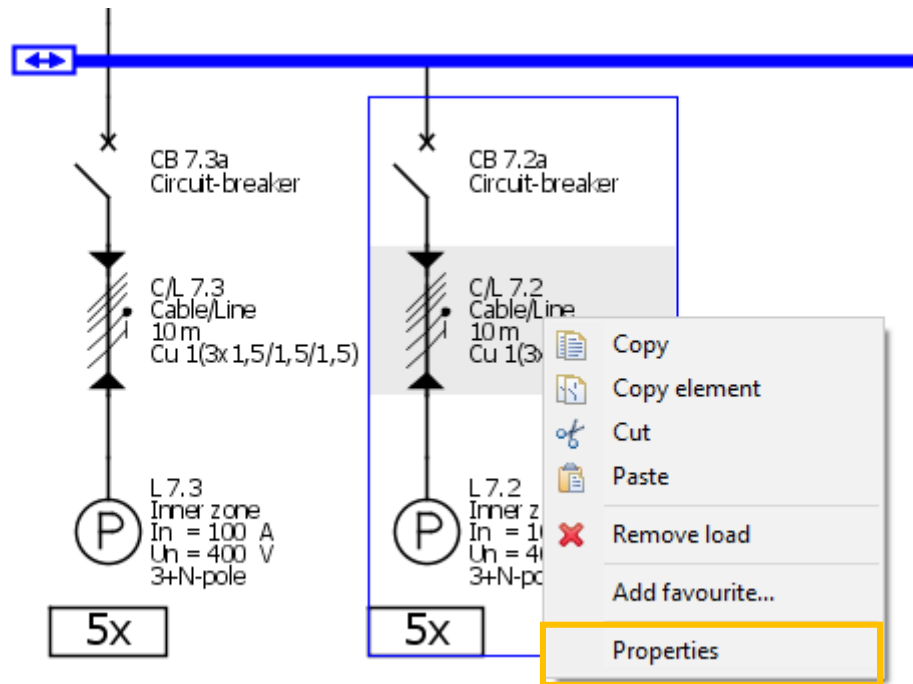


Another possibility is opening the "**Properties**" window by marking the element on the network diagram and selecting "Properties" from the context menu (right mouse button).


- This option is available both for switching devices and fuses, that also applies to busbars and cables/wires, for examples.
- This allows to choose a different specification for devices and items of equipment that have already been specified in the automatic dimensioning process.

Network Design

Working in the network diagram – properties

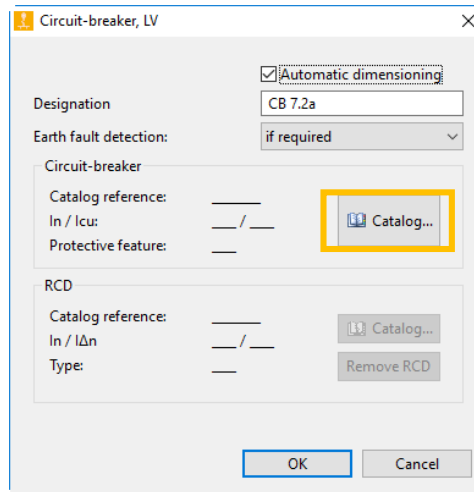

Devices can be manually specified again, e.g. after their "**Properties**" were called up from the product catalogue integrated into the software.

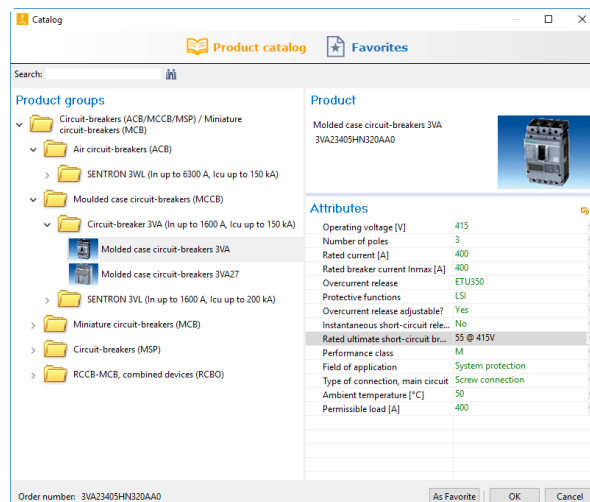


In the product catalogue, a specification is made based on the technical data that can be selected on the right.

If the order number of the desired device is known, the Product tree can also be searched directly using the Search function at the top left of the display.

Network Design

Working in the network diagram – properties

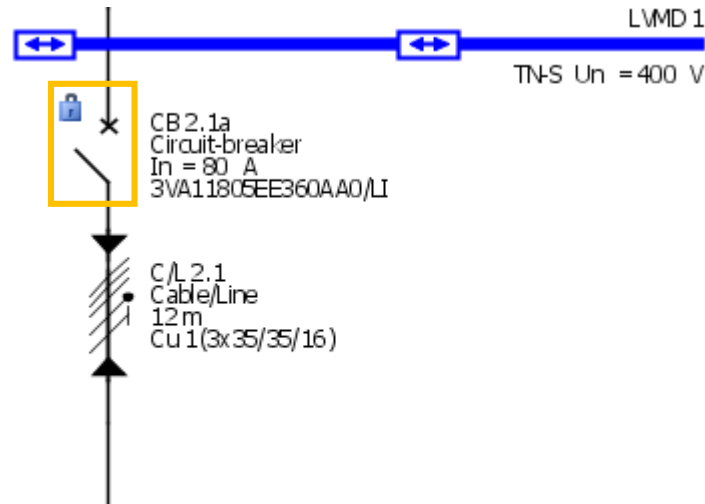

A specific selection in the product catalogue dismisses the automatic device selection, and the manually specified switching device will not be modified by the next dimensioning of the network.

This is indicated in the network diagram by a padlock symbol next to the device.

If problems or conflicts should arise during dimensioning by such property definitions, they will be indicated in form of messages in the bottom screen area.

Messages [2]  Tabelle		
Status	Element	Message
	LVSD 2.1	Overload protection not fulfilled. $I_R = 80\text{A} < I_{bs} = 100\text{A}$
	LVSD 2.1	Load current = 100A is higher than the permissible load of the upper switch = 80A




The circuits created on the network diagram can be arranged and moved around as desired.

To do so, first enable the "selection mode" by clicking the arrow icon on the tool bar.

Network Design




Working in the network diagram – moving and aligning network elements

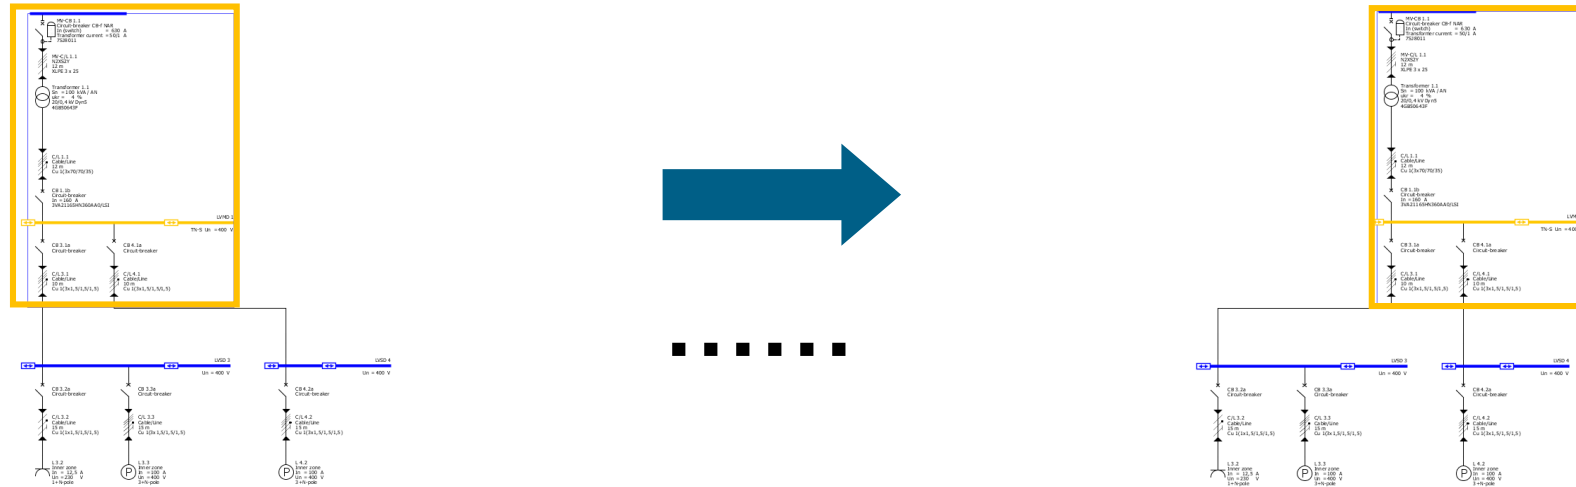

Now mark a circuit or a busbar trunking system by left-clicking the circuit (= blue/green line → turns yellow, mouse pointer changes into crosshairs inside the marking).

Another click into the marking (blue frame) while keeping the mouse button pressed moves around the entire circuit in the graphics. The connection lines to the other parts of the network will be automatically redrawn after the move operation.

- When two elements overlap in the drawing, this is shown by a red dashed line in the graphics in order to indicate that there is no electrical connection in this area.
- Use the context menu (right mouse button) to rotate marked elements on the network diagram. For busbar trunking systems, this is also explained in the "[Busbar systems and loads](#)" section.

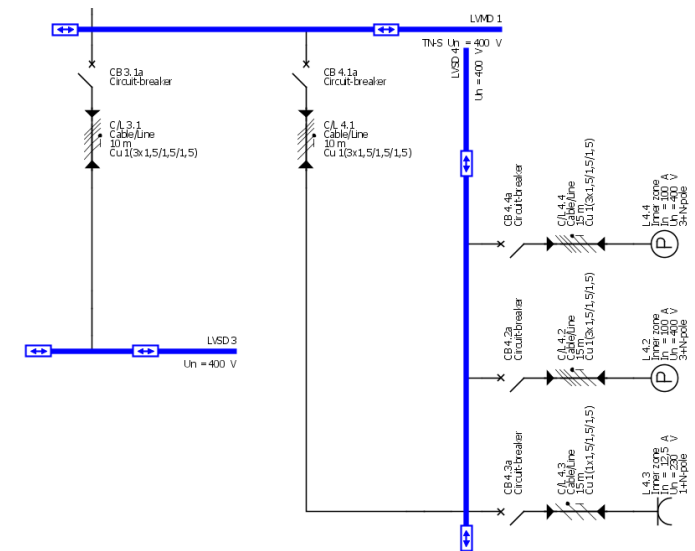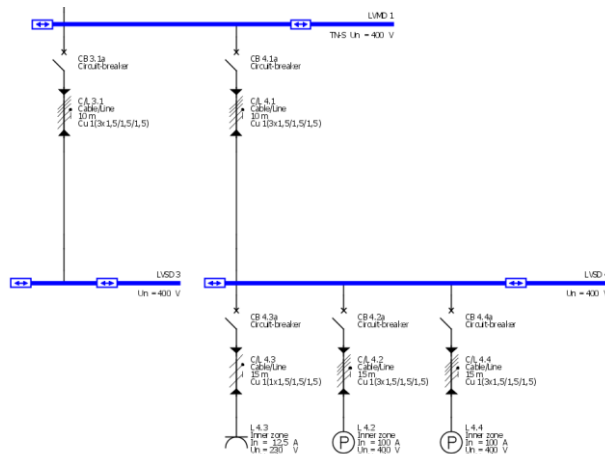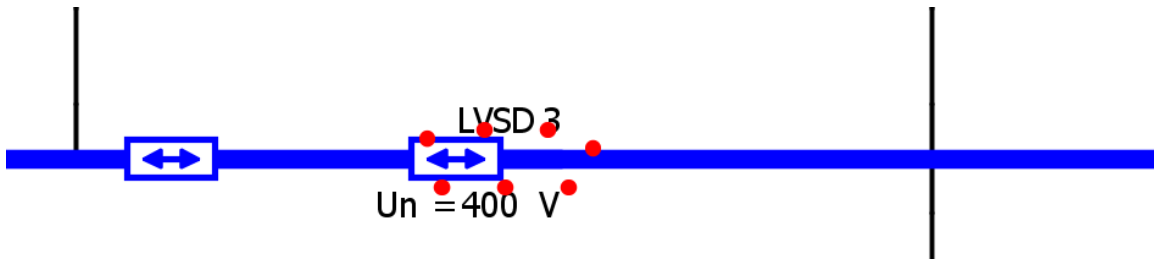


Network Design

Working in the network diagram – moving and aligning network elements



There are more automatic functions for **aligning elements** on the network diagram which can also be called up from the tool bar.


Another tool bar is displayed, as illustrated below. Now you can vertically centre sub-distribution boards, for instance, i.e. the sub-distribution boards are aligned along an imaginary horizontal line.

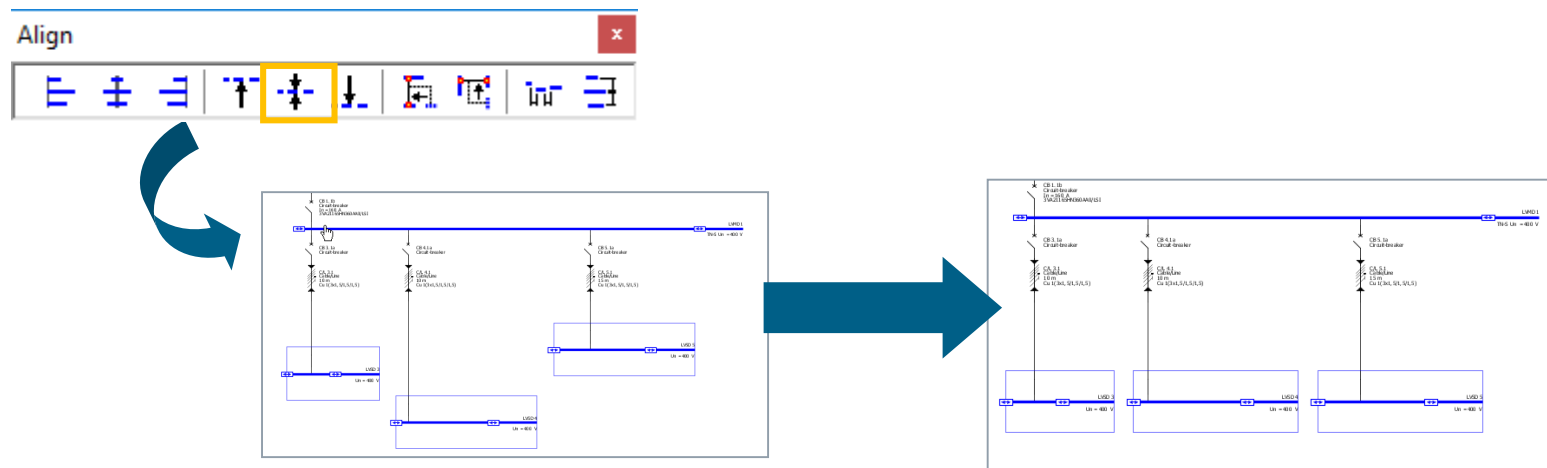

Network Design

Working in the network diagram – moving and aligning network elements


Or you can align elements to the left, by marking the respective elements and performing the align action.

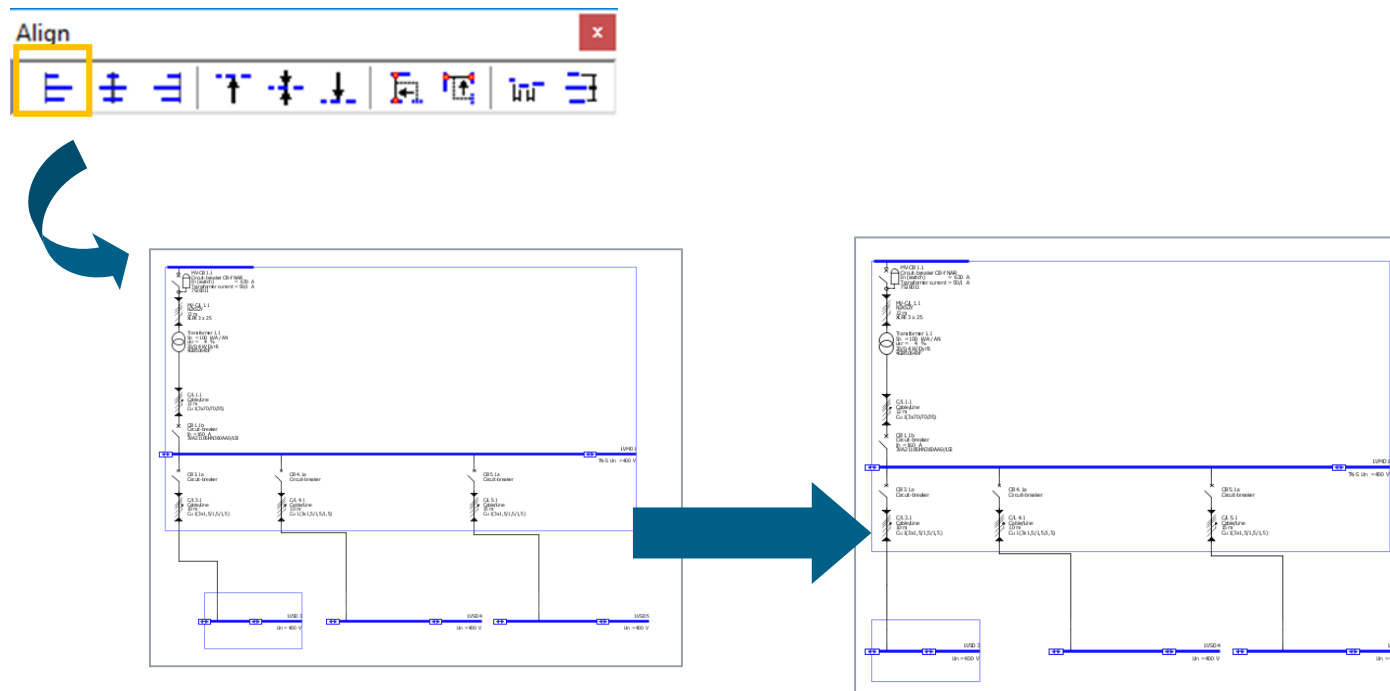

Network Design


Working in the network diagram – cross reference

Another option is to hide the connections from distributors by marking the connection in the network plan and selecting Hide the connection in the context menu. A cross reference is being created and by clicking on the **symbol**  you can jump to the connected part. This is another way to design a well-organized network plan. The connection can be re-established immediately by right-mouse-click.

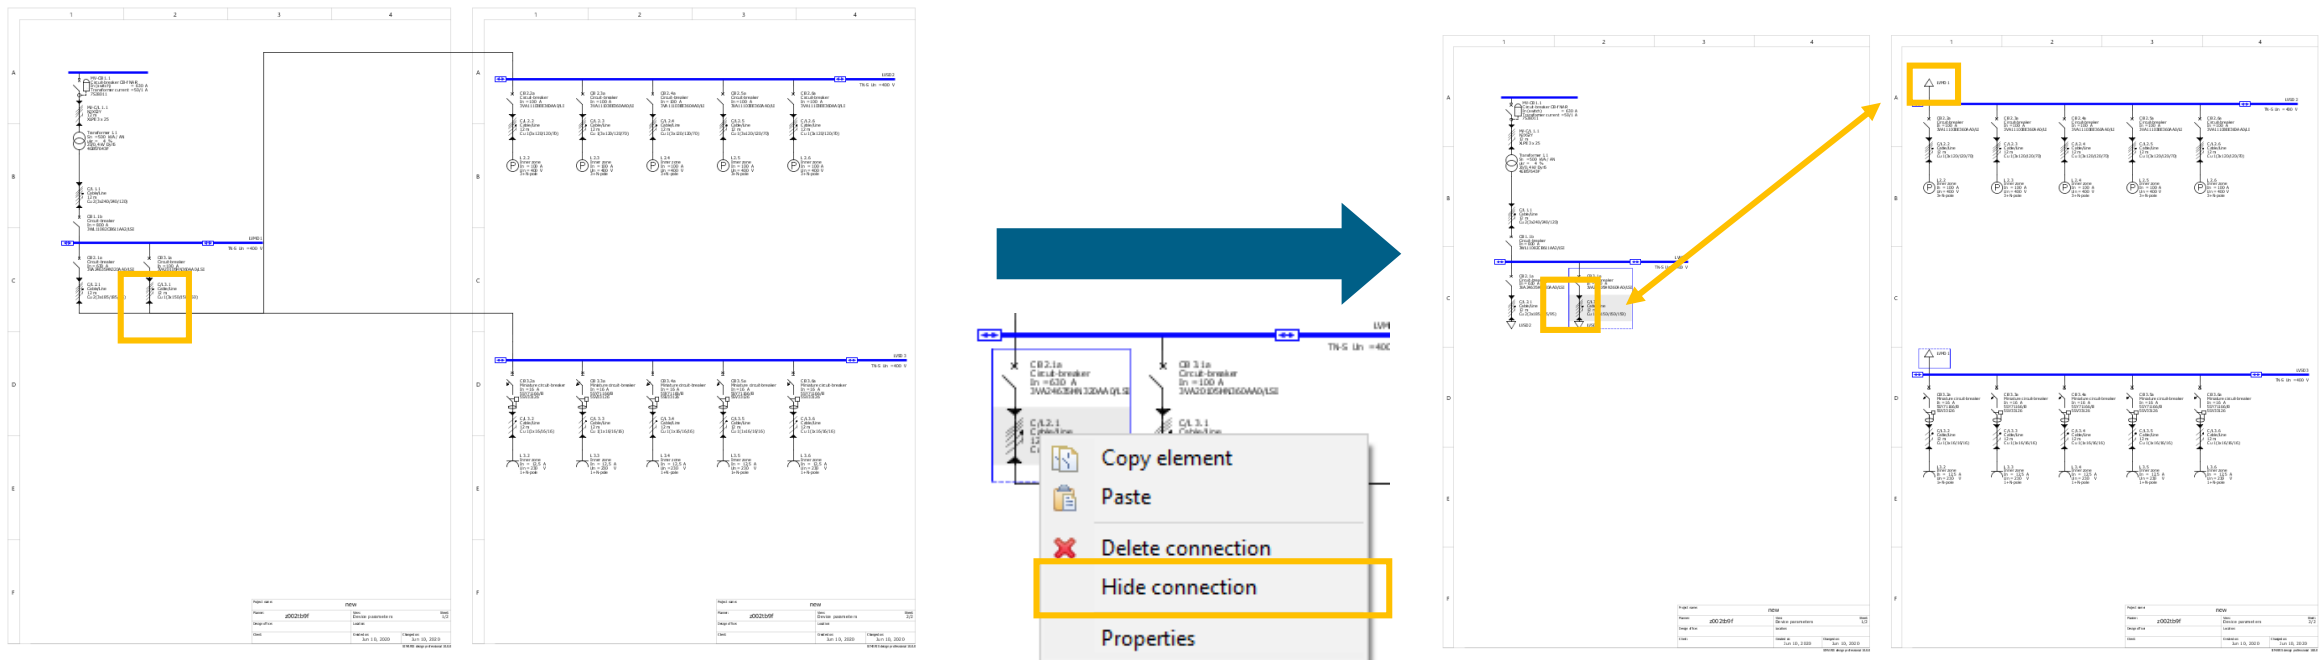

Network Design

Working in the network diagram – copying and pasting

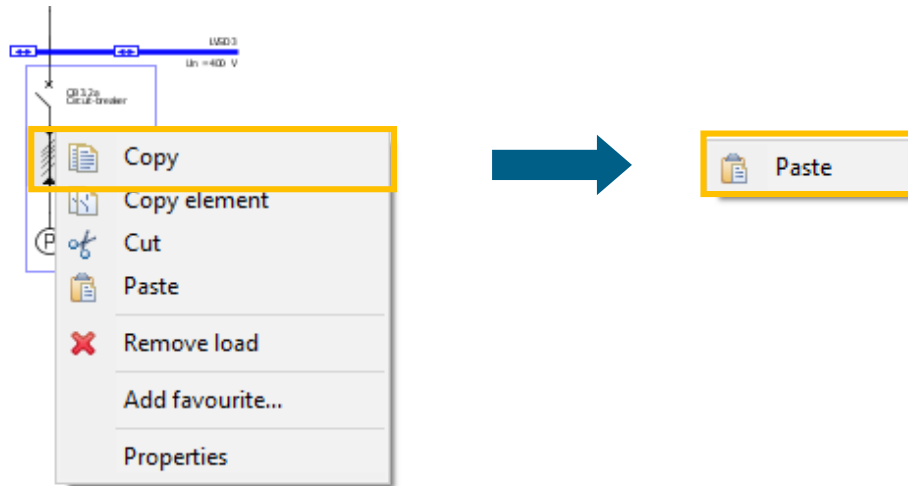

If you wish to place several identical elements at different positions on the network diagram, you can use the Copy function.

For example, it can be called up

- by clicking the right mouse button,
- or by using the Windows-typical icons on the tool bar,
- or using keyboard shortcuts.

Please note that you have the option to copy entire circuits (e.g. load circuits or sub-distribution systems) and insert them at another position into the network by


- first copying the element to be duplicated onto the clipboard using the context menu (right mouse button),
- and enabling the copied element with another right click and selecting "Paste"...



Network Design


Working in the network diagram – copying and pasting

...and then dropping the element at the desired position on the network diagram by left-clicking and dragging it to an insert point with the left mouse button pressed.

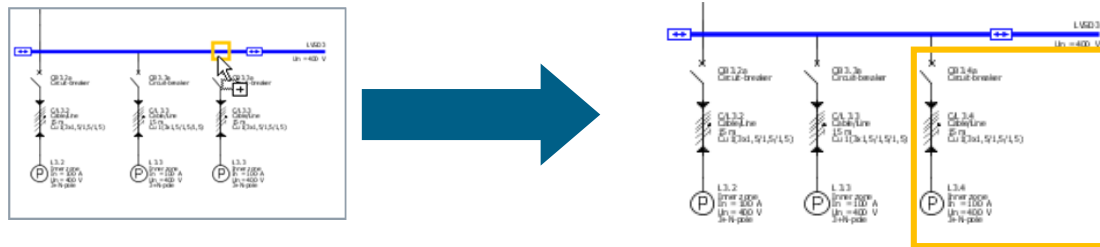

But individual elements of a circuit, such as a switching device or busbar section, can be copied and pasted to another circuit:

- copy the element with the help of the context menu (right mouse button),
- and paste it via the context menu,

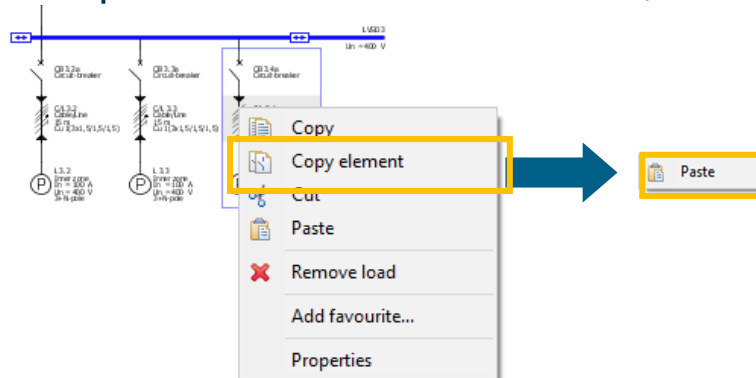


...then left-click to place it in the desired circuit as a substitute for the previously displayed item. Suitable elements on the network diagram that can be replaced are marked by a yellow frame upon mouseover.

Network Design

Working in the network diagram – copying and pasting


...Then left-click to place it in the desired circuit as a substitute for the previously displayed item. Suitable elements on the network diagram that can be replaced are marked by a yellow frame upon mouseover.

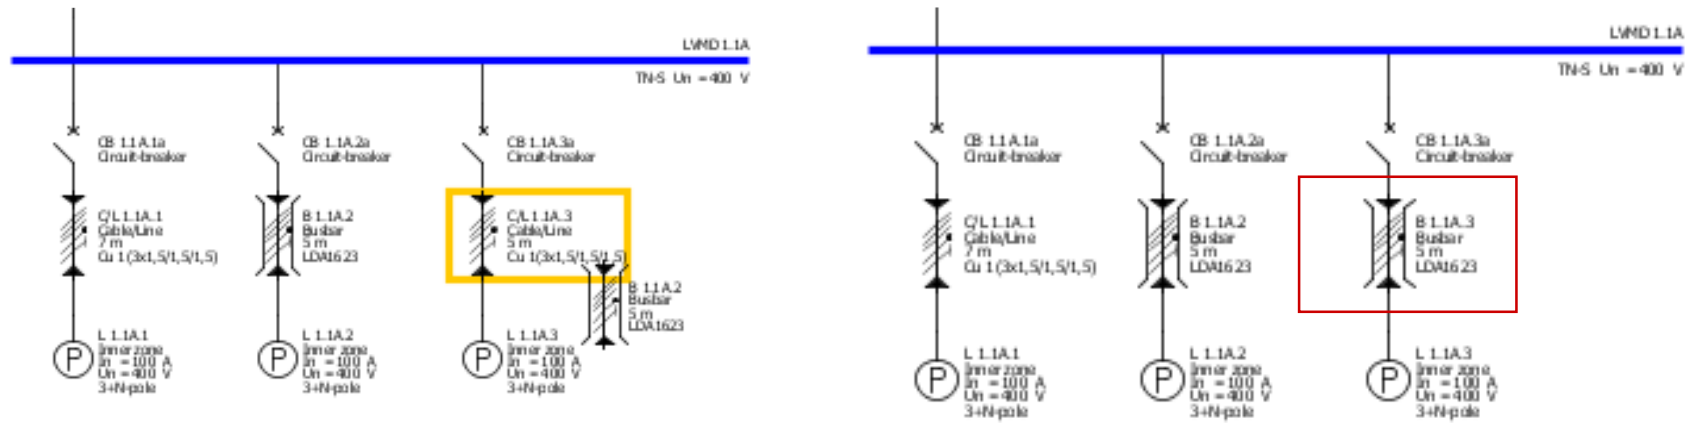

You also have the option to copy entire networks, see "[Separate networks](#)".

Network Design

Working in the network diagram – favourites

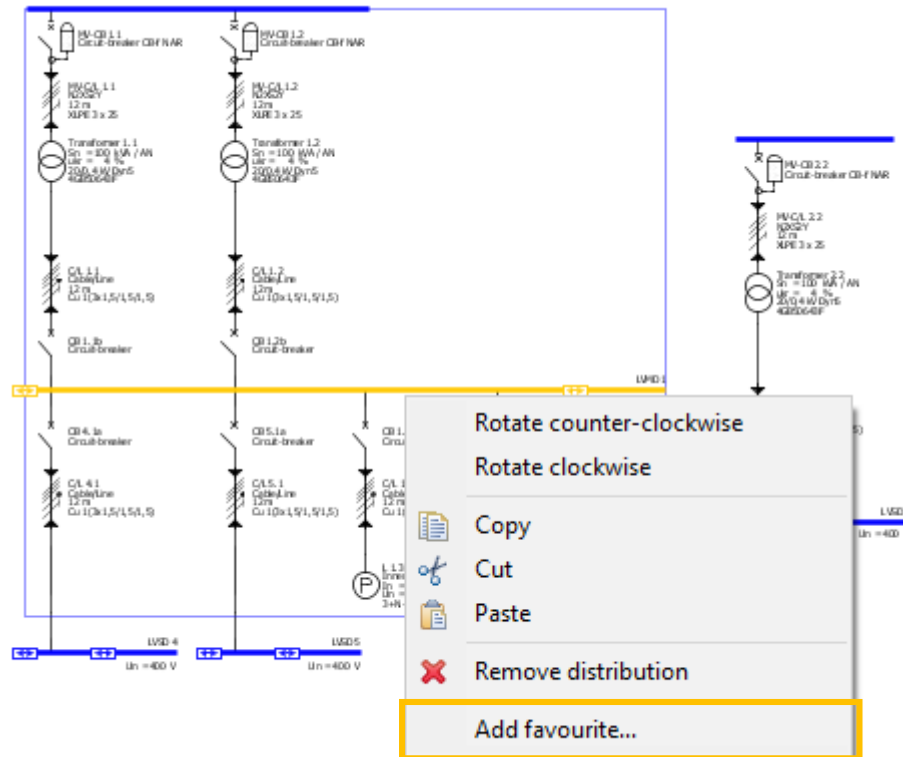

To increase your planning efficiency, you can design frequently used elements and **save them as favourites**, e.g.

- complete feed-in systems
- subdistribution systems
- or load groups.


To create a Favourite

- mark the corresponding element, e.g. a complete feed-in system,
- and call up the function "Add favourite" from the context menu or the Tools → Favourites menu.


Network Design

Working in the network diagram – favourites

An input dialog is displayed where you can save a name and a description.

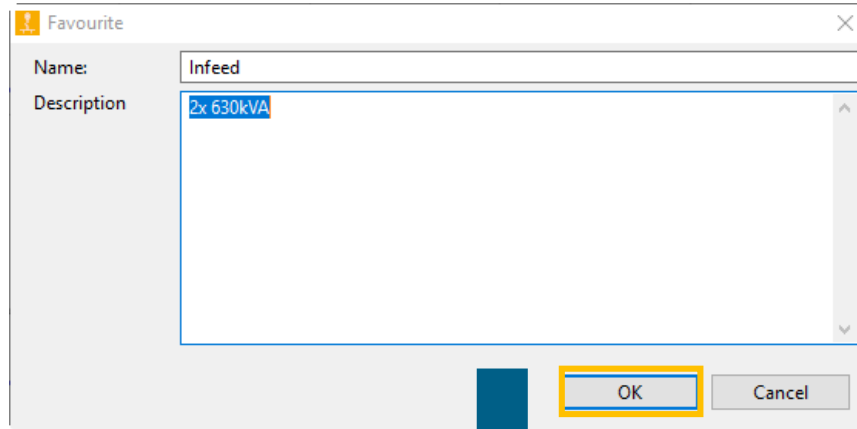


Clicking "OK" saves the Favourite and automatically sorts it into the matching category as system infeed, distribution board or final circuit.

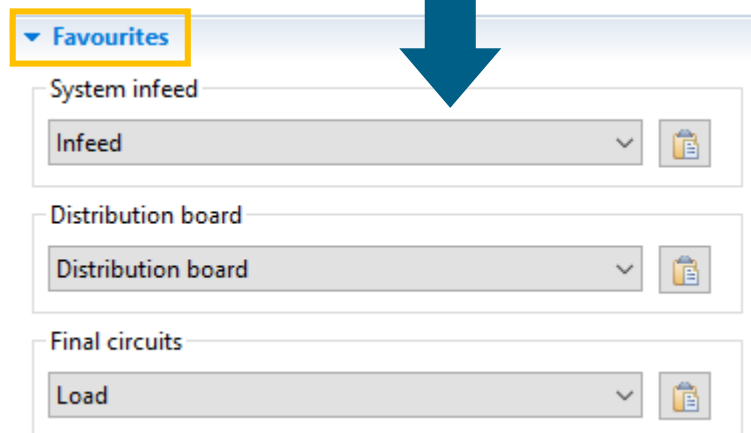

To reuse the **Favourite**, you must select the Favourites tab instead of the Library.


Network Design

Working in the network diagram – favourites

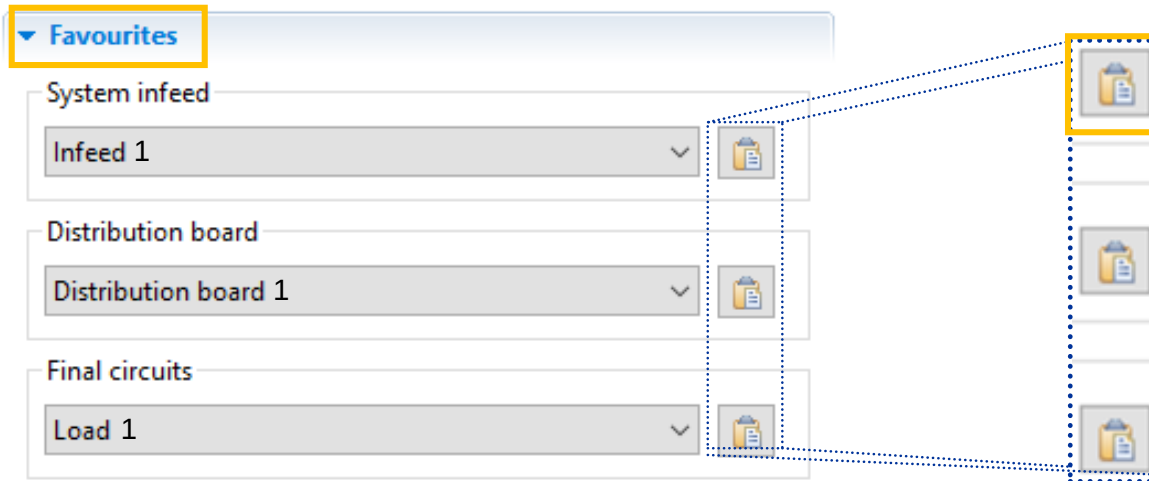

Via the drop-down menu, you can

- select the required element,
- then activate the insert function via the button on the right,
- and afterwards, insert the element in the usual way into the network diagram (by left mouse click on the infeed, keeping the mouse key pressed, move it and release the mouse button)

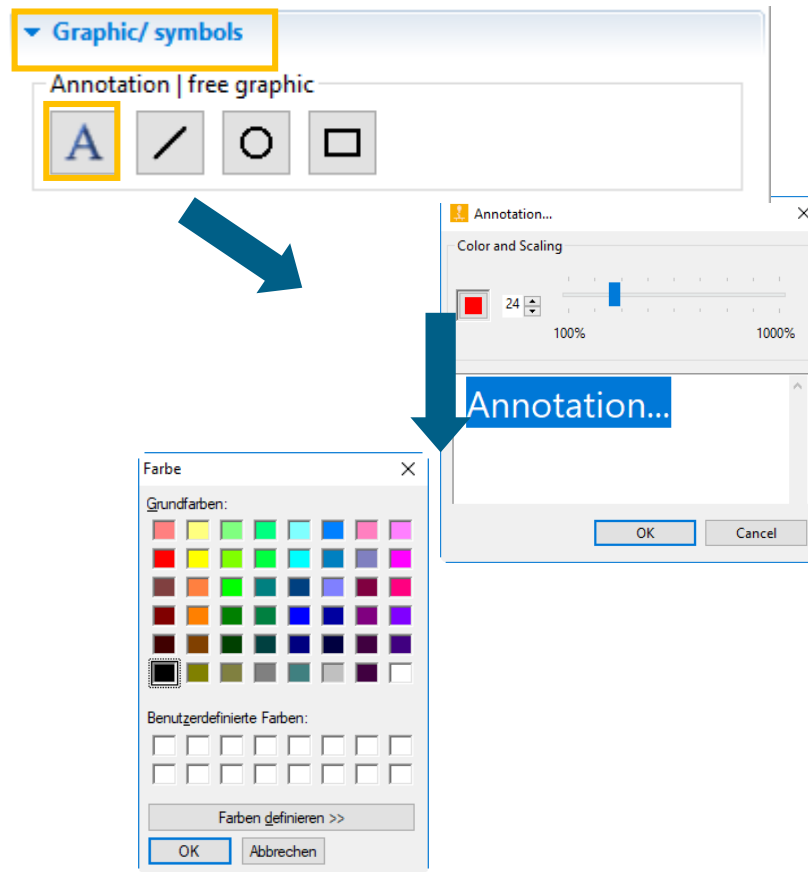


You can integrate text comments and graphic elements into your network diagram by selecting the Graphic/ symbols tab.


Then click one of the buttons to enable the desired element, e.g. an **Annotation**,

- and place it on the network diagram with a click of the left mouse button.
- A little window is opened, where you can set the font size with the arrow keys or the slider from 8 pt. to 48 pt. as desired.

Clicking on the colour field opens another window, where you can set the desired font colour.

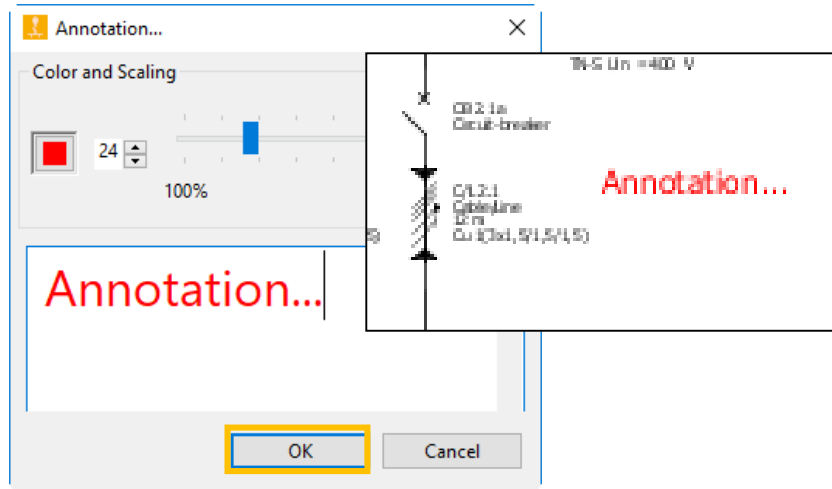

- When all settings are made, the annotation is placed on the network diagram at the previously selected position, as soon as you click "**OK**".

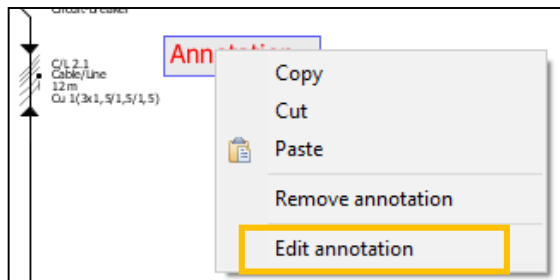


- If you would like to re-edit the annotation later, open the above dialog again from the context menu (right mouse button) and select → "**Edit annotation**".



In a similar way, you can add **lines, circles / ellipses** and **rectangles**.

- When you select the appropriate icon, the cursor turns into crosshairs as soon as it is moved into the network diagram.
- Left-clicking places the graphic symbol in the network diagram. It can be zoomed up by dragging the mouse with the left mouse button pressed.

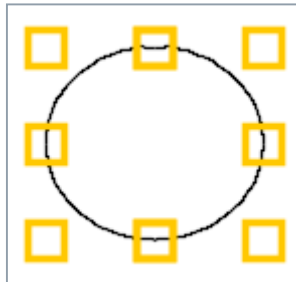


Once it is placed, the graphic element can still be readjusted by

- marking it,
- moving the mouse onto one of the little yellow boxes
- and then dragging it into one of the directions indicated by the arrow, keeping the left mouse button pressed.


Colour, style and **width of the border lines** of the graphic symbols can be changed,

- by placing the mouse on the graph,
- calling up the "Properties" dialog from the context menu (right mouse button)
- and defining the desired layout in terms of **style**, **line width** and **colour**.

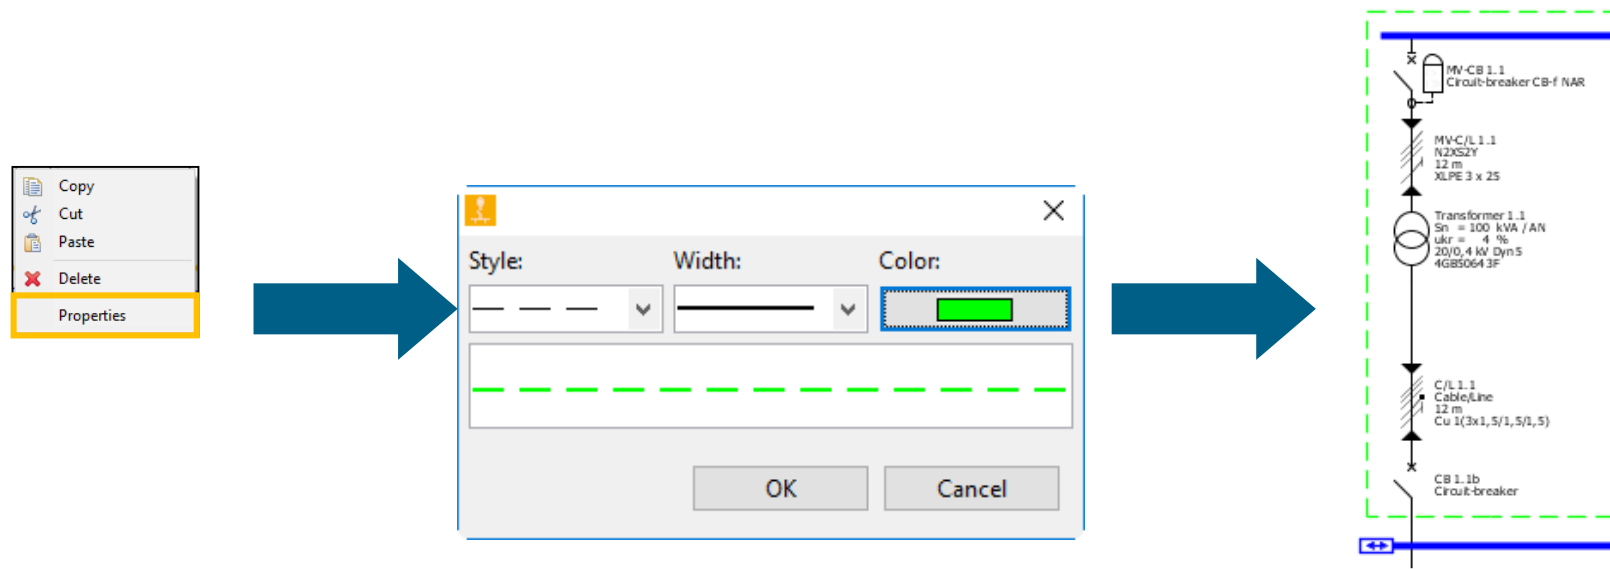

Network Design

Working in the network diagram – table

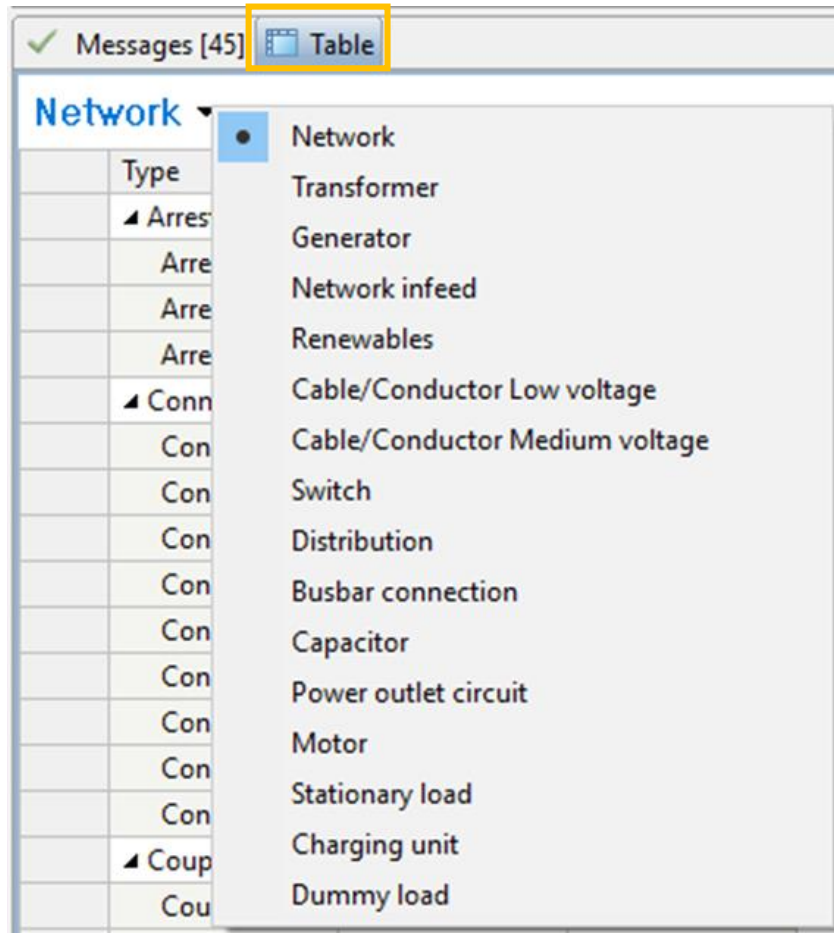

In order not to lose the overview in an extensive network map, SIMARIS design offers a comfortable **table view**, which you can call up by clicking the button below the network.

Network Design

Working in the network diagram – table Cable/Conductor Low voltage

Drag columns here for grouping

Designation	Starting point	Target point	Automatic di...	Functional end...	Conductor ma...	Insulating mat...	Cable designs	Type of cable	Installation type	Reduction fact...	Permissible vol...
K/L 1.1	Generator 1.1	NSHV 1	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	4
K/L 1.2	Trafo 1.2	NSHV 1	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	4
K/L 10.2	NSUV 10	V 10.2	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	4
K/L 10.3	NSUV 10	V 10.3	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	4
K/L 10.4	Erneuerbare En...	NSUV 10	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	4

Starting point

Designation	Starting point	Target point	Automatic di...	Functional end...	Conductor ma...	Insulating mat...	Cable designs	Type of cable	Installation type	Reduction fact...	Permissible vol...
Erneuerbare ...	Erneuerbare En...	NSUV 10	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 10.4	Erneuerbare En...	NSUV 10	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
Generator 1.1	Generator 1.1	NSHV 1	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
NSEI 8	NSEI 8	V 8.2	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 8.2	NSEI 8	V 8.2	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 8.3	NSEI 8	V 8.3	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	

Starting point

Designation	Starting point	Target point	Automatic di...	Functional end...	Conductor ma...	Insulating mat...	Cable designs	Type of cable	Installation type	Reduction fact...	Permissible vol...
K/L 10.2	NSUV 10	V 10.2	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 10.3	NSUV 10	V 10.3	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
NSUV 11	NSUV 11	V 11.3	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 11.3	NSUV 11	V 11.3	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 11.4	NSUV 11	V 11.4	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 11.5	NSUV 11	NSUV 6	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 12.1	NSUV 11	NSUV 12	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
NSUV 12	NSUV 12	M 12.2	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 12.2	NSUV 12	M 12.2	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 12.4	NSUV 12	M 12.4	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 12.5	NSUV 12	M 12.5	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 12.7	NSUV 12	M 12.7	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 13.1	NSUV 12	NSUV 13	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
NSUV 13	NSUV 13	LE 13.2	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 13.2	NSUV 13	LE 13.2	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
NSUV 4	NSUV 4	V 4.2	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 4.2	NSUV 4	V 4.2	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 4.3	NSUV 4	V 4.3	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 6.1	NSUV 4	NSUV 6	☒	integrated, E	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
NSUV 6	NSUV 6	V 6.2	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 6.2	NSUV 6	V 6.2	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 6.3	NSUV 6	V 6.3	☒	none	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	
K/L 7.1	NSUV 6	NSUV 7	☒	integrated, E	Cu	PVC70	e.g. NYY, NY...	Multi-core c...	C	1	

Reduction factor f tot

OK Cancel

- After a table has been selected, it can be opened for editing by **double-clicking**.
- If you mark a circuit with the mouse in the respective table, it is also marked in the graphic (blue frame).
- The circuits can be grouped by dragging a column label into the header. For example, the cables can be sorted according to the starting points.
- In addition, 1 to n values of a column can be marked and changed at once.
- On the left in the example, the reduction factor for all cables of the distributor is changed at once.

Network Design


Working in the network diagram – table Switch

Switch ▾

	Designation ▲	Starting point	Target point	Type of switchi...	Selectivity
	LS 1-2a	NSHV 1	NSHV 2	Circuit-breaker	partially selecti...
	LS 1.1b	Generator 1.1	NSHV 1	Circuit-breaker	fully selective
	LS 1.2b	Trafo 1.2	NSHV 1	Circuit-breaker	fully selective
	LS 10.1b	NSVA 9	NSUV 10	Circuit-breaker	fully selective
	LS 10.2a	NSUV 10	V 10.2	Circuit-breaker	fully selective
	LS 10.3a	NSUV 10	V 10.3	Circuit-breaker	fully selective
	LS 10.4b	Erneuerbare En...	NSUV 10	Circuit-breaker	fully selective
	LS 11.1a	NSHV 3	NSUV 11	Circuit-breaker	partially selecti...
	LS 11.3a	NSUV 11	V 11.3	Circuit-breaker	fully selective
	LS 11.4a	NSUV 11	V 11.4	Circuit-breaker	fully selective
	LS 11.5a	NSUV 11	NSUV 6	Circuit-breaker	partially selecti...
	LS 12.1a	NSUV 11	NSUV 12	Circuit-breaker	partially selecti...
	LS 12.7a	NSUV 12	M 12.7	Circuit-breaker	partially selecti...
	LS 13.1a	NSUV 12	NSUV 13	Circuit-breaker	fully selective
	LS 13.2a	NSUV 13	LE 13.2	Circuit-breaker	partially selecti...
	LS 2-3a	NSHV 2	NSHV 3	Circuit-breaker	partially selecti...
	LS 3.1b	Trafo 3.1	NSHV 3	Circuit-breaker	partially selecti...
	LS 4.1a	NSHV 3	NSUV 4	Circuit-breaker	partially selecti...
	LS 4.3a	NSUV 4	V 4.3	Circuit-breaker	fully selective

As a **SIMARIS design professional** user, you also have the option of searching your network map according to the criterion of **selectivity**.

Tutorial SIMARIS design – Network design

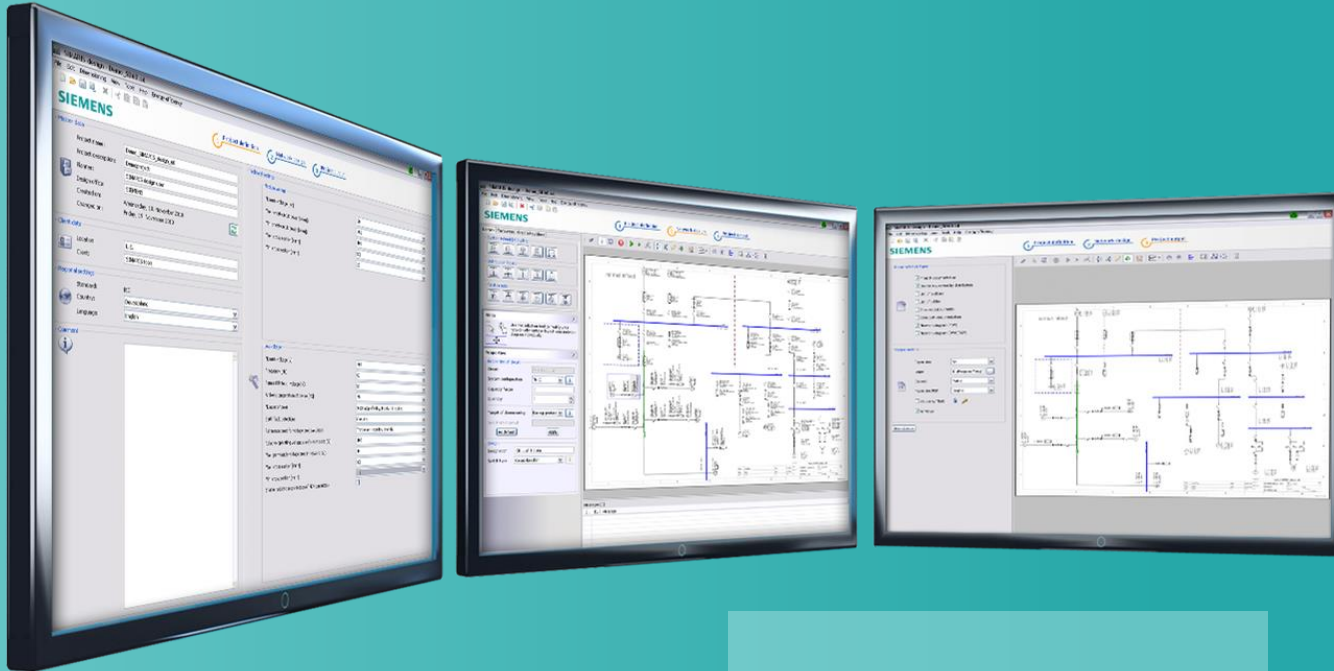

Couplings

How to create network elements
Working in the network diagram
Couplings
> General coupling
> Couplings
 with cable/busbar trunking system
> Couplings on sub-distribution level

1

Introduction

2

Getting started

3

Network design

4

Dimensioning

5

Project output

6

More about SIMARIS

Mapping couplings in the network diagram is possible, both for

- general couplings, where bidirectional energy flow is possible,
- and for unidirectional couplings, where energy flow has been defined in one direction only.


You are able to map both normal and emergency power supply.

Note:

In order to be able to dimension such a complex feed-in system using couplings, you must define the operating modes for the feed-in system first.


This must be done after the complete feed-in system has been created. Use the "**Operating modes**" icon on the tool bar. For more detailed information, please refer to "[Dimensioning](#)".



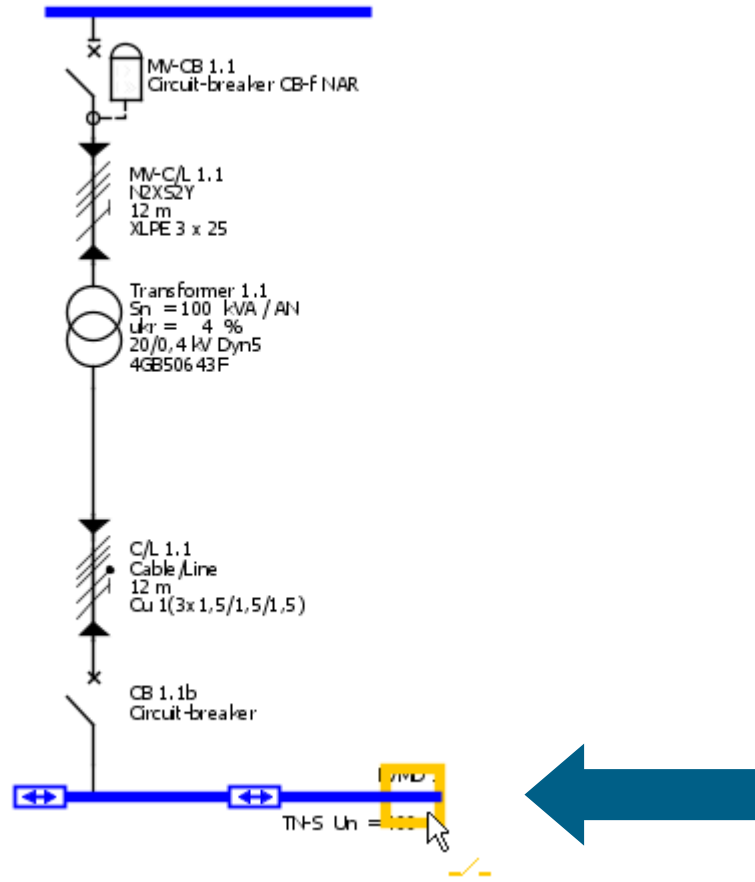

A "**Busbar coupling**" is a coupling with an undefined direction of energy flow between busbar sections.

In order to add a general coupling for normal power supply to the network diagram, please note that the cursor must be placed at the **outer end** of the busbar node of the feed-in circuit.

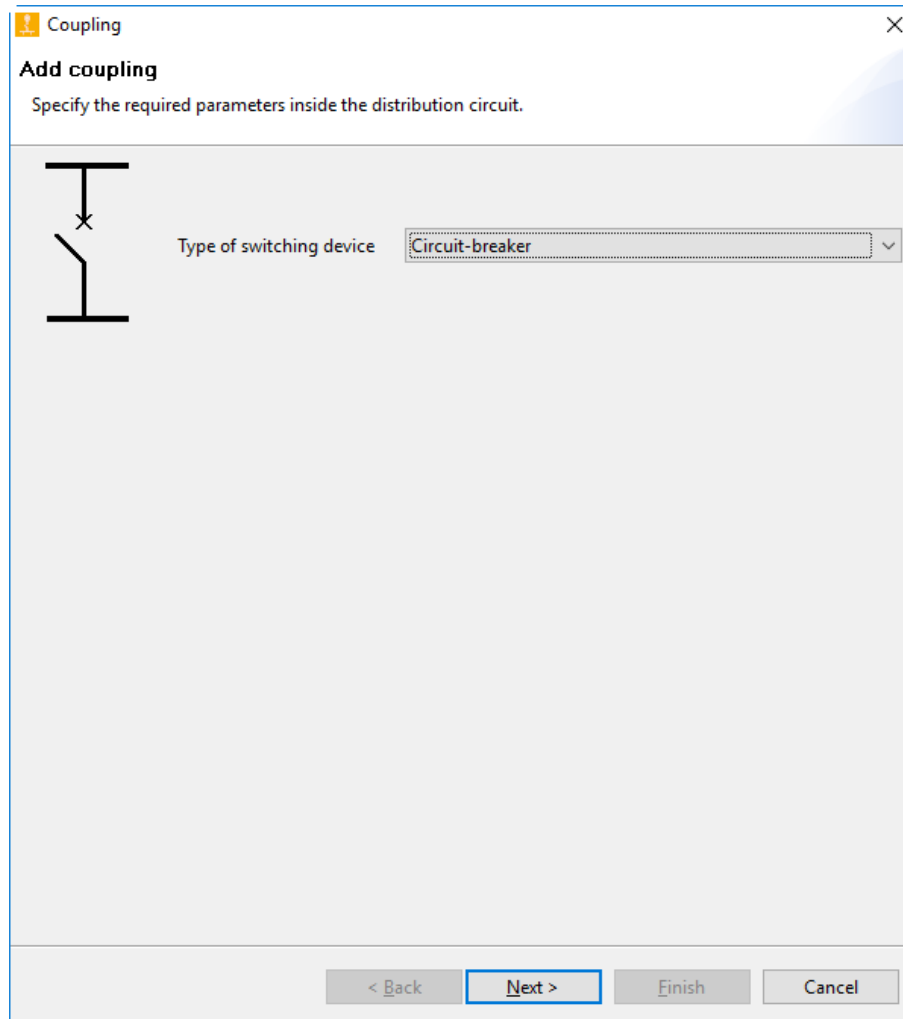


Coupling

Add coupling
Specify the required parameters inside the distribution circuit.

 Type of switching device

< Back **Next >** Finish Cancel

You are prompted to enter the coupling data.

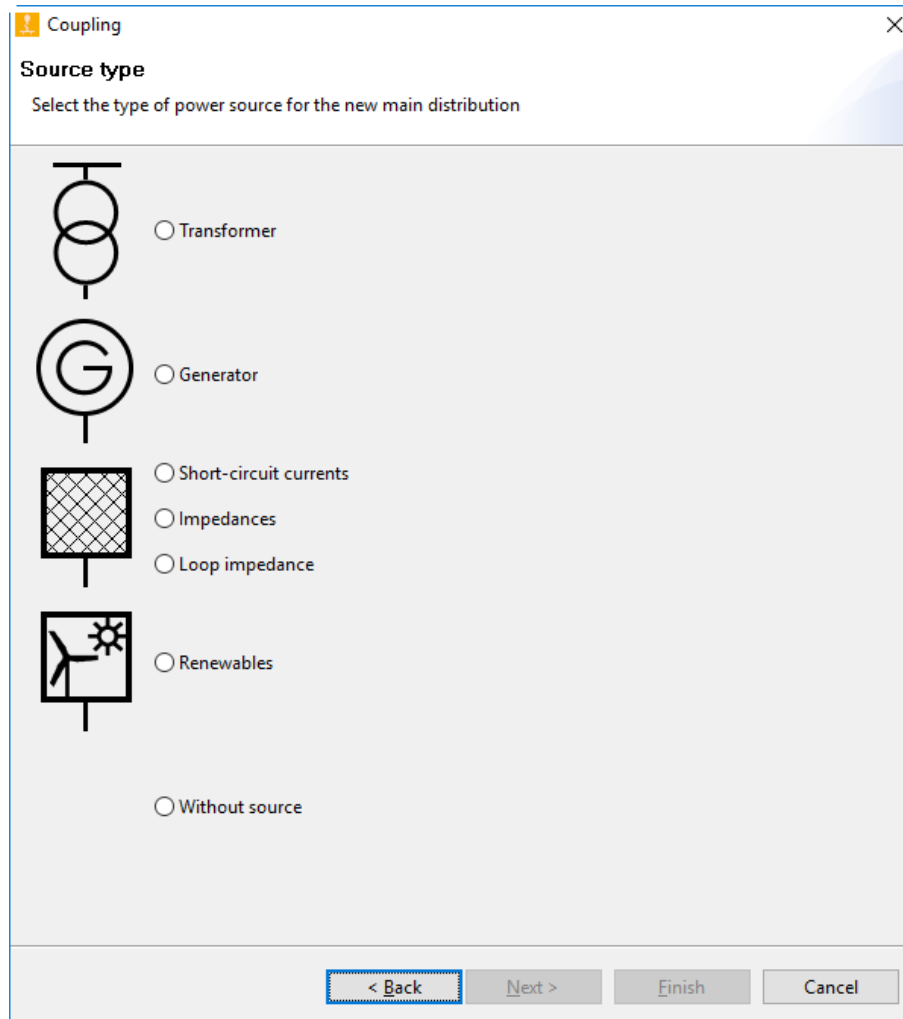

Then the new type of infeed to your network must be selected. It may differ from the first (original) system infeed type.

If the first system infeed type is a transformer, for example, the second infeed type may be another transformer or a generator, or a method of feed-in defined through impedances, loop impedances or short-circuit currents.

Coupling [X]

Add transformer
Specify the required parameters inside the infeed-circuit.



Type of switching device: Circuit-breaker CB-f NAR [i]

Type of connection: Cable/Line [v]

Length [m]: 0 [x]

System configuration: TN-S [i]

Type of switching device: None [v]

Type of connection: Cable/Line [v]


Busbar system: [v]

Length [m]: 0 [x]

Type of switching device: Circuit-breaker [v]

< Back Next > Finish Cancel

Now you must define the data required for the selected type of second infeed, in this case it is a transformer without medium voltage.

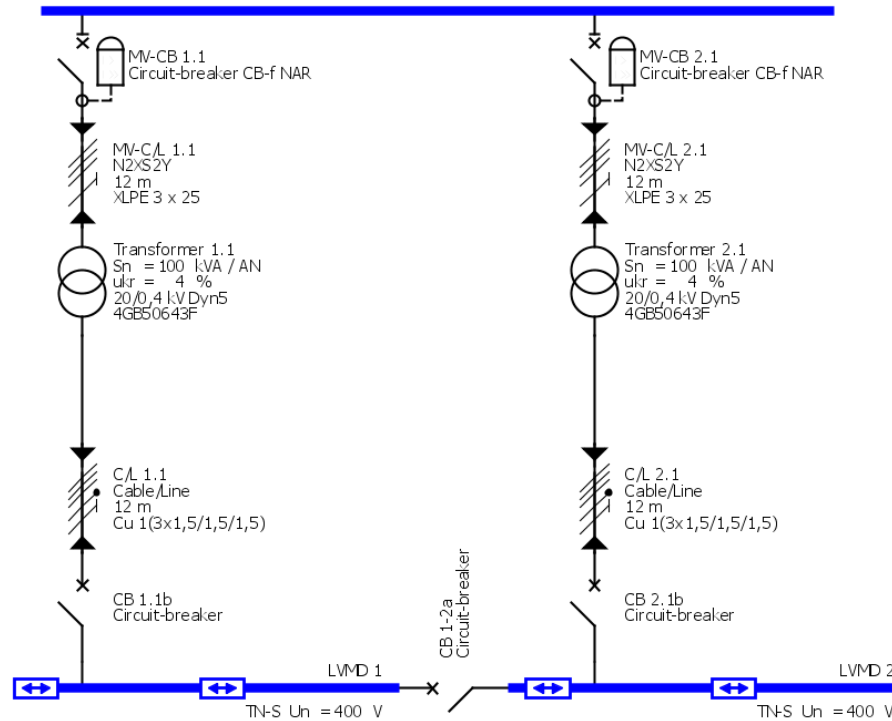


The coupling is represented as on the left.


Now you can add distribution boards and load circuits to the new busbar for the new feed-in system linked by the coupling in the usual way.

Network design

Couplings with cable/busbar trunking system

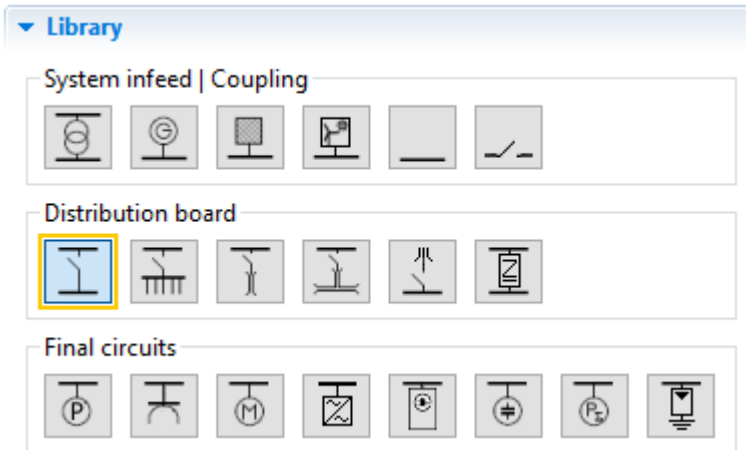


- The library element "Distribution board" can be used to display couplings with cables / busbar trunking systems.
- This can be employed to map combinations of normal and emergency/safety power supply (e.g. between transformer- and generator-supplied networks).

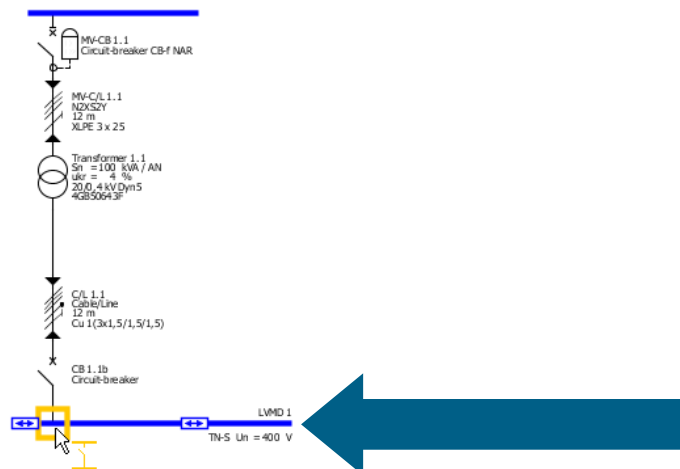



Please note that the cursor for adding a coupling to the network diagram must not be placed at the outer busbar end, but at one of the **inner** insert points of the busbar for the infeed circuit.

Network design

Couplings with cable/busbar trunking system

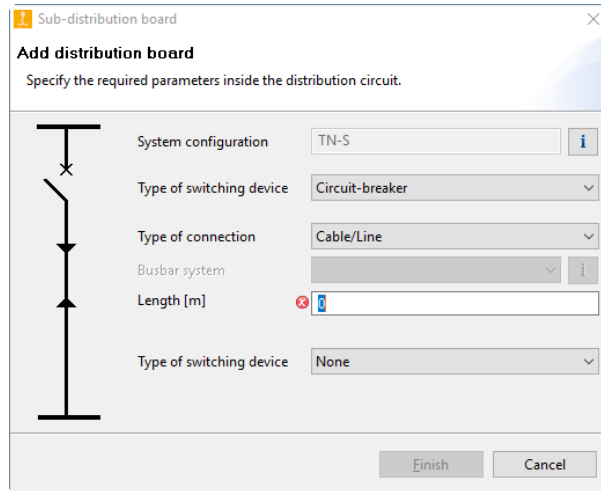


- If the distribution board is placed in the network, the length of the line must be entered
- The desired source can then be placed on the distribution board
- In this case the generator, this is selected first in the library

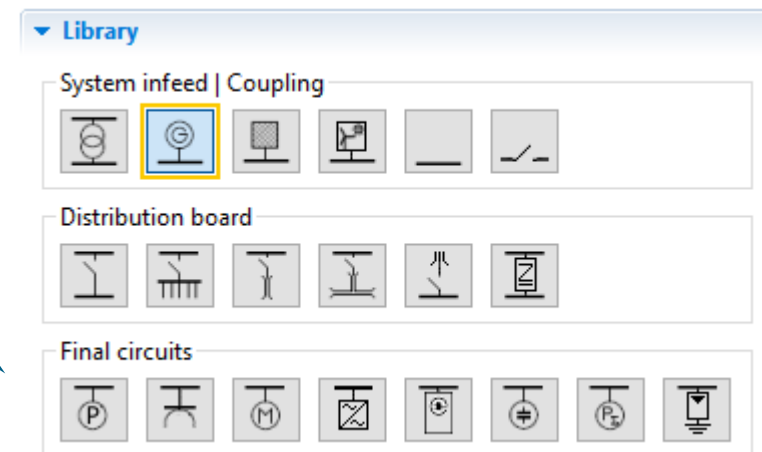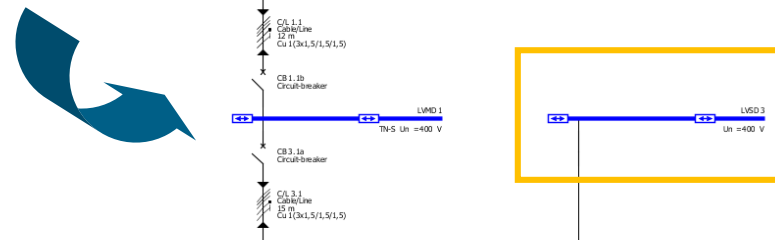

Network design

Couplings with cable/busbar trunking system


- If a yellow rectangle appears, it can be placed on the distribution board
- When you release the mouse button, the dialog for entering the data for the generator circuit appears
- After entering the data, the generator is also displayed in the network.

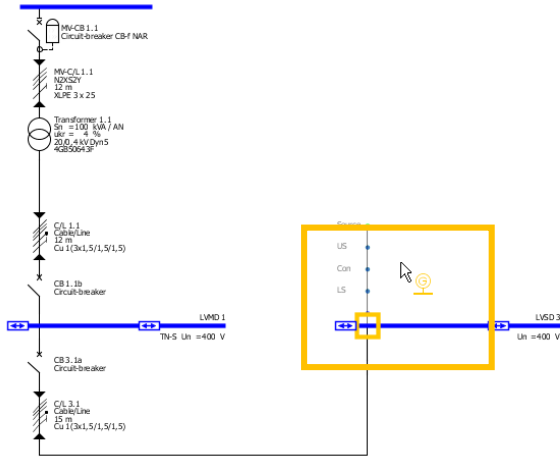

Infeed: Generator
Add generator
Specify the required parameters inside the infeed-circuit.


	System configuration	TN-S
	Type of switching device	None
	Type of connection	Cable/Line
	Busbar system	
	Length [m]	
	Type of switching device	Circuit-breaker

Finish Cancel


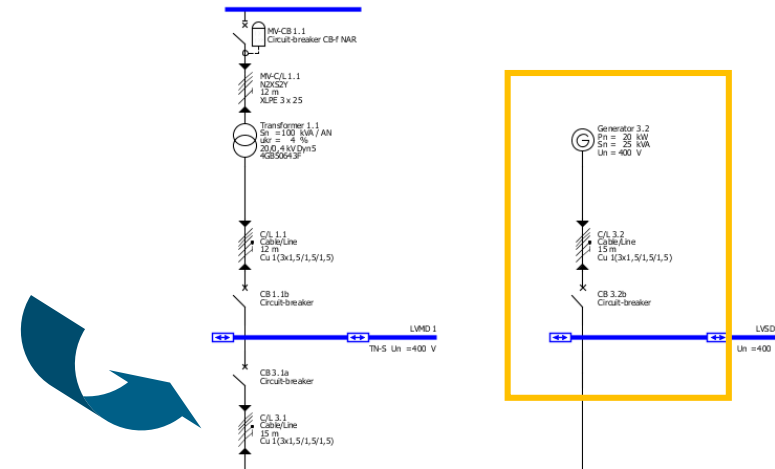


Network design

Couplings with cable/busbar trunking system

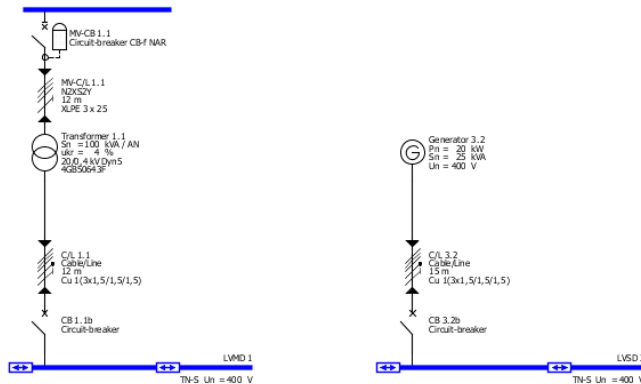


- Two sources can also be connected later with a coupling
- To do this, select the "Distribution board" element in the library
- Then you pull this from the transformer to the generator
- If a yellow rectangle appears there, you can release the mouse button and complete the data for the distribution circuit

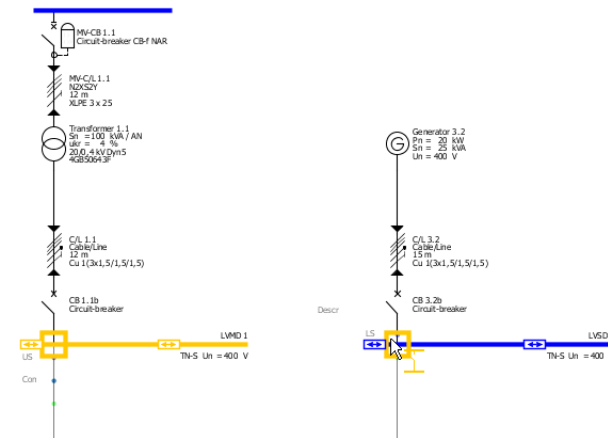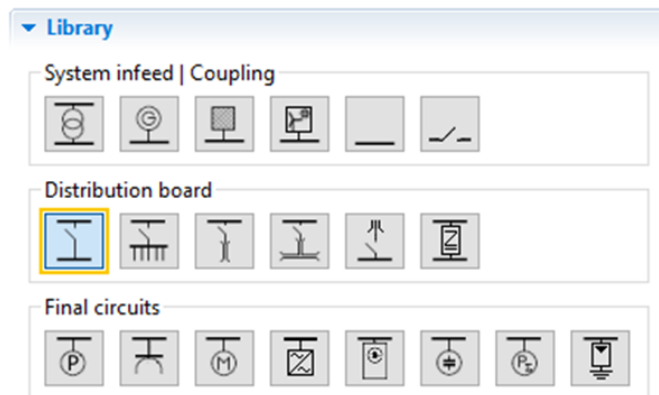


Network design

Couplings on sub-distribution level

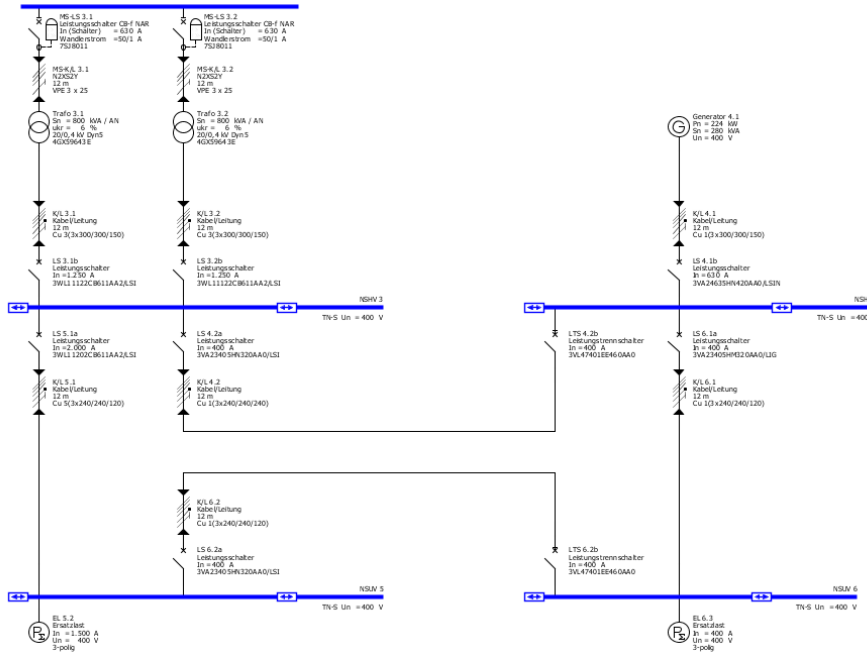

- Couplings can be created in SIMARIS design between main and sub-distribution board.
- With **SIMARIS design professional** it is also possible to simultaneously close the couplings and thus dimension and calculate a mesh network.

The diagram shows a network designed with one unidirectional coupling each at the main and sub-distribution board level. .

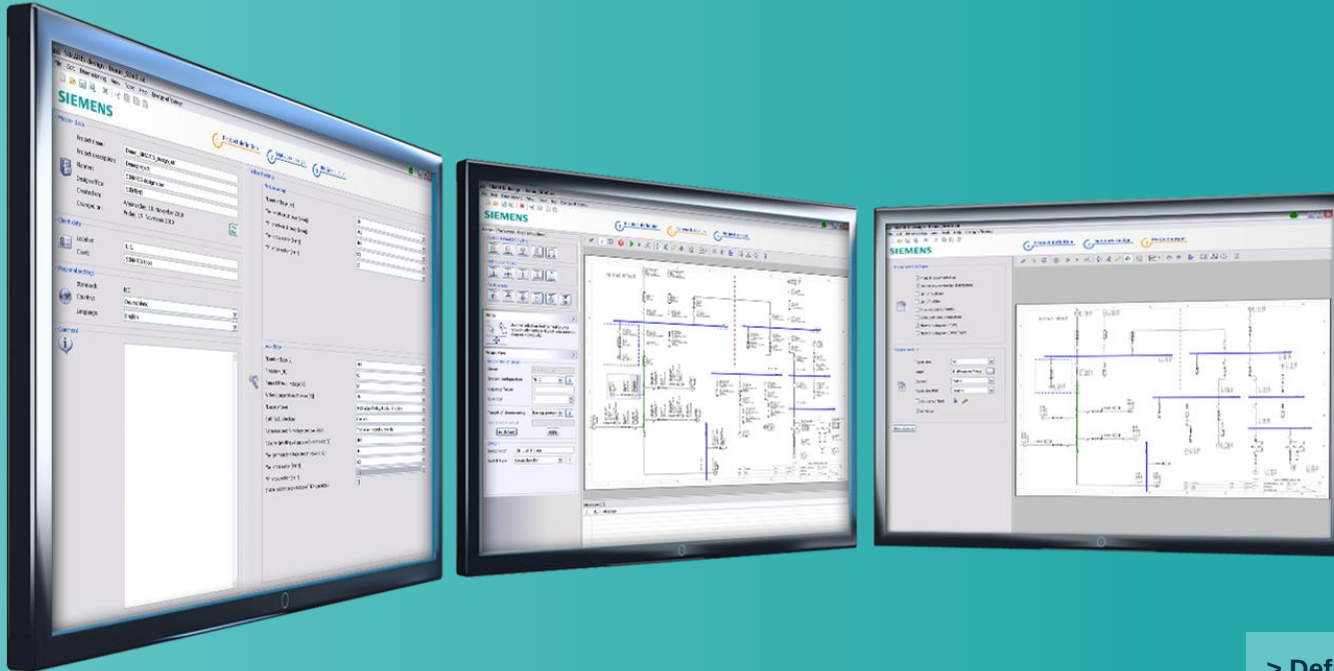

Dimensioning

- > Defining operating modes
- > Starting calculations
- > Parallel network operation (pro)
- > Displaying characteristic curves
- > Automatic selectivity evaluation (pro)

1

Introduction

2

Getting started

3

Network design

4

Dimensioning

5

Project output

6

More about SIMARIS



Start

1

2

3

4

5

6



SIMARIS design enables you to dimension individual circuits, a subnetwork or the whole network.

An optimal dimensioning result can be attained by considering only those operating states or switch positions in the calculation and device selection that are necessary for operating the switchgear installation safely.

This means that the prerequisite for proper network dimensioning is the definition of network operating modes and the corresponding switch positions.


When the "**operating modes**" function is called up via the tool bar, a display of the feeder supply management is opened, where the required operating modes are graphically represented and can be further defined in terms of their switch positions.



Dimensioning


Defining operating modes

First a view opens in which all switches of sources and distributors can be switched. The switches of the sources are all open, the switches of the distributors are all closed. By clicking on the switch it can be opened or closed.

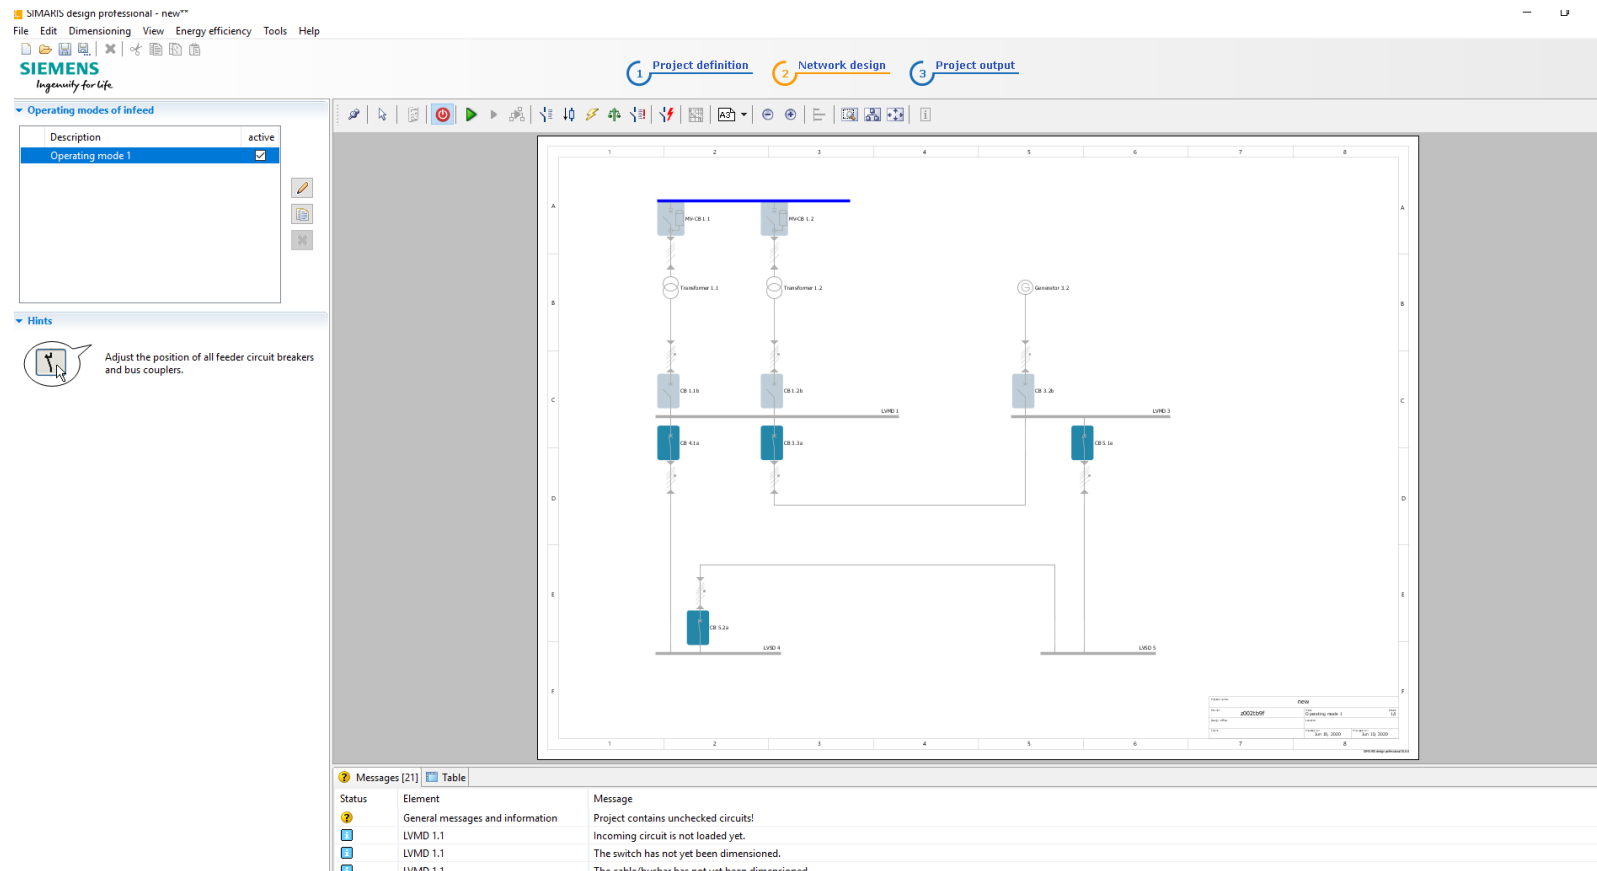

Dimensioning

Defining operating modes

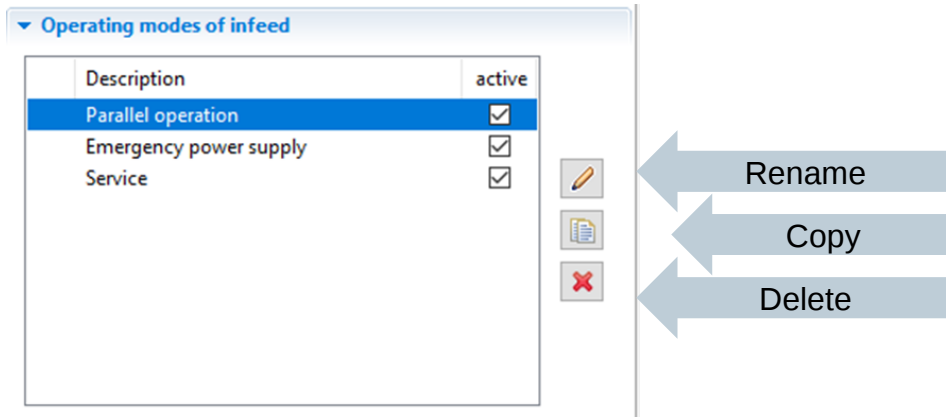

More operating modes are defined by duplicating the existing operating mode. Afterwards the switch positions are defined according to the new operating mode requirements.

Operating modes can be activated/deactivated. Dimensioning is only done for activated operating modes.

- This action returns an overview of the required operating modes as exemplified in this screenshot. These operating modes will then form the basis for the subsequent dimensioning process.
- Switching states for which a calculation is not possible, are marked accordingly. They must be properly adjusted prior to dimensioning.

Attention:

As soon as you change one of the operating modes, delete or add operating modes, you must also start a new dimensioning cycle, since you change the calculation basis for the dimensioning process with every new operating mode change!


Dimensioning and the resulting device selection are performed according to defined operating constellations. Thus an optimized dimensioning result is attained.

SIMARIS design calculates the minimum and maximum short-circuit currents from all defined operating modes, this calculation forms the basis for dimensioning the entire network.

Complex network configurations can be easily implemented with the aid of tie breakers or bus couplers, also see "[Couplings](#)".


If errors should occur during the dimensioning process, e.g. owing to default devices which do not meet the requirements for the defined operating modes, info and error messages will be displayed below the network diagram.

If one of the messages is selected with the cursor (now highlighted in grey), the corresponding device is marked in yellow on the network diagram so that a correlation can always be created between messages and items of equipment in the network diagram.

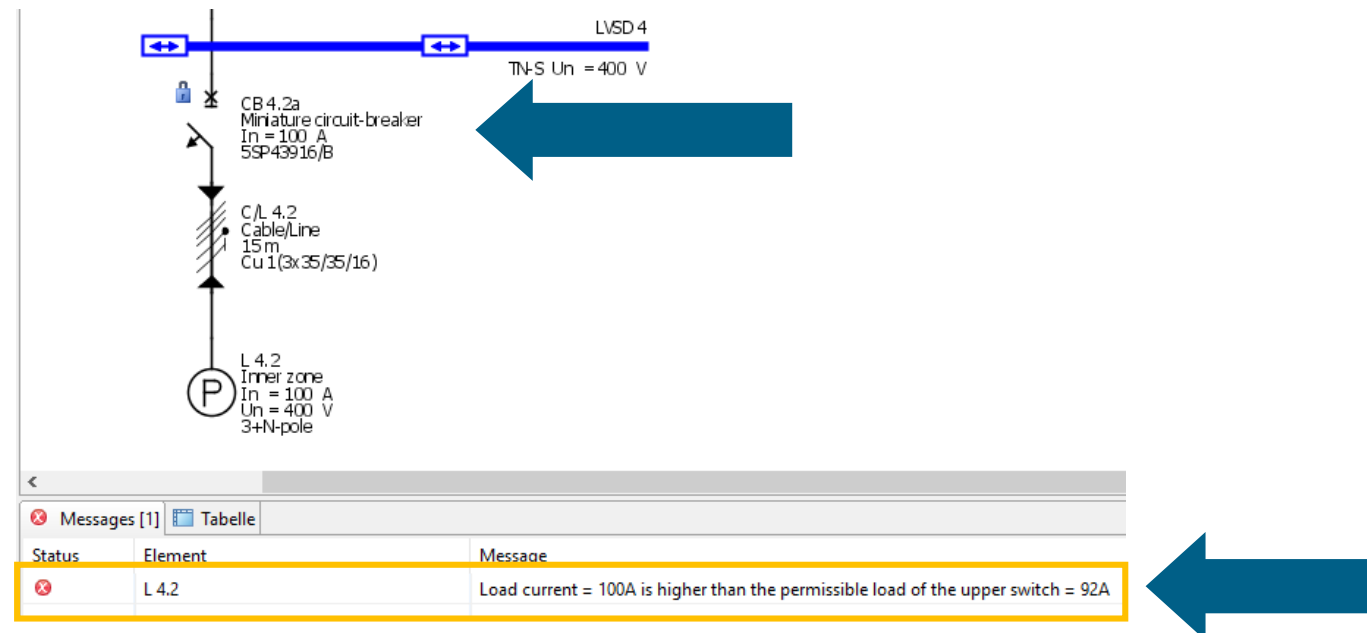

Dimensioning

Parallel network operation (pro)

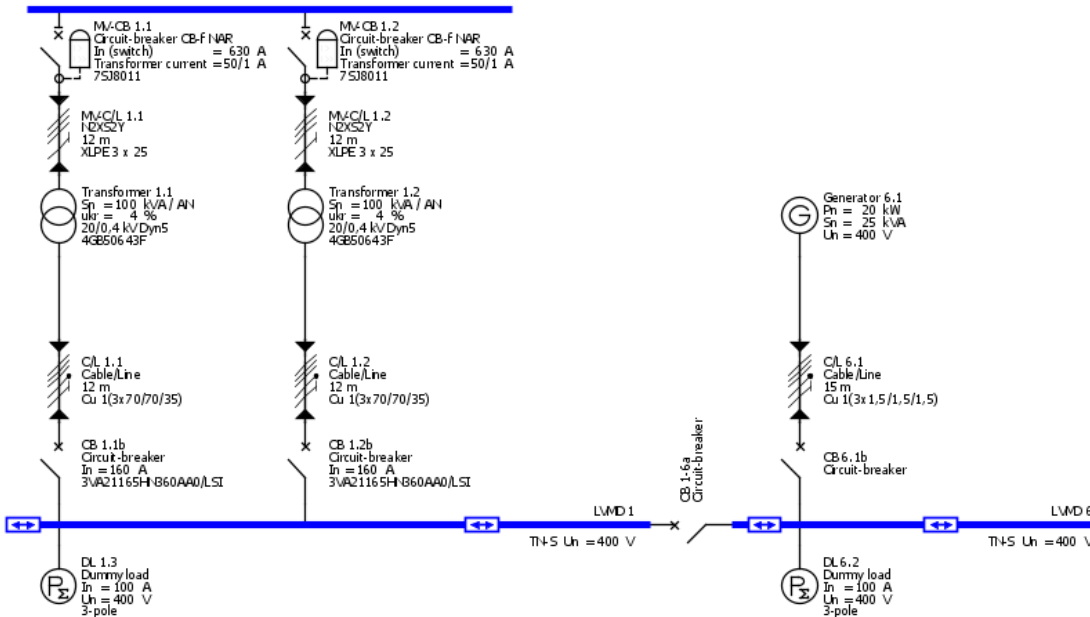

The possibility to dimension identical power sources connected in parallel and calculating the impact of this configuration on the short-circuit currents or load currents in the network, is extended by another option in **SIMARIS design professional**:



- different power sources (e.g. transformers and generators) can be operated in parallel in the same network.

Parallel network operation can be configured in SIMARIS design by adding bidirectional ties (couplings) in conjunction with not identical infeed systems.

Dimensioning

Parallel network operation (pro)


- In the following example, the 4th defined operating mode (red frame) represents such parallel network operation.

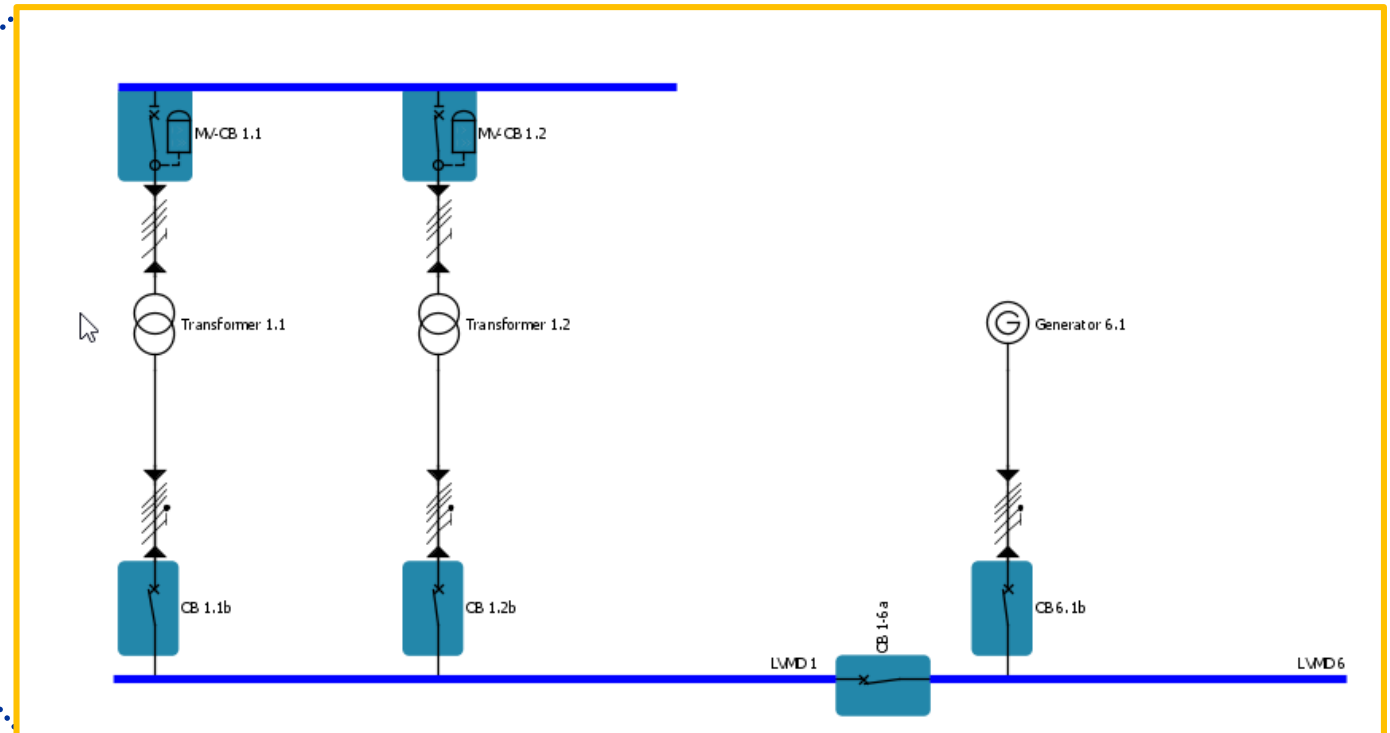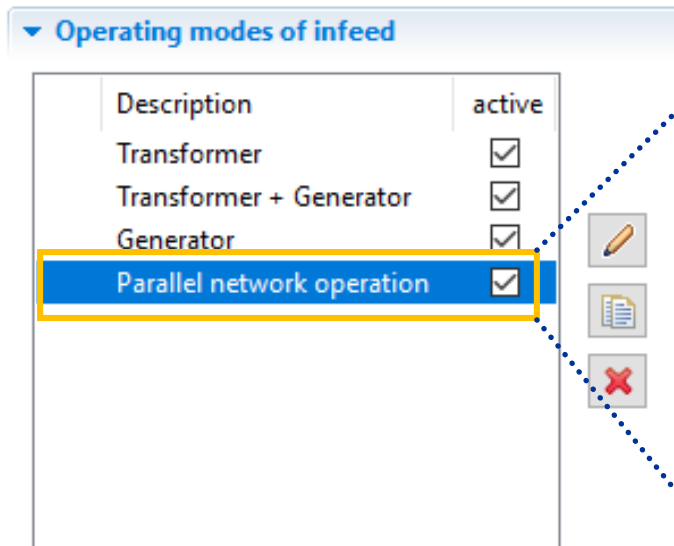

Dimensioning

Displaying characteristic curves


After you have dimensioned the network you created, you can display the characteristic device curves. To do so, at least one element on the network diagram must always be selected (highlighted in grey).

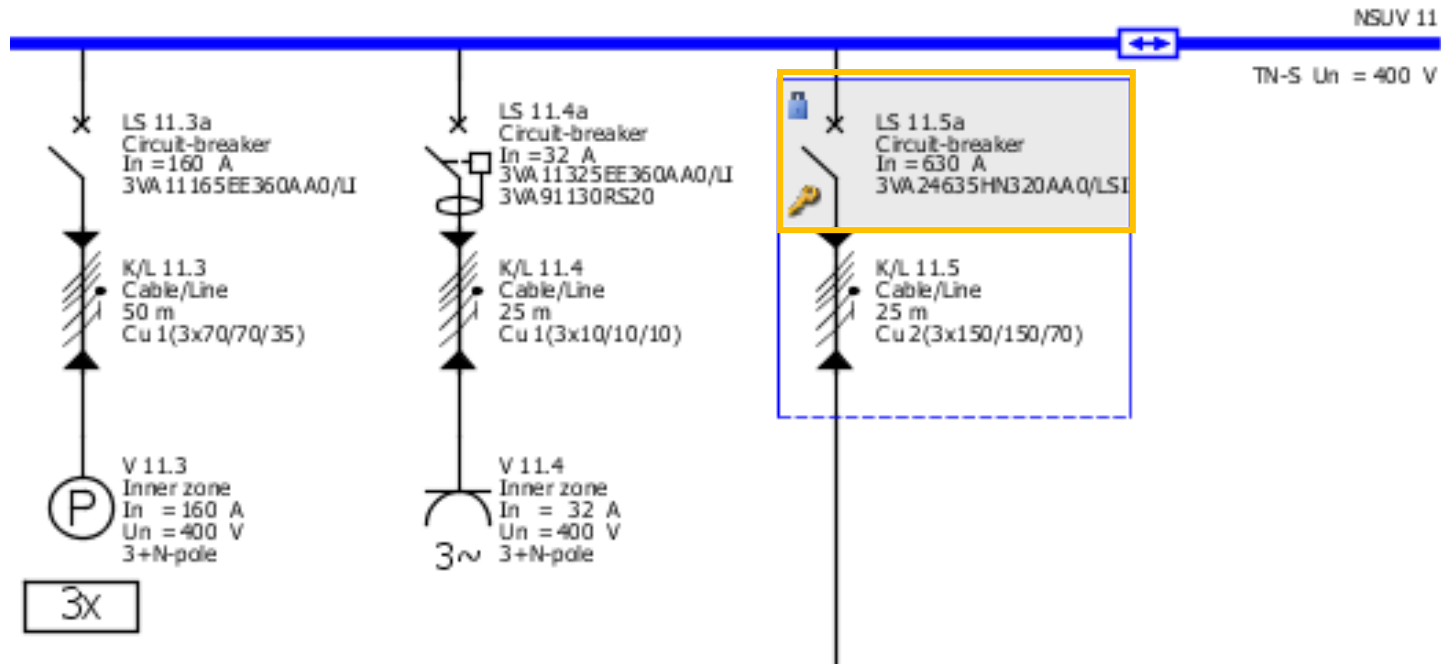

Dimensioning


Displaying characteristic curves

Click the icon **for displaying characteristic curves** on the tool bar.

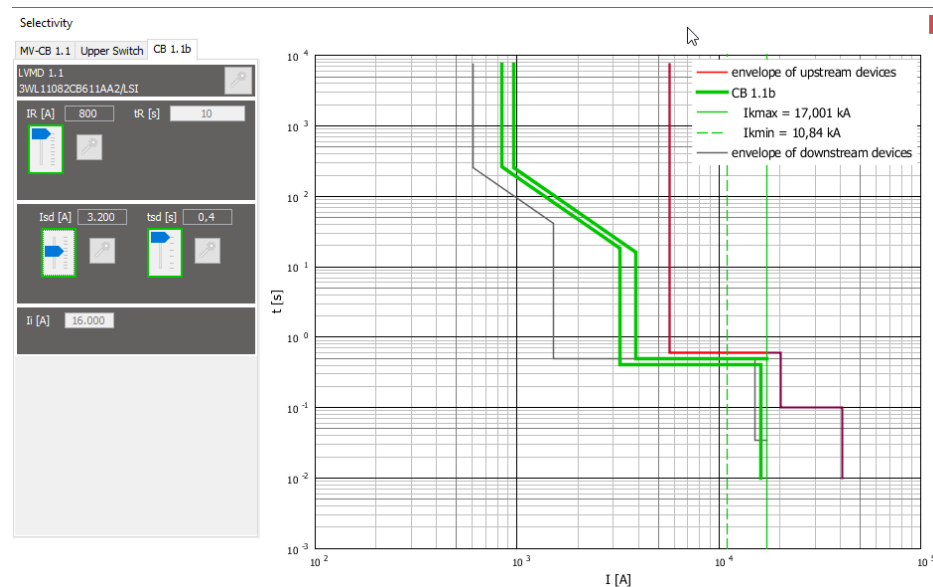

- A window opens, where the current-time characteristic of the selected element as well as the envelope curves of the upstream and downstream device are displayed in a diagram.


Dimensioning Displaying characteristic curves

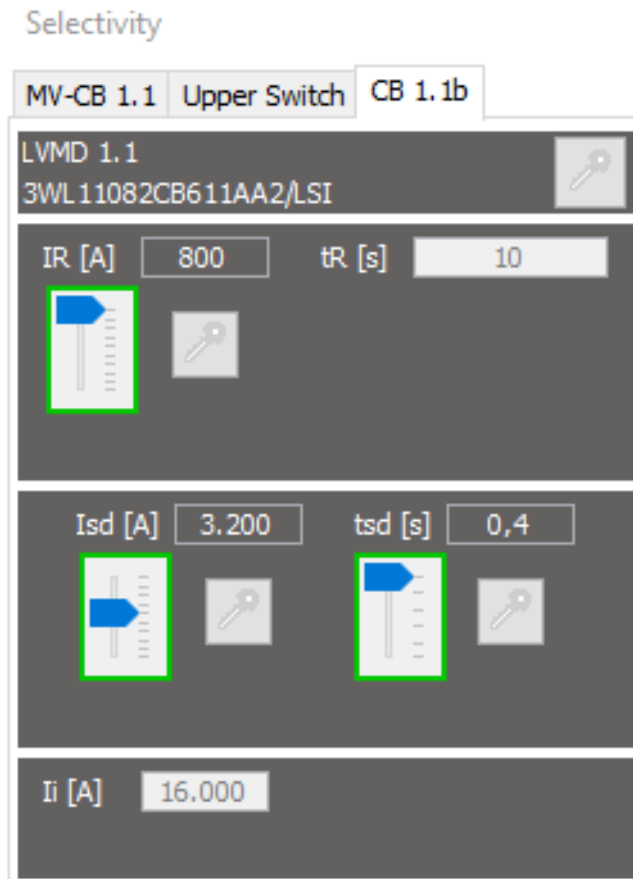

- If there is the option for entering parameters of the selected device, they can now be set with sliders.
- The effects of these new settings on the current-time characteristic are simultaneously shown in the diagram on the right, where the device curve is adjusted accordingly.
- A click on the key icon of one or all switches locks your settings.
- They won't be changed any more in any subsequent redimensioning process.
- Such devices are identified by a key on the network diagram as well.
- Any conflicts resulting from the defined setting are indicated in form of messages below the network diagram.


Dimensioning

Displaying characteristic curves

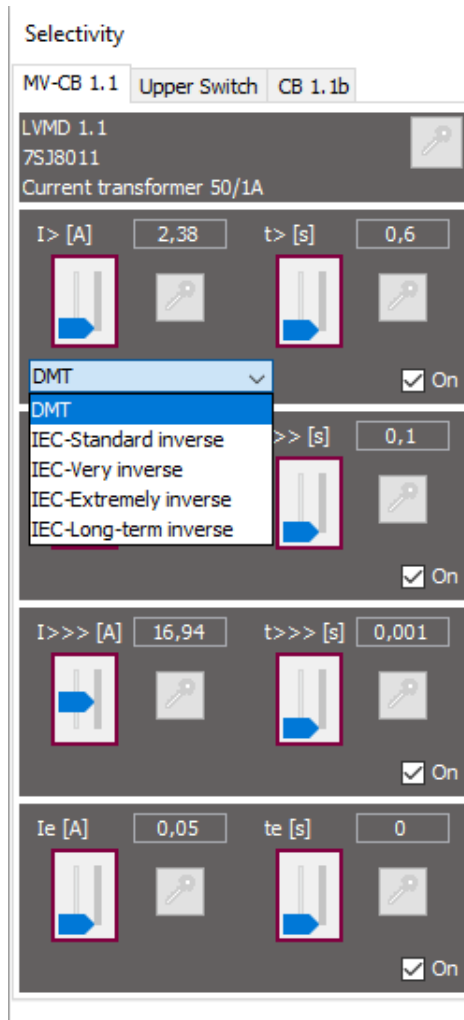

- For medium-voltage circuit breakers you can select either DMT (Definite Minimum Time) or IDMT (Inverse Definite Minimum Time) in the selectivity window
- For IDMT you can select the following curves:
 - IEC-Standard invers
 - IEC-Very invers
 - IEC-Extremely invers
 - IEC-Long-term invers


Dimensioning Automatic selectivity evaluation (pro)

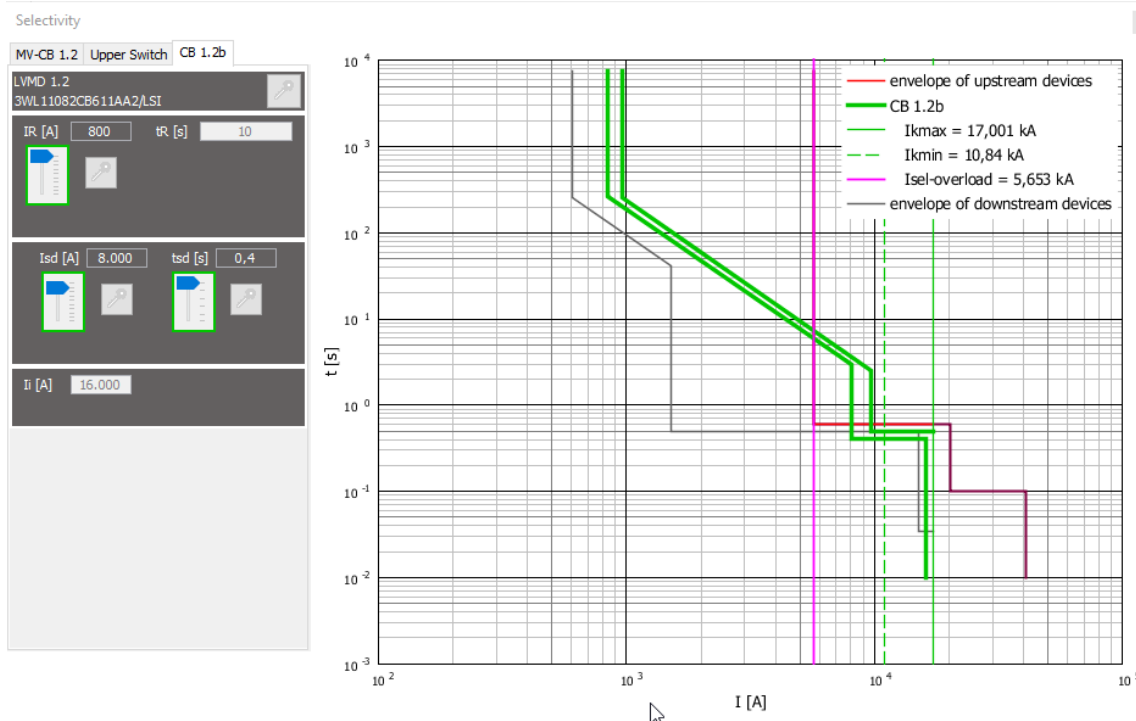

- With **SIMARIS design professional** you can benefit from automatic selectivity evaluations by the software.
- In addition to the current-time characteristic of the selected item of equipment and the envelope curves of its upstream and downstream device, its selectivity limits are also displayed automatically.

Dimensioning

Automatic selectivity evaluation (pro)

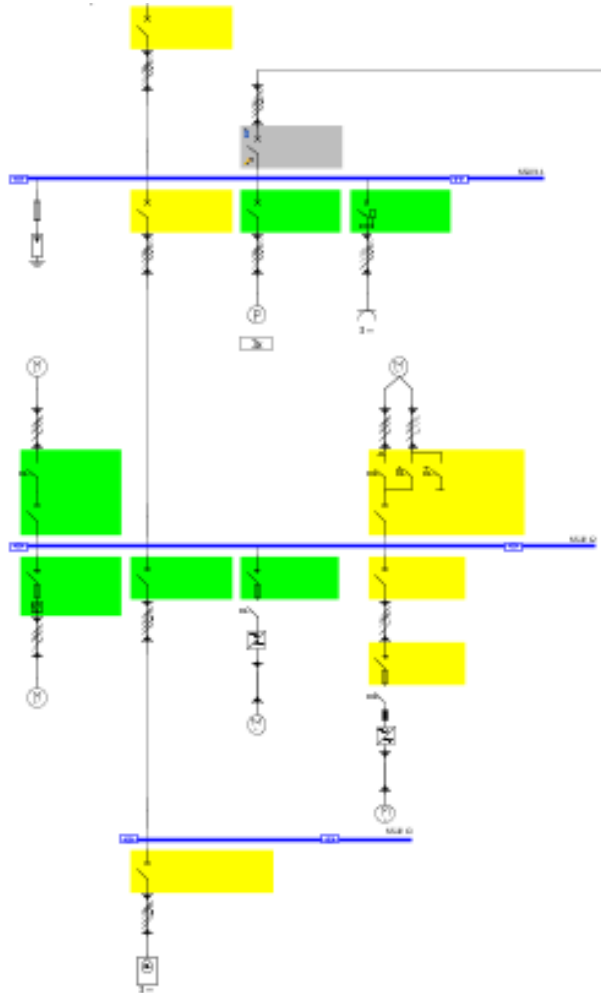

In addition, each switching device is colour-marked in the entire network diagram as follows, when selectivity evaluation was enabled:


Green: item is fully selective

Yellow: item is partially selective

Grey: item cannot be evaluated

The evaluation is made for the operating mode defined as the main operating mode

Tutorial SIMARIS design

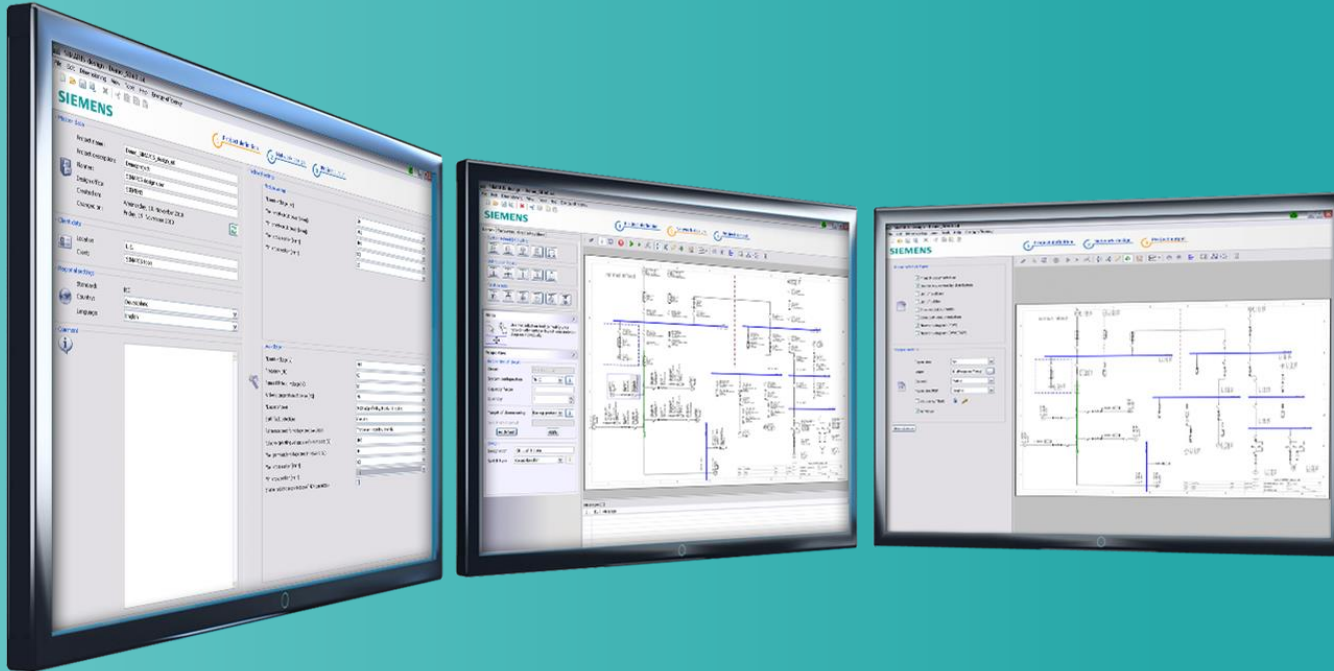

Project output

1

Introduction

2

Getting started

3

Network design

4

Dimensioning

5


Project output

6

More about SIMARIS

- > Overview
- > Project documentation
- > Operating modes
- > Selectivity documentation
- > Transfer file

Project Output Overview

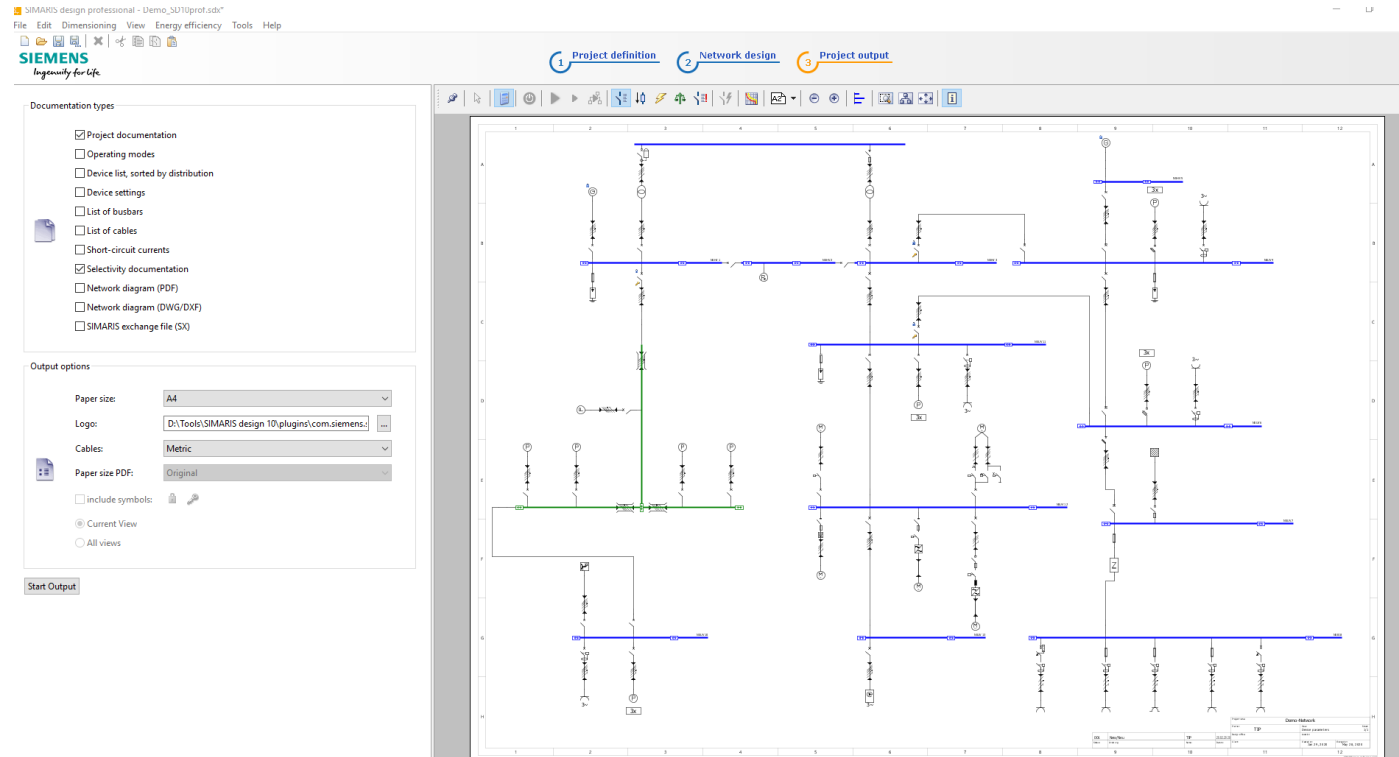

- In the step "**Project output**", you can see the network diagram you designed on the right. It cannot be modified any more in this program step.

Documentation types

- ☒ Project documentation
- ☐ Operating modes
- ☐ Device list, sorted by distribution
- ☐ Device settings
- ☐ List of busbars
- ☐ List of cables
- ☐ Short-circuit currents
- ☒ Selectivity documentation
- ☐ Network diagram (PDF)
- ☐ Network diagram (DWG/DXF)
- ☐ SIMARIS exchange file (SX)

Output options

Paper size: A4

Logo: D:\Tools\SIMARIS design 10\plugins\com.siemens.:

Cables: Metric

Paper size PDF: Original

☐ include symbols:  

☒ Current View

☐ All views

Start Output

In the screen area on the left, you can define the output type of your project by clicking the appropriate check box. Below you can select the options linked to that output type.

Project Output

Project documentation


Demo Network		SIEMENS Project documentation created with SIMARIS design professional Version: 10.0.0 (2020-05-19) Subrevision: S799 © SIEMENS AG 2020. All rights reserved. http://www.siemens.com	Demo, SCDExport apk May 28, 2020 / TP																																																																																															
Master data		SIEMENS Network parameters: <table border="1"> <thead> <tr><th colspan="2">General</th></tr> </thead> <tbody> <tr><td>Standard</td><td>IEC</td></tr> <tr><td>Altitude of Site</td><td>< 1000 m</td></tr> <tr><th colspan="2">Medium Voltage</th></tr> <tr><td>Rated voltage</td><td>10 kV</td></tr> <tr><td>Voltage factor c max</td><td>1.1</td></tr> <tr><td>Voltage factor c min</td><td>1</td></tr> <tr><td>Min short-circuit power</td><td></td></tr> <tr><td>Neutral System</td><td></td></tr> <tr><td>Elevation R1X1 min</td><td></td></tr> <tr><th colspan="2">Low Voltage</th></tr> <tr><td>Rated voltage</td><td></td></tr> <tr><td>System configuration</td><td></td></tr> <tr><td>Frequency</td><td></td></tr> <tr><td>Tolerable fault voltage</td><td></td></tr> <tr><td>Ambient temperature of devices</td><td></td></tr> <tr><td>Voltage factor c max</td><td></td></tr> <tr><td>Voltage factor c min</td><td></td></tr> <tr><td>Base point of voltage drop calculation</td><td></td></tr> <tr><td>Relative operating voltage at reference point</td><td></td></tr> <tr><td>Max. permissible voltage drop in network</td><td></td></tr> </tbody> </table>	General		Standard	IEC	Altitude of Site	< 1000 m	Medium Voltage		Rated voltage	10 kV	Voltage factor c max	1.1	Voltage factor c min	1	Min short-circuit power		Neutral System		Elevation R1X1 min		Low Voltage		Rated voltage		System configuration		Frequency		Tolerable fault voltage		Ambient temperature of devices		Voltage factor c max		Voltage factor c min		Base point of voltage drop calculation		Relative operating voltage at reference point		Max. permissible voltage drop in network		Demo, SCDExport apk May 28, 2020 / TP																																																					
General																																																																																																		
Standard	IEC																																																																																																	
Altitude of Site	< 1000 m																																																																																																	
Medium Voltage																																																																																																		
Rated voltage	10 kV																																																																																																	
Voltage factor c max	1.1																																																																																																	
Voltage factor c min	1																																																																																																	
Min short-circuit power																																																																																																		
Neutral System																																																																																																		
Elevation R1X1 min																																																																																																		
Low Voltage																																																																																																		
Rated voltage																																																																																																		
System configuration																																																																																																		
Frequency																																																																																																		
Tolerable fault voltage																																																																																																		
Ambient temperature of devices																																																																																																		
Voltage factor c max																																																																																																		
Voltage factor c min																																																																																																		
Base point of voltage drop calculation																																																																																																		
Relative operating voltage at reference point																																																																																																		
Max. permissible voltage drop in network																																																																																																		
Customer data		SIEMENS Defined network modes for calculation and dimensioning: <table border="1"> <thead> <tr><th colspan="4">Operating mode: Normal</th></tr> <tr><th>Starting point</th><th>Target point</th><th>Connection</th><th>Status</th></tr> </thead> <tbody> <tr><td>Trafo 1.2</td><td>ISBHV 1</td><td>ISBHV 1.2</td><td>On</td></tr> <tr><td>Trafo 5.1</td><td>ISBHV 3</td><td>ISBHV 3.1</td><td>On</td></tr> <tr><td>Generator 1.1</td><td>ISBHV 1</td><td>ISBHV 1.1</td><td>On</td></tr> <tr><td>ISBHV 1</td><td>ISBHV 2</td><td></td><td></td></tr> <tr><td>ISBHV 1</td><td>ISBHV 9</td><td></td><td></td></tr> <tr><td>ISBHV 2</td><td>ISBHV 3</td><td></td><td></td></tr> <tr><td>ISBHV 3</td><td>ISBHV 4</td><td></td><td></td></tr> <tr><td>ISBHV 3</td><td>ISBHV 11</td><td></td><td></td></tr> <tr><td>ISBHV 5</td><td>ISBHV 4</td><td></td><td></td></tr> <tr><td>ISBHV 4</td><td>ISBHV 6</td><td></td><td></td></tr> <tr><td>Generator 5.1</td><td>ISBHV 5</td><td></td><td></td></tr> <tr><td>ISBHV 6</td><td>ISBHV 7</td><td></td><td></td></tr> <tr><td>ISBHV 11</td><td>ISBHV 6</td><td></td><td></td></tr> <tr><td>Interconnecting T.2</td><td>ISBHV 7</td><td></td><td></td></tr> <tr><td>ISBHV 7</td><td>ISBHV 8</td><td></td><td></td></tr> <tr><td>ISBHV 8</td><td>ISBHV 10</td><td></td><td></td></tr> <tr><td>Emergency Energizer 10.4</td><td>ISBHV 10</td><td></td><td></td></tr> <tr><td>ISBHV 11</td><td>ISBHV 12</td><td></td><td></td></tr> <tr><td>ISBHV 12</td><td>ISBHV 13</td><td></td><td></td></tr> </tbody> </table>	Operating mode: Normal				Starting point	Target point	Connection	Status	Trafo 1.2	ISBHV 1	ISBHV 1.2	On	Trafo 5.1	ISBHV 3	ISBHV 3.1	On	Generator 1.1	ISBHV 1	ISBHV 1.1	On	ISBHV 1	ISBHV 2			ISBHV 1	ISBHV 9			ISBHV 2	ISBHV 3			ISBHV 3	ISBHV 4			ISBHV 3	ISBHV 11			ISBHV 5	ISBHV 4			ISBHV 4	ISBHV 6			Generator 5.1	ISBHV 5			ISBHV 6	ISBHV 7			ISBHV 11	ISBHV 6			Interconnecting T.2	ISBHV 7			ISBHV 7	ISBHV 8			ISBHV 8	ISBHV 10			Emergency Energizer 10.4	ISBHV 10			ISBHV 11	ISBHV 12			ISBHV 12	ISBHV 13			Demo, SCDExport apk May 28, 2020 / TP											
Operating mode: Normal																																																																																																		
Starting point	Target point	Connection	Status																																																																																															
Trafo 1.2	ISBHV 1	ISBHV 1.2	On																																																																																															
Trafo 5.1	ISBHV 3	ISBHV 3.1	On																																																																																															
Generator 1.1	ISBHV 1	ISBHV 1.1	On																																																																																															
ISBHV 1	ISBHV 2																																																																																																	
ISBHV 1	ISBHV 9																																																																																																	
ISBHV 2	ISBHV 3																																																																																																	
ISBHV 3	ISBHV 4																																																																																																	
ISBHV 3	ISBHV 11																																																																																																	
ISBHV 5	ISBHV 4																																																																																																	
ISBHV 4	ISBHV 6																																																																																																	
Generator 5.1	ISBHV 5																																																																																																	
ISBHV 6	ISBHV 7																																																																																																	
ISBHV 11	ISBHV 6																																																																																																	
Interconnecting T.2	ISBHV 7																																																																																																	
ISBHV 7	ISBHV 8																																																																																																	
ISBHV 8	ISBHV 10																																																																																																	
Emergency Energizer 10.4	ISBHV 10																																																																																																	
ISBHV 11	ISBHV 12																																																																																																	
ISBHV 12	ISBHV 13																																																																																																	
		SIEMENS Standards for computation: <table border="1"> <thead> <tr><th>Title</th><th>IEC</th><th>HD</th><th>RVS</th><th>DIN VDE</th></tr> </thead> <tbody> <tr><td>Low-voltage electrical installations *</td><td>60364-1 :6</td><td>384</td><td></td><td>0100 - 100 :710</td></tr> <tr><td>Short-circuit currents in three-phase a.c. systems – Calculation of currents</td><td>60909</td><td></td><td>60909</td><td>0102</td></tr> <tr><td>Electrical safety – Calculation of effects</td><td>60885</td><td></td><td>60885</td><td>0103</td></tr> <tr><td>Definitions and calculation methods</td><td></td><td></td><td></td><td></td></tr> <tr><td>Low-voltage switchgear and controlgear – Circuit breakers</td><td>60347-2</td><td></td><td>60347-2</td><td>0600 - 101</td></tr> <tr><td>Low-voltage switchgear and controlgear assemblies</td><td>61430</td><td></td><td>61430</td><td>0600 - 000</td></tr> <tr><td>A method of temperature rise assessment by selection for partially type-tested assemblies (PTTS) of low-voltage switchgear and controlgear</td><td>60800-C</td><td>S26 S2</td><td></td><td>0600 - 507</td></tr> <tr><td>Electrical installations of buildings – Part 5-52: Selection and erection of electrical equipment – Wiring system</td><td>60364-5-52</td><td>384</td><td></td><td>0206 - 4</td></tr> <tr><td>Low-voltage electrical installations – Selection and erection of electrical equipment – Part 5-53: Wiring system – Supplement 3: Current-carrying capacity of cables in three phase distribution circuits at load current with harmonic content</td><td></td><td></td><td></td><td>0102 S20 Supplement</td></tr> <tr><td>Electrical accessories – Circuit breaker for arc-resistant protection for normal and similar applications – Circuit breakers for a.c. operation</td><td>60868-1</td><td></td><td>60868-1</td><td>0641 - 11</td></tr> <tr><td>High-voltage switchgear and controlgear – Alternating Current switch-face combinations</td><td>62271</td><td></td><td>62271</td><td>0611 - 105</td></tr> <tr><td>Electrical installations of buildings – Selection and erection of electrical equipment – Installation, switching and control</td><td>60364-5-53</td><td>60364-5-53A</td><td></td><td>0100 S24</td></tr> <tr><td>Low-voltage electrical installations – Protection for safety – Protection against voltage disturbances and electromagnetic disturbance</td><td>60364-4-46</td><td>60364-4-46S</td><td></td><td>0100-443</td></tr> <tr><td>Protection against lightning – Part 1 : A</td><td>62305-1 :4</td><td></td><td></td><td>0180 - 1 :4</td></tr> <tr><td>Low-voltage surge protection devices – Surge protective devices connected to low-voltage power systems, Requirements and tests</td><td>61843-11</td><td></td><td></td><td>0675-11</td></tr> <tr><td>Tests for electric cables under fire conditions – Circuit integrity</td><td>60333-11, 21</td><td>50000</td><td></td><td>0672-014 0642-354</td></tr> <tr><td>Fire behaviour of building materials and building components – Part 12: Circuit integrity maintenance of electric cable systems, requirements and testing</td><td></td><td></td><td></td><td>4102-12 1996-1</td></tr> <tr><td>Electrical equipment of electric road vehicles – Electric vehicle conductive charging system</td><td>61851</td><td></td><td></td><td></td></tr> </tbody> </table>	Title	IEC	HD	RVS	DIN VDE	Low-voltage electrical installations *	60364-1 :6	384		0100 - 100 :710	Short-circuit currents in three-phase a.c. systems – Calculation of currents	60909		60909	0102	Electrical safety – Calculation of effects	60885		60885	0103	Definitions and calculation methods					Low-voltage switchgear and controlgear – Circuit breakers	60347-2		60347-2	0600 - 101	Low-voltage switchgear and controlgear assemblies	61430		61430	0600 - 000	A method of temperature rise assessment by selection for partially type-tested assemblies (PTTS) of low-voltage switchgear and controlgear	60800-C	S26 S2		0600 - 507	Electrical installations of buildings – Part 5-52: Selection and erection of electrical equipment – Wiring system	60364-5-52	384		0206 - 4	Low-voltage electrical installations – Selection and erection of electrical equipment – Part 5-53: Wiring system – Supplement 3: Current-carrying capacity of cables in three phase distribution circuits at load current with harmonic content				0102 S20 Supplement	Electrical accessories – Circuit breaker for arc-resistant protection for normal and similar applications – Circuit breakers for a.c. operation	60868-1		60868-1	0641 - 11	High-voltage switchgear and controlgear – Alternating Current switch-face combinations	62271		62271	0611 - 105	Electrical installations of buildings – Selection and erection of electrical equipment – Installation, switching and control	60364-5-53	60364-5-53A		0100 S24	Low-voltage electrical installations – Protection for safety – Protection against voltage disturbances and electromagnetic disturbance	60364-4-46	60364-4-46S		0100-443	Protection against lightning – Part 1 : A	62305-1 :4			0180 - 1 :4	Low-voltage surge protection devices – Surge protective devices connected to low-voltage power systems, Requirements and tests	61843-11			0675-11	Tests for electric cables under fire conditions – Circuit integrity	60333-11, 21	50000		0672-014 0642-354	Fire behaviour of building materials and building components – Part 12: Circuit integrity maintenance of electric cable systems, requirements and testing				4102-12 1996-1	Electrical equipment of electric road vehicles – Electric vehicle conductive charging system	61851				Demo, SCDExport apk May 28, 2020 / TP
Title	IEC	HD	RVS	DIN VDE																																																																																														
Low-voltage electrical installations *	60364-1 :6	384		0100 - 100 :710																																																																																														
Short-circuit currents in three-phase a.c. systems – Calculation of currents	60909		60909	0102																																																																																														
Electrical safety – Calculation of effects	60885		60885	0103																																																																																														
Definitions and calculation methods																																																																																																		
Low-voltage switchgear and controlgear – Circuit breakers	60347-2		60347-2	0600 - 101																																																																																														
Low-voltage switchgear and controlgear assemblies	61430		61430	0600 - 000																																																																																														
A method of temperature rise assessment by selection for partially type-tested assemblies (PTTS) of low-voltage switchgear and controlgear	60800-C	S26 S2		0600 - 507																																																																																														
Electrical installations of buildings – Part 5-52: Selection and erection of electrical equipment – Wiring system	60364-5-52	384		0206 - 4																																																																																														
Low-voltage electrical installations – Selection and erection of electrical equipment – Part 5-53: Wiring system – Supplement 3: Current-carrying capacity of cables in three phase distribution circuits at load current with harmonic content				0102 S20 Supplement																																																																																														
Electrical accessories – Circuit breaker for arc-resistant protection for normal and similar applications – Circuit breakers for a.c. operation	60868-1		60868-1	0641 - 11																																																																																														
High-voltage switchgear and controlgear – Alternating Current switch-face combinations	62271		62271	0611 - 105																																																																																														
Electrical installations of buildings – Selection and erection of electrical equipment – Installation, switching and control	60364-5-53	60364-5-53A		0100 S24																																																																																														
Low-voltage electrical installations – Protection for safety – Protection against voltage disturbances and electromagnetic disturbance	60364-4-46	60364-4-46S		0100-443																																																																																														
Protection against lightning – Part 1 : A	62305-1 :4			0180 - 1 :4																																																																																														
Low-voltage surge protection devices – Surge protective devices connected to low-voltage power systems, Requirements and tests	61843-11			0675-11																																																																																														
Tests for electric cables under fire conditions – Circuit integrity	60333-11, 21	50000		0672-014 0642-354																																																																																														
Fire behaviour of building materials and building components – Part 12: Circuit integrity maintenance of electric cable systems, requirements and testing				4102-12 1996-1																																																																																														
Electrical equipment of electric road vehicles – Electric vehicle conductive charging system	61851																																																																																																	
		SIEMENS Operating mode: Emergency 1 <table border="1"> <thead> <tr><th>Starting point</th><th>Target point</th></tr> </thead> <tbody> <tr><td>Trafo 1.2</td><td>ISBHV 1</td></tr> <tr><td>Trafo 5.1</td><td>ISBHV 3</td></tr> <tr><td>Generator 1.1</td><td>ISBHV 1</td></tr> <tr><td>ISBHV 1</td><td>ISBHV 2</td></tr> </tbody> </table>	Starting point	Target point	Trafo 1.2	ISBHV 1	Trafo 5.1	ISBHV 3	Generator 1.1	ISBHV 1	ISBHV 1	ISBHV 2																																																																																						
Starting point	Target point																																																																																																	
Trafo 1.2	ISBHV 1																																																																																																	
Trafo 5.1	ISBHV 3																																																																																																	
Generator 1.1	ISBHV 1																																																																																																	
ISBHV 1	ISBHV 2																																																																																																	

*) Special national conditions and deviations from IEC 60364-4-41: 2005 are not implemented and need to be considered!

Some of the output variants available in SIMARIS design are described below:

"Project documentation" for example comprises


- a cover sheet
- an overview of the default settings made
- a graphical representation of the defined network operating modes
- device lists
- a list of the standards used for the calculation.

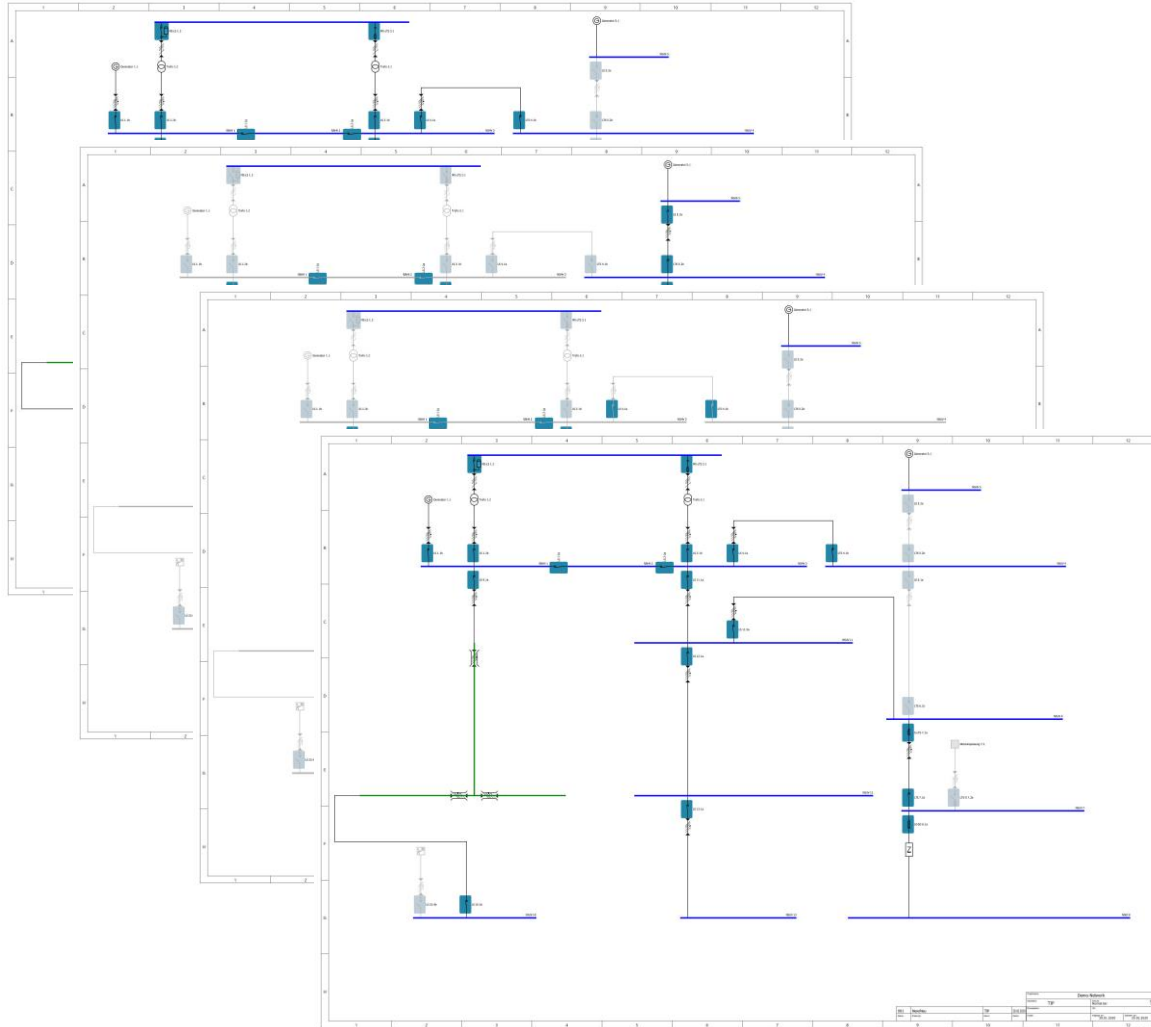

The "**Operating modes**" output contains a sheet for each defined operating mode, which shows the specified switch positions.

Project Output


Selectivity documentation

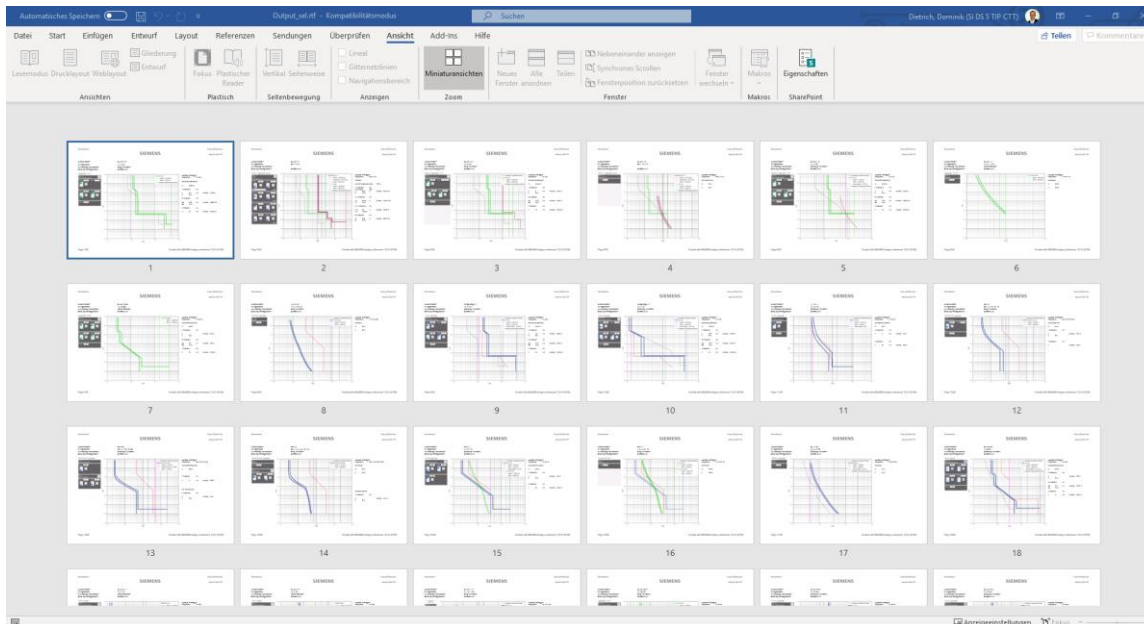

"**Selectivity documentation**" comprises a data sheet for each configured device

- which allows an unambiguous identification of the device on the network diagram,
- documents all of the required parameter settings,
- and includes a drawing showing the corresponding tripping characteristic incl. tolerance bands and the envelope curves of the upstream and downstream devices.

Project Output
Selectivity documentation (professional)

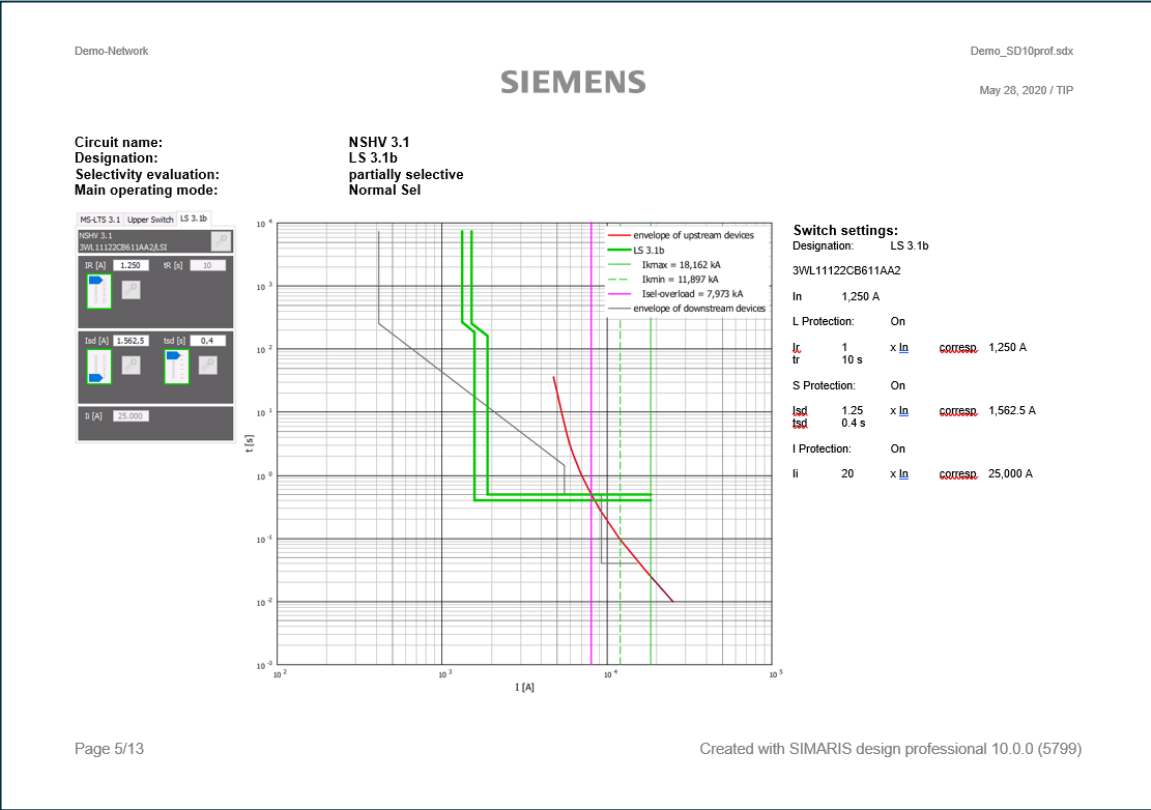


In addition, users of the **professional** version are provided with a selectivity evaluation of every device and the selectivity limits for the device are shown on the graphics.

Project Output

Transfer file for SIMARIS project


- In **SIMARIS design** users are able to create a transfer file (.sx) to hand over project data to SIMARIS project*.

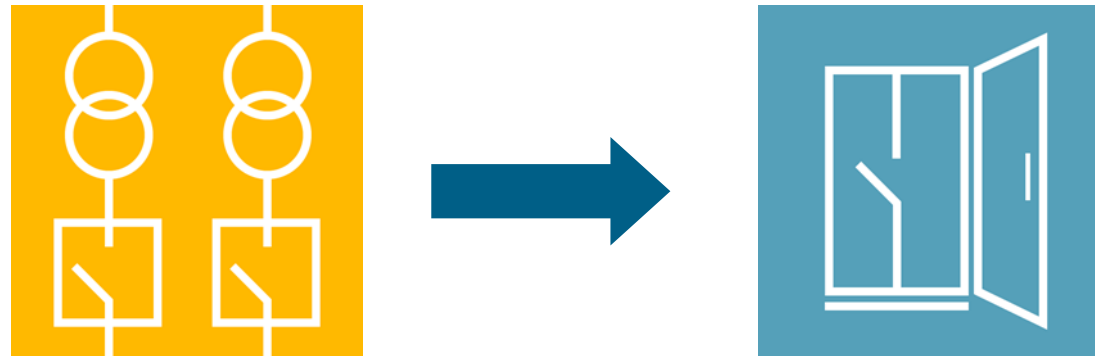

- * SIMARIS project is a software tool for determining the space requirements of electric power distribution systems and budgeting them. In addition, it can automatically create tender specification texts for the configured switchgear and BIM data. SIMARIS project is currently available for the following countries: Austria, Brazil, Canada, China, Germany, Italy, Netherlands, Poland, Portugal, Russia, Spain, Switzerland, Turkey.

Tutorial SIMARIS design

SIEMENS
Ingenuity for life

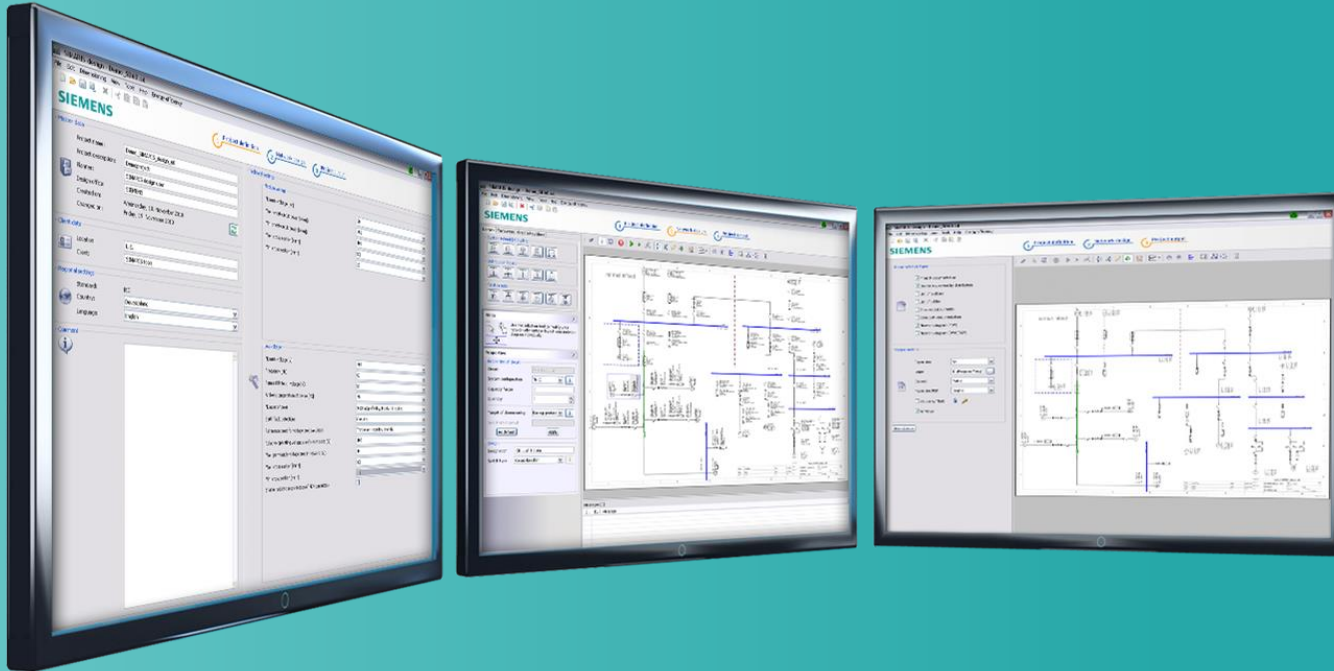

More about SIMARIS

- > SIMARIS planning tools
- > Totally Integrated Power
- > Disclaimer
- > Contact

1

Introduction

2

Getting started

3

Network design

4

Dimensioning

5

Project output

6

More about SIMARIS

Unrestricted © Siemens 2020

Page 111

July 2020



Start

1

2

3

4

5

6



[siemens.com/simaris](https://www.siemens.com/simaris)

In the SIMARIS design software, you will find more useful information about how to familiarize with the program and how to handle it efficiently. Click the menu item "**Help**" to access

- the Technical Manual for SIMARIS design and SIMARIS project.

More information about **SIMARIS design** and the other tools of the SIMARIS family...


- **SIMARIS project** for determining the space requirements of distribution boards and the budget, and for generating specifications (bills of quantities)
- **SIMARIS curves** for displaying characteristic device curves and visualising parameter settings
- **SIMARIS Online Toolbox** with practical calculation tools for the daily business

can be found at: www.siemens.com/simaris

This website offers you a lot more information and interesting news about the SIMARIS planning tools.

The contact page, where you can find all regional contact partners for the SIMARIS planning tools, is also available at www.siemens.com/simaris/contact.

**SIMARIS
design**

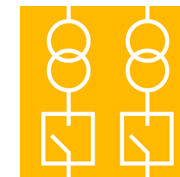

**SIMARIS
project**



**SIMARIS
curves**



Electrical Power Distribution for a Building

for Infrastructure and Industry

By clicking you
will get detailed
technical
information:

Medium-Voltage
Switchgear

Medium-Voltage
Protection
Technology

Power Quality

Transformers

Busbar Trunking
Systems

Low-Voltage
Switchboards

Distribution Boards

Protection,
Switching,
Measuring and
Monitoring Devices

Switching Devices
for Industrial Loads

Power Monitoring
Software

Energy
Management for
Industrial
Applications



Using SIMARIS planning tools you always rely on **Totally Integrated Power** – the intelligent concept for integrated power distribution in commercial, institutional and industrial buildings, ranging from the medium voltage level to the socket outlet. This technology platform comprises tools and support for planning and configuring power distribution systems, a well-matched, comprehensive product and systems portfolio and the communications option to link power distribution to higher-level HMI, monitoring / control and management systems. This way, you can attain noticeable saving potentials throughout the entire project cycle – from investment and planning to building installation and operation.

www.siemens.com/tip-cs



Subject to changes and errors. The information given in this document only contains general descriptions and/or performance features which may not always specifically reflect those described, or which may undergo modification in the course of further development of the products. The requested performance features are binding only when they are expressly agreed upon in the concluded contract.

All product designations, product names, etc. may contain trademarks or other rights of Siemens AG, its affiliated companies or third parties. Their unauthorized use may infringe the rights of the respective owner.



Published by Siemens AG
SIMARIS Planning Tools
SI DS S TIP CTT
Mozartstraße 31c
91052 Erlangen
Germany

E-Mail:
simaris.tip.energy@siemens.com

Regional SIMARIS contact partners:
siemens.com/simaris/contact

siemens.com/simarisdesign

For the U.S. published by
Siemens AG

Siemens Industry Inc.
100 Technology Drive
Alpharetta, GA 30005
United States