

Installation, Operation, and Maintenance

Split System Air Conditioners Odyssey™


Air Handler — 5 to 25 Tons

Model (60 Hz)

TWE0604*A/B
TWE0724*B
TWE0904*A/B
TWE1204*A/B
TWE1504*B
TWE1804*B
TWE2404*B
TWE3004*B

Model (50 Hz)

TWE0514DA
TWE0724DB
TWE0764DA/B
TWE1014DA/B
TWE1264DB
TWE1564DB
TWE2014DB
TWE2514DB

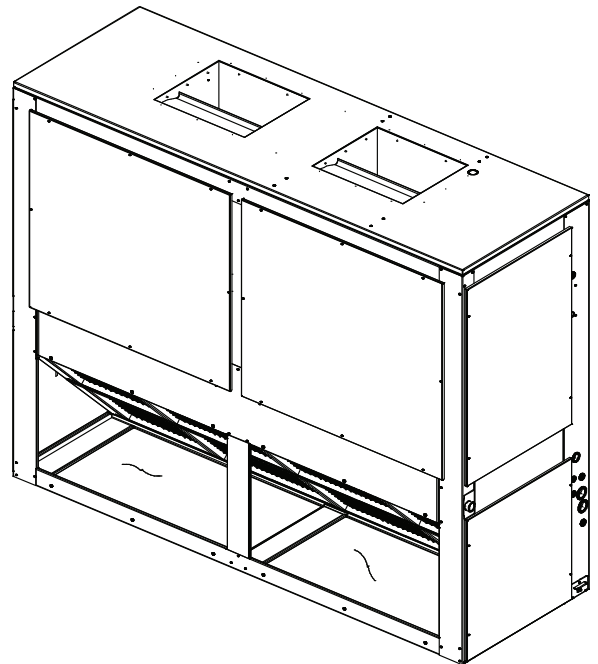

⚠ SAFETY WARNING

Only qualified personnel should install and service the equipment. The installation, starting up, and servicing of heating, ventilating, and air-conditioning equipment can be hazardous and requires specific knowledge and training. Improperly installed, adjusted or altered equipment by an unqualified person could result in death or serious injury. When working on the equipment, observe all precautions in the literature and on the tags, stickers, and labels that are attached to the equipment.

August 2017

SSA-SVX06G-EN

IR Ingersoll Rand®

Introduction

Read this manual thoroughly before operating or servicing this unit.

Warnings, Cautions, and Notices

Safety advisories appear throughout this manual as required. Your personal safety and the proper operation of this machine depend upon the strict observance of these precautions.

The three types of advisories are defined as follows:



WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It could also be used to alert against unsafe practices.

NOTICE

Indicates a situation that could result in equipment or property-damage only accidents.

Important Environmental Concerns

Scientific research has shown that certain man-made chemicals can affect the earth's naturally occurring stratospheric ozone layer when released to the atmosphere. In particular, several of the identified chemicals that may affect the ozone layer are refrigerants that contain Chlorine, Fluorine and Carbon (CFCs) and those containing Hydrogen, Chlorine, Fluorine and Carbon (HCFCs). Not all refrigerants containing these compounds have the same potential impact to the environment. Trane advocates the responsible handling of all refrigerants-including industry replacements for CFCs and HCFCs such as saturated or unsaturated HFCs and HCFCs.

Important Responsible Refrigerant Practices

Trane believes that responsible refrigerant practices are important to the environment, our customers, and the air conditioning industry. All technicians who handle refrigerants must be certified according to local rules. For the USA, the Federal Clean Air Act (Section 608) sets forth the requirements for handling, reclaiming, recovering and recycling of certain refrigerants and the equipment that is used in these service procedures. In addition, some states or municipalities may have additional requirements that must also be adhered to for responsible management of refrigerants. Know the applicable laws and follow them.

⚠ WARNING

Proper Field Wiring and Grounding Required!

Failure to follow code could result in death or serious injury.

All field wiring **MUST** be performed by qualified personnel. Improperly installed and grounded field wiring poses **FIRE** and **ELECTROCUTION** hazards. To avoid these hazards, you **MUST** follow requirements for field wiring installation and grounding as described in NEC and your local/state/national electrical codes.

⚠ WARNING

Personal Protective Equipment (PPE) Required!

Failure to wear proper PPE for the job being undertaken could result in death or serious injury. Technicians, in order to protect themselves from potential electrical, mechanical, and chemical hazards, **MUST** follow precautions in this manual and on the tags, stickers, and labels, as well as the instructions below:

- Before installing/servicing this unit, technicians **MUST** put on all PPE required for the work being undertaken (Examples; cut resistant gloves/sleeves, butyl gloves, safety glasses, hard hat/bump cap, fall protection, electrical PPE and arc flash clothing). **ALWAYS** refer to appropriate Material Safety Data Sheets (MSDS)/Safety Data Sheets (SDS) and OSHA guidelines for proper PPE.
- When working with or around hazardous chemicals, **ALWAYS** refer to the appropriate MSDS/SDS and OSHA/GHS (Global Harmonized System of Classification and Labelling of Chemicals) guidelines for information on allowable personal exposure levels, proper respiratory protection and handling instructions.
- If there is a risk of energized electrical contact, arc, or flash, technicians **MUST** put on all PPE in accordance with OSHA, NFPA 70E, or other country-specific requirements for arc flash protection, **PRIOR** to servicing the unit. **NEVER PERFORM ANY SWITCHING, DISCONNECTING, OR VOLTAGE TESTING WITHOUT PROPER ELECTRICAL PPE AND ARC FLASH CLOTHING. ENSURE ELECTRICAL METERS AND EQUIPMENT ARE PROPERLY RATED FOR INTENDED VOLTAGE.**

⚠ WARNING**Follow EHS Policies!**

Failure to follow instructions below could result in death or serious injury.

- All Ingersoll Rand personnel must follow Ingersoll Rand Environmental, Health and Safety (EHS) policies when performing work such as hot work, electrical, fall protection, lockout/tagout, refrigerant handling, etc. All policies can be found on the [BOS site](#). Where local regulations are more stringent than these policies, those regulations supersede these policies.
- Non-Ingersoll Rand personnel should always follow local regulations.

⚠ WARNING**Refrigerant under High Pressure!**

Failure to follow instructions below could result in an explosion which could result in death or serious injury or equipment damage.

System contains oil and refrigerant under high pressure. Recover refrigerant to relieve pressure before opening the system. See unit nameplate for refrigerant type. Do not use non-approved refrigerants, refrigerant substitutes, or refrigerant additives.

⚠ WARNING**Explosion Hazard!**

Failure to follow instructions below could result in an explosion which could result in death or serious injury, and equipment damage.

NEVER bypass system safeties in order to pump down the unit component's refrigerant into the microchannel heat exchanger (MCHE) coil. Do **NOT** depress the compressor contactor since it effectively bypasses the high-pressure control.

Copyright

This document and the information in it are the property of Trane, and may not be used or reproduced in whole or in part without written permission. Trane reserves the right to revise this publication at any time, and to make changes to its content without obligation to notify any person of such revision or change.

Trademarks

All trademarks referenced in this document are the trademarks of their respective owners.

Revision History

- Model number structure changed to enable configure to order.
- Removed Electrical Data tables – please use model number nameplate and submittals for specific model electrical data information. For all model information, please use the product catalog.
- Weights have been updated.
- Warranty has been included.
- Minor running edits included.

Table of Contents

Model Number Description	5	Standard Units	25
Air Handler	5	SZVAV Units	25
General Information	6	2-Speed VFD Units	26
Unit Description	6	Minimum Supply Fan Output	27
Pre-Installation	7	Electrical Connections	27
Unit Inspection	7	Setpoints	28
Inspection Checklist	7	EDC Switch Wiring	29
Testing for Leaks	7	Heating and Cooling Setpoint	
Lifting Recommendations	7	Arbitration	29
Repositioning Drain Pan	7	Checkout Procedure	30
Field Conversion to 460 Volt	9	Installation Checklist	30
Converting Motor to 460 Volt	9	Thermostat and Control	
Refrigerant Piping	9	Connections	31
Reorienting Evaporator Coil		Electromechanical Controls	31
(TWE126/150 and 156/180)	9	ReliaTel Controls	31
Preparation for Refrigerant		Start-Up	33
Piping	10	Sequence of Operation	33
Installations, Limitations and		Variable Air Volume Applications	
Recommendations	10	(SZVAV)	33
Clearances	11	2-Speed VFD Applications	34
Dimensional Data	12	Maintenance	35
Weights	21	Fan Belt Adjustment	35
Air Handler	21	Monthly	36
Installation	23	Annually (Cooling Season)	37
Horizontal Suspension	23	Coil Cleaning	37
Leveling	23	Maintenance Log	38
Auxiliary Drain Pan	23	Wiring Diagram Matrix	39
Refrigerant Piping	23	Warranty	41
Condensate Piping	24	Central Air Conditioner	41
Filter Replacement	25	Commercial Equipment Rated 20 Tons	
Duct Connections	25	and Larger and Related Accessories	
Air Flow Settings	25	(Parts Only)	41

Model Number Description

Air Handler

Digit 1–3 — Unit Function

TWE = Air Handler

Digit 4–6 — Tonnage

051 = 4.6 Tons (50Hz)
060 = 5 Tons (50Hz)
072 = 6 Tons (60Hz)(50Hz)
076 = 6.25 Tons (50Hz)
090 = 7.5 Tons (60Hz)
101 = 8.33 Tons (50Hz)
120 = 10 Tons (60Hz)
126 = 10.4 Tons (50Hz)
150 = 12.5 Tons (60Hz)
156 = 13.0 Tons (50Hz)
180 = 15 Tons (60Hz)
201 = 16.7 Tons (50Hz)
240 = 20 Tons (60Hz)
251 = 20.9 Tons (50Hz)
300 = 25 Tons (60Hz)

Digit 7 — Refrigerant

4 = R-410A

Digit 8 — Voltage

1 = 208-230VAC - 1 PH (60Hz)
3 = 208-230VAC - 3 PH (60Hz)
4 = 460VAC - 3 PH (60Hz)
W = 575VAC - 3 PH (60Hz)
D = 380–415VAC - 3 PH (50Hz)
K = 380VAC - 3 PH (60Hz)

Digit 9 — Refrigeration Circuit/Stage

A = Single Circuit
B = Dual Circuit

Digit 10 — Major Design Sequence

A = Rev A

Digit 11 — Minor Design Sequence

A = Rev A

Digit 12–13 — Service Digits

00 = 00

Digit 14 — Efficiency Generation

A = Generation A (2018 DOE)

Digit 15 — Controls

0 = Constant Volume
A = 2 Stage Airflow (Electromechanical Cond Only)
B = Single Zone VAV (ReliaTel Cond Only)

Digit 16 — Indoor Fan Sizes

0 = Standard Motor
4 = High Static – A (Oversized Motor for VFD Units)

Digit 17–40 — None

0 = None

General Information

This manual describes proper installation, operation, and maintenance procedures for air cooled systems. By carefully reviewing the information within this manual and following the instructions, the risk of improper operation and/or component damage will be minimized. It is important that periodic maintenance be performed to help assure trouble free operation. Should equipment failure occur, contact a qualified service organization with qualified, experienced HVAC technicians to properly diagnose and repair this equipment.

Important: *All phases of this installation must comply with the NATIONAL, STATE & LOCAL CODES. In addition to local codes, the installation must conform with National Electric Code -ANSI/NFPA NO. 70 LATEST REVISION.*

Any individual installing, maintaining, or servicing this equipment must be properly trained, licensed and qualified.

Important: *Do not remove the VFD without first contacting technical support! For performance-related questions and diagnostic support in North America call 1-877-872-6363. Any return requires a claim number FIRST. Removal of the VFD prior to this step will void the unit's warranties.*

Installation procedures should be performed in the sequence that they appear in this manual. Do not destroy or remove the manual from the unit. The

manual should remain weather-protected with the unit until all installation procedures are complete.

Note: *It is not the intention of this manual to cover all possible variations in systems that may occur or to provide comprehensive information concerning every possible contingency that may be encountered during an installation. If additional information is required or if specific problems arise that are not fully discussed in this manual, contact your local sales office.*

Use the installation checklist provided In this manual to verify that all necessary installation procedures have been completed. Do not use the checklist as a substitute for reading the information contained in the manual. Read the entire manual before beginning installation procedures.

Unit Description

These air handler models incorporate a single slab coil assembly, improved application flexibility, servicing, maintenance accessibility and an improved accessory line. They are fully convertible, (vertical to horizontal discharge) without field removal of the coil assembly. They are shipped ready for horizontal installation.

All units have one drain pan that can be installed in any one of four positions. This allows for vertical or horizontal applications and right or left exit.

Important: *All dual circuit (digit 9 = B) have an intertwined coil, except for the 25 ton, TWE251 and TWE300 units.*

Pre-Installation

The final position for the air handler must be dictated by required service access to it, weight distribution over structural supports, and by the locations of electrical, refrigerant and condensate drainage connections. After this is determined, the following preparations should be made.

Unit Inspection

Inspect material carefully for any shipping damage. If damaged, it must be reported to, and claims made against the transportation company. Compare the information that appears on the unit nameplate with ordering and submittal data to ensure the proper unit was shipped. Available power supply must be compatible with electrical characteristics specified on component nameplates. Replace damaged parts with authorized parts only.

Inspection Checklist

To protect against loss due to damage incurred in transit, complete the following checklist upon receipt of the unit.

- ☐ Inspect individual pieces of the shipment before accepting the unit. Check for obvious damage to the unit or packing material.
- ☐ Inspect the unit for concealed damage before it is stored and as soon as possible after delivery. Concealed damage must be reported within 15 days. If concealed damage is discovered, stop unpacking the shipment. Do not remove damaged material from the receiving location. Take photos of the damage if possible. The owner must provide reasonable evidence that the damage did not occur after delivery.
- ☐ Notify the carrier's terminal of damage immediately by phone and by mail. Request an immediate joint inspection of the damage by the carrier and the consignee.
- ☐ Notify the sales representative and arrange for repair. Do not repair the unit until the damage is inspected by the carrier's representative.

Testing for Leaks

All TWE units are shipped with a holding charge of nitrogen in each circuit and should be leak tested before installation.

1. Remove the access panel.
2. Locate the liquid line or suction line access valve for each circuit.
3. Install gauges to determine if the circuits are still pressurized. If not, the charge has escaped and should be repaired as required to obtain a leak-free circuit.

Lifting Recommendations

⚠ WARNING

Improper Unit Lift!

Failure to properly lift unit could result in unit dropping and possibly crushing operator/ technician which could result in death or serious injury, and equipment or property-only damage. Test lift unit approximately 24 inches (61 cm) to verify proper center of gravity lift point. To avoid dropping of unit, reposition lifting point if unit is not level.

NOTICE

Equipment Damage!

Use spreader bars to prevent straps from damaging the unit. Install the bars between lifting straps, both underneath the unit and above the unit to prevent the straps from crushing the unit cabinet or damaging the finish.

Before preparing the unit for lifting, estimate the approximate center of gravity for lifting safety. Because of placement of internal components, the unit weight may be unevenly distributed. See *"Weights,"* p. 21 for approximate unit weights.

The crated unit can be moved using a forklift of suitable capacity. For lifting the unit into an elevated mounting position, run lifting straps or slings under the unit and attach securely to the lifting device.

Repositioning Drain Pan

Air handlers come with one drain pan that can be installed in any one of four positions; this allows for vertical or horizontal application and right or left condensate line connection.

Note: Important! All air handlers are shipped with the drain pan installed in the horizontal position and the connection on the left side (as shown in *Figure 1, p. 8*). If an alternate position is required, the drain pan should be repositioned before setting the air handler. Ensure there is enough clearance to the sides of the unit for repositioning the drain pan after installation.

1. Remove the access plate at the opposite end of the drain connection. This plate secures and lifts the back end of the drain pan for sloping. It must be removed before the drain pan can be removed. This is done as follows:
 - a. Remove the screw
 - b. Lift the access plate up
 - c. Pull the plate out. If the drain pan is to be moved to the vertical position also remove the other

two access plates.

2. Remove the screw securing the drain pan.
 - a. Lift the pan up
 - b. Slide the pan out
3. Install the drain pan into the new position.
 - a. Slide the drain pan into the opening
 - b. Lift the drain pan up
 - c. Push it in all the way
 - d. Drop it down over the lip of the opening, secure with screw
4. Install the access plate on the opposite end of the drain pan.
 - a. Slide the edge of the access plate under the drain pan
 - b. Lift the access plate and drain pan up
 - c. Push the access plate in
 - d. Drop the access plate down over the lip of the opening, secure with screw

Note: If the drain pan is being moved to the vertical position, install the other access plates over the horizontal position opening

Figure 1. Drain pan location


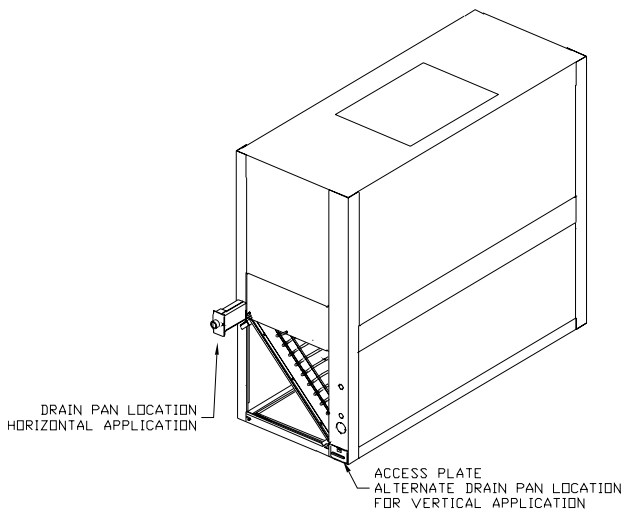


Figure 2. Drain pan relocation

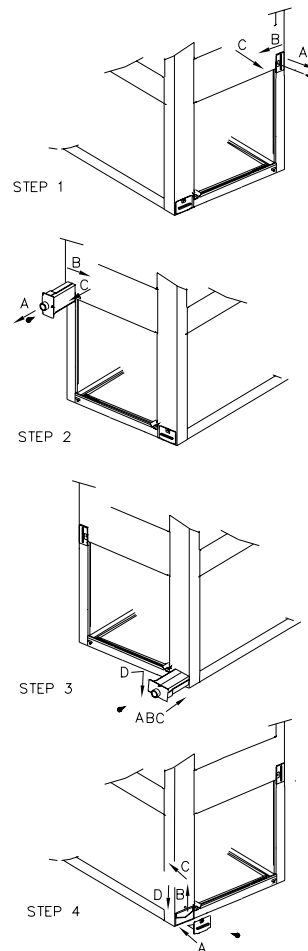

NOTICE

System Component Damage!

These air handlers are shipped with a dry nitrogen holding charge in the coil. Depress or remove the access valve cone to bleed off the nitrogen prior to brazing. Temporarily cap off tubes if the refrigerant line connections are to be made later.

Field Conversion to 460 Volt

⚠ WARNING

Hazardous Voltage w/Capacitors!

Failure to disconnect power and discharge capacitors before servicing could result in death or serious injury.

Disconnect all electric power, including remote disconnects and discharge all motor start/run capacitors before servicing. Follow proper lockout/tagout procedures to ensure the power cannot be inadvertently energized. For variable frequency drives or other energy storing components provided by Trane or others, refer to the appropriate manufacturer's literature for allowable waiting periods for discharge of capacitors. Verify with an appropriate voltmeter that all capacitors have discharged.

For additional information regarding the safe discharge of capacitors, see PROD-SVB06-EN.*

⚠ WARNING

Proper Field Wiring and Grounding Required!

Failure to follow code could result in death or serious injury.

All field wiring **MUST** be performed by qualified personnel. Improperly installed and grounded field wiring poses FIRE and ELECTROCUTION hazards. To avoid these hazards, you **MUST** follow requirements for field wiring installation and grounding as described in NEC and your local/state/national electrical codes.

- Available power supply must agree with electrical data on component nameplate.
- Some standard air handlers are shipped wired for 208-230 volt applications and can be converted for 460 volt by rewiring the blower motor. (This includes models TWE07243B, TWE09043A, TWE09043B, TWE12043A, TWE12043B, TWE15043B and TWE18043B).

Converting Motor to 460 Volt

1. Ensure power is disconnected to unit by following the warning above.
2. Remove unit access panels closest to motor.
3. Open terminal cover on lead end of motor.
4. Pull voltage selector plug from low voltage selection (see Figure 3, p. 9).
5. Shift the plug (or rotate 180°) to align plug for high voltage selection and re-insert plug.


Important: When re-inserting voltage selection plug, ensure it is fully seated.

6. Replace terminal cover on lead end of motor.
7. Replace unit access panels.


Figure 3. Voltage change plug

VIEW OF TERMINAL END

To change voltage, pull plug, rotate 180° and reinsert

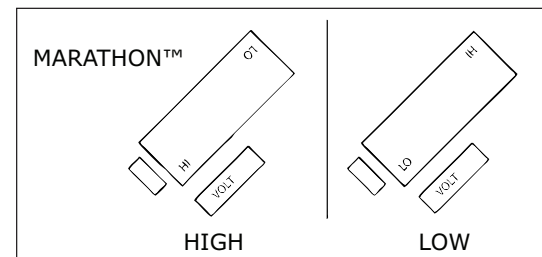

To change voltage, pull selector plug out, shift plug to align arrow to 460V for high voltage or 230V for low voltage as desired. Push plug back in.

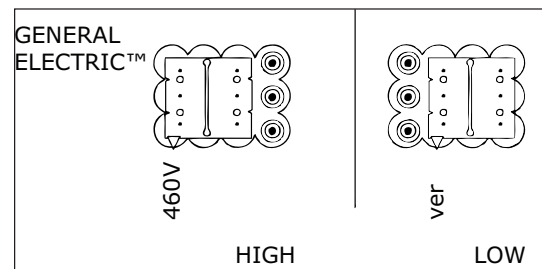

Connect lines to L1, L2, L3

To reverse rotation, interchange any two line connections


Refrigerant Piping

Reorienting Evaporator Coil (TWE126/150 and 156/180)

Important: Applies to TWE126/150 and 156/180 when positioned for vertical upflow. Unit is shipped in the horizontal position. If installing in the **vertical position**, the coil **must be reoriented by rotating the coil 4 degrees (control box side) from the shipped position.**

1. Remove screws from top evaporator coil bracket (bracket that attaches coil to cabinet and runs the length of the unit). See Figure 4, p. 10.
2. Rotate evaporator coil approximately 4 degrees clockwise - looking from the control box end. When the evaporator coil is rotated, the lower set of evaporator coil bracket holes will align with the support bracket (from which it was originally fastened).
3. Reinsert screws in evaporator coil bracket.

Figure 4. Evaporator coil reorientation for TWE126, 150, 156, 180

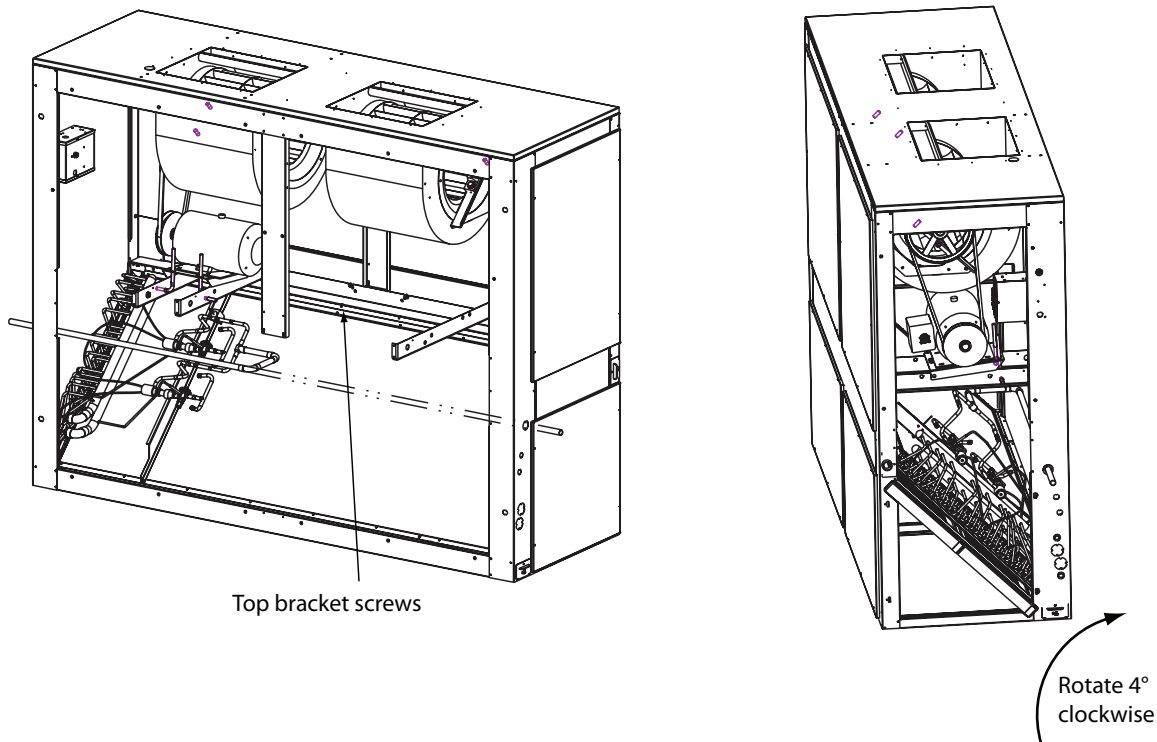

Preparation for Refrigerant Piping

NOTICE

Equipment Damage!

Do not apply heat to remove seal caps until the gauge port cores have been removed. If seal caps are intact, application of heat may generate excessive pressure in the unit and result in damage to the coil or expansion valve.

The air handler is designed so that refrigerant piping can enter from either the right or left hand side. It is shipped with the intent that the refrigerant lines will enter from the left hand side. To convert to right hand entry, unbraid the elbow on the suction line and rotate 180° and rebraze.

Important: Access to refrigerant lines is limited in all horizontal and some vertical applications. Therefore, refrigerant lines should be stubbed out and temporarily capped prior to setting the air handler. Protect adjacent surfaces from heat damage when brazing in and around the air handler.

Installations, Limitations and Recommendations

NOTICE

System Component Damage!

Properly insulate all refrigerant gas piping to prevent possible water damage due to condensation and to prevent capacity loss and possible compressor damage.

The general location of the air handler is normally selected by the architect, contractor and/or buyer. For proper installation, the following items must be considered:

- Available power supply must agree with electrical data on component nameplate.
- If external accessories are installed on the unit, additional clearances must be provided.
- All duct work should be properly insulated to prevent condensation and heat loss.
- Refrigerant gas piping must be insulated.

It is recommended that the outline drawings in the Dimensional Data section be studied and dimensions properly noted and checked against the selected installation site. By noting in advance which features are to be used, proper clearance allowances can be made for installation and possible future service.

Important: *When installing these units “free standing” with discharge grills and isolators, a top support with isolator should be added to prevent tipping. Support and isolator can be attached to a wall or other appropriate structure.*

If adding external accessories to the unit, additional clearances must be considered for the overall space needed.

For installation of accessories available for this air handler, follow the installation instructions that are shipped with each accessory.

Clearances


Allow the following minimum clearances for serviceability:

- Front and Back – 24 in (610 mm)
- Sides – 22 in (559 mm) for 5 - 10 ton units and 32 in (813 mm) for 12.5 - 25 ton units

Note: *See Dimensional Data for additional reference.*

Dimensional Data


Figure 5. Height, width and depth measurements

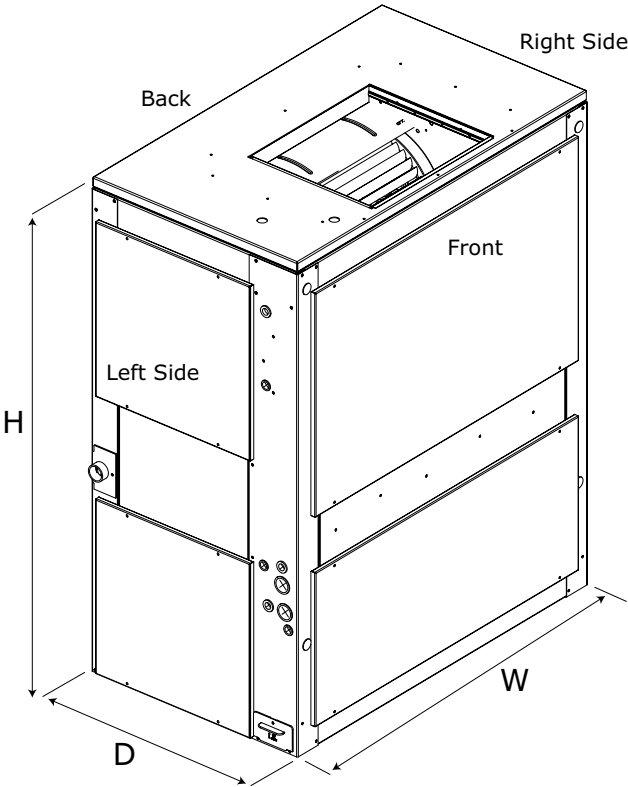

Model Number	H - in. (mm)	W - in. (mm)	D - in. (mm)
TWE051, 060	48-1/8 (1222.4)	39-5/8 (1006.5)	23-5/8 (600.0)
TWE072, 076, 090	54-1/8 (1374.8)	49-1/8 (1247.8)	26-1/2 (673.1)
TWE101, 120	54-1/8 (1374.8)	65-1/8 (1654.2)	26-1/2 (673.1)
TWE126, 150, 156, 180	69-1/8 (1756.0)	81-1/4 (2063.7)	30 (762.0)
TWE201, 240, 251, 300	71-7/8 (1806.6)	94-1/4 (2394.0)	32-1/8 (816.0)

Note: Full dimensional data is available on the following pages.

Figure 6. 4.6, 5 ton air handler, single circuit

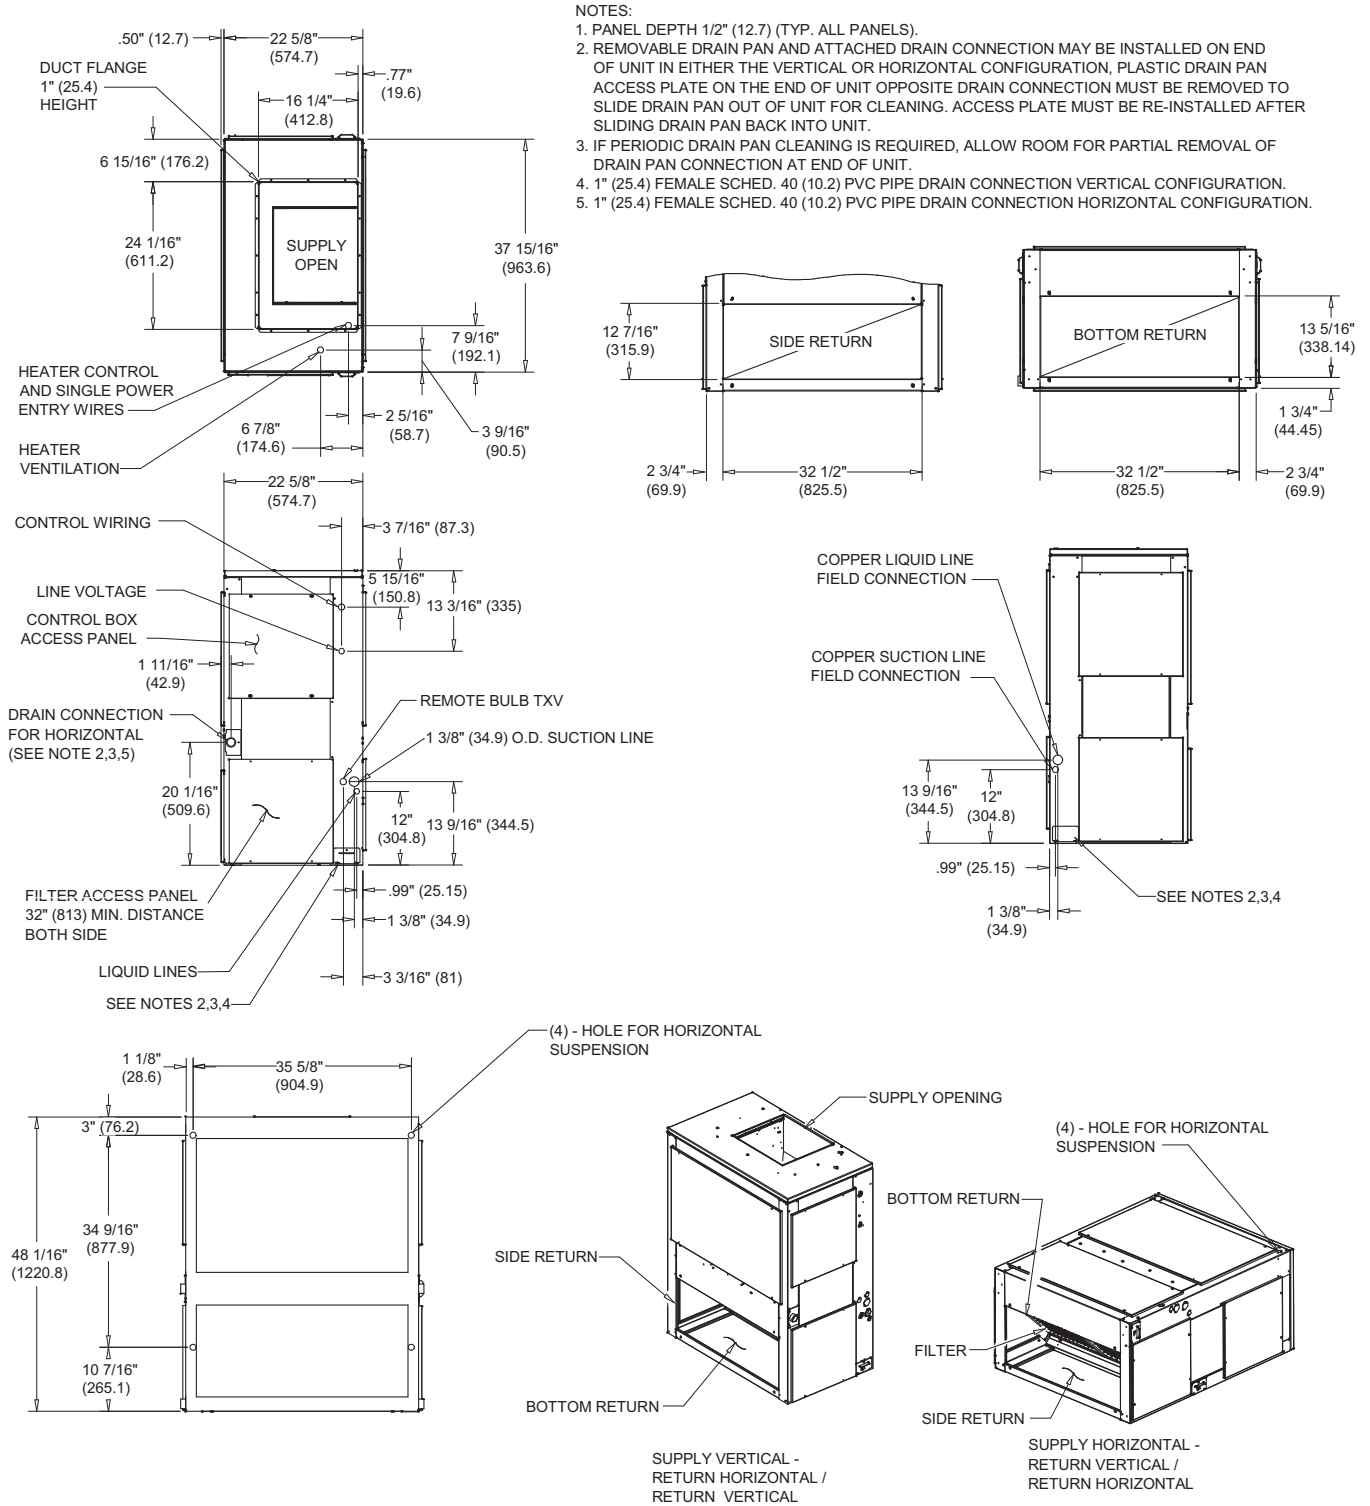

Dimensional Data

Figure 7. 5 ton air handler, dual circuit


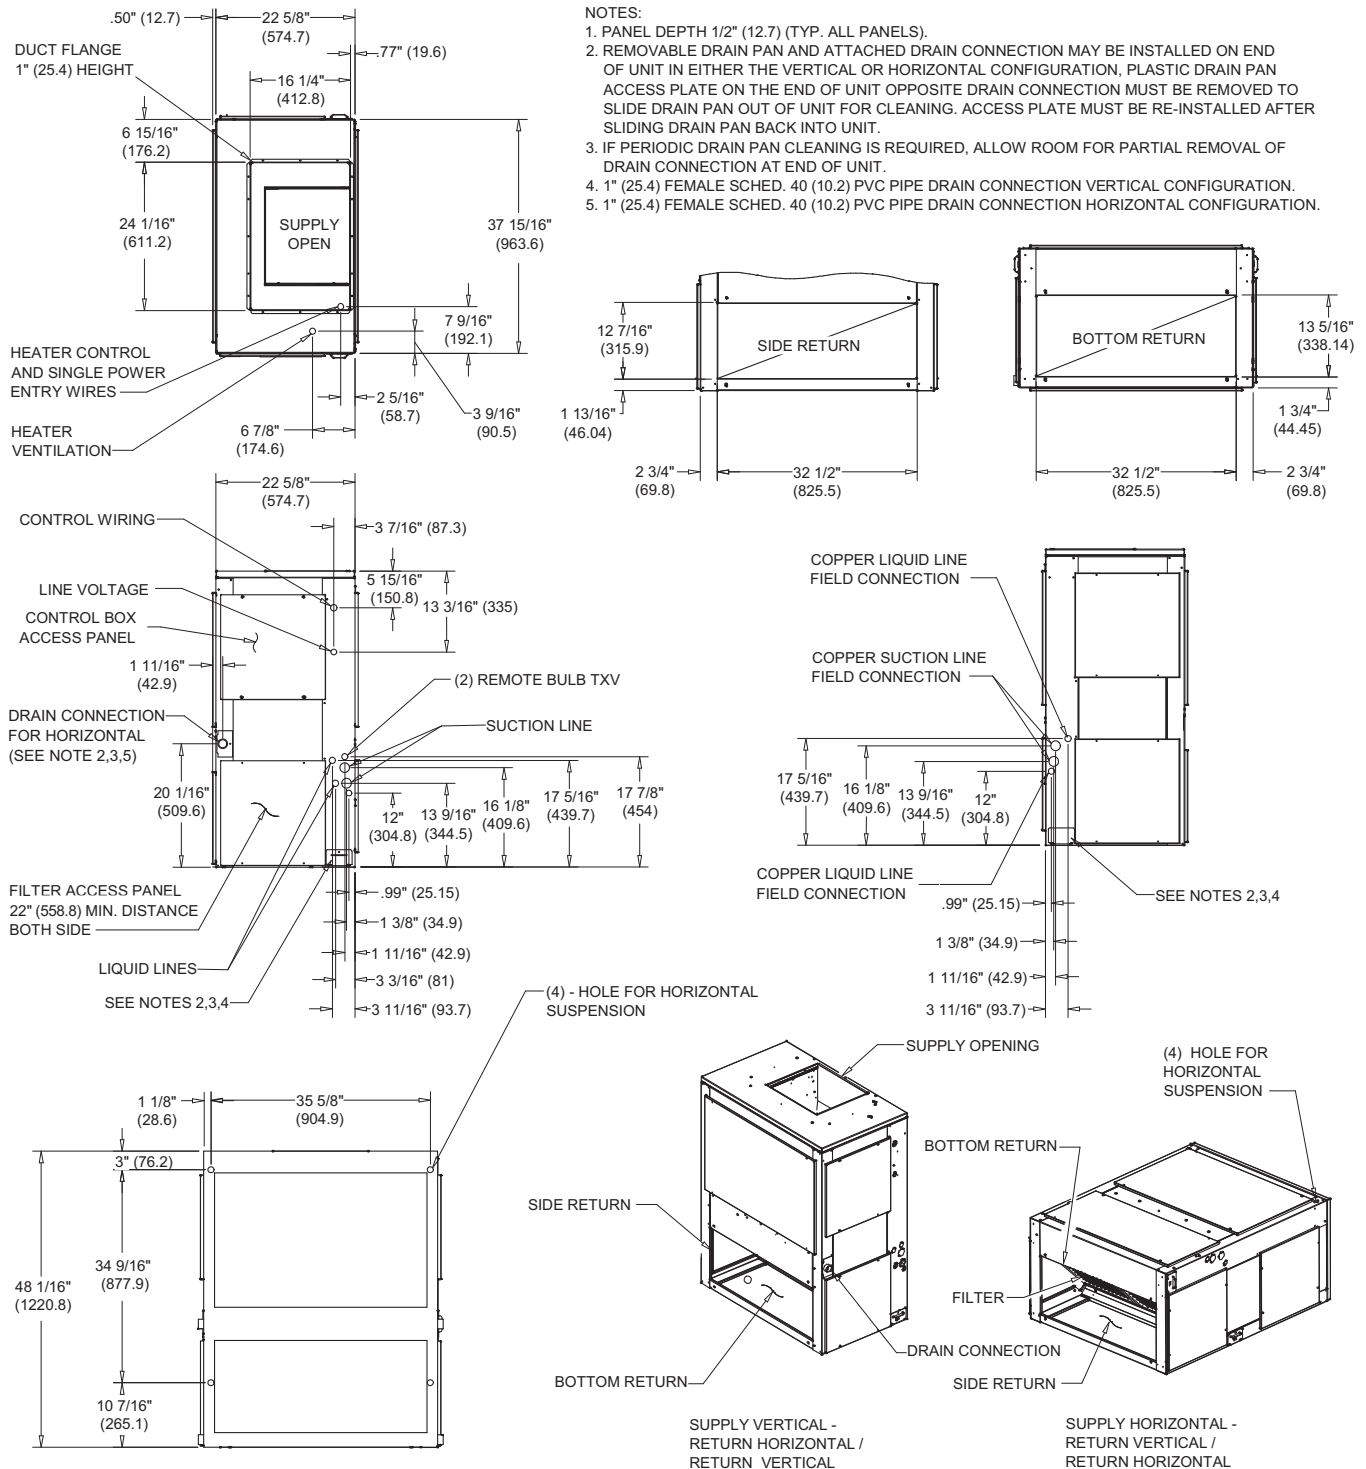


Figure 8. 6.25, 7.5 ton air handler, single circuit

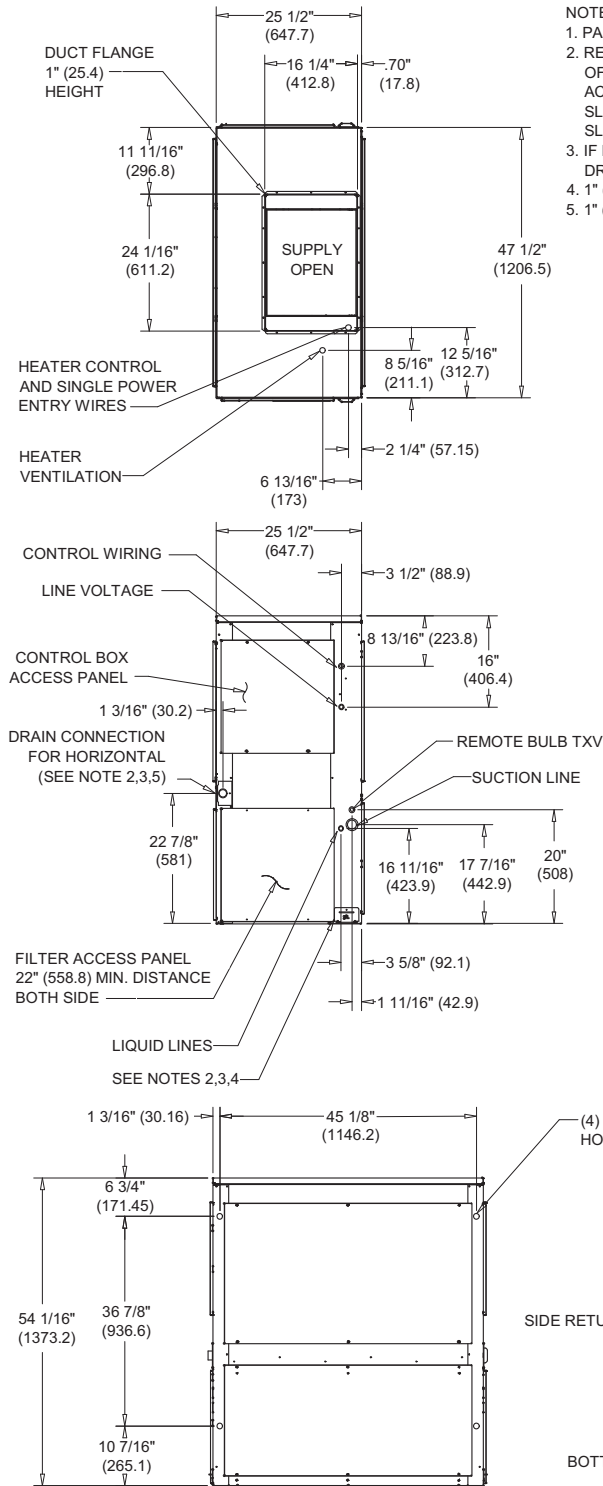

NOTES:

1. PANEL DEPTH 1/2" (12.7) (TYP. ALL PANELS).
2. REMOVABLE DRAIN PAN AND ATTACHED DRAIN CONNECTION MAY BE INSTALLED ON END OF UNIT IN EITHER THE VERTICAL OR HORIZONTAL CONFIGURATION, PLASTIC DRAIN PAN ACCESS PLATE ON THE END OF UNIT OPPOSITE DRAIN CONNECTION MUST BE REMOVED TO SLIDE DRAIN PAN OUT OF UNIT FOR CLEANING. ACCESS PLATE MUST BE RE-INSTALLED AFTER SLIDING DRAIN PAN BACK INTO UNIT.
3. IF PERIODIC DRAIN PAN CLEANING IS REQUIRED, ALLOW ROOM FOR PARTIAL REMOVAL OF DRAIN PAN CONNECTION AT END OF UNIT.
4. 1" (25.4) FEMALE SCHED. 40 (10.2) PVC PIPE DRAIN CONNECTION VERTICAL CONFIGURATION.
5. 1" (25.4) FEMALE SCHED. 40 (10.2) PVC PIPE DRAIN CONNECTION HORIZONTAL CONFIGURATION.

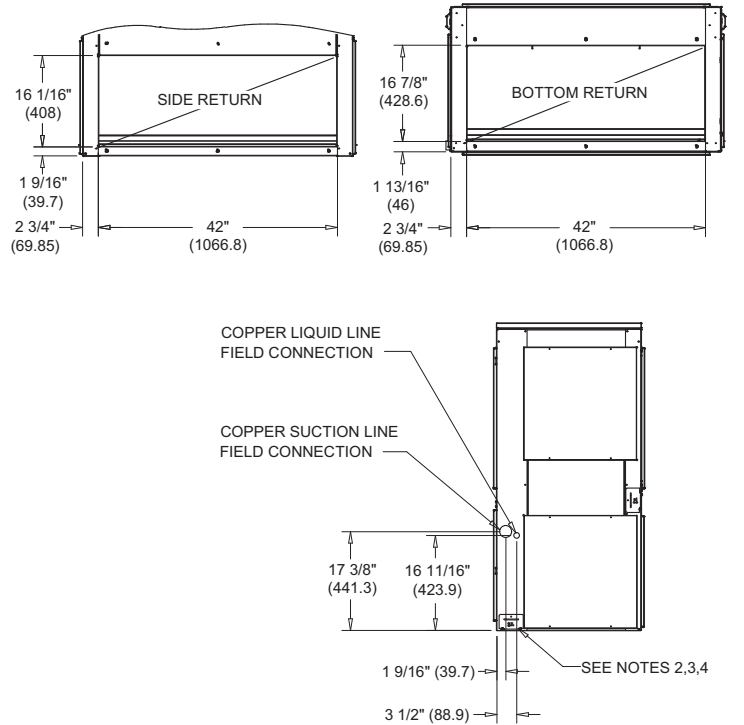


Figure 9. 6, 6.25, 7.5 ton air handler, dual circuit



Figure 10. 8.33, 10 ton air handler, single circuit

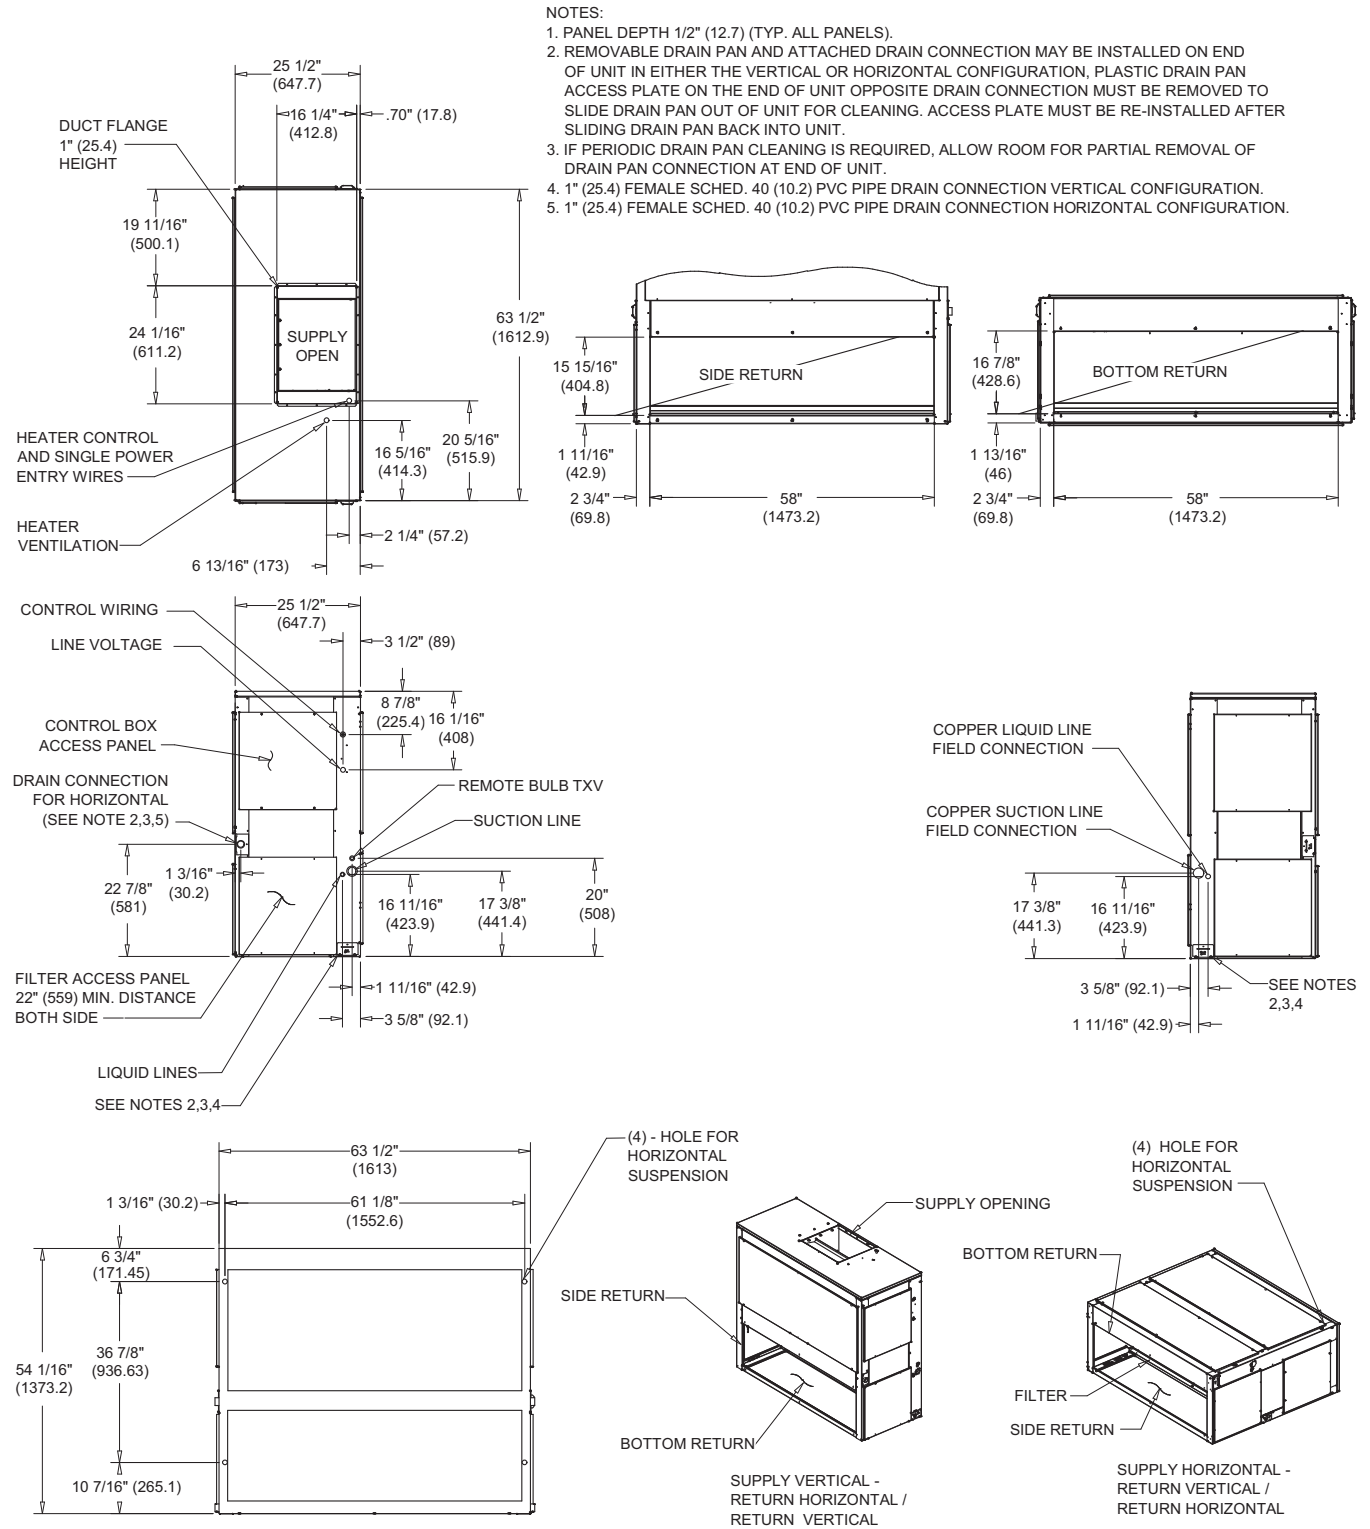


Figure 11. 8.33, 10 ton air handler, dual circuit


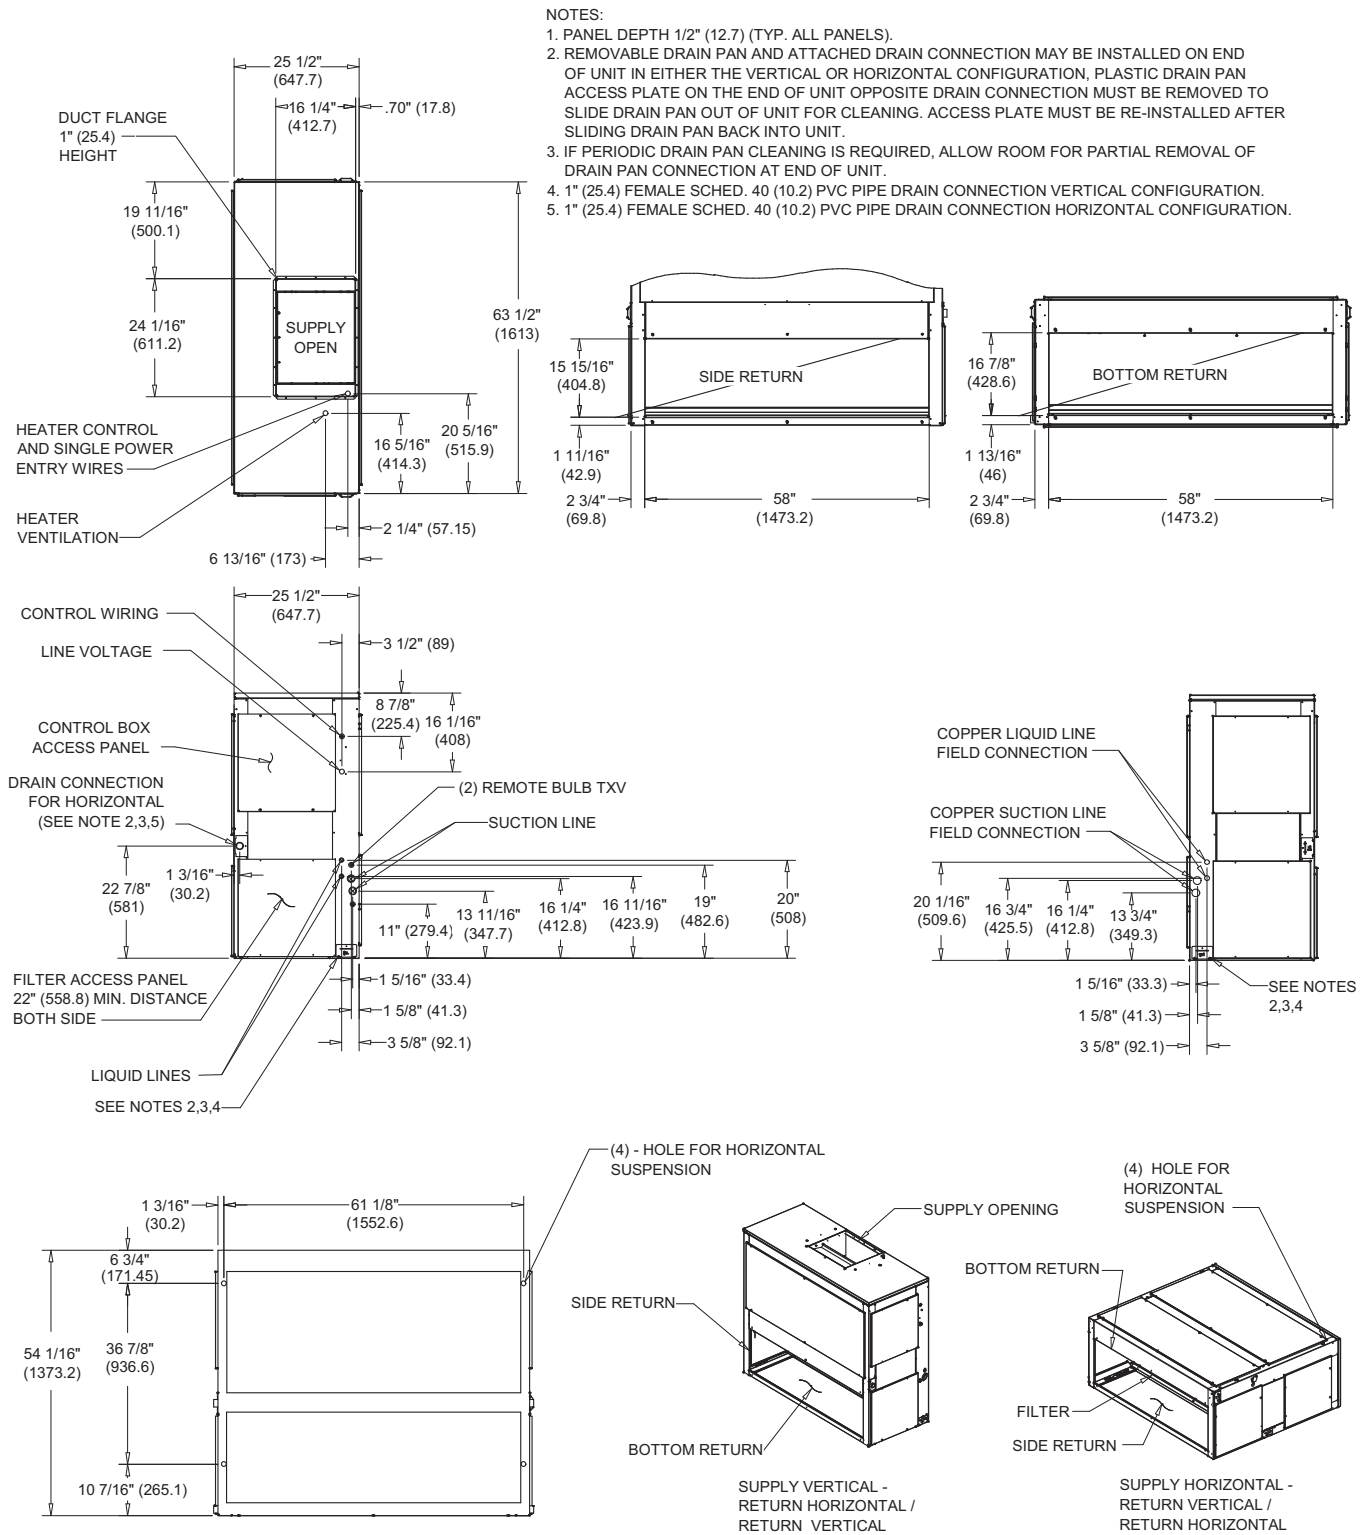


Figure 13. 16.7, 20.9, 20, 25 ton air handler, dual circuit

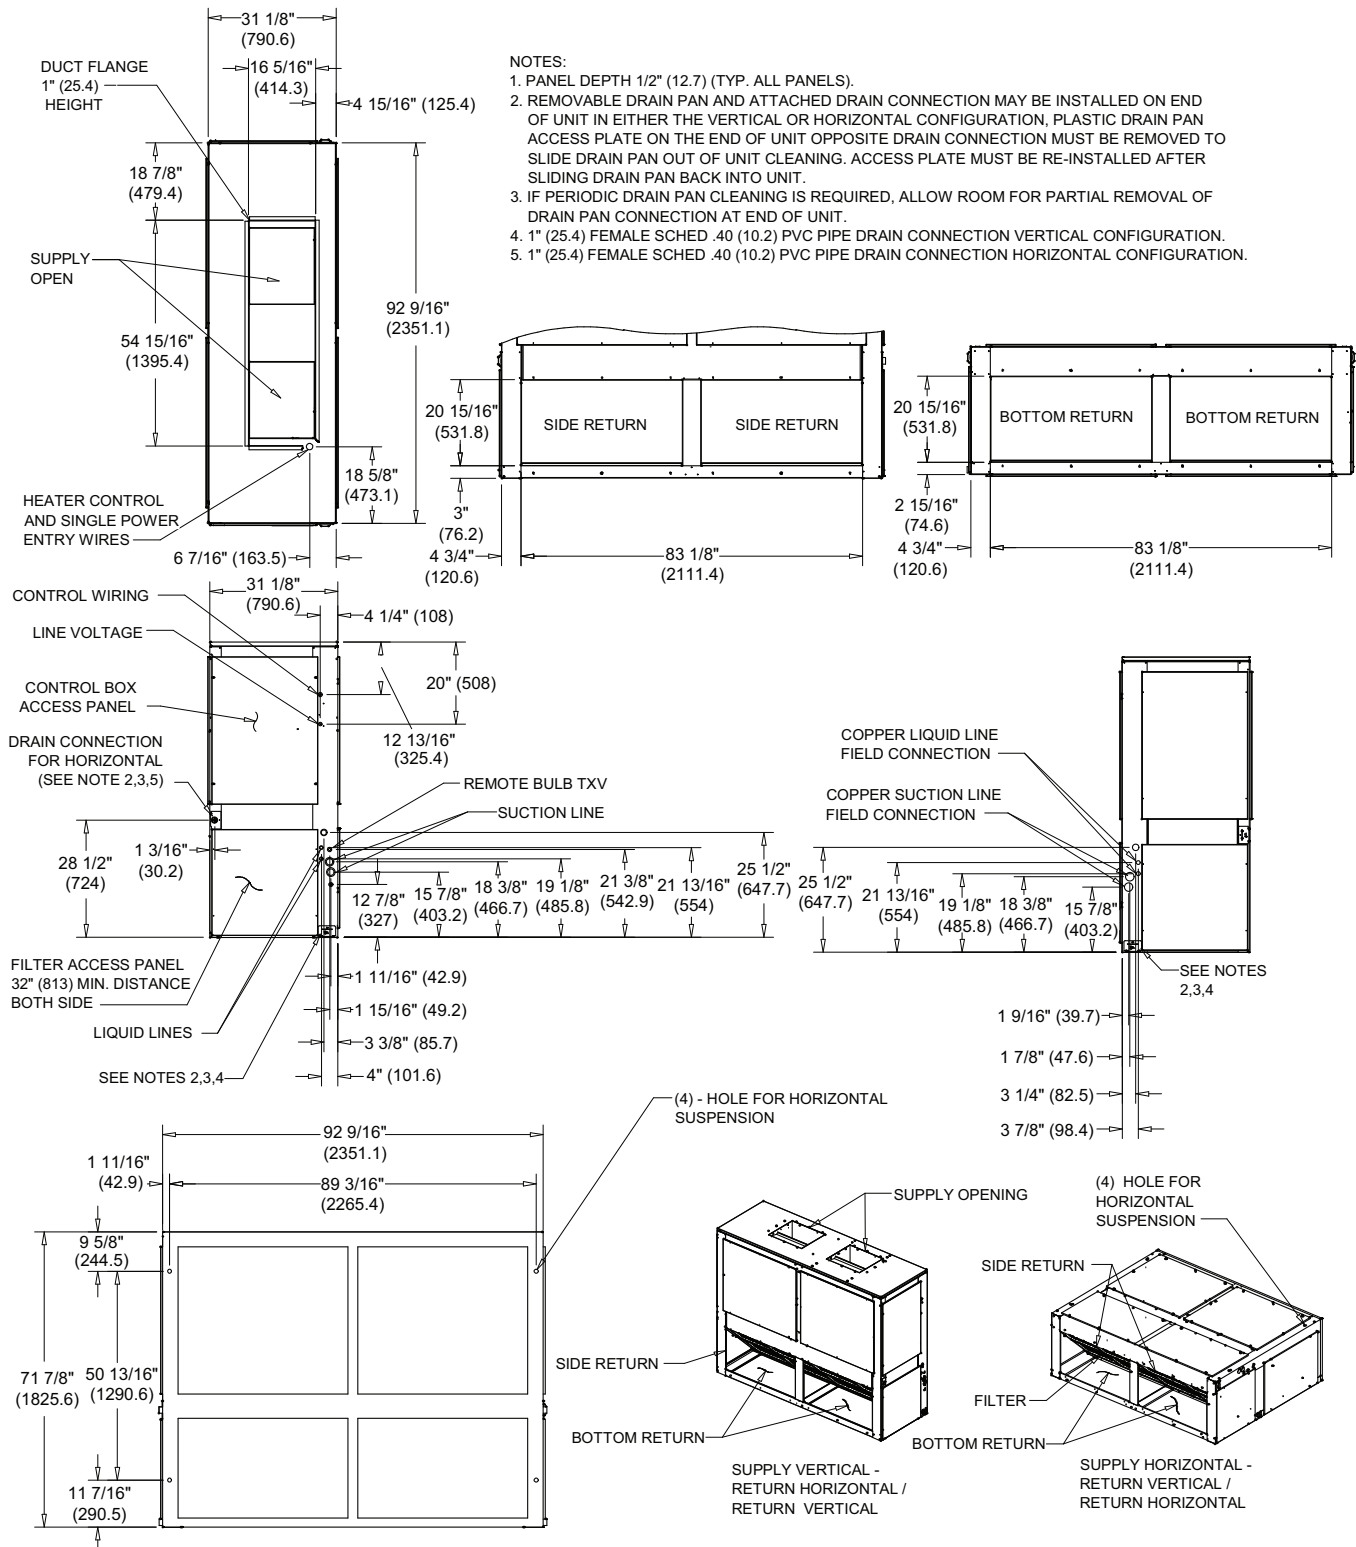

Weights

Air Handler

Table 1. Standard air handler (TWE) — unit and corner weights - (60 Hz)

Tons	Model Number	Shipping Max (lbs)	Net Max (lbs)	Corner Weights - Vertical				Corner Weights - Horizontal			
				1	2	3	4	1	2	3	4
5	TWE0604*A/B	285	232	55	71	51	55	54	67	50	61
6	TWE0724*B	385	323	67	99	75	82	56	92	87	88
7.5	TWE0904*A/B	385	323	67	99	75	82	56	92	87	88
10	TWE1204*A/B	441	393	77	121	110	85	79	118	77	119
12.5	TWE1504*B	753	676	168	192	181	135	196	164	145	171
15	TWE1804*B	752	675	167	192	181	135	196	163	145	171
20	TWE2404*B	912	818	258	168	161	231	256	181	146	235
25	TWE3004*B	993	899	211	229	184	275	272	176	228	223

Table 2. SZVAV and 2-Speed VFD air handler (TWE) — unit and corner weights - (60 Hz)

Tons	Model Number	Shipping Max (lbs)	Net Max (lbs)	Corner Weights - Vertical				Corner Weights - Horizontal			
				1	2	3	4	1	2	3	4
6	TWE0724*B	385	323	67	99	75	82	56	92	87	88
7.5	TWE0904*B	385	323	67	99	75	82	56	92	87	88
10	TWE1204*A/B	441	393	77	121	110	85	79	118	77	119
12.5	TWE1504*B	753	676	168	192	181	135	196	164	145	171
15	TWE1804*B	752	675	167	192	181	135	196	163	145	171
20	TWE2404*B	912	818	258	168	161	231	256	181	146	235
25	TWE3004*B	993	899	211	229	184	275	272	176	228	223

Table 3. Standard air handler (TWE) — unit and corner weights - (50 Hz)

Tons	Model Number	Shipping Max (lbs)	Net Max (lbs)	Corner Weights - Vertical				Corner Weights - Horizontal			
				1	2	3	4	1	2	3	4
4.6	TWE0514DA	285	232	55	71	51	55	54	67	50	61
6	TWE0724DB	385	323	67	99	75	82	56	92	87	88
6.25	TWE0764DA/B	385	323	67	99	75	82	56	92	87	88
8.33	TWE1014DA/B	441	393	77	121	110	85	79	118	77	119
10.4	TWE1264DB	753	676	168	192	181	135	196	164	145	171
13	TWE1564DB	752	675	167	192	181	135	196	163	145	171
16.7	TWE2014DB	912	818	258	168	161	231	256	181	146	235
20.9	TWE2514DB	993	899	211	229	184	275	272	176	228	223

Figure 14. Vertical — TWE051, 072, 076, 101, 060, 072, 090, 120

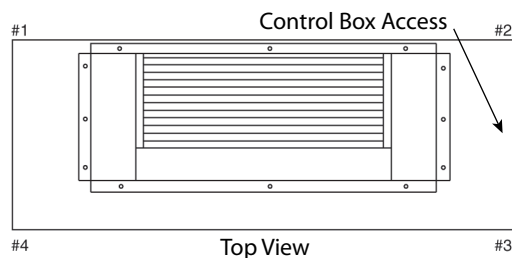


Figure 15. Vertical — TWE126, 156, 201, 251, 150, 180, 240, 300

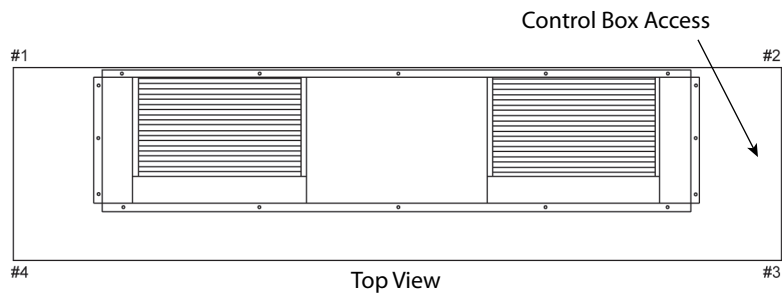


Figure 16. Horizontal — TWE051, 072, 076, 101, 060, 072, 090, 120


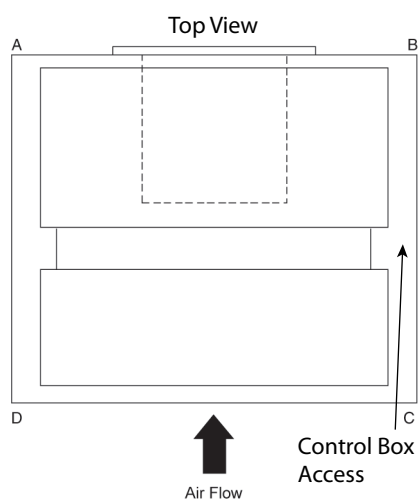


Figure 17. Horizontal — TWE126, 156, 201, 251, 150, 180, 240, 300

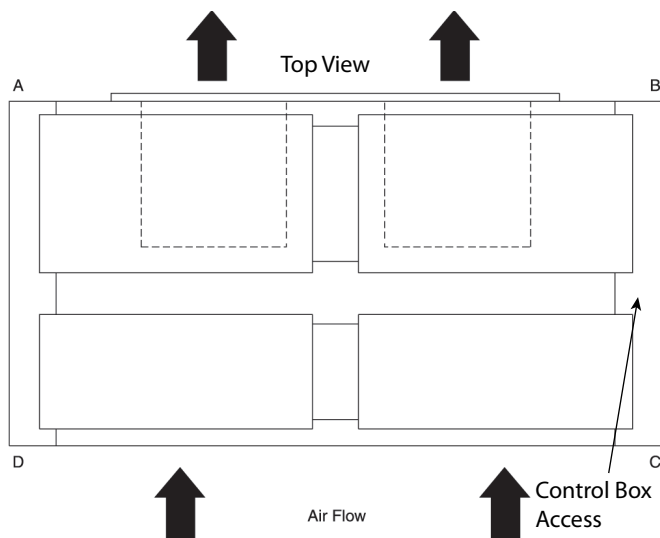

Installation

Horizontal Suspension

If the air handler will be suspended, use a suspension mounting kit to isolate the unit from the structure. This is usually accomplished with spring or rubber isolators, which are offered as an accessory.

Mounting rods must be field supplied. Isolator selection is dependent upon total unit weight including accessories — see “Weights,” p. 21 for approximate unit weights.

NOTICE

Equipment Damage!

Before hanging the unit on suspension rods, reinforce the cabinet around the suspension holes by using a large washer inside the cabinet. Washers should be between the skin of the air handler and the nut on the suspension rod.

Align holes in the cabinet with structural supports and secure suspension rods to the structure, then to the air handler cabinet. If hole locations do not permit proper alignment with existing structure, it may be necessary to field fabricate cross members on existing structural beams.

Note: When other than bottom return is to be used, side panel removal for return duct installation must be secured over the bottom opening.

Leveling

This air handler has a double sloped drain pan. In order to assure proper drainage along the length of the drain pan, it is important to have the unit properly leveled. Be sure the air handler is level.

Auxiliary Drain Pan

A field fabricated, auxiliary drain pan should be installed under the unit for all horizontal applications and when air handlers are installed above ceilings or in other locations where condensate overflow may cause damage.

This drain pan will eliminate any excess condensation that may be due to extreme humidity or an obstructed drain in the primary drain pan. Drain lines from this pan must be installed, but should not be connected to the primary drain line from the unit. Isolate the auxiliary drain pan from both the air handler and the structure.

Refrigerant Piping

Installation, brazing, leak testing and evacuation of refrigerant lines are covered in the installation instructions that shipped with the outdoor unit. Read the instructions before beginning installation of refrigerant lines.

NOTICE

Equipment Damage!

Ensure that the refrigerant lines passing through the cabinet are not resting on sharp sheet metal edges and that the bulb(s) are attached to the suction line of the same circuit.

1. Locate cloth bag(s) attached to the refrigerant tube of the coil that contains a stainless steel clamp and insulation material (approximately 9" long by 4" wide) for each refrigerant circuit. This is for attaching and insulating the expansion valve bulb(s) to the suction line(s).
2. Attach the expansion valve bulb(s)
on air handlers that will have refrigerant lines entering the cabinet from the left side:
 - a. Remove the split rubber grommet from the knockout in the end of the air handler. Uncoil the cap tube with the bulb attached at the expansion valve and place the grommet on the cap tube.
 - b. With the grommet around the tube, push the bulb through the hole and position the grommet back into its original position (one bulb and cap tube on single circuit units, and two bulbs and cap tubes on dual circuit units).**on air handlers that will have refrigerant lines entering the cabinet from the right side:**
 - a. Attach the bulb(s) to the suction tube(s) inside the cabinet, approximately 10" from the right end of the unit.
3. Attach the bulb(s) on a horizontal section of tube where the entire length of the bulb is in contact with the tube (see Figure 18, p. 24), approximately 45 degrees off vertical (a 10 or 2 o'clock position).
4. After attaching to the suction line(s), either inside or outside of the cabinet, wrap the insulation around the bulb(s) and suction tube(s).

Note: Suction piping should be insulated.

⚠ WARNING

Fiberglass Wool!

Exposition to glass wool fibers without all necessary PPE equipment could result in cancer, respiratory, skin or eye irritation, which could result in death or serious injury. Disturbing the insulation in this product during installation, maintenance or repair will expose you to airborne particles of glass wool fibers and ceramic fibers known to the state of California to cause cancer through inhalation.

You **MUST** wear all necessary Personal Protective Equipment (PPE) including gloves, eye protection, a NIOSH approved dust/mist respirator, long sleeves and pants when working with products containing fiberglass wool.

Precautionary Measures:

- Avoid breathing fiberglass dust.
- Use a NIOSH approved dust/mist respirator.
- Avoid contact with the skin or eyes. Wear long-sleeved, loose-fitting clothing, gloves, and eye protection.
- Wash clothes separately from other clothing; rinse washer thoroughly.
- Operations such as sawing, blowing, tear-out, and spraying may generate fiber concentrations requiring additional respiratory protection. Use the appropriate NIOSH approved respirator.

First Aid Measures:

- Eye Contact - Flush eyes with water to remove dust. If symptoms persist, seek medical attention.
- Skin Contact - Wash affected areas gently with soap and warm water after handling.

Condensate Piping

The drain pan condensate connection is a female slip joint type for 1" Schedule 40 PVC pipe. Use PVC cement and tubing as required (field supplied) to construct a trap. A union or flexible tubing and clamps may be installed if the drain pan is to be removed periodically for cleaning.

Note: When air handler is installed in the vertical position and close proximity trapping of condensate is required, use of a subbase accessory to raise the air handler for clearance of the drain trap is recommended. See [Figure 19, p. 24](#) for a typical drain trap assembly.

Figure 19. Typical drain trap assembly


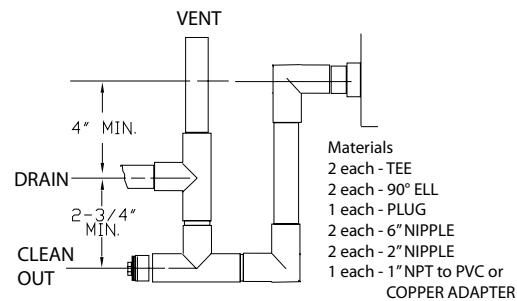


Figure 18. Remote bulb installation

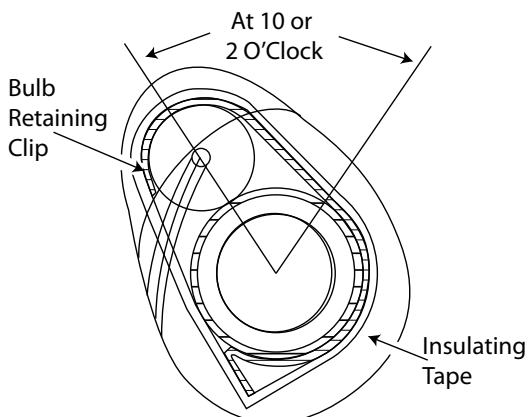

Filter Replacement

⚠ WARNING

Fiberglass Wool!

Exposition to glass wool fibers without all necessary PPE equipment could result in cancer, respiratory, skin or eye irritation, which could result in death or serious injury. Disturbing the insulation in this product during installation, maintenance or repair will expose you to airborne particles of glass wool fibers and ceramic fibers known to the state of California to cause cancer through inhalation.

You **MUST** wear all necessary Personal Protective Equipment (PPE) including gloves, eye protection, a NIOSH approved dust/mist respirator, long sleeves and pants when working with products containing fiberglass wool.

Precautionary Measures:

- Avoid breathing fiberglass dust.
- Use a NIOSH approved dust/mist respirator.
- Avoid contact with the skin or eyes. Wear long-sleeved, loose-fitting clothing, gloves, and eye protection.
- Wash clothes separately from other clothing; rinse washer thoroughly.
- Operations such as sawing, blowing, tear-out, and spraying may generate fiber concentrations requiring additional respiratory protection. Use the appropriate NIOSH approved respirator.

First Aid Measures:

- **Eye Contact** - Flush eyes with water to remove dust. If symptoms persist, seek medical attention.
- **Skin Contact** - Wash affected areas gently with soap and warm water after handling.


Air handlers are shipped with throwaway filters installed. For replacement filters consult the air handler service facts for correct size and number.

To replace filters from the end of the unit, remove lower access panel (either end) and slide old filters out and replace with new ones.

To replace from the front of the unit, remove one "L" shaped angle. Remove and replace filters and reinstall "L" shaped angle. See [Figure 20, p. 25](#).

To convert from 1" filter to a 2" filter on units so equipped, remove lower access panels from both ends of the air handler. Remove screws and rotate the "L" shaped angles from both the top and bottom of the filter track 180° to increase the width of the filter opening.

Figure 20. Filter location

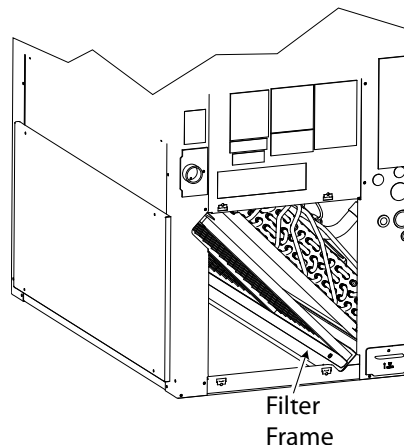

Duct Connections

The supply and return ducts should be connected to the unit with flame retardant duct connectors to reduce vibration transmission. The return duct should be sized to the same dimensions as the return inlet of the unit.

Important: Duct flanges are provided for attachment of the duct work and are packaged on the outside of the cabinet for TWE150, 180, 240, 300 and TWE126, 156, 201, 251. The duct flanges are fastened to the pallet below the coil (bottom return) on the TWE051, 060, 072, 076, 090, 101 and 120 models.

Air Flow Settings


Standard Units

Unit is shipped for nominal airflow with nominal static pressure. Please refer to the fan performance table in either the product catalog or unit service facts and select the proper drive package for each application. Failure to do so could result in improper airflow causing coil frosting or condensate management problems. Condensate management problems such as water blow off could be the result of too great of air face velocity across the coil. To ensure proper operation refer to ["Fan Belt Adjustment," p. 35](#).

SZVAV Units

For SZVAV units, air flow is set by using potentiometer R-136 on the ReliaTel options module found in the air handler control box. The potentiometer will adjust the maximum air flow between the range of 60 Hz to 44.50 Hz. If the desired maximum operating point from the catalog fan table is lower than 44.50 Hz, parameter 6-15 on the VFD must be reprogrammed to 50 Hz. The VFD is preset from the factory to a default of 25 Hz for the lower limit and does not need to be reprogrammed.

Figure 21. ReliaTel options module

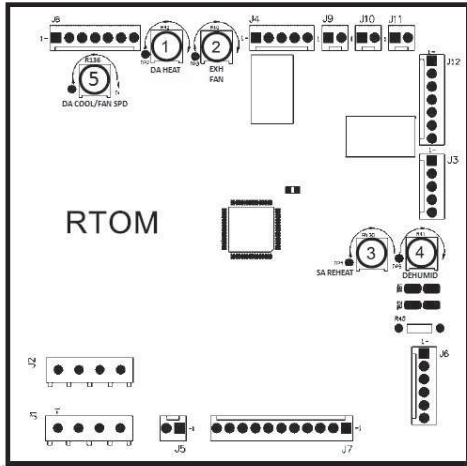

Measure the voltage between TP1 on the RTOM and ground. Use [Table 4, p. 26](#) to set the desired maximum operating supply fan speed.

Table 4. SZVAV air handler speed to voltage

Parameter 6-15 Set to 60 Hz			
High Speed (Hz)	TP1 (RTOM) Voltage (Vdc)	High Speed (Hz)	TP1 (RTOM) Voltage (Vdc)
38.00	<0.10	44.00	1.65
38.40	0.20	44.40	1.70
38.80	0.30	44.80	1.75
39.20	0.45	45.20	1.83
39.60	0.55	45.60	1.90
40.00	0.70	46.00	1.95
40.40	0.80	46.40	2.00
40.80	0.95	46.80	2.05
41.20	1.05	47.20	2.10
41.60	1.15	47.60	2.13
42.00	1.25	48.00	2.17
42.40	1.30	48.40	2.21
42.80	1.35	48.80	2.27
43.20	1.45	49.20	2.30
43.60	1.55	49.60	2.35

Table 5. 2-Speed VFD programming speeds

High Speed (Hz)	Low Speed (Hz) Ranges	High Speed (Hz)	Low Speed (Hz) Ranges
60.00	25.00 - 39.60	48.00	25 - 31.68
59.00	25.00 - 38.94	47.00	25 - 31.02
58.00	25.00 - 38.28	46.00	25 - 30.36

Table 4. SZVAV air handler speed to voltage (continued)

Parameter 6-15 Set to 60 Hz			
High Speed (Hz)	TP1 (RTOM) Voltage (Vdc)	High Speed (Hz)	TP1 (RTOM) Voltage (Vdc)
—	—	50.00	>2.40
44.50	<0.10	52.25	1.65
45.02	0.20	52.77	1.70
45.53	0.30	53.28	1.75
46.05	0.45	53.80	1.83
46.57	0.55	54.32	1.90
47.08	0.70	54.83	1.95
47.60	0.80	55.35	2.00
48.12	0.95	55.87	2.05
48.63	1.05	56.38	2.10
49.15	1.15	56.90	2.13
49.67	1.25	57.42	2.17
50.18	1.30	57.93	2.21
50.70	1.35	58.45	2.27
51.22	1.45	58.97	2.30
51.73	1.55	59.48	2.35
—	—	60.00	>2.40

2-Speed VFD Units

To configure units with an RTOM for 2-speed operation move PPM 10 from PPF 10 to TP. Refer to [“Heating and Cooling Setpoint Arbitration,” p. 29](#) for setpoint connection. Complete the configuration by reprogramming VFD parameter 6-10 to 5.00 V and parameter 6-11 to 7.60 V. For 2-Speed VFD controlled units the desired maximum air flow (High Speed) is set by reprogramming parameter 6-15 on the VFD to the frequency value that best meets the RPM requirement as shown in the catalog fan tables.

The minimum air flow (Low Speed) is set by reprogramming parameter 6-14 on the VFD. Refer to [Table 5, p. 26](#) to see the allowed Low Speed range for a given High Speed. Use the Menu button and up and down arrows on the keypad to access the parameters.

Table 5. 2-Speed VFD programming speeds (continued)

High Speed (Hz)	Low Speed (Hz) Ranges	High Speed (Hz)	Low Speed (Hz) Ranges
57.00	25.00 - 37.62	45.00	25 - 29.70
56.00	25.00 - 36.96	44.00	25 - 29.04
55.00	25.00 - 36.30	43.00	25 - 28.38
54.00	25.00 - 35.64	42.00	25 - 27.72
53.00	25.00 - 34.98	41.00	25 - 27.06
52.00	25.00 - 34.32	40.00	25 - 26.40
51.00	25.00 - 33.66	39.00	25 - 25.74
50.00	25.00 - 33.00	38.00	25 - 25.08
49.00	25.00 - 32.34	—	—

Minimum Supply Fan Output

Refer to Table 6, p. 27 for details on minimum supply fan output signals associated with each unit function. Note that each value represents the actual Fan Output % based on 100% being the customers selected maximum operating speed.

Table 6. Minimum supply fan speeds for SZVAV units

VFD Parameter 6-15 Set to 60 Hz	
Function	Minimum Fan Output %
Ventilation Only	58%
Cool 1 (C1 or C2)	58%
Cool 2 (C1 + C2 Energized)	80%
CV Staged Heat	100%

VFD Parameter 6-15 Set to 50 Hz	
Function	Minimum Fan Output %
Ventilation Only	64%
Cool 1 (C1 or C2)	64%
Cool 2 (C1 + C2 Energized)	83%
CV Staged Heat	100%

Table 7. Minimum supply fan speeds for 2-Speed units

Function	Fan Output %
Ventilation Only	42 - 66% ^(a)
Cool 1 (C1)	42 - 66% ^(a)
Cool 2 (C1 + C2 Energized)	100%
CV Staged Heat	100%

^(a) Fan Output percentage is based on the customer chosen upper and lower speed settings.

Important: Do not remove the VFD without first contacting technical support! For performance-related questions and diagnostic support in North America call 1-877-872-6363. Any return requires a claim number FIRST. Removal of the VFD prior to this step will void the unit warranty.

Electrical Connections

⚠ WARNING

Hazardous Voltage w/Capacitors!

Failure to disconnect power and discharge capacitors before servicing could result in death or serious injury.

Disconnect all electric power, including remote disconnects and discharge all motor start/run capacitors before servicing. Follow proper lockout/tagout procedures to ensure the power cannot be inadvertently energized. For variable frequency drives or other energy storing components provided by Trane or others, refer to the appropriate manufacturer's literature for allowable waiting periods for discharge of capacitors. Verify with an appropriate voltmeter that all capacitors have discharged.

For additional information regarding the safe discharge of capacitors, see PROD-SVB06*-EN.

⚠ WARNING

Proper Field Wiring and Grounding Required!

Failure to follow code could result in death or serious injury.

All field wiring MUST be performed by qualified personnel. Improperly installed and grounded field wiring poses FIRE and ELECTROCUTION hazards. To avoid these hazards, you MUST follow requirements for field wiring installation and grounding as described in NEC and your local/state/national electrical codes.

Installation

1. All electrical lines, sizing, protection, and grounding must be in accordance with the National Electric Code and local codes.
2. Isolate conduit whenever vibration transmission may cause a noise problem within the building structure.
3. Ensure all connections are tight and no wires exposed.
4. All accessories must be installed and wired according to the instructions packaged with that accessory.

For air handler power entry only, or for dual power entry (power entry for air handler and power entry for electric heats), the electrical connections are made in the fan control box located in the right side of the air handler and electric heater respectively. Wiring entrance is through holes provided in the end of the air handler cabinet, [Figure 22, p. 28](#). Breaker or fuse size can be selected using the nameplates attached to the unit and electric heater.

Figure 22. Electrical entries

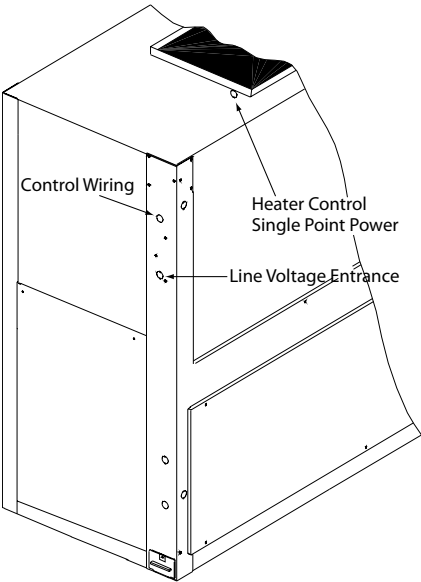


Table 8. Recommended thermostat wire size

Wire Size	Maximum Wire Length
(Gauge)	Physical distance between Unit & T'stat
22	30 Feet
20	50 Feet
18	75 Feet
16	125 Feet
14	200 Feet

Setpoints

EDC Switch Wiring


Electromechanical Units: To enable the Evaporator Defrost Control Switch remove the "W3" jumper between LTB1-B1 and LTB1-B2 at the Outdoor Condenser Section.

ReliaTel Units: To enable the Evaporator Defrost Control Switch move wire "W11" from LTB2-B2 to LTB2-R, and move wire "W12" from LTB2-B1 to LTB2-CD at the Indoor Air Handler Section.

Note: Refer to wiring schematics for more detail.

Heating and Cooling Setpoint Arbitration

Figure 23. Discharge air cooling setpoint

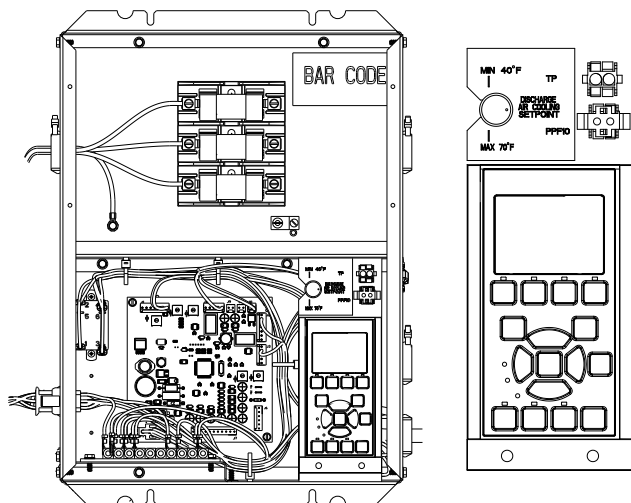

Single Zone VAV units will require traditional Zone Heating (if Heat installed) and Cooling Setpoints that are used on constant volume units in addition to two new setpoints: Discharge Air Cool (Externally Mounted Potentiometer in Control Box) and Discharge Air Heat (DA Heat R-42) Setpoint limits. The Zone Heating and Cooling Setpoints will be selectable via the existing RTRM customer connections for a Zone Sensor panel and the DA Heat and Cool Setpoints will be customer selectable via an onboard potentiometer on the RTOM, and an off board potentiometer mounted inside the control box with ranges 50-150°F and 40-90°F respectively.

The setpoint tables should be used as a reference when setting the DA Heat (R-42) and Discharge Air Cool (Control Box Mounted Potentiometer) setpoints. Note that the recommended settings for these setpoints are 100°F for the DA Heat Setpoint, and 50°F for the DA Cool Setpoint.

Table 9. DA heat setpoint

Voltage (Vdc)	Setpoint (°F)	Voltage (Vdc)	Setpoint (°F)	Voltage (Vdc)	Setpoint (°F)	Voltage (Vdc)	Setpoint (°F)
0.00	50	0.98	75	1.61	100	2.06	125
0.09	51	1.00	76	1.63	101	2.08	126
0.13	52	1.03	77	1.66	102	2.09	127
0.16	53	1.06	78	1.69	103	2.11	128
0.20	54	1.08	79	1.71	104	2.12	129
0.24	55	1.11	80	1.72	105	2.13	130
0.28	56	1.13	81	1.74	106	2.13	131
0.31	57	1.16	82	1.76	107	2.14	132
0.35	58	1.18	83	1.78	108	2.16	133
0.39	59	1.21	84	1.79	109	2.17	134
0.42	60	1.23	85	1.81	110	2.19	135
0.46	61	1.26	86	1.83	111	2.20	136
0.50	62	1.28	87	1.84	112	2.21	137
0.53	63	1.31	88	1.86	113	2.23	138
0.57	64	1.33	89	1.88	114	2.24	139
0.61	65	1.36	90	1.89	115	2.25	140

Table 9. DA heat setpoint (continued)

Voltage (Vdc)	Setpoint (°F)	Voltage (Vdc)	Setpoint (°F)	Voltage (Vdc)	Setpoint (°F)	Voltage (Vdc)	Setpoint (°F)
0.65	66	1.38	91	1.91	116	2.26	141
0.68	67	1.41	92	1.93	117	2.28	142
0.72	68	1.43	93	1.95	118	2.29	143
0.76	69	1.46	94	1.96	119	2.30	144
0.79	70	1.48	95	1.98	120	2.32	145
0.83	71	1.51	96	2.00	121	2.33	146
0.87	72	1.53	97	2.01	122	2.34	147
0.90	73	1.56	98	2.03	123	2.36	148
0.94	74	1.58	99	2.05	124	2.37	149
—	—	—	—	—	—	2.40	150

Table 10. DA cool setpoint (mounted above keyboard)

Setpoint (°F)	Voltage (Vdc)	Setpoint (°F)	Voltage (Vdc)	Setpoint (°F)	Voltage (Vdc)
40	<0.10	51	1.30	61	2.00
41	0.20	52	1.35	62	2.05
42	0.30	53	1.45	63	2.10
43	0.45	54	1.55	64	2.13
44	0.55	55	1.65	65	2.17
45	0.70	56	1.70	66	2.21
46	0.80	57	1.75	67	2.27
47	0.95	58	1.83	68	2.30
48	1.05	59	1.90	69	2.35
49	1.15	60	1.95	70	>2.40
50	1.25				

Note: The potentiometer voltage readings can be verified via the provided test points located next to each potentiometer. Use a DC voltmeter to the Vdc reading between those points and common.

Checkout Procedure

Complete the “[Installation Checklist](#),” p. 30 once installation of field wiring connections is complete. All operational checks (unit running) must be made after the outdoor unit is installed and system interconnection is complete.

Installation Checklist

⚠ WARNING

Hazardous Voltage!

Failure to disconnect power before servicing could result in death or serious injury.

Disconnect all electric power, including remote disconnects before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized. Verify that no power is present with a voltmeter.

Complete this checklist once the unit is installed to verify that all recommended procedures have been accomplished before the system is started. Operational checks cannot be performed until the outdoor unit is installed and system interconnection is complete.

- ☐ Verify that the unit electrical power is disconnected.


- ☐ Inspect all field wiring connections. All connections should be clean and tight.
- ☐ Inspect unit ground connection(s). Ground must comply with all applicable codes.
- ☐ Inspect unit suspension arrangement (if used). Unit position must be secure. Remove any tools or debris found in or near the unit.
- ☐ Inspect duct outlets. Outlets must be open and unrestricted.
- ☐ Inspect unit drain lines. Pipe connections must be tight and drain line unrestricted.
- ☐ Inspect fan assembly to insure all moving parts move freely.
- ☐ If unit is horizontally mounted, make sure secondary drain pan has been installed.
- ☐ Inspect unit for proper filters, securely installed and not touching the coil surface. All cabinet panels must be secure.
- ☐ Instruct owner/operator on proper system operating and maintenance procedure.

Thermostat and Control Connections

Wiring shown with dashed lines is to be furnished and installed by the customer. All customer-supplied wiring must be copper only and must conform to NEC and local electrical codes. Codes may require line of sight between disconnect switch and unit.

1. Observe all notes on the wiring diagrams.
2. Mount the thermostat or zone sensor in the desired location.
3. Install color coded low voltage cables between outdoor unit, indoor unit and thermostat. For SZVAV units, install low voltage and communication wires between the RTRM in the condenser and the RTOM in the air handler. See schematic and connection print for more detail.
4. Connect low voltage control wiring to the low voltage terminal board located at the control box per the typical interconnecting wiring diagrams. For SZVAV units, connect the ReliaTel harness (supplied with the air handler), between the RTRM and RTOM. See [Figure 24, p. 31](#).

Figure 24. RTOM to RTRM harness

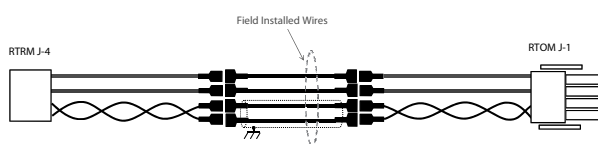


Electromechanical Controls

Wiring shown with dashed lines is to be furnished and installed by the customer. All customer supplied wiring must be copper only and must conform to NEC and local electrical codes. Codes may require line of sight between disconnect switch and unit.

Note: When electric heater accessory is used, single point power entry or dual point power entry is field optional. Single point power entry option is through electric heater only.

Important: For the EDC switch to be functional and thereby facilitate reliable unit operation, make the EDC connections from the indoor to the outdoor control boxes.

Figure 25. Electromechanical jobsite connections

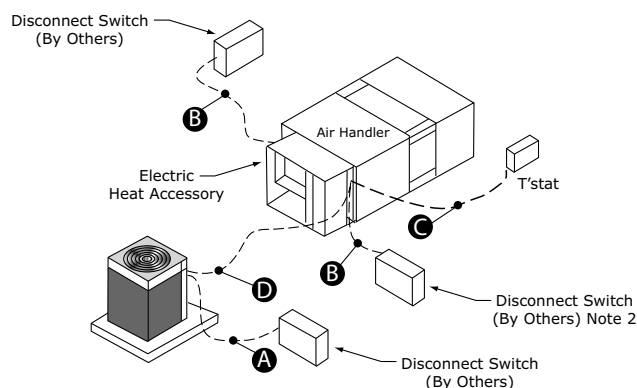

- A. 3 power wires, line voltage for 3 phase, (2 power wires for single phase)
- B. 3 power wires, line voltage for 3 phase, (2 power wires for single phase)
- C. Cooling only thermostat: 3 to 7 wires depending on stages of electric heat
- D. 3 to 7 wires depending on type of outdoor unit(s)

ReliaTel Controls


Wiring shown with dashed lines is to be furnished and installed by the customer. All customer supplied wiring must be copper only and must conform to NEC and local electrical codes. Codes may require line of sight between disconnect switch and unit.

Notes:

1. When electric heater accessory is used, single point power entry or dual point power entry is field optional. Single point power entry option is through electric heater only.
2. ***Choose only one of the following; Thermostat, Zone Sensor, or NSB Panel.

Important: For the EDC switch to be functional and thereby facilitate reliable unit operation, make the EDC connections from the indoor to the outdoor control boxes.

Figure 26. ReliaTel jobsite connections

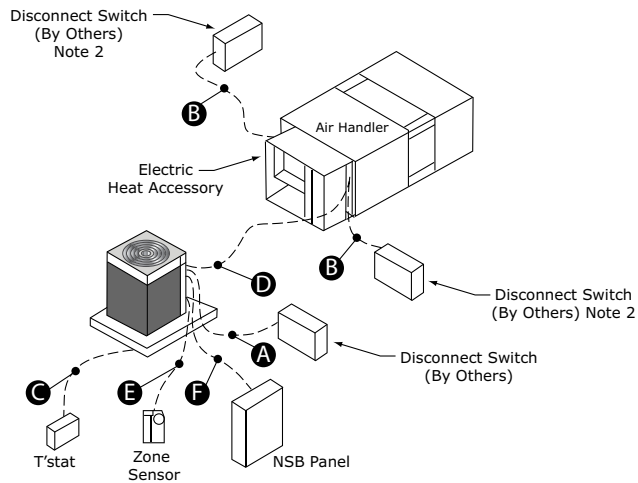

- A. 3 power wires, line voltage for 3 phase, (2 power wires for single phase)
- B. 3 power wires, line voltage for 3 phase, (2 power wires for single phase)
- C. Cooling only thermostat: 3 to 7 wires depending on stages of electric heat
- D. Heat Pump thermostat: 5 to 8 wires depending on stages of electric heat
- E. 3 to 7 wires depending on type of outdoor unit(s)
- F. Zone Sensor: 4 to 10 wires depending on zone sensor model^(a)
- G. Night Setback Panel: 7 wires

^(a) For SZVAV air handlers: 4 additional wires are required (2 of which require twisted pair or shielded wire) in order to make connections between ReliaTel boards in the condenser and air handler.

Start-Up

Sequence of Operation

NOTICE

Equipment Damage!

Ensure the disconnect for the indoor air handler is closed before operating the system. Operating the outdoor unit without the indoor fan energized can cause unit trip-out on high pressure control and/or liquid flood back to the compressor.

Variable Air Volume Applications (SZVAV)

Supply Fan Mode Operation

Units configured for SZVAV control will utilize Supply Fan Mode selection as is currently implemented into ReliaTel controls for normal Zone Control and will be selectable between **AUTO** and **ON** via a connected Zone Sensor module or through BAS/Network controllers.

Supply Fan Mode Auto Operation

For active Cooling, and Heating operation the Supply Fan will be commanded **ON** and will ramp up to the appropriate minimum speed once the unit determines that there is a request for capacity control. Once the active request is cleared and all capacity is de-energized normal supply fan off delays as implemented on constant volume units will be in effect. During the Supply Fan Off-Delay, the supply fan will remain energized for the predetermined time at the previous unit function's minimum speed. All other cases which would bring the Supply Fan **ON** will function as on non-SZVAV units.

Supply Fan Mode ON Operation

For active unit control with the Supply Fan Mode set to **ON**, the unit will energize the Supply Fan and hold the Fan Speed output at minimum speed until there is a request for the fan speed to increase. This will hold true for all cases except during Unoccupied periods in which the Supply Fan Mode is forced to **AUTO** and will operate the Supply Fan as described above for all Cooling, and Heating requests.

Supply Air Temperature Control - Cooling

For Cooling operation the unit will control the active capacity outputs to meet a varying, calculated Discharge Air Setpoint that is calculated based on zone conditions in order to maintain the Zone Temperature to the active Zone Setpoint. Note that this setpoint will be clamped between the user selected DA Heat and DA Cool setpoints for compressor control. In general, as the zone temperature rises above the ZCSP, the Active Discharge Air Setpoint will be calculated down. This calculated setpoint is a direct indication of space

demand and is also used to determine the proper supply fan speed to meet the space requirements. During active capacity control, the unit will utilize a +/- 3.5°F deadband around the active Discharge Air Setpoint to determine when to request additional cooling capacity. If the unit is maintaining the discharge air temperature within the +/- 3.5°F deadband around the calculated discharge air setpoint requirements, no additional capacity will be requested.

Occupied Cooling Operation

For normal Cooling operation, available Cooling capacity will be staged or modulated in order to meet the calculated discharge air setpoint between the user selected upper and lower limits. If the current active cooling capacity is controlling the discharge air within the deadband no additional Cooling capacity change will be requested. As the Discharge Air Temperature rises above the deadband the control will request additional capacity as required (additional compressor operation). As the Discharge Air Temperature falls below the deadband the algorithm will request a reduction in active capacity.

Compressor Cooling

Compressor output control and protection schemes will function similar to non-SZVAV units. Normal compressor HPC and LPC control will remain in effect as well as normal 3-minute minimum on, off, and inter-stage timers. Also, the condenser fans will be controlled similar to non-SZVAV units.

Cooling Sequence

If the control determines that there is a need for compressor stages in order to meet the discharge air requirements, once supply fan proving has been made, the unit will begin to stage compressors accordingly. Note that a 5 second delay will be enforced between the command for supply fan output operation and the command for compressor output operation. This delay is enforced to ensure that the supply fan is energized and ramping up to operating speed prior to energizing compressors.

As the zone cooling demand continues to increase, if additional capacity is required, the supply fan output will be modulated above minimum speed in order to meet the zone requirements. Note that the supply fan speed will remain at the compressor stage's associated minimum value until the control requires additional capacity to meet the zone demand.

As the cooling load in the zone decreases the control will reduce the speed of the fan down to minimum per compressor stage and control the compressor outputs accordingly. As the compressors begin to de-energize, the Supply Fan speed will fall back to the Cooling Stage's associated minimum fan speed but not below. As the load in the zone continues to drop, cooling

capacity will be reduced in order to maintain the calculated discharge air setpoint.

Cooling Stages Minimum Fan Speed

As the unit begins to stage compressors to meet the cooling demand, the following minimum Supply Fan Speeds will be utilized for each corresponding Cooling Stage. Note that the Supply Fan Speed will be allowed to ramp up beyond the minimum speed in order to meet the zone cooling demand. The minimum fan speed for units with 2 stages of DX Cooling will be 58% of the unit's full airflow capacity. At Stage 1 of DX Cooling the Fan Speed will be at a minimum of 58% and at Stage 2 of DX Cooling the Fan Speed will be at a minimum of 80%.

Occupied Heating Operation

Occupied Heating operation on units configured with SZVAV control will utilize two separate control methodologies based on heating configurations. For all "Staged" Heating types (Electric and Gas), the unit will utilize 100% full airflow during all active heating periods like traditional Constant Volume units. For Modulating Gas heat units, the unit will have the ability to control the discharge air temperature to the calculated discharge air heating setpoint in order to maintain the Zone Temperature to the Zone Heating setpoint.

Staged Heating Operation

For units configured with Mechanical or Auxiliary Heat once the control determines that there is an active heating capacity request, the unit will energize the Supply Fan and ramp up to full speed. The control methodology during Active Heating will be identical to traditional Constant Volume units; heating stages will be energized/de-energized to meet the Zone Heating demand. Note that all Electric staging sequences will be identical to Constant Volume units.

Unoccupied Cooling and Heating Operation

For SZVAV units, the unit will control Heating and Cooling, as during Occupied periods using the normal heating and cooling SZVAV algorithms. In Unoccupied periods the unit will utilize setback setpoints, and Auto fan mode operation as on normal Constant Volume units.

Failure and Overriding Conditions

Certain failure and overriding conditions require

special handling of the Supply Fan Speed on units configured with SZVAV. See below for a list of these conditions:

1. **Supply Fan Proving Failure** - If a Supply Fan Proving failure is detected the Supply Fan will be de-energized after 40s of run time and the Fan Speed output will go to the corresponding minimum speed voltage.
2. **Zone Temperature Sensor Failure** - If the Active Zone Temperature input goes out of range, the unit will discontinue all Heating, Cooling, and Dehumidification operation.
3. **Supply Air Temperature Sensor Failure** - If the Supply Air Temperature input goes out of range, the unit will revert back to Full Airflow, Traditional CV control. The unit will call out a Supply Air Temperature Sensor Failure Alarm, the RTRM System LED will flash the 2-blink error code, and Cool LEDs will flash.

2-Speed VFD Applications

General Description of Functionality

Cooling Operation (DX Cooling)

Units with a 2-Speed VFD control scheme will utilize a thermostat's heating and cooling outputs to differentiate between high and low speed. When the unit receives a G or Y1 call from the thermostat the supply fan will run at the user selected low speed. Once the zone load demands the second stage of cooling, and the unit receives the Y2 call from the thermostat the supply fan will be signaled to run at the user selected high speed. All other compressor staging will be handled the same as all standard thermostat controlled units.

Heating Operation

Units with 2-Speed VFD controls will utilize traditional CV Heating control schemes with full airflow provided based on the customer selected VFD controlled maximum speed. When the unit receives the W1 call from the thermostat a relay will signal the supply fan to run at high speed. All the electric heaters that can be outfitted in the field are wired up to interlock W1 and W2 so the supply fan will always run at the user selected high speed during heat modes.

Maintenance

Perform all of the indicated maintenance procedures at the intervals scheduled. This will prolong the life of the unit and reduce the possibility of costly equipment failure.

Fan Belt Adjustment

⚠ WARNING

Rotating Components!

Failure to disconnect power before servicing could result in rotating components cutting and slashing technician which could result in death or serious injury.

Disconnect all electric power, including remote disconnects before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized.

The fan belts must be inspected periodically to assure proper unit operation. Replacement is necessary if the belts appear frayed or worn.

When removing or installing the new belts, do not stretch them over the sheaves. Loosen the belts using the belt tension adjustment bolts on the motor mounting base.

Once the new belts are installed, using a Browning or Gates tension gauge (or equivalent), adjust the belt tension as follows:

1. To determine the appropriate belt deflection:
 - a. Measure the center-to-center shaft distance (in inches) between the fan and motor sheaves.
 - b. Divide the distance measured in Step 1a by 64; the resulting value represents the amount of belt deflection that corresponds to the proper belt tension.
2. Set the large O-ring on the belt tension gauge at the

deflection value determined in [Step 1b](#).

3. Set the small O-ring at zero on the force scale of the gauge plunger.
4. Place the large end of the gauge at the center of the belt span; then depress the gauge plunger until the large O-ring is even with the top of the next belt or even with a straightedge placed across the fan and motor sheaves.
5. Remove the belt tension gauge. The small O-ring now indicates a number other than zero on the plunger's force scale. This number represents the force (in pounds) required to give the needed deflection.
6. Compare the "force" scale reading (Step 5) with the appropriate "force" value listed in the Belt tension table. If the "force" reading is outside the range, readjust the belt tension.

Note: Actual belt deflection "force" must not exceed the maximum "force" value shown in [Figure 27, p. 35](#).

Recheck the belt tension at least twice during the first 2 to 3 days of operation. Belt tension may decrease until the new belts are "run in".

Figure 27. Belt tension gauge

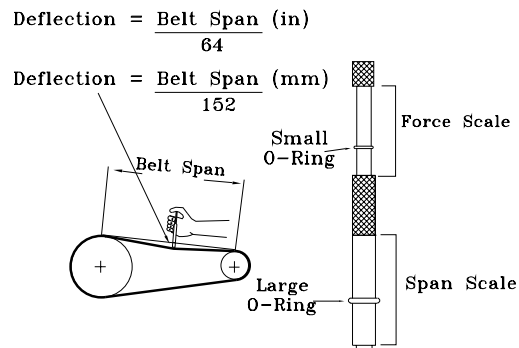


Table 11. Belt tension measurement and deflection

Belts Cross Section	Small Pitch Diameter Range	Deflection Force (Lbs.)			
		Standard V-Belt		V-Belt with Molded Notches	
		Min.	Max.	Min.	Max.
A	3.0 - 3.6	3	4-1/2	3-7/8	5-1/2
	3.8 - 4.8	3-1/2	5	4-1/2	6-1/4
	5.0 - 7.0	4	5-1/2	5	6-7/8
B	3.4 - 4.2	4	5-1/2	5-3/4	8
	4.4 - 5.6	5-1/8	7-1/8	6-1/2	9-1/8
	5.8 - 8.8	6-3/8	8-3/4	7-3/8	10-1/8

Monthly

The following warning complies with State of California law, Proposition 65.

⚠ WARNING

Hazardous Voltage w/Capacitors!

Failure to disconnect power and discharge capacitors before servicing could result in death or serious injury.

Disconnect all electric power, including remote disconnects and discharge all motor start/run capacitors before servicing. Follow proper lockout/tagout procedures to ensure the power cannot be inadvertently energized. For variable frequency drives or other energy storing components provided by Trane or others, refer to the appropriate manufacturer's literature for allowable waiting periods for discharge of capacitors. Verify with an appropriate voltmeter that all capacitors have discharged.

For additional information regarding the safe discharge of capacitors, see PROD-SVB06-EN.*

NOTICE

Operating Under Vacuum!

Failure to follow these instructions will result in compressor failure.

Do not operate or apply power to the compressor while under a vacuum.

⚠ WARNING

Fiberglass Wool!

Exposition to glass wool fibers without all necessary PPE equipment could result in cancer, respiratory, skin or eye irritation, which could result in death or serious injury. Disturbing the insulation in this product during installation, maintenance or repair will expose you to airborne particles of glass wool fibers and ceramic fibers known to the state of California to cause cancer through inhalation.

You **MUST** wear all necessary Personal Protective Equipment (PPE) including gloves, eye protection, a NIOSH approved dust/mist respirator, long sleeves and pants when working with products containing fiberglass wool.

Precautionary Measures:

- Avoid breathing fiberglass dust.
- Use a NIOSH approved dust/mist respirator.
- Avoid contact with the skin or eyes. Wear long-sleeved, loose-fitting clothing, gloves, and eye protection.
- Wash clothes separately from other clothing; rinse washer thoroughly.
- Operations such as sawing, blowing, tear-out, and spraying may generate fiber concentrations requiring additional respiratory protection. Use the appropriate NIOSH approved respirator.

First Aid Measures:

- **Eye Contact** - Flush eyes with water to remove dust. If symptoms persist, seek medical attention.
- **Skin Contact** - Wash affected areas gently with soap and warm water after handling.

Conduct the following maintenance inspections once per month:

- ☐ Inspect air filters and clean (or replace) if necessary.
- ☐ Check unit wiring to ensure all connections are tight and that the wiring insulation is intact.
- ☐ Check drain pans and condensate piping to insure they are free of obstacles.
- ☐ Manually rotate the indoor fan to ensure proper operation.
- ☐ Inspect the evaporator coils for dirt and debris. If the coils appear dirty, clean them.
- ☐ Observe indoor fan operation and correct any unusual or excessive vibration. Clean blower wheels as needed.

Annually (Cooling Season)

The following maintenance procedures must be performed at the beginning of each cooling season to ensure efficient unit operation:

- ☐ Perform all of the monthly maintenance inspections.
- ☐ With the unit operating, check unit superheat and record the reading in the [“Maintenance Log,” p. 38](#)
- ☐ Remove any accumulation of dust and/or dirt from the unit casing.
- ☐ Remove corrosion from any surface and repaint. Check the gasket around the control panel door to ensure it fits correctly and is in good condition to prevent water leakage.
- ☐ Inspect the evaporator fan belt. If it is worn or frayed, replace it.
- ☐ Inspect the control panel wiring to ensure that all connections are tight and that the insulation is intact.

- ☐ Check refrigerant piping and fittings for leaks.

- ☐ Inspect the evaporator coils for dirt and debris. If the coils appear dirty, clean them.

Coil Cleaning

Regular coil maintenance, including annual cleaning—enhances the unit's operating efficiency by minimizing:

- compressor head pressure and amperage draw
- water carryover
- fan brake horsepower
- static pressure losses

At least once each year — or more often if the unit is located in a “dirty” environment — clean the coil using the instructions outlined below. Be sure to follow these instructions as closely as possible to avoid damaging the coils.

Maintenance Log

[illegible]

Note: Perform each inspection once per month (during cooling season) while unit is operating

Wiring Diagram Matrix

Table 12. Wiring schematics for TWE air handlers

Model No.	Ton	Circuit	Volts	Hz	Ph	Electromechanical (Std)	Electromechanical (2 speed)		Reliatel	
						Schematic/Connection	Schematic	Connection	Schematic	Connection
TWE0514DA	4.6	Single	380-415	50	3	12132178	N/A	N/A	N/A	N/A
TWE06041A	5	Single	208-230	60	1	12132179	N/A	N/A	N/A	N/A
TWE06043A	5	Single	208-230	60	3	12132178	N/A	N/A	N/A	N/A
TWE06044A	5	Single	460	60	3	12132178	N/A	N/A	N/A	N/A
TWE0604WA	5	Single	575	60	3	12132178	N/A	N/A	N/A	N/A
TWE0604KA	5	Single	380	60	3	12132178	N/A	N/A	N/A	N/A
TWE06043B	5	Dual	208-230	60	3	12132176	N/A	N/A	N/A	N/A
TWE06044B	5	Dual	460	60	3	12132176	N/A	N/A	N/A	N/A
TWE06041B	5	Dual	208-230	60	1	12132177	N/A	N/A	N/A	N/A
TWE0724DB	6	Dual	380-415	50	3	12132176	N/A	N/A	N/A	N/A
TWE07243B	6	Dual	208-230	60	3	12132176	23130450	23130452	12131400	12131401
TWE07244B	6	Dual	460	60	3	N/A	23130450	23130452	12131400	12131401
TWE0724WB	6	Dual	575	60	3	12132176	23130450	23130452	12131400	12131401
TWE0724KB	6	Dual	380	60	3	12132176	N/A	N/A	N/A	N/A
TWE0764DA	6.25	Single	380-415	50	3	12132178	N/A	N/A	N/A	N/A
TWE0764DB	6.25	Dual	380-415	50	3	12132176	N/A	N/A	N/A	N/A
TWE09041A	7.5	Single	208-230	60	1	12132179	N/A	N/A	N/A	N/A
TWE09043A	7.5	Single	208-230	60	3	12132178	N/A	N/A	N/A	N/A
TWE0904WA	7.5	Single	575	60	3	12132178	N/A	N/A	N/A	N/A
TWE0904KA	7.5	Single	380	60	3	12132178	N/A	N/A	N/A	N/A
TWE09041B	7.5	Dual	208-230	60	1	12132177	N/A	N/A	N/A	N/A
TWE09043B	7.5	Dual	208-230	60	3	12132176	23130450	23130452	12131400	12131401
TWE09044B	7.5	Dual	460	60	3	N/A	23130450	23130452	12131400	12131401
TWE0904WB	7.5	Dual	575	60	3	12132176	23130450	23130452	12131400	12131401
TWE0904KB	7.5	Dual	380	60	3	12132176	N/A	N/A	N/A	N/A
TWE1014DA	8.33	Single	380-415	50	3	12132178	N/A	N/A	N/A	N/A
TWE1014DB	8.33	Dual	380-415	50	3	12132176	N/A	N/A	N/A	N/A
TWE12041A	10	Single	208-230	60	1	12132179	N/A	N/A	N/A	N/A
TWE12043A	10	Single	208-230	60	3	12132178	23130450	23130452	12131400	12131401
TWE12044A	10	Single	460	60	3	N/A	23130450	23130452	12131400	12131401
TWE1204WA	10	Single	575	60	3	12132178	23130450	23130452	12131400	12131401
TWE1204KA	10	Single	380	60	3	12132178	N/A	N/A	N/A	N/A
TWE12043B	10	Dual	208-230	60	3	12132176	23130450	23130452	12131400	12131401
TWE12044B	10	Dual	460	60	3	N/A	23130450	23130452	12131400	12131401
TWE1204WB	10	Dual	575	60	3	12132176	23130450	23130452	12131400	12131401
TWE1204KB	10	Dual	380	60	3	12132176	N/A	N/A	N/A	N/A
TWE12041B	10	Dual	208-230	60	1	12132177	N/A	N/A	N/A	N/A
TWE1264DB	10.4	Dual	380-415	50	3	12132176	N/A	N/A	N/A	N/A
TWE15043B	12.5	Dual	208-230	60	3	12132176	23130450	23130452	12131400	12131401
TWE15044B	12.5	Dual	460	60	3	N/A	23130450	23130452	12131400	12131401
TWE1504WB	12.5	Dual	575	60	3	12132176	23130450	23130452	12131400	12131401
TWE1504KB	12.5	Dual	380	60	3	12132176	N/A	N/A	N/A	N/A
TWE1564DB	13	Dual	380-415	50	3	12132176	N/A	N/A	N/A	N/A
TWE18043B	15	Dual	208-230	60	3	12132176	23130450	23130452	12131400	12131401
TWE18044B	15	Dual	460	60	3	N/A	23130450	23130452	12131400	12131401
TWE1804WB	15	Dual	575	60	3	12132176	23130450	23130452	12131400	12131401

Wiring Diagram Matrix

Table 12. Wiring schematics for TWE air handlers (continued)

Model No.	Ton	Circuit	Volts	Hz	Ph	Electromechanical (Std)	Electromechanical (2 speed)		Reliatel	
						Schematic/Connection	Schematic	Connection	Schematic	Connection
TWE1804KB	15	Dual	380	60	3	12132176	N/A	N/A	N/A	N/A
TWE2014DB	16.7	Dual	380-415	50	3	12132176	N/A	N/A	N/A	N/A
TWE24043B	20	Dual	208-230	60	3	12132176	23130450	23130452	12131400	12131401
TWE24044B	20	Dual	460	60	3	12132176	23130450	23130452	12131400	12131401
TWE2404WB	20	Dual	575	60	3	12132176	23130450	23130452	12131400	12131401
TWE2404KB	20	Dual	380	60	3	12132176	N/A	N/A	N/A	N/A
TWE2514DB	20.9	Dual	380-415	50	3	12132176	N/A	N/A	N/A	N/A
TWE30043B	25	Dual	208-230	60	3	12132176	23130450	23130452	12131400	12131401
TWE30044B	25	Dual	460	60	3	12132176	23130450	23130452	12131400	12131401
TWE3004WB	25	Dual	575	60	3	12132176	23130450	23130452	12131400	12131401
TWE3004KB	25	Dual	380	60	3	12132176	N/A	N/A	N/A	N/A

Note: Wiring diagrams are available through e-Library or by contacting your local sales office.

Warranty

Central Air Conditioner

This warranty is extended by Trane to the original purchaser and to any succeeding owner of the real property to which the Air Conditioner is originally affixed, and applies to products purchased and retained for use within the U.S.A. and Canada. There is no warranty against corrosion, erosion or deterioration.

Warrantor warrants for a period of 12 months from initial start-up or 18 months from date of shipment, whichever is less, that the products covered by this warranty (1) are free from defects in material and manufacture, and (2) have the capacities and ratings set forth in catalogs and bulletins; provided, that no warranty is made against corrosion, erosion or deterioration. Warrantor's obligations and liabilities under this warranty are limited to furnishing, F.O.B. factory replacement parts (or equipment at the option of Warrantor) for all Warrantor's products not conforming to this warranty. Warrantor shall not be obligated to pay for the cost of lost refrigerant. No liability whatever shall attach to Warrantor until said products have been paid for and then said liability shall be limited to the purchase price of the equipment shown to be defective.

THE WARRANTY AND LIABILITY SET FORTH HEREIN ARE IN LIEU OF ALL OTHER WARRANTIES AND LIABILITIES, WHETHER IN CONTRACT OR IN NEGLIGENCE, EXPRESS OR IMPLIED, IN LAW OR IN FACT, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR USE, AND IN NO EVENT SHALL WARRANTOR BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Trane, 2701 Wilma Rudolph Blvd., Clarksville, TN 37040- 1008 Attention: Manager, Product Service TW-338-0597

*This warranty is for commercial usage of said equipment and not applicable when the equipment is used for a residential application. Commercial use is any application where the end purchaser uses the product for other than personal, family or household purposes.

Commercial Equipment Rated 20 Tons and Larger and Related Accessories (Parts Only)

Products Covered — This warranty is extended by Trane and applies only to commercial equipment rated 20 tons and larger and related accessories purchased and retained for use within the U.S.A. and Canada.

Warrantor warrants for a period of 12 months from initial start-up or 18 months from date of shipment, whichever is less, that the products covered by this warranty (1) are free from defects in material and manufacture, and (2) have the capacities and ratings set forth in catalogs and bulletins; provided, that no warranty is made against corrosion, erosion or deterioration. Warrantor's obligations and liabilities under this warranty are limited to furnishing, F.O.B. factory replacement parts (or equipment at the option of Warrantor) for all Warrantor's products not conforming to this warranty. Warrantor shall not be obligated to pay for the cost of lost refrigerant. No liability whatever shall attach to Warrantor until said products have been paid for and then said liability shall be limited to the purchase price of the equipment shown to be defective.

If any part of your air conditioner fails because of a manufacturing defect, Warrantor will furnish without charge the required replacement part. If the heat exchanger fails because of a manufacturing defect within five years from the date of start-up, Warrantor will furnish without charge a replacement heat exchanger. In addition, if the optional, factory installed, stainless steel heat exchanger fails because of a manufacturing defect within ten years from the date of start-up, Warrantor will furnish without charge a replacement heat exchanger. Any local transportation, related service labor and diagnosis calls are not included. In addition, if the sealed motor-compressor fails because of a manufacturing defect within the second through fifth year from the date of original purchase, Warrantor will furnish without charge the required replacement compressor.

THE WARRANTY AND LIABILITY SET FORTH HEREIN ARE IN LIEU OF ALL OTHER WARRANTIES AND LIABILITIES, WHETHER IN CONTRACT OR IN NEGLIGENCE, EXPRESS OR IMPLIED, IN LAW OR IN FACT, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR USE, AND IN NO EVENT SHALL WARRANTOR BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Warranty

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Trane —Warrantor, 2701 Wilma Rudolph Blvd.,
Clarksville, TN 37040
GW-598-4799



Ingersoll Rand (NYSE: IR) advances the quality of life by creating comfortable, sustainable and efficient environments. Our people and our family of brands — including Club Car®, Ingersoll Rand®, Thermo King® and Trane® — work together to enhance the quality and comfort of air in homes and buildings; transport and protect food and perishables; and increase industrial productivity and efficiency. We are a global business committed to a world of sustainable progress and enduring results.



ingersollrand.com

Ingersoll Rand has a policy of continuous product and product data improvements and reserves the right to change design and specifications without notice.

We are committed to using environmentally conscious print practices.

SSA-SVX06G-EN 11 Aug 2017

Supersedes SSA-SVX06F-EN (December 2015)

©2017 Ingersoll Rand