



TWR-S08MM128-KIT

TOWER SYSTEM




Energy
Efficient Solutions
optimized for low power



MC9S08MM128
USB bootloader

 **freescale**
semiconductor



Get to Know the TWR-S08MM128-KIT


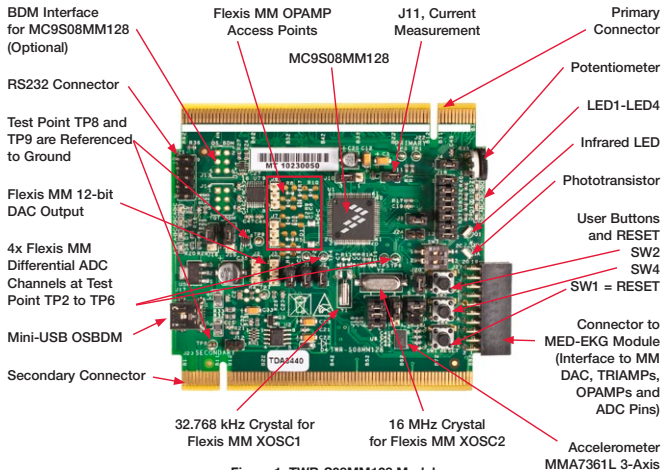


Figure 1: TWR-S08MM128 Module

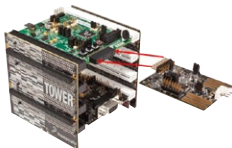

TWR-S08MM128-KIT Freescale Tower System

The TWR-S08MM128 module is part of the Freescale Tower System, a modular development platform that enables rapid prototyping and tool re-use through reconfigurable hardware. Take your design to the next level and begin constructing your Tower System today.

Introduction

This lab is a step-by-step guide to using a USB bootloader GUI tool to update S08MM128 firmware via the on-chip USB module. The S08MM128 series features a ROM base USB bootloader embedded with flash programming routines. This enables USB communication to the external host for programming and erasing as an alternate to using the BDC interface. The ROM base bootloader does not consume application memory.


The following lab assumes the user has loaded the DVD at f:\ and has extracted all zipped files under working folder d:\work. Please replace the path if your environment is different.

LAB 5

Step-by-Step Guide

Configuring the Hardware


1. On the TWR-S08MM128 module, set SW3 DIP switch 2 and 3 to be at 3, as indicated in the picture on the right. This will allow the S08MM128 to run in bootloader mode.
2. Assemble the Tower System as shown in Step 2 of the Quick Start Guide (QSG), but keep the SW3 DIP switch setting as mentioned in the previous step.

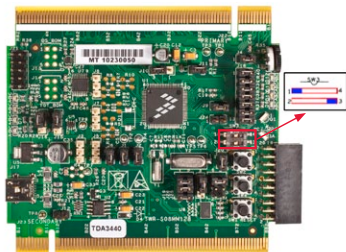


NOTE: The official marking for S08MM devices is MC9S08MM. In this document, the MC9 prefix is omitted for simple referencing.

Connecting to the Computer

3. Install the “Flexis MM USB Bootloader GUI” located in the “Software” tab, under “Development Tools” in the DVD. Unzip the file in your working folder and execute d:\work\UsbBootloaderMM\setup.exe. If you do not have the .NET framework installed on your machine, you may be asked to install it during this process.
4. Connect the TWR-SER USB port to a USB port from your PC. This is the only USB connection required since the S08MM128 is being programmed via its USB interface instead of the OSBDM interface from the TWR-S08MM128.
5. When your PC detects new hardware, the new hardware wizard window will appear. Allow it to automatically install the bootloader driver or specify the path below for the driver:
C:\Program Files\Freescale\MM Device USB Driver\Automatic Bootloader USB Driver
6. After the USB bootloader driver is installed, you should see “Freescale MM Family Bootloader” under device manager, as indicated in the following figure.

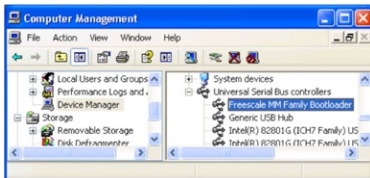

NOTE: If you see “S08MM128” under the device manager, right click on S08MM128 > select Properties > click on Driver Tab > click on Updated Driver...> Specify the same path mentioned in Step 5 to install the driver.

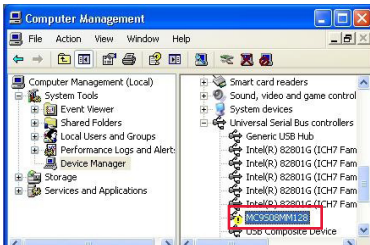

7. Open the control from your Start menu > Programs > Freescale > MM Family GUI. In the GUI, you should see the product ID as S08MM128 and the right bottom of the GUI window has a green USB logo. This indicates the device has entered USB bootloader mode, as indicated in the figure.



8. Look for the “LED BLINK” application, located in the “Software” tab under “Labs” in the DVD. Copy the file to your working directory and unzip it.
9. In the GUI, Click  and select the .s19 file: d:\work\LED_Blink\S08MM_LED_Blink\bin\Project.abs.S19

NOTE: The S-record (.s19 file) format is an ASCII text encoding for binary data of Freescale’s CodeWarrior IDE software project. This file will update every time you compile your project in the CodeWarrior IDE.

10. Click on “Mass Erase” first, then “Program” to download the application code to the S08MM128.

NOTE: Auto and partial erase functions are not implemented in this version of GUI.

11. Click the “Reset” command to exit the bootloader mode, as indicated in the figure.



12. Change the SW3 DIP switch from position 3 to position 2. Then, disconnect and reconnect the USB cables from TWR-SER. You will see the LED_Blink demo is working. This is the same LED software that is mentioned in the QSG. The USB logo in the GUI tool is now red, indicating you are no longer in bootloader mode and are in user code mode.



ent is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals," must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claims alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

RoHS-compliant and/or Pb-free versions of Freescale products have the functionality and electrical characteristics as their non-RoHS-compliant and/or non-Pb-free counterparts.

For further information, visit freescale.com or contact your Freescale sales representative.

For information on Freescale's Environmental Products program, visit freescale.com/epp.

To learn more about the **TWR-S08MM128-KIT** and other Freescale medical products, please visit freescale.com/s08mm, freescale.com/medical and freescale.com/tower.

Freescale, the Freescale logo and CodeWarrior are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. Flexis is a trademark of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners.
© 2010 Freescale Semiconductor, Inc.

Doc Number: S08MM128LAB5 / REV 0

