

1 YEAR
WARRANTY



User's Guide

Shop online at

omega.com®

OMEGA®

www.omega.com

e-mail: info@omega.com

ISO 9001
CERTIFIED
CORPORATE QUALITY
STAMFORD, CT

ISO 9002
CERTIFIED
CORPORATE QUALITY
MANCHESTER, UK

RH32 SERIES **Pocket Size Temperature/ Humidity Handheld Datalogger**

Vol.1 [Basic Instructions]



OMEGAnet® Online Service
omega.com

Internet e-mail
info@omega.com

Servicing North America:

U.S.A.:
ISO 9001 Certified

Omega Engineering, Inc., One Omega Drive, P.O. Box 4047
Stamford, CT 06907-0047 USA

Toll Free: 1-800-826-6342
FAX: (203) 359-7700

TEL: (203) 359-1660
e-mail: info@omega.com

Canada:

976 Bergar
Laval (Quebec), Canada H7L 5A1
Toll-Free: 1-800-826-6342
FAX: (514) 856-6886

TEL: (514) 856-6928
e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Canada: Sales Service: 1-800-826-6342/1-800-TC-OMEGA®
Customer Service: 1-800-622-2378/1-800-622-BEST®
Engineering Service: 1-800-872-9436/1-800-USA-WHEN®

Mexico:

En Español: 001 (203) 359-7803
info@omega.com.mx

FAX: (001) 203-359-7807
e-mail: espanol@omega.com

Servicing Europe:

Benelux:

Managed by the United Kingdom Office
Toll-Free: 0800 099 3344
FAX: +31 20 643 46 43

TEL: +31 20 347 21 21
e-mail: sales@omega.nl

Czech Republic:

Frystatska 184
733 01 Karviná, Czech Republic
Toll-Free: 0800-1-66342
FAX: +420-59-6311114

TEL: +420-59-6311899
e-mail: info@omegashop.cz

France:

Managed by the United Kingdom Office
Toll-Free: 0800 466 342
FAX: +33 (0) 130 57 54 27

TEL: +33 (0) 161 37 29 00
e-mail: sales@omega.fr

Germany/Austria:

Daimlerstrasse 26
D-75392 Deckenpfronn, Germany
Toll-Free: 0 800 6397678
FAX: +49 (0) 7056 9398-29

TEL: +49 (0) 7059 9398-0
e-mail: info@omega.de

United Kingdom:
ISO 9001 Certified

OMEGA Engineering Ltd.
One Omega Drive, River Bend Technology Centre, Northbank
Irlam, Manchester M44 5BD England
Toll-Free: 0800-488-488
FAX: +44 (0)161 777-6622

TEL: +44 (0)161 777-6611
e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2009 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at omega.comsm*

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Datalogging Systems
- ☑ Recorders, Printers & Plotters

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments



Request and notices

Please read this instruction manual for using this “Temperature/humidity meter” correctly and safely.

Request to instrumentation manufacturers, installation contractors, and sales agents

Make sure to deliver this instruction manual to the operator of this “Temperature/humidity meter”.

Request to the operator of this temperature/humidity meter

This instruction manual is necessary for maintenance, too.

Keep this manual with due care until this “Temperature/humidity meter” is discarded.

Notices

1. The descriptions of this manual are subject to change without notice.
2. If a question has arisen or if an omission was found in this manual, please contact your nearest OMEGA's agent.
3. We are not responsible for any results by operation of this “Temperature/humidity meter”.

■ Important notices

- The instruction manual for the RH32 series palm-sized temperature/humidity meter is consisted of Vol. 1 [Basic instructions] and Vol. 2 [Function instructions].

This instruction manual is Vol. 1 [Basic instructions].

For “Measurement and data storage”, “Stored data reading” and “Parameter programming”, etc., refer to Vol. 2 [Function instructions].

- **[Auto-power-off function]**


For avoiding the consumption of the batteries, the auto-power-off function of this “temperature/humiditymeter” has been set at ON (active) as a factory default setting. If no key is pressed for 1 minute, the continuous measurement will automatically stop and the mode will move to the clock mode.

For setting of the auto-power-off function to OFF:


Press **[DISP]** key to go to the continuous measurement mode (Ref. [1.1Continuous measurement]) and then press **[DISP]** key again for about 2 seconds to go to the programming mode. In the programming mode, press **[DISP]** key several times to go to the auto-power-off selection mode with “**Auto**” lit in the sub display. In the auto-power-off selection mode, “**on**” (active) will flash in the main display 2. For releasing the auto-power-off function, select “**oFF**” (release) by pressing **[▲]** key or **[▼]** key. Press **[ENT]** key to retain “**oFF**” selected. The flashing of “**oFF**” will stop.

- For the RS-232C communications with Model RH32□-C2 (RS-232C communications type), the use of the AC power adapter (RH32-AC110 - sold separately) is recommended to avoid the consumption of the batteries.
- Also, for the RS-485 communications with Model RH32□-C4 (RS-485 communications type), make sure to use the AC power adapter (RH32-AC110 - sold separately) as the batteries will be consumed very rapidly.

Clock mode

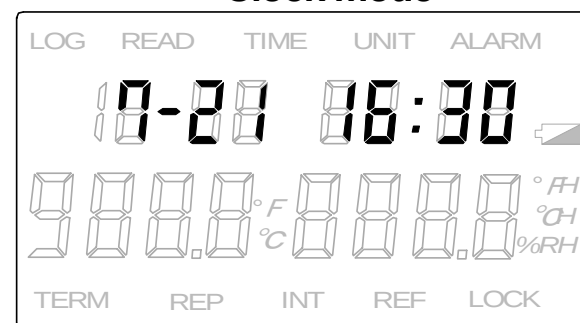

Auto-power-off selection mode

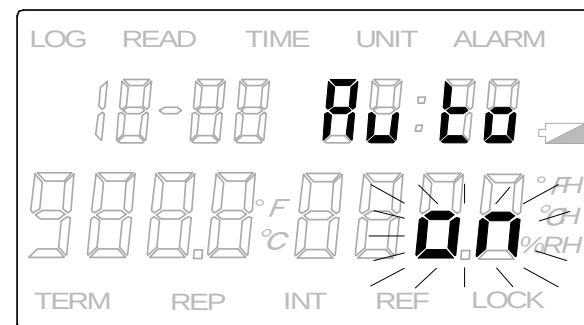

Warning and safety notices

Ensure the following instructions to use this meter correctly.

	Warning (For avoiding unexpected dangerous accidents of death or serious injury)
	◆ Don't use this meter in places where explosive gas exists.
	◆ If this meter is smoking, nasty smelling or abnormal noising, remove batteries from it or pull out an AC power adapter (RH32-AC110) (if used) from a receptacle as quickly as possible, and then contact your OMEGA's agent.
	◆ Don't throw out batteries in fire. Don't charge, short circuit, heat or disassemble them. It will cause a fire or an injury by blowing-out or heat.
	◆ For the AC power adapter, use the power voltage of 100 to 240V. Don't touch the AC power adapter or the receptacle by wet hands. It will cause an electric shock, a fire or a failure. Wipe out dusts from the AC power adapter to prevent fires.
	◆ Don't touch the inside of the case by wet hands.
	◆ Don't repair or modify it.
	◆ Check the specifications of batteries. Use AA (UM-3) batteries.
	◆ Don't use it under failed conditions.

Contents

Palm-sized temperature/humidity meter <Vol.1 [Basic instructions]>

Request and notices

Importance notices

Warning and safety notices

1. Introduction	1	5.2.4 Retaining of hour	14
1.1 Outline	1	5.2.5 Retaining of minute	14
1.2 Configuration	1	5.2.6 Retaining of year	14
2. Model and accessories	3	5.2.7 Retaining of clock	14
2.1 Model	3	5.3 Measurement preparation	16
2.2 Accessories	3	5.3.1 Measurement unit selection mode	16
3. Overviews and functions	4	5.3.2 Temperature measurement unit	16
3.1 Overviews and functions : Front view	4	6. Continuous measurement	18
3.2 Overviews and functions : Side view	4	6.1 Continuous measurement mode	18
3.3 Display	6	6.2 Measured temperature/humidity display range	19
4. Installation	8	7. Replacement of temperature/humidity sensor	20
4.1 Using as a handheld type	8	8. Working environment	23
4.2 Using as a wall installation type	9	9. Troubleshooting	24
4.3 Using as a desktop installation type	10	10. Specifications	26
5. Measurement for preparation	11	11. External dimensions	27
5.1 Loading of battery (AA=UM-3)	11	11.1 External dimensions of RH32B-C□	27
5.2 Clock adjustment of clock	13	11.2 External dimensions of RH32P-C□	28
5.2.1 Clock adjustment mode	13	11.3 External dimensions of RH32S-C□	28
5.2.2 Retaining of month	13		
5.2.3 Retaining of day	13		


1. Introduction

1. 1 Outline

The RH32 series is a high performance and highly reliable palm-sized temperature/humidity meter for the measurement of temperature and humidity of 0 to 100%RH using a capacitance type humidity sensor.

The meter has two major functions, “measurement of temperature and humidity” and “data logging of maximum 8000 data of both temperature and humidity” (Refer to the separated instruction manual Vol. 2 <Function instructions>). In addition, by using a data logging software package (sold separately), easy data processing by a PC is available.

1.2 Configuration

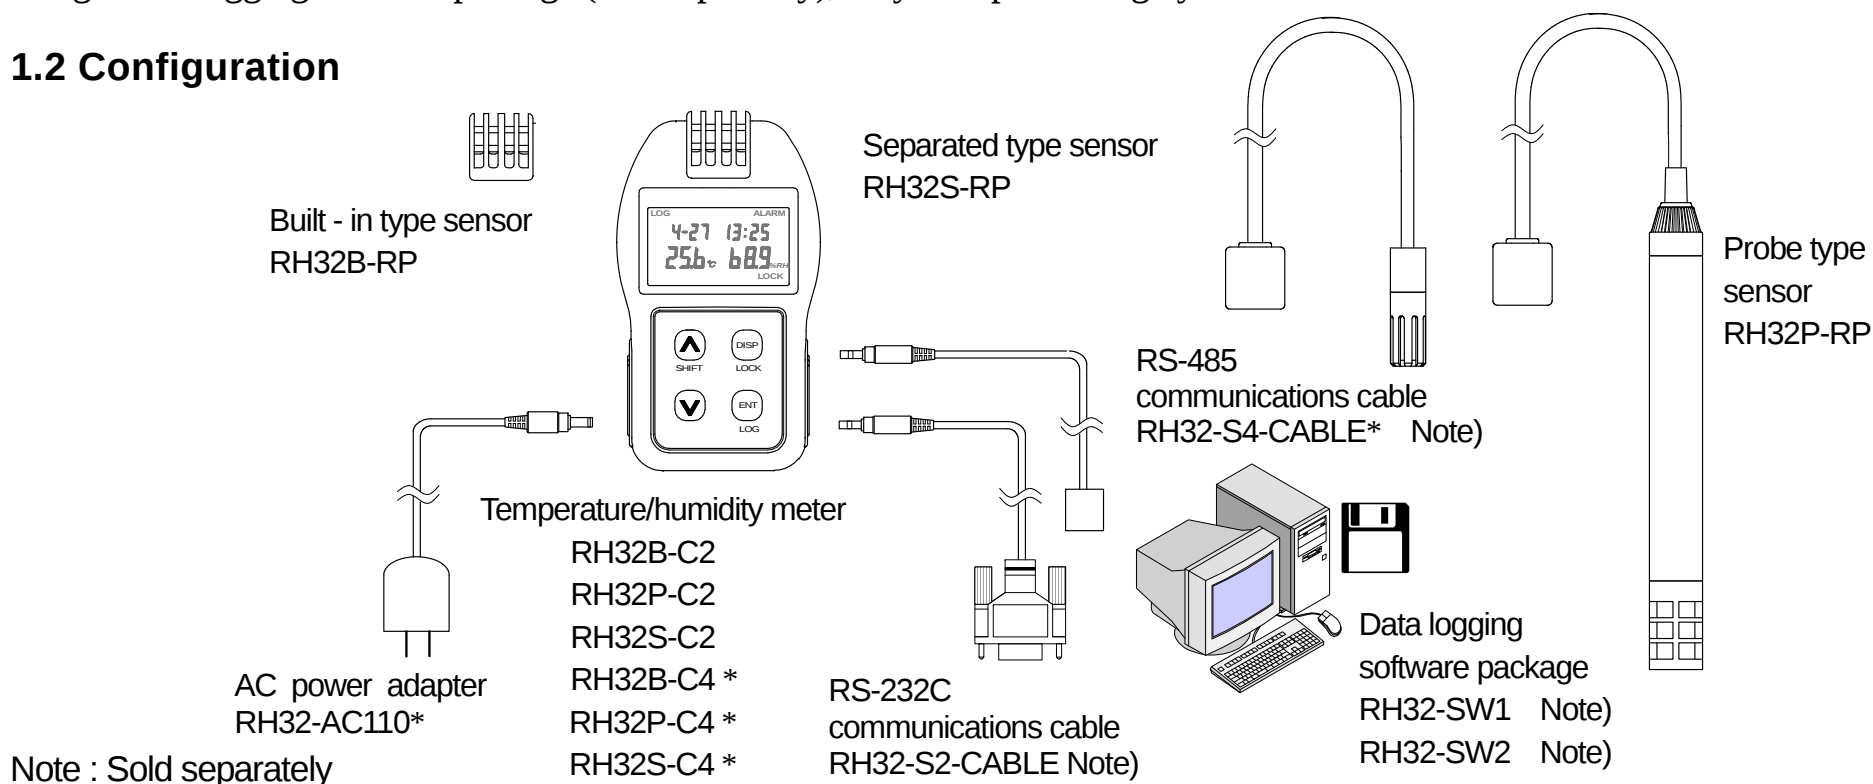

Caution

* For the RS-485 communications with Model RH32□-C4 (RS-485 communications type), make sure to use the AC power adapter (RH32-AC110 - sold separately) as the batteries will be consumed very rapidly.



Palm-sized temperature/humidity meter

RH32B-C2, RH32P-C2, RH32S-C2,
RH32B-C4, RH32P-C4, RH32S-C4

Directive

89/336/EEC, 92/31/EEC amendment,
93/68/EEC amendment

Standard

EN61326+A1: Emission class B,
Immunity Table1
(Minimum immunity test requirements)

Conformance condition

RH32B-C4 : The connection cable is to be used indoor
and within 30m.

RH32S-C4, RH32P-C4 : The connection cable is to be
within 3m.

Stability under the test environment of EMC directive

Temperature $\pm 0.5^{\circ}\text{C}$

Relative humidity $\pm 3\%\text{RH}$

AC power adapter

RH32-AC110

EMI standard


Meets the conduction limit of : FCC Class B EN61000-3-2
EN55022 B EN61000-3-3
VCCI II

EMS

EN50082-1
IEC801-2 Level3
IEC801-3
IEC801-4

2. Model and accessories

2.1 Model

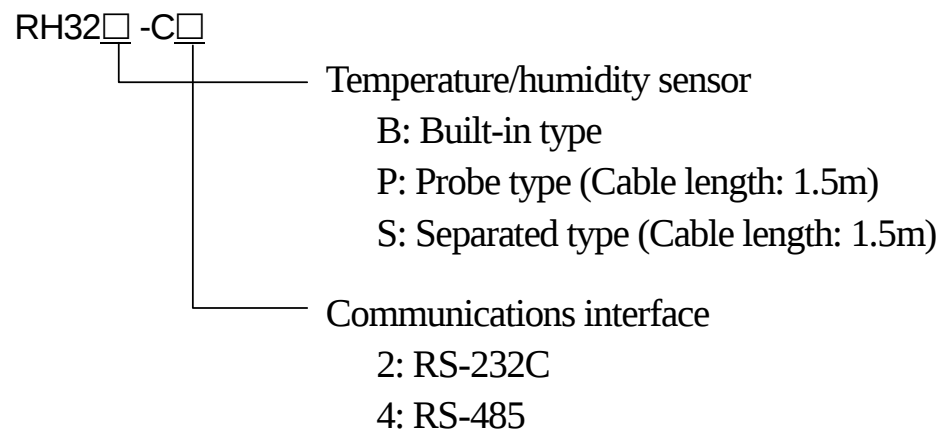


2.2 Accessories

Accessories	Qty.	Remarks
Desktop attachment	1	
AA (UM-3) alkaline battery	2	
Vol.1 Basic instructions	1	This manual
Vol.2 Function instructions	1	Separate manual

3. Overviews and functions

3.1 Overviews and functions : Front view

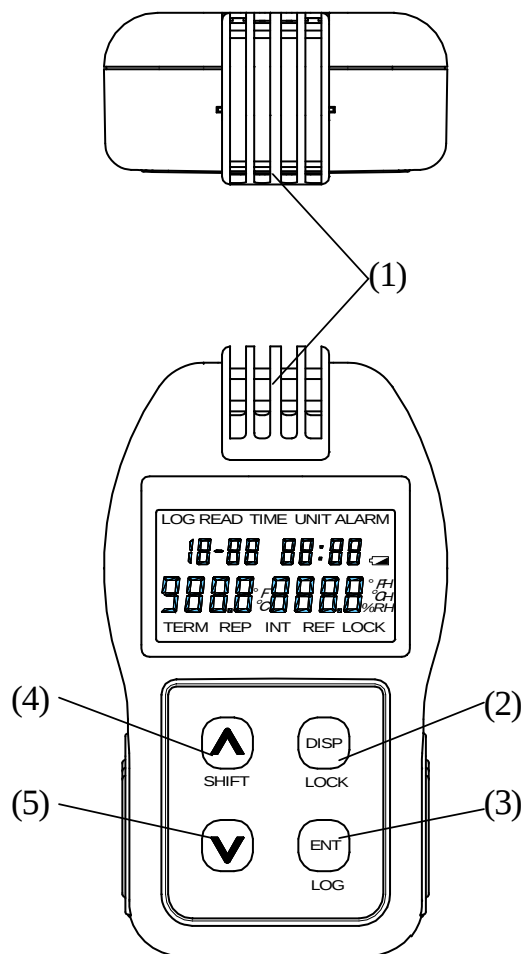


(The figures shown are for Model RH32B-C□. For Model RH32P-C□ and Model RH32S-C□, refer to [11.2 External dimensions of RH32P-C□] and [11.3 External dimensions of RH32S-C□].)

Article	Function
(1) Temperature/humidity sensor	Temperature and humidity sensors built-in
(2) DISP (LOCK) key	To go to the continuous measurement mode or the programming mode from clock mode, or to set the key lock function
(3) ENT (LOG) key	To retain the parameter programmed, or to start/stop data logging
(4) ▲ (SHIFT) key	To increase a numerical figure and shift a key function.
(5) ▼ key	To decrease a numerical figure in the programming mode

3. Overviews and functions

3.2 Overviews and functions : Side view


(The figures shown are for Model RH32B-C□. For Models RH32P-C□ and RH32S-C□, refer to [11.2 External dimensions of RH32P-C□] and [11.3 External dimensions of RH32S-C□].)

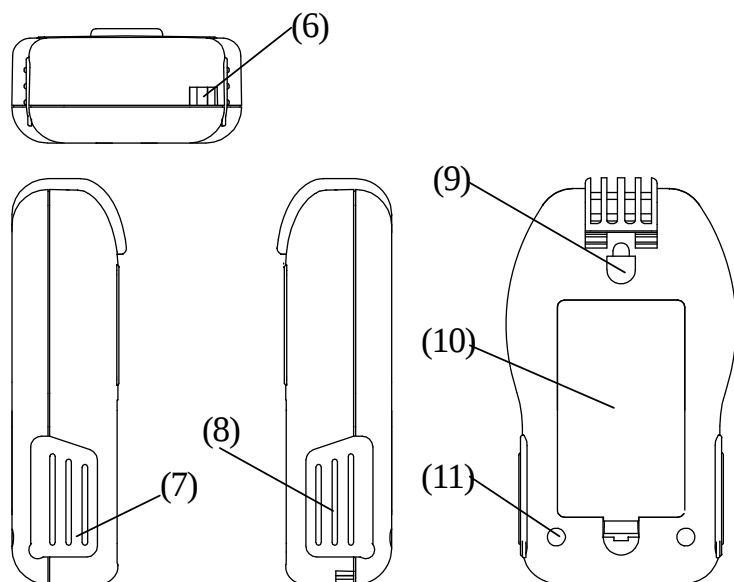

Article	Function
(6)Hole for strap	The hole for attaching a strap
(7)Cover for AC power adapter jack	The cover for the jack to connect the AC power adapter (RH32-AC110) For opening the cover, pull up it from the lower side.
(8)Cover for communications jack	The cover for the jack to connect the RS-232C communications cable (RH32-S2-CABLE) or the RS-485communications cable (RH32-S4-CABLE). For opening the cover, pull up it from the lower side.
(9)Hole for wall installation	The hole for hooking this meter to a wall using a M4 screw or a nail
(10)Battery cover	The cover for the AA battery compartment. For opening it, push it upward by picking up the nail of a lower part.
(11)Holes for desktop attachment	The holes for mounting the attachment for the desktop installation.

3. Overviews and functions

3.3 Display

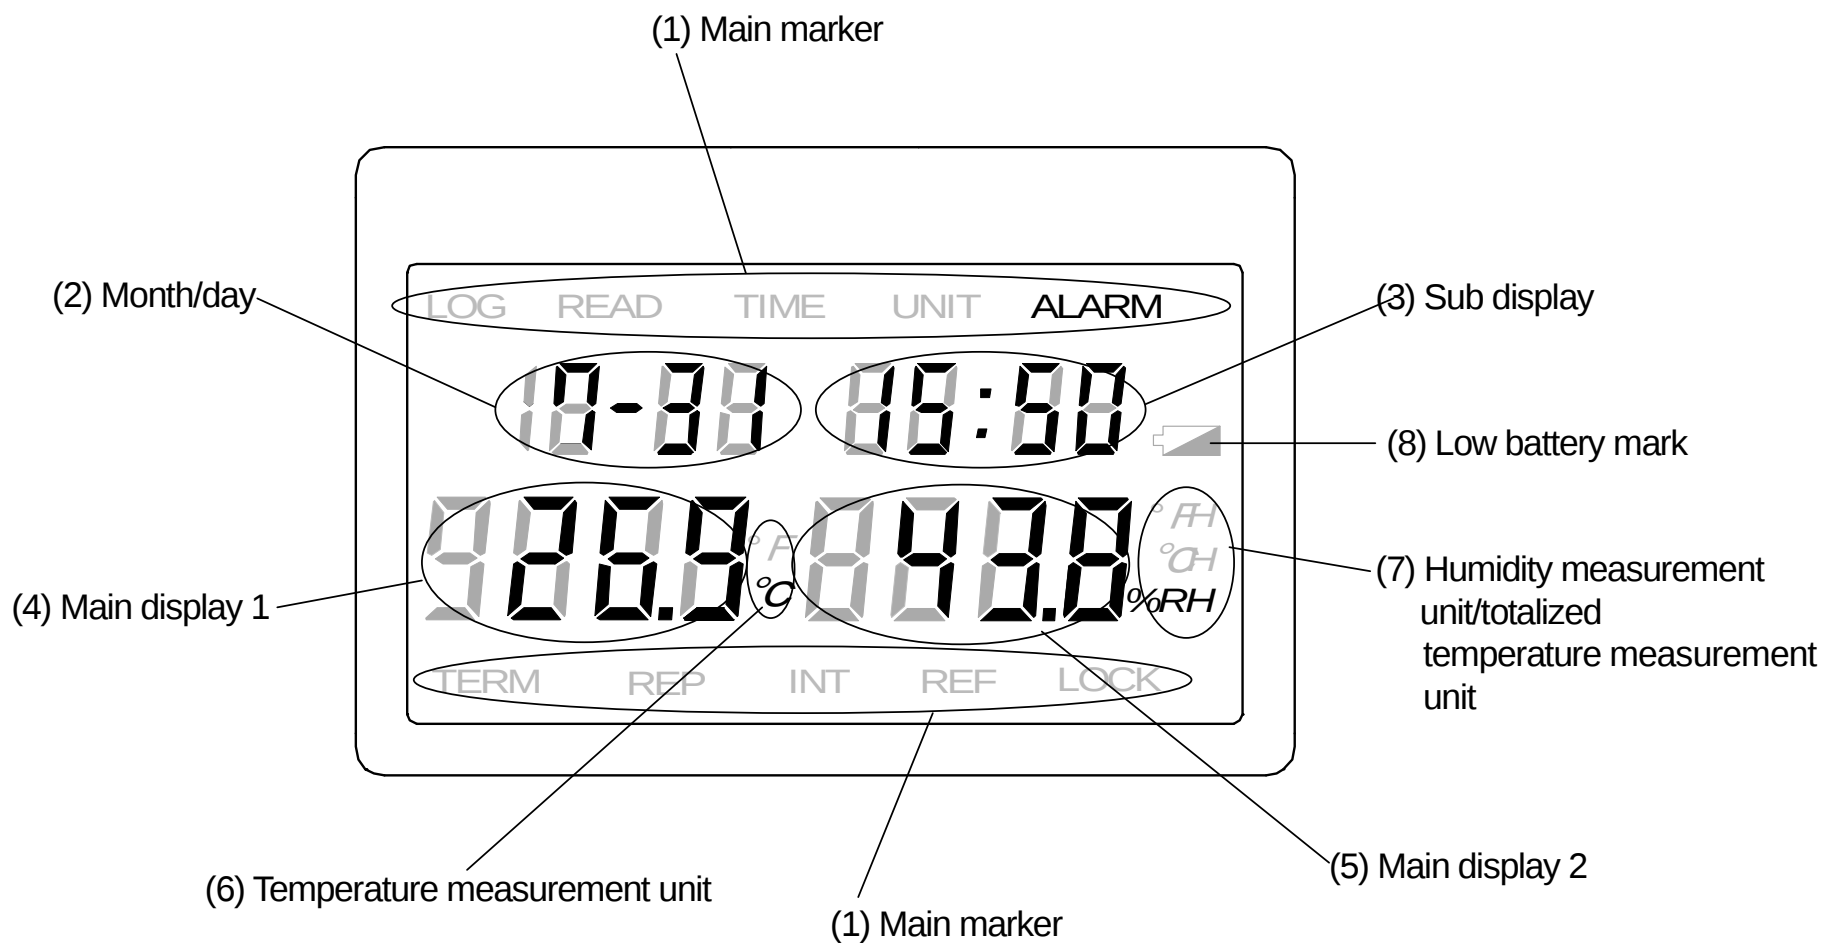


3. Overviews and functions

(1) Main marker	LOG	Data storage	Lights during manual or automatic storage
	READ	Reading	Lights when stored data are read.
	TIME	Month/day/hour/minute	Lights when year, month, day and time are programmed. Lights in endless storage by using the data logging software package (sold separately).
	UNIT	Temperature measurement unit /humidity measurement unit	Lights when the temperature measurement unit (°C/°F) or the relative humidity/the dew-point temperature measurement unit (%RH/°C/°F) is set.
	ALARM	Alarm	Lights when an alarm is activated or alarm setpoints are programmed.
	TERM	Start/stop	Lights when storage start and stop time of the automatic storage are programmed.
	REP	Repetition	Lights when storage repetition is programmed.
	INT	Interval time	Lights when storing interval is programmed.
	REF	Totalizing reference	Lights when totalizing reference temperature is programmed.
(2) Month/day		Month/day	Displays month and day.
(3) Sub display		Hour/minute and parameter item	Displays hour and minute when “ TIME ” or “ TERM ” lights in the main marker, or displays a parameter item in other cases.
(4) Main display 1		Temperature measured value	Displays measured temperature or totalized temperature.
(5) Main display 2		Humidity measured value	Displays measured relative humidity, measured dew-point temperature, or totalized temperature.
(6) Temperature measurement unit		°C	Lights when measured temperature is displayed in °C.
		°F	Lights when measured temperature is displayed in °F.
(7) Humidity measurement unit/totalized temperature measurement unit	%RH	Relative humidity	Lights when relative humidity is displayed.
	°CH	°C/°CH	°C lights when dew-point temperature and °C temperature are displayed. °CH lights when totalized temperature and °C temperature are displayed.
	°FH	°F/°FH	°F lights when dew-point temperature and °F temperature are displayed. °FH lights when totalized temperature and °F temperature are displayed.
(8) Low battery mark		Low battery mark	Lights when battery voltage becomes lower.

4. Installation

4.1 Using as a handheld type

When this meter is used as a handheld type, be careful not to cover the temperature/humidity sensor by hands or not to touch it by fingers. For the built-in type sensor, make sure to hold the lower half of this meter.

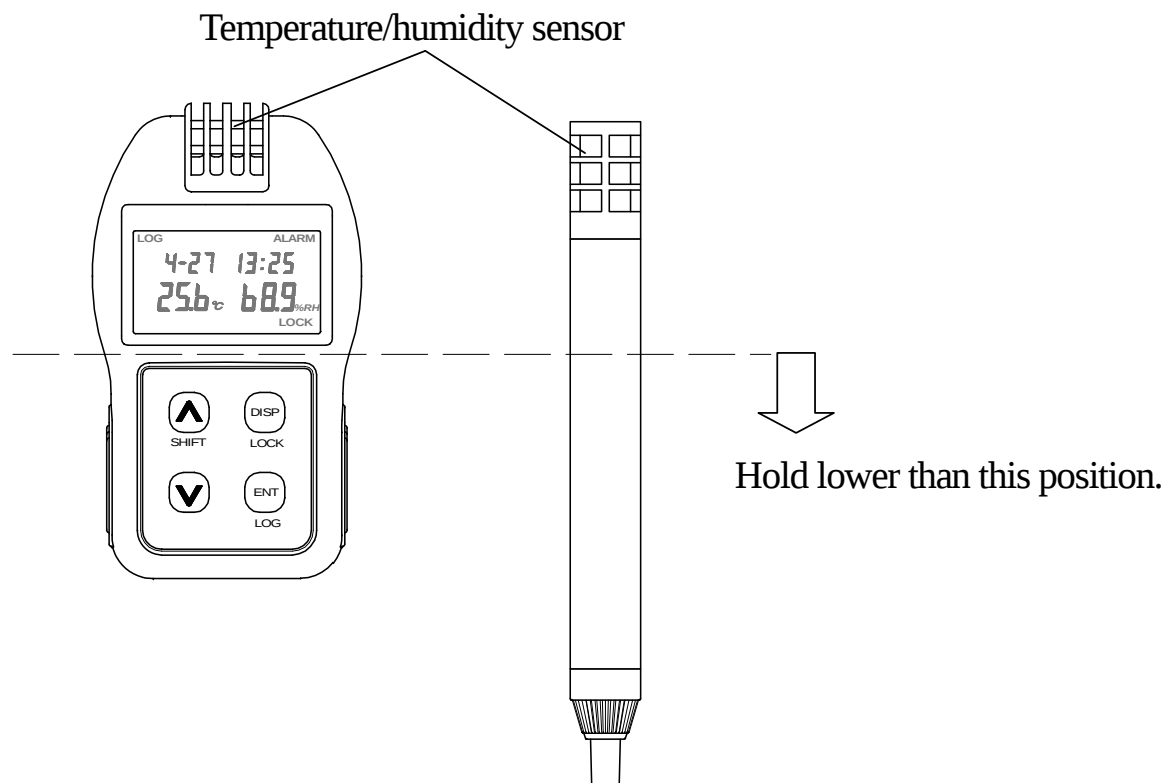


Caution

If the temperature/humidity sensor is covered by hands or touched by fingers, accurate temperature/humidity measurement is not possible.

4. Installation

4.2 Using as a wall installation type


When this meter is used as a wall installation type, hook the wall installation hole on the backside of this meter to a M4 screw or a nail mounted to the wall.

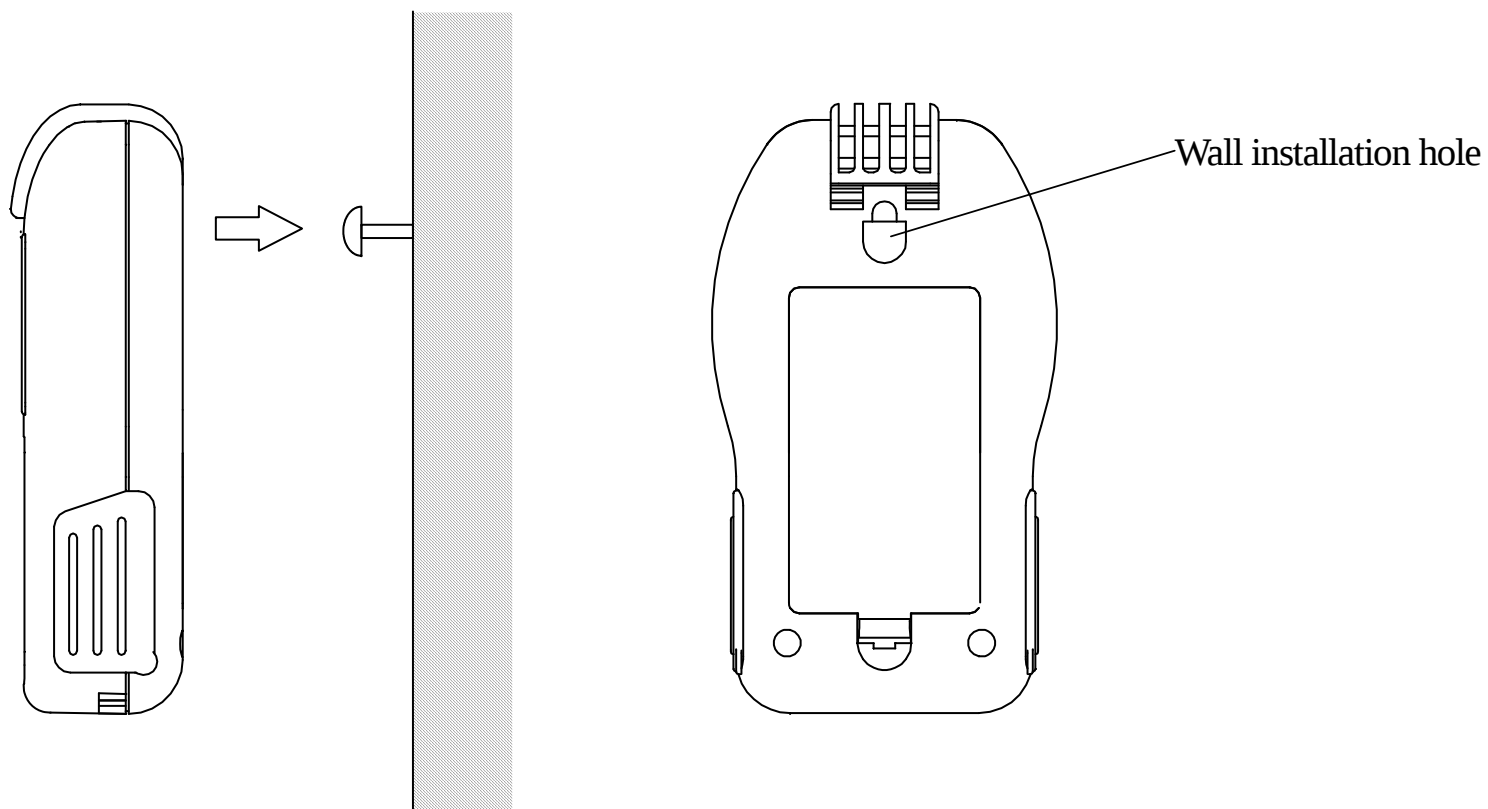

4. Installation

4.3 Using as a desktop installation type

When this meter is used as a desktop installation type, insert the desktop attachment to the holes for the desktop installation.

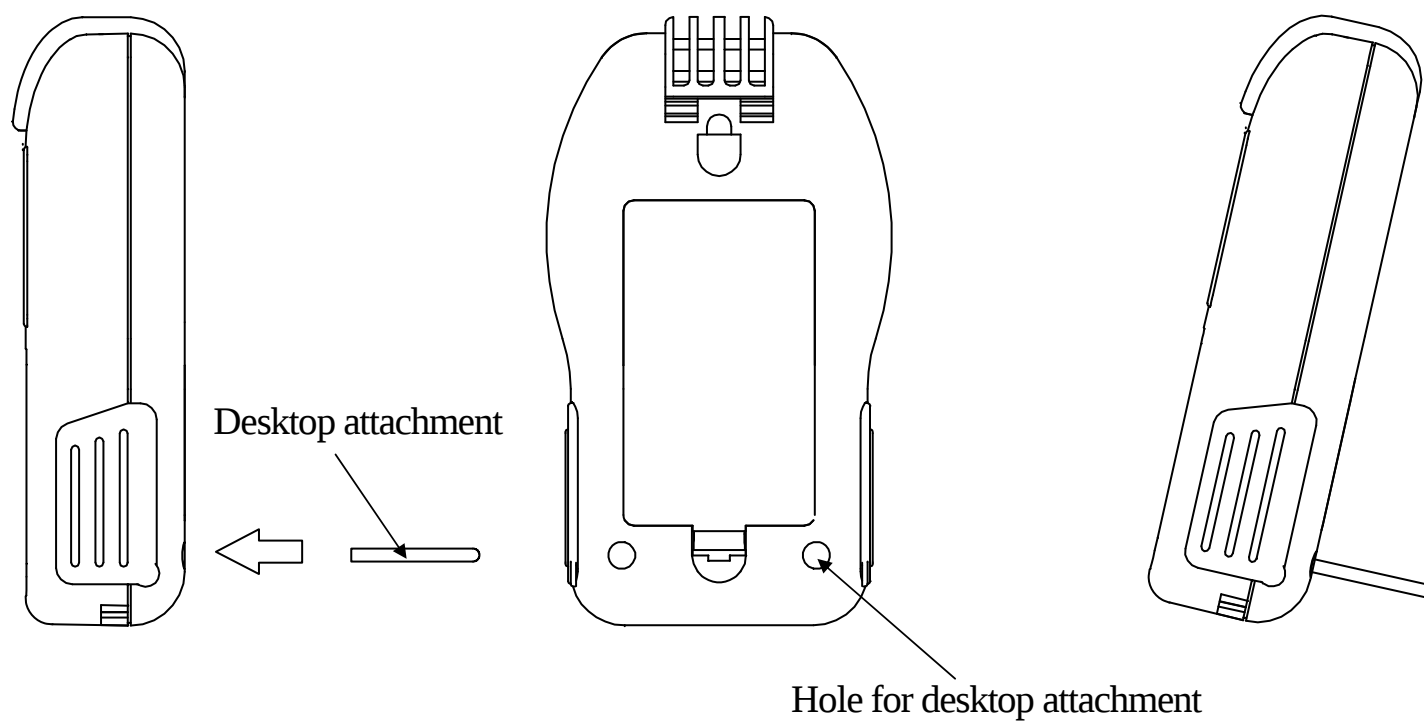


5. Measurement preparation

5.1 Loading of battery (AA=UM-3)

This meter is operated by two AA (UM-3) alkaline batteries.

Open the battery cover and load the batteries with correct polarities.

For opening the battery cover, push it lightly upward by lifting up the nail.

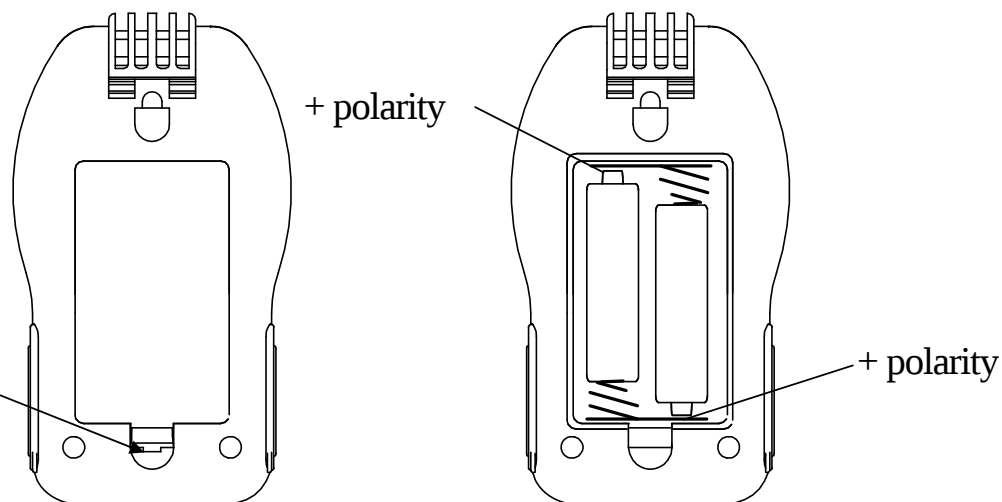

Caution

Load the batteries with correct polarities.

Reference

In operation of this meter with the AC power adapter (RH32-AC110* Note) only, the loading of the batteries is not required.

Note : Sold separately

5. Measurement preparation


Caution

- Battery life
 - When the battery voltage becomes lower, the low battery mark will light. Replace the batteries with new ones.
 - If you use this meter with the low battery mark being lit, “Er4” will be displayed in the main display 2. Replace the batteries with new ones.
 - When any displays are not shown, the batteries voltage becomes lower. Replace the batteries with new ones.
 - Battery replacement
 - Replace 2 batteries together.
 - Battery polarities
 - Load the batteries with correct polarities.
 - When the AC power adapter is used:
 - The low battery mark will not light.
 - If “Er4” displays in the main display 2, take the following procedures.
 - 1) Remove the AC power adapter from this meter.
 - 2) After then, take off the batteries or replace them into new ones.
 - 3) Connect the AC power batteries again.
- Note)** The clock will stop (reset) by the above procedure, adjust the clock. (Refer to [5.2 Clock adjustment].)

Reference

- Stop of clock in battery replacement

When the clock stops in the battery replacement, the clock will start from 0 hour 00 minute, January 1st, 2001 after the loading of the new batteries.

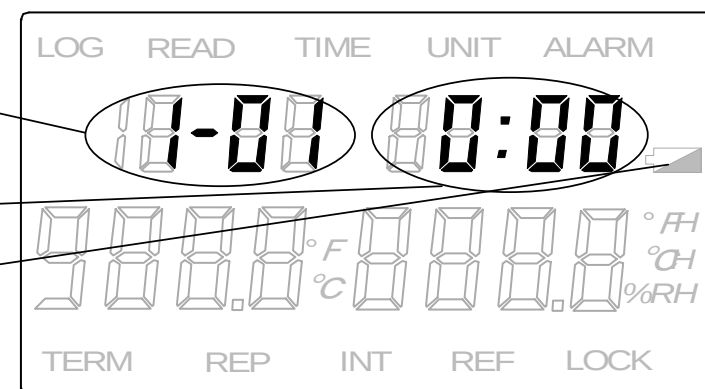


After the loading of the new batteries, month and day are displayed in the month/day display part, and hour and minute are displayed in the sub display.

5. Measurement preparation

5.2 Clock adjustment


5.2.1 Clock adjustment mode

In the continuous measurement mode, press **[DISP]** key for 2 seconds to go to the stored data reading mode with “**READ**” lit in the main marker. Press **[DISP]** key again several times to go to the clock adjustment mode. In the clock adjustment mode, “**TIME**” will light in the main marker and “month” will flash.

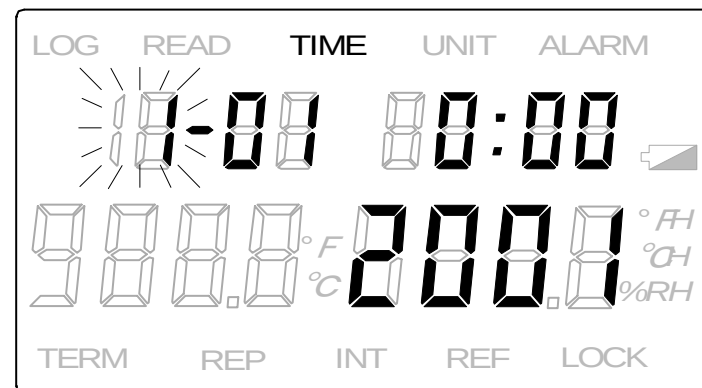


5.2.2 Retaining of month

Select the “month” by pressing **[Δ]** key or **[▽]** key.
By pressing **[ENT]** key, the month selected will be retained and “day” will flash.

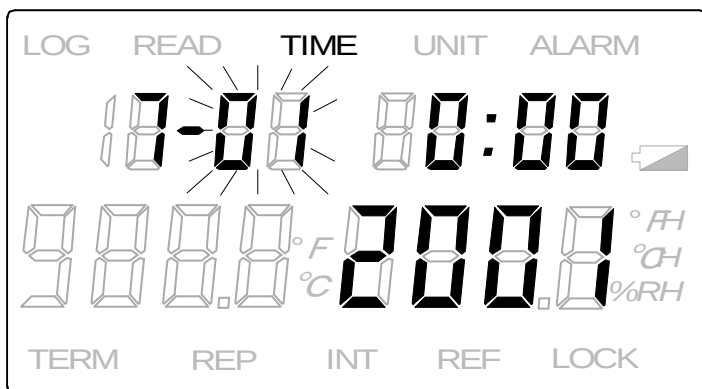

5.2.3 Retaining of day


Select the “day” by pressing **[Δ]** key or **[▽]** key.
By pressing **[ENT]** key, the day selected will be retained and “hour” will flash.

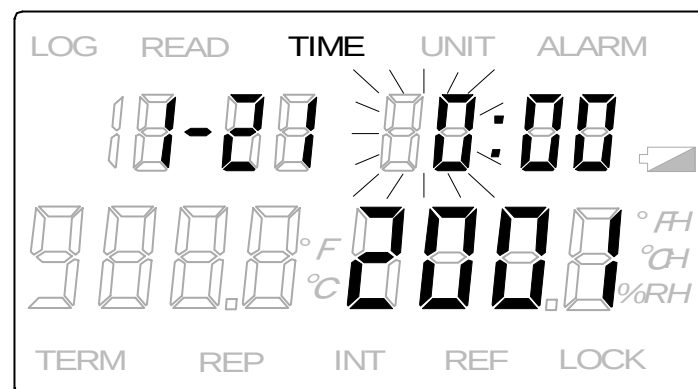

5. Measurement preparation


5.2.4 Retaining of hour

Select the “**hour**” by pressing Δ key or ∇ key.
By pressing **ENT** key, the hour selected will be retained and “minute” will flash.

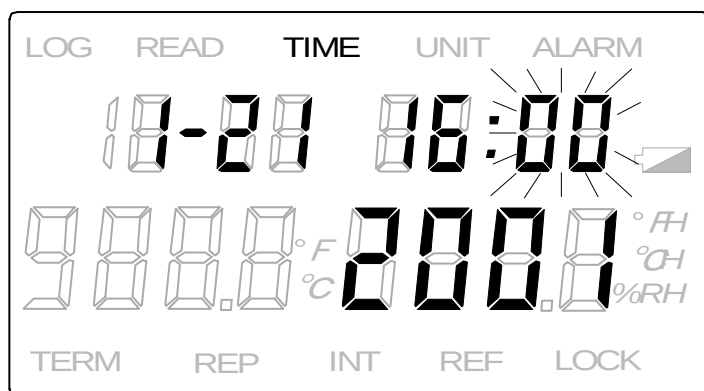

5.2.5 Retaining of minute

Select the “**minute**” by pressing Δ key or ∇ key.
By pressing **ENT** key, the minute selected will be retained and “year” will flash.

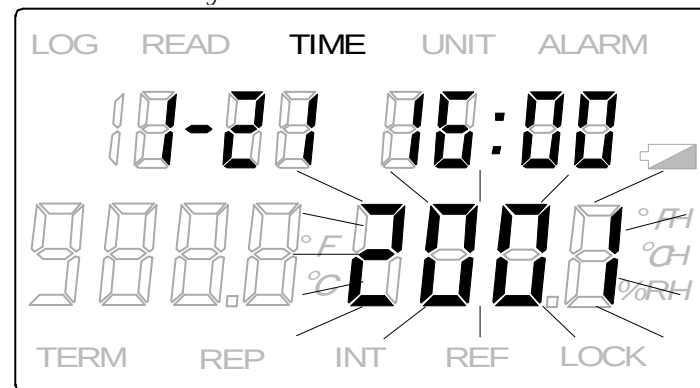

5.2.6 Retaining of year

Select the “**year**” by pressing Δ key or ∇ key. (The year up to 2099 can be selected.)
Press **ENT** key to retain the year selected.

5.2.7 Storing of clock

The flashing of the year selected will stop and the clock programmed will be stored.

Reference

- Judgment of clock

The judgment of the clock programmed is executed after pressing **ENT** key in [5.2.7 Storing of clock]. If the date not existed (Ex. February 31) has been programmed, the screen will return to [5.2.2 Retaining of month] screen with “month” flashing. Reprogram the correct date.

This judgment function supports leap years.

5. Measurement preparation

[Programming range of clock]

	Programming range	Default
Month *	1 to 12	1
Day *	01 to 31	01
Hour	0 to 23	0
Minute	00 to 59	00
Year	2001 to 2099	2001

* Leap years are supported.

Reference

The time is based on 24-hour clock system. Program 14-hour for PM2 and 22-hour for PM10.
If **DISP** key is pressed before the retaining of year, the programmed data before it will not be stored.

Caution

For the programming by  key, when the value reaches to the maximum value of the programming range, it will not return to the default value even if  key is pressed continuously.
Use  key to decrease the value.

Reference

- Accurate clock programming
For the accurate clock programming including second, take the following procedures.
 1. Load the batteries at 0 second by referring to the radio time signal or an accurate watch.
 2. Adjust the clock with the procedures from Para. 5.2.1 to Para. 5.2.7.
 The counting of second starts at the moment the battery is loaded.

Caution


- The clock will be initialized when the batteries are replaced. Reprogram the clock.
- If the clock is reprogrammed, all time-related-parameters will be initialized. Reprogram the parameters.

5. Measurement preparation

5.3 Measurement unit selection


5.3.1 Measurement unit selection mode

In the clock adjustment mode with “**TIME**” lit in the main marker, press **DISP** key several times to go to the measurement unit selection mode (“**UNIT**” will light in the main marker.). In the measurement unit selection mode, “°C” will flash.

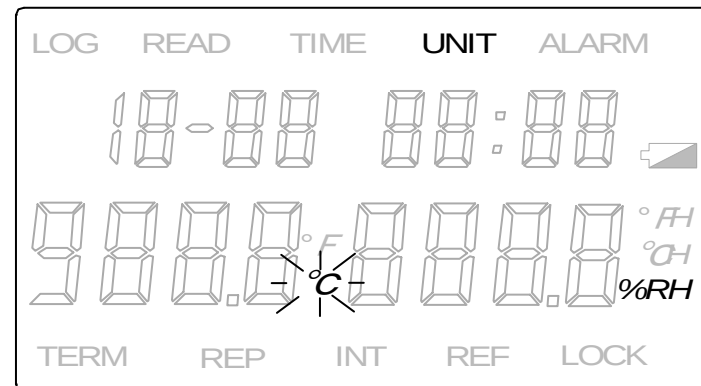

5.3.2 Temperature measurement unit

By pressing Δ key or ∇ key, “°C” or “°F” will flash. Press **ENT** key to retain the temperature measurement unit selected. The temperature measurement unit selected will stop flashing and the humidity measurement unit will flash.

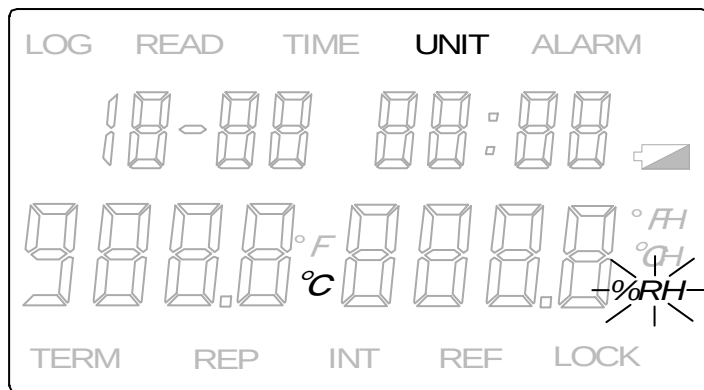

5.3.3 Humidity measurement unit

By pressing Δ key or ∇ key, “°C” or “%RH” will flash when “°C” is selected in [5.3.2 Selection of temperature measurement unit], or “°F” or “%RH” will flash when “°F” is selected.

Press **ENT** key to retain the humidity measurement unit selected. The humidity measurement unit selected will stop flashing

5. Measurement preparation

Reference

When the measurement unit is changed, the parameters of high alarm, low alarm and totalizing reference temperature will be initialized.

When “°C” is selected for the temperature measurement unit, the humidity measurement unit is selected from “%RH” or “°C”. When “°F” is selected, it is selected from “%RH” or “°F”. In condition that “°C” is for the temperature measurement unit and the humidity measurement unit, when “°F” is selected for the temperature measurement unit, the humidity measurement unit becomes “°F” forcibly.

	Selection	Default
Temperature unit	°C, °F	°C
Humidity unit	%RH (Relative humidity) °C, °F (Dew-point temperature)	%RH

Press **DISP** key for about 2 seconds to go to the continuous measurement mode (Ref. [6.1 Continuous measurement] for starting the measurement.

6. Continuous measurement

6.1 Continuous measurement mode


By pressing **DISP** key, the temperature/humidity measurement will start after bars are displayed for about 1 second.

The measured temperature will be displayed in the main display 1 and the measured humidity will be displayed in the main display 2 together with the display of month, day, hour, and minute at the measurement.

The temperature measurement unit and the humidity measurement unit being displayed are the units already selected.

For the selection of the measurement unit, refer to [5.3 Measurement unit selection].

If “**ALARM**” lights in the main marker, the measurement value has exceeded a high alarm setpoint or a low alarm setpoint. Check the setpoints and reprogram them if necessary. Refer to [4.2 High alarm setpoint] and [4.3 Low alarm setpoint] in the separate instruction manual Vol. 2 <Function instructions>.

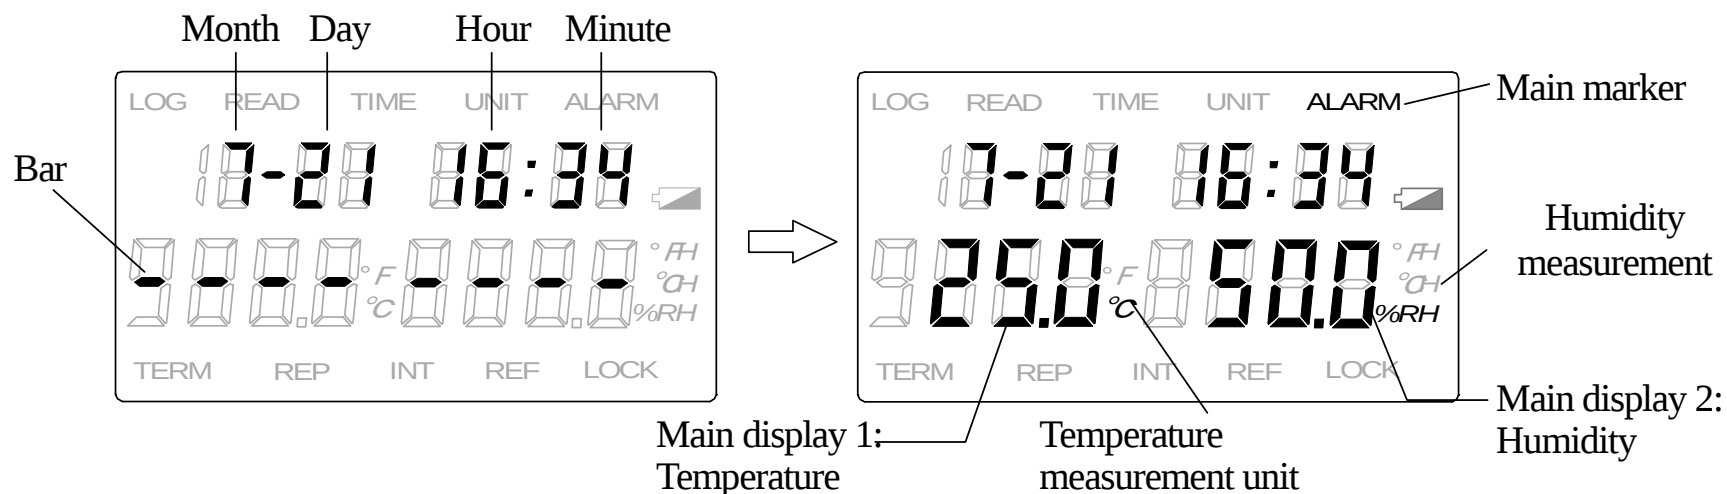

Caution

If “**Er4**” for “low battery” or “meter abnormal” is displayed in the main display 2, replace the batteries first. (Ref. [5.1 Loading of batteries] in the separated instruction manual Vol. 1 <Basic instructions>)
If “**Er4**” is still displayed by the above replacement of batteries, contact your CHINO’s agent.

6. Measurement and data storage

6.2 Measured temperature/humidity display range

Reference

When the measured temperature is lower than the minimum limit, “**uFL**” will be displayed in the main display 1 and, when it is higher than the maximum limit, “**oFL**” will be displayed.
When the measured humidity is 0%, 0% will be displayed, but when the measured humidity is higher than 100% (dew condensation), the value will be held at 100%.

Temperature	°C	-40 to 80°C
	°F	-40 to 176°F
Humidity	%RH	0 to 100%RH
	°C	-60 to 80°C
	°F	-76 to 176°F

When the clock is displayed after the measurement for about 1 minute, the auto-power-off function is “**on**” (active).

For continuing the continuous measurement, select the auto-power-off function to “**oFF**” (release). (Ref. [Auto-power-off function] in Important notices)

Caution

When the auto-power-off function is set at “**oFF**” (release) and the continuous measurement is executed, the batteries will be consumed very rapidly.
For the continuous measurement constantly executed, use the AC power adapter (RH32-AC110) sold separately.

7. Replacement of temperature/humidity sensor (Ref. [3.1 Overviews and functions])


The following procedure is for the replacement of the temperature/humidity sensor being used for long period with a new one or the replacement of the built-in type temperature/humidity sensor with the separated type sensor or the probe type sensor.

1) Pull out the temperature/humidity sensor from this meter.


Caution

Make sure to pull out the temperature/humidity sensor straight by holding its front and rear faces by two fingers. Pins may be bent if it is not pulled out straight.

For disconnecting the separated type sensor or the probe type sensor from this meter, pull out it by holding the connection part. Make sure not to pull out the cable. (Ref. [11. External dimensions])

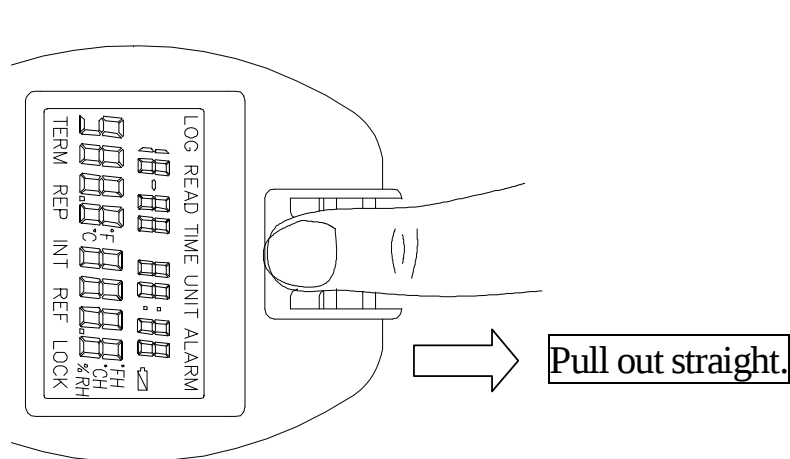

<Built-in type RH32B>

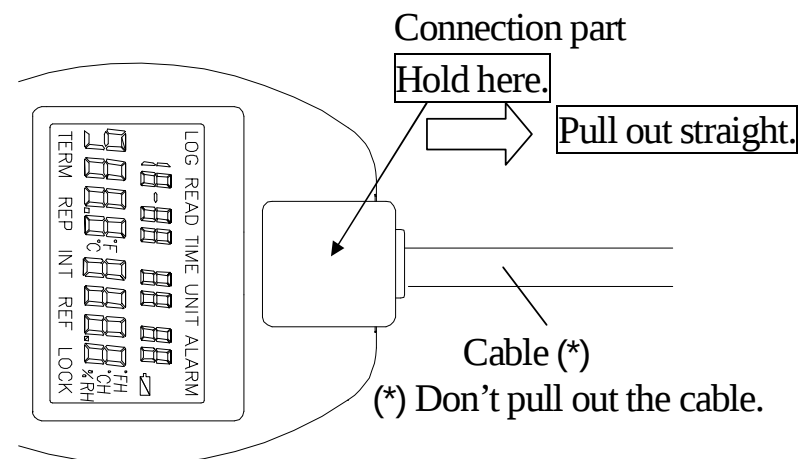

<Separated type RH32S>
<Probe type RH32P>


7. Replacement of temperature/humidity sensor (Ref. [3.1 Overviews and functions])

- 2) Align the protrusions at both sides of the connection part of the temperature/humidity sensor (RH32S-RP and RH32P-RP) or at both sides of the built-in sensor (RH32B-RP) with the concave portions of this meter, and insert the connection part or the built-in sensor straight.
- 3) Align the pins of the connection part or the built-in sensor with the connector of this meter, and push the connection part or the built-in sensor into this meter straight.

Caution

If you squeeze the connection part or the built-in sensor into this meter, the positions of the connector of this meter and the pins of the connection part or the built-in sensor are not fitted and the pins may be broken.




- 4) Press **DISP** key for about 2 seconds to go to the continuous measurement mode. At this time, the temperature and humidity values displayed are different from the exact measured values.

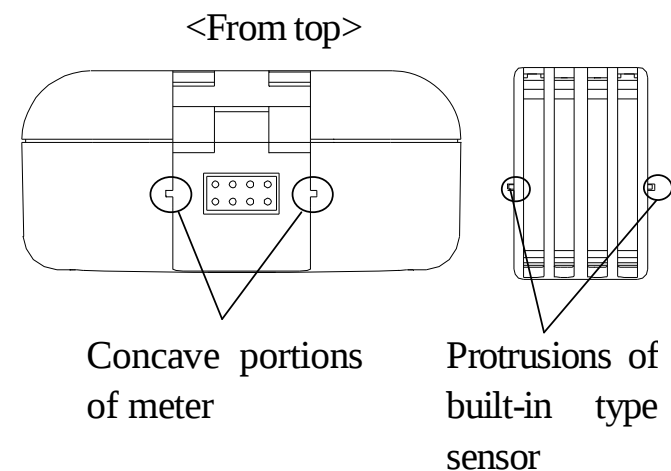

7. Replacement of temperature/humidity sensor (Ref. [3.1 Overviews and functions])

5) In the continuous measurement mode, press  key while pressing  (SHIFT) key.

After bars are displayed for about 1 second, the correct temperature and humidity measured values will be displayed.

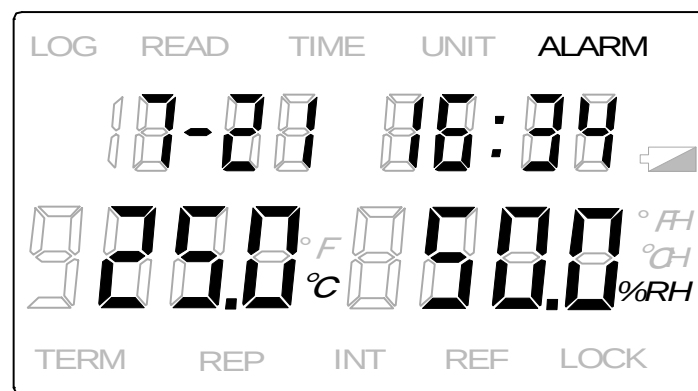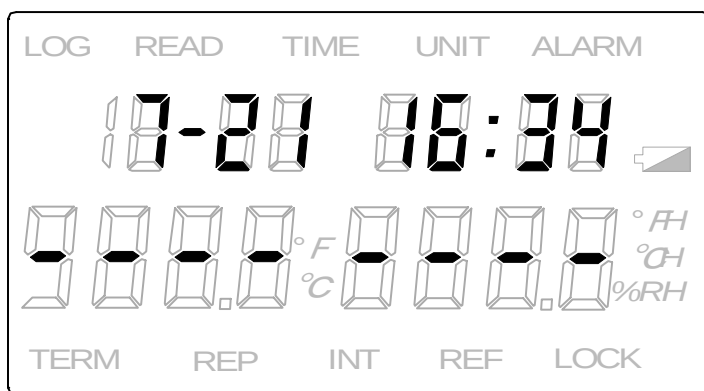

Reference

Interchangeability of temperature/humidity sensors

The temperature/humidity sensors, the built-in type (RH32B-RP), the separated type (RH32S-RP) and the probe type (RH32P-RP), are interchangeable.

The interchangeability will be obtained by pressing  key while pressing  (SHIFT) key in the procedure No. 5)

8. Working environment

Avoid to use this meter in the following places.

- Places where the ambient temperature is out of -10 to 50°C (this meter)
- Places where the ambient temperature is out of -40 to 80°C (separated type and probe type sensors)
- Places where dew condenses
- Places where vibration or impact affects
- Places where much noise exist
- Places where dusts exist
- Places where much ketones organic solvent, esters organic solvent, halogen, strong acid material, corrosive material or dust/oil mist/salt mist exist
- Places where explosive gas, corrosive gas or flammable gas exist
- Places where steam, chemicals or seawater splash

Caution

As the humidity element is constantly exposed in ambient atmosphere, its performance may be remarkably deteriorated depending on measuring environment.

Its life depends on the kind of environment. Particularly avoid using it in the following places as these places make the humidity element life shorten rapidly.

- Place where ketones organic solvent, esters organic solvent, halogen, strong acid material, corrosive material, dust/oil mist/salt mist, corrosive gas, steam or seawater splashing exist.

9. Troubleshooting

Phenomenon	Content	Countermeasure
1) "Er1" is displayed in the main display 1.	Temperature measurement can't be executed.	Check the connection of the temperature/humidity sensor. (Ref. [7. Replacement of temperature/humidity sensor])
2) The humidity value in the main display 2 is 100%RH (The dew-point temperature display becomes the same value as the temperature measured value.).	100%RH has been measured in the humidity measurement.	Check if dew has been condensed in the temperature/humidity sensor. Measurement is possible after recovering from dew condensation.
		Check the connection of the temperature/humidity sensor. (Ref. [7. Replacement of temperature/humidity sensor])
	Interchangeability of the temperature/humidity sensor has not been obtained.	Press  key while pressing  key. (Ref. [7. Replacement of temperature/humidity sensor])
3) The humidity value in the main display 2 is 0%RH (The dew-point temperature display becomes -60°C.).	0%RH has been measured in the humidity measurement.	The humidity measurement from 0%RH is possible. Check if an object is not in absolute dry condition.
		Check the connection of the temperature/humidity sensor. (Ref. [7. Replacement of temperature/humidity sensor])
	Interchangeability of the temperature/humidity sensor has not been obtained.	Press  key while pressing  key. (Ref. [7. Replacement of temperature/humidity sensor])
4) "Er1" is displayed in the main display 2.	Humidity measurement can't be executed.	Check the connection of the temperature/humidity sensor. (Ref. [7. Replacement of temperature/humidity sensor])
5) "Er2" is displayed in the main display 2.	In the dew-point temperature display, the dew-point computation is not possible due to abnormal temperature data.	If "Er1" is displayed in the main display 1, check the connection of the temperature/humidity sensor. (Ref. [7. Replacement of temperature/humidity sensor])

9. Troubleshooting


Phenomenon	Content	Countermeasure
6) “Er4” is displayed in the main display. 2	The batteries are dead. If “Er4” is still displayed after the battery replacement, this meter has been abnormal.	Replace the batteries with new ones. (Ref. [5.1 Loading of batteries]) If “Er4” is still displayed after the battery replacement, contact your OMEGA’s agent.
7) Nothing including the clock is displayed.	No power has been supplied.	Replace the batteries with new ones. (Ref. [5.1 Loading of batteries])
8) None displayed	The batteries are dead	Replace the batteries with new ones. (Ref. [5.1 Loading of batteries])
9) “oFL” is displayed in the main display 1.	Temperature measured value overflowed	Check the temperature measuring range. Check the connection of the temperature/humidity sensor. (Ref. [7. Replacement of temperature/humidity sensor])
10) “uFL” is displayed in the main display 1.	Temperature measured value under flowed	Check the temperature measuring range. Check the connection of the temperature/humidity sensor. (Ref. [7. Replacement of temperature/humidity sensor])

10. Specifications

Relative humidity	Sensor	High-polymer capacitance type
	Measuring range	0 to 100%RH
	Accuracy ratings	±2%RH (0 to 90%RH, at 25°C), ±3%RH (90 to 95%RH, at 25°C)
	Stability (under EMC test environment)	±3%RH
	Temperature coefficient	±0.1%RH/°C (5 to 80°C)
	Response time	Shorter than 15 seconds (90% response, 25°C constant, under 0.1m/s ventilation)
Temperature	Sensor	Semi-conductor type temperature sensor
	Measuring range	-10 to 50°C, -40 to 80°C (Probe type RH32P, separated type RH32S)
	Accuracy ratings	±0.5°C (0 to 50°C), ±1°C (other than the left shown)
	Stability (under EMC test environment)	±0.5%RH
Sensor interchangeability		Plug-in type interchangeability (Plug-in type interchangeability including 1.5m cable for probe type and separated type sensor)
Power supply		2 AA (UM-3) alkaline batteries or 100VAC (AC power adapter – sold separately)
Display	Current data	Year, month, day, hour, minute, temperature measured value (°C or °F), Relative humidity or dew-point temperature measured value (°C or °F)
	Data reading	Programmed parameters, stored data with year, month, day, hour, and minute (The year data is available in using the data logging software package (sold separately). Max. temp./humidity, min. temp./humidity, average temp./humidity, totalized temperature
	Parameter item	Clock: Year, month, day, hour, minute, Temperature: °C, °F Relative humidity, dew-point temperature (°C or °F) Storage mode: Manual [by pressing of ENT (LOG) key for more than 2 seconds] or automatic Storage start time: Year, month, day, hour, minute, or by pressing of ENT (LOG) key while pressing  (SHIFT) key Storage stop time: Year, month, day, hour, minute or by pressing of ENT (LOG) key while pressing  (SHIFT) key Storage repetition: Disable, every day, every week Measurement interval: continuous, 1 to 60 minutes High/low alarms, totalizing reference temperature, totalizing direction, auto-power-off, key lock
	Display content	Clock – displayed constantly Measured values – displayed by pressing DISP key for about 2 seconds in power-off condition
Number of stored data		Temperature/humidity – each maximum 8000 data, total 16000 data EEPROM)
Communications function		RS-232C or RS-485

11. External dimensions


11.1 External dimensions of RH32B-C□

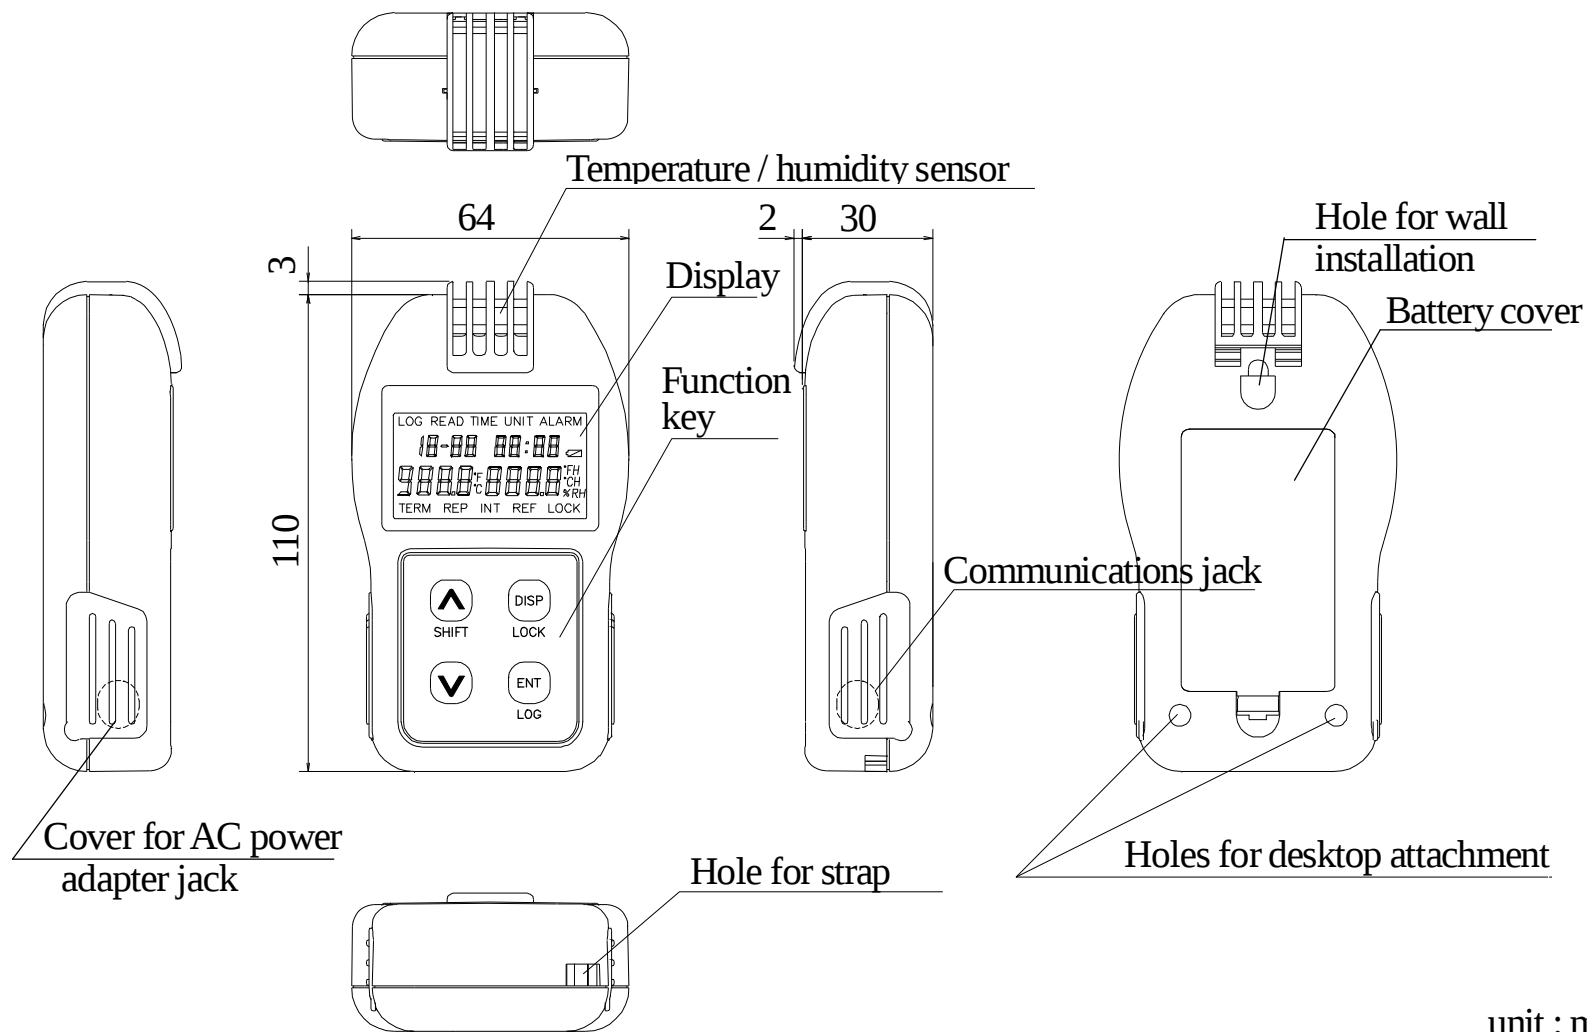


unit : mm

11. External dimensions

11.2 External dimensions of RH32P-C□

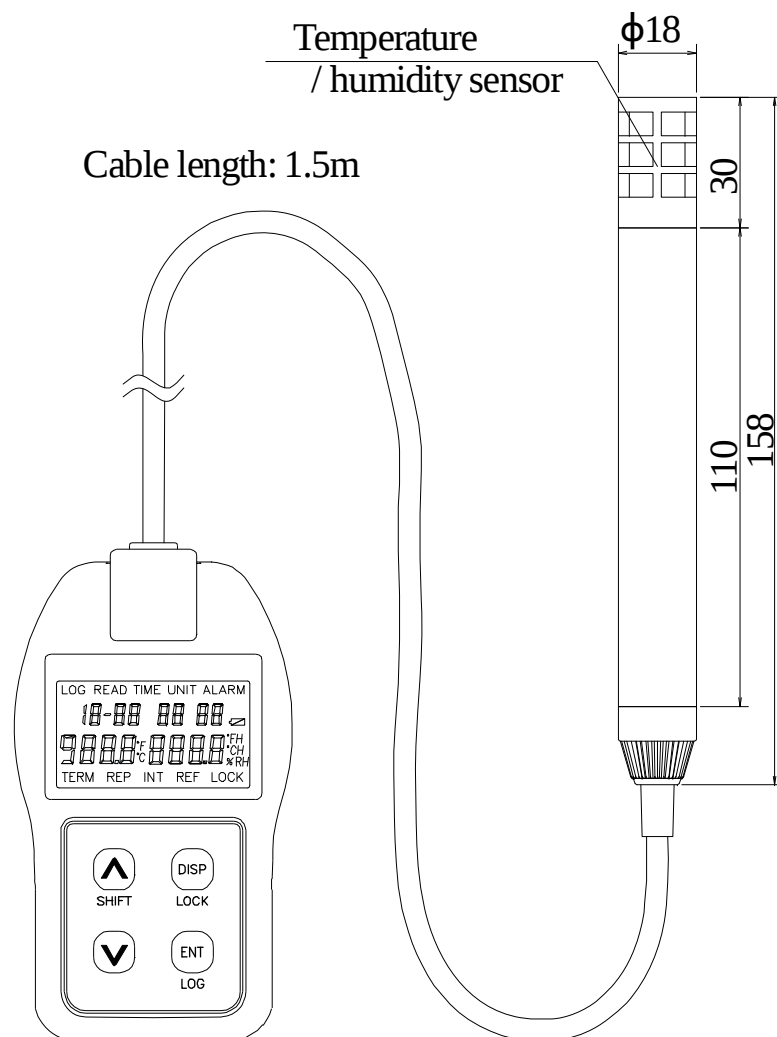

11.3 External dimensions of RH32S-C□

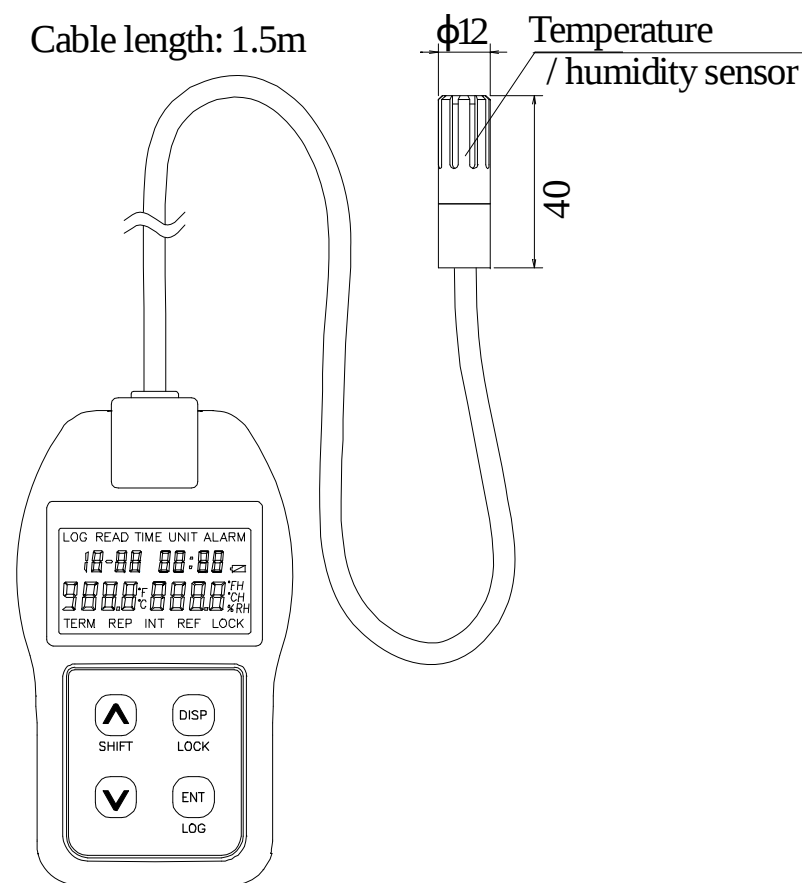

unit : mm