



Maintenance and Service Guide

HP ProBook 455 G7 Notebook PC

IMPORTANT! This document is intended for HP authorized service providers only.

© Copyright 2020 HP Development Company, L.P.

AMD, Radeon, and Ryzen are trademarks of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Intel, Optane, and Thunderbolt are trademarks of Intel Corporation in the U.S. and other countries. SDHC, SDXC, and microSD are trademarks or registered trademarks of SD-3C in the United States, other countries or both. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. DisplayPort™ and the DisplayPort™ logo are trademarks owned by the Video Electronics Standards Association (VESA®) in the United States and other countries.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: April 2020

Document Part Number: L92358-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows 10 is automatically updated, which is always enabled. ISP fees may apply and additional requirements may apply over time for updates. Go to <http://www.microsoft.com> for details.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **User Guides**.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by applicable safety standards.

Table of contents

1 Product description	1
2 Components	6
Right	6
Left	8
Display	9
Keyboard area	10
Touchpad	10
Lights	11
Button, speakers, and fingerprint sensor	12
Special keys	13
Hot keys (select products only)	14
Bottom	14
Labels	15
3 Illustrated parts catalog	16
Computer major components	16
Display components	19
Cable Kit	21
Bracket Kit	22
Mass storage devices	23
Miscellaneous parts	24
4 Removal and replacement procedures preliminary requirements	27
Tools required	27
Service considerations	27
Plastic parts	27
Cables and connectors	27
Drive handling	28
Workstation guidelines	28
Electrostatic discharge information	28
Generating static electricity	29
Preventing electrostatic damage to equipment	29
Personal grounding methods and equipment	30
Grounding the work area	30
Recommended materials and equipment	30

Packaging and transporting guidelines	31
5 Removal and replacement procedures for authorized service provider parts	32
Component replacement procedures	32
Preparation for disassembly	32
Battery Safe mode	32
Bottom cover	33
Battery	34
Memory modules	35
WLAN/Bluetooth combo card	37
M.2 solid-state drive	39
Hard drive	40
Speaker assembly	42
Fan	43
Heat sink	44
USB board	46
Battery connector board	48
Touchpad assembly	49
Fingerprint sensor assembly	50
Card reader board	51
RTC battery	53
System board	54
Display assembly	57
Power connector cable	66
Keyboard/top cover	67
6 Computer Setup (BIOS), TPM, and HP Sure Start	68
Using Computer Setup	68
Starting Computer Setup	68
Navigating and selecting in Computer Setup	68
Restoring factory settings in Computer Setup	68
Updating the BIOS	69
Determining the BIOS version	69
Downloading a BIOS update	69
Changing the boot order using the f9 prompt	70
TPM BIOS settings (select products only)	70
Using HP Sure Start (select products only)	71
7 Using HP PC Hardware Diagnostics	72
Using HP PC Hardware Diagnostics Windows (select products only)	72

Downloading HP PC Hardware Diagnostics Windows	72
Downloading the latest HP PC Hardware Diagnostics Windows version	73
Downloading HP Hardware Diagnostics Windows by product name or number (select products only)	73
Installing HP PC Hardware Diagnostics Windows	73
Using HP PC Hardware Diagnostics UEFI	73
Starting HP PC Hardware Diagnostics UEFI	74
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive	74
Downloading the latest HP PC Hardware Diagnostics UEFI version	74
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)	75
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)	75
Downloading Remote HP PC Hardware Diagnostics UEFI	75
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version	75
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number	75
Customizing Remote HP PC Hardware Diagnostics UEFI settings	75
8 Backing up, restoring, and recovering	77
Backing up information and creating recovery media	77
Using Windows tools	77
Using the HP Cloud Recovery Download Tool to create recovery media (select products only)	77
Restoring and recovery	78
Restoring, resetting, and refreshing using Windows tools	78
Recovering using HP Recovery media	78
Changing the computer boot order	78
Using HP Sure Recover (select products only)	79
9 Specifications	80
Computer specifications	80
39.6 cm (15.6 in) display specifications	81
Hard drive specifications	81
Solid-state drive specifications	82
10 Statement of memory volatility	83
Nonvolatile memory usage	85
Questions and answers	87
Using HP Sure Start (select models only)	88
11 Power cord set requirements	89
Requirements for all countries	89

Requirements for specific countries and regions 90

12 Recycling 92

Index 93

1 Product description

Table 1-1 Product components and their descriptions

Category	Description
Product Name	HP ProBook 455 G7 Notebook PC
Processors	AMD® Ryzen™ Mobile Processor (15 W) Ryzen 7 PRO 4750U, 1.7 GHz/4.2 GHz, eight cores, 8 MB L3 cache; 4 MB L2 cache; AMD Radeon™ Graphics Ryzen 7 4700U, 2.0 GHz/4.2 GHz, eight cores, 8 MB L3 cache; 4 MB L2 cache; AMD Radeon™ Graphics Ryzen 5 PRO 4650U, 2.1 GHz/4.0 GHz, eight cores, 8 MB L3 cache; 4 MB L2 cache; AMD Radeon Graphics Ryzen 5 4500U, 2.375 GHz/4.0 GHz, six cores, 8 MB L3 cache; 3 MB L2 cache; AMD Radeon Graphics Ryzen 3 4300U, 2.7 GHz/3.8 GHz, four cores, 4 MB L3 cache; 2 MB L2 cache; AMD Radeon Graphics
Graphics	Supports HD decode, DX12, HDMI 1.4b up to 4 K @ 30 Hz AMD Radeon Graphics Supports 4 independent displays when on the HP USB-C Dock G4; Max resolution = 4 K @ 30 Hz (DisplayPort™ 1) or 4 K @ 30 Hz (DisplayPort 2) Supports 4 independent displays when on the HP Thunderbolt™ Dock 120 W G2; Max resolution = 4 K @ 30 Hz (DisplayPort 1) or 4 K @ 30 Hz (DisplayPort 2) Supports 4 independent displays when on the HP USB-C Mini Dock ; Max resolution = 4 K @ 30 Hz (HDMI) or 1920 × 1080 @ 60 Hz (VGA) Supports 4 independent displays when on the HP USB-C Universal Dock; Max resolution = 4 K @ 30 Hz (DisplayPort 1) or 4 K @ 30 Hz (DisplayPort 2)
Panel	39.6 cm (15.6 in), LED backlight, antiglare, nontouch High definition (HD) (1366 × 768), SVA, 45% CG, eDP, slim, 220 nits HD, SVA, 45% CG, eDP, slim, 220 nits, with HD camera HD, SVA, 45% CG, eDP, slim, 220 nits, with HD + IR camera Full high definition (FHD) (1920 × 1080), UWVA, 45% CG, eDP, slim, 250 nits FHD, UWVA, 45% CG, eDP, slim, 250 nits, with HD camera FHD, UWVA, 45% CG, eDP, slim, 250 nits, with HD + IR camera FHD, UWVA, 72% CG, eDP, slim, 400 nits, with HD camera FHD, UWVA, 72% CG, eDP + PSR, flat, 1000 nits, privacy, with HD camera
Memory	Two customer-accessible memory module slots supporting up to 16 GB of RAM Supports dual-channel memory PC4-3200, DDR4 SODIMMs Supports the following configurations: • 32 GB (16 × 2)

Table 1-1 Product components and their descriptions (continued)

Category	Description
	16 GB (16 × 1) or (8 × 2) 12 GB (8 + 4) 8 GB (8 × 1) or (4 × 2) 4 GB (4 × 1)
Primary storage	Supports the following SATA, 7 mm, 2.5 inch hard drive: 1 TB, 5400 rpm 500 GB, 7200 rpm
Primary M.2 storage	Supports the following M.2 2280 solid-state drives: 512 GB, PCIe, NVMe, TLC 512 GB, PCIe, NVMe, value 256 GB, PCIe, NVMe, value 128 GB, SATA, TLC
Fixed optical drive	Supports external USB drive via power port
Audio/Visual	Audio controls Integrated dual-array microphone Integrated mono microphone Integrated camera (720p HD) (select products only) Integrated camera (720p HD + IR) (select products only) Camera privacy cover Supports WDR (Wide Dynamic Range) Audio-out (headphone)/audio-in (microphone) combo jack
RJ-45 (network)	Realtek RTL8111HSH-CG 10/100/1000 Supports S3/S4/S5 wake on LAN with embedded NIC The following support S3/S4/S5 wake on LAN (via out of band): HP USB-C Universal Dock, HP USB-C Dock G4, HP Thunderbolt Dock 120 W G2, HP USB-C Mini Dock, HP USB-C/A Universal Dock G2, and HP USB-C Dock G5. The following support S0/S3/S4/S5 MAPT (via out of band): HP USB-C Universal Dock, HP USB-C Dock G4, HP Thunderbolt Dock 120 W G2, HP USB-C Mini Dock, HP USB-C/A Universal Dock G2, and HP USB-C Dock G5.
Wireless	Wireless Personal Area Network (PAN) Bluetooth Bluetooth® 5.0 supported using combo card Wireless Local Area Network (WLAN) (select products only) Integrated WLAN options with dual antennas M.2 2230 socket (PCIe/USB): - Realtek RTL8822CE 802.11ac 2 × 2 Wi-Fi + Bluetooth 5.0 - Intel Dual Band Wireless-AC 9260 802.11ac 2 × 2 Wi-Fi + Bluetooth 5.0 Combo Adapter (non-vPro)

Table 1-1 Product components and their descriptions (continued)

Category	Description
	Intel Wi-Fi 6 AX200 802.11ax 2 × 2 + Bluetooth 5.0 (non-vPro, supports gigabit file transfer speeds)
	WLAN antennas (configured at bottom of all panels)
	Supports HP LAN-Wireless Protection (WLAN/LAN switching)
	Supports HP Connection Optimizer with Data Analytics
	Supports WoWLAN S3/S4 AC Mode
	Supports Turbo Lite Wi-Fi
	Bluetooth S3 Wake-up
Media card reader	Supports microSD™, SDHC™, SDXC™
Ports (input/output)	Hot plug/unplug and autodetect
	HDMI 1.4
	USB 2.0 + powered port (left)
	Two USB 3.1 Gen 1 ports (right)
	USB 3.1 Gen 1 Type-C port (PD + DP)
	Audio-out (headphone)/audio-in (microphone) combo jack
	RJ-45 (network)
	Multi-pin AC port
Sensors	Accelerometer
	Hall sensor
Docking	HP Thunderbolt Dock 120 W G2
	HP USB-C Dock G4
	HP USB-C Universal Dock
	HP USB-C Mini Dock
	HP TB Dock G2 Audio Module
	HP USB-C/A Universal Dock G2
	HP USB-C Dock G5
Keyboard/pointing devices	Keyboard
	Backlit and not backlit, spill-resistant, with numeric keypad
	Touchpad requirements
	Precision Touchpad Default Gestures Support
	FW PTP
	No Hybrid Mode support
Power requirements	Battery
	3 cell, 45 Whr, lithium polymer, soft pack, HP Long Life

Table 1-1 Product components and their descriptions (continued)

Category	Description
	HP Fast Charge Technology
	AC adapters
	45 W, straight, USB Type-C AC adapter, nPFC, 1.8 m (5.9 ft)
	45 W, right angle, 4.5 mm
	45 W, right angle, 4.5 mm, for use in Argentina
	45 W, right angle, 4.5 mm, 2 prong, for use in Japan
	65 W straight USB Type-C AC adapter
	65 W, right angle, 4.5 mm
	65 W, right angle, 4.5 mm, for use in Argentina
	65 W Smart AC adapter, right angle, 4.5 mm - EM
	Power cords
	3-wire plug (C5), 1.8 m (5.9 ft), conventional
	3-wire plug (C5), 1.0 m (3.3 ft), conventional
	2-wire plug (C7), 1.0 m (3.3 ft), conventional,
	Duckhead power cord (C5NS), 1.8 m (5.9 ft)
	Duckhead power cord (C5NS), 1.0 m (3.3 ft)
	Duckhead (C5NS)
Security	Security lock
	Integrated touch fingerprint sensor (select products only)
	TPM 2.0 (Infineon; soldered down)
	Hardware enforced firmware protection: HP Hardware Root of Trust
	Preboot authentication (password)
Operating system	Operating system version
	Windows® 10
	FreeDOS 3.0
	Preinstalled
	Windows 10 Home 64
	Windows 10 Home 64 Advanced
	Windows 10 Home 64 Advanced Single Language
	Windows 10 Home 64 Chinese Market CPPP
	Windows 10 Home 64 High-end Chinese Market CPPP
	Windows 10 Home 64 Plus
	Windows 10 Home 64 Plus Single Language

Table 1-1 Product components and their descriptions (continued)

Category	Description
	Windows 10 Home 64 Plus Single Language Africa Market PPP
	Windows 10 Home 64 Plus Single Language APAC EM PPP
	Windows 10 Home 64 Plus Single Language India Market PPP
	Windows 10 Home 64 Plus Single Language Indonesia Market PPP
	Windows 10 Home 64 Single Language
	Windows 10 Home 64 Single Language Africa Market PPP
	Windows 10 Home 64 Single Language APAC EM PPP
	Windows 10 Home 64 Single Language India Market PPP
	Windows 10 Home 64 Single Language Indonesia Market PPP
	Windows 10 Pro 64
	Windows 10 Pro 64 Chinese Market
	Windows 10 Pro 64 StF MSNA Plus
	Windows 10 Pro 64 StF MSNA Standard
	Windows 10 Pro 64 StF MSNA Strategic
	FreeDOS
	Restore Media
	Windows 10 Driver DVD
	Windows 10 Driver USB
	Windows 10 Professional 64 bit OS DVD
	Windows 10 Professional 64 bit OS USB
	Certified
	Microsoft® WHQL
	Web-only support
	Windows 10 Enterprise 64
Serviceability	User replaceable parts
	AC adapter

2 Components

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Right

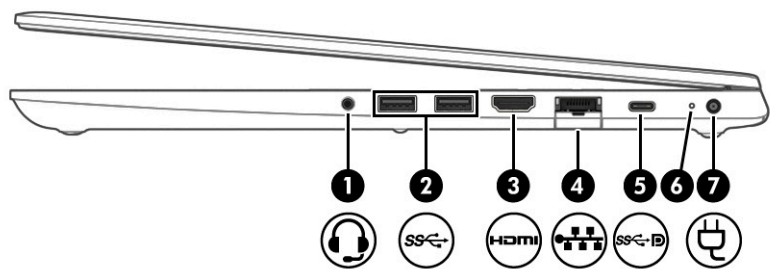


Table 2-1 Right-side components and their descriptions

Component	Description
(1) 	Audio-out (headphone)/Audio-in (microphone) combo jack Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i>. To access this guide: ▲ Type HP Documentation in the taskbar search box, and then select HP Documentation. NOTE: When a device is connected to the jack, the computer speakers are disabled.
(2) 	USB SuperSpeed port Connects a USB device, such as a cell phone, camera, activity tracker, or smartwatch, and provides high-speed data transfer.
(3) 	HDMI port Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High Definition Multimedia Interface (HDMI) device.
(4) 	RJ-45 (network) jack/status lights Connects a network cable. • Green (left): The network is connected. • Amber (right): Activity is occurring on the network.
(5) 	USB Type-C power connector port, SuperSpeed port, and DisplayPort connector Connects an AC adapter that has a USB Type-C connector, supplying power to the computer and, if needed, charging the computer battery. – and –

Table 2-1 Right-side components and their descriptions (continued)

Component		Description
		Connects a USB device that has a Type-C connector, such as a cell phone, camera, activity tracker, or smartwatch, and provides high-speed data transfer.
		– and –
		Connects a display device that has a USB Type-C connector, providing DisplayPort output.
		NOTE: Cables, adapters, or both (purchased separately) might be required.
(6)	Battery light	When AC power is connected: • White: The battery charge is greater than 90%. • Amber: The battery charge is from 0 to 90%. • Off: The battery is not charging. When AC power is disconnected (battery not charging): • Blinking amber: The battery has reached a low battery level. When the battery has reached a critical battery level, the battery light begins blinking rapidly. • Off: The battery is not charging.
(7)	 Power connector	Connects an AC adapter.

Left

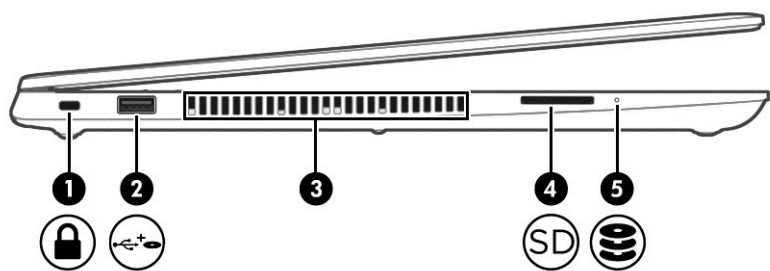


Table 2-2 Left-side components and their descriptions

Component		Description
(1)		Security cable slot Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.
(2)		USB powered port Connects and supplies power to a USB device, such as a cell phone, camera, activity tracker, optical drive, or smartwatch, and provides data transfer.
(3)		Vent Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4)		Memory card reader Reads optional memory cards that store, manage, share, or access information. To insert a card: 1. Hold the card label-side up, with the connectors facing the computer. 2. Insert the card into the memory card reader, and then press in on the card until it is firmly seated. To remove a card: ▲ Press in on the card, and then remove it from the memory card reader.
(5)		Drive light • Blinking white: The hard drive is being accessed. • Amber: HP 3D DriveGuard has temporarily parked the hard drive.

Display

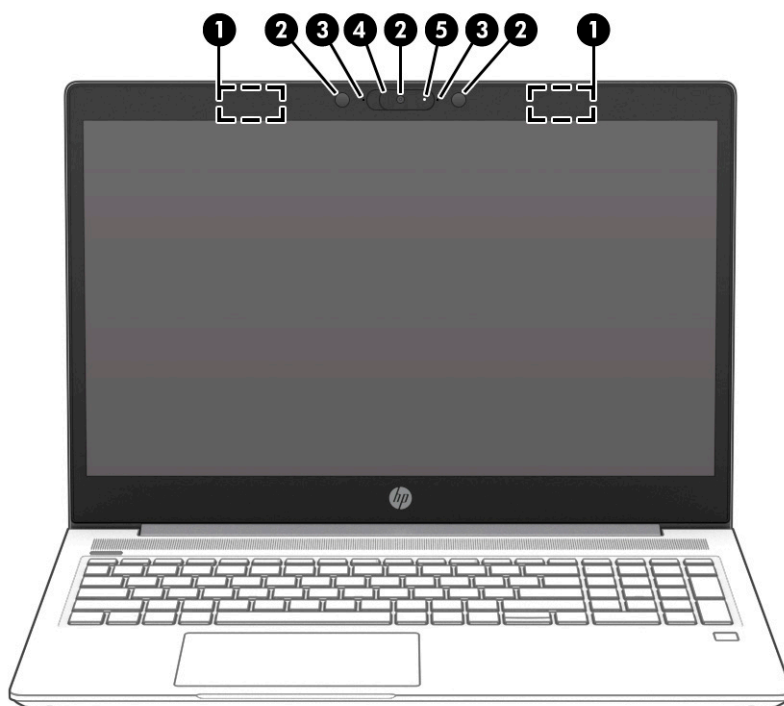


Table 2-3 Display components and their descriptions

Component		Description
(1)	WLAN antennas*	Send and receive wireless signals to communicate with wireless local area networks (WLANs).
(2)	Camera	Allows you to video chat, record video, and record still images.
(3)	Internal microphones	Record sound.
(4)	Camera privacy cover (select products only)	By default, the camera lens is uncovered, but you can slide the camera privacy cover to block the camera's view. To use the camera, slide the camera privacy cover in the opposite direction to reveal the lens. NOTE: If you have both front-facing and rear-facing cameras, when one camera lens is revealed and ready to use, the other is concealed.
(5)	HD camera light	On: The HD camera is in use.

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

▲ Type **HP Documentation** in the taskbar search box, and then select **HP Documentation**.

Keyboard area

Touchpad

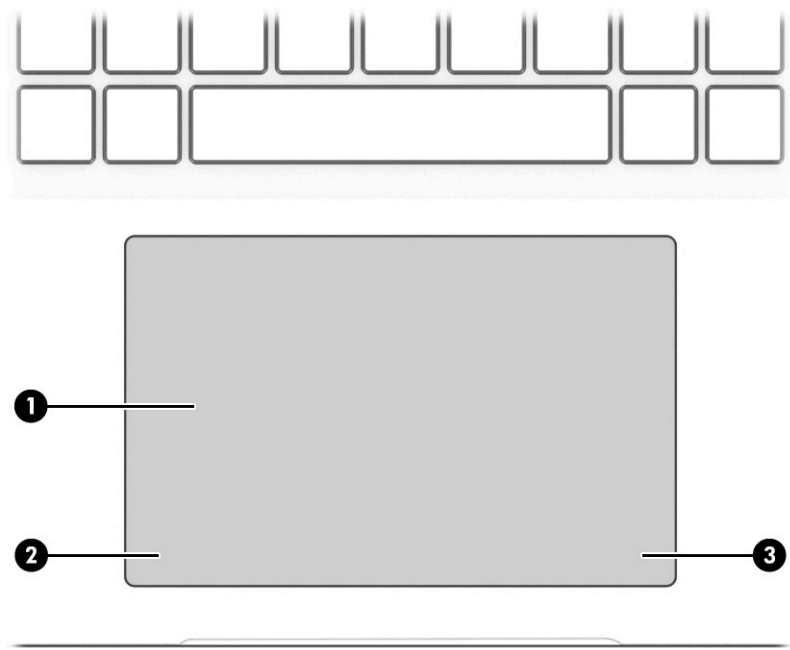


Table 2-4 Touchpad components and their descriptions

Component		Description
(1)	Touchpad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2)	Left touchpad button	Functions like the left button on an external mouse.
(3)	Right touchpad button	Functions like the right button on an external mouse.

Lights

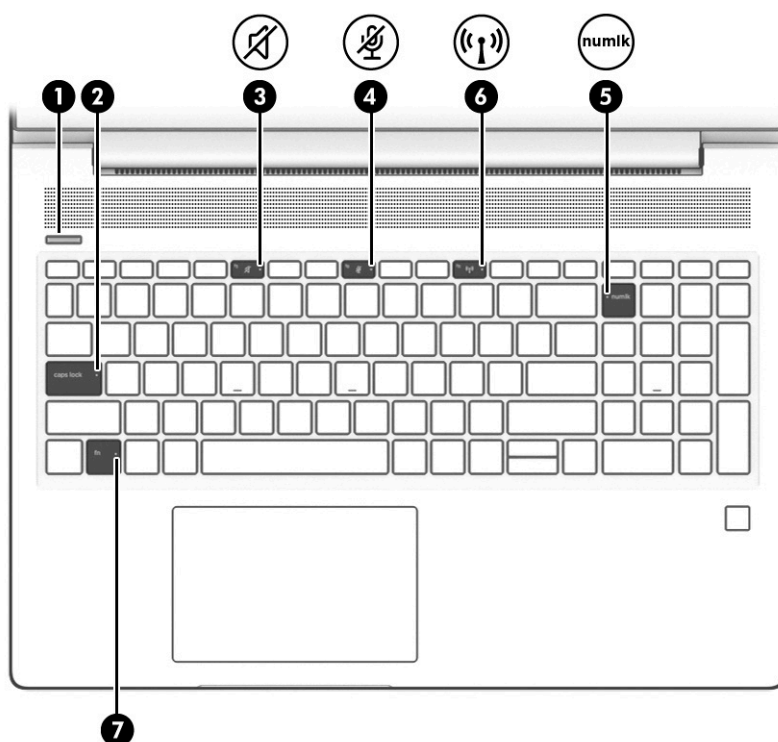


Table 2-5 Lights and their descriptions

Component		Description
(1)	 Power light	- On: The computer is on. - Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components. - Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power.
(2)	Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(3)	 Mute light	- On: Computer sound is off. - Off: Computer sound is on.
(4)	 Microphone mute light	- On: Microphone is off. - Off: Microphone is on.
(5)	 Num lk light	On: Num lock is on.
(6)	 Wireless light	On: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is on. NOTE: On some models, the wireless light is amber when all wireless devices are off.
(7)	Fn lock light	On: The fn key is locked.

Button, speakers, and fingerprint sensor

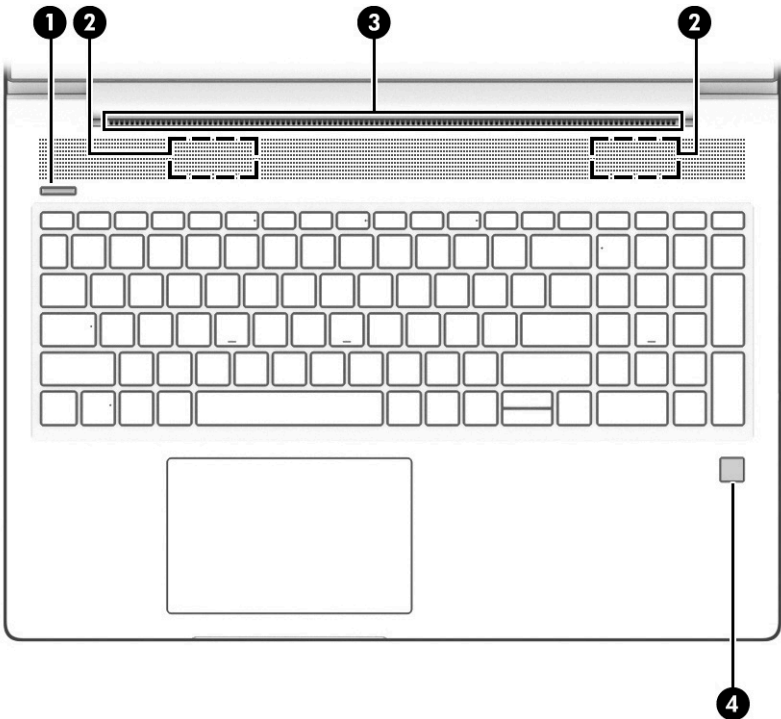


Table 2-6 Button, speakers, fingerprint sensor, and their descriptions

Component	Description
(1)  Power button	• When the computer is off, press the button to turn on the computer. • When the computer is on, press the button briefly to initiate Sleep. • When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only). • When the computer is in Hibernation, press the button briefly to exit Hibernation. IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information. If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button for at least 4 seconds to turn off the computer. To learn more about your power settings, see your power options. ▲ Right-click the Power meter icon  and then select Power Options.
(2) Speakers (2)	Produce sound.
(3) Vent	Enables airflow to cool internal components.
(4) Fingerprint sensor (select products only)	Allows a fingerprint logon to Windows, instead of a password logon. ▲ Swipe down across the fingerprint reader. IMPORTANT: To prevent fingerprint logon issues, be sure when you register your fingerprint that all sides of your finger are registered by the fingerprint reader.

Special keys

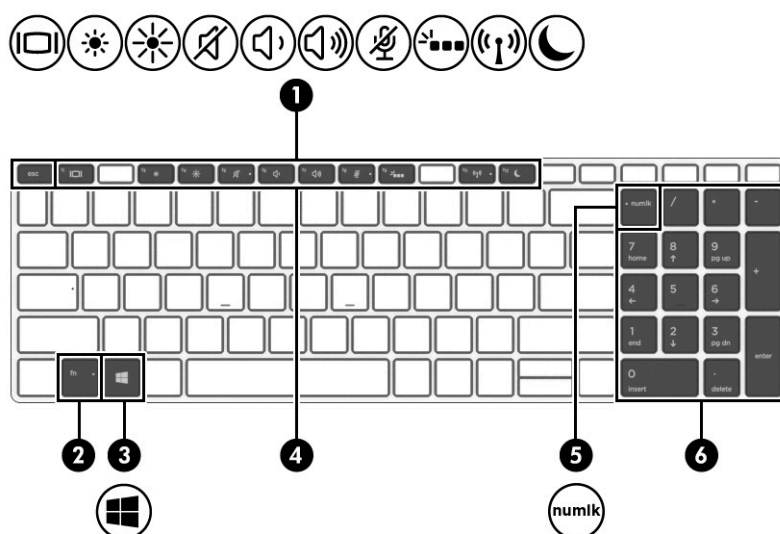


Table 2-7 Special keys and their descriptions

Component		Description
(1)	esc key	Displays system information when pressed in combination with the fn key.
(2)	fn key	Executes frequently used system functions when pressed in combination with another key. Such key combinations are called <i>hot keys</i> .
(3)	 Windows key	Opens the Start menu. NOTE: Pressing the Windows key again closes the Start menu.
(4)	Action keys	Execute frequently used system functions.
(5)	num lk key	Alternates between the navigational and numeric functions on the integrated numeric keypad.
(6)	Integrated numeric keypad	A separate keypad to the right of the alphabet keyboard. When num lk is pressed, the integrated keypad can be used like an external numeric keypad. NOTE: If the keypad function is active when the computer is turned off, that function is reinstated when the computer is turned back on.

Hot keys (select products only)

A hot key is the combination of the **fn** key and another key.

To use a hot key:

- ▲ Press the **fn** key, and then press one of the keys listed in the following table.

Table 2-8 Hot keys and their descriptions

Key	Description
C	Turns on scroll lock.
E	Turns on the insert function.
R	Breaks the operation.
S	Sends a programing query.
W	Pauses the operation.

Bottom

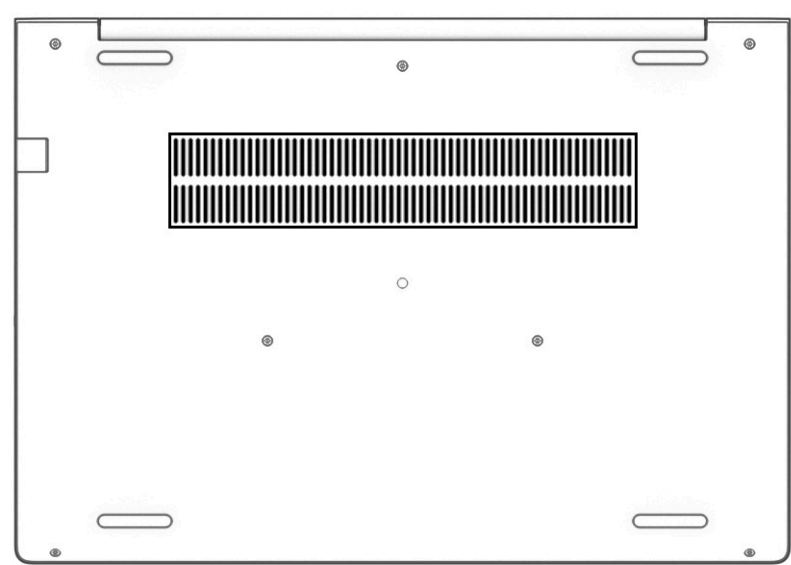


Table 2-9 Bottom component and description

Component	Description
Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer. Labels may be in paper form or imprinted on the product.

 **IMPORTANT:** Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you may be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

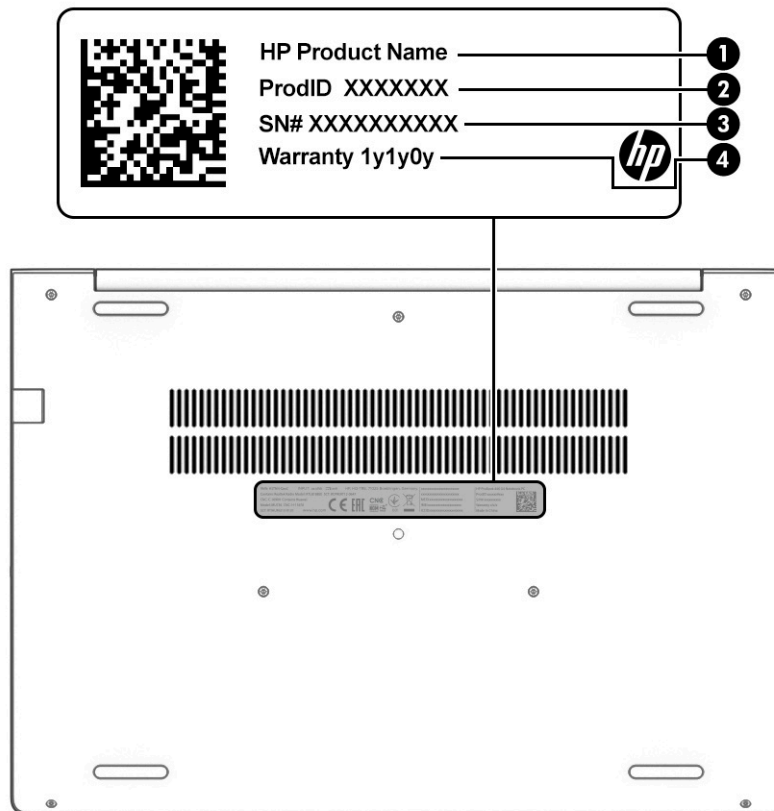


Table 2-10 Service label components

Component	
(1)	HP product name
(2)	Product ID
(3)	Serial number
(4)	Warranty period

- Regulatory label(s)—Provide(s) regulatory information about the computer.
- Wireless certification label(s)—Provide(s) information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

3 Illustrated parts catalog

Computer major components

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Labels on page 15](#) for details.

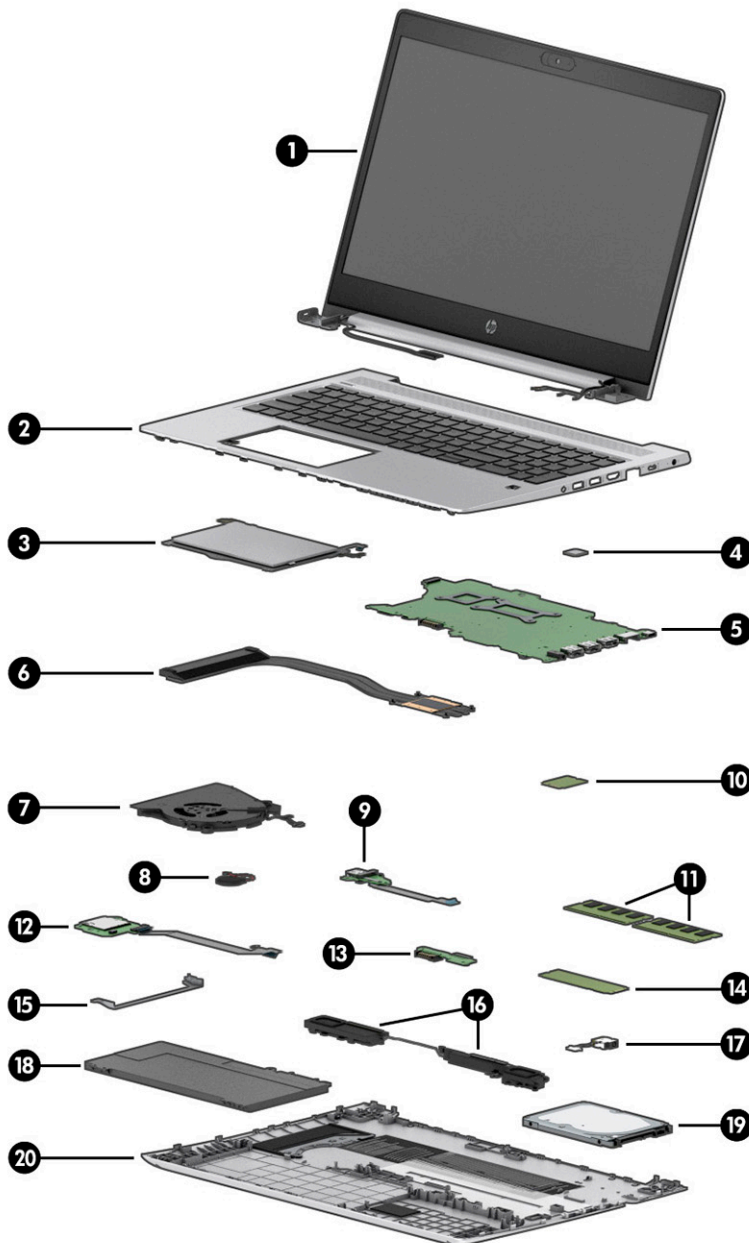


Table 3-1 Computer major components and their descriptions

Item	Description	Spare part number
(1)	Display panel assembly NOTE: Display panels are only available as spare parts at the subcomponent level.	
(2)	Top cover/keyboard (includes cable) NOTE: For a detailed list of keyboard country codes, see Keyboard/top cover on page 67 .	
	Backlight	L45090-xx1
	No backlight	L45091-xx1
	Backlight, for use in privacy models	L79436-xx1
(3)	Touchpad NOTE: The touchpad cable is available in the Cable Kit as spare part number L52208-001.	L77267-001
(4)	Fingerprint sensor assembly NOTE: The fingerprint sensor cable is available in the Cable Kit as spare part number L52208-001.	L77268-001
(5)	System board (includes integrated processor and replacement thermal material) All system boards use the following part numbers: xxxxxx-001: Non-Windows operating system xxxxxx-601: Windows 10 operating system	
	AMD Ryzen 7 PRO 4750U processor	M09523-xx1
	AMD Ryzen 7 4700U processor	L98556-xx1
	AMD Ryzen 5 PRO 4650U processor	M09522-xx1
	AMD Ryzen 5 4500U processor	L98554-xx1
	AMD Ryzen 3 4300U processor	L98552-xx1
(6)	Heat sink	L45098-001
(7)	Fan	L45100-001
(8)	RTC battery	L02772-001
(9)	USB board (includes cable) NOTE: The USB board cable is also available in the Cable Kit as spare part number L52208-001.	L44578-001
(10)	WLAN module	
	Intel Dual Band Wireless-AC 9260 802.11ac 2 × 2 Wi-Fi + Bluetooth 5.0 Combo Adaptor (non-vPro)	L16647-002
	Intel Wi-Fi 6 AX200 802.11ax 2 × 2 + Bluetooth 5.0 (non-vPro)	L35282-002
	Realtek RTL8822CE 802.11ac 2 × 2 Wi-Fi + Bluetooth 5.0	L44796-002
(11)	Memory modules (DDR4-3200)	
	16 GB	L67710-002
	8 GB	L46598-002
	4 GB	L83673-002

Table 3-1 Computer major components and their descriptions (continued)

Item	Description	Spare part number
(12)	Card reader board (includes cable) NOTE: The card reader board cable is also available in the Cable Kit as spare part number L52208-001.	L52223-001
(13)	Battery connector board	L45086-001
(14)	M.2 solid-state drive	
	512 GB, PCIe, TLC	L85360-005
	512 GB, PCIe, value	L85364-005
	256 GB, PCIe, value	L85354-005
	128 GB, SATA-3, TLC	L85346-005
(15)	Thermal bracket (included in Bracket Kit)	L77275-001
(16)	Speaker assembly	L45092-001
(17)	Power connector cable	L01048-001
(18)	Battery	L32656-002
(19)	Hard drive	
	1 TB, 5400 rpm, 7 mm	832077-002
	500 GB, 7200 rpm, 7 mm	703267-002
(20)	Bottom cover	L79384-001

Display components

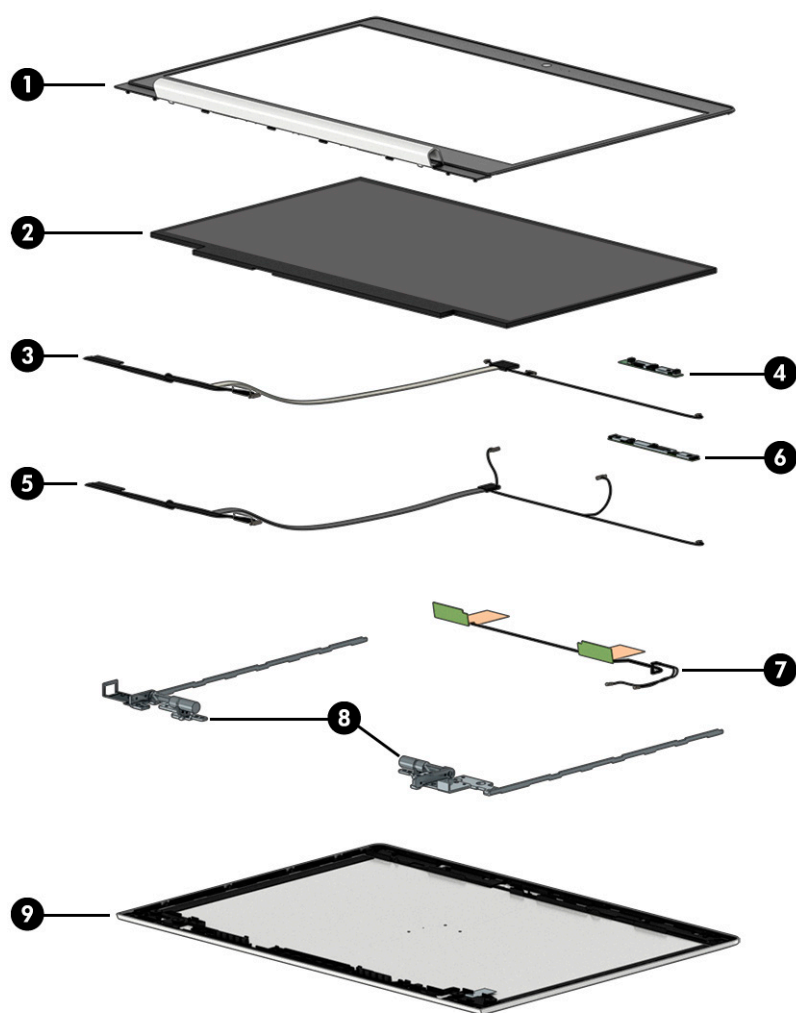


Table 3-2 Display components and their descriptions

Item	Description	Spare part number
(1)	Display bezel (includes camera)	
	For use in models with an HD camera	L77285-001
	For use in models with and HD + IR camera	L77286-001
	For use in models without a camera	L77287-001
(2)	Display panel (raw) (includes bezel adhesive and display enclosure adhesive)	
	HD	M01100-001
	FHD, privacy	M01103-001
	FHD, nonprivacy, 400 nits	M01102-001
	FHD, nonprivacy, 250 nits	M01101-001
(3)	Display/camera cable assembly, HD camera models (includes bezel adhesive and display enclosure adhesive)	

Table 3-2 Display components and their descriptions (continued)

Item	Description	Spare part number
	Nonprivacy models	L77270-001
	Privacy models	L77269-001
(4)	Camera module, HD (includes bezel adhesive and display enclosure adhesive)	L83709-001
(5)	Display/camera cable assembly, HD + IR camera models (includes bezel adhesive and display enclosure adhesive)	L77272-001
(6)	Camera module, HD + IR	L83710-001
	Microphone board (not illustrated)	L44541-001
(7)	WLAN antennas (includes bezel adhesive and display enclosure adhesive)	L77283-001
(8)	Hinge Kit (left and right) (includes bezel adhesive and display enclosure adhesive)	
	Nonprivacy models	L79189-001
	Privacy models	L91710-001
(9)	Display rear cover (includes wireless antennas and bezel adhesive)	
	For use in models with an HD camera	L77277-001
	For use in models with an HD camera and privacy panel	L77278-001
	For use in models with an HD + IR camera and nontouch panel	L77279-001
	Camera privacy cover (not illustrated)	L77237-001

Cable Kit

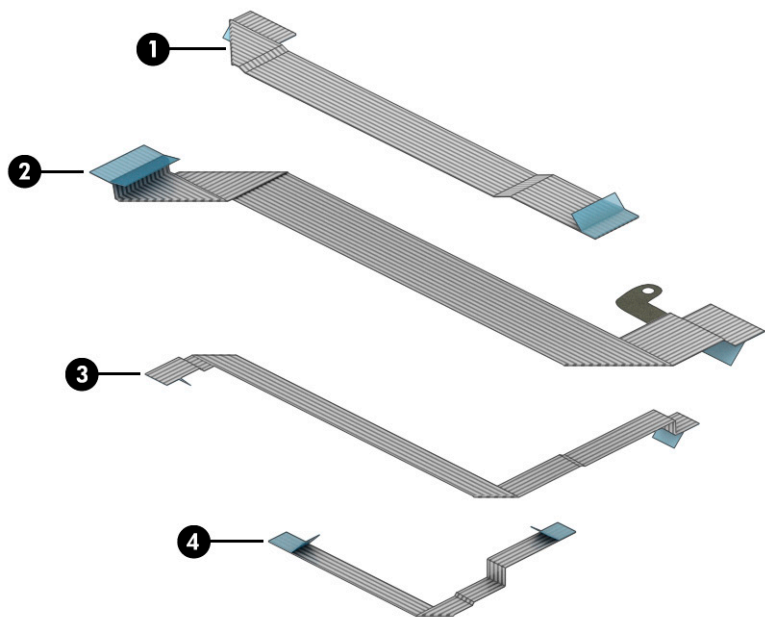


Table 3-3 Cable Kit components and their descriptions

Item	Description	Spare part number
	Cable Kit , includes the following parts:	L52208-001
(1)	USB board cable	
(2)	Card reader board cable	
(3)	Touchpad cable	
(4)	Fingerprint sensor cable	

Bracket Kit

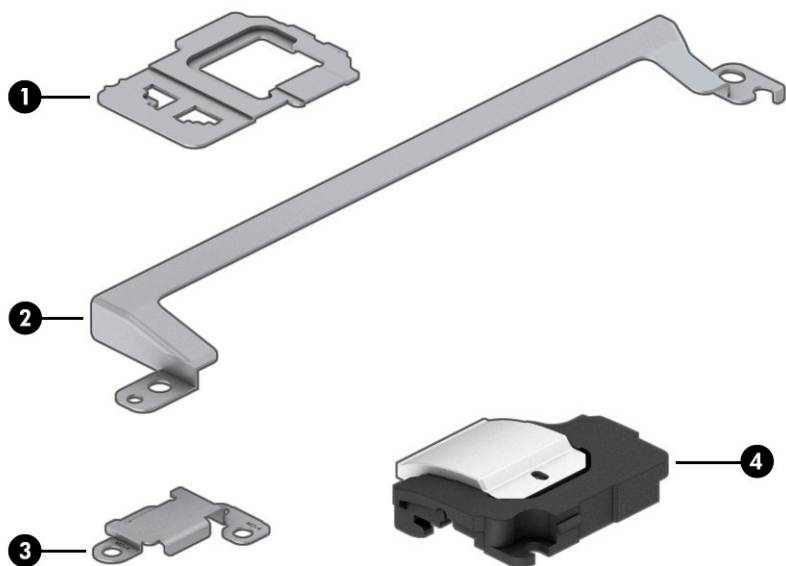


Table 3-4 Bracket Kit components and their descriptions

Item	Description	Spare part number
Bracket Kit , includes the following parts:		L77275-001
(1)	Fingerprint sensor bracket	
(2)	Thermal bracket	
(3)	USB Type-C port bracket	
(4)	RJ-45 (network) jack bracket	

Mass storage devices

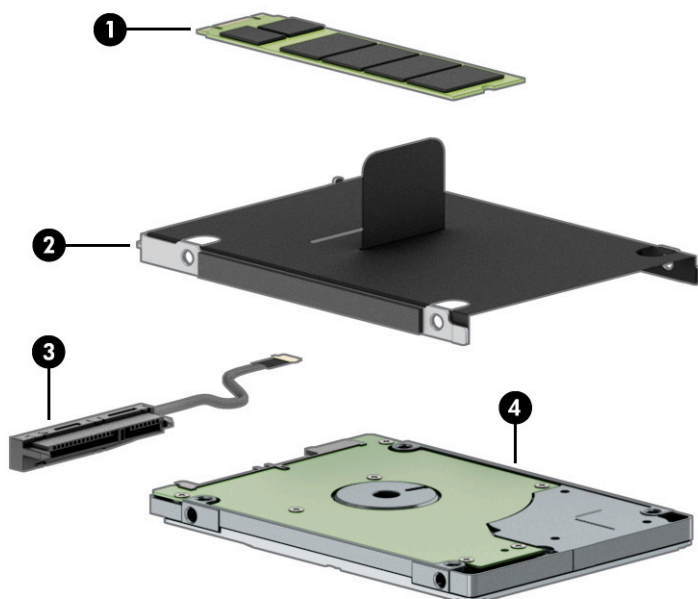


Table 3-5 Mass storage devices and their descriptions

Item	Description	Spare part number
(1)	Solid-state drive, M.2	
	512 GB, PCIe, TLC	L85360-005
	512 GB, PCIe, value	L85364-005
	512 GB PCIe + 32 GB Optane™ memory	L80988-001
	256 GB, PCIe, value	L85354-005
	256 GB PCIe + 16 GB Optane memory	L80987-001
	128 GB, SATA-3, TLC	L85346-005
(2)	Hard drive	
	1 TB, 5400 rpm, 7 mm	832077-002
	500 GB, 7200 rpm, 7 mm	703267-002
	Hard Drive Hardware Kit , includes the following parts:	L78776-001
(3)	Hard drive cover	
(4)	Hard drive cable	

Miscellaneous parts

Table 3-6 Miscellaneous parts and their descriptions

Description	Spare part number
AC adapters	
65 W Smart AC power adapter, 4.5 mm barrel connector, S-3P, EM	913691-850
65 W Smart AC power adapter, 4.5 mm barrel connector, S-3P, nPFC	710412-001
65 W, USB Type-C, wall mount, nPFC, 1.8 m (5.9 ft)	L32392-001
45 W Smart AC power adapter, 4.5 mm barrel connector	741727-001
45 W Smart AC power adapter, 4.5 mm barrel connector, 2 prong, 1.8 m (5.9 ft) (RC)	742436-001
45 W, USB Type-C, wall mount, nPFC, 3 pin, 1.8 m (5.9 ft)	L43407-001
Plastics Kit (includes fingerprint sensor insert, fingerprint sensor conductive tape, touchpad conductive tape, touchpad protective tape, conductive bracket tape, and conductive shielding)	L77276-001
Screw Kit	L79191-001
Power cord (3 pin, C5, black, conventional, 1.0 m [3.3 ft]), for use in:	
Argentina	L19357-001
Australia	L19358-001
Brazil	L19359-001
Denmark	L19360-001
Europe (Austria, Belgium, Finland, France, Germany, the Netherlands, Norway, and Sweden)	L19361-001
India	L19363-001
Israel	L19362-001
Italy	L19364-001
Japan	L19365-001
North America	L19367-001
People's Republic of China	L19368-001
South Africa	L19369-001
South Korea	L19366-001
Switzerland	L19370-001
Taiwan	L19372-001
Thailand	L19371-001
United Kingdom and Singapore	L19373-001
Power cord (3 pin, C5, black, conventional, 1.8 m [5.9 ft]), for use in:	
Argentina	L19357-002
Australia	L19358-002
Brazil	L19359-002

Table 3-6 Miscellaneous parts and their descriptions (continued)

Description	Spare part number
Denmark	L19360-002
Europe (Austria, Belgium, Finland, France, Germany, the Netherlands, Norway, and Sweden)	L19361-002
India	L19363-002
Israel	L19362-002
Italy	L19364-002
Japan	L19365-002
North America	L19367-002
The People's Republic of China	L19368-002
South Africa	L19369-002
South Korea	L19366-002
Switzerland	L19370-002
Taiwan	L19372-002
Thailand	L19371-002
United Kingdom and Singapore	L19373-002
Power cord (C7, black, 1.0 m [3.3 ft]), for use in:	
Japan	L19375-001
Power cord (3 pin, C5NS, black, duckhead, 1.0 m [3.3 ft]), for use in:	
Australia	L36816-001
Denmark	L36817-001
Europe (Austria, Belgium, Finland, France, Germany, the Netherlands, Norway, and Sweden)	L36818-001
Israel	L36819-001
Japan	L36821-001
North America	L36822-001
The People's Republic of China	L36823-001
South Africa	L36824-001
Switzerland	L36825-001
Thailand	L36826-001
Taiwan	L36827-001
United Kingdom	L36828-001
Italy	L44788-001
Brazil	L44789-001
Power cord (3 pin, C5NS, black, duckhead, 1.8 m [5.9 ft]), for use in:	
Australia	L45264-001

Table 3-6 Miscellaneous parts and their descriptions (continued)

Description	Spare part number
Europe (Austria, Belgium, Finland, France, Germany, the Netherlands, Norway, and Sweden)	L45265-001
Israel	L45266-001
Italy	L45267-001
Japan	L45268-001
North America	L45269-001
The People's Republic of China	L45270-001
South Africa	L45271-001
Switzerland	L45272-001
Thailand	L45273-001
Taiwan	L45274-001
United Kingdom	L45275-001
Power cord (3 pin, C5NS, black, duckhead, 1.8 m [5.9 ft]), for use in:	
Brazil	L48055-001
Denmark	L50729-001
Duckhead connector only (C5NS)	
Australia	L50818-004
North America	L50818-002
The People's Republic of China	L50818-005
South Korea	L50818-001
The United Kingdom and Singapore	L50818-003

4 Removal and replacement procedures preliminary requirements

Tools required

You need the following tools to complete the removal and replacement procedures:

- Tweezers
- Nonconductive, nonmarking pry tool
- Magnetic Phillips P1 screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



NOTE: As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts



IMPORTANT: Using excessive force during disassembly and reassembly can damage plastic parts.

Cables and connectors



IMPORTANT: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Drive handling



IMPORTANT: Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing an optical drive, be sure that a disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive or an optical drive, place it in a static-proof bag.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screw drivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.



IMPORTANT: To prevent damage to the device when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

Generating static electricity

Note the following:

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

Event	Relative humidity		
	55%	40%	10%
Walking across carpet	7,500 V	15,000 V	35,000 V
Walking across vinyl floor	3,000 V	5,000 V	12,000 V
Motions of bench worker	400 V	800 V	6,000 V
Removing DIPs (dual in-line packages) from plastic tube	400 V	700 V	2,000 V
Removing DIPs from vinyl tray	2,000 V	4,000 V	11,500 V
Removing DIPs from polystyrene foam	3,500 V	5,000 V	14,500 V
Removing bubble pack from PCB (printed circuit board)	7,000 V	20,000 V	26,500 V
Packing PCBs in foam-lined box	5,000 V	11,000 V	21,000 V
Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.			



NOTE: As little as 700 V can degrade a product.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity. The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components.

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.

- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Use the following equipment to prevent static electricity damage to electronic components:

- **Wrist straps** are flexible straps with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance in the ground cords. To provide proper ground, a strap must be worn snug against bare skin. The ground cord must be connected and fit snugly into the banana plug connector on the grounding mat or workstation.
- **Heel straps/Toe straps/Boot straps** can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance between the operator and ground.

Table 4-2 Static shielding protection levels

Static shielding protection levels	
Method	Voltage
Antistatic plastic	1,500
Carbon-loaded plastic	7,500
Metallized laminate	15,000

Grounding the work area

To prevent static damage at the work area, use the following precautions:

- Cover the work surface with approved static-dissipative material. Provide a wrist strap connected to the work surface and properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep work area free of nonconductive materials such as ordinary plastic assembly aids and polystyrene foam.
- Use field service tools, such as cutters, screwdrivers, and vacuums, that are conductive.

Recommended materials and equipment

HP recommends the following materials and equipment to prevent static electricity:

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of $1\text{ M}\Omega \pm 10\%$ resistance

- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing $1\text{ M}\Omega \pm 10\%$ resistance
- Material handling packages
- Conductive plastic bags
- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

5 Removal and replacement procedures for authorized service provider parts

 **IMPORTANT:** Components described in this chapter should be accessed only by an authorized service provider. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Component replacement procedures

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Labels on page 15](#) for details.

This chapter provides removal and replacement procedures for Authorized Service Provider only parts.

There are as many as 59 screws that must be removed, replaced, or loosened when servicing Authorized Service Provider only parts. Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

See [Removal and replacement procedures preliminary requirements on page 27](#) for initial safety procedures.

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Battery Safe mode

Before removing internal components, you must place the computer in Battery Safe mode. This mode avoids short-circuits or system malfunction by removing power from internal components.

To place the computer in Battery Safe mode, follow these steps:

- ▲ With the computer turned off and AC adapter connected, press the following key and button combination: **Windows key + Backspace key + Power button**.

After the computer powers off, disconnect the AC adapter.

To disengage Battery Safe mode, plug in the AC adapter and press the power button.

Bottom cover

Table 5-1 Bottom cover description and part number


Description	Spare part number
Bottom covers	L79384-001

Before removing the bottom cover, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).

Remove the bottom cover:

1. Loosen the five captive Phillips screws (1).
2. Remove the two Phillips M2.0 × 5.0 screws (2) that secure the bottom cover to the computer.
3. Starting under the display, use a nonconductive, nonmarking tool to pry the cover up (3), and then remove the bottom cover from the computer (4).

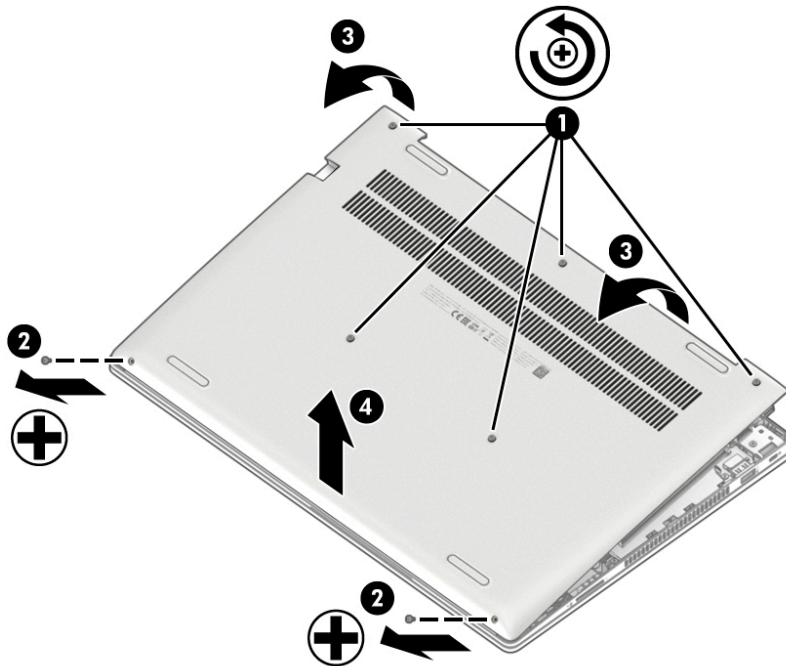

Reverse these procedures to install the bottom cover.

Battery

Table 5-2 Battery description and part number


Description	Spare part number
Battery, 3 cell, 45 Whr	L32656-002

Before removing the battery, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the bottom cover ([Bottom cover on page 33](#)).

Remove the battery:

1. Remove the two Phillips M2.0 × 4.0 screws **(1)** and the Phillips M2.0 × 2.0 screw **(2)** that secures the battery to the computer.
2. Rotate the top of the battery up **(3)**, and then lift the battery from the computer **(4)**.

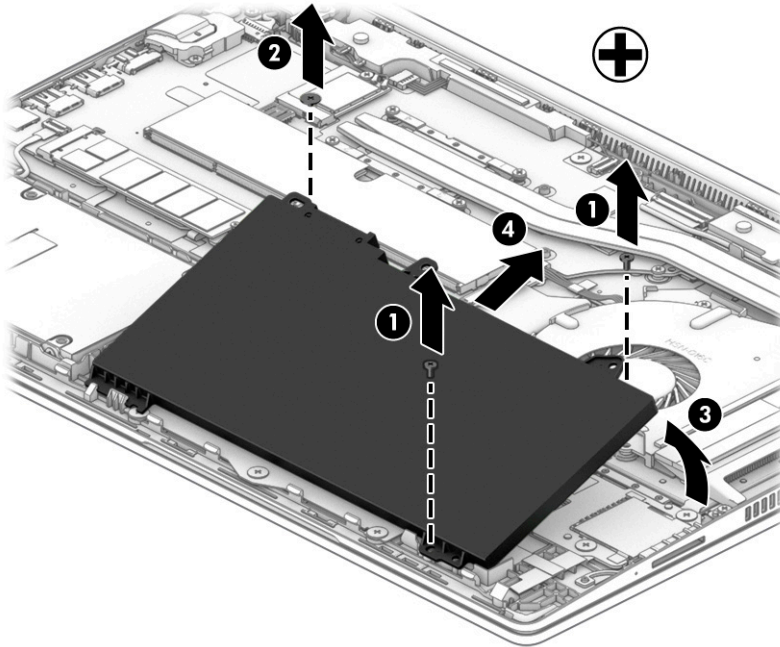

Reverse this procedure to install the battery.

Memory modules

Table 5-3 Memory module descriptions and part numbers

Description	Spare part number
Memory module, DDR4-3200, 16 GB	L67710-002
Memory module, DDR4-3200, 8 GB	L46598-002
Memory module, DDR4-3200, 4 GB	L83673-002



IMPORTANT: Before adding new memory, be sure to update the computer to the latest BIOS from www.hp.com.

Failure to update the computer to the latest BIOS before installing new memory may result in various system problems.

Before removing the memory module, follow these steps:


1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the bottom cover ([Bottom cover on page 33](#)).
4. Remove the battery ([Battery on page 34](#)).

Remove the memory module:

1. Move aside the protective cover from over the memory modules **(1)**.
2. Spread the retaining tabs **(2)** on each side of the memory module slot to release the memory module. (The edge of the module opposite the slot rises away from the computer.)

3. Remove the memory module **(3)** by pulling the module away from the slot at an angle.

 **NOTE:** Memory modules are designed with a notch to prevent incorrect insertion into the memory module slot.

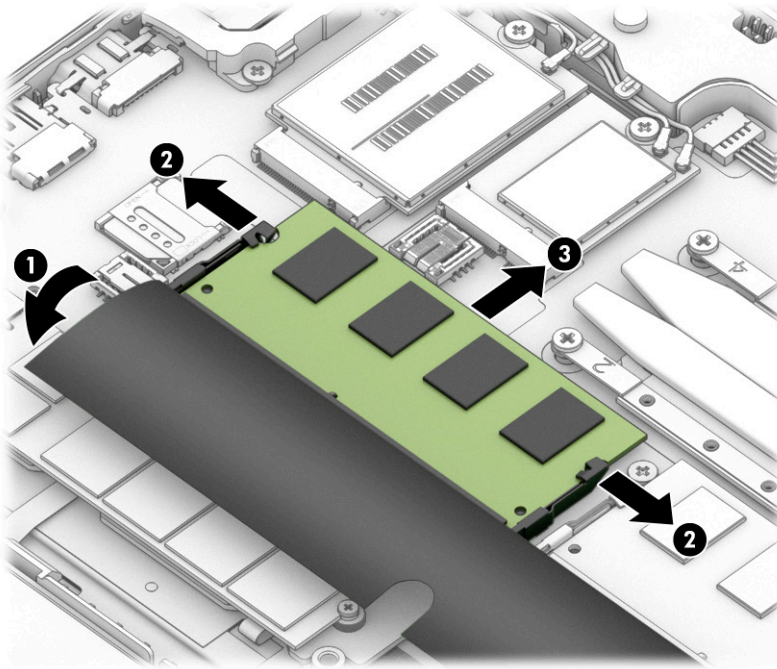

Reverse this procedure to install a memory module.

WLAN/Bluetooth combo card

The computer uses a card that provides both WLAN and Bluetooth functionality.

Table 5-4 WLAN module description and part number

Description	Spare part number
Intel Dual Band Wireless-AC 9260 802.11ac 2 × 2 Wi-Fi + Bluetooth 5.0 Combo Adaptor (non-vPro)	L16647-002
Intel Wi-Fi 6 AX200 802.11ax 2 × 2 + Bluetooth 5.0 (non-vPro)	L35282-002
Realtek RTL8822CE 802.11ac 2 × 2 Wi-Fi + Bluetooth 5.0	L44796-002

Before removing the WLAN module, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the bottom cover ([Bottom cover on page 33](#)).
4. Remove the battery ([Battery on page 34](#)).

Remove the WLAN module:

1. Disconnect the WLAN antenna cables (**1**) from the terminals on the WLAN module.




NOTE: The WLAN antenna cable labeled **1** connects to the WLAN module **Main** terminal labeled **1**. The WLAN antenna cable labeled **2** connects to the WLAN module **Aux** terminal labeled **2**. If the computer is equipped with an 802.11a/b/g/n WLAN module, the yellow WLAN antenna cable connects to the middle terminal on the WLAN module.


2. Remove the Phillips M2.0 × 2.5 screw (**2**) that secures the WLAN module to the computer. (The edge of the module opposite the slot rises away from the computer.)

3. Remove the WLAN module **(3)** by pulling the module away from the slot at an angle.

 **NOTE:** WLAN modules are designed with a notch to prevent incorrect insertion.

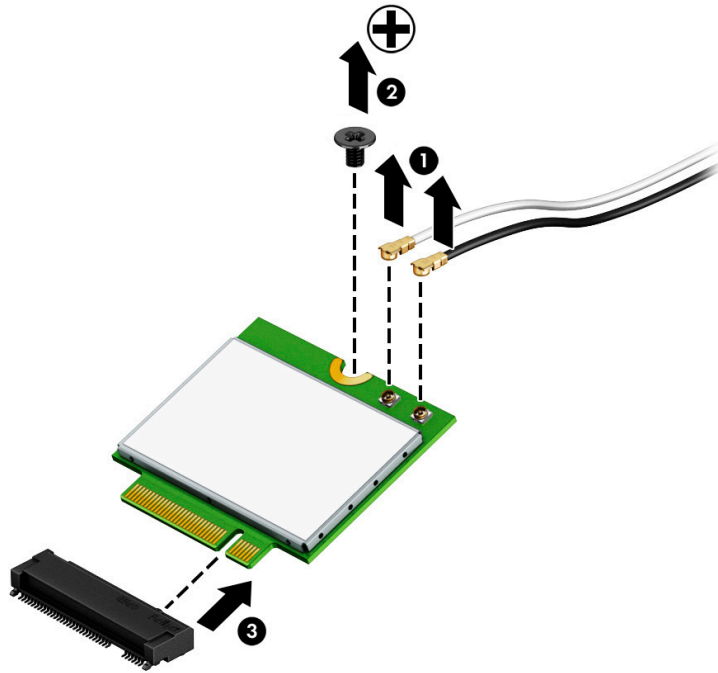

 **NOTE:** If the WLAN antennas are not connected to the terminals on the WLAN module, the protective sleeves must be installed on the antenna connectors, as shown in the following illustration.

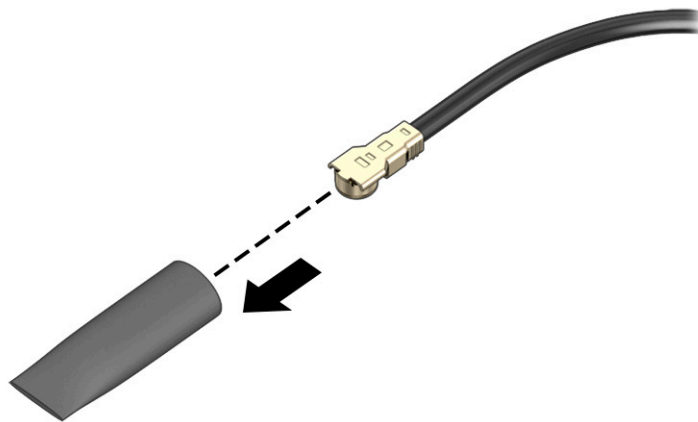

Reverse this procedure to install the WLAN module.

M.2 solid-state drive

Table 5-5 Solid-state drive descriptions and part numbers


Description	Spare part number
512 GB, PCIe, TLC	L85360-005
512 GB, PCIe, value	L85364-005
512 GB PCIe + 32 GB Optane memory	L80988-001
256 GB, PCIe, value	L85354-005
256 GB PCIe + 16 GB Optane memory	L80987-001
128 GB, SATA-3, TLC	L85346-005

Before removing the solid-state drive, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the bottom cover ([Bottom cover on page 33](#)).
4. Remove the battery ([Battery on page 34](#)).

Remove the solid-state drive:

1. Remove the Phillips M2.0 × 2.5 screw **(1)** that secures the solid-state drive to the computer.
2. Remove the solid-state drive **(2)** by pulling the module away from the slot at an angle.

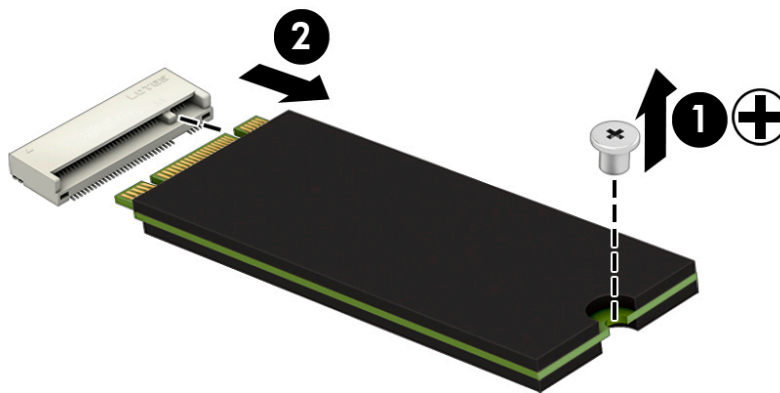

Reverse this procedure to install the solid-state drive.

Hard drive

Table 5-6 Hard drive, Hard Drive Hardware Kit, and hard drive bracket descriptions and part numbers


Description	Spare part number
Hard drive, 1 TB, 5400 rpm, 7 mm	832077-002
Hard drive, 500 GB, 7200 rpm, 7 mm	703267-002
Hard Drive Hardware Kit (includes hard drive cover and connector)	L78776-001

Before removing the hard drive, follow these steps:


1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the bottom cover ([Bottom cover on page 33](#)).
4. Remove the battery ([Battery on page 34](#)).

Remove the hard drive:

1. Release the ZIF connector **(1)**, and then disconnect the hard drive cable from the system board **(2)**.
2. Remove the two Phillips M2.0 × 4.0 screws **(3)** that secure the hard drive to the computer.
3. Lift the tab **(4)**, and then use the tab to lift the hard drive from the bay **(5)**.

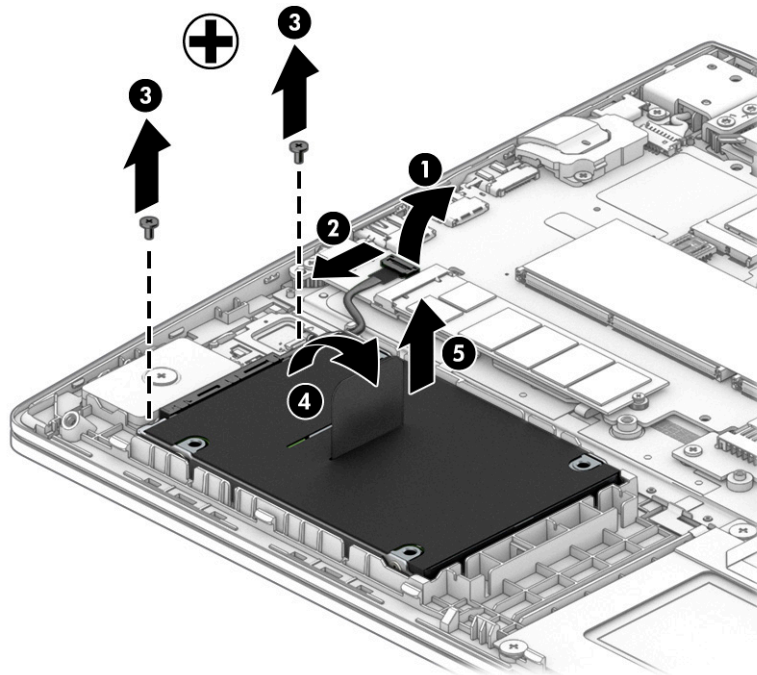

4. To disassemble the hard drive, remove the four Phillips M3.0 × 3.0 screws (1) that secure the cover to the drive, remove the cover (2), and then disconnect the connector from the drive (3).

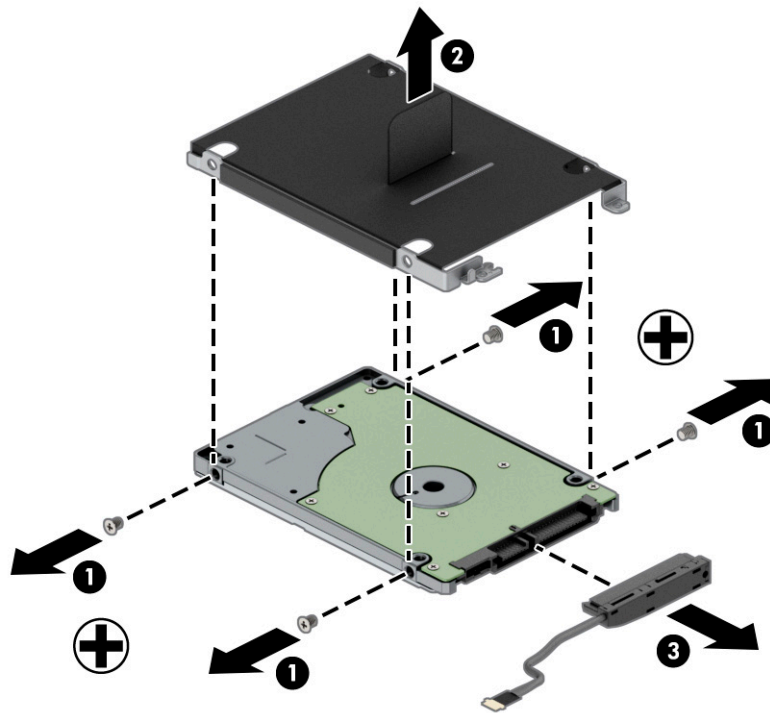

Reverse these procedures to install a hard drive.

Speaker assembly

Table 5-7 Speaker description and part number


Description	Spare part number
Speaker assembly	L45092-001

Before removing the speaker assembly, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the bottom cover ([Bottom cover on page 33](#)).
4. Remove the battery ([Battery on page 34](#)).

Remove the speaker assembly:

1. Disconnect the speaker cable from the system board (1).
2. Remove the antenna cables from the routing channel in the right speaker (2).
3. Remove the display cable from the routing channel near the left speaker (3).
4. Remove the two Phillips M2.0 × 6.0 screws (4) that secure the speakers to the computer.
5. Remove the speakers from the computer (5).

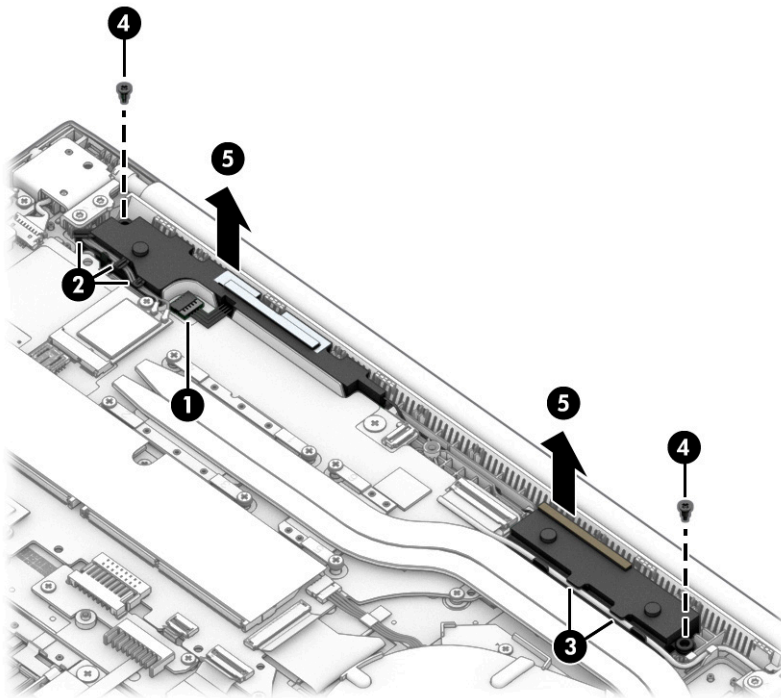

Reverse this procedure to install the speaker assembly.

Fan

Table 5-8 Fan description and part number

Description	Spare part number
Fan	L45100-001




NOTE: To properly ventilate the computer, allow at least **7.6 cm (3.0 in)** of clearance on the sides of the computer. The computer uses an electric fan for ventilation. The fan is controlled by a temperature sensor and is designed to turn on automatically when high temperature conditions exist. These conditions are affected by high external temperatures, system power consumption, power management/battery conservation configurations, battery fast charging, and software requirements. Exhaust air is displaced through the ventilation grill.

Before removing the fan, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the bottom cover ([Bottom cover on page 33](#)).
4. Remove the battery ([Battery on page 34](#)).

Remove the fan:

1. Disconnect the fan cable **(1)** from the system board.
2. Remove the Phillips M2.0 × 4.0 screw **(2)** that secures the fan to the computer.
3. Slide the fan out from under the heat sink **(3)**, and then lift the fan from the computer **(4)**.

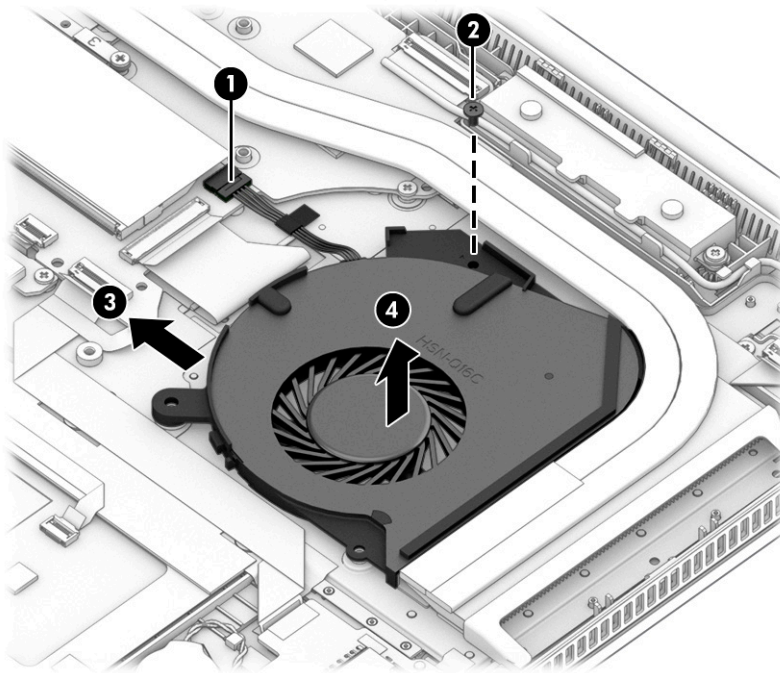

Reverse this procedure to install the fan.

Heat sink



NOTE: All heat sink spare part kits include replacement thermal material.

Table 5-9 Heat sink description and part number


Description	Spare part number
Heat sink for use in models with UMA graphics	L45098-001

Before removing the heat sink, follow these steps:


1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the bottom cover ([Bottom cover on page 33](#)).
4. Remove the battery ([Battery on page 34](#)).

Remove the heat sink:

1. In the order indicated on the heat sink, loosen the four captive Phillips screws **(1)** that secure the heat sink to the system board.
2. Lift the heat sink from the system board **(2)**, and then pull the heat sink away from the side of the chassis to remove it **(3)**.

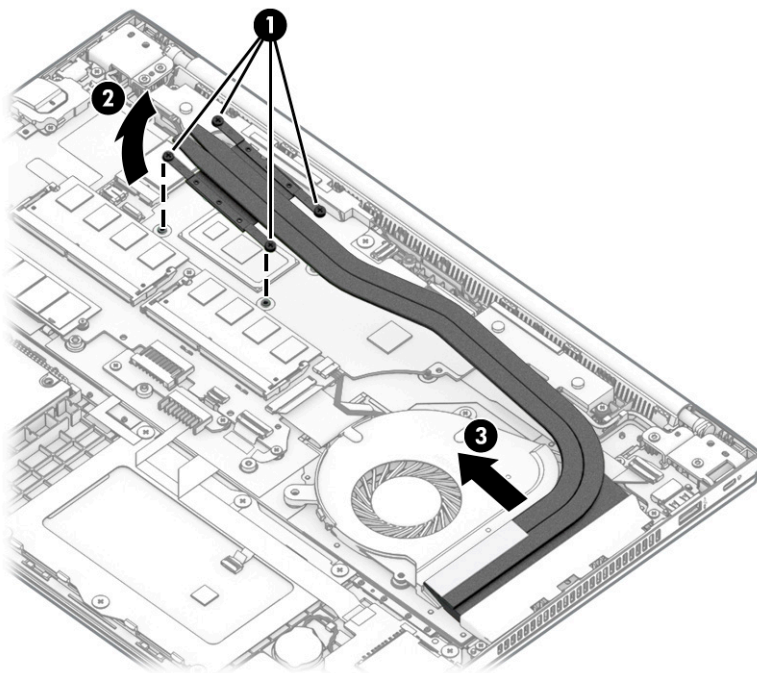

3. Thoroughly clean thermal material from the surfaces of the system board component **(1)** and the heat sink **(2)** each time you remove the heat sink. All heat sink and system board spare part kits include thermal material.

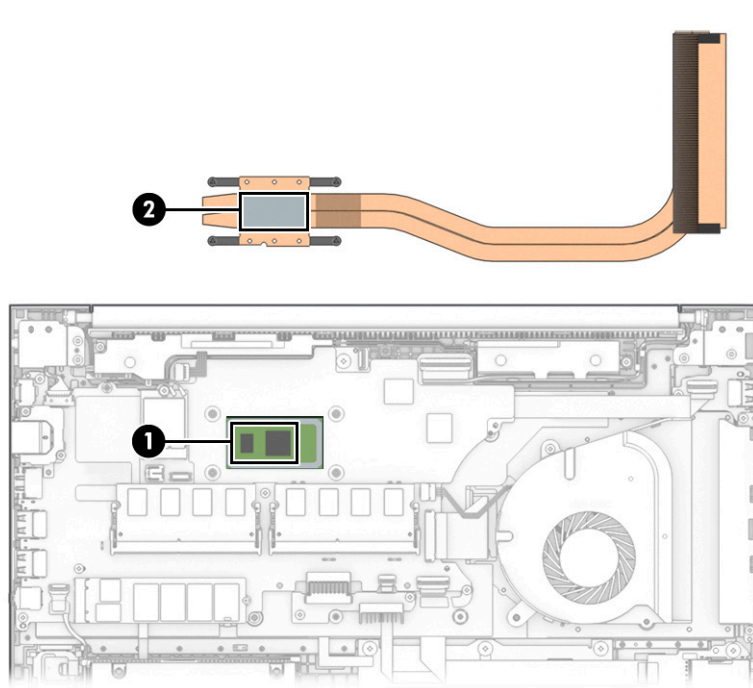

Reverse this procedure to install the heat sink.

USB board

Table 5-10 USB board, cable, and bracket descriptions and part numbers


Description	Spare part number
USB board	L44578-001
USB board cable (included in Cable Kit)	L52208-001
Thermal bracket (included in Bracket Kit)	L77275-001

Before removing the USB board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the bottom cover ([Bottom cover on page 33](#)).
4. Remove the battery ([Battery on page 34](#)).


Remove the USB board:

1. Remove the two Phillips M2.0 × 4.0 screws **(1)** that secure the thermal bracket to the computer.
2. Lift the bracket out of the computer **(2)**.

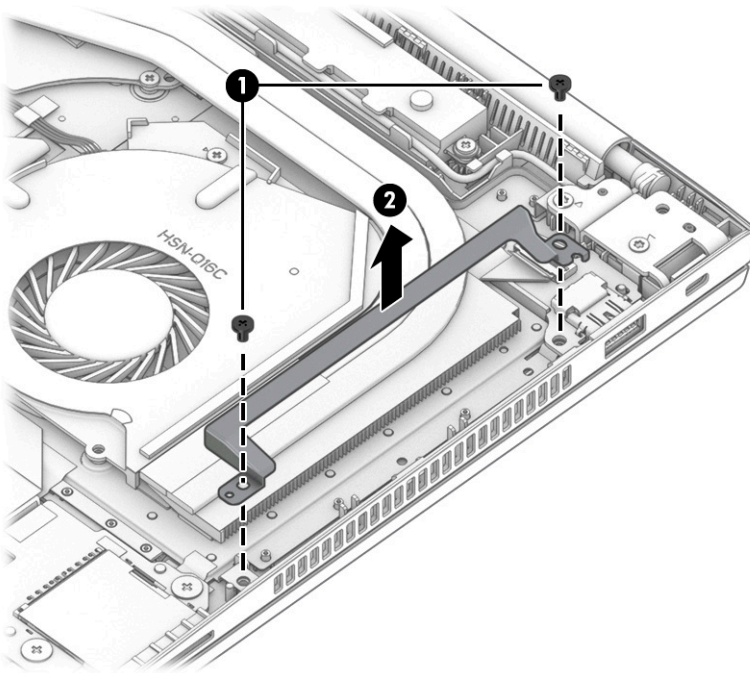

3. Disconnect the cable from the ZIF connector on the USB board **(1)**.
4. Remove the Phillips M2.5 × 4.0 screw **(2)** that secures the board to the computer.

5. Lift the rear of the board up **(3)**, and then pull the board away from the connector and out of the computer **(4)**.

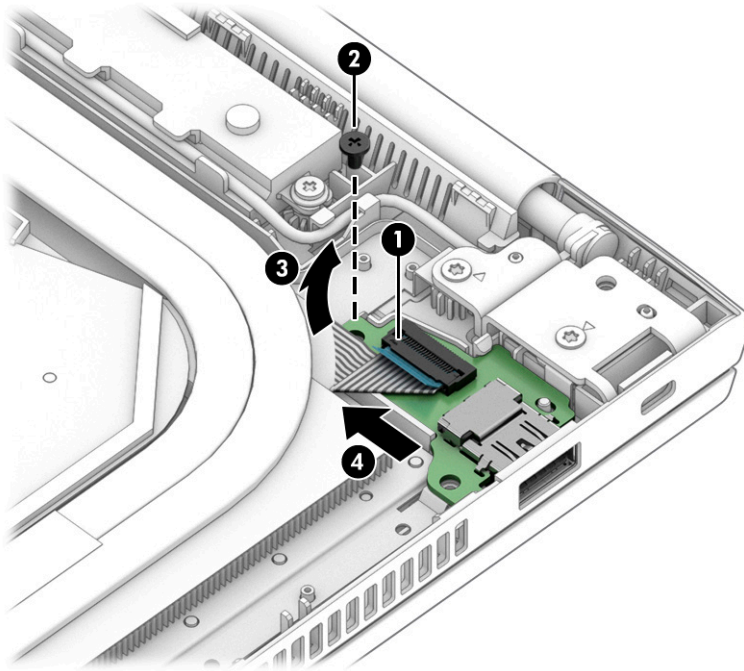

Reverse this procedure to install the USB board.

Battery connector board

Table 5-11 Battery connector board description and part number


Description	Spare part number
Battery connector board	L45086-001

Before removing the battery connector board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the bottom cover ([Bottom cover on page 33](#)).
4. Remove the battery ([Battery on page 34](#)).

Remove the battery connector board:

1. Remove the two Phillips M2.0 × 2.5 screws **(1)** that secure the board to the computer.
2. Rotate the board upward **(2)**, and then remove the battery connector board from the computer **(3)**.

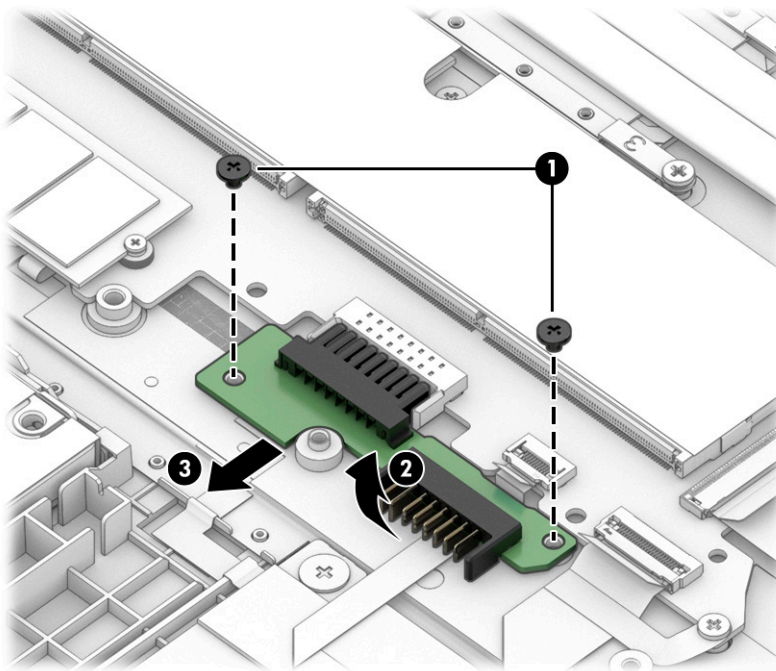

Reverse this procedure to install the battery connector board.

Touchpad assembly

Table 5-12 Touchpad and cable descriptions and part numbers


Description	Spare part number
Touchpad assembly	L77267-001
NOTE: The touchpad cable is available in the Cable Kit as spare part number L52208-001.	

Before removing the touchpad assembly, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the bottom cover ([Bottom cover on page 33](#)).
4. Remove the battery ([Battery on page 34](#)).

Remove the touchpad assembly:

1. Disconnect the cable from the ZIF connector on the touchpad **(1)**.
2. Lift the silver tape from the touchpad **(2)**.
3. Remove the six broadhead Phillips M2.0 × 2.0 screws **(3)** that secure the touchpad to the computer.
4. Remove the touchpad from the computer **(4)**.

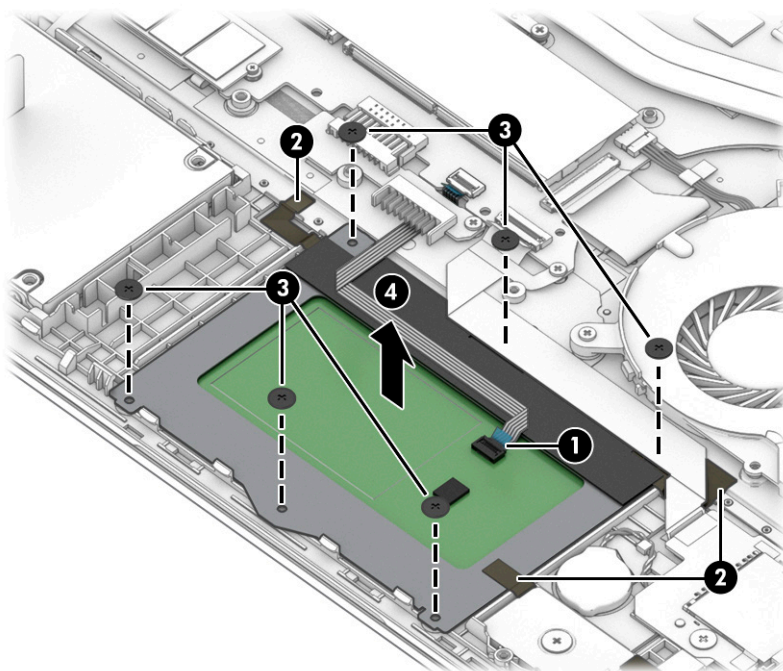

Reverse this procedure to install the touchpad assembly.

Fingerprint sensor assembly

Table 5-13 Fingerprint sensor, bracket, cable, and insert descriptions and part numbers


Description	Spare part number
Fingerprint sensor assembly	L77268-001
Fingerprint sensor bracket (included in Bracket Kit)	L77275-001
Fingerprint sensor cable (included in the Cable Kit)	L52208-001
Fingerprint sensor insert (included in Plastics Kit; for use in models without a fingerprint sensor)	L77276-001

Before removing the fingerprint sensor assembly, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the following components:
 - a. Bottom cover ([Bottom cover on page 33](#)).
 - b. Battery ([Battery on page 34](#)).
 - c. Hard drive ([Hard drive on page 40](#))

Remove the fingerprint sensor assembly:

1. Slide the bracket toward the inside of the computer, and then lift it off the fingerprint sensor board **(1)**.
-
-  **TIP:** A tool may be required to push and release the bracket.
-
2. Disconnect the cable from the ZIF connector on the fingerprint sensor **(2)**.
 3. Remove the fingerprint sensor from the computer **(3)**.

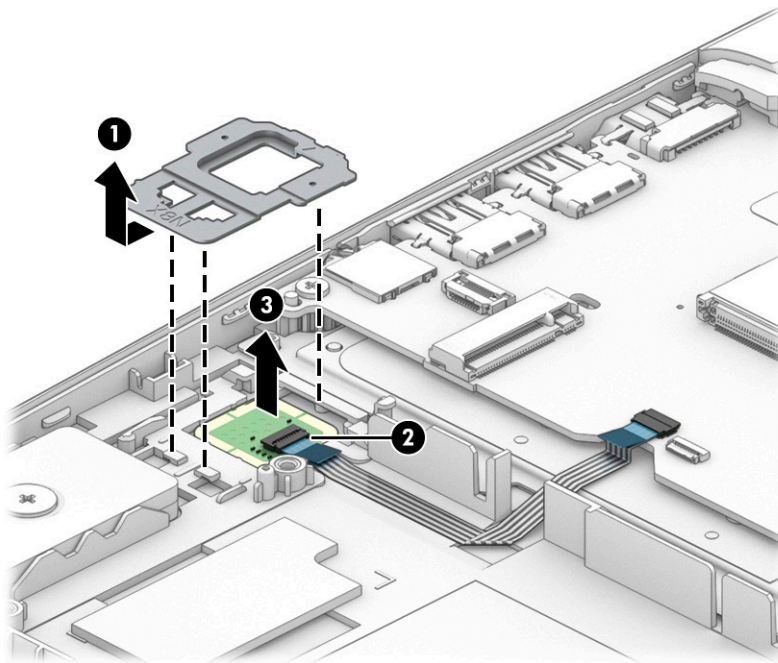

Reverse this procedure to install the fingerprint sensor assembly.

Card reader board

Table 5-14 Card reader board and cable descriptions and part numbers


Description	Spare part number
Card reader board assembly (includes cable)	L52223-001
NOTE: The card reader board cable is also available in the Cable Kit as spare part number L52208-001.	

Before removing the card reader board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the bottom cover ([Bottom cover on page 33](#)).
4. Remove the battery ([Battery on page 34](#)).


Remove the card reader board:

1. Remove the two Phillips M2.0 × 2.0 screws **(1)** that secure the card reader board to the computer.
2. Remove the tape from the cable **(2)**.
3. Position the board upside down so that you can access the connectors underneath **(3)**.

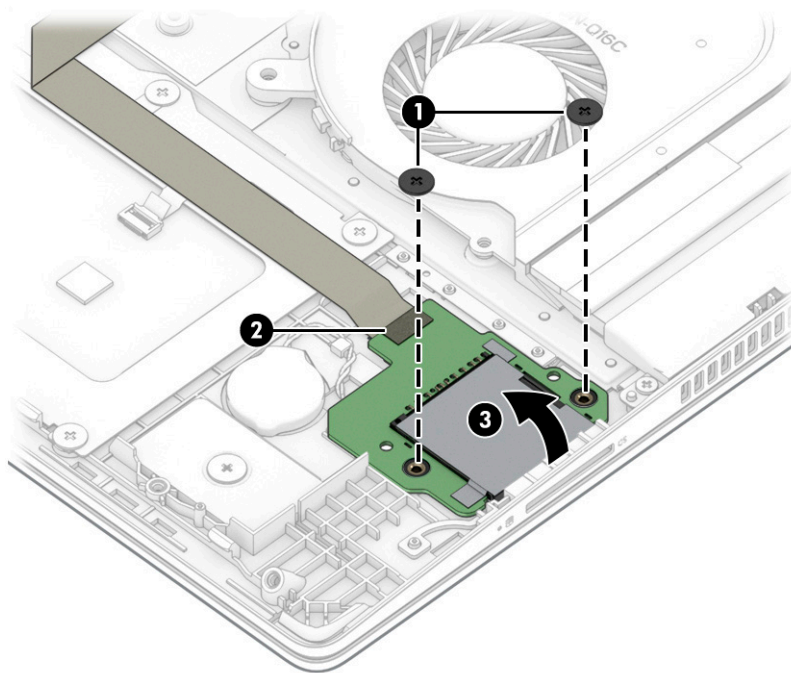

4. Disconnect the RTC battery from the card reader board **(1)**.
5. Disconnect the card reader board cable from ZIF connector on the card reader board **(2)**.

6. Lift the card reader board out of the computer **(3)**.

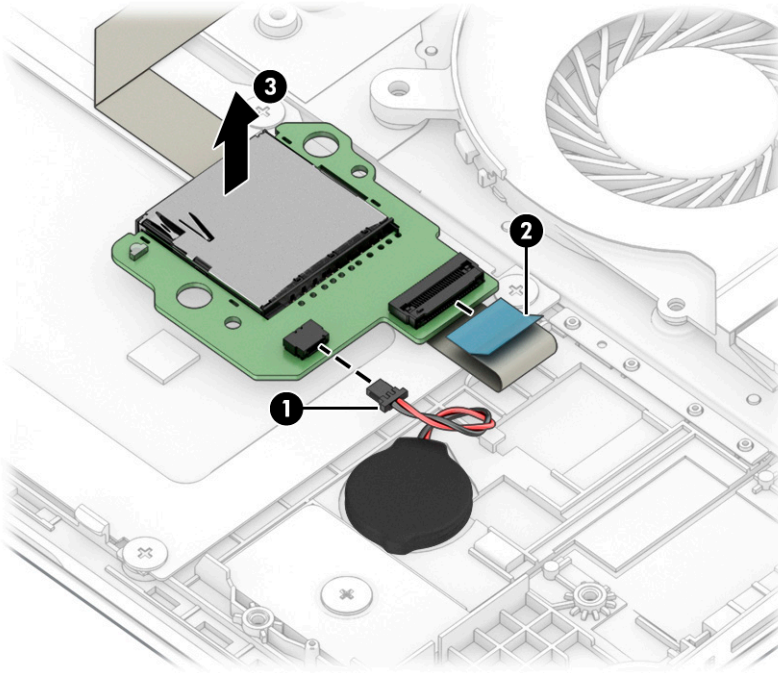

Reverse this procedure to install the card reader board.

RTC battery

Table 5-15 RTC battery description and part number

Description	Spare part number
RTC battery	L02772-001

Before removing the RTC battery, follow these steps:


1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the bottom cover ([Bottom cover on page 33](#)).
4. Remove the battery ([Battery on page 34](#)).

Remove the RTC battery:



NOTE: The RTC battery connector is located on the bottom of the card reader board.

1. Remove the screws from the card reader board, and then position the board upside down so that you can access the connectors underneath (see [Card reader board on page 51](#)).
2. Disconnect the RTC battery from the card reader board **(1)**.
3. Lift the battery to disengage it from the adhesive that secures it to the computer **(2)**.

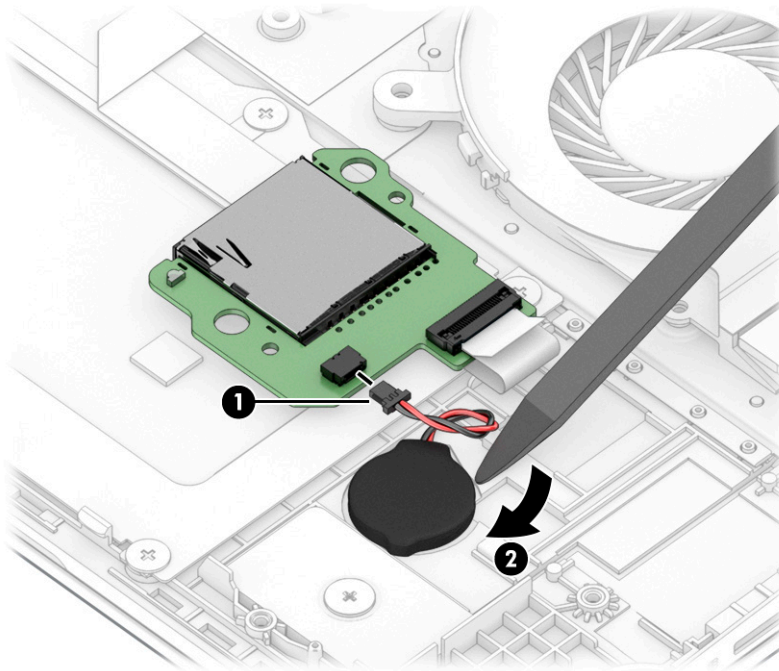

Reverse this procedure to install the RTC battery.

System board



NOTE: All system board spare part kits include replacement thermal material.

All system boards use the following part numbers:

xxxxxx-001: Non-Windows operating systems

xxxxxx-601: Windows 10 operating system

Table 5-16 System board descriptions and part numbers

Description	Spare part number
System board with integrated AMD Ryzen PRO 7 4750U processor	M09523-xx1
System board with integrated AMD Ryzen 7 4700U processor	L98556-xx1
System board with integrated AMD Ryzen PRO 5 4650U processor	M09522-xx1
System board with integrated AMD Ryzen 5 4500U processor	L98554-xx1
System board with integrated AMD Ryzen 3 4300U processor	L98552-xx1

Before removing the system board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the following components:
 - a. Bottom cover ([Bottom cover on page 33](#)).
 - b. Battery ([Battery on page 34](#))
 - c. Battery connector board ([Battery connector board on page 48](#))


When replacing the system board, be sure to remove the following components (as applicable) from the defective system board and install on the replacement system board:

- Memory modules ([Memory modules on page 35](#))
- WLAN/Bluetooth module ([WLAN/Bluetooth combo card on page 37](#))
- M.2 solid-state drive ([M.2 solid-state drive on page 39](#))
- Heat sink ([Heat sink on page 44](#))

Remove the system board:

1. Disconnect the following cables from the system board:
 - (1) Power connector cable
 - (2) Speaker cable
 - (3) Antennas from WLAN module (select models only)
 - (4) Display cable (ZIF)
 - (5) USB cable from USB board (ZIF)
 - (6) Fan cable


- (7)** Keyboard cable (ZIF)
- (8)** Card reader cable (ZIF) and tape
- (9)** Touchpad cable (ZIF)
- (10)** Backlight cable (ZIF)
- (11)** Fingerprint sensor cable (ZIF)
- (12)** Hard drive cable

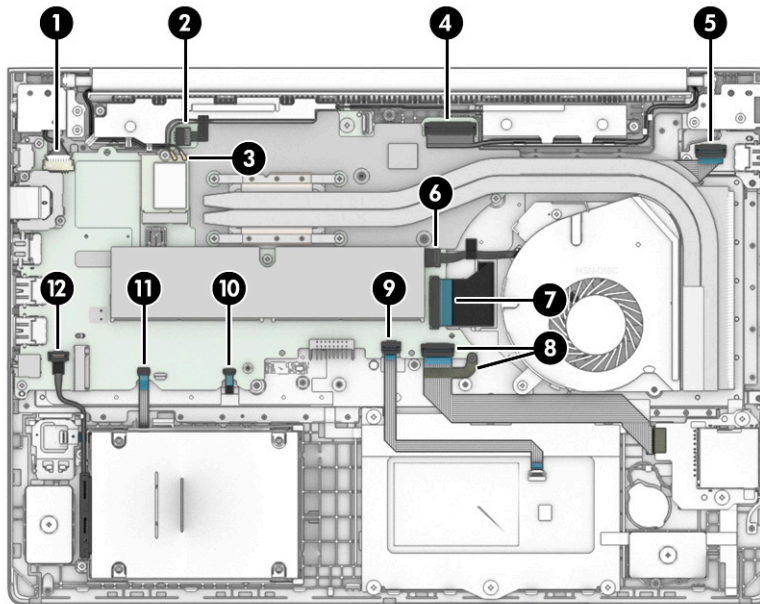


- 2.** Remove the four Phillips M2.0 × 4.0 screws **(1)** that secure the system board to the computer.
- 3.** Remove the three Phillips M2.0 × 2.5 screws **(2)** that secure the system board to the computer.
- 4.** Remove the broadhead Phillips M2.5 × 2.5 screw **(3)** that secures the system board to the computer.

5. Remove the bracket from the USB-Type C port **(4)**.

The USB bracket and RJ-45 jack cover are available in the Bracket Kit as spare part number L77275-001.

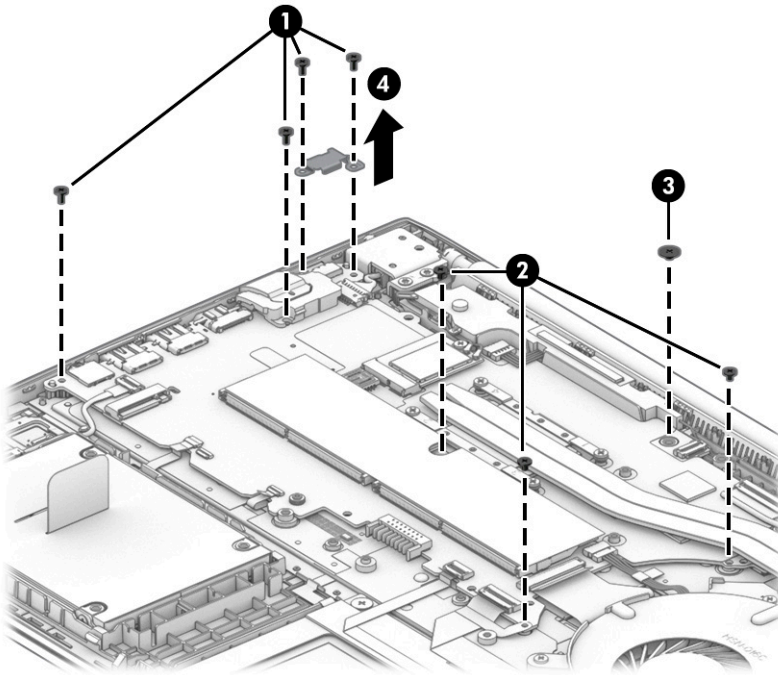

6. Rotate the right side of the system board upward **(1)**.
7. Pull the system board away from the connectors on the side of the chassis to remove it from the computer **(2)**.

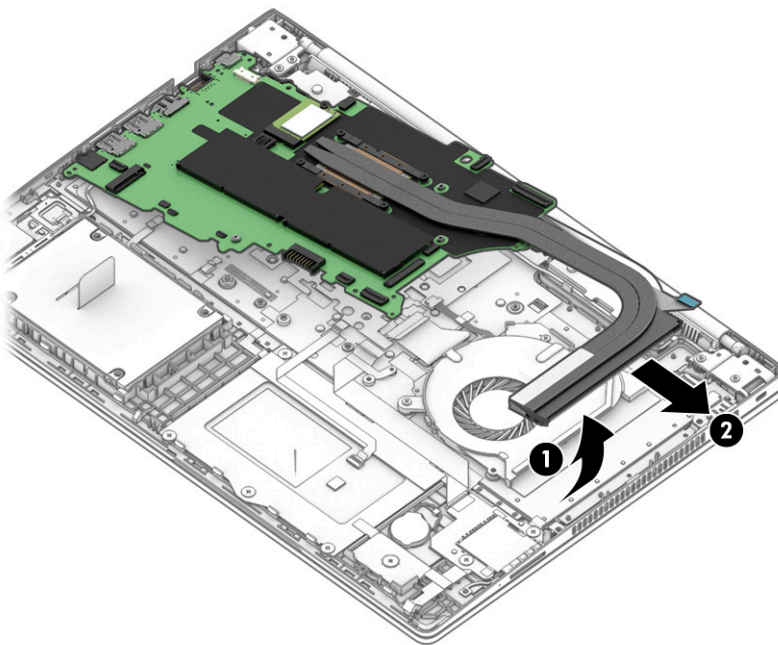

Reverse this procedure to install the system board.


Display assembly

Before disassembling the display assembly, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the bottom cover ([Bottom cover on page 33](#)).
4. Remove the battery ([Battery on page 34](#)).

Disassemble the display assembly:

1. Remove the display assembly from the computer:
 - a. Disconnect the antennas from the WLAN module **(1)** (select models only).
 - b. Remove the antenna cables from the routing channel in the speaker **(2)**.
 - c. Disconnect the display cable from the system board ZIF connector **(3)**, and then remove the cable from the routing channel in the chassis **(4)**.
 - d. Remove the four Torx T8 2.5 × 4.0 screws **(5)** that secure the display assembly to the computer.
 - e. Rotate the display to open the hinges **(6)**, and then separate the display from the computer **(7)**.

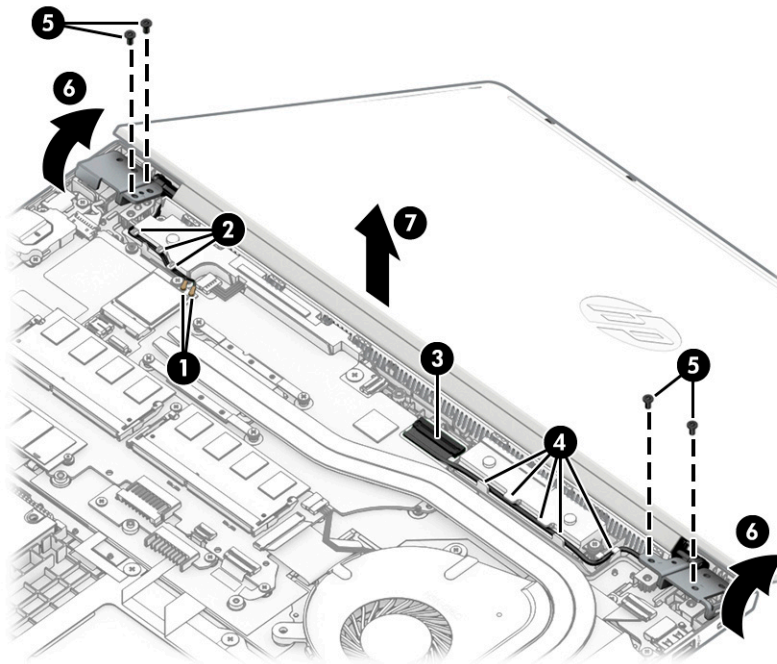

2. Flex the top **(1)** of the bezel, the inside edges of the left and right sides **(2)**, and the bottom **(3)** of the bezel until it disengages from the display enclosure.


3. Remove the display bezel (4).

The bezel is available as the following spare part numbers:

L77285-001: Models with an HD camera

L77286-001: Models with an HD +IR camera

L77287-001: Models without a camera

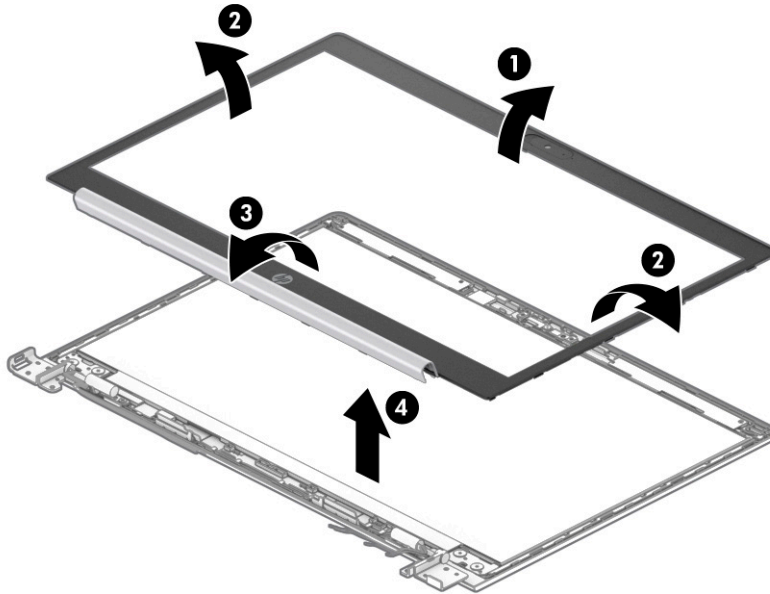

- 4.** The display panel is secured to the display enclosure with tape that is installed under the left and right sides of the panel. To remove the panel, use tweezers to grasp the end of the tape (1). While turning the tweezers (2), wrap the tape around the tweezers (3) as you continue to pull the tape out from behind the display panel. You must pull the tape multiple times before it is completely removed.

 **IMPORTANT:** If the tape tears, do not attempt to pry the panel off the enclosure. Doing so might break the panel.

The ends of the tape are accessible at both the top and bottom of the display panel.

To avoid tearing the tape, do not pull on it with the sharp end of tweezers.

5. Rotate the display panel over and place next to the display enclosure (4).


Display panels are available using the following spare part numbers:

M01100-001: HD

M01103-001: FHD, privacy


M01102-001: FHD, nonprivacy, 400 nits

M01101-001: FHD, nonprivacy, 250 nits

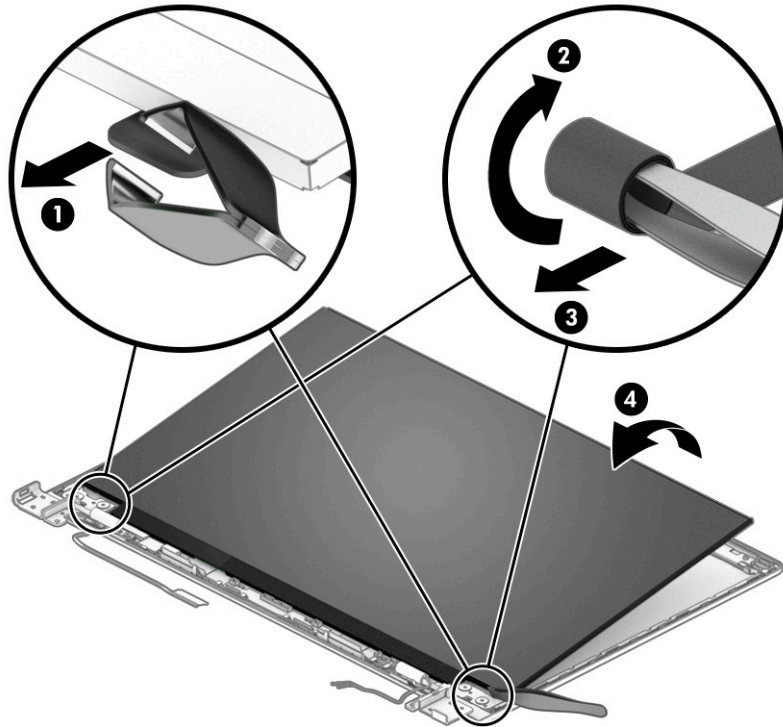

6. Lift the tape from the connector on the display panel (1), lift the locking lever (2), and then disconnect the cable from the panel (3).


7. Remove the panel **(4)**.

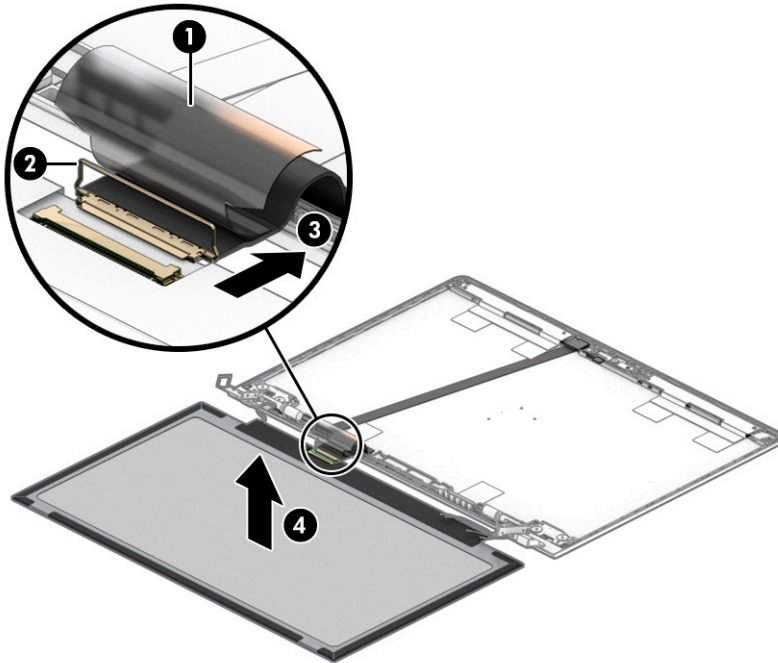

8. Use the following steps to install a display panel:


- a. Remove the backing from the bottom of the new tape to install in the display enclosure **(1)**.
- b. Locate the tape alignment marks, and then install the tape onto the left and right sides on the inside of the enclosure **(2)**.

- c. Remove the backing from the top of the installed tape (3).

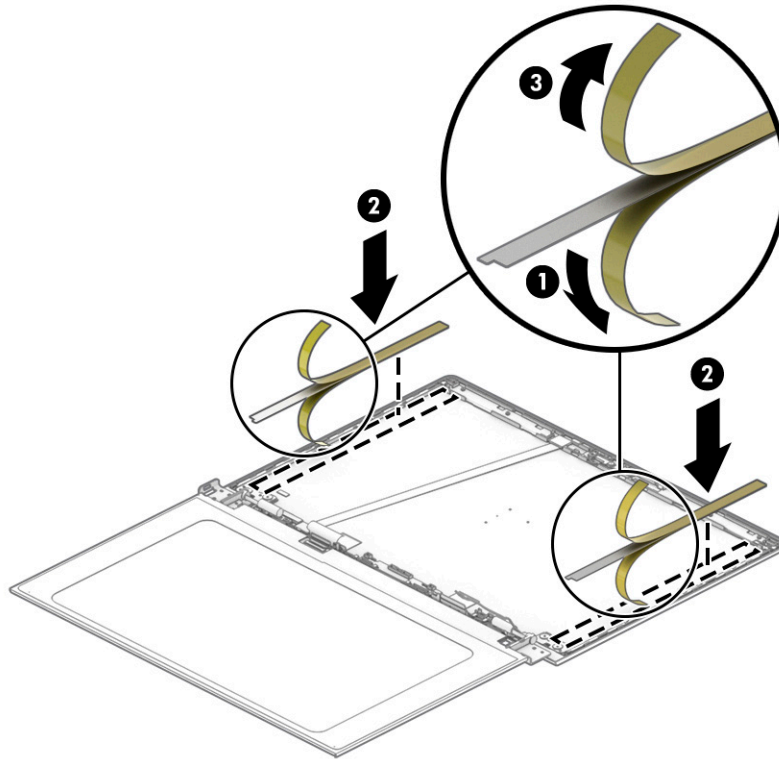


9. If it is necessary to remove or replace the HD camera, disconnect the cable from the camera (1), and then remove the module from the enclosure (2).

The HD camera is available as spare part number L83709-001. The microphone board is available as spare part number L44541-001.

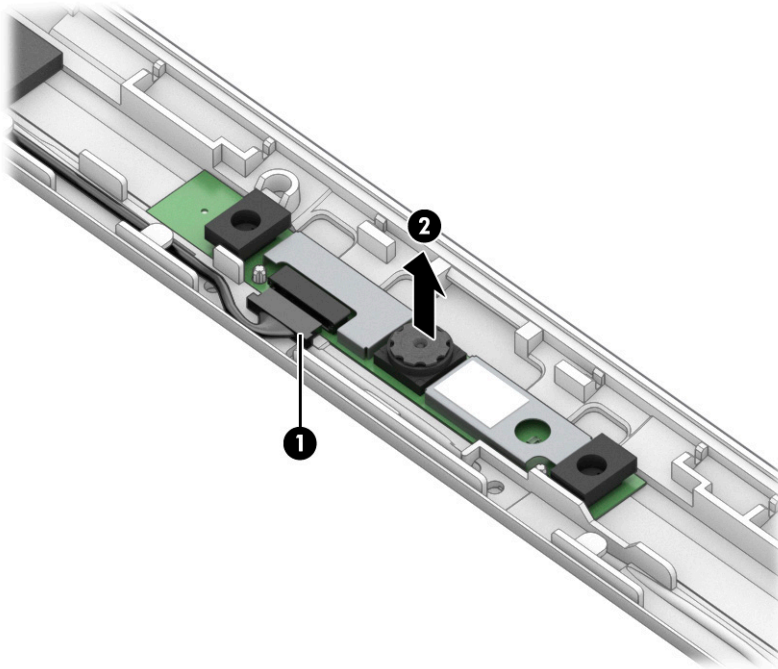


10. If it is necessary to remove or replace the IR camera, disconnect the cable from both sides of the camera (1), and then peel the camera module up to remove it from the adhesive that secures it to the enclosure (2).

The HD + IR camera is available using spare part number L83710-001.

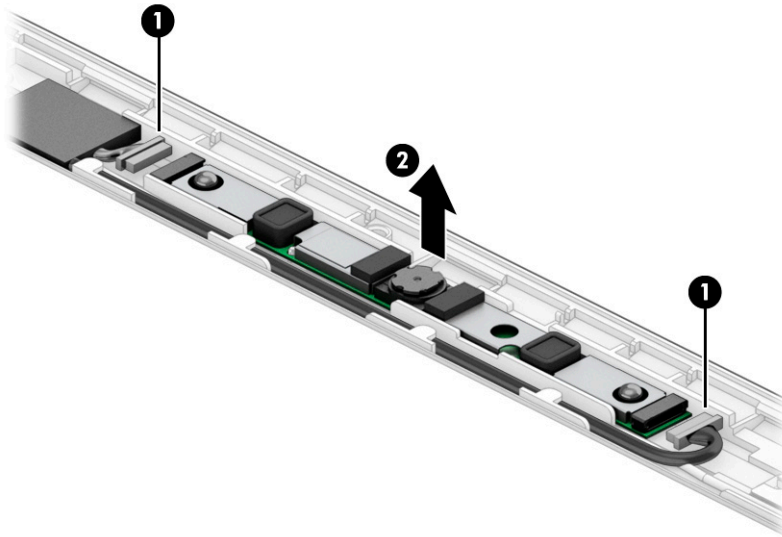

11. If it is necessary to remove the camera privacy cover, lift the cover straight up and off the display.


The camera privacy cover is available as spare part number L77237-001.

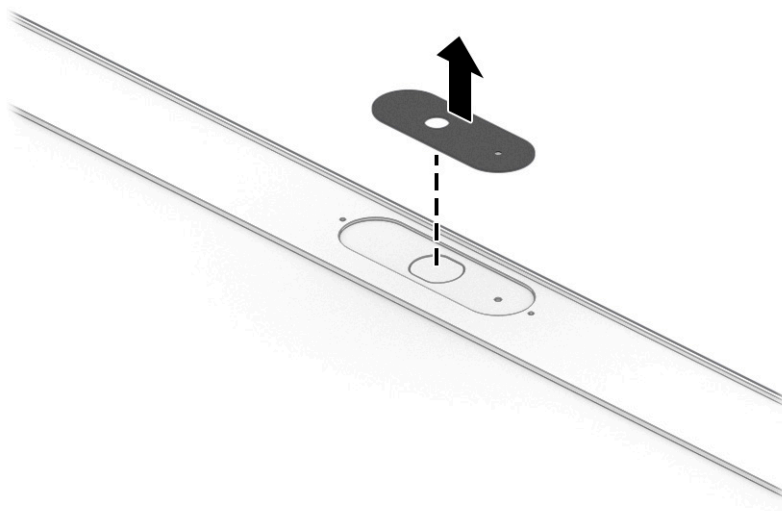

12. If it is necessary to remove the hinges from the display enclosure, remove the two Phillips broadhead M2.5 × 2.5 screws (1) and the Phillips M2.0 × 4.0 screw (2) from the bottom of each hinge.


- 13.** Slide the hinges toward the middle and then lift them from the enclosure **(3)**.

The display hinges are available as spare part number L79189-001 for nonprivacy models and L91710-001 for privacy models.

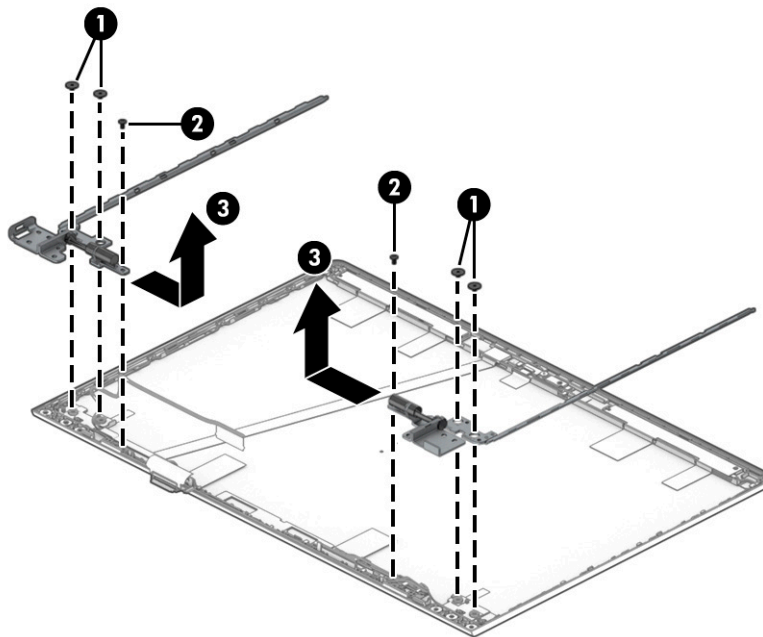

- 14.** If it is necessary to replace the WLAN antennas, peel the antennas from the enclosure **(1)**, remove the cables from the clips in the bottom of the enclosure **(2)**, and then remove the antennas and cables from the enclosure **(3)**.


WLAN antennas are available as spare part number L77283-001.

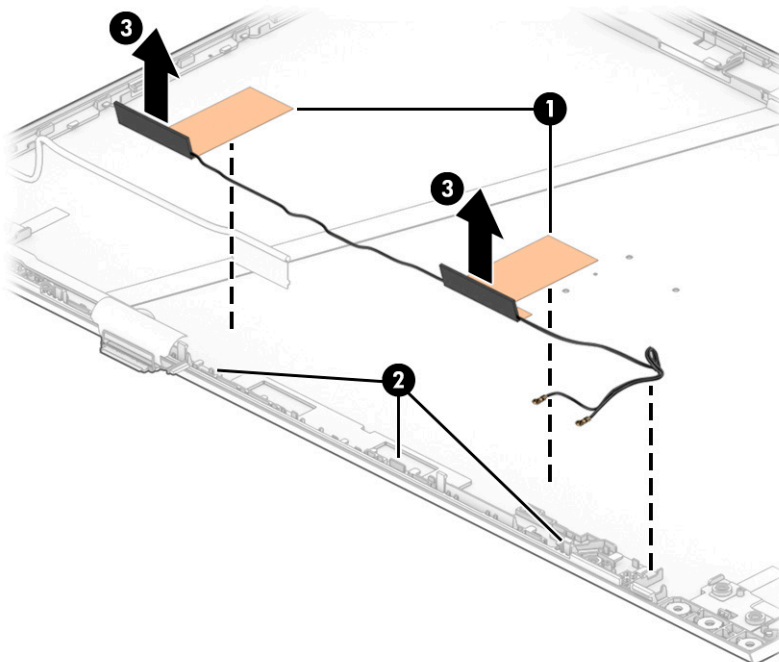

- 15.** If it is necessary to remove or replace the display/camera cable, use the following steps:

Displays with an HD camera


- a. Disconnect the cable from the ZIF connector on the camera module **(1)**.
- b. Pull the cable up to disengage it from the adhesive that secures it to the inside of the enclosure **(2)**, and then remove the cable from the enclosure **(3)**.

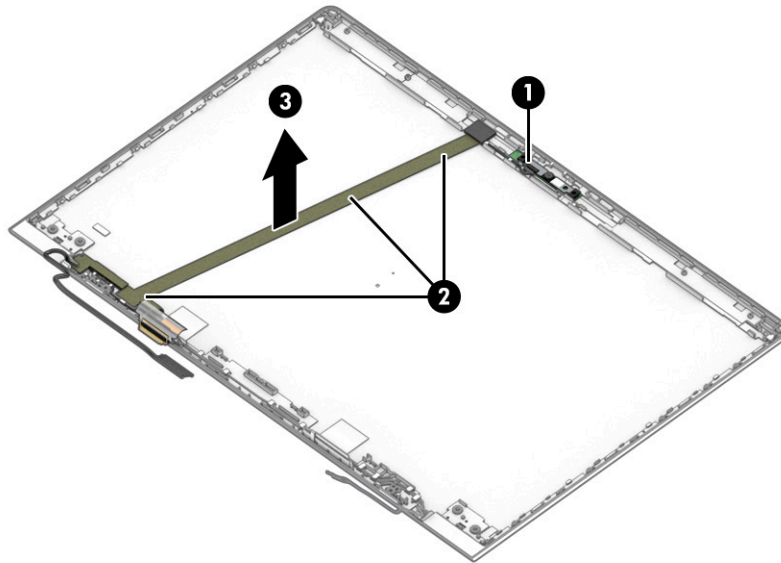

Displays with an HD + IR camera

- a. Disconnect the cable from the ZIF connector on both ends of the camera module **(1)**.

- b.** Pull the cable up to disengage it from the adhesive that secures it to the inside of the enclosure **(2)**, and then remove the cable from the enclosure **(3)**.

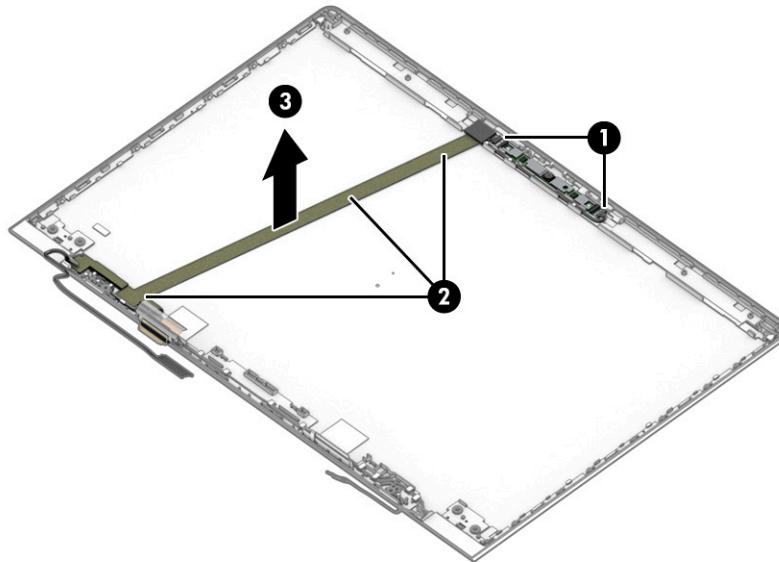

Reverse this procedure to reassemble the display assembly.

Power connector cable

Table 5-17 Power connector cable description and part number


Description	Spare part number
Power connector cable	L01048-001

Before removing the power connector cable, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Place the computer in Battery Safe mode ([Battery Safe mode on page 32](#)).
3. Remove the bottom cover ([Bottom cover on page 33](#)).
4. Remove the battery ([Battery on page 34](#)).
5. Remove the display ([Display assembly on page 57](#)).

Remove the power connector cable:

1. Remove the two Torx T8 2.5 × 4.0 screws from the right hinge **(1)**.
2. Rotate the hinge up to the upright position **(2)**.
3. Disconnect the cable from the system board **(3)**.
4. Remove the connector from the computer **(4)**.

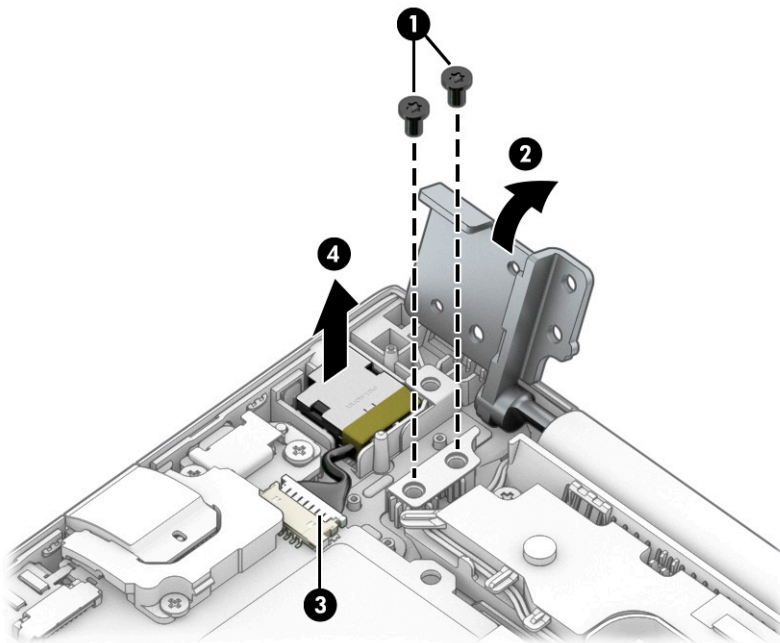

Reverse this procedure to install the power connector cable.

Keyboard/top cover

The top cover with keyboard remains after removing all other spare parts from the computer.

The following table provides the main spare part number for the keyboards. The second table provides the country codes.

Table 5-18 Keyboard descriptions and part numbers

Description	Spare part number
Keyboard/top cover, backlight	L45090-xx1
Keyboard/top cover, no backlight	L45091-xx1
Keyboard/top cover, backlight, for use in privacy models	L79436-xx1

Table 5-19 Spare part country codes

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	Iceland	-DD1	Slovenia	-BA1
Brazil	-201	India	-D61	South Korea	-AD1
Bulgaria	-261	Israel	-BB1	Spain	-071
Chile	-161	Italy	-061	Switzerland	-BG1
Czech Republic/Slovakia	-FL1	Japan	-291	Taiwan	-AB1
Denmark, Finland, and Norway	-DH1	The Netherlands	-B31	Thailand	-281
French Canada	-DB1	Northern Africa	-FP1	Turkey	-141
France	-051	Portugal	-131	Ukraine	-BD1
Germany	-041	Russia	-251	United Kingdom	-031
Greece	-151	Saudi Arabia	-171	United States	-001
Hungary	-211				

6 Computer Setup (BIOS), TPM, and HP Sure Start

Using Computer Setup

Computer Setup, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Computer Setup includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.



NOTE: Use extreme care when making changes in Computer Setup. Errors can prevent the computer from operating properly.

Starting Computer Setup

- ▲ Turn on or restart the computer, and when the HP logo appears, press **F10** to enter Computer Setup.

Navigating and selecting in Computer Setup

- To select a menu or a menu item, use the **Tab** key and the keyboard arrow keys and then press **Enter**, or use a pointing device to select the item.
- To scroll up and down, select the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key on the keyboard.
- To close open dialog boxes and return to the main Computer Setup screen, press **Esc**, and then follow the on-screen instructions.

To exit Computer Setup, choose one of the following methods:

- To exit Computer Setup menus without saving your changes, select **Main**, select **Ignore Changes and Exit**, and then select **Yes**.



NOTE: If you are using arrow keys to highlight your choice, you must then press **Enter**.

- To save your changes and exit Computer Setup menus, select **Main**, select **Save Changes and Exit**, and then select **Yes**.



NOTE: If you are using arrow keys to highlight your choice, you must then press **Enter**.

Your changes go into effect when the computer restarts.

Restoring factory settings in Computer Setup



NOTE: Restoring defaults will not change the hard drive mode.

To return all settings in Computer Setup to the values that were set at the factory, follow these steps:

1. Start Computer Setup. See [Starting Computer Setup on page 68](#).
2. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes**.



NOTE: If you are using arrow keys to highlight your choice, you must then press **Enter**.

 **NOTE:** On select products, the selections might display **Restore Defaults** instead of **Apply Factory Defaults and Exit**.

Your changes go into effect when the computer restarts.

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

Updating the BIOS

Updated versions of the BIOS might be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named Readme.txt, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Computer Setup (BIOS), first determine the BIOS version on your computer.

You can access BIOS version information (also known as *ROM date* and *System BIOS*) by pressing **fn+esc** (if you are already in Windows) or by using Computer Setup.

1. Start Computer Setup. See [Starting Computer Setup on page 68](#).
2. Select **Main**, and then select **System Information**.
3. To exit Computer Setup menus without saving your changes, select **Main**, select **Ignore Changes and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

To check for later BIOS versions, see [Downloading a BIOS update on page 69](#).

Downloading a BIOS update

 **IMPORTANT:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power on the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. Type `support` in the taskbar search box, and then select the HP Support Assistant app.
– or –
Select the question mark icon in the taskbar.
2. Select **Updates**, and then select **Check for updates and messages**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:

- a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You might need this information to locate the update later, after it has been downloaded to your hard drive.
- b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.



NOTE: If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed, follow these steps:

1. Type `file` in the taskbar search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).

The BIOS installation begins.

5. Complete the installation by following the on-screen instructions.



NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Changing the boot order using the f9 prompt

To dynamically choose a boot device for the current startup sequence, follow these steps:

1. Access the Boot Device Options menu:
 - Turn on or restart the computer, and when the HP logo appears, press **f9** to enter the Boot Device Options menu.
2. Select a boot device, press **enter**, and then follow the on-screen instructions.

TPM BIOS settings (select products only)



IMPORTANT: Before enabling Trusted Platform Module (TPM) functionality on this system, you must ensure that your intended use of TPM complies with relevant local laws, regulations and policies, and approvals or licenses must be obtained if applicable. For any compliance issues arising from your operation or usage of TPM that violates the previously mentioned requirement, you shall bear all the liabilities wholly and solely. HP will not be responsible for any related liabilities.

TPM provides additional security for your computer. You can modify the TPM settings in Computer Setup (BIOS).



NOTE: If you change the TPM setting to Hidden, TPM is not visible in the operating system.

To access TPM settings in Computer Setup:

1. Start Computer Setup. See [Starting Computer Setup on page 68](#).
2. Select **Security**, select **TPM Embedded Security**, and then follow the on-screen instructions.

Using HP Sure Start (select products only)

Select computer models are configured with HP Sure Start, a technology that monitors the computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start automatically restores the BIOS to its previously safe state, without user intervention.

HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. Advanced users can customize the default configuration.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

7 Using HP PC Hardware Diagnostics

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, first you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 72](#).

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Help and Support or HP Support Assistant.

1. To access HP PC Hardware Diagnostics Windows from HP Help and Support:

- a. Select the **Start** button, and then select **HP Help and Support**.
- b. Select **HP PC Hardware Diagnostics Windows**.

– or –

To access HP PC Hardware Diagnostics Windows from HP Support Assistant:

- a. Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.

– or –

Select the question mark icon in the taskbar.

- b. Select **Troubleshooting and fixes**.
- c. Select **Diagnostics**, and then select **HP PC Hardware Diagnostics Windows**.

2. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit Failure ID code is generated. The screen displays one of the following options:

- A Failure ID link is displayed. Select the link and follow the on-screen instructions.
- Instructions for calling support are displayed. Follow those instructions.

Downloading HP PC Hardware Diagnostics Windows

- The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only.
- You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version

To download HP PC Hardware Diagnostics Windows, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics Windows**, and then select a location on your computer or a USB flash drive.

The tool downloads to the selected location.

– or –

You can use the following steps to download the HP PC Hardware Diagnostics Windows from the Microsoft Store:

1. Select the Microsoft app on your desktop or enter `Microsoft Store` in the taskbar search box.
2. Enter `HP PC Hardware Diagnostics Windows` in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

To download HP PC Hardware Diagnostics Windows by product name or number, follow these steps:

1. Go to <http://www.hp.com/support>.
2. Select **Get software and drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.

The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, follow these steps:

- ▲ Navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI



NOTE: For Windows 10 S computers, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 74](#).

HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit Failure ID code is generated. For assistance in solving the problem:

- ▲ Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the Failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your Failure ID and product number automatically filled in. Follow the on-screen instructions.

– or –

Contact support, and provide the Failure ID code.



NOTE: To start diagnostics on a convertible computer, your computer must be in notebook mode, and you must use the attached keyboard.



NOTE: If you need to stop a diagnostic test, press [esc](#).

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow these steps:

1. Turn on or restart the computer, and quickly press [esc](#).
2. Press [f2](#).

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive



NOTE: To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 74](#).

- b. Hard drive

- c. BIOS

3. When the diagnostic tool opens, select a language, select the type of diagnostic test you want to run, and then follow the on-screen instructions.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in the following situations:

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.
- The hard drive is damaged.



NOTE: The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics UEFI**, and then select **Run**.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

To download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive:

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then execute the diagnostics on your computer, and it might upload results to a preconfigured server. For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, and then select **Find out more**.

Downloading Remote HP PC Hardware Diagnostics UEFI



NOTE: HP Remote PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

To download the latest Remote HP PC Hardware Diagnostics UEFI version, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download Remote Diagnostics**, and then select **Run**.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number



NOTE: For some products, you might have to download the software by using the product name or number.

To download HP Remote PC Hardware Diagnostics UEFI by product name or number, follow these steps:

1. Go to <http://www.hp.com/support>.
2. Select **Get software and drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform the following customizations:

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage (such as a hard drive or USB flash drive) to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Main**, and then **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

8 Backing up, restoring, and recovering

This chapter provides information about the following processes, which are standard procedure for most products:

- **Backing up your personal information**—You can use Windows tools to back up your personal information (see [Using Windows tools on page 77](#)).
- **Creating a restore point**—You can use Windows tools to create a restore point (see [Using Windows tools on page 77](#)).
- **Creating recovery media** (select products only)—You can use the HP Cloud Recovery Download Tool (select products only) to create recovery media (see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 77](#)).
- **Restoring and recovery**—Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state (see [Using Windows tools on page 77](#)).



IMPORTANT: If you will be performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.

IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

Using Windows tools



IMPORTANT: Windows is the only option that allows you to back up your personal information. Schedule regular backups to avoid information loss.

You can use Windows tools to back up personal information and create system restore points and recovery media.



NOTE: If computer storage is 32 GB or less, Microsoft System Restore is disabled by default.

For more information and steps, see the Get Help app.

1. Select the **Start** button, and then select the **Get Help** app.
2. Enter the task you want to perform.



NOTE: You must be connected to the Internet to access the Get Help app.

Using the HP Cloud Recovery Download Tool to create recovery media (select products only)

You can use the HP Cloud Recovery Download Tool to create HP Recovery media on a bootable USB flash drive.

For details:

- ▲ Go to <http://www.hp.com/support>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have.



NOTE: If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

Restoring and recovery

Restoring, resetting, and refreshing using Windows tools

Windows offers several options for restoring, resetting, and refreshing the computer. For details, see [Using Windows tools on page 77](#).

Recovering using HP Recovery media

You can use HP Recovery media to recover the original operating system and software programs that were installed at the factory. On select products, it can be created on a bootable USB flash drive using the HP Cloud Recovery Download Tool. For details, see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 77](#).



NOTE: If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

To recover your system:

- ▲ Insert the HP Recovery media, and then restart the computer.

Changing the computer boot order

If your computer does not restart using the HP Recovery media, you can change the computer boot order. This is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection to an optical drive or a USB flash drive, depending on the location of your HP Recovery media.

To change the boot order:



IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

1. Insert the HP Recovery media.
2. Access the system **Startup** menu.

For computers or tablets with keyboards attached:

- ▲ Turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.

For tablets without keyboards:

- ▲ Turn on or restart the tablet, quickly hold down the volume up button, and then select **f9**.

– or –

Turn on or restart the tablet, quickly hold down the volume down button, and then select **f9**.

3. Select the optical drive or USB flash drive from which you want to boot, and then follow the on-screen instructions.

Using HP Sure Recover (select products only)

Select computer models are configured with HP Sure Recover, a PC OS recovery solution built into the hardware and firmware. HP Sure Recover can fully restore the HP OS image without installed recovery software.

Using HP Sure Recover, an administrator or user can restore the system and install:

- Latest version of the operating system
- Platform-specific device drivers
- Software applications, in the case of a custom image

To access the latest documentation for HP Sure Recover, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

9 Specifications

Computer specifications

Table 9-1 Computer specifications

	Metric	U.S.
Dimensions		
Depth	256.9 mm	10.10 in
Width	364.9 mm	15.37 in
Height	18.9 mm	0.75 in
Weight		
SSD	2.0 kg	4.41 lbs
Hard drive	2.1 kg	4.63 lbs
Input power		
Operating voltage	19.0 V dc @ 4.74 A – 90 W or 18.5 V dc @ 3.5 A - 65 W	
Operating current	4.74 A or 3.5 A	
Temperature		
Operating (not writing to optical disc)	0°C to 35°C	32°F to 95°F
Operating (writing to optical disc)	5°C to 35°C	41°F to 95°F
Nonoperating	–20°C to 60°C	–4°F to 140°F
Relative humidity		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating (14.7 to 10.1 psia)	–15 m to 3,048 m	–50 ft to 10,000 ft
Nonoperating (14.7 to 4.4 psia)	–15 m to 12,192 m	–50 ft to 40,000 ft
Shock		
Operating	125 g, 2 ms, half-sine	
Nonoperating	200 g, 2 ms, half-sine	

NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The computer operates well within this range of temperatures.

39.6 cm (15.6 in) display specifications

Table 9-2 Display specifications

	Metric	U.S.
Active diagonal size	39.6 cm	15.6 in
Resolution	1920 × 1080 (FHD)	
Surface treatment	Antiglare	
Brightness	220 nits or 400 nits (typical)	
Viewing angle	UWVA	
Backlight	LED	

Hard drive specifications

Table 9-3 Hard drive specifications

	1 TB*	500 GB*
Dimensions		
Height	7.0 mm	7.0 mm
Width	70 mm	70 mm
Weight	115 g	101 g or 95 g
Interface type	SATA	SATA
Transfer rate	100 MB/s	100 MB/s
Security	ATA security	ATA security
Seek times (typical read, including setting)		
Single track	1.4 ms	3 ms
Average	10 ms	13 ms
Maximum	12 ms	24 ms
Logical blocks	1,938,921,461	1,048,576,000
Disc rotational speed	5400 rpm	7200 rpm or 5400 rpm
Operating temperature	0°C to 70°C (32°F to 158°F)	
*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications may differ slightly.		
NOTE: Certain restrictions and exclusions apply. Contact technical support for details.		

Solid-state drive specifications

Table 9-4 Solid-state drive specifications

	128 GB*	256 GB*	512 GB*
Height	1.0 mm	1.0 mm	1.0 mm
Length	50.8 mm	50.8 mm	50.8 mm
Width	28.9 mm	28.9 mm	28.9 mm
Weight	< 10 g	< 10 g	< 10 g
Transfer rate			
Sequential read	up to 2150 MB/s	up to 2150 MB/s	up to 2150 MB/s
Random read	Up to 300,000 IOPs	Up to 300,000 IOPs	Up to 300,000 IOPs
Sequential write	up to 1260 MB/s	up to 1550 MB/s	up to 1550 MB/s
Random write	Up to 100,000 IOPs	Up to 100,000 IOPs	Up to 100,000 IOPs
Interface type	SATA-3	PCIe	PCIe
Ready time, maximum (to not busy)	1.0 ms	< 1.0 ms	< 1.0 ms
Access times, logical	0.1 ms	0.1 ms	0.1 ms
Total logical sectors	234,441,648	468,883,296	1,000,215,216
Operating temperature	0°C to 70°C (32°F to 158°F)		
*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications may differ slightly.			
NOTE: Certain restrictions and exclusions apply. Contact technical support for details.			

10 Statement of memory volatility

The purpose of this chapter is to provide general information regarding nonvolatile memory in HP Business computers. This chapter also provides general instructions for restoring nonvolatile memory that can contain personal data after the system has been powered off and the hard drive has been removed.

HP Business computer products that use Intel®-based or AMD®-based system boards contain volatile DDR memory. The amount of nonvolatile memory present in the system depends upon the system configuration. Intel-based and AMD-based system boards contain nonvolatile memory subcomponents as originally shipped from HP, assuming that no subsequent modifications have been made to the system and assuming that no applications, features, or functionality have been added to or installed on the system.

Following system shutdown and removal of all power sources from an HP Business computer system, personal data can remain on volatile system memory (DIMMs) for a finite period of time and will also remain in nonvolatile memory. Use the steps to remove personal data from the computer, including the nonvolatile memory found in Intel-based and AMD-based system boards.



NOTE: If your tablet has a keyboard base, connect to the keyboard base before beginning steps in this chapter.

Current BIOS steps

1. Follow steps (a) through (f) to restore the nonvolatile memory that can contain personal data. Restoring or reprogramming nonvolatile memory that does not store personal data is neither necessary nor recommended.

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, enter the password at the prompt.

- b. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes** to load defaults.
The computer reboots.

- c. During the reboot, press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, enter the password at the prompt.

- d. Select the **Security** menu, select **Restore Security Settings to Factory Defaults**, and then select **Yes** to restore security level defaults.
The computer reboots.

- e. During the reboot, press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, enter the password at the prompt.

- f. If an asset or ownership tag is set, select the **Security** menu and scroll down to the **Utilities** menu. Select **System IDs**, and then select **Asset Tracking Number**. Clear the tag, and then make the selection to return to the prior menu.

- g. If a DriveLock password is set, select the **Security** menu, and scroll down to **Hard Drive Utilities** under the **Utilities** menu. Select **Hard Drive Utilities**, select **DriveLock**, then clear the check box for **DriveLock password on restart**. Select **OK** to proceed.
- h. Select the **Main** menu, and then select **Reset BIOS Security to factory default**. Click **Yes** at the warning message.
The computer reboots.
- i. During the reboot, press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, enter the password at the prompt.

- j. Select the **Main** menu, select **Apply Factory Defaults and Exit**, select **Yes** to save changes and exit, and then select **Shutdown**.
 - k. Reboot the system. If the system has a Trusted Platform Module (TPM), fingerprint reader, or both, one or two prompts will appear—one to clear the TPM and the other to Reset Fingerprint Sensor. Press or tap **f1** to accept or **f2** to reject.
 - l. Remove all power and system batteries for at least 24 hours.
2. Complete one of the following:
- Remove and retain the storage drive.
 - or –
 - Clear the drive contents by using a third-party utility designed to erase data from an SSD.
 - or –
 - Clear the contents of the drive by using the following BIOS Setup Secure Erase command option steps:



IMPORTANT: If you clear data using Secure Erase, it cannot be recovered.

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
 - b. Select the **Security** menu and scroll down to the **Utilities** menu.
 - c. Select **Hard Drive Utilities**.
 - d. Under **Utilities**, select **Secure Erase**, select the hard drive storing the data you want to clear, and then follow the on-screen instructions to continue.
- or –
- Clear the contents of the drive using the following Disk Sanitizer commands steps:



IMPORTANT: If you clear data using Disk Sanitizer, it cannot be recovered.



NOTE: The amount of time it takes for Disk Sanitizer to run can take several hours. Plug the computer into an AC outlet before starting.

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
- b. Select the **Security** menu and scroll down to the **Utilities** menu.

- c. Select **Hard Drive Utilities**.
- d. Under **Utilities**, select **Disk Sanitizer**, select the hard drive storing the data you want to clear, and then follow the on-screen instructions to continue.

Nonvolatile memory usage

Table 10-1 Troubleshooting steps for nonvolatile memory usage

Nonvolatile memory type	Amount (Size)	Does this memory store customer data?	Does this memory retain data when power is removed?	What is the purpose of this memory?	How is data entered into this memory?	How is this memory write-protected?
HP Sure Start flash (select models only)	8 MB	No	Yes	Provides protected backup of critical System BIOS code, EC firmware, and critical computer configuration data for select platforms that support HP Sure Start. For more information, see Using HP Sure Start (select models only) on page 88.	Data cannot be written to this device via the host processor. The content is managed solely by the HP Sure Start Embedded Controller.	This memory is protected by the HP Sure Start Embedded Controller.
Real Time Clock (RTC) battery backed-up CMOS configuration memory	256 bytes	No	Yes	Stores system date and time and noncritical data.	RTC battery backed-up CMOS is programmed using Computer Setup (BIOS), or by changing the Microsoft® Windows date & time.	This memory is not write-protected.
Controller (NIC) EEPROM	64 KB (not customer accessible)	No	Yes	Stores NIC configuration and NIC firmware.	NIC EEPROM is programmed using a utility from the NIC vendor that can be run from DOS.	A utility must be used to write data to this memory and is available from the NIC vendor. Writing data to this ROM in an inappropriate manner will render the NIC non-functional.
DIMM Serial Presence Detect (SPD) configuration data	256 bytes per memory module, 128 bytes programmable (not customer accessible)	No	Yes	Stores memory module information.	DIMM SPD is programmed by the memory vendor.	Data cannot be written to this memory when the module is installed in a computer. The specific write-protection method varies by memory vendor.

Table 10-1 Troubleshooting steps for nonvolatile memory usage (continued)

Nonvolatile memory type	Amount (Size)	Does this memory store customer data?	Does this memory retain data when power is removed?	What is the purpose of this memory?	How is data entered into this memory?	How is this memory write-protected?
System BIOS	9 MB	Yes	Yes	Stores system BIOS code and computer configuration data.	System BIOS code is programmed at the factory. Code is updated when the system BIOS is updated. Configuration data and settings are entered using the Computer Setup (BIOS) or a custom utility.	NOTE: Writing data to this ROM in an inappropriate manner can render the computer non-functional. A utility must be used for writing data to this memory and is available on the HP website; go to http://www.hp.com/support . Select Find your product , and then follow the on-screen instructions.
Intel Management Engine Firmware (present only in select Elite or Z models. For more information, go to http://www.hp.com/support . Select Find your product , and then follow the on-screen instructions.)	1.5 MB or 7 MB	Yes	Yes	Stores Management Engine Code, Settings, Provisioning Data and iAMT third-party data store.	Management Engine Code is programmed at the factory. Code is updated via Intel secure firmware update utility. Unique Provisioning Data can be entered at the factory or by an administrator using the Management Engine (MEBx) setup utility. The third-party data store contents can be populated by a remote management console or local applications that have been registered by an administrator to have access to the space.	The Intel chipset is configured to enforce hardware protection to block all direct read/write access to this area. An Intel utility must be used for updating the firmware. Only firmware updates digitally signed by Intel can be applied using this utility.
Bluetooth flash (select products only)	2 Mb	No	Yes	Stores Bluetooth configuration and firmware.	Bluetooth flash is programmed at the factory. Tools for writing data to this memory are not publicly available but can be obtained from the silicon vendor.	A utility must be used for writing data to this memory and is made available through newer versions of the driver whenever the flash requires an upgrade.
802.11 WLAN EEPROM	4 Kb to 8 Kb	No	Yes	Stores configuration and calibration data.	802.11 WLAN EEPROM is programmed at the factory. Tools for writing data to this memory are not made public.	A utility must be used for writing data to this memory and is typically not made available to the public unless a firmware upgrade is necessary to address a unique issue.
Camera (select products only)	64 Kb	No	Yes	Stores camera configuration and firmware.	Camera memory is programmed using a utility from the device manufacturer that can be run from Windows.	A utility must be used for writing data to this memory and is typically not made available to the public unless a firmware

Table 10-1 Troubleshooting steps for nonvolatile memory usage (continued)

Nonvolatile memory type	Amount (Size)	Does this memory store customer data?	Does this memory retain data when power is removed?	What is the purpose of this memory?	How is data entered into this memory?	How is this memory write-protected?
Fingerprint reader (select products only)	512 KB flash	Yes	Yes	Stores fingerprint templates.	Fingerprint reader memory is programmed by user enrollment in HP ProtectTools Security Manager.	upgrade is necessary to address a unique issue. Only a digitally signed application can make the call to write to the flash.

Questions and answers

1. How can the BIOS settings be restored (returned to factory settings)?



IMPORTANT: Restore defaults does not securely erase any data on your hard drive. See question and answer 6 for steps to securely erase data.

Restore defaults does not reset the Custom Secure Boot keys. See question and answer 7 for information about resetting the keys.

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
- b. Select **Main**, and then select **Apply Factory Defaults and Exit**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

2. What is a UEFI BIOS, and how is it different from a legacy BIOS?

The Unified Extensible Firmware Interface (UEFI) BIOS is an industry-standard software interface between the platform firmware and an operating system (OS). It is a replacement for the older BIOS architecture, but supports much of the legacy BIOS functionality.

Like the legacy BIOS, the UEFI BIOS provides an interface to display the system information and configuration settings and to change the configuration of your computer before an OS is loaded. BIOS provides a secure run-time environment that supports a Graphic User Interface (GUI). In this environment, you can use either a pointing device (touch screen, touchpad, pointing stick, or USB mouse) or the keyboard to navigate and make menu and configuration selections. The UEFI BIOS also contains basic system diagnostics.

The UEFI BIOS provides functionality beyond that of the legacy BIOS. In addition, the UEFI BIOS works to initialize the computer’s hardware before loading and executing the OS; the run-time environment allows the loading and execution of software programs from storage devices to provide more functionality, such as advanced hardware diagnostics (with the ability to display more detailed system information) and advanced firmware management and recovery software.

HP has provided options in Computer Setup (BIOS) to allow you to run in legacy BIOS, if required by the operating system. Examples of this requirement would be if you upgrade or downgrade the OS.

3. Where does the UEFI BIOS reside?

The UEFI BIOS resides on a flash memory chip. A utility must be used to write to the chip.

4. What kind of configuration data is stored on the DIMM Serial Presence Detect (SPD) memory module? How would this data be written?

The DIMM SPD memory contains information about the memory module, such as size, serial number, data width, speed/timing, voltage, and thermal information. This information is written by the module manufacturer and stored on an EEPROM. This EEPROM cannot be written to when the memory module is installed in a computer. Third-party tools do exist that can write to the EEPROM when the memory module is not installed in a computer. Various third-party tools are available to read SPD memory.

5. What is meant by “Restore the nonvolatile memory found in Intel-based system boards”?

This message relates to clearing the Real Time Clock (RTC) CMOS memory that contains computer configuration data.

6. How can the BIOS security be reset to factory defaults and data erased?



IMPORTANT: Resetting results in the loss of information.

These steps do not reset Custom Secure Boot Keys. See question and answer 7 for information about resetting the keys.

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
- b. Select **Main**, and then select **Reset Security to Factory Defaults**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

7. How can the Custom Secure Boot Keys be reset?

Secure Boot is a feature to ensure that only authenticated code can start on a platform. If you enabled Secure Boot and created Custom Secure Boot Keys, simply disabling Secure Boot does not clear the keys. You must also select to clear the Custom Secure Boot Keys. Use the same Secure Boot access procedure you used to create the Custom Secure Boot Keys, but make the selection to clear or delete all Secure Boot Keys.

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
- b. Select the **Security** menu, select **Secure Boot Configuration**, and then follow the on-screen instructions.
- c. At the **Secure Boot Configuration** window, select **Secure Boot**, select **Clear Secure Boot Keys**, and then follow the on-screen instructions to continue.

Using HP Sure Start (select models only)

Select computer models are configured with HP Sure Start, a technology that continuously monitors your computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start restores the BIOS to its previously safe state, without user intervention. Those select computer models ship with HP Sure Start configured and enabled. HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. The default configuration can be customized by advanced users.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

11 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 V ac, or from 220 to 240 V ac.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 or 250 V ac, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

Table 11-1 Power cord requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
The Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
The People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
The United Kingdom	ASTA	1
The United States	UL	2

1. The flexible cord must be Type H05VV-F, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

Table 11-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
		2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V ac) or NEMA 6-15P (15 A, 250 V ac) configuration. CSA or C-UL mark. UL file number must be on each element.
		3. The appliance coupler, flexible cord, and wall plug must bear a “T” mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, 3-conductor, 0.75 mm ² or 1.25 mm ² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V ac) configuration.
		4. The flexible cord must be Type RVV, 3-conductor, 0.75 mm ² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
		5. The flexible cord must be Type H05VV-F 3-conductor, 0.75 mm ² conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label.
		6. The flexible cord must be Type HVCTF 3-conductor, 1.25 mm ² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.
		7. For 127 V ac, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V ac), with UL and CSA or C-UL marks. For 240 V ac, the flexible cord must be Type H05VV-F 3-conductor, 0.75 mm ² or 1.00 mm ² conductor size, with plug BS 1363/A with BSI or ASTA marks.

12 Recycling

When a non-rechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

Index

A

AC adapter, spare part numbers 24
antennas
 disconnecting 37
audio, product description 2
audio-out (headphone)/audio-in
 (microphone) combo jack,
 identifying 6

B

backup, creating 77
backups 77
battery
 removing 34
 spare part number 34
battery connector board
 removal 48
 spare part number 18, 48
battery light 7
BIOS
 determining version 69
 downloading an update 69
 updating 69
Bluetooth card
 spare part number 37
Bluetooth label 15
boot order
 changing using the f9 prompt
 70
boot order, changing 78
bottom cover
 removing 33
 spare part number 18, 33
Bracket Kit
 contents 22
 spare part number 22
buttons
 left touchpad 10
 power 12
 right touchpad 10

C

Cable Kit
 contents 21
 spare part number 21

camera 9
 identifying 9
 product description 2
camera light, identifying 9
camera module
 spare part number 20
camera privacy cover
 spare part number 20
caps lock light, identifying 11
card reader board
 removal 51
 spare part number 18, 51
cautions
 electrostatic discharge 28
components
 bottom 14
 display 9
 keyboard area 10
 left side 8
 right side 6
Computer Setup
 navigating and selecting 68
 restoring factory settings 68
 starting 68
computer setup 68
computer specifications 80
connector, power 7

D

display assembly
 removal 57
 spare part numbers 19, 57
display bezel
 spare part numbers 19
display components 9
display panel
 product description 1
display rear cover
 spare part number 20
display specifications 81
docking
 product description 3
drive light, identifying 8

E

electrostatic discharge (ESD) 28
 preventing damage 29
esc key, identifying 13

F

fan
 removing 43
 spare part number 17
fingerprint sensor assembly
 removal 50
 spare part number 17, 50
fingerprint sensor, identifying 12
fn key, identifying 13
fn lock light, identifying 11

G

graphics, product description 1
grounding methods 30
guidelines
 packaging 31
 transporting 31
 workstation 28

H

hard drive
 product description 2
 removing 40
 spare part numbers 18, 23, 40
 specifications 81
Hard Drive Hardware Kit
 spare part number 23, 40
HDMI port, identifying 6
heat sink
 removal 44
Hinge Kit
 spare part number 20
hot keys
 break 14
 insert 14
 pause 14
 programming query 14
 scroll lock 14
hotkeys, using 14

- HP PC Hardware Diagnostics UEFI
 - downloading 74
 - starting 74
 - using 73
- HP PC Hardware Diagnostics Windows
 - downloading 72
 - installing 73
 - using 72
- HP Recovery media
 - recovery 78
- HP Sure Recover 79
- HP Sure Start 88

I

- integrated numeric keypad,
 - identifying 13
- internal microphones, identifying 9

J

- jacks
 - audio-out (headphone)/audio-in (microphone) combo 6
 - network 6
 - RJ-45 (network) 6

K

- keyboard
 - product description 3
 - spare part numbers 17
- keyboard/top cover
 - removal 67
 - spare part numbers 67
- keypad
 - integrated numeric 13
- keys
 - esc 13
 - fn 13
 - num lock 13
 - Windows 13

L

- labels
 - Bluetooth 15
 - regulatory 15
 - serial number 15
 - service 15
 - wireless certification 15
 - WLAN 15
- left side components 8
- lights
 - AC adapter and battery 7

- battery 7
- camera 9
- caps lock 11
- fn lock 11
- hard drive 8
- microphone mute 11
- num lock 11
- power 11
- RJ-45 (network) 6
- wireless 11

M

- mass storage devices, spare part
 - numbers 23
- media card reader, product
 - description 3
- memory
 - nonvolatile 83
 - volatile 83
- memory card reader, identifying 8
- memory module
 - product description 1
 - removal 35
 - spare part numbers 17, 35
- microphone (audio-in) jack
 - product description 2
- microphone board
 - spare part number 20
- microphone mute light, identifying 11
- mini card
 - product description 2
- model name 1

N

- network jack, identifying 6
- nonvolatile memory 83
- num lock light 11

O

- operating system, product
 - description 4
- optical drive
 - product description 2

P

- packaging guidelines 31
- pointing device, product
 - description 3
- ports
 - HDMI 6

- product description 3
- USB powered 8
- USB SuperSpeed 6
- USB Type-C DisplayPort 6
- USB Type-C power connector 6
- USB Type-C SuperSpeed 6
- power button, identifying 12
- power cable
 - spare part number 18
- power connector
 - identifying 6, 7
- power connector cable
 - removal 66
 - spare part number 66
- power cord
 - requirements for all countries 89
 - requirements for specific countries and regions 90
 - set requirements 89
 - spare part numbers 24, 25, 26
- power lights 11
- power requirements, product
 - description 3
- processor
 - product description 1
- product description
 - audio 2
 - camera 2
 - display panel 1
 - docking 3
 - graphics 1
 - hard drives 2
 - keyboard 3
 - media card reader 3
 - memory module 1
 - microphone 2
 - mini card 2
 - operating system 4
 - optical drive 2
 - pointing devices 3
 - ports 3
 - power requirements 3
 - processors 1
 - product name 1
 - RJ-45 (network) 2
 - security 4
 - sensors 3
 - serviceability 5
 - wireless 2

product name 1
product name and number,
computer 15

R

recovery 77
discs 78
HP Recovery partition 78
media 78
USB flash drive 78
recovery media
creating using HP Cloud Recovery
Download Tool 77
creating using Windows tools 77
regulatory information
regulatory label 15
wireless certification labels 15
Remote HP PC Hardware Diagnostics
UEFI settings
customizing 75
using 75
removal/replacement
procedures, Authorized Service
Provider 32
removing personal data from volatile
system memory 83
restoring 77
right side components 6
RJ-45 (network) jack, identifying 6
RJ-45 (network) lights, identifying
6
RJ-45 (network), product
description 2
RTC battery
removal 53
spare part number 17, 53

S

Screw Kit, spare part number 24
security cable slot, identifying 8
security, product description 4
sensors
product description 3
serial number, computer 15
service labels, locating 15
serviceability, product description 5
setup utility
navigating and selecting 68
restoring factory settings 68

slots
security cable 8
solid-state drive
removal 39
spare part numbers 18, 23, 39
specifications 82
speaker assembly
removal 42
spare part number 18, 42
speakers, identifying 12
special keys, using 13
specifications
computer 80
display 81
hard drive 81
solid-state drive 82
static electricity 29
Sure Start
using 71
system board
removal 54
spare part numbers 17, 54
system memory, removing personal
data from volatile 83
system restore point, creating 77

T

thermal bracket
spare part number 18
thermal material, replacement 45
touchpad
spare part number 17
touchpad assembly
removal 49
spare part number 49
touchpad buttons
identifying 10
touchpad zone
identifying 10
TPM settings 70
transporting guidelines 31
traveling with the computer 15

U

USB board
removal 46
spare part number 17, 46
USB powered port, identifying 8
USB SuperSpeed port, identifying 6

USB Type-C power connector port,
identifying 6
USB Type-C SuperSpeed port,
identifying 6

V

vents, identifying 8, 14

W

Windows
backup 77
recovery media 77
system restore point 77
Windows key, identifying 13
Windows tools, using 77
wireless antennas
disconnecting 37
wireless certification label 15
wireless light, identifying 11
wireless, product description 2
WLAN antennas, identifying 9
WLAN device 15
WLAN label 15
WLAN/Bluetooth combo card
removal 37
spare part number 17, 37
workstation guidelines 28