



Service Manual

Serial Number Range

Superlift Contractor

from 9595-101 to
9501-19014

from SLC02-19015 to
SLC16-66775

from SLC16G-66776 to
SLC16G-70799

from SLCG-70800

**Part No. 115409
Rev A2
June 2018**

Introduction

Important

Read, understand and obey the safety rules and operating instructions in the appropriate Operator's Manual on your machine before attempting any maintenance procedure.

This manual provides detailed scheduled maintenance information for the machine owner and user. It also provides troubleshooting and repair procedures for qualified service professionals.

Basic mechanical, hydraulic and electrical skills are required to perform most procedures. However, several procedures require specialized skills, tools, lifting equipment and a suitable workshop. In these instances, we strongly recommend that maintenance and repair be performed at an authorized Genie dealer service center.

Technical Publications

Genie has endeavored to deliver the highest degree of accuracy possible. However, continuous improvement of our products is a Genie policy. Therefore, product specifications are subject to change without notice.

Readers are encouraged to notify Genie of errors and send in suggestions for improvement. All communications will be carefully considered for future printings of this and all other manuals.

Contact Us:

Internet: www.genielift.com
E-mail: awp.techpub@terex.com

Serial Number Information

Genie Industries offers the following Service Manuals for these models:

Title	Part No.
Genie Superlift Contractor Parts and Service Manual, First Edition(before serial number 9595-101).....	33953
Genie Superlift Contractor Parts and Service Manual, Second Edition(from serial number 9595-101).....	*80140

*Note: Genie Superlift Contractor Service Manual 115409 and Genie Superlift Contractor Part's Manual 115410 replaces Genie Superlift Contractor Parts and Service Manual 80140.

Find a Manual for this Model

Go to <http://www.genielift.com>

Use the links to locate Service Manuals, Maintenance Manuals, Service and Repair Manuals, Parts Manuals and Operator's Manuals.

Copyright © 1995 by Genie Industries

115409 Rev A, February 2009

Third Edition, First Printing

'Genie" and "SLC" are registered trademarks of Terex South Dakota. in the U.S.A. and many other countries.



Introduction


Revision History

Revision	Date	Section	Procedure / Page / Description		
A	2/2009		Initial Release		
A1	9/2016	Introduction	Serial Number Legend		
A2	6/2018	Maintenance	C-4		
Reference Examples:					
Section – Maintenance, B-3		Electronic Version Click on any content or procedure in the Table of Contents to view the update.			
Section – Repair Procedure, 4-2					
Section – Fault Codes, All charts					
Section – Schematics, Legends and schematics					


Introduction

Serial Number Legend

To August 31, 2016

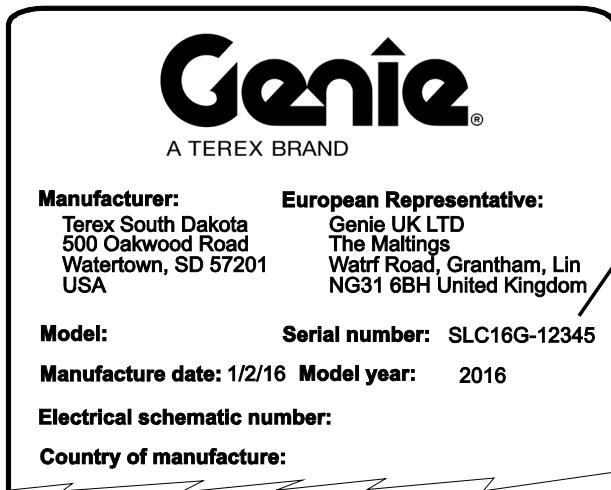


- 1 Model
- 2 Model year
- 3 Facility code

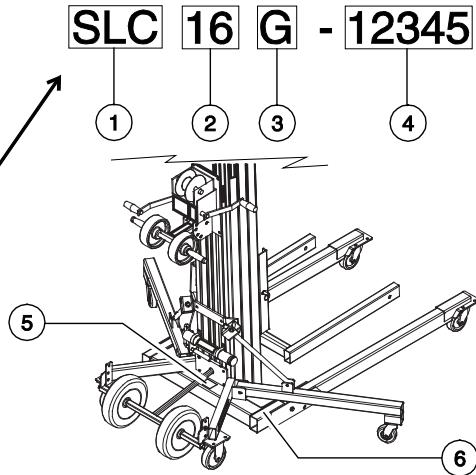


- 4 Sequence number
- 5 Serial label
- 6 Serial number (stamped on base)

From September 1, 2016

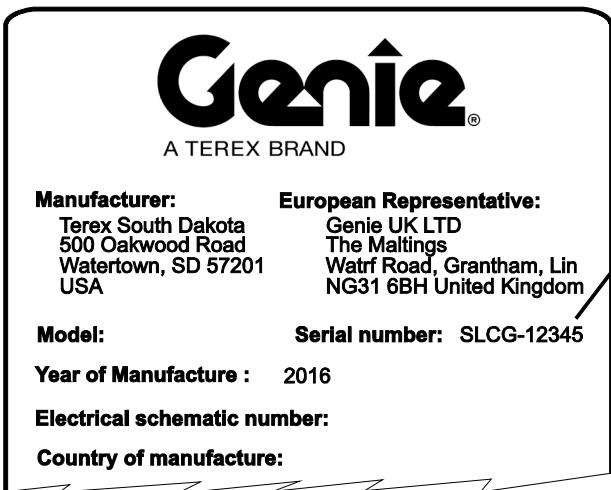

- 1 Model
- 2 Facility code
- 3 Sequence number

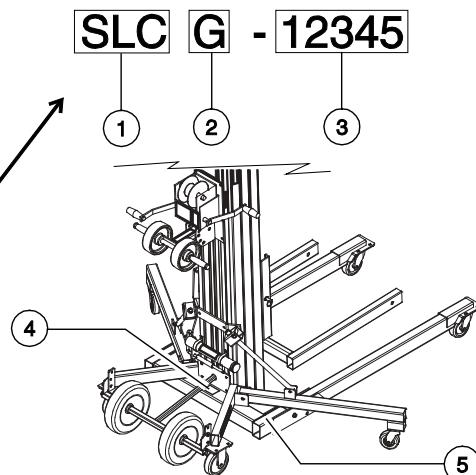

- 4 Serial label
- 5 Serial number (stamped on base)

Safety Rules



Danger

Failure to obey the instructions and safety rules in this manual and the appropriate Operator's Manual on your machine will result in death or serious injury.

Many of the hazards identified in the operator's manual are also safety hazards when maintenance and repair procedures are performed.

Do Not Perform Maintenance

Unless:

- You are trained and qualified to perform maintenance on this machine.
- You read, understand and obey:
 - manufacturer's instructions and safety rules
 - employer's safety rules and worksite regulations
 - applicable governmental regulations
- You have the appropriate tools, lifting equipment and a suitable workshop.

Safety Rules

Personal Safety

Any person working on or around a machine must be aware of all known safety hazards. Personal safety and the continued safe operation of the machine should be your top priority.



Read each procedure thoroughly. This manual and the decals on the machine, use signal words to identify the following:



Safety alert symbol—used to alert personnel to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



Indicates a imminently hazardous situation which, if not avoided, will result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, may cause minor or moderate injury.



Indicates a potentially hazardous situation which, if not avoided, may result in property damage.



Be sure to wear protective eye wear and other protective clothing if the situation warrants it.



Be aware of potential crushing hazards such as moving parts, free swinging or unsecured components when lifting or placing loads. Always wear approved steel-toed shoes.

Workplace Safety

Any person working on or around a machine must be aware of all known safety hazards. Personal safety and the continued safe operation of the machine should be your top priority.



Be sure to keep sparks, flames and lighted tobacco away from flammable and combustible materials like battery gases and engine fuels. Always have an approved fire extinguisher within easy reach.



Be sure that all tools and working areas are properly maintained and ready for use. Keep work surfaces clean and free of debris that could get into machine components and cause damage.



Be sure any forklift, overhead crane or other lifting or supporting device is fully capable of supporting and stabilizing the weight to be lifted. Use only chains or straps that are in good condition and of ample capacity.



Be sure that fasteners intended for one time use (i.e., cotter pins and self-locking nuts) are not reused. These components may fail if they are used a second time.



Be sure to properly dispose of old oil or other fluids. Use an approved container. Please be environmentally safe.



Be sure that your workshop or work area is properly ventilated and well lit.

Table of Contents

Introduction	Introduction	ii
	Important Information	ii
	Find a Manual for this Model	ii
	Revision History.....	iii
	Serial Number Legend	iv
Section 1	Safety Rules	v
	General Safety Rules	v
Section 2	Specifications	9
	Specifications	9
	SAE and Metric Fasteners Torque Charts	11
Section 3	Scheduled Maintenance Procedures	12
	Introduction	12
	Pre-Delivery Preparation Report	15
	Maintenance Inspection Report.....	17
	Checklist A Procedures	19
	A-1 Inspect the Manuals and Decals.....	19
	A-2 Perform Pre-operation Inspection.....	20
	A-3 Perform Function Tests	20
	Checklist B Procedures	21
	B-1 Inspect All Welds	21
	B-2 Clean the Columns	21
	B-3 Check the Winch Operation.....	22
	B-4 Inspect the Carriage Hold-down Bar	22
	B-5 Inspect and Lubricate the Winch	23

Table of Contents

Checklist C Procedures.....	24
C-1 Inspect the Mast Assembly for Wear	24
C-2 Inspect the Safety Brake System (if equipped).....	25
C-3 Replace the Winch Friction Disks	27
C-4 Inspect the Cable and Cable Pulleys	27
C-5 Lubricate the Casters and Wheels	28
C-6 Inspect the Painted Surfaces	28
<hr/>	
Section 4 Repair Procedures	29
Base Assembly.....	30
1-1 How to Remove the Base	30
Mast Assembly	31
2-1 How to Disassemble the Mast Assembly	31
Cable Routing	34
2-2 Lifting Cable.....	35
2-3 Lifting Pulley.....	37
Winches	38
3-1 One-speed Winch	38
One-speed Winch Assembly - ANSI	40
3-2 Two-speed Winch	42
Two-speed Winch Assembly.....	44

Specifications

Model	SLC-6	SLC-12	SLC-18	SLC-24
Height-stowed	86 in 2.2 m	86 in 2.2 m	86 in 2.2 m	86 in 2.2 m
Width	31.5 in	31.5 in	31.5 in	31.5 in
Standard Base	80 cm	80 cm	80 cm	80 cm
Width-stabilizers lowered (if equipped)	66 in 1.7 m	66 in 1.7 m	66 in 1.7 m	66 in 1.7 m
Length - Stowed	34 in 86.4 cm	34 in 86.4 cm	34 in 86.4 cm	34 in 86.4 cm
Length - Operating	59 in 1.5 m	63 in 1.6 m	73 in 1.9 m	81 in 2 m
Ground Clearance	2 in 5.8 cm	2 in 5.8 cm	2 in 5.8 cm	2 in 5.8 cm
Load Capacity at 14in / 36cm load center	650 lbs 295 kg 650 lbs	650 lbs 295 kg 650 lbs	650 lbs 295 kg 650 lbs	650 lbs 295 kg 650 lbs
Note: see Load Capacity Charts section for load capacities at other load centers.				
Net Weight	165 lbs 75 kg	225 lbs 102 kg	307 lbs 139 kg	347 lbs 157 kg
Airborne Noise Emissions by Machinery	85 dB	85 dB	85 dB	85 dB
Maximum sound level at normal operating work stations (A-weighted)				
Load Handling Attachments	Length	Width	Depth	Net Weight
Standard Forks	28 in 71.1 cm	23 in 58.4 cm	2.5 in 6.4 cm	26.5 lbs 12 kg
Adjustable Forks	27.5 in 69.9 cm	11.5 in to 30 in 29.2 cm to 76.2 cm	2.5 in 6.4 cm	52.5 lbs 23.8 kg
Boom	44 in 111.8 cm	1.5 in 3.8 cm	6 in 15.2 cm	40 lbs 18 kg
Pipe Cradle	27.5 in 70 cm	24.5 in 63 cm	6 in 15.2 cm	10 lbs 4.5 kg
Load Platform	26.3 in 69.9 cm	23 in 58.4 cm	2.5 6.4 cm	24 lbs 11 kg
Fork extensions (each)	30 in 76 cm	2 in 5 cm	3 in 7.6 cm	4.5 lbs 2 kg

Specifications

Dimensions-Operating		SLC-6	SLC-12	SLC-18	SLC-24	
Standard Forks	Forks Down	5 ft 8 in	11 ft 2 in	16 ft 9 in	22 ft 3 in	
		1.7 m	3.4 m	5.1 m	6.8 m	
	Forks Up	7 ft 5 in	12 ft 11 in	18 ft 6 in	24 ft	
		2.3 m	3.9 m	5.6 m	7.3 m	
Adjustable Forks	Forks Down	5 ft 8 in	9 ft 9 in	14 ft 7.5 in	19 ft 6 in	
		1.7 m	3 m	4.5 m	5.9 m	
	Forks Up	6 ft 7 in	11 ft 5.5 m	16 ft 4 in	21 ft 2.5 in	
		2.3 m	3.9 m	5.6 m	7.3 m	
Boom		6 ft 8 in	12 ft 2 in	17 ft 9 in	23 ft 3 in	
		2 m	3.7 m	5.4 m	7.1 m	

Note: measured from ground to bottom of shackle

Load Platform	Forks Down	5 ft 8 in	11 ft 2 in	16 ft 6 in	22 ft 3 in
		1.7 m	3.4 m	5.1 m	6.8 m
	Forks Up	7 ft 5 in	12 ft 11 in	18 ft 6 in	24 ft
		2.3 m	3.9 m	5.6 m	7.3 m

Note: Can be used with standard forks and adjustable forks only

Pipe Cradle Option: handles round objects up to 30 in / 76 cm in diameter

Note: Can be used with standard forks and adjustable forks only (see above for working heights)

Non-marking Fork Option

Note: Can be used with standard forks and adjustable forks only (see above for working heights)

Fork Extension Option

Note: can be used with standard forks and adjustable forks only (see above for working heights)

Specifications

SAE FASTENER TORQUE CHART

• This chart is to be used as a guide only unless noted elsewhere in this manual •

SIZE	THREAD	Grade 5 				Grade 8 				A574 High Strength Black Oxide Bolts	
		LUBED		DRY		LUBED		DRY		LUBED	
		in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm
1/4	20	80	9	100	11.3	110	12.4	140	15.8	130	14.7
	28	90	10.1	120	13.5	120	13.5	160	18	140	15.8
		LUBED		DRY		LUBED		DRY		LUBED	
		ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm
5/16	18	13	17.6	17	23	18	24	25	33.9	21	28.4
	24	14	19	19	25.7	20	27.1	27	36.6	24	32.5
3/8	16	23	31.2	31	42	33	44.7	44	59.6	38	51.5
	24	26	35.2	35	47.4	37	50.1	49	66.4	43	58.3
7/16	14	37	50.1	49	66.4	50	67.8	70	94.7	61	82.7
	20	41	55.5	55	74.5	60	81.3	80	108.4	68	92.1
1/2	13	57	77.3	75	101.6	80	108.4	110	149	93	126
	20	64	86.7	85	115	90	122	120	162	105	142
9/16	12	80	108.4	110	149	120	162	150	203	130	176
	18	90	122	120	162	130	176	170	230	140	189
5/8	11	110	149	150	203	160	217	210	284	180	244
	18	130	176	170	230	180	244	240	325	200	271
3/4	10	200	271	270	366	280	379	380	515	320	433
	16	220	298	300	406	310	420	420	569	350	474
7/8	9	320	433	430	583	450	610	610	827	510	691
	14	350	474	470	637	500	678	670	908	560	759
1	8	480	650	640	867	680	922	910	1233	770	1044
	12	530	718	710	962	750	1016	990	1342	840	1139
1 1/8	7	590	800	790	1071	970	1315	1290	1749	1090	1477
	12	670	908	890	1206	1080	1464	1440	1952	1220	1654
1 1/4	7	840	1138	1120	1518	1360	1844	1820	2467	1530	2074
	12	930	1260	1240	1681	1510	2047	2010	2725	1700	2304
1 1/2	6	1460	1979	1950	2643	2370	3213	3160	4284	2670	3620
	12	1640	2223	2190	2969	2670	3620	3560	4826	3000	4067

METRIC FASTENER TORQUE CHART

• This chart is to be used as a guide only unless noted elsewhere in this manual •

Size (mm)	Class 4.6 				Class 8.8 				Class 10.9 				Class 12.9 			
	LUBED		DRY		LUBED		DRY		LUBED		DRY		LUBED		DRY	
	In-lbs	Nm	In-lbs	Nm	In-lbs	Nm	In-lbs	Nm	In-lbs	Nm	In-lbs	Nm	In-lbs	Nm	In-lbs	Nm
5	16	1.8	21	2.4	41	4.63	54	6.18	58	6.63	78	8.84	68	7.75	91	10.3
6	19	3.05	36	4.07	69	7.87	93	10.5	100	11.3	132	15	116	13.2	155	17.6
7	45	5.12	60	6.83	116	13.2	155	17.6	167	18.9	223	25.2	1.95	22.1	260	29.4
	LUBED		DRY		LUBED		DRY		LUBED		DRY		LUBED		DRY	
	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm
8	5.4	7.41	7.2	9.88	14	19.1	18.8	25.5	20.1	27.3	26.9	36.5	23.6	32	31.4	42.6
10	10.8	14.7	14.4	19.6	27.9	37.8	37.2	50.5	39.9	54.1	53.2	72.2	46.7	63.3	62.3	84.4
12	18.9	25.6	25.1	34.1	48.6	66	64.9	88	69.7	94.5	92.2	125	81	110	108	147
14	30.1	40.8	40	54.3	77.4	105	103	140	110	150	147	200	129	175	172	234
16	46.9	63.6	62.5	84.8	125	170	166	226	173	235	230	313	202	274	269	365
18	64.5	87.5	86.2	117	171	233	229	311	238	323	317	430	278	377	371	503
20	91	124	121	165	243	330	325	441	337	458	450	610	394	535	525	713
22	124	169	166	225	331	450	442	600	458	622	612	830	536	727	715	970
24	157	214	210	285	420	570	562	762	583	791	778	1055	682	925	909	1233

Scheduled Maintenance Procedures



Observe and Obey:

- Maintenance inspections shall be completed by a person trained and qualified on the maintenance of this machine.
- Scheduled maintenance inspections shall be completed daily, quarterly, and annually as specified on the *Maintenance inspection Report*. The frequency and extent of periodic examinations and tests may also depend on national regulations.

WARNING

Failure to perform each procedure as presented and scheduled may cause death, serious injury or substantial damage.

- Immediately tag and remove from service a damaged or malfunctioning machine.
- Repair any machine damage or malfunction before operating the machine.
- Use only Genie approved replacement parts.
- Machines that have been out of service for a period longer than 3 months must complete the quarterly inspection.
- Unless otherwise specified, perform each procedure with the machine in the following configuration:
 - Machine parked on a firm, level surface
 - Carriage fully lowered
 - Casters locked
 - Load handling attachment installed

About This Section

This section contains detailed procedures for each scheduled maintenance inspection.

Each procedure includes a description, safety warnings and step-by-step instructions.

Symbols Legend



Safety alert symbol—used to alert personnel to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

Indicates a imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a potentially hazardous situation which, if not avoided, may cause minor or moderate injury.

NOTICE

Indicates a potentially hazardous situation which, if not avoided, may result in property damage.

- ◎ Indicates that a specific result is expected after performing a series of steps.
- ☒ Indicates that an incorrect result has occurred after performing a series of steps.

Scheduled Maintenance Procedures

Maintenance Symbols Legend

Note: The following symbols have been used in this manual to help communicate the intent of the instructions. When one or more of the symbols appear at the beginning of a maintenance procedure, it conveys the meaning below.



Indicates that tools will be required to perform this procedure.



Indicates that new parts will be required to perform this procedure.



Indicates that dealer service will be required to perform this procedure.

Pre-delivery Preparation Report

The pre-delivery preparation report contains checklists for each type of scheduled inspection.

Make copies for each inspection. Store completed forms as required.

Maintenance Schedule

The *Scheduled Maintenance Procedures* section and the *Maintenance Inspection Report* have been divided into subsections. Use the following chart to determine which group(s) of procedures are required to perform a scheduled inspection.

Inspection	Checklist
Daily or every 8 hours	A
Quarterly or every 250 hours	A + B
Annually or every 1000 hours	A + B + C

Maintenance Inspection Report

The maintenance inspection report contains checklists for each type of scheduled inspection.

Make copies of the *Maintenance Inspection Report* to use for each inspection. Maintain completed forms for a minimum of 4 years or in compliance with your employer, jobsite and governmental regulations and requirements.

This page intentionally left blank.

Pre-Delivery Preparation Report

Fundamentals

It is the responsibility of the owner or dealer to perform the Pre-delivery Preparation.

The Pre-delivery Preparation is performed prior to each delivery. The inspection is designed to discover if anything is apparently wrong with a machine before it is put into service.

A damaged or modified machine must never be used. If damage or any variation from factory delivered condition is discovered, the machine must be tagged and removed from service.

Repairs to the machine may only be made by a qualified service technician, according to the manufacturer's specifications.

Scheduled maintenance inspections shall be performed by qualified service technicians, according to the manufacturer's specifications and the requirements listed in the responsibilities manual.

Instructions

Use the operator's manual on your machine.

The Pre-delivery Preparation consists of completing the Pre-operation Inspection, the Maintenance items and the Function Tests.

Use this form to record the results. Place a check in the appropriate box after each part is completed. Follow the instructions in the operator's manual.

If any inspection receives an N, remove the machine from service, repair and re-inspect it. After repair, place a check in the R box.

Legend

Y = yes, acceptable

N = no, remove from service

R = repaired

Comments

Pre-delivery Preparation	Y	N	R
Pre-operation inspection completed			
Maintenance items completed			
Function tests completed			



Terex South Dakota, Inc USA
500 Oak Wood Road
PO Box 1150
Watertown, SD 57201-6150
(605) 882-4000

Genie UK
The Maltings, Wharf Road
Grantham, Lincolnshire
NG31-6BH England
(44) 1476-584333

Model

Serial number

Date

Machine owner

Inspected by (print)

Inspector signature

Inspector title

Inspector company

This page intentionally left blank.

Maintenance Inspection Report

Model _____

Serial number _____

Date _____

Hour meter _____

Machine owner _____

Inspected by (print) _____

Inspector signature _____

Inspector title _____

Inspector company _____

Checklist A- Rev A		Y	N	R
A-1	Inspect the manuals and decals			
A-2	Pre-operation inspection			
A-3	Function tests			

Checklist B		Y	N	R
B-1	Welds			
B-2	Clean columns			
B-3	Winch operation			
B-4	Carriage hold down bar			
B-5	Inspect and lubricate winch			

Instructions

- Make copies of this report to use for each inspection.
- Select the appropriate checklist(s) for the type of inspection(s) to perform.

<input type="checkbox"/>	Daily or every 8 hours	A
<input type="checkbox"/>	Quarterly or every 250 hours	A + B
<input type="checkbox"/>	Annually or every 1000 hours	A + B + C

- Place a check in the appropriate box after each inspection procedure is completed.
- Use the step-by-step procedures in this section to learn how to perform these inspections.
- If any inspection receives an "N," tag and remove the machine from service, repair and re-inspect it. After repair, place a check in the "R" box.

Legend

Y = yes, acceptable
 N = no, remove from service
 R = repaired

Comments

Checklist C- Rev A		Y	N	R
C-1	Mast assembly wear			
C-2	Safety brake system (if equipped)			
C-3	Replace winch friction disk			
C-4	Inspect cable and pulleys			
C-5	Lubricate the casters and wheels			
C-6	Painted surfaces			

Comments

This page intentionally left blank.

Checklist A Procedures

A-1

Inspect the Manuals and Decals

Genie specifications require that this procedure be performed every 8 hours or daily, whichever comes first.

Maintaining the operator's and safety manuals in good condition is essential to safe machine operation. Manuals are included with each machine and should be stored in the container provided in the platform. An illegible or missing manual will not provide safety and operational information necessary for a safe operating condition.

In addition, maintaining all of the safety and instructional decals in good condition is mandatory for safe machine operation. Decals alert operators and personnel to the many possible hazards associated with using this machine. They also provide users with operation and maintenance information. An illegible decal will fail to alert personnel of a procedure or hazard and could result in unsafe operating conditions.

- 1 Check to make sure that the operator's, safety and responsibilities manuals are present and complete in the storage container on the platform.
- 2 Examine the pages of each manual to be sure that they are legible and in good condition.
 - Ⓐ Result: The operator's manual is appropriate for the machine and all manuals are legible and in good condition.
 - ⓧ Result: The operator's manual is not appropriate for the machine or all manuals are not in good condition or is illegible. Remove the machine from service until the manual is replaced.

- 3 Open the operator's manual to the decals inspection section. Carefully and thoroughly inspect all decals on the machine for legibility and damage.
 - Ⓐ Result: The machine is equipped with all required decals, and all decals are legible and in good condition.
 - ⓧ Result: The machine is not equipped with all required decals, or one or more decals are illegible or in poor condition. Remove the machine from service until the decals are replaced.
- 4 Always return the manuals to the storage container after use.

Note: Contact your authorized Genie distributor or Genie if replacement manuals or decals are needed.

Checklist A Procedures

A-2

Perform Pre-operation Inspection

Genie specifications require that this procedure be performed every 8 hours or daily, whichever comes first.

Completing a Pre-operation Inspection is essential to safe machine operation. The Pre-operation Inspection is a visual inspection performed by the operator prior to each work shift. The inspection is designed to discover if anything is apparently wrong with a machine before the operator performs the function tests. The Pre-operation Inspection also serves to determine if routine maintenance procedures are required.

Complete information to perform this procedure is available in the appropriate operator's manual. Refer to the Operator's Manual on your machine.

A-3

Perform Function Tests

Genie specifications require that this procedure be performed every 8 hours or daily, whichever comes first.

Completing the function tests is essential to safe machine operation. Function tests are designed to discover any malfunctions before the machine is put into service. A malfunctioning machine must never be used. If malfunctions are discovered, the machine must be tagged and removed from service.

Complete information to perform this procedure is available in the appropriate operator's manual. Refer to the Operator's Manual on your machine.

Checklist B Procedures

B-1 Inspect All Welds

Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Weld inspections are essential to safe machine operation and good machine performance. Failure to locate and repair damage may result in an unsafe operating condition.

- 1 Visually inspect the welds in the following locations:

- Winch mounting plate
- Loading wheels/steer handle
- Base
- Legs and stabilizers
- Load handling attachment(s)

B-2 Clean the Columns



Genie requires that this procedure be performed every 250 hours or quarterly, whichever comes first.

Clean columns are essential to good machine performance and safe operation. Extremely dirty conditions may require that the columns be cleaned more often.

- 1 Raise all columns to full height.
- 2 Visually inspect the inner and outer channels of the columns for debris or foreign material. If necessary, use a mild cleaning solvent to clean the columns.

WARNING

Bodily injury hazard. This procedure will require the use of additional access equipment. Do not place ladders or scaffold on or against any part of the machine. Performing this procedure without the proper skills and tools could result in death or serious injury. Dealer service is strongly recommended.

Checklist B Procedures

B-3

Check the Winch Operation

Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Detection of damage to the winch is essential to safe machine operation. An unsafe working condition exists if the winch is damaged or not operating correctly. A daily check of the winch operation allows the inspector to identify changes in the operating condition of the winch that might indicate damage.

- 1 Visually inspect all the winch components for damage.
- 2 Raise the carriage through a partial cycle and release the winch handles.
- ④ Result: The winch should operate smoothly, free of hesitation or binding. The load should not lower when the handles are released.
- 3 Fully lower the carriage.
- ④ Result: The winch should operate smoothly, free of hesitation or binding.

B-4

Inspect the Carriage Hold-down Bar

Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Detection of damage to the column hold down system is essential for safe machine operation. An unsafe working condition exists if the system is damaged and does not operate properly.

- 1 Using proper lifting techniques, lay the machine back against a sawhorse or other suitable support.
- 2 Visually inspect the carriage hold-down bar for damage.
- 3 Check the carriage hold-down bar for smooth operation.

Checklist B Procedures

B-5

Inspect and Lubricate the Winch



Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Maintaining the winch is essential to good machine performance and safe operation. An unsafe working condition exists if the winch has excessive wear and/or does not operate smoothly, free of hesitation and binding.

- 1 Carefully lubricate the following areas with automotive grease:
 - Cable drum gear
 - Teeth on the pinion gear that mesh with the cable drum gear
 - Threads on the pinion shaft, under the pinion gear
 - **Models with Two-speed winch:** The teeth on the slow and the fast speed gears where they mesh together

Note: Do not apply grease to brake friction disk or ratchet gear.

- 2 Carefully lubricate both pivot points on each ratchet pawl with 30W oil.

- 3 Measure each friction disk for wear. Replace the friction disk if it measures less than specification.

Friction disk specification

Thickness, minimum	0.065 inch 1.5 mm
--------------------	----------------------

- 4 Measure both shaft bushings for wear. Replace the bushings if the wall thickness measurements are less than specification.

Pinion shaft bushing specification

Wall thickness, minimum	0.125 inch 3.1 mm
-------------------------	----------------------

- 5 Lubricate the surface of the frame drum spacer with a thin layer of lithium grease. Tighten the drum bolt to 20 ft-lbs / 27 Nm. Do not over tighten.

Checklist C Procedures

C-1

Inspect the Mast Assembly for Wear



Genie specifications require that this procedure be performed every 1000 hours or annually, whichever comes first.

Detection of excessive or unusual wear in the mast assembly is essential for safe machine operation. An unsafe working condition exists if the mast assembly has excessive wear and/or does not operate smoothly, free of hesitation and binding.

- 1 Attach a lifting strap from an overhead crane or similar lifting device to the lifting point on the top of the mast. Rotate the carriage hold-down bar over the carriage and operate the winch to apply tension to the lifting cable.
- 2 Lift the machine slightly with the overhead crane and guide it onto a suitable structure capable of supporting it.

WARNING

Crushing hazard. The machine will fall if not properly supported by the overhead crane.

- 3 Lower the top of the mast onto the suitable structure.
- 4 Attach a lifting strap from an overhead crane to the base of the machine.
- 5 Lift the base with the overhead crane, until the mast is level and place another suitable structure under the mast.

- 6 Lower the base end of the machine.
- 7 Rotate the mast assembly until the carriage is on top.



- 8 Visually inspect the top of each column for clearance between the roller wheel and the adjacent column surface.
- ◎ Result: There should be a gap of less than 0.062 inch / 1.57 mm between the roller wheel and the column.

Note: If the mast inspection results in a measurement that is not within specification, See Repair Procedure, *How to Disassemble the Mast Assembly*.

- 9 Visually inspect the bottom of each column for clearance between the roller wheel and the adjacent column surface.
- ◎ Result: There should be a gap of less than 0.062 inch / 1.57 mm between the roller wheel and the column.

Note: If the mast inspection results in a measurement that is not within specification, refer to Repair Procedure, *How to Disassemble the Mast Assembly*.

- 10 Grasp the bottom of the carriage and lift it approximately 12 inches / 30.5 cm, then release the carriage.
- ◎ Result: The carriage should stop within 5 to 8 inches / 12.7 to 20.3 cm and the safety brake should engage.

CAUTION

Crushing hazard. Do not stand directly under the carriage or load handling attachment.

Checklist C Procedures

C-2

Inspect the Safety Brake System (if equipped)



Genie specifications require that this procedure be performed every 1000 hours or annually, whichever comes first.

Detection of damage or a faulty safety brake system is essential for safe machine operation. An unsafe working condition exists if the system is damaged or faulty and does not allow the mast to sequence properly, free of hesitation and binding.

WARNING


Bodily injury hazard. This procedure requires specific repair skills, lifting equipment and a suitable workshop. Attempting this procedure without these skills and tools could result in death or serious injury and significant component damage. Dealer service is strongly recommended.

CAUTION

Bodily injury hazard. Beware of sharp edges. Wear protective gloves when performing this procedure.

- 1 Fasten a load handling attachment to the carriage (use the forks or the boom if possible). Do not place any weight on the load handling attachment.

- 2 Raise the carriage until it is half way up the front column

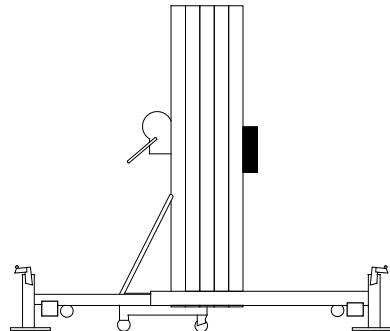

- 3 Grasp the bottom carriage and lift it approximately 5 inches / 12.7 cm, then release the carriage.


- ◎ Result: The carriage should stop within 3 inches / 7.6 cm and the safety brake should engage.

CAUTION

Crushing hazard. Do not stand directly under the carriage or load handling attachment.

- 4 Raise the carriage approximately 6 inches / 15.2 cm to disengage the safety brake.

- 5 Operate the winch until the front column is half way up the adjacent column.

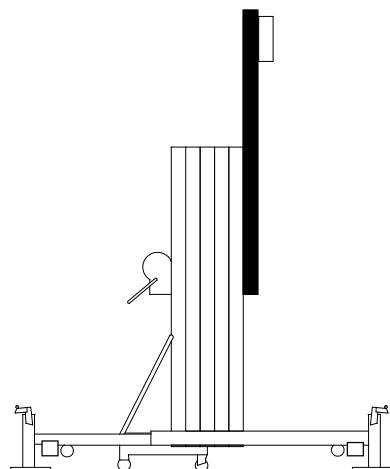


Checklist C Procedures

- 6 Grasp the bottom of the front column and lift it approximately 5 inches / 12.7 cm, then release the column.
- ◎ Result: The carriage should stop within 3 inches / 7.6 cm and the safety brake should engage.
- 9 Grasp the bottom side of the next column and lift it approximately 5 inches / 12.7 cm, then release the column.
- ◎ Result: The carriage should stop within 3 inches / 7.6 cm and the safety brake should engage.

▲ CAUTION Crushing hazard. Do not stand directly under the columns or load handling attachment.

- 7 Raise the front column approximately 6 inches / 15.2 cm to disengage the safety brake.
- 8 Operate the winch until the front column is fully raised and the second column is half way up the adjacent column.

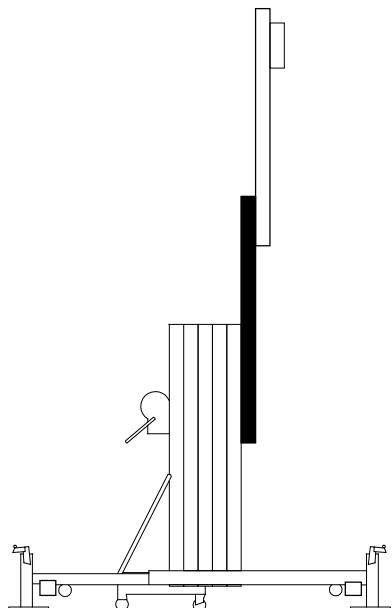

▲ CAUTION Crushing hazard. Do not stand directly under the columns or load handling attachment.

- 10 Repeat steps 7 through 9 to test all remaining columns.

Note: When disengaging the safety brake, it may be necessary to hold down the column behind the column to be disengaged.

Note: The number one column (column attached to the base) does not have a safety brake and will not need to be tested.

Checklist C Procedures

C-3

Replace the Winch Friction Disks



Genie specifications require that this procedure be performed every 1000 hours or annually, whichever comes first.

Maintaining the winch is essential to good machine performance and safe operation. An unsafe working condition exists if the winch has excessive wear and/or does not operate smoothly, free of hesitation and binding.

- 1 Replace the winch friction disks. See Repair Procedure, *How to Disassemble a One-speed Winch*, or *How to Disassemble a Two-speed Winch*.

C-4

Inspect the Cable and Cable Pulleys

Genie specifications require that this procedure be performed every 1000 hours or annually, whichever comes first.

Detection of damage to cable or pulleys is essential for safe machine operation. An unsafe working condition exists if these components are damaged and do not operate smoothly. The inspection of this system allows the inspector to identify changes in the operating condition that might indicate damage.

Note: The mast must be disassembled during the annual inspection of the machine, otherwise the cable, cable pulleys and mast rollers are only partially visible for inspection.

- 1 Disassemble the mast assembly. Refer to Repair Procedure, *How to Disassemble the Mast Assembly*.
- 2 Visually inspect the cable and components for the following:
 - frayed or broken wire strands
 - kinks in the cable
 - corrosion
 - paint or foreign materials
 - split or cracked swaged end(s)
 - upper and lower mounting brackets are properly secured
 - no broken or damaged pulleys
 - no unusual or excessive pulley wear
 - no broken or damaged mast rollers
 - no unusual or excessive mast roller wear

CAUTION

Bodily injury hazard. Beware of sharp edges. Wear protective gloves when performing this procedure.

- 3 Assemble the mast assembly. Refer to Repair Procedure, *How to Assemble the Mast Assembly*.

Checklist C Procedures

C-5

Lubricate the Casters and Wheels



Genie specifications require that this procedure be performed every 1000 hours or annually, whichever comes first.

Regular application of lubrication to the Caster or Wheel is essential to good machine performance and service life. Extremely dirty conditions may require that the casters and wheels be inspected and lubricated more often.

- 1 Visually inspect each caster and wheel for cuts, cracks or unusual wear.
- 2 Move the machine on a flat, smooth surface to confirm the casters and wheels roll smoothly, free of hesitation and binding.
- 3 Pump grease into the caster or wheel until it can be seen coming out of the bearing gap.

Grease Specification

Chevron Ultra-duty grease, EP NLGI 1 (lithium based) or equivalent

C-6

Inspect the Painted Surfaces

Genie specifications require that this procedure be performed every 1000 hours or annually, whichever comes first.

Inspecting the painted surfaces of your machine is essential to safe operation and long machine life. An unsafe working condition exists if there is damage to painted surfaces that is not corrected.

- 1 Visually inspect all painted surfaces for the following conditions:
 - Blistering
 - Rust
 - Peeling
 - Fading
 - Corrosion

Note: Replace any component that is damaged.

Repair Procedures



Observe and Obey:

- Repair procedures shall be completed by a person trained and qualified on the repair of this machine.
- Immediately tag and remove from service a damaged or malfunctioning machine.
- Repair any machine damage or malfunction before operating the machine.

Before Repairs Start:

- Read, understand and obey the safety rules and operating instructions in the appropriate operator's manual on your machine.
- Be sure that all necessary tools and parts are available and ready for use.
- Use only Genie approved replacement parts.
- Read each procedure completely and adhere to the instructions. Attempting shortcuts may produce hazardous conditions.

Machine Configuration:

- Unless otherwise specified, perform each repair procedure with the machine in the following configuration:
 - Machine parked on a firm, level surface
 - Carriage fully lowered
 - Casters locked

About This Section

Most of the procedures in this section should only be performed by trained service professional in a suitably equipped workshop. Select the appropriate repair procedure after troubleshooting the problem.

Perform disassembly procedures to the point where repairs can be completed. Then to re-assemble, perform the disassembly steps in reverse order.

Symbols Legend



Safety alert symbol—used to alert personnel to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



Indicates a imminently hazardous situation which, if not avoided, will result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, may cause minor or moderate injury.



Indicates a potentially hazardous situation which, if not avoided, may result in property damage.

- Ⓐ Indicates that a specific result is expected after performing a series of steps.
- ⓫ Indicates that an incorrect result has occurred after performing a series of steps.

Base Assembly


1-1

How to Remove the Base

- 1 Fully lower the carriage.
- 2 Remove the load handling attachment from the machine.
- 3 Remove the outriggers from the outrigger storage sockets.
- 4 Attach a lifting strap from an overhead crane to the lifting eye on the number 1 mast.
- 5 Place a suitable structure capable of supporting the machine on the carriage side of the mast.
- 6 Carefully lift the machine slightly with the overhead crane. While lowering it, guide the machine over onto a suitable structure capable of supporting it.

CAUTION

Bodily injury hazard. Use proper lifting techniques when rolling the mast assembly over.

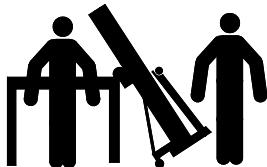


- 7 Secure the top of the mast to the support.

- 8 Attach a lifting strap from an overhead crane to the base and lift the machine to a horizontal position. Slide a second suitable structure capable of supporting it under the mast, next to the base.

CAUTION

Crushing hazard. The machine may become unbalanced and fall if not properly supported by the overhead crane.

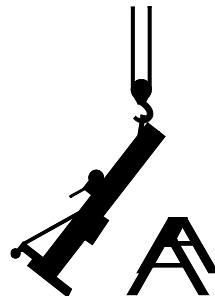

- 9 Remove the mounting fasteners from both mast braces at the base.
- 10 Remove the base mounting fasteners. Remove the base from the machine.

Note: When installing the base, be sure that the mast and the base are square.

Mast Assembly

2-1 How to Disassemble the Mast Assembly

Note: Removal of the base is only necessary when the number one column is to be removed. Refer to Repair Procedure, How to Remove the Base.

- 1 Fully lower the carriage and remove the load handling attachment.
- 2 Remove the cable retaining fasteners from the winch drum. Remove all of the cable from the drum.
- 3 Lift the machine slightly with an overhead crane. While tilting backwards with the carriage facing up, guide the machine over onto a suitable structure.

⚠ CAUTION

Bodily injury hazard. Use proper lifting techniques when lifting the mast assembly.

⚠ CAUTION

Crushing hazard. The machine may become unbalanced and fall if not properly supported.



- 4 Remove the mounting fastener from the cable anchor at the top of the last column (carriage side).

- 5 Remove the cable from the mast by pulling on the cable anchor end of the cable.

⚠ CAUTION

Bodily injury hazard. Cables can fray. Always wear adequate hand protection when handling cable.

- 6 Slide the carriage up approximately 12 inches / 30 cm to expose the column stop mounting fastener, attached to the bottom end of the top column. Remove the fasteners and the column stop.
- 7 **Models with safety brake:** Insert a hex key wrench through the access holes in the carriage to release the safety brake. Position the hex key above the safety brake rollers. Slide the carriage away from the base while pulling back on the wrench.

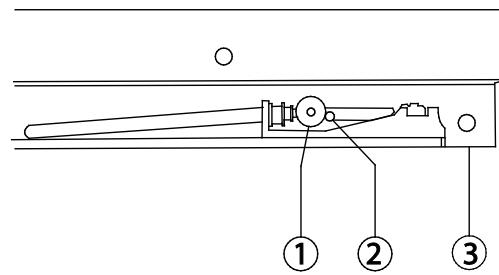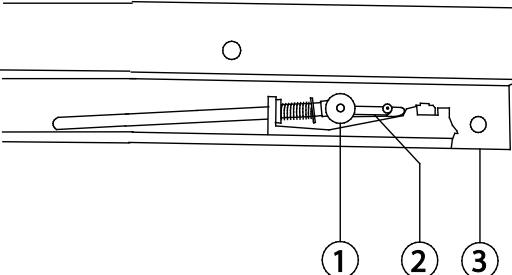

1 brake roller
2 brake release tool
3 column or carriage

Mast Assembly

8 **Models with safety brake:** Remove the carriage by sliding it out the bottom of the mast toward the base while holding the safety brake rollers in the released position with the hex key wrench.

Models without safety brake: Remove the carriage by sliding it out the bottom of the mast toward the base.

9 Slide the column up approximately 12 inches / 30 cm to expose the column stop mounting fasteners attached to the bottom end of the top column. Remove the fasteners and the column stops.

10 **Models with safety brake:** Insert a hex key wrench through the access holes in the column up to release the safety brake. Position the hex key above the safety brake rollers. Slide the carriage away from the base while pulling back on the wrench.

11 **Models with safety brake:** Remove the column by sliding it out the bottom of the mast toward the base while holding the safety brake rollers in the released position with the hex key wrench.

Models without safety brake: Remove the column by sliding it out the bottom of the mast toward the base.

12 Repeat steps 10 through 12 for each remaining column.

How to Release the Safety Brake When Servicing the Mast

The safety brake system can engage when the machine is tilted horizontally if the hold-down bar is not used. When the brake is engaged, the columns can extend but not retract. If the safety brake system engages while you are servicing the mast, use one of the following methods described below to release the brake.

Method A: This method allows you to release each column in sequence, starting at the carriage and removing columns one at a time. Refer to Repair Procedure, *How to Disassemble the Mast Assembly*.

Method B: This method allows you to release any column in the assembly regardless of its position, but requires a custom tool. The tool is a piece of 1/8 to 5/16 inch / 3.2 to 8 mm diameter stiff wire bent in an L shape with one end 1 inch / 25 mm long and the other end 16 inches / 41 cm long. The installation of a handle on the long end will make it easier to use. This tool is available from Genie Industries (Genie part number 33875).



Insert the tool from the bottom of the column into the safety brake access slot in the inner side wall of the column. Reach through the far upper end of the slot and position the short end of the tool above the safety brake rollers. Slide the carriage away from the base while pulling back on the tool.

Mast Assembly

How to Assemble the Mast

Refer to the illustration on the following page to identify the cable routing.

- 1 Inspect all mast parts for wear and damage. Replace as necessary.
- 2 Clean all columns and rollers.
- 3 Clean all safety brake assemblies (if equipped).
- 4 Position the number one column so that it is open-side up and level. If it is not attached to the base, secure the column to the supports.
- 5 Install all column assembly components (removed during disassembly) except the column down stops. Apply a small amount of multi-purpose grease between the roller bolt head and the inside of the roller wheel.
- 6 Slide the number two column into the number one from the bottom. Stop inserting the column when the top of the up stop or the safety brake assembly is even with the bottom edge of the number one column.
- 7 Repeat steps 4 through 6 with all remaining columns. Do not install the carriage.

Note: The cable is installed after all columns are together as an assembly.

- 8 Attach the swaged end of the cable to the cable anchor on the top of the front column.
- 9 Feed the other end of the cable through the box section (web) of the carriage into the pulley, then push the cable through the pulley until it comes out the back side of the carriage.

CAUTION

Bodily injury hazard. Beware of sharp edges. Wear protective gloves when performing this procedure.


- 10 Insert the carriage into the bottom end of the top column. Hold the carriage in place and pull the cable up to the top of the column, leaving enough slack to feed the cable through the next pulley.
- 11 Push the cable through the exposed portion of the pulley at the top of the column until the cable reaches the pulley at the bottom of the column.
- 12 Remove the lower pulley assembly from the upper column.
- 13 Route the cable into and around the lower pulley.
- 14 Apply Loctite® removable thread sealant to the pulley mounting fastener and install the lower pulley into the column.
- 15 Push the cable between the two mast sections until it comes out the top of the column.
- 16 Repeat steps 11 through 15 with all remaining columns.
- 17 Slide all the columns forward, until you can install the column stops. Do not slide the columns forward any farther than necessary.
- 18 Install all the components removed during disassembly.

Note: Be sure that all fasteners have Loctite® removable thread sealant applied to the threads and that all fasteners have been securely tightened.

- 19 Attach the cable to the winch and be sure the cable is routed correctly.
- 20 Raise the machine to full height to release the safety brakes (if equipped) and verify proper operation.

Repair Procedures

Cable Routing

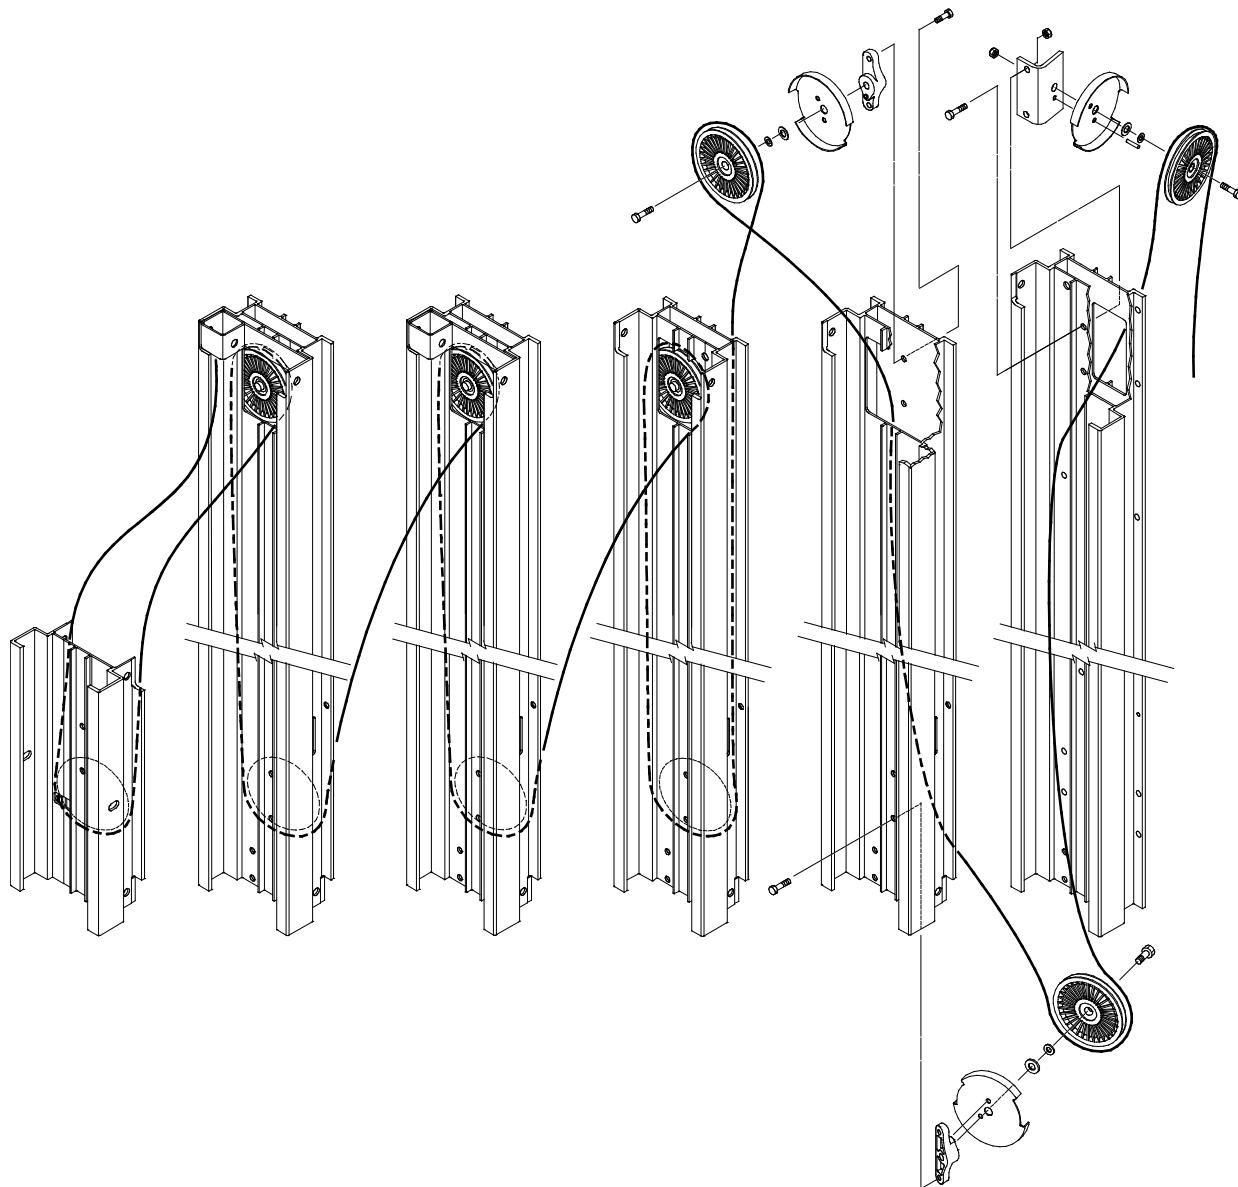

Mast Assembly

2-2 Lifting Cable

How to Replace the Lifting Cable


⚠ CAUTION

Bodily injury hazard. Cables can fray. Always wear adequate hand protection when handling cable.


Note: All Genie replacement cables come with one pre-swaged end that terminates at the top of the last column and one taped end that terminates at the winch.

Note: For additional information, refer to instructional video, Genie Superlift Cabling Procedure. This video is available from Genie Industries (Genie part number 52701).


- 1 Fully lower the carriage.
- 2 Remove the retaining fasteners from the eyelet end of the cable at the mast anchor plate and cut the eyelet off below the copper sleeve.

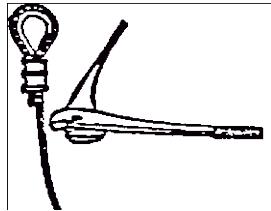

- 3 Remove the old cable from the winch drum.
- 4 Unwind the outer strands and trim them back 1/2 inch / 13 mm leaving the core longer. Repeat this process on the open end of the new cable.

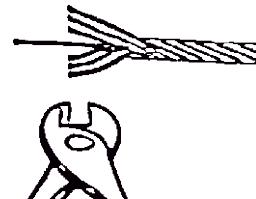

- 5 Using the optional cable threading tool (Genie part number 12402), insert even amounts of cable into each end of the tool. Securely tighten the set screws.

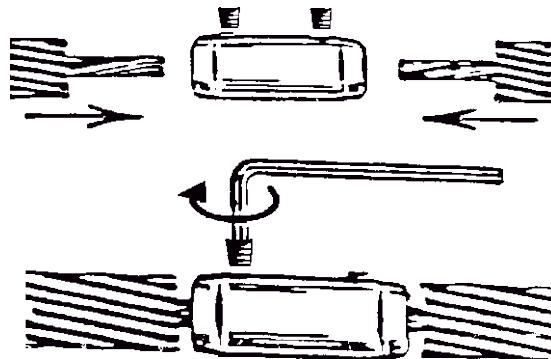

Mast Assembly

⚠ CAUTION

Bodily injury hazard. This tool is intended for cable replacement only. Do not use as a load carrying cable splice.

- 6 Place a smooth layer of strapping tape over the joint section of the two cables and the tool.



Note: If the cable gets caught as you are pulling it through the columns and pulleys, avoid pulling too hard as you may break the connection between the two cables. Try pulling the cable back and forth until the cable pulls freely.

- 7 Pull on the old cable while feeding the new cable through the machine.
- 8 When the taped area appears at the winch, loosen the set screws and remove the old cable.

- 9 Attach the new cable to both the mast anchor and the winch drum.
- 10 Wind the new cable evenly onto the winch drum. Be sure there are at least four wraps of cable on the winch drum.
- 11 Fully raise and lower the carriage without a load to check for proper operation. The carriage should raise and lower smoothly.
- 12 Fully raise and lower the carriage again with a load and check for proper operation. The carriage should raise and lower smoothly.

⚠ CAUTION

Do not use as a load carrying cable splice. This tool is intended for cable replacement only.

Mast Assembly

2-3 Lifting Pulley

How to Replace a Lifting Pulley - Mast Installed

- 1 Fully lower the carriage.
- 2 Unwind approximately 1 to 2 feet / 30 to 60 cm of cable from the winch drum.
- 3 Tip the machine backwards and rest the top of the number one mast on a suitable structure capable of supporting it. Secure the top of the mast to the structure.
- 4 Attach an overhead crane to the base. Lift the machine to a horizontal position and slide a second structure under the mast next to the base.
- 5 If replacing an upper pulley, slide the column that is above the pulley to be replaced forward. If replacing a lower pulley, slide the column with the pulley to be replaced forward. Push the column forward approximately 6 inches / 15 cm to expose the lower column stop.
- 6 Remove the column stop mounting fasteners.
- 7 Slide the column backwards until the pulley that is to be replaced is exposed.
- 8 Remove the two mounting fasteners from the pulley mounting block. Remove the pulley assembly.
- 9 Remove the retaining fastener that attaches the pulley to the mounting block.

Note: Note the quantity and location of the shims and spacers before disassembling.

- 10 Remove the old pulley.
- 11 Install the cable onto the new pulley.
- 12 Apply Loctite® removable thread sealant to the pulley mounting fastener and install the fastener through the pulley and pulley guard into the pulley mounting block.


WARNING

Crushing hazard. Failure to properly route the cable could result in a winch brake failure.

NOTICE

Component damage hazard. Do not allow the cable to become twisted during installation or mast sequencing problems may occur.

Note: Be sure the cable guard is located over the retaining pin on the pulley mounting block. Be sure the pulley spins freely after reassembling the pulley assembly.

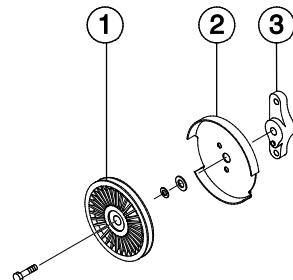

1 pulley
2 pulley guard
3 pulley mounting block

- 13 Apply Loctite® removable thread sealant to the fastener and install the pulley assembly onto the column.
- 14 Assemble the columns in reverse order of disassembly.

Winches

3-1

One-speed Winch

How to Disassemble a One-speed Winch

CAUTION

Bodily injury hazard. Cables can fray. Always wear adequate hand protection when handling cable.

- 1 Fully lower the carriage.
- 2 Remove the cable retaining fastener from the winch drum. Remove the cable from the winch drum.

Note: Note the quantity and location of the shims and spacers before disassembling.

- 3 Remove both handle retaining fasteners. Remove the handles from the pinion shaft.
- 4 Remove the drum bolt and the drum bolt spacer. Remove the drum, drum gear cover and housing spacer from the winch.
- 5 Remove the two lock nuts from the pinion shaft by holding the opposite end of the shaft at the flattened portion of the threads.

NOTICE

Component damage hazard. Be careful not to damage the threads while holding the pinion shaft.

- 6 Remove the retaining ring from the pinion shaft.

- 7 Slide the pinion shaft to the right and remove the pinion spacer, pinion plate, ratchet gear and friction disks. Turn the pinion gear counterclockwise and slide it off the left side of the shaft.
- 8 Remove the pinion shaft from the winch housing.
- 9 Remove both pinion bushings. Use a soft metal drift equal to the outside diameter of the bushing and tap with a rubber mallet.

NOTICE

Component damage hazard. Place a block in between the walls of the winch housing to prevent the housing from bending while removing the bushings.

- 10 Remove the winch housing from the machine.

Winches

How to Assemble a One-speed Winch

⚠ CAUTION

Bodily injury hazard. Cables can fray. Always wear adequate hand protection when handling cable.

Note: Refer to the Repair Procedure figure, *One Speed Winch Assembly*, for an exploded view.

- 1 Place one side of the winch housing over the jaws of a vise. Open the vise until the jaws are wider than the outside diameter of the bushing.
- 2 Insert a soft metal drift through the opposite bushing hole. Tap the drift with a rubber mallet to push the bushing into place.
- 3 Repeat steps 1 and 2 to insert the other bushing.
- 4 Add two drops of 30W oil to both pivot points on each ratchet pawl.

⚠ CAUTION

Bodily Injury Hazard. Over-lubrication of the ratchet pawl may result in oil coming in contact with the surface of the winch brake leading to an unsafe working condition. Do not allow any oil on the brake or pressure plate.

- 5 Install the winch housing onto the mast. Be sure the winch drum is toward the top.

- 6 Insert the longer threaded end of the pinion shaft approximately halfway through the left bushing.
- 7 Apply a small amount of multi-purpose grease to the large threaded section of the pinion shaft, under the gear nut. Screw the pinion gear onto the pinion shaft with the gears toward the left side of the winch housing.
- 8 Install, in order, a brake disk, a ratchet gear, a brake disk, a pinion plate and a pinion spacer onto the pinion shaft.

NOTICE

Component damage hazard. Do not allow grease or oil onto the brake disks or the ratchet gear.

Note: The teeth on the ratchet gear must curve away from the right side of the winch housing.


- 9 Push the pinion shaft to the right, through the right pinion bushing, and install the pinion shaft retaining ring.

Note: Use your fingers to push the ratchet pawls outward while pushing the pinion shaft through the right bushing. Be sure the ratchet pawls are in firm contact with the ratchet gear and that all parts move freely.

- 10 Install the two jam nuts to the right side of the pinion shaft one at a time, and tighten.
- 11 Position both handles on the pinion shaft in opposite directions. Install and tighten the lock nuts.

Winches

- 12 Lubricate the outside of the frame spacer with multi-purpose grease. Insert the frame spacer into the drum.
- 13 Install the cable drum. Be sure the drum gears mesh with the ratchet gears.
- 14 Install the drum bolt keeper. Push the drum bolt through the winch housing, drum cover and drum. Be sure the head of the drum bolt is on the drum gear side of the winch.
- 15 Place the drum gear cover in position with the drum bolt slot under the drum bolt keeper.
- 16 Install the drum bolt jam nut hand tight.
- 17 Install the housing spacer with the head of the housing spacer bolt on the right side of the winch and through the slotted portion of the drum gear cover. Place the nut on the end of the bolt and tighten.
- 18 Torque the drum bolt nut to 20 to 25 ft-lbs / 27 to 34 Nm.
- 20 Rotate the drum so that the two square cable keeper holes are at the top. Install the cable keeper clip to the outside of the drum with the two carriage bolts coming through from the inside. Install the lock washers and nuts finger tight. Do not tighten.
- 21 Route the end of the cable around the winch drum and out through the remaining hole on the left side wall of the drum.

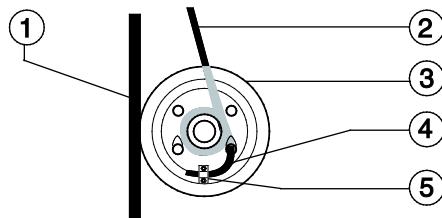

1 number one column
 2 cable
 3 winch drum
 4 cable keeper clip

NOTICE

Component damage hazard. Over tightening the drum bolt jam nut may cause damage to the frame spacer and prevent the drum from spinning freely.

- 19 Lubricate the teeth of the drum gear and the pinion nut that meshes with the drum gear with multi-purpose grease.

CAUTION

Bodily Injury Hazard. Over-lubrication of the ratchet pawl may result in oil coming in contact with the surface of the winch brake leading to an unsafe working condition. Do not allow any oil on the brake or pressure plate.

- 22 Insert the end of the cable under the cable keeper clip approximately 1/2 inch / 13 mm and tighten the cable keeper clip fasteners.
- 23 While holding the cable tight on the drum, rotate the drum and spool the cable onto the drum evenly.

NOTICE

Component damage hazard. Be sure the cable winds onto the winch drum evenly.

Repair Procedures


One-speed Winch Assembly - ANSI

Index

No.	Description
1	Disc Brake
2	Pinion Gear
3	Pinion Shaft
4	Retaining Ring
5	Pinion Shaft Bushing
6	Winch Handle
7	Nylock Nut
8	Ratchet Pawl Kit
9	Cable Keeper Kit
10	Drum Spacer

Index

No.	Description
11	Drum Lock Bolt
12	Winch Gear Cover
13	Screw
14	Lock Nut
15	Drum Bolt
16	Hex Jam Nut
17	Frame Spacer
18	Winch Handle
19	Pinion Plate
20	Ratchet Gear

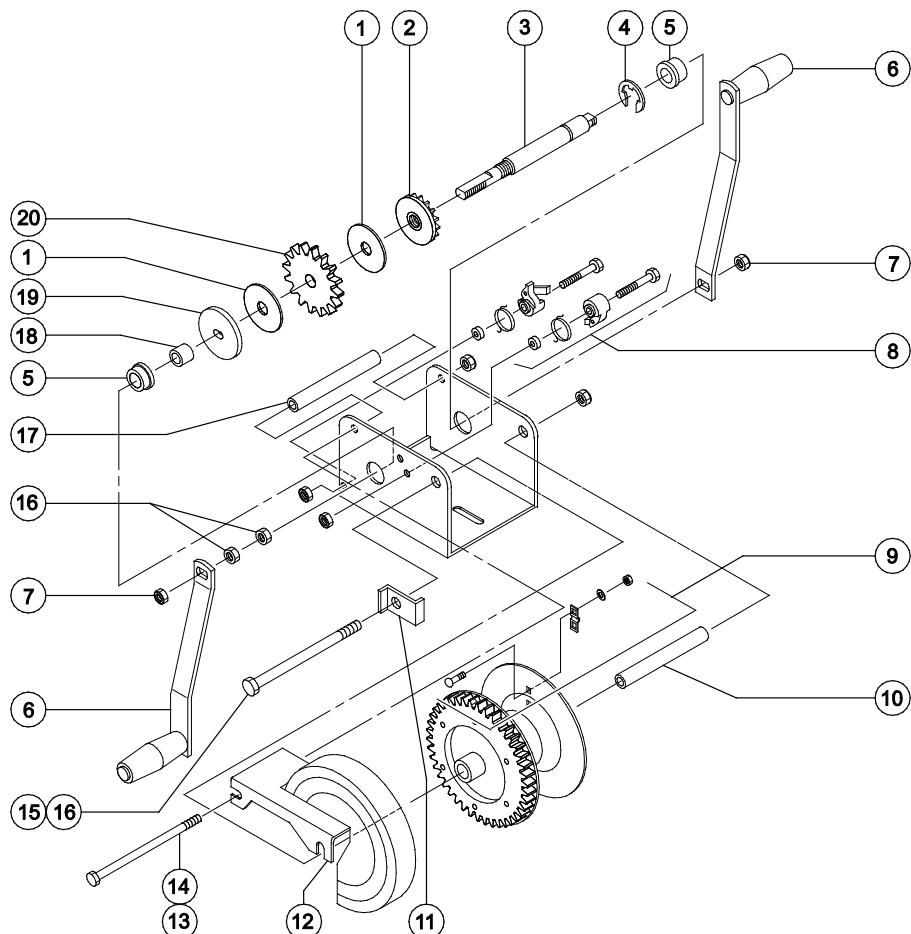

Winches

3-2

Two-Speed Winch

How to Disassemble a Two-speed Winch

⚠ CAUTION

Bodily injury hazard. Cables can fray. Always wear adequate hand protection when handling cable.

- 1 Fully lower the carriage and remove the load handling attachment.
- 2 Remove the cable retaining fasteners from the winch drum. Remove the cable from the drum.
- 3 Remove both handle retaining fasteners from the pinion shaft. Remove the handles.
- 4 Remove the drum bolt and spacer. Remove the drum, drum gear cover and housing spacer.
- 5 Remove the input shaft cover.
- 6 Remove the mounting fasteners from the spring and ball housing.
- 7 Remove the two springs and balls from the spring and ball housing.
- 8 Slide the input shaft out of the winch housing.
- 9 Remove the retaining ring from the pinion shaft.

- 10 Remove the lock nut from the end of the pinion shaft (located on the outside of the winch housing).

Note: Note the location and position of the components on the pinion shaft.

- 11 Slide the pinion shaft to the right and remove the pinion spacer, pinion plate, ratchet gear, and friction disks. Turn the pinion gear counterclockwise and slide it off the left side of the shaft.
- 12 Remove both pinion bushings. Use a soft metal drift equal to the outside diameter of the bushing and tap with a rubber mallet.

NOTICE

Component damage hazard. Place a block between the walls of the winch housing to prevent the housing from bending while removing the bushings.

Winches

How to Assemble a Two-speed Winch

⚠ CAUTION

Bodily injury hazard. Cables can fray. Always wear adequate hand protection when handling cable.

Note: Refer to the Repair Procedure figure, *Two-speed Winch Assembly*, for an exploded view.

- 1 Place one side of the winch housing over the jaws of a vise. Open the vise until the jaws are wider than the outside diameter of the bushing.
- 2 Insert a soft metal drift through the opposite bushing hole. Line up the tab on the bushing to the hole in the winch housing. Tap the drift with a rubber mallet to push the bushing into place.
- 3 Repeat steps 1 and 2 to insert the other bushing.

Note: Use a piece of flat bar or wood between the drift and the bushing to prevent any damage to the bushing.

- 4 Add two drops of 30W oil to both pivot points on each ratchet pawl.

⚠ CAUTION

Bodily Injury Hazard. Over-lubrication of the ratchet pawl may result in oil coming in contact with the surface of the winch brake leading to an unsafe working condition. Do not allow any oil on the brake or pressure plate.

- 5 Install the winch housing on the mast. Be sure the winch drum is toward the top.
- 6 Insert the longer threaded end of the pinion shaft approximately halfway through the right side bushing.

- 7 Apply a small amount of multi-purpose grease to the large threaded section of the pinion shaft, under the gear nut. Slide the pinion shaft gears onto the pinion shaft. Install the pinion gear onto the pinion shaft with the gears toward the right side of the winch housing. Screw onto large threads hand tight.

- 8 Install, in order, a friction disk, a ratchet gear, a friction disk, a pinion plate and a pinion spacer onto the pinion shaft.

NOTICE

Component damage hazard. Do not allow grease or oil onto the brake disk, ratchet gear or the teflon spacer.

- 9 Install the pinion shaft retaining ring onto the pinion shaft.

Note: Use your fingers to push the ratchet pawls outwards while pushing the pinion shaft through the left bushing. Be sure the ratchet pawls are in firm contact with the ratchet gear and that all parts move freely.

- 10 Install the lock nut on the left side of the pinion shaft.
- 11 Install the input shaft approximately half way through the left side of the winch housing.
- 12 Slide the left side bushing, spring and ball housing, spacer, input shaft gears and right side bushing onto the input shaft.
- 13 Install the ball and spring into the spring and ball housing. Install the mounting fasteners.

Winches

- 14 Lubricate the outside of the frame spacer with multi-purpose grease and insert it into the drum.
- 15 Install the cable drum. Be sure the drum gears mesh with the ratchet gears.
- 16 Install the drum bolt keeper. Push the drum bolt through the winch housing, drum cover and drum. Be sure the head of the drum bolt is on the drum gear side of the winch.
- 17 Install the drum bolt jam nut and torque to 20 to 25 ft-lbs / 27 to 34 Nm.
- 22 Route the end of the cable between the winch drum and the number one column. Proceed around the drum and up through the horizontal slot in the winch drum. The cable is then fed under the left hand side of the cable clip, pulled forward, looped, and then fed under the right hand side of the cable keeper clip. The raw end of the cable is then fed into the right hand side of the horizontal slot in the winch drum.

NOTICE

Component damage hazard. Over tightening the drum bolt jam nut may cause damage to the frame spacer and prevent the drum from spinning freely.

- 18 Lubricate the teeth of the drum gear and the pinion nut with multi-purpose grease.


CAUTION

Bodily Injury Hazard. Over-lubrication of the ratchet pawl may result in oil coming in contact with the surface of the winch brake leading to an unsafe working condition. Do not allow any oil on the brake or pressure plate.

- 19 Install the input shaft cover.
- 20 Rotate the winch drum so that the oblong slot is visible and horizontal.
- 21 Install the cable keeper clip on the outside of the winch drum with one carriage bolt coming through from the inside. Install the lock washer and nut finger tight. Do not tighten the nut.

WARNING

Crushing hazard. Failure to properly route the cable may result in a winch brake failure.

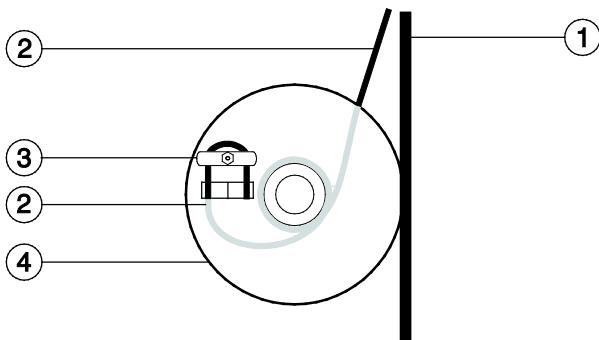

1 number one Column

2 cable

3 cable keeper clip

4 winch drum

- 23 Tighten the cable keeper fastener.

- 24 While holding the cable tight on the drum, rotate the drum with a handle and spool the cable onto the drum evenly.

NOTICE

Component damage hazard. Be sure the cable winds onto the winch drum evenly.

Repair Procedures


Two-speed Winch Assembly

Index

No.	Description
1	Reel Lock Bolt
2	Reel Cover
3	Cable Keeper
4	Reel Spacer
5	Gear Cover
6	Ratchet Pawl Kit
7	Retaining Ring
8	Sintered Iron Ring
9	Pinion Shaft Assembly
10	Handle

Index

No.	Description
11	Input Shaft Assembly
12	Brake Spring Spacer
13	Detent Block Assembly
14	Pinion Gear
15	Disc Brake
16	Ratchet Gear
17	Pinion Plate
18	Brake Spacer
19	Pinion Shaft Bushing
20	Base Spacer

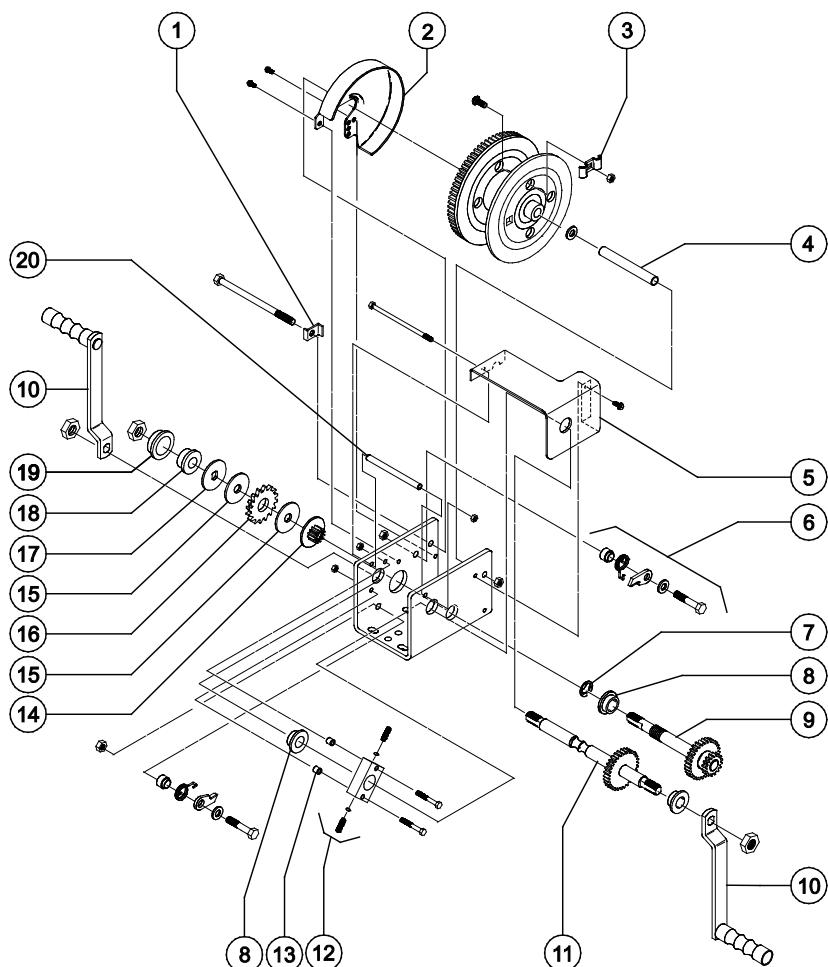

Distributed By:

Genie North America
Phone 425.881.1800
Toll Free USA and Canada
800.536.1800
Fax 425.883.3475

Genie Australia Pty Ltd.
Phone +61 7 3375 1660
Fax +61 7 3375 1002

Genie China
Phone +86 21 53853768
Fax +86 21 53852569

Genie Singapore
Phone +65 67533544
Fax +65 67533544

Genie Japan
Phone +81 3 6436 2020
Fax +81 3 5445 1231

Genie Korea
Phone +82 2 558 7267
Fax +82 2 558 3910

Genie Brasil
Phone +55 11 4082 5600
Fax +55 22 4082 5630

Genie Holland
Phone +31 183 581 102
Fax +31 183 581 566

Genie Sweden
Phone 0046 3157 5101
Fax 0046 3157 5104

Genie France
Phone 0033 237 260 986
Fax 0033 237 260 998

Genie Iberica
Phone 0034 900 808 110
Fax 0034 935 725 080

Genie Germany
Phone 0800 180 9017
Phone 0049 4221 491 810
Fax 0049 4221 491 820

Genie U.K.
Phone 0044 1476 584 333
Fax 0044 1476 584 330

Genie Mexico City
Phone +52 55 5666 5242
Fax +52 55 5666 3241