

# User Guide

*WDDCS Tool*

*1ET1813*

*Rev. 1.4*

*July 2021*

*Software Version v2.1.4.0*

**Western Digital®**



# Table of Contents

---

Revision History..... iv

Notices..... vi

**Chapter 1. Overview.....1**

    WDDCS Tool Overview..... 2

    Supported Enclosures.....2

    Tested Operating Systems..... 2

    Required/Recommended Utilities..... 2

    Release Notes.....3

    Intended Users..... 3

**Chapter 2. Installation.....5**

    Unzipping the Installation File.....6

    Installing on Debian/Ubuntu.....8

    Installing on RHEL/CentOS..... 9

    Installing via tar.gz..... 10

    End User License Agreement.....11

    Installing on Windows Server (First Install)..... 11

    Installing on Windows Server (Reinstall)..... 15

**Chapter 3. Commands.....21**

    help.....22

        help diag..... 23

        help fw.....23

        help getlog.....24

        help..... 24

        help iom..... 25

        help rcli.....25

        help show.....26

help zone.....	26
diag.....	27
diag clear-crashevent.....	28
diag clear-eventlog.....	29
diag nickname.....	30
diag reset-enc.....	32
diag reset-iom-<a b>.....	33
diag timestamp.....	34
diag autosync-enable.....	35
diag autosync-disable.....	36
fw.....	37
fw download.....	38
fw download_activate.....	39
fw download_reset.....	40
fw activate.....	41
fw reset.....	42
fw status.....	42
getlog.....	44
getlog common.....	44
getlog vendor.....	47
getlog system-heavy.....	53
getlog system-light.....	54
getlog system.....	55
getlog drives.....	57
getlog all.....	58
iom.....	61
rcli.....	63
Supported RCLI Commands By Enclosure.....	63

RCLI Command String Examples.....	69
show.....	81
show.....	82
show handles.....	82
version.....	84
zone.....	84
zone config (enable zoning).....	85
zone config (disable zoning).....	85
zone file.....	86
zone reset.....	87
zone status.....	87
<b>Chapter 4. Firmware Upgrade Processes.....</b>	<b>89</b>
Choosing the Correct Firmware Upgrade Process.....	90
Two IOMs, Online, Manual.....	91
Two IOMs, Offline, Automatic.....	93
One IOM, Offline, Automatic.....	94
Two IOMs, Online, Automatic.....	96
<b>Chapter 5. Uninstallation.....</b>	<b>98</b>
Uninstalling from Debian/Ubuntu.....	99
Uninstalling from RHEL/CentOS.....	99
Uninstalling via tar.gz.....	99
Uninstalling from Windows Server.....	99
<b>Chapter 6. Appendices.....</b>	<b>103</b>
Glossary.....	104

## Revision History

Date	Document Revision	Software Version	Description
August 2019	1.0	v1.0.4.0	Initial release
March 2020	1.1	v1.1.8.0	<ul style="list-style-type: none"> <li>Added <a href="#">Release Notes</a> (<a href="#">page 3</a>)</li> <li>Added <a href="#">Required/Recommended Utilities</a> (<a href="#">page 2</a>)</li> <li>Added support for Windows Server throughout</li> <li>Changed wording of <code>sg3_utils</code> and <code>smp_utils</code> references in <a href="#">getlog</a> (<a href="#">page 44</a>)</li> <li>Separated instructions for enabling/disabling zoning in <a href="#">zone</a> (<a href="#">page 84</a>)</li> <li>Added the following support for Ultrastar Data102, Ultrastar Data60, and Ultrastar Serv60+8: <ul style="list-style-type: none"> <li>Enclosure nickname feature for FW 2040+ (see <a href="#">diag nickname</a> (<a href="#">page 30</a>))</li> <li>Pre-defined zoning and custom binaries for FW 2030+ (see <a href="#">zone</a> (<a href="#">page 84</a>))</li> <li>E6 Event, Console, and Crash log collection (see <a href="#">getlog vendor</a> (<a href="#">page 47</a>)) for FW 2040+</li> </ul> </li> <li>Added <code>zone status</code> command to report status and configuration of zoning</li> <li>Added <code>read err_cnts</code> and <code>clear err_cnts</code> to <a href="#">Supported RCLI Commands By Enclosure</a> (<a href="#">page 63</a>) and updated other sections of table</li> </ul>
December 2020	1.2	v1.1.8.0	Added note about setting IP addresses without specifying a device. See <a href="#">Release Notes</a> ( <a href="#">page 3</a> ) and <a href="#">iom</a> ( <a href="#">page 61</a> ).
January 2021	1.3	v2.0.6.0	<ul style="list-style-type: none"> <li>Updated outputs for <code>help</code> command options</li> <li>Updated <a href="#">Release Notes</a> (<a href="#">page 3</a>)</li> <li>Added instructions for the following commands: <a href="#">version</a> (<a href="#">page 84</a>), <a href="#">diag reset-iom-&lt;alb&gt;</a> (<a href="#">page 33</a>), <a href="#">diag reset-enc</a> (<a href="#">page 32</a>), <a href="#">diag clear-crashevent</a> (<a href="#">page 28</a>), <a href="#">diag clear-eventlog</a> (<a href="#">page 29</a>), <code>getlog drives-noprompt</code>, and <code>getlog all-noprompt</code></li> <li>Added <code>gpio</code>, <code>iom gpio</code>, and <code>show autosync</code> commands to <a href="#">rcli</a> (<a href="#">page 63</a>).</li> <li>Added <a href="#">Health Analysis</a> (<a href="#">page 60</a>)</li> <li>Updated <a href="#">show</a> (<a href="#">page 81</a>) section with instructions for <a href="#">show handles</a> (<a href="#">page 82</a>) command</li> </ul>

Date	Document Revision	Software Version	Description
July 2021	1.4	v2.1.4.0	<ul style="list-style-type: none"><li>Removed older OSs from <a href="#">Tested Operating Systems (page 2)</a></li><li>Updated <a href="#">Release Notes (page 3)</a></li><li>Updated outputs for <code>help</code> and <code>version</code> commands</li><li>Added <code>diag timestamp</code> (<a href="#">page 34</a>), <code>diag autosync-enable</code> (<a href="#">page 35</a>), and <code>diag autosync-disable</code> (<a href="#">page 36</a>)</li><li>Updated table of enclosure support for <code>diag</code> (<a href="#">page 27</a>) commands</li><li>Added optional <code>-nostatdelay</code> flag to <code>fw download</code> (<a href="#">page 38</a>), and updated outputs in <code>fw download_activate</code> (<a href="#">page 39</a>) and <code>fw download_reset</code> (<a href="#">page 40</a>)</li><li>Updated table of information captured by <code>getlog vendor</code> (<a href="#">page 47</a>) command</li><li>Removed note about <code>iom</code> prefix in <a href="#">Supported RCLI Commands By Enclosure (page 63)</a></li></ul>

## Notices

---

Western Digital Technologies, Inc. or its affiliates' (collectively "Western Digital") general policy does not recommend the use of its products in life support applications wherein a failure or malfunction of the product may directly threaten life or injury. Per Western Digital Terms and Conditions of Sale, the user of Western Digital products in life support applications assumes all risk of such use and indemnifies Western Digital against all damages.

This document is for information use only and is subject to change without prior notice. Western Digital assumes no responsibility for any errors that may appear in this document, nor for incidental or consequential damages resulting from the furnishing, performance or use of this material.

Absent a written agreement signed by Western Digital or its authorized representative to the contrary, Western Digital explicitly disclaims any express and implied warranties and indemnities of any kind that may, or could, be associated with this document and related material, and any user of this document or related material agrees to such disclaimer as a precondition to receipt and usage hereof.

Each user of this document or any product referred to herein expressly waives all guaranties and warranties of any kind associated with this document any related materials or such product, whether expressed or implied, including without limitation, any implied warranty of merchantability or fitness for a particular purpose or non-infringement. Each user of this document or any product referred to herein also expressly agrees Western Digital shall not be liable for any incidental, punitive, indirect, special, or consequential damages, including without limitation physical injury or death, property damage, lost data, loss of profits or costs of procurement of substitute goods, technology, or services, arising out of or related to this document, any related materials or any product referred to herein, regardless of whether such damages are based on tort, warranty, contract, or any other legal theory, even if advised of the possibility of such damages.

This document and its contents, including diagrams, schematics, methodology, work product, and intellectual property rights described in, associated with, or implied by this document, are the sole and exclusive property of Western Digital. No intellectual property license, express or implied, is granted by Western Digital associated with the document recipient's receipt, access and/or use of this document or the products referred to herein; Western Digital retains all rights hereto.

Western Digital, the Western Digital logo, and Ultrastar are registered trademarks or trademarks of Western Digital Corporation or its affiliates in the US and/or other countries. Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries. All other marks are the property of their respective owners. Product specifications subject to change without notice. Pictures shown may vary from actual products. Not all products are available in all regions of the world.

Western Digital  
5601 Great Oaks Parkway  
San Jose, CA 95119

**© 2021 Western Digital Corporation or its affiliates. All Rights Reserved.**

# Overview

## In This Chapter:

- WDDCS Tool Overview.....2
- Supported Enclosures.....2
- Tested Operating Systems..... 2
- Required/Recommended Utilities.....2
- Release Notes..... 3
- Intended Users.....3

## 1.1 WDDCS Tool Overview

The WDDCS Tool is a command line utility for capturing discrete host and enclosure data for analysis and troubleshooting, and performing common management functions such as upgrading firmware and configuring drive zones. It runs on the most common Linux and Windows server operating systems and leverages other utilities already installed on the host, such as `sg3_utils` and `sgp_utils`.

## 1.2 Supported Enclosures

The WDDCS Tool supports the following enclosures:

**Table 1:** Supported Enclosures

Product Name	Regulatory Model	Product ID
Ultrastar Data60	H4060-J	H4060-J
Ultrastar Serv60+8	H4060-S	H4060-S
Ultrastar Data102	H4102-J	H4102-J
4U60 G1 Storage Enclosure	G460-J-12	4U60_STOR_ENCL
4U60 G2 Storage Enclosure	G460-J-12	4U60G2_STOR_ENCL
2U24 Flash Storage Platform	G224-J-12	2U24_STOR_ENCL
Storage Enclosure Basic	EA7000	STOR_ENCL JBOD

## 1.3 Tested Operating Systems

The WDDCS Tool has been tested on the following operating systems:

Operating System	Version
CentOS	7.x, 8.x
Red Hat Enterprise Linux (RHEL)	7.x, 8.x
Oracle Linux (OL)	7.x, 8.x
Ubuntu	16.x, 18.x
Windows Server	2016, 2019

## 1.4 Required/Recommended Utilities

The following utilities are either required or recommended for operating the WDDCS Tool:

Utility	Minimum Version	Status	Download Location
<code>sg3_utils</code> <sup>1</sup>	1.42	Required	<a href="http://sg.danny.cz/sg/sg3_utils.html">http://sg.danny.cz/sg/sg3_utils.html</a>

1. `sg3_utils` should be added to the `PATH` environment variable.

Utility	Minimum Version	Status	Download Location
smp_utils <sup>2</sup>	0.98	Recommended	<a href="http://sg.danny.cz/sg/smp_utils.html">http://sg.danny.cz/sg/smp_utils.html</a>

## 1.5 Release Notes

This section describes known issues, fixed issues, and features introduced with the current version of the WDDCS Tool.

**Table 2:** Known Issues

Software Version	Ref. ID	Issue	Workaround/Notes
v2.1.4.0	ITR 22578	Need change in response for <code>rccli iom</code> commands in Single IOM mode	To be addressed in a future release
v2.1.4.0	ITR 22594	wddcs zone file shows error and success if file does not exist	To be addressed in a future release

**Table 3:** Fixed Issues

Ref. ID	Description
ITR 22520	Fix health html containing non-ascii characters at the end of the file
ITR 22552	Change to message string for health analysis of html on temp/voltage/current
ITR 22575	Fix for using special Linux characters in arguments (ex. <code>zone config=\$1</code> )

**Table 4:** New Features

Ref. ID	Description
ITR 22479	Retrieve bundle logs via enhanced E6 command
ITR 22485	New <code>wddcs diag timestamp</code> feature to show and set internal date/time
ITR 22490	Add ability to enable and disable the auto synchronization feature on Ultrastar Data60 and Ultrastar Data102 platforms
ITR 22491	Windows package now has a subfolder similar to Linux
ITR 22536	Change firmware upgrade SES Page 0xe polling interval to 15 seconds for <code>-nostatdelay</code> option
ITR 22562	Add <code>wddcs show</code> and <code>wddcs iom</code> as logs to <code>wddcs getlog vendor all</code>
ITR 22569	New <code>-nostatdelay</code> option to skip the default 15 minute delay after download for Ultrastar Data60, Ultrastar Data102, and Ultrastar Serv60+8
N/A	Add <code>wddcs show_vpd_&lt;dev&gt;.txt</code> to <code>wddcs getlog vendor</code> for 4U60 G2 Storage Enclosure

2. smp\_utils is for Linux only.

## 1.6 Intended Users

---

The intended users of the WDDCS Tool are:

- Customers of HGST/WD products
- HGST/WD Customer Support
- HGST/WD Engineering

# Installation

The WDDCS Tool may be installed on a variety of Linux operating systems as well as Windows Server. The following sections provide installation instructions for each package.

## In This Chapter:

- Unzipping the Installation File..... 6
- Installing on Debian/Ubuntu..... 8
- Installing on RHEL/CentOS..... 9
- Installing via tar.gz..... 10
- End User License Agreement..... 11
- Installing on Windows Server (First Install)..... 11
- Installing on Windows Server (Reinstall)..... 15

## 2.1 Unzipping the Installation File

**Step 1:** Transfer the `wddcs_<version>.zip` file to the desired directory on the server in question.


**Step 2:** Unzip/extract the `wddcs_<version>.zip` file:

- a. For Linux operating systems, use the `unzip` command:


```
# unzip wddcs_<version>.zip
Archive:  wddcs_<version>.zip
  inflating: customer/wddcs-<version>-amd64.deb
  inflating: customer/wddcs-<version>-x86_64.rpm
  inflating: customer/wddcs-<version>-x86_64.tar.gz
```

- b. For Windows Server operating systems:


- a. Right-click the zip file and select **Extract All**:

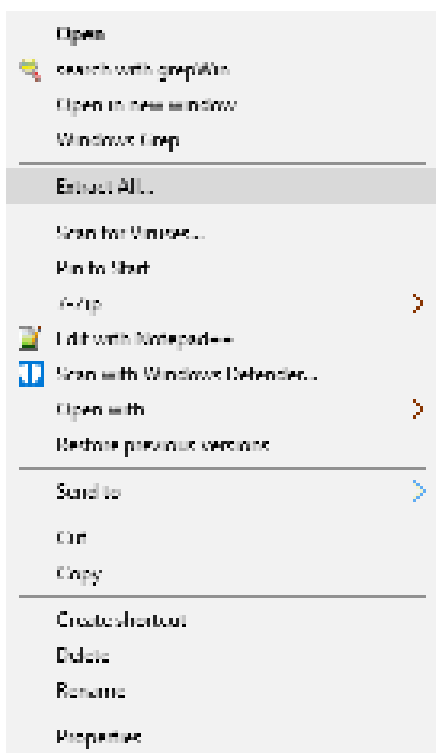

- b. Accept or choose a directory for the extracted files. Click the checkbox for **Show extracted files when complete**. Then click the **Extract** button:

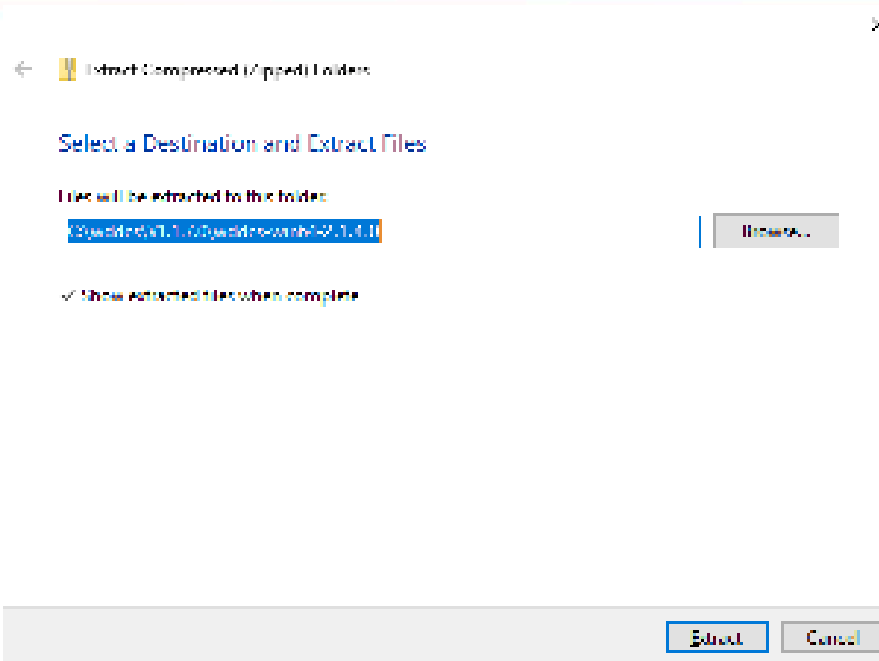

- c. A window may appear briefly, showing the extraction progress:

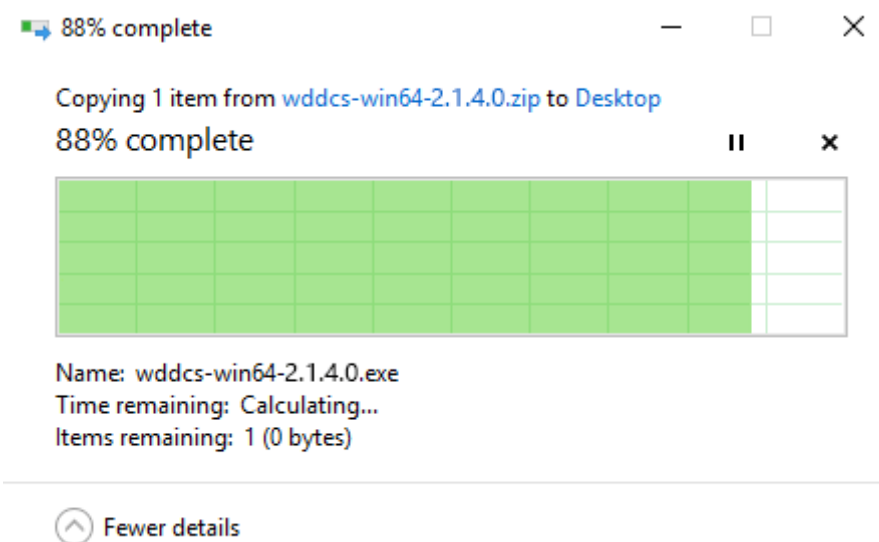


**Step 3:** If needed, view the contents of the directory to verify the presence of the unzipped files:

- a. For Linux operating systems, use the `ls` command:

```
# ls
wddcs-<version>-amd64.deb  wddcs-<version>-x86_64.rpm  wddcs-<version>-
x86_64.tar.gz
```

- b. For Windows operating systems, the `wddcs-win64-<version>.exe` file is located within nested directories for the version and operating system.

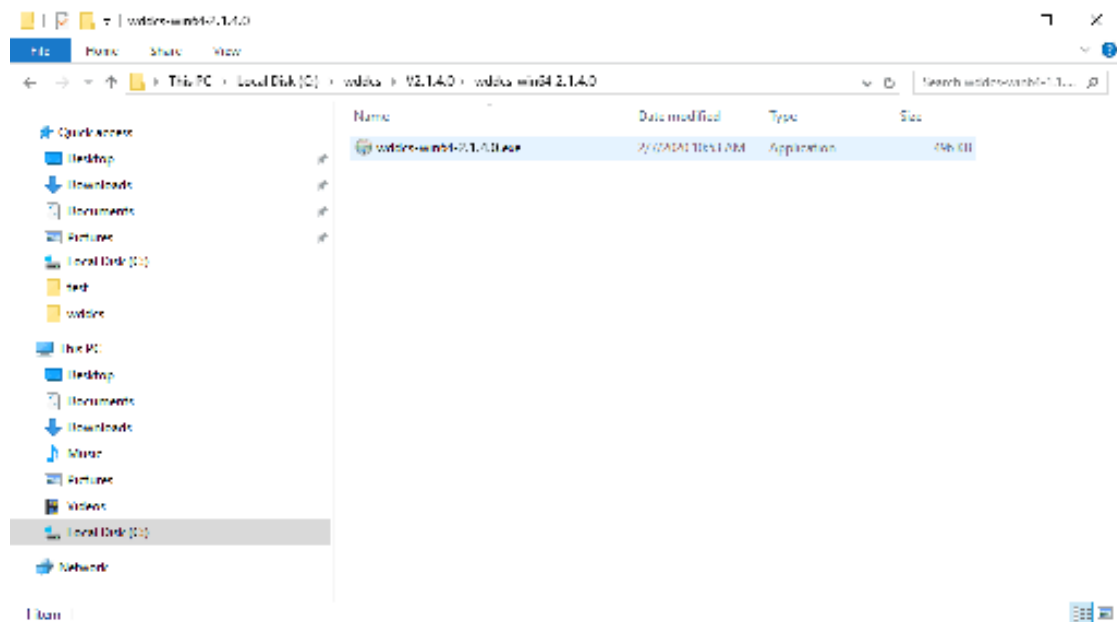

The .deb, .rpm, .tar.gz, and .exe files provide four options for installing the WDDCS Tool package. Instructions for each option are provided in the following sections.

## 2.2 Installing on Debian/Ubuntu

Follow these steps to install the WDDCS Tool on Debian/Ubuntu operating systems.

**Step 1:** From the customer directory where the .deb file is located, use the `dpkg -i` command to install the `wddcs-<version>-amd64.deb` package. For example:

```
# dpkg -i wddcs-<version>-amd64.deb
Selecting previously unselected package wddcs.
(Reading database ... 527023 files and directories currently installed.)
Preparing to unpack wddcs-<version>-amd64.deb ...
Unpacking wddcs <version> ...
Setting up wddcs <version> ...
```

The `wddcs` executable file will be installed to the `/opt/wdc/wddcs/` directory.

**Step 2:** Verify that the following directory and files have been created or installed:

- Directory: `/opt/wdc/wddcs/`
- File: `/opt/wdc/wddcs/wddcs`
- File: `/opt/wdc/wddcs/WDC_EULA.txt`
- File: `/opt/wdc/wddcs/RELEASE.txt`
- File: `/opt/wdc/wddcs/eula.sh`

**Step 3:** Verify that the `dpkg -l` command returns the tool name, version, and a description of the tool:

```
# dpkg -l | grep -i wddcs
```

```
ii wddcs      <version>      amd64      Western Digital tool to support Data Center
System
```

**Step 4:** Run the `wddcs` command with no arguments.

a. If the EULA has already been accepted, the `wddcs` command syntax help text will appear:

```
wddcs v2.1.4.0
wddcs usage:
wddcs [target [...]] operation [operation argument [...]]
    [target] - device path (ie: /dev/sg1)
                up to 128 targets may be specified
                if no targets are specified, all detected devices are
targeted
    operation - operation to execute
    [operation argument] - argument specific to given operation

The following operations are supported:
diag      display, set, and clear diagnostic page data
fw         firmware related operations
getlog     capture various types of log data
iom        display and set IOM configuration
rcli       display detailed data about the enclosure and components
show       scan SEP devices and display the product or device data
zone       display and configure zones
```

b. If this is the first time the `wddcs` command has been used, the EULA prompt will appear. See [End User License Agreement \(page 11\)](#) for more details.

## 2.3 Installing on RHEL/CentOS

Follow these steps to install the WDDCS Tool on Red Hat Enterprise Linux (RHEL) or CentOS operating systems with the Red Hat Package Manager (RPM).

**Step 1:** From the `customer` directory where the `.rpm` file is located, use the `rpm -i` command to install the `wddcs-<version>-x86_64.rpm` package. For example:

```
# rpm -i wddcs-<version>-x86_64.rpm
```

**Step 2:** Verify that the following directory and files have been created or installed:

- Directory: `/opt/wdc/wddcs/`
- File: `/opt/wdc/wddcs/wddcs`
- File: `/opt/wdc/wddcs/WDC_EULA.txt`
- File: `/opt/wdc/wddcs/RELEASE.txt`
- File: `/opt/wdc/wddcs/eula.sh`

**Step 3:** Run the `wddcs` command with no arguments.

a. If the EULA has already been accepted, the `wddcs` command syntax help text will appear:

```
wddcs v2.1.4.0
wddcs usage:
wddcs [target [...]] operation [operation argument [...]]
    [target] - device path (ie: /dev/sg1)
                up to 128 targets may be specified
```

```

        if no targets are specified, all detected devices are
targeted
    operation - operation to execute
    [operation argument] - argument specific to given operation

```

The following operations are supported:

```

diag      display, set, and clear diagnostic page data
fw        firmware related operations
getlog    capture various types of log data
iom       display and set IOM configuration
rcli     display detailed data about the enclosure and components
show     scan SEP devices and display the product or device data
zone     display and configure zones

```

- b. If this is the first time the `wddcs` command has been used, the EULA prompt will appear. See [End User License Agreement \(page 11\)](#) for more details.

## 2.4 Installing via tar.gz

Follow these instructions to install the WDDCS Tool via tar.gz.

- Step 1:** From the directory where the `.tar.gz` file is located, use the `tar xvfz` command to unzip/unrar the `wddcs-<version>-x86_64.tar.gz` file. For example:

```

# tar xvfz wddcs-<version>-x86_64.tar.gz
wddcs-x86_64-<version>/opt/
wddcs-x86_64-<version>/opt/wdc/
wddcs-x86_64-<version>/opt/wdc/wddcs/
wddcs-x86_64-<version>/opt/wdc/wddcs/eula.sh
wddcs-x86_64-<version>/opt/wdc/wddcs/WDC_EULA.txt
wddcs-x86_64-<version>/opt/wdc/wddcs/Third-Party_Notices.txt
wddcs-x86_64-<version>/opt/wdc/wddcs/EULA_Exhibit_A-Third-Party_Licenses.txt
wddcs-x86_64-<version>/opt/wdc/wddcs/wddcs
wddcs-x86_64-<version>/opt/wdc/wddcs/.wdc_lic

```

The `wddcs` executable will be installed to the `wddcs-<version>-x86_64/opt/wdc/wddcs/` directory within the working directory where the installation files were unzipped.

- Step 2:** Change directory into the `<unzip location>/wddcs-<version>-x86_64/opt/wdc/wddcs/` directory. For example:

```

# cd /home/wddcs/wddcs-<version>-x86_64/opt/wdc/wddcs/

```

- Step 3:** Verify that the following files are available:

```

# ls -al
total 1064
drwxrwxr-x. 2 501 501    4096 Feb 28 05:50 .
drwxrwxr-x. 3 501 501    4096 Feb 28 05:50 ..
-rw-r--r--. 1 501 501      1 Jul 10 22:00 .wdc_lic
-rw-r--r--. 1 501 501   1199 Feb 28 05:50 EULA_Exhibit_A-
Third-Party_Licenses.txt
-rw-r--r--. 1 501 501   20349 Feb 28 05:50 Third-Party_Notices.txt
-rw-r--r--. 1 501 501   18117 Feb 28 05:50 WDC_EULA.txt
-rw-r--r--. 1 501 501     340 Feb 28 05:50 eula.sh

```

```
-rwxr-xr-x. 1 501 501 1024744 Feb 28 05:50 wddcs
```

**Step 4:** Run the `wddcs` command with no arguments.

- a. If the EULA has already been accepted, the `wddcs` command syntax help text will appear:

```
wddcs v2.1.4.0
wddcs usage:
wddcs [target [...] operation [operation argument [...]]
    [target] - device path (ie: /dev/sgl)
               up to 128 targets may be specified
               if no targets are specified, all detected devices are
targeted
    operation - operation to execute
    [operation argument] - argument specific to given operation

The following operations are supported:
diag      display, set, and clear diagnostic page data
fw         firmware related operations
getlog     capture various types of log data
iom        display and set IOM configuration
rcli       display detailed data about the enclosure and components
show       scan SEP devices and display the product or device data
zone       display and configure zones
```

- b. If this is the first time the `wddcs` command has been used, the EULA prompt will appear. See [End User License Agreement \(page 11\)](#) for more details.

## 2.5 End User License Agreement

Regardless of which Linux installation package is used, the WDDCS Tool will prompt the user to read the EULA before use:

```
Read the end user license agreement. [enter]:
```

**Step 1:** Press `enter` to read the EULA.

**Step 2:** If needed, press `space` to page through the EULA content, or press `q` to quit:

```
--More--[Press space to continue, 'q' to quit.]
```

After completing or quitting the EULA, the user is prompted to accept:

```
Do you accpet the EULA? [y/n]:
```

**Step 3:** Press `y` to accept the EULA.

If the EULA is not accepted, the following error message will appear:

```
ERROR: you have not accepted the license agreement (EULA)
```




**Note:** Until the EULA is accepted, the user will be prompted to read it each time the WDDCS Tool is executed.

## 2.6 Installing on Windows Server (First Install)

Follow these instructions to install the WDDCS Tool for the first time on Windows Server operating systems.


**Step 1:** In the directory containing the unzipped .exe file, double-click the `wddcs-win64-<version>.exe` file.

A **wddcs Setup** dialog box appears, welcoming the user:

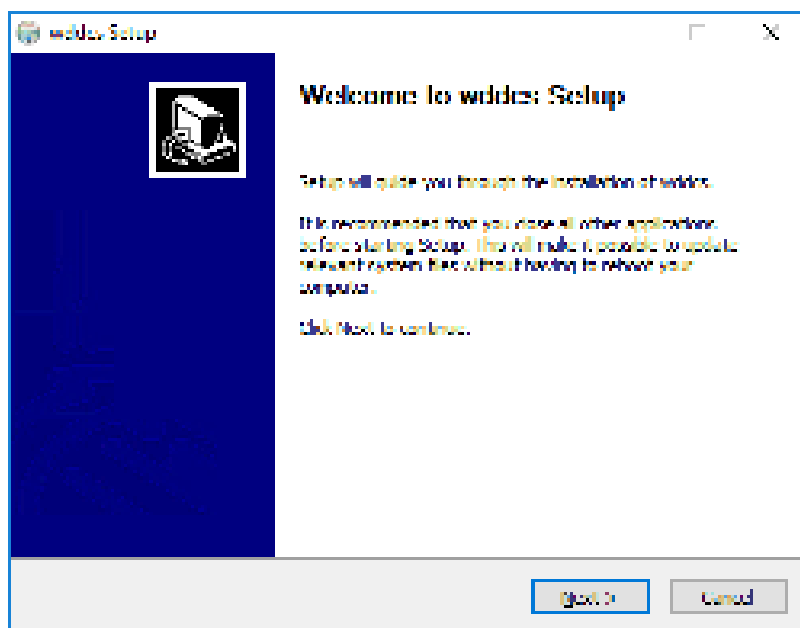


**Step 2:** Click the **Next** button.

The **wddcs Setup** window updates to show the license agreement:

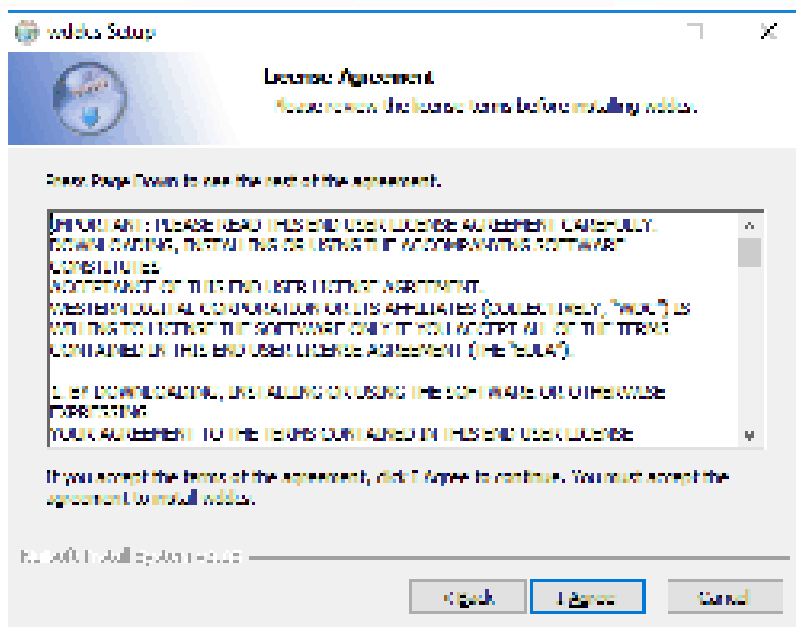


**Step 3:** Read through the license agreement, and then click the **I Agree** button.

The **wddcs Setup** window updates, prompting the user to choose a system PATH option. The *Add wddcs to the system PATH for all users* option is selected by default:

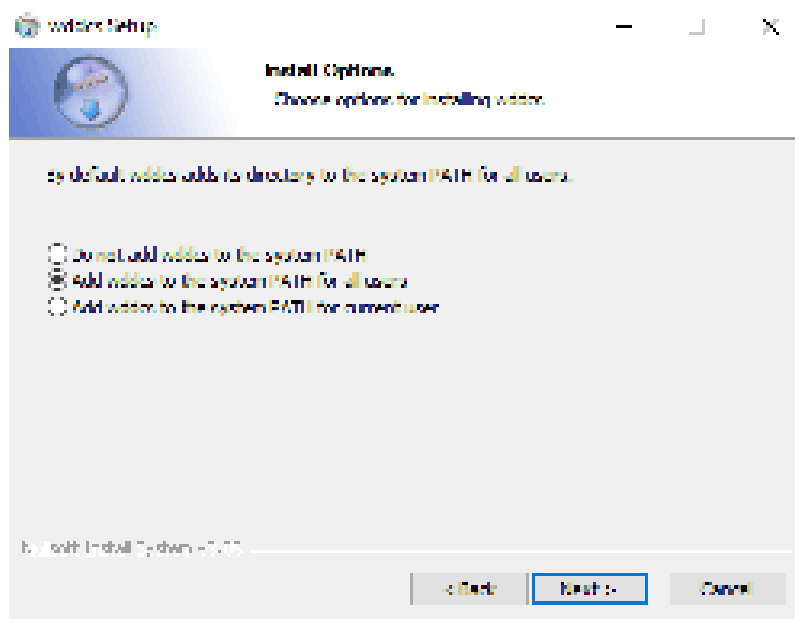


**Step 4:** Click the **Next** button.

The **wddcs Setup** window updates, prompting the user to accept the default installation directory or choose another:

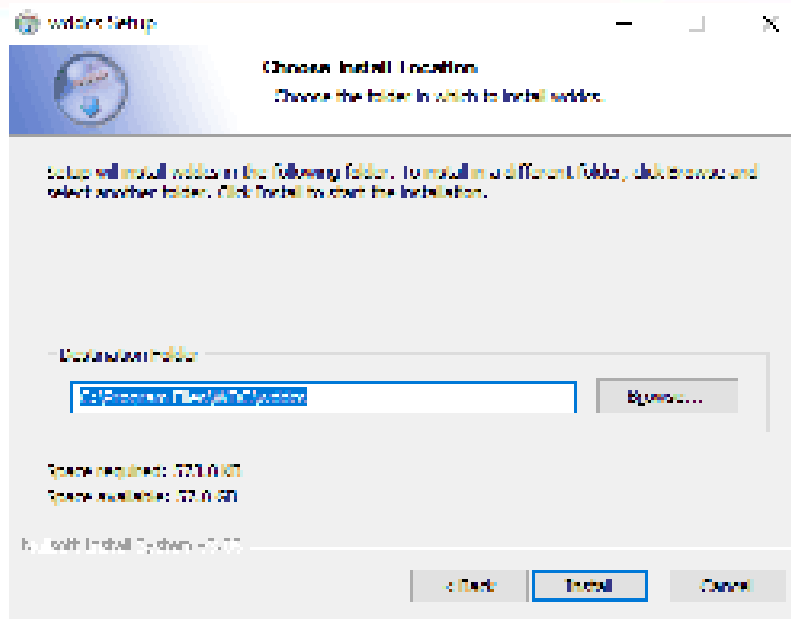


**Step 5:** Click the **Install** button.

The **wddcs Setup** window updates, showing the installation progress:

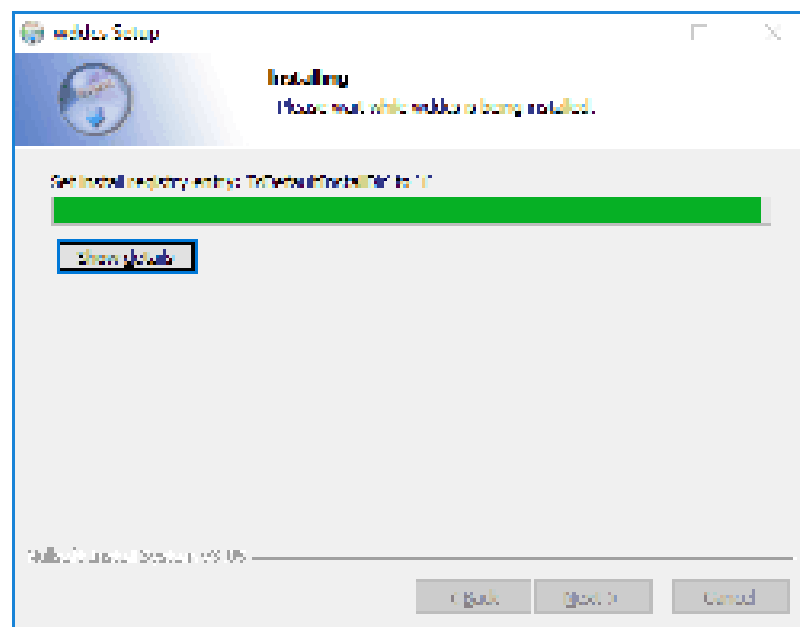

After a few seconds, the **wddcs Setup** window updates again, showing that the installation is complete:

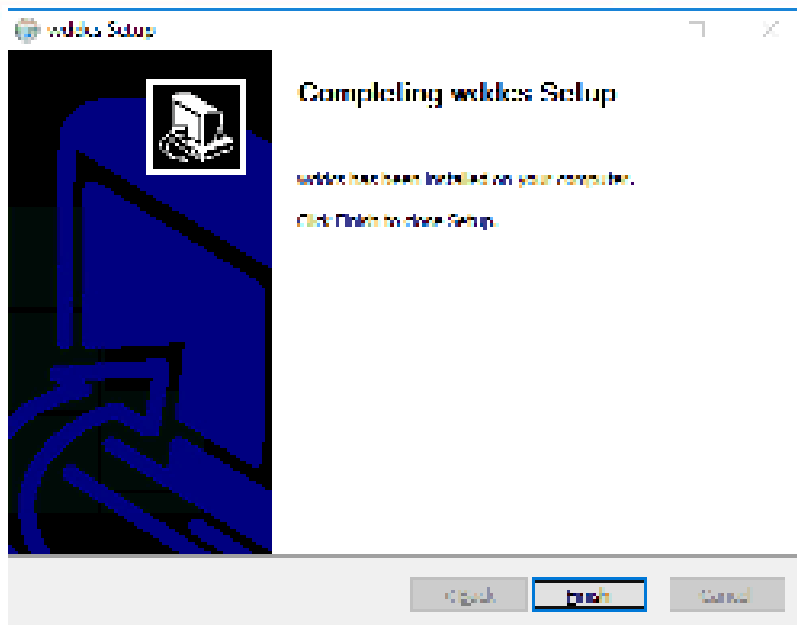


**Step 6:** Click the **Finish** button.

## 2.7 Installing on Windows Server (Reinstall)

Follow these instructions to install a new version of the WDDCS Tool on Windows Server operating systems where an existing version has already been installed.


**Step 1:** In the directory containing the unzipped `.exe` file, double-click the `wddcs-win64-<version>.exe` file.

A **wddcs Setup** dialog appears, asking if the user wants to uninstall the previous version of the WDDCS Tool:

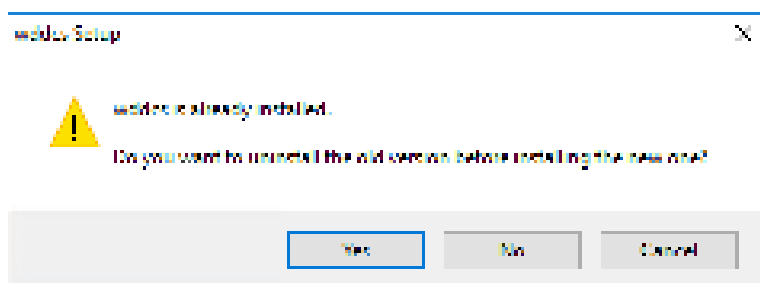


**Step 2:** Click the **Yes** button:

A **wddcs Uninstall** dialog box appears, notifying the user of the directory from which the WDDCS Tool will be uninstalled:

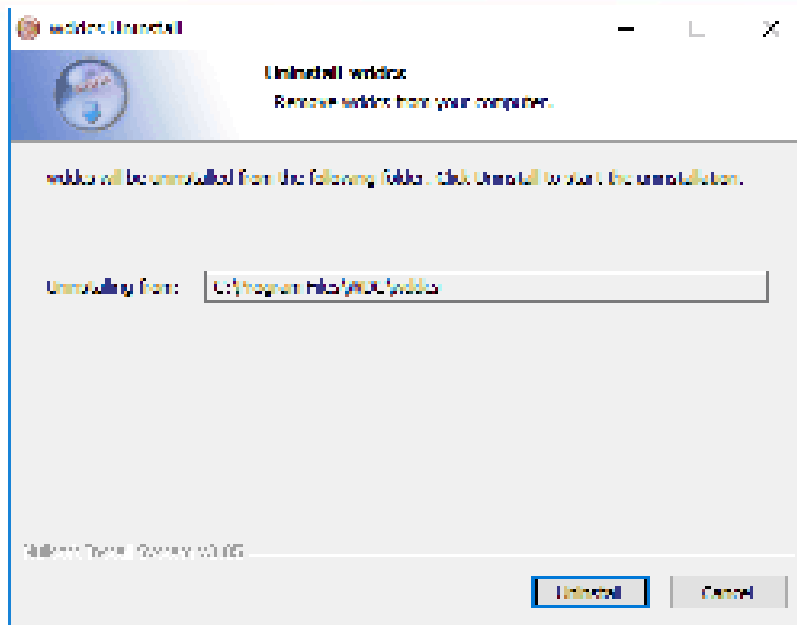


**Step 3:** Click the **Uninstall** button.

The **wddcs Uninstall** window updates, showing that the WDDCS Tool is being uninstalled:

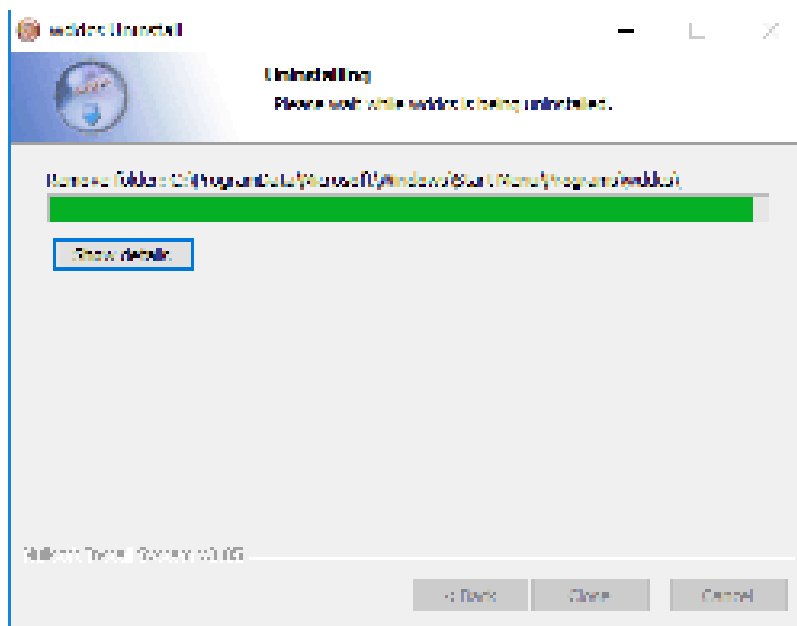


After a few seconds, the **wddcs Uninstall** window updates again, showing that the uninstallation is complete:

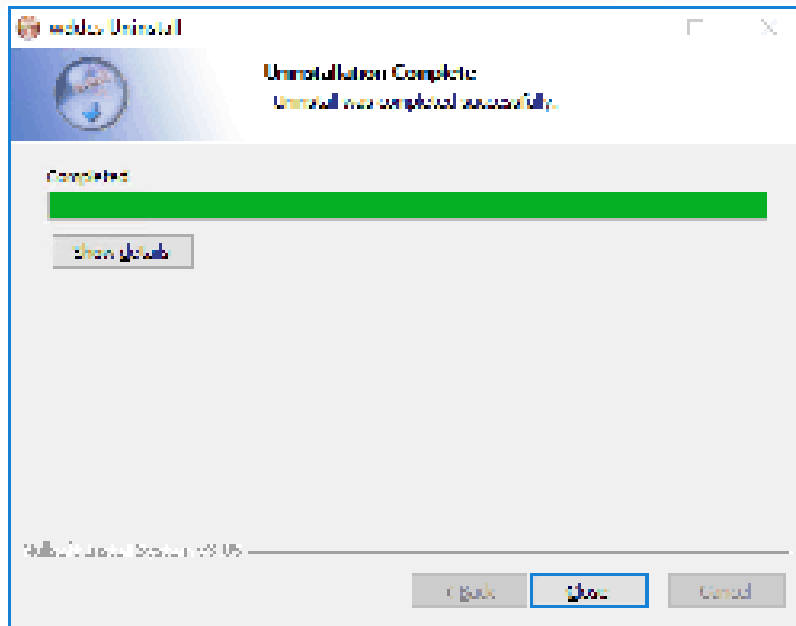

**Step 4:** Click the **Close** button.


The **wddcs Setup** window reappears, asking the user to exit and run the installation again:

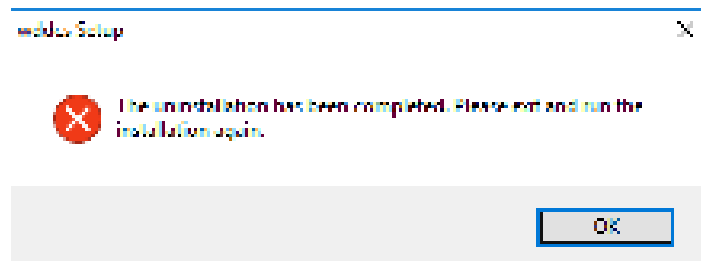

**Step 5:** Click the **OK** button.


**Step 6:** In the `wddcs-win64-<version>` directory, double-click the `wddcs-win64-<version>.exe` file again to start the new installation.

A **wddcs Setup** dialog box appears, welcoming the user:

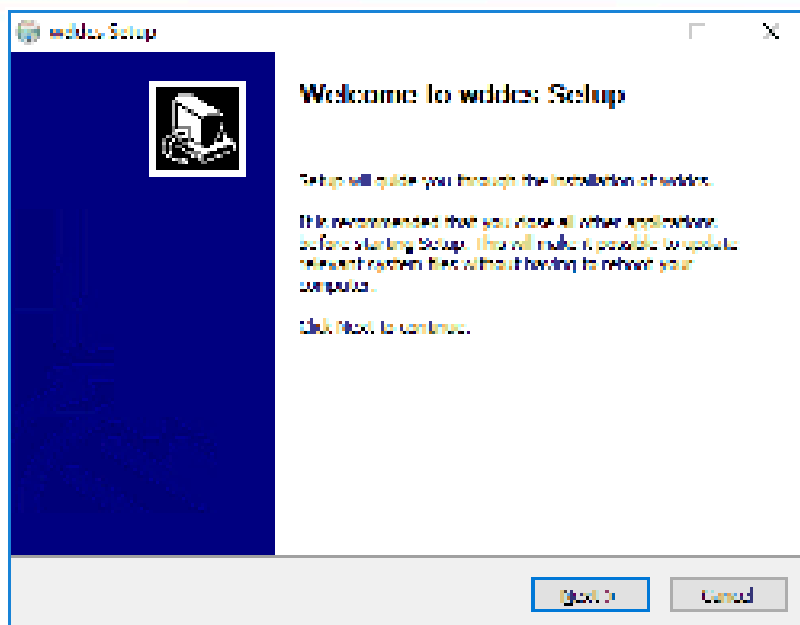


**Step 7:** Click the **Next** button.

The **wddcs Setup** window updates to show the license agreement:

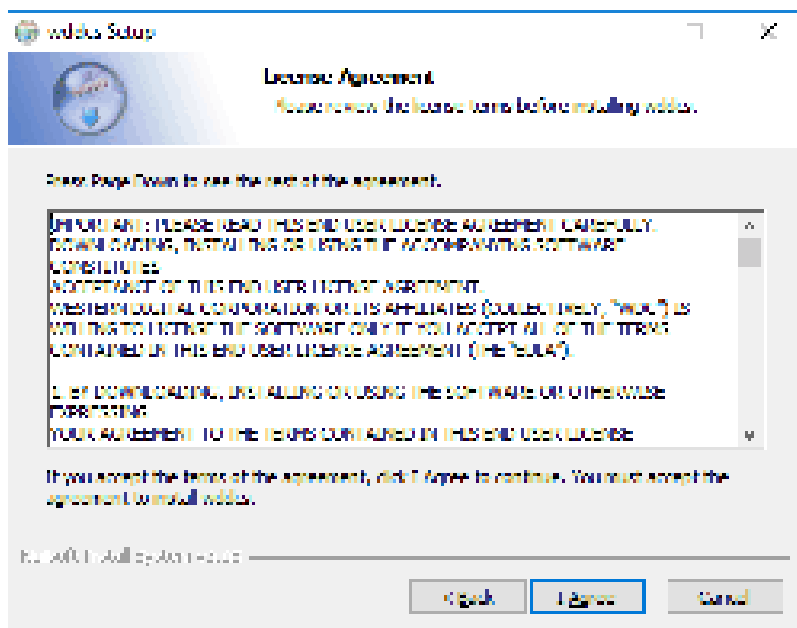


**Step 8:** Read through the license agreement, and then click the **I Agree** button.

The **wddcs Setup** window updates, prompting the user to choose a system PATH option. The *Add wddcs to the system PATH for all users* option is selected by default:

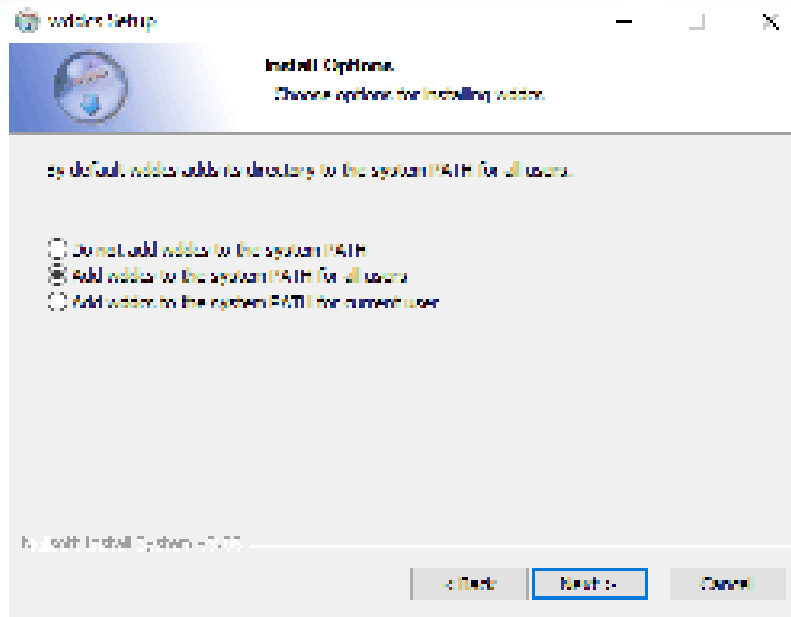


**Step 9:** Click the **Next** button.

The **wddcs Setup** window updates, prompting the user to accept the default installation directory or choose another:

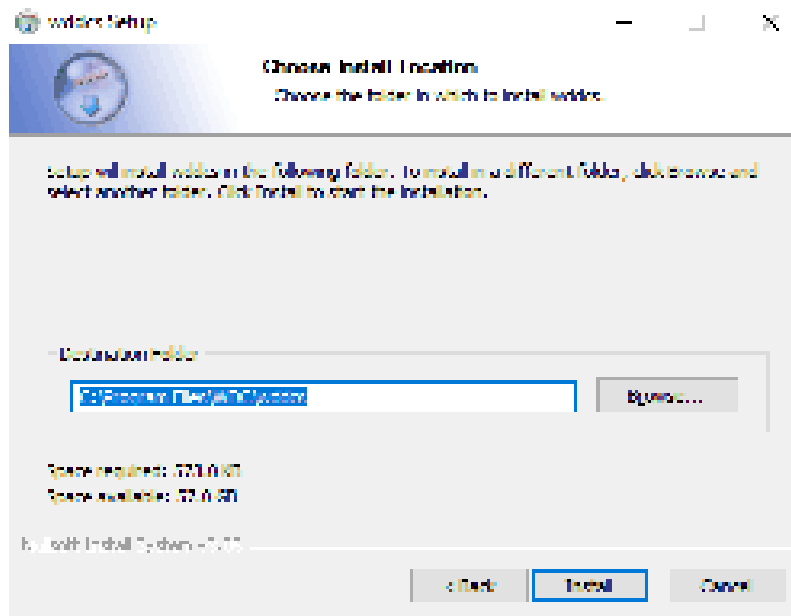


**Step 10:** Click the **Install** button.

The **wddcs Setup** window updates, showing the installation progress:

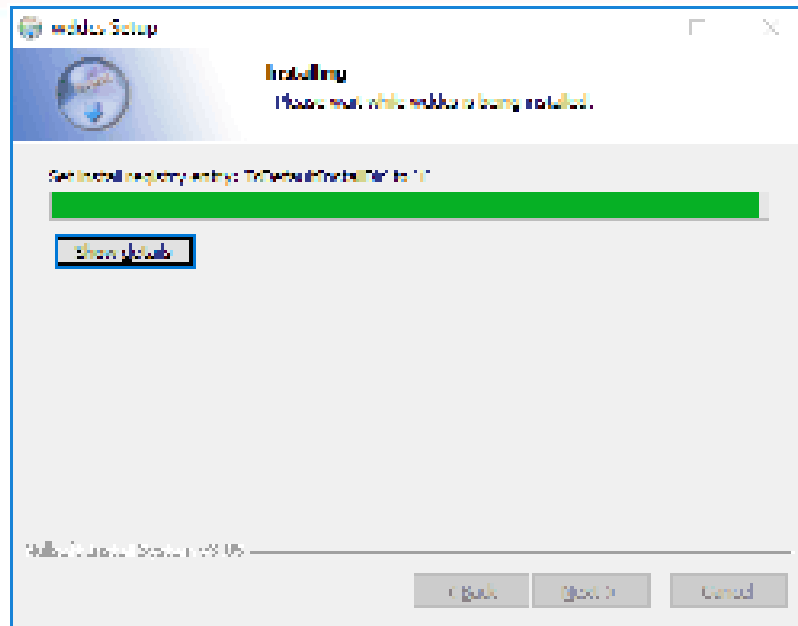

After a few seconds, the **wddcs Setup** window updates again, showing that the installation is complete:

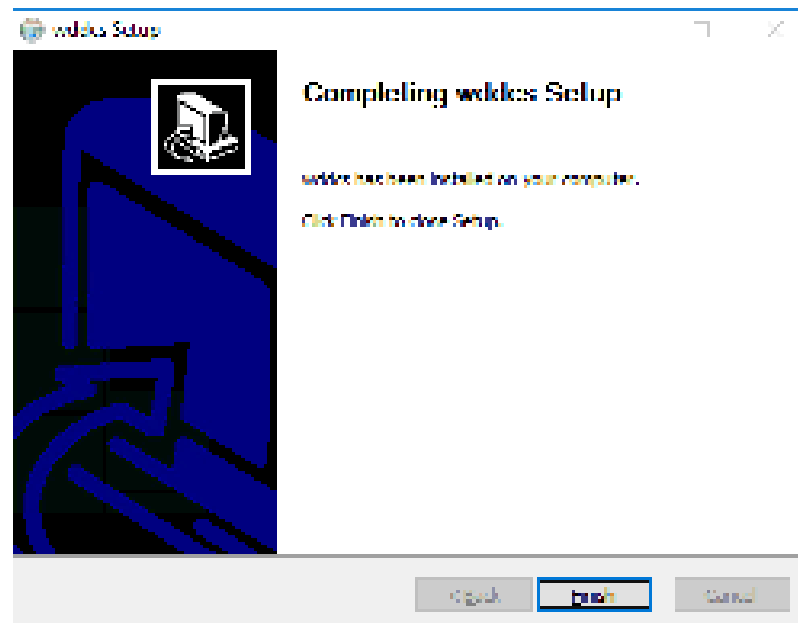

**Step 11:** Click the **Finish** button.

# Commands

This section provides instructions for issuing commands from the WDDCS Tool.

## In This Chapter:

- help.....	22
- diag.....	27
- fw.....	37
- getlog.....	44
- iom.....	61
- rcli.....	63
- show.....	81
- version.....	84
- zone.....	84



**Important:** Because the WDDCS Tool supports both Linux and Windows operating systems, OS-specific command prompts (`#` or `C:\>`), device references (`/dev/sg0` or `SCSI1:4,64,0`), and paths (`/wddcs/v2.1.4.0` or `wddcs\v2.1.4.0`) have been included where command shell outputs are OS-specific; they have been omitted or replaced with generic references (`<device>`, `<path>`, etc.) where outputs apply to both OSs.

## 3.1 help

---

The `wddcs help` command is used to print the usage text (command syntax, operations, arguments, and explanations) for the following WDDCS Tool commands:

- `diag`
- `fw`
- `getlog`
- `help`
- `iom`
- `rcli`
- `show`
- `zone`

The following sections detail the usage text for each of these commands.

### 3.1.1 help diag

The `wddcs help diag` command is used to print the usage text for the `wddcs diag` command.

**Step 1:** Use the `wddcs help diag` command to print the usage text for the `wddcs show` command:

```

wddcs help diag
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Usage:
    diag <identifier>

Options for <identifier>:
    clear-crashevent    clear crash event logs
    clear-eventlog      clear event logs
    nickname            display current nickname diagnostic page
    nickname=<string>   set new nickname (use quotes if name has spaces)
    nickname=           clear any previously set nickname
    reset-enc           reset the enclosure
    reset-iom-a         reset IOM A of the enclosure
    reset-iom-b         reset IOM B of the enclosure
    timestamp           display the enclosure's internal date and time
    timestamp=<value>   set the enclosure's temporary internal date and time
                        <value> must be a 32-bit epoch time value
    autosync-enable     enable auto synchronization feature
    autosync-disable    disable auto synchronization feature

Examples:
    diag nickname=DC2
    diag nickname="DC2 Cage2"

```

### 3.1.2 help fw

The `wddcs help fw` command is used to print the usage text for the `wddcs fw` command.

**Step 1:** Use the `wddcs help fw` command to print the usage text for the `wddcs fw` command:

```

wddcs help fw
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Usage:
    fw activate | reset | status
    fw download* <file> [-nostatdelay]

Options for [argument]:
    download <file>           download microcode with the given binary file
    download_activate <file>  download followed by the activate command
    download_reset <file>     download followed by the IOM reset command
    activate                  activate the previously downloaded firmware
    reset                    reset IOMs
    status                   display the download microcode diagnostic page
0Eh

```

```
-nostatdelay          optional flag to skip the default delay after
a download command
```

The "fw" command requires the user to specify one target device.

Example: `./wddcs /dev/sg0 fw download <file>`

Example: `./wddcs /dev/sg0 fw download_activate <file> -nostatdelay`

or

...

Example: `wddcs SCSI1:4,64,0 fw download <file>`

Example: `wddcs SCSI1:4,64,0 fw download_activate <file> -nostatdelay`

### 3.1.3 help getlog

The `wddcs help getlog` command is used to print the usage text for the `wddcs getlog` command.

**Step 1:** Use the `wddcs help getlog` command to print the usage text for the `wddcs getlog` command:

```
wddcs help getlog
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates
Usage:
    getlog [<identifier> [<identifier>] ...]

Options for <identifier>:
    common          get publicly known logs
    vendor          get vendor specific logs
    system-heavy    get system host logs that cause heavy loads on the
drives
    system-light    get system host logs that cause light load on drives
    system          combination of system-heavy and system-light
    drives          get logs from the attached physical drives (nvme, sas,
sata)
    drives-noprompt same as above but without prompting for user
confirmation
    pack=<path>     combine all requested logs into a single packaged file
                    "=<path>" is optional (saved to the default log dir if
not specified)
    timeout=<sec>   seconds to wait when spawning a process to get logs
    all             includes all of the above identifiers
    all-noprompt    same as above but without prompting for user
confirmation
```

### 3.1.4 help

The `wddcs help` command is used to print the usage text for the `help` command.

**Step 1:** Use the `wddcs help` command to print the usage text for the `help` command:

```
wddcs help
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

wddcs usage:
```

```
wddcs [target [...]] operation [operation argument [...]]
    [target] - device path (ie: /dev/sg1)
                up to 128 targets may be specified
                if no targets are specified, all detected devices are targeted
    operation - operation to execute
    [operation argument] - argument specific to given operation
```

The following operations are supported:

diag	display, set, and clear diagnostic page data
fw	firmware related operations
getlog	capture various types of log data
iom	display and set IOM configuration
rcli	display detailed data about the enclosure and components
show	scan SEP devices and display the product or device data
zone	display and configure zones



**Note:** Using the `wddcs help version` command produces the same output.

### 3.1.5 help iom

The `wddcs help iom` command is used to print the usage text for the `wddcs iom` command.

**Step 1:** Use the `wddcs help iom` command to print the usage text for the `wddcs iom` command:

```
wddcs help iom
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Usage:
    iom [oobm|oobm=<iom>,<ip>,<netmask>,<gateway>]

Arguments:
    oobm          display current OOBM values
    oobm=<args>   set new OOBM values
        <iom>      = [A|B]
        <ip>       = [x.x.x.x]
        <netmask>  = [x.x.x.x]
        <gateway>  = [x.x.x.x]
                   x must be 0-255

    Default is to display current IOM single or dual setting

Example to change IOM A to static addresses:
    iom oobm=A,192.168.0.10,255.255.255.0,192.168.0.1

Example to change IOM B to DHCP:
    iom oobm=B,0.0.0.0,0.0.0.0,0.0.0.0

Example to display current OOBM:
    iom oobm

Example to display if enclosure is set to single or dual IOM:
    iom
```

### 3.1.6 help rcli

The `wddcs help rcli` command is used to print the usage text for the `wddcs rcli` command.

**Step 1:** Use the `wddcs help rcli` command to print the usage text for the `wddcs rcli` command:

```
wddcs help rcli
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Usage:
  rcli <command string>

Arguments:
  <command string>
    Any of the commands allowed by the enclosure firmware.
    Specify in quotes if the command has spaces.
    Maximum command length is 256 characters.

Example:
  rcli "show drives"
```

### 3.1.7 help show

The `wddcs help show` command is used to print the usage text for the `wddcs show` command.

**Step 1:** Use the `wddcs help show` command to print the usage text for the `wddcs show` command:

```
wddcs help show
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Usage:
  show                scan for all enclosures and display the following:
                      product description
                      serial number
                      firmware revision
                      product name
  show handles        display connected drives with slot #, serial number,
capacity,              port address, expander, and OS device handle name
```

### 3.1.8 help zone

The `wddcs help zone` command is used to print the usage text for the `wddcs zone` command.

**Step 1:** Use the `wddcs help zone` command to print the usage text for the `wddcs zone` command:

```
wddcs help zone
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Usage:
```

```
zone config=<value>
zone file=<file>
zone reset
zone status
```

Details:

```
config=<value>  configure zones to the given pre-defined value
config=0       disable zoning
config=<1-3>    pre-defined configuration per product type
                H4102-J:
                  1: 17 drives visible to each host port
                  2: 34 drives visible to each pair of consecutive host
ports (i.e. A1, A2)
                  3: 51 drives visible to each 3x consecutive host ports
(i.e. A1, A2, A3)
                H4060-J:
                  1: 10 drives visible to each host port
                  2: 20 drives visible to each pair of consecutive host
ports (i.e. A1, A2)
                  3: 30 drives visible to each 3x consecutive host ports
(i.e. A1, A2, A3)
file=<file>     send binary config file to the IOM
reset          reset the current IOM
status         display current zone configuration setting
```

The "zone" command requires the user to specify one target device  
Example: `./wddcs /dev/sg0 zone reset`

OR

```
...
Example: wddcs SCSI1:4,64,0 zone reset
```

## 3.2 diag

The `wddcs diag` command is used to display, set, or clear diagnostic page information for the feature or component specified in the command option.

### Options

The following sections provide instructions for using these `diag` command options:

- `clear-crashevent` - clears crash events on all expanders
- `clear-eventlog` - clears all expander event logs
- `nickname` - displays, sets, or clears the enclosure nickname
- `reset-enc` - resets both IOMs in staggered fashion
- `reset-iom-<a|b>` - resets the desired IOM
- `timestamp` - displays or sets the IOM's internal date and time
- `autosync-<enable|disable>` - enables or disables the firmware auto synchronization feature

### Enclosure Support

The `wddcs diag` command and options are supported on the following enclosures:

Command	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
diag	✗	✗	✗	✗	✓	✓	✓
diag clear-crashevent	✓	✗	✗	✓	✓	✓	✓
diag clear-eventlog	✗	✗	✗	✗	✓	✓	✓
diag nickname	✗	✗	✗	✗	✓	✓	✓
diag nickname=<string>	✗	✗	✗	✗	✓	✓	✓
diag nickname=	✗	✗	✗	✗	✓	✓	✓
diag reset-enc	✓	✗	✗	✗	✓	✓	✓
diag reset-iom-<a b>	✗	✗	✗	✓	✓	✓	✗
timestamp	✓	✗	✗	✓	✓	✓	✓
timestamp=<value>	✓	✗	✗	✓	✓	✓	✓
autosync-<enable disable>	✗	✗	✗	✗	✓	✓	✗

### 3.2.1 diag clear-crashevent

The `wddcs <device> diag clear-crashevent` command is used to clear crash event records from all primary and secondary expanders for a given SEP device.

**Step 1:** Use the `wddcs show` command to determine the SEP device handle for the desired enclosure:

```
wddcs show
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
  product : <product_abbreviation>
  serial  : <serial_number>
  firmware: <fw_version>
  name    : <product_name>

...
```

**Step 2:** Use the SEP device handle along with the `wddcs <device> rcli "debug dump"` command to verify the presence of crash event logs for that enclosure:

```
wddcs <device> rcli "debug dump"
```

```

wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>

Total records created: 1

FW Crash(2000-004) Time Stamp: 216744:13:22, Reason: General exception

  General purpose registers
pc    0xc012a2c0    r7    0x00000001    r14    0x00000000    r21
0x00000000
r1    0x9c0979b8    r8    0xc2100000    r15    0x000000c2    r22
0x00000000
r2    0x9c05acb0    r9    0x00000000    r16    0x9c05ac68    r23
0x00000000
r3    0x00000000    r10   0x00000010    r17    0xc2100000    r24
0x00000001
r4    0x9c05acb0    r11   0x00000001    r18    0x00000004    r25
0x00000001
r5    0xc2100000    r12   0xc0129454    r19    0x00000000    r26
0x00000000
r6    0x00000004    r13   0x00100000    r20    0x00000000    r27
0x00000000
gp    0x9c009000    sp    0x9c07f888    fp    0x00000000    ra
0xc00b3c80
  Special registers
Cause 0x80800408    EPC    0xc012a2c0    BadVAddr 0xc2100000    EBase
0x9f041000

CAUSE: TLB Exception.

```

**Step 3:** Use the `wddcs <device> diag clear-crashevent` command to clear the crash event logs:

```

wddcs <device> diag clear-crashevent
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
Commands have been sent to clear the crash logs

```

**Step 4:** Repeat the `wddcs <device> rcli "debug dump"` command to verify that the crash event logs were cleared:

```

wddcs <device> rcli "debug dump"
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
No crash records available

```

### 3.2.2 diag clear-eventlog

The `wddcs <device> diag clear-eventlog` command is used to clear event logs from all primary and secondary expanders for a given SEP device. Clearing event logs prior to troubleshooting is useful for limiting subsequent logs to only those problematic events that were purposefully reproduced.

**Before you begin:**

- The `wddcs <device> diag clear-eventlog` command requires FW version 3000 or later for supported enclosures.

**Step 1:** Use the `wddcs show` command to determine the SEP device handle for the desired enclosure:

```
wddcs show
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
  product : <product_abbreviation>
  serial  : <serial_number>
  firmware: <fw_version>
  name    : <product_name>

...
```

**Step 2:** Use the SEP device handle along with the `wddcs getlog vendor` or `wddcs getlog all` command to capture log data (including event logs) for the device.

**Step 3:** Navigate to the output directory where the log files are stored. This will either be the temporary directory or the directory specified in the `pack=<path>` command option, if used.

**Step 4:** Review the list of event log files and note their file sizes (bolded in the following example):

```
-rw-r--r--. 1 root root 129856 <date> <time> eventlog_exp_0_<device>.bin
-rw-r--r--. 1 root root   160 <date> <time> eventlog_exp_1_<device>.bin
-rw-r--r--. 1 root root   576 <date> <time> eventlog_exp_2_<device>.bin
...
```

**Step 5:** Use the `wddcs <device> diag clear-eventlog` command to clear the event logs:

```
wddcs <device> diag clear-eventlog
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
Commands have been sent to clear the event logs
```

**Step 6:** Repeat the `wddcs getlog vendor` or `wddcs getlog all` command to capture the new event logs.

**Step 7:** Review the list of event log files and note their reduced file sizes (bolded in the following example):

```
-rw-r--r--. 1 root root   64 <date> <time> eventlog_exp_0_<device>.bin
-rw-r--r--. 1 root root   64 <date> <time> eventlog_exp_1_<device>.bin
-rw-r--r--. 1 root root   64 <date> <time> eventlog_exp_2_<device>.bin
...
```

### 3.2.3 diag nickname

The `wddcs <device> diag nickname` command is used to display, set, and clear values of the nickname diagnostic page.

- Step 1:** Use the `wddcs <device> diag nickname` command to view the nickname diagnostic page for a single SEP device within an HGST/WD-developed enclosure:

```
wddcs <device> diag nickname
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
Page id      : 0Fh
Page length  : 2Ch
Generation code : 0h
Nickname status : 00h - No errors
Additional status : 00h
Language code : 0000h
Nickname     :
```

- a. To set the nickname, include the `nickname=<string>` argument. For example:

```
wddcs <device> diag nickname="Cloud DataCenter Rack1"
wddcs v2.1.4.0

Device: <device>
Enclosure nickname has been set to: Cloud DataCenter Rack1
```

Executing the `wddcs <device> diag nickname` command again will show that the nickname has been set to the specified value:

```
wddcs <device> diag nickname
wddcs v2.1.4.0

Device: <device>
Page id      : 0Fh
Page length  : 2Ch
Generation code : 0h
Nickname status : 00h - No errors
Additional status : 00h
Language code : 0000h
Nickname     : Cloud DataCenter Rack1
```

- b. To clear the nickname, include the `nickname=` argument without specifying a value. For example:

```
wddcs <device> diag nickname=
wddcs v2.1.4.0

Device: <device>
Enclosure nickname has been cleared
```

Executing the `wddcs <device> diag nickname` command again will show that the nickname has been cleared:

```
wddcs <device> diag nickname
wddcs v2.1.4.0

Device: <device>
Page id      : 0Fh
Page length  : 2Ch
Generation code : 0h
```

```
Nickname status      : 00h - No errors
Additional status    : 00h
Language code       : 0000h
Nickname            :
```

### 3.2.4 diag reset-enc

The `wddcs <device> diag reset-enc` command is used to reset both IOMs in a staggered fashion.

#### Before you begin:

- The order of the IOM resets will depend on which IOM device handle is specified in the reset command. The specified IOM will be the last device to reset.

**Step 1:** Use the `wddcs iom` command to determine the SEP device handle and IOM identifier for both IOMs:

```
wddcs iom
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
Dual IOM operation
IOM B

Device: <device>
Dual IOM operation
IOM A
```

**Step 2:** Use the `wddcs <device> diag reset-enc` command to reset both IOMs in a staggered fashion. The IOM device specified in the command will be the last device to be reset:

```
wddcs <device> diag reset-enc
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
Commands have been sent to reset the enclosure
```

**Step 3:** If needed, use the `wddcs iom` command again to verify which IOM is being reset. In the following example, the enclosure reports **Dual IOM operation**, but the IOM being reset doesn't appear in the output:

```
wddcs iom
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
Dual IOM operation
IOM A
```

When both IOMs have finished resetting, the `wddcs iom` command will display both devices again:

```
wddcs iom
```

```
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
Dual IOM operation
IOM B

Device: <device>
Dual IOM operation
IOM A
```

### 3.2.5 diag reset-iom-<a|b>

The `wddcs <device> diag reset-iom-<a|b>` command is used to reset an IOM.

**Step 1:** Use the `wddcs iom` command to determine the SEP device handle and IOM identifier for the desired IOM:

```
wddcs iom
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
Dual IOM operation
IOM B

Device: <device>
Dual IOM operation
IOM A
```

**Step 2:** Use the appropriate reset command (either `wddcs <device> diag reset-iom-a` or `wddcs <device> diag reset-iom-b`) with the device handle to reset the IOM:

```
wddcs <device> diag reset-iom-b
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
Commands have been sent to reset the IOM
```

**Step 3:** If needed, use the `wddcs iom` command again to verify that the IOM is being reset. In the following example, the enclosure reports **Dual IOM operation**, but the IOM being reset doesn't appear in the output:

```
wddcs iom
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
Dual IOM operation
IOM A
```

When the IOM has finished resetting, the `wddcs iom` command will display both devices again:

```
wddcs iom
wddcs v2.1.4.0
```

```
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Dual IOM operation
IOM B

Device: <device>
Dual IOM operation
IOM A
```

### 3.2.6 diag timestamp

The `wddcs <device> diag timestamp` command is used to display or set an IOM's internal date and time.



**Note:** If the OOBM is connected to a network and able to retrieve the date from an NTP server, the OOBM will set the timestamp automatically. The `wddcs <device> diag timestamp` feature is intended for setting the timestamp when the OOBM is unable to retrieve the date.

**Step 1:** Use the `wddcs show` command to determine the SEP device handles for each IOM in the enclosure:

```
wddcs show
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
  product : <product>
  serial   : <serialnumber>
  firmware: <version>
  name     : <productname>

...

```

**Step 2:** Use the `wddcs <device> diag timestamp` command, along with the SEP device handle for an IOM, to view that IOM's internal date and time:

```
wddcs <device> diag timestamp
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
  Microseconds (RTC)      = 00047E7E1204C0E5h
  Seconds (Epoch)        = 1264979840 (4B660F80h)
  Local date (yyyy/mm/dd) = 2010/01/31
  Local time (24hh:mm:ss) = 16:17:20

```

- a. To set the timestamp, include the `=<value>` argument. The value must be a 32-bit epoch time value. For example:

```
wddcs <device> diag timestamp=1618591800
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>

```

```
The time stamp has been set to 0x6079C038
```

Executing the `wddcs <device> diag timestamp` command again will show that the timestamp has been set to the specified value:

```
wddcs <device> diag timestamp
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
  Microseconds (RTC)      = 0005C019C5D2837Dh
  Seconds (Epoch)       = 1618591809 (6079C041h)
  Local date (yyyy/mm/dd) = 2021/04/16
  Local time (24hh:mm:ss) = 10:50:09
```

**Step 3:** If needed, repeat these steps to display or modify the other IOM's internal date and time.

### 3.2.7 diag autosync-enable

The `wddcs <device> diag autosync-enable` command is used to enable the firmware autosync feature of an enclosure.

**Step 1:** Use the `wddcs show` command to determine the SEP device handles for each IOM in the enclosure:

```
wddcs show
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
  product : <product>
  serial   : <serialnumber>
  firmware: <version>
  name     : <productname>

...
```

**Step 2:** Use the `wddcs <device> rcli "show vpd"` command, along with one of the IOM device handles, to view the vital product data for the enclosure and confirm that the autosync feature is currently **disabled**. The enclosure configuration bits will provide this information:

```
wddcs <device> rcli "show vpd"
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
...
Encl:Config      = x5A00000000000000
...
```



**Note:** If the highlighted bits from this example are set to `08` on the enclosure, the autosync feature is already **enabled**.

**Step 3:** Use the `wddcs <device> diag autosync-enable` command, along with one of the IOM device handles, to enable the autosync feature:

```
wddcs <device> diag autosync-enable
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
Auto synchronization has been enabled
```

- Step 4:** Repeat the `wddcs <device> rcli "show vpd"` command to view the enclosure configuration bits and verify that the autosync feature was enabled:

```
wddcs <device> rcli "show vpd"
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
...
  Encl:Config          = x5A0000000000000800
...
```

**Result:** The autosync feature is now enabled.

### 3.2.8 diag autosync-disable

The `wddcs <device> diag autosync-disable` command is used to disable the firmware autosync feature of an enclosure.

- Step 1:** Use the `wddcs show` command to determine the SEP device handles for each IOM in the enclosure:

```
wddcs show
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
  product : <product>
  serial   : <serialnumber>
  firmware: <version>
  name     : <productname>

...
```

- Step 2:** Use the `wddcs <device> rcli "show vpd"` command, along with one of the IOM device handles, to view the vital product data for the enclosure and confirm that the autosync feature is currently **enabled**. The enclosure configuration bits will provide this information:

```
wddcs <device> rcli "show vpd"
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
...
Encl:Config          = x5A0000000000000800
...
```



**Note:** If the highlighted bits from this example are set to 00 on the enclosure, the autosync feature is already **disabled**.

**Step 3:** Use the `wddcs <device> diag autosync-disable` command, along with one of the IOM device handles, to disable the autosync feature:

```
wddcs <device> diag autosync-disable
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Auto synchronization has been disabled
```

**Step 4:** Repeat the `wddcs <device> rcli "show vpd"` command to view the enclosure configuration bits and verify that the autosync feature was disabled:

```
wddcs <device> rcli "show vpd"
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
...
Encl:Config      = x5A0000000000000000
...
```

**Result:** The autosync feature is now disabled.

## 3.3 fw

The `wddcs fw` command—along with its options—is used to perform firmware-related operations for HGST/WD-developed enclosures.

### Options

The following sections provide instructions for using each of these command options:

- `download <file>` – download microcode with the given binary file, or bundle, depending on the enclosure
- `download_activate <file>` – download, followed by the activate command
- `download_reset <file>` – download, followed by the reset command
- `activate` – activate the previously-downloaded firmware
- `reset` – reset the IOM(s) after a firmware download command has completed successfully
- `status` – display the download microcode diagnostic page 0Eh
- `-nostatdelay` – optional flag to skip the default delay after a download command



**Note:** All of the `wddcs fw` command options require the user to specify a single target SEP device. For example:

```
wddcs <device> fw activate
```



**Important:** The `wddcs fw` command options are intended to be used in different sequences or combinations depending on various factors, such as enclosure type and maintenance availability. To choose the appropriate process, see [Choosing the Correct Firmware Upgrade Process](#) (page 90).

## Support

The `wddcs fw` command and options are supported on the following enclosures:

Command	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
<code>fw download</code>	✓	✓	✓	✓	✓	✓	✓
<code>fw download_activate</code>	✓	✓	✓	✓	✓	✓	✓
<code>fw download_reset</code>	✗	✗	✗	✗	✓	✓	✓
<code>fw activate</code>	✓	✓	✓	✓	✓	✓	✓
<code>fw reset</code>	✗	✗	✗	✗	✓	✓	✓
<code>fw status</code>	✓	✓	✓	✓	✓	✓	✓
<code>-nostatdelay</code>	✗	✗	✗	✗	✓	✓	✓

### 3.3.1 fw download

The `wddcs <device> fw download <file>` command is used to execute a firmware download of a SEP FW binary file—or a SEP /OOBM FW bundle—to a single SEP device within an HGST/WD-developed enclosure.

#### Before you begin:

- The `wddcs <device> fw download <file>` command requires availability of an SEP FW file—or if applicable, an SEP/OOBM FW bundle—on the host in question.
- The `wddcs <device> fw download <file>` command requires—and will only accept—a single SEP handle.
- If the download command fails as a result of an SEP download failure, the `wddcs <device> fw download <file>` command should come back to the prompt immediately.

**Step 1:** Use the `wddcs <device> fw download <file>` command to perform a firmware download to a single SEP device within an HGST/WD-developed enclosure. For example:

```
wddcs <device> fw download <file>
```



**Note:** There is a default fifteen (15) **minute** delay before the WDDCS Tool begins checking SES page 0xe for the download completion status at fifteen (15) **second** intervals. To skip the initial fifteen (15) minute delay, use the `-nostatdelay` flag. However, be aware that skipping the default delay may result in intermittent status errors.

```
wddcs <device> fw download <file> -nostatdelay
```

The user is prompted to either issue the `fw activate` or `fw reset` command when ready. The recommended commands will vary, depending on the product type:

```
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Sent <#> segment(s)
Download has finished to the SEP, please wait.
The completion status will be checked after 15 minutes.

Download status complete (0x11)
Firmware was downloaded successfully
When ready, please issue the "fw activate" or "fw reset" command for the new
firmware to take effect
```

### 3.3.2 fw download\_activate

The `wddcs <device> fw download_activate <file>` command is used to execute a firmware download of a SEP FW binary file—or a SEP/OOBM FW bundle—to a single SEP device within an HGST/WD-developed enclosure and subsequently activate the downloaded firmware.

#### Before you begin:

- This command requires availability of an SEP FW file—or if applicable, an SEP/OOBM FW bundle—on the host in question.
- The `wddcs <device> fw download_activate <file>` command requires—and will only accept—a single SEP handle.
- If the download command fails as a result of an SEP download failure, the `wddcs <device> fw download_activate <file>` command should come back to the prompt immediately.

**Step 1:** Use the `wddcs <device> fw download_activate <file>` command to perform a firmware download to a single SEP device within an HGST/WD-developed enclosure and subsequently activate the downloaded firmware. For example:

```
wddcs <device> fw download_activate <file>
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Sent <#> segment(s)
Download has finished to the SEP, please wait.
The completion status will be checked after 15 minutes.

Download status complete (0x11)
Firmware was downloaded successfully
```

Starting the activation process...

This method of firmware activation will be disruptive.  
Please consider activating firmware offline to avoid any disruptions to I/O.

If the platform configuration is based on dual IOMs, the IOM(s) in question will go offline for a period of time while the update is finalized.  
If the platform configuration is based on a single IOM, the enclosure will go offline for a period of time while the update is finalized.

If you still prefer to continue with this method, press 'Y' or 'y':

The WDDCS Tool notifies the user that the IOM or enclosure will go offline.

**Step 2:** Enter Y or y to proceed:

```
y
Firmware activation command was sent successfully
```

### 3.3.3 fw download\_reset

The `wddcs <device> fw download_reset <file>` command is used to execute a firmware download of a SEP FW binary file—or a SEP/OOBM FW bundle—to a single SEP device within an HGST/WD-developed enclosure and subsequently reset the IOMs for that device.

#### Before you begin:

- This command requires availability of an SEP FW file—or if applicable, an SEP/OOBM FW bundle—on the host in question.
- The `wddcs <device> fw download_reset <file>` command requires—and will only accept—a single SEP handle.
- If the download command fails as a result of an SEP download failure, the `wddcs <device> fw download_reset <file>` command should come back to the prompt immediately.

**Step 1:** Use the `wddcs <device> fw download_reset <file>` command to perform a firmware download to a single SEP device within an HGST/WD-developed enclosure and subsequently reset the IOMs for that device. For example:

```
wddcs <device> fw download_reset <file>
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates
```

```
Device: <device>
Sent <#> segment(s)
Download has finished to the SEP, please wait.
The completion status will be checked after 15 minutes.
```

```
Download status complete (0x11)
Firmware was downloaded successfully
Starting the reset process...
```

Please ensure both paths to each drive are available before proceeding with the reset of the 1st IOM to ensure that at least one path to each drive will be available during the IOM reset to activate firmware.  
The IOM will go offline for a period of time while the update is finalized.  
Press 'Y' or 'y' when ready to continue:

The WDDCS Tool notifies the user that the first IOM will go offline.

**Step 2:** Enter `Y` or `y` to proceed:

```
Y
1st IOM has been reset

Please ensure both paths to each drive are available before proceeding
with the reset of the 2nd IOM to ensure that at least one path to each drive
will be available during the IOM reset to activate firmware.
The IOM will go offline for a period of time while the update is finalized.
Press 'Y' or 'y' when ready to continue:
```

The WDDCS Tool notifies the user that the first IOM was reset and that the second IOM will go offline.

**Step 3:** Enter `Y` or `y` to proceed:

```
Y
2nd IOM has been reset

IOM was reset successfully
```

The WDDCS Tool notifies the user that the second IOM was reset.

### 3.3.4 fw activate

The `wddcs <device> fw activate` command is used to activate previously-downloaded firmware on a single SEP device within an HGST/WD-supported enclosure.

#### Before you begin:

- This task requires that an SEP FW binary file or SEP/OOBM FW bundle file has already been successfully downloaded to the IOM/Enclosure in question.
- The `wddcs <device> fw activate` command requires—and will only accept—a single SEP handle.
- For the 2U24 Flash Storage Platform and the 4U60 G1 Storage Enclosure:
  - The `wddcs <device> fw activate` command must be run **for each IOM within a chassis**. This also assumes that the method used to download the firmware involves using mode 0xE (download microcode with offsets, save, and defer activate) instead of mode 0x7 (download microcode with offsets, save, and activate).

**Step 1:** Use the `wddcs <device> fw activate` command to activate previously-downloaded firmware on a single SEP device within an HGST/WD-supported enclosure. For example:

```
wddcs <device> fw activate
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
This method of firmware activation will be disruptive.
Please consider activating firmware offline to avoid any disruptions to I/O

If the platform configuration is based on dual IOMs, the IOM(s) in question
will go offline for a period of time while the update is finalized.
If the platform configuration is based on a single IOM, the enclosure
will go offline for a period of time while the update is finalized.
```

```
If you still prefer to continue with this method, press 'Y' or 'y':
```

The user is notified that the IOM or enclosure will go offline.

**Step 2:** Enter Y or y to continue:

```
Y
Firmware activation command was sent successfully
```

### 3.3.5 fw reset

The `wddcs <device> fw reset` command is used to sequentially reset each IOM on an HGST/WD-developed enclosure after a successful firmware download.

**Step 1:** Use the `wddcs <device> fw reset` command to sequentially reset each IOM on an HGST/WD-developed enclosure after a successful firmware download. For example:

```
wddcs <device> fw reset
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Please ensure both paths to each drive are available before proceeding
with the reset of the 1st IOM to ensure that at least one path to each drive
will be available during the IOM reset to activate firmware.
The IOM will go offline for a period of time while the update is finalized.
Press 'Y' or 'y' when ready to continue:
```

The user is prompted to ensure that both paths to each drive are available before resetting the first IOM.

**Step 2:** Enter Y or y to continue:

```
Y
1st IOM has been reset

Please ensure both paths to each drive are available before proceeding
with the reset of the 2nd IOM to ensure that at least one path to each drive
will be available during the IOM reset to activate firmware.
The IOM will go offline for a period of time while the update is finalized.
Press 'Y' or 'y' when ready to continue:
```

The user is notified that the first IOM was reset—thereby activating the firmware—and is then prompted to ensure that both paths to each drive are available before resetting the second IOM.

**Step 3:** Enter Y or y to continue:

```
Y
2nd IOM has been reset

IOM was reset successfully
```

The user is notified that the second IOM was reset and that the IOM reset process was successful.

### 3.3.6 fw status

The `wddcs <device> fw status` command is used to check the firmware download status for a SEP binary file or a SEP/OOBM bundle, either during the download process or afterward, or it will notify the user that no download is in progress.

#### Before you begin:

- The `wddcs <device> fw status` command must be run in a second shell, separate from the one running the `wddcs <device> fw download <file>` command.

**Step 1:** Use the `wddcs <device> fw status` command, while the firmware download is in progress, to check the status of the download.



**Important:** The first status command may return incorrect information. Run the command **at least twice** to get an accurate status.

```
wddcs <device> fw status
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Page id          : 0Eh
Page length      : 14h
Generation code   : 0h
Download status : 03h -Updating nonvolatile storage with deferred microcode
Additional status : 0h
Download max size : 19FFEAh (1703914)
Buffer id        : 0h
Buffer offset     : 0h
```

**Step 2:** Use the `wddcs <device> fw status` command, after the firmware has been downloaded, to verify the status of the download. For example:

```
wddcs <device> fw status
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Page id          : 0Eh
Page length      : 14h
Generation code   : 0h
Download status : 11h -Download completed. Requires hard reset or power on
Additional status : 0h
Download max size : 19FFEAh (1703914)
Buffer id        : 0h
Buffer offset     : 0h
```

**Step 3:** Using the `wddcs <device> fw status` command, when no download is in progress, returns the following:

```
wddcs <device> fw status
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
```

```

Page id           : 0Eh
Page length       : 14h
Generation code    : 0h
Download status  : 00h -No download operation is in progress
Additional status  : 0h
Download max size  : 19FFEAh (1703914)
Buffer id         : 0h
Buffer offset      : 0h

```

## 3.4 getlog

The `wddcs getlog` command—along with its options—is used to capture various types of log data for HGST/WD-developed enclosures.

### Options

The following sections provide instructions for using each of these command options:

- `common` – retrieves publicly-known logs
- `vendor` – retrieves vendor-specific logs
- `system-heavy` – retrieves system host logs that cause heavy loads on the drives
- `system-light` – retrieves system host logs that cause light loads on the drives
- `system` – a combination of `system-heavy` and `system-light`
- `drives` – retrieve logs from the attached physical drives (NVMe, SAS, SATA).
- `pack=<path>` – in addition to individual output files, combines all requested logs into a single, packaged file in the specified path. Intended to be used with the other options listed here.
  - If `pack=<path>` is not specified, the file will be saved to the temporary directory on the host in question: `/tmp` (for Linux) or `C:\Users\<username>\AppData\Local\Temp\` (for Windows).
  - For Windows, the `pack=<path>` option requires PowerShell 5+. For later versions, the system will print `Packing not done: requires PowerShell version 5 or above`. On Windows Server, upgrading to Windows Management Framework 5.x will provide PowerShell 5.x.
- `timeout=<sec>` – specifies the maximum time, in seconds, before the WDDCS Tool moves on to the next command for retrieving data. The default is sixty (60) seconds.
- `all` – includes all of the above identifiers



**Note:** Before collecting log data, installation of `sg3_utils` (version 1.42+) is **required**, and `smp_utils` (version 0.98+) is **recommended**. These utilities may be downloaded from the following locations:

- [http://sg.danny.cz/sg/sg3\\_utils.html](http://sg.danny.cz/sg/sg3_utils.html)
- [http://sg.danny.cz/sg/smp\\_utils.html](http://sg.danny.cz/sg/smp_utils.html)

### 3.4.1 getlog common

The `wddcs getlog common` command is used to capture `sg_ses` and `sg_inq` info for all SEP devices within HGST/WD-developed enclosures.

**Before you begin:**

- Unless the `pack=<path>` option is used, the output directory and files will be saved in the temporary directory on the host in question.
- The name of the output directory will include the host name and timestamp (when the command was executed), for traceability.
- The output files will be placed into a subdirectory named `ses`.
- The name of the output files will include the SEP device sg handle, to denote which device was queried.

The `wddcs getlog common` command will capture the following information (listed by enclosure type):

**Table 5:** Enclosure Information Captured by the `getlog common` Command

	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
<b>SES Pages</b>							
0x0	✓	✓	✓	✓	✓	✓	✓
0x1	✓	✓	✓	✓	✓	✓	✓
0x2	✓	✓	✓	✓	✓	✓	✓
0x3	✓	✓	✓	✓	✓	✓	✓
0x5	✓	✓	✓	✓	✓	✓	✓
0x7	✓	✓	✓	✓	✓	✓	✓
0xA	✓	✓	✓	✓	✓	✓	✓
Join	✓	✓	✓	✓	✓	✓	✓
<b>SG_INQ</b>							
SG INQ	✓	✓	✓	✓	✓	✓	✓
SG INQ Hex	✓	✓	✓	✓	✓	✓	✓
SG INQ 0x83	✓	✓	✓	✓	✓	✓	✓

**Step 1:** Use the `wddcs getlog common` command to retrieve the SES pages and SG\_INQ info for all SEP devices within HGST/WD-developed enclosures:

Example of Linux output:

```
# wddcs getlog common
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates
```

```

Device: /dev/sg3
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
page_00h_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
page_01h_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
page_02h_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
page_03h_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
page_05h_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
page_07h_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
page_0Ah_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
ses_join_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/sg_inq_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
sg_inq_hex_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
sg_inq_page_83h_sg3.txt
...

```

Example of Windows output:

```

C:\> wddcs getlog common
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: SCSI4:0,35,0
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\page_00h_scsi4_0-35-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\page_01h_scsi4_0-35-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\page_02h_scsi4_0-35-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\page_03h_scsi4_0-35-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\page_05h_scsi4_0-35-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\page_07h_scsi4_0-35-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\page_0Ah_scsi4_0-35-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\ses_join_scsi4_0-35-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\sg_inq_scsi4_0-35-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\sg_inq_hex_scsi4_0-35-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses
\sg_inq_page_83h_scsi4_0-35-0.txt
...

```

- a. To limit the results to a single SEP device, include at least one device handle for the enclosure. For example:

```
wddcs <device> getlog common
```

- b. To combine the logs into a single, packaged file, include the **pack** option and specify the target location for the file by including **=<path>**. For example:

```
wddcs <device> getlog common pack=<path>
```

- c. To specify a maximum wait time for each subsequent log retrieval issued by the getlog command, include the **timeout** option and specify the number of seconds to wait by including **=<sec>**. For example:

```
wddcs <device> getlog common pack=<path> timeout=<sec>
```

### 3.4.2 getlog vendor

The `wddcs getlog vendor` command is used to capture vendor-specific log information for all SEP devices within specific HGST/WD-developed enclosures.

#### Before you begin:

- Unless the **pack=<path>** option is used, the output directory and files will be saved in the temporary directory on the host in question.
- The name of the output directory will include the host name and timestamp (when the command was executed), for traceability.
- The output files will be placed into the subdirectories named **ses** and **jbodlogs**.
- The name of the output files will include the SEP device handle, to denote which device was queried.

The `wddcs getlog vendor` command will capture the following vendor-related information (listed by enclosure type):

**Table 6:** Vendor Information Captured by the `getlog vendor` Command

	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
<b>SES Pages</b>							
0xEA	✓	✗	✗	✓	✓	✓	✓
0xEB	✓	✗	✗	✗	✗	✗	✗
0xED	✓	✗	✗	✓	✓	✓	✓
0x85	✓	✗	✗	✗	✗	✗	✗
0x87	✓	✗	✗	✗	✗	✗	✗
0x95	✓	✗	✗	✗	✗	✗	✗

	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
0x97	✓	✗	✗	✗	✗	✗	✗
0x17	✓	✗	✗	✗	✓	✓	✓
<b>RCLI Commands</b>							
bundle_log.tgz	✗	✗	✗	✗	✓	✓	✓
debug_dump	✓	✗	✗	✓	✓	✓	✓
device_handles	✗	✗	✗	✗	✓	✓	✓
err_cnts 0-35 read	✓	✗	✗	✓	✗	✗	✗
err_cnts 0-47 read	✗	✗	✗	✗	✓	✓	✓
err_cnts 36-67 read	✓	✗	✗	✗	✗	✗	✗
gpio	✓	✗	✗	✓	✓	✓	✓
i2c read fpga port 1	✗	✗	✗	✗	✓	✓	✓
i2c read fpga port 2	✗	✗	✗	✗	✓	✓	✓
i2c read fpga port 3	✗	✗	✗	✗	✓	✓	✓
i2c read fpga port 4	✗	✗	✗	✗	✓	✓	✓
i2c scan	✓	✗	✗	✓	✓	✓	✓
iom ...	✗	✗	✗	✗	✗	✗	✗
phyinfo	✓	✗	✗	✓	✓	✓	✓
phyinfo buffer	✓	✗	✗	✓	✓	✓	✓

	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
qinfo	✓	✗	✗	✓	✓	✓	✓
rmt debug dump	✓	✗	✗	✗	✗	✗	✗
rmt err_cnts 0-35 read	✓	✗	✗	✗	✗	✗	✗
rmt err_cnts 36-67 read	✓	✗	✗	✗	✗	✗	✗
rmt phyinfo	✓	✗	✗	✗	✗	✗	✗
rmt phyinfo buffer	✓	✗	✗	✗	✗	✗	✗
rmt qinfo	✓	✗	✗	✗	✗	✗	✗
rmt show phys	✓	✗	✗	✗	✗	✗	✗
rmt show threads	✓	✗	✗	✗	✗	✗	✗
rmt status sas_phy	✓	✗	✗	✗	✗	✗	✗
secl debug dump	✗	✗	✗	✓	✓	✓	✓
secl err_cnts 0-35 read	✗	✗	✗	✓	✗	✗	✗
secl err_cnts 0-60 read	✗	✗	✗	✗	✓	✓	✓
secl err_cnts 36-67 read	✗	✗	✗	✗	✗	✗	✗
secl phyinfo	✗	✗	✗	✓	✓	✓	✓
secl phyinfo buffer	✗	✗	✗	✓	✓	✓	✓
secl qinfo	✗	✗	✗	✓	✓	✓	✓

	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
sec1 show phys	✗	✗	✗	✓	✓	✓	✓
sec1 show threads	✗	✗	✗	✓	✓	✓	✓
sec1 status sas_phy	✗	✗	✗	✓	✓	✓	✓
sec2 debug dump	✗	✗	✗	✓	✓	✓	✓
sec2 err_cnts 0-35 read	✗	✗	✗	✓	✗	✗	✗
sec1 err_cnts 0-60 read	✗	✗	✗	✗	✓	✓	✓
sec2 err_cnts 36-67 read	✗	✗	✗	✗	✗	✗	✗
sec2 phyinfo	✗	✗	✗	✓	✓	✓	✓
sec2 phyinfo buffer	✗	✗	✗	✓	✓	✓	✓
sec2 qinfo	✗	✗	✗	✓	✓	✓	✓
sec2 show phys	✗	✗	✗	✓	✓	✓	✓
sec2 show threads	✗	✗	✗	✓	✓	✓	✓
sec2 status sas_phy	✗	✗	✗	✓	✓	✓	✓
show ac	✓	✗	✗	✓	✓	✓	✓
show autosync	✗	✗	✗	✗	✓	✓	✗
show cable	✗	✗	✗	✗	✓	✓	✓
show drives	✓	✗	✗	✓	✓	✓	✓

	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
show drives high	✓	✗	✗	✓	✓	✓	✓
show drives low	✓	✗	✗	✓	✓	✓	✓
show dual	✗	✗	✗	✓	✓	✓	✓
show enc	✗	✗	✗	✓	✓	✓	✓
show gpio	✓	✗	✗	✓	✓	✓	✓
show hosts	✓	✗	✗	✓	✓	✓	✓
show le	✓	✗	✗	✓	✓	✓	✓
show phys	✓	✗	✗	✓	✓	✓	✓
show sensor	✓	✗	✗	✓	✓	✓	✓
show ses	✓	✗	✗	✓	✓	✓	✓
show thermon	✓	✗	✗	✓	✓	✓	✓
show threads	✓	✗	✗	✓	✓	✓	✓
show vpd	✗	✗	✗	✓	✓	✓	✓
status sas_phy	✓	✗	✗	✓	✓	✓	✓
wddcs_iom.txt	✓	✗	✗	✓	✓	✓	✓
wddcs_show.txt	✓	✗	✗	✓	✓	✓	✓
zonecfg	✗	✗	✗	✓	✓	✓	✓

**E6 Logs**

	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
E6 Console Log Capture	✗	✗	✗	✗	✓	✓	✓
E6 Crash Log Expander 1 Capture	✗	✗	✗	✗	✓	✓	✓
E6 Crash Log Expander 2 Capture	✗	✗	✗	✗	✓	✓	✓
E6 Crash Log Expander 3 Capture	✗	✗	✗	✗	✓	✓	✓
E6 Event Log Expander 1 Capture	✗	✗	✗	✗	✓	✓	✓
E6 Event Log Expander 2 Capture	✗	✗	✗	✗	✓	✓	✓
E6 Event Log Expander 3 Capture	✗	✗	✗	✗	✓	✓	✓

**Step 1:** Use the `wddcs getlog vendor` command to capture vendor-specific log information for all SEP devices within specific HGST/WD-developed enclosures. For example:



**Note:** Actual captured files may vary, based on the enclosures attached to the host in question.

Example of Linux output:

```
# wddcs getlog vendor
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: /dev/sg3
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
page_EAh_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
page_EDh_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
page_17h_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/jbodlogs/
i2c_scan_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/jbodlogs/
show_gpio_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/jbodlogs/
show_enc_sg3.txt
...
```

Example of Windows output:

```

C:\> wddcs getlog vendor
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: SCSI4:0,35,0
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\page_EAh_scsi4_0-35-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\page_EDh_scsi4_0-35-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\page_17h_scsi4_0-35-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\jbodlogs
\consolelog_exp_0_scsi4_0-35-0.bin
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\jbodlogs
\consolelog_exp_1_scsi4_0-35-0.bin
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\jbodlogs
\consolelog_exp_2_scsi4_0-35-0.bin
...

```

- a. To limit the results to a single SEP device, include at least one device handle for the enclosure. For example:

```
wddcs <device> getlog vendor
```

- b. To combine the logs into a single, packaged file, include the **pack** option. In addition, specify the target location for the file by including **=<path>**. For example:

```
wddcs <device> getlog vendor pack=<path>
```

- c. To specify a maximum wait time for each subsequent log retrieval issued by the getlog command, include the **timeout** option and specify the number of seconds to wait by including **=<sec>**. For example:

```
wddcs <device> getlog vendor pack=<path> timeout=<sec>
```

### 3.4.3 getlog system-heavy

The `wddcs getlog system-heavy` command is used to capture a smaller subset of host data than the `wddcs getlog system` command; it includes only the operations that cause heavy system load and excludes all others.

#### Before you begin:

- Unless the **pack=<path>** option is used, the output directory and files will be saved in the temporary directory on the host in question.
- The name of the output directory will include the host name and timestamp (when the command was executed), for traceability.
- The output files will be placed into the following subdirectories:
  - For Linux - **disks**, **system**, and **system/lvm**
  - For Windows - **hostlogs**

- The name of the output files will include the SEP device handle, to denote which device was queried.

**Step 1:** Use the `wddcs getlog system-heavy` command to capture the host data:

Example of Linux output:

```
# wddcs getlog system-heavy
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/disks
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/system
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/system/lvm
```

Example of Windows output:

```
C:\> wddcs getlog system-heavy
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Created files in C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\hostlogs
```

- To limit the results to a single SEP device, include at least one device handle for the enclosure. For example:

```
wddcs <device> getlog system-heavy
```

- To combine the logs into a single, packaged file, include the `pack` option. In addition, specify the target location for the file by including `=<path>`. For example:

```
wddcs <device> getlog system-heavy pack=<path>
```

- To specify a maximum wait time for each subsequent log retrieval issued by the `getlog` command, include the `timeout` option and specify the number of seconds to wait by including `=<sec>`. For example:

```
wddcs <device> getlog system-heavy pack=<path> timeout=<sec>
```

### 3.4.4 getlog system-light

The `wddcs getlog system-light` command is used to capture a smaller subset of host data than the `wddcs getlog system` command; it includes operations that cause a light system load and excludes all others.

#### Before you begin:

- Unless the `pack=<path>` option is used, the output directory and files will be saved in the temporary directory on the host in question.
- The name of the output directory will include the host name and timestamp (when the command was executed), for traceability.
- The output files will be placed into the following subdirectories:
  - For Linux - `disks`, `logs`, `jbodlogs`, `proc`, `ses`, `smp`, `system`, and `system/lvm`
  - For Windows - `disks`, `hostlogs`, and `ses`

- The name of the output files will include the SEP device handle, to denote which device was queried.

**Step 1:** Use the `wddcs getlog system-light` command to capture the host data:



**Important:** This function may take up a large amount of space in the temporary directory, which could affect the root file system. Please ensure the file system has enough space to support this operation. Several megabytes of data may be captured, depending on the number of drives and enclosures attached to the host in question.

Example of Linux output:

```
# wddcs getlog system-light
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/disks
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/system
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/system/lvm
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/proc
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/logs
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/smp
```

Example of Windows output:

```
C:\> wddcs getlog system-light
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Created files in C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\disks
Created files in C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\hostlogs
Created files in C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses
```

- To limit the results to a single SEP device, include at least one device handle for the enclosure. For example:

```
wddcs <device> getlog system-light
```

- To combine the logs into a single, packaged file, include the `pack` option. In addition, specify the target location for the file by including `=<path>`. For example:

```
wddcs <device> getlog system-light pack=<path>
```

- To specify a maximum wait time for each subsequent log retrieval issued by the `getlog` command, include the `timeout` option and specify the number of seconds to wait by including `=<sec>`. For example:

```
wddcs <device> getlog system-light pack=<path> timeout=<sec>
```

### 3.4.5 getlog system

The `wddcs getlog system` command is used to capture the host data related to disks, host message logs, and system-related information. It combines the operations of both the `wddcs getlog system-light` and `wddcs getlog system-heavy` commands.

#### Before you begin:

- Unless the `pack=<path>` option is used, the output directory and files will be saved in the temporary directory on the host in question.
- The name of the output directory will include the host name and timestamp (when the command was executed), for traceability.
- The output files will be placed into the following subdirectories:
  - For Linux - `disks`, `logs`, `jbdlogs`, `proc`, `ses`, `smp`, `system`, and `system/lvm`
  - For Windows - `disks`, `hostlogs`, and `ses`
- The name of the output files will include the SEP device handle, to denote which device was queried.

**Step 1:** Use the `wddcs getlog system` command to capture the host data:

**i Important:** This function may cause a heavy load on the system. To capture a smaller subset of the host data and reduce the system load, see [getlog system-light](#) (page 54).

**i Important:** This function may take up a large amount of space in the temporary directory, which could affect the root file system. Please ensure the file system has enough space to support this operation. Several megabytes of data may be captured, depending on the number of drives and enclosures attached to the host in question.

Example of Linux output:

```
# wddcs getlog system
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/disks
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/system
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/system/lvm
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/proc
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/logs
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/smp
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/disks
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/system
Created files in /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/system/lvm
```

Example of Windows output:

```
C:\> wddcs getlog system
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates
```

```
Created files in C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\disks
Created files in C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\hostlogs
Created files in C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses
```

- a. To limit the results to a single SEP device, include at least one device handle for the enclosure. For example:

```
wddcs <device> getlog system
```

- b. To combine the logs into a single, packaged file, include the `pack` option. In addition, specify the target location for the file by including `=<path>`. For example:

```
wddcs <device> getlog system pack=<path>
```

- c. To specify a maximum wait time for each subsequent log retrieval issued by the `getlog` command, include the `timeout` option and specify the number of seconds to wait by including `=<sec>`. For example:

```
wddcs <device> getlog system pack=<path> timeout=<sec>
```

### 3.4.6 getlog drives

The `wddcs getlog drives` command is used to capture logs from the attached physical drives (NVMe, SAS, SATA). This feature is not meant to take the place of tools like HUGO to capture E6 Logs from HDDs.

#### Before you begin:

- Unless the `pack=<path>` option is used, the output directory and files will be saved in the temporary directory on the host in question.
- The name of the output directory will include the host name and timestamp (when the command was executed), for traceability.
- The output files will be placed into a subdirectory named `ses`.
- The name of the output files will include the SEP device handle, to denote which device was queried.

**Step 1:** Use the `wddcs getlog drives` command to retrieve the drive info:

```
wddcs getlog drives
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

The data capture on drives can be intensive when they are under a heavy I/O
load.
Please consider capturing the drive logs while the drives are under a lighter
I/O load.
If you want proceed with the capture of the drive logs, press 'Y' or 'y':
```

The user is notified of the potential system load resulting from capturing drive data.

**Step 2:** Enter `Y` or `y` to proceed:

Example of Linux output:

```
# y
```

```
Device: /dev/sda
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/disks/
scli_show_sda.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/disks/smartctl_-
a_sda.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/disks/
sg_logs_page18h_sda.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/disks/sdparm_-
i_sda.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/disks/
sg_inq_sda.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/disks/sg_inq_-
p0x80_sda.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/disks/sg_inq_-
p0x83_sda.txt
...
```

Example of Windows output:

```
C:\> y

device: /dev/sda
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\disks\smartctl_health_sda.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\disks\smartctl_extended_sda.txt
...
```

- a. To limit the results to a single SEP device, include at least one device handle for the enclosure. For example:

```
wddcs <device> getlog drives
```

- b. To combine the logs into a single, packaged file, include the **pack** option. In addition, specify the target location for the file by including **=<path>**. For example:

```
wddcs <device> getlog drives pack=<path>
```

- c. To specify a maximum wait time for each subsequent log retrieval issued by the getlog command, include the **timeout** option and specify the number of seconds to wait by including **=<sec>**. For example:

```
wddcs <device> getlog drives pack=<path> timeout=<sec>
```

- d. To skip user prompts during the operation, use the **-noprompt** command. For example:

```
wddcs <device> getlog drives-noprompt
```

### 3.4.7 getlog all

The `wddcs getlog all` command is used to capture all log data for all SEP devices within HGST/WD-developed enclosures. It combines the `common`, `vendor`, `system`, and `drives` command options.

**Before you begin:**

- Unless the `pack=<path>` option is used, the output directory and files will be saved in the temporary directory on the host in question.
- The name of the output directory will include the host name and timestamp (when the command was executed), for traceability.
- The output files will be placed into the subdirectories named `disks`, `jbdlogs`, `hostlogs`, and `ses`.
- The name of the output files will include the SEP device handle, to denote which device was queried.

**Step 1:** Use the `wddcs getlog all` command to retrieve the SEP device info:

Example of Linux output:

```
# wddcs getlog all
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
page_00h_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
page_01h_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
page_02h_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
page_03h_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
page_05h_sg3.txt
*File saved: /tmp/wddcs_<hostname>_<datestamp>_<timestamp>/ses/
page_07h_sg3.txt
...
```

Example of Windows output:

```
C:\> wddcs getlog all
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: SCSI4:0,32,0
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\page_00h_scsi4_0-32-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\page_01h_scsi4_0-32-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\page_02h_scsi4_0-32-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\page_03h_scsi4_0-32-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\page_05h_scsi4_0-32-0.txt
*File saved: C:\Users\ADMINI~1\AppData\Local\Temp
\2\wddcs_<hostname>_<datestamp>_<timestamp>\ses\page_07h_scsi4_0-32-0.txt
...
```



**Note:** Actual captured files may vary, based on the enclosures attached to the host in question.

- To limit the results to a single SEP device, include at least one device handle for the enclosure. For example:

```
wddcs <device> getlog all
```

- b. To combine the logs into a single, packaged file, include the **pack** option. In addition, specify the target location for the file by including **=<path>**. For example:

```
wddcs <device> getlog all pack=<path>
```

- c. To specify a maximum wait time for each subsequent log retrieval issued by the **getlog** command, include the **timeout** option and specify the number of seconds to wait by including **=<sec>**. For example:

```
wddcs <device> getlog all pack=<path> timeout=<sec>
```

- d. To skip user prompts during the operation, use the **-noprompt** command. For example:

```
wddcs <device> getlog all-noprompt
```

### 3.4.7.1 Health Analysis

In addition to capturing log data in text files, the **wddcs getlog all** command produces an html file that can be opened in a browser. This provides a user-friendly method of reviewing log data.

Open the **health\_analysis.html** file in a browser to view the log data in a GUI format. The following image shows the **Platform Information** page. Use the navigation bar on the left side to access additional pages.

Figure 22: Health Analysis - Platform Information

Health Analysis	
Platform Information	Platform Information
SES Page 3 Alerts	
Fan Speed	
Temperature Voltage Current	
Abnormal Conditions	
SAS Connector	
Enclosure Color	
Element Temperature	
Drive Off State	
Drive Link State	
Low Line	
Zone Status	
Firmware Version Compatibility	
OEM Version Compatibility	
sgl_utils Version	

Type	Value
Device Handle	/dev/vg107
Product	H4102-J
Serial	USCSJ03717000001
Firmware	3070-007
Name	Ultrastar Data102
wddcs	2.1.4.0

3.5 iom

The `wddcs iom` command—without arguments—is used to determine the IOM configuration for SEP devices within HGST/WD-developed enclosures. With arguments, the `wddcs iom <args>` command is used to either determine current OOBM values or set new OOBM values.

Before you begin:

Possible IOM configurations by enclosure:

- Ultrastar Data102 – dual or single, depending on configuration
- Ultrastar Data60 – dual or single, depending on configuration
- Ultrastar Serv60+8 – single only
- 4U60 G2 Storage Enclosure – dual or single, depending on configuration
- Storage Enclosure Basic – single only

The `wddcs iom` command and options are supported on the following enclosures:

**Table 7:** Supported iom Commands by Enclosure

Command	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
iom	✓	✗	✗	✓	✓	✓	✓
iom oobm	✗	✗	✗	✗	✓	✓	✓
iom oobm (set static)	✗	✗	✗	✗	✓	✓	✓
iom oobm (set DHCP)	✗	✗	✗	✗	✓	✓	✓

**Step 1:** Use the `wddcs iom` command to print the IOM configuration.

- The output will print **Dual IOM operation** for devices with a dual IOM configuration.
- The output will print **Single IOM operation** for devices with a single IOM configuration.

```
wddcs iom
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Dual IOM operation
IOM B

Device: <device>
Dual IOM operation
IOM A
```

- a.** To limit the results to a single SEP device, add the SEP device handle:

```
wddcs <device> iom
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Dual IOM operation
```

- b.** To determine the current OOBM values, include the `oobm` argument:

```
wddcs <device> iom oobm
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
IOM B : DHCP (1)
IP : 10.202.239.109
Netmask : 255.255.252.0
Gateway : 10.202.236.1
OOBM FW : 2.2.1
MAC : 00:0C:CA:05:00:1A
```

- c. To set the OOBM values, include the `oobm=<iom>,<ip>,<netmask>,<gateway>` option, where:

- `<iom>` = A Or B
- `<ip>` = `###.###` (the IP address as four, decimal-separated, numerical values from 0-255)
- `<netmask>` = `###.###` (the netmask as four, decimal-separated, numerical values from 0-255)
- `<gateway>` = `###.###` (the gateway as four, decimal-separated, numerical values from 0-255)

For example, to set IOM A to static:

```
wddcs <device> iom oobm=A,192.168.0.10,255.255.255.0,192.168.0.1
```

To change IOM B to DHCP:

```
wddcs <device> iom oobm=B,0.0.0.0,0.0.0.0,0.0.0.0
```



**Caution:** When setting IOM IP addresses to either static or DHCP, always specify a SEP device. Failure to do so could result in multiple IOMs with the same IP address or all A/B IOMs being set to DHCP.

## 3.6 rcli

The `wddcs <device> rcli <command string>` command is used to capture detailed data about HGST/WD-developed enclosures and their components.

### Before you begin:

- Commands that are not supported on a certain enclosures will report as `not supported`. For example:

```
wddcs <device> rcli <command string>
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
rcli cmd: <command string>
This command is not supported on this platform
```


- Step 1:** Use the `wddcs <device> rcli <command string>` command to run an RCLI command from the WDDCS Tool. If the command string contains spaces, enclose it with quotation marks (i.e. "command string"). See [Supported RCLI Commands By Enclosure \(page 63\)](#) for a list of supported RCLI command strings.

### 3.6.1 Supported RCLI Commands By Enclosure

This section defines the RCLI commands supported by the WDDCS Tool for each HGST/WD-developed JBOD enclosure.

#### Legend for RCLI Commands By Enclosure

















































































- **0-#** = **Supported**

-  = **Supported**
-  = **Not Supported**



**Note:** In the table below, click the linked command strings—where applicable—to view an example of that string used in conjunction with the `wddcs rcli` command.

**Table 8:** RCLI Commands By Enclosure

RCLI Command String	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
<code>clear err_cnts</code>							
<code>debug dump</code>							
<code>err_cnts 0-35 clear</code>							
<code>err_cnts 0-47 clear</code>							
<code>err_cnts 0-60 clear</code>							
<code>err_cnts 36-67 clear</code>							
<code>err_cnts &lt;PHY_ID&gt; clear</code>	<a href="#">0-67</a>			<a href="#">0-35</a>	<a href="#">0-47</a>	<a href="#">0-47</a>	<a href="#">0-47</a>
<code>err_cnts 0-35 read</code>							
<code>err_cnts 36-67 read</code>							
<code>err_cnts &lt;PHY_ID&gt; read</code>	<a href="#">0-67</a>			<a href="#">0-35</a>	<a href="#">0-47</a>	<a href="#">0-47</a>	<a href="#">0-47</a>
<code>gpio</code>							
<code>i2c scan</code>							
<code>iom gpio</code>							
<code>phyinfo</code> ( <a href="#">page 69</a> )							
<code>phyinfo buffer</code> ( <a href="#">page 69</a> )							
<code>qinfo</code>							

RCLI Command String	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
read err_cnts	✓	✗	✗	✓	✓	✓	✓
rmt debug dump	✓	✗	✗	✗	✗	✗	✗
rmt err_cnts 0-35 clear	✓	✗	✗	✗	✗	✗	✗
rmt err_cnts 36-67 clear	✓	✗	✗	✗	✗	✗	✗
rmt err_cnts <PHY_ID> clear	0-67	✗	✗	✗	✗	✗	✗
rmt err_cnts 0-35 read	✓	✗	✗	✗	✗	✗	✗
rmt err_cnts 36-67 read	✓	✗	✗	✗	✗	✗	✗
rmt err_cnts <PHY_ID> read	0-67	✗	✗	✗	✗	✗	✗
rmt phyinfo	✓	✗	✗	✗	✗	✗	✗
rmt phyinfo buffer	✓	✗	✗	✗	✗	✗	✗
rmt qinfo	✓	✗	✗	✗	✗	✗	✗
rmt show phys	✓	✗	✗	✗	✗	✗	✗
rmt show threads	✓	✗	✗	✗	✗	✗	✗
rmt status sas_phy	✓	✗	✗	✗	✗	✗	✗
secl debug dump	✗	✗	✗	✓	✓	✓	✓
secl err_cnts 0-35 clear	✗	✗	✗	✓	✓	✓	✓
secl err_cnts 0-60 clear	✗	✗	✗	✗	✓	✓	✓
secl err_cnts 36-67 clear	✗	✗	✗	✗	✓	✓	✓

RCLI Command String	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
sec1 err_cnts <PHY_ID> clear	✗	✗	✗	0-35	0-67	0-67	0-67
sec1 err_cnts 0-35 read	✗	✗	✗	✓	✓	✓	✓
sec1 err_cnts 0-60 read	✗	✗	✗	✗	✓	✓	✓
sec1 err_cnts 36-67 read	✗	✗	✗	✗	✓	✓	✓
sec1 err_cnts <PHY_ID> read	✗	✗	✗	0-35	0-67	0-67	0-67
sec1 phyinfo (page 70)	✗	✗	✗	✓	✓	✓	✓
sec1 phyinfo buffer (page 71)	✗	✗	✗	✓	✓	✓	✓
sec1 qinfo	✗	✗	✗	✓	✓	✓	✓
sec1 show phys (page 74)	✗	✗	✗	✓	✓	✓	✓
sec1 show threads	✗	✗	✗	✓	✓	✓	✓
sec1 status sas_phy	✗	✗	✗	✓	✓	✓	✓
sec1 tx_para_get<0-67>	✗	✗	✗	✗	✓	✓	✓
sec2 debug dump	✗	✗	✗	✓	✓	✓	✓
sec2 err_cnts 0-35 clear	✗	✗	✗	✓	✓	✓	✓
sec2 err_cnts 0-60 clear	✗	✗	✗	✗	✓	✓	✓
sec2 err_cnts 36-67 clear	✗	✗	✗	✗	✓	✓	✓

RCLI Command String	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
sec2 err_cnts <PHY_ID> clear	✗	✗	✗	0-35	0-67	0-67	0-67
sec2 err_cnts 0-35 read	✗	✗	✗	✓	✓	✓	✓
sec2 err_cnts 0-60 read	✗	✗	✗	✗	✓	✓	✓
sec2 err_cnts 36-67 read	✗	✗	✗	✗	✓	✓	✓
sec2 err_cnts <PHY_ID> read	✗	✗	✗	0-35	0-67	0-67	0-67
sec2 phyinfo (page 72)	✗	✗	✗	✓	✓	✓	✓
sec2 phyinfo buffer (page 73)	✗	✗	✗	✓	✓	✓	✓
sec2 qinfo	✗	✗	✗	✓	✓	✓	✓
sec2 show phys (page 74)	✗	✗	✗	✓	✓	✓	✓
sec2 show threads	✗	✗	✗	✓	✓	✓	✓
sec2 status sas_phy	✗	✗	✗	✓	✓	✓	✓
sec2 tx_para_get<0-67>	✗	✗	✗	✗	✓	✓	✓
show ac (page 75) show actuator show actuators	✓	✗	✗	✓	✓	✓	✓
show autosync	✗	✗	✗	✗	✓	✓	✗
show cable	✗	✗	✗	✗	✓	✓	✓
show devices	✓	✗	✗	✓	✓	✓	✓
show drive	✓	✗	✗	✓	✓	✓	✓

RCLI Command String	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
<a href="#">show drives (page 76)</a>							
show drives high	✓	✗	✗	✓	✓	✓	✓
show drives low	✓	✗	✗	✓	✓	✓	✓
<a href="#">show dual (page 76)</a>	✗	✗	✗	✓	✓	✓	✓
<a href="#">show enc (page 77)</a>	✗	✗	✗	✓	✓	✓	✓
show fw	✓	✗	✗	✓	✓	✓	✓
show gpio show io	✓	✗	✗	✓	✓	✓	✓
<a href="#">show hosts (page 77)</a>	✓	✗	✗	✓	✓	✓	✓
show le show led show leds	✓	✗	✗	✓	✓	✓	✓
<a href="#">show phys (page 78)</a>	✓	✗	✗	✓	✓	✓	✓
<a href="#">show sensor (page 78)</a> show sn show sensors	✓	✗	✗	✓	✓	✓	✓
<a href="#">show ses (page 79)</a>	✓	✗	✗	✓	✓	✓	✓
show thermon	✓	✗	✗	✓	✓	✓	✓
show threads	✓	✗	✗	✓	✓	✓	✓
<a href="#">show vpd (page 80)</a>	✗	✗	✗	✓	✓	✓	✓
status sas_phy	✓	✗	✗	✓	✓	✓	✓
tx_para_get<0-47>	✓	✗	✗	✓	✓	✓	✓
<a href="#">vpd set (page 80)</a>	✓	✗	✗	✓	✓	✓	✓
<a href="#">zonecfg (page 80)</a>	✗	✗	✗	✓	✓	✓	✓

RCLI Command String	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
zonecfg disable	✗	✗	✗	✓	✓	✓	✗

## 3.6.2 RCLI Command String Examples

### 3.6.2.1 rcli phyinfo

The `wddcs <device> rcli phyinfo` command is used to display the primary SAS Expander PHY information for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rcli phyinfo` command to display the primary SAS Expander PHY information for a single SEP device within an enclosure that supports RCLI commands. For example:

```
wddcs <device> rcli phyinfo
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Phy Type Link Route SAS          Change  Zone   Zone  Conn  Conn
Conn
ID      Rate Attr  Address          Count   Group  Info  Type  Elem
Phy
Index
Link
-----
0  ---  ---  T  ---          0x00   0x08   0x04  0x05  0x66
0x03
1  ---  ---  T  ---          0x00   0x08   0x04  0x05  0x66
0x03
2  ---  ---  T  ---          0x00   0x08   0x04  0x05  0x66
0x03
3  ---  ---  T  ---          0x00   0x08   0x04  0x05  0x66
0x03
4  End  12G  T  0x500605b00e7b00d0  0x02   0x09   0x04  0x05  0x6e
0x03
5  End  12G  T  0x500605b00e7b00d0  0x02   0x09   0x04  0x05  0x6e
0x03
6  End  12G  T  0x500605b00e7b00d0  0x02   0x09   0x04  0x05  0x6e
0x03
7  End  12G  T  0x500605b00e7b00d0  0x02   0x09   0x04  0x05  0x6e
0x03
8  ---  ---  T  ---          0x00   0x0a   0x04  0x05  0x6f
0x03
9  ---  ---  T  ---          0x00   0x0a   0x04  0x05  0x6f
0x03
10 ---  ---  T  ---          0x00   0x0a   0x04  0x05  0x6f
0x03
...
```

### 3.6.2.2 rcli "phyinfo buffer"

The `wddcs <device> rcli "phyinfo buffer"` command is used to display the primary SAS expander PHY info buffer information for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rcli "phyinfo buffer"` command to display the primary SAS expander PHY info buffer information for a single SEP device within an enclosure that supports RCLI commands. For example:

```
wddcs <device> rcli "phyinfo buffer"
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
PHY Link Drv Buffer SAS SAS SATA SATA Conn Conn OAF
Snoop ID Rate Link Enable Buffer Buffer Buffer Buffer Mgmt Mgmt Early
TMF Rate 3G 6G 3G 6G 3/6G 12G Accept
-----
```

0	---	---	-	-	*	*	*	*	*	-
1	---	---	-	-	*	*	*	*	*	-
2	---	---	-	-	*	*	*	*	*	-
3	---	---	-	-	*	*	*	*	*	-
4	12G	12G	-	-	*	*	*	*	*	-
5	12G	12G	-	-	*	*	*	*	*	-
6	12G	12G	-	-	*	*	*	*	*	-
7	12G	12G	-	-	*	*	*	*	*	-
8	---	---	-	-	*	*	*	*	*	-
9	---	---	-	-	*	*	*	*	*	-
10	---	---	-	-	*	*	*	*	*	-
...										

### 3.6.2.3 rcli "sec1 phyinfo"

The `wddcs <device> rcli "sec1 phyinfo"` command is used to display the secondary SAS expander 1 PHY information for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rcli "sec1 phyinfo"` command to display the secondary SAS expander 1 PHY information for a single SEP device within an enclosure that supports RCLI commands. For example:

```
wddcs <device> rcli "sec1 phyinfo"
```

```

wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Phy Type Link Route SAS          Change  Zone    Zone  Conn  Conn
Conn
ID      Rate Attr  Address      Count   Group   Info  Type  Elem
Phy                                           Index

Link
-----
0  ---  ---  T  ---          0x00    0x38    0x04  0x20  0x2a
0x00
1  ---  ---  T  ---          0x00    0x3a    0x04  0x20  0x2c
0x00
2  ---  ---  T  ---          0x00    0x43    0x04  0x20  0x35
0x00
3  ---  ---  T  ---          0x00    0x44    0x04  0x20  0x36
0x00
4  ---  ---  T  ---          0x00    0x45    0x04  0x20  0x37
0x00
5  ---  ---  T  ---          0x00    0x46    0x04  0x20  0x38
0x00
6  ---  ---  T  ---          0x00    0x47    0x04  0x20  0x39
0x00
7  ---  ---  T  ---          0x00    0x48    0x04  0x20  0x3a
0x00
8  ---  ---  T  ---          0x00    0x49    0x04  0x20  0x3b
0x00
9  ---  ---  T  ---          0x00    0x4a    0x04  0x20  0x3c
0x00
10 ---  ---  T  ---          0x00    0x4b    0x04  0x20  0x3d
0x00
...

```

### 3.6.2.4 rcli "sec1 phyinfo buffer"

The `wddcs <device> rcli "sec1 phyinfo buffer"` command is used to display the secondary SAS expander 1 PHY info buffer information for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rcli "sec1 phyinfo buffer"` command to display the secondary SAS expander 1 PHY info buffer information for a single SEP device within an enclosure that supports RCLI commands. For example:

```

wddcs <device> rcli "sec1 phyinfo buffer"
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
PHY Link Drv  Buffer SAS    SAS    SATA    SATA    Conn  Conn  OAF
Snoop
ID  Rate  Link  Enable Buffer  Buffer  Buffer  Buffer  Mgmt  Mgmt  Early
TMF
      Rate          3G    6G    3G    6G    3/6G  12G  Accept
-----

```

0	---	---	-	-	*	*	*	*	*	-
1	---	---	-	-	*	*	*	*	*	-
2	---	---	-	-	*	*	*	*	*	-
3	---	---	-	-	*	*	*	*	*	-
4	---	---	-	-	*	*	*	*	*	-
5	---	---	-	-	*	*	*	*	*	-
6	---	---	-	-	*	*	*	*	*	-
7	---	---	-	-	*	*	*	*	*	-
8	---	---	-	-	*	*	*	*	*	-
9	---	---	-	-	*	*	*	*	*	-
10	---	---	-	-	*	*	*	*	*	-
...										

### 3.6.2.5 rcli "sec2 phyinfo"

The `wddcs <device> rcli "sec2 phyinfo"` command is used to display the secondary SAS expander 2 PHY information for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rcli "sec2 phyinfo"` command to display the secondary SAS expander 2 PHY information for a single SEP device within an enclosure that supports RCLI commands. For example:

```
wddcs <device> rcli "sec2 phyinfo"
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
Phy Type Link Route SAS          Change  Zone   Zone  Conn  Conn
Conn
ID      Rate Attr Address          Count   Group  Info  Type  Elem
Phy
                                           Index
Link
-----
0  End  12G   T   0x5000cca25306eadd  0x02   0x0e   0x04  0x20  0x00
0x00
1  End  12G   T   0x5000cca25306859d  0x02   0x0f   0x04  0x20  0x01
0x00
2  End  12G   T   0x5000cca253068459  0x02   0x10   0x04  0x20  0x02
0x00
3  End  12G   T   0x5000cca253068569  0x02   0x11   0x04  0x20  0x03
0x00
4  End  12G   T   0x5000cca253068581  0x02   0x12   0x04  0x20  0x04
0x00
5  End  12G   T   0x5000cca2532b9751  0x02   0x13   0x04  0x20  0x05
0x00
```

```

6   End  12G   T   0x5000cca25306873d  0x02   0x14   0x04   0x20   0x06
0x00
7   End  12G   T   0x5000cca25307011d  0x02   0x15   0x04   0x20   0x07
0x00
8   End  12G   T   0x5000cca253068411  0x02   0x16   0x04   0x20   0x08
0x00
9   End  12G   T   0x5000cca2530684b1  0x02   0x17   0x04   0x20   0x09
0x00
10  End  12G   T   0x5000cca2530702f9  0x02   0x18   0x04   0x20   0x0a
0x00
...

```

### 3.6.2.6 rcli "sec2 phyinfo buffer"

The `wddcs <device> rcli "sec2 phyinfo buffer"` command is used to display the secondary SAS expander 2 PHY info buffer information for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rcli "sec2 phyinfo buffer"` command to display the secondary SAS expander 2 PHY info buffer information for a single SEP device within an enclosure that supports RCLI commands. For example:

```

wddcs <device> rcli "sec2 phyinfo buffer"
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
PHY Link Drv Buffer SAS SAS SATA SATA Conn Conn OAF
Snoop
ID Rate Link Enable Buffer Buffer Buffer Buffer Mgmt Mgmt Early
TMF Rate 3G 6G 3G 6G 3/6G 12G Accept
-----
0 12G 12G - - * * * * * -
-
1 12G 12G - - * * * * * -
-
2 12G 12G - - * * * * * -
-
3 12G 12G - - * * * * * -
-
4 12G 12G - - * * * * * -
-
5 12G 12G - - * * * * * -
-
6 12G 12G - - * * * * * -
-
7 12G 12G - - * * * * * -
-
8 12G 12G - - * * * * * -
-
9 12G 12G - - * * * * * -
-
10 12G 12G - - * * * * * -
-

```

...

### 3.6.2.7 rcli "sec1 show phys"

The `wddcs <device> rcli "sec1 show phys"` command is used to display the PHY information of the secondary SAS expander 1 for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rcli "sec1 show phys"` command to display the PHY information of the secondary SAS expander 1 for a single SEP device within an enclosure that supports RCLI commands. For example:

```
wddcs <device> rcli "sec1 show phys"
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>

A Sec 1 Expander PHYs
Id Type SAS Rate Local Remote 1.5G 3G 6G 12G
-----
0 : DRV Disabled COFF0000 * * * *
1 : DRV Disabled COFF0000 * * * *
2 : DRV Disabled COFF0000 * * * *
3 : DRV Disabled COFF0000 * * * *
...
39 : DRV 5000CCA25306EC05 12G COFF0000 80FF0001 * * * *
40 : DRV 5000CCA2530684AD 12G COFF0000 80FF0001 * * * *
41 : DRV 5000CCA25306EA45 6G COFC0000 80FF0001 * * * *
42 : DRV 5000CCA25306F0A1 6G COFC0000 80FF0001 * * * *
43 : DRV 5000CCA253068705 12G COFF0000 80FF0001 * * * *
```

### 3.6.2.8 rcli "sec2 show phys"

The `wddcs <device> rcli "sec2 show phys"` command is used to display the PHY information of the secondary SAS expander 2 for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rcli "sec2 show phys"` command to display the PHY information of the secondary SAS expander 2 for a single SEP device within an enclosure that supports RCLI commands. For example:

```
wddcs <device> rcli "sec2 show phys"
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>

A Sec 2 Expander PHYs
Id Type SAS Rate Local Remote 1.5G 3G 6G 12G
-----
0 : DRV 5000CCA25306EADD 12G COFF0000 80FF0001 * * * *
1 : DRV 5000CCA25306859D 12G COFF0000 80FF0001 * * * *
2 : DRV 5000CCA253068459 12G COFF0000 80FF0001 * * * *
3 : DRV 5000CCA253068569 12G COFF0000 80FF0001 * * * *
4 : DRV 5000CCA253068581 12G COFF0000 80FF0001 * * * *
```

```

5 : DRV 5000CCA2532B9751 12G C0FF0000 80FF0001 * * * *
6 : DRV 5000CCA25306873D 12G C0FF0000 80FF0001 * * * *
7 : DRV 5000CCA25307011D 12G C0FF0000 80FF0001 * * * *
8 : DRV 5000CCA253068411 12G C0FF0000 80FF0001 * * * *
9 : DRV 5000CCA2530684B1 12G C0FF0000 80FF0001 * * * *
10 : DRV 5000CCA2530702F9 12G C0FF0000 80FF0001 * * * *
...

```

### 3.6.2.9 rcli "show ac"

The `wddcs <device> rcli "show ac"` command is used to display the PWM information for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rcli "show ac"` command to display the PWM information for a single SEP device within an enclosure that supports RCLI commands. For example:

```

wddcs <device> rcli "show ac"
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
ac:pwmEnc          = 54 % (Enclosure Fan PWM)
ac:pwmIom          = 42 % (IOM Fan PWM)
ac:pwmPsuA         = 0 % (PSU A Fan PWM)
ac:pwmPsuB         = 0 % (PSU B Fan PWM)

```



**Note:** For Ultrastar Data60, Ultrastar Serv60+8, and Ultrastar Data102 enclosures, if the IOM fan's PWM is less than (<) 50%, the PSU PWMs will display 0%. If the the IOM fan's PWM is greater than (>) 50%, the PSU PWMs will match the IOM fan's PWM up to a maximum of 85%.

### 3.6.2.10 rcli "show cable"

The `wddcs <device> rcli "show cable"` command is used to display the host cable information for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rcli "show cable"` command to display the host cable information for a single SEP device within an enclosure that supports RCLI commands. For example:

```

wddcs <device> rcli "show cable"
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Cable status: 00
Host 0(-): Not installed
Host 1(-): OK , ZG:09 LEN: 3m, FCI Electronics, 10117949–3030LF
Host 2(-): Not installed
Host 3(-): Not installed
Host 4(-): Not installed
Host 5(-): Not installed
Host 6(-): Not installed
Host 7(-): OK , ZG:09 LEN: 3m, FCI Electronics, 10117949–3030LF
Host 8(-): Not installed

```

```
Host 9(-): Not installed
Host 10(-): Not installed
Host 11(-): Not installed
```

### 3.6.2.11 rccli "show drives"

The `wddcs <device> rccli "show drives"` command is used to display the drive information for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rccli "show drives"` command to display the drive information for a single SEP device within an enclosure that supports RCLI commands. For example:

```
wddcs <device> rccli "show drives"
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>

Slot  SAS Addr          State  Vendor  Product          FW  Serial
-----
0   : 5000CCA25306EADD On -Rdy  HGST  HUH721212AL4204 C3D0 8DG3TXZD
1   : 5000CCA25306859D On -Rdy  HGST  HUH721212AL4204 C3D0 8DG3L5YD
2   : 5000CCA253068459 On -Rdy  HGST  HUH721212AL4204 C3D0 8DG3L3AD
3   : 5000CCA253068569 On -Rdy  HGST  HUH721212AL4204 C3D0 8DG3L5JD
4   : 5000CCA253068581 On -Rdy  HGST  HUH721212AL4204 C3D0 8DG3L5RD
5   : 5000CCA2532B9751 On -Rdy  HGST  HUH721212AL5200 A3D0 8DGSZ5LH
6   : 5000CCA25306873D On -Rdy  HGST  HUH721212AL4204 C3D0 8DG3L99D
7   : 5000CCA25307011D On -Rdy  HGST  HUH721212AL4204 C3D0 8DG3VDXD
8   : 5000CCA253068411 On -Rdy  HGST  HUH721212AL4204 C3D0 8DG3L2SD
9   : 5000CCA2530684B1 On -Rdy  HGST  HUH721212AL4204 C3D0 8DG3L41D
10  : 5000CCA2530702F9 On -Rdy  HGST  HUH721212AL4204 C3D0 8DG3VJSD
...
```

### 3.6.2.12 rccli "show dual"

The `wddcs <device> rccli "show dual"` command is used to display the dual IOM status information for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rccli "show dual"` command to display the dual IOM status information for a single SEP device within an enclosure that supports RCLI commands. For example:

```
wddcs <device> rccli "show dual"
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
dualCompatStatus: DUAL_IOM_COMPATIBLE
DualEnabled      : True
IomInit          : True
linkAlive        : True
otherpresent     : True
isSynched        : True
Slot             : A
XO Status        : XO_STS_IS_XO
```

```
isThisActive      : True
isOtherActive     : True
```

### 3.6.2.13 rcli "show enc"

The `wddcs <device> rcli "show enc"` command is used to display the enclosure information for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rcli "show enc"` command to display the enclosure information for a single SEP device within an enclosure that supports RCLI commands. For example:

```
wddcs <device> rcli "show enc"
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>

Enclosure Information (IOM A)
-----
ENCL CONFIG : 4U102
PARTNUM     : Encl:1ES0294-1A
SERIAL      : USCSJ04017EA0001
IOM A
PARTNUM     : 1EB0246
SERIAL      : THCLS03517EL0052
FW(PRI)     : <version>
FW(SEC1)    : <version>
FW(SEC2)    : <version>
FW(OOBM)    : <version>
MAC         : 00:0C:CA:05:00:16
IP ADDR     : 10.202.237.141
IOM B
PARTNUM     : 1EB0246-B2
SERIAL      : THCLS03517EL0091
FW(PRI)     : <version>
FW(SEC1)    : <version>
FW(SEC2)    : <version>
FW(OOBM)    : <version>
MAC         : 00:0C:CA:04:00:5B
IP ADDR     : 10.202.237.183
```

### 3.6.2.14 rcli "show hosts"

The `wddcs <device> rcli "show hosts"` command is used to display the host information for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rcli "show hosts"` command to display the host information for a single SEP device within an enclosure that supports RCLI commands. For example:

```
wddcs <device> rcli "show hosts"
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
```

```

Host 00 (x-----): Not Connected
Host 01 (x-----): Not Connected
Host 02 (x-----): Not Connected
Host 03 (x-----): Not Connected
Host 04 (x500605B00E7B00D1,12G): Ready
Host 05 (x500605B00E7B00D1,12G): Ready
Host 06 (x500605B00E7B00D1,12G): Ready
Host 07 (x500605B00E7B00D1,12G): Ready
Host 08 (x-----): Not Connected
Host 09 (x-----): Not Connected
Host 10 (x-----): Not Connected
Host 11 (x-----): Not Connected
Host 12 (x-----): Not Connected
Host 13 (x-----): Not Connected
Host 14 (x-----): Not Connected
Host 15 (x-----): Not Connected
Host 16 (x-----): Not Connected
Host 17 (x-----): Not Connected
Host 18 (x-----): Not Connected
Host 19 (x-----): Not Connected
Host 20 (x-----): Not Connected
Host 21 (x-----): Not Connected
Host 22 (x-----): Not Connected
Host 23 (x-----): Not Connected

```

### 3.6.2.15 rcli "show phys"

The `wddcs <device> rcli "show phys"` command is used to display the PHY information of the primary SAS expander for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rcli "show phys"` command to display the PHY information of the primary SAS expander for a single SEP device within an enclosure that supports RCLI commands. For example:

```

wddcs <device> rcli "show phys"
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>

A Pri   Expander PHYs
Id Type SAS                Rate  Local      Remote   1.5G  3G   6G 12G
-----
0 : HST                                COFF0000          *   *   *   *
1 : HST                                COFF0000          *   *   *   *
2 : HST                                COFF0000          *   *   *   *
3 : HST                                COFF0000          *   *   *   *
4 : HST 500605B00E7B00D1  12G  COFF0000  803F0001  *   *   *   *
5 : HST 500605B00E7B00D1  12G  COFF0000  803F0001  *   *   *   *
6 : HST 500605B00E7B00D1  12G  COFF0000  803F0001  *   *   *   *
7 : HST 500605B00E7B00D1  12G  COFF0000  803F0001  *   *   *   *
8 : HST                                COFF0000          *   *   *   *
9 : HST                                COFF0000          *   *   *   *
10 : HST                               COFF0000          *   *   *   *
...

```

### 3.6.2.16 rcli "show sensor"

The `wddcs <device> rcli "show sensor"` command is used to display the sensor information from a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rcli "show sensor"` command to display the sensor information from a single SEP device within an enclosure that supports RCLI commands. For example:

```
wddcs <device> rcli "show sensor"
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
sn:tmpSlot000      =      28 Deg C      (TEMP SLOT 000)
sn:tmpSlot001      =      27 Deg C      (TEMP SLOT 001)
sn:tmpSlot002      =      28 Deg C      (TEMP SLOT 002)
sn:tmpSlot003      =      28 Deg C      (TEMP SLOT 003)
sn:tmpSlot004      =      28 Deg C      (TEMP SLOT 004)
sn:tmpSlot005      =      28 Deg C      (TEMP SLOT 005)
sn:tmpSlot006      =      27 Deg C      (TEMP SLOT 006)
sn:tmpSlot007      =      27 Deg C      (TEMP SLOT 007)
sn:tmpSlot008      =      28 Deg C      (TEMP SLOT 008)
sn:tmpSlot009      =      27 Deg C      (TEMP SLOT 009)
...
```

### 3.6.2.17 rcli "show ses"

The `wddcs <device> rcli "show ses"` command is used to display the SES information for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rcli "show ses"` command to display the SES information for a single SEP device within an enclosure that supports RCLI commands. For example:

```
wddcs <device> rcli "show ses"
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>

|Status|
Online
Zoning: Disabled

|Identification|
Vendor: HGST
Product: H4102-J
SerialNum: USCSJ04017EA0006
FwRev: <version>

|SES Status|
CONN HOST 01: Not Installed()
CONN HOST 02: Not Installed()
CONN HOST 03: Not Installed()
CONN HOST 04: Not Installed()
CONN HOST 05: Not Installed()
```

```
CONN HOST 07: Not Installed()
CONN HOST 08: Not Installed()
CONN HOST 09: Not Installed()
CONN HOST 10: Not Installed()
CONN HOST 11: Not Installed()
```

### 3.6.2.18 rcli "show vpd"

The `wddcs <device> rcli "show vpd"` command is used to display vital product data for a single SEP device within an enclosure that supports RCLI commands.



**Note:** The `wddcs <device> rcli "vpd set"` command accomplishes the same purpose.

**Step 1:** Use the `wddcs <device> rcli "show vpd"` command to display vital product data for a single SEP device within an enclosure that supports RCLI commands. For example:

```
wddcs <device> rcli "show vpd"
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
  Encl:Type           = x01
  Encl:PartNum        = '1ES0255-06'
  Encl:SerialNum      = 'USCSJ03717EB0001'
  Encl:ProductName    = 'H4102-J'
  Encl:Vendor         = 'HGST'
  Encl:BdCustomer     = ''
  Encl:SASAddr        = x5000CCAB04000600
  Encl:Config         = x5A00000000000000
  Encl:Nickname       = ''
  Encl:BdPartNum      = '1EB0227-A1'
  Encl:BdSerialNum    = 'THCLS03217EK001A'
  Encl:DrvStateBits   = x76
  IomA:BdName         = ''
  IomA:BdSerialNum    = 'THCLS03517EL00AB'
  IomA:BdPartNum      = '1EB0246'
  IomA:BdCustomer     = ''
  IomA:MACAddr        = 8:'0000000CCA05001B'
  IomB:BdName         = ''
  IomB:BdSerialNum    = 'THCLS03517EL000A'
  IomB:BdPartNum      = '1EB0246'
  IomB:BdCustomer     = ''
  IomB:MACAddr        = 8:'0000000CCA05001A'
  MainBB:BdName       = 'BB60'
  MainBB:BdSerialNum  = 'THCLS05117EJ0002'
  MainBB:BdPartNum    = '1EB1032-30'
  AuxBB:BdName        = 'BB42'
  AuxBB:BdSerialNum   = 'THCLS05117EH0004'
  AuxBB:BdPartNum     = '1EB1034-30'
```

### 3.6.2.19 rcli zonecfg

The `wddcs <device> rcli zonecfg` command is used to determine the zoning configuration for a single SEP device within an enclosure that supports RCLI commands.

**Step 1:** Use the `wddcs <device> rcli zonecfg` command to determine the zoning configuration for a single SEP device within an enclosure that supports RCLI commands.

If zoning is **disabled**, the output will be as follows:

```
wddcs <device> rcli zonecfg
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Zoning (Disabled)
```

If zoning is **enabled**, the output will be as follows:

```
wddcs <device> rcli zonecfg
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Zoning (Enabled)
Host    : Slots
-----
Host <host#> : <slot#>--<slot#>
Host <host#> : <slot#>--<slot#>
Host <host#> : <slot#>--<slot#>
Host <host#> : <slot#>--<slot#>
Host <host#> : <slot#>--<slot#>
Host <host#> : <slot#>--<slot#>
```

## 3.7 show

The `wddcs show` command is used to scan for SEP devices within HGST/WD-developed enclosures and display their product or device information.

### Options

The following sections provide instructions for using each of these command options:

- **show** – scans for all enclosure products and displays the SEP handle, product description, serial number, firmware revision, and product name
- **show handles** – displays connected drives with slot number, serial number, capacity, port address, expander, and OS device handle name

### Support

The `wddcs show` command and options are supported on the following enclosures:

Command	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
show	✓	✓	✓	✓	✓	✓	✓
show handles	✗	✗	✗	✓	✓	✓	✓

### 3.7.1 show

The `wddcs show` command is used to scan for all SEP devices within HGST/WD-developed enclosures and display the following information:

- SEP device handle
- Product ID
- Serial number
- Firmware version
- Product name



**Note:** The output will only include information for HGST/WD-developed enclosures.

**Step 1:** Use the `wddcs show` command to scan for all SEP devices within HGST/WD-developed enclosures and display the product information:

```
wddcs show
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
  product : <product>
  serial  : <serialnumber>
  firmware: <version>
  name    : <productname>

...
```

### 3.7.2 show handles

The `wddcs show handles` command is used to scan for all connected drives and display the following information:

- Slot number
- Serial number
- Capacity
- Port address
- Expander
- OS device handle



**Note:** The output will only include information for HGST/WD-developed enclosures.

**Step 1:** Use the `wddcs show handles` command to display the device information:

**Linux Example:**

```
wddcs show handles
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>

Enclosure IOM          : A
Enclosure SAS Address : 5000CCAB0400063C
```

Slot	SN	Cap (GB)	Port Address	Expander	Drive Handle
0	2EG5S94R	8001	5000CCA23B0A7535	2:5000CCAB0400067F	/dev/sds
1	2EG3R8YR	8001	5000CCA23B06C321	2:5000CCAB0400067F	/dev/sdw
2	2AH8D03Y	12000	5000CCA27A479E21	2:5000CCAB0400067F	/dev/sdaa
3	8CH2X2NE	12000	5000CCA26F3DA6B5	2:5000CCAB0400067F	/dev/sdae
4	2AH6KTNY	12000	5000CCA27A445221	2:5000CCAB0400067F	/dev/sdag
7	2AH4DUUY	12000	5000CCA27A4064A5	2:5000CCAB0400067F	/dev/sdai
8	2AH84ZVY	12000	5000CCA27A4734E5	2:5000CCAB0400067F	/dev/sdak
9	2AGG13SY	12000	5000CCA27A19859D	2:5000CCAB0400067F	/dev/sdam
10	2AH84V6Y	12000	5000CCA27A4732A5	2:5000CCAB0400067F	/dev/sdao
...					

**Windows Example:**

```
wddcs show handles
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>

Enclosure IOM          : A
Enclosure SAS Address : 5000CCAB050008BC
```

Slot	SN	Cap (GB)	NAA WWID	Expander	Drive Handle
0	7SGEK22C	8001	5000CCA25218A390	1:5000CCAB050008BF	PD1
1	2EGHD8KV	8001	5000CCA23B1BFE98	2:5000CCAB050008FF	PD2
2	2EGN1S2V	8001	5000CCA23B2477E0	1:5000CCAB050008BF	PD3
3	9JG1EU5G	14000	5000CCA25802A0E0	2:5000CCAB050008FF	PD4
4	9JG1EJUG	14000	5000CCA258029CD4	2:5000CCAB050008FF	PD5
5	7SGEB4AC	8001	5000CCA252184A90	2:5000CCAB050008FF	PD6
6	2EGNLYJV	8001	5000CCA23B257A44	2:5000CCAB050008FF	PD7
7	2EGNLSLV	8001	5000CCA23B257764	2:5000CCAB050008FF	PD8
8	2EGMBAHV	8001	5000CCA23B233674	2:5000CCAB050008FF	PD9
9	2EGNVVLV	8001	5000CCA23B25F0F8	2:5000CCAB050008FF	PD10
10	2EGND35V	8001	5000CCA23B251368	2:5000CCAB050008FF	PD11
...					

- a. To limit the results to a single device, include the device's SEP handle:

```
wddcs <device> show handles
```

### 3.8 version

The `wddcs version` command is used to print the version of the installed WDDCS Tool and its modules.

**Step 1:** Use the `wddcs version` command to print the version of the installed WDDCS Tool and its modules:

```
wddcs version
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

MODULE          VERSION      HASH
-----
wddcs            2.1.4.0     8fa85ed543e24275db34ef81a3a6490225617f65
yadl             1.14.16     fda00a5917d7ae7ded8b1032ff52dedf525fe2ac
yextata          2.3.0       ba08f5b1f214381b4935b5481072ecd66a94cf93
yextnvme         8.2.0       df0ab01eed32d49b85ac9e11649df5bf63ca9de3
yextscan         1.1.0       a8cb19553f9a0df285426188377f00533aa2e314
yextscsi         2.3.0       c8337f29a5bdea82971a0959c81ffb6a3e633107
yextses          1.8.4       2b9056f43efbbaa27160385dbc2f9862fc4d6e68
cutils           1.7.1       c7a3a905d1e7a3e6aa8016e1bb434a71af3fd0a6
```

### 3.9 zone

The `wddcs zone` command—along with its options—is used to configure zoning for certain HGST/WD-developed enclosures with FW version 2030-026 and later.

#### Options

The following sections provide instructions for using each of these command options:

- `config=<value>` – configures zone setting to the given value:
  - A value of 0 disables zoning
  - The values of 1 through 3 enable a pre-defined zoning configuration
- `file=<file>` – sends a binary zone configuration file to the IOM
- `reset` – resets the IOM/SEP device for configuration settings to take effect
- `status` – displays the current zone configuration setting

#### Support

The `wddcs zone` command and options are supported on the following enclosures:

Command	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
zone config=0 (disable)	✗	✗	✗	✗	✓	✓	✗

Command	Storage Enclosure Basic	4U60 G1 Storage Enclosure	2U24 Flash Storage Platform	4U60 G2 Storage Enclosure	Ultrastar Data60	Ultrastar Data102	Ultrastar Serv60+8
zone config=1	✗	✗	✗	✗	✓	✓	✗
zone config=2	✗	✗	✗	✗	✓	✓	✗
zone config=3	✗	✗	✗	✗	✓	✓	✗
zone file=<file>	✗	✗	✗	✗	✓	✓	✗
zone reset	✗	✗	✗	✗	✓	✓	✗
zone status	✗	✗	✗	✗	✓	✓	✗



**Note:** For unsupported enclosures, the `wddcs zone` command will return `Operation not supported on this product.`

### 3.9.1 zone config (enable zoning)

The `wddcs <device> zone config` command—with the values of 1 through 3—is used to enable zoning for a single SEP device within supported HGST/WD-developed enclosures.



**Caution:** Zone configuration should only be performed during a maintenance window, when the system is not in production.

**Step 1:** Use the `wddcs <device> zone config` command with the values of 1 - 3 to enable zoning:

```
wddcs <device> zone config=1
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
Setting zones to pre-configured value of 1 to SAS address <SAS address>
Zone configuration was successful
```

**Step 2:** Repeat the `wddcs <device> zone config` command to enable zoning for the second SEP device.

### 3.9.2 zone config (disable zoning)

The `wddcs <device> zone config` command—with a value of 0—is used to disable zoning for a single SEP device within supported HGST/WD-developed enclosures.



**Caution:** Zone configuration should only be performed during a maintenance window, when the system is not in production.

**Step 1:** Use the `wddcs <device> zone config=0` command with a value of 0 to disable zoning:

```
wddcs <device> zone config=0
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Setting zones to pre-configured value of 0 to SAS address <SAS address>
Zoning has been disabled.
You will need to issue the "zone reset" command on some products to complete
this operation.
As a result of the "zone reset", the enclosure may go offline for a period of
time.
Please ensure this is done during a maintenance window.
Please check the product documentation for further information.
```

The user is notified that a zone reset may be required for the disabled zoning to take effect.

**Step 2:** Use the `wddcs <device> zone reset` command to reset the IOMs (see [zone reset \(page 87\)](#)).

### 3.9.3 zone file

The `wddcs <device> zone file=<file>` command is used to send a binary zone configuration file to a single IOM/SEP device.



**Caution:** Zone configuration should only be performed during a maintenance window, when the system is not in production.



**Note:** For products with a dual-IOM configuration, the file only needs to be sent to one IOM. Once activated, both IOMs will have the same zoning configuration.

**Step 1:** Use the `wddcs <device> zone file=<file>` command to send a binary zone configuration file to a single IOM/SEP device:

If the zoning file **is not** compatible with the enclosure, the user will be notified:

```
wddcs <device> zone file=<file>
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
ERROR: The file is not compatible with this product
```

If the file **is** compatible, the command will produce the following output:

```
wddcs <device> zone file=<file>
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
```

**CAUTION:** This command will send a T10 zoning configuration to the IOM in question and activate the configuration by resetting the IOM.

This zoning administration activity is designed to take place while the JBOD/F platform is offline and not in production. The IOM in question will go offline for a short period of time while the zoning configuration is activated

If you still prefer to continue with this method, press 'Y' or 'y':

The user is notified that the IOM will go offline and is prompted to confirm the action.

**Step 2:** Enter Y or y to proceed:

```
Y

Sent 1 segment(s)
Waiting for completion: 5 second(s) - Status 0x00
Waited the maximum limit of 5 seconds
Configuration file was downloaded and activated successfully
```

### 3.9.4 zone reset

The `wddcs <device> zone reset` command is used to reset a single IOM/SEP device—after zoning has been disabled—for zone configuration settings to take effect. The `wddcs <device> zone reset` command is not needed after zoning has been enabled.



**Caution:** Zone configuration should only be performed during a maintenance window, when the system is not in production.

**Step 1:** Use the `wddcs <device> zone reset` command to reset a single IOM/SEP device—after zoning has been disabled—for zone configuration settings to take effect:

```
wddcs <device> zone reset
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
Resetting the IOM. Please wait...
The reset command was successful
```

**Step 2:** Repeat the `wddcs <device> zone reset` command to reset the second SEP device.

### 3.9.5 zone status

The `wddcs <device> zone status` command is used to display the zone configuration status of a single IOM/SEP device.

**Step 1:** Use the `wddcs <device> zone status` command to display the zone configuration status of a single IOM/SEP device:

If zoning is disabled, the output will be as follows:

```
wddcs <device> zone status
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates
```

```
Device: <device>  
Zoning (Disabled)
```

If zoning is enabled, the output will be similar to the following:

```
wddcs <device> zone status  
wddcs v2.1.4.0  
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates  
  
Device: <device>  
Zoning (Enabled)  
Host      : Slots  
-----  
Host 0 : 0-33  
Host 1 : 0-33  
Host 2 : 34-67  
Host 3 : 34-67  
Host 4 : 68-101  
Host 5 : 68-101
```



**Note:** Actual output may vary, depending on the zone configuration and other factors.



# Firmware Upgrade Processes

The recommended firmware upgrade process depends on several factors. This section provides guidance on choosing the correct process and instructions for performing the upgrade.

## In This Chapter:

- Choosing the Correct Firmware Upgrade Process.....90
- Two IOMs, Online, Manual..... 91
- Two IOMs, Offline, Automatic..... 93
- One IOM, Offline, Automatic..... 94
- Two IOMs, Online, Automatic..... 96

## 4.1 Choosing the Correct Firmware Upgrade Process

The recommended firmware upgrade process varies, depending on the following factors:

- The enclosure/product type
- The number of IOMs/ESMs
- Whether or not the enclosure will be taken offline by the upgrade
- Whether a manual or automatic process is needed
  - The manual upgrade process, where possible, allows the host OS and/or HBA to handle the failover more gracefully than the automatic process.

Based on these factors, use the following table to determine which firmware upgrade process is applicable. Then click the link in the right-hand column to view instructions for that process.

**Table 9:** Firmware Upgrade Processes

Enclosure	# of IOMs/ ESMs	Offline/ Online	Manual/ Automatic	Process Link
Ultrastar Data102	2	On	Manual	<a href="#">Two IOMs, Online, Manual (page 91)</a>
	2	Off	Automatic	<a href="#">Two IOMs, Offline, Automatic (page 93)</a>
	1	Off	Automatic	<a href="#">One IOM, Offline, Automatic (page 94)</a>
Ultrastar Data60	2	On	Manual	<a href="#">Two IOMs, Online, Manual (page 91)</a>
	2	Off	Automatic	<a href="#">Two IOMs, Offline, Automatic (page 93)</a>
	1	Off	Automatic	<a href="#">One IOM, Offline, Automatic (page 94)</a>
Ultrastar Serv60+8	1	Off	Automatic	<a href="#">One IOM, Offline, Automatic (page 94)</a>
4U60 G2 Storage Enclosure	2	Off	Automatic	<a href="#">Two IOMs, Offline, Automatic (page 93)</a>
	1	Off	Automatic	<a href="#">One IOM, Offline, Automatic (page 94)</a>
4U60 G1 Storage Enclosure	2	On	Automatic	<a href="#">Two IOMs, Online, Automatic (page 96)</a>
	1	Off	Automatic	<a href="#">One IOM, Offline, Automatic (page 94)</a>
2U24 Flash Storage Platform	2	On	Automatic	<a href="#">Two IOMs, Online, Automatic (page 96)</a>

Enclosure	# of IOMs/ ESMs	Offline/ Online	Manual/ Automatic	Process Link
	1	Off	Automatic	<a href="#">One IOM, Offline, Automatic (page 94)</a>
Storage Enclosure Basic	1	Off	Automatic	<a href="#">One IOM, Offline, Automatic (page 94)</a>

## 4.2 Two IOMs, Online, Manual

This firmware upgrade process is appropriate for the following enclosures:

- Ultrastar Data102 or Ultrastar Data60
- Two IOMs
- Will remain online (in use)
- Require a manual firmware reset



**Note:** For enclosures with limited availability for maintenance operations, the `wddcs <device> fw download <file>` and `wddcs <device> fw reset` operations may be performed at separate times instead of the combined `wddcs <device> fw download_reset <file>` operation described here.

**Step 1:** Use the `wddcs show` command to scan for all SEP devices within HGST/WD-developed enclosures and display the product information:

```
wddcs show
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
  product : <product>
  serial  : <serialnumber>
  firmware: <version>
  name    : <productname>

...
```

**Step 2:** Identify the SEP device requiring FW upgrade, and note its firmware version prior to the upgrade; this will be used to confirm a successful upgrade at the end of the process.



**Note:** For Ultrastar Data102 and Ultrastar Data60 enclosures, it is only necessary to update firmware on one SEP device; the other will be updated automatically.



**Important:** Do not unzip the tar.gz firmware bundle (for Ultrastar Data102 and Ultrastar Data60 enclosures) before issuing the `wddcs <device> fw download_reset <file>` command.

**Step 3:** Use the `wddcs <device> fw download_reset <file>` command to perform a firmware download to a single SEP device within an HGST/WD-developed enclosure and subsequently reset the IOMs for that device. For example:

```
wddcs <device> fw download_reset <file>
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Sent <#> segment(s)
Download has finished to the SEP, please wait.
The completion status will be checked after 15 minutes.

Download status complete (0x11)
Firmware was downloaded successfully
Starting the reset process...

Please ensure both paths to each drive are available before proceeding
with the reset of the 1st IOM to ensure that at least one path to each drive
will be available during the IOM reset to activate firmware.
The IOM will go offline for a period of time while the update is finalized.
Press 'Y' or 'y' when ready to continue:
```

The WDDCS Tool notifies the user that the first IOM will go offline.

**Step 4:** Enter Y or y to proceed:

```
y
1st IOM has been reset

Please ensure both paths to each drive are available before proceeding
with the reset of the 2nd IOM to ensure that at least one path to each drive
will be available during the IOM reset to activate firmware.
The IOM will go offline for a period of time while the update is finalized.
Press 'Y' or 'y' when ready to continue:
```

The WDDCS Tool notifies the user that the first IOM was reset and that the second IOM will go offline.

**Step 5:** Enter Y or y to proceed:

```
y
2nd IOM has been reset

IOM was reset successfully
```

The WDDCS Tool notifies the user that the second IOM was reset.

**Step 6:** Use the `wddcs show` command to scan for all SEP devices within HGST/WD-developed enclosures and display the product information:

```
wddcs show
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
  product : <product>
  serial  : <serialnumber>
  firmware: <version>
  name    : <productname>

...
```

**Step 7:** Identify the SEP device that received a FW upgrade, and confirm the new firmware version.

## 4.3 Two IOMs, Offline, Automatic

This firmware upgrade process is appropriate for the following enclosures:

- Ultrastar Data102, Ultrastar Data60, or 4U60 G2 Storage Enclosure
- Two IOMs
- Will be taken offline
- Require an automatic firmware activation



**Note:** For enclosures with limited availability for maintenance operations, the `wddcs <device> fw download <file>` and `wddcs <device> fw activate` operations may be performed at separate times instead of the combined `wddcs <device> fw download_activate <file>` operation described here.

**Step 1:** Use the `wddcs show` command to scan for all SEP devices within HGST/WD-developed enclosures and display the product information:

```
wddcs show
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
  product : <product>
  serial   : <serialnumber>
  firmware: <version>
  name     : <productname>

...
```

**Step 2:** Identify the SEP device requiring FW upgrade, and note its firmware version prior to the upgrade; this will be used to confirm a successful upgrade at the end of the process.



**Important:** Do not unzip the tar.gz firmware bundle (for Ultrastar Data102 and Ultrastar Data60 enclosures) before issuing the `wddcs <device> fw download_activate <file>` command.

**Step 3:** Use the `wddcs <device> fw download_activate <file>` command to perform a firmware download to a single SEP device within an HGST/WD-developed enclosure and subsequently activate the downloaded firmware. For example:

```
wddcs <device> fw download_activate <file>
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
Sent <#> segment(s)
Download has finished to the SEP, please wait.
The completion status will be checked after 15 minutes.

Download status complete (0x11)
Firmware was downloaded successfully
Starting the activation process...
```

This method of firmware activation will be disruptive.  
Please consider activating firmware offline to avoid any disruptions to I/O.

If the platform configuration is based on dual IOMs, the IOM(s) in question will go offline for a period of time while the update is finalized.  
If the platform configuration is based on a single IOM, the enclosure will go offline for a period of time while the update is finalized.

If you still prefer to continue with this method, press 'Y' or 'y':

The WDDCS Tool notifies the user that the IOM or enclosure will go offline.

**Step 4:** Use the `wddcs show` command to scan for all SEP devices within HGST/WD-developed enclosures and display the product information:

```
wddcs show
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
  product : <product>
  serial  : <serialnumber>
  firmware: <version>
  name    : <productname>

...
```

**Step 5:** Identify the SEP device that received a FW upgrade, and confirm the new firmware version.

## 4.4 One IOM, Offline, Automatic

This firmware upgrade process is appropriate for the following enclosures:

- Ultrastar Data102, Ultrastar Data60, Ultrastar Serv60+8, 4U60 G2 Storage Enclosure, 4U60 G1 Storage Enclosure, 2U24 Flash Storage Platform, and Storage Enclosure Basic
- One IOM
- Will be taken offline
- Require an automatic firmware activation



**Note:** For enclosures with limited availability for maintenance operations, the `wddcs <device> fw download <file>` and `wddcs <device> fw activate` operations may be performed at separate times instead of the combined `wddcs <device> fw download_activate <file>` operation described here.

**Step 1:** Use the `wddcs show` command to scan for all SEP devices within HGST/WD-developed enclosures and display the product information:

```
wddcs show
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
  product : <product>
  serial  : <serialnumber>
```

```
firmware: <version>
name      : <productname>
...
```

**Step 2:** Identify the SEP device requiring FW upgrade, and note its firmware version prior to the upgrade; this will be used to confirm a successful upgrade at the end of the process.



**Important:** Do not unzip the tar.gz firmware bundle (for Ultrastar Data102, Ultrastar Data60, and Ultrastar Serv60+8 enclosures) before issuing the `wddcs <device> fw download_activate <file>` command.

**Step 3:** Use the `wddcs <device> fw download_activate <file>` command to perform a firmware download to a single SEP device within an HGST/WD-developed enclosure and subsequently activate the downloaded firmware. For example:

```
wddcs <device> fw download_activate <file>
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
Sent <#> segment(s)
Download has finished to the SEP, please wait.
The completion status will be checked after 15 minutes.

Download status complete (0x11)
Firmware was downloaded successfully
Starting the activation process...

This method of firmware activation will be disruptive.
Please consider activating firmware offline to avoid any disruptions to I/O.

If the platform configuration is based on dual IOMs, the IOM(s) in question
will go offline for a period of time while the update is finalized.
If the platform configuration is based on a single IOM, the enclosure
will go offline for a period of time while the update is finalized.

If you still prefer to continue with this method, press 'Y' or 'y':
```

The WDDCS Tool notifies the user that the IOM or enclosure will go offline.

**Step 4:** Enter Y or y to proceed:

```
y
Firmware activation command was sent successfully
```

**Step 5:** Use the `wddcs show` command to scan for all SEP devices within HGST/WD-developed enclosures and display the product information:

```
wddcs show
wddcs v2.1.4.0
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates

Device: <device>
  product : <product>
  serial  : <serialnumber>
  firmware: <version>
```

```

name      : <productname>
...

```

**Step 6:** Identify the SEP device that received a FW upgrade, and confirm the new firmware version.

## 4.5 Two IOMs, Online, Automatic

This firmware upgrade process is appropriate for the following enclosures:

- 4U60 G1 Storage Enclosure or 2U24 Flash Storage Platform
  - For these products, each IOM requires its own download/activate process.
- Two IOMs
- Will remain online (in use)
- Require an automatic firmware activation



**Note:** For enclosures with limited availability for maintenance operations, the `wddcs <device> fw download <file>` and `wddcs <device> fw activate` operations may be performed at separate times instead of the combined `wddcs <device> fw download_activate <file>` operation described here.

**Step 1:** Use the `wddcs show` command to scan for all SEP devices within HGST/WD-developed enclosures and display the product information:

```

wddcs show
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
  product : <product>
  serial  : <serialnumber>
  firmware: <version>
  name    : <productname>
...

```

**Step 2:** Identify the SEP device requiring FW upgrade, and note its firmware version prior to the upgrade; this will be used to confirm a successful upgrade at the end of the process.

**Step 3:** Use the `wddcs <device> fw download_activate <file>` command to perform a firmware download to a single SEP device within an HGST/WD-developed enclosure and subsequently activate the downloaded firmware. For example:

```

wddcs <device> fw download_activate <file>
wddcs v2.1.4.0
Copyright (c) 2019–2021 Western Digital Corporation or its affiliates

Device: <device>
Sent <#> segment(s)
Download has finished to the SEP, please wait.
The completion status will be checked after 15 minutes.

Download status complete (0x11)
Firmware was downloaded successfully

```

```
Starting the activation process...
```

```
This method of firmware activation will be disruptive.  
Please consider activating firmware offline to avoid any disruptions to I/O.
```

```
If the platform configuration is based on dual IOMs, the IOM(s) in question  
will go offline for a period of time while the update is finalized.  
If the platform configuration is based on a single IOM, the enclosure  
will go offline for a period of time while the update is finalized.
```

```
If you still prefer to continue with this method, press 'Y' or 'y':
```

The WDDCS Tool notifies the user that the IOM or enclosure will go offline.

**Step 4:** Enter Y or y to proceed:

```
y  
Firmware activation command was sent successfully
```

**Step 5:** Use the `wddcs show` command to scan for all SEP devices within HGST/WD-developed enclosures and display the product information:

```
wddcs show  
wddcs v2.1.4.0  
Copyright (c) 2019-2021 Western Digital Corporation or its affiliates  
  
Device: <device>  
  product : <product>  
  serial  : <serialnumber>  
  firmware: <version>  
  name    : <productname>  
  
...
```

**Step 6:** Identify the SEP device that received a FW upgrade, and confirm the new firmware version.

# Uninstallation

The WDDCS Tool may be uninstalled from Windows Server, Debian, Ubuntu, RHEL, and CentOS operating systems, or via `tar.gz`. The following sections provide uninstallation instructions for each package.

## In This Chapter:

- Uninstalling from Debian/Ubuntu..... 99
- Uninstalling from RHEL/CentOS.....99
- Uninstalling via `tar.gz`..... 99
- Uninstalling from Windows Server..... 99

## 5.1 Uninstalling from Debian/Ubuntu

---

Follow these steps to uninstall the WDDCS Tool from Debian/Ubuntu operating systems.

**Step 1:** Use the `dpkg -r` command to uninstall the DEB package:

```
# dpkg -r wddcs
(Reading database ... 527031 files and directories currently installed.)
Removing wddcs (<version>) ...
```

## 5.2 Uninstalling from RHEL/CentOS

---

Follow these steps to uninstall the WDDCS Tool from Red Hat Enterprise Linux (RHEL) or CentOS operating systems with the Red Hat Package Manager (RPM).

**Step 1:** Verify that the RPM package is installed:

```
# rpm -qa | grep -i wddcs
wddcs-<version>.x86_64
```

**Step 2:** Remove the RPM package:

```
# rpm -e wddcs
```

**Step 3:** Repeat the `grep` command to verify that the RPM package has been removed (i.e. the filename is not returned):

```
# rpm -qa | grep -i wddcs
#
```

## 5.3 Uninstalling via tar.gz

---

Follow these steps to uninstall the WDDCS Tool via tar.gz.

**Step 1:** Navigate to the directory to where the tar.gz files were installed. For example:

```
# cd /home/wddcs
```

**Step 2:** From that directory, use the `rm -r` command to remove the installed directory and files:


```
# rm -r wddcs-<version>-1.x86_64
```

## 5.4 Uninstalling from Windows Server

---

Follow these steps to uninstall the WDDCS Tool from Windows Server operating systems.

**Step 1:** From the **Start Menu**, select the **Control Panel** icon:

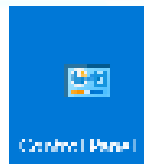


The **Control Panel** window appears:



**Step 2:** Under the **Programs** section, click the link for **Uninstall a program**.


The **Programs and Features** window appears.

**Step 3:** Scroll down the list of installed programs and find the WDDCS Tool:

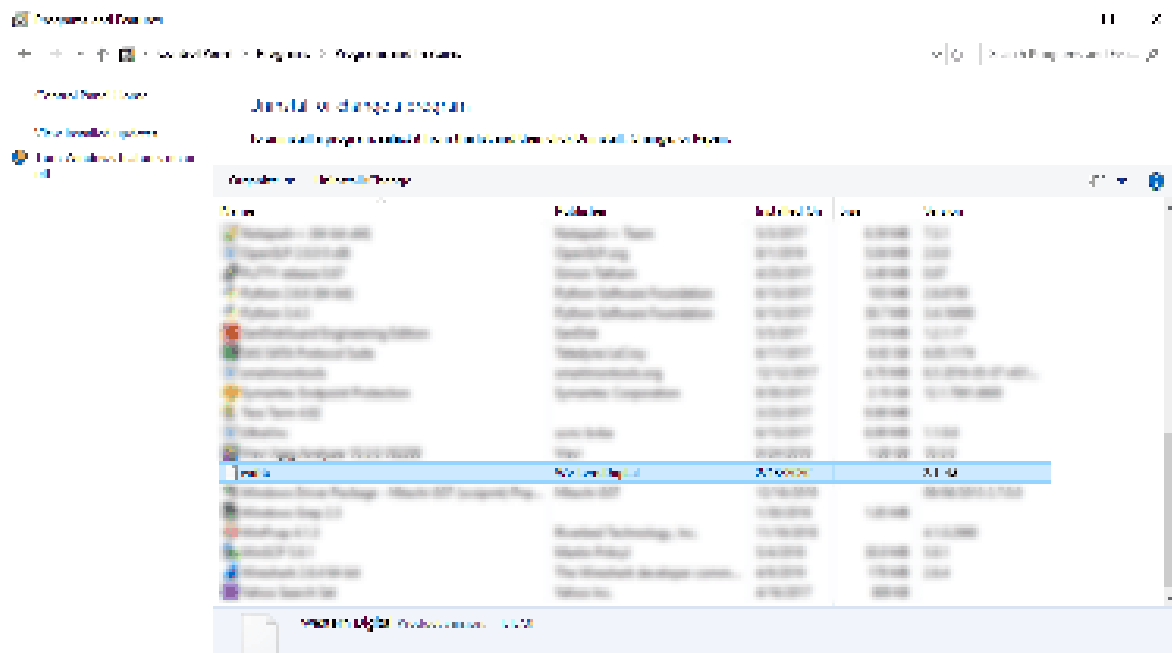


**Step 4:** With the WDDCS Tool selected, right-click and choose **Uninstall/Change** from the tooltip.

A **wddcs Uninstall** dialog box appears, notifying the user of the directory from which the WDDCS Tool will be uninstalled:

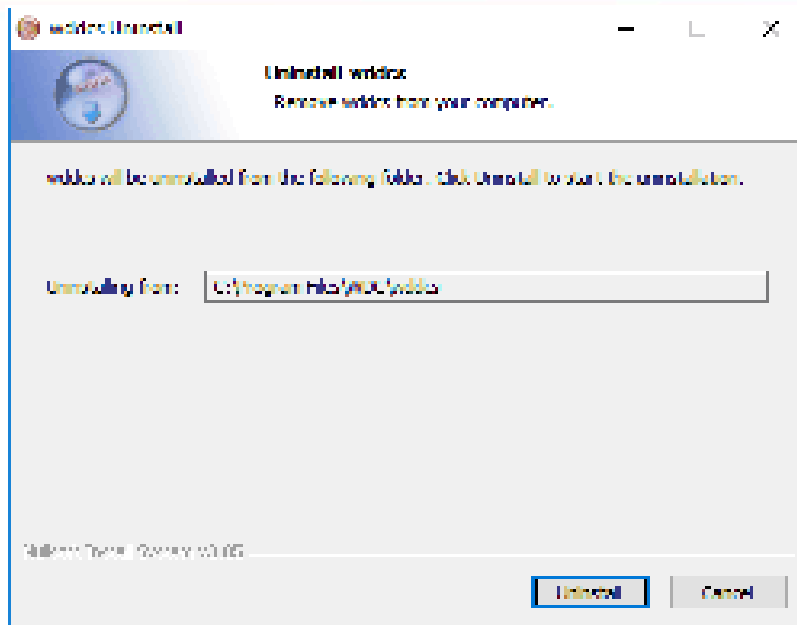


**Step 5:** Click the **Uninstall** button.

The **wddcs Uninstall** window updates, showing that the WDDCS Tool is being uninstalled:

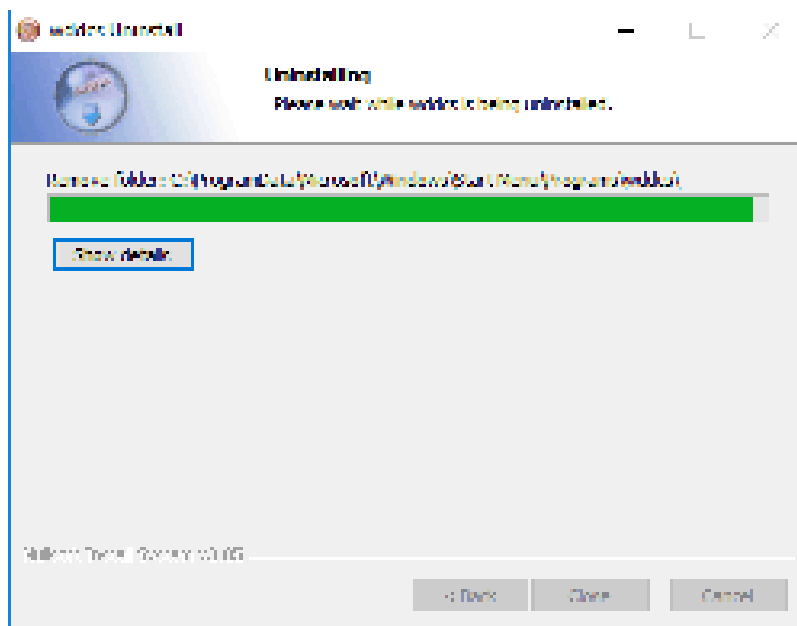

After a few seconds, the **wddcs Uninstall** window updates again, showing that the uninstallation is complete:

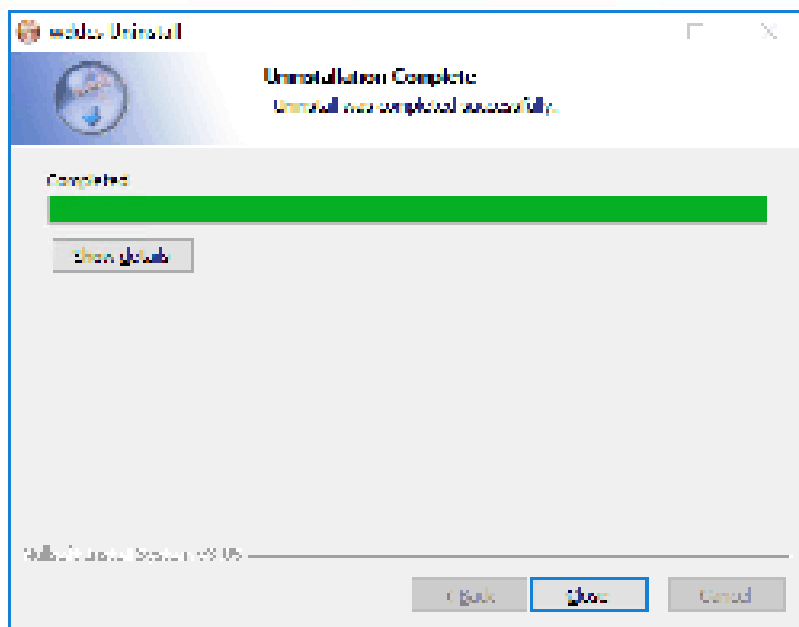

**Step 6:** Click the **Close** button.

# Appendices

## In This Chapter:

- Glossary.....	104
-----------------	-----



## 6.1 Glossary

The following acronyms, words, and terms are used throughout this document. Definitions are provided for reference.

Term	Definition
<b>AC</b>	Alternating Current
<b>CLI</b>	Command-Line Interface
<b>DPKG</b>	Debian Package
<b>Enclosure</b>	A chassis with one or more I/O modules, PSUs, FANs, etc. that houses and controls the environment of the HDDs/SSDs inside of it.
<b>ESM</b>	Enclosure Storage Manager. This is the I/O Canister for the enclosure. The ESM has LEDs for location, fault, and power. There are also SAS connectors on each ESM for server/host connectivity.
<b>EULA</b>	End User License Agreement
<b>HBA</b>	Host Bus Adapter
<b>FW</b>	Firmware
<b>HDD</b>	Hard Disk Drive
<b>HGST</b>	Hitachi Global Storage Technologies
<b>IO Canister</b>	Another name for an ESM
<b>IOM</b>	Input/Output Module. Another name for an ESM.
<b>JBOD</b>	Just a Bunch of Disks
<b>LED</b>	Light Emitting Diode
<b>NVMe</b>	Non-Volatile Memory Express
<b>OOBM</b>	Out-of-Band Management
<b>OS</b>	Operating System
<b>PSU</b>	Power Supply Unit
<b>PWM</b>	Pulse-Width Modulation (method of controlling speed/RPM of system fans)
<b>RHEL</b>	Red Hat Enterprise Linux
<b>RMT</b>	Remote
<b>RPM</b>	Red Hat Package Manager
<b>SAS</b>	Serial Attached SCSI
<b>SATA</b>	Serial ATA
<b>SCSI</b>	Small Computer Systems Interface
<b>SEP</b>	SCSI Enclosure Processor
<b>Server/Host</b>	Hardware with an Operating System and HBA used to access the drives in the storage enclosure.
<b>SEC1</b>	Secondary SAS Expander 1
<b>SEC2</b>	Secondary SAS Expander 2

Term	Definition
<b>SES</b>	SCSI Enclosure Services
<b>SSD</b>	Solid State Drive
<b>VPD</b>	Vital Product Data
<b>WD</b>	Western Digital