

Installation Instructions

P/N MMI-20010152, Rev. A

June 2007

ATEX Installation Instructions for Micro Motion[®] CMF400 Sensors with Booster Amplifier

For ATEX-approved sensor installations



Note: For hazardous installations in Europe, refer to standard EN 60079-14 if national standards do not apply.

Information affixed to equipment that complies with the Pressure Equipment Directive can be found on the internet at www.micromotion.com/library.

©2007, Micro Motion, Inc. All rights reserved. ELITE and ProLink are registered trademarks, and MVD and MVD Direct Connect are trademarks of Micro Motion, Inc., Boulder, Colorado. Micro Motion is a registered trade name of Micro Motion, Inc., Boulder, Colorado. The Micro Motion and Emerson logos are trademarks and service marks of Emerson Electric Co. All other trademarks are property of their respective owners.

Model CMF400 Sensors

ATEX Installation Instructions

- For installing the following Micro Motion sensors:
 - Model CMF400 with booster amplifier with ATEX certificate number KEMA 01 ATEX 2183



Subject: Equipment type

Manufactured and submitted
for examination

Address

Basis for examination:

Standard basis

Code for type of protection

Sensor type CMF400* *N**(Z or F)*****

Micro Motion, Inc.

Boulder, Co. 80301, USA

Annex II of Directive 94/9/EC

EN 50014:1997

General requirements

EN 50018:2000

Flameproof enclosure 'd'

EN 50019:2000

Increased safety 'e'

EN 50020:1994

Intrinsic safety 'i'

EN 50281-1-1:1998

Dust 'D'

EEx d [ib] ib IIB T1–T6

EEx de [ib] ib IIB T1–T6


EEx d [ib] ib IIB T1–T5

EEx de [ib] ib IIB T1–T5

1) Subject and type

Sensor type CMF400 ****N**(Z or F)****

Instead of the *** letters and numerals will be inserted which characterize the following modifications:

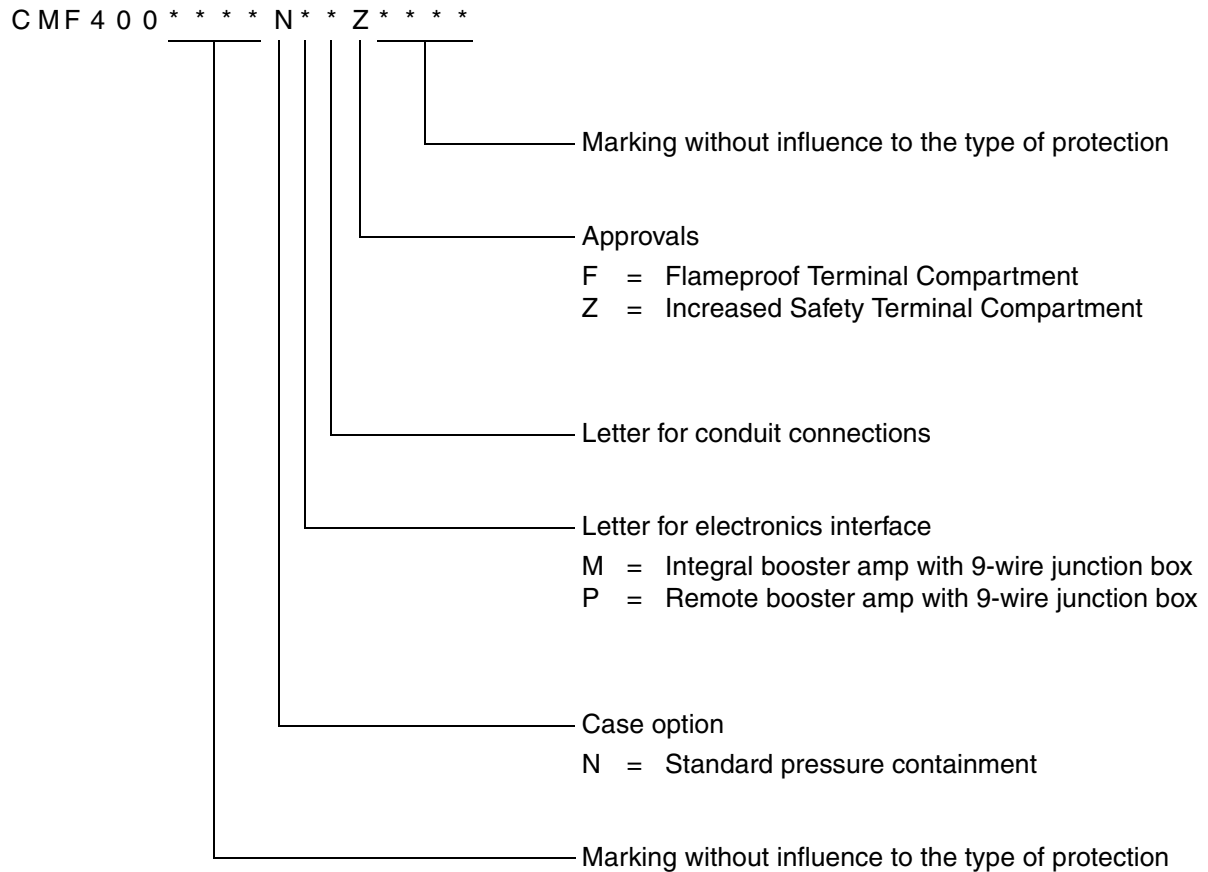

2) Description

The Booster Amplifier used in the range of Mass Flow Sensor Models CMF400....NB1 and Models CMF400....NB2 has been redesigned and certified as a component under KEMA 01 ATEX 2184 U (see Booster Amp section). The Booster Amplifier may be used either integrally or remotely mounted in relation to the sensor body, depending upon the maximum process temperature. The redesigned Booster Amplifier is able to accept Micro Motion's 9-Wire J-Box.

The terminal compartment of the Booster Amplifier may be Certified as either a flame proof (EEx d) enclosure or an increased safety (EEx e) enclosure.

The Booster Amplifier additionally incorporates an intrinsically safe Junction Housing for termination and connection of the separately certified intrinsically safe transmitter and sensor wiring.


3) Parameters

3.1) Electrical parameters: see Booster Amplifier Section.

3.2) Type CMF400* ****M*(F or Z)****
(Integral booster amplifier provided with 9-wire j-box)

3.2.1) Temperature class

The classification into a temperature class depends on the temperature of the medium taking into account the maximum operating temperature of the sensor and is shown in the following graph:

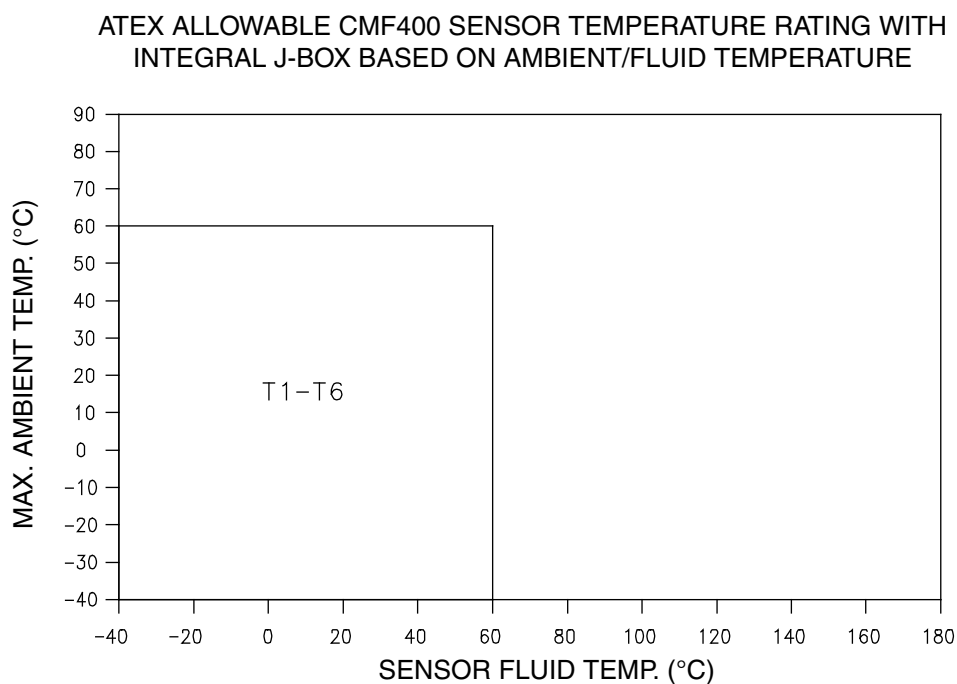


3.2.2) Ambient temperature range

CMF400* ****M*(F or Z)**** Ta -40 °C up to +60 °C

3.3) Type CMF400* ****P*(F or Z)****
(Remote booster amplifier provided with 9-wire j-box)

3.3.1) Temperature class

The classification into a temperature class depends on the temperature of the medium taking into account the maximum operating temperature of the sensor and is shown in the following graph:

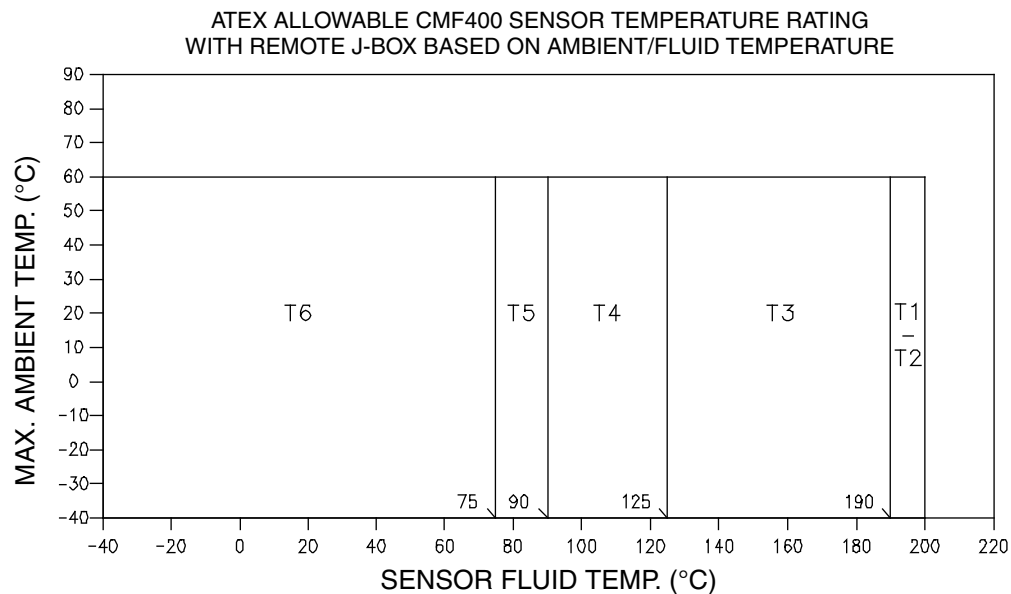

3.3.2) Ambient temperature range

CMF400* ****P*(F or Z)****

Ta -40 °C up to +60 °C

4) Marking

© 0575 ϵ_x II 2 G

$$-40\text{ }^{\circ}\text{C} \leq T_a \leq +60\text{ }^{\circ}\text{C}$$

- type	- type of protection
CMF400* ****(M or P)*(F or Z)****	EEx de [ib] ib IIB T1-T6

5) Special conditions for safe use / Installation instructions

- 5.1) For certified conduit installations a customer supplied Conduit Seal Fitting is required within 18" of the enclosure.
- 5.2) Risk of Ignition of Hazardous Atmospheres — Disconnect equipment from supply circuit and wait 30 minutes before opening. Keep assembly tightly closed when in operation.
- 5.3) Explosion Hazard — Substitution of components may impair Intrinsic Safety.
- 5.4) For installation only with Micro Motion Booster Amplifier and Transmitters.

Booster Amplifier

ATEX Installation Instructions

- For installing a booster amplifier with 9-wire junction box to CMF400 sensor



Subject:	Equipment type	Booster amplifier
Manufactured and submitted for examination		Micro Motion, Inc.
Address		Boulder, Co. 80301, USA
Basis for examination:		Annex II of Directive 94/9/EC
Standard basis		EN 50014:1997 General requirements
		EN 50018:2000 Flameproof enclosure 'd'
		EN 50019:2000 Increased safety 'e'
		EN 50020:1994 Intrinsic safety 'i'
		EN 50281-1-1:1998 Dust 'D'
Code for type of protection		EEx d [ib] IIB T5 When Core Processor (Model 700) is Integrally Mounted to Booster Amplifier
		or
		EEx de [ib] IIB T5
		EEx d [ib] IIB T6 When 9-Wire J-Box is Mounted on Booster Amp
		or
		EEx de [ib] IIB T6

1) Subject and type

Booster amplifier

2) Description

The Booster Amplifier is used with the Micro Motion Mass Flow Sensor model CMF400 (with ATEX Certificate Number: KEMA 01ATEX 2183) and a Micro Motion transmitter to form a Mass Flow Meter system. The Booster Amplifier may be integrally or remotely mounted in relation to the sensor body, depending on the maximum process temperature. The Booster Amplifier is able to accept Micro Motion's 9-Wire J-Box or Core Processor (Model 700) inputs.

The terminal compartment of the Booster Amplifier may be Certified as either a flame proof (EEx d) enclosure or an increased safety (EEx e) enclosure.

The Booster Amplifier additionally incorporates an intrinsically safe Junction Housing for termination and connection of intrinsically safe transmitter and sensor wiring.

The temperature class is T5 when the Core Processor (Model 700) is used; otherwise the temperature class is T6.

3) Parameters

3.1) Non intrinsically safe input circuit (mains circuit)

Voltage	Ui	AC	85–265	V
Max. voltage	Um	AC	265	V
Max. current	Ii		500	mA
Max. power	Pi		50	W

3.2) Non intrinsically safe output circuits (drive coil)

Max. voltage	Uo	DC	32	V
Max. current	Io		2	A

3.3) For intrinsic safety EEx [ib] IIB only connect to certified intrinsically safe circuits, with the following maximum values:

3.3.1) Input circuit, Model 700 core processor (terminals 1–4):

Voltage	Ui	DC	17,3	V
Current	Ii		484	mA
Power	Pi		2,1	W
Effective internal resistance	Ci		2,2	nF
Effective internal inductance	Li		30	μH

3.3.2) Input circuit, 9-wire junction box

3.3.2.1) Drive coil circuit (brown and red insulated wires)

Voltage	U _i	DC	11,4	V
Current	I _i		2,45	A
Power	P _i		2,54	W
Effective internal capacitance	C _i		Negligible	
Effective internal inductance	L _i		Negligible	

3.3.2.2) Pick-off coils (green and white, blue and grey, insulated wires)

Voltage	U _i	DC	30	V
Current	I _i		215	mA
Power	P _i		1,6	W
Effective internal capacitance	C _i		Negligible	
Effective internal inductance	L _i		Negligible	
when connected to CMF400	L _i		6,9	mH

3.3.2.3) Temperature pass through wiring (violet, orange and yellow insulated wires)

Voltage	U _i	DC	30	V
Current	I _i		253	mA
Power	P _i		1,9	W
Effective internal capacitance	C _i		Negligible	
Effective internal inductance	L _i		Negligible	

3.4) Ambient temperature range

Booster amplifier	T _a	−40 °C up to +60 °C
Maximum surface temperature for Dust	T _d	+80 °C

4) Marking

0575  II 2 G D

T80 °C

Maximum surface temperature for Dust

−40 °C ≤ T_a ≤ +60 °C

- type	- type of protection
Booster amplifier with integrally mounted core processor (Model 700)	EEx d [ib] IIB T5 or EEx de [ib] IIB T5
Booster amplifier with 9-wire j-box	EEx d [ib] IIB T6 or EEx de [ib] IIB T6

5) Special conditions for safe use / Installation instructions

- 5.1) For certified conduit installations a customer supplied Conduit Seal Fitting is required within 18" of the enclosure.
- 5.2) Risk of Ignition of Hazardous Atmospheres — Disconnect equipment from supply circuit and wait 30 minutes before opening. Keep assembly tightly closed when in operation.
- 5.3) Explosion Hazard — Substitution of components may impair Intrinsic Safety.
- 5.4) For installation only with Micro Motion Mass Flow Sensor type CMF400 with ATEX Certificate Number: KEMA 01ATEX 2183.

Cable glands and adapters

ATEX Installation Instructions

1) **ATEX certification requirement**

All sensor and transmitter cable glands and adapters are required to be ATEX certified. Refer to the specific manufacturer's website for installation instructions.

©2007, Micro Motion, Inc. All rights reserved. P/N MMI-20010152, Rev. A



For the latest Micro Motion product specifications, view the
PRODUCTS section of our web site at www.micromotion.com

Micro Motion Inc. USA

Worldwide Headquarters

7070 Winchester Circle
Boulder, Colorado 80301

T +1 303-527-5200

+1 800-522-6277

F +1 303-530-8459

Micro Motion Europe

Emerson Process Management

Neonstraat 1

6718 WX Ede

The Netherlands

T +31 (0) 318 495 555

F +31 (0) 318 495 556

Micro Motion Asia

Emerson Process Management

1 Pandan Crescent

Singapore 128461

Republic of Singapore

T +65 6777-8211

F +65 6770-8003

Micro Motion United Kingdom

Emerson Process Management Limited

Horsfield Way

Bredbury Industrial Estate

Stockport SK6 2SU U.K.

T +44 0870 240 1978

F +44 0800 966 181

Micro Motion Japan

Emerson Process Management

1-2-5, Higashi Shinagawa

Shinagawa-ku

Tokyo 140-0002 Japan

T +81 3 5769-6803

F +81 3 5769-6844

