

Samsung  
**GALAXY GRAND Prime™**

**User Guide**



# Table of Contents

---

Introduction .....	1
About the User Guide .....	1
Get Support from Sprint Zone.....	2
Get Started.....	3
Parts and Functions .....	3
Phone Layout.....	3
Set Up Your Phone .....	5
Charge the Battery .....	7
Turn Your Phone On and Off .....	9
Use the Touchscreen.....	11
Activate Your Phone .....	14
Complete the Setup Screens .....	15
Basic Operations .....	17
Basics.....	17
Home Screen and Applications (Apps) List .....	17
Phone Settings Menu.....	18
Portrait and Landscape Screen Orientation.....	19
Capture Screenshots .....	19
Applications.....	20
Launch Applications.....	20
Apps List .....	20
Phone Number.....	25
Airplane Mode.....	26
Enter Text.....	27
Samsung Keyboard .....	27
Google Voice Typing.....	28
Tips for Editing Text .....	29
Google Account.....	29
Create a Google Account.....	30
Sign In to Your Google Account .....	36
Google Play Store .....	41
Find and Install an App .....	42

Request a Refund for a Paid App .....	43
Update an App .....	44
Uninstall an App .....	47
Get Help with Google Play .....	48
Lock and Unlock Your Screen .....	49
Update Your Phone.....	51
Update Your Phone Software .....	51
Update Your Profile.....	54
Update Your PRL.....	55
Your Phone Interface .....	56
Home Screen Basics.....	56
Home Screen Layout .....	56
Extended Home Screens .....	58
Status Bar .....	59
Notification Panel .....	61
Customize the Home Screen .....	64
Change the Wallpaper .....	64
Add Shortcuts to the Home Screen .....	66
Add Widgets to the Home Screen .....	67
Add Folders to the Home Screen .....	68
Phone App .....	69
Place and Answer Calls .....	69
Call Using the Phone Dialer.....	70
Call Emergency Numbers.....	71
Answer Phone Calls.....	72
In-Call Screen Layout and Operations.....	75
Place a Call from Contacts .....	77
Call from Call Logs.....	79
Optional Services .....	81
Voicemail Setup .....	81
Visual Voicemail.....	82
Set Up Visual Voicemail.....	82
Review Visual Voicemail.....	84
Listen to Multiple Voicemail Messages.....	85
Visual Voicemail Options .....	86

Configure Visual Voicemail Settings.....	87
Wi-Fi Calling.....	91
Caller ID Blocking .....	92
Call Waiting.....	93
Call Forwarding.....	94
Call Settings.....	96
Contacts .....	97
Add a Contact .....	98
Check Contacts.....	102
Contacts Screen Layout.....	103
Edit a Contact .....	104
Delete a Contact .....	105
Share a Contact.....	107
Profile Sharing .....	108
Import Contacts.....	110
Back Up Contacts .....	111
Messaging and Internet.....	113
Text and Multimedia Messaging .....	113
Send a Text Message .....	113
Send a Multimedia Message (MMS).....	115
Save and Resume a Draft Message.....	118
New Messages Notification.....	119
Manage Message Conversations .....	119
Create and Send Gmail .....	123
Create and Send a Gmail Message.....	123
Check Received Gmail Messages.....	125
Manage Gmail Messages .....	127
Use Gmail Labels.....	127
Archive Gmail Threads .....	128
Mute Gmail Threads .....	129
Delete Gmail Threads.....	130
Search Gmail Messages.....	131
Report Spam or Phishing Gmail .....	133
Add Another Google (Gmail) Account .....	134
Switching Between Gmail Accounts .....	135



Email .....	136
Set Up an Email Account.....	136
Add an Email Account.....	137
Add an Exchange ActiveSync Account.....	140
Compose and Send Email .....	143
Delete an Email Account.....	147
Manage Your Email Inbox.....	149
Exchange ActiveSync Email Features .....	150
Data Services General Information (LTE and 3G Networks).....	152
Sprint Spark LTE.....	152
Your User Name .....	154
Data Connection Status and Indicators .....	156
Browser .....	156
Use the Browser .....	157
Add a Bookmark .....	158
View Browser History.....	159
Open New Browser Tab.....	161
Browser Settings.....	162
Chrome Browser .....	162
Camera and Video .....	164
Take Pictures and Record Videos .....	164
Take a Picture .....	165
Viewfinder Screen.....	166
Record Videos .....	167
Shooting Modes .....	168
View Pictures and Videos Using Gallery .....	169
Edit Pictures .....	173
Share Pictures and Videos .....	179
Send Pictures or Videos by Email or Gmail.....	179
Send a Picture or Video by Multimedia Message.....	181
Send Pictures or Videos Using Bluetooth.....	182
Share Pictures or Videos via Additional Apps or Social Media .....	184
Share Videos on YouTube.....	185
Camera Options and Settings.....	186
Switch Cameras.....	186

Set Camera Options .....	187
Useful Apps and Features.....	189
Sprint Zone.....	189
Sprint Family Locator .....	190
Sprint Fun & Games.....	190
Sprint TV & Movies .....	190
Calculator .....	191
Calendar.....	193
Add an Event to the Calendar.....	193
View Calendar Events.....	196
Share Calendar Events.....	197
Sync Calendars.....	199
Synchronize an Exchange ActiveSync Calendar.....	201
Clock .....	201
Set Alarms.....	203
World Clock.....	205
Stopwatch .....	205
Timer .....	207
Galaxy Apps.....	207
Gallery.....	207
Google Hangouts .....	209
Google Maps.....	211
Google Play Books.....	213
Google Play Games .....	213
Google Play Movies & TV .....	213
Google Play Music .....	214
Google Play Newsstand.....	217
Google Search .....	217
Use Google Search.....	217
Use Google Voice Search.....	219
Lookout Security .....	219
Memo .....	220
My Files.....	221
OneDrive .....	221
OneNote .....	222

Video .....	222
Voice Recorder .....	223
YouTube.....	226
1Weather.....	228
Amazon .....	228
Facebook .....	229
Messaging Plus.....	229
NASCAR Mobile.....	230
NBA Game Time .....	230
NextRadio .....	230
Pages Manager.....	231
Uber .....	231
Connectivity.....	232
Transfer Files Between Your Phone and a Computer .....	232
Wi-Fi.....	233
Turn Wi-Fi On and Connect to a Wireless Network.....	234
Wi-Fi Settings.....	236
Disconnect Wi-Fi.....	238
Wi-Fi Direct .....	239
Bluetooth .....	242
Enable Bluetooth.....	242
Pair Bluetooth Devices.....	245
Connect to a Paired Bluetooth Device.....	247
Share Information Using Bluetooth.....	248
Receiving Data via Bluetooth.....	251
Sprint Worldwide Wireless Service .....	252
Activate Sprint Worldwide Service on Your Account .....	252
Your Phone’s SIM Card for International Roaming.....	252
Set Network Mode Options .....	253
Make and Receive Worldwide Calls .....	253
Sprint International Voicemail Service .....	254
Set Up Your Voicemail Access Number for International Use.....	254
Access Your Voicemail Internationally.....	255
International Data Roaming .....	255
International Roaming Status Messages .....	256

Contact Sprint for Assistance with International Service .....	257
Settings .....	259
Basic Settings .....	259
Wi-Fi Calling Settings.....	263
Wi-Fi Settings Menu.....	265
Bluetooth Settings .....	269
Hotspot Settings.....	271
Airplane Mode .....	274
Data Usage Settings .....	276
Mobile Networks Settings .....	278
NFC and Payment.....	280
More Connection Settings.....	284
Tethering Settings.....	286
Printing .....	287
Virtual Private Networks (VPN).....	288
Default Messaging App Settings.....	296
Sounds and Notifications Settings .....	297
Sound Mode.....	298
Volume .....	299
Ringtones and Sounds.....	300
Vibrations .....	302
Sound Quality and Effects .....	303
Notifications.....	304
Display Settings .....	305
Motions and Gestures.....	307
Applications Settings.....	308
Application Manager .....	309
Default Applications .....	311
Calendar Settings .....	312
Camera Settings .....	313
Contacts Settings.....	314
Email Settings .....	316
Internet Settings.....	319
Messages Settings.....	320
Phone Settings.....	323

Weather Settings .....	325
Wallpaper .....	327
Location Settings.....	328
Lock Screen and Security Settings .....	330
Lock Screen and Security Overview.....	330
Screen Lock .....	331
Disable the Screen Lock.....	337
Easy Mode .....	339
Accessibility Settings.....	341
Vision Accessibility Settings.....	343
Hearing Accessibility Settings.....	344
Dexterity and Interaction Settings.....	346
Configure Other Accessibility Settings.....	348
Add Accounts .....	349
Backup and Reset.....	351
Language and Input Settings .....	354
Battery Settings.....	356
Power Saving Mode.....	357
Ultra Power Saving Mode .....	358
Storage Settings.....	360
Date and Time Settings .....	361
Activate This Device.....	362
System Update.....	363
About Device.....	364
For Assistance .....	366
Sprint Account Information and Help .....	366
Sprint Account Passwords.....	366
Manage Your Account .....	366
Sprint Support Services .....	367
Copyright Information.....	368
Index.....	369

# Introduction

---

The following topics describe the basics of using this guide and your new phone.

## About the User Guide

Thank you for purchasing your new Samsung Galaxy Grand Prime. The following topics explain how best to use this guide to get the most out of your phone.

### Before Using Your Phone

Read [Get Started](#) and [Basic Operations](#) thoroughly for proper usage.

Accessible services may be limited by subscription contract conditions.

### Descriptions in the User Guide

Note that most descriptions in this guide are based on your phone's setup at the time of purchase. Unless otherwise noted, instructions begin from the phone's Home screen, which is displayed by pressing the **Home** key. Some operation descriptions may be simplified.

### Screenshots and Key Labels

Screenshots in the user guide may appear differently on your phone. Key labels in the user guide are simplified for description purposes and differ from your phone's display.


### Other Notations

In the user guide, the phone may be referred to either as "phone," "device," or "handset."


# Get Support from Sprint Zone

In addition to your phone's built-in Help menu, you can also access support for your phone and service through the preloaded Sprint Zone app.

1. From home, tap **Apps**  > **Sprint Zone** .

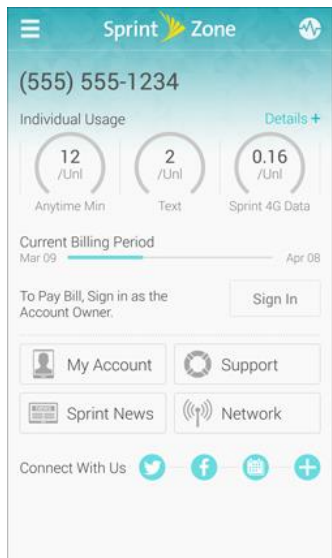

2. From the Sprint Zone main page, tap **Support**.

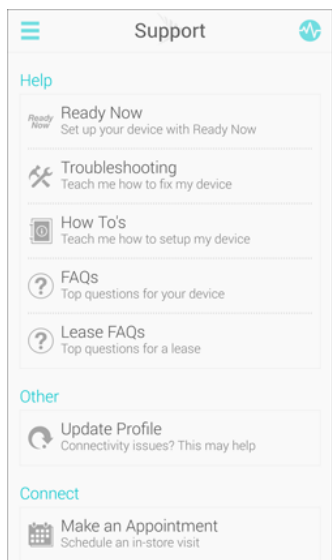

3. Tap a topic to view its contents.

# Get Started

The following topics give you all the information you need to set up your phone and wireless service the first time.


## Parts and Functions

These topics illustrate your phone's primary parts and key functions.


### Phone Layout

The following illustration outlines your phone's primary external features and buttons.



Part	Description
<b>Back key</b> 	Return you to the previous screen, or close a dialog box, options menu, the Notification panel, or onscreen keyboard.
<b>Earpiece</b>	Listen to calls and automated prompts when using the phone.
<b>Flash</b>	Help illuminate subjects in low-light environments when the camera is focusing and capturing a picture or video.
<b>Front camera</b>	Takes pictures and records videos while facing the screen, and allows you to video conference.



Part	Description
<b>Headset jack</b>	Plug in a headset for convenient, hands-free conversations.
<b>Home key</b>	Return you to the Home screen. Press and hold to open Google Search/Google Now.
<b>Microphone</b>	Transmit your voice for phone calls or record your voice or ambient sounds for voice recordings and videos. There are two microphones, one on the top and one on the bottom.
<b>Power key</b>	Turn the phone or screen on or off, or switch your phone airplane mode.
<b>Proximity sensors</b>	Detect when objects are close to the screen. For example, when you hold the phone to your ear while on a phone call, the sensors temporarily lock the screen to prevent accidental screen touches.
<b>Rear camera</b>	Take pictures and videos.
<b>Recents key</b> 	Access recently used apps.
<b>Speaker</b>	Play ringtones and sounds. The speaker also lets you hear the caller's voice in speakerphone mode.
<b>Touchscreen</b>	Display information needed to operate your phone, such as the call status, the Contacts list, and the date and time. Also provides one-tap access to all of your features and applications.
<b>USB charger/Accessory port</b>	Connect the phone to the charger via a USB cable.
<b>Volume key</b>	Adjust the ringtone or media volume or adjust the voice volume during a call.

**CAUTION!** Inserting an accessory into the incorrect jack or port may damage the phone.


# Set Up Your Phone

Before using your new phone, you must install and charge the battery. Prior to use, it is necessary to install an optional memory card (not included) and the battery.

**Note:** Your phone's battery should have enough charge to turn the phone on and find a signal, complete the setup wizard, set up voicemail, and make a call. You should fully charge the battery as soon as possible.

## Remove the Back Cover

1. Remove the back cover using the slot on the side of your phone.
2. Carefully lift the cover.

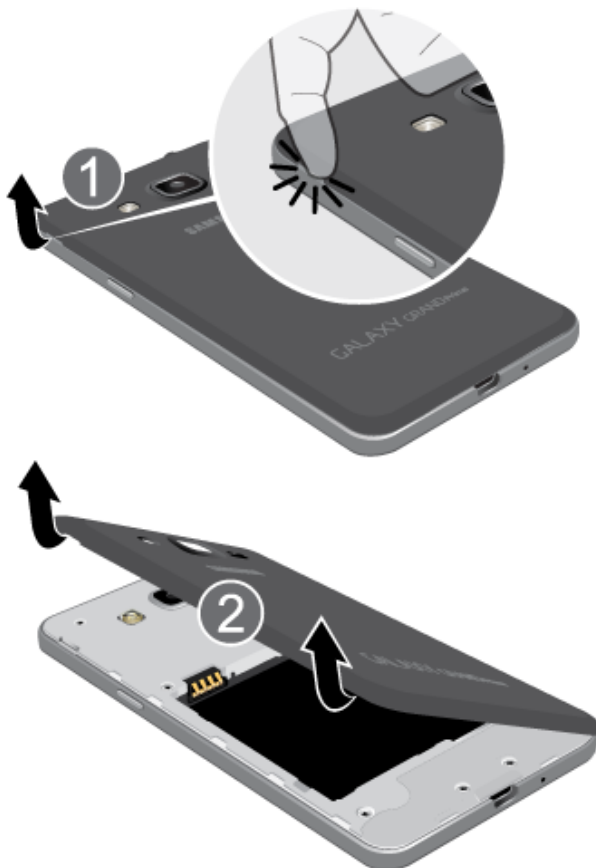

**Warning:** Do not bend or twist the back cover excessively. Doing so may damage the cover.

## Install a Memory Card (Optional)

You can use an optional microSD or microSDHC memory card (not included) to expand available memory space.

- Carefully slide the memory card into the memory card socket (as shown) until the card locks into place. Make sure that the card's gold contacts face into the phone and that the card is positioned as shown.




## Install the Battery

- Insert the battery, aligning the gold contacts on the battery with the gold contacts on the phone, and gently press the battery into place.



## Replace the Back Cover

- Replace the battery compartment cover, making sure all the tabs are secure and there are no gaps around the cover.

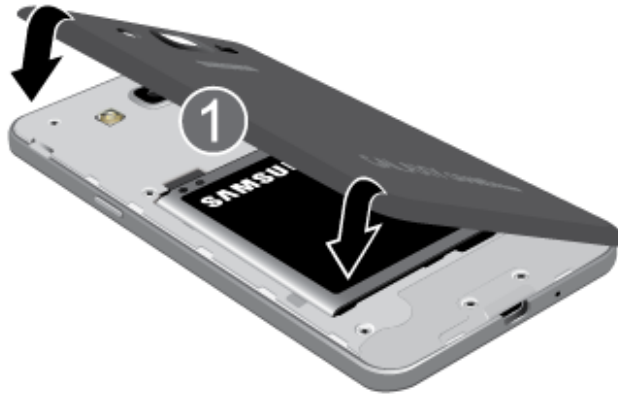

## Charge the Battery

Follow these instructions to charge your phone's battery using either the included charging head and USB cable or via a USB connection on your computer.

**Note:** This phone has an integrated battery that cannot be removed by the user.

### Battery Cautions

**Storage:** Avoid storing or leaving the phone with no battery charge remaining. Saved information and settings may become lost or changed, or the phone may become unusable. Charge once every six months before storing or leaving unused for a long period.

### Charge Using the AC Adapter

For fastest charging times, use the Adaptive Fast Charging charger that came with your phone. This charger provides faster charging only when connected to devices that have Adaptive Fast Charging.

1. Plug the USB cable into the USB charger/accessory port on the bottom of your phone.



2. Plug the other end of the USB cable into the charging head.
3. Plug the charging head into an electrical outlet.
4. After charging, disconnect the phone from the charger.
  - Unplug the charging head from the outlet, and remove the micro USB cable from the phone and the charging head.

## Charge Using a PC Connection

Before using a PC connection to charge your phone, ensure that the computer is turned on. Depending on the type of connection, your phone's battery may not charge.

1. Insert the small end of the USB cable into the USB charger/accessory port on the bottom of your phone.



2. Insert the large end of the USB cable into a USB port on your computer.
3. After charging, remove the USB cable from both the phone and the computer.

# Turn Your Phone On and Off

The instructions below explain how to turn your phone on and off.

## Turn Your Phone On

- Press and hold the **Power** key.




- ❖ Your phone will power on. Depending on the settings, you may see the Lock screen.
- See [Lock and Unlock Your Screen](#) and [Screen Lock](#) for information about using the screen lock.
- The first time you turn the phone on, you will see the startup screens. See [Complete the Setup Screens](#) for details.
- If your phone is not yet activated, see [Activate Your Phone](#) for more information.

## Turn Your Phone Off

1. Press and hold the **Power** key to open the phone options menu.



2. Tap **Power off** > **POWER OFF** to turn the phone off.

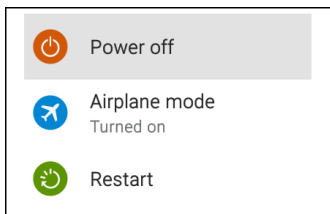

- ❖ Your phone will power off.


Your screen remains blank while your phone is off (unless the battery is charging).

# Use the Touchscreen

Your phone's touchscreen lets you control actions through a variety of touch gestures.


## Tap or Touch

When you want to type using the onscreen keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply tap or touch them with your finger.

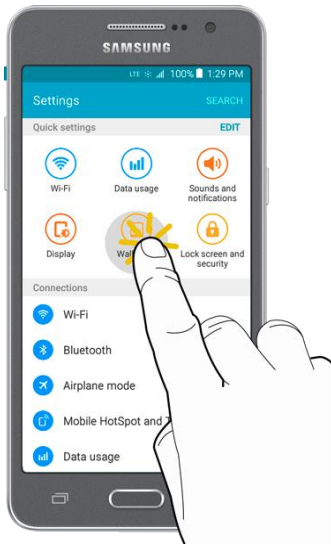

## Touch and Hold

To open the available options for an item (for example, a contact or link in a Web page), touch and hold the item.

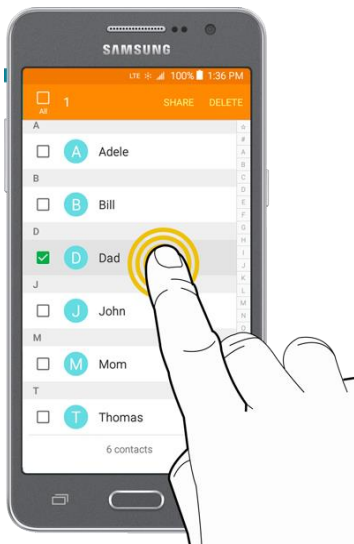



## Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.




## Drag

To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.



## Flick

Flicking the screen is similar to swiping, except that you need to move your finger in light, quick strokes. This finger gesture is always in a vertical direction, such as when flicking the contacts or message list.

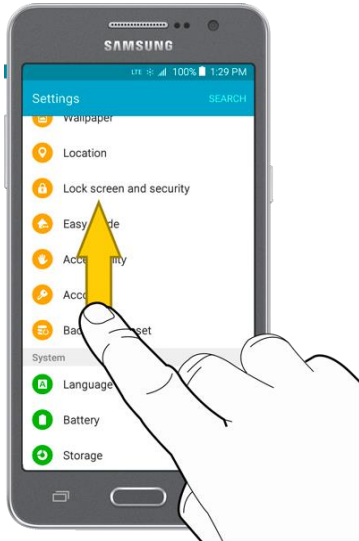

## Rotate

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways. When entering text, you can turn the phone sideways to bring up a bigger keyboard. See [Enter Text](#) for more details.



**Note:** Screen rotation must be enabled for the screen orientation to automatically change. To enable screen rotation, slide your finger down from the Status Bar to display the Notification table, and then tap **Screen rotation** to enable the option.

## Pinch and Spread

"Pinch" the screen by moving two fingers inward to zoom out, or "spread" by moving two fingers outward to zoom in.



## Activate Your Phone

Follow the instructions below to activate your phone if it has not already been activated. Depending on your account or how and where you purchased your phone, it may be ready to use or you may need to activate it on your Sprint account.

- If you purchased your phone at a Sprint Store, it is probably activated and ready to use.
- If you received your phone in the mail and it is for a new Sprint account or a new line of service, it is designed to activate automatically.
  - When you turn the phone on for the first time, you should see a **Hands Free Activation** screen, which may be followed by a **PRL Update** screen and a **Firmware Update** screen. Follow the onscreen instructions to continue.
- If you received your phone in the mail and you are activating a new phone for an existing number on your account (you're swapping phones), you can activate on your computer online or directly on your phone.
  - **Activate on your computer:**
    - Go to [sprint.com/activate](http://sprint.com/activate) and complete the online instructions to activate your phone.
  - **Activate on your phone:**
    - Turn on your new phone. (Make sure the old one is turned off.) Your phone will automatically attempt Hands-Free Activation.
    - Tap **Activate** to override auto-activation and start the manual activation wizard.
    - Follow the onscreen prompts to complete the activation process.

To confirm activation, make a phone call. If your phone is still not activated, visit [sprint.com/support](https://sprint.com/support) for assistance. If you do not have access to the Internet, call Sprint Customer Service at **1-888-211-4727** from another phone.


**Tip:** Do not press the **Power** key while the phone is being activated. Pressing the **Power** key cancels the activation process.

**Note:** If you are having any difficulty with activation, visit [sprint.com/support](https://sprint.com/support).

## Complete the Setup Screens

The setup screens help you set up certain features and preferences on your phone. Once your phone has been turned on, you will see a Welcome message. You can then complete the setup process.

**Note:** You may be able to complete the setup screens before your phone has been activated on your Sprint account.

1. At the Welcome screen, choose options, and then tap  to begin setup:
  - **Language:** Choose the default language for your phone's operation.
  - **ACCESSIBILITY:** Configure settings to access settings to improve the accessibility of your phone's features if you are visually impaired or hard of hearing.
  - **EMERGENCY CALL:** Make a call to emergency services without completing setup. This option is available throughout setup and only allows you to dial 9-1-1.
2. Follow the onscreen instructions to complete setup for each topic. Tap **NEXT**, or the right arrow, to move through the steps. You can skip options to continue to the next one. During setup, you may see these options:

**Note:** Screens may vary based on the activation status of your phone.

- **Wi-Fi:** By default, your phone prompts you to use Wi-Fi when accessing data services. Tap a Wi-Fi access point to connect to it, or you can continue setup using your phone's connection to the wireless network.
- **Terms and conditions:** Tap **Learn More** to read the End User License Agreement (EULA). Tap **NEXT**, and then tap **AGREE** to confirm that you understand and agree to its terms and conditions. If you do not agree to the EULA, you cannot continue with the setup.
- **Hands Free Activation:** Automatically connect to Sprint network and set up voice and data services.
  - After Hands Free Activation completes, tap **OK** to continue.
  - You may see a message indicating your phone needs to restart. Tap **OK** again and wait for your phone to restart.
- **Tap & Go:** Quickly copy any Google Accounts, backed up apps, and data from your existing Android device. Follow the onscreen instructions to use Tap & Go, or tap **SKIP** to continue setup.

- **Add your account (Google):** Your phone uses your Google Account to provide access to many features and apps. Complete the steps to sign in to your current Google Account, or sign up for a new Google Account right from your phone. You can also skip signing in to your Google Account, or sign in later.
    - To sign in to an existing Google Account, you will need your account name (Gmail address) and password.
    - For both new and existing accounts, you will need to review and accept the Terms of Service and Privacy Policy by tapping **ACCEPT** when prompted.
  - **Name:** Enter your First and Last name, to personalize Google features and apps.
  - **Protect your phone:** Prevent others from using your phone without your permission by activating device protection features. Tap **SET SCREEN LOCK NOW** to set up a screen lock, or tap **SKIP** to set up a secure screen lock at a later time.
  - **Google services:** Select Google service preferences, including Backup & Restore, Location and Communication options.
  - **Samsung account:** Some apps and features use your Samsung account. You can sign in to your Samsung account, or follow the prompts to create a new account.
    - To sign in to or set up a Samsung account, you will have to review and agree to the Terms and Conditions by tapping **AGREE** when prompted.
  - **Easy mode:** Easy mode offers a simpler home screen layout, with larger text and icons. Tap the **ON/OFF** switch to turn on Easy mode. You can also choose Easy mode from Settings at any time.
3. Tap **FINISH** to complete setup.
- Your phone is now set up for use. If you skipped any part of the setup, you can access additional options through the Apps list or through Settings.

**Note:** You do not need to sign up for a Google Account to use your phone. However, to download apps from the Google Play store app, you must link your phone to a Google Account.

# Basic Operations

---


The following topics outline basic features and operations of your phone.

## Basics

The following topics offer an overview of your phone's basic operations.

## Home Screen and Applications (Apps) List

Most of your phone's operations originate from the Home screen or the apps list.


1. From any screen, press the **Home** key to display the Home screen.
2. Tap **Apps**  to display the apps list.



For information about using the Home screen, see [Home Screen Basics](#).


## Select Options and Navigate Screens

Tap icons, onscreen keys, and other items to open or activate the assigned function.

- Tap the **Back** key  to return to the previous screen.

## Recent Applications

You can display a list of recently used applications using the recent apps key.

- Tap **Recents**  to view a list of recently used applications.


## Phone Settings Menu

You can customize your phone's settings and options through the Settings menu.

- From home, tap **Apps**  > **Settings** .

– or –

Drag the Status Bar down and tap **Settings** .

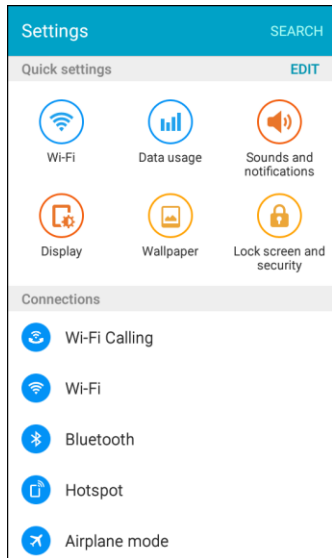

- ❖ The Settings menu displays.



For more information, see [Settings](#).

## Portrait and Landscape Screen Orientation

The default orientation for your phone's screen is portrait (vertical), but many apps will change to landscape orientation (widescreen) when you rotate the phone sideways.





### Turn Screen Rotation On or Off

1. Open the Notification panel by dragging down the Status bar from the top of the screen.
2. Tap **Screen rotation**  to turn the option on or off.
  - You may need to scroll left or right to see the Screen rotation option.
  - If the Screen rotation option is not available, tap **Edit**  to display the full options list.
  - Not all screens will adjust for landscape orientation.

## Capture Screenshots

You can use your phone's Power key and Home key to capture screenshots.

- Press and hold the **Power** key and **Home** key at the same time to capture a screenshot of the current screen.
- ❖ The current screenshot will be captured and stored in the Screenshots album in the phone's Gallery. From home, tap **Apps**  > **Gallery** .




# Applications

The following topics describe how to access the applications (apps) list and launch apps on your phone.

## Launch Applications

All installed apps can be accessed and launched from the apps list.




1. From home, tap **Apps** .















- ❖ The apps list opens.
2. Tap an app icon to launch the corresponding application.
- ❖ The application opens.













## Apps List











The apps list expands to include any apps you download and install on your phone. The following table outlines the primary apps that have been preinstalled on your phone.

App	Function/Service
 <b>1Weather</b>	Receive real-time local weather information at any location in the world. Access 7-day and hourly weather forecasts for your area.
 <b>Amazon (Amazon Shopping)</b>	Shop at Amazon.com from your phone.
 <b>App Spotlight</b>	Discover new apps from the Google Play store.

App	Function/Service
 <b>Calculator</b>	Perform basic and advanced mathematical calculations.
 <b>Calendar</b>	Use Calendar to create and manage events, meetings, and appointments, organize your time, and be reminded of important events.
 <b>Camera</b>	Take pictures and record videos using the front and rear cameras.
 <b>Chrome</b>	Browse the Internet using Google's Chrome Web browser.
 <b>Clock</b>	Set alarms, view time in time zones around the world, use a stopwatch, set a timer, and use your phone as a desk clock.
 <b>Contacts</b>	Store and manage contacts from a variety of sources, including contacts you enter and save directly in your phone as well as contacts synchronized with your Google Account, compatible email programs (including Exchange Server), and your Facebook friends.
 <b>Drive</b>	Store, sync, and access your data across multiple devices with Google Drive's cloud storage.
 <b>Email</b>	Send and receive email from a variety of email service providers.
 <b>Facebook</b>	Post updates, read what your friends are up to, upload pictures and check-ins, and more with on-the-go Facebook access.
 <b>Galaxy Apps</b>	Discover apps designed exclusively for your Galaxy device.
 <b>Gallery</b>	View and edit pictures and watch videos that you've taken with your phone's camera or downloaded.
 <b>Gmail</b>	Send and receive messages using Google's Gmail service.
 <b>Google</b>	Search the Internet using Google Search.
 <b>Google Settings</b>	Use Google Settings to manage your Google apps and account settings.
 <b>Hangouts</b>	Instant message with your friends and family using Google Hangouts.
 <b>Instagram</b>	Capture and share photos and videos with your friends. Customize what you capture, and then share it on your feed or post it directly to your friends. Located in the <b>Social</b> folder in the apps list.

App	Function/Service
 <b>Internet</b>	Browse the Internet using a full-featured browser.
 <b>Lookout</b>	Lookout Mobile Security provides key security options, such as anti-virus and anti-malware technology, a lost and stolen device locator service, an application privacy adviser, and a backup service.
 <b>Maps</b>	Use Google Maps to determine your current location with or without GPS, get driving and transit directions, and find phone numbers and addresses for local businesses.
 <b>Memo</b>	Organize your life by creating, editing, and managing memos
 <b>Messages</b>	Send and receive text and multimedia messages.
 <b>Messaging+</b>	Messaging Plus provides high quality video calling, group chat, and media sharing along with easy registration, a full emoji keyboard, and other convenient features.
 <b>Messenger</b>	Send instant messages with all your friends using Facebook's Messenger app.
 <b>My Files</b>	Manage your sounds, images, videos, Bluetooth files, Android files, and other data in one convenient location.
 <b>NASCAR Mobile</b>	NASCAR Mobile is designed to bring you what you, our fans, want directly to your Android device. Follow NASCAR News, Video Highlights, and immerse yourself even further into the NASCAR experience with driver informational stats, plus more.
 <b>NBA Game Time</b>	The award-winning NBA Game Time is the official app to follow the NBA wherever you are.
 <b>NextRadio</b>	Listen to your favorite FM radio stations on the go with NextRadio. Tune in to any FM frequency in your area and listen to the radio without the hassle and cost of streaming music. Participating radio stations show you song information and artwork as you listen, so you can buy your favorite music, give feedback on the songs you like, and share what you are listening to on Facebook or Twitter.
 <b>OneDrive</b>	OneDrive gives you free online storage for all your personal files so you can get to them from your Android device, computer, and any other devices you use.

App	Function/Service
 <b>OneNote</b>	Stay organized using text, pictures, or audio notes. Create Quick Notes or review and edit shared OneNote notebooks using OneDrive.
 <b>Pages Manager</b>	The Pages Manager App lets you manage up to 50 Pages from your smartphone or tablet. You can check Page activity, share with your audience and see insights.
 <b>Phone</b>	Make and receive phone calls.
 <b>Photos</b>	View photos and videos on your phone, and sync them with your Google+ account.
 <b>Play Books</b>	Discovering your favorite books and authors has never been easier. With Google Play Books, you can shop the world's largest selection of eBooks and read them anywhere you like.
 <b>Play Games</b>	Google Play Games is the easiest way for you to discover new games, track achievements and scores, and play with friends around the world. It brings all of your gaming on Google Play together in a unified Android experience.
 <b>Play Movies &amp; TV</b>	Google Play Movies & TV allows you to watch movies and TV shows purchased on Google Play. You can stream instantly on your Android phone or download so you can watch from anywhere, even when you are not connected.
 <b>Play Music</b>	Google Play Music lets you browse, shop, and play back songs purchased from the Google Play store app, as well as songs you have loaded from your own music library. The music you choose is automatically stored in your Google Music library and instantly ready to play or download.
 <b>Play Newsstand</b>	Discover more of the news and magazines you care about all in one app on your phone. Enjoy breaking news and in-depth articles featuring audio and video. From sports, business, cooking, entertainment, fashion and more it's all in one place.
 <b>Play Store</b>	The Google Play store app is the place to go to find new Android apps, games, movies, music, and books for your phone. Choose from a wide variety of free and paid apps ranging from productivity apps to games.
 <b>Settings</b>	Configure settings and options on your phone.
 <b>Sprint Family Locator</b>	Sprint Family Locator lets you locate any phone on your Sprint family plan instantly—from your mobile phone, tablet or computer.


App	Function/Service
 <b>Sprint Fun &amp; Games</b>	Download new apps and games from Sprint.
 <b>Sprint Music Plus</b>	Purchase, download, and play music, ringtones, and ringback tones for your phone.
 <b>Sprint TV &amp; Movies</b>	With Sprint TV & Movies, you can watch live TV and access movies and other on demand entertainment on the go.
 <b>Sprint Zone</b>	Access your Sprint account, get device information and help, find recommended apps, and more.
 <b>Uber</b>	Search and find transportation service using the Uber app. Request a ride and get picked up within minutes.
 <b>Video</b>	View videos on your phone.
 <b>Voice Recorder</b>	Record voice memos and share them with others.
 <b>Voice Search</b>	Search the Internet and your phone using voice commands
 <b>Voicemail</b>	Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find exactly the message you are looking for without having to listen to every voicemail message first.
 <b>YouTube</b>	YouTube is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts, and other original videos.

**Note:** Available apps are subject to change.


# Phone Number

Follow the instructions below to display your phone's wireless phone number.

1. From home, tap **Apps**  > **Settings**  > **About device** .

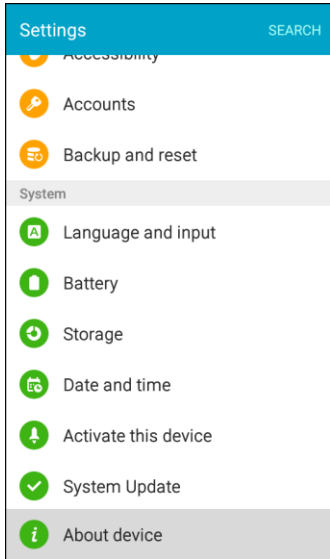

2. Tap **Status** > **SIM card status**.

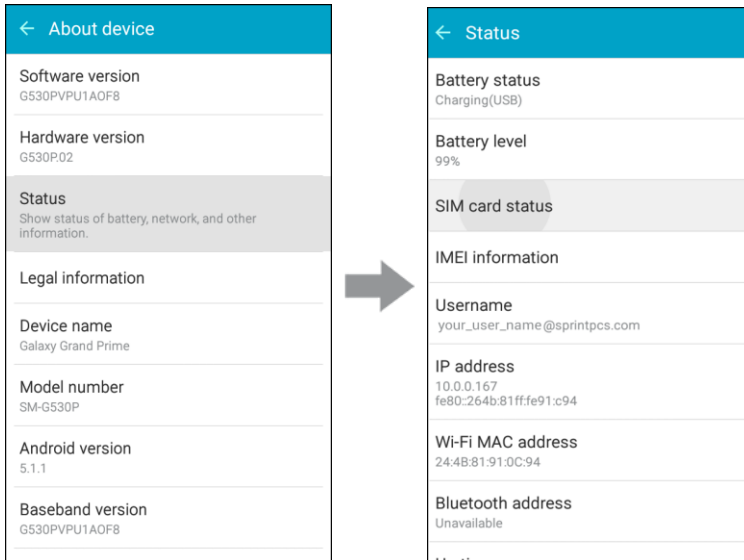


- ❖ You will see the number listed under **My phone number**.

# Airplane Mode


Airplane mode turns off all functions that emit or receive signals, while leaving your phone on so you can use apps that don't require a signal or data.

To turn on airplane mode:


1. Press and hold the **Power** key to display the device options menu.

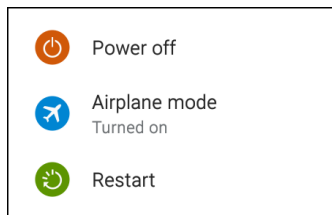

2. Tap **Airplane mode** > **TURN ON** to turn Airplane mode on.

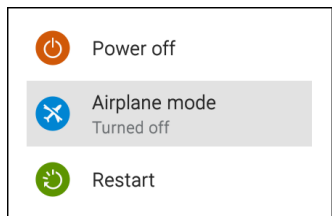


❖ Your phone is now in airplane mode. An airplane mode icon  displays on the Status Bar.


**Tip:** You can also access Airplane mode through the Notification panel. Drag the Status Bar down to reveal the Notification panel, slide the Quick settings buttons to the left, and then tap **Airplane mode**  to turn Airplane Mode on.

To turn off airplane mode:


1. Press and hold the **Power** key to display the device options menu.

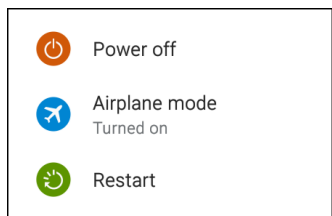

2. Tap **Airplane mode**.

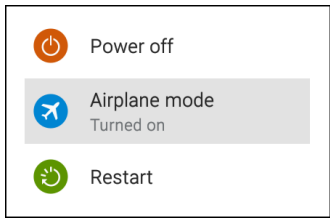

❖ Your phone's wireless connection features are now restored.

**Tip:** You can also access Airplane mode through the Notification panel. Drag the Status Bar down to reveal the Notification panel, slide the Quick settings buttons to the left, and then tap **Airplane mode**  to turn **Airplane Mode** off.

## Enter Text

You can type on your phone using the touchscreen Samsung keyboard or Google voice typing.

### Samsung Keyboard

Use the touchscreen Samsung keyboard for entering text. The keyboard appears automatically onscreen when you tap a text entry field, and can be used in either portrait or landscape mode. You can also use the Google Voice typing option to enter text using your voice (see [Google Voice Typing](#) for details).

The Samsung keyboard offers a traditional QWERTY keyboard setup for entering text by tapping keys (like on a computer), along with enhancements and options that allow you to enter text faster and more accurately, such as continuous key input, personalized usage dictionaries, and more.



**Note:** Depending on which app you're using (Messages, Email, etc.), the keyboard appearance may differ.

### Assigning the Samsung Keyboard for Text Entry

If you have multiple text input methods installed on your device, you can select the Samsung keyboard to be your default text input method from Settings, or you can choose it at any time while entering text.

**Note:** The Samsung keyboard is the default text input method on your phone. Additional keyboards and input methods are available for download at the Google Play store. See [Google Play Store](#).










From Settings:

- From home, tap **Apps**  > **Settings**  > **Language and input**  > **Default keyboard**, and then choose **Samsung keyboard**.

While entering text:

1. While entering text, drag down from the top of the screen to open the Notification panel.
2. Tap **Select keyboard**, and then choose **Samsung keyboard**.

## Use Samsung Keyboard to Enter Text

- Tap keys to enter text. While entering text, use these options:
  - If you make a mistake, tap  to delete incorrect characters. Touch and hold  to delete a whole word or field.
  - Tap  to change the case of the text (the arrow will turn blue). Tap  twice to switch to all capitals (the key will turn blue).
  - Tap  to switch to a symbols keyboard, to enter symbols. There are two symbol keyboards.
  - Touch and hold  to switch to Google Voice typing to enter text by speaking. See [Google Voice Typing](#).
  - If you have more than one language selected in Samsung Keyboard settings, you can swipe your finger over  to switch between languages.

## Configure Samsung Keyboard

- From home, tap **Apps**  > **Settings**  > **Language and input**  > **Samsung keyboard**.

## Google Voice Typing

Google Voice typing uses Google voice recognition to convert speech to text.



### Use Google Voice Typing to Enter Text


1. While entering text, drag down from the top of the screen to open the Notification panel, and then tap **Select keyboard** > **Google voice typing**.


– or –




Tap  on the Samsung keyboard.

– or –

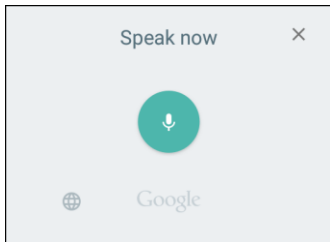Touch and hold  on the Samsung keyboard, and then tap .



2. Speak into the microphone and watch your text being entered onscreen.
3. If the text is incorrect, tap **DELETE**.
4. Once you have completed entering your text, tap the  **Back** key. The onscreen keyboard will reappear.






**Note:** You can assign a new language to Google voice typing. Tap  and tap a language to select it. To add more languages, tap  > **Settings** > **Languages**, tap the language(s) you want to add, tap **SAVE**, and then tap the **Back** key .

## Configure Google Voice Typing

- From home, tap **Apps**  > **Settings**  > **Language and input**  > **Google voice typing**.

## Tips for Editing Text

Your phone gives you many options to make entering text easier, including copying, cutting, and pasting text, using voice-to-text input, customizing the user dictionary, using predictive text, and more.

- Double-tap text to highlight it, and then select from the following options:
  -  **Select all:** Highlights all the text in the field.
  -  **Cut:** Removes the selected text and saves it to the clipboard.
  -  **Copy:** Copies the selected text to the clipboard.
  -  **Paste:** Insert the last copied or cut text into the current field.
  -  **Clipboard:** Display the clipboard to choose previously cut or copied text.

## Google Account

You will need a Google Account to access several phone features such as Gmail, Google Maps, Hangouts, and the Google Play applications. Before you are able to access Google applications, you

must enter your account information. These applications sync between your phone and your online Google Account.

## **Google Account Cautions**

Be sure not to forget your Google Account ID or password.

## **Create a Google Account**

If you do not already have a Google Account, you can create one online or by using your phone.

**Note:** You can also create and sign into your Google/Gmail account through your phone's Setup application.


**Note:** Although you need a Gmail account to use certain features of your phone, such as Google Play, you do not need to use Gmail as the default account for your phone.

### **Create a Google Account Online**


1. From a computer, launch a Web browser and navigate to [google.com](https://google.com).
2. On the main page, click **Sign in**.
3. Click **Add account**, and then follow the onscreen prompts to create your free account.
4. Look for an email from Google in the email box you provided, and respond to the email to confirm and activate your new account.

### **Create a Google Account Using Your Phone**


1. From home, tap **Apps**  > **Settings**  > **Accounts** .

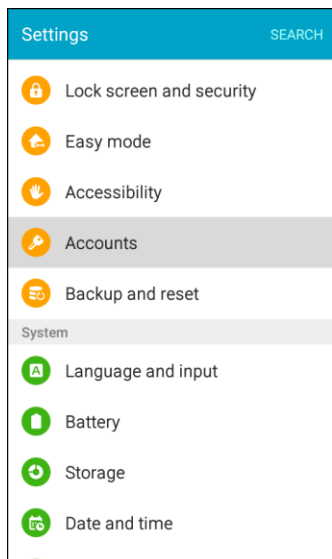

2. Tap **Add account**.

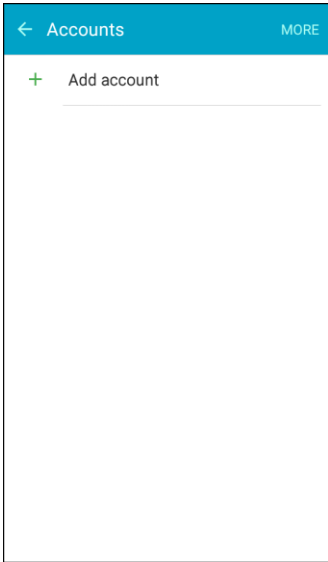

3. Tap **Google > Or create a new account**.

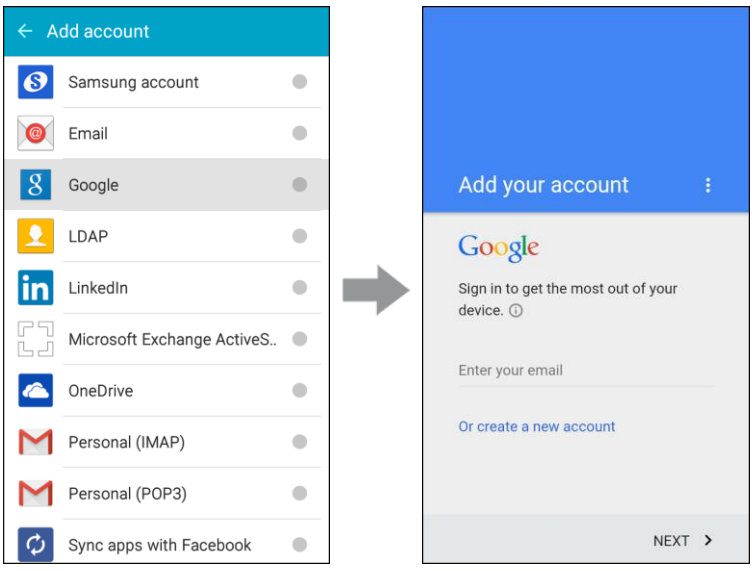

4. Enter your **First name** and **Last name**, and then tap **NEXT**.

Create a Google Account

First name

Last name

NEXT >

Have | Am | Will >

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L

↑ Z X C V B N M ✕

Sym English(US) ↵

5. Enter a desired **Username**, and then tap **NEXT**.

Choose your username

You'll use this username to sign in to your Google Account.

Username

@gmail.com

NEXT >

the | | on >

1 2 3 4 5 6 7 8 9 0


q w e r t y u i o p

a s d f g h j k l


↑ z x c v b n m ✕

Sym English(US) Go

- When prompted, enter and re-type a password. Then tap **NEXT**.

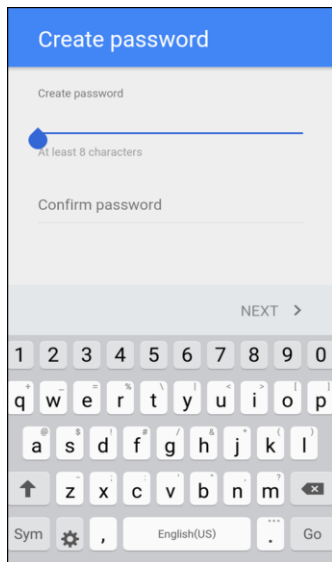


- Enter a valid phone number to help you recover your Google Account and password if you ever forget it, and then tap **NEXT**.

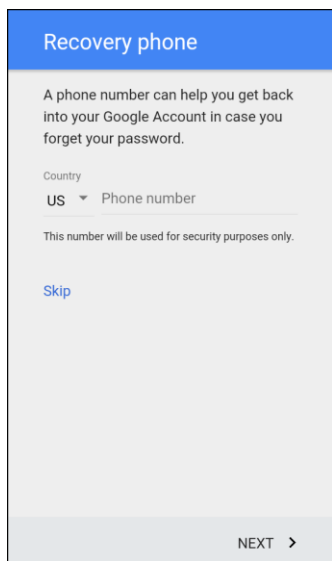


**Note:** When setting up a new Google Account, either on your phone or online, you will be prompted to add a secondary email address. Enter a second Gmail address or any other email address from which you currently send and receive email. This address is used to authenticate your account should you ever encounter problems or forget your password. It is strongly encouraged for Android users so you can regain access to Google services and purchases on your phone.


- Read the Google Terms of Service, Privacy Policy, and other legal documents, and then tap **I AGREE**.

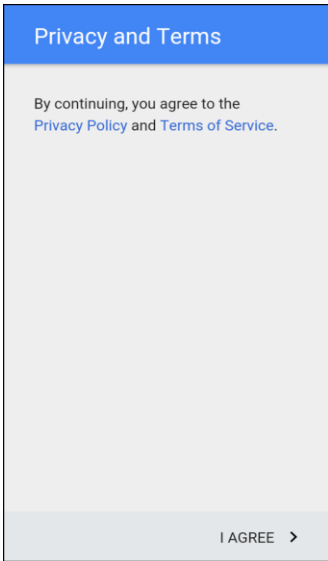


9. Your phone connects with the Google servers and displays your account information. Tap **NEXT**.

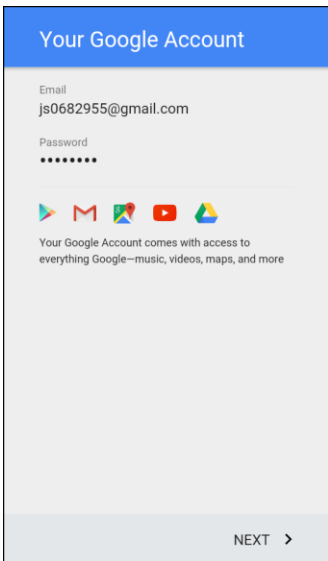

10. Configure your Google data backup and communication, and then tap **NEXT**.

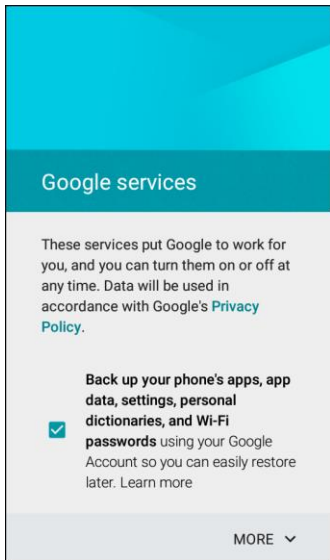


11. If desired, you can set up payment options for purchases through the Google Play store, and then tap **NEXT**.

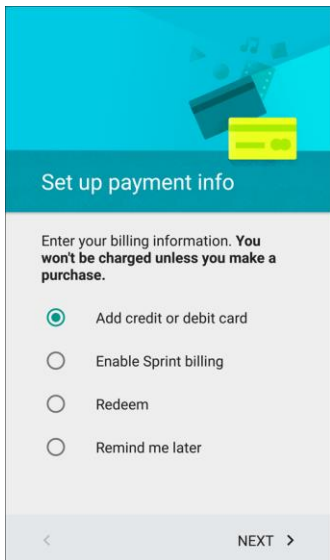

❖ You are signed in to your new Google Account.




❖ Your Google Account is listed in **Apps**  > **Settings**  > **Accounts** .

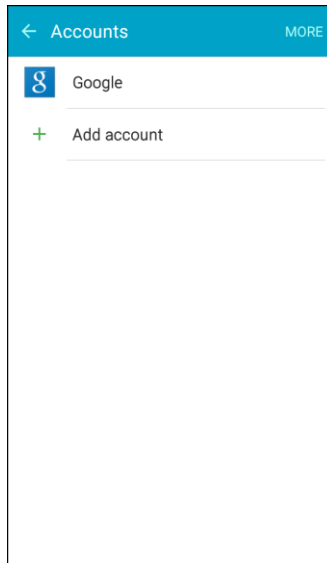


## Sign In to Your Google Account

If you have a Google Account but have not yet signed in with your phone, follow these instructions to sign in to your Google Account.


1. From home, tap **Apps**  > **Settings**  > **Accounts** .

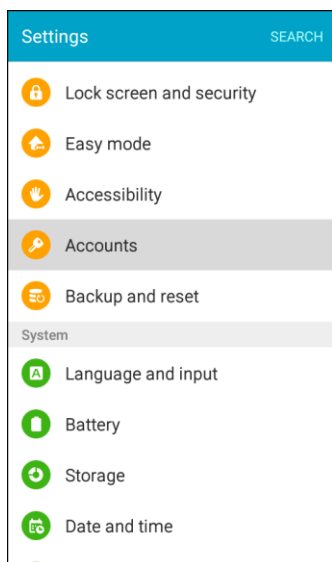


2. Tap **Add account**.

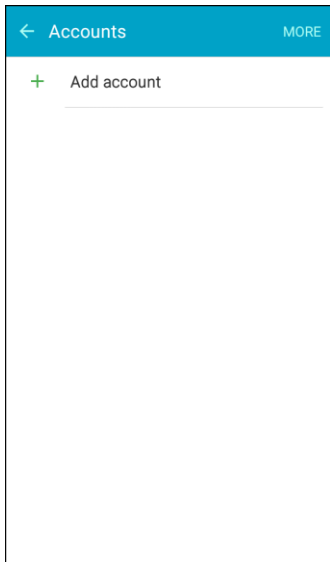


3. Tap **Google**.

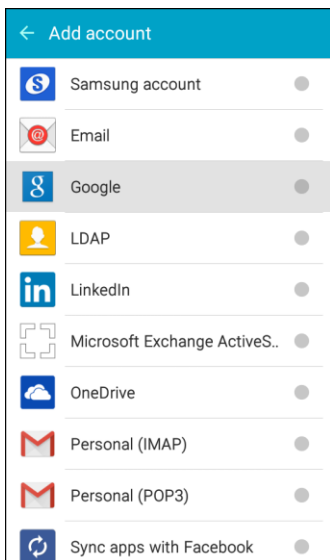


4. Tap **Enter your email**, enter your Gmail address, and then tap **NEXT**.

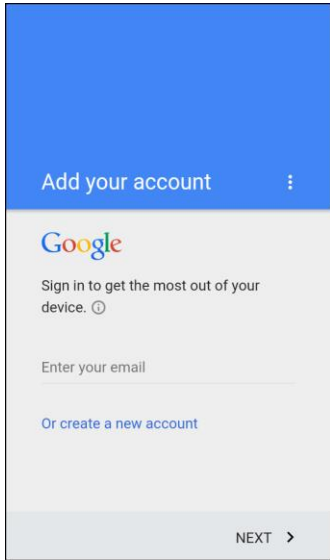


5. Enter your password and tap **NEXT**.

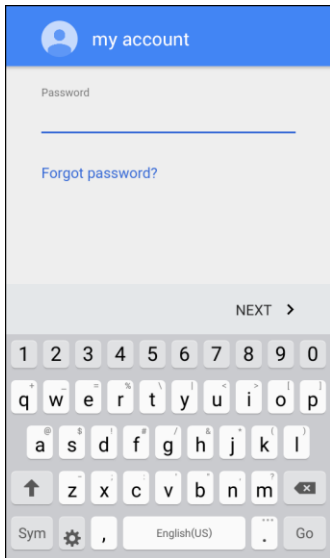


6. Read the Google Terms of Service, Privacy Policy, and other legal documents, and then tap **ACCEPT**.

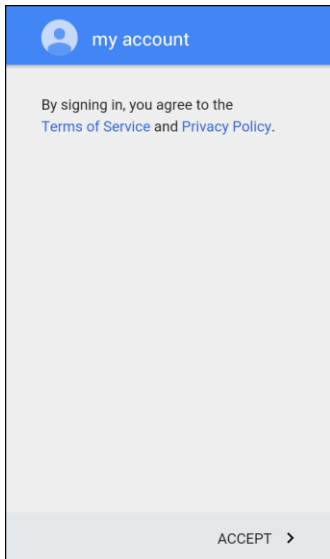

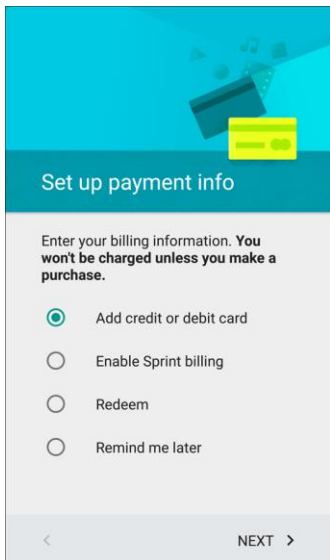


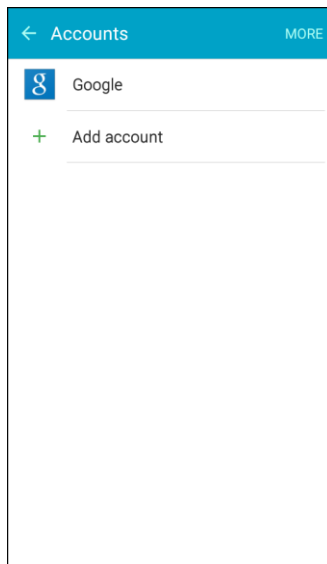
7. Set up payment information for use in the Google Play store, and then tap **NEXT**.

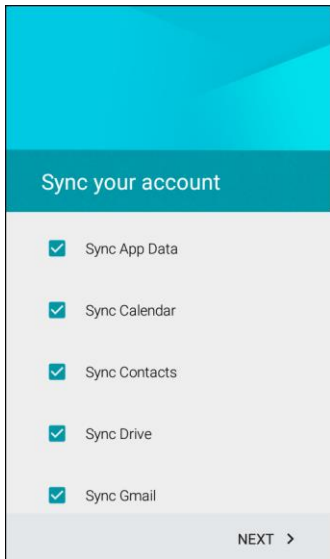

8. Tap the items from your Google Account that you want to sync to your phone. The checked items will be synced. Tap **NEXT** to continue.



- ❖ You are now signed in to your Google Account, and your phone will start synchronizing with your Google Account.
- ❖ Your Google Account is listed in **Apps**  > **Settings**  > **Accounts** .



**Note:** Depending on your Google Account history, you may see a **Get your apps & data** screen instead of the **Sync your account** screen in step 8 above. Follow the prompts to complete your setup in either case.

# Google Play Store

Google Play is the place to go to find new Android apps, books, movies, and music for your phone. Choose from a wide variety of free and paid content ranging from productivity apps and games to bestselling books and blockbuster movies and music. When you find what you want, you can easily download and install it on your phone.

To access the Google Play store app, you must first connect to the Internet using your phone's Wi-Fi or mobile data connection and sign in to your Google Account. See [Browser](#) and [Sign In to Your Google Account](#) for details.



## Installing Applications


Many different kinds of applications can be installed on your phone from Google Play (provided by Google Inc.). The company is not responsible in any way for user-installed applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

**Important:** Our policies often do not apply to third-party applications. Third-party applications may access your personal information or require us to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you are not comfortable with the third-party application's policies, don't use the application.


# Find and Install an App


When you install apps from Google Play app and use them on your phone, they may require access to your personal information (such as your location, contact data, and more) or access to certain functions or settings of your phone. Download and install only apps that you trust.

1. From home, tap **Apps**  > **Play Store** .
2. When you open the Google Play store app for the first time, the Terms of Service window will appear. Tap **ACCEPT** to continue.

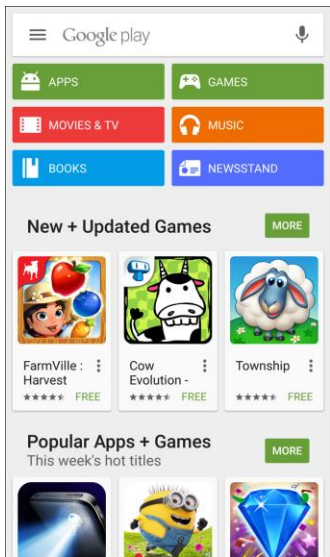

3. Browse through the categories (**APPS**, **GAMES**, **MOVIES & TV**, **MUSIC**, **BOOKS**, or **NEWSSTAND**), find an item you are interested in, and tap the name.

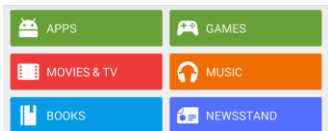

- Browse through featured apps. Scroll through the list of featured apps when you open Google Play.
  - Search for an app. Tap the **Google Play** box, enter the name or type of app you are looking for, and then tap  on the keyboard.
4. Tap an app to read a description about the app and user reviews.
  5. Tap **INSTALL** (for free applications) or the price (for paid applications).

**Note:** If you did not set up a payment option during phone setup or when adding your Google Account, you will be prompted to add a payment method when making a purchase from Google Play.

6. The subsequent screen notifies you whether the app will require access to your personal information or access to certain functions or settings of your phone. If you agree to the conditions, tap **ACCEPT** (for free apps) or **ACCEPT** and then **BUY** (for paid apps) to begin downloading and installing the app.

❖ The selected app is downloaded and installed on your phone.

**Warning: Read the notification carefully!** Be especially cautious with applications that have access to many functions or a significant amount of your data. Once you tap **OK** on this screen, you are responsible for the results of using this item on your phone.




## Purchasing Applications

Purchase apps at your own risk. The company is not responsible for any disadvantage resulting for user or third parties.

## Request a Refund for a Paid App

If you are not satisfied with an app, you can ask for a refund within 15 minutes of the purchase. Your account is not charged and the app is uninstalled from your phone.

If you change your mind, you can install the app again, but you can't request a refund a second time.

1. From home, tap **Apps**  > **Play Store** .
2. Tap **Menu**  > **My apps**.
3. Tap the app to uninstall for a refund. The details screen for the app opens.
4. Tap **REFUND**, and then tap **YES** to confirm. Your app is uninstalled and the charge is cancelled.




# Update an App


Depending on your settings, many apps will update automatically, or you can update apps directly from the Play store app.

## Update an App Directly

1. From home, tap **Apps**  > **Play Store** .

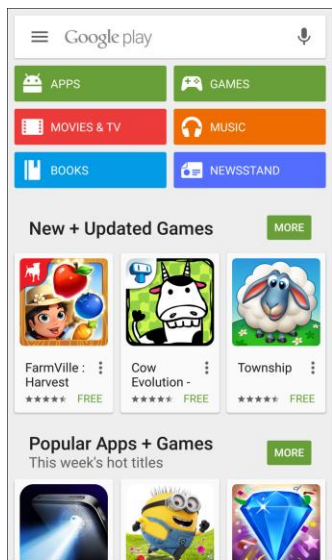

2. Tap **Menu**  > **My apps**.

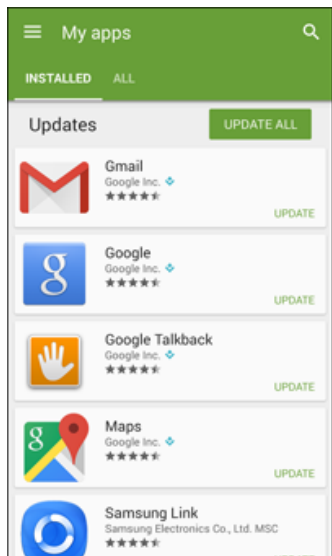


3. Tap the app you want to update, and then tap **UPDATE** > **ACCEPT**.




- ❖ The app update is downloaded and installed.

## Set Automatic App Updates


1. From home, tap **Apps**  > **Play Store** .

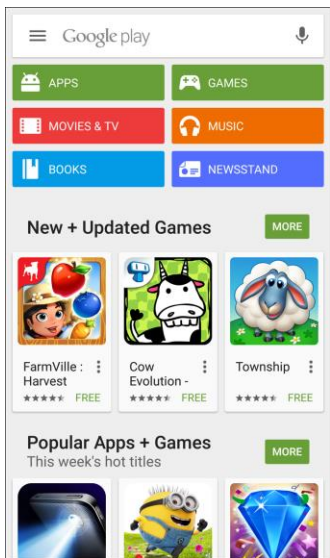

2. Tap **Menu**  > **My apps**.

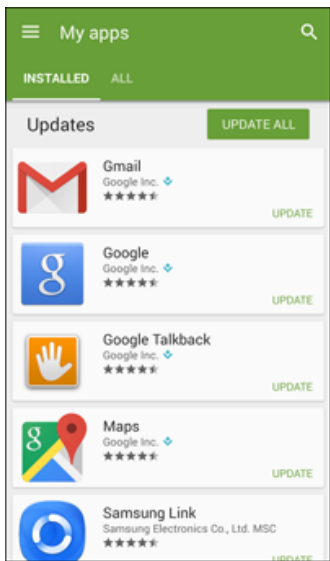

3. Tap the app you want to set for auto-update, and then tap **More options**  > **Auto-update**.

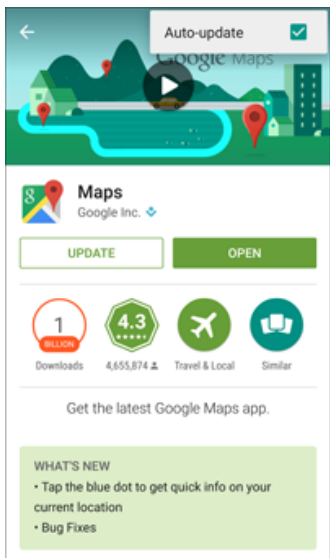


❖ The app is set to update automatically whenever an update becomes available.

**Note:** Automatic updates are unavailable for some apps.


# Uninstall an App

You can uninstall any app that you have downloaded and installed from Google Play.


1. From home, tap **Apps**  > **Play Store** .

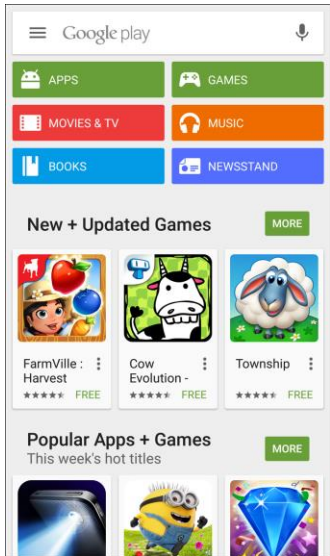

2. Tap **Menu**  > **My apps**.

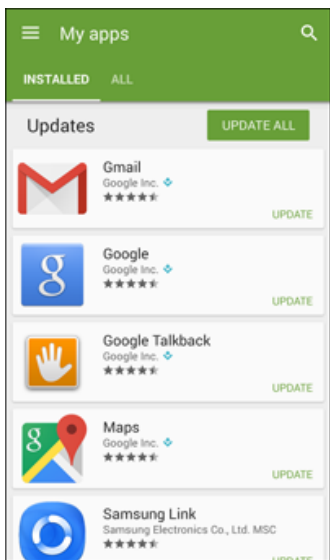

3. On the Installed screen, tap the app you want to uninstall, and then tap **UNINSTALL** > **OK**.

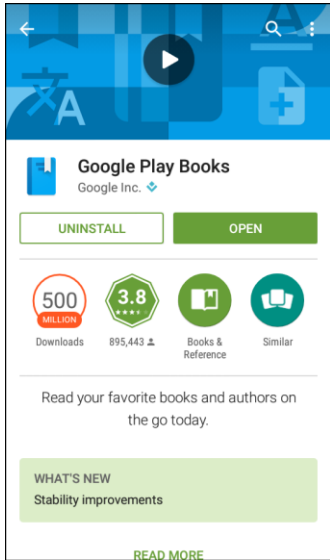


- ❖ The app is uninstalled and removed from your phone.


## Get Help with Google Play

The Google Play store app offers a help option if you have questions or want to know more about the app.

1. From home, tap **Apps**  > **Play Store** .

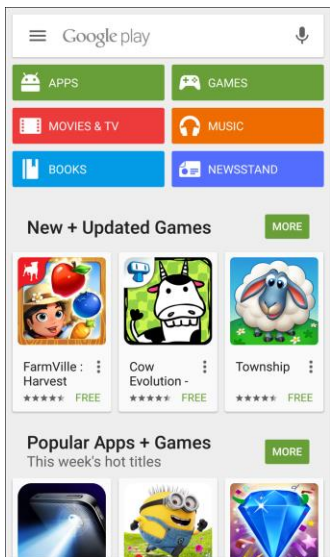

2. Tap **Menu**  > **Help & Feedback**.

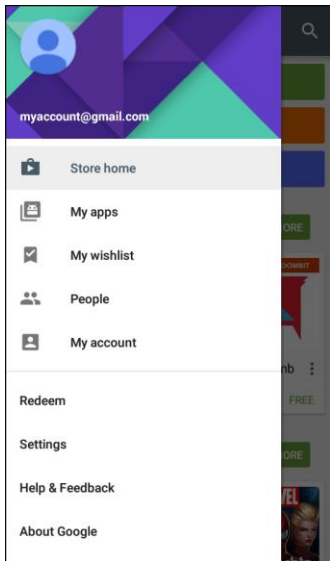

- ❖ The Play Store Help page displays, where you will find comprehensive, categorized information about Google Play.

## Lock and Unlock Your Screen

Your phone allows you to quickly turn the screen off when not in use and to turn it back on and unlock it when you need it.

### Turn the Screen Off When Not in Use

To quickly turn the screen off, press the **Power** key. Pressing the **Power** key again or receiving an incoming call will turn on your phone screen and show the Lock screen.



To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone's screen is off.

**Note:** For information on how to adjust the time before the screen turns off, see [Display Settings](#).

## Turn the Screen On and Unlock It

1. To turn the screen on, press the **Power** key.



❖ The Lock screen appears.

2. Swipe your finger across the screen to unlock it.



❖ The screen is unlocked.

- If you have set up a screen lock, you will be prompted to draw a pattern, enter a PIN, or enter a Password. See [Screen Lock](#).

# Update Your Phone

From time to time, updates may become available for your phone. You can download and apply updates through the **Settings > System Update** menu.

## Software Update Cautions

**During update:** The phone cannot be used until the software update is complete. It may take time to update your phone's software.

**Signal during update:** Update your phone where signal reception is good, and do not change location during the update process. Make sure the battery is adequately charged before beginning an update. A weak signal or low battery during an update may cause the update to fail. An update failure may disable the phone.

**Other functions during update:** Other phone functions cannot be used during a software update.

## Update Your Phone Software




You can update your phone's software using the **System Update** option.

### Before Updating Your Phone




Updating your phone may result in a loss of saved data depending on the condition of your phone (malfunctioning, damaged, water seepage, etc.). You must back up all critical information before updating your phone firmware.

#### Back Up All Data Prior to Update

To back up your Gmail information:




1. From home, tap **Apps**  > **Settings**  > **Accounts**  > **Google** > [your account].
2. Tap the **ON/OFF** switches to enable backup of each item.
3. Tap **MORE** > **Sync now** to sync your Google Account information.

To back up your Exchange Mail information:

1. From home, tap **Apps**  > **Settings**  > **Accounts**  > **Microsoft Exchange ActiveSync**.
2. Tap the **ON/OFF** switches to enable backup of each option (Calendar, Contacts, Email, Tasks).
3. Tap **MORE** > **Sync now** to sync your Microsoft Exchange ActiveSync information.

To back up your Google apps:

Your Google app purchases are saved remotely and can be re-installed after the update is applied.

1. From home, tap **Apps**  > **Play Store** .
2. Tap **Menu**  > **My apps** > **ALL** tab.




3. Scroll through the list of previously downloaded Google apps and choose those you wish to reinstall.
4. Follow the onscreen instructions.

## Update Your Phone's Software




Once you have backed up all your data, use the **Update now** option to update your phone's software.

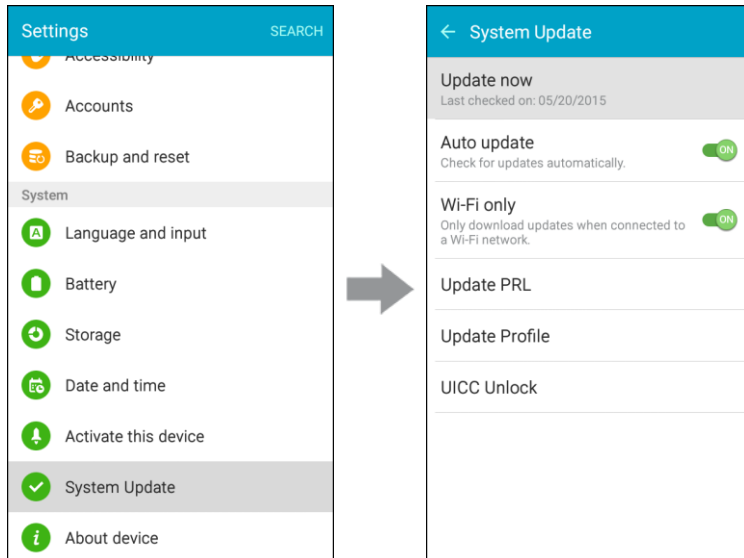- From home, tap **Apps**  > **Settings**  > **System Update**  > **Update now**.




- ❖ Your phone automatically downloads and installs any available updates. You may be required to power your phone off and back on to complete the software upgrade.

– or –


1. Locate the **System Update Available** icon  in notifications.
2. Drag the Status Bar down.
3. Tap  to open the System Updates screen.
4. Tap **Download** and follow the onscreen instructions. The downloading icon  appears within the Status Bar to indicate the phone is downloading the necessary files.
5. Follow the prompts to install the update and restart your phone.

## Confirm Your Current Phone Software

1. From home, tap **Apps**  > **Settings**  > **About device** .

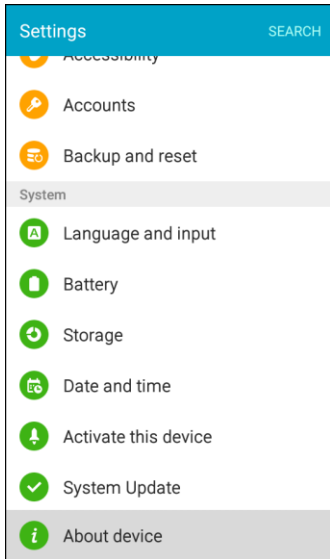


2. Locate the software (Baseband) version read-only field.

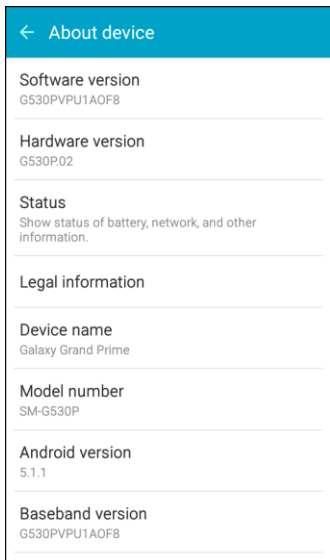

# Update Your Profile

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your phone.

1. From home, tap **Apps**  > **Settings**  > **System Update**  > **Update Profile**.

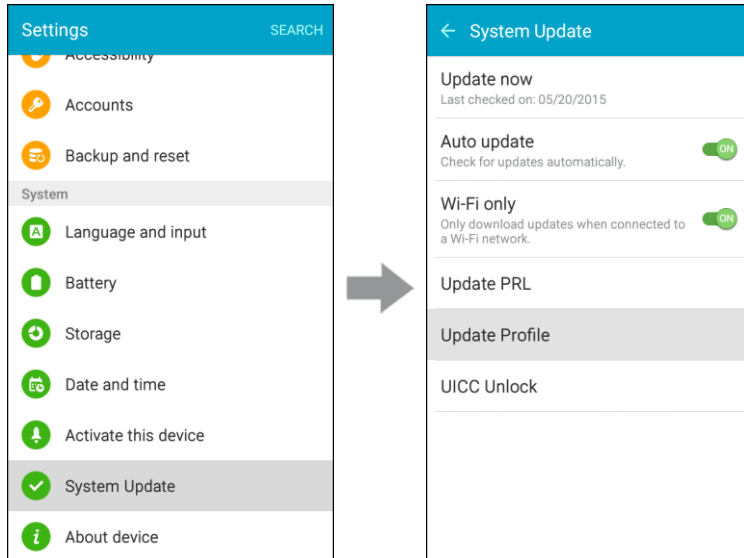


2. Follow the onscreen instructions.
  - ❖ The phone will download and install the profile update and you will see a confirmation when complete.

**Note:** If your data services or account syncing ever seems to go out unexpectedly, use this feature to reconnect with the network.

# Update Your PRL

This option allows you to download and update the PRL (preferred roaming list) automatically.

1. From home, tap **Apps**  > **Settings**  > **System update**  > **Update PRL**.

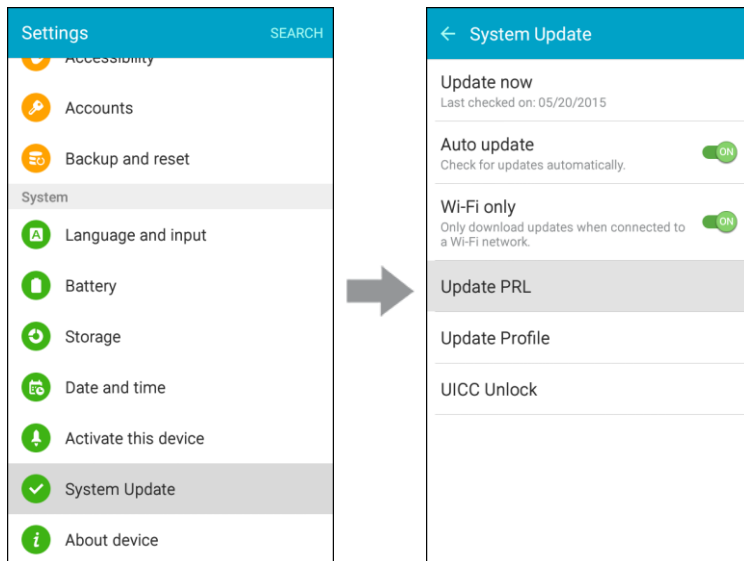

2. Follow the onscreen instructions.
  - ❖ The phone will download and install the PRL update and you will see a confirmation when complete.

# Your Phone Interface

---


The following topics describe how to use and customize your phone's Home screen, understand the Status Bar, and use the Notification panel.

## Home Screen Basics

The Home screen is the starting point for your phone's applications, functions, and menus. You can customize your Home screen by adding application icons, shortcuts, folders, widgets, and more.

## Home Screen Layout

Your Home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.

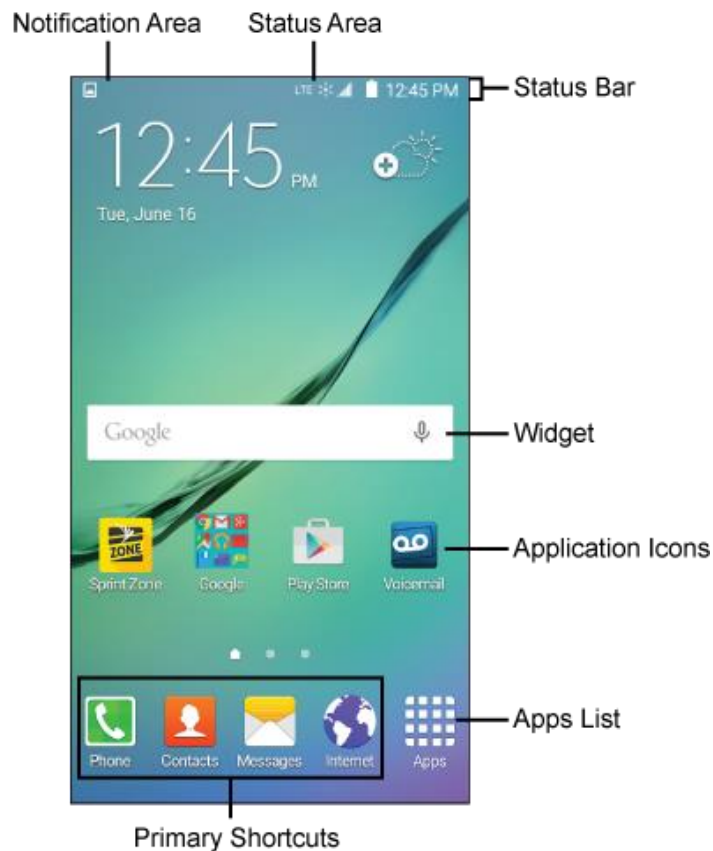

Item	Description
<b>Application Icons</b>	Application icons are shortcuts to favorite applications. You can add and remove these shortcuts as you wish.
<b>Applications (Apps) List</b>	Tap to open the applications (apps) list. The apps list key is a primary shortcut available from all Home screens.
<b>Notification Area</b>	The notification area of the Status Bar (on the left) displays notifications for incoming messages, missed calls, application updates, and more.
<b>Primary Shortcuts</b>	Primary shortcuts are application shortcuts that appear in the same location on all of your phone's Home screens. These are customizable except for the Applications (Apps) shortcut, which remains static.
<b>Status Area</b>	The status area of the Status Bar (on the right) displays phone and service status information such as signal strength, battery status, Wi-Fi and data connectivity, ringer status, and time.
<b>Status Bar</b>	The Status Bar displays icons to notify you of your phone's status (on the right side) and notifications (on the left side).
<b>Widget</b>	Widgets are self-contained onscreen apps that reside on your phone's Home screen.

**Note:** The indicator above the primary shortcuts lets you know your current screen position.

**Tip:** Press the **Home** key to return to the main Home screen from any other screen.

## Extended Home Screens


In addition to the main Home screen, your phone features extended Home screens to provide more space for adding icons, widgets, and more. Press the **Home** key to display the main Home screen and then drag across the screen to move from the main screen to an extended screen.

- Swipe left or right to go to an extended Home screen.
- While on an extended screen, press the **Home** key to return to the main Home screen.

## Add Home Screens

If you want to set up more shortcuts or widgets than you have space for, you can add more home screens.

1. Touch and hold an empty area on a Home screen.
2. Scroll through the thumbnail screens to the right until you see a blank screen with a + sign.

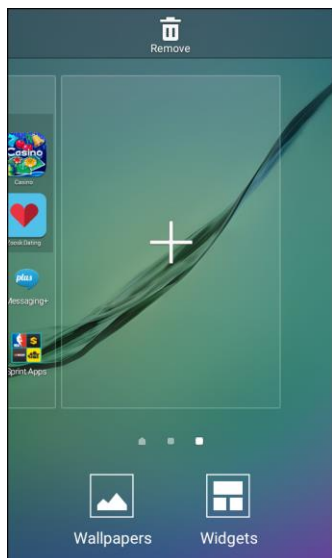

3. Tap **+** to add the screen.
  - ❖ A new blank home screen will be added to the far right of your screens.







# Status Bar

The Status Bar at the top of the Home screen provides phone and service status information on the right side and notification alerts on the left. To view the Notification panel or access the quick settings menu, tap the Status Bar and drag it down.











## Status Bar Layout











## Main Notification Icons







Icon	Notification
	Missed call
	New voicemail message
	New email message
	New Gmail message
	New text or MMS message
	New Hangouts message



Icon	Notification
	New Sprint Zone message
	Event
	USB connection
	Alarm
	Warning
	Update available
	Update downloading
	Update successful
	Keyboard active
	More notifications available (drag down to view)

## Main Status Icons

Icon	Status
	Bluetooth active
	GPS active
	Wi-Fi active
	Downloading
	Mute mode
	Vibrate mode
	Speakerphone active
	Network (full signal)


Icon	Status
	Network (roaming)
3G	3G Data Service
	3G Data Service is in use. The rays spin when data is being transferred.
LTE 	Sprint Spark Enhanced LTE data service. The rays spin when data is being transferred.
	Airplane mode
	Battery (charging)
	Battery (full charge)

## Notification Panel

Drag the Status Bar down to open the Notification panel. From there, you can check notifications, download updates, open messaging apps, use the quick settings menu, and more.

### Open the Notification Panel

- Drag the Status Bar down. Slide your finger down from the top of the screen.

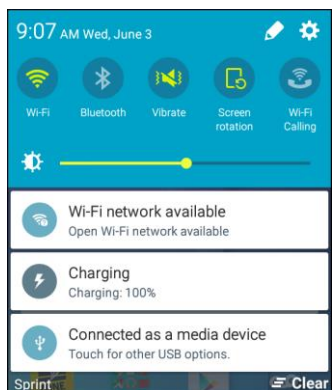


- ❖ The Notification panel opens. To check notifications, tap an item in the list.

## Close the Notification Panel


- Drag the Notification panel up. (Slide your finger up from the bottom of the screen.)

– or –

Tap the **Back** key  to close the Notification panel.

## Notification Panel Layout

The Notification panel gives you access to notifications, settings, and the quick settings menu.

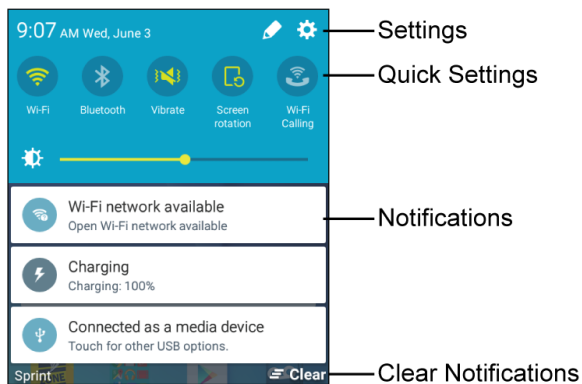


## Notification Panel Quick Settings

The Quick Settings list at the top of the Notification panel lets you quickly access frequently used settings options. Scroll left or right to display all available settings, and tap an icon to turn the selected feature on or off.

You can customize which settings are available in your Quick Settings list.

1. From a Home screen, drag the Status Bar down to display the Notification panel.

2. Tap **Edit**  to display the quick settings panel options.

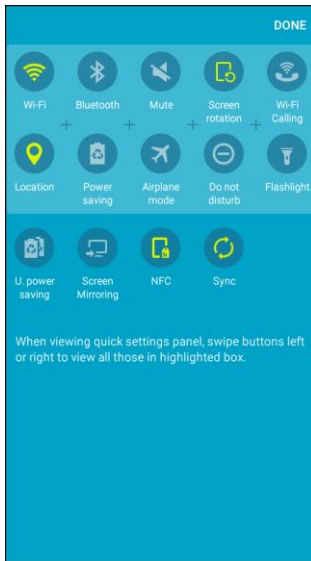


3. Drag buttons to arrange which options appear in the quick settings panel.
  - You will see two sets of buttons, Active Buttons on top and Available Buttons below.
    - You can have ten buttons active in the quick settings panel. These appear in the Active Buttons list.
    - There will additional buttons shown in the Available Buttons list. These are not currently active in the quick settings panel.
  - To add, remove, or move a button, touch and hold it and move it to the desired location.
4. Tap **DONE** when you are finished.

**Note:** You can only move buttons from Active to Available or vice-versa if there is space in the destination area. For example, if there are already ten Active buttons, you will need to move one to Available before dragging a different Available button up to the Active area.

# Customize the Home Screen

Learn how to set the wallpaper and add, move, or remove shortcuts, widgets, and folders from the Home screen.

## Operations for Rearranging the Home Screen




- **Moving Widgets and Icons:** From home, touch and hold an item and then drag it to the desired location.
- **Deleting Widgets and Icons:** From home, touch and hold an item and then drag it to **Delete** .
- **Displaying the Home Screen Menu:** From home, touch and hold an empty space to display the Home Screen menu. Menu options include Wallpapers and Widgets.

## Change the Wallpaper


Select and assign your phone's background wallpaper.

1. From home, touch and hold an empty space, and then tap **Wallpapers** .



- You can also access the wallpaper menu through settings. From home, tap **Apps**  > **Settings**  > **Wallpaper** .


2. Tap **Home screen**, and then tap an option to select the wallpaper.

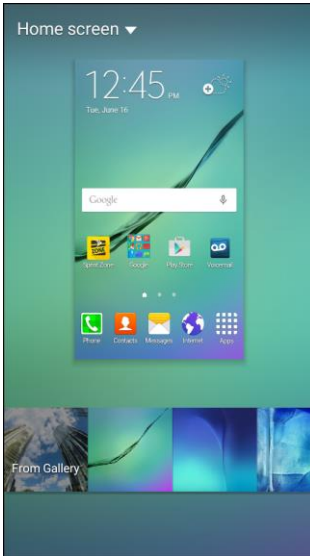

- **Home screen:** Set the background wallpaper for your Home screen.
  - **Lock screen:** Set the wallpaper for your phone's Lock screen.
  - **Home and lock screens:** Set a wallpaper for both your Home screen and your Lock screen.
3. Select a wallpaper and tap **SET AS WALLPAPER**.
    - ❖ The wallpaper is set.

# Add Shortcuts to the Home Screen

You can add shortcuts for quick access to favorite apps from the Home screen.

1. From home, tap **Apps** .



- ❖ The Apps list opens.
2. Touch and hold an app icon.
    - ❖ The icon will disengage and you will see thumbnails of your Home screens.
  3. Drag the icon to an empty location on one of the Home screens.
    - ❖ The shortcut is added to the Home screen.

## Add Widgets to the Home Screen

You can add widgets to your phone's Home screen. Widgets are self-contained apps that display on a Home screen. Unlike a shortcut, the Widget works like as an onscreen application. There are all kinds of widgets, including links to a specific contact, Internet bookmarks, Gmail and email accounts, and many others.

1. From home, touch and hold an empty space, and then tap **Widgets** .




2. Touch and hold a widget icon.
  - ❖ The icon will disengage and you will see thumbnails of your Home screens.
3. Drag the icon to an empty location on one of the Home screens.
  - ❖ The widget is added to the Home screen.



## Add Folders to the Home Screen

You can group Home screen shortcuts into folders for convenient access.

1. From home, touch and hold a shortcut you want to place in a folder, and then drag it on top of another shortcut and release it.

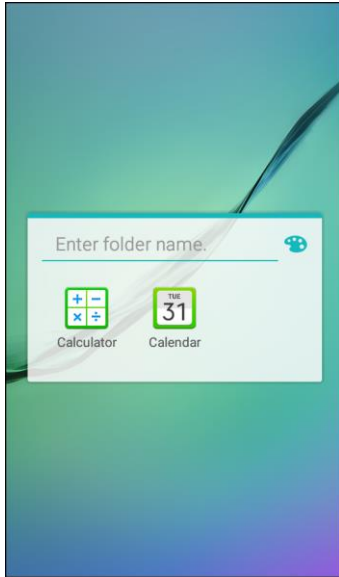

2. Type a name for the folder and tap **Done**.
  - ❖ A new folder is created.
3. To add more app shortcuts to the folder, touch and hold a shortcut and drag it on top of the new folder.
  - ❖ The new shortcut is added to the folder.


## Change Folder Names

Once you have added folders, you can change the name easily from the folder display.

1. From home, tap the folder to open it, and then tap the folder name.
2. Type a new name and then tap **Done**.

## Change the Folder Color

You can change the color of a folder.

1. From home, tap the folder to open it.
2. Tap  and select a color.

# Phone App

---

The following topics outline the use of your device's phone app to place and receive calls, use voicemail, set up and manage contacts, and more.

## Place and Answer Calls

The following topics describe how to directly dial calls, how to answer incoming calls, and how to use the in-call screen options.

### Adjust In-Call Volume

- **Adjusting Call Volume:** Press the **Volume** key up or down during the call.

### Troubleshooting

**Problem:** Difficulty during call.

**Solution 1:** It may not be possible to make a call properly in a noisy location.

**Solution 2:** When calling using Speaker, check the call volume. Raising the call volume may make calling difficult.


**Problem:** Sound pops momentarily during a call.

**Solution:** Are you changing location while calling? Sound pops when signal is weak and the phone switches to a different area.

# Call Using the Phone Dialer


The most “traditional” way to place a call is by using the phone’s dialer screen.

1. From home, tap **Phone**  to display the phone screen.

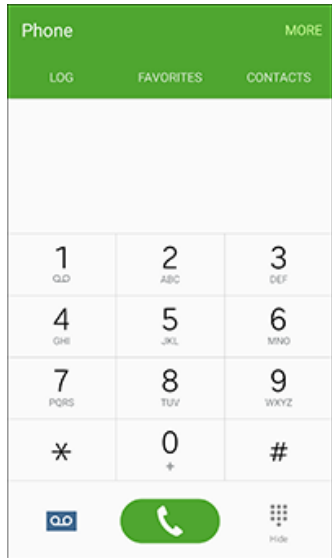


- ❖ The phone app opens. If necessary, tap  to display the keypad.

2. Tap the number keys on the keypad to enter the phone number.

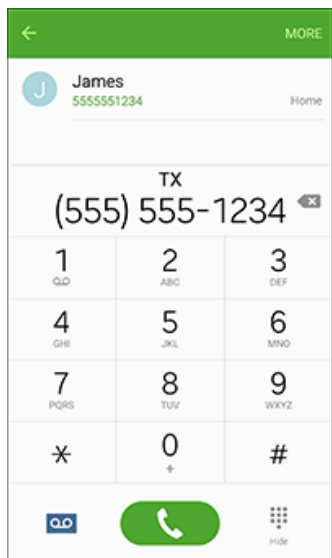


- As you enter digits, Smart Dial searches for contacts that match. If you see the number you want to dial, tap the contact to fill in the number on the keypad.

3. Tap  to call the number.

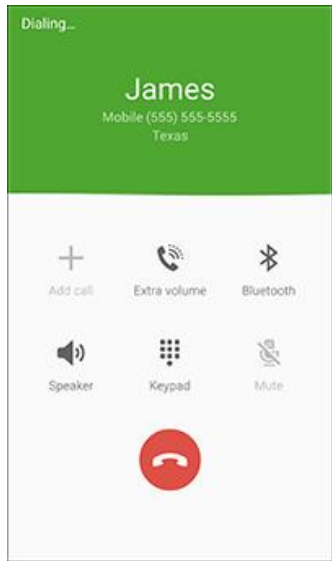

- ❖ The phone dials the number. The call begins when the other party answers.

4. To end the call, tap .

- ❖ The call ends.

## Troubleshooting

**Problem:** Call does not connect.

**Solution 1:** Was the number dialed using the correct area code?

**Solution 2:** Are you in an area with poor wireless coverage? Try calling again from another area.

## Call Emergency Numbers

You can place calls to 9-1-1 even if the phone's screen is locked or your account is restricted.




To call the 9-1-1 emergency number when the phone's screen is locked with a screen lock:

1. From the Lock screen, swipe the Phone shortcut  up, and then tap **EMERGENCY CALL**.

2. Tap    .

- ❖ As long as you are in an area covered by wireless service, the emergency call is placed.

To call the 9-1-1 emergency number normally or when your account is restricted:

1. Unlock the screen. For more information, see [Lock and Unlock Your Screen](#).
2. From home, tap **Phone** .
  - If necessary, tap  to display the keypad.
3. Tap .

❖ As long as you are in an area covered by wireless service, the emergency call is placed.

## Enhanced 9-1-1 (E 9-1-1) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E 9-1-1 emergency location services where available.

When you place an emergency 9-1-1 call, the GPS feature of your phone seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

**Important:** Always report your location to the 9-1-1 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs), may not be equipped to receive GPS location information from your phone.

## Answer Phone Calls


The following information lets you know how to answer incoming calls, mute the ringer on incoming calls, reject incoming calls, and more.


When you receive a phone call from a contact, the Incoming call screen appears and displays the caller ID icon, name, and phone number of the calling party. When you receive a phone call from someone who is not stored in Contacts, only the default caller ID icon and phone number appear on the Incoming call screen.

**Note:** If your phone is turned off, all calls automatically go to voicemail.

## Answer an Incoming Call

1. When a call arrives, drag  to the right to answer it.

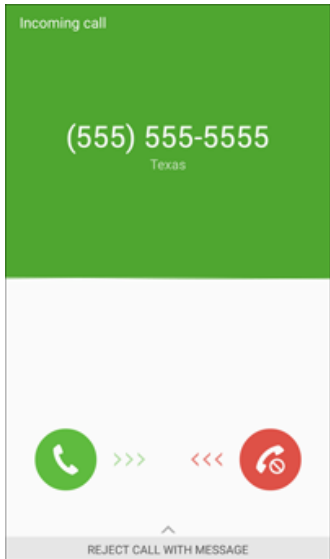


- ❖ The call begins.
2. To end the call, tap .
- ❖ The call ends.

## Mute the Ringing Sound

- To mute the ringer without rejecting the call, press the **Volume** key down.

## Reject an Incoming Call

- When a call arrives, drag  to the left to reject it.

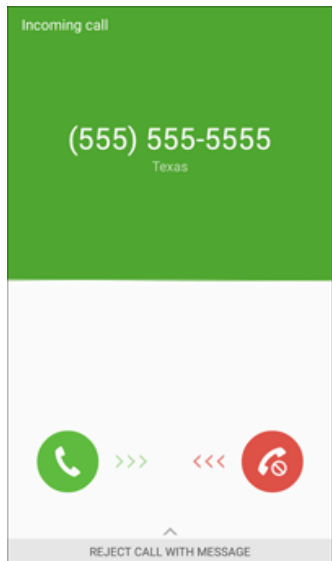


- ❖ The ringtone or vibration will stop and call will be sent directly to voicemail.

## Reject a Call and Send a Text Message




You can reject an incoming call and automatically send a text message to the caller.

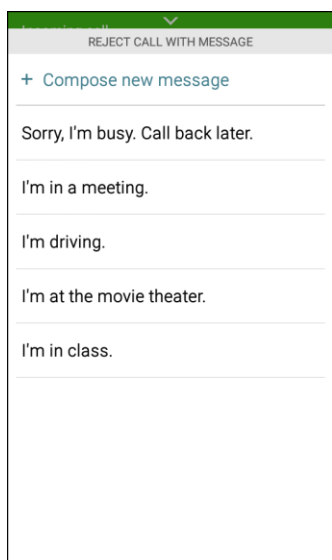1. When a call arrives, drag **REJECT CALL WITH MESSAGE** up from the bottom of the screen.



2. Tap one of the messages to send it to the caller.

- ❖ The selected message will be delivered to the caller.


- You can edit the reject messages through the Call settings menu. From home, tap **Apps**  > **Settings**  > **Applications**  > **Phone** > **Call rejection** > **Rejection messages** and edit or create reject messages.





## In-Call Screen Layout and Operations

While you are on a call, you will see a number of onscreen options.
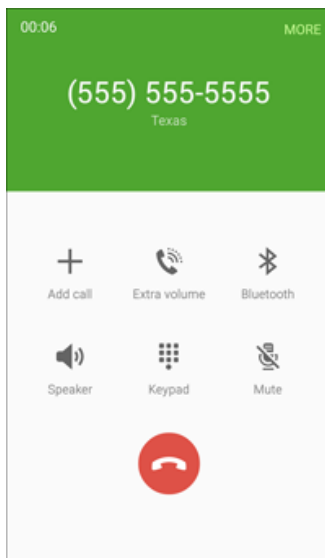
### In-Call Screen Layout



Tap options to activate them during a call.





- **Add call** : Tap to initiate a conference call.
  - After the second call is placed, tap **Merge** to join the two calls (conference).
- **Extra volume** : Increase the current volume of the call.
- **Bluetooth** : Route the phone's audio through a connected Bluetooth headset (On) or through the speaker (Off).
  - When the call is routed to a Bluetooth headset, the current call area shows the **Bluetooth**  icon.

**Note:** The Bluetooth button is activated to show the current call is routed to the connected Bluetooth headset.



- To route the current call back to the phone, tap **Bluetooth**  to temporarily use the phone. Tap it again to route the call back to the connected Bluetooth headset.
- When Bluetooth or the Bluetooth headset is turned off, the call is routed through either the earpiece or speaker.
- **Speaker** : Route the phone's audio through the speaker (On) or through the earpiece (Off).
  - Activate **Speaker** to route the phone's audio through the speaker. (You can adjust the speaker volume using the **Volume** key.)
  - Deactivate **Speaker** to use the phone's earpiece.

**Warning:** Because of higher volume levels, do not place the phone near your ear during speakerphone use.

- **Keypad/Hide** : Toggle the appearance of the onscreen keypad.
- **Mute** : Mute the microphone during an active call. Tap again to unmute the microphone.

**Note:** If Mute is activated, the speaker mode is deactivated.

- **End call:** Tap  to end the current call.

## Additional In-Call Options

- Tap **MORE** to display additional in-call options:
  - **Contacts:** Display your Contacts list.
  - **Message:** Send a text or multimedia message while remaining on the call.
  - **Memo:** Create a new memo while remaining on the call.
  - **Calendar:** View your calendar while remaining on the call.


## End of Call Options


When a call ends, you will briefly see an end-of-call options screen, which may include:

- **View contact:** Display the contact information for the caller.
- **Create contact:** Create a new contact entry for the caller. See [Add a Contact](#).
- **Update existing:** Add the caller's phone number to an existing contact entry. See [Edit a Contact](#).
- **Add event:** Schedule a meeting and invite the caller. See [Add an Event to the Calendar](#).
- **Call:** Place a call to the caller.
- **Message:** Address a text message to the caller. See [Send a Text Message](#).


# Place a Call from Contacts

You can place phone calls directly from entries in your Contacts list.

1. From home, tap **Phone** .

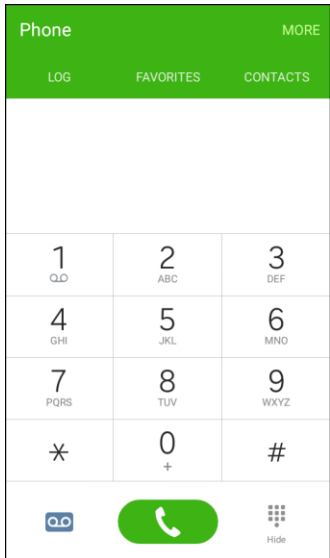


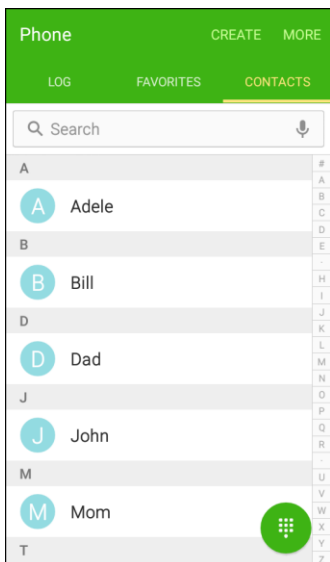

2. Tap **CONTACTS** to display the Contacts list.



- ❖ The Contacts list appears.

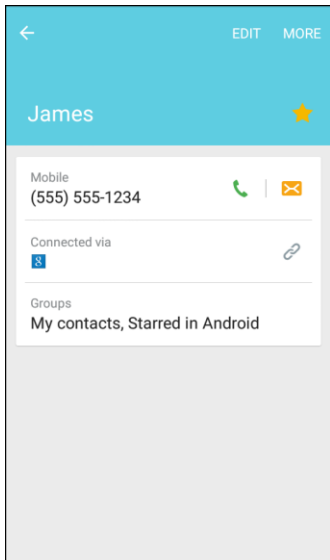3. Tap a contact.




4. Tap **Call**  next to the number you want to call.
  - ❖ The phone dials the number. The call begins when the other party answers.
5. To end the call, tap .


**Tip:** You can also place a call directly from the Contacts list. Swipe the entry you want to call from left to right to place a call to the entry's primary number.




# Call from Call Logs

The call logs list lets you quickly place calls to recent incoming, outgoing, or missed numbers.

1. From home, tap **Phone** .

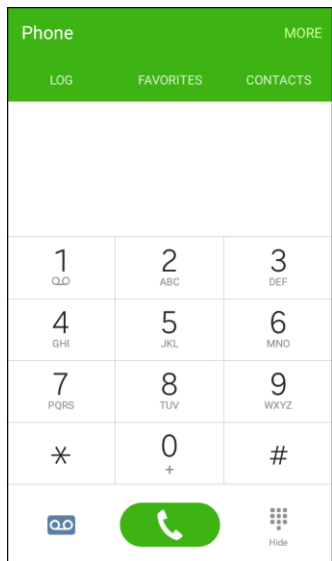


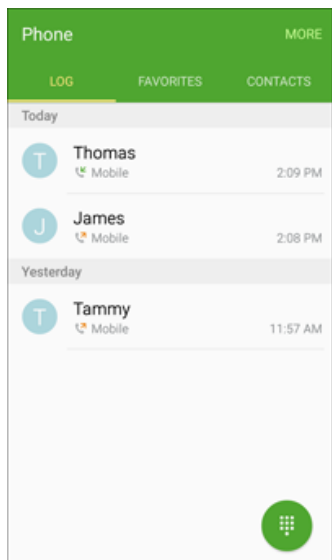

2. Tap **LOG** to display the call logs list.



- ❖ The call logs list appears.

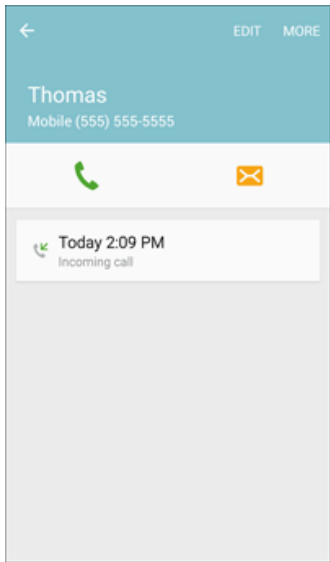3. Tap an entry to display the call details.



4. Tap  to place a call.
  - ❖ The phone dials the number. The call begins when the other party answers.
  - For additional options, tap the name or number.
5. To end the call, tap .

**Tip:** You can also place a call directly from the Call logs list. Swipe the entry you want to call from left to right to place a call.




# Optional Services


The following topics outline additional voice-related services available with your phone, including call services, voicemail, and more.

## Voicemail Setup


You should set up your voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

1. From home, tap **Phone**  to display the phone screen.

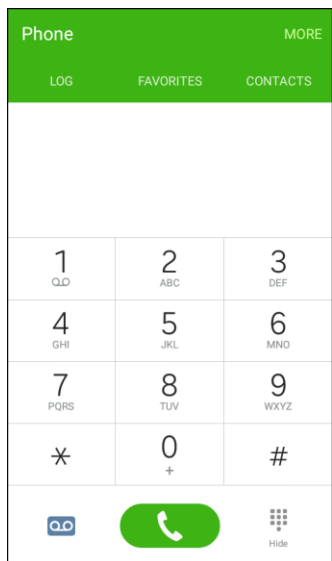

- ❖ The phone app opens. If necessary, tap  to display the keypad.

2. Touch and hold  to dial your voicemail number.

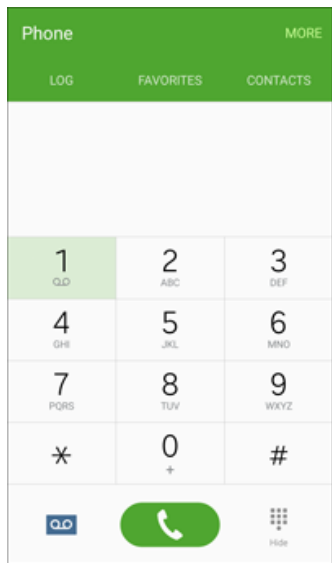

- ❖ Your phone dials the voicemail access number.

3. Follow the system prompts to:
  - Create your password.
  - Record your name announcement.
  - Record your greeting.

**Important: Voicemail Password** – It is strongly recommended that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

## Visual Voicemail

Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find exactly the message you are looking for without having to listen to every voicemail message first. This feature periodically goes out to your voicemail, and gathers the caller information from all of the current voicemails. It then populates a list with the caller name and number, along with the length of time and priority level of the voicemail message.

## Set Up Visual Voicemail


Setting up Visual Voicemail follows many of the same procedures as setting up traditional voicemail. You should set up your voicemail and personal greeting as soon as your phone is activated. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

**Note:** To set up your traditional voicemail box, see [Voicemail Setup](#).


1. From home, tap **Apps**  > **Voicemail** .

– or –

Tap **Phone** , and then tap  to access your Visual Voicemail.

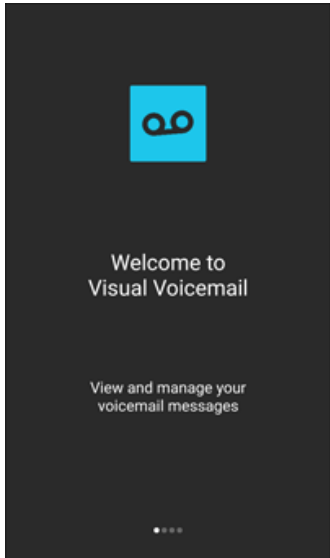

2. Scroll through the **Welcome to Visual Voicemail** introduction screens to view a brief explanation of the visual voicemail services.
3. At the end of the welcome screens, a **Personalize your voicemail** prompt displays.

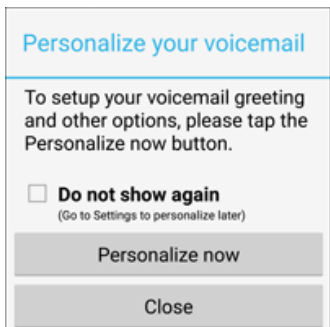

4. Tap **Personalize now** and follow the system prompts to:
  - Create a password (part of standard voicemail).
  - Record your name announcement.
  - Record your greeting.


**Important: Voicemail Password** – It is strongly recommended that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.




# Review Visual Voicemail


Visual Voicemail lets you easily access and select which messages you want to review.


1. From home, tap **Apps**  > **Voicemail** .

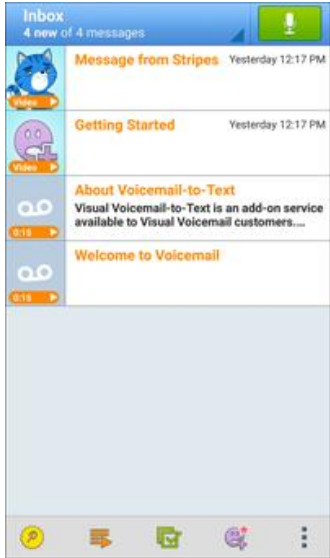

❖ You will see the voicemail inbox.

2. Tap a message, and then tap **Play**  to review it.

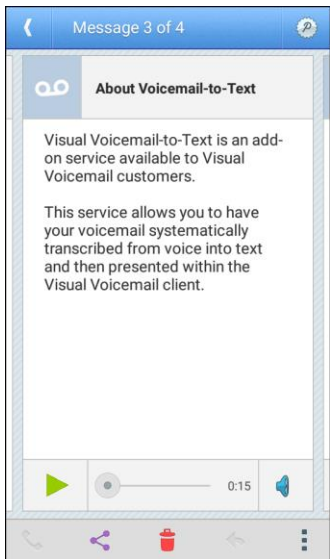


**Tip:** There are several icons at the bottom of the review screen for maintenance, storage, messaging, and other options. For an explanation of all your options, tap **More options**  > **Help** > **Visual Voicemail Menu** > **Visual Voicemail Settings**.

## Listen to Multiple Voicemail Messages

When you are done listening to a voicemail message you can easily access other voicemail messages without returning to the main voicemail screen.

1. Listen to the current voicemail message.
2. Swipe your finger left or right to display the next or previous message.

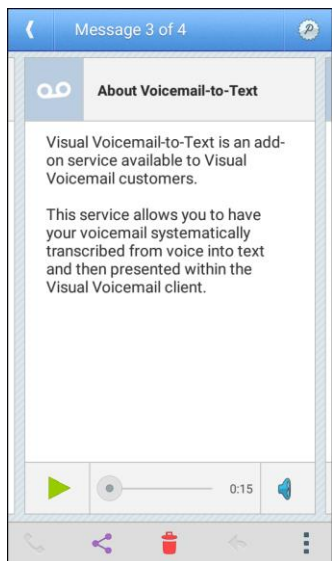










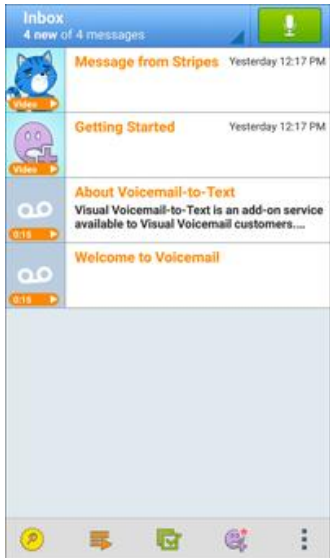


You can navigate through voicemail messages as frequently as you would like. You can even move to the next or previous message before you are finished listening to the current one.

# Visual Voicemail Options






Your visual voicemail options appear as icons at the bottom of the voicemail review screen.

1. From home, tap **Apps**  > **Voicemail** .



2. The following options are available when viewing new voicemail messages:
  -  **Subscribe:** Subscribe to the premium Voice-to-Text transcription service. (This service requires an additional monthly charge.)
  -  **Play all new:** Play all new messages.
  -  **Select multiple:** Perform an action on multiple messages.
  -  **Compose Avatar message:** Send an animated voice message to friends. You can also compose an Avatar message by tapping .
  -  **More options:** Access Search, Settings, and Help features.
3. Tap a message to review it. The following options are available while listening to voicemail messages:
  -  **Call:** Dial the number the message came from.
  -  **Share:** Send the message via Wi-Fi Direct, social accounts, and so on.
  -  **Delete:** Delete selected messages.
  -  **Reply:** Reply to the message via text or voice message.
  -  **More options:** Access Archive, Settings, and Help features.

4. Touch and hold a message to manage your messages. The following options are available:


-  **All:** Select all messages.
-  **Delete:** Delete the selected messages.
-  **Archive:** Save this message.
-  **Mark as Read:** Mark this voicemail as being read.
-  **Mark as Unread:** Mark this voicemail as not being read.

**Note:** Not all options are available for all messages.

## Configure Visual Voicemail Settings

The Visual Voicemail settings menu lets you access settings for notifications, pictures, greetings, and more.

1. From home, tap **Apps**  > **Voicemail** .

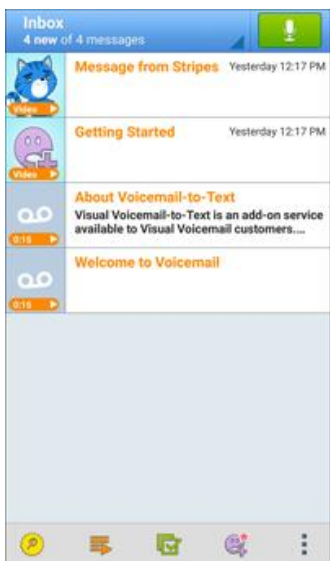

2. Tap **More options**  > **Settings**.



❖ You will see the voicemail settings menu.


3. Select an option to change its settings:


- **Avatar:** Configure you Avatar options.
- **Display:** Change your voicemail message theme and enter a name to identify yourself to people when replying or forwarding messages.
- **Help:** View help topics for using Visual Voicemail.
- **Preferences:** Change your Visual Voicemail application preferences.
- **Sound:** Change your sound/speakerphone options.
- **Updates:** Check for updates.
- **About Voicemail:** View information about the application.

## Change Your Main Greeting via the Voicemail Menu

Your main greeting can be changed directly via the Visual Voicemail system. This direct access saves you from having to navigate within the voicemail menu.

1. From home, tap **Apps**  > **Voicemail** .

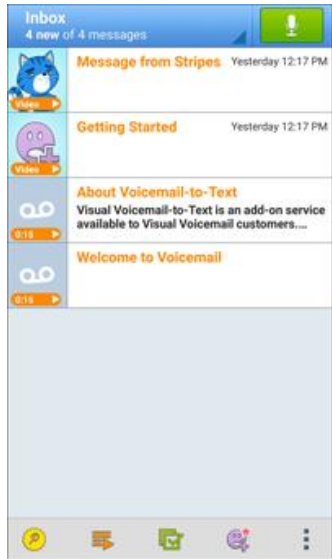



2. Tap **More options**  > **Settings** > **Preferences** > **Personalize voicemail**.
3. Tap **OK** to connect to the voicemail system. Follow the prompts to change your current greeting.

## Edit the Display Name via the Voicemail Menu

From your Visual Voicemail menu, you can quickly change the name or number attached to your voice messages.

1. From home, tap **Apps**  > **Voicemail** .

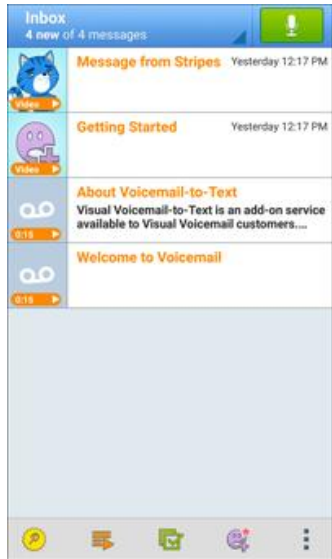



2. Tap **More options**  > **Settings** > **Display** > **Display name**.
3. Tap the existing identification field and enter a new identifying name or number (used to identify you to recipients of your voice messages).
4. Tap **OK** to save your information.


# Wi-Fi Calling



Wi-Fi Calling uses Wi-Fi networks to help improve voice and data coverage. It sends and receives calls and text messages over a Wi-Fi network and may offer better coverage in buildings and areas of poor cellular reception.

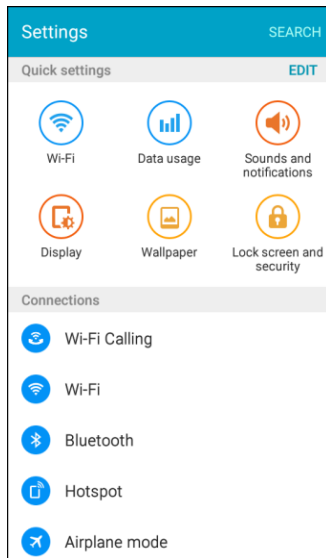1. From home, tap **Apps**  > **Settings** .



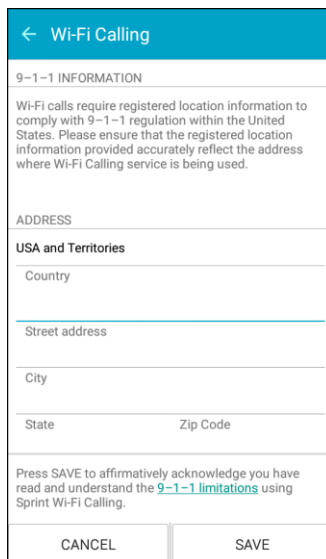

2. Tap **Wi-Fi Calling**  and follow the online prompts to set up Wi-Fi Calling.



- ❖ Wi-Fi Calling is set up. You will see  in the status bar when Wi-Fi Calling is active and connected, or  if Wi-Fi Calling is set up but you are not connected to a Wi-Fi network.




**Note:** When using Wi-Fi calling, the phone app icons differ slightly. You will tap  to place a call, and tap  to end a call.






For more information, see [Wi-Fi Calling Settings](#).

## Caller ID Blocking

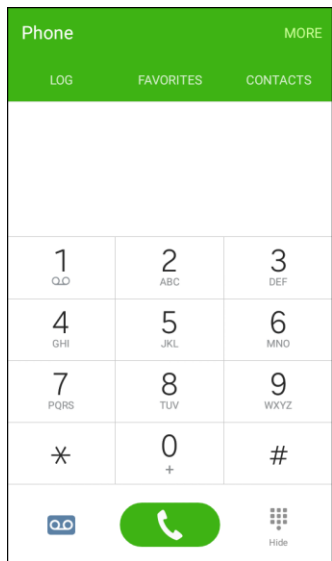Caller ID identifies a caller before you answer the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

1. From home, tap **Phone**  to display the phone screen.



- ❖ The phone app opens. If necessary, tap  to display the keypad.
2. Tap   .
3. Enter a phone number.
4. Tap .

- ❖ Your caller information will not appear on the recipient's phone.


To permanently block your number, call Sprint Customer Service.

## Call Waiting

When you are on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available).

To respond to an incoming call while you are on a call:

- Slide  to the right. (This puts the first caller on hold and answers the second call.)

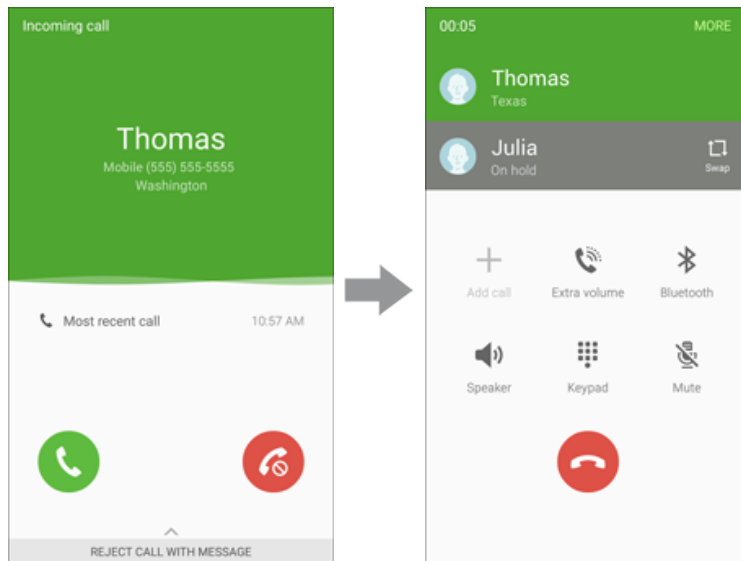

To switch back to the first caller:

- Tap **Swap** .


# Call Forwarding




Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when you have activated Call Forwarding.

**Note:** You are charged a higher rate for calls you have forwarded.

To activate Call Forwarding:

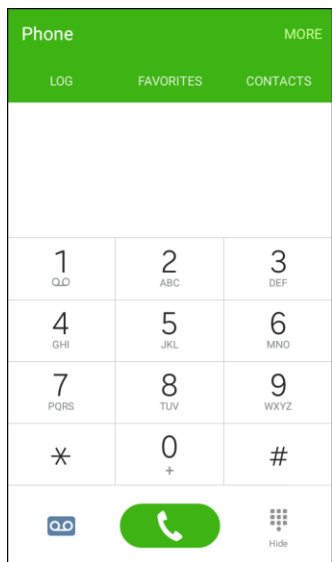
1. From home, tap **Phone**  to display the phone screen.




- ❖ The phone app opens. If necessary, tap  to display the keypad.
2. Tap .
3. Enter the area code and phone number to which you want your calls forwarded.
4. Tap .
- ❖ You will hear a tone to confirm the activation of Call Forwarding. All calls to your wireless number will be forwarded to the designated phone number.

To deactivate Call Forwarding:

1. From home, tap **Phone** .

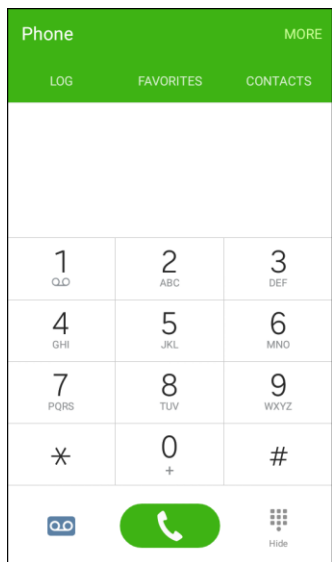

❖ The phone app opens. If necessary, tap  to display the keypad.

2. Tap .

3. Tap .

❖ You will hear a tone to confirm the deactivation.

# Call Settings


The Call settings menu lets you configure your voicemail options and a number of other settings for the phone application.

## Access Call Settings

- From home, tap **Apps**  > **Settings**  > **Applications**  > **Phone** .

– or –

From home, tap **Phone**  > **MORE** > **Settings**.

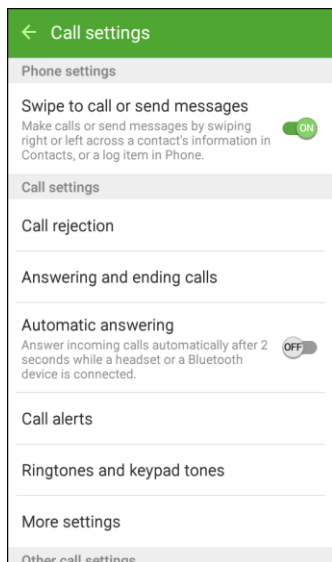

- ❖ The Call settings menu displays.

## Call Settings Options

Use the Call settings menu to adjust the following settings:

Setting	Description
<b>Swipe to call or send messages</b>	Place a call to a displayed contact by swiping right. Send a message to a displayed contact by swiping left.
<b>Call rejection</b>	Create or edit messages to reject incoming calls.
<b>Answering and ending calls</b>	Answer calls by pressing the Home key or using voice commands. End calls by pressing the Power key or using voice commands.
<b>Automatic answering</b>	Automatically answer incoming calls after a set time while a headset or a Bluetooth device is connected.

Setting	Description
<b>Call alerts</b>	Vibrate or play tones when calls are answered or end. Alarms and notifications can be turned off during calls.
<b>Ringtones and keypad tones</b>	Select or create your default ringtone, set the phone to vibrate when ringing, and play a tone when the dialing keypad is tapped.
<b>More settings</b>	<ul style="list-style-type: none"> <li>• <b>TTY mode:</b> Enable service on your phone.</li> <li>• <b>Hearing aids:</b> Improve the sound quality of your phone when using hearing aids.</li> </ul>
<b>US dialing</b>	Replace + with the international dialing code, except when entering +1.
<b>International dialing</b>	Enter the international dialing code automatically.
<b>DTMF tones</b>	Set the length of DTMF tones, which are used when pressing the keypad while on a call.
<b>Voicemail settings</b>	Configure your voicemail.

For more information about Call settings, see [Phone Settings](#).

## Contacts

The Contacts application lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your phone as well as contacts synchronized with your Google Account, your PC, compatible email programs (including Exchange Server), and your Facebook friends.


### **Contacts Cautions**

Information saved in Contacts may be lost or changed if the battery is left uncharged. Accident or malfunction may also cause loss or change to information. It is recommended that you keep a separate copy of contacts and other important information. The company is not responsible for any damages from lost or changed contacts.


## Add a Contact


You can add contacts from the Contacts application. Enter details such as name, phone numbers, email addresses, mailing addresses, and more.

1. From home, tap **Apps**  > **Contacts** .

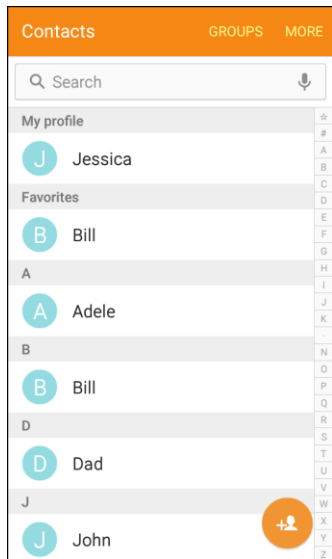

❖ You will see the Contacts list.

2. Tap  to add a contact.

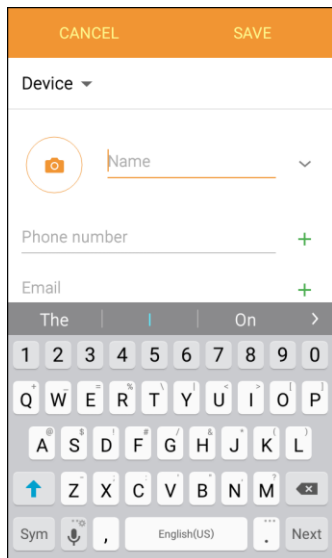



❖ The Save contact to screen appears.

3. If you have multiple account types associated with your phone, select a contact type.
  - Select **Device** as the sync account if you want your contacts on your phone only; they will not be synced with your Google Account.
  - Select **Google** if you want to save contacts to your Google Account; these will be synced automatically with your Google Account online. If you have multiple Google Accounts set up, you will need to pick a specific account.
  - Select **Samsung account** to sync your contacts automatically with your Samsung account.
  - Select **Microsoft Exchange ActiveSync** to sync your contacts automatically with your Microsoft Exchange account.

**Note:** If you do not see the Save contact to screen and you have multiple accounts set up, you can select an account by tapping the account type in the upper left corner.

4. Use the keyboard to enter as much information as you want.

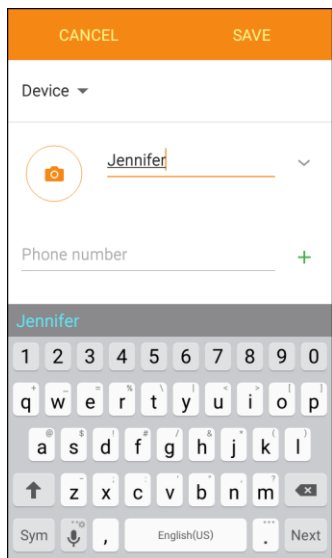


- **Photo:** Tap  to assign a picture to the contact.
- **Name:** Enter the contact's name.
- **Phone number:** Enter a phone number for the contact.
- **Email:** Enter an email address.
- **Groups:** If desired, assign the contact to one or more contact groups.
- **Ringtone:** Select a specific ringtone for this contact.
- **ADD ANOTHER FIELD:** Add additional information such as Address, Notes, Nickname, Relationship, etc.



**Note:** To select a type (label) for a phone number, email address, or address (such as Mobile, Home, Work, etc.), tap the type to the right of the field and select the appropriate type.

**Note:** To add more phone numbers, email addresses, etc., tap **+** on the right side of the entry field.

5. When you have finished adding information, tap **SAVE**.

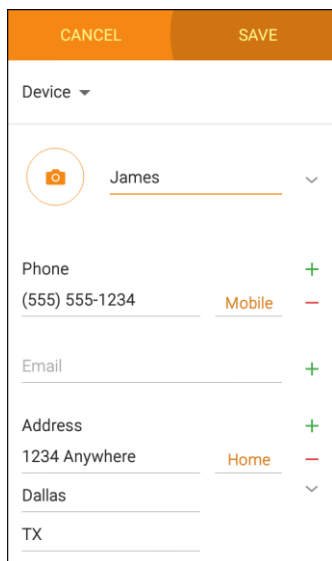


❖ The contact is added.

## Save a Phone Number


You can save a phone number to Contacts directly from the phone keypad.

1. From home, tap **Phone**  to display the phone screen.

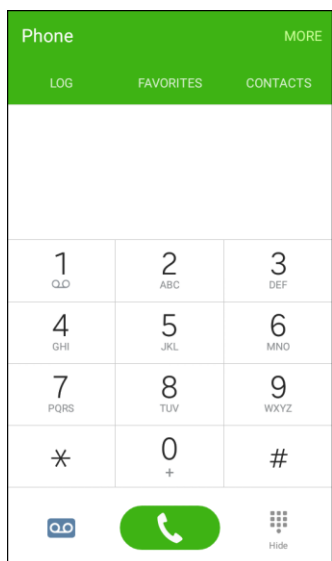

❖ The phone app opens. If necessary, tap  to display the keypad.

2. Enter a phone number and tap **Add to Contacts**.

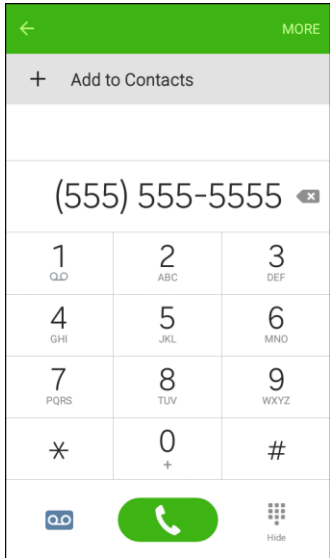


3. To add a new contact, tap **Create contact**. To add the number to an existing contact, tap **Update existing**.
  - For an existing contact, tap the contact name and select a number type for the new number.
  - For a new contact, enter the name and any additional information.
4. Tap **SAVE**.
  - ❖ The contact is added.

# Check Contacts


View a contact's details by displaying a contact entry.

1. From home, tap **Apps**  > **Contacts** .

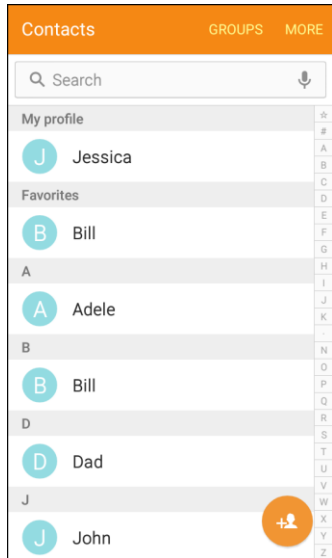

❖ You will see the Contacts list.


2. Tap a contact to view its details.

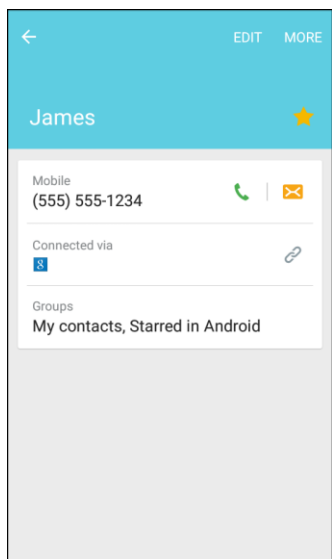

❖ The contact's detailed listing appears.

# Contacts Screen Layout

The following illustration show's your Contacts app layout and describes the various features.

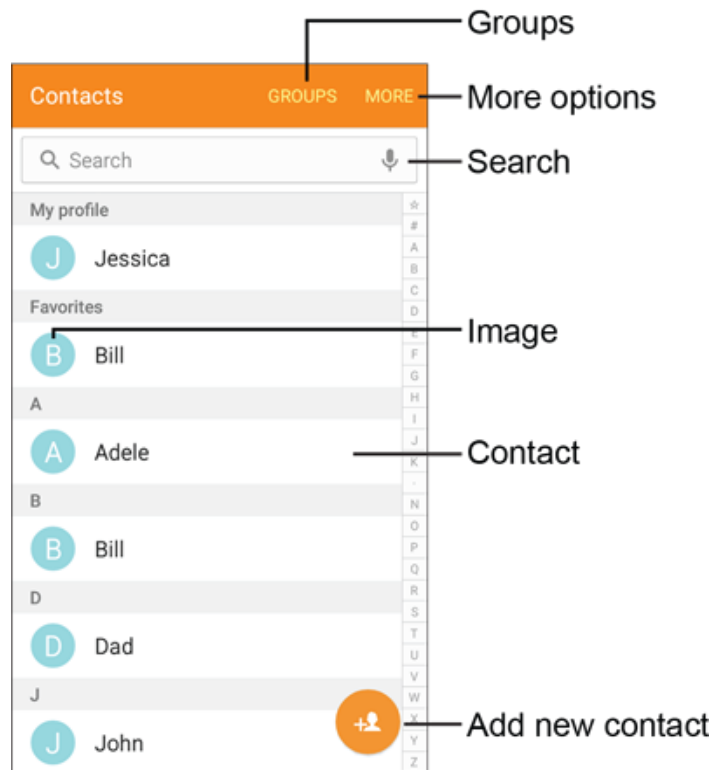


Item	Description
<b>Add new contact</b>	Add a new contact.
<b>Contact</b>	Tap to show the contact's details.
<b>GROUPS</b>	Show contact groups.
<b>Image</b>	Tap to show the contact's details.
<b>MORE</b>	Access additional options.
<b>Search</b>	Search contacts.

## Edit a Contact


Once you've added a contact, you can add or edit any of the information in the entry, assign a caller ID picture, customize with a unique ringtone, and more.

1. From home, tap **Apps**  > **Contacts** .

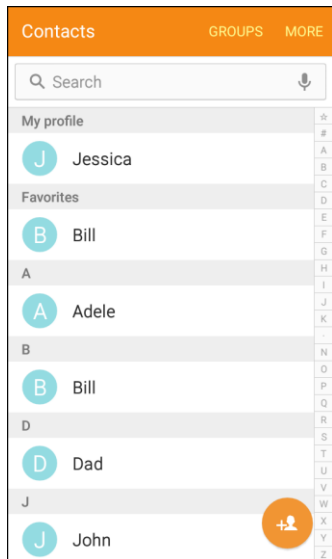

❖ You will see the Contacts list.


2. Tap a contact to view its details.

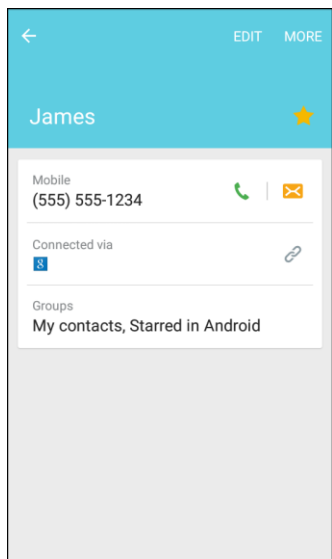

❖ The contact's detailed listing appears.

3. Tap **EDIT**.
4. Tap any field you want to change or add. See [Add a Contact](#).

5. Add or edit the information, and then tap **SAVE**.

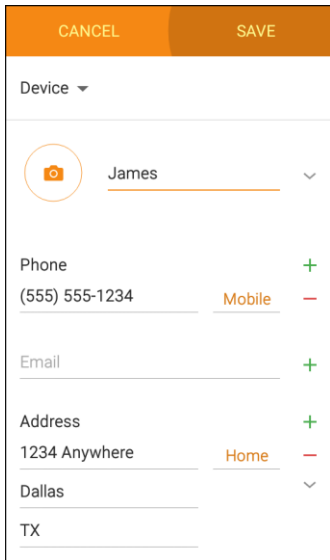


- ❖ Your changes are saved to the contact entry.

## Delete a Contact


You can delete a contact from the contacts details page.

1. From home, tap **Apps**  > **Contacts** .

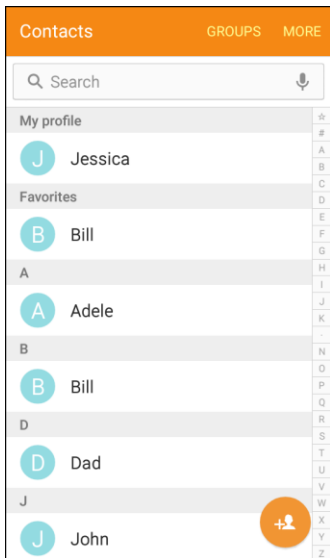


- ❖ You will see the Contacts list.

2. Tap a contact to view its details.

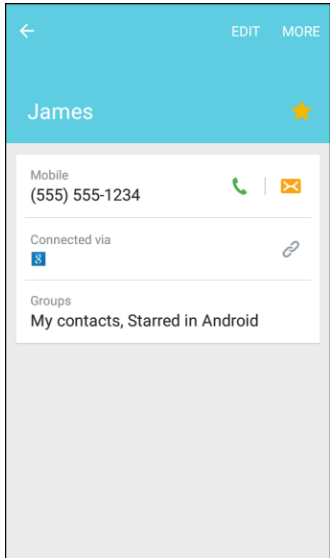

- ❖ The contact's detailed listing appears.

3. Tap **MORE > Delete > DELETE**.

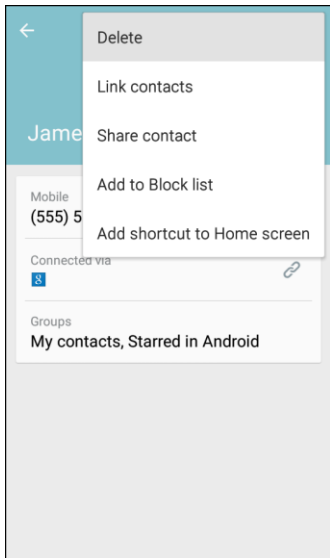


- ❖ The contact is deleted.

**Tip:** You can also touch and hold the contact from the Contacts list and tap **DELETE > DELETE**.

# Share a Contact


You can quickly share contacts using Bluetooth, email, Gmail, or text messaging.

1. From home, tap **Apps**  > **Contacts** .

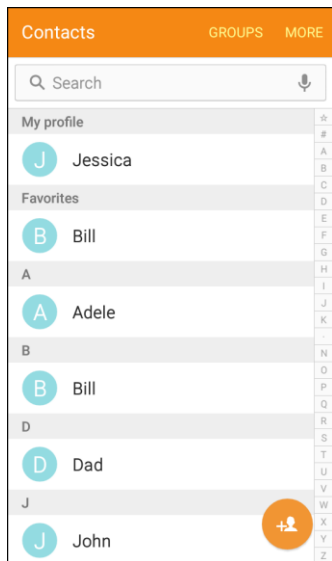

❖ You will see the Contacts list.

2. Tap a contact to display it, and then tap **MORE** > **Share contact**.

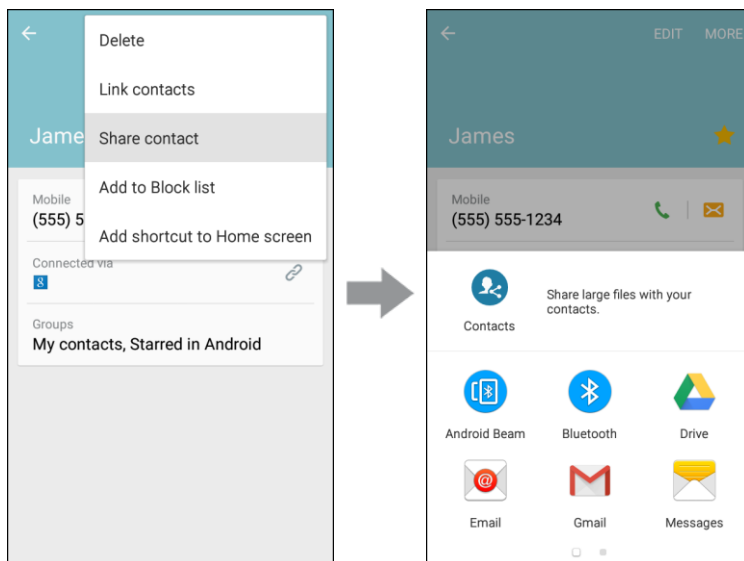

❖ You will see list of sharing methods.




3. Select a sharing method:
  - **Android Beam:** Send the information using NFC and Android Beam.
  - **Bluetooth** to send the information via Bluetooth. See [Bluetooth](#) for information on pairing and sending via Bluetooth.
  - **Contacts:** Share files up to 1 GB using Contacts.
  - **Drive** to save the information to your Google Drive account.
  - **Email** to send the information as an email attachment. See [Compose and Send Email](#).
  - **Gmail** to send the information as a Gmail attachment. See [Create and Send a Gmail Message](#).
  - **Messages** to send the information in a text message. See [Send a Multimedia Message \(MMS\)](#).
  - **OneDrive:** Save the information to your OneDrive account.
  - **OneNote:** Save the information to your OneNote account.
  - **Wi-Fi Direct:** Send the information to another device via Wi-Fi Direct. See [Wi-Fi Direct](#).
4. Complete the required steps as prompted for the selected method.
  - ❖ The selected contact will be shared.

**Note:** Available sharing methods may differ depending on your phone's configuration.

## Profile Sharing


Share your profile information with your contacts. You can select which contacts you want to share it with, as well as select additional information you want to share.

1. From home, tap **Apps**  > **Contacts** .

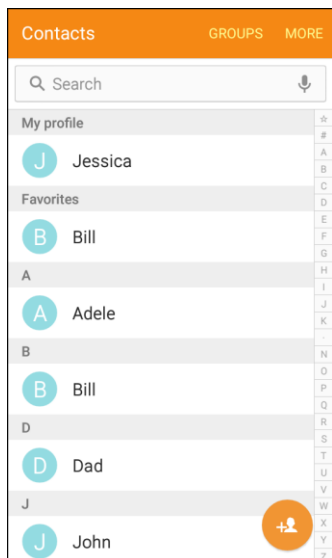


- ❖ You will see the Contacts list.

2. Tap your profile under My profile.

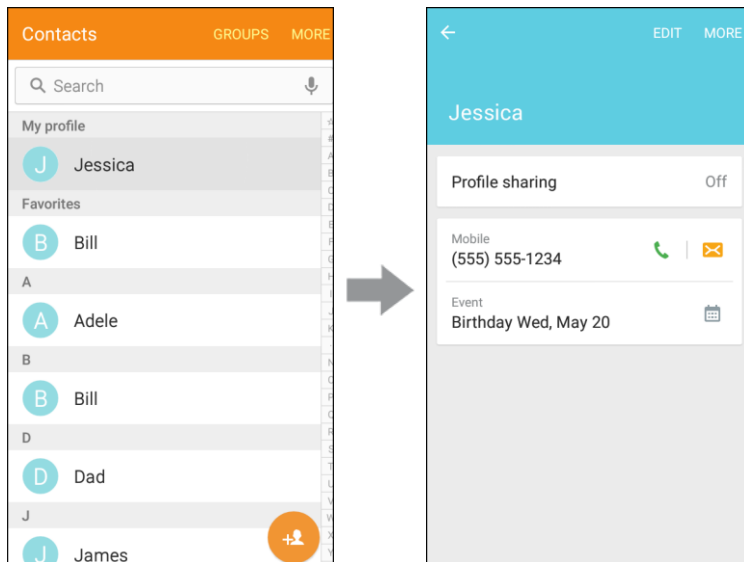

❖ Your profile displays.

3. Tap **Profile sharing**, and then tap the **ON/OFF** switch to enable the feature.

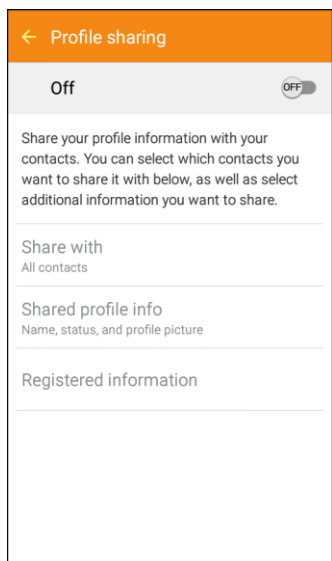

4. Set Profiling sharing options:

- **Share with:** Share your profile with the public, all contacts, your favorite contacts, or selected contacts.
- **Shared profile info:** In addition to your name, status, and profile picture, you can share your email, organization, address, and date of birth.
- **Registered information:** View and set the registered information for your phone number.


**Note:** The first time you turn on Profile sharing, you may be prompted to agree to the Enhanced features Terms and Conditions and Privacy Policy. Review the terms and tap **AGREE** to continue.

# Import Contacts

Import (load) contacts that have been backed up to device storage.


## Import Contacts from Device Storage

1. From home, tap **Apps**  > **Contacts** .

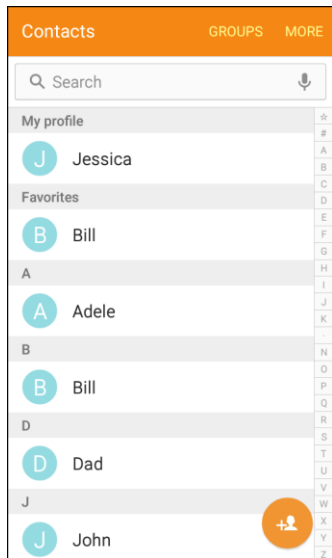

❖ You will see the Contacts list.

2. Tap **MORE** > **Settings** > **Import/Export contacts**.

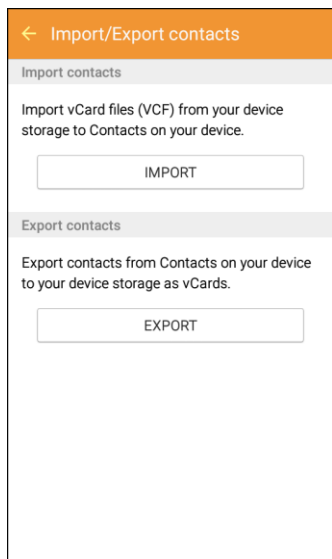

❖ You will see the Import/Export contacts menu.


3. Tap **IMPORT**.
4. Select a destination for the imported contacts.

5. Follow the onscreen instructions to complete the import.
  - ❖ The contacts are imported and stored in the selected account.

## Back Up Contacts


If you are saving contacts to an account that does not automatically back them up via the Cloud, you can manually back them up to your phone's memory for re-import if needed.

1. From home, tap **Apps**  > **Contacts** .

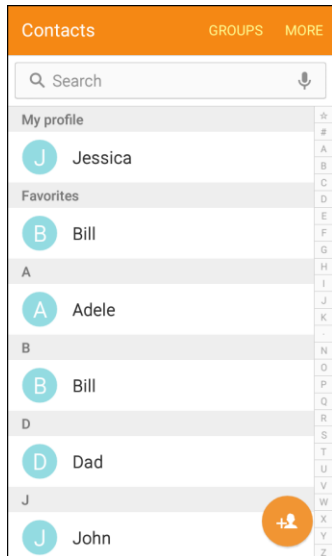

- ❖ You will see the Contacts list.

2. Tap **MORE** > **Settings** > **Import/Export**.

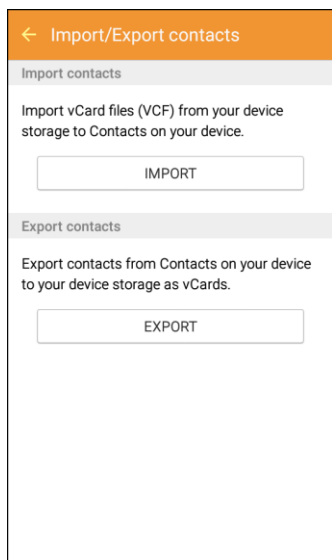

- ❖ You will see the Import/Export contacts menu.

3. Tap **EXPORT**.
4. Select an export location.
5. Follow the onscreen instructions to complete the export.
  - ❖ The contacts are exported.

# Messaging and Internet

---

With wireless service and your phone's messaging and data capabilities, you have the opportunity to share information through many different channels and accounts, including Gmail (Google), personal and corporate email, text and multimedia messaging, social networking accounts, and Hangouts.

## Text and Multimedia Messaging

With Text Messaging (SMS), you can send and receive instant text messages between your wireless phone and another messaging-ready phone.

Multimedia messages, or MMS, can contain text and pictures, recorded voice, audio or video files, picture slideshows, contact cards (vCard), or appointments (vCalendar).


See your service plan for applicable charges for messaging.

For information about setting options for the Messages app, see [Messages Settings](#).


## Send a Text Message


Quickly compose and send text messages on your phone.

1. From home, tap **Apps**  > **Messages** .

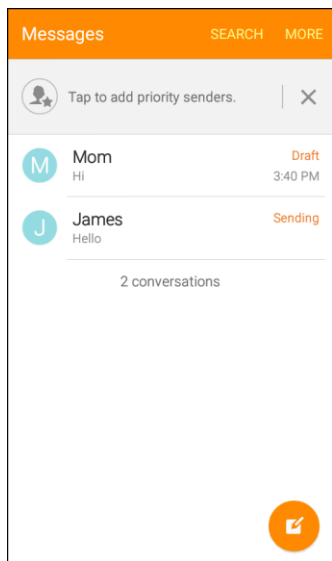

2. On the Messages screen, tap **Compose** . The Compose screen opens.

3. Fill in one or more recipients. You can:
  - Enter phone numbers directly in the **Enter recipients** field. If you are sending the message to several phone numbers, separate the phone numbers with a comma. As you enter information, any matching phone numbers from your Contacts list are displayed. Tap a match to enter that number or address directly.
  - Tap **Recipients** , and then select the contacts to whom you want to send the message. You can also select contact groups as recipients. When you have selected all the message recipients, tap **DONE**.
4. Tap the **Enter message** field and then start composing your message.

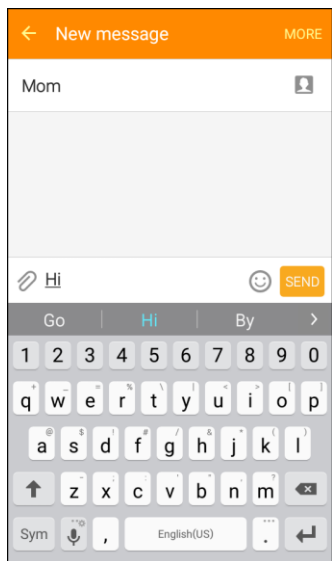


**Note:** You can add a subject line by tapping **MORE > Message options > Add subject**.



5. When done, tap  to send the text message.

## Send a Multimedia Message (MMS)

When you need to add a little more to a text message, you can send a multimedia message (MMS) with pictures, voice recordings, audio or video files, contact cards (vCard), or appointments (vCalendar).

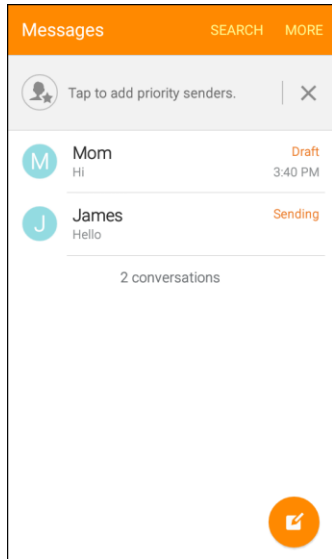
1. From home, tap **Apps**  > **Messages** .





2. On the Messages screen, tap **Compose** . The Compose screen opens.
3. Fill in one or more recipients. You can:
  - Enter phone numbers directly in the **Enter recipient** field. If you are sending the message to several phone numbers, separate the phone numbers with a comma. As you enter information, any matching phone numbers from your Contacts list are displayed. Tap a match to enter that number or address directly.
  - Tap the  icon, and then select the contacts to whom you want to send the message. You can also select contact groups as recipients. When you have selected all the message recipients, tap **DONE**.
4. Tap the **Enter message** field, and then start composing your message.

**Note:** You can add a subject line by tapping **MORE** > **Message options** > **Add subject**.





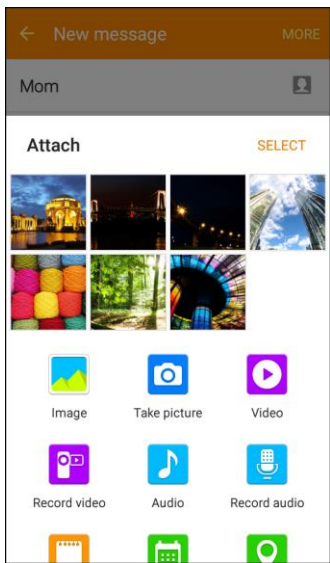

5. Tap  and select from the following file attachments:




- **Image:** Attach a stored picture. See [Gallery](#).
  - **Take picture:** Take a new picture and attach it. See [Camera and Video](#).
  - **Video:** Attach a stored video. See [Gallery](#).
  - **Record video:** Record a new video and attach it. See [Camera and Video](#).
  - **Audio:** Attach a stored music file or voice recording.
  - **Record audio:** Make a voice recording and attach it. See [Voice Recorder](#).
  - **Memo:** Attach a memo. See [Memo](#).
  - **Calendar:** Select the calendar event you want to attach. See [Calendar](#).
  - **Maps:** Add your current location (requires GPS to be turned on) or a location you pick on a map to your message. See [Google Maps](#).
  - **Contacts:** Select a contact from your phone, and then select which contact information you want to attach. See [Contacts](#).
6. To make changes to or remove your attachment, touch and hold the item.
7. Tap **Send**  to send the MMS message.

## Create a Slideshow

In a multimedia message, you can add slides, each containing a picture, video, or audio.

1. In the multimedia message you are composing, tap **MORE** > **Message options** > **Add slide** to add space for a new slide.
2. Tap the space for the slide.
3. To compose your slideshow, do any of the following:
  - **Add a picture:** Tap  > **Image** and select a picture.
  - **Add a video:** Tap  > **Video** and select a video. (You cannot add both a picture and a video on the same slide.)
  - **Add music or a voice recording:** Tap  > **Audio** and select a file.
  - **Add a new slide:** Tap **MORE** > **Message options** > **Add slide**.
  - **Preview your slideshow:** Tap **MORE** > **Message options** > **Preview**.
  - For more options, tap **MORE** > **Message options** and select an option.
4. When you have finished composing the multimedia message, tap **Send** .


**Tip:** To compose a slide show, you can also simply attach multiple items separately to the MMS message. Tap  and select a file type, location, and file and then repeat it for additional slides. Your phone will automatically compile a slide show.

## Save and Resume a Draft Message


While composing a text or multimedia message, tap **Back** key  to automatically save your message as a draft. Your message will display “Draft” on the main Messages screen.

To resume composing the message:

1. From home, tap **Apps**  > **Messages** .

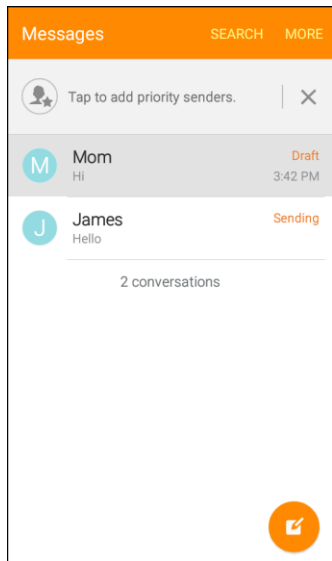

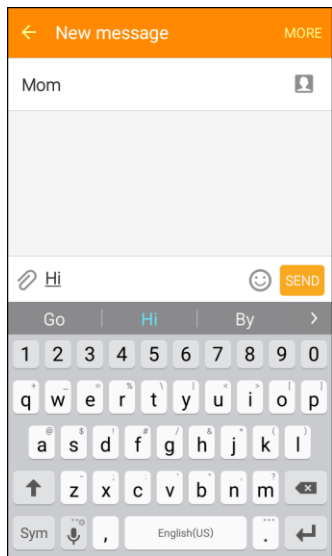

2. Tap the message to resume editing it.



3. When you finish editing the message, tap .

## New Messages Notification

Depending on your notification settings, the phone will play a ringtone, vibrate, or display the message briefly in the Status Bar when you receive a new text or multimedia message.

A new message icon  also appears in the notifications area of the Status Bar to notify you of a new text or multimedia message. The Messages application icon also displays the number of new messages .

- To open the message, drag the Status Bar down to open the Notification panel. Tap the new message to open and read it.

– or –

From home, tap **Apps**  > **Messages** , and then tap the conversation.

For information on reading and replying to messages see [Manage Message Conversations](#).

## Manage Message Conversations

Text and multimedia messages that are sent to and received from a contact (or a number) are grouped into conversations or message threads in the Messages screen. Text or MMS conversations let you see exchanged messages (similar to a chat program) with a contact on the screen.

### Read a Text Message

- Do one of the following:
  - On the Messages screen, tap the text message or conversation to open and read it.
  - If you have a new message notification, drag the Status Bar down to open the Notification panel. Tap the new message to open and read it.

To return to the Messages screen from a conversation, tap **Back** key .


**Note:** To view the details of a particular message, in the conversation, touch and hold the message to open the options menu, and then tap **View message details**.

**Note:** If a message contains a link to a Web page, tap the message and then tap the link to open it in the Web browser.

**Note:** If a message contains a phone number, tap the message and then tap the phone number to dial the number or add it to your contacts.


## View a Multimedia Message (MMS)

1. From home, tap **Apps**  > **Messages** .

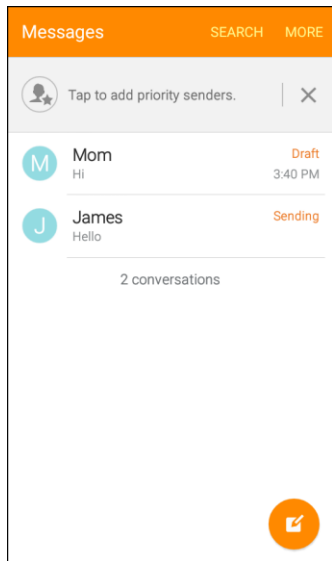

2. On the Messages screen, tap a multimedia message or conversation to open it.
3. Tap the attachment to open it.
  - If the attachment is a vCard contact, it is imported to your phone's Contacts list. For more information, see [Contacts](#).
  - If the attachment is a vCalendar file, you can choose the calendar where you want to save the event. For information on using Calendar, see [Calendar](#).
  - For other media (like photos or videos), you can choose where to save the attachment and which app to use to open it.

4. To save the attachment to device memory, touch and hold the attachment, and then tap **Save attachment**.

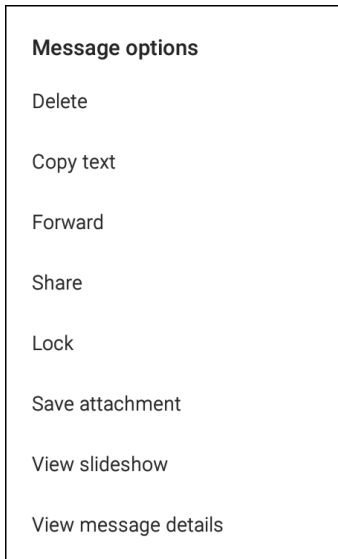


**Note:** When Auto retrieve in MMS settings is disabled, only the message header is downloaded. To download the entire message, tap the **Download** button in the message.


**Note:** If you are concerned about the size of your data downloads, check the multimedia message size before you download it.

## Reply to a Message

1. From home, tap **Apps**  > **Messages** .

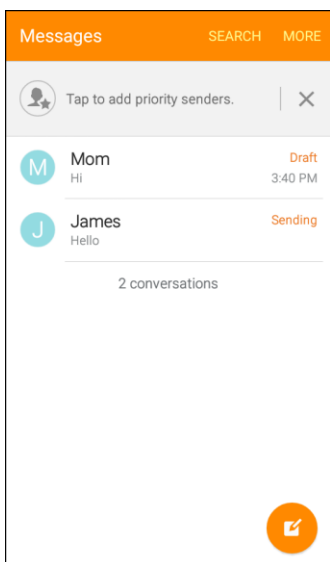

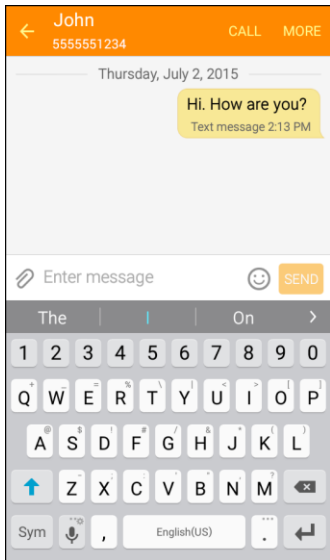

2. On the Messages screen, tap a conversation to open it.



3. Tap the text box at the bottom of the screen, enter your reply message, and then tap **Send** .

**Note:** To reply to a text message with a multimedia message, open the text message and tap . The text message is automatically converted into a multimedia message.

## Delete Conversations

1. From home, tap **Apps**  > **Messages** .
2. On the Messages screen, touch and hold a conversation to delete.
3. Select any additional conversations you want to delete, and then tap **DELETE**.

## Delete Message

1. While viewing a conversation, touch and hold a message.
2. Tap **Delete** > **DELETE**.

## View Contact Information from a Message

When you receive a message from someone in your stored contacts, you can tap the contact's picture or icon in the conversation to open a menu of options. Depending on the stored contact information, you can view the contact details, place a phone call or send an email message to the contact, and more.

# Create and Send Gmail

Use Google's Gmail service and your Google Account to send, receive, and manage your Gmail messages. Before using Gmail, you must register a Google (Gmail) Account on your phone. See [Google Account](#) for details.


## ! Gmail Cautions

Gmail is handled as email from a PC. Restricting email from PCs on your phone prevents your phone from receiving Gmail.

# Create and Send a Gmail Message

Use your phone to create and send Gmail messages.


1. From home, tap **Apps**  > **Gmail** .

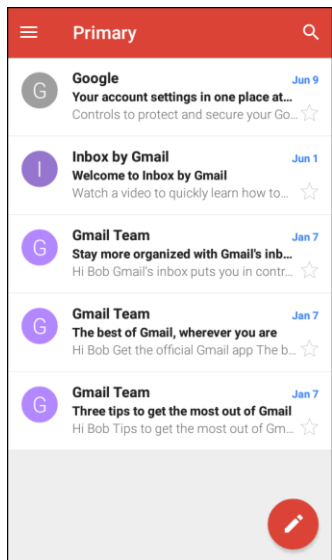

- ❖ The Gmail inbox opens.




2. In the inbox, tap **Compose** .

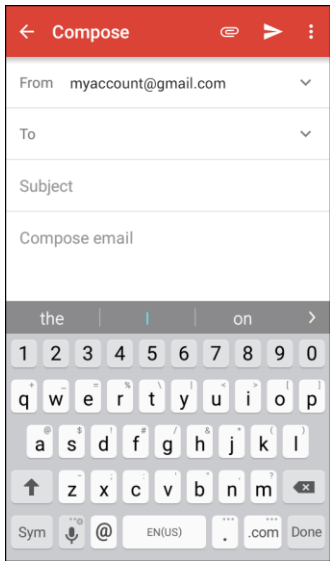



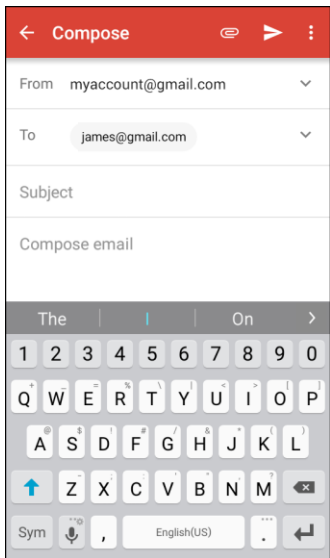

❖ The Gmail composition window opens.



3. Enter the message recipient(s), subject, and message, and then tap **Send** .



❖ The Gmail message is sent.

## Gmail Composition Options


- **Adding Cc/Bcc:** In the To field, tap  to display Cc and Bcc fields.
- **Attaching Pictures or Videos:** In the mail composition window, tap **Attach file**  > **Attach file** or **Insert from Drive**. Locate and tap the picture or video you want to attach.
- **Save draft (send later):** While composing your message, tap **More options**  > **Save draft**. The message is saved as a draft for later.
- **Discard:** In the mail composition window, tap **More options**  > **Discard** > **DISCARD**.

**Note:** To view your draft email messages, in the inbox, tap **Menu**  > **Drafts**. To view your sent messages, in the inbox, tap **Menu**  > **Sent**.


## Check Received Gmail Messages

Your phone allows you to access, read, and reply to all your Gmail messages.

### Open New Gmail Messages from Notifications

When new Gmail arrives, you will see  in the Status Bar.

1. Drag the Status Bar down to display the Notification panel.

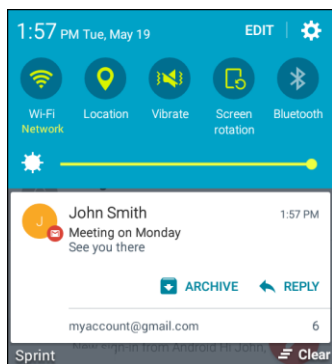


2. Tap the new message from the Notification panel.
  - ❖ The new Gmail message opens.
  - If you have two or more new Gmail messages, tapping the notification opens the Gmail inbox.

## Open Gmail Messages from the Inbox


You can also read and reply to all your Gmail messages from the Gmail inbox.

1. From home, tap **Apps**  > **Gmail** .

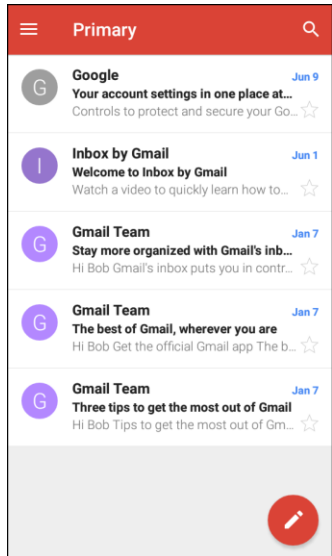



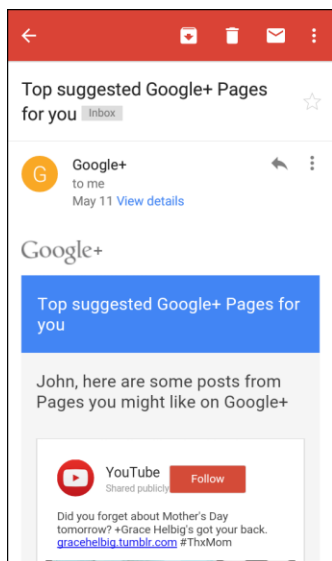


❖ The Gmail inbox opens.

2. Tap the message thread you want to view.



❖ The message thread opens, with the newest message displayed.

## Options when Reviewing Gmail Messages

- **Replying to Gmail Messages:** With the Gmail message open, tap **Reply** , compose your reply message, and tap **Send** .
- To reply to all, tap **More options**  > **Reply all**.
- **Forwarding Gmail Messages:** With the Gmail message open, tap **More options**  > **Forward**, enter a recipient and an additional message, and tap **Send** .

**Tip:** You can also access **Reply** , **Reply all** , and **Forward**  options by scrolling to the bottom of the message.


## Manage Gmail Messages

Your phone give you control over how you manage your Gmail messages, with labels, thread management, search capabilities, adding multiple Google Accounts, and more.


### Use Gmail Labels


Gmail saves all mail in one box, but you can add labels that allow you to sort your Gmail conversation threads. For example, when a new thread starts with a received mail, the label “Inbox” is automatically added to the thread. By then adding the label “travel,” all threads with “travel” are shown in a list.

1. From home, tap **Apps**  > **Gmail** .

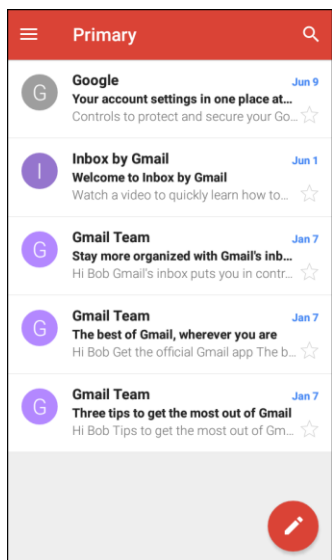

- ❖ The inbox opens.

2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **More options**  > **Move to**.

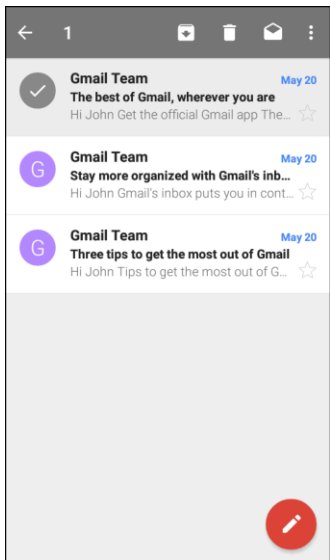


3. Tap a label for the thread.
  - ❖ The thread is added to the selected label.


## Archive Gmail Threads


Remove sent and received Gmail threads so they do not appear in the inbox. When replies arrive for archived threads, they appear in the inbox again.

1. From home, tap **Apps**  > **Gmail** .

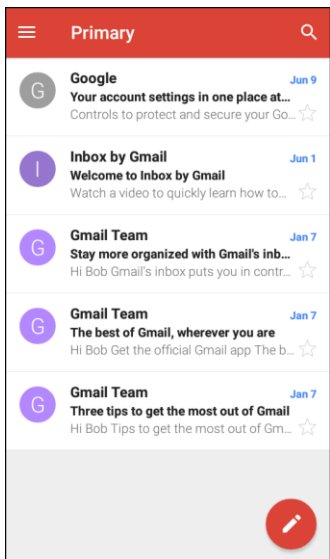

- ❖ The inbox opens.

2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **Archive** .

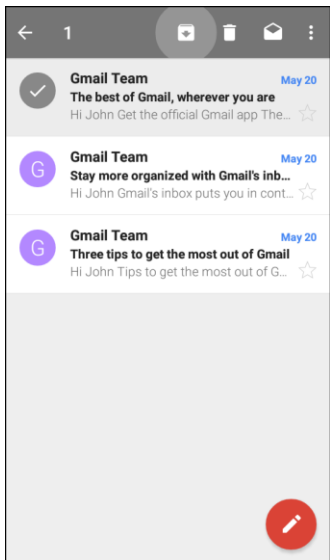


- ❖ The thread is now archived.


## Mute Gmail Threads


If registered on a mailing list, there will be threads with always-continuing conversations. For long threads that are not important, mute the threads and they will no longer appear in the inbox. When mail arrives that includes user's address as a recipient or in Cc, mail will again appear in the inbox.

1. From home, tap **Apps**  > **Gmail** .

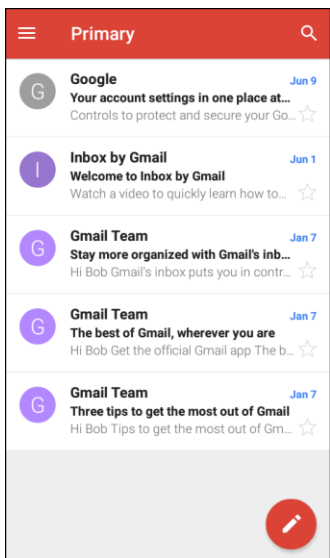

- ❖ The inbox opens.

2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **More options**  > **Mute**.

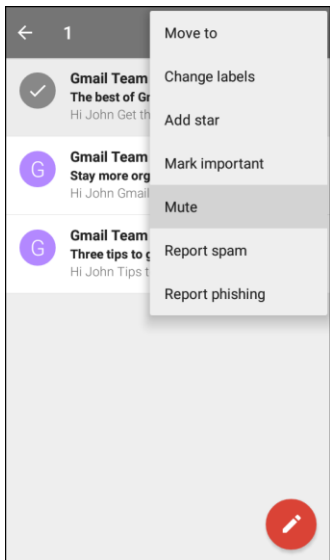


- ❖ The thread is now hidden.


## Delete Gmail Threads


If you no longer wish to keep a Gmail conversation thread (or touch the thread's icon/picture), you can simply delete it from the inbox.

1. From home, tap **Apps**  > **Gmail** .

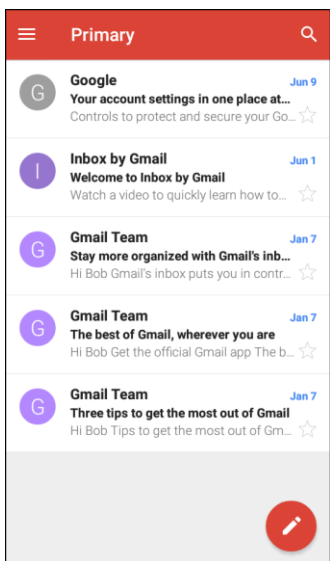

- ❖ The inbox opens.

2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **Delete** .

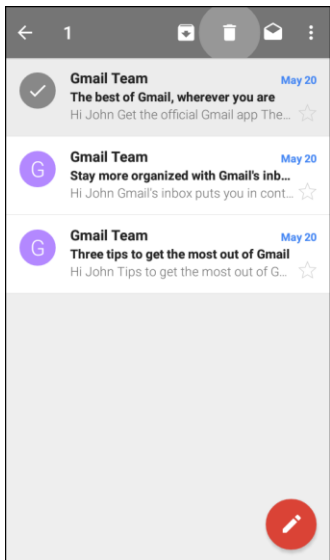


- ❖ The thread is deleted.

## Search Gmail Messages

If you need to find a specific message or message thread, you can search Gmail from the inbox.


1. From home, tap **Apps**  > **Gmail** .

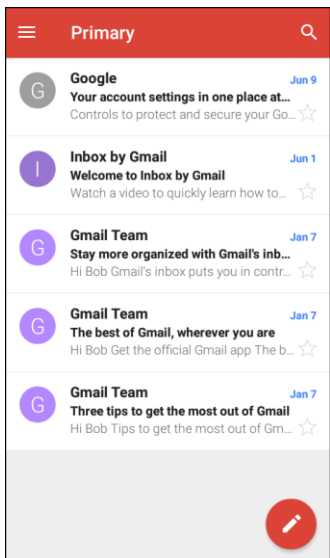


- ❖ The inbox opens.



2. Tap **Search** .

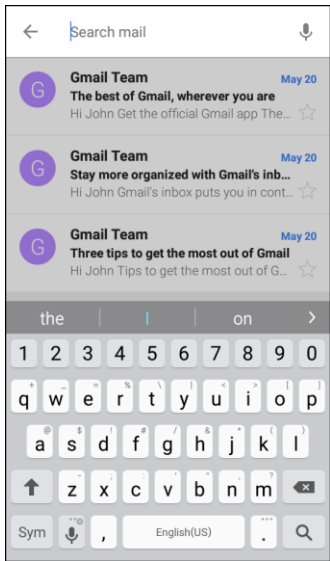

3. Enter your search text and tap **Search** .

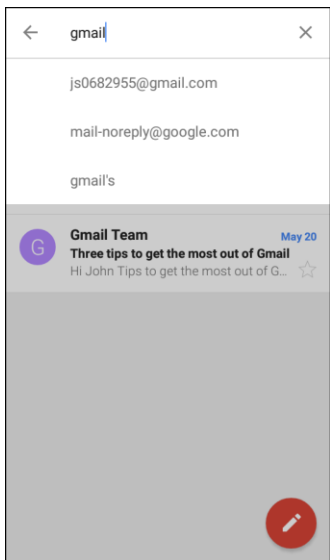


❖ The search results appear. Tap a message or thread from the list to display it.


# Report Spam or Phishing Gmail


You can report spam or phishing Gmail messages from your phone's Gmail inbox.

1. From home, tap **Apps**  > **Gmail** .

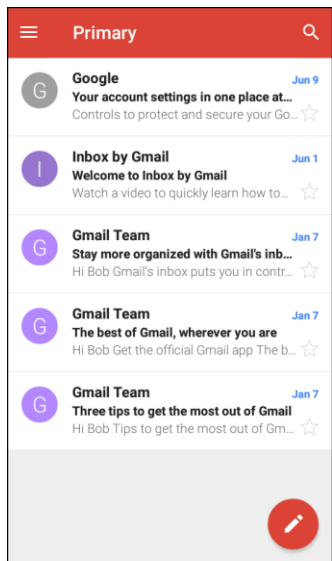

❖ The inbox opens.

2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **More options**  > **Report spam** or **Report phishing**.

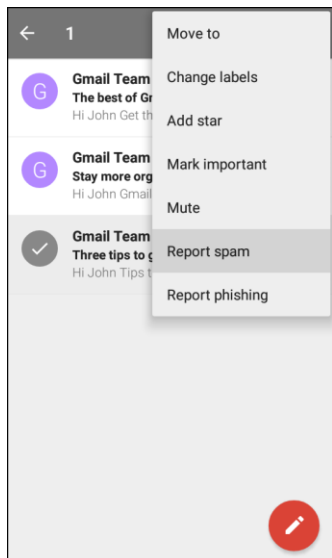


❖ The selected message is reported as spam or phishing.


## Add Another Google (Gmail) Account

If you have multiple Gmail accounts you wish to view on your phone, you can add them from the **Settings** > **Accounts** menu.

1. From home, tap **Apps**  > **Settings**  > **Accounts**  > **Add account**.

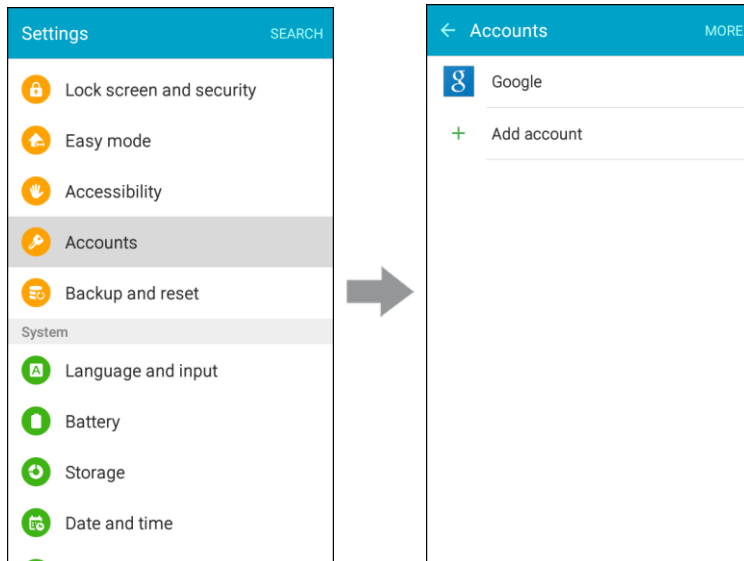

2. Tap **Google**.

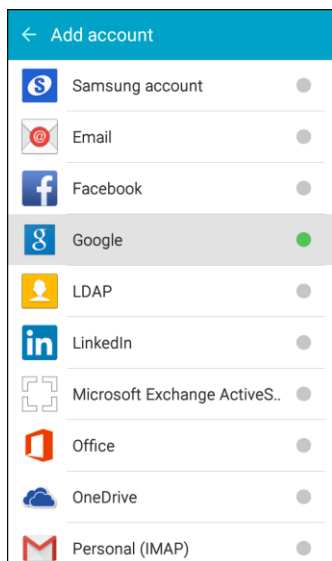


3. Follow the prompts to sign in to your Gmail account, or tap **Or create a new account** to add a new Gmail account. See [Create a Google Account](#) or [Sign In to Your Google Account](#) for details.

4. After your phone connects with the Google servers, select the items you would like to sync with your phone and then tap **NEXT**.
  - ❖ You are signed in to your Google Account, and you can access both of your Gmail accounts from the Gmail app.

## Switching Between Gmail Accounts


If you have more than one Gmail account set up, you can switch between them in the Gmail app.

1. From home, tap **Apps**  > **Gmail** .

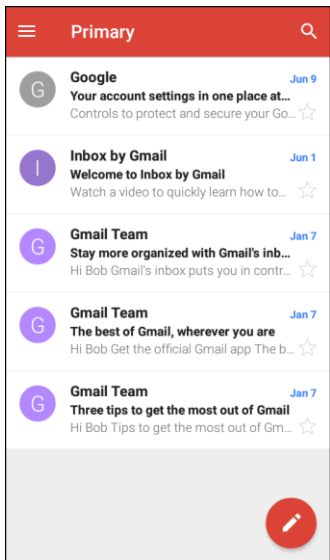

- ❖ The inbox opens.

2. Tap **Menu** .

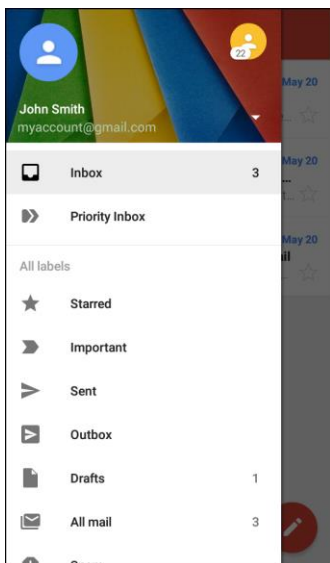

3. Tap the icon for the account you want to view from the list at the top of the menu.

- ❖ The selected account inbox is displayed.

## Email


Use the Email application to send and receive email from your webmail or other accounts, using POP3 or IMAP, or access your Exchange ActiveSync account for your corporate email needs.

### Set Up an Email Account

Your phone supports several types of email accounts and allows you to have multiple email accounts set up at one time.

Before setting up an email account, make sure you have the username (user ID), password, server name, etc., so you can get set up successfully.

1. From home, tap **Apps**  > **Email** .

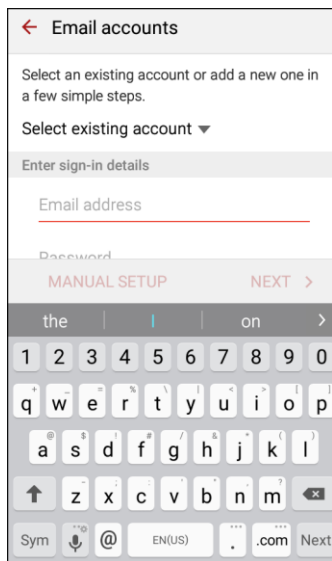

- ❖ A window for adding an account appears if no email account has been previously set up.
2. Follow the onscreen instructions to set up your email account.
- ❖ The email account is set up and you will begin receiving email.


# Add an Email Account

You can add several types of personal email accounts, such as POP3 and IMAP accounts, on your phone.

## Add an Email Account from the Email App


You can add email accounts directly from the email app, even if you have another email account set up.

1. From home, tap **Apps**  > **Email** .

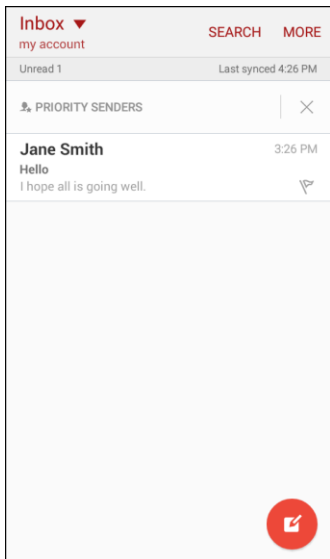

❖ The email inbox opens.

2. Tap **MORE** > **Settings** > **Add account**.

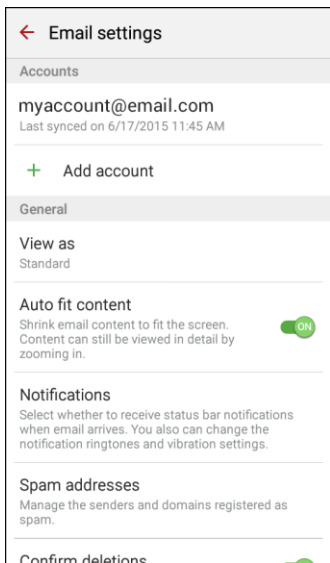


3. Follow the onscreen instructions to complete the account setup.

❖ The email account is added and you will begin receiving email for the account.



## Add an Email Account from the Settings Menu

You can also set up email accounts from the **Settings > Accounts** menu.


1. From home, tap **Apps**  > **Settings**  > **Accounts** .

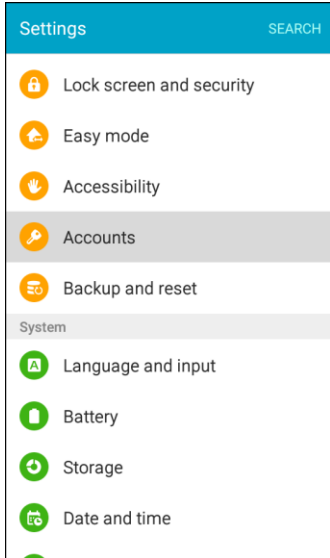

2. Tap  **Add account** > **Email**.

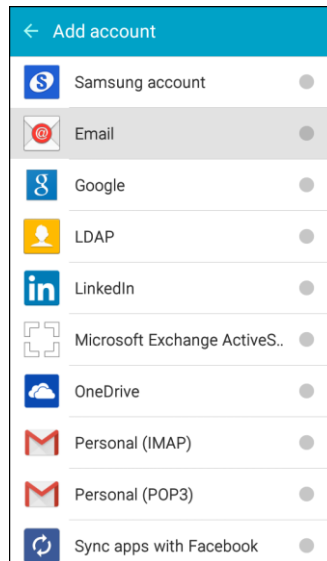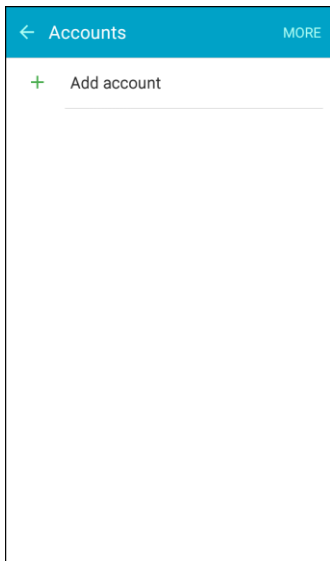


3. Enter the **Email address** and **Password** for the email account and then tap **NEXT**.

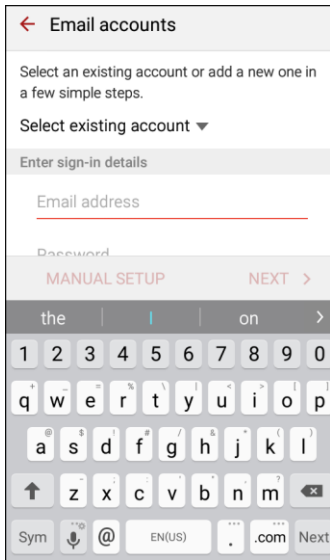


- ❖ Tapping **NEXT** prompts your phone to attempt a “regular” email setup and test the incoming and outgoing servers.
- If you have custom settings you need to configure, tap **MANUAL SETUP** and enter your settings. These may include mail type, user name, password, server, security type, etc.

4. Select your sync settings and then tap **NEXT**.

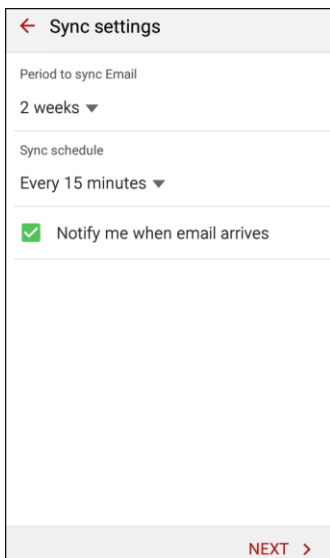



5. Enter an account name and a display name and tap **DONE** to complete setup.

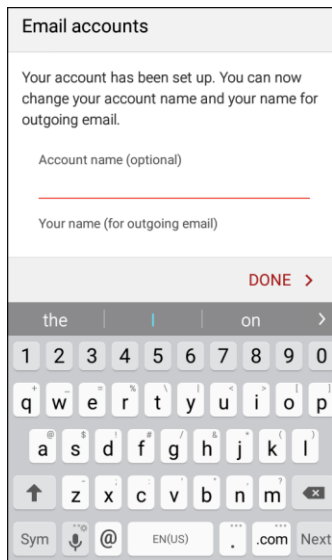

- ❖ The email account is set up and you will begin receiving email for the account.


**Important:** If the account type you want to set up is not in the phone database, you will be asked to enter more details. You should get all pertinent information for the email account, such as incoming and outgoing server settings, before you proceed.

## Add an Exchange ActiveSync Account


If you synchronize your phone with your Exchange ActiveSync account, you can read, manage, and send email in the same easy way as with a POP3/IMAP account. However, you can also access some powerful Exchange features.

**Important:** Before setting up a Microsoft Exchange ActiveSync Account, contact your company's Exchange Server administrator for required account settings information.

1. From home, tap **Apps**  > **Settings**  > **Accounts**  > **Add account** > **Microsoft Exchange ActiveSync**.

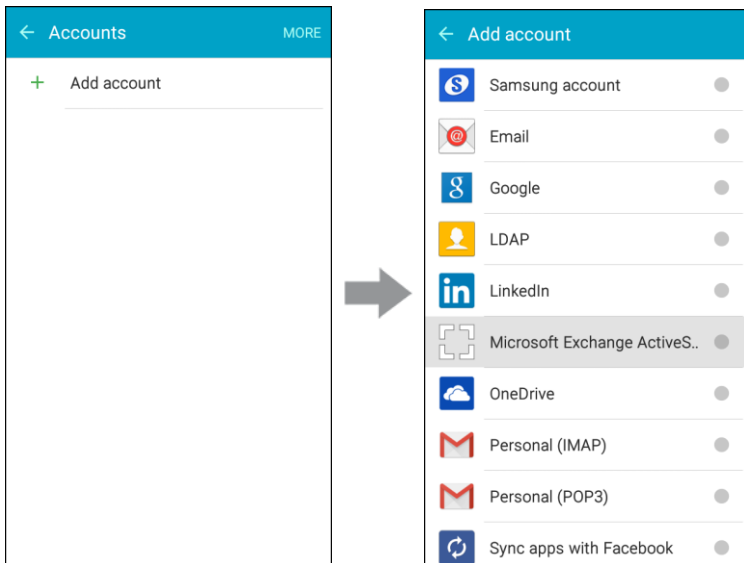


2. Enter the **Email address** and **Password** for the email account and then tap **MANUAL SETUP**.

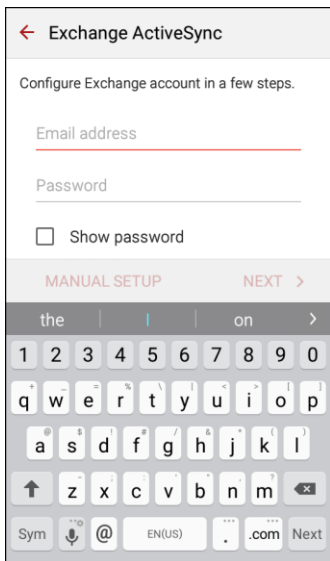

3. Enter the required information.
  - **Email address:** Enter your email address.
  - **Domain\username:** Enter your network domain and username, separated by “\”.
  - **Password:** Enter your network access password (case-sensitive).
  - **Show password:** Display the password as you enter it.

- **Exchange server:** Enter your system's Exchange server remote email address. Obtain this information from your company network administrator.
  - **Use secure connection (SSL):** Tap to place a checkmark in the box, if your system requires SSL encryption.
  - **Use client certificate:** Tap to place a checkmark in the box, if your system requires certification.
4. Tap **NEXT** and follow the onscreen prompts to configure options for the account.

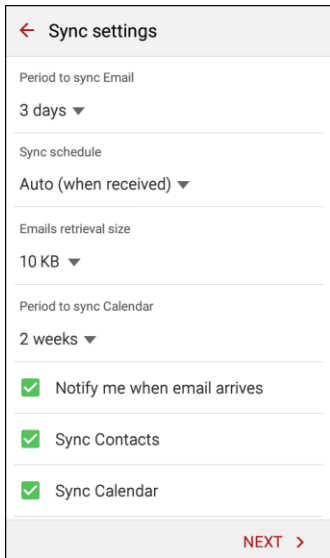


5. Enter an account name and a display name and tap **DONE** to complete setup.
- ❖ Your corporate email account is set up and you will begin receiving email for the account.

## Compose and Send Email


Compose and send email using any account you have set up on your phone. Increase your productivity by attaching files such as pictures, videos, or documents to your email messages.

1. From home, tap **Apps**  > **Email** .

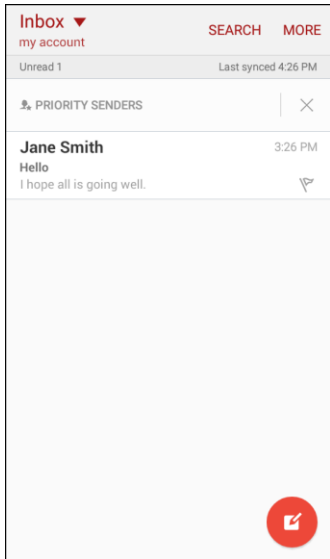

- ❖ The email inbox opens.
  - If you want to switch to a different email account, tap the account name at the top of the screen and select another account.
  - You can also view multiple inboxes at once. Tap the account name at the top of the screen and then tap **Combined inbox** to see messages from all your configured email accounts.

2. Tap **Compose** .

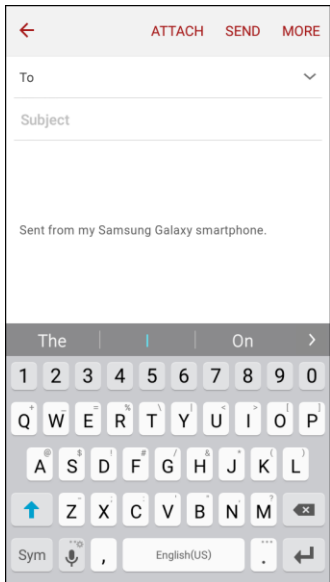


❖ The email composition window opens.

3. Enter the message recipient(s), subject, and message.


- To attach a picture or other type of file to your message, tap **ATTACH**, select a file type, and select the file(s) to attach.
- For additional options when composing email messages, tap **MORE** and select an option.

4. Tap **SEND**.

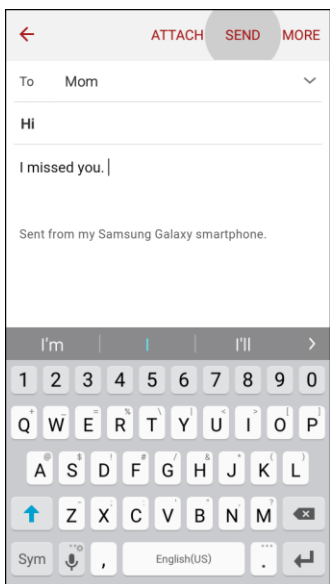


❖ The email message is sent.

## Open New Email Messages from Notifications

When new email arrives, you will see  in the Status bar.

1. Drag the Status bar down to display the Notification panel.

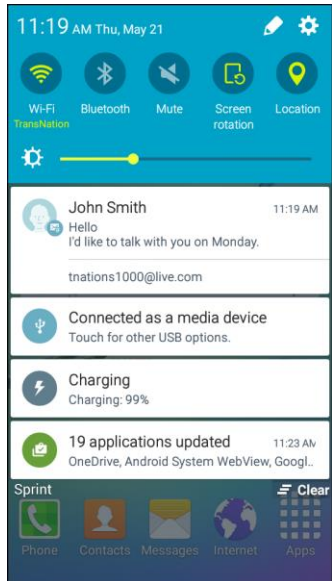


2. Tap the new message from the Notification panel.
  - ❖ The new email message opens.
  - If you have two or more new email messages, tapping the notification opens the email inbox. Tap a message to open it.

## Open Email Messages from the Inbox


You can also open and read email messages directly from the email inbox. Reading and replying to email on your phone is as simple as on your computer.

1. From home, tap **Apps**  > **Email** .

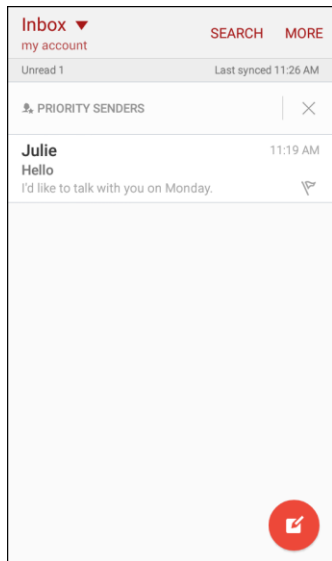

❖ The email inbox opens.

2. Tap the message you want to view.

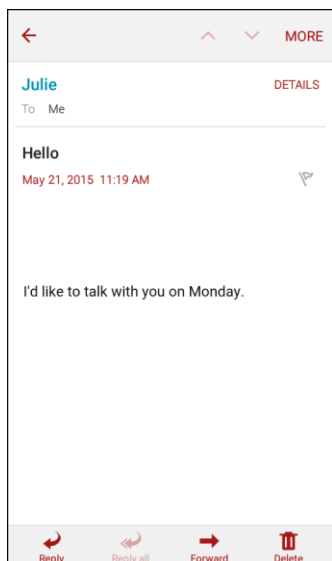





❖ The email message opens.

**Tip:** Tap the account name at the top of the screen to switch to a different email account.

3. Tap **Reply**  or **Reply all**  to reply to the message.


## Options When Reviewing Email Messages

- **Resetting Mail as Unread:** Touch and hold a read message, and then tap **MORE > Mark as unread**.
- **Deleting Email:** From the Inbox, touch and hold a message, select any additional messages, and then tap **DELETE > DELETE**.
  - When reading an email, tap  **Delete > DELETE**.
- **Replying to Email Messages:** With an email message open, tap **Reply**  or **Reply all** , compose your reply message, and tap **SEND**.
- **Forwarding Email Messages:** With the email message open, tap **Forward** , enter a recipient and an additional message, and tap **SEND**.

## Delete an Email Account

You can delete an email account from your phone if you no longer wish to receive messages for the account on your phone.


1. From home, tap **Apps**  > **Email** .

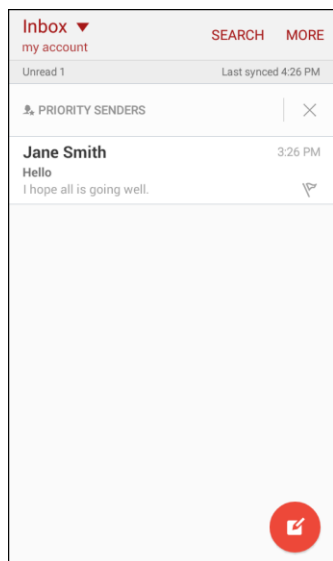


- ❖ The email inbox opens.



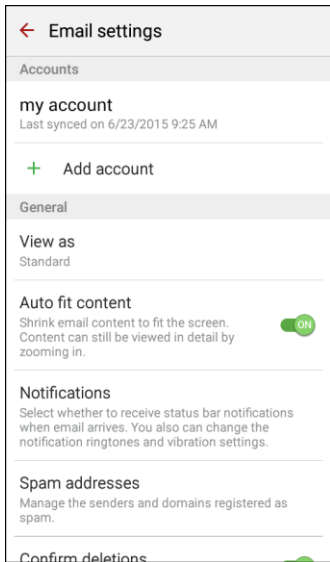


2. Tap **MORE > Settings**.

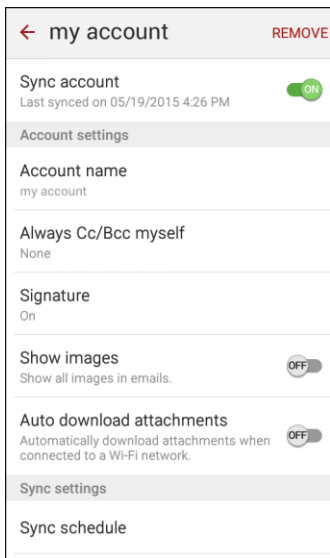

3. Tap the account name, and then tap **REMOVE > REMOVE**.



- ❖ The account is deleted from your phone.


**Note:** You can also delete email accounts from the Accounts menu in Settings. From home, tap **Apps**  **> Settings**  **> Accounts** , tap the account you want to delete, and then tap **MORE > Remove account > REMOVE ACCOUNT**.

# Manage Your Email Inbox

Your email inbox provides management options for viewing, sorting, and deleting your email messages.

## View Your Email Inbox

1. From home, tap **Apps**  > **Email** .

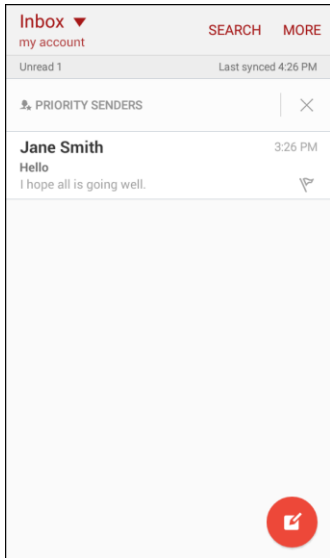

❖ The email inbox opens.

2. Tap the email account at the top of the screen to select a different inbox, or tap **Combined view** to see all your email inboxes at once.


## Sort Email Messages

1. On the email account inbox, tap **MORE** > **Sort by**.
2. Select options for sorting email messages.


## Delete Email Messages

1. On the email account inbox, touch and hold the message you want to delete.
  - Tap additional emails to delete.
2. Tap **DELETE** > **DELETE**.

## Priority Senders

Messages from priority senders automatically display at the top of your email inbox. Emails from priority senders display  in their subject line.

To add priority senders:

1. On the email account inbox, tap **PRIORITY SENDERS**.
2. Tap  **Tap to add priority senders**.
3. Select a recommended contact, or tap the **CONTACTS** tab to select additional contacts.
4. Tap **DONE**.

To view only emails from priority senders:


- On the email account inbox, tap  **PRIORITY SENDERS**.

## Exchange ActiveSync Email Features


Set options for your corporate Exchange ActiveSync email messages, including synchronization options, out-of-office messages, account settings, and so on.

To access Exchange ActiveSync settings:


1. From home, tap **Apps**  > **Email** .

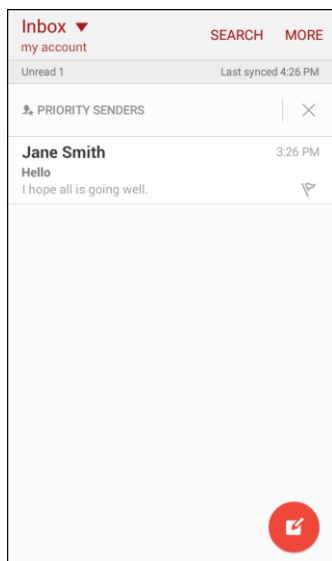

2. Tap **MORE > Settings**.

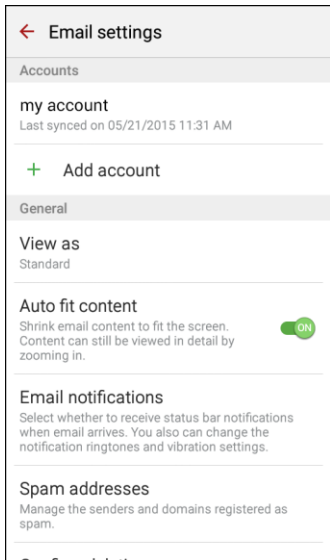

3. Tap the Exchange ActiveSync account name to view its options.

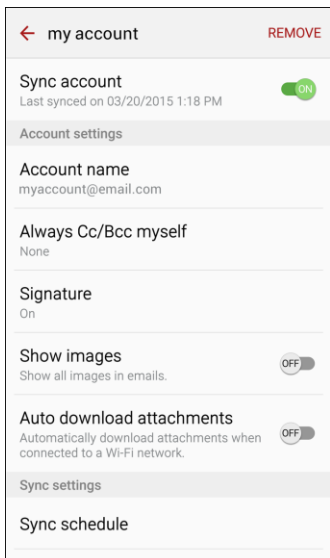

- The following options are available:
  - **Sync account:** Keep the account synchronized on your phone.
  - **Account name:** Change the account name.
  - **Always Cc/Bcc myself:** Send a copy of each email you send to yourself.
  - **Signature:** Enable and configure your signature for each email you send.
  - **Show images:** Show all images in emails.

- **Auto download attachments:** Automatically download attachments when connected to a Wi-Fi network.
- **Sync schedule:** Configure a schedule for syncing your email account.
- **Period to sync Email:** Configure how far back in time you want to sync your email account.
- **Limit retrieval size:** Set a limit to the size of email messages you want to receive on your phone.
- **Limit retrieval size while roaming:** Set a different email size limit when your phone is on roaming.
- **Out of office settings:** You can set your Out of Office status and auto-reply message right from your phone.
- **Folder sync settings:** Select which email folders to sync with the server.
- **Period to sync Calendar:** Set the time period for syncing your calendar with the server.
- **Empty server trash:** Delete the content of the trash folder on the server.
- **In case of sync conflict:** Select whether the device or the server has priority during a sync conflict.
- **Sync Contacts:** Sync your Contacts with your Exchange account.
- **Sync Calendar:** Sync your calendar with your Exchange account.
- **Sync Task:** Sync your tasks with your Exchange account.
- **Security options:** Manage encryption and signature options for outgoing email.
- **Exchange server settings:** Modify the Exchange server settings for this email account.

## Data Services General Information (LTE and 3G Networks)

The following topics will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the Web with your phone.

**Important:** Certain data services requests may require additional time to process. While your phone is loading the requested service, the touchscreen or QWERTY keyboard may appear unresponsive when in fact they are functioning properly. Allow the phone some time to process your data usage request.

### Sprint Spark LTE


The Sprint Spark enhanced LTE network provides your phone with wireless Internet access over greater distances than Wi-Fi and delivers data transfer rates of up to 60 Mbps. To connect your phone to Sprint Spark, you need to be in an area covered by the Sprint Spark enhanced LTE network.

For more information about the availability of Sprint Spark in your location, visit [sprint.com/coverage](http://sprint.com/coverage).


**Note:** The availability and range of the network depends on a number of factors, including your distance to the base station, and infrastructure and other objects through which the signal passes.

## Set Your Network Options


1. From home, tap **Apps**  > **Settings**  > **Mobile networks**  > **Network mode**.

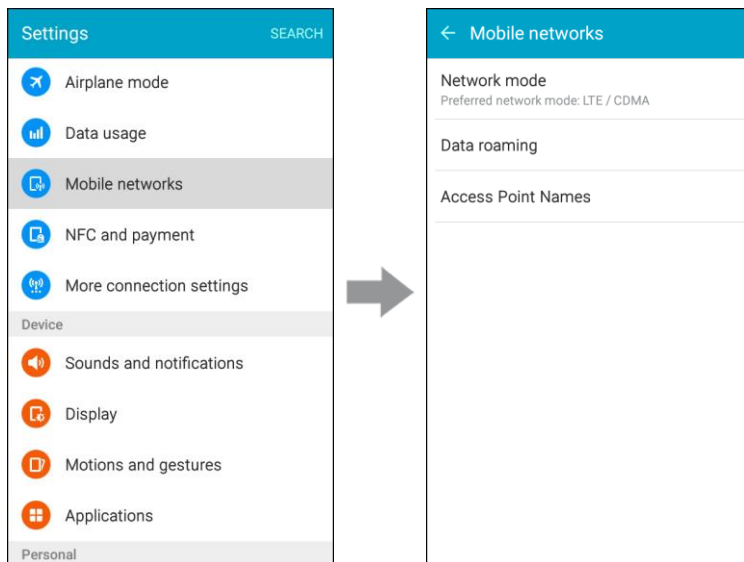

2. Select an option.

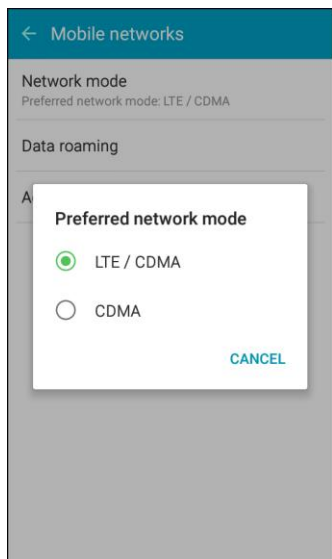

- ❖ The phone will scan for the best available Sprint network and will automatically connect to it.

When your phone is connected to the Sprint Spark enhanced LTE network, the Sprint Spark icon  appears in the Status Bar.

**Note:** The Sprint Spark network is self-discoverable, which means no additional steps are required for your phone to connect to it.

## Your User Name


When you buy your phone and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprintpcs.com". (For example, the third John Smith to sign up for Sprint data services might have jsmith003@sprintpcs.com as his user name.)

When you use data services, your user name is submitted to identify you network. Your user name is automatically programmed into your phone. You don't have to enter it.


## Find Your User Name

You can find your user name through your phone's device menu.

1. From home, tap **Apps**  > **Settings**  > **About device** .

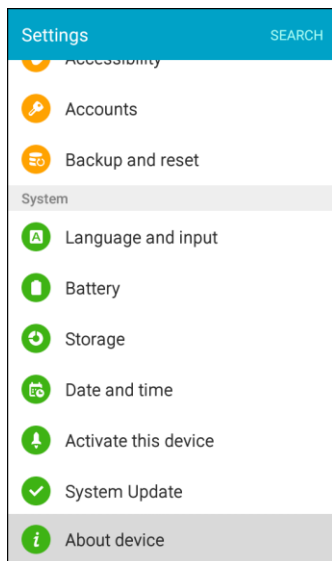

2. Tap **Status**.

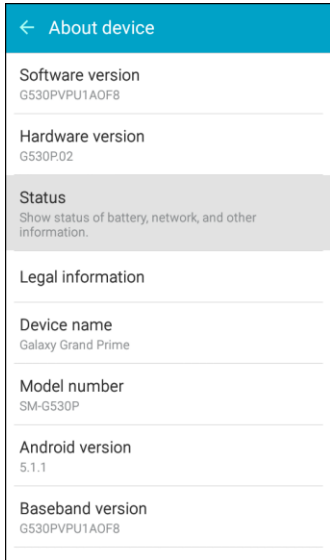


- ❖ You will see your user name under the “Username” heading.

## Update Your User Name


If you choose to change your user name and select a new one online, or make any changes to your services, you must then update the profile on your phone.

1. From home, tap **Apps**  > **Settings**  > **System Update** .

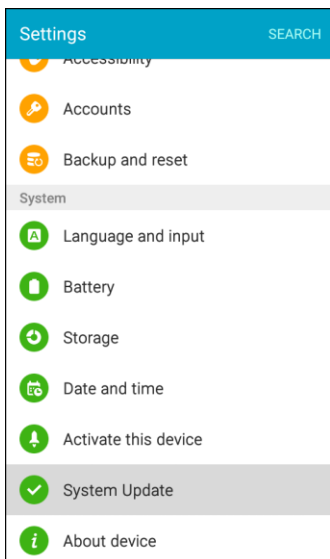



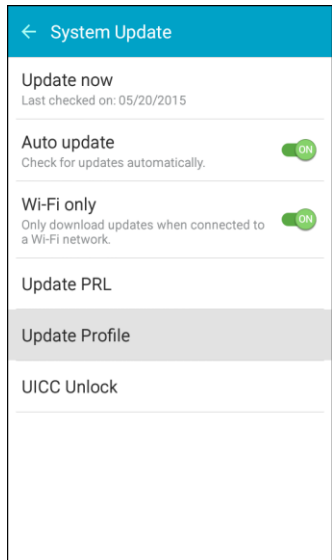


## 2. Tap **Update Profile**.



❖ Your phone will download and install the profile update.

## Data Connection Status and Indicators

Your phone displays the current status of your data connection through indicators at the top of the screen. The following symbols are used:

Icon	Status
	<b>Network (full signal):</b> The number of bars indicates the strength of the signal. More bars mean a better signal.
	<b>Sprint Spark Enhanced LTE data service:</b> Your phone is connected to the Sprint Spark enhanced LTE network. The rays spin when data is being transferred.
	<b>3G (data service):</b> Your phone is connected to the 3G network. When the icon is animated, your phone is transferring or receiving data.

## Browser

Your phone's Web browser gives you full access to both mobile and traditional websites on the go using 3G, 4G, or Wi-Fi data connections.

### SSL/TLS

SSL (Secure Sockets Layer) and TLS (Transport Layer Security) are protocols for encrypting sent/received data. While in a screen connected by SSL/TLS, data is encrypted to safely send/receive

private information, credit card numbers, corporate secrets, etc., and provide protection against online threats (eavesdropping, falsification, impersonation, etc.).


## **SSL/TLS Cautions**

When opening a secured page, users must decide as their responsibility whether or not to open the page with use of SSL/TLS. Sprint and the applicable Certification Authorities make no guarantees whatsoever to users regarding security of SSL/TLS.

## **Use the Browser**

Launching the browser is as easy as tapping an icon.

- From home, tap **Apps**  > **Internet** .

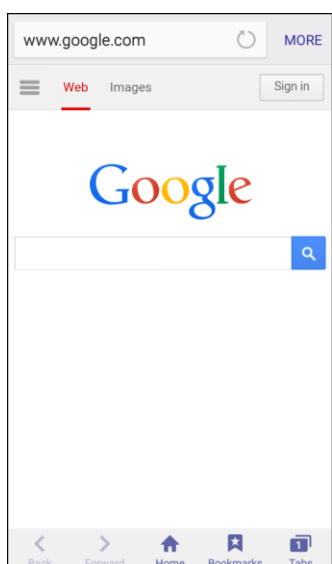


- ❖ The browser opens.
  - The first time you launch Internet, you may be prompted to enter your 10-digit wireless phone number to access the Sprint Mobile home page.
  - You can also launch the browser by tapping a URL in a text message, email message, or Gmail message.

**Tip:** To change the phone's default launch page to your current page, tap **MORE > Settings > Homepage > Current page**.


# Add a Bookmark


Bookmark favorite sites using the browser menu options.

1. From home, tap **Apps**  > **Internet** .

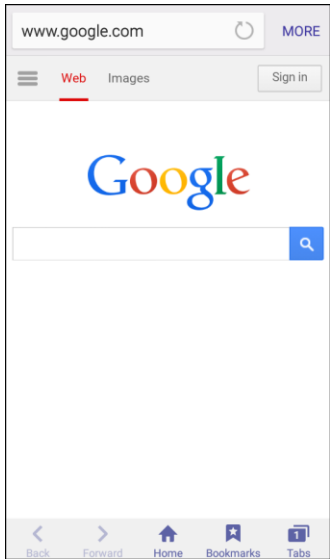

❖ The browser opens.

2. Navigate to the Web page you want to bookmark, and tap **Bookmarks**  > **ADD**.

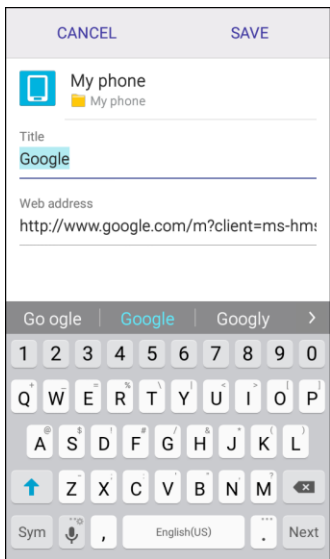



❖ The add bookmark window opens.

3. Check or change the bookmark title, URL, etc., and then tap **SAVE**.

❖ The Web page is added to bookmarks.


## Bookmark Options

- **Editing Bookmarks:** From the browser, tap **Bookmarks** , touch and hold a bookmark, tap **MORE > Edit bookmark**, edit the bookmark, and then tap **SAVE**.
- **Deleting Bookmarks:** From the browser, tap **Bookmarks** , touch and hold a bookmark, and then tap **DELETE**.

## View Browser History


Use the browser menu options to view your browsing history.

1. From home, tap **Apps**  > **Internet** .

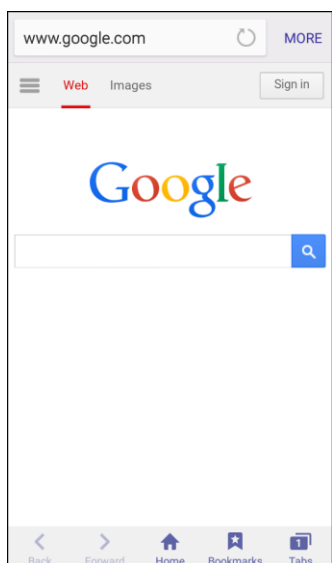


- ❖ The browser opens.

2. Tap **Bookmarks** .

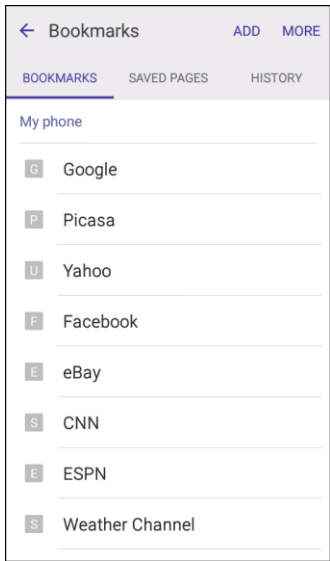

❖ The bookmark window opens.

3. Tap the **History** tab, and then tap an entry.

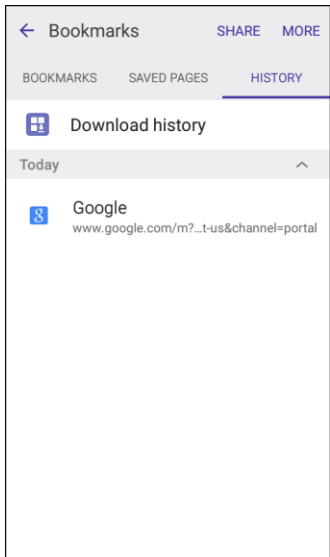


❖ The Web page opens.

# Open New Browser Tab


Use tabs to switch between websites quickly and easily.

1. From home, tap **Apps**  > **Internet** .

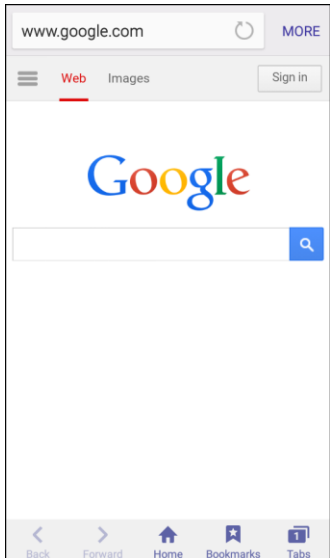

❖ The browser opens.

2. Tap **Tabs** .

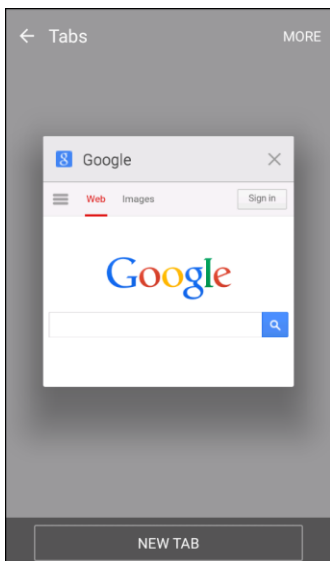

❖ The window opens.

- If you don't see **Tabs** , drag the Web page down to display the address bar on top and the options bar on the bottom.

3. Tap **NEW TAB**.

A new window appears.

- To switch windows, tap **Tabs** , and then touch a thumbnail.


## Browser Settings

Configure settings for your phone's browser. See [Internet Settings](#).

## Chrome Browser


In addition to the default "Internet" Web browser, your phone supports the Chrome mobile Web browser. If you are signed in with a Google Account, the Chrome browser will import all your bookmarks and other Web preferences for use on your phone.

1. From home, tap **Apps**  > **Chrome** .

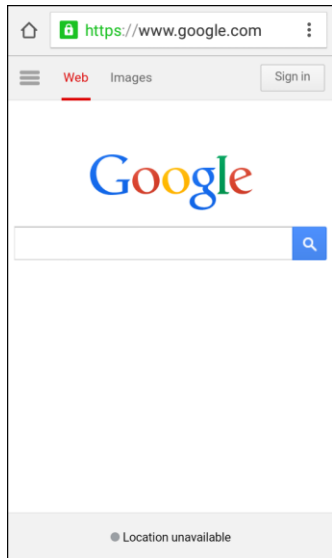


- ❖ Chrome opens.

2. Tap the address bar at the top and enter search words (for a Google search) or a Web address (URL).

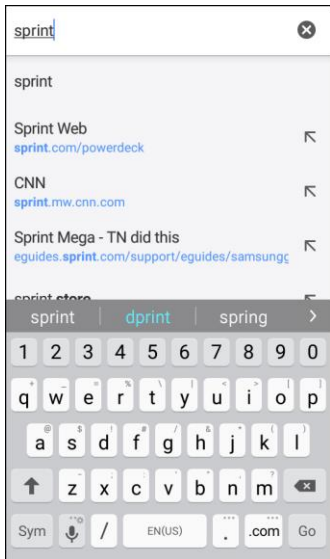

- ❖ The search results appear or a Web page opens.

## Chrome Support

- To find on-phone help with Chrome, from Chrome, tap **More options**  > **Help & feedback**.
  - ❖ A Web page will open displaying Google help for Chrome.

**Tip:** For more information, from your computer, visit: [google.com/chrome](https://google.com/chrome).



# Camera and Video

---

You can use the camera or video camera to take and share pictures and videos. Your phone comes with a 16 megapixel rear camera and a 5 megapixel front camera that let you capture sharp pictures and videos.

## Take Pictures and Record Videos

The following topics teach you how to take pictures and record videos with your phone's camera.

### Capturing Pictures/Videos

- **File Format for Pictures:** File format for pictures is JPEG (.jpg).
- **File Format for Videos:** File format for videos is MPEG4 (.mp4).

### ! Camera Cautions

**If Lens Becomes Dirty:** Fingerprints/smudges on lens prevent capturing of clear still images/videos. Wipe lens with a soft cloth beforehand.

**Avoid Exposure to Direct Sunlight:** Be careful not to expose lens to direct sunlight for long periods. This may discolor color filter and affect color of images.

### ! Flash Warning

Do not shine the flash close to eyes. Do not look directly at the flash when shining. Do not shine the flash at other people's eyes. It may affect eyesight.


# Take a Picture


You can take high-resolution pictures using your phone's camera.

1. From home, tap **Apps**  > **Camera** .



- ❖ The camera viewfinder appears.

2. Aim the camera at your subject and then tap .

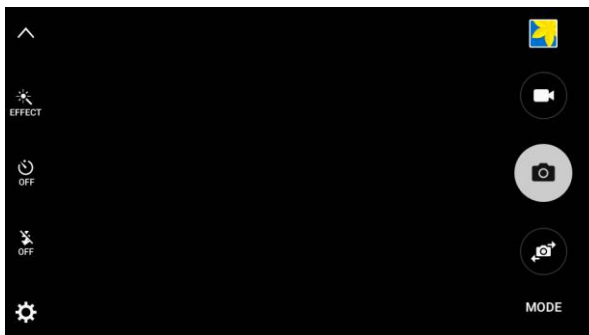


- ❖ The shutter clicks and the picture is captured and saved to your phone.







**Tip:** You can launch the camera from the lock screen. Swipe  up from the lock screen to open the camera.

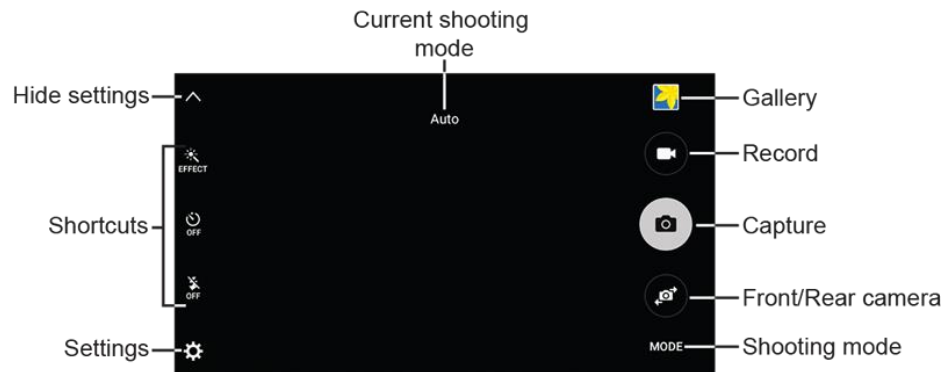**Note:** You can take pictures either in portrait (step 1 above) or landscape (step 2 above) orientation.

# Viewfinder Screen

The Viewfinder screen lets you view your subject and access camera controls and options.




- **Shortcuts Menu:** Gives quick access to frequently-used camera settings:
  - **Effect:** Add a special graphical effect.
  - **HDR (Rich tone):** Save the picture in HDR (rich tone) only.
  - **Timer:** Take time-delayed pictures or videos.
  - **Flash:** Activate or deactivate the flash. Toggle through flash options—on, auto, or off (rear camera only).
-  **Camera Settings:** Opens the camera settings menu and lets you change additional camera settings. See [Camera Options and Settings](#).
-  **Gallery:** View your picture or video in the Gallery application.
-  **Record Video:** Begin recording video.
-  **Capture Picture:** Take a picture.
-  **Switch Between Front/Rear Cameras:** Switch between the rear camera and the front camera.
-  **Shooting Modes:** Select a shooting mode.

# Record Videos


Record high-quality videos using your phone's video camera.

1. From home, tap **Apps**  > **Camera** .

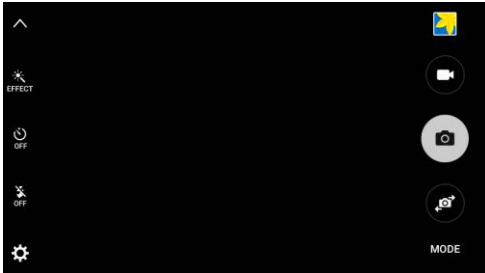

❖ The camera viewfinder appears.

2. Aim the camera at your subject and then tap **Record** .

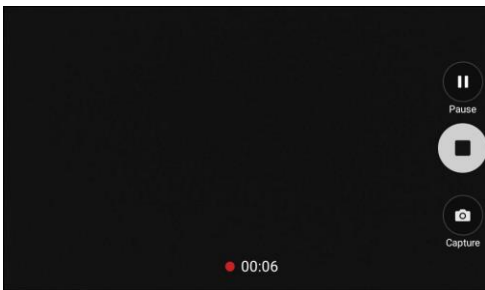

❖ Video recording begins.

3. Tap  to pause recording. Tap  to stop recording.

❖ The camera stops recording and the video is captured and saved to your phone.

# Shooting Modes

Your phone's camera offers many shooting modes, to make your pictures or videos special.

1. From home, tap **Apps**  > **Camera** .



❖ The camera viewfinder appears.

2. On the Camera screen, tap **MODE** to choose a shooting mode. Scroll available modes, and then tap a mode to select it.



- **Auto:** Automatically adjusts the exposure to optimize the color and brightness of pictures. In Auto mode, you can take single or burst shots. (Take burst shots by holding Capture to take multiple shots until you lift your finger.)

- **Pro:** Adjust the ISO sensitivity, exposure value, white balance, focal length, and color tone manually while taking pictures.
- **Panorama:** Take multiple pictures to merge into one expansive picture. You can create a horizontal or vertical panorama picture.
- **Continuous shot:** Touch and hold the capture button to take continuous photos.
- **Beauty face:** Automatically enhances facial features.
- **Rear-cam selfie:** Take a self-portrait using the rear camera.
- **Sound & shot:** Adds a few seconds of background sound to enhance pictures.
- **Sports:** Allows you to capture clear shots of a moving subject.
- **HDR (Rich tone):** Allows you to take pictures in various exposures and merge them to create pictures with rich color.
- **Night:** Allows you to take clearer, brighter pictures in low light.
- **Animated GIF:** Allows you to create a picture containing animated elements.
- **Selfie:** Take a self-portrait using the front camera.
- **Wide selfie:** Take wide-angle selfie shots with the front camera to fit more people into your pictures.
- **Interval shot:** Take a new picture every few seconds using the front camera.

**Note:** All modes may not be shown when you tap **MODE**, depending on your phone's setup and which camera is active (front or rear).

## View Pictures and Videos Using Gallery

Using the Gallery application, you can view pictures and watch videos that you've taken with your phone's camera, downloaded, or copied to phone memory. You can also take a look at your pictures and your friends' pictures that are on your social networks.


For pictures that are on your phone, you can do basic editing such as rotating and cropping. You can also easily assign a picture as your contact picture or wallpaper and share pictures with your friends.

1. From home, tap **Apps**  > **Gallery** .




❖ The Gallery opens.

2. Tap **Time** to open a drop-down list and select other views, such as **Albums**.

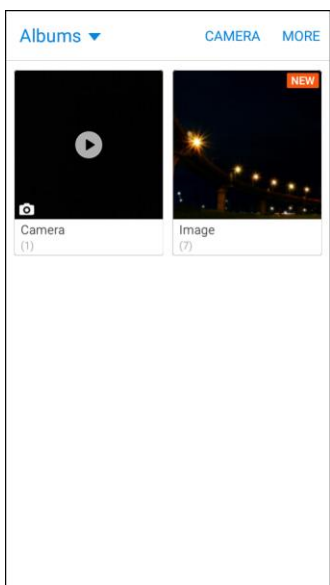

❖ The list of albums opens.

3. Tap an album to view its contents.
  - To select another album, tap the **Back** key  to return to the Albums view.


4. For a picture, tap a thumbnail to view the picture. While viewing a picture full-screen you can use these options:




- **Share:** Choose a method for sharing the picture.
- **Edit:** Modify your picture.
- **Delete:** Erase the current picture.
- **CAMERA:** Tap to open the camera app.
- **MORE:** Choose other options, including:
  - **Details:** View file details.
  - **Slideshow:** Create a slideshow.
  - **Set as contact picture:** Set the picture as the photo for a contact.
  - **Set as wallpaper:** Set the picture as wallpaper for your Home or Lock screens.



5. For a video, tap a video to select it. When the video is displayed full-screen, you can use these options:

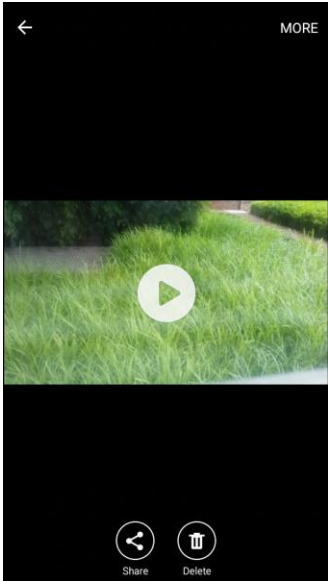

- Tap **Play**  to play the video.
- **Share**: Choose a method for sharing the video.
- **Delete**: Erase the current video.
- **MORE**: Choose other options, including:
  - **Details**: View file details.
  - **Slideshow**: Create a slideshow.

## Pictures and Videos: Review Screen

After capturing a picture or video, from the camera screen, tap the thumbnail image at the upper or lower right corner of the screen to see the item in the review screen. From there, you can access options such as save, view, send, or delete the picture or video.

## Pictures and Videos: Options while Viewing

- **Zoom In or Out on a Picture**: Tap the screen twice or pinch the screen to zoom in or out on a picture.
- **Viewing Videos**: Use the onscreen controls to play, pause, or stop the video playback.

After selecting an album from the Albums tab, you can browse through the pictures and videos of that album. Tap a picture or video to view it in full screen.

**Note:** When viewing pictures, you can tap a picture or video to open a selection menu and choose what to do with the picture or video.

# Edit Pictures

Whether you are browsing pictures in filmstrip or grid view in the Gallery application, you can tap a picture to open a selection menu and choose to delete the picture, rotate or crop it, and more.


## Rotate and Save a Picture

1. From home, tap **Apps**  > **Gallery** .



- ❖ The Gallery app opens.
2. Tap the picture you want to rotate.

3. Tap **Edit**  > **Rotate**.

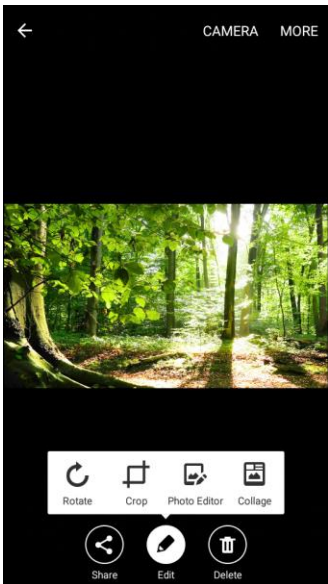

❖ The picture is rotated clockwise 90 degrees. Tap **Rotate** again to rotate another 90 degrees.

4. Tap **Back**  to save the rotated picture.

## Crop a Picture


1. From home, tap **Apps**  > **Gallery** .



❖ The Gallery app opens.


2. Tap the picture you want to crop.

3. Tap **Edit**  > **Crop**.

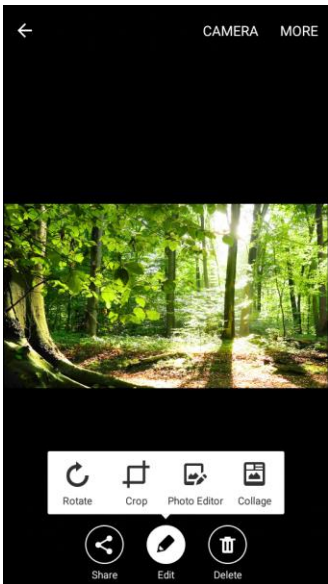

❖ A crop box appears on the picture.

4. To adjust the crop box size, touch and hold the edge of the box. Drag your finger inward to or outward to resize the crop box.

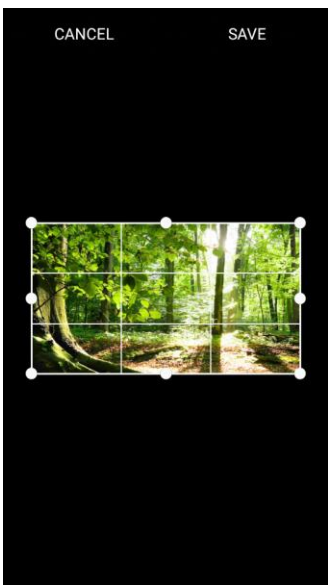

- To move the crop box to the part of the picture that you want to crop, drag the crop box to the desired size and position.
5. Tap **SAVE** to apply the changes to the picture.
    - ❖ The cropped picture is saved in the album as a copy. The original picture remains unedited.

## Photo Editor

Perform advanced edits on your pictures, including straightening, adjusting the tone, adding visual effects, and enhancing portraits.

**Note:** The first time you select Photo Editor, you may be prompted to download and install the feature. Tap **DOWNLOAD** and follow the prompts to continue.


1. From home, tap **Apps**  > **Gallery** .



❖ The Gallery app opens.


2. Tap the picture you want to edit.

3. Tap **Edit**  > **Photo Editor**.

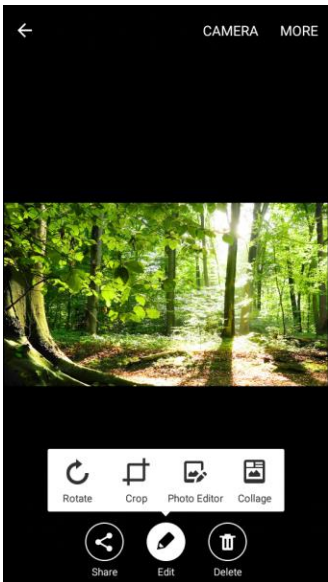

❖ Enhancement tools display.

4. Adjust your picture with these tools:

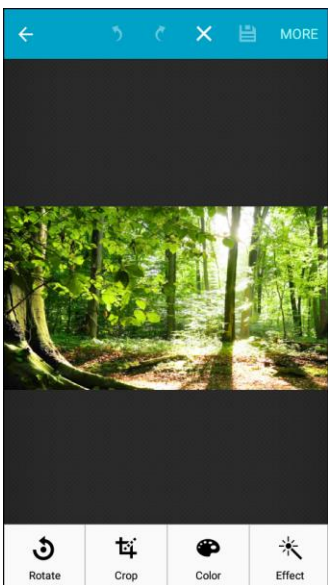

- **Rotate:** Freely rotate your picture.
- **Crop:** Crop the edges of your pictures
- **Color:** Add color effects to your picture.
- **Effect:** Add visual effects to your picture.
- **Portrait:** Enhance facial features of portraits.
- **Sticker:** Add stickers to your picture.

- **Drawing:** Draw or write on your picture.
- **Frames:** Add a frame to your picture.


## Collage

Create a photo collage with your pictures.

1. From home, tap **Apps**  > **Gallery** .






❖ The Gallery app opens.

2. Tap a picture you want to add to a collage.
3. Tap **Edit**  > **Collage**.



4. Tap pictures for the collage.
  - Tap pictures to select them.
  - Tap **DONE** when you are finished selecting.
  - ❖ Your collage layout will be displayed.
5. Use the tools at the bottom of the screen to adjust your collage.



- Tap **Split in 2/3/4** to set the number of collage frames.
  - Tap **Style A/B/C/D/E/F** to change the layout of the collage.
  - Tap  to add or delete pictures.
  - Pinch or stretch an image to zoom in and out.
  - Tap  to remove a picture.
6. Tap  to save the collage to the Collage album.

## Share Pictures and Videos

The Gallery application lets you send pictures and videos using email or multimedia messages. You can share pictures on your social networks (such as Facebook and Google+) and share videos on YouTube. You can also send them to another phone or your computer using Bluetooth.


### Send Pictures or Videos by Email or Gmail


You can send several pictures, videos, or both in an email or Gmail message. They are added as file attachments in your email. For more information about using email and Gmail, see [Compose and Send Email](#) or [Create and Send a Gmail Message](#).



1. From home, tap **Apps**  > **Gallery** .



- ❖ The Gallery app opens.
2. Tap the pictures or videos you want to share.
    - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.
  3. Tap **Share**  or **SHARE**, and then on the sharing menu, tap **Email** or **Gmail**.

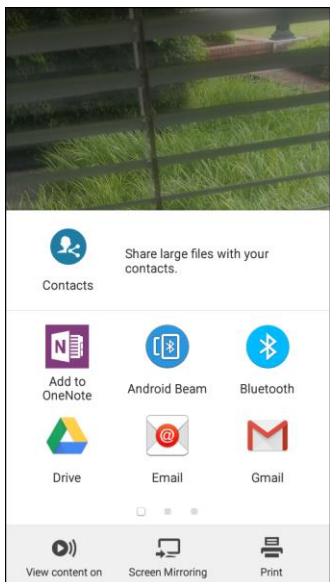

- ❖ Follow onscreen prompts to complete and send the message.

**Note:** If you have multiple email accounts or Gmail accounts, the default account will be used. Check the “From” line to determine which account is being used.

For more information about using email and Gmail, see [Compose and Send Email](#) or [Create and Send a Gmail Message](#).


## Send a Picture or Video by Multimedia Message


Multimedia Messaging (MMS) lets you send pictures and videos using your phone’s messaging app. Although you can send several pictures or videos in a multimedia message, it may be better to just send one at a time, especially if the files are large in size.

1. From home, tap **Apps**  > **Gallery** .



- ❖ The Gallery app opens.
2. Tap the pictures or videos you want to share.
  - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.

3. Tap **Share**  or **SHARE**, and then on the sharing menu, tap **Messages**.

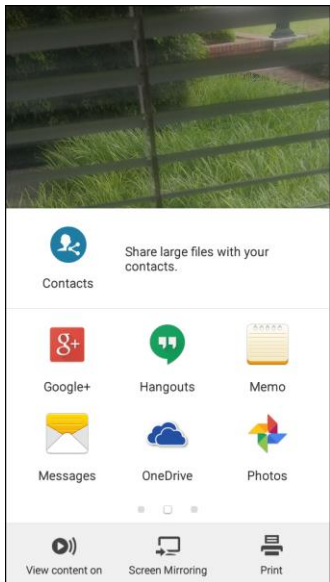

- ❖ Follow the onscreen prompts to complete and send the message.

For more information about sending multimedia messages, see [Send a Multimedia Message \(MMS\)](#).


## Send Pictures or Videos Using Bluetooth


You can select several pictures, videos, or both and send them to someone's phone or your computer using Bluetooth.

1. From home, tap **Apps**  > **Gallery** .



- ❖ The Gallery app opens.

2. Tap the pictures or videos you want to share.
  - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.
3. Tap **Share**  or **SHARE**, and then on the sharing menu, tap **Bluetooth**.

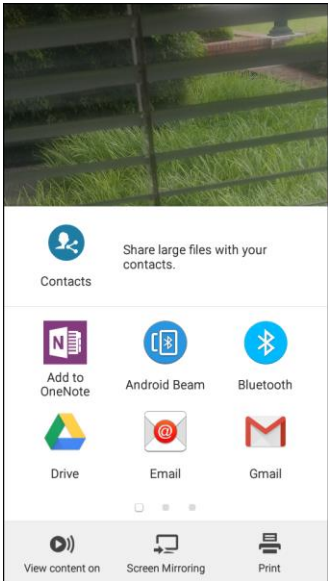

- ❖ Follow the onscreen prompts to complete and send the files.

For more information, see [Bluetooth](#).

## Share Pictures or Videos via Additional Apps or Social Media


From Gallery, you can share your pictures and videos from a variety of apps and social media sites, such as Facebook, Google+, Hangouts, Instagram, and more. Available apps will vary depending on what you have installed on your phone.

1. From home, tap **Apps**  > **Gallery** .



2. Tap the album that contains the photos or videos you want send.
3. Select the items you want to send.
  - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.

4. Tap the screen, tap **Share**  or **SHARE**, and then tap the app you want to use.

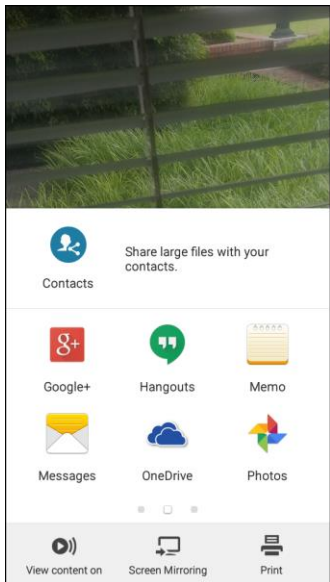

5. Follow the prompts to complete the share.

## Share Videos on YouTube

You can share your videos by uploading them to YouTube. Before you do this, you must create a YouTube account and sign in to that account on your phone.

1. From home, tap **Apps**  > **Gallery** .




❖ The Gallery app opens.

2. Tap the videos you want to share.

- To select multiple videos, touch and hold an image to turn on multiple select. Tap all the videos you want to include.

3. Tap **Share**  or **SHARE**, and then on the sharing menu, tap **YouTube**.

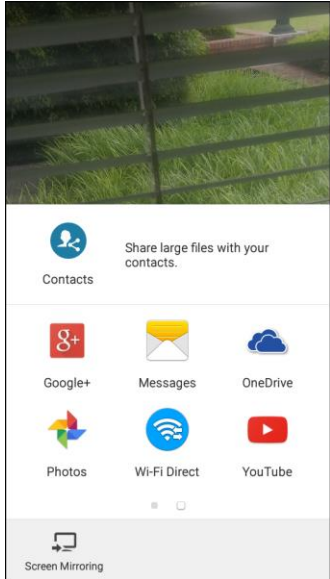

4. Enter the prompted information, such as description and tags, and select a privacy option.

5. Tap **Upload** .

- ❖ The upload is completed.


## Camera Options and Settings

You can adjust your camera's settings using the icons on the main camera screen and the full camera settings menu.

### Switch Cameras

Your phone lets you switch between the front and rear cameras.

1. From home, tap **Apps**  > **Camera** .

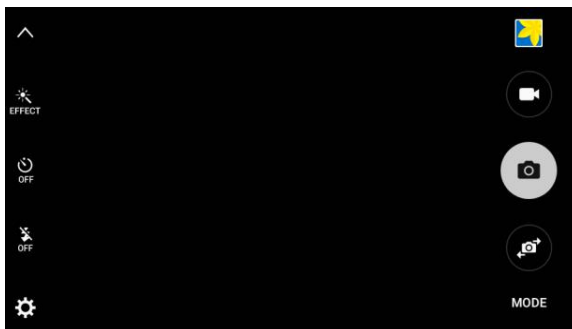

- ❖ The camera viewfinder appears.


2. Tap .

❖ The camera switches type.

## Set Camera Options


You can configure your camera's settings to fit any situation and event.

1. From home, tap **Apps**  > **Camera** .

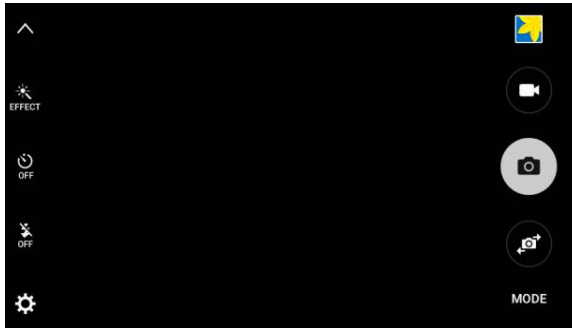

❖ The camera viewfinder appears.

2. Tap **Settings** .

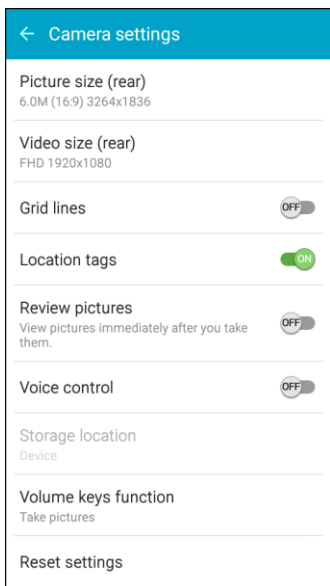

❖ The camera settings menu opens.



3. Select your desired settings (listed in alphabetical order):

**Note:** Not all settings will be available at all times, depending on which camera is in use (front or rear).

- **Gesture control:** Hold your hand out with your palm facing the camera to have your picture take after two seconds (front camera only).
- **Grid lines:** Display viewfinder grid lines to help composition when selecting subjects.
- **Location tags:** Attach a GPS location tag to the photo.
- **Picture size:** Select a resolution. Use higher resolution for higher quality. Higher resolution pictures take up more memory.
- **Reset settings:** Reset the camera settings.
- **Review pictures:** Set to show photos or videos after taking them.
- **Save as horizontally flipped:** Save the self-portrait or self-recording as a reversed (or 'mirrored') image (front camera only).
- **Storage location:** Select the memory location for storage.
- **Video size:** Select a resolution. Use higher resolution for higher quality. Higher resolution videos take up more memory.
- **Voice control:** Set the camera to take photos with voice commands.
- **Volume keys function:** Use the **Volume** key as the camera key, the record key, or as a zoom key.

For additional camera settings, see [Camera Settings](#).



# Useful Apps and Features


---

The following topics detail many of your phone's tools and features such as maps and navigation, calendar, clock, social networking apps, music, memos, and more.

## Sprint Zone

Stay connected to all the latest news and information from Sprint. Included here are news, feedback, featured applications and tips/tricks for your device.

1. From home, tap **Apps**  > **Sprint Zone** .
- ❖ The Sprint Zone app launches.
2. Tap **My Account** to sign in to and manage your Sprint account, **Support** to get help with your device or service, **Sprint News** to learn the latest Sprint information, or **Network** to see or test your current data connectivity.

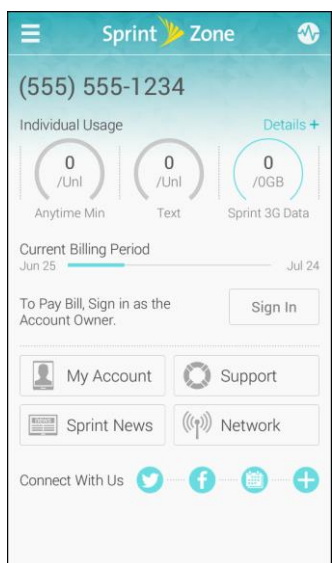



**Note:** Sprint Zone categories and options are subject to change. Check back frequently for new content and updates.

# Sprint Family Locator



Sprint Family Locator lets you locate any phone on your Sprint family plan instantly—from your mobile phone, tablet or computer.

## Update Sprint Family Locator

The first time you use Sprint Family Locator, you will be prompted to update the app.

1. From home, tap **Apps**  > **Sprint Family Locator** .
2. Tap **DOWNLOAD**.
  - ❖ The Google Play store will launch to the Sprint Family Locator page.
3. Tap **UPDATE** > **ACCEPT** to update the app, and then follow the prompts to get started.

## Use Sprint Family Locator

1. From home, tap **Apps**  > **Sprint Family Locator** .
2. Tap **Get Started** (or **Sign In** if you already have an account) and follow the prompts to set up and use the app.

# Sprint Fun & Games

Download new apps and games from Sprint.

- From home, tap **Apps**  > **Sprint Fun & Games** .



# Sprint TV & Movies

With Sprint TV & Movies, you can watch live TV and access movies and other on demand entertainment on the go.

**Note:** Coverage not available everywhere. Content and lineup subject to change. Select channels also available for casual usage. Go to [sprintchannels.mobitv.com](http://sprintchannels.mobitv.com) for more information.

## Update Sprint TV & Movies



The first time you use Sprint TV & Movies, you will be prompted to update the app.

1. From home, tap **Apps**  > **Sprint TV & Movies** .
- ❖ The Google Play store will launch to the Sprint TV & Movies page.
2. Tap **UPDATE** > **ACCEPT** to update the app, and then follow the prompts to get started.

## Your Sprint TV Channel Options

The Sprint TV application offers a wide variety of accessible channels. Subscription options include comprehensive basic packages as well as a full menu of “a la carte” channels. Visit [sprintchannels.mobitv.com](http://sprintchannels.mobitv.com) for more information on channels and pricing.

### Watch TV


1. From home, tap **Apps**  > **Sprint TV & Movies** .
2. Follow the prompts to browse categories and find programs.
  - Depending on your settings, your phone may prompt you to accept a data connection.
  - Browse horizontally through the category options in the center of the screen to see what's available. For quick access, touch a featured item in the center of the screen or select a live channel from the bottom bar.
  - Scroll up and down in a category list and then touch a clip or channel to view the program.

**Note:** The first time you access a channel that requires a subscription, you will be prompted to purchase access. Touch **Subscribe** to purchase access, or touch **Preview** to see a preview of the selected channel.

## Calculator


Your phone's convenient built-in calculator lets you perform basic mathematical equations.

1. From home, tap **Apps**  > **Calculator** .

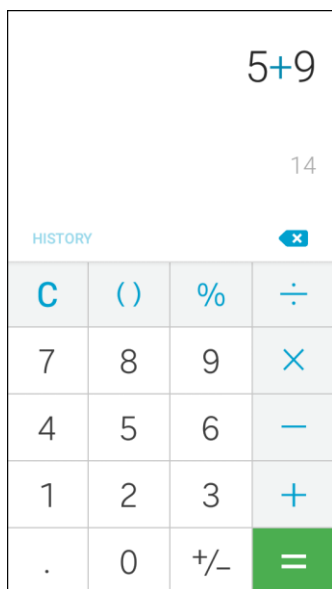


- ❖ The calculator app launches.

2. Tap onscreen keys for calculations.

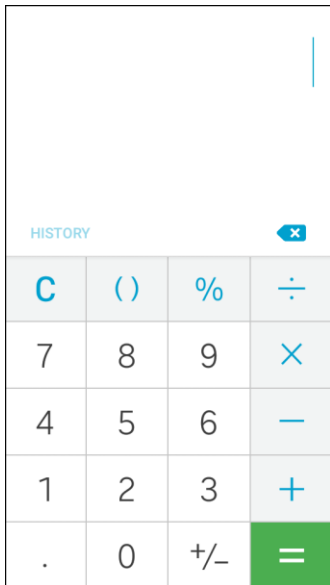

❖ Calculation results appear.

**Tip:** To use the scientific calculator, make sure Screen rotation is turned on (Notification panel > Screen rotation) and rotate the screen to the landscape orientation.

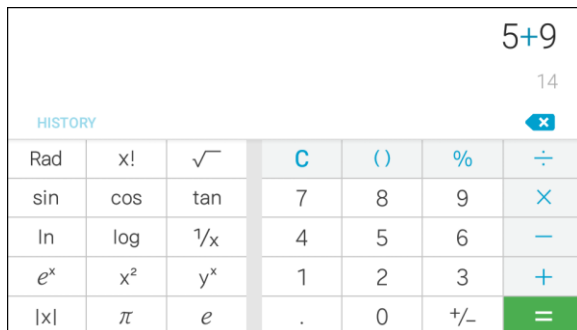

❖ Keys for the scientific calculator appear.

# Calendar

Use Calendar to create and manage events, meetings, and appointments. Your Calendar helps organize your time and reminds you of important events. Depending on your synchronization settings, your phone's Calendar stays in sync with your Calendar on the Web, Exchange ActiveSync calendar, Google Calendar, and Outlook calendar.

In order to sync with your Google calendar, you must sign in to a Google Account on your phone. See [Google Account](#).


## Calendar Operations

- **View Today's Calendar:** From the Calendar, tap **Today**.
- **Change Calendar View:** From the Calendar, tap the drop-down menu in the upper left corner, and then tap **Year**, **Month**, **Week**, **Day**, or **Tasks** to change the current view.
- **View the Next/Previous Time Period (Year/Month/Week/Day view):** From the Calendar, flick the screen left or right.

## Add an Event to the Calendar


Add events to your calendar directly from the Calendar application.

1. From home, tap **Apps**  > **Calendar** .

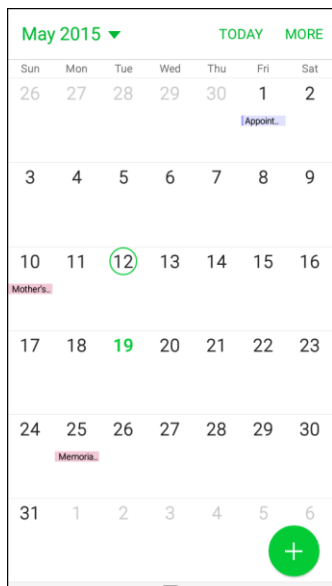


- ❖ The Calendar app opens.

2. Tap **New** .

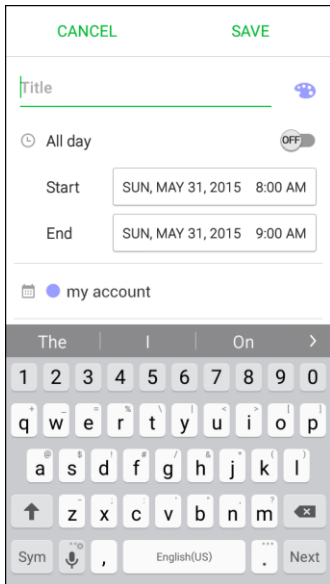

❖ The add event window opens.


3. Enter an event title, start date/time, end date/time, etc., and then tap **SAVE**.

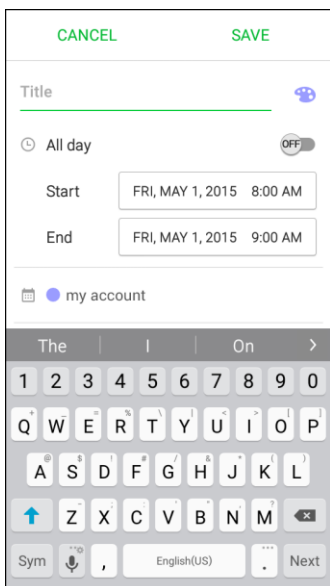

❖ The event is added to your calendar.

## Selecting a Calendar

- If you have more than one calendar, select a calendar by tapping the current Calendar on the Add Event screen.

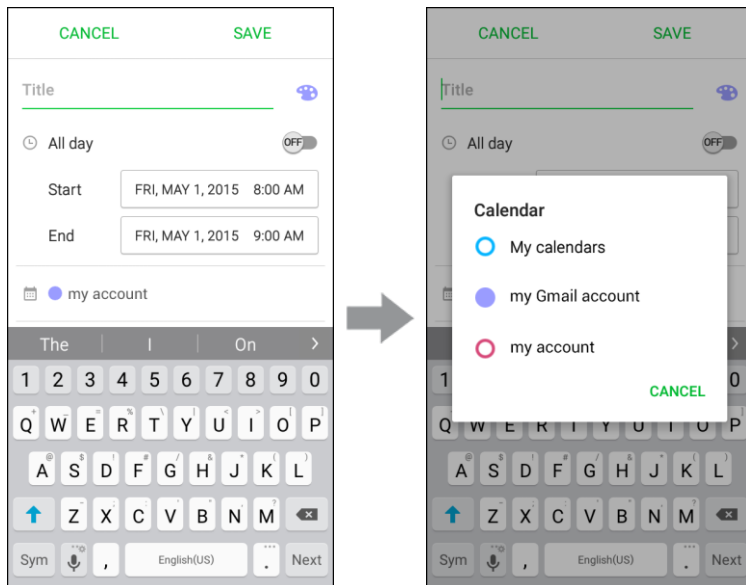

- Select **My calendars** to create an event that will appear only on your phone.
- Select your Google Account to create a Google Calendar event. If you have several Google Calendars on the Web, select one in which to add your event.
  - You can create multiple Google Calendars only in Google Calendar on the Web. After creating them in Google Calendar on the Web, you will be able to see them in the Calendar application on your phone. For more information about creating and managing multiple Google Calendars, visit [calendar.google.com](http://calendar.google.com).
- Select **Samsung Calendar** to create an event that will sync with your Samsung account.
- Select your Outlook or Exchange account to create an event that will sync with these account types.


**Note:** Available options differ depending on the type of account selected for an event.



## View Calendar Events


You can display the Calendar in year, month, week, day, or task view. To change the Calendar view, tap the drop-down menu at the upper-left corner and tap an option.

1. From home, tap **Apps**  > **Calendar** .

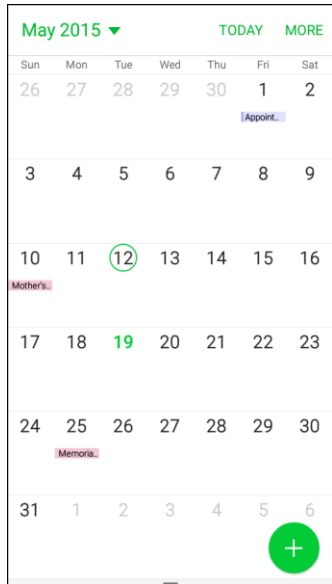

❖ The Calendar app opens.

2. Tap a date and then tap an event.

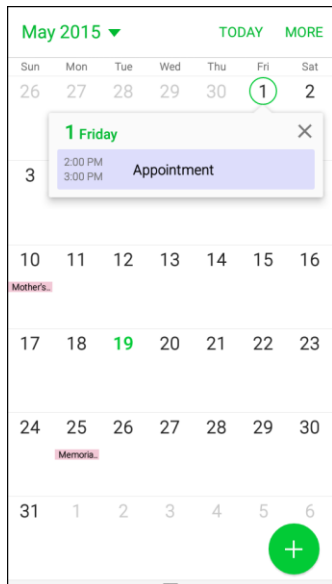


❖ The event details appear.

- Tap the event to view details and edit the event.


# Share Calendar Events

Once you've created a Calendar event, you can share it with others via a variety of methods.


1. From home, tap **Apps**  > **Calendar** .

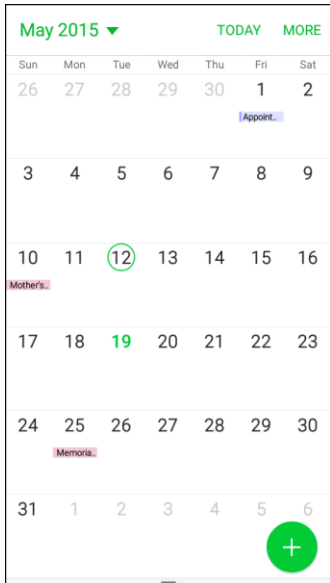


2. Tap a date and then tap an event to see its details.

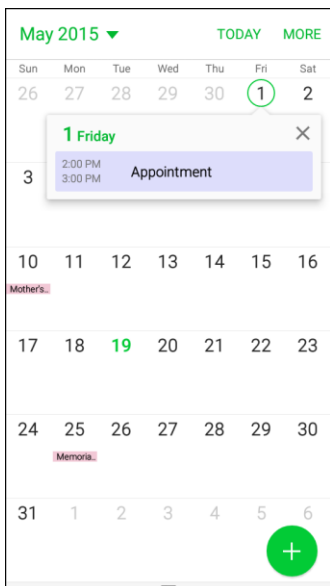

3. From the event details screen, tap **SHARE**.

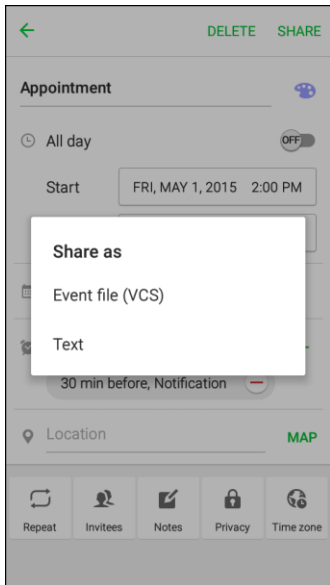


4. Choose a **Share as** option (**Event file (VCS)** or **Text**).
5. Select a sharing method and follow the prompts to send the Event information.

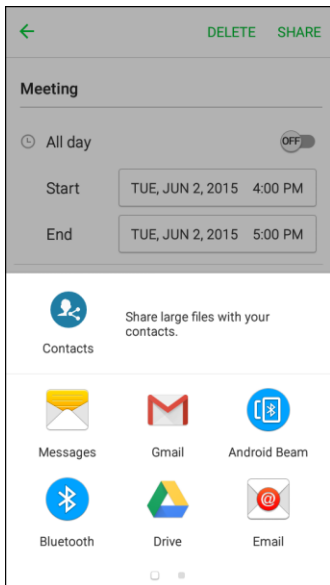

# Sync Calendars


You can select which calendars you would like to sync on your phone, along with what types of information you want to sync.

1. From home, tap **Apps**  > **Calendar** .

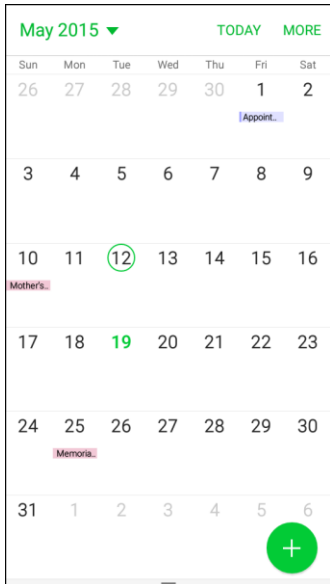


❖ The Calendar app opens.

2. Tap **MORE** > **Manage calendars**.

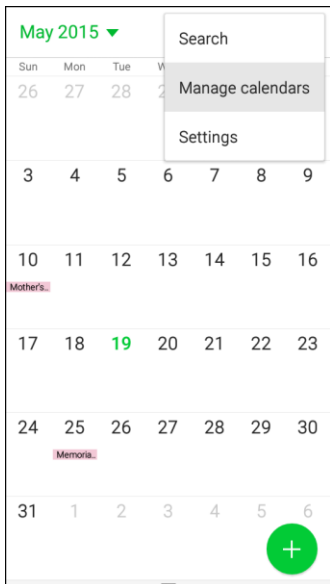


3. Select sync options by tapping the **ON/OFF** switch next to each item.

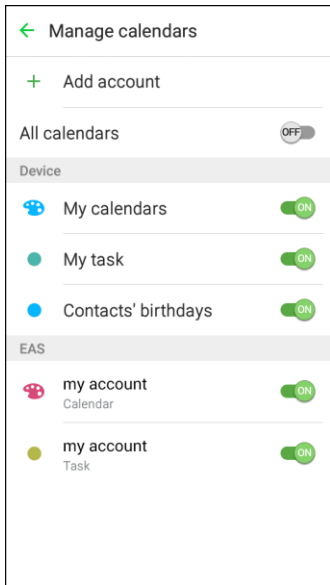

❖ The sync settings have been updated.



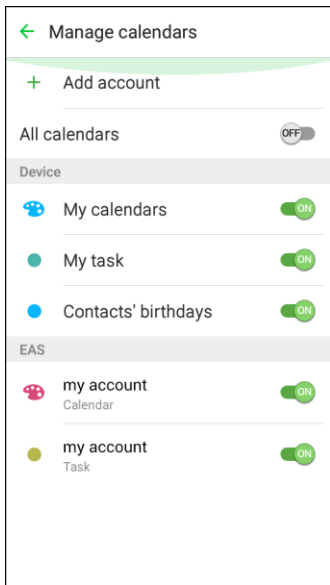

4. To manually sync your calendars, swipe down on the screen.



❖ The selected calendars sync.

## Synchronize an Exchange ActiveSync Calendar

If you have set up a Microsoft Exchange ActiveSync account on your phone, you can also synchronize Exchange ActiveSync calendar events on your phone. Calendar events on your Exchange ActiveSync will also show in Calendar if you chose to synchronize with the Exchange ActiveSync Server.

1. To check if Exchange ActiveSync items are set to be synchronized, From home, tap **Apps**  > **Settings**  > **Accounts**  > **Microsoft Exchange ActiveSync**.
  - If Microsoft Exchange ActiveSync doesn't appear under the Accounts heading in the Settings menu, you do not have an Exchange ActiveSync account configured on the phone. For information about adding an account, see [Add an Exchange ActiveSync Account](#).
2. If your Exchange ActiveSync account is set for synchronization, the ON/OFF switch next to **Sync Calendar** will be ON .

## Clock

Your phone has a clock app that lets you set alarms, view time in time zones around the world, use a stopwatch, set a timer, and use your phone as a desk clock.


### Checking the Time

You can always check the time on your phone. The current time displays in the upper right corner of the Status Bar. Many widgets and Lock screens also display the time and provide options for how time is displayed.


### Setting Date and Time

Your phone automatically receives the current date and time from the wireless network. You can set the date by hand by overriding the default setting.


1. From home, tap **Apps**  > **Settings** .

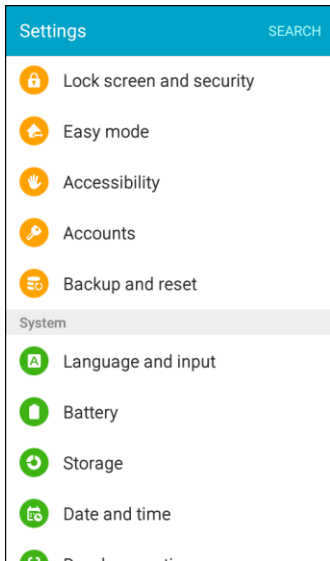

2. Tap **Date and time**.

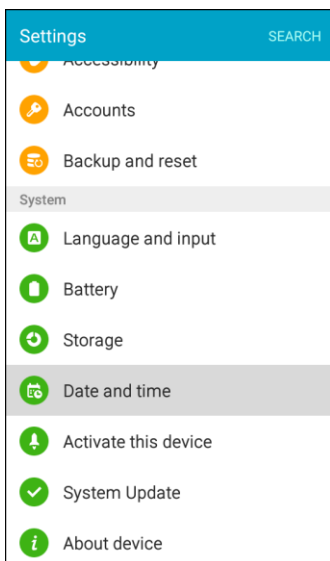

3. Set available date and time options.

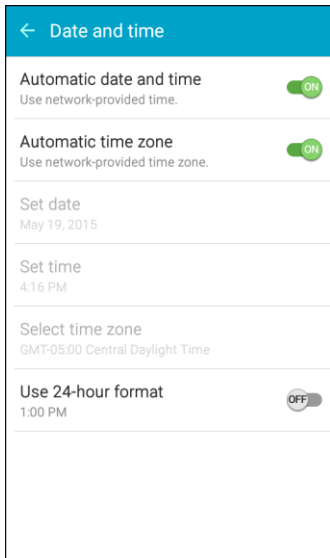


- To set the date and time, tap the **ON/OFF** switch to turn **Automatic data and time** off.
- To select a time zone, tap the **ON/OFF** switch to turn **Automatic time zone** off.
- ❖ Your date and time settings are applied and saved.

## Set Alarms


Set multiple alarms using your phone's Clock app.

1. From home, tap **Apps**  > **Clock**  > **Alarm**.

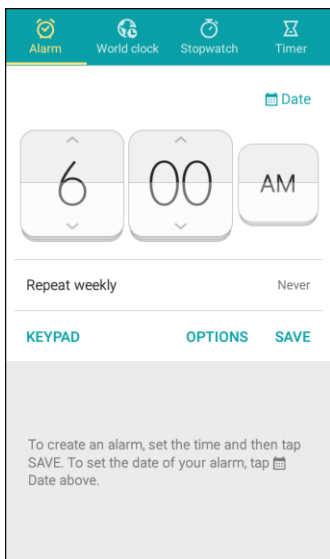



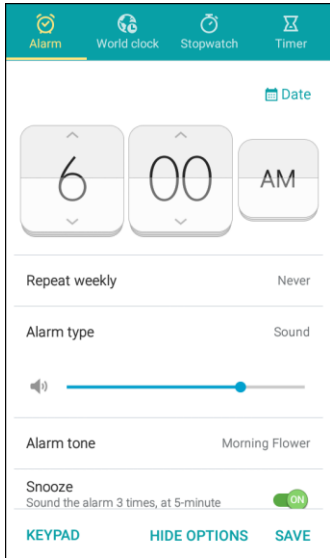

2. Set the alarm options, including time, days, and repeat pattern. For more options, tap **OPTIONS**.



3. When finished, tap **SAVE**.

❖ You will see the alarm icon  in the Status Bar.


### Phone at Alarm Time


- At the set alarm time, the phone sounds the alarm and/or vibrates.
- When the alarm sounds, drag  to left or right to dismiss it.

## World Clock

The world clock lets you keep track of the current time in multiple cities around the globe.

1. From home, tap **Apps**  > **Clock**  > **World Clock**.

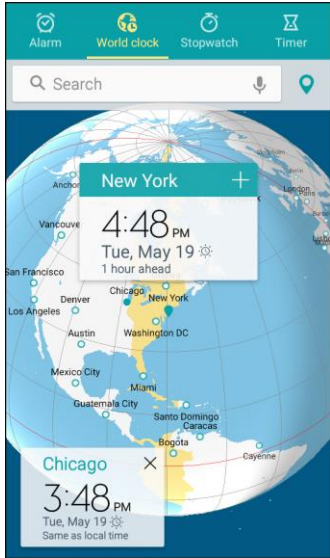


2. Tap a city, and then tap **Add City**  to add it to your list.
3. Repeat to add multiple cities.


## Stopwatch

The stopwatch lets you time events down to the hundredth of a second.


1. From home, tap **Apps**  > **Clock**  > **Stopwatch**.

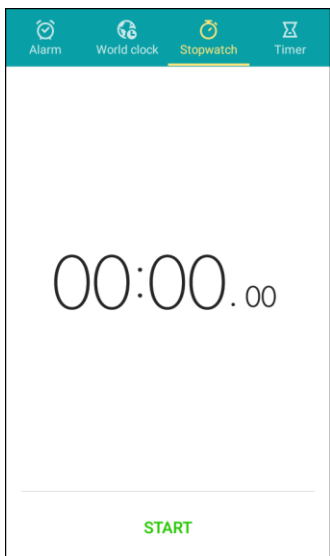

2. Tap **START** to begin timing.

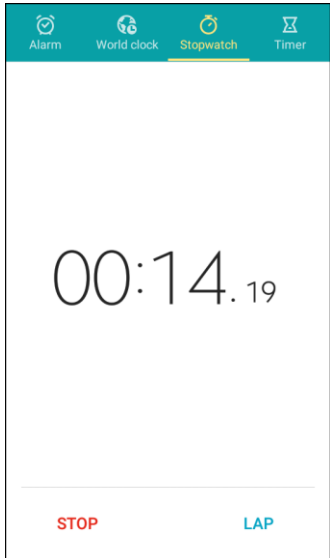

3. Tap **STOP** to stop timing.

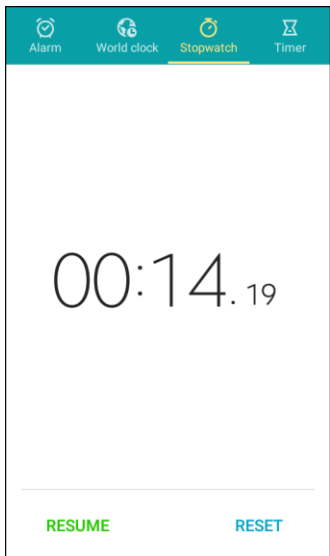


- Additional options include **LAP** to keep track of laps, **RESUME** to continue timing, and **RESET** to reset the stopwatch to zero.

## Timer

The timer provides a countdown timer for up to 99 hours, 59 minutes, and 59 seconds.

1. From home, tap **Apps**  > **Clock**  > **Timer**.

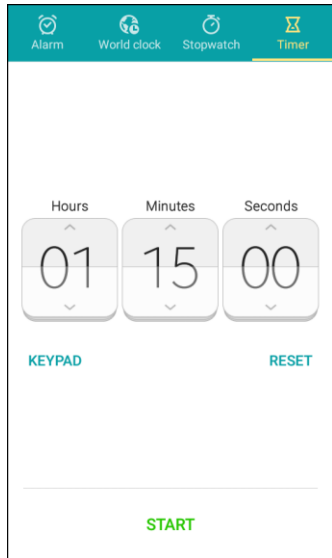

2. Tap **KEYPAD** and then use the keypad to set the length of the timer.
3. Tap **START** to begin the timer.

## Galaxy Apps

Discover apps designed exclusively for your Galaxy phone.

**Note:** You must sign in to a Samsung account in order to download Galaxy Apps.

- From home, tap **Apps**  > **Galaxy Apps** .

## Gallery

Using the Gallery application, you can view pictures and watch videos that you've taken with your phone's camera or downloaded.

You can do basic editing such as rotating and cropping. You can also set a picture as your contact picture or wallpaper and share pictures with your friends.

While viewing pictures in the Gallery, scroll up the screen to view more albums. Simply tap an album to view the photos or videos in that album.

If you have downloaded any photos and videos, these will be placed in the **All downloads** album.

1. From home, tap **Apps**  > **Gallery** .



❖ The Gallery app opens.

2. From the main Gallery screen, you can use these options:
  - Tap a picture or video to display it in full screen view.
  - Touch and hold thumbnails to select them (indicated by a check mark).
  - Tap the drop-down list in the upper-left corner to change the view from Time (the default view) to Albums.
  - Tap **CAMERA** to launch the Camera to take pictures or record video.
  - Tap **MORE** for options. Available options depend on which Gallery screen you are viewing, and may include:
    - **Edit:** Depending on the view, tap albums or items to select them. After selection, you can tap **MORE** again for options you can use with the selected item(s).
    - **Share:** Share albums, pictures, or videos.
    - **Create AGIF file:** Create an animated GIF file from two or more still images.


For more information about using Gallery, see [View Pictures and Videos Using Gallery](#), [Edit Pictures](#), and [Share Pictures and Videos](#).

# Google Hangouts

Hangouts is Google's instant messaging service. Use to communicate with other Hangout users, as well as for video calling. Log in to a Google Account beforehand (see [Google Account](#)).


## Using Hangouts

1. From home, tap **Apps**  > **Hangouts** .

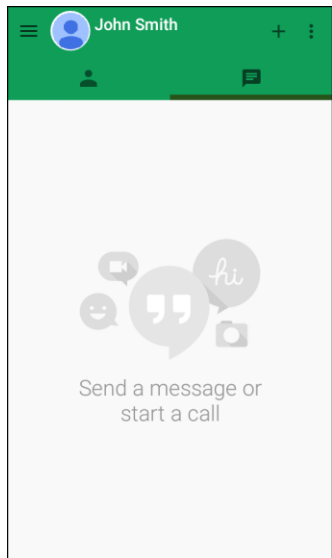



- ❖ The Hangouts app will open.

2. Tap **Add**  to start a new Hangout.

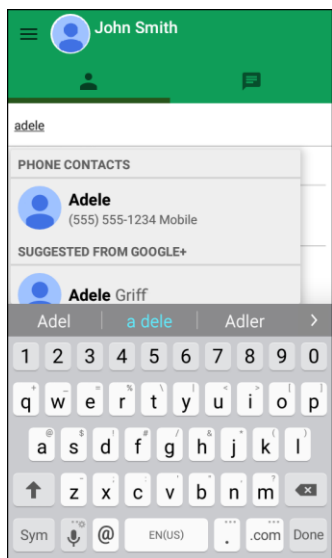

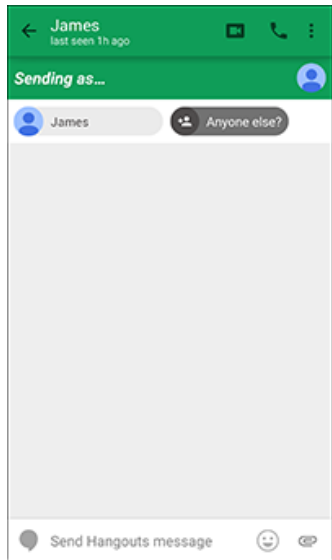


3. Type a name, email, number, or circle, or select a contact from the list.



4. Type a message or tap  to start a video chat.
  - ❖ A chat window or a video chat window opens.
  - Each time text is entered, the corresponding friend appears.
  - If a friend is not in a Hangout, you will see a message. Tap **Send invitation** to invite them to join the Hangout.

## Hangouts Operations

- **Ending a Video Chat:** In the video chat window, tap .
- **Disabling Chat History:** If you don't want to keep chat history, in the chat window, tap **More options**  > **Turn history off**.
- **Delete Chat History:** To delete all your chat history, in the chat window, tap **More options**  > **Delete** > **DELETE**.

**Note:** You can use Hangouts as your phone's default messaging app, or as a standalone IM app. If you set Hangouts as the default messaging app, the Messages app will be disabled. For more information, see [Default Messaging App Settings](#).

# Google Maps


Use the Google Maps app to determine your location, find directions, browse local businesses and attractions, rate and review places, and more.

**Note:** To use Google Maps, you will need to have your phone's Location feature turned on. See [Location Settings](#) for information about enabling Location on your phone.

## View Maps of Specified Places

Use Google Maps to locate and map a specific address or destination.

1. From home, tap **Apps**  > **Maps** .

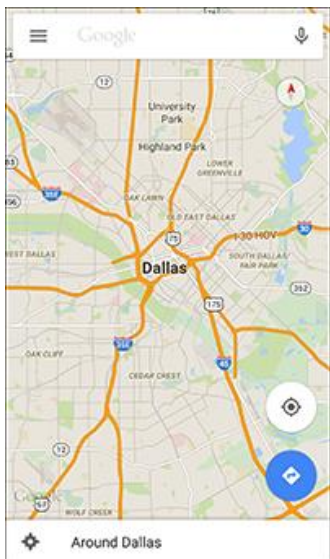


- ❖ Google Maps opens.


**Note:** The first time you access Maps, you may be prompted to accept the Terms of Service and Privacy Policy. Tap **ACCEPT & CONTINUE** to continue.



2. Tap in the search box to start a search.

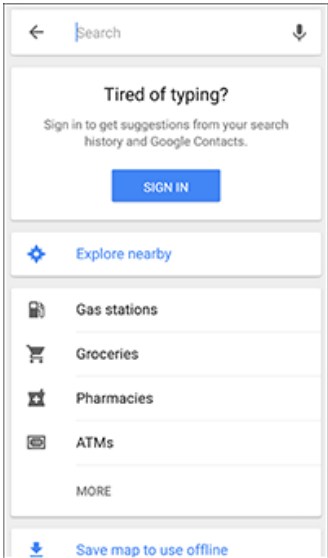



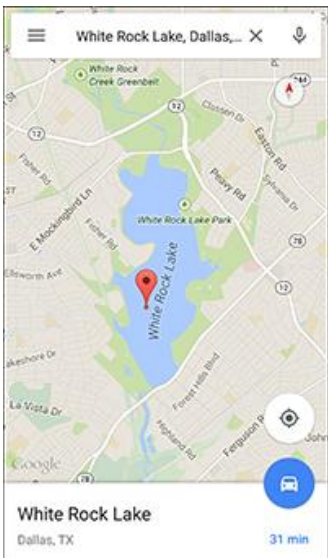

3. Enter an address, city, facility name, etc., and then tap a candidate in the results list.



- ❖ A map of the specified location opens.

## Google Maps Operations

- **Viewing Current Location:** From the Maps app, tap .
- **Obtain Useful Area Information for Current Location:** Tap the **Search** field, enter the information you are looking for, and then tap a result to view it.
- **View Traffic Information, Aerial Photos, Etc.:** Tap **Menu**  and then tap **Traffic**, **Satellite**, **Google Earth**, etc.
- **Check Route to Destination:** Tap , enter your current location and your destination, and then tap a method of transport (car, public transit, on foot, or by bicycle) to see available routes.
- **Check Detailed Operation for Maps:** From the Maps app, tap **Menu**  > **Help**.

## Google Play Books

Discovering your favorite books and authors has never been easier. With Google Play Books, you can shop the world's largest selection of eBooks and read them anywhere you like.

- From home, tap **Apps**  > **Play Books** .

## Google Play Games

Google Play Games is the easiest way for you to discover new games, track achievements and scores, and play with friends around the world. It brings all of your gaming on Google Play together in a unified Android experience.

- From home, tap **Apps**  > **Play Games** .

## Google Play Movies & TV

Google Play Movies & TV allows you to watch movies and TV shows purchased on Google Play. You can stream instantly on your Android phone or download so you can watch from anywhere, even when you are not connected. Also, get quick access to your personal video collection, including those taken on your phone.

Learn more about Google Play Movies & TV at [play.google.com/about/movies](https://play.google.com/about/movies).

- From home, tap **Apps**  > **Play Movies & TV** .

# Google Play Music


The Google Play Music app lets you browse, shop, and play back songs purchased from Google Play as well as songs you have loaded from your own music library. The music you choose is automatically stored in your Google Play Music library and instantly ready to play via streaming or download.


**Note:** For information about loading music onto your phone, see [Transfer Files Between Your Phone and a Computer](#).

## Using Google Play Music

Use the Google Play Music app to listen to all your music on your phone. Compatible music file formats include: MP3 (.mp3), AAC (m4a), WMA (.wma), FLAC (.flac), OGG (.ogg), DRM protected AAC (m4p), and ALAC (.m4a).


1. From home, tap **Apps**  > **Play Music** .

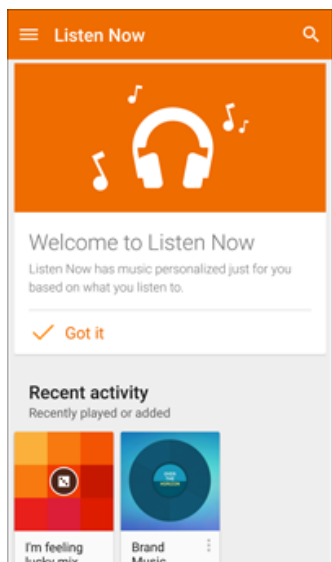

- ❖ The Play Music app opens to the Listen Now screen. To view additional music options, tap **Menu**  and select an option (My Library, Playlists, Instant Mixes, or Shop).
2. Tap an item from the category window and then tap a song.
    - ❖ The song begins playing.

## Google Play Music Screen Layout

The following diagram outlines the main features of the Play Music app player screen.

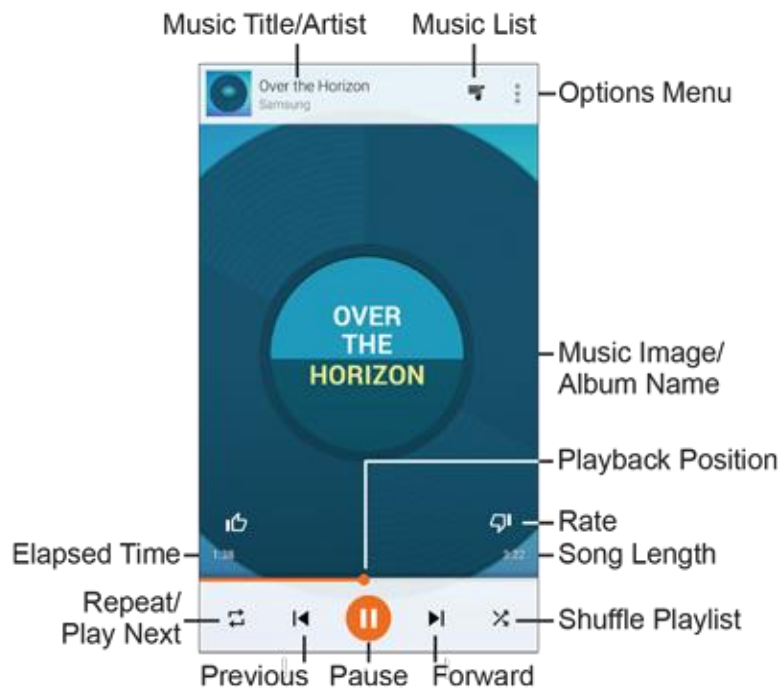


Feature	Description
<b>Elapsed Time</b>	Amount of time the song has been playing.
<b>Forward</b>	Play the next song.
<b>Music Image/Album Name</b>	Display music images and album names (if available).
<b>Music List</b>	View current playlist or queue
<b>Music Title/Artist</b>	Displays music title and artist (if available).
<b>Options Menu</b>	Access the options menu.
<b>Play/Pause</b>	Play or pause the current song.
<b>Playback Position</b>	Current point in the song. Slide to move forward or backward.
<b>Previous</b>	Play the previous song.
<b>Rate (Thumbs Up/Thumbs Down)</b>	Rate the current song (thumbs up on the left, thumbs down on the right).

Feature	Description
<b>Repeat/Play Next</b>	Repeat the current song or play the next song queued.
<b>Shuffle Playlist</b>	Shuffle the current playlist or queue.
<b>Song Length</b>	The length of the song.




## Create Playlists in Google Play Music

Organize music into playlists to fit every occasion.

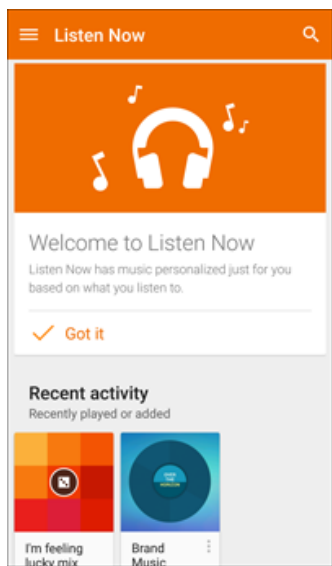
1. From home, tap **Apps**  > **Play Music** .



❖ The Play Music app opens to the Listen Now screen.

2. Tap **Menu**  to view your library, playlists, or access Google Play Music online.
3. From a list displaying songs, tap **More options**  next to a song you want to add to a playlist.
4. Tap **Add to playlist > New playlist**.
5. Enter a Name, Description, and accessibility option for the playlist, and then tap **CREATE PLAYLIST**.
6. To add more songs, tap **More options**  next to a song and then tap **Add to Playlist > [playlist name]**.

## Adding Currently Playing Music to a Playlist

- From the player view, tap **More options**  > **Add to playlist** and then tap the name of a playlist.
  - ❖ The music is added to the playlist.

## Google Play Newsstand

With Google Play Newsstand, discover more of the news and magazines you care about all in one app on your phone. Enjoy breaking news and in-depth articles featuring audio and video. From sports, business, cooking, entertainment, fashion and more it's all in one place.

- From home, tap **Apps**  > **Play Newsstand** .


## Google Search

Search information saved on the phone and in phone applications as well as on the Internet.

### Use Google Search


Type search terms in the Google Search bar to find information on your phone and around the globe.

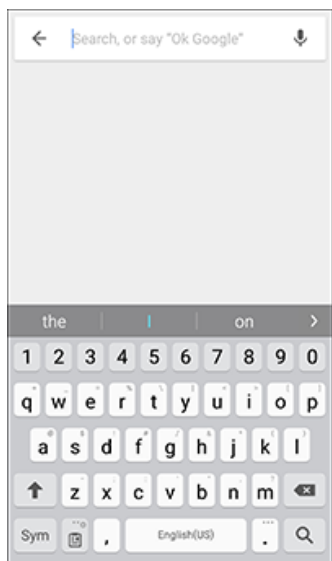

1. From home, tap the Google search bar or tap **Apps**  > **Google** .



- ❖ The Search window opens.

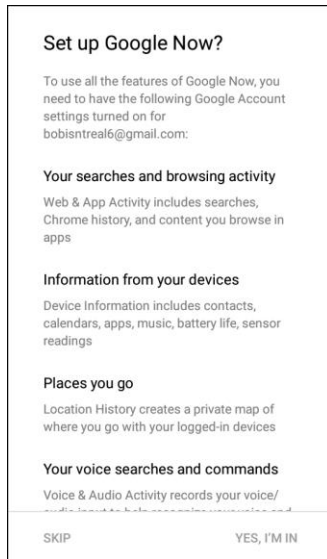- If a description for Google Now appears, tap **What can Google Now do?** and read the information. Tap **YES, I'M IN** on the last page if you want to use Google Now.




2. Type your search keywords and tap **Search** .
- ❖ Search results appear.
  - To search by voice, tap  in the search bar and speak your search terms.

## Use Google Voice Search

Use your voice to search instead of typing, with Google Voice Search.

1. From home, tap **Apps**  > **Voice Search** .

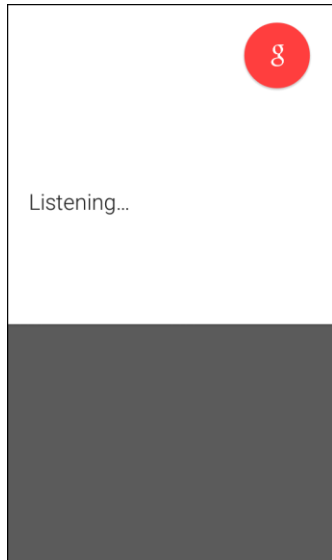

- ❖ The Voice Search window opens.
2. Speak your search terms.
    - ❖ Search results appear.

## Lookout Security

Lookout Security provides mobile device-specific security features that are coupled with a minimal performance hit. Lookout Mobile Security provides key security options that are unique to the mobile market. Along with the antivirus and anti-malware tech, there's a lost and stolen phone locator service, an application privacy adviser, and a backup service.


- From home, tap **Apps**  > **Lookout** .




# Memo

Use your phone's memo app to save text, memos, lists, and more.

1. From home, tap **Apps**  > **Memo** .

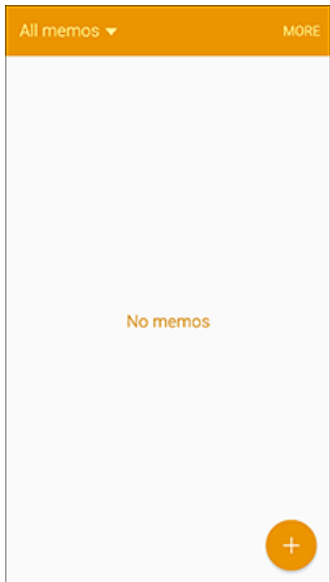

❖ The memo list appears.

2. Tap  and enter your memo title and text.





3. Tap **SAVE**.

❖ The memo is saved.



# My Files

My Files allows you to manage your sounds, images, videos, Bluetooth files, Android files, and other data in one convenient location. This application allows you to launch a file if the associated application is already on your phone.

1. From home, tap **Apps**  > **My Files** .
2. Folders display, including:
  - **Recent files:** View recently saved files.
  - **Images:** View image files.
  - **Videos:** View video files.
  - **Audio:** View audio files.
  - **Documents:** View document files.
  - **Download history:** View all apps and files that have been downloaded to the phone.
  - **Shortcuts:** Contains shortcuts to files or folders that you have added. This option only appears if you have added shortcuts to the My Files main screen.
  - **Local storage:** View folders and files in their storage locations.
  - **Cloud storage:** View folders and files store on the Internet.
3. Tap **STORAGE USAGE** to see how storage space is being used.

**Note:** Different folders may appear depending on how your phone is configured.

To view files in My Files:

1. From home, tap **Apps**  > **My Files** .
2. Tap a category to view its files or folders.
3. Tap a file or folder to open it.

# OneDrive

OneDrive gives you free online storage for all your personal files so you can get to them from your Android device, computer, and any other devices you use.

- From home, tap **Apps**  > **OneDrive** .



# OneNote

Stay organized using text, pictures, or audio notes. Create Quick Notes or review and edit shared OneNote notebooks using OneDrive.

- From home, tap **Apps**  > **OneNote** .



# Video

Play videos stored on your phone, or from your other devices (you must sign in to your Samsung account to play videos synced from your other devices).

1. From home, tap **Apps**  > **Video** .
2. Scroll through the videos stored on your phone. After a few seconds, each video thumbnail begins playing a preview of the clip.
3. Tap a video to view it.

## Use Pop-Up Play

Multitask with Pop-Up Play by transforming your video player into a pop-up window floating on the screen. The video will continue to play, and the pop-up window can be resized or moved anywhere on the screen.


1. From home, tap **Apps**  > **Video** .
2. Tap a video to view it.
3. Tap the screen to display playback options, and then tap **Pop-up player**.
  - ❖ The video will continue playing in a floating window. Drag the window to any location on the screen, and use two fingers to pinch or spread to resize the floating window.





# Voice Recorder

The Voice recorder allows you to record an audio file up to one minute long and then immediately share it. Recording time will vary based on the available memory within the phone.

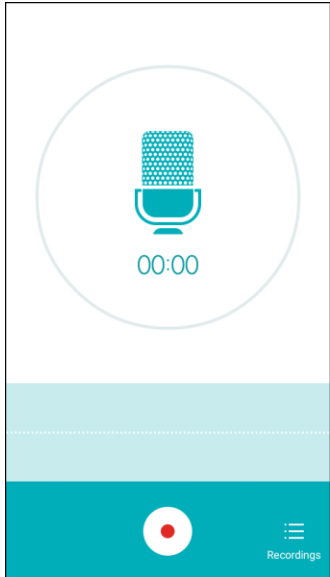


## Make a Voice Recording


1. From a Home screen, tap **Apps**  > **Voice Recorder** .



2. Use the Voice Recorder controls:
  - To start recording, tap  **Record** and speak into the microphone.
  - To pause recording, tap  **Pause**. To end the recording, tap  **Stop**.
  - To mark a spot in the recording so you can find it later, tap  **Bookmark**.




## Play Back a Voice Recording

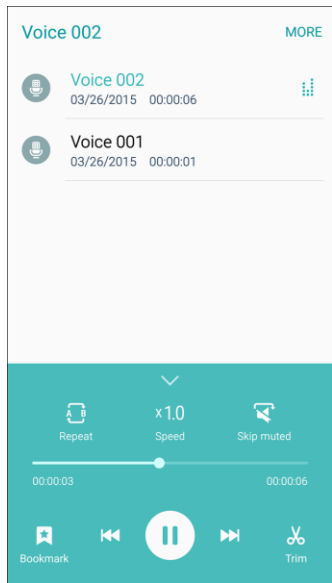1. From a Home screen, **Apps**  > **Voice Recorder** .
2. Tap **Recordings** .
3. Tap a recording to play it back.






4. During playback, you have the following tools available:
  - **Repeat:** Tap to repeat the recording once it reaches the end.
  - **Speed:** Tap to change the playback speed.
  - **Skip muted:** Tap to skip muted portions of the recording.
  - **Bookmark:** Tap to mark spots in the recording for later reference.
  - **Trim:** Tap to open the trim tool, which allows you to trim down the recorder using sliders.




## Share a Voice Recording

1. From a Home screen, tap **Apps**  > **Voice Recorder** .
2. Tap **Recordings** , and then touch and hold on a recording to display options.
3. Tap **MORE** > **Share**, and then follow the prompts to choose a method and share the file.




## Modify a Voice Recording

1. From a Home screen, tap **Apps**  > **Voice Recorder** .
2. Tap **Recordings** , and then touch and hold on a recording to select it.
3. Tap **MORE** to display options:
  - **Share**: Share the voice recording.
  - **Rename**: Change the name of the voice recording.
  - **Write to Voice Label**: You can save the voice recording to a Voice Label via NFC.

## Voice Recorder Options

1. From a Home screen, tap **Apps**  > **Voice Recorder** .
2. Tap **Recordings**  to view a list of recordings.
3. Tap **MORE** for options:
  - **Edit**: Tap on recordings to select them. After selection, you can delete, rename, or write the recording to a Voice Label.
  - **Share**: Select voice recordings to share.
  - **Search**: Search for a voice recording by file name.

## Delete a Voice Recording

1. From a Home screen, tap **Apps**  > **Voice Recorder** .
2. Tap **Recordings** , and then touch and hold on a recording to select it.
3. Tap **DELETE**.


# YouTube

View videos uploaded to YouTube and upload your own videos to your YouTube account.

## View YouTube Videos

You can use the YouTube app to view videos on YouTube even if you are not signed in to a YouTube account.

1. From home, tap **Apps**  > **YouTube** .

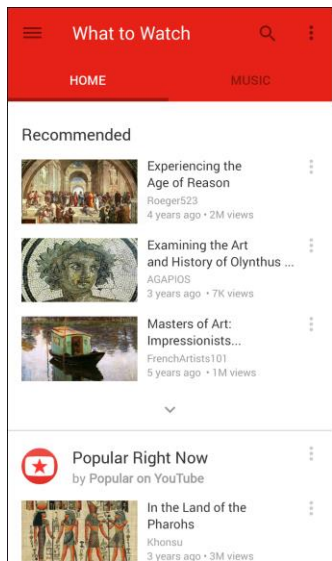


- ❖ The YouTube app launches.
2. Search through the YouTube channels and tap a video you want to see.
    - ❖ The video plays on your phone screen.
    - Tap the screen to pause or resume play while watching.

## Post a Video to YouTube


You can post videos to your YouTube account from your phone. Before posting, you must set up a YouTube account and sign in to it on your phone.

1. From home, tap **Apps**  > **YouTube** .

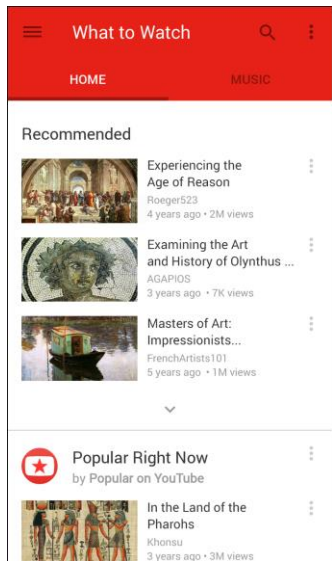



- ❖ The YouTube app launches.

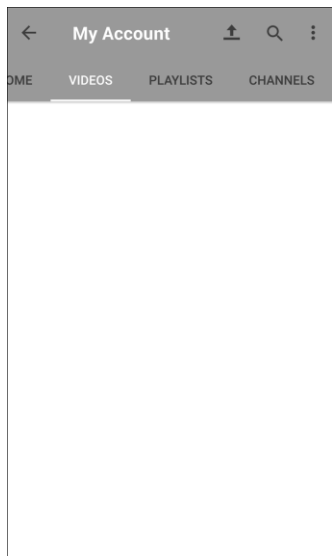2. Tap **Options**  > **Uploads**.



- ❖ The Uploads menu appears.




3. Tap **Upload**  to select a video from your phone.
    - Enter a title, description, and tags, and select a privacy setting.
  4. Tap **Upload** .
- ❖ The video is uploaded to your YouTube channel.

## 1Weather

Check weather and forecasts with 1Weather: Widget Forecast Radar, which combines a groundbreaking UI with a power set of weather tools.

### Update 1Weather

1. From home, tap **Apps**  > **1Weather** .
2. Tap **UPDATE**, and then follow the prompts to accept access requirements and update the app.


### Use 1Weather

- From home, tap **Apps**  > **1Weather** .

## Amazon

Shop Amazon.com from your phone.

### Install Amazon

1. From home, tap **Apps**  > **Amazon** .
2. Tap **INSTALL**, and then follow the prompts to accept access requirements, download, and install the app.



### Use Amazon

- From home, tap **Apps**  > **Amazon** .

# Facebook

Post updates, read what your friends are up to, upload pictures and check-ins, and more with on-the-go Facebook access.

## Install Facebook

1. From home, tap **Apps**  > **Facebook** .
2. Tap **Download**, and then follow the prompts to accept access requirements and update the app.

## Sign In to Facebook

1. From home, tap **Apps**  > **Facebook** .

– or –

From home, tap **Apps**  > **Settings**  > **Accounts** > **Add accounts** > **Facebook**.

2. If you have a Facebook account, enter your user id and password, and then tap **LOG IN**.

– or –



To create a new Facebook account, tap **Sign Up for Facebook**, tap **Continue**, and then follow the instructions.

❖ You are signed in to Facebook.

# Messaging Plus

Messaging Plus provides high quality video calling, group chat, and media sharing along with easy registration, a full emoji keyboard, and other convenient features.

## Update Messaging Plus

1. From home, tap **Apps**  > **Messaging+** .
2. Tap **UPDATE**, and then follow the prompts to accept access requirements and update the app.

## Use Messaging Plus



- From home, tap **Apps**  > **Messaging+** .

**Note:** You can assign Messaging Plus as your phone's default messaging app, or as a standalone IM app. If you set Messaging Plus as the default messaging app, the Messages app will be disabled. For more information, see [Default Messaging App Settings](#).

# NASCAR Mobile

The NASCAR Mobile app is the official mobile app of NASCAR. Follow NASCAR news, video highlights, and immerse yourself even further into the NASCAR experience with driver stats and live leaderboards.

## Update NASCAR Mobile

1. From home, tap **Apps**  > **NASCAR Mobile** .
2. Tap **UPDATE**, and then follow the prompts to accept access requirements and update the app.



## Use NASCAR Mobile

- From home, tap **Apps**  > **NASCAR Mobile** .

# NBA Game Time

Follow the excitement of the NBA Season with NBA Game Time, the award-winning, official, free app of the NBA.

## Update NBA Game Time

1. From home, tap **Apps**  > **NBA Game Time** .
2. Tap **UPDATE**, and then follow the prompts to accept access requirements and update the app.



## Use NBA Game Time

- From home, tap **Apps**  > **NBA Game Time** .

# NextRadio


Listen to your favorite local radio stations with NextRadio – FM radio on your smartphone! Tune in to any FM frequency in your area and listen to the radio without the buffering and cost of streaming music.

## Update NextRadio

1. From home, tap **Apps**  > **Next Radio** .
2. Tap **UPDATE**, and then follow the prompts to accept access requirements and update the app.

## Use NextRadio



- From home, tap **Apps**  > **Next Radio** .

**Note:** To listen to radio from your phone, you must plug in either headphones or a speaker cable to the headphone jack on top of the phone. To listen through the phone's speaker (after plugging in headphones), tap **Menu**  > **Output to Speaker**.

# Pages Manager

The Pages Manager app lets you manage up to 50 Pages from your smartphone or tablet. You can check Page activity, share with your audience and see insights.

## Install Pages Manager

1. From home, tap **Apps**  > **Pages Manager** .
2. Tap **DOWNLOAD**, and then follow the prompts to accept access requirements and update the app.



## Use Pages Manager

- From home, tap **Apps**  > **Pages Manager** .

# Uber

Search and find transportation service using the Uber app. Request a ride and get picked up within minutes.

## Update Uber

1. From home, tap **Apps**  > **Uber** .
2. Tap **GET STARTED** or **DOWNLOAD**.
3. Tap **UPDATE**, and then follow the prompts to accept access requirements and update the app.

## Use Uber

- From home, tap **Apps**  > **Uber** .

# Connectivity

---

The following topics address your phone's connectivity options, including USB file transfer and tethering, Wi-Fi, Bluetooth, IR connectivity, and more.

## Transfer Files Between Your Phone and a Computer

You can use the supplied USB connector to connect your phone directly to your computer and transfer music, pictures, and other content files.

For example, if you have a music album stored on your computer that you want to listen to on your phone with any of the music apps, just attach your phone to the computer and copy the files to the music folder.

Data exchange may use the methods outlined in the following table:

Method	Description
Media Device (MTP)	Transfer files between your phone and PC such as pictures, videos, and music.
Camera (PTP)	Transfer picture and video files between your phone and PC.


### Transfer Files Between the Phone and a Computer

1. Connect your phone to your computer using the supplied USB/charging cable.



- Insert the larger end of the cable to the charger/accessory port at the bottom of the phone.
- Insert the USB end of the cable into an available USB port on your computer. You may need to remove the USB cable from the charging head to access it.

2. Drag the Status Bar down to display the Notification panel.

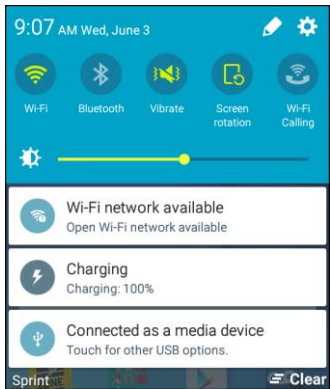

- ❖ You will see either **Connected as a media device** or **Connected as a camera**. The files on your phone can now be accessed via your computer.
  - For most transfers, you will want to use **Connected as a media device**.
  - To change the option, tap the notification in the Notification panel to open the **USB computer connection** window, and then tap the desired option.
- 3. On your computer, navigate to the detected device (such as through the My Computer menu) and open it.
- 4. Select **Phone** for internal phone storage.
- 5. Select a folder (for example, **Music** for songs and albums) and copy files to it from your computer.
- 6. When you are done, disconnect your phone from your computer.
  - ❖ The transferred files are now saved to your phone.

**Note:** You can also copy files from your phone to your computer, for example, if you want to save pictures or videos from your phone on your computer.

## Wi-Fi


Wi-Fi provides wireless Internet access over distances of up to 300 feet. To use your phone's Wi-Fi, you need access to a wireless access point or "hotspot."

The availability and range of the Wi-Fi signal depends on a number of factors, including infrastructure and other objects through which the signal passes.


# Turn Wi-Fi On and Connect to a Wireless Network

Use the Wireless & networks setting menu to enable your phone's Wi-Fi radio and connect to an available Wi-Fi network.

1. From home, tap **Apps**  > **Settings** .

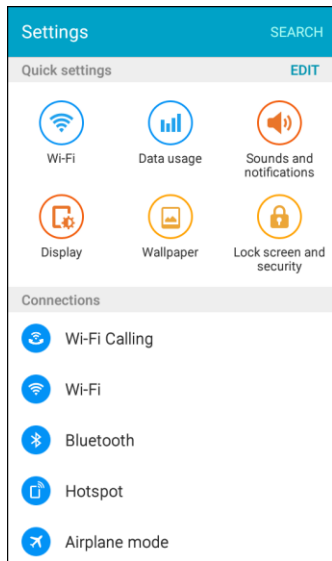


2. Tap **Wi-Fi** .

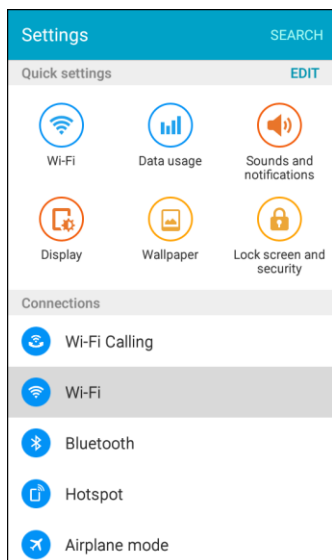



- ❖ The Wi-Fi settings menu appears.

3. Tap the **ON/OFF** switch to turn Wi-Fi on.

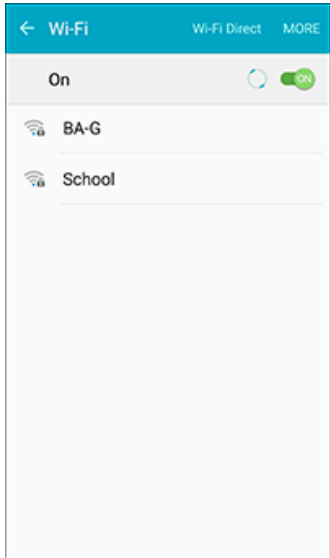

- ❖ Wi-Fi is enabled. You will see the names and security settings of in-range Wi-Fi networks.
  - To disable Wi-Fi, tap the **ON/OFF** switch again.
- 4. Tap a Wi-Fi network to connect, enter the password (if it's not an open network), and then tap **CONNECT**.

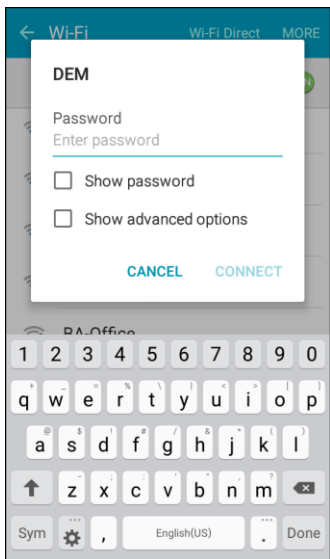

- ❖ Your phone is connected to the Wi-Fi network. You will see  in the Status Bar.
  - The password, for a household wireless LAN router, is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information. For password for a public wireless LAN, check with user's service provider.
  - Entering a password is not required if an access point is not security protected.




**Note:** The next time your phone connects to a previously accessed secured wireless network, you will not be prompted to enter the password again, unless you reset your phone to its factory default settings or you instruct the phone to forget the network.


## Wi-Fi Settings

Use the Wi-Fi settings menu to manually set your Wi-Fi connection options.

1. From home, tap **Apps**  > **Settings** .

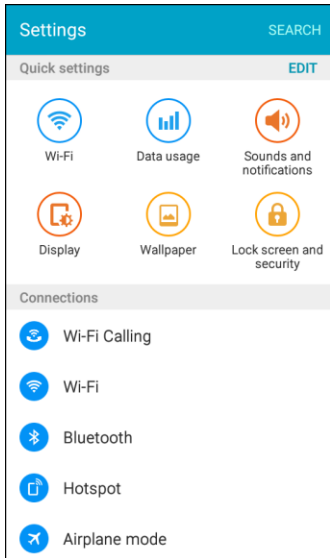

2. Tap **Wi-Fi** .

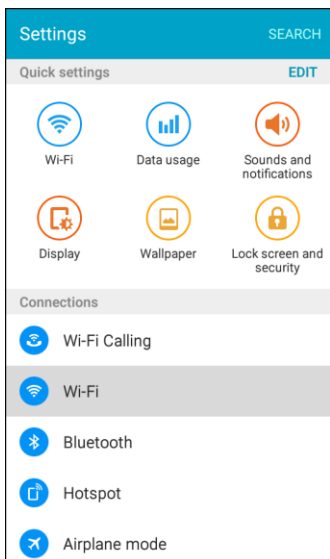


- ❖ The Wi-Fi settings menu appears.

3. Tap the **ON/OFF** switch to turn Wi-Fi on.



- ❖ Wi-Fi is enabled. You will see the names and security settings of in-range Wi-Fi networks.
- To disable Wi-Fi, tap the **ON/OFF** switch again.

4. Tap **MORE**.

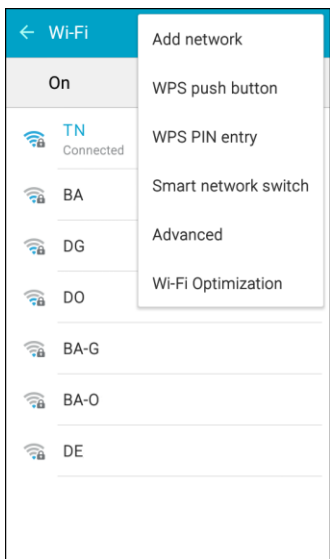

- ❖ The Wi-Fi settings menu appears.


5. Configure your Wi-Fi settings.

- ❖ Your Wi-Fi settings changes are saved.


# Disconnect Wi-Fi

You may want to remove a connected Wi-Fi network.

1. From home, tap **Apps**  > **Settings** .

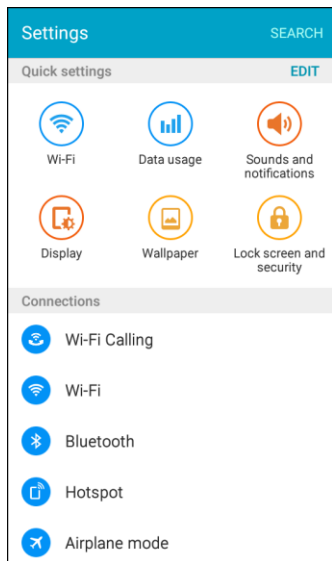


2. Tap **Wi-Fi** .

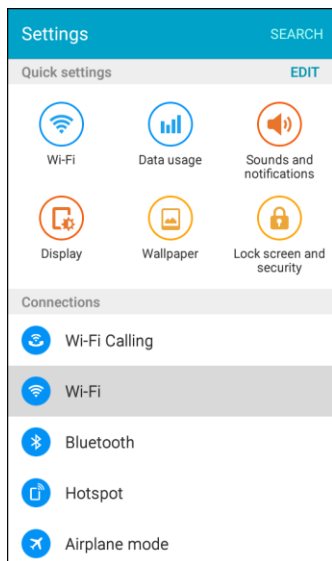

- ❖ The Wi-Fi settings menu appears.

3. Press and hold the name of the connected access point, and then tap **Forget network**.

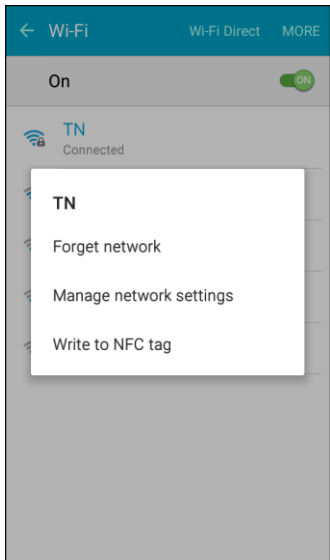


- ❖ Wi-Fi is disconnected and the network settings are removed.
- After “forgetting” an access point, you need to enter the correct password (and other network settings, if required) to reconnect.


## Wi-Fi Direct

Use Wi-Fi Direct to connect directly to other Wi-Fi Direct devices using only Wi-Fi, without a wireless access point (network) or via the Internet.

1. From home, tap **Apps**  > **Settings** .

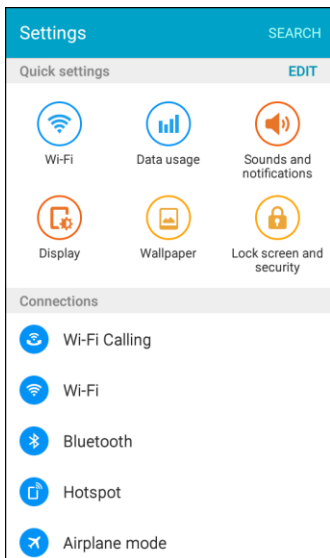

2. Tap **Wi-Fi** .

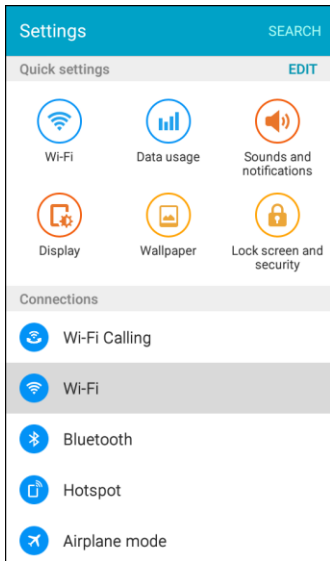


❖ The Wi-Fi settings menu appears.

3. Tap the **ON/OFF** switch to turn Wi-Fi on.




❖ Wi-Fi is enabled. You will see the names and security settings of in-range Wi-Fi networks.

4. Tap **Wi-Fi Direct**.

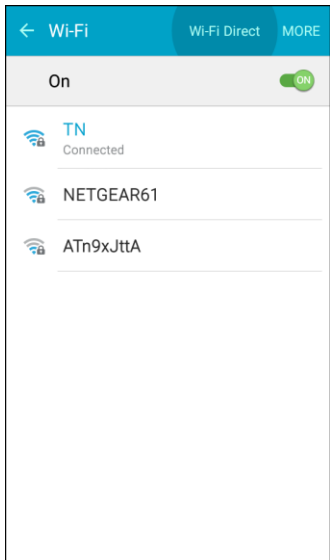

- ❖ The Wi-Fi Direct settings menu appears.
- Wi-Fi Direct and Wi-Fi are unavailable at the same time.

5. If a device is found, tap the device entry to connect.

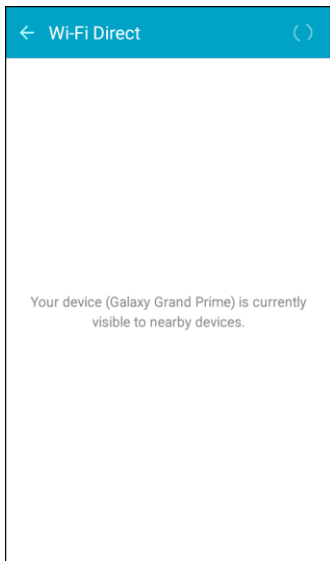

- If connected via Wi-Fi, you will see a confirmation. Follow the onscreen instructions.
6. Accept the connection on the other device.
- ❖ The phone is connected via Wi-Fi Direct.
  - If a connection is not accepted after a certain period, the connection request is cancelled.
  - To stop a connection, tap the device name on the Wi-Fi Direct list.

# Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually approximately 30 feet.

## Bluetooth Hints

**Problem:** I can't use Bluetooth.

**Solution:** Is your phone in airplane mode? Bluetooth is unavailable in airplane mode.

## Bluetooth Function Cautions

Information may not appear correctly on connected devices depending on the transferred data.

## Bluetooth Information

Bluetooth is a technology that enables wireless connection with PCs, Bluetooth devices with hands-free features, etc.

Function	Description
Audio output	Listen to music, etc., wirelessly.
Hands-free calls	Call hands-free, using Bluetooth-capable hands-free devices and headsets.
Data exchange	Exchange data with Bluetooth devices.


## Enable Bluetooth

Use the settings menu to enable or disable your phone's Bluetooth capabilities.


- Wireless connection to all Bluetooth functions is not guaranteed for the phone.
- The phone may not connect properly depending on the other device.
- Noise may be experienced with wireless calls and hands-free calls depending on the conditions.

To enable Bluetooth:

1. From home, tap **Apps**  > **Settings** .

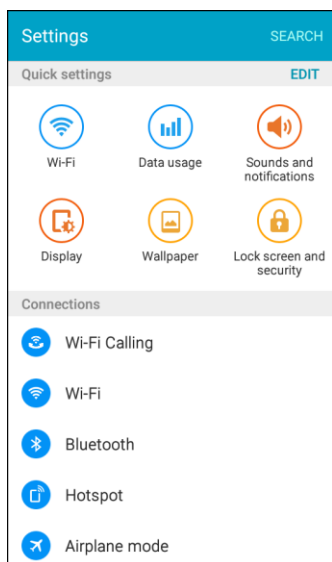


2. Tap **Bluetooth** .

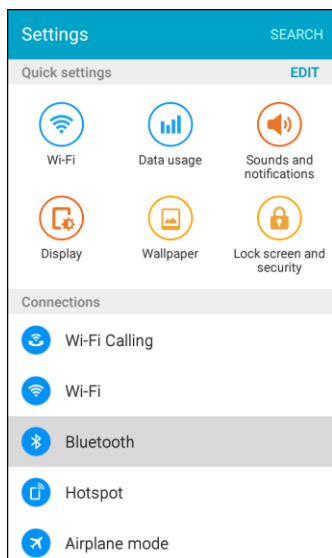

❖ The Bluetooth settings open.



3. Tap the **ON/OFF** switch to turn Bluetooth on.

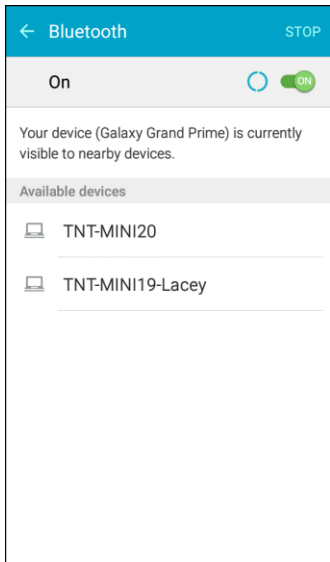

- ❖ Bluetooth is enabled.
- To disable Bluetooth, tap the **ON/OFF** switch again.

**Tip:** You can also turn Bluetooth on or off with the Quick settings button in the Notification panel. Drag the Status Bar down to display the Notification panel and then tap **Bluetooth** to turn Bluetooth on or off.

**Note:** Turn off Bluetooth when not in use to conserve battery power, or in places where using a wireless phone is prohibited, such as aboard an aircraft and in hospitals.


# Pair Bluetooth Devices

Search for and pair nearby Bluetooth devices. Saved Bluetooth devices can be connected simply.


**Note:** Before pairing, turn on Bluetooth on the other device and make sure it is visible or discoverable.

To pair Bluetooth devices:

1. From home, tap **Apps**  > **Settings** .

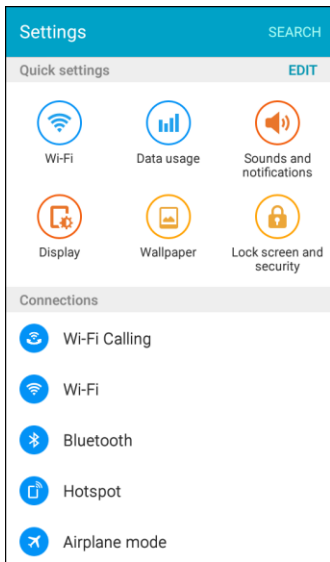


2. Tap **Bluetooth** .

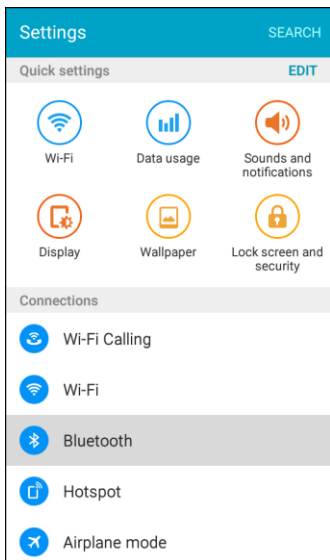

- ❖ The Bluetooth settings open.
  - Nearby devices that are visible or discoverable appear in the “Available devices” list.
  - If a target device is not detected, tap **SCAN** to search again.


3. Tap a device from the “Available devices” list, and follow the onscreen instructions to pair with the device. Methods to accept a Bluetooth connection differ depending on the device used.

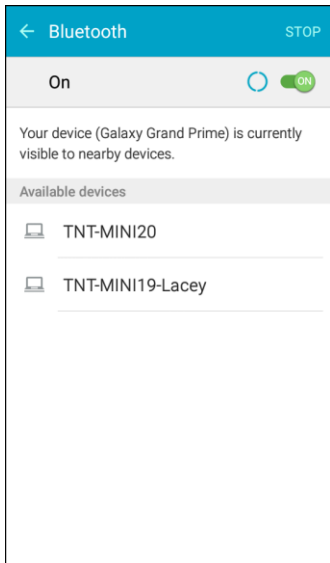

- ❖ The Bluetooth device is paired to your phone.

## Unpairing from a Paired Device

1. From the Bluetooth settings menu, tap **Settings**  next to the paired device you wish to unpair.

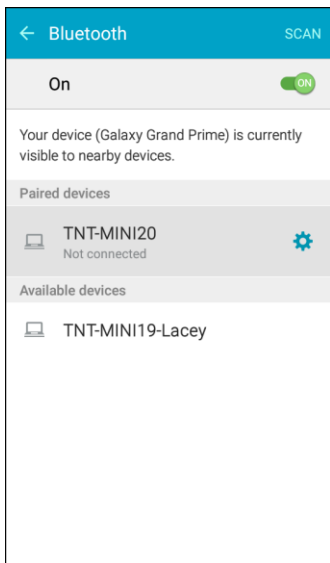


2. Tap **Unpair**.

- ❖ The device is unpaired from your phone. To make another connection with the device, you will need to pair again.


# Connect to a Paired Bluetooth Device

You can listen to music over a Bluetooth stereo headset, or have hands-free conversations using a compatible Bluetooth headset or car kit. It's the same procedure to set up stereo audio and hands-free devices.

1. From home, tap **Apps**  > **Settings** .

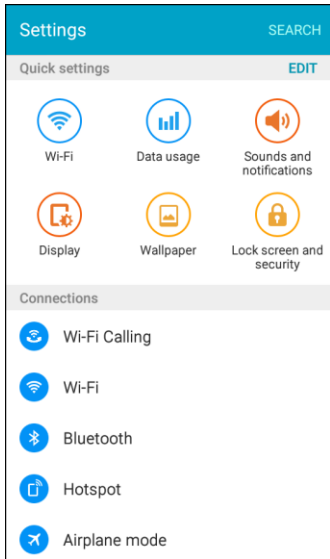


2. Tap **Bluetooth** .

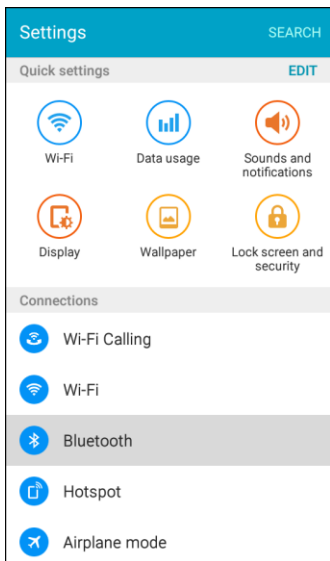

- ❖ The Bluetooth settings open.
  - Paired Bluetooth devices appear in the “Paired devices” list.

3. Tap a device from the “Paired devices” list.
  - ❖ Your phone connects to the paired device.

The pairing and connection status is displayed below the device's name in the Bluetooth devices section. When the device is connected to your phone, the Bluetooth connected icon  is displayed in the Status Bar. Depending on the type of device you have connected, you can then start using the headset or car kit to listen to music or make and receive phone calls.

**Note:** Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

## Share Information Using Bluetooth

You can use Bluetooth to transfer information between your phone and another Bluetooth-enabled device such as a phone or notebook computer.

### Types of Data You Can Send via Bluetooth

You can send the following types of information, depending on the device you are sending to:


- Images and videos
- Calendar events
- Contacts
- Audio files

The instructions below illustrate sharing information via Bluetooth by describing how to share a contact.

### Sending Contacts Data via Bluetooth


**Note:** Your phone must be paired with another Bluetooth-enabled device in order to send information.

1. From home, tap **Apps**  > **Contacts** .

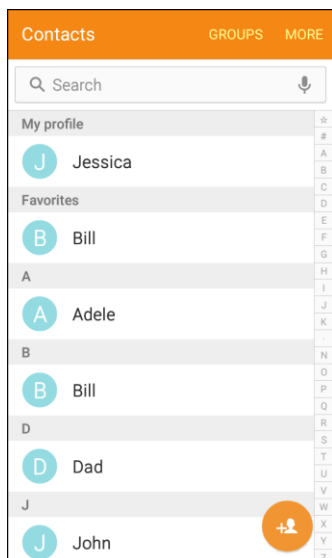


- ❖ You will see the Contacts list.


2. Tap a contact to send.

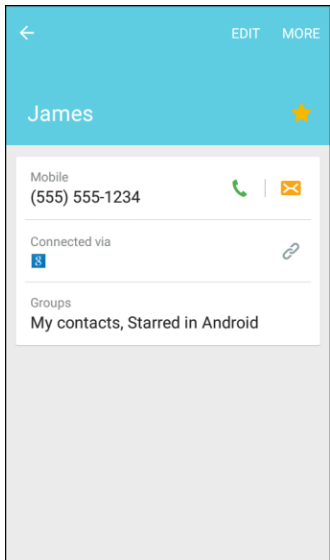

3. Tap **MORE** > **Share contact** > **Bluetooth**.

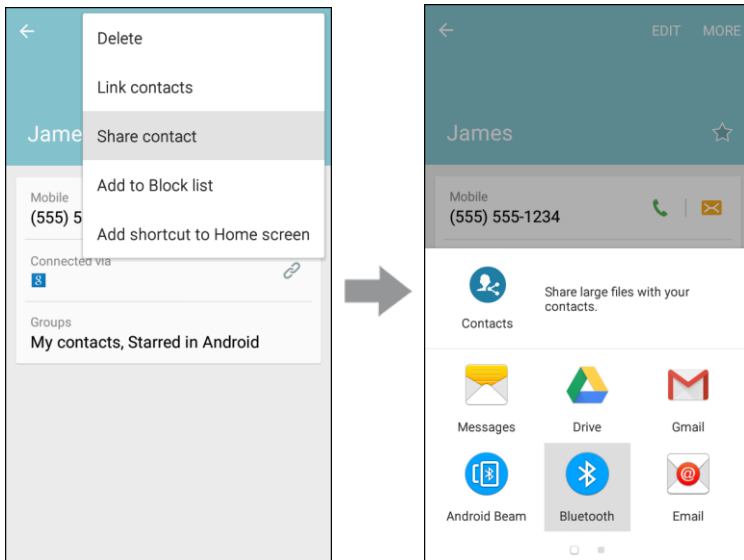

4. Tap a paired device to send the data.

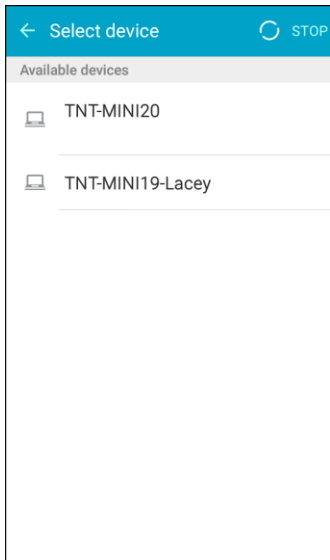


- ❖ The contact information is sent.
- If you see a message to confirm, follow the onscreen instructions.

## Receiving Data via Bluetooth

**Note:** Your phone must be paired with another Bluetooth-enabled device in order to send information.

1. When another device attempts to send a file to your phone via Bluetooth, you will see a request to accept the file.

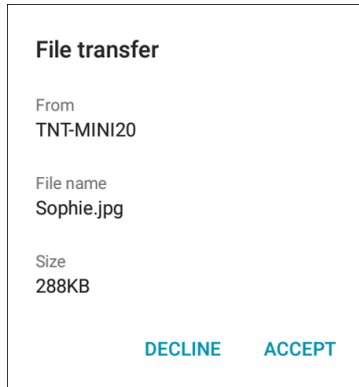

2. Tap **ACCEPT**.

- ❖ The file is sent to your phone.
  - When your phone receives a file, you will see a notification. To open the file immediately, drag the Status Bar down to display the Notification panel, and then tap the notification.
  - When you open a received file, what happens next depends on the file type:
    - Media files and documents are usually opened directly in a compatible application.
    - For a vCalendar file, select the calendar where you want to save the event, and then tap **Import**. The vCalendar is added to your Calendar events. (For more information on using the Calendar, see [Calendar](#).)
    - For a vCard contact file, received contacts are stored in the Contacts list.



# Sprint Worldwide Wireless Service

---

With your phone and global roaming service from Sprint Worldwide Wireless Service, you can make phone calls and use wireless data services around the globe on compatible CDMA networks. For a country-specific travel guide, select your phone and destination from [sprint.com/traveltips](http://sprint.com/traveltips).

## Activate Sprint Worldwide Service on Your Account

Before using your phone in global roaming mode, you must activate Sprint Worldwide service.

To activate Sprint Worldwide service:

- Chat with or email an international support rep by visiting [sprint.com/swwsupport](http://sprint.com/swwsupport).

– or –

Call Sprint Worldwide Customer support at 1-888-226-7212.

## Your Phone's SIM Card for International Roaming

Your phone comes with a preinstalled SIM (Subscriber Identity Module) card to support roaming on compatible networks.

**Note:** Your SIM card should be preinstalled. If you need to reinstall your SIM card, follow these instructions. The SIM included contains information specific to your phone and should be retained with the phone.

1. Remove the back cover and battery.






2. Carefully push the SIM card into the bottom slot.

**Caution:** Make sure that the card's gold contacts face down into the device and that the card is positioned as shown.

## Set Network Mode Options

In order to roam internationally on different types of network technology (CDMA/LTE), you may need to set your phone's network mode to allow use of a specific technology. Once set, your phone is designed to enter global roaming mode automatically when you activate your Sprint Worldwide service, meaning that it should automatically connect to an appropriate CDMA/LTE network when you travel.

To set your network mode options manually:

1. From a Home screen, tap **Apps**  > **Settings**  > **Mobile networks** .
2. Tap **Network mode** to configure options:
  - To allow connections to CDMA or LTE networks only, tap **CDMA** or **LTE/CDMA**.

## Make and Receive Worldwide Calls

When travelling on international networks, you can place and answer calls as you would on the Sprint network (see [Place and Answer Calls](#)), although some additional instructions may be required to place a call. Some features and services are not available in all countries. For more information on services that are available while roaming, visit [sprint.com/sww](http://sprint.com/sww).


### Make Calls Using Plus (+) Code Dialing

Placing calls from one country to another country is simple with the Plus (+) Code Dialing feature. When placing international calls, you can use Plus Code Dialing to enter the appropriate international access code for your location (for example, 011 for international calls placed from the United States).

**Note:** Plus Code Dialing is only available when roaming internationally on certain CDMA networks in the United States, Canada, and the Caribbean.

**Note:** International access codes and dialing information are available online at [sprint.com/sww](http://sprint.com/sww).

To use Plus Code Dialing to place an international call:

1. From a Home screen, tap **Phone**  to display the phone screen.
2. Dial the appropriate sequence for your location:
  - If you are on the CDMA network outside Canada or the Caribbean, enter the international access code for the country from which you are calling.
3. Tap  to insert the US country code, and then enter the area code and number.
4. Tap  to place the call.

# Sprint International Voicemail Service

Your Sprint voicemail will follow you as you travel. All of your unanswered calls will be forwarded to your Sprint voicemail. You will need to be sure your voicemail box is already set up and that you know your voicemail password.

**Note:** Sprint voicemail may not be available on all networks; check [sprint.com/sww](http://sprint.com/sww) for service information.




## International Voicemail Troubleshooting

There are a few tips to keep in mind when using Sprint voicemail while traveling.

- Some carriers may not support voicemail indicators. It may be necessary to call your voicemail to see if you have any new messages.
- If you hear the message “Please enter the number of the subscriber you wish to call,” enter your 10-digit wireless phone number.

## Set Up Your Voicemail Access Number for International Use

To simplify accessing your Sprint Voicemail while travelling, you can set up your voicemail access number as a Contacts entry. Save the voicemail access number with the international dialing code to make it faster and easier to access your messages while roaming internationally.

1. From a Home screen, tap **Apps**  > **Contacts** .
2. Tap  to add a contact.
3. If you have accounts set up on your phone, tap a storage account.
4. Enter a name for the new contact, for example, “Voicemail”.
5. Touch and hold  , and then tap  (+1), your area code, and your wireless phone number.
6. Tap **SAVE**.

## Access Your Voicemail Internationally

You will need to call your voicemail number to access your voicemail while roaming internationally.

### New Message Indicators

Your voicemail message indicators may be displayed differently when roaming internationally.

- A “Message Waiting” indicator icon or a text message is displayed when a voicemail message is received.
- You may see “Missed Call” on your screen prior to receiving a message notification.
- You must call voicemail in order to retrieve messages. Follow the instructions on the previous page to store your voicemail number for easy access.

### Retrieve Voicemail Messages

The voicemail retrieval process while travelling is the same as on the Sprint Network; however, you will be required to enter your voicemail password.

To retrieve your voicemail messages:

1. From a Home screen, tap **Phone**  > **Contacts** tab, tap the voicemail entry and then tap the number to call it.
2. When your voicemail answers, tap , enter the password, and tap  to access your voicemail.

## International Data Roaming

Sprint Worldwide Wireless Service can also keep you connected via email and Web browsing when travelling in countries in which Sprint offers data service. Data services are available on compatible CDMA networks. Check [sprint.com/sww](http://sprint.com/sww) to determine the services available where you are travelling.

**Note:** Prior to using your Sprint Worldwide Data Services, you must establish and utilize your CDMA data services domestically on the Sprint Network.

### Get Started with Sprint Worldwide Data Services

To use Sprint Worldwide Data Services, you will need to have these services activated on your account.

- To activate, call Sprint Worldwide Customer Support at **1-888-226-7212**. Representatives are available 24 hours a day, 7 days a week to assist you.

# International Roaming Status Messages

You may receive status messages under certain conditions. Before contacting Sprint Worldwide Customer Support, note the message, numeric code, and the conditions under which it appeared. The following table lists and describes the status messages.

Status Messages	Message Description
<b>Number Not in Service</b>	The number that you entered is not valid.
<b>User Not Available</b>	The phone that you called is either busy, out-of-range, or turned off. Please try again later.
<b>User Not Authorized</b>	The phone that you called is either busy, out-of-range, or turned off. Please try again later.
<b>Please Try Later</b>	This service is temporarily not available. Please try again later.
<b>Service Restricted</b>	Service may not be activated properly. Please contact Sprint Customer Service to report the issue for resolution.
<b>Service Not Available</b>	This feature is not available on the current network.
<b>Emergency Calls Only</b>	Either the service is not activated properly or the current network is available for emergency calling only. Adjust your network settings to check for other available networks. If service is still not available after adjusting the settings, contact Sprint Customer Service to report the issue for resolution.
<b>System Busy. Try Later</b>	The system is experiencing heavy traffic. Please try again later.
<b>Service Conflict</b>	This service cannot be enabled because an incompatible service has already been turned on.
<b>Please Try Again</b>	An error occurred. Note the error code and try again.
<b>Self Check Error</b>	A fault was detected with your phone. If this error recurs, note the error and contact Sprint Customer Service.
<b>Self Check Fail</b>	An operational fault was detected with your phone. Note the numeric code, turn your phone off, and contact Sprint Customer Service.

Status Messages	Message Description
<b>Wrong PIN</b>	You have entered an incorrect SIM PIN number. You have only three attempts to enter your PIN. After a third unsuccessful attempt, your phone will be locked and you will have to call Sprint Customer Service to have it unlocked. Sprint sets the default to PIN off; if you elect to enable the PIN then you will need to contact Sprint for the default PIN and PUK.
<b>PIN Blocked. Call Your Provider</b>	An incorrect SIM PIN was entered three consecutive times. You will be unable to send or receive calls on your phone. Contact Sprint Customer Service to obtain the PIN Unblocked Key (PUK) code. Sprint sets the default to PIN off; if you elect to enable the PIN then you will need to contact Sprint for the default PIN and PUK.
<b>Insert SIM</b>	Your SIM Card is not being detected. Please check to ensure that you have inserted the SIM Card.
<b>Check SIM Card</b>	Please check your SIM card to make sure it is properly inserted.

## Contact Sprint for Assistance with International Service

If you experience any issues with voice or data services while outside of the United States, Sprint offers customer support 24 hours a day. In the event that you do experience an issue, try the following actions:

- First try powering your phone off and then back on; this will force your phone to reregister with the network.
- Try manually selecting another network. Information for selecting networks can be found in the phone guide.

If neither of these actions resolves your issue, you will need to contact customer service (see below). When calling to report an issue, the following information will be beneficial in trying to resolve your issue as quickly as possible:

- Your wireless phone number.
- The city and country you are travelling in.
- Any error message that displays on your phone or that you heard when trying to place a call.
- If the issue is with data, were you able to place voice calls?
- If the issue is with voice service, were you able to access data?

**Please call the numbers below if you need assistance:**

While in the United States: Call **1-888-226-7212**.

While traveling outside the United States:

- **In CDMA mode:** Enter the country code, and then dial **1-817-698-4199**.

There is no charge for this call from your wireless phone.

**From a landline phone when outside the United States:**

Sprint Worldwide Customer Support can be reached from a landline phone at **1-817-698-4199**. Access or connection fees may apply. The toll free numbers below can also be used to contact Sprint Worldwide Customer Support in the following countries:

Country	From Landline Phone
Canada	1-866-805-9890
Caribbean (Anguilla, Barbados, Cayman Islands, and Dominica)	1-866-313-6672
France	0800-903200
Germany	0800-180-0951
Italy	800-787-986
Mexico	001-877-294-9003
Trinidad and Tobago	1-800-201-7545
United Kingdom	0808-234-6616

**Note:** This toll free service is available on ordinary landline phones and some public pay phones. This service does not cover any hotel access charges.

# Settings

The following topics provide an overview of items you can change using your phone's **Settings** menus.

## Basic Settings

From the Home screen, tap **App**  > **Settings**  to access your phone's settings menu.

The table below outlines the top-level settings categories.

Category	Description
<b>Wi-Fi Calling</b>	Enable and set Wi-Fi calling options.
<b>Wi-Fi</b>	Enable and set Wi-Fi options.
<b>Bluetooth</b>	Enable Bluetooth connections.
<b>Hotspot</b>	Use the Hotspot feature to share your phone's data connection with other devices via Wi-Fi.
<b>Airplane mode</b>	Turn Airplane mode on or off.
<b>Data usage</b>	Check your phone's data usage.
<b>Mobile networks</b>	View and configure your mobile network connections and settings.
<b>NFC and payment</b>	Enable Near-Field Communication (NFC) functions, including Tap and pay services.
<b>More connection settings</b>	Set wireless and network functions, including printing services, setting up a Virtual Private Network (VPN), and selecting a default messaging app.
<b>Sounds and notifications</b>	Set ringtone, operation tones, etc.
<b>Display</b>	Set display features, font, brightness, etc.
<b>Motions and gestures</b>	Enable phone controls by using motions and gestures.
<b>Applications</b>	Manage applications, default apps, and system processes.
<b>Wallpaper</b>	Set wallpaper for the Home and Lock screens.
<b>Location</b>	Manage location services.




<b>Category</b>	<b>Description</b>
<b>Lock screen and security</b>	Set your phone's Lock screen options. Set security features such as device administrators, encryption, and trusted credentials.
<b>Easy mode</b>	Enable Easy mode for your phone, simplifying the layout and interface.
<b>Accessibility</b>	Set accessibility options such as screen magnification, hearing aid compatibility, etc.
<b>Accounts</b>	Set up accounts such as Samsung, Google, and more.
<b>Backup and reset</b>	Set up backup options for your phone, as well as reset the phone to its factory defaults.
<b>Language and input</b>	Set up language and input methods for your phone.
<b>Battery</b>	Display the battery charge as a percentage on the Status Bar, view battery usage by application and system process, and configure power saving modes.
<b>Storage</b>	View total and available system memory.
<b>Date and time</b>	Set your phone's date and time.
<b>Activate this device</b>	Activate your device with the Sprint network.
<b>System Update</b>	Update your system's software, PRL, and Profile.
<b>About device</b>	View device status, legal information, and hardware information about your device.

## Access Settings

- From home, tap **Apps**  > **Settings** .

– or –

Drag the Status Bar down to open the Notification panel, and then tap **Settings** .

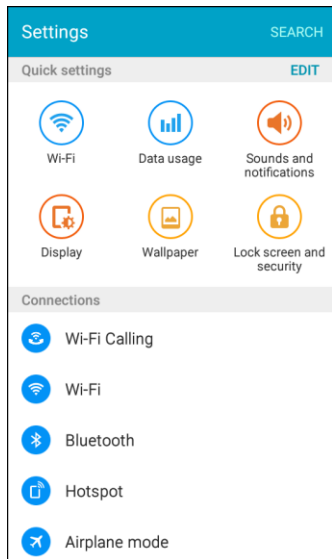


- ❖ The settings menu opens.

## Configure Settings


At the top of the main settings menu is a section of Quick settings. You can include up to nine primary settings options in the Quick settings menu.


To customize Quick settings:

1. From home, tap **Apps**  > **Settings** .

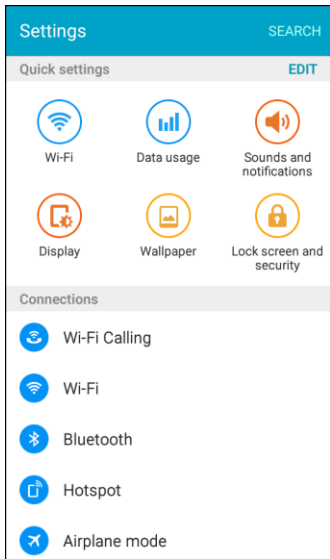

2. Tap **EDIT**.

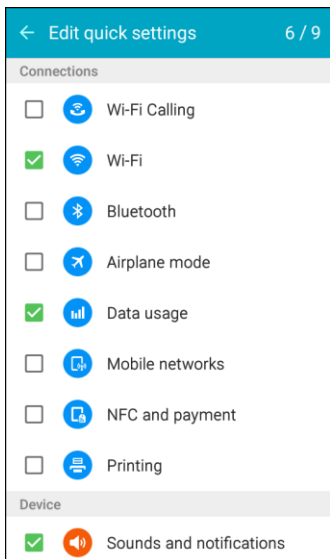


3. Check or uncheck options to include in Quick settings. The counter at the top right corner indicates how many items have been selected out of the maximum of 9.
4. Tap the **Back** key  to return to the main settings menu.


# Wi-Fi Calling Settings


Wi-Fi Calling uses Wi-Fi networks to help improve voice and data coverage. It sends and receives calls and text messages over a Wi-Fi network and may offer better coverage in buildings and areas of poor cellular reception.


1. From home, tap **Apps**  > **Settings** .

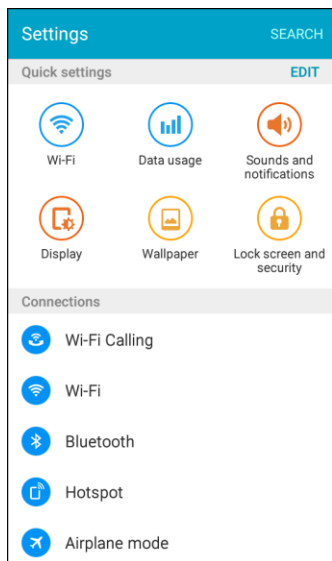

2. Tap **Wi-Fi Calling**  and follow the prompts to set up Wi-Fi Calling.

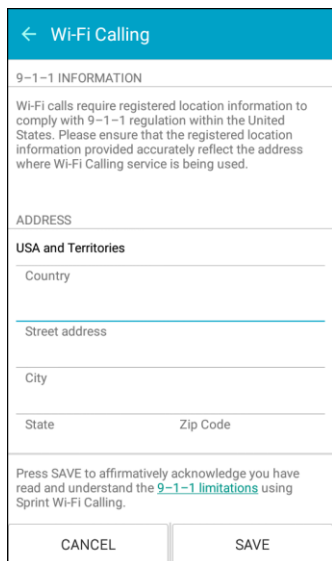



- ❖ Wi-Fi Calling is set up.
- You will see the Wi-Fi Calling icon  in the Status Bar when Wi-Fi Calling is active and you are connected to a saved Wi-Fi network.


- If Wi-Fi calling is enabled and you are not in range of a saved Wi-Fi network, you'll see the Wi-Fi Calling disconnected icon  in the Status Bar.

## Disable Wi-Fi Calling

1. From home, tap **Apps**  > **Settings** .

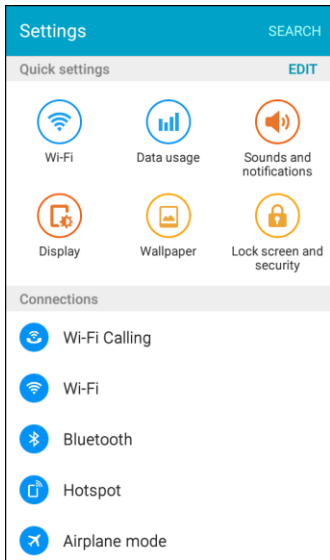

2. Tap **Wi-Fi Calling** , and then tap the **ON/OFF** switch to turn Wi-Fi Calling off.

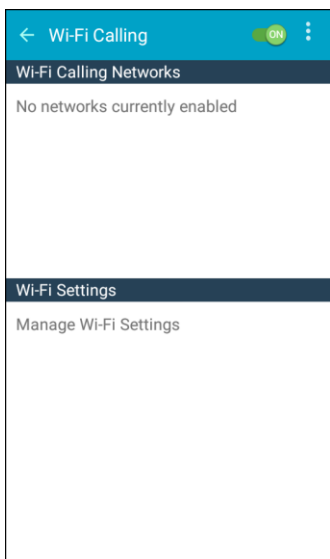


# Wi-Fi Settings Menu


The Wi-Fi settings menu lets you turn Wi-Fi on or off, set up and connect to available Wi-Fi networks, and configure advanced Wi-Fi options.

For more information about using Wi-Fi, see [Wi-Fi](#).

1. From home, tap **Apps**  > **Settings** .

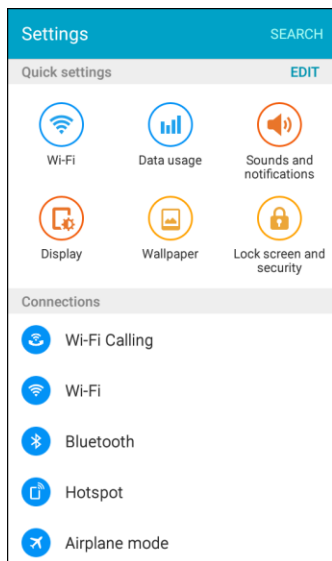


2. Tap **Wi-Fi** .

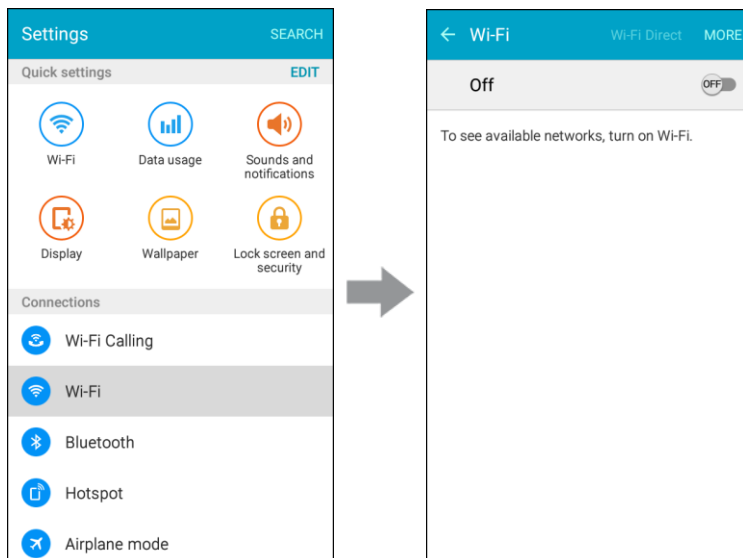


- ❖ The Wi-Fi settings menu appears.

3. Tap the **ON/OFF** switch to turn Wi-Fi on.

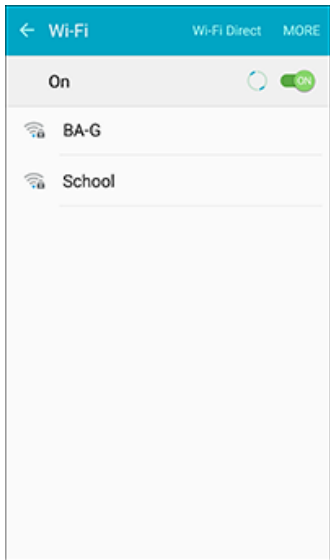

- ❖ Wi-Fi is enabled. You will see the names and security settings of in-range Wi-Fi networks.
  - To disable Wi-Fi, tap the **ON/OFF** switch again.

4. Tap a Wi-Fi network, enter the password, and tap **CONNECT**.

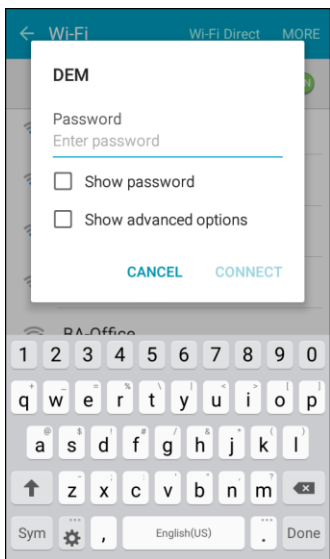

- ❖ Your phone is connected to the selected Wi-Fi network.
  - The password for a household wireless LAN router is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information. For password for a public wireless LAN, check with user's service provider.
  - Entering a password is not required if an access point is not security protected.

## Connect to a Wi-Fi Network via WPS

Wi-Fi Protected Setup (WPS) is a network security standard that allows you to easily secure a wireless network connection between your phone and a router.

To connect using a WPS button:

1. From Wi-Fi settings, tap **MORE > WPS push button**.
2. Tap the WPS button on your router.
3. Follow the prompts to complete the connection.

To connect using a Personal Identification Number (PIN):

1. From Wi-Fi settings, tap **MORE > WPS PIN entry**.
2. Enter the PIN displayed on your router.
3. Follow the prompts to complete the connection.

## Smart Network Switch

Smart network switch lets your phone automatically switch to the wireless network data connection when the current Wi-Fi connection is unstable.

1. From the Wi-Fi settings menu, tap **MORE > Smart network switch**.
2. Tap **On** to enable the feature.


## Advanced Wi-Fi Settings

The advanced Wi-Fi settings let you set up and manage wireless access points.

To access Advanced Wi-Fi settings:



- From the Wi-Fi settings menu, tap **MORE > Advanced**.

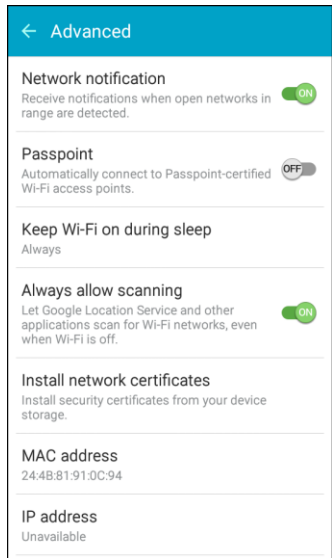


From there, you can configure the following settings:

- **Enable Notification When Open Networks Are Available:** Tap **Network notification** to turn the option on or off.
- **Automatically connect to Passpoint-certified Wi-Fi access points:** Tap **Passpoint** to turn this option on or off.
- **Set Timing for Pausing a Connection:** Tap **Keep Wi-Fi on during sleep** and then select a setting.
- **Allow Background Scanning for Wi-Fi Networks (Even When Wi-Fi Is Turned Off):** Tap **Always allow scanning** to turn the option on or off.
- **Install Network Security Certificates:** Tap **Install network certificates** and select a certificate.
- **Check MAC Address:** From the Advanced menu, see the address listed under **MAC address**.
- **Check IP Address:** From the Advanced menu, see the address listed under **IP address**.


# Bluetooth Settings

Your phone's Bluetooth capabilities let you use wireless headsets, send and receive pictures and files, and more. For details on your phone's Bluetooth usage, see [Bluetooth](#).

1. From home, tap **Apps**  > **Settings** .

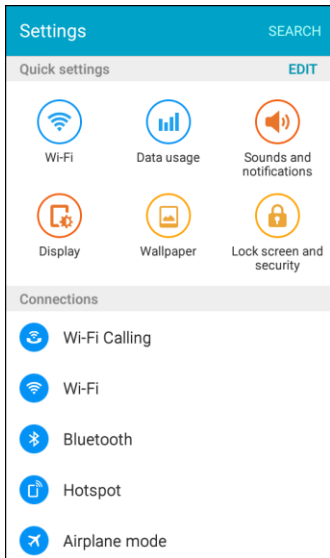

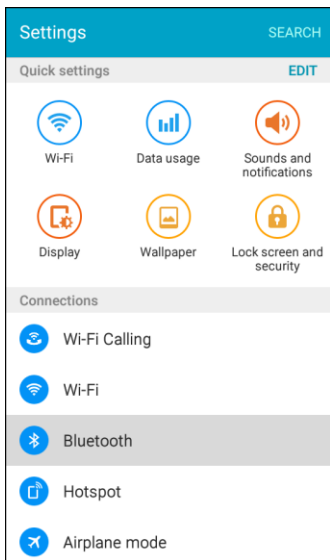


2. Tap **Bluetooth** .



- ❖ The Bluetooth settings open.

## Bluetooth Settings Operations

- **Enable Bluetooth:** In Bluetooth settings, tap the **ON/OFF** switch to enable.
  - When enabled, confirmation appears for your phone to be discoverable by other devices. Follow the onscreen instructions.
- **Pairing Bluetooth Devices:** Make sure the other devices are set to be discovered. From Bluetooth settings, tap the device name in “Available devices” and follow the onscreen instructions.
  - Depending on the device, you may be required to enter or accept a passkey.
  - If the target device does not appear, tap **SCAN** to search again.
  - This setting is available when Bluetooth is enabled.
- **Change the Name of a Paired Device:** From Bluetooth settings, tap **Settings**  next to a paired device name, tap **Rename**, enter a new name, and tap **RENAME**.
  - Emoji cannot be used in a device name.
  - This setting is available when Bluetooth is enabled.
- **Cancelling Pairing:** From Bluetooth settings, tap **Settings**  next to a paired device name, and then tap **Unpair**.
  - This setting is available when Bluetooth is enabled.
- **Enable Service from Paired Device:** From Bluetooth settings, tap **Settings**  next to a paired device name, and then tap the listing under **Use for**.
  - If a confirmation prompt appears, follow the onscreen instructions.
  - This setting is available when Bluetooth is enabled.
  - This setting is available when the paired device is providing a service.
  - Tap the **ON/OFF** switch to turn the option on.
- **Search for Other Devices:** From Bluetooth settings, tap **SCAN**.
  - This setting is available when Bluetooth is enabled.
- **Check Files Received via Bluetooth Transfer:** From Bluetooth settings, tap **MORE > Received files** and follow the onscreen instructions.
- **Rename Your Device for Bluetooth:** From Bluetooth settings, tap **MORE > Rename device**. Enter a new Bluetooth name for your device and then tap **DONE**.

# Hotspot Settings


Use Hotspot to share your phone's data connection with other devices via Wi-Fi.

**Note:** Using Hotspot consumes battery power and uses data services


## Turn Hotspot On or Off

To conserve battery life, turn Hotspot on when you need it and turn it off when you are finished. You can control Hotspot from Settings.

1. From home, tap **Apps**  > **Settings** .

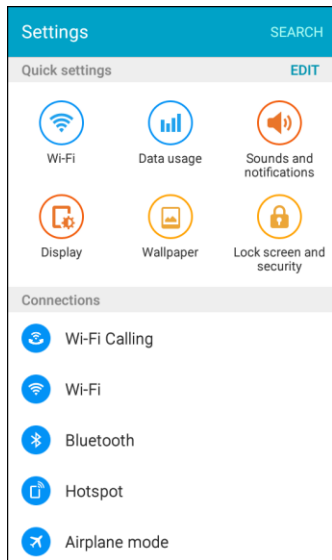

2. Tap **Hotspot** .

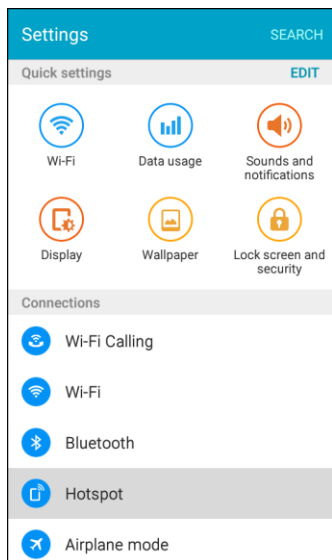




- ❖ The Hotspot settings open.


3. Tap the **ON/OFF** switch to turn Hotspot on or off.

**Note:** Turning on Hotspot will turn off Wi-Fi.

## Configure Hotspot

Set up Hotspot to your preferences.

1. From home, tap **Apps**  > **Settings** .
2. Tap **Hotspot** .

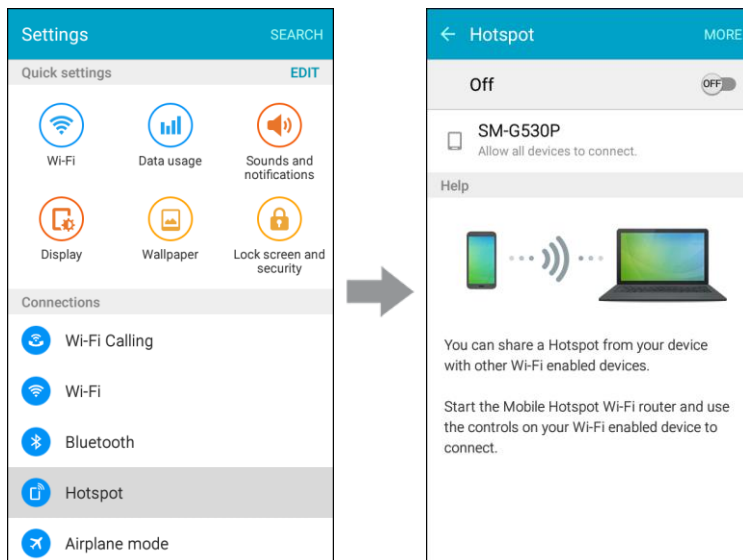

3. Tap **MORE** to set these options:
  - **Allowed devices:** Control which devices can use your hotspot. See [Allowed Devices](#) below for details.
  - **Configure Hotspot:**
    - **Network name:** View and change the name of Hotspot.
    - **Hide my device:** When enabled, Hotspot is not visible to other Wi-Fi devices during a scan. Other devices can still connect to Hotspot, but will have to set up the connection manually with your Network SSID and Password.
    - **Security:** Choose the security level for Hotspot.
    - **Password:** If you choose a security level that uses a password, set a password.
    - **Show password:** When enabled, the contents of the Password field are visible.
    - **Show advanced options:** When enabled, you can access advanced options, including Broadcast channel, to specify the channel your device uses for Hotspot, and you can set the maximum number of connections to Hotspot.

- **Timeout settings:** Choose a time period, after which Hotspot will automatically turn off if there is no activity.
- **LAN settings:** View and configure settings related to using Hotspot as a Local Area Network.
  - **IP address:** View the default IP address, or tap to enter a valid IPv4 address.
  - **Subnet mask:** View the default subnet mask, or tap to enter a subnet mask.
  - **DHCP:** Tap to enable or disable DHCP. When DHCP is enabled, your phone assigns IP addresses to devices that connect to Hotspot.
  - **Starting IP:** When DHCP is enabled, view the default starting IP address for assigning IP addresses to connecting devices, or enter a valid IPv4 address. When other devices connect to your device using DHCP, the IP address your phone assigns will be between the Starting IP and Ending IP.
  - **Ending IP:** When DHCP is enabled, view the default ending IP address for assigning IP addresses to connecting devices, or enter a valid IPv4 address. When other devices connect to your device using DHCP, the IP address your phone assigns will be between the Starting IP and Ending IP.
  - **Lease time:** When DHCP is enabled, set a length of time a connected device may use an assigned IP address.
  - **Maximum DHCP users:** When DHCP is enabled, set the maximum number of devices allowed to connect to Hotspot.


## Allowed Devices

Control whether devices can connect to Hotspot with the Allowed devices list. After you add devices to the list, they can scan for your phone and connect using your phone's Hotspot name and password.

**Note:** Using Hotspot consumes battery power and uses data services.

1. From home, tap **Apps**  > **Settings** .

2. Tap **Hotspot** .

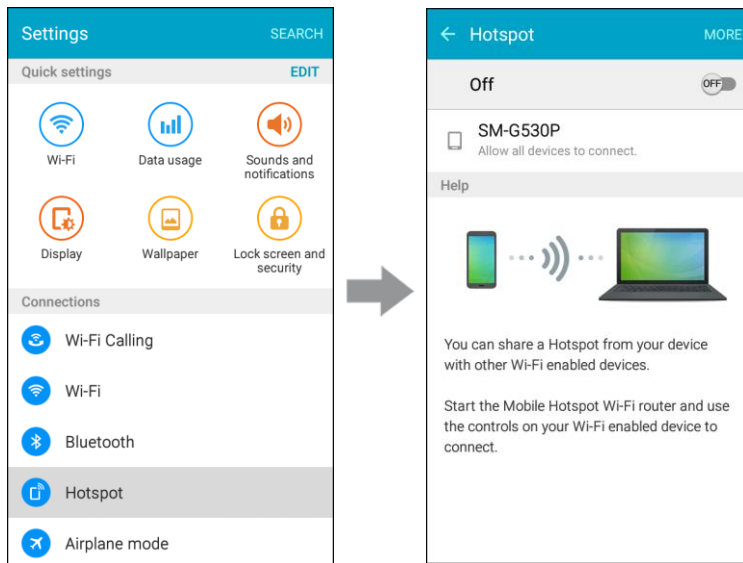

3. Tap **MORE** > **Allowed Devices**.
4. Tap **ADD**, and then enter the other device's **Device name** and **MAC address**. Consult the other device's settings to find these details.
5. Tap **OK** to add the device to the Allowed devices list.


## Airplane Mode

When you enable Airplane mode, your phone disconnects from all networks, meaning you cannot use make calls, send or receive messages, or access the Internet. It also turns off other connectivity features, such as Wi-Fi and Bluetooth.


While in airplane mode, you can use other features of your phone, such as playing music, watching videos, or other applications.

To use Wi-Fi and Bluetooth after enabling Airplane mode, turn them on either in Settings or on the Notification panel.

1. From home, tap **Apps**  > **Settings** .

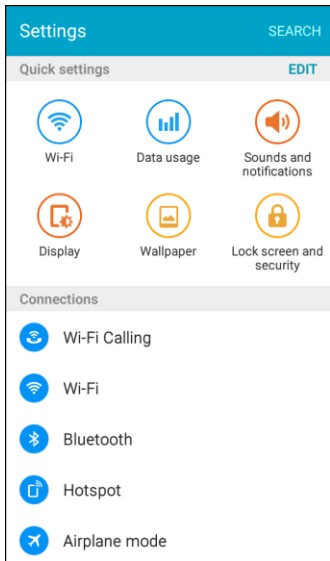


2. Tap **Airplane mode** .

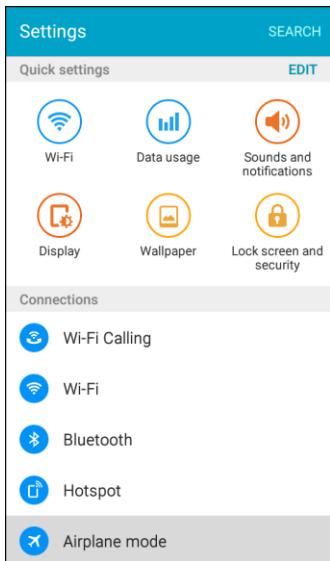



3. Tap the **ON/OFF** switch to enable or disable Airplane mode.

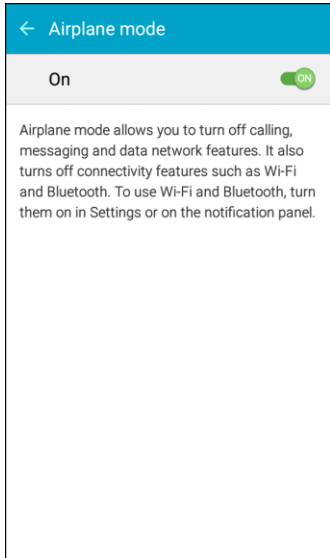


**Note:** You can also enable or disable Airplane Mode through the Notification panel quick settings (drag down the Status Bar and tap **Airplane mode**), or through the **Power** key (press and hold the **Power** key and then tap **Airplane mode**).


## Data Usage Settings

The Data usage menu lets you view your phone's mobile and Wi-Fi data usage, set data limits, restrict hotspot usage, and more.

1. From home, tap **Apps**  > **Settings** .

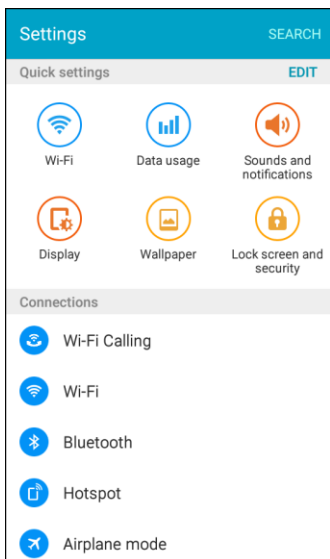

## 2. Tap **Data usage** .

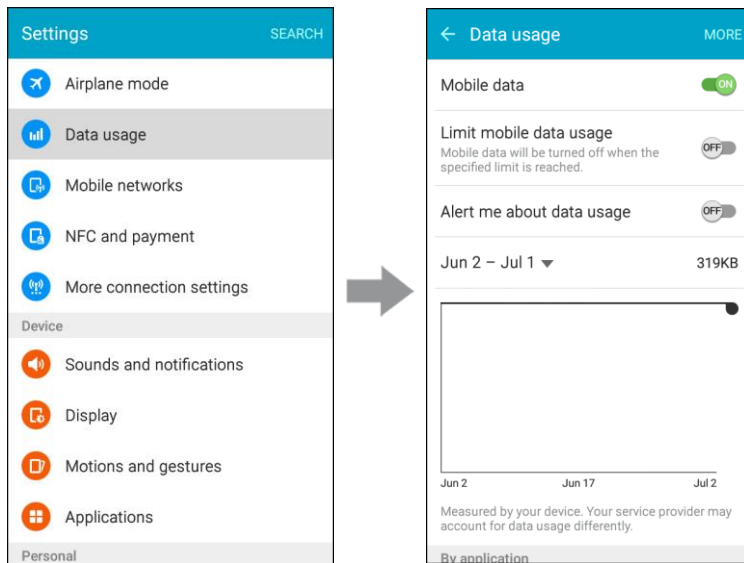

❖ The data usage window opens.

### Data Usage Settings Operations

- **Enable Mobile Data:** Tap the **ON/OFF** switch next to Mobile data.
- **Enable Restrictions on Mobile Data Usage:** Tap the **ON/OFF** switch next to **Limit mobile data usage**, and then drag the horizontal limit slider up or down to set the data usage limit.
  - This setting is available when Mobile data is enabled.
- **Set Amount for Alert When Data Usage Increases:** Tap the **ON/OFF** switch next to **Alert me about data usage**, and then drag the horizontal warning slider up and down to set an amount.
  - Data usage amounts are approximate. Actual amounts may differ.
  - This setting is available when Mobile data is enabled.
- **Set Dates for Resetting Data Usage:** Tap the date range to set the data usage measuring cycle.
  - This setting is available when Mobile data is enabled.
- **Check Data Usage for Each Application:** Tap an app name to see its usage for the period.
- **Enable Restriction on Mobile Data in Background:** Tap **MORE > Restrict background data > OK**.
  - The availability of roaming services is dependent on your service plan. Check with your carrier and service plan for details.
  - This setting stops some apps and services from working unless your phone is connected to a Wi-Fi network.
  - This setting is available when Limit mobile data usage is on.


- **View Both Mobile Data and Wi-Fi Usage:** Tap **MORE > Show Wi-Fi usage**.
  - When Show Wi-Fi usage is enabled, you will see a Wi-Fi tab at the top of the Data usage window. Tap the tab to view your phone's Wi-Fi data usage.
- **Restrict networks:** Tap **MORE > Restrict networks**.
  - Restrict background apps from using selected Mobile Hotspots. You can also set apps to warn you before using these networks for large downloads.

## Mobile Networks Settings


The Mobile networks settings menu allows you to configure your mobile network connections.

Set options for network selection and data service.

1. From home, tap **Apps**  > **Settings** .

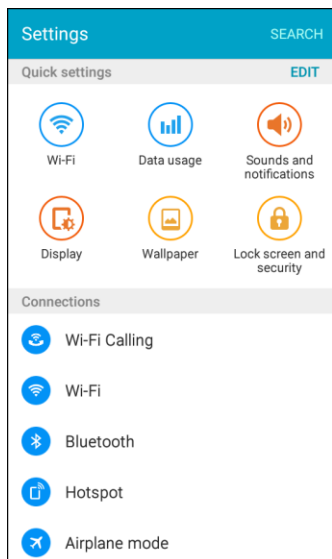

## 2. Tap **Mobile networks** .

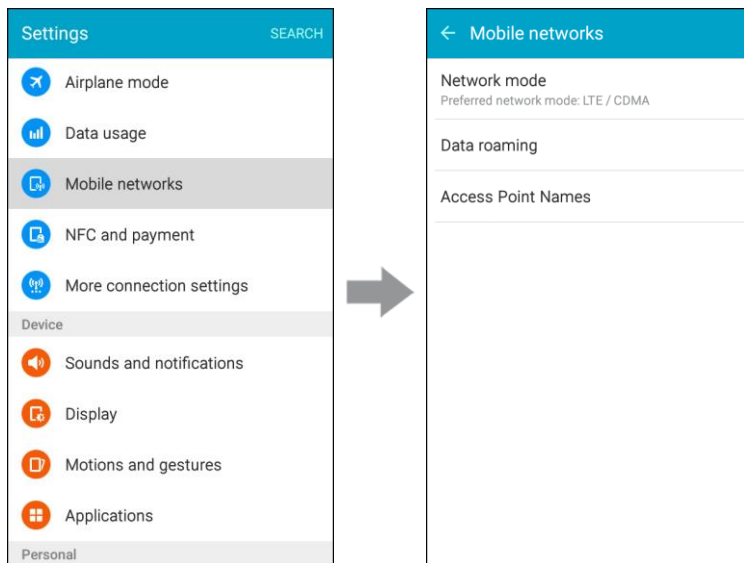

## 3. Configure options:


- **Network mode:** Choose a preferred network mode (LTE/CDMA or CDMA).
- **Data roaming:** When you are outside your home network area, your phone can still connect to other networks that your provider supports via roaming. There may be additional costs for accessing networks while roaming, so you may want to control your phone's roaming behavior with Roaming settings.
  - **Roaming network:** Select a roaming default. Choose **Home only**, to only connect to the Sprint network, or **Automatic** to allow connections to Sprint's partner networks, when available.
  - **Roaming guard:** Choose options for displaying an onscreen roaming notice for certain functions. Enable or disable roaming notices for Voice and Data for Domestic CDMA, and Voice, Data and Outgoing text message for International CDMA networks.
  - **Roaming Settings:** Choose options for roaming, including Voice and Data for Domestic CDMA and International CDMA networks.
- **Access Point Names:** View, configure, and add access point names (APNs) for your phone's data connection.

# NFC and Payment


NFC and payment uses the Near-Field Communication (NFC) feature of your phone. You can send information using NFC, including payment through mobile payment services at businesses that support this function.

## Access NFC and Payment

1. From home, tap **Apps**  > **Settings** .

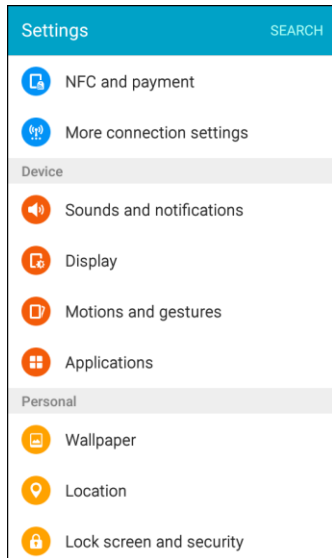


2. Tap **NFC and payment** .

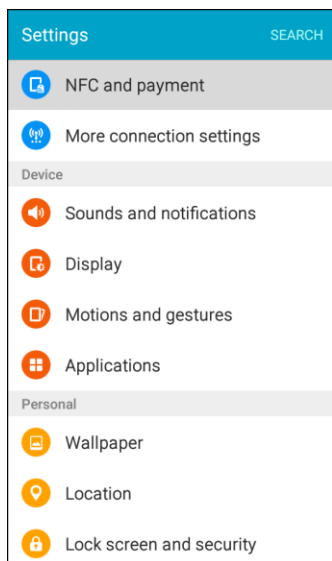


3. Tap settings to configure them.
  - ❖ Your settings are saved and implemented.

## Enable NFC and Android Beam

1. From home, tap **Apps**  > **Settings**  > **NFC and payment** .

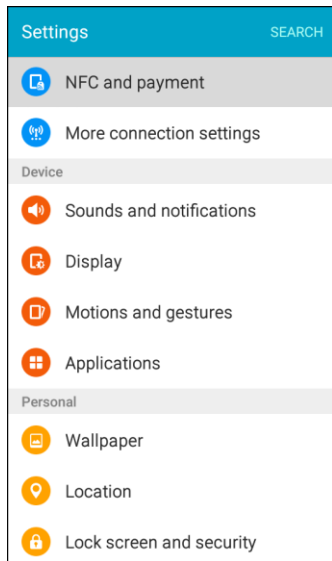

2. Tap **NFC**.

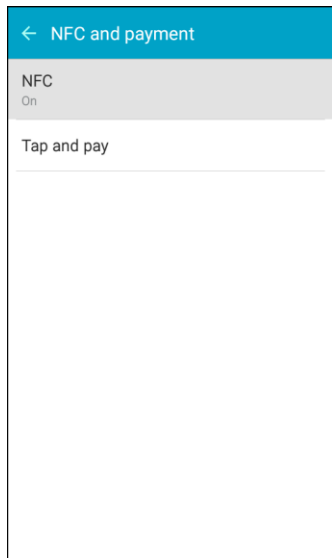


3. Tap the **ON/OFF** switch to enable NFC.



4. Tap **Android Beam**.



5. Tap the **ON/OFF** switch to enable Android Beam.

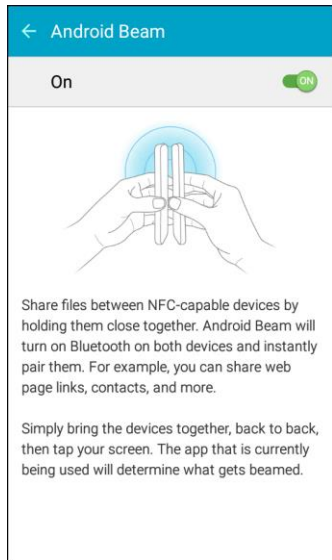


- ❖ NFC and Android Beam are enabled.

## Tap and Pay

With your phone and a payment app, you can use your phone to pay for items by tapping it to an item at the point-of-purchase. You must have a payment app set up on your phone to use it with Tap and Pay.


**Note:** Tap and Pay payment apps may be downloaded from Google Play store. See [Google Play Store](#).

1. From home, tap **Apps**  > **Settings**  > **NFC and payment** .

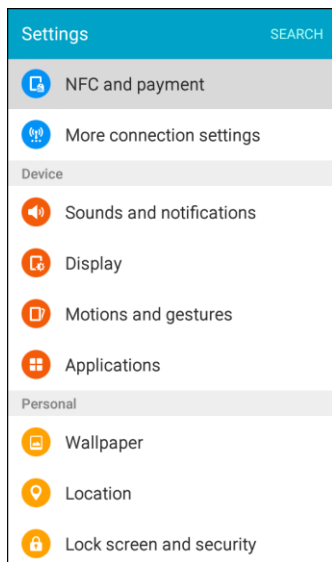



2. Tap **Tap and pay**.

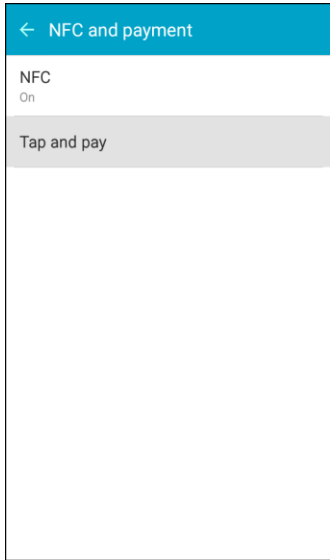

- ❖ Tap and pay payment apps you have installed are display.
- Available options depend on the payment app(s) you have set up on your phone.

## More Connection Settings


The More connection settings menu provides access to additional network options, such as default messaging app, VPN, mobile networks, and printers (if available).

### More Connection Settings Options


Setting	Description
<b>Tethering</b>	Share your device's mobile data connection via USB or Bluetooth.
<b>Printing</b>	Set up printers to print from your phone.
<b>VPN</b>	Add a Virtual Private Network (VPN).
<b>Default messaging app</b>	Set a default text messaging app.

## Access More Connection Options

1. From home, tap **Apps**  > **Settings** .

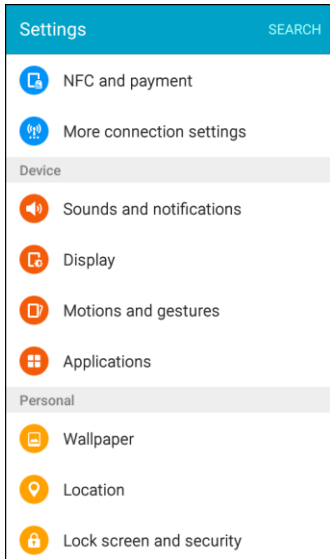

2. Tap **More connection settings** .

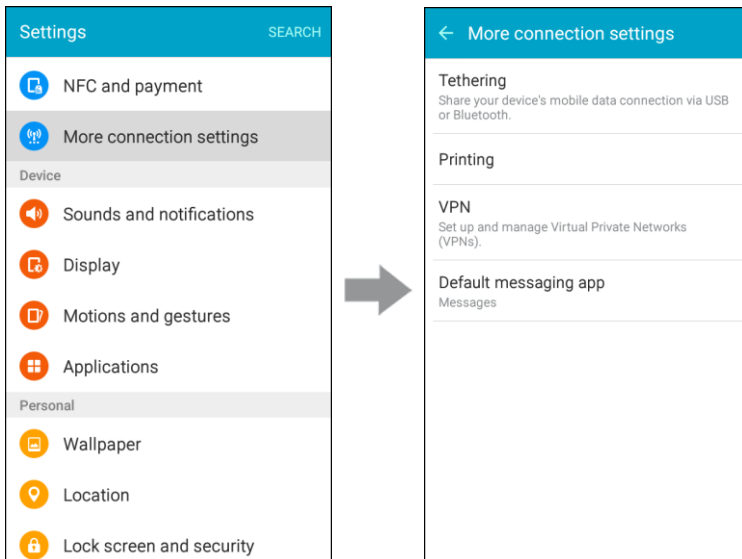


3. Set items.
  - ❖ Your settings are saved and implemented.

# Tethering Settings


Use Tethering to share your device's Internet connection with a computer that connects to your device via USB cable or by Bluetooth.

**Note:** Using the tethering feature consumes battery power and uses data services.

1. From home, tap **Apps**  > **Settings**  > **More connection settings** .

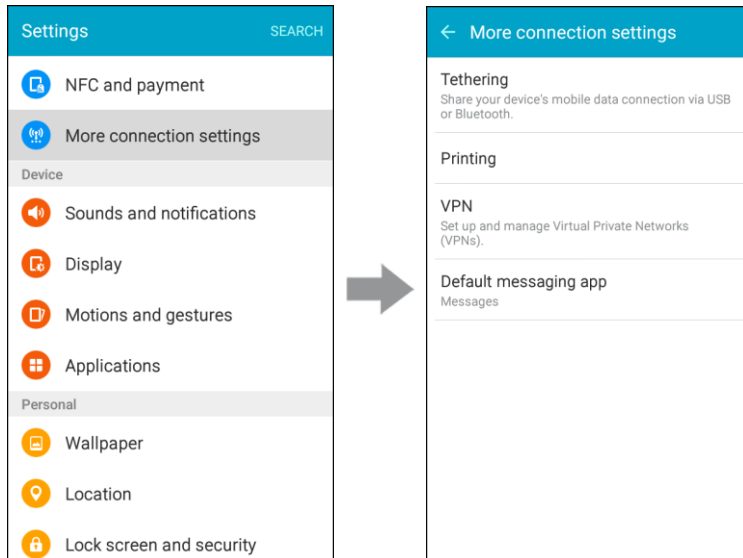

2. Tap **Tethering** and choose an option:

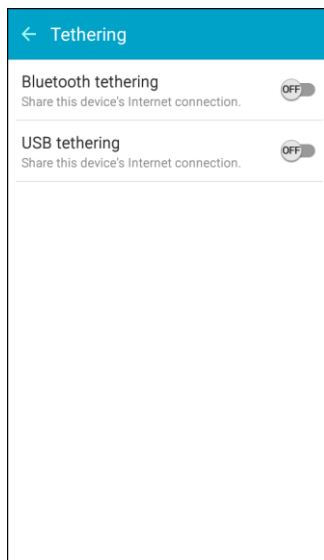

- **Bluetooth tethering:** Pair your device with the computer via Bluetooth. Consult the computer's documentation for more information about configuring your computer to pair via Bluetooth. Tap **Bluetooth tethering** to turn tethering on.
- **USB tethering:** Connect the computer to your phone via USB cable, and then tap **USB tethering** to turn tethering on.


# Printing

You can print from your phone, via Wi-Fi, to an optional compatible printer (not included). Your phone and the optional printer must be connected to the same Wi-Fi network.


## Add a Printer

Before you can print to a printer, you must add and set it up on your phone. You will need to know the IP address of the printer; consult the printer's documentation for this information.

1. From home, tap **Apps**  > **Settings**  > **More connection settings** .

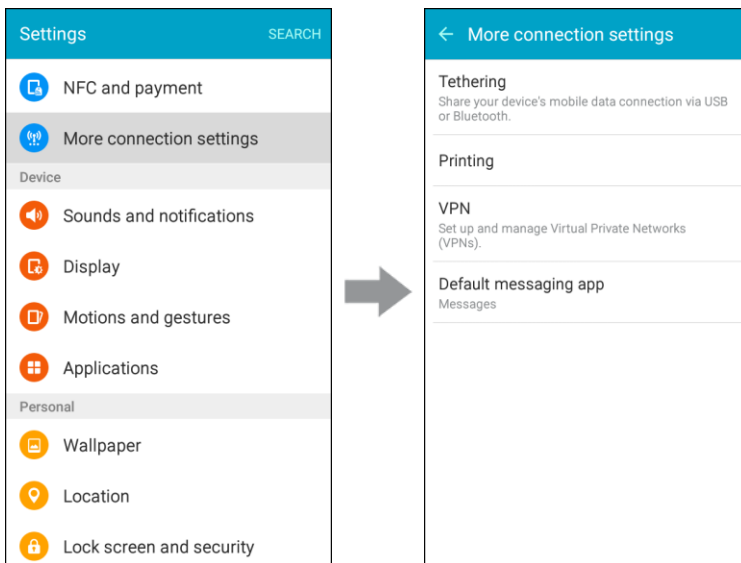

2. Tap **Printing**.

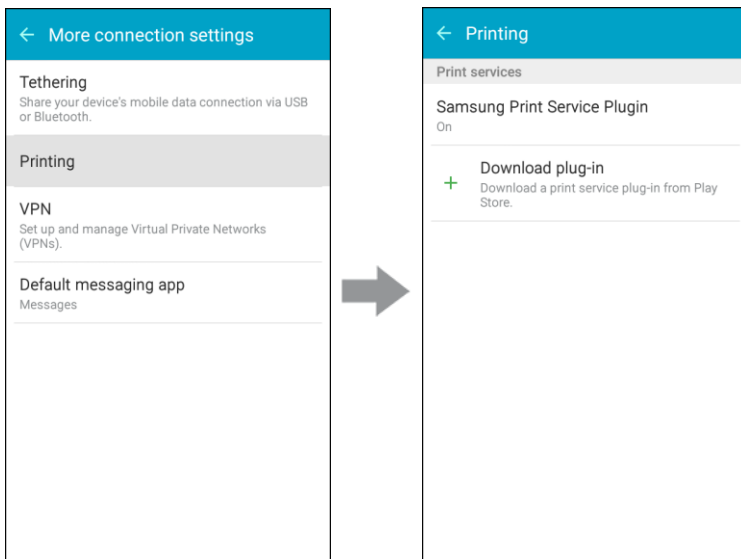

- ❖ The Printing settings screen displays.

3. From the Printing settings screen, tap **+** **Download plug-in**.
4. Follow the prompts to download and install a print driver from the Google Play store.
5. Choose a print service from the list, and then tap the **ON/OFF** switch to turn the service on or off. The service must be on to add a printer.
6. Tap **MORE > Add printer > ADD PRINTER** (or **+**, depending on the plug-in), and then enter a name and the IP address of the printer.

## Set Up a Printer

Add a printer to a print service and configure settings.

**Note:** Below settings are examples only. Available settings will differ depending on the type of print service and printer you are using.

1. From the Printing settings screen, select a print service from the list
2. Tap the **ON/OFF** switch to turn the service on. The service must be on to add a printer.
3. Tap **MORE > Add printer** and follow the prompts to add a printer.
4. Tap **MORE > Printer settings** to configure printer options. Available options may vary depending on the type of printer, and not all printers support all options.

## Virtual Private Networks (VPN)

From your phone, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.

### Prepare Your Phone for VPN Connection


Depending on the type of VPN you are using at work, you may be required to enter your login credentials or install security certificates before you can connect to your company's local network. You can get this information from your network administrator.

Before you can initiate a VPN connection, your phone must first establish a Wi-Fi or data connection. For information about setting up and using these connections on your phone, see [Browser](#) and [Turn Wi-Fi On and Connect to a Wireless Network](#).


### Set Up Secure Credential Storage

If your network administrator instructs you to download and install security certificates, you must first set up the phone's secure credential storage.

1. From home, tap **Apps**  > **Settings**  > **Lock screen and security** .

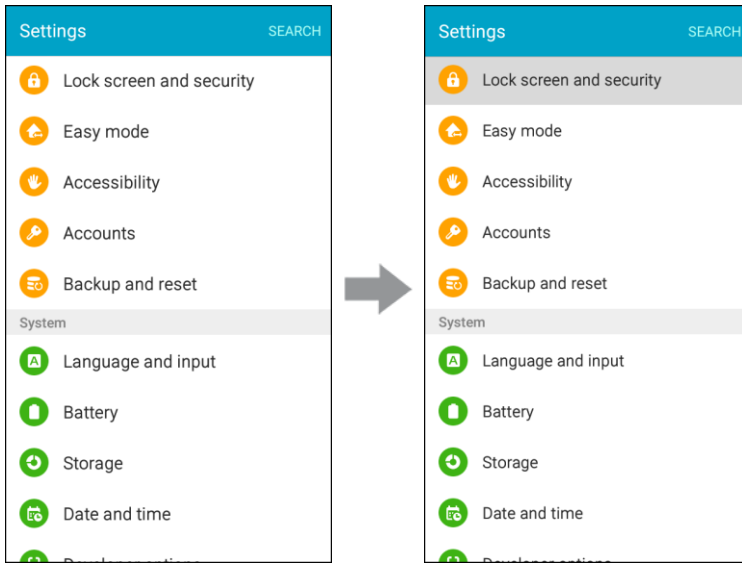


2. Tap **Screen lock type**, and then select Pattern, PIN, or Password to set up a secure lock.

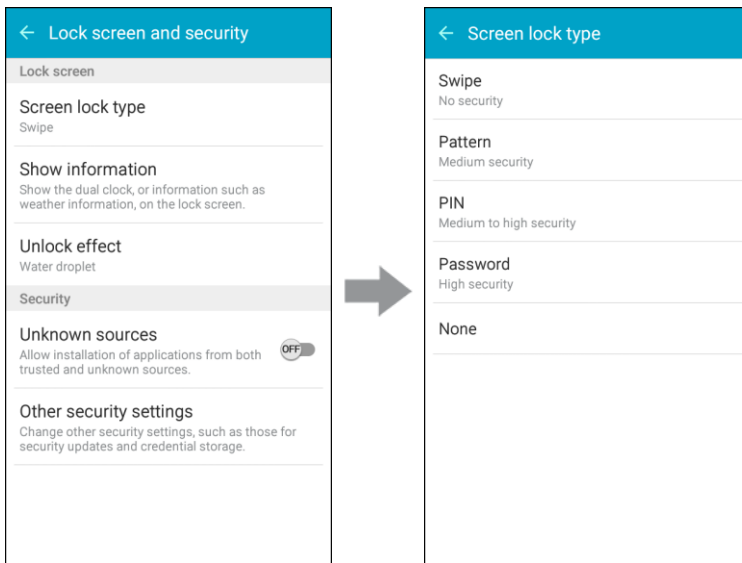


**Note:** For credential storage, you can use Pattern, PIN, or Password screen lock types. See [Screen Lock](#).


3. Enter a new password (at least eight characters without any spaces) for the credential storage, scroll down and confirm the password, and then tap **OK**.

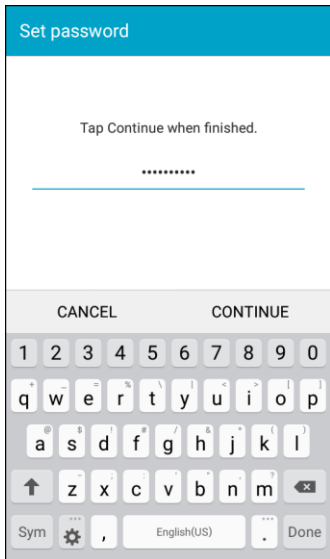

4. Select your display option for notifications on the lock screen, and then tap **DONE**.
  - ❖ The password is set, allowing secure credential storage.
5. On the Lock screen and security window, tap **Other security settings**.

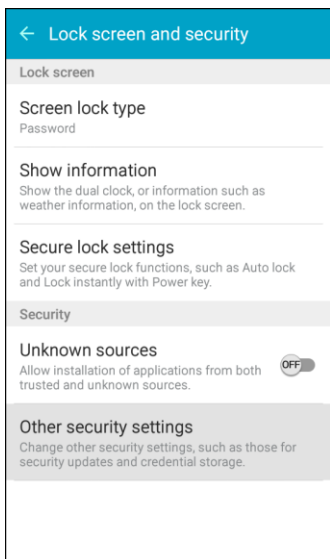

6. Tap **Trust agents**, and then tap your preferred system and user credentials.

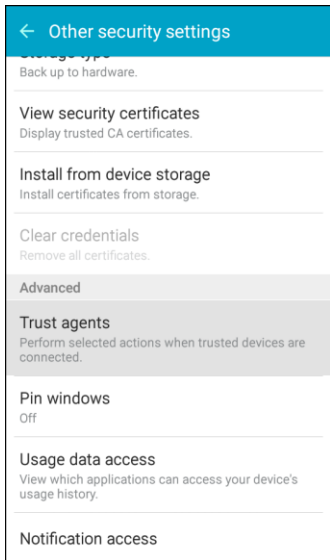


- ❖ Your secure credentials storage is set.

You can then download and install the certificates needed to access your local network. Your network administrator can tell you how to do this.

## Add a VPN Connection


Use the More connection settings menu to add a VPN connection to your phone.

1. From home, tap **Apps**  > **Settings** .

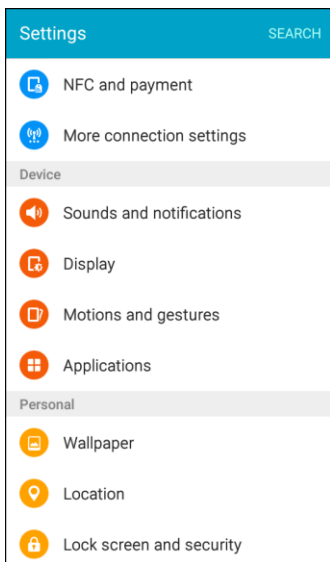




2. Tap **More connection settings**  > **VPN**.

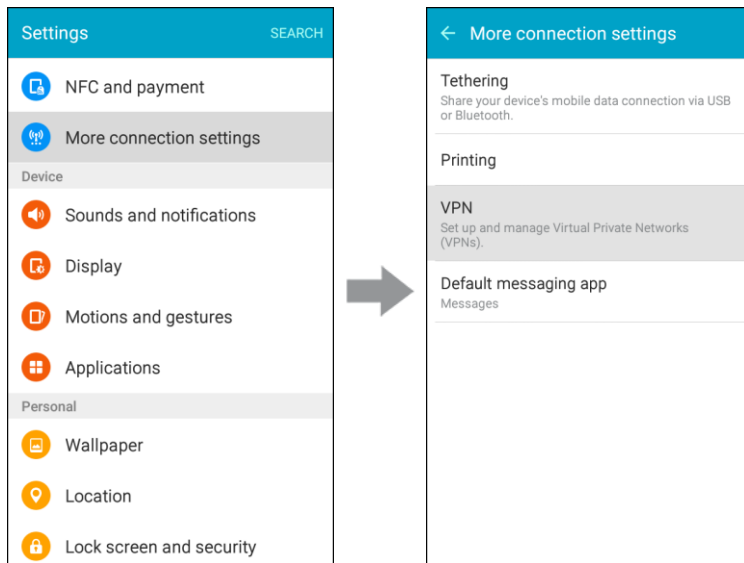

❖ The VPN settings window appears.

3. Tap **ADD VPN**, and then enter the information for the VPN you want to add.

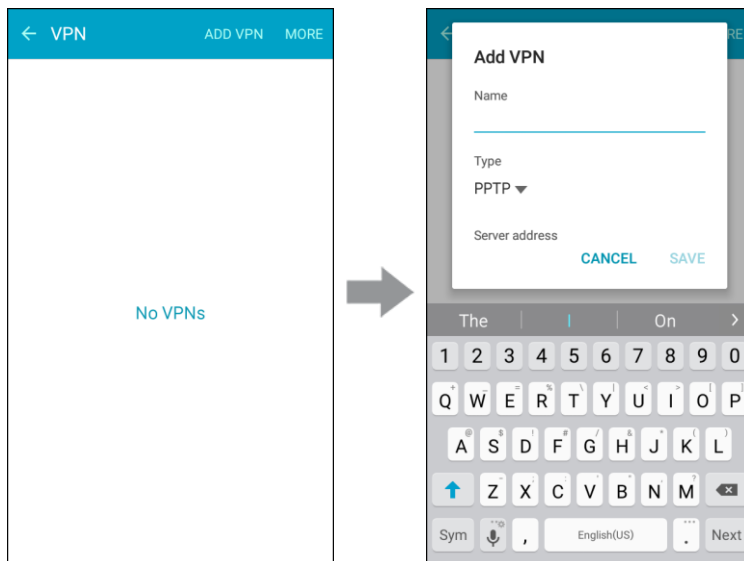


- Information may include Name, Type, Server address, PPP encryption (MPPE), and advanced options.
- Set up all options according to the security details you have obtained from your network administrator.

4. Tap **SAVE**.


❖ Your VPN is added to the VPNs section of the VPN settings window.

## Access the VPN Settings Window

1. From home, tap **Apps**  > **Settings** .

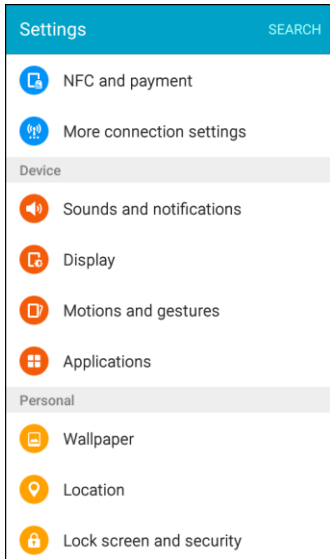


2. Tap **More connection settings**  > **VPN**.

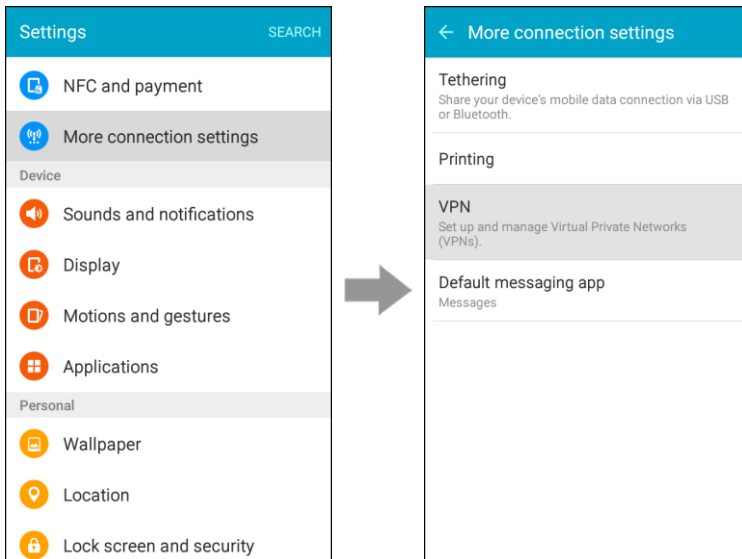


- ❖ The VPN settings window appears.

## Connect to a VPN

1. From the VPNs section of the VPN setting window, tap the VPN that you want to connect to.

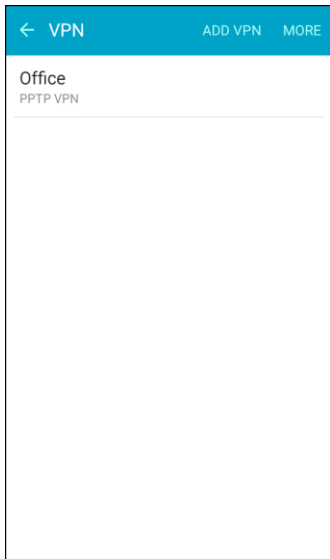


2. When prompted, enter your login credentials, and then tap **CONNECT**.

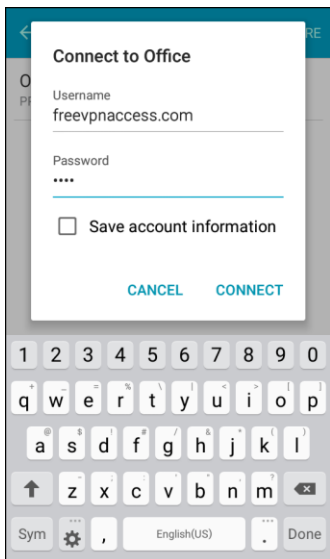


- ❖ You will connect to the selected VPN.
    - When you are connected, a VPN connected icon appears in the notification area.
3. Open the Web browser to access resources such as intranet sites on your corporate network.

## Disconnect from a VPN


1. Drag the Status Bar down to open the Notification panel.

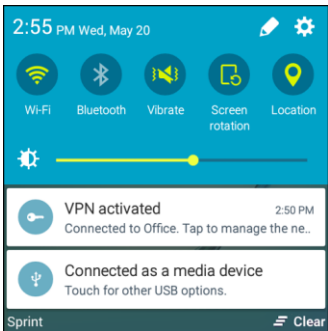

2. Tap the VPN connection to display the VPN connection window.

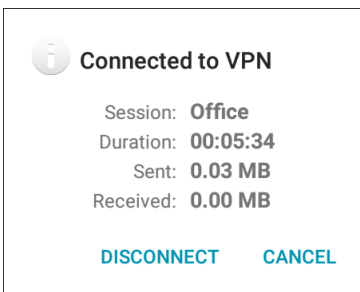

3. Tap **DISCONNECT** to disconnect from the VPN.

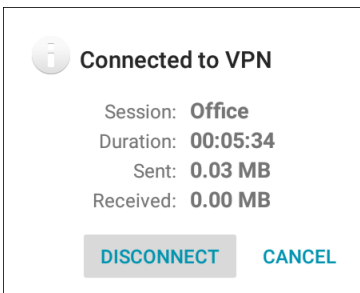


- ❖ Your phone disconnects from the VPN.
  - When your phone has disconnected from the VPN, you will see a VPN disconnected icon in the notification area of the Status Bar.


# Default Messaging App Settings

If you have multiple messaging apps installed on your phone, you can choose the app your phone uses for messaging. The app you select here will be used when you choose Messages in other apps, such as when sharing items like pictures or video.


1. From home, tap **Apps**  > **Settings** .

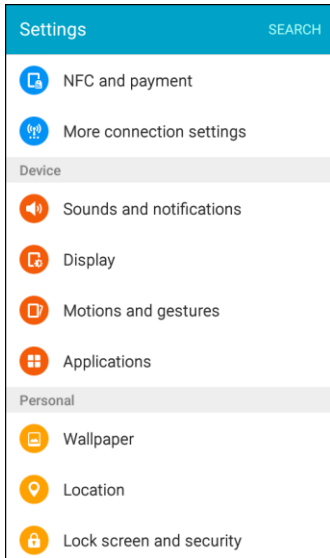

2. Tap **More connection settings**  > **Default messaging app**.

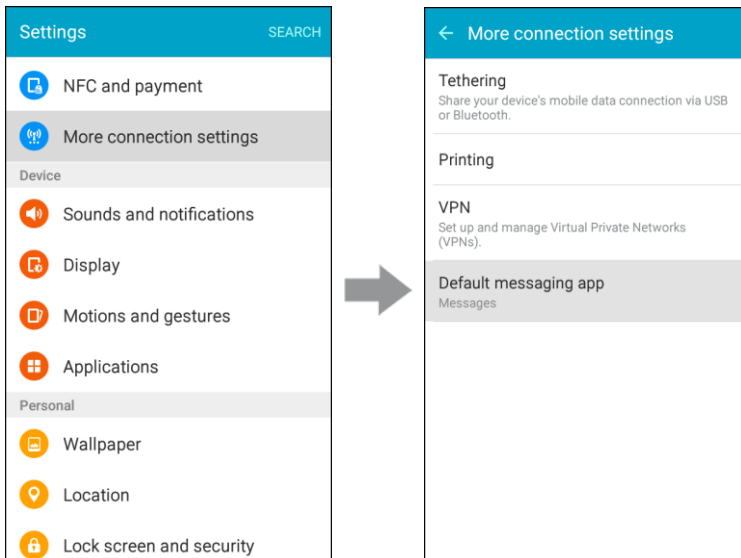

3. Choose a messaging app.

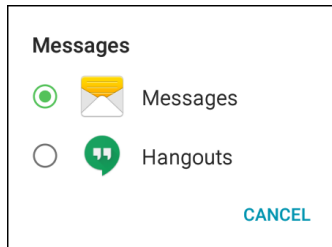

❖ The default messaging app is set.

**Note:** If you choose a default messaging app other than Messages (such as Google Hangouts), you will not be able to use the standard Messages app unless you restore it as the default messaging app.

## Sounds and Notifications Settings

The Sounds and notifications settings menu lets you control your phone's audio, from ringtones and alerts to tap tones and notifications.

### Sounds and Notifications Settings Overview

The sounds and notifications settings menu allows you to configure the following options:


Sound Setting	Description
Sound mode	Set the sound mode for the phone (Sound, Vibrate, or Mute).
Volume	Set volume for ringtones, media, system features, etc.
Ringtones and sounds	Set your ringtones and notification sounds for your phone, apps, keypad, and other features.
Vibrations	Configure vibration pattern, feedback, and other settings.
Sound quality and effects	Set sound quality and sound effects for your phone.
Do not disturb	Configure the Do not disturb feature to mute calls and alerts at will or on a schedule, as well as set exceptions.
Notifications on lock screen	Set a tone for default phone notifications.
App notifications	Configure notifications for apps installed on your phone.

# Sound Mode

You can switch between sound modes, while preserving the individual sound settings you've made.

**Note:** Sound modes are also available from the Device options menu. Press and hold the **Power Key**, and then choose **Mute**, **Vibrate**, or **Sound** from the Device options.

1. From a Home screen, tap **Apps**  > **Settings**  > **Sounds and notifications** .

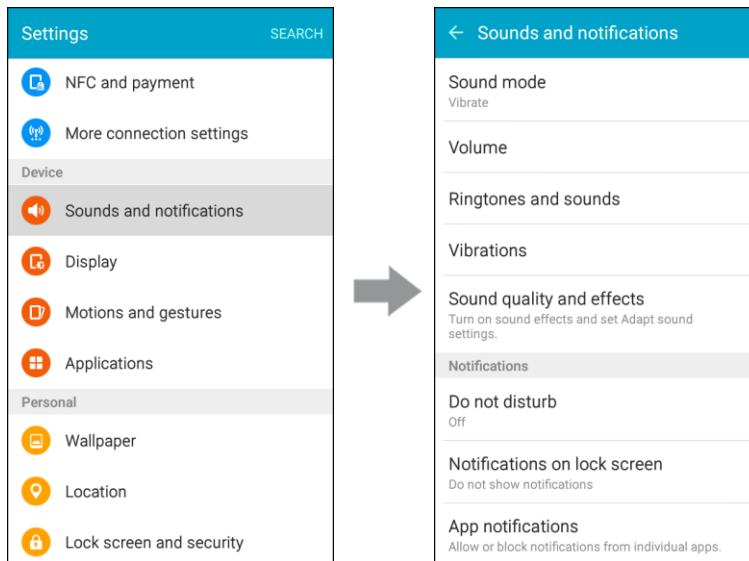


2. Tap **Sound mode**, and then choose a mode:
  - **Sound:** Your phone uses the sounds, vibrations, and volume levels you've chosen in Sound settings for notifications and alerts.
  - **Vibrate:** Your phone vibrates for notifications and alerts. This uses the Vibration intensity you choose in Sound settings.
  - **Mute:** Your phone plays no sounds or vibrations. Onscreen reminders will still occur.

# Volume


Set the system volume level, and set default volume for call ringtones, notifications, and other media.

**Note:** You can also set System volume from the Home screen by pressing the **Volume** key.

1. From a Home screen, tap **Apps**  > **Settings**  > **Sounds and notifications** .

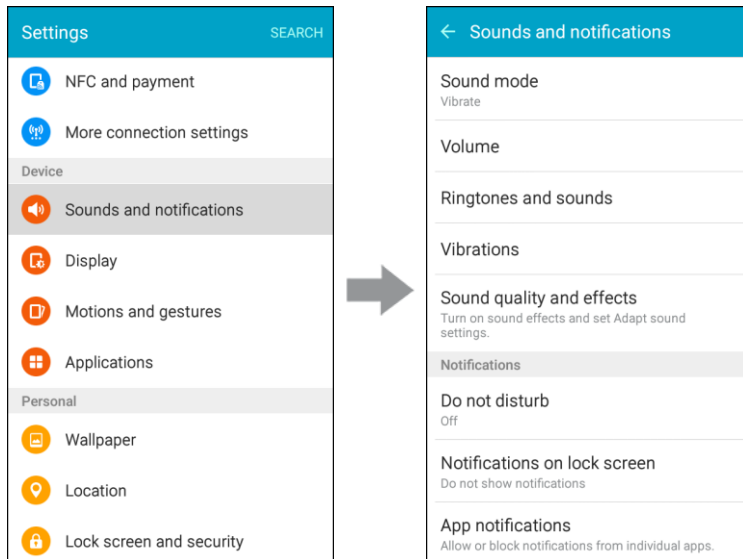

2. Tap **Volume** and then drag the sliders to set the default volume for:

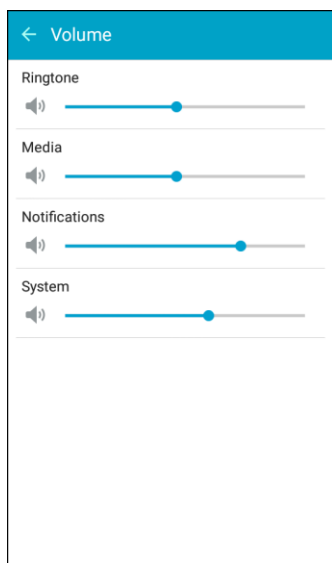


- **Ringtone:** Set volume for ringtones.
- **Media:** Set volume for media (videos and music).
- **Notifications:** Set volume for notifications.
- **System:** Set volume for system sounds.




# Ringtones and Sounds

Choose a ringtone or notification sound for incoming calls, notifications, screen touch indicators, and more.

1. From a Home screen, tap **Apps**  > **Settings**  > **Sounds and notifications** .

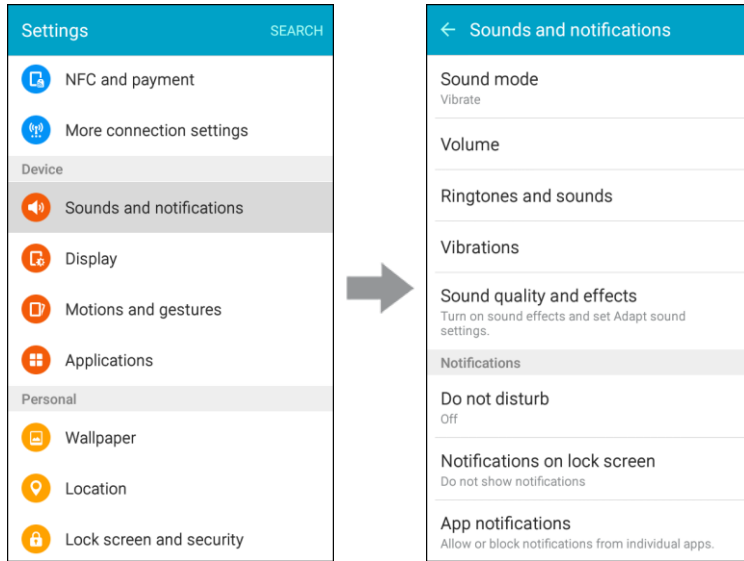

2. Tap **Ringtones and sounds** for options:

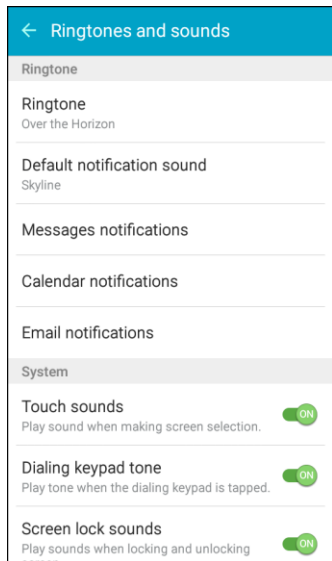


- **Ringtone:** Select a default ringtone.
- **Default notification sound:** Choose a default sound for notifications.
- **Messages notifications:** Tones play and/or the phone vibrates when new messages arrives.
- **Calendar notifications:** Tones play and/or the phone vibrates to remind you of events.


- **Email notifications:** Tones play and/or the phone vibrates when new emails arrive.
- **Touch sounds:** Tones play when you tap the screen to make selections.
- **Dialing keypad tone:** Tones play when you tap keys on the phone keypad.
- **Screen lock sounds:** Tones play when you tap the screen to lock or unlock it.
- **Emergency tone:** Tones play and/or the phone vibrates for alerts.
- **Keyboard sound:** Tones play when you tap the keyboard.

## Add a Ringtone

When you select a ringtone, either from the settings menu or from Contacts, you can add a custom ringtone.

1. From the Ringtones and sounds menu, tap **Ringtone**.

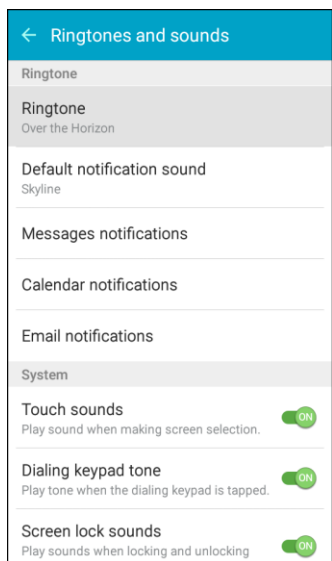


2. Scroll to the bottom of the list and tap **Add ringtone** .
3. Select a source (OneDrive or Sound picker) for the ringtone.
  - ❖ You will see a list of compatible songs or audio files. To load music on your phone, see [Transfer Files between Your Phone and a Computer](#).
4. Tap a song to hear a preview, and then tap **DONE** to save it as a ringtone.
  - ❖ The new ringtone is saved to the list and will be available to be assigned as a default ringtone or as a ringtone for individual contacts, groups, etc.

# Vibrations


Choose vibrations to play for notifications, such as for incoming calls, new messages, and event reminders.

1. From a Home screen, tap **Apps**  > **Settings**  > **Sounds and notifications** .

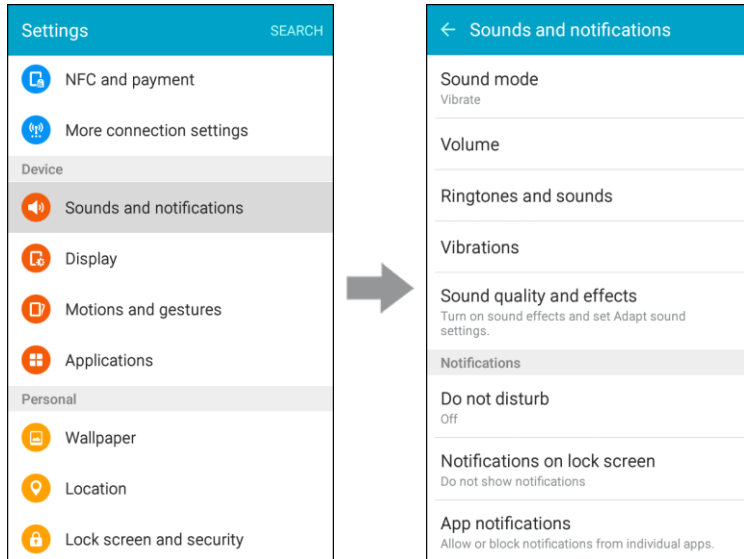

2. Tap **Vibrations** for options:




- **Vibration pattern.** Select a vibration pattern, or create a new one.
  - To create a new pattern, tap **Create pattern**  and follow the prompts to tap out and save your new vibration pattern.
- **Vibrate when ringing:** The phone vibrates when ringing.

# Sound Quality and Effects

You can set options for sound quality and effects when using headphones or a Bluetooth headset.

**Note:** These settings are only available while headphones or a Bluetooth headset are connected.

1. From a Home screen, tap **Apps**  > **Settings**  > **Sounds and notifications** .

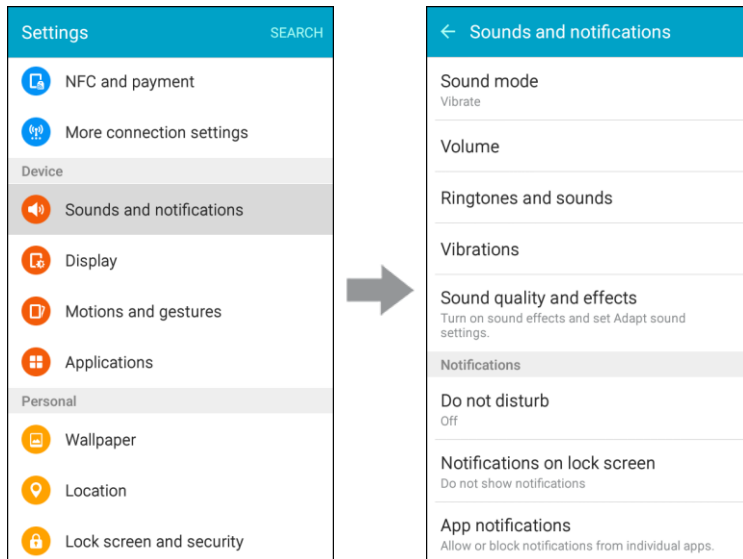


2. Tap **Sound quality and effects** for options:
  - **Adapt Sound:** Find the best sound quality for you and use it during calls and while playing music or videos.
  - **SoundAlive+:** Recreate the effect of rich surround sound.
  - **Tube Amp:** Simulate the soft timbre of a tube amplifier.

# Notifications

Choose a sound for notifications, such as for new messages and event reminders.

1. From a Home screen, tap **Apps**  > **Settings**  > **Sounds and notifications** .

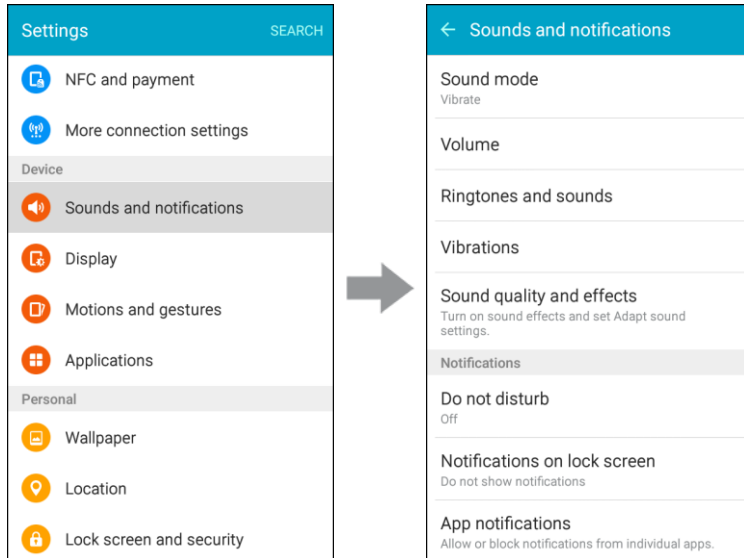

2. Set notification sound options:
  - **Do not disturb:** Silence all calls and alerts during scheduled times. You can allow exceptions.
  - **Notifications on lock screen:** Display notifications on the lock screen.
  - **App notifications:** Allow or block notifications from individual apps.

# Display Settings

Adjusting your phone's display and wallpaper settings not only helps you see what you want, it can also help increase battery life.


## Display Settings Overview

The display settings menu allows you to configure the following options:


Display Setting	Description
Brightness	Set the display brightness.
Font	Set a default font and font size.
Screen timeout	Set a screen timeout duration. <b>Note:</b> Longer durations discharge the battery more quickly
Daydream	Select a screensaver to be displayed when the device is charging.

## Access Display Settings

1. From home, tap **Apps**  > **Settings** .

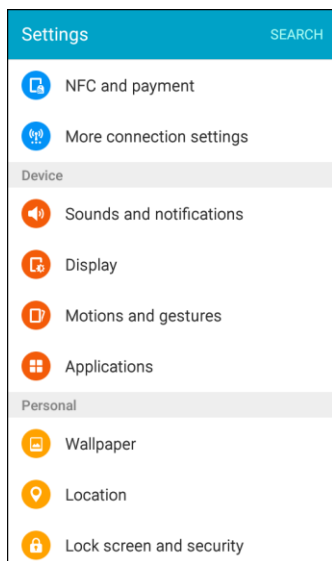

2. Tap **Display** .

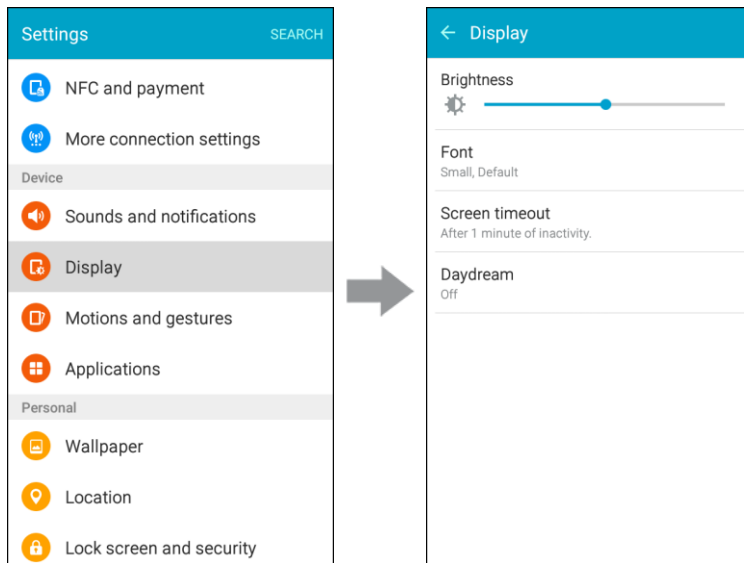

3. Set your display options:


- **Brightness:** Set the screen brightness, or set the brightness level to Auto.
- **Font:** Choose the default font size and font.
- **Screen timeout:** Turn the screen off after a set amount of time.
- **Daydream:** Choose options for when the phone is charging.


# Motions and Gestures


Enable or disable Smart alert, which causes your phone to vibrate when you pick it up to notify you of any missed calls or messages..

## Access Motions and Gestures Settings

1. From home, tap **Apps**  > **Settings** .

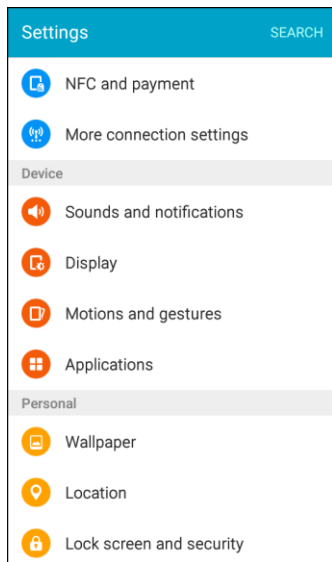

2. Tap **Motions and gestures** .

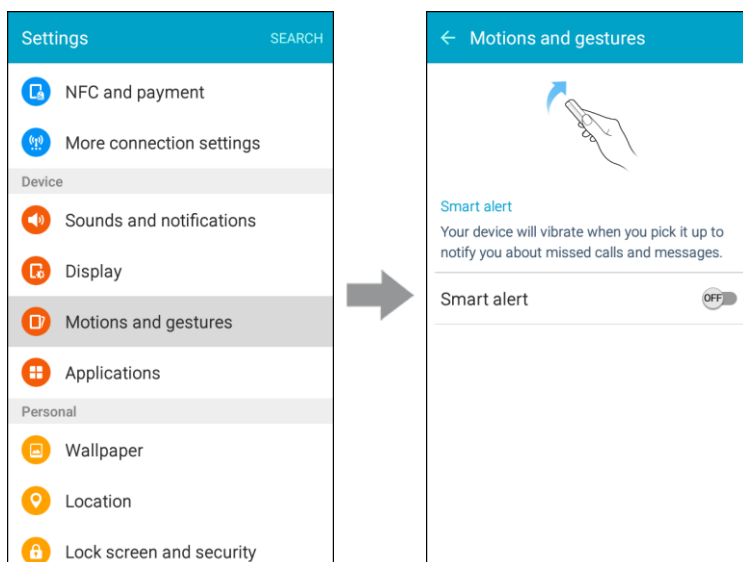




3. Tap the **ON/OFF** switch to turn Smart alert on or off.

# Applications Settings


View information and configure settings for all apps on your phone. The Application manager and Default applications menus are located here.

## Access Applications Settings


1. From home, tap **Apps**  > **Settings** .

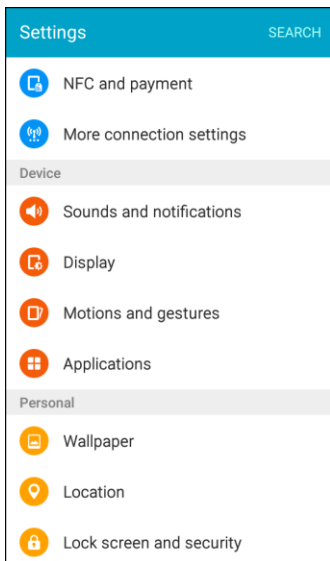

2. Tap **Applications** .

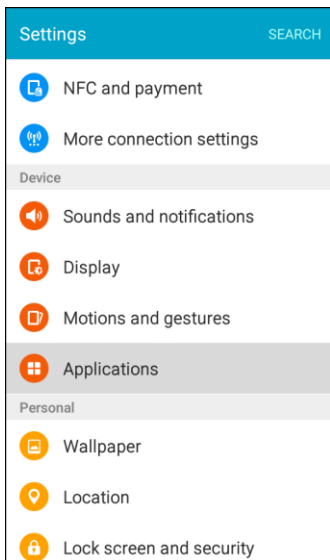

3. Scroll down to **Application settings** to see primary apps. Tap on an app to view and configure its settings.

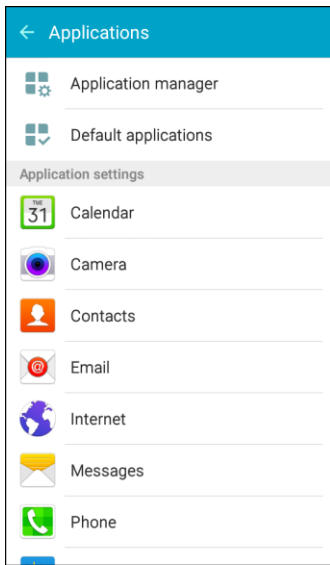


## Application Manager

Check installed applications and running applications. Items that can be checked in the Application manager are as follows.


Apps Setting	Description
<b>DOWNLOADED</b>	Check downloaded apps.
<b>SD CARD</b>	Check apps installed on a microSD card (not included).
<b>RUNNING</b>	Check running apps.
<b>ALL</b>	Check all apps.
<b>DISABLED</b>	Check disabled apps. This page only appears if one or more apps have been disabled.

## Access the Application Manager

1. From home, tap **Apps**  > **Settings**  > **Applications** .

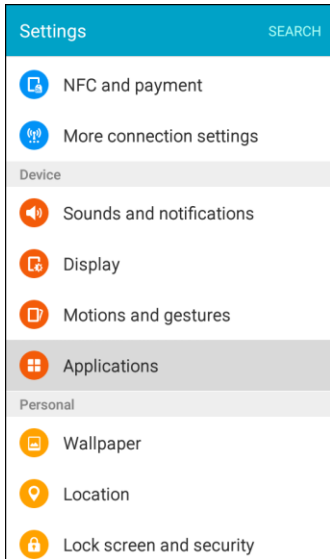

2. Tap **Application manager**.

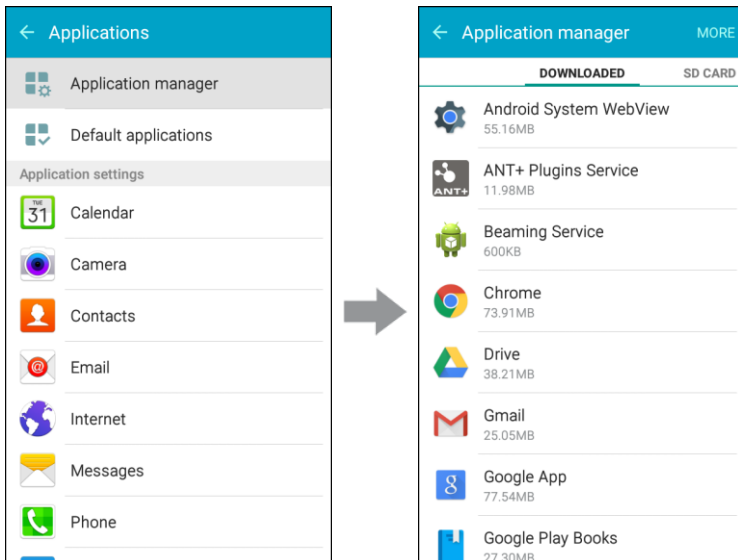

3. Tap items to view details.


- ❖ Check your application settings condition and access additional options.

**Note:** Depending on the app and its location, you may be able to force the app closed, uninstall or disable the app, clear cache and data, and more.


# Default Applications

Set or clear default applications for certain built-in features of the phone.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

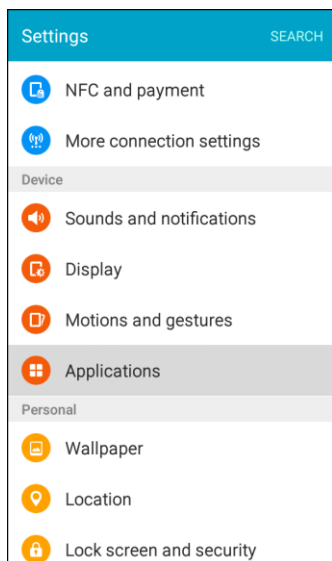

2. Tap **Default applications**.

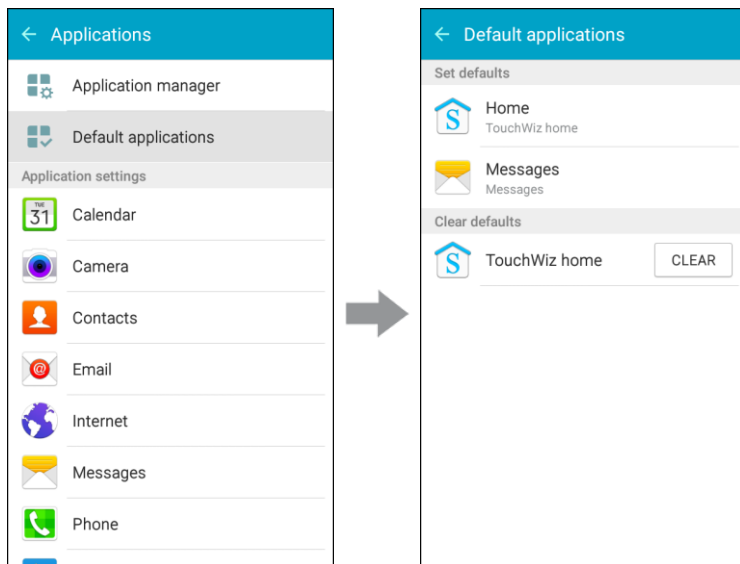


3. Tap each default setting to see what services or applications are available to set as the default.
  - **Home:** Choose a default Home screen mode.
  - **Messages:** Choose a default app for messaging.
  - **Clear defaults:** Tap **CLEAR** to clear defaults.

**Note:** If you choose a default messaging app other than Messages (Google Hangouts or Messaging+ for example), you will not be able to use the Messages app unless you restore it as the default messaging app. For details, see [Default Messaging App Settings](#).


## Calendar Settings

Configure settings for your phone's Calendar app.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

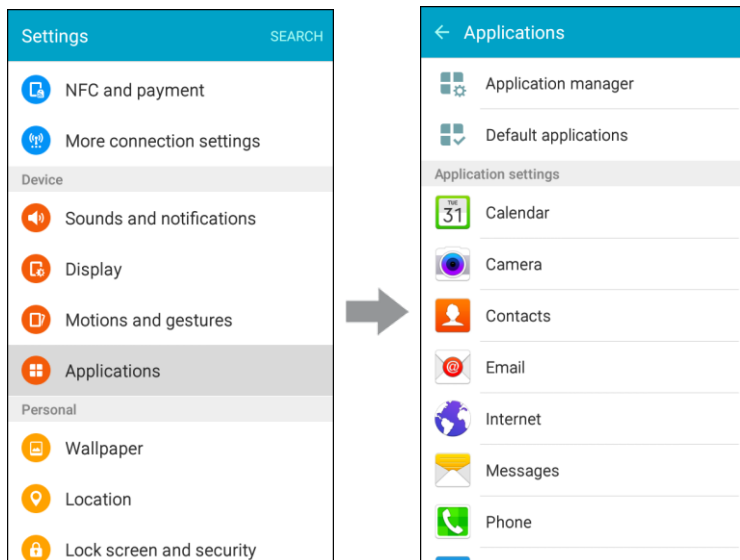

2. Tap **Calendar** to configure these options:

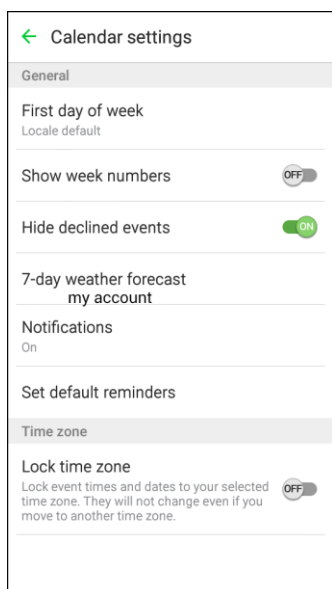


- **First day of week:** Choose a day to start each calendar week.
- **Show week numbers:** Enable or disable display of week numbers on the calendar.

- **Hide declined events:** When enabled, events for which you declined the invitation are not shown on the calendar.
- **7-day weather forecast:** When enabled, weather information from AccuWeather.com displays on the calendar.
- **Notifications:**
  - **Notification sound:** Choose a sound for calendar event notifications.
  - **Vibration:** Enable or disable vibration, to play for calendar event notifications.
- **Set default reminders:** Set default reminders for Events and All-day events.
- **Lock time zone:** When enabled, event times will be locked to the time zone you select. Times and dates will not change, even if you travel to another time zone.


## Camera Settings

Configure settings for your phone's Camera app.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

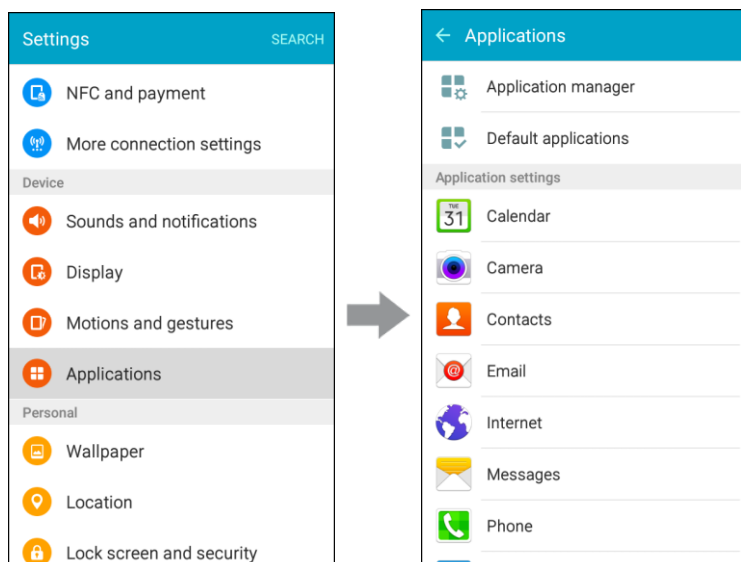

2. Tap **Camera** to configure these options:

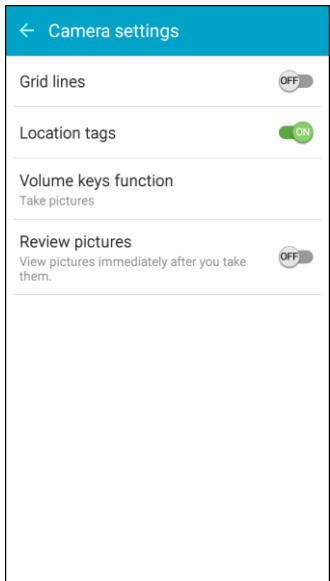


**Note:** Additional Camera settings options are available within the Camera app. See [Set Camera Options](#).

## Contacts Settings


Configure options for contacts stored on your phone.

**Tip:** You can also access Contacts Settings from the Contacts app. From home, tap **Contacts**  > **MORE** > **Settings**.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

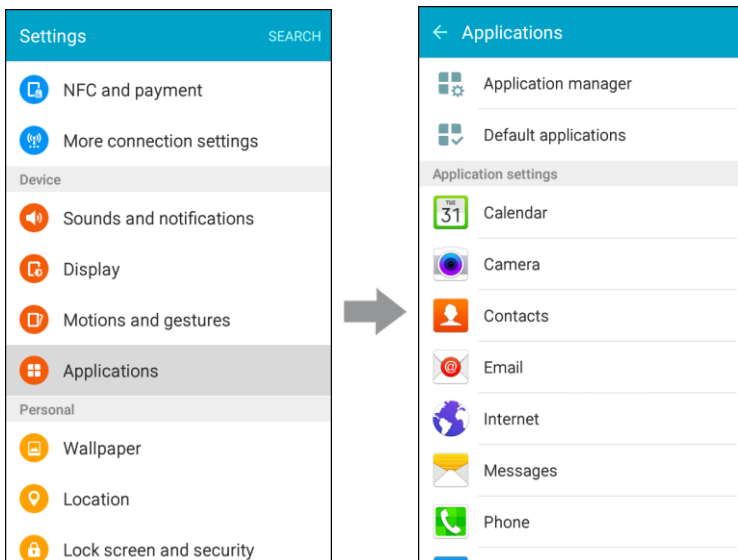

2. Tap **Contacts** to configure options:

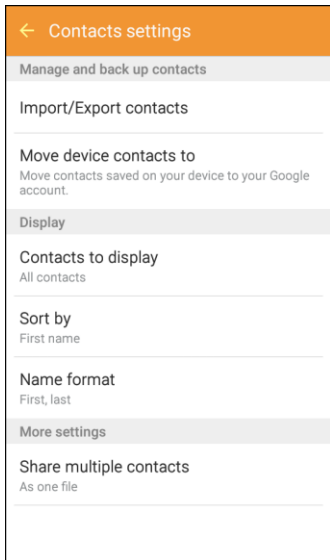

- **Import/Export contacts:** Import contacts from your phone's internal memory and export contacts to your phone's internal memory.
- **Move device contacts to:** Move contacts saved on your device to your Google or Samsung accounts.
- **Contacts to display:** Choose contacts to display in Contacts. You can choose only contacts from your phone's memory, or from an account, or choose other sources. You can also create a customized list of contacts to display.
- **Sort by:** Choose how contacts are sorted, by first or last name.
- **Name format:** Choose how contacts are displayed, by first or last name.
- **Send multiple contacts:** You can choose how to transfer contacts, when sharing them with other devices, such as via Bluetooth. Tap **Send multiple namecards** and choose one of the following options:
  - **Send together:** Multiple contacts are sent together. This method can be faster, but depends on whether the target device can accept multiple contacts. If not, only one contact will be sent.
  - **Send individually:** Contacts are sent individually. This method may take longer, because the other device must accept each contact individually, but it helps ensure that no contacts are missed.




# Email Settings

Configure options for email accounts you set up on your phone.


**Tip:** You can also access Email settings from the Email app. From home, tap **Apps**  > **Email**  > **MORE** > **Settings**.

## General Email Preferences

1. From home, tap **Apps**  > **Settings**  > **Applications** .

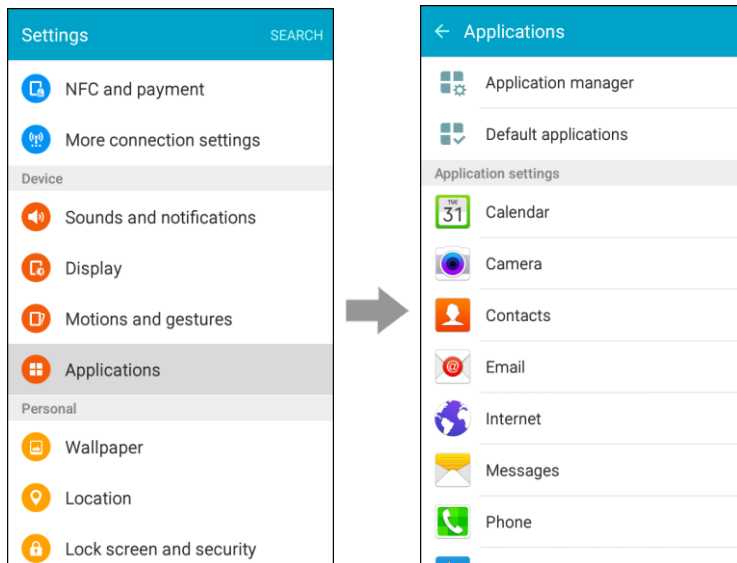

2. Tap **Email** to configure options. General email settings, which affect all email accounts, include:

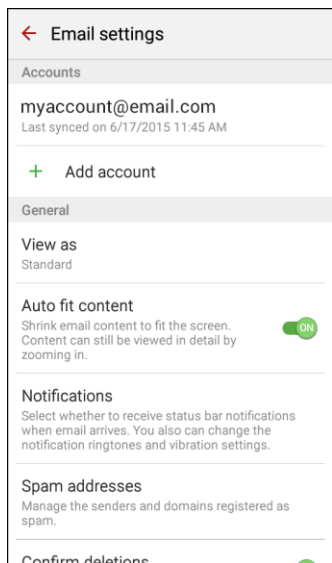

- **Manage accounts:** Configure options for specific accounts. Available settings depend on the type of account.


- **Add account:** Add additional email accounts.
- **View as:** View emails in Standard format, or as Conversations.
- **Auto fit content:** Shrink email content to fit the screen. Content can still be viewed in detail by zooming in.
- **Notifications:** Notifications for new emails display in the Status Bar. When disabled, you can control notifications for each of your email accounts individually in the account's settings.
- **Spam addresses:** Create and maintain a list of email addresses and domains to automatically block emails from those senders.
- **Confirm deletions:** Ask for confirmation before deleting email messages.

## Manage Email Account Settings

You can edit settings for your individual email accounts, such as email address and password, name display and signature, frequency of retrieval, and more.

**Note:** Available settings depend on the type of email account.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

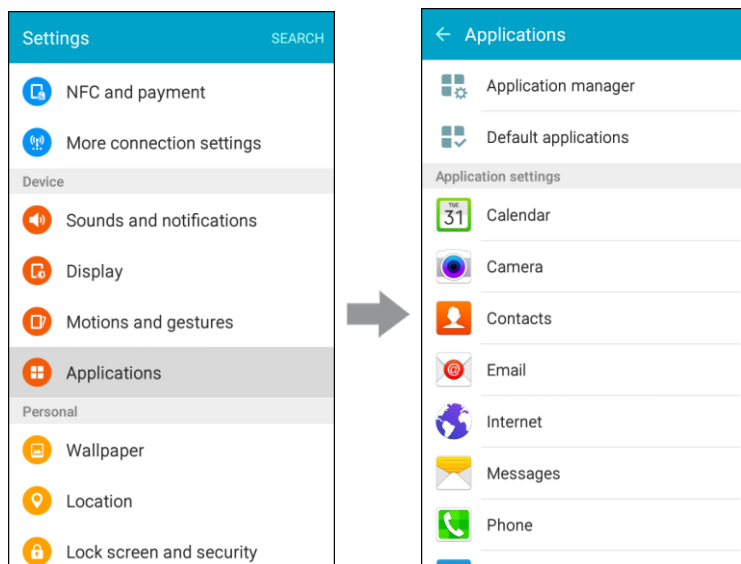

2. Tap **Email**, and then tap an account to set its options. Individual email account settings vary; see your service provider for details. Common email account settings include:
  - **Sync account:** Tap to turn email sync on or off for this account.
  - **Account settings:**
    - **Account name:** Enter a name to identify this email account.

- **Your name:** Enter your name to be displayed in place of your email address when others receive your email.
- **Always Cc/Bcc myself:** Choose options for sending a copy of emails you send to yourself, as a copy (Cc) or blind copy (Bcc).
- **Signature:** A text signature is automatically added to emails you send.
- **Show images:** Choose whether to automatically display embedded images in the body of an email.
- **Auto download attachments:** Choose whether the phone automatically downloads email attachments when you are connected to Wi-Fi. You might use this option to control how and whether you use your plan's data services to download attachments.
- **Sync settings:**
  - **Sync schedule:** Configure times and dates for syncing this email account.
  - **Period to sync Email:** Time frame to sync email messages.
  - **Limit retrieval size:** Set a size limit for each email message retrieved.
  - **Limit retrieval size while roaming:** Set a size limit for each email message retrieved while roaming.
- **Exchange ActiveSync settings:**
  - **Out of office settings:** Configure options for automatically sending replies when you are out of the office.
  - **Folder sync settings:** Choose folders to synchronize between your phone and account.
  - **Period to sync Calendar:** Choose a time period for syncing the Calendar.
  - **Empty server trash:** Delete the contents of the trash folder on the account server.
  - **In case of sync conflict:** Choose whether information from the server or phone has priority when there is a conflict.
  - **Sync Contacts:** Choose whether contacts are synchronized between your phone and the account.
  - **Sync Calendar:** Choose whether calendar events are synchronized between your phone and the account.
  - **Sync Task:** Choose whether tasks are synchronized between your phone and the account.
- **Advanced Settings:**
  - **Security options:** Manage encryption and signature options for outgoing email.


- **Exchange server settings:** Configure the Domain\user name, Password, and other Exchange server settings.
- **Incoming server settings:** Configure your incoming server.
- **Outgoing server settings:** Configure your outgoing server.

## Internet Settings


Configure Internet settings, to customize the browser to your preferences.

**Tip:** You can also access Internet settings from the Internet app. From home, tap **Internet**  > **MORE** > **Settings**.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

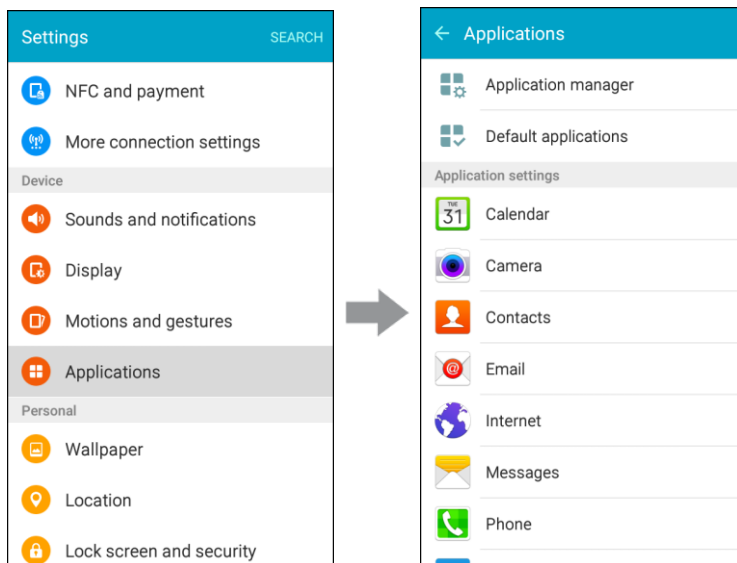

2. Tap **Internet** to configure options:

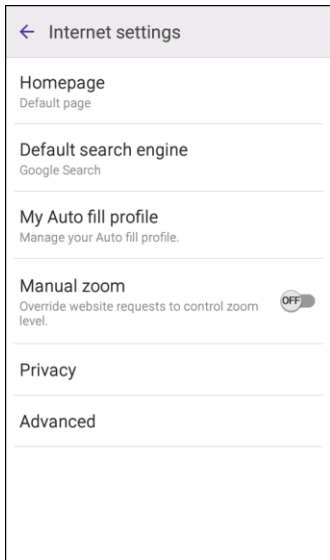


- **Homepage:** Choose a homepage to display when you launch Internet.
- **Default search engine:** Choose a default search engine.
- **My Auto fill profile:** Manage your Auto fill profile.
- **Manual zoom:** Override website requests to control zoom level
- **Privacy:** Choose options related to privacy, such as cookies, suggested searches, and saved sign-in information. You can also choose to delete your personal data through the privacy option..
- **Advanced:** Choose settings to control how the browser treats content.

## Messages Settings


The messages settings menu lets you control options for your text and MMS messages including message limits, size settings, and notifications.

**Tip:** You can also access Message settings from the Messages app. From home, tap **Messages**  **> MORE > Settings.**

1. From home, tap **Apps**  > **Settings**  > **Applications** .

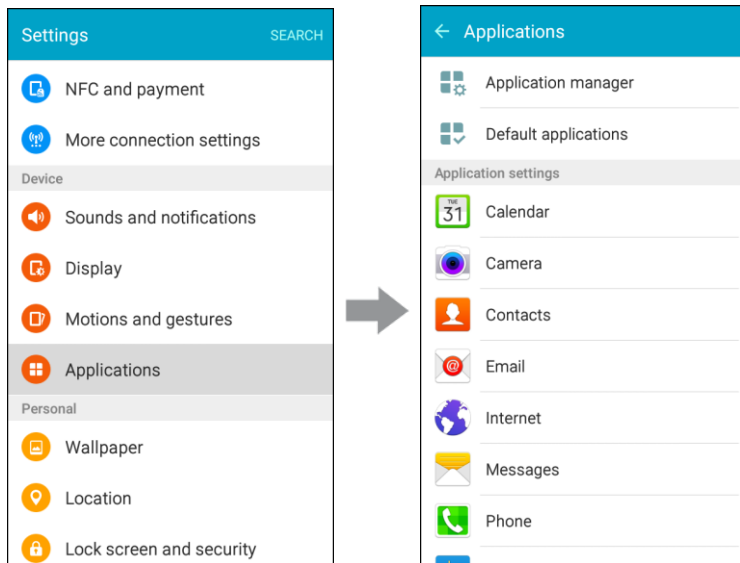

2. Tap **Messages** to configure settings:

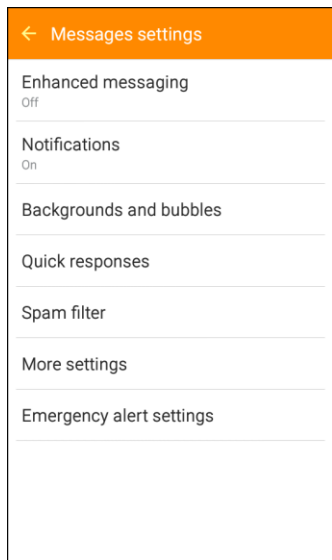

- **Enhanced messaging:** Enable enhanced messaging, such as group chat, and configure enhanced messaging options..
- **Notifications:** When turned on, notifications for new messages display in the Status Bar. Tap the **ON/OFF** switch to turn the setting on, and then configure options:
  - **Notification sound:** Choose a sound to play for new message notifications.
  - **Vibrations:** Choose whether vibration plays along with the sound for new message notifications.
  - **Pop-up display:** Choose whether a new message pops up on the display to notify you.


- **Backgrounds and bubbles:** Choose backgrounds and text bubble styles.
- **Quick responses:** Create and manage text phrases that you can add to messages.
- **Spam filter:** When turned on, your phone blocks messages that may be spam, by filtering based on criteria you set. Tap the **ON/OFF** switch to turn the setting on, and then configure filters:
  - **Manage spam numbers:** Enter telephone numbers, to automatically flag messages from the numbers as spam, when Spam settings are enabled.
  - **Manage spam phrases:** Enter text phrases, to automatically flag messages as spam when they contain the phrase. Available when Spam settings are enabled.
  - **Spam messages:** View messages marked as spam.
- **More settings > Text messages:**
  - **Auto combination:** Choose whether long messages that are received in multiple parts are automatically re-assembled to display as a single message.
- **More settings > Multimedia messages:**
  - **Group conversation:** Send messages as group conversations by default.
  - **Auto retrieve:** Choose whether message attachment(s) are automatically downloaded when you display a multimedia message. If you disable this option, only the message header displays in the message list, and you will be prompted to download the attachment(s).
  - **Roaming auto retrieve:** Choose whether message attachment(s) are automatically downloaded when your phone is outside its home network.
- **More settings > Delete old messages:** Automatically delete the oldest messages when the maximum number of text (1000) and multimedia (100) messages has been exceeded.
- **Emergency alerts settings:** Configure emergency alert settings. You can enable or disable some alerts: Extreme Alert, Severe Alert, Amber Alert, and Emergency alert test messages. You cannot disable Presidential alerts.
  - **Emergency alerts:** Choose types of messages to receive. You can enable or display any of the message types, except for Presidential Alert. You can also choose to receive emergency alert test messages.

**Important:** The Commercial Mobile Alert System (CMAS) system provides the government the ability to send geographically targeted notifications of emergencies, such as threats to public safety, severe weather events, a hazardous material spill or a missing child in the phone user's area.


- **Emergency notification preview:** Play a sample emergency alert tone. Tap **Stop** to cancel the playback.
- **Vibrations:** Enable or disable vibration notification for emergency message notifications.
- **Alert reminder** Configure the reminder interval.

# Phone Settings


Configure options for calling with your phone.

**Tip:** You can also access Phone settings from the Phone app. From home, tap **Phone**  > **MORE** > **Settings**.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

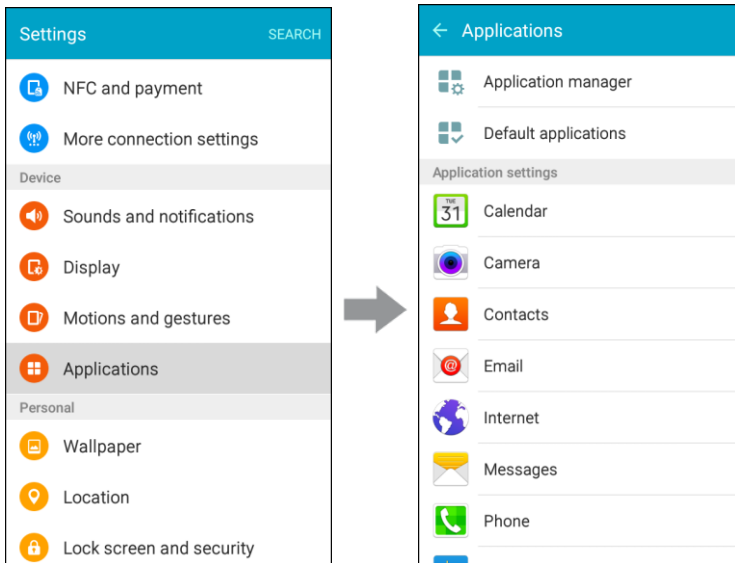

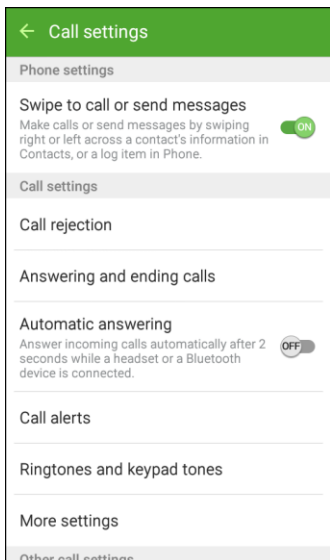

2. Tap **Phone** to configure options:



- **Swipe to call or send messages:** Make calls or send messages by swiping right or left across a contact's information in Contacts, or a log item in the Phone app.




- **Call rejection:** Create and manage a list of phone numbers, to have your phone automatically reject calls you receive from those numbers.
  - **Auto reject list:** Enter telephone numbers, to reject calls from the numbers when Auto reject mode is turned on.
  - **Rejection messages:** Create and manage text messages to send to callers when rejecting incoming calls. Messages you create here are available from the incoming call screen when you use the Reject with message option
- **Answering and ending calls:** Manage settings for answering and ending calls.
  - **Pressing the Home key:** Answer calls by pressing the Home key.
  - **Pressing the Power key:** End calls by pressing the Power key.
- **Automatic answering:** Answer incoming calls automatically after two seconds while a headset or Bluetooth device is connected.
- **Call alerts:** Set options for sounds and vibrations to occur during calls.
  - **Vibrate when answered:** The phone vibrates when a call connects to the network.
  - **Vibrate when call ends:** The phone vibrates when the other caller ends the call.
  - **Call connect tone:** The phone plays a tone when the other caller answers a call.
  - **Call end tone:** The phone plays a tone when the other caller ends the call.
  - **Notify during calls:** Notifications for alarms and new messages play during calls. When disabled, these notifications will be muted during a call.
- **Ringtones and keypad tones:** Choose tones and vibrations to play for incoming calls and keypad taps.
  - **Ringtones:** Select a ringtone for incoming calls. Choose from the list or tap **Add ringtone**  to add your own. (See [Ringtones and Sounds](#).)
  - **Vibrations:** Select a vibration pattern to play for incoming calls when the Vibrate when ringing option is enabled. Choose from the list or tap **Create pattern**  to add your own. (See [Ringtones and Sounds](#).)
  - **Vibrate when ringing:** Vibrate the phone for incoming calls. The vibration pattern is set with the Vibrations setting.
  - **Dialing keypad tone:** Play tones for keypad taps.

- **More settings:** Settings for TTY and Hearing Aids are located in this option.
  - **TTY mode:** A TTY (teletypewriter, also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone. Your phone is compatible with select TTY phones. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect using a special cable that plugs into your phone’s headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.
  - **Hearing aids:** Improve the sound quality for use with hearing aids.
- **US dialing:** Replace “+” with the international access code for your location.
- **International dialing:** Use the International dialing code to replace “+”. (Only available if US dialing is not enabled.)
- **DTMF tones:** Set the length of Dual-tone Multi-frequency (DTMF) tones which play when you use the keypad during a call, such as when navigating menus.
- **Voicemail settings:** Set options for Visual Voicemail. See [Configure Visual Voicemail Settings](#).


## Weather Settings

Configure weather settings for use with the Lock screen and the Calendar app.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

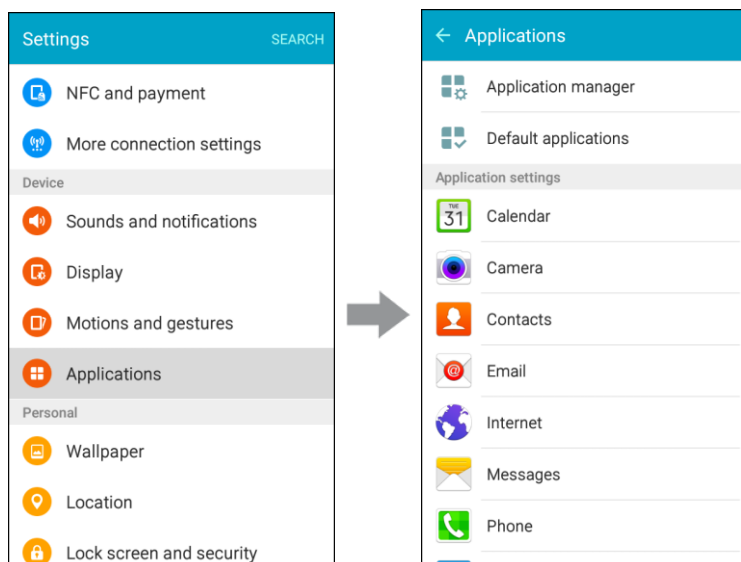

2. Tap **Weather** to configure options:

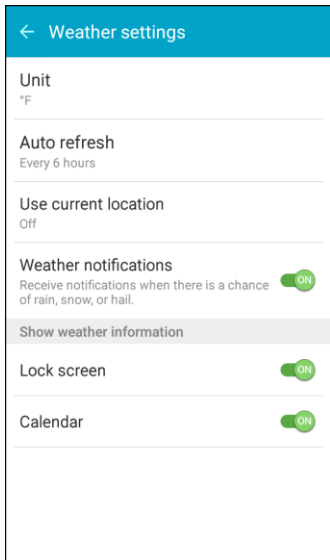


- **Unit:** Select Celsius or Fahrenheit.
- **Auto refresh:** Choose how often weather information is updated.
- **Use current location:** Use your phone's current location to get local weather information.
- **Weather notifications:** Receive notifications when there is a chance of rain, snow, or hail.
- **Lock screen:** Show weather information on the Lock screen.
- **Calendar:** Show weather information in the Calendar app.

# Wallpaper


You can change the wallpaper for the Home and Lock screens.

## Change the Wallpaper

1. From home, tap **Apps**  > **Settings**  > **Wallpaper** .

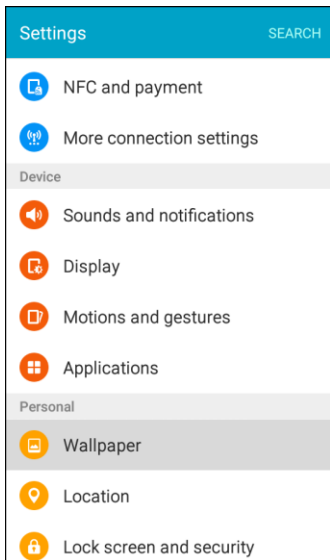

2. Tap **Home screen** to open the drop-down list. Select the screens for which you want to change the wallpaper.

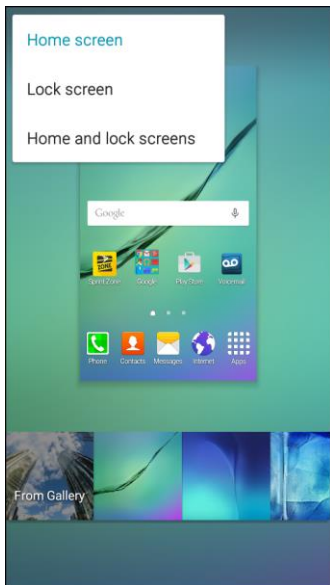

3. Tap a wallpaper to preview it.

4. Tap **SET AS WALLPAPER** to set the selected wallpaper for the screen or screens. If you've selected an image from Gallery, tap **DONE** to apply it as wallpaper.

❖ Your wallpaper is changed.

## Location Settings


Control apps' access to your location, and configure location sources. Some apps may require one or more location services be turned on for full app functionality. When Location is turned on, you are allowing Google's location service to collect anonymous location data. Some data may be stored on your phone, and collection may occur even when no apps are running.

GPS signals may be affected by your surroundings, including:


- Buildings
- Tunnels or underground structures
- Weather conditions
- High-voltage or electromagnetic fields
- Tinted windows

**Note:** E 9-1-1 location service is standard on all mobile phones, to allow sharing of GPS information with emergency personnel when you make a call to emergency services, such as 9-1-1.

1. From home, tap **Apps**  > **Settings**  > **Location** .

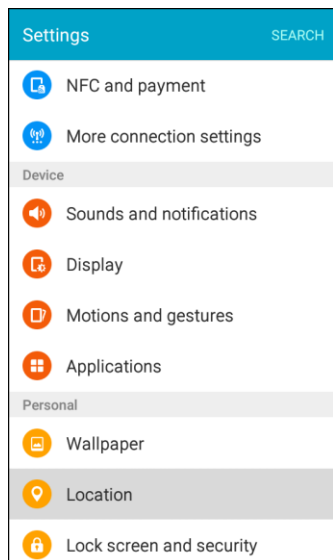

2. Tap the **ON/OFF** switch beside **Location** to turn location services on or off. Location must be turned on to configure settings. When you turn Location on, you are allowing Google's location service to collect anonymous location data. Some data may be stored on your phone, and collection may occur even when no apps are running.

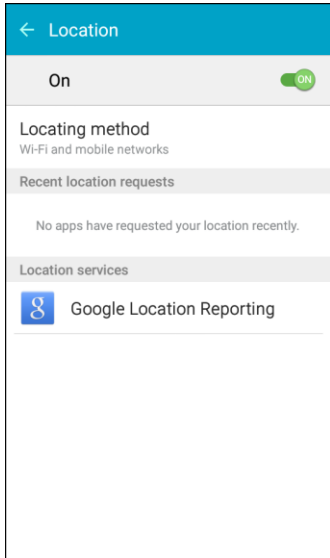

3. After you turn Location on, you can configure settings:
  - **Locating method:** Choose the method your phone uses to determine your location.
    - **GPS, Wi-Fi, and mobile networks:** Your phone uses GPS information, Wi-Fi, and mobile networks to estimate your location.
    - **Wi-Fi and mobile networks:** Your phone uses Wi-Fi and mobile networks to estimate your location.
    - **GPS only:** Your phone uses only GPS information to estimate your location.
  - **Recent location requests:** View services or apps that have recently accessed your location information.
  - **Location services:** Select sources for reporting your location information to Google.

# Lock Screen and Security Settings

The Lock screen settings let you set your method for unlocking your phone, customize Lock screen options, determine whether to show tips for unlocking the phone, and enter your owner information to be displayed on the Lock screen.

The Security settings let you set encryption options, password visibility, administrator settings, and credential storage options.


## Lock Screen and Security Overview

The following options are available in the Lock screen and security menu (options vary depending on the screen lock selected):

Setting	Description
Screen lock type	Set your screen lock.
Show information	Select items to show on the Lock screen, like a Dual clock, the Weather, and Owner information.
Unlock effect	Set the effect shown when the Lock screen wakes up (Swipe lock only).
Unknown sources	Allow or deny installation of apps from sources other than the Google Play store app.
Other security settings	Configure settings for encryption, password visibility, security updates, credentials, and other security features.

## Access Lock Screen and Security Options

- From home, tap **Apps**  > **Settings**  > **Lock screen and security** .

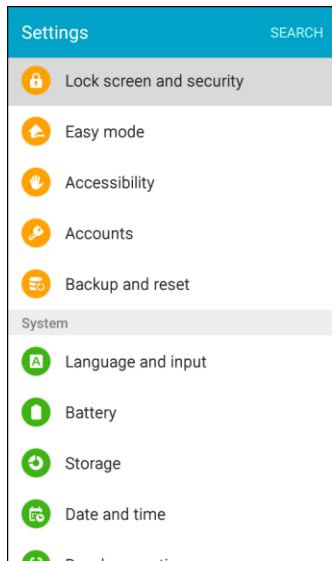

- ❖ The Lock screen and security menu opens.

## Screen Lock

You can increase the security of your phone by creating a screen lock. When enabled, you have to draw the correct unlock pattern on the screen, enter the correct PIN, or enter the correct password to unlock the phone's control keys, buttons, and touchscreen.

In order from least secure to most secure, the available screen lock options are:


- Swipe
- Pattern
- PIN
- Password
- None

**Important:** To protect your phone and data from unauthorized access, it is recommended that you use the highest security level available (Password protection). It is also recommended you frequently change your password to ensure the safety of your phone and personal data.




## Access Screen Lock Settings

1. From home, tap **Apps**  > **Settings**  > **Lock screen and security** .

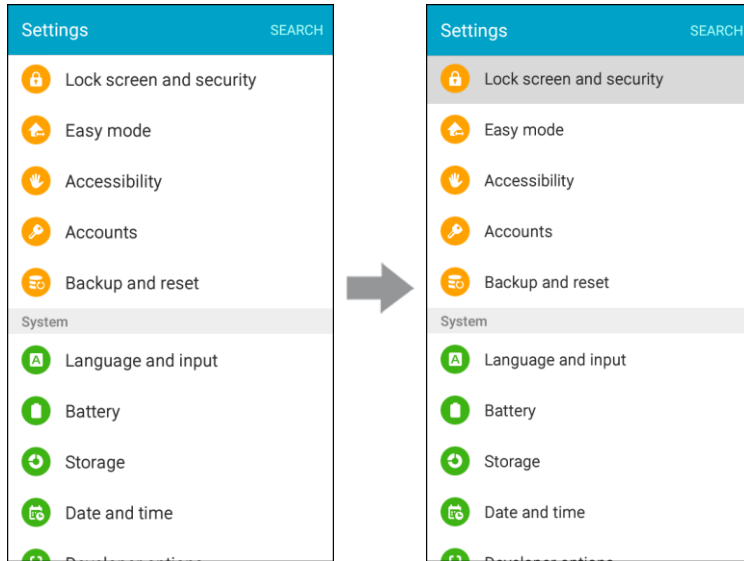

- ❖ The Lock screen and security menu opens.


2. Tap **Screen lock type**.

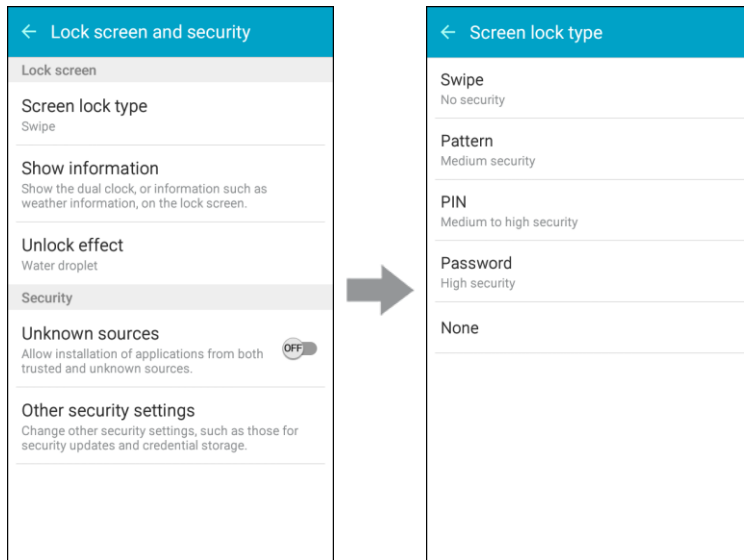

- ❖ The Screen lock settings menu opens.

## Use Swipe to Unlock the Screen


- From the Screen lock type menu, tap **Swipe** to save the setting.

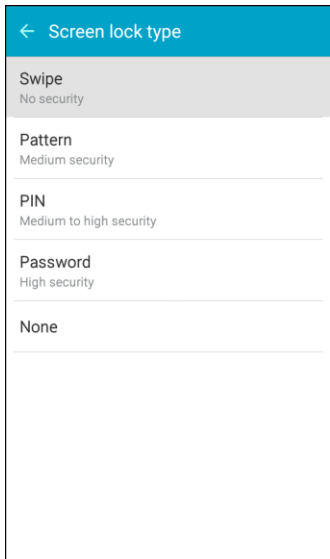


❖ The screen lock is set.

## Use a Screen Unlock Pattern

1. From the Screen lock type menu, tap **Pattern**.

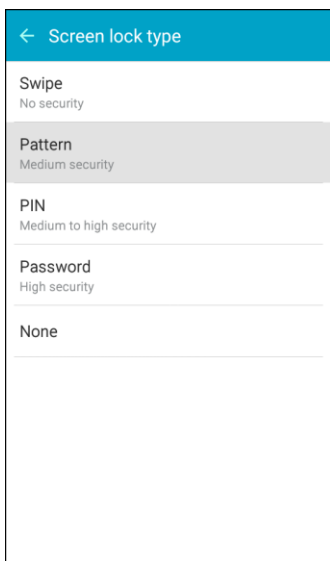


2. Draw the screen unlock pattern by connecting at least four dots in a vertical, horizontal, or diagonal direction. Lift your finger from the screen when finished.

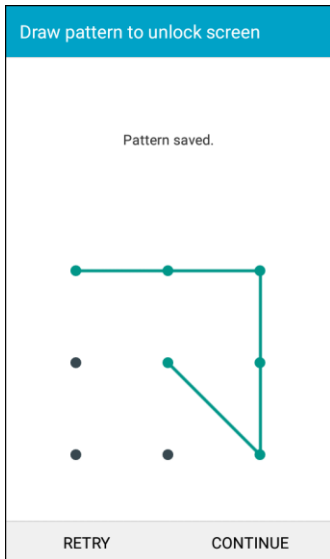


❖ The phone records the pattern.

3. Tap **CONTINUE**.
4. When prompted, draw the screen unlock pattern again, and then tap **CONFIRM**.

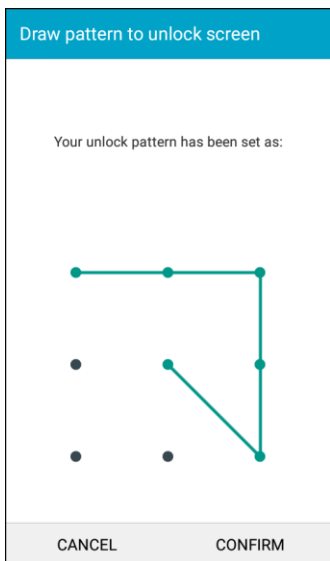




❖ The screen unlock pattern is saved.

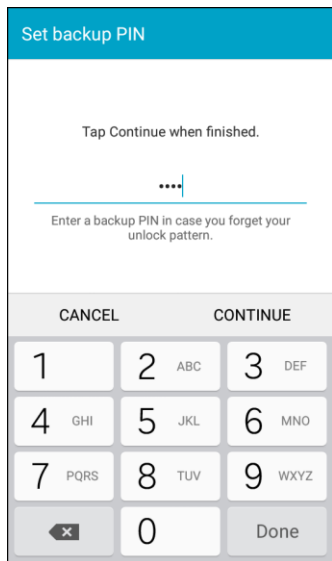5. Enter a backup PIN, tap **CONTINUE**, re-enter the PIN, and tap **OK** to save your screen unlock pattern.




- ❖ The screen lock is set.
- If you fail to draw the correct unlock pattern on the screen after five attempts, you will be prompted to wait for 30 seconds before you can try again.

**Note:** Clear the **Make pattern visible** check box if you do not want the unlock pattern to display on the screen when you unlock it.

**Note:** To change your unlock screen pattern, from home, tap **Apps**  > **Settings**  > **Lock Screen and Security**  > **Screen lock type**.

## Use a Screen Unlock PIN

1. From the Screen lock type menu, tap **PIN**.

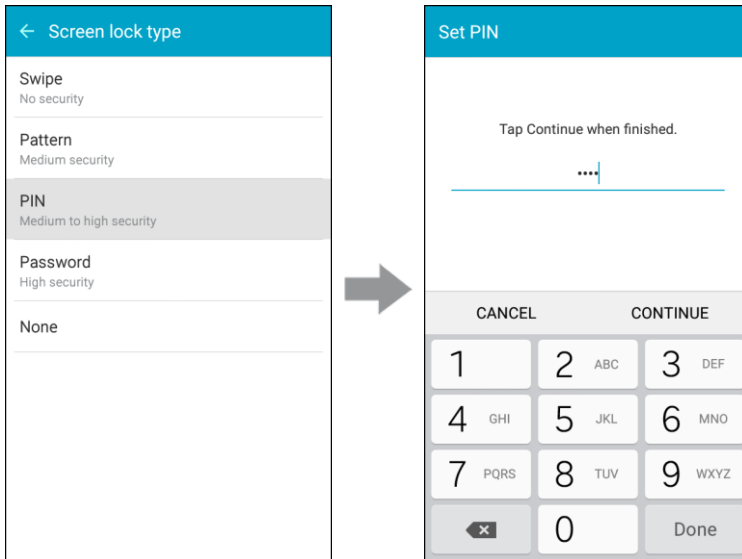


2. Enter a PIN, tap **CONTINUE**, re-enter your PIN, and tap **OK** to save the setting.

- ❖ The screen lock is set
- If you fail to enter the correct PIN after five attempts, you will be prompted to wait for 30 seconds before you can try again.

## Use a Screen Unlock Password

1. From the Screen lock type menu, tap **Password**.

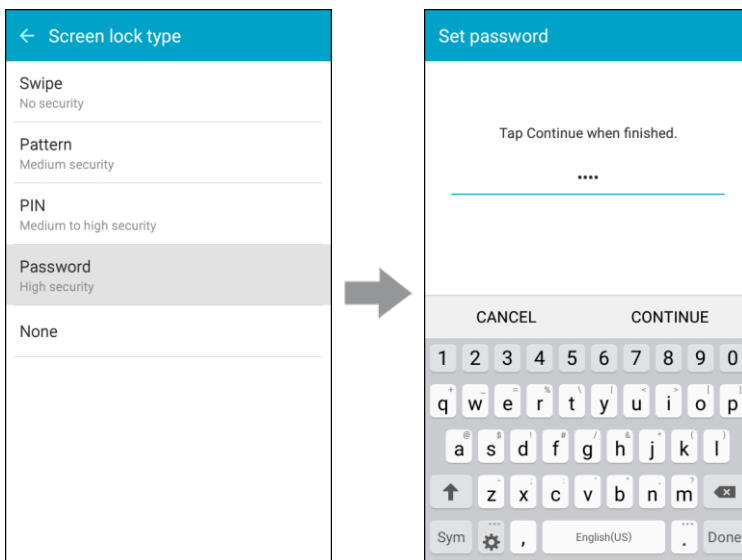

2. Enter a password, tap **CONTINUE**, and then enter your password again to confirm it.
  - ❖ The screen lock is set.
  - If you fail to enter the correct password after five attempts, you will be prompted to wait for 30 seconds before you can try again.


**Important:** To protect your phone and data from unauthorized access, it is recommended that you use the screen unlock password (highest security). It is also recommended that you frequently change your password to ensure the safety of your phone and personal data.

**Note:** See the [Lock Screen and Security Overview](#) table for additional options.

## Disable the Screen Lock


Follow the instructions below to turn off your current screen lock.

1. From home, tap **Apps**  > **Settings**  > **Lock screen and security** .

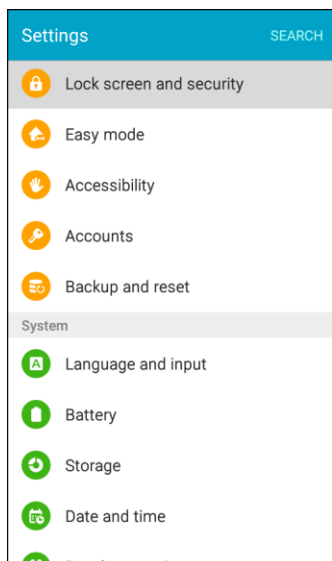

- ❖ The Lock screen and security menu opens.


2. Tap **Screen lock type**.

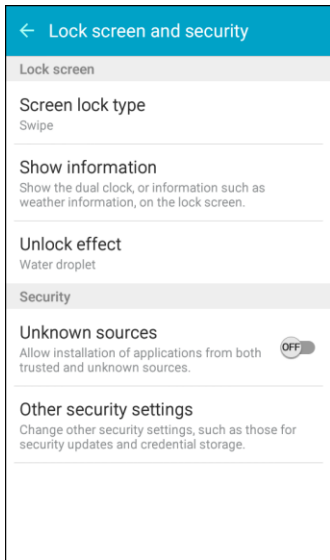

❖ The Screen lock settings menu opens.

3. Draw your unlock screen pattern, enter your PIN, or enter your password.

4. Tap **None**.

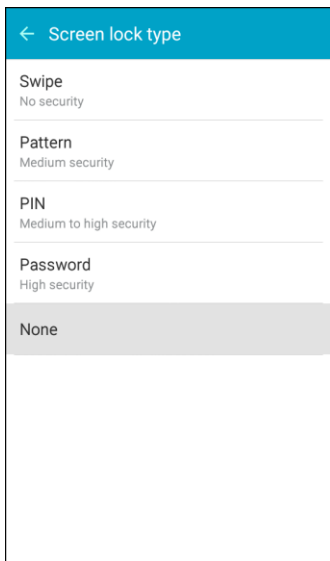

❖ The screen lock is disabled.

# Easy Mode

Use your phone more easily with a simpler Home screen layout, larger default fonts throughout, and straightforward application interactions.


Your phone offers two Home screen modes:

- **Standard mode** provides a conventional layout for apps and widgets on the Home screen.
- **Easy mode** provides an easier experience for the first-time smartphone user.

You can choose the Home screen mode at any time.


## Enable Easy Mode

1. From home, tap **Apps**  > **Settings**  > **Easy mode** .

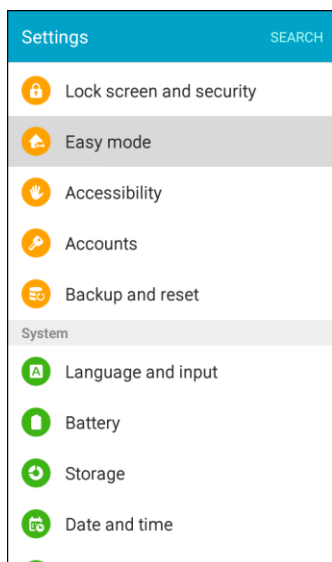




2. Tap **Easy mode**, select the apps you want to see, and then tap **DONE** to save your selection.

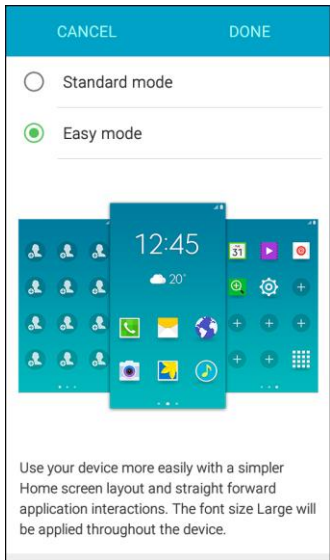


## Return to Standard Mode

1. From home, tap the screen to the left and tap **Settings**  > **Easy mode** .

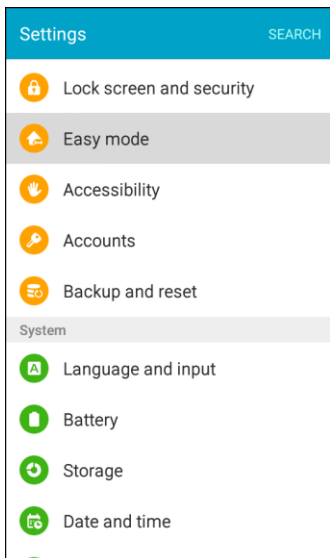

2. Tap **Standard mode** and then tap **DONE**.

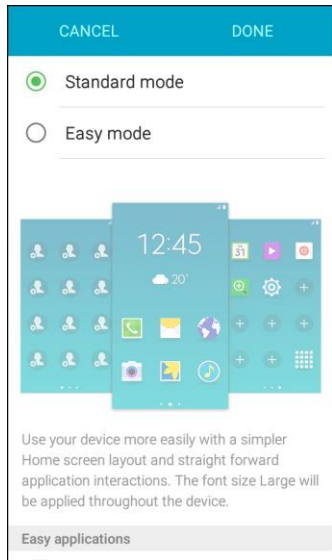

## Accessibility Settings

The Accessibility menu lets you enable and manage accessibility-related applications.

### Accessibility Settings Overview


The following Accessibility options may be configured:

Accessibility Option	Description
<b>Vision</b>	Configure accessibility features for vision.
<b>Hearing</b>	Configure accessibility features for hearing and sounds.
<b>Dexterity and interaction</b>	Configure accessibility features for handling and interactions with the phone.
<b>Direct access</b>	Open your accessibility settings by pressing the Home key three times in quick succession.
<b>Notification reminder</b>	Set the phone to beep or vibrate at set intervals to remind you of any unread notifications from selected applications.
<b>Answering and ending calls</b>	Answer calls by pressing the Home key, and end calls by pressing the <b>Power</b> key.
<b>Single tap mode</b>	Dismiss or snooze alarms, calendar events, and timer alerts, and answer or reject incoming calls with a single tap.

Accessibility Option	Description
Manage accessibility	Import and export your accessibility settings, or share them with other devices.
Services	Configure other accessibility services, if installed.

## Access Accessibility Options

- From home, tap **Apps**  > **Settings**  > **Accessibility** .

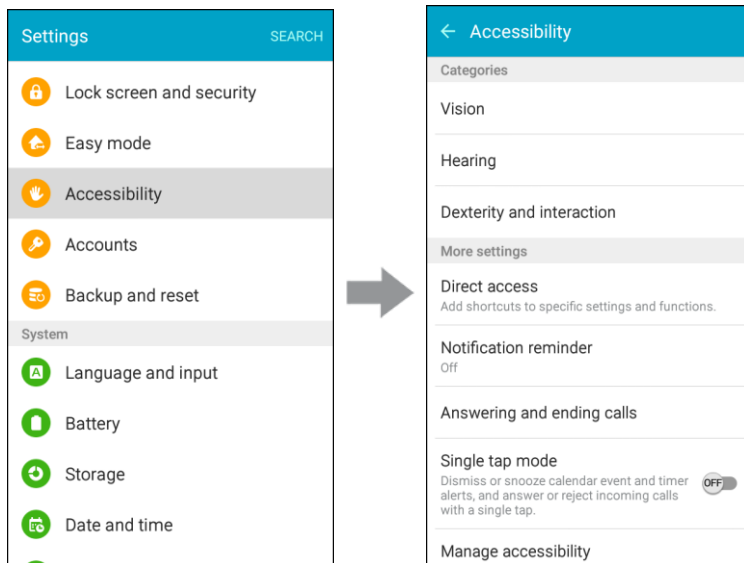


- Set available accessibility options.
  - ❖ Your accessibility settings are applied and saved.


# Vision Accessibility Settings

Your phone offers many features to assist users who are blind or low-vision.

1. From home, tap **Apps**  > **Settings**  > **Accessibility** .

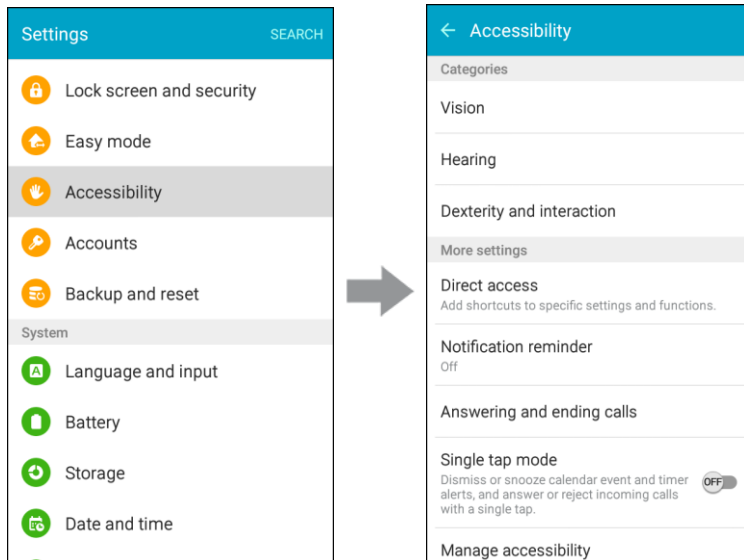

2. Tap **Vision** to configure options:

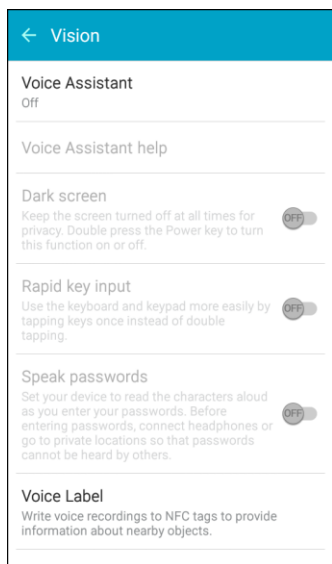


- **Voice Assistant:** Enable the Voice Assistant feature and configure options. When Voice Assistant is on, your phone speaks descriptions of items you tap or activate on your phone, to help blind and low-vision users. When Voice Assistant is turned on, you may need to use a double-tap to select items, because a single tap is used to trigger Voice Assistant.
- **Voice Assistant help:** View tutorials on using Voice Assistant.

- **Dark screen:** Keeps your phone's screen turned off at all times. When Dark screen is enabled, double-press the **Power** key to turn the screen on or off while using your phone.
- **Rapid key input:** Release your finger to enter a selection, instead of double-tapping it. By default, when you have Voice Assistant turned on, you must double-tap items on the screen to select them. If you turn on Rapid key input, you can tap and release your finger to select and item instead of double-tapping.
- **Speak passwords:** The phone reads out characters entered in password fields. Use caution with this feature, because others near you will be able to hear your passwords.
- **Voice Label:** Write voice recordings to NFC tags to provide information about nearby objects.
- **Font size:** Choose the size of text for your phone's screens.
- **Magnification gestures:** Use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.
- **Negative colors:** Reverse screen colors for improved contrast.
- **Color correction:** Adjusts the color of the screen if you have difficulty reading the screen because of the color. Follow the prompts to fine-tune screen colors.
- **Accessibility shortcut:** Quickly turns on accessibility features by pressing and holding the Power/Lock key until you hear a sound or feel a vibration, and then pressing and holding with two fingers until you hear an audio confirmation.
- **Text-to-speech options:** Configure options for converting text to speech.


## Hearing Accessibility Settings

Your phone offers many features to assist users who are deaf or hearing-impaired.

1. From home, tap **Apps**  > **Settings**  > **Accessibility** .

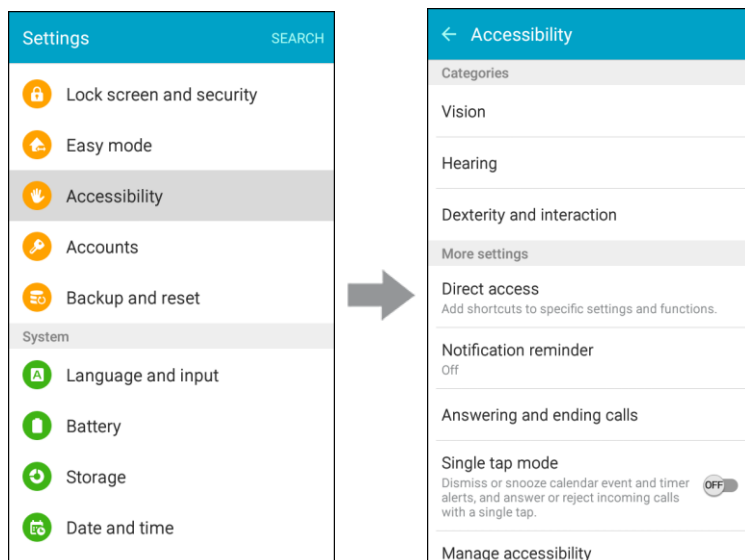

2. Tap **Hearing** to configure options:

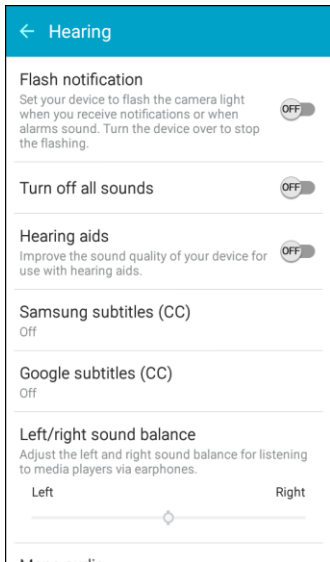


- **Flash notification:** Flash the camera light when you receive notifications or when alarms sound. Turn the device over to stop the flashing.
- **Turn off all sounds:** Sounds made by the phone during taps, selections, notifications, etc., is muted.
- **Hearing aids:** Automatically adjusts to attempt to improve the sound quality for use with hearing aids.
- **Samsung subtitles (CC):** Displays Samsung subtitles where available. Tap the **ON/OFF** switch to turn the option on or off, and then configure options.
- **Google subtitles (CC):** Displays Google subtitles where available. Tap the **ON/OFF** switch to turn the option on or off, and then configure options like Language, Text size, and Caption style.
- **Left/right sound balance:** Adjust the sound sent to the left and right when using earphones.
- **Mono audio:** Enable or disable the compression of stereo audio into a single mono audio stream for use with a single earphone.


# Dexterity and Interaction Settings


Your phone offers many features to improve accessibility related to the way you interact with touch and movement.

1. From home, tap **Apps**  > **Settings**  > **Accessibility** .

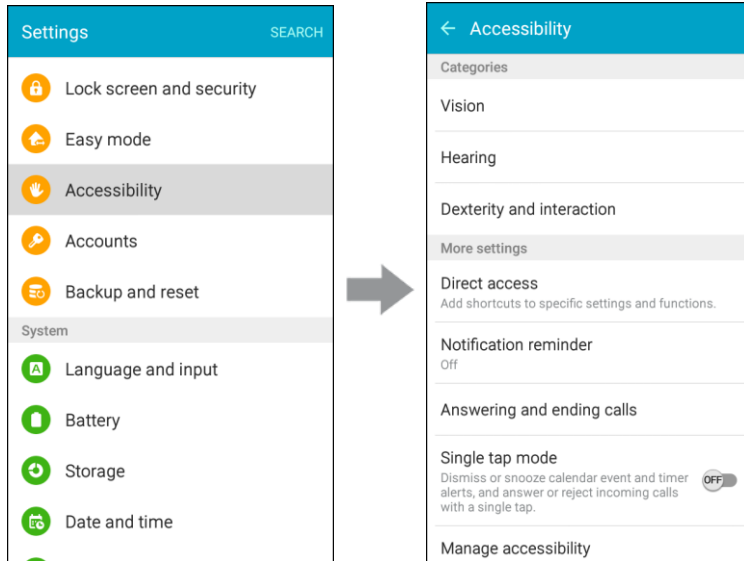

2. Tap **Dexterity and interaction** to configure options:

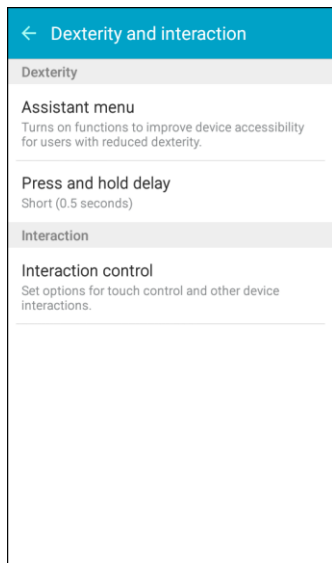

- **Assistant menu:** Assistant menu can improve phone accessibility by providing quick access to important functions. A shortcut  appears on all screens to give you access to the Assistant menu.
- Tap **Assistant menu** to configure options:


- Tap the **ON/OFF** switch beside **Assistant menu** to turn the feature on or off. When you turn on Assistant menu, Single tap mode is also enabled.
- **Dominant hand:** Choose whether the Assistant menu displays on the left or right side of the screen
- **Edit:** Reorder or remove items from the Assistant menu.
- **Assistant plus:** When turned on, Assistant plus displays contextual menu options for some apps in Assistant menu. Not all apps support this option. Tap **Assistant plus**, and then tap the **ON/OFF** switch to turn the option on or off. After you turn on Assistant plus, enable or disable apps to use with Assistant plus.
- **Touchpad size:** Choose a size for touchpads for use in your phone's screens.
- **Cursor size:** Choose the size of cursors, to display on the screen.
- **Cursor speed:** Choose a speed for cursor blinks.
- **Press and hold delay:** Choose how long your phone waits during a tap and hold gesture on the screen, before continuing with the tap and hold action.
- **Interaction control:** Control how your phone interprets motions and screen touches. To turn Interaction control on or off at any time, press and hold the Home key and the down **Volume** key at the same time. When Interaction control is on, you can use motions to control your phone, and screen timeout is turned on. You can also block areas of the screen from touch interaction. Automatic screen rotation and hard-key functions (Power Key, Volume key, etc.) will be turned off, and app notifications will only be shown in the Notification panel and Status Bar.



# Configure Other Accessibility Settings

Your phone offers many features to improve phone accessibility.

1. From home, tap **Apps**  > **Settings**  > **Accessibility** .

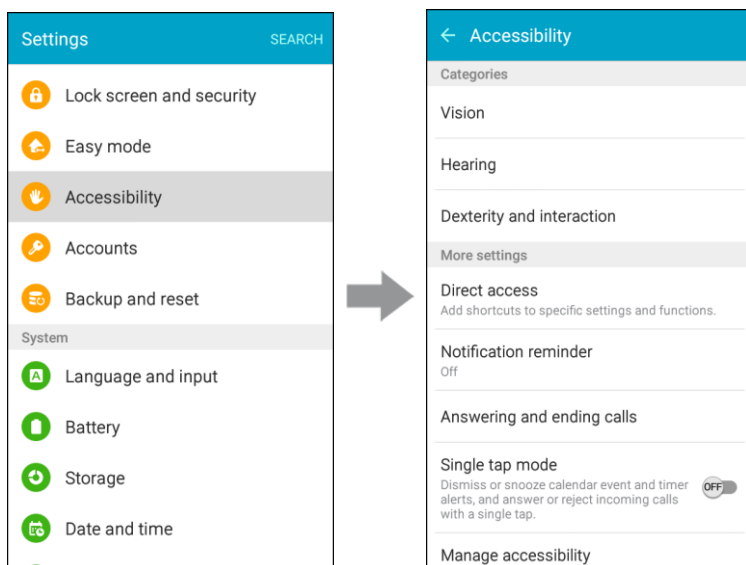

2. Configure additional accessibility options:

- **Direct access:** Access common accessibility settings from any screen by pressing the Home key rapidly 3 times in a row.
- **Notification reminder:** Phone beeps at set intervals to remind you of unread notifications.
- **Answering and ending calls:** Select options for answering and ending calls.
  - **Pressing the Home key:** Answer calls by pressing the Home key.
  - **Pressing the Power key:** End calls by pressing the Power key.
- **Single tap mode:** When enabled, you can use a single tap to dismiss or snooze alarms, notifications and alerts, and answer or reject calls.
- **Manage accessibility:** Choose settings for exporting, updating, and sharing the accessibility settings as a file.


**Note:** Additional accessibility services you have installed are displayed under the **Services** heading.

# Add Accounts


The Accounts settings menu lets you add and manage all your email, social networking, and picture and video sharing accounts.

## Set Up a New Account

1. From home, tap **Apps**  > **Settings**  > **Accounts** .

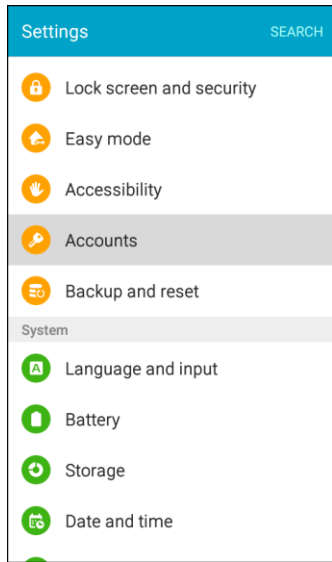

2. Tap **Add account**.

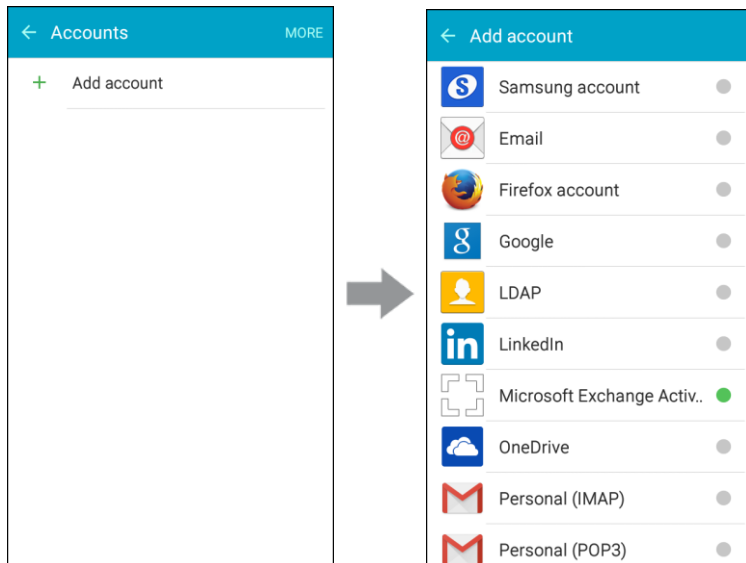


- ❖ An Add account window appears.

3. Tap an account type and then follow the onscreen instructions to add the required account information.


- ❖ The account is added to the accounts list.

## Manage Existing Accounts

1. From home, tap **Apps**  > **Settings**  > **Accounts** .

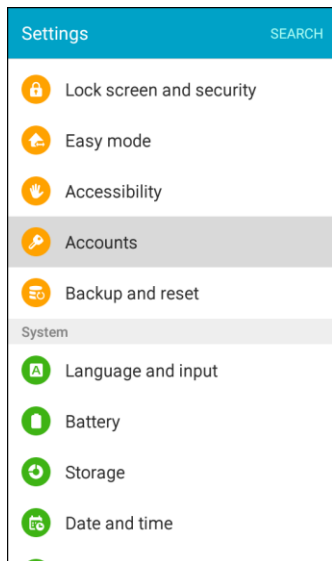

2. Tap the account type to see the existing accounts.

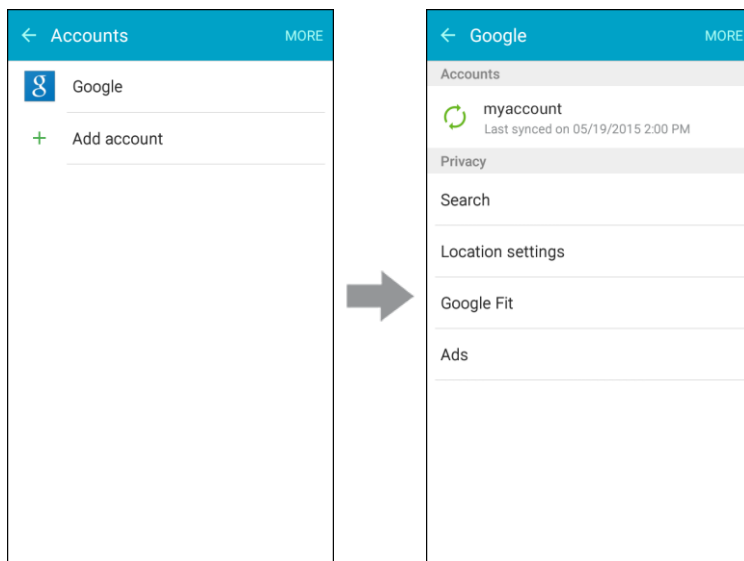

- ❖ The account settings menu appears.

3. View and configure your account settings as desired.

- ❖ The account options are updated.

# Backup and Reset

Your phone's **Backup and reset** menu lets you back up your phone's data and settings to Google servers before resetting your phone to the original factory settings. The Factory data reset erases all data from the phone's application storage, including:

- Your Samsung account
- Your Google Account
- All other email and social networking accounts
- System and application data and settings
- Downloaded applications

## Backup and Reset Overview


The following options are available in the Back up and reset menu:

Backup and Reset Option	Description
<b>Backup account</b>	Select the Google Account used to back up data.
<b>Back up my data</b>	Enable backup for application data, Wi-Fi passwords, and other settings to your Google Account.
<b>Automatic restore</b>	When reinstalling an application, backed up settings and data will be restored from your Google Account.
<b>Factory data reset</b>	Reset all settings and delete all data on phone.

- Performing a factory data reset erases all data on the phone. It is recommended that you back up important data before performing a factory data reset.
- Erased information cannot be restored. Only erase data after you are sure you have saved everything you need.

## Access Backup and Reset Options


1. From home, tap **Apps**  > **Settings**  > **Backup and Reset** .

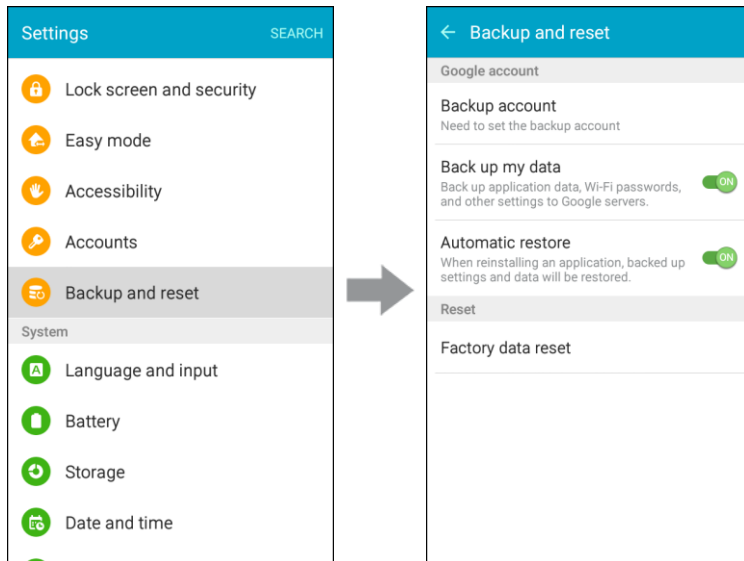


- ❖ The Backup and reset menu opens.
2. Set options.
    - ❖ The backup and reset settings are applied and saved.
      - If you are performing a Factory data reset, follow the prompts to confirm the data removal. The phone will erase all data and reboot.

## Factory Data Reset


1. From the Backup and reset menu, tap **Factory data reset**.

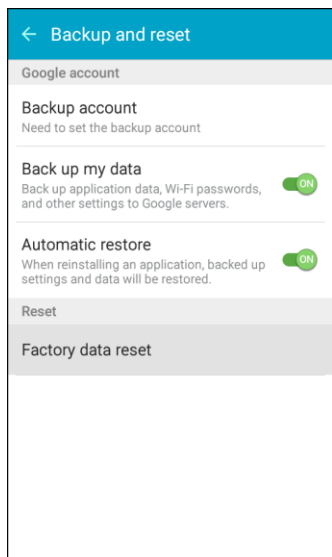

2. Read the factory data reset information page and tap **RESET DEVICE**.

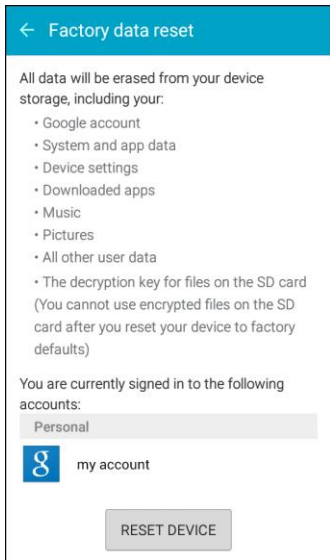

3. If prompted, enter your secure pattern, PIN, or password.
4. Tap **DELETE ALL**.

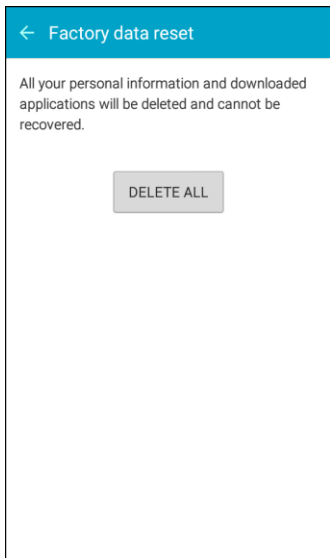

- ❖ Your phone will power down and reset itself, which may take up to 10 minutes.
- Once the phone has reset, it will run through the Hands Free Activation and update processes again. When finished, you will see the Welcome screen and Setup application. See [Complete the Setup Screens](#) to start over.

# Language and Input Settings

Your phone's language and input settings let you select a language for the phone's menus and keyboards, select and configure keyboard settings, configure speech input settings, and set your phone's mouse/trackpad options.


## Language and Input Settings Overview

You can set the following options in the Language and input settings menu:

Language and Input Setting	Description
Language	Set the language for your display and menus.
Default keyboard	Set the default method for entering text.
Samsung keyboard	Set Samsung keyboard options.
Google voice typing	Set options for Google Voice text entry.
Voice input	Set your voice search options.
Text-to-speech options	Set text-to-speech options.
Pointer speed	Set the speed of the pointer for a mouse/trackpad.

## Access Language and Input Setting Options

1. From home, tap **Apps**  > **Settings**  > **Language and input** .

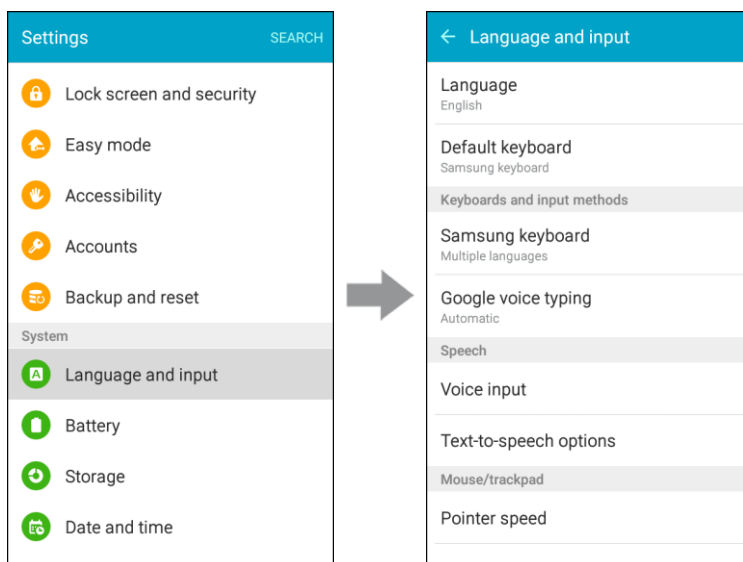




- ❖ The Language and input settings menu opens.

2. Set options.




- ❖ The language and input settings are applied and saved.

## Select the Default Language for Your Phone

1. From home, tap **Apps**  > **Settings**  > **Language and input**  > **Language**.
2. Tap an available language.

## Language and Input Options

Some of the language and input options are detailed below.


1. From home, tap **Apps**  > **Settings**  > **Language and input** .
2. Set options:
  - **Language:** Tap a language to assign it.
  - **Default keyboard:** Tap an input method to set it as the default.
  - **Samsung keyboard:** Configure your keyboard options.
  - **Google voice typing:** Configure your options, including language detection.
  - **Voice input:** Tap a settings option and follow the onscreen instructions.
  - **Text-to-speech:** Tap a settings option and follow the onscreen instructions.
  - **Pointer speed:** Drag the bar to adjust the speed, and then tap **OK**.




# Battery Settings

Monitor your phone's battery usage through this settings menu. View which functions are consuming your battery's charge and at what percentage. You can also display the battery charge remaining as a percentage on the Status Bar.

1. From home, tap **Apps**  > **Settings**  > **Battery** .

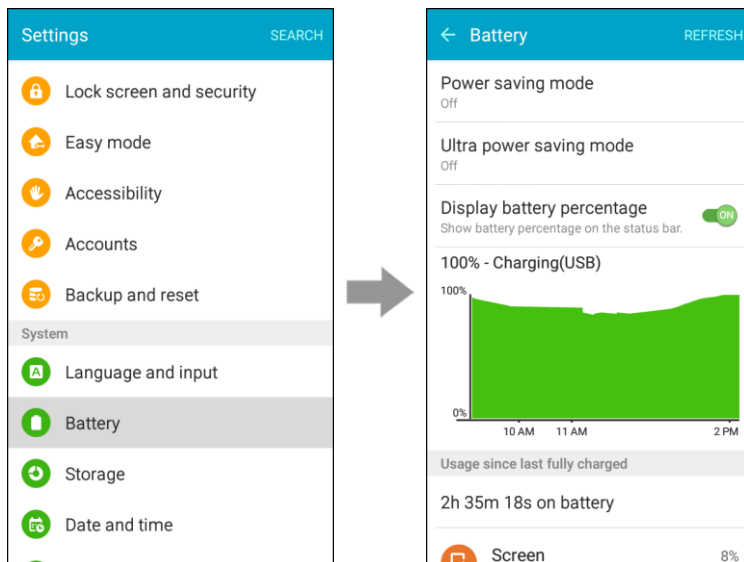

2. Tap **Display battery percentage** to show the percentage of battery charge remaining on the Status Bar.

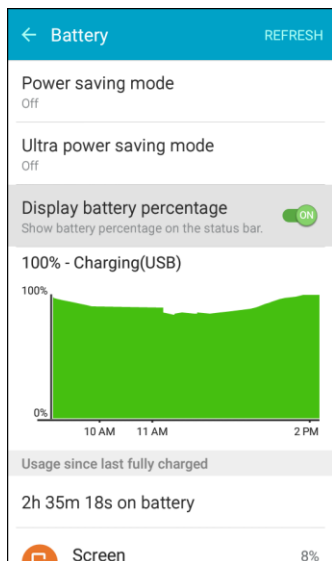

3. Tap items to view details.


❖ Check your battery condition and access additional options.

# Power Saving Mode


Save battery power by activating Power saving mode, which reduces or turns off certain features to decrease battery consumption.

## Turn On Power Saving Mode

1. From home, tap **Apps**  > **Settings**  > **Battery** .

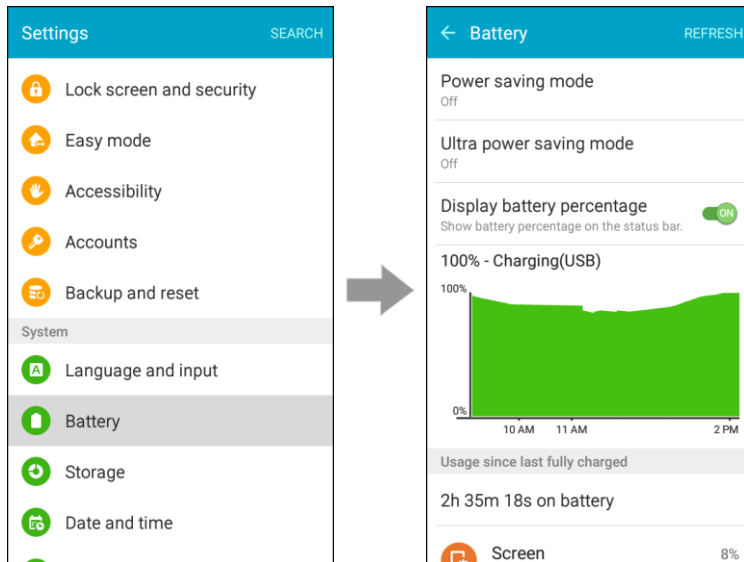

2. Tap **Power saving mode**.

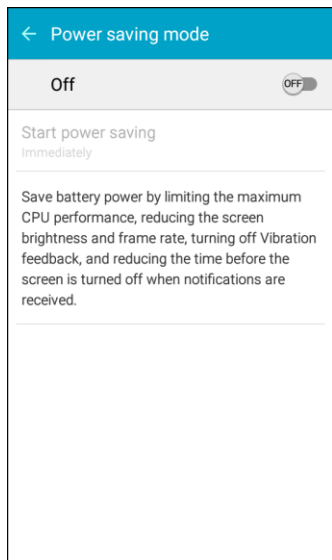

3. Tap the **ON/OFF** switch to enable Power saving mode.
  - ❖ Power saving mode is activated.


4. Tap **Start power saving** to select when to activate the power saving measures, either immediately or at a given battery level.

## Ultra Power Saving Mode


Conserve power and extend your phone's battery life by using a minimal Home screen layout, limiting the number of usable apps, turning off mobile data when the screen is off, and turning off connectivity features such as Wi-Fi and Bluetooth.

### Turn On Ultra Power Saving Mode

1. From home, tap **Apps**  > **Settings**  > **Battery** .

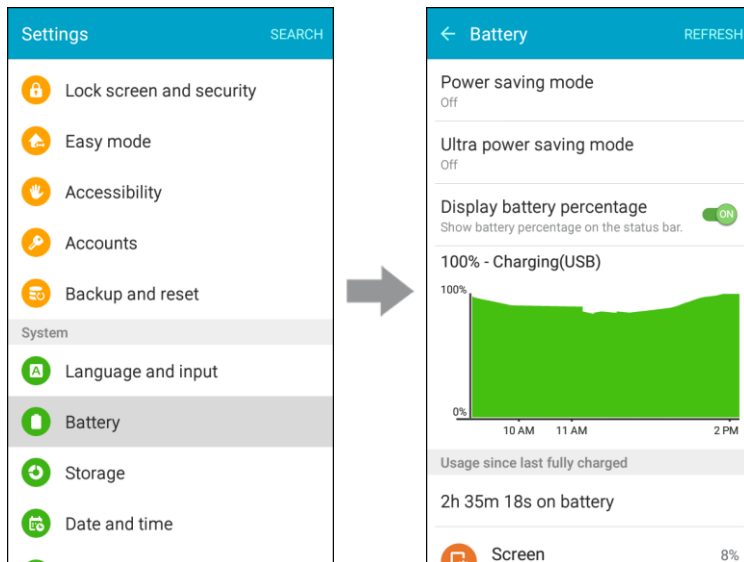

2. Tap **Ultra power saving mode**.

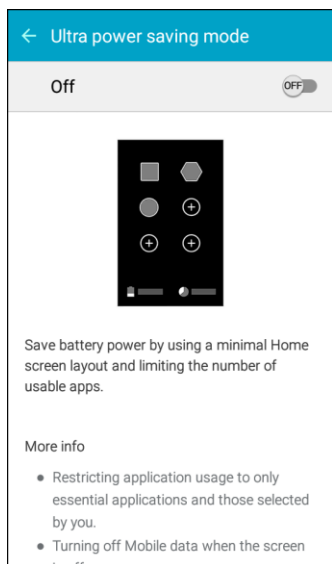


3. Tap the **ON/OFF** switch to enable Ultra power saving mode.

❖ Ultra power saving mode is activated.

**Note:** The first time you enable Ultra power saving mode, you will be prompted to read and agree to the terms and conditions. Tap the check box and then tap **AGREE** to continue.

## Turn Off Ultra Power Saving Mode

■ From home, tap **MORE** > **Turn off Ultra power saving mode**.

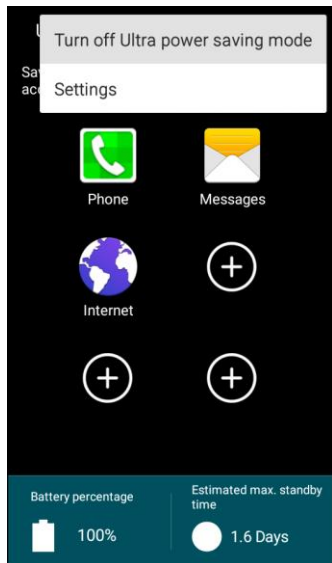

❖ The phone returns to normal power mode.

# Storage Settings

The Storage settings menu lets you manage internal storage on your phone.


## Storage Settings Overview

The storage settings menu allows you to configure the following options:

Storage Device	Description
Device memory	<ul style="list-style-type: none"><li>• <b>Total space:</b> View the total space/free space in your phone's memory.</li><li>• <b>Available space:</b> The amount of storage space currently available.</li><li>• <b>System memory:</b> The minimum amount of storage space required to run the system.</li><li>• <b>Used space:</b> The amount of storage space currently being used.</li><li>• <b>Cached data:</b> The amount of data currently cached.</li><li>• <b>Miscellaneous files:</b> The amount of memory used to store miscellaneous files.</li></ul>
SD card	<ul style="list-style-type: none"><li>• <b>Total space:</b> View the total space/free space in your phone's memory.</li><li>• <b>Available space:</b> The amount of storage space currently available.</li><li>• <b>Mount SD card:</b> Prepare the SD card for use.</li><li>• <b>Unmount SD card:</b> Unmount the SD card to safely remove it.</li><li>• <b>Format SD card:</b> Delete all data on the SD card.</li></ul>

## Access Storage Settings

1. From home, tap **Apps**  > **Settings**  > **Storage** .

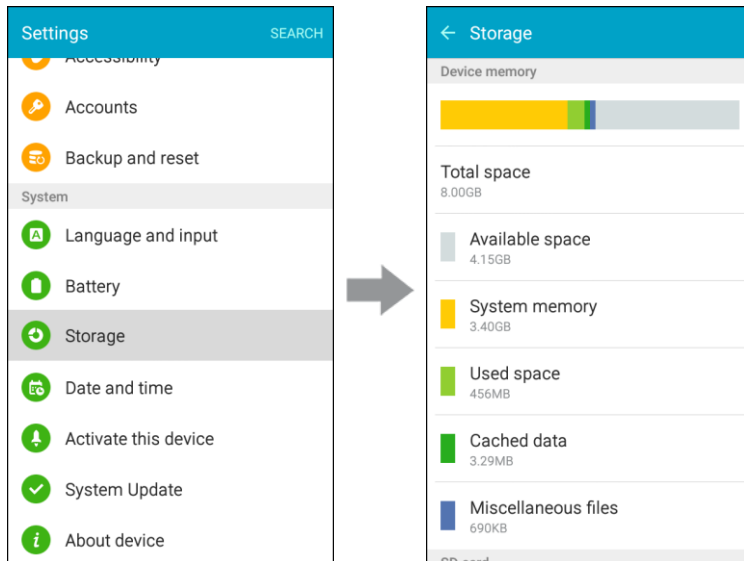

2. View memory usage for the different types of information stored in your phone's memory. Tap an item for more information.

## Date and Time Settings

Use the Date and Time settings menu either to automatically use the network-provided date and time or manually set these values, as well as select time and date format options.


### Date and Time Overview

The following Date and time options may be configured:

Date and Time Option	Description
<b>Automatic date and time</b>	Set the date and time automatically via the connected wireless network.
<b>Automatic time zone</b>	Set the time zone automatically via the connected wireless network.
<b>Set date</b>	Set the date manually (only available when Automatic date and time option is disabled).
<b>Set time</b>	Set the time manually (only available when Automatic date and time option is disabled).
<b>Select time zone</b>	Set the time zone manually (only when Automatic time zone is disabled).
<b>Use 24-hour format</b>	Enable or disable 24-hour format.

## Access Date and Time Options

1. From home, tap **Apps**  > **Settings**  > **Date and time** .

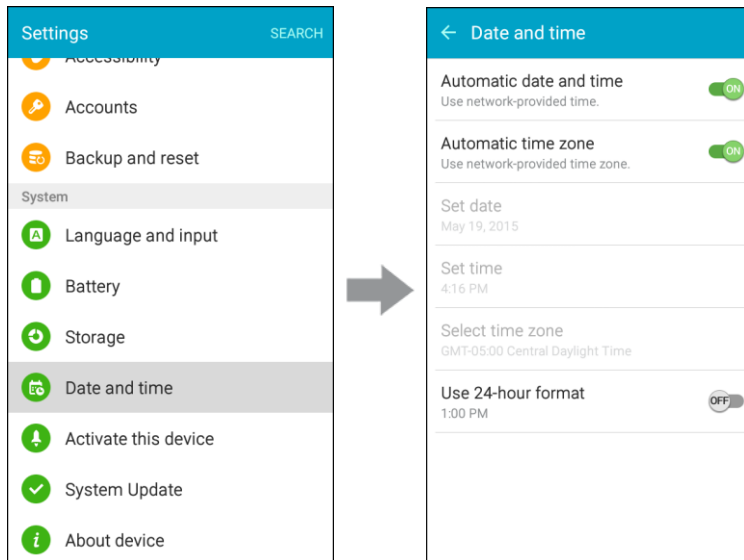


2. Set available date and time options.
  - ❖ Your date and time settings are applied and saved.

## Activate This Device

The Activate this device menu lets you activate a new phone or use additional self-service options such as checking the status of an in-service phone.

1. From home, tap **Apps**  > **Settings**  > **Activate this device** .

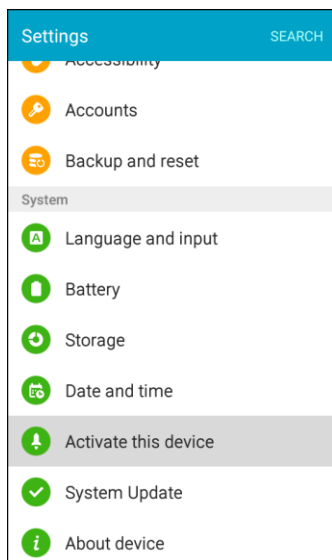

- ❖ The Self Service menu appears.


2. Follow the onscreen prompts to activate your phone or review your summary.
  - ❖ Your phone activates. If already activated on an account, you will see a usage and plan summary.

## System Update

The System Update menu provides settings for keeping your phone up-to-date with the latest software.

### Access System Update

- From home, tap **Apps**  > **Settings**  > **System Update** .

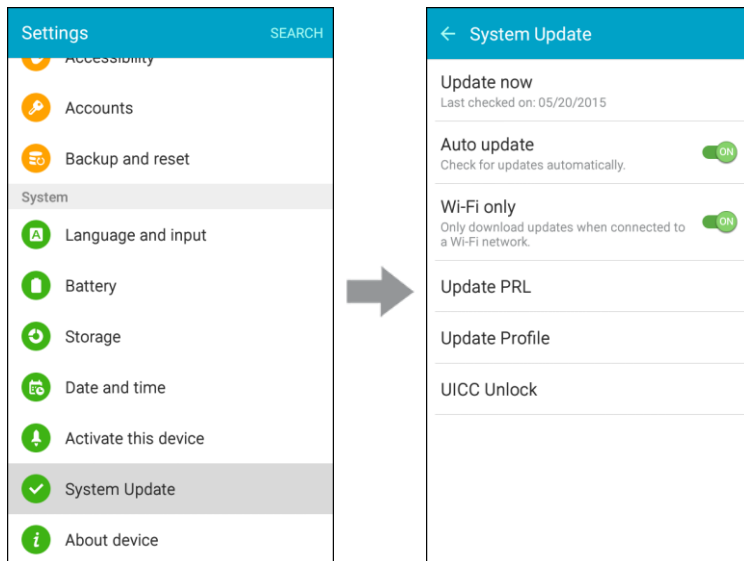

- ❖ The System Update menu appears.

For details about updating your phone, see [Update Your Phone](#).



# About Device

The About device menu lets you access important phone information, search for and apply updates, and view legal and safety information.

## About Device Overview


The following About device items may be reviewed or set:

About Device Item	Description
<b>Software version</b>	Check your current software version.
<b>Hardware version</b>	Check your current hardware version.
<b>Status</b>	Check your phone's status. <ul style="list-style-type: none"><li>• Battery status and level</li><li>• SIM card status (network, signal strength, mobile network type, service state, roaming, mobile network state, phone number, IMEI number, and IMEISV number)</li><li>• IMEI information (MIN, PRL version, MEID, IMEI, and ICCID)</li><li>• Username</li><li>• IP address</li><li>• Wi-Fi MAC address</li><li>• Bluetooth address</li><li>• Up time</li><li>• Device status</li></ul>
<b>Legal information</b>	Review various types of important legal information, including Open source licenses, Google legal information, System WebView licenses, Wallpapers, Samsung legal information, and the Privacy Alert.
<b>Device name</b>	Change the name of your device (other devices see this name when using Hotspot or Bluetooth).
<b>Model number</b>	Check the phone's model number.
<b>Android version</b>	Check the Android version number.
<b>Baseband version</b>	Check the phone's baseband version.

About Device Item	Description
Kernel version	Check the phone's kernel version.
Build number	Check the current phone build number.
SE for Android stats	Check the phone's Security Enhanced for Android status.
KNOX version	Check the phone's KNOX version.

## Access About Device Options

1. From home, tap **Apps**  > **Settings**  > **About device** .

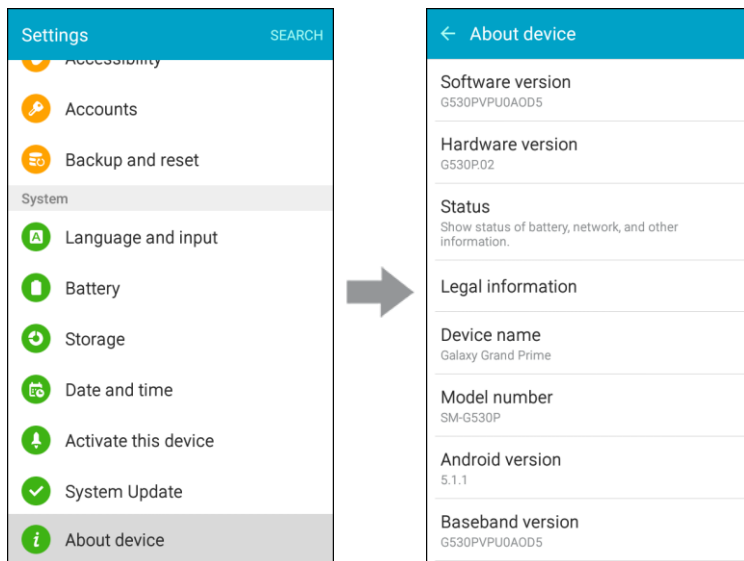

2. Select or view available options.
  - ❖ Your phone information is displayed.

# For Assistance

---

The following topics address areas of support for your phone, including troubleshooting, specifications, account information, warranty information, and customer service contact information.

## Sprint Account Information and Help

Find out about account passwords and information about managing your account and finding help.

### Sprint Account Passwords

You will need to create passwords to protect access to your personal account information, your voicemail account, and your data services account. As a Sprint customer, you enjoy unlimited access to all your information.

#### Account User Name and Password

If you are the account owner, you will create an account user name and password when you sign on to [sprint.com/mysprint](http://sprint.com/mysprint). (Click **Sign in/Register** and then click **Sign up now!** to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at [sprint.com/mysprint](http://sprint.com/mysprint).

#### Voicemail Password

You will create your voicemail password when you set up your voicemail. See [Voicemail Setup](#) for more information on your voicemail password.

#### Data Services Password

With your Sprint phone, you may elect to set up an optional data services password to control access and authorize purchases.

For more information, or to change your passwords, sign on to [sprint.com/mysprint](http://sprint.com/mysprint).

## Manage Your Account












Manage your Sprint account from your computer, your Sprint phone, or any other phone.

**Online:** [sprint.com/mysprint](http://sprint.com/mysprint)

- Access your account information.
- Check your minutes used (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.

- Shop for the latest Sprint phones.
- View available Sprint service plans and options.
- Learn more about data services and other products like games, ringtones, screen savers, and more.

### From Your Sprint Phone

1. From home, tap **Phone**  > **Keypad** .
2. Do any of the following:
  - Tap    to access a summary of your Sprint service plan or get answers to other questions.
  - Tap    to access the “Pay My Bill” section of Sprint Zone to make a payment.
  - Tap    to check minute usage and account balance.

## Sprint Support Services

Sprint 411 and Sprint Operator Services let you easily access information and calling assistance from your Sprint phone.

### Sprint 411

Sprint 411 gives you access to a variety of services and information, including residential, business, and government listings; movie listings or show times; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

- From home, tap **Phone**  > **Keypad** , and then tap    .

### Sprint Operator Services

Sprint Operator Services provides assistance when you place collect calls or when you place calls billed to a local telephone calling card or third party.

- From home, tap **Phone**  > **Keypad** , and then tap  .

For more information or to see the latest in products and services, visit us online at [sprint.com/mysprint](http://sprint.com/mysprint).

# Copyright Information

©2015 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are trademarks of their respective owners.

©2015 Samsung. Samsung, Galaxy, and S Voice are trademarks of Samsung Electronics Co., Ltd.

Android, Chrome, Gmail, Google Maps, Play Music, Play Movies & TV, Play Books, Play Newsstand, Play Games, Drive, YouTube, Photos, Hangouts, Google Mobile Services, and Google Play are trademarks of Google, Inc.

Other marks are property of their respective owners.

Screen images are simulated.

Appearance of device may vary.

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

# Index

---

- 1Weather, 228
- 4G, 152
- About Device, 364
- Accessibility Settings, 341
- Accessory Port, 4
- Accounts
  - Add new, 349
  - Manage, 350
  - Settings, 349
- Activation, 362
- Airplane Mode, 274
- Alarm, 203
- Amazon, 228
- Answer a Call, 73
- Application Manager, 309
- Applications, 20
  - List, 20
- Applications Settings, 308
- Apps
  - Find and install, 42
  - Request refunds, 43
  - Uninstall, 47
  - Update, 44
- Back Key, 3
- Backup and Reset, 351
- Battery
  - Charge, 7
  - Install, 6
  - Power saving mode, 358
  - Settings, 356
- Bluetooth, 242
  - Connect, 247
  - Pair, 245
  - Receive information, 251
  - Send information, 248
  - Settings, 269
  - Share pictures and videos, 182
  - Turn on or off, 242
  - Unpair, 246
- Bookmark, 158
- Brightness, 305
- Browser
  - Bookmark, 158
  - History, 159
  - Launch connection, 157
  - Settings, 162
  - Windows, 161
- Calculator, 191
- Calendar, 193
  - Add event, 193
  - Settings, 312, 313
  - Sync, 199
  - Sync Exchange ActiveSync calendar, 201
  - View events, 196
- Call
  - Settings, 323
- Call Forwarding, 94
- Call Logs
  - Make call from, 79
- Call Waiting, 93
- Caller ID, 92
- Calling
  - International, 253
  - International Dialing, 325
  - US Dialing, 325
- Camera, 164
  - Settings, 186
  - Shooting modes, 168
  - Take a picture, 165
  - Viewfinder, 166
- Car Kit
  - Connect, 247
- Charge the Battery, 7
- Charger/Accessory Port, 4
- Chrome, 162
- Clock, 201
  - Alarm, 203
  - Stopwatch, 205
  - Timer, 207
  - World Clock, 205
- Contacts, 97
  - Add contact, 98
  - Delete, 105
  - Edit, 104
  - Make call from, 77
  - Profile sharing, 108
  - Save a phone number, 100
  - Settings, 314

- Share, 107
- Data Services, 152
  - Password, 366
  - Status indicators, 156
  - User name, 154
- Data Usage Settings, 276
- Date Settings, 361
- Default Applications, 311
- Default Messaging App Settings, 296
- Dexterity and Interaction Settings, 346
- Display Settings, 305
- Drag, 12
- DTMF Tones, 325
- Easy Mode, 339
- Editing Text, 29
- Email
  - Add account, 137
  - Add Exchange ActiveSync account, 140
  - Compose and send, 143
  - Delete account, 147
  - Manage inbox, 149
  - Send Gmail, 123
  - Settings, 316
  - Setup, 136
  - Share pictures, 179
  - View and reply, 146
- Emergency Numbers, 71
- Enhanced 9-1-1 (E 9-1-1), 72
- Enter Text, 27
- Exchange ActiveSync
  - Add account, 140
  - Features, 150
- Extended Home Screen, 58
- Factory Data Reset, 352
- Files
  - Transfer between phone and computer, 232
- Flash, 3
- Flick, 13
- Folders, 68
- Galaxy Apps, 207
- Gallery, 169, 207
- Global Roaming Mode, 253
- Gmail
  - Archive threads, 128
  - Create account, 30
  - Delete threads, 130
  - Labels, 127
  - Mute threads, 129
  - New messages, 125
  - Read and reply, 125
  - Read messages, 126
  - Report phishing, 133
  - Report spam, 133
  - Search, 131
  - Send message, 123
  - Share pictures, 179
  - Switch accounts, 135
- Google
  - Chrome, 162
  - Create account, 30
  - Hangouts, 209
  - Sign in, 36
  - Voice search, 219
  - YouTube, 226
- Google Maps, 211
- Google Play
  - Find and install apps, 42
  - Help, 48
  - Store, 41
- Google Play Books, 213
- Google Play Games, 213
- Google Play Movies & TV, 213
- Google Play Music, 214
- Google Play Newsstand, 217
- Google Search, 217
- Google Voice Typing, 28
  - Configuring, 29
  - Using, 28
- Hangouts, 209
- Headset
  - Connect, 247
- Headset Jack, 4
- Hearing Accessibility, 344
- Hearing Aids, 325
- Home Screen, 56
  - Add Folders, 68
  - Add Shortcuts, 66
  - Add Widgets, 67
  - Customize, 64
  - Extended, 58
- Hotspot Settings, 271
- Incoming Call
  - Answer, 73
  - Reject, 74
- Input Settings, 354
- International Data Roaming, 255
- International Dialing, 325
- Internet, 113

- Settings, 319
- Keyboard
  - Samsung, 27
- Language Settings, 354
- Location Settings, 328
- Lock Screen
  - Settings, 330
- Lookout Security, 219
- Maps, 211
- Memo, 220
- Memory, 360
- Memory Card
  - Install, 6
- Messages
  - Settings, 320
- Messaging, 113
- Messaging Plus, 229
- MMS
  - Send messages, 115
- Mobile Networks Settings, 278
- More Networks Settings, 284
- Motions and Gestures, 307
- Multimedia Messaging
  - Share pictures and videos, 181
- Music
  - Google Play Music, 214
  - NextRadio, 230
- My Files, 221
- NASCAR Mobile, 230
- NBA Game Time, 230
- NextRadio, 230
- NFC and Payment, 280
- Notification Icons, 59
- Notification Settings, 297
- Notifications, 59, 304
- OneDrive, 221
- OneNote, 222
- Pages Manager, 231
- Phone
  - Dialer, 70
  - Setting up, 5
- Phone Calls, 69
  - Answer, 72
  - Emergency numbers, 71
  - Using Call Logs, 79
  - Using contacts, 77
  - Using phone keypad, 70
- Phone Layout (illustration), 3
- Phone Number, 25
  - Save to contacts, 100
- Phone Status, 364
- Phone Update
  - PRL, 55
  - Profile, 54
  - Software, 51
- Pictures
  - Crop, 174
  - Rotate, 173
  - Share via Bluetooth, 182
  - Share via email, 179
  - Share via messaging, 181
  - Take with camera, 165
- Pinch, 14
- Play Books, 213
- Play Games, 213
- Play Movies & TV, 213
- Play Music, 214
- Play Newsstand, 217
- Play Store, 41
  - Find and install apps, 42
- Plus (+) Code Dialing, 253
- Power Key, 4
- Power Off, 10
- Power On, 9
- Power Saving Mode, 357, 358
- Printing, 287
- PRL Update, 55
- Reject Incoming Call, 74
- Ringtone, 297
- Ringtones
  - Settings, 300
- Rotate, 13
- S Voice
  - Settings, 325
- Samsung Keyboard, 27
- Save a Phone Number, 100
- Screen Lock, 331
- Screen Timeout, 305
- Screen Unlock
  - Motion, 333
  - Swipe, 333
- Screen Unlock Password, 336
- Screen Unlock Pattern, 333
- Screen Unlock PIN, 336
- Search
  - Google, 217
- Secure Credential Storage, 288
- Security Settings, 330



- Settings, 259
  - Overview, 259
- Setup Screens, 15
- Share
  - Contacts, 107
- SIM Card, 252
- Slide, 12
- Sound Settings, 297
- Speaker, 4
- Spread, 14
- Sprint 411, 367
- Sprint Account
  - Management, 366
  - Passwords, 366
- Sprint Family Locator, 190
- Sprint Fun & Games, 190
- Sprint Operator Services, 367
- Sprint TV & Movies, 190
- Sprint Worldwide Wireless Service, 252
- Sprint Zone, 189
- Status Bar, 59
- Status Icons, 60
- Status Messages
  - international roaming, 256
- Stopwatch, 205
- Storage
  - Settings, 360
- Swipe, 12
- System Update, 363
- Tap, 11
- Tap and Pay, 283
- Tethering Settings, 286
- Text Editing, 29
- Text Entry, 27
- Text Messaging
  - Conversations, 119
  - Draft messages, 118
  - Notifications, 119
  - Send messages, 113
- Time Settings, 361
- Timer, 207
- Touch, 11
- Touch and Hold, 11
- Touchscreen
  - Turn off, 49
  - Turn on, 50
- TTY Mode, 325
- Turn Device Off, 10
- Turn Device On, 9
- Typing, 27
- Uber, 229, 231
- Ultra Power Saving Mode, 358
- US Dialing, 325
- Vibration, 302
- Video (App), 222
- Video Camera
  - Record video, 167
- Videos
  - Record, 167
  - Share via Bluetooth, 182
  - Share via messaging, 181
  - Share via YouTube, 185
- Virtual Private Networks (VPN), 288
  - Add connection, 291
  - Secure credential storage, 288
- Vision Accessibility, 343
- Visual Voicemail, 82
  - Listen to multiple messages, 85
  - Options, 86
  - Review, 84
  - Set up, 82
  - Settings, 87
- Voice Recorder, 223
- Voice Search, 219
- Voice Typing, 28
  - Configuring, 29
  - Using, 28
- Voicemail
  - Display name, 90
  - Greeting, 89
  - International, 254
  - Password, 366
  - Settings, 325
  - Setup, 81
- Volume, 297, 299
  - Key, 4
- Wallpaper, 64
- Web
  - Launch connection, 157
- Widgets, 67
- Wi-Fi, 233
  - Settings, 265
  - Turn on and connect, 234
- Wi-Fi Calling, 91, 263
- World Clock, 205
- YouTube, 226
  - Share videos, 185
- Zoom, 14