

User Manual

1. Read the instructions carefully prior to assembly.
2. Check to make sure there are no hidden wires or pipes in wall before drilling.
3. Install screws directly into wall studs or wood. If installing into drywall, use the included anchors. For other wall materials, consult a professional to obtain the correct hardware.
4. Periodically check all attachment points to make sure they remain fully tightened.
5. This product requires 3 AA batteries (not included). Make sure the polarities are in the right direction when inserting the batteries.

BATTERY CAUTIONS & DISPOSAL INFORMATION

Install only new batteries of the same type.

Do not insert the batteries with the positive and negative polarities reversed.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel cadmium or nickel hydride) batteries.

Remove if product is to be left unused for a long period of time.

Batteries should be recycled or disposed of properly. Check with your local or state solid waste authority for disposal management options.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.


CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Manufactured by Geeknet, Inc.
625 Westport Pkwy, Grapevine TX 76051
Phone: 1(800) 883-8895

What's Included

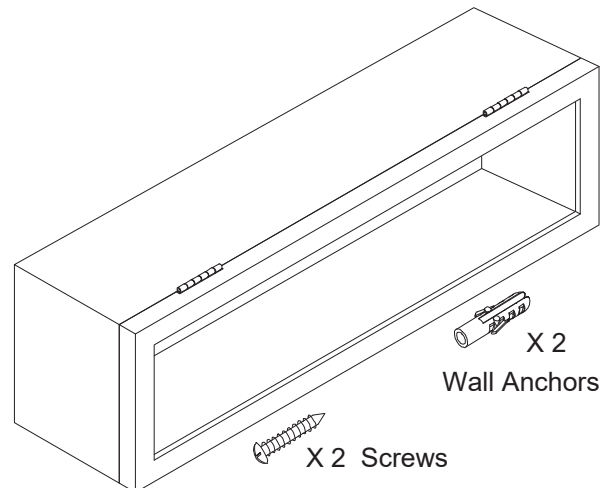


Wall Mount Instructions


Basic tools needed for assembly (not included): Drill, Phillips screwdriver, rubber mallet/hammer, and level.

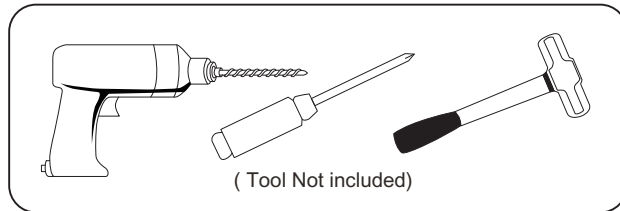


Note: The battery box and power on/off switch is located on the rear side of the case. Make sure to install the batteries and turn on the switch before mounting on the wall.

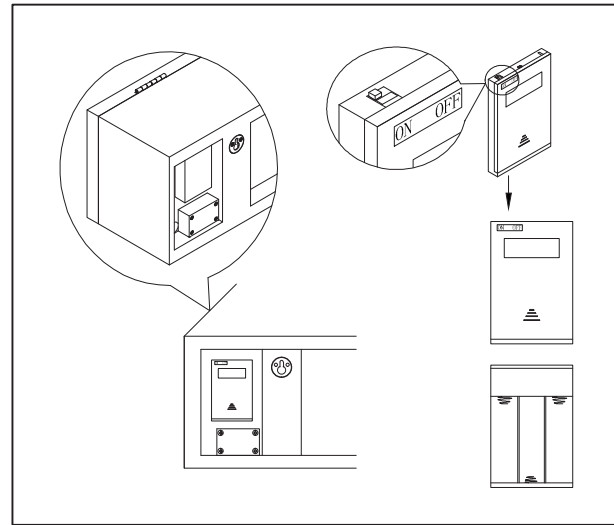


Remote Control:
Use the remote control to change the display case LED lights.

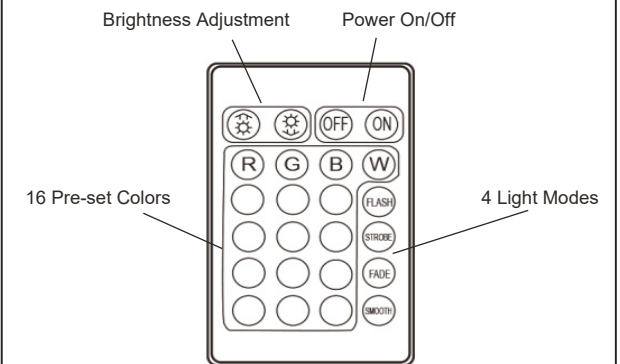


Step1: Locate and mark where the case is to be installed. Use a level to be sure that the case is level and straight. Drill a 1/4" pilot hole.

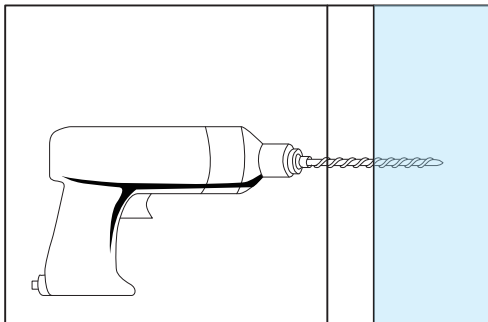


Step 2: Place the anchor over the hole and firmly tap it in until it's flush with the wall.

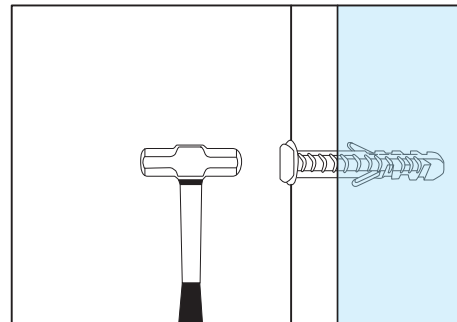

Step 3: Insert the screw into the anchor and set to the depth sufficient for the case to latch on to.

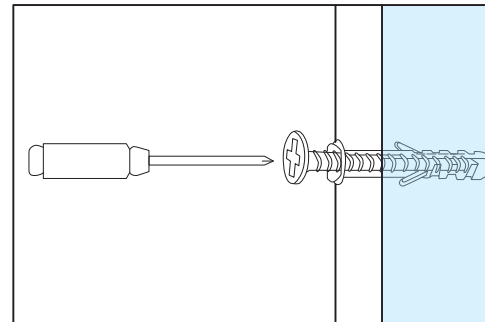

Step 4: Carefully mount the display case onto the wall and make sure the hinges sit properly on the screws.

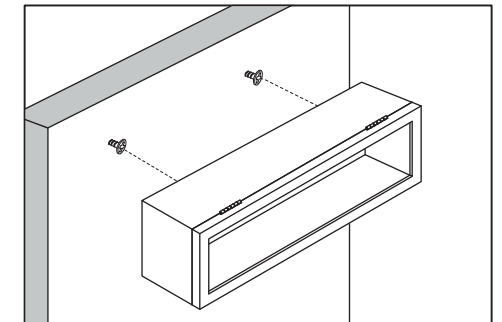

Manuel de l'Utilisateur

1. Lisez attentivement les instructions avant le montage.
2. Assurez-vous qu'il n'y a pas de fil ou de tuyau cachés dans le mur avant de percer.
3. Installez-le visuellement dans les montants du mur ou le bois. En cas d'installation dans une cloison sèche, utilisez les ancrages inclus.
4. Vérifiez périodiquement tous les points de fixation pour vous assurer qu'ils restent bien serrés.
5. Ce produit nécessite 3 piles AA (non incluses). Assurez-vous que les polarités sont dans le bon sens lors de l'insertion des piles.

MISES EN GARDE SUR LA BATTERIE ET INFORMATIONS SUR L'ÉLIMINATION

N'installez que des piles neuves du même type.

N'insérez pas les piles avec les polarités positive et négative inversées.

Ne mélangez pas des piles anciennes et neuves.

Ne mélangez pas des piles alcalines, standard (carbone zinc) ou rechargeables (nickel cadmium ou nickel hydrure).

Retirez le produit et ne l'utilisez plus pendant une longue période.

Les piles doivent être recyclées ou éliminées correctement. Vérifiez auprès de votre autorité locale ou nationale des déchets solides pour les options de gestion de l'élimination.

L'utilisation est soumise aux deux conditions suivantes :

(1) Cet appareil ne doit pas causer d'interférences nuisibles, et

(2) Cet appareil doit pouvoir supporter toutes les interférences reçues, y compris les interférences susceptibles de provoquer un fonctionnement non désiré.


Avertissement : Les changements ou les modifications non expressément approuvés par la partie responsable de la conformité peuvent entraîner la révocation de l'autorisation d'utilisation de l'appareil.

Remarque : Cet équipement a été testé et déclaré conforme aux limites pour appareils numériques de classe B, selon la partie 15 des règlements de la FCC. Ces limites sont destinées à assurer une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement produit, utilise et peut émettre de l'énergie radio électrique et, s'il n'est pas installé et utilisé conformément aux présentes instructions, peut causer des interférences nuisibles aux communications radio. Cependant, il se peut que des interférences se produisent dans une installation particulière. Si cet appareil provoque des interférences nuisibles à la réception des signaux de radio ou de télévision, ce qui peut être déterminé en éteignant et en rallumant l'appareil, l'utilisateur peut tenter de régler le problème par l'un des moyens suivants :

- Réorienter ou déplacer l'antenne de réception.
- Éloigner l'appareil du récepteur.
- Brancher l'appareil sur un circuit différent de celui du récepteur.
- Consulter le revendeur ou un technicien spécialisé dans les radios et les téléviseurs pour obtenir de l'aide.


Fabriqué par Geeknet, Inc.
625 Westport Pkwy, Grapevine TX 76051
Téléphone : 1(800) 883-8895

Ce qui est inclus

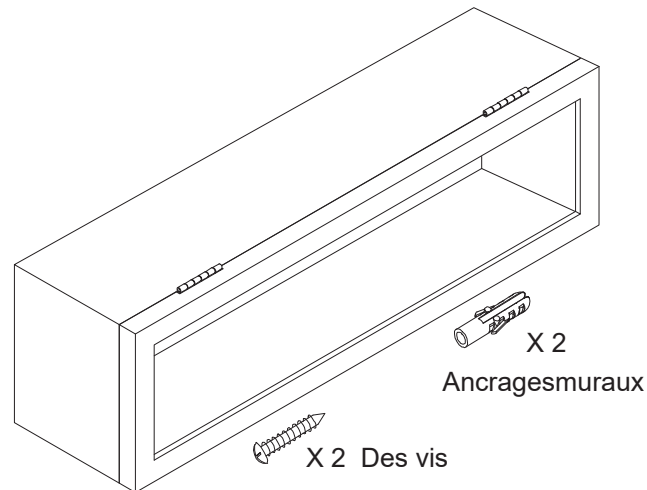


Instructions de montage mural

Outils de base nécessaires pour l'assemblage (non inclus) : perceuse, tournevis cruciforme, maillet/marteau en caoutchouc et niveau.

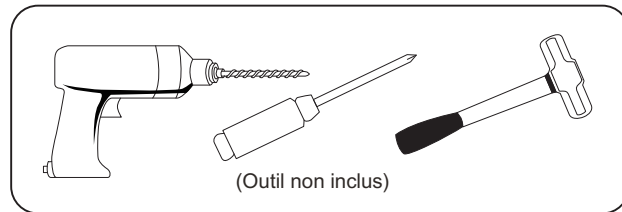


Remarque : Le boîtier de la batterie et l'interrupteur marche/arrêt sont situés à l'arrière du boîtier. Assurez-vous d'installer les piles et d'allumer l'interrupteur avant de monter sur le mur.

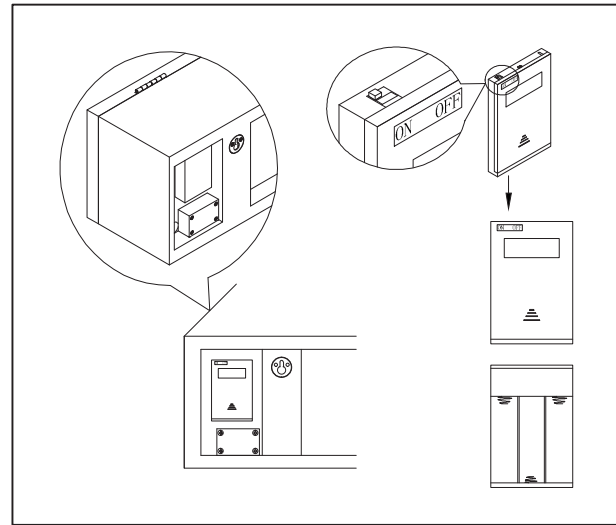


Télécommande:


Utilisez la télécommande pour changer les lumières LED de la vitrine.

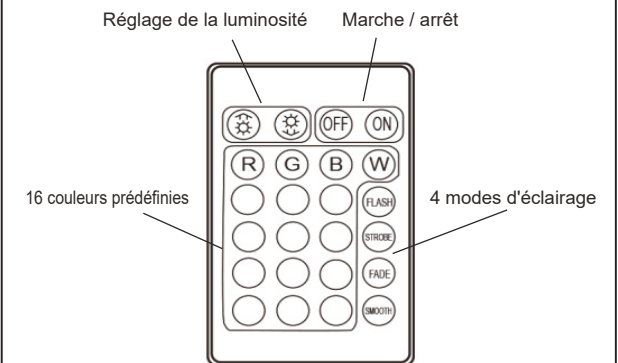


Étape 1 : Localisez et marquez l'endroit où le boîtier doit être installé. Utilisez un niveau pour vous assurer que le boîtier est de niveau et droit. Percez un avant-trou de 1/4".

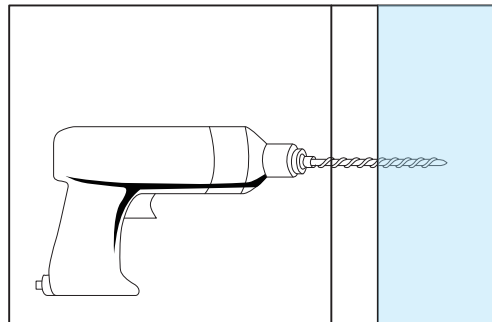

Étape 2 : placez l'ancre sur le trou et enfoncez-la fermement jusqu'à ce qu'elle soit au ras du mur.

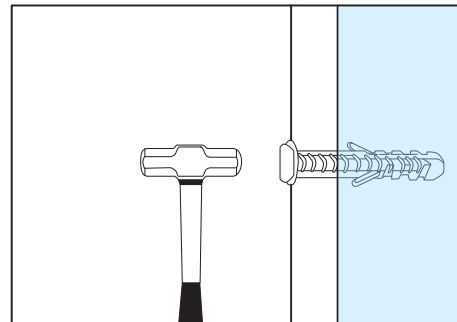

Étape 3 : Insérez la vis dans l'ancrage et réglez-la à une profondeur suffisante pour que le boîtier s'y accroche.

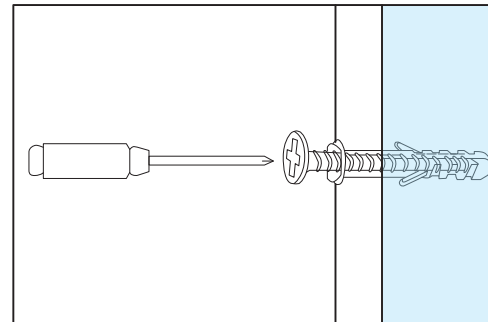

Étape 4 : Montez soigneusement la vitrine sur le mur et assurez-vous que les charnières reposent correctement sur les vis.

