

azumi

User Guide




KL35




WELCOME

- Congratulations on your purchase of the Azumi mobile phone. Your phone provides many functions which are practical for daily use, such as a hands-free loudspeaker, camera, MP3 player, Ultra clear video.
- You can read the manual to understand how to use Azumi mobile phone and experience the well-established functions and simple operation method. Please use the original accessory in order to achieve the best use of effects. Azumi shall not be responsible for any damage in machinery due to use of non-original components.


YOUR PHONE-FRONT VIEW

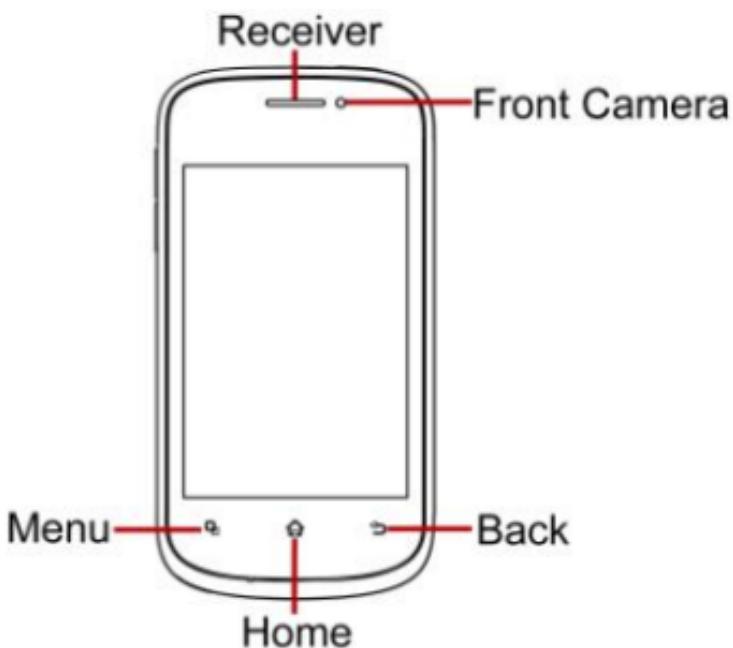

YOUR PHONE-BACK VIEW

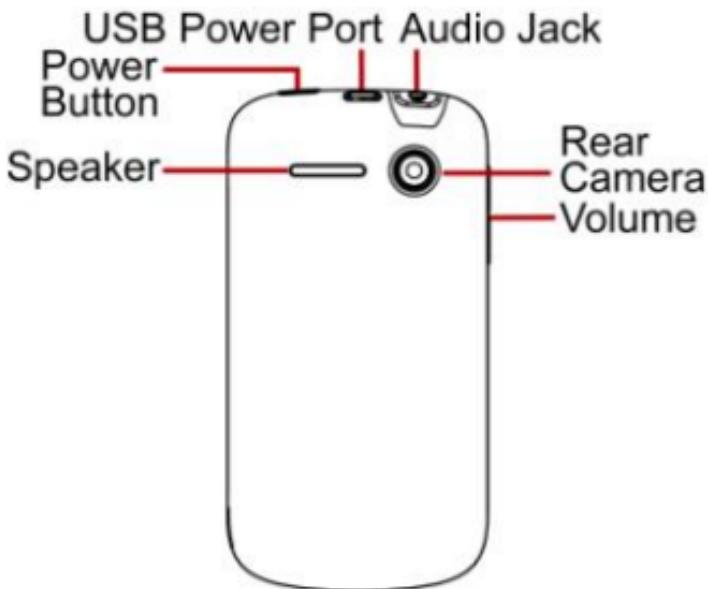

CHARGE THE BATTERY

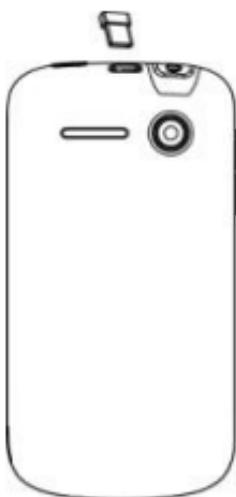

Connect this end to phone's USB port.

Tip: Be sure to charge your phone's battery completely after inserting it in the phone for the first time.


INSERT SIM AND MicroSD CARD




Please insert the SIM card according to the label on the phone. Make sure that the clipped corner of the SIM card and the metallic contacts are facing the correct direction. Slide the SIM card into the slot until it doesn't move up any further.

The direction in which the microSD card has to be inserted into the designated slot is shown by an label on the phone.

Tip: For additional media storage insert a microSD card.

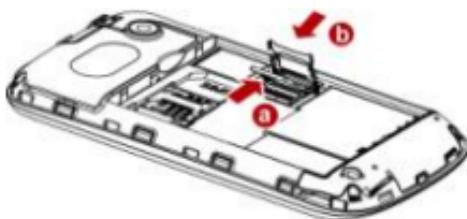


TURN THE PHONE ON& OFF

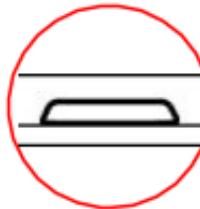

Hold down the power button to turn the phone on.

Hold down the power button, then touch Power off to turn the phone off

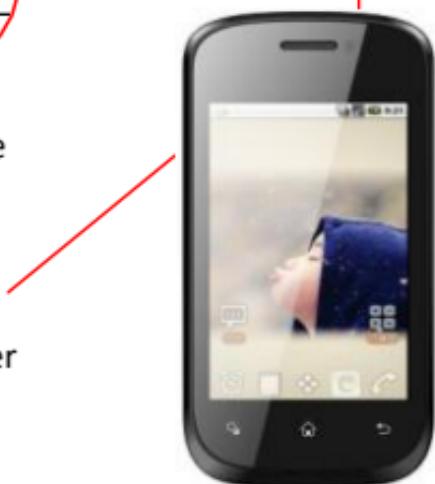

DIM LOCK & WAKE THE PHONE

When the power is on and you want to dim the screen, press the power button.

When the screen is dimmed and you want to wake the phone, press the power button and then drag the lock to the right.



HOME SCREEN



Phone status bar and notifications

Slide left or right to see more panels

Touch to enter main menu

Touch to enter message

Touch to enter web

Touch to enter Ideas interface

Touch to enter dial pad

APPS



Touch to enter app tray.



Touch an app to launch it

STATUS BAR

The status bar shows your phone's status and notifications. (Notifications are described on the next page.)

Notification icons



Status icons



Status icons

The following status icons may appear on your screen:


Icon	Statement	Icon	Statement
	SIM Network signal level		Headset is inserted
	Indicates battery capacity		Bluetooth is activated
	Unread messages		Wi-Fi is connected
	Missed calls		Airplane mode is activated
	Alarm is activated		USB is connected

NOTIFICATION PANEL

The notification panel is your center for new events: like new e-mail, voicemail, updates, and more.

Drag down to display notifications

Touch a notification to respond

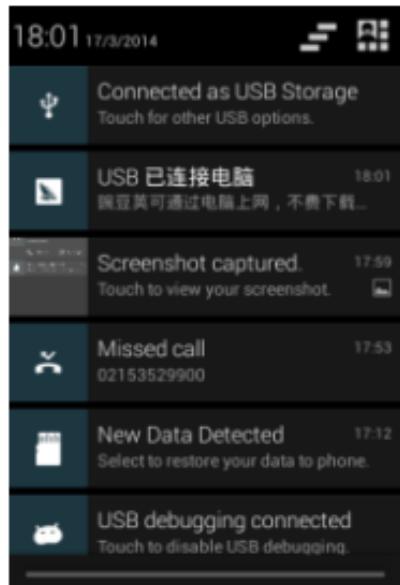

MAKE & ANSWER A CALL

1. From the Home screen,



touch .

2. Dial a number using the dial pad.



3. Touch to initiate the call.



Drag to right to answer the call.




Drag to left to decline the call.



VOLUME CONTROL WHEN CALLING

Volume key is at the left side of the phone. During a conversation, you can press the volume key to tune the sound volume.

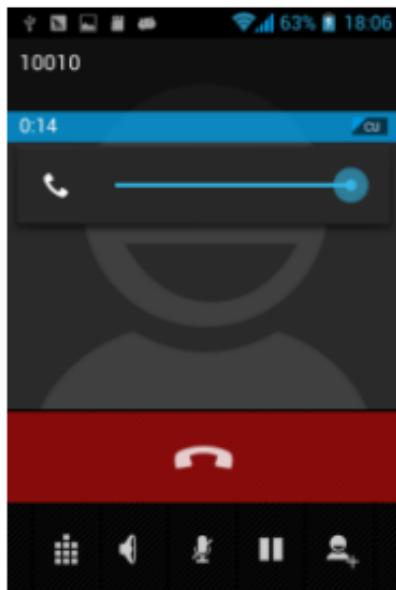

SEND A TEXT

1. From the Home screen, touch




2. Touch the To field , then enter a recipient.

3. Touch the Type message field   Type text message 
4. Touch send icon to send the message

ADDING EMAIL ACCOUNTS

The first time you open Email, you are prompted to set up an email account. After that, you can configure Email to send and receive email from additional accounts.

To add an email account:
Open the Accounts screen.
Touch menu icon and touch Add account. In the Setup Email screen, enter your email address and password. Touch Next. Or, if you need to enter email account settings the wizard can't configure for you, touch Manual setup, you're prompted to enter your email account details. Enter any other information requested by the type of account you're adding and touch Done. Enter a name for the account and touch Done. Email starts downloading your email messages and you can start using it to send and receive messages using the new account.

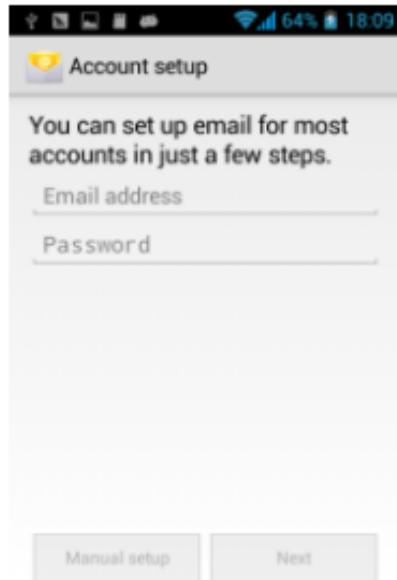

SETTINGS

The settings for various features of the phone

Get to know the settings in your phone so that you can

personalize them to your own requirements. Go to Settings to configure how your phone looks, sounds, communication, privacy, and operations in a variety of ways:

Wireless & networks	Manage your wireless connections and connections settings. Let you configure and manage connections to networks and devices by Using Wi-Fi, Bluetooth, and mobile networks.
Device	Let you configure audio profiles, display, check storage, battery, and apps.
Personal	Let you to manage the location access, security, language & input and backup & reset the phone.
Accounts	Let you add, remove and manage supported accounts.
System	Let you set the date and time, scheduled power on & off, check accessibility, enter developer options, and check phone information.

SET A RINGTONE

Press  → **Audio profiles**, select the profiles you want to set, you can customize the ringtone and volume of incoming call, notification ringtone in this interface.


MULTIMEDIA

Listen it, watch it, capture it, and enjoy it!

FM RADIO

1. Insert earphone, then Tap the Power icon to stop or play FM.
2. Tap the icon on screen to change channel frequency by 0.1 MHz. Press volume key to adjust the volume.
3. Tap options icon on screen and select Search, Input Channel, Speaker, and Record FM.

MUSIC PLAYER

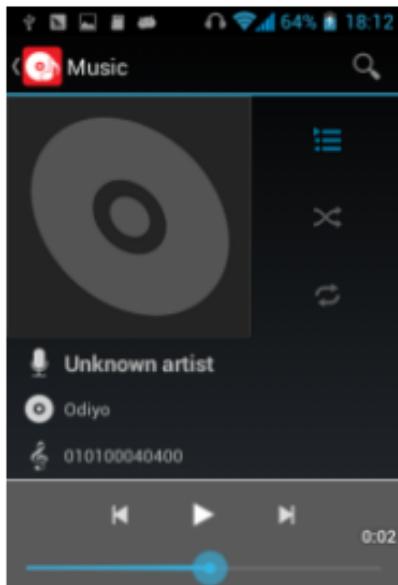

Controls

Play/Pause

Touch

Previous/Next

Touch

Volume adjust

Press side key

Now playing: Touch to open the current playlist.

Touch

Shuffle: Touch to shuffle the current playlist.

Touch 

Repeat: Repeat one or all songs.

Touch 

TAKE A PICTURE


1. Launch the camera by pressing the camera icon in the main menu.
2. Press the camera button to take a picture.

SHOOT A VIDEO

1. Launch the camera by pressing the camera icon in the main menu.
2. Press the record bottom to shoot a video.

CONNECT TO WLAN NETWORKS

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

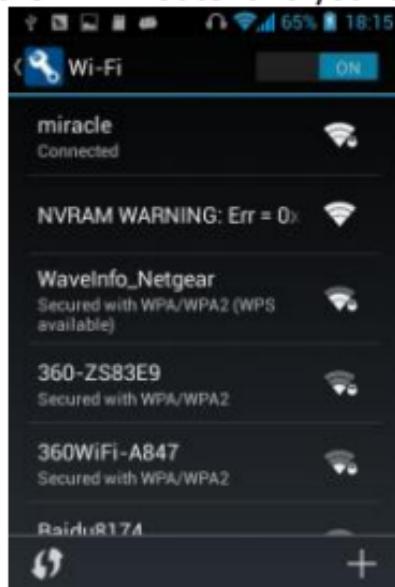

In the Setting interface, press the icon besides Wi-Fi to turn on Wi-Fi. Press Wi-Fi and then the phone scans for

available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined

at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.483 W/kg and when worn on the body, as described in this user guide, is 1.19 W/kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is 1.25 W/kg, While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: **QRP-AZUMIKL35**. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

azumi

KL35



GUIA RAPIDA DE USAURIO

BIENVENIDO

- ¡Felicitaciones por la compra de su teléfono móvil Azumi!
- Con esta guía rápida aprenderás a utilizar tu teléfono móvil Azumi KL35 en pocos pasos y experimentar con las funciones. Te Sugerimos siempre utilizar los accesorios originales de tu equipo con el fin de lograr un correcto desempeño.


PRECAUSIONES PARA EL USAURIO

Antes de utilizar su equipo celular Azumi, es importante que todo usuario lea las siguientes recomendaciones:


- El teléfono no es resistente al agua, manténgalo seco.
- Utilice solo refacciones autorizadas
- No intente abrir la carcasa del teléfono.
- Si el teléfono o cualquiera de sus accesorios no funciona adecuadamente, llévelo a al Centro de Servicio Autorizado.
- El uso de los auriculares o audífonos estéreo por un tiempo prolongado (a un volumen elevado) puede causar graves daños a su audición.
- No utilice el teléfono mientras se está cargando.
- En calor extremo o frío: Evitar las temperaturas inferiores a -10 ° C/14 ° F o por encima de 40 ° C/104 ° F.
- No utilice el teléfono móvil mientras conduce. Utilice los accesorios de manos libres si usted tiene que usar el teléfono. Coloque el teléfono móvil en el soporte, en lugar del asiento del pasajero o cualquier lugar que el teléfono se pueda caer.
- La interferencia del teléfono móvil afectará a la seguridad del vuelo y es ilegal el uso de teléfonos móviles en los aviones. Por favor apague su teléfono móvil antes de embarcar

Nota: Recuerda que puedes visitar nuestra página (www.azumi-mobile.com) y nuestro pagina de Facebook (www.facebook.com/azumiperu) si tiene alguna duda. Nuestro Team siempre estará disponible para darle respuesta a sus consultas.


VISTA FRONTAL DEL TELÉFONO

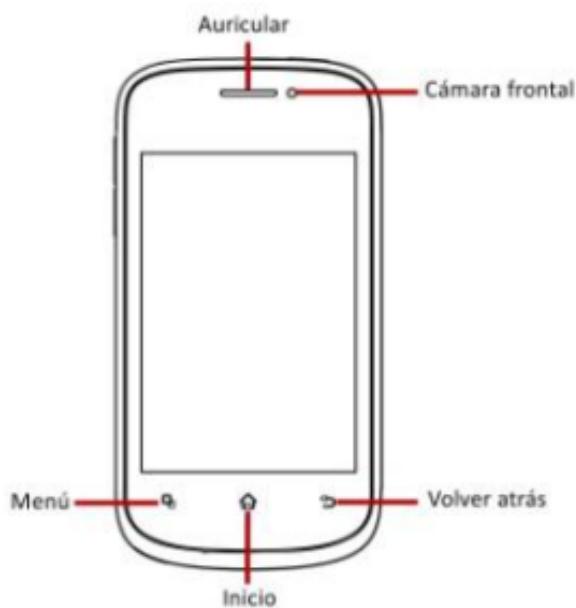

VISTA TRASERA DEL TELÉFONO

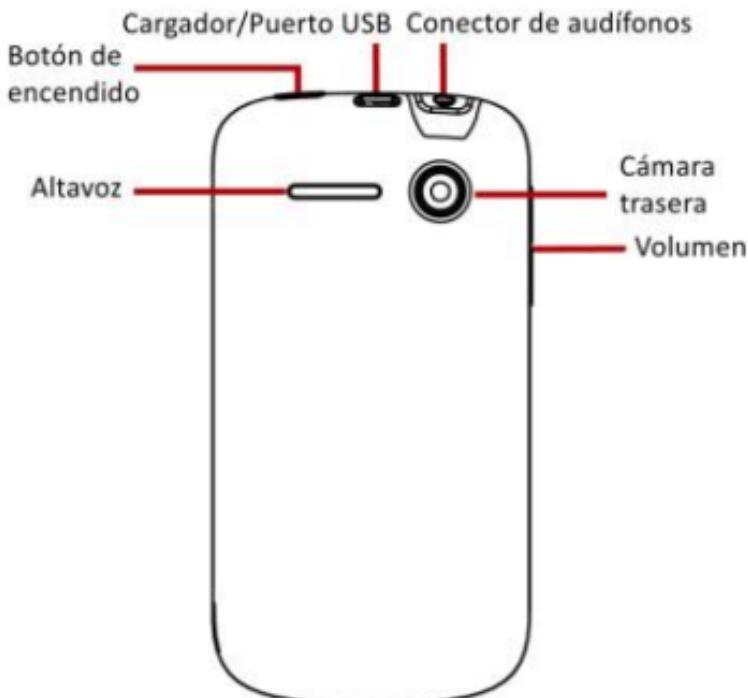


CARGAR LA BATERÍA

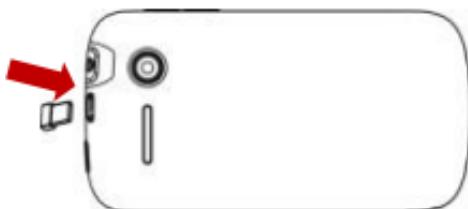

Conecte este extremo al puerto USB del teléfono.

Consejo: Asegúrate de cargar la batería de tu teléfono por completo después de insertar tu SIM en el teléfono por primera vez.

INSERTAR LA TARJETA SIM Y LA TARJETA DE MEMORIA Micro SD / T-Flash

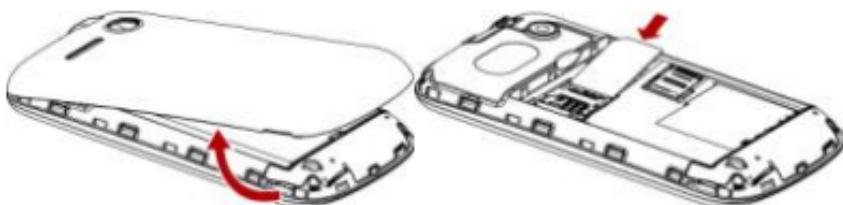


Retira la tapa trasera del equipo y la batería (esto debe ser realizado con el equipo apagado), Luego asegúrese de que la esquina recortada de la tarjeta SIM y los contactos metálicos estén enfrentados en la dirección correcta. Desliza la tarjeta SIM en la ranura hasta que quede fija sin que se mueva.

En la esquina superior izquierda se ubica la ranura de la Tarjeta Micro SD /T-flash, solo debes deslizar esta como

lo muestra la imagen

Consejo: Para el almacenamiento adicional de archivos multimedia deberás utilizar una memoria Micro SD/T-flash en tu teléfono.

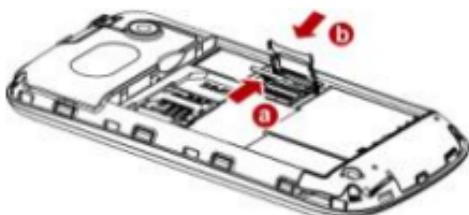

APAGAR Y ENCENDER EL TELÉFONO



Para encender el teléfono,
mantenga pulsado el botón de
encendido

Para apagar el teléfono
mantenga pulsado el botón
de encendido luego seleccione
APAGAR



BLOQUEO Y DESBLOQUEO DEL

TELÉFONO

Si su equipo está en uso y desea bloquear su pantalla solo debe pulsar la tecla encendido y la pantalla de su equipo se oscurecerá.

Si desea volver a utilizar su equipo, pulse el botón de encendido y a continuación arrastre el candado.

PANTALLA PRINCIPAL



Barra de estado y notificaciones del teléfono

Mantenga pulsado un espacio vacío para cambiar el fondo de pantalla, Crear widgets, accesos directos o carpetas.

Menú principal


Mensajes

Navegador Web


Ideas

Teléfono

APLICACIONES

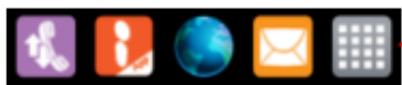

Tocar para entrar a la bandeja de aplicaciones

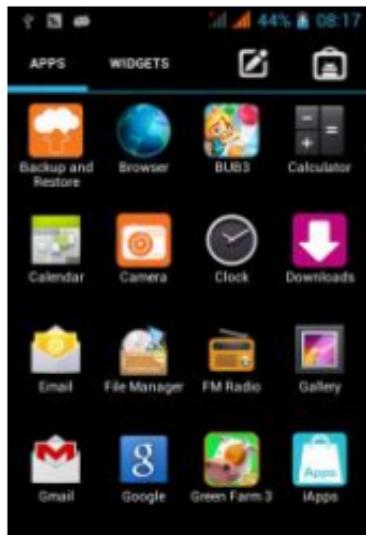

Tocar una aplicación para iniciarla

BARRA DE ESTADO

La barra de estado muestra el estado del teléfono y las notificaciones de aplicaciones.

Iconos de notificación



Iconos de estado

ESTADO DE LOS ICONOS


Los siguientes iconos de estado pueden aparecer en su pantalla:

Icono	Estado	Icono	Estado
	Nivel de señal de la Red SIM		Auriculares están insertados
	Indica la capacidad de la batería		Bluetooth está activado
	Mensajes sin leer		Wi-Fi está activado
	Llamadas perdidas		Modo avión está activado
	Alarma está activada		USB está conectado

PANEL DE NOTIFICACIONES

El panel de notificaciones es su central de nuevos eventos: como nuevo e-mail, correo de voz, actualizaciones y mucho más.

Arrastre hacia abajo para mostrar notificaciones

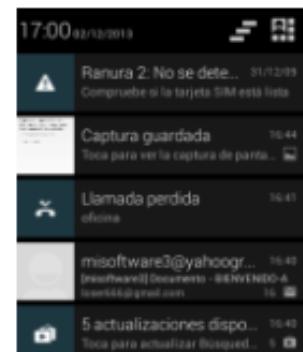

HACER Y RECIBIR

LLAMADAS

1. Tocar el icono en la pantalla principal

2. Marcar un número con el


teclado numérico.

3. Tocar el icono  para iniciar llamada

Desliza  a la derecha para responder una llamada.

Desliza  a la izquierda para rechazar la llamada


NOTA: Durante una llamada la pantalla se oscurece después de aprox. 15 seg de iniciada la misma, esto con la finalidad de evitar un consumo innecesario de la batería al tener la pantalla iluminada por mucho tiempo. Para poder terminar la llamada en curso hay que presionar el botón de encendido para volver a visualizar el estado de la pantalla y poder presionar el botón de "Finalizar" 

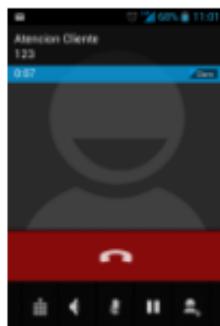

CONTROL DE VOLUMEN AL LLAMAR



Durante
una

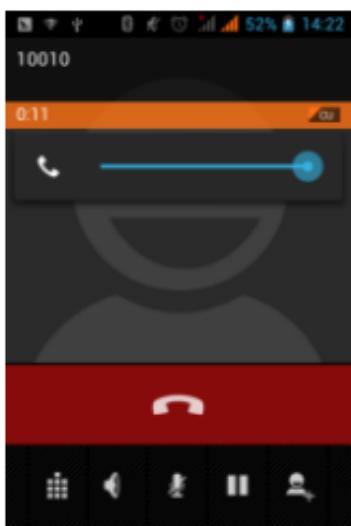

conversación, pulsar la tecla de volumen para ajustar el volumen del sonido.


ENVIAR UN MENSAJE

1. Toca el icono  en la pantalla principal
2. Toca  y luego introduzca un destinatario
3. Toca  y escriba su mensaje
4. Toca el icono  para enviar el mensaje

AGREGAR CUENTAS DE CORREO ELECTRÓNICO

La primera vez que abras la aplicación Correo se pedirá que configures una cuenta de correo.

Para agregar una cuenta de correo electrónico:
Tocar “Añadir cuenta”.
En la pantalla Configuración de correo electrónico, escribe tu dirección de correo electrónico y contraseña,
Pulsa siguiente para poder continuar con la configuración.

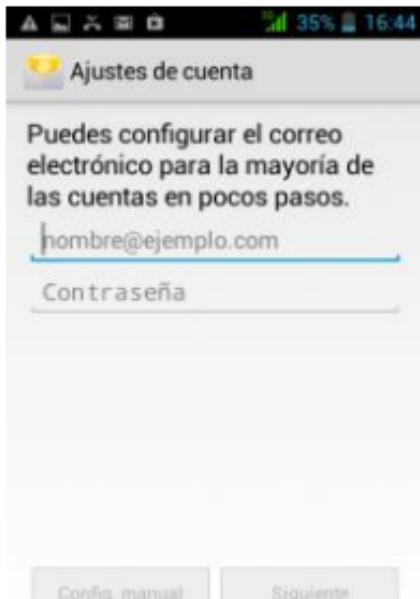

Si necesitas introducir los ajustes de cuentas de correo electrónico de forma manual, entonces toca Configuración manual, te pedirá que introduzcas tus datos de tu cuenta de correo electrónico. Introduce cualquier otra información solicitada para el tipo de cuenta que vas a añadir (Puertos y servidor de entrada y salida) y luego toca Finalizado. Escribe un nombre para la cuenta y toca Finalizado. El Email iniciara la descarga de mensajes de correo electrónico y se podrá empezar a usar para enviar y recibir mensajes.

AJUSTES

Conoce los ajustes en tu teléfono de modo que puedas personalizarlo según tus necesidades. Ve a Ajustes para configurar el aspecto de tu teléfono, los sonidos, la comunicación, la privacidad, y las operaciones en las diversas formas.

Wi-fi	Gestiona tus conexiones inalámbricas y ajustes de conexiones. Te permite ajustar y gestionar conexiones a redes y dispositivos mediante Wi-Fi, Bluetooth y redes móviles.
Dispositivo	Te permite ajustar perfiles de audio, pantalla, almacenamiento, batería y aplicaciones.
Personal	Te permite ajustar acceso a tu ubicación, seguridad, idioma, entrada de texto y copia de seguridad
Cuentas	Te permite agregar, eliminar y administrar cuentas.
Sistema	Te permite ajustar fecha y hora, accesibilidad, opciones de desarrollo, y ver la información del teléfono.

ESTABLECER UN TONO


Ajustes → Perfiles de Audio → General

Puedes personalizar el tono y el volumen de la llamada entrante y tono de notificación.

RADIO FM

1. Inserte el auricular, después pulsa en el ícono de encendido para detener o reproducir.
2. Si lo deseas puedes establecer tu emisora de forma manual.
3. Puedes hacer una auto búsqueda en el menú superior, su equipo sintonizará todas las emisoras y las enlistará para usted.

REPRODUCTOR DE MÚSICA

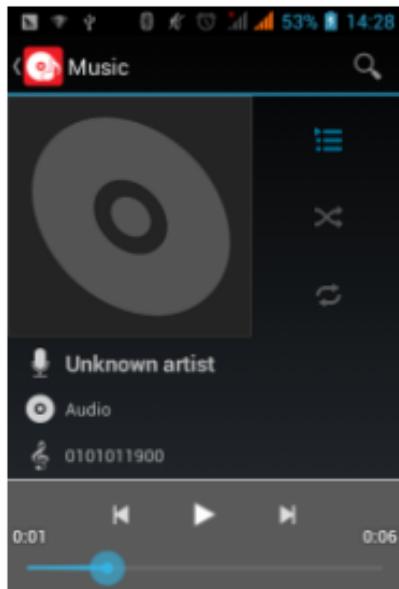

Controles

Reproducir/Pausa

Tocar

Anterior/Siguiente

Tocar

Ajustar Volumen

Pulsar la tecla lateral

Para reproducción: Tocar para abrir la lista de reproducción actual.

Tocar

Mezclar: Para mezclar la lista de reproducción actual.

Tocar

Repetir: Para repetir la lista de reproducción actual.

Tocar

TOMAR UNA FOTOGRAFÍA

1. Pulsa el icono de la cámara en la pantalla de inicio
2. Pulse el botón de la cámara para tomar una


fotografía.

GRABAR UN VIDEO

- En la aplicación de la cámara, seleccione el ícono video
- Pulse el botón de la cámara para comenzar a grabar, y pulse nuevamente para detener la grabación.


CONECTARSE A REDES WI-FI

Wi-Fi es una tecnología de red inalámbrica que puede proporcionar acceso a Internet a distancias de hasta 100 metros, dependiendo del Router Wi-Fi y su entorno.

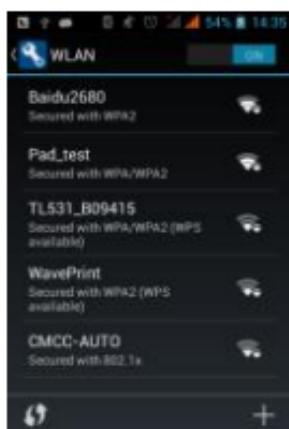

Ajustes → Wi-Fi, Luego deberá encender Wi-Fi. El teléfono buscará las redes Wi-Fi disponibles y mostrará los nombres de las redes que encuentre. Las redes seguras se indican con un ícono de bloqueo. Toque su red Wi-Fi e introduzca su contraseña.

USAR COMO ALMACENAMIENTO MASIVO

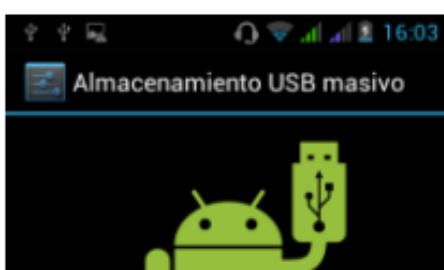

Conecte su equipo vía usb, seleccione Almacenamiento masivo, con esta acción usted puede transferir música, imágenes y otros archivos entre la tarjeta Micro SD/T-flash del teléfono y la computadora.

NOTA: *Su Computadora debe reconocer tu teléfono luego instalarse el controlador adecuado (esta acción es automática), si no es detectado le sugerimos verificar los drivers de su computadora.*

CARACTERISTICAS ELECTRICAS NOMINALES DE ALIMENTACION DEL EQUIPO

		KL35
Corriente eléctrica encendido		200-400mA
Corriente eléctrica pantalla		90-200mA
Voltaje Pantalla		3.5-4.2V
Corriente eléctrica Llamada		130-230mA
Voltaje Llamada		3.5-4.2V
Voltaje celular apagado		3.4V
Cargador de corriente ca/cc	Entrada	AC 100-240V, 50/60HZ, 0.1A
	Salida	DC 5.0V,500mA

INFORMACION DE CERTIFICACION DE LA TASA ESPECÍFICA DE ABSORCIÓN (SAR)

El dispositivo cumple con las normas de la Comisión Federal de Comunicaciones de Estados Unidos (FCC) que limitan la exposición de las personas a la energía de radiofrecuencia (RF) que emiten los equipos de radio y telecomunicaciones. Estas normas evitan la venta de dispositivos móviles que excedan el nivel de exposición máximo (conocido como tasa específica de absorción o SAR) de 1.6 watts por kilogramo. Los valores SAR más altos para este modelo de dispositivo reportados a la FCC son Cabeza: 1.483 W/kg, Cuerpo: 1.19 W/kg, hotspot: 1.25 W/kg.

azumi

www.azumi-mobile.com